DMOS Microstepping Driver with Translator and Overcurrent Protection

FEATURES AND BENEFITS
- Drop-in replacement for A4988
- Proprietary Adaptive Percent Fast Decay option
- Low $R_{DS(on)}$ outputs
- Single supply
- Microstepping up to 32 microsteps per full step
- Full torque step modes
- Short-to-ground protection
- Shorted load protection
- Short-to-battery protection
- Fault output
- Low current Sleep mode, < 10 µA
- Thin profile QFN
- Thermal shutdown circuitry
- Synchronous rectification for low power dissipation
- Internal UVLO
- Crossover-current protection

APPLICATIONS
- Video Security Cameras
- Printers
- Scanners
- Robotics
- ATM
- POS

DESCRIPTION

The A5985 is a complete microstepping motor driver with built-in translator for easy operation. It is designed to operate bipolar stepper motors from full-step up to 1/32 step modes. Step modes are selectable by MSx logic inputs. It has an output drive capacity of up to 40 V and ±2 A.

A5985 introduces a proprietary Adaptive Percent Fast Decay (APFD) algorithm to optimize the current waveform over a wide range of stepper speeds and stepper motor characteristics. APFD adjusts on-the-fly the amount of fast decay during a PWM cycle to keep current ripple at a low level over the various operating conditions. This adaptive feature improves performance of the system resulting in reduced audible motor noise, reduced vibration, and increased step accuracy.

The translator is the key to the easy implementation of the A5985. Simply inputting one pulse on the STEP input drives the motor one microstep. There are no phase sequence tables, high frequency control lines, or complex interfaces to program. The A5985 interface is an ideal fit for applications where a complex microprocessor is unavailable or is overburdened.

Internal synchronous rectification control circuitry is provided to improve power dissipation during PWM operation. Internal circuit protection includes: thermal shutdown with hysteresis, undervoltage lockout (UVLO), and crossover-current protection. Special power-on sequencing is not required.
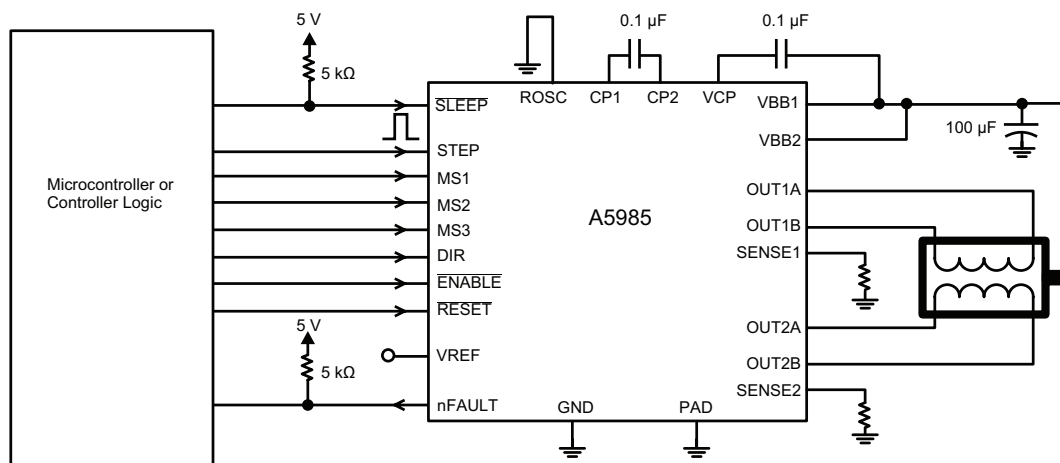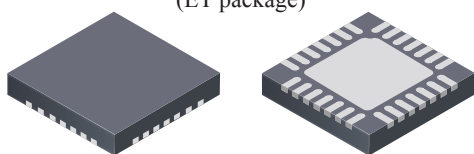
Typical Application Diagram

Package:

28-contact QFN
with exposed thermal pad
5 mm × 5 mm × 0.90 mm
(ET package)

Not to scale

DESCRIPTION (continued)

The A5985 is supplied in a surface-mount QFN package (ET), 5 mm × 5 mm, with a nominal overall package height of 0.90 mm and an exposed pad for enhanced thermal dissipation. It is lead (Pb) free (suffix –T), with 100% matte-tin-plated leadframes.

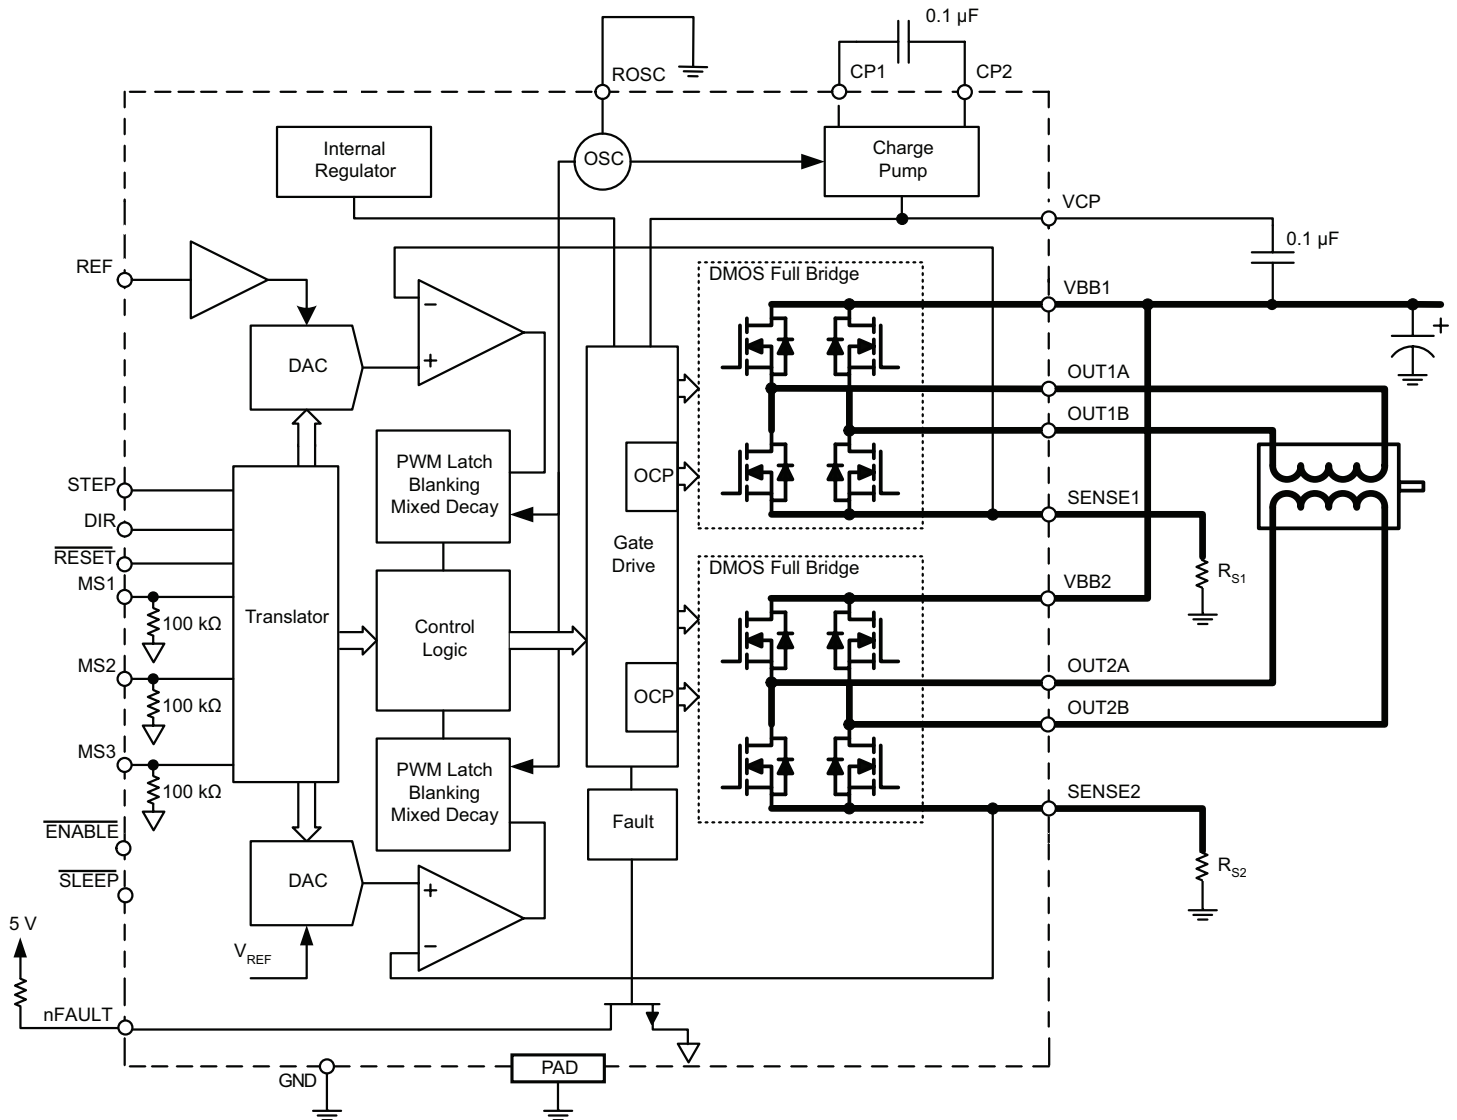## SPECIFICATIONS

Selection Guide

Part Number	Package	Packing
A5985GETTR-T	28-contact QFN with exposed thermal pad	1500 pieces per 7-in. reel

Absolute Maximum Ratings

Characteristic	Symbol	Notes	Rating	Units
Load Supply Voltage	V_{BB}		40	V
Output Current	I_{OUT}		±2	A
Logic Input Voltage	V_{IN}		–0.3 to 6	V
Motor Outputs Voltage			–2.0 to V_{BB} + 2 V	V
Sense Voltage	V_{SENSE}		–0.5 to 0.5	V
Reference Voltage	V_{REF}		5.5	V
Operating Ambient Temperature	T_A	Range G	–40 to 105	ºC
Maximum Junction	$T_J(max)$		150	ºC
Storage Temperature	T_{stg}		–55 to 150	ºC

Allegro ™
MicroSystems, LLC

Allegro MicroSystems, LLC
115 Northeast Cutoff, Box 15036
Worcester, Massachusetts 01615-0036 (508) 853-5000
www.allegromicro.com

2

Table of Contents

Functional Block Diagram

Allegro MicroSystems, LLC
115 Northeast Cutoff, Box 15036
Worcester, Massachusetts 01615-0036 (508) 853-5000
www.allegromicro.com

4

Pin-Out Diagram
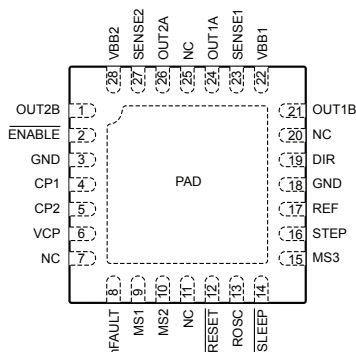
Terminal List Table

Name	Number	Description
CP1	4	Charge pump capacitor terminal
CP2	5	Charge pump capacitor terminal
DIR	19	Logic input
ENABLE	2	Logic input
GND	3, 18	Ground*
MS1	9	Logic input
MS2	10	Logic input
MS3	15	Logic input
NC	7, 11, 20, 25	No connection
nFAULT	8	Logic output
OUT1A	24	DMOS Full Bridge 1 Output A
OUT1B	21	DMOS Full Bridge 1 Output B
OUT2A	26	DMOS Full Bridge 2 Output A
OUT2B	1	DMOS Full Bridge 2 Output B
REF	17	Gm reference voltage input
RESET	12	Logic input
ROSC	13	Timing set
SENSE1	23	Sense resistor terminal for Bridge 1
SENSE2	27	Sense resistor terminal for Bridge 2
SLEEP	14	Logic input
STEP	16	Logic input
VBB1	22	Load supply
VBB2	28	Load supply
VCP	6	Reservoir capacitor terminal
PAD	–	Exposed pad for enhanced thermal dissipation*

*The GND pins must be tied together externally by connecting to the PAD ground plane under the device.

ELECTRICAL CHARACTERISTICS[1] valid at T_A = 25°C, V_{BB} = 40 V (unless otherwise noted)

Characteristics	Symbol	Test Conditions	Min.	Typ.[2]	Max.	Units
Output Drivers						
Load Supply Voltage Range	V_{BB}	Operating	8	–	40	V
		During Sleep Mode	0	–	40	V
Output On Resistance	$R_{DS(on)}$	Source + Sink Driver, I_{OUT} = –2 A, T_A = 25°C	–	640	860	mΩ
Body Diode Forward Voltage	V_F	Source Diode, I_F = –2 A	–	–	1.4	V
		Sink Diode, I_F = 2 A	–	–	1.4	V
Output Driver Slew Rate	SR_{OUT}	10% to 90%	50	100	150	ns
Motor Supply Current	I_{BB}	f_{PWM} < 50 kHz	–	7.5	10	mA
		Operating, outputs disabled	–	6.5	8	mA
		Sleep Mode	–	–	10	µA
Control Logic						
Logic Input Voltage	$V_{IN(1)}$		2	–	–	V
	$V_{IN(0)}$		–	–	0.8	V
	$V_{IN(SLEEP)}$		–	–	0.4	V
Logic Input Current	$I_{IN(1)}$		–20	<1.0	20	µA
	$I_{IN(0)}$		–20	<1.0	20	µA
Microstep Select Pins Internal Pull-Down Resistance	R_{MSx}	MS1, MS2, or MS3 pin	–	100	–	kΩ
Logic Input Hysteresis	$V_{HYS(IN)}$		200	–	550	mV
Blank Time	t_{BLANK}		0.7	1	1.3	µs
Fixed Off-Time	t_{OFF}	ROSC = 5 V	20	30	40	µs
		ROSC = GND	13	16	19	µs
		R_{OSC} = 25 kΩ	23	30	37	µs
Reference Input Voltage Range	V_{REF}		0	–	4	V
Reference Input Current	I_{REF}		–3	0	3	µA
Current Trip-Level Error[3]	err_I	V_{REF} = 2 V, %$I_{TripMAX}$ = 38.27%	–	–	±15	%
		V_{REF} = 2 V, %$I_{TripMAX}$ = 70.71%	–	–	±5	%
		V_{REF} = 2 V, %$I_{TripMAX}$ = 100.00%	–	–	±5	%
Crossover Dead Time	t_{DT}		100	475	800	ns
Fault Output Voltage	V_{RST}	nFAULT pin, I_{OUT} = 1 mA	–	–	0.5	V
Fault Output Leakage Current	I_{LK}	nFAULT pin, no fault, pull-up to 5 V	–	–	1	µA
Protection						
Overcurrent Protection Threshold[4]	I_{OCPST}		2.6	–	–	A
Thermal Shutdown Temperature	T_{TSD}		–	165	–	°C
Thermal Shutdown Hysteresis	T_{TSDHYS}		–	20	–	°C

[1] For input and output current specifications, negative current is defined as coming out of (sourcing) the specified device pin.
[2] Typical data are for initial design estimations only, and assume optimum manufacturing and application conditions. Performance may vary for individual units, within the specified maximum and minimum limits.
[3] V_{ERR} = [(V_{REF}/8) – V_{SENSE}] / (V_{REF}/8).
[4] Overcurrent protection (OCP) is tested at T_A = 25°C in a restricted range and guaranteed by characterization.

Allegro MicroSystems, LLC
115 Northeast Cutoff, Box 15036
Worcester, Massachusetts 01615-0036 (508) 853-5000
www.allegromicro.com

6

THERMAL CHARACTERISTICS may require derating at maximum conditions

Characteristic	Symbol	Test Conditions*	Value	Units
Package Thermal Resistance	$R_{\theta JA}$	ET package; estimated, on 4-layer PCB, based on JEDEC standard	32	°C/W

*In still air. Additional thermal information available on Allegro website.

Maximum Power Dissipation, $P_{D(max)}$
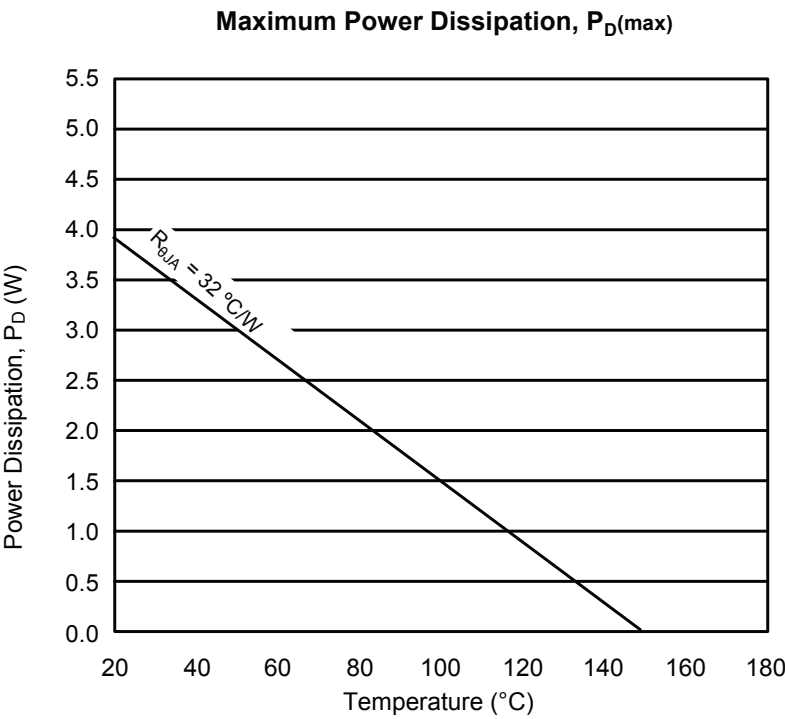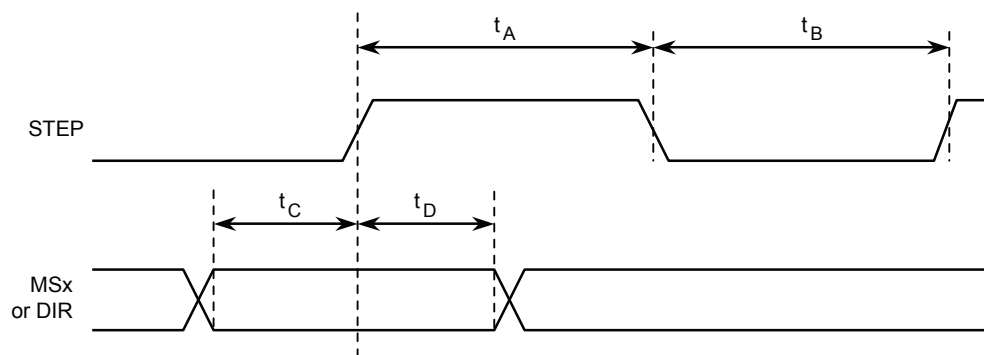
Time Duration	Symbol	Typ.	Unit
STEP minimum, HIGH pulse width	t_A	1	µs
STEP minimum, LOW pulse width	t_B	1	µs
Setup time, input change to STEP	t_C	400	ns
Hold time, input change to STEP	t_D	400	ns

Figure 1: Logic Interface Timing Diagram

Table 1: Microstep Resolution Truth Table

MS3	MS2	MS1	Microstep Resolution
0	0	0	Full step (100% torque)
0	0	1	Half step (100% torque)
0	1	0	Sixteenth step
0	1	1	Thirty-secondth step
1	0	0	Full step (modified)
1	0	1	Half step (modified)
1	1	0	Quarter step
1	1	1	Eighth step

Allegro MicroSystems, LLC
115 Northeast Cutoff, Box 15036
Worcester, Massachusetts 01615-0036 (508) 853-5000
www.allegromicro.com

8

FUNCTIONAL DESCRIPTION

Device Operation

The A5985 is a complete microstepping motor driver with a built-in translator for easy operation with minimal control lines. It is designed to operate bipolar stepper motors in full, half, quarter, eighth, sixteenth, or thirty-secondth step modes. The currents in each of the two output full-bridges and all of the N-channel DMOS FETs are regulated with fixed off-time PWM (pulse width modulated) control circuitry. At each step, the current for each full-bridge is set by the value of its external current-sense resistor (R_{S1} and R_{S2}), a reference voltage (V_{REF}), and the output voltage of its DAC (which in turn is controlled by the output of the translator).

At power-on or reset, the translator sets the DACs and the phase current polarity to the initial Home state (shown in the Phase Current Diagrams section), and the current regulator to Mixed Decay Mode for both phases. When a step command signal occurs on the STEP input, the translator automatically sequences the DACs to the next level and current polarity. (See Table 2 for the current-level sequence.) The microstep resolution is set by the combined effect of the MSx inputs, as shown in Table 1.

Stepping Current Control

The A5985 has two methods of current control. The first method of current control is called Adaptive Percent Fast Decay (APFD). APFD is selected by connecting pin ROSC to GND. Essentially, the IC determines the proper amount of fast decay on both rising and falling currents. By only adding fast decay when needed, the output current more accurately tracks the input command from the D-to-A converter and solves the basic problem of current discontinuity through zero when stepping at slow speeds (see Figure 4). This will result in a performance advantage for slow-speed high-resolution stepping such as with security camera applications. An additional benefit of APFD is reduced current ripple across the various operating conditions and motor characteristics.

The other method of current control utilizes slow decay mode

when current is rising and mixed decay mode (31.25%) when current is falling. This method is exactly the same as A4984 series of stepper motor drivers. This method may be desired for drop-in applications to A4984 series. The current waveform and motor performance should be identical to A4984. The mixed decay waveforms for this method are shown in Figure 2. This form of current control is selected by connecting pin ROSC to greater than 3 V or by connecting a resistor from ROSC to GND. The Resistor option is used to adjust the off-time as desired (see ROSC section).

100 Percent Torque Operation

In full- and half-step modes, the device can be programmed so both phases are at ±100% current levels for full step mode, and either ±100% or 0% for half step mode.
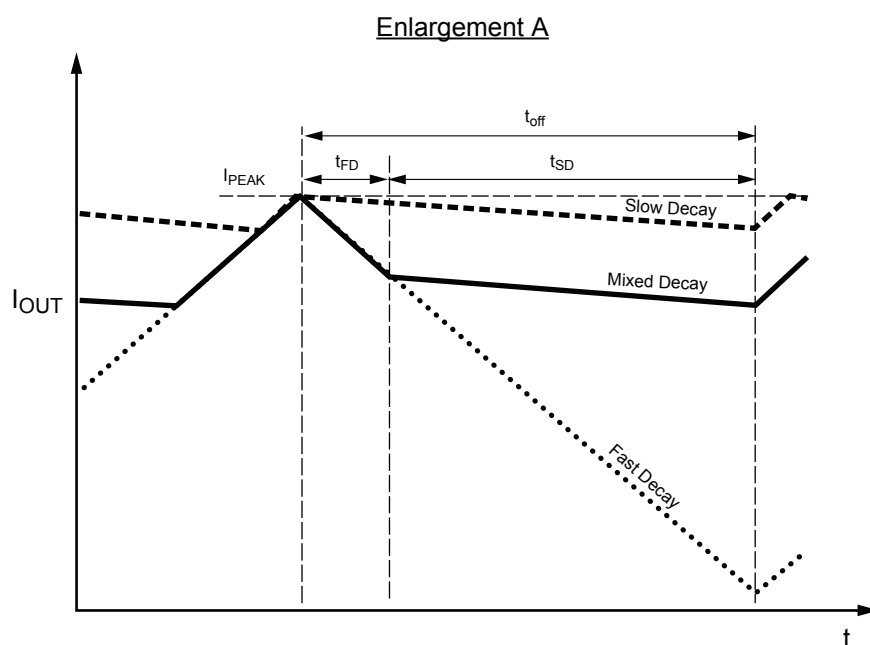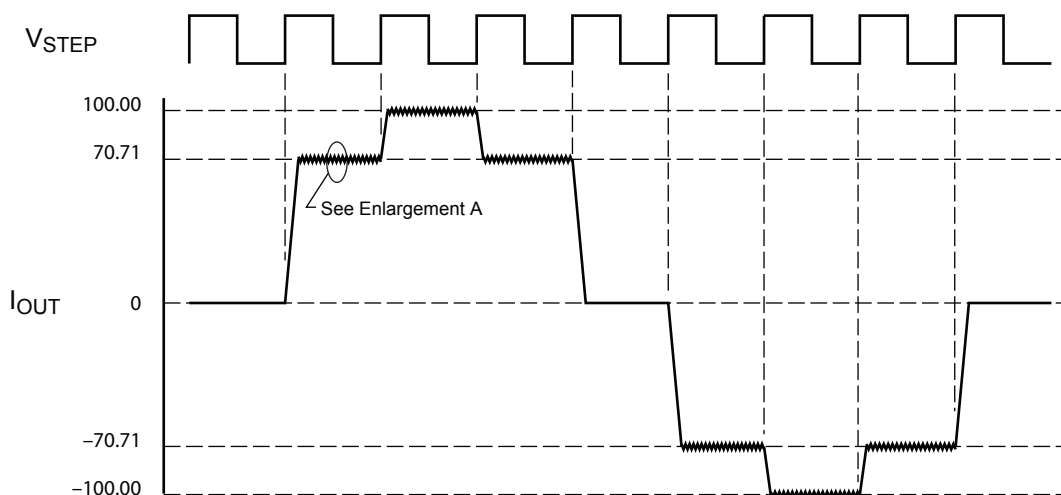
Microstep Select (MSx)

The microstep resolution is set by the voltage on logic inputs MSx, as shown in Table 1. Each MSx pin has an internal 100 kΩ pull-down resistance. When changing the step mode the change does not take effect until the next STEP rising edge.

If the step mode is changed without a translator reset, and absolute position must be maintained, it is important to change the step mode at a step position that is common to both step modes in order to avoid missing steps. When the device is powered down, or reset due to TSD or an over current event the translator is set to the home position which is by default common to all step modes.

Reset Input (RESET)

The RESET input sets the translator to a predefined Home state (shown in Phase Current Diagrams section), and turns off all of the FET outputs. All STEP inputs are ignored until the RESET input is set to high.

Allegro MicroSystems, LLC
115 Northeast Cutoff, Box 15036
Worcester, Massachusetts 01615-0036 (508) 853-5000
www.allegromicro.com

9

Enlargement A

Symbol	Characteristic
t_{off}	Device fixed off-time
I_{PEAK}	Maximum output current
t_{SD}	Slow decay interval
t_{FD}	Fast decay interval
I_{OUT}	Device output current

Figure 2: Current Decay Modes Timing Chart

Allegro MicroSystems, LLC
115 Northeast Cutoff, Box 15036
Worcester, Massachusetts 01615-0036 (508) 853-5000
www.allegromicro.com

10
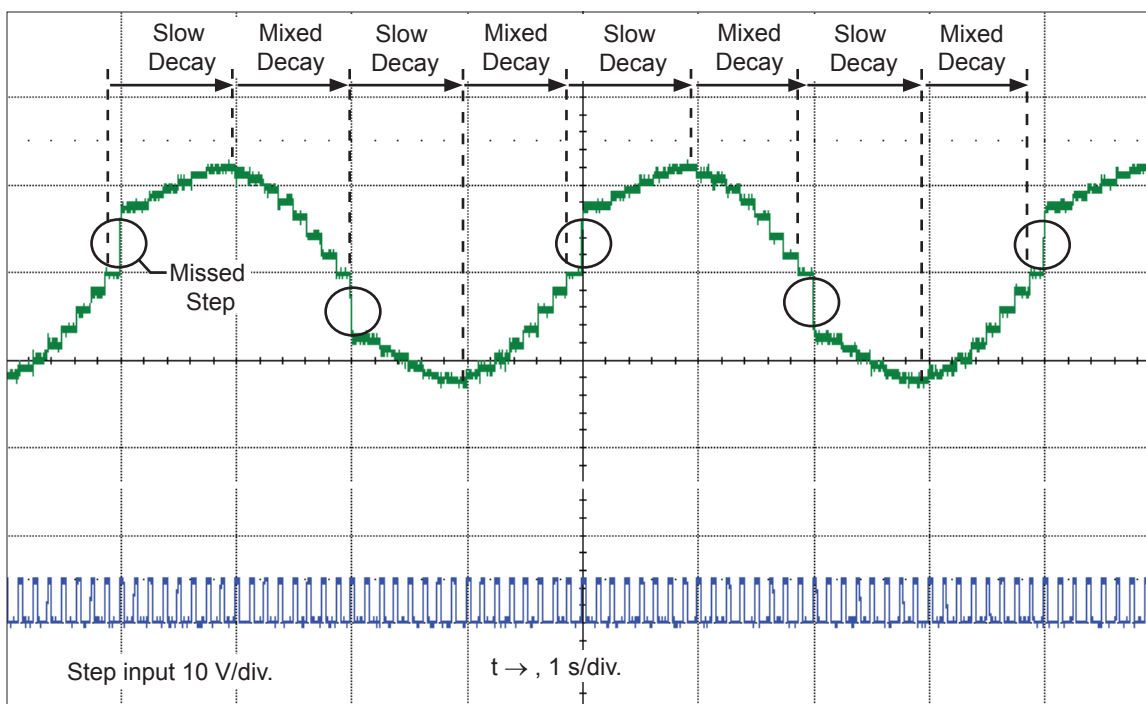
Figure 3: Missed Steps in Low-Speed Microstepping
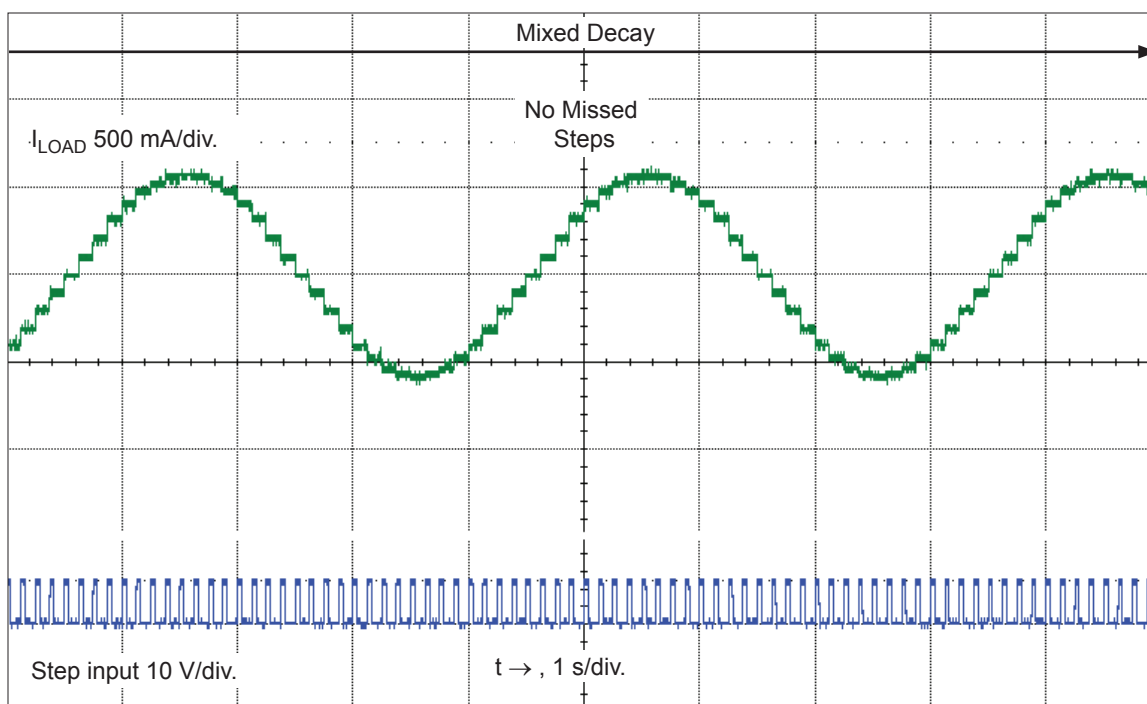
Figure 4: Continuous Stepping Using APFD (ROSC Pin Grounded)

Allegro MicroSystems, LLC
115 Northeast Cutoff, Box 15036
Worcester, Massachusetts 01615-0036 (508) 853-5000
www.allegromicro.com

11

Step Input (STEP)

A low-to-high transition on the STEP input sequences the translator and advances the motor one increment. The translator controls the input to the DACs and the direction of current flow in each winding. The size of the increment is determined by the combined state of the MSx inputs.

Direction Input (DIR)

This determines the direction of rotation of the motor. Setting to logic high and logic low set opposite rotational directions. Changes to this input do not take effect until the next STEP input rising edge. Refer to Phase Current diagrams (Figures 10 to 17). For DIR = LOW, currents change sequentially clockwise around the circle. For DIR = HIGH, counterclockwise.

Internal PWM Current Control

Each full-bridge is controlled by a fixed off-time PWM current control circuit that limits the load current to a desired value, I_{TRIP}. Initially, a diagonal pair of source and sink FET outputs are enabled and current flows through the motor winding and the current sense resistor, R_{Sx}. When the voltage across R_{Sx} equals the DAC output voltage, the current sense comparator resets the PWM latch. The latch then turns off either the source FET (when in Slow decay mode) or the sink and source FETs (when in Mixed decay mode).

The maximum value of current limiting is set by the selection of R_{Sx} and the voltage at the VREF pin. The transconductance function is approximated by the maximum value of current limiting, $I_{TripMAX}$ (A), which is set by

$$I_{TripMAX} = V_{REF}/(8 \times R_S)$$

where R_S is the resistance of the sense resistor (Ω) and V_{REF} is the input voltage on the REF pin (V).

The DAC output reduces the V_{REF} output to the current sense comparator in precise steps, such that

$$I_{trip} = (\%I_{TripMAX}/100) \times I_{TripMAX}$$

(See table 2 for $\%I_{TripMAX}$ at each step.)

It is critical that the maximum rating (0.5 V) on the SENSE1 and SENSE2 pins is not exceeded.

Blanking

This function blanks the output of the current sense comparators when the outputs are switched by the internal current control circuitry. The comparator outputs are blanked to prevent false overcurrent detection due to reverse recovery currents of the clamp diodes, and switching transients related to the capacitance of the load. The blank time, t_{BLANK} (µs), is approximately

$$t_{BLANK} \approx 1 \ \mu s$$

ROSC

The configuration of the ROSC terminal determines both the method of current control as well as the fixed off-time (t_{OFF}).

ROSC	Decay Mode	t_{OFF}
GND	APFD (Adaptive Percent Fast Decay Mode)	16 µs
Resistor to GND	Slow Decay Rising Current Steps Mixed Decay Falling Current Steps	ROSC/825 (µs)
Pulled Up to > 3 V Supply	Slow Decay Rising Current Steps Mixed Decay Falling Current Steps	30 µs

Charge Pump (CP1 and CP2)

The charge pump is used to generate a gate supply greater than that of VBB for driving the source-side FET gates. A 0.1 µF ceramic capacitor, should be connected between CP1 and CP2. In addition, a 0.1 µF ceramic capacitor is required between VCP and VBB, to act as a reservoir for operating the high-side FET gates.

Capacitor values should be Class 2 dielectric ±15% maximum, or tolerance R, according to EIA (Electronic Industries Alliance) specifications.

Enable Input ($\overline{ENABLE}$)

This input turns on or off all of the FET outputs. When set to a logic high, the outputs are disabled. When set to a logic low, the internal control enables the outputs as required. The translator inputs STEP, DIR, and MSx, as well as the internal sequencing logic, all remain active, independent of the $\overline{ENABLE}$ input state.

Sleep Mode ($\overline{SLEEP}$)

To minimize power consumption when the motor is not in use, SLEEP disables much of the internal circuitry including the

Allegro MicroSystems, LLC
115 Northeast Cutoff, Box 15036
Worcester, Massachusetts 01615-0036 (508) 853-5000
www.allegromicro.com

12

output FETs, current regulator, and charge pump. A logic low on the $\overline{\text{SLEEP}}$ pin puts the A5985 into Sleep mode. A logic high allows normal operation, as well as start-up (at which time the A5985 drives the motor to the Home microstep position). When emerging from Sleep mode, in order to allow the charge pump to stabilize, provide a delay of 1 ms before issuing a Step command.

Synchronous Rectification

When a PWM-off cycle is triggered by an internal fixed-off time cycle, load current recirculates according to the decay mode selected by the control logic. This synchronous rectification feature turns on the appropriate FETs during current decay, and effectively shorts out the body diodes with the low FET $R_{DS(on)}$. This reduces power dissipation significantly, and can eliminate the need for external Schottky diodes in many applications. Synchronous rectification turns off when the load current approaches zero (0 A), preventing reversal of the load current.

Protection Functions

FAULT OUTPUT (nFAULT)

An open drain fault output is provided to notify the user if the IC has been disabled due to an OCP event. If an OCP event is triggered the device will be disabled and the outputs will be latched off. The active low nFAULT output will be enabled. The latch can be reset by commanding $\overline{\text{SLEEP}}$ or $\overline{\text{RESET}}$ low, or by bringing VBB below its UVLO threshold.

THERMAL OR UNDERVOLTAGE FAULT SHUTDOWN

In the event of a fault, overtemperature (excess T_J) or an under-voltage (on VCP), the FET outputs of the A5985 are disabled until the fault condition is removed. At power-on, the UVLO (undervoltage lockout) circuit disables the FET outputs and resets the translator to the Home state.

OVERCURRENT PROTECTION

A current monitor will protect the IC from damage due to output shorts. If a short is detected, the IC will latch the fault and disable the outputs. The fault latch can only be cleared by coming out of Sleep mode or by cycling the power to VBB. During OCP events, Absolute Maximum Ratings may be exceeded for a short period of time before the device latches (see Figure 5).
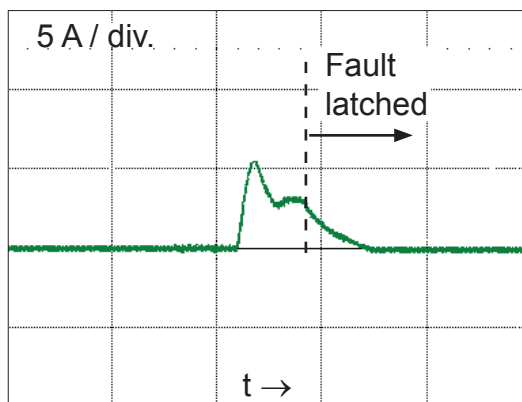

Figure 5: Overcurrent Event

Allegro MicroSystems, LLC
115 Northeast Cutoff, Box 15036
Worcester, Massachusetts 01615-0036 (508) 853-5000
www.allegromicro.com

13

APPLICATION INFORMATION

Layout

The printed circuit board should use a heavy groundplane. For optimum electrical and thermal performance, the A5985 must be soldered directly onto the board. On the underside of the A5985 package is an exposed pad, which provides a path for enhanced thermal dissipation. The thermal pad should be soldered directly to an exposed surface on the PCB. Thermal vias are used to transfer heat to other layers of the PCB (see Figure 6).

In order to minimize the effects of ground bounce and offset issues, it is important to have a low impedance single-point ground, known as a *star ground*, located very close to the device. By making the connection between the pad and the ground plane directly under the A5985, that area becomes an ideal location for a star ground point. A low-impedance ground will prevent ground bounce during high-current operation and ensure that the supply voltage remains stable at the input terminal.

The two input capacitors should be placed in parallel, and as close to the device supply pins as possible (see Figure 8). The ceramic capacitor (C7) should be closer to the pins than the bulk capacitor (C2). This is necessary because the ceramic capacitor will be responsible for delivering the high-frequency current components.

The sense resistors, RSx, should have a very low-impedance path to ground, because they must carry a large current while supporting very accurate voltage measurements by the current sense comparators. Long ground traces will cause additional voltage drops, adversely affecting the ability of the comparators to accurately measure the current in the windings. The SENSEx pins have very short traces to the RSx resistors and very thick, low-impedance traces directly to the star ground underneath the device. If possible, there should be no other components on the sense circuits.
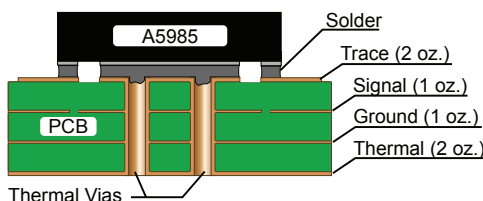

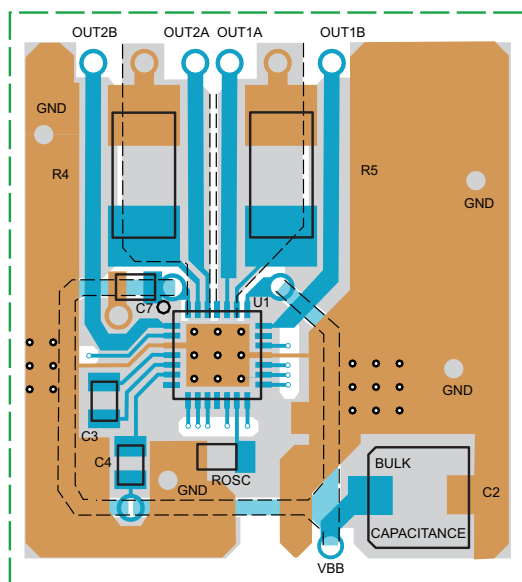**Figure 6: Soldering Cross-Section**
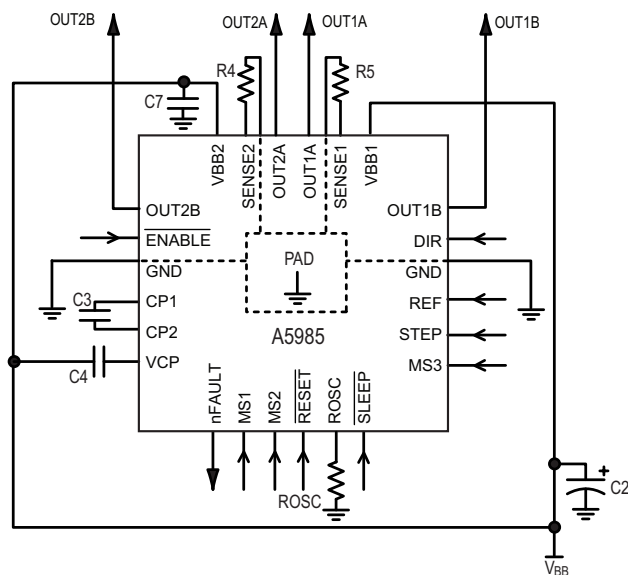

Figure 7: ET Package Circuit Layout

Figure 8: ET Package Typical Application
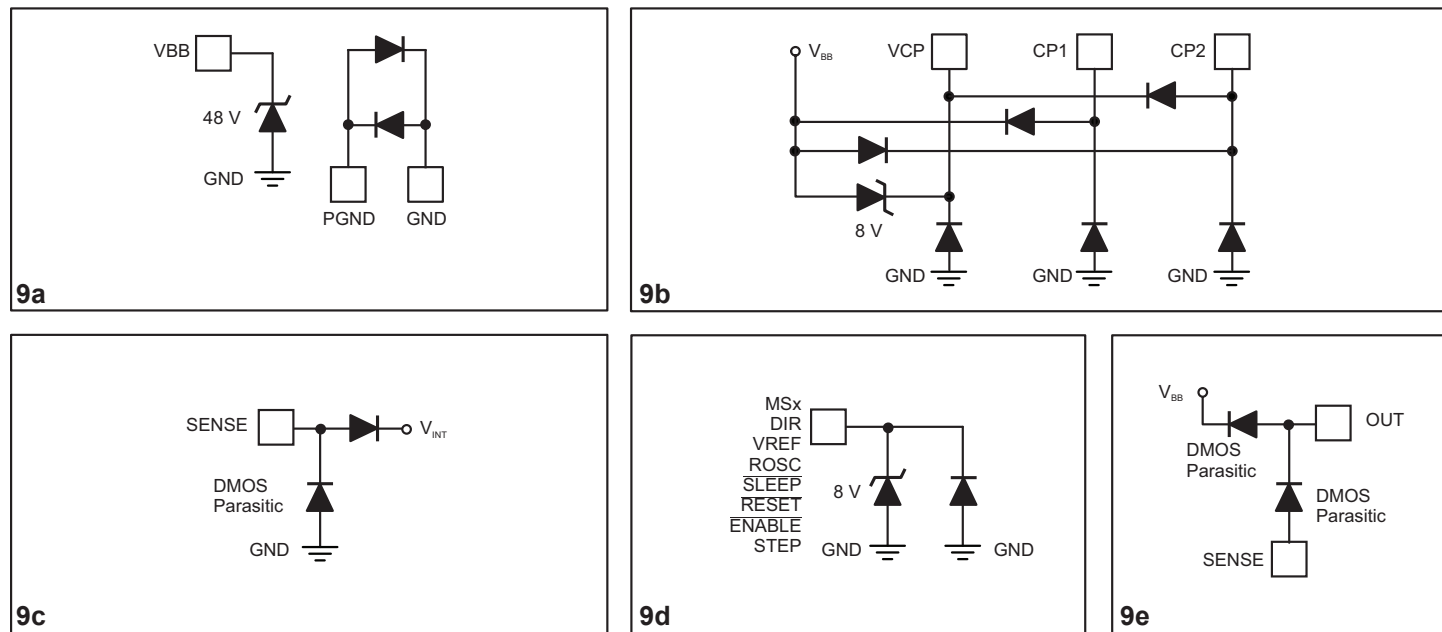
Pin Circuit Diagrams

Figure 9: Pin Circuit Diagrams

Figure 10: Full Step (100% Torque)
MSX pins = 000. See Table 2 for step number detail

Figure 11: Half Step (100% Torque)
MSX pins = 001. See Table 2 for step number detail

Allegro MicroSystems, LLC
115 Northeast Cutoff, Box 15036
Worcester, Massachusetts 01615-0036 (508) 853-5000
www.allegromicro.com

16
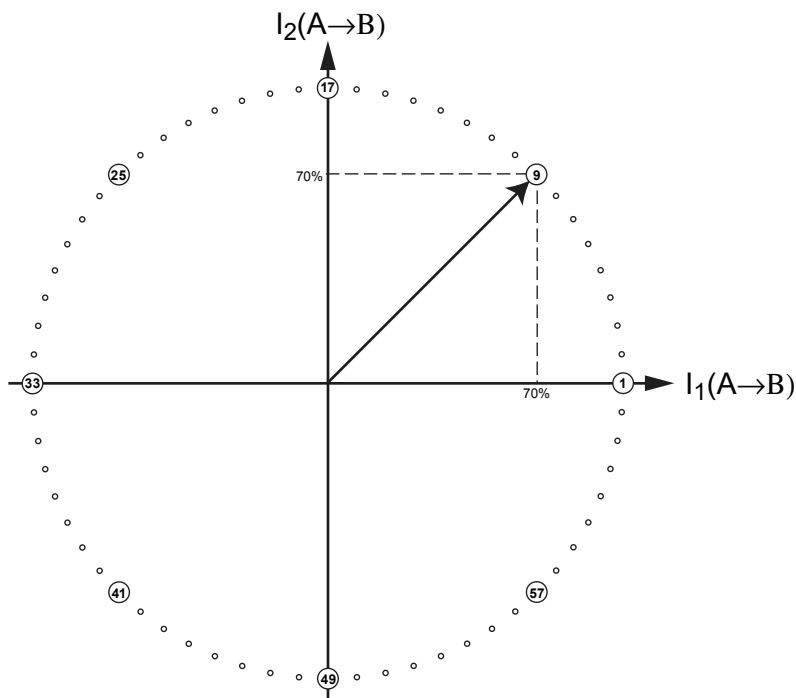
Figure 12: Sixteenth Step
MSX pins = 010. See Table 3 for step number detail

Figure 13: Thirty-Second Step
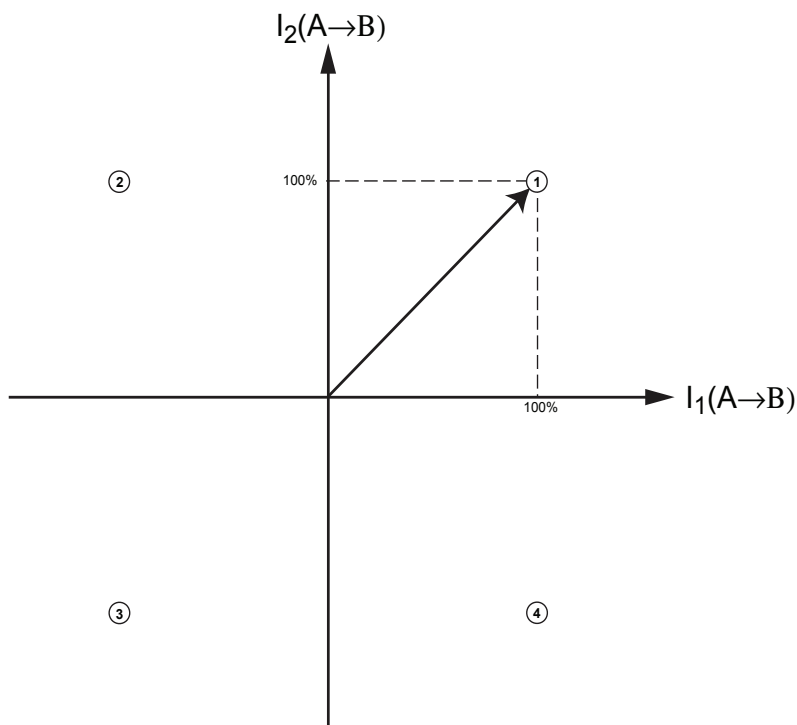**MSX pins = 011. See Table 3 for step number detail**
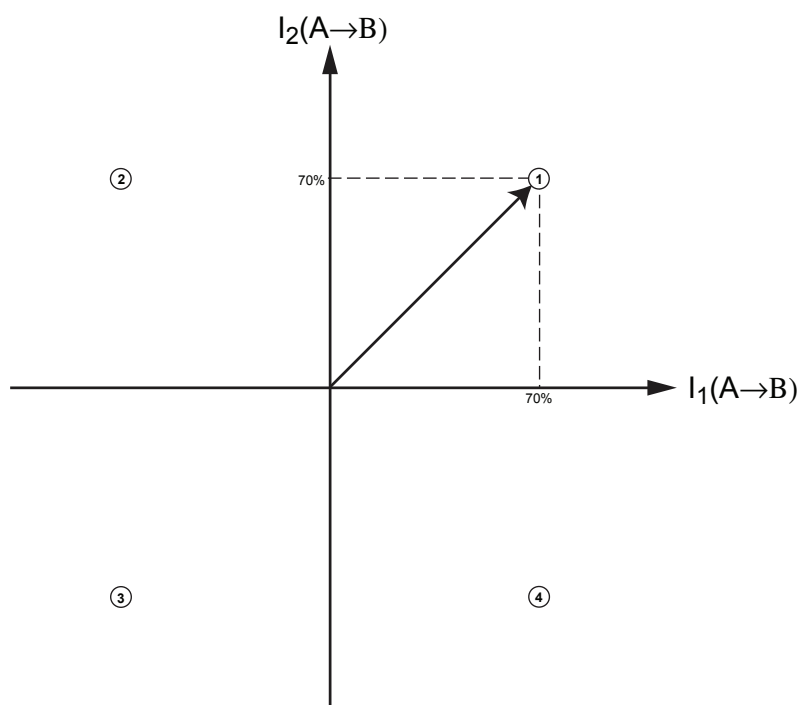
Figure 14: Full Step (70% Torque)
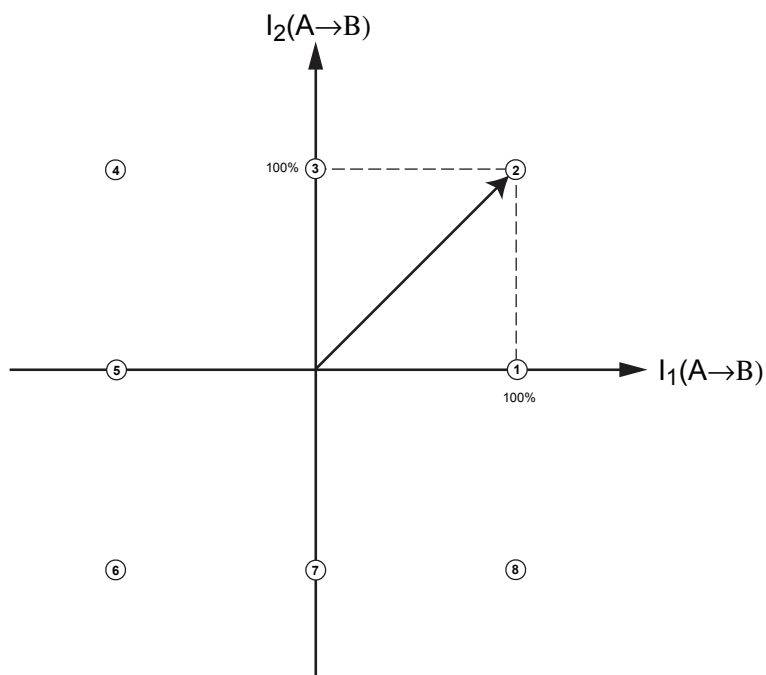**MSX pins = 100. See Table 3 for step number detail**
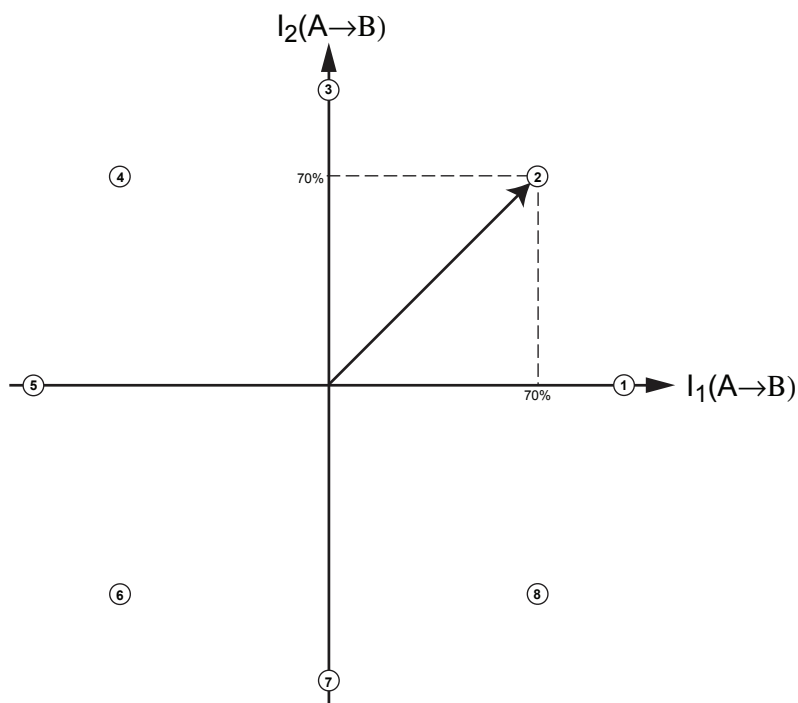
Figure 15: Half Step (70% Torque)
MSX pins = 101. See Table 3 for step number detail
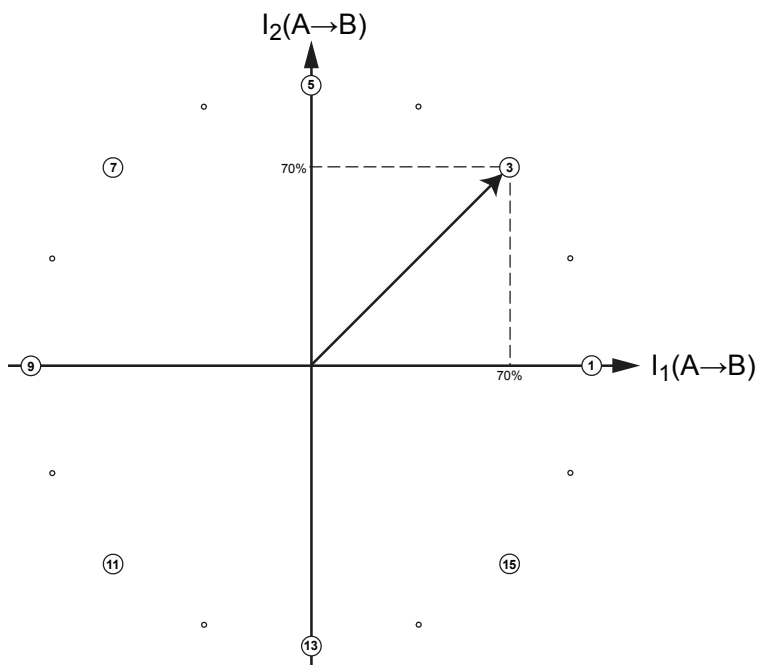
Figure 16: Quarter Step
MSX pins = 110. See Table 3 for step number detail
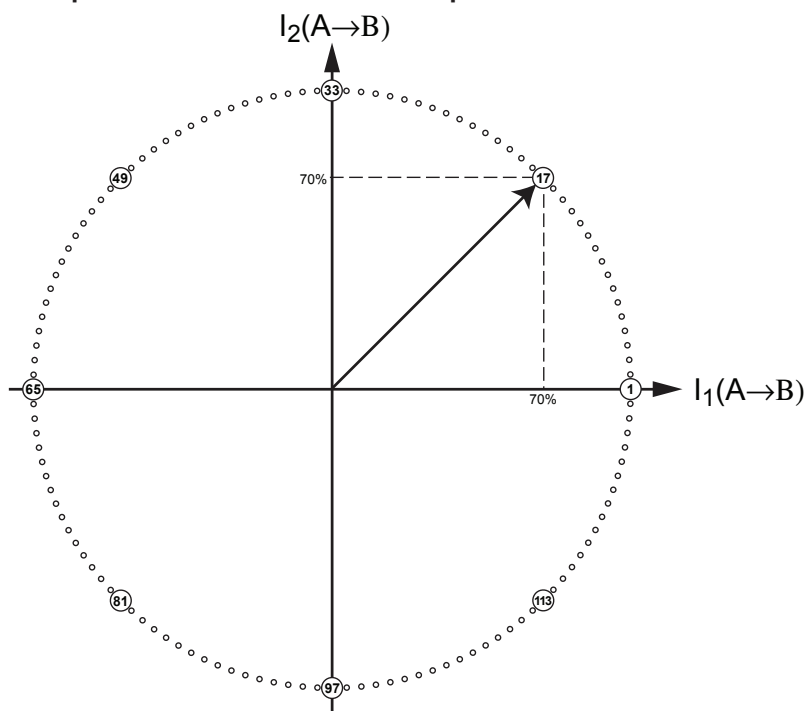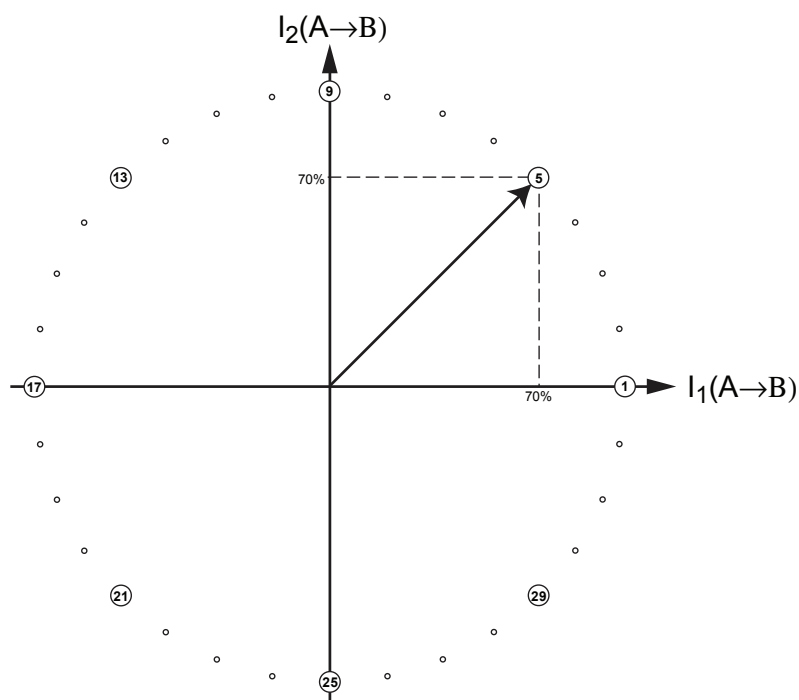

Figure 17: Eighth Step
MSX pins = 111. See Table 3 for step number detail

Allegro MicroSystems, LLC
115 Northeast Cutoff, Box 15036
Worcester, Massachusetts 01615-0036 (508) 853-5000
www.allegromicro.com

19

Stepping Phase Tables

Table 2: Stepping Phase Table, Full Torque Modes

Full (100%)	Half Step (100%)	Angle	Winding Current 1 (%)	Winding Current 2 (%)
	1	0	100	0
1	2	45	100	100
	3	90	0	100
2	4	135	−100	100
	5	180	−100	0
3	6	225	−100	−100
	7	270	0	−100
4	8	315	100	−100

Allegro MicroSystems, LLC
115 Northeast Cutoff, Box 15036
Worcester, Massachusetts 01615-0036 (508) 853-5000
www.allegromicro.com

20

Table 3: Stepping Phase Table, Common Modes

Full (70%)	Half (70%)	1/4 Step	1/8 Step	1/16 Step	1/32 Step	Angle	Winding Current 1 (%)	Winding Current 2 (%)
	1	1	1	1	1	0	100	0
					2	2.8	100	5
				2	3	5.6	100	10
					4	8.4	99	15
			2	3	5	11.3	98	20
					6	14.1	97	24
				4	7	16.9	96	29
					8	19.7	94	34
		2	3	5	9	22.5	92	38
					10	25.3	90	43
				6	11	28.1	88	47
					12	30.9	86	51
			4	7	13	33.8	83	56
					14	36.6	80	60
				8	15	39.4	77	63
					16	42.2	74	67
1	2	3	5	9	17	45	71	71
					18	47.8	67	74
				10	19	50.6	63	77
					20	53.4	60	80
			6	11	21	56.3	55	83
					22	59.1	51	86
				12	23	61.9	47	88
					24	64.7	43	90
		4	7	13	25	67.5	38	92
					26	70.3	34	94
				14	27	73.1	29	96
					28	75.9	24	97
			8	15	29	78.8	19	98
					30	81.6	15	99
				16	31	84.4	10	100
					32	87.2	5	100
	3	5	9	17	33	90	0	100
					34	92.8	−5	100

Continued on the next page…

Stepping Phase Table, Common Modes (continued)

Full (70%)	Half (70%)	1/4 Step	1/8 Step	1/16 Step	1/32 Step	Angle	Winding Current 1 (%)	Winding Current 2 (%)
				18	35	95.6	−10	100
					36	98.4	−15	99
			10	19	37	101.3	−20	98
					38	104.1	−24	97
				20	39	106.9	−29	96
					40	109.7	−34	94
		6	11	21	41	112.5	−38	92
					42	115.3	−43	90
				22	43	118.1	−47	88
					44	120.9	−51	86
			12	23	45	123.8	−56	83
					46	126.6	−60	80
				24	47	129.4	−63	77
					48	132.2	−67	74
2	4	7	13	25	49	135	−71	71
					50	137.8	−74	67
				26	51	140.6	−77	63
					52	143.4	−80	60
			14	27	53	146.3	−83	55
					54	149.1	−86	51
				28	55	151.9	−88	47
					56	154.7	−90	43
		8	15	29	57	157.5	−92	38
					58	160.3	−94	34
				30	59	163.1	−96	29
					60	165.9	−97	24
			16	31	61	168.8	−98	19
					62	171.6	−99	15
				32	63	174.4	−100	10
					64	177.2	−100	5
	5	9	17	33	65	180	−100	0
					66	182.8	−100	−5
				34	67	185.6	−100	−10

Continued on the next page…

Stepping Phase Table, Common Modes (continued)

Full (70%)	Half (70%)	1/4 Step	1/8 Step	1/16 Step	1/32 Step	Angle	Winding Current 1 (%)	Winding Current 2 (%)
					68	188.4	−99	−15
			18	35	69	191.3	−98	−20
					70	194.1	−97	−24
				36	71	196.9	−96	−29
					72	199.7	−94	−34
		10	19	37	73	202.5	−92	−38
					74	205.3	−90	−43
				38	75	208.1	−88	−47
					76	210.9	−86	−51
			20	39	77	213.8	−83	−56
					78	216.6	−80	−60
				40	79	219.4	−77	−63
					80	222.2	−74	−67
3	6	11	21	41	81	225	−71	−71
					82	227.8	−67	−74
				42	83	230.6	−63	−77
					84	233.4	−60	−80
			22	43	85	236.3	−55	−83
					86	239.1	−51	−86
				44	87	241.9	−47	−88
					88	244.7	−43	−90
		12	23	45	89	247.5	−38	−92
					90	250.3	−34	−94
				46	91	253.1	−29	−96
					92	255.9	−24	−97
			24	47	93	258.8	−19	−98
					94	261.6	−15	−99
				48	95	264.4	−10	−100
					96	267.2	−5	−100
	7	13	25	49	97	270	0	−100
					98	272.8	5	−100
				50	99	275.6	10	−100

Continued on the next page…

Allegro MicroSystems, LLC
115 Northeast Cutoff, Box 15036
Worcester, Massachusetts 01615-0036 (508) 853-5000
www.allegromicro.com

23

Stepping Phase Table, Common Modes (continued)

Full (70%)	Half (70%)	1/4 Step	1/8 Step	1/16 Step	1/32 Step	Angle	Winding Current 1 (%)	Winding Current 2 (%)
					100	278.4	15	–99
			26	51	101	281.3	20	–98
					102	284.1	24	–97
				52	103	286.9	29	–96
					104	289.7	34	–94
		14	27	53	105	292.5	38	–92
					106	295.3	43	–90
				54	107	298.1	47	–88
					108	300.9	51	–86
			28	55	109	303.8	56	–83
					110	306.6	60	–80
				56	111	309.4	63	–77
					112	312.2	67	–74
4	8	15	29	57	113	315	71	–71
					114	317.8	74	–67
				58	115	320.6	77	–63
					116	323.4	80	–60
			30	59	117	326.3	83	–55
					118	329.1	86	–51
				60	119	331.9	88	–47
					120	334.7	90	–43
		16	31	61	121	337.5	92	–38
					122	340.3	94	–34
				62	123	343.1	96	–29
					124	345.9	97	–24
			32	63	125	348.8	98	–19
					126	351.6	99	–15
				64	127	354.4	100	–10
					128	357.2	100	–5

PACKAGE OUTLINE DRAWING

5.00 ±0.15

28

1
2

Ⓐ

5.00 ±0.15

SEATING PLANE

C

29X Ⓓ

0.08 | C

0.25 +0.05 −0.07

0.50

0.90 ±0.10

0.30

1.15

28

0.50

1

3.15

4.80

3.15

4.80

Ⓒ PCB Layout Reference View

0.73 MAX

Ⓑ

3.15

2
1

28

3.15
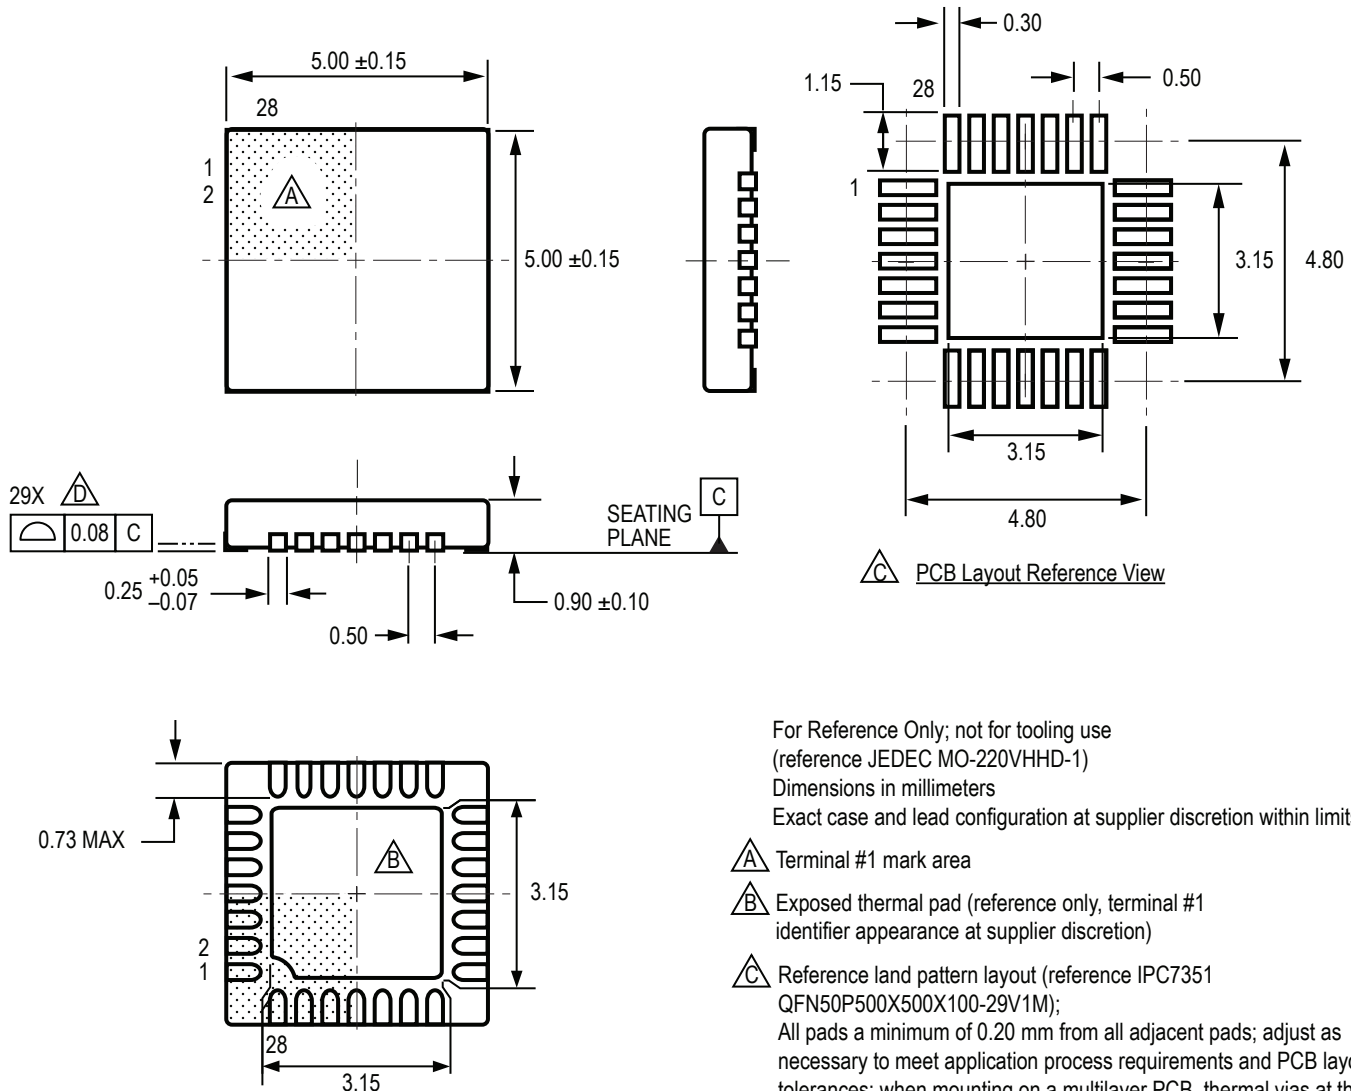
For Reference Only; not for tooling use
(reference JEDEC MO-220VHHD-1)
Dimensions in millimeters
Exact case and lead configuration at supplier discretion within limits shown

Ⓐ Terminal #1 mark area

Ⓑ Exposed thermal pad (reference only, terminal #1 identifier appearance at supplier discretion)

Ⓒ Reference land pattern layout (reference IPC7351 QFN50P500X500X100-29V1M);
All pads a minimum of 0.20 mm from all adjacent pads; adjust as necessary to meet application process requirements and PCB layout tolerances; when mounting on a multilayer PCB, thermal vias at the exposed thermal pad land can improve thermal dissipation (reference EIA/JEDEC Standard JESD51-5)

Ⓓ Coplanarity includes exposed thermal pad and terminals

ET Package, 28-Pin QFN with Exposed Thermal Pad

Allegro MicroSystems, LLC
115 Northeast Cutoff, Box 15036
Worcester, Massachusetts 01615-0036 (508) 853-5000
www.allegromicro.com

25

Revision History

Revision No.	Revision Date	Description
–	August 14, 2015	Initial Release

For the latest version of this document, visit our website:

www.allegromicro.com

Allegro MicroSystems, LLC
115 Northeast Cutoff, Box 15036
Worcester, Massachusetts 01615-0036 (508) 853-5000
www.allegromicro.com

26