
Mumbai: 2021



8085 ARCHITECTURE, PINS AND FLAG REGISTER


Note: Dear Students, Architecture contains all the pins and also the Flag Register. Hence I have made a common PDF for all the three topics so that you get the complete picture.

ARCHITECTURE OF 8085

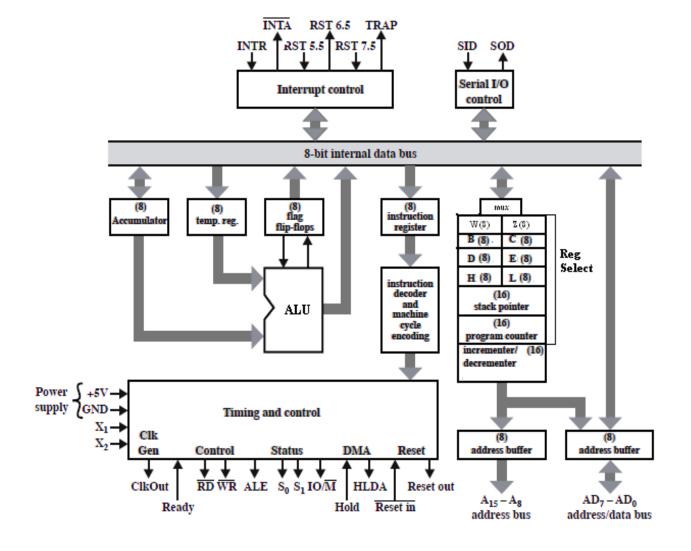



PIN CONFIGURATION OF 8085

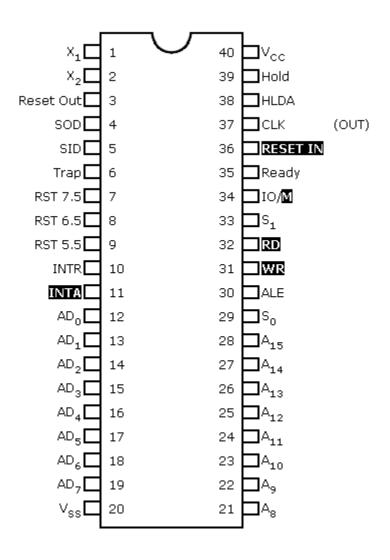



Registers

Program Counter (PC, 16-bits):

It is a 16-bit Special-Purpose register. It holds **address** of the **next instruction**. PC is incremented by the INR/DCR after every instruction byte is fetched.

Stack Pointer (SP, 16-bits):

It is a 16-bit Special-Purpose register. It holds **address** of the **top of the Stack**. Stack is a set of memory locations operating in LIFO manner. SP is **decremented** on every **PUSH** operation and **incremented** on every **POP**.

B, C, D, E, H, L registers 8-bits each:

These are 8-bit General-Purpose registers.

They can also be used to store 16-bit data in register pairs.

The possible register pairs are BC pair, DE pair and HL pair.

The **HL** pair also holds the **address** for the Memory Pointer "M".

Temporary Registers (WZ, 16-bits):

This is a 16-bit register pair.

It is used by μP to hold temporary values in some instructions like CALL/JMP/LDA etc. The programmer has no access to this register pair.

INR/DCR Register (16-bits):

This is a 16-bit shift register.

It is used to increment PC after every instruction byte is fetched and increment or decrement SP after a Pop or a Push operation respectively.

It is not available to the programmer.

A - Accumulator (8-bits):

It is an 8-bit programmable register. The user can read or write this register.

It has two special properties viz:

- It **holds one** of the **operands** during most of the arithmetic operations.
- It holds the result of most of the arithmetic and logic operations

Temp Register (8-bits):


This is an 8-bit register.

It is **used by µP** for storing one of the operands during an operation.

The **programmer** has **NO ACCESS** to this register.



Flag Register

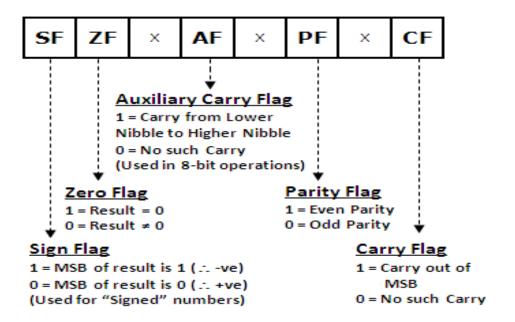

S - Sign Flag:

It is **set** (1) when **MSB** of the result is **1** (i.e. result is a **-**VE number). It is reset (0) when MSB of the result is 0 (i.e. result is a **+**VE number).

Z - Zero Flag:

It is **set** when the **result** is **= zero**.

It is reset when the result is not = zero.

AC - Auxiliary Carry Flag:

It is set when an Auxiliary Carry / Borrow is generated.

It is reset when an Auxiliary Carry / Borrow is not generated.

Auxiliary Carry is the Carry generated **between** the **lower nibble** and **the higher nibble** for an 8-bit operation. It is not affected after a 16- bit operation. It is used only in DAA operation.

P - Parity Flag:

It is **set (1)** when result has **even parity**. It is reset when result has odd parity.

C - Carry Flag:

It is set when a Carry / Borrow is generated from the MSB.

It is reset when a Carry / Borrow is not generated from the MSB.

In the exam, Show at least 2 examples from Bharat Sir's lecture notes



Interrupt Control

This Block is responsible for controlling the **hardware interrupts** of 8085. 8085 supports the following hardware interrupts:

TRAP:

This is an edge as well as level triggered, vectored interrupt.

It cannot be masked by SIM instruction and can neither be disabled by DI instruction.

It has the **highest priority**.

Its vector address is 0024H.

RST 7.5:

This is an **edge triggered**, **vectored** interrupt.

It can be masked by SIM instruction and can also be disabled by DI instruction.

It has the **second highest priority**.

Its vector address is 003CH.

RST 6.5:

This is a **level triggered**, **vectored** interrupt.

It can be masked by SIM instruction and can also be disabled by DI instruction.

It has the **third highest priority**.

Its vector address is 0034H.

RST 5.5:

This is a **level triggered**, **vectored** interrupt.

It can be masked by SIM instruction and can also be disabled by DI instruction.

It has the fourth highest priority.

Its vector address is 002CH.

INTR:

This is a **level triggered**, **non-vectored** interrupt.

It cannot be masked by SIM instruction but can be disabled by DI instruction.

It has the lowest priority.

It has an acknowledgement signal INTA .

The address for the ISR is **fetched from external hardware**.

INTA:

This is an acknowledgement signal for INTR (only).

This signal is used to **get** the Op-Code (and hence the ISR address) from External hardware in order to execute the ISR. © In case of doubts, contact Bharat Sir: - 98204 08217.

ALL Interrupts **EXCEPT TRAP** can be **disabled** though the **DI** instruction.

These interrupts can be **enabled** again by the **EI** Instruction.

Interrupts can be individually masked or unmasked by SIM instruction.

TRAP and INTR are not affected by SIM instruction.



Serial Control

This Block is responsible for transferring data Serially to and from the μP .

SID - Serial In Data:

μP receives data, bit-by-bit through this line.

SOD - Serial Out Data:

μP sends out data, bit-by-bit through this line.

Serial transmission can be done by RIM and SIM Instructions.

ALU – Arithmetic Logic Unit

8085 has an 8-bit ALU.

It performs 8-bit arithmetic operations like Addition and Subtraction.

It also performs logical operations like AND, OR, EX-OR NOT etc.

It takes input from the Accumulator and the Temp register.

The **output** of most of the ALU operations is stored back **into** the **Accumulator**.

Instruction Register and Decoder

Instruction Register:

The 8085 places the contents of the PC onto the Address bus and fetches the instruction.

This fetched instruction is stored into the Instruction register.

Instruction Decoder:

The fetched instruction from the Instruction register enters the Instruction Decoder.

Here the instruction is decoded and the decode information is given to the Timing and Control Circuit where the instruction is executed..

Timing and Control Circuit

The timing and control circuit issues the various internal and external control signals for executing and instruction. The external pins connected to this circuit are as follows:

X1 and X2:

These pins provide the **Clock Input to the \muP**.

Clock is provided from a crystal oscillator.

ClkOut:

8085 provides the Clock input to all other peripherals through the ClockOut pin.

This takes care of **synchronizing** all peripherals with 8085.

ResetIn:

This is an active low signal activated when the manual reset signal is applied to the μ P. This signal **resets the** μ P. On Reset PC contains **0000H**. Hence, the **Reset Vector Address** of 8085 is 0000H.

ResetOut:

This signal is connected to the reset input of all the peripherals.



It is used to **reset the peripherals once** the μ **P** is **reset**.

READY:

This is an active high input.

It is used to **synchronize** the µP with **"Slower"** Peripherals.

The **µP** samples the **Ready** input in the beginning of every Machine Cycle.

If it is found to be **LOW**, the μ P executes one **WAIT CYCLE** after which it re-samples the ready pin till it finds the Ready pin HIGH.

:. The µP remains in the WAIT STATE until the READY pin becomes high again.

Hence, if the **Ready** pin is **not required** it should be **connected** to the **Vcc**, and not, left unconnected, **otherwise** would cause the μP to execute **infinite wait cycles**. #Please refer Bharat Sir's Lecture Notes for this ...

ALE - Address Latch Enable:

This signal is **used to latch address** from the multiplexed Address-Data Bus (**AD0-AD7**). When the Bus contains **address**, **ALE** is **high**, **else** it is **low**.

IO/ M:

This signal is used to distinguish between an **IO** and a **Memory operation**. When this signal is high it is an IO operation else it is a Memory operation.

RD:

This is an active low signal used to indicate a **read operation**.

WR:

This is an active low signal used to indicate a write operation.

S₁ and S₀:

These lines denote the status of the µP

S ₁ S ₀	Status
0 0	Idle
0 1	Write
1 0	Read
1 1	Opcode fetch

HOLD and **HLDA**:

The Hold and Hold Acknowledge signals are used for **Direct Memory Access** (DMA).

The **DMA Controller issued** the **Hold** signal to the μP .

In response the µP releases the System bus.

After releasing the system bus the μP acknowledges the Hold signal with **HLDA** signal.

The **DMA Transfer** thus **begins**.

DMA **Transfer** is **terminated** by **releasing** the **HOLD** signal.



Bharat Acharya Education

Learn...

8085 | 8086 | 80386 | Pentium |

8051 | ARM7 | COA

Fees: 1199/-

Duration: 6 months Activation: Immediate Certification: Yes

Free: PDFs of theory explanation Free: VIVA questions and answers Free: PDF of Multiple Choice Questions

Start Learning... NOW!

Bharat Acharya Education

Order our Books here...

8086 Microprocessor book Link: https://amzn.to/3qHDpJH

8051 Microcontroller book Link: https://amzn.to/3aFQkXc

Official WhatsApp number:

+91 9136428051