



PWM and ADC

Lecture 4



PWM and ADC

- Counters
- Timers and Alarms
- About Analog and Digital Signals
- Pulse Width Modulation (PWM)
- Analog to Digital Converters (ADC)



Timers



Bibliography


for this section

1. **Joseph Yiu**, *The Definitive Guide to ARM® Cortex®-M23 and Cortex-M33 Processors*

- Chapter 11 - *OS support features*
 - Section 11.2 - *SysTick timer*

2. **Raspberry Pi Ltd**, *RP2350 Datasheet*

- Chapter 8 - *Clocks*
 - Chapter 8.1 - *Overview*
 - Subchapter 8.1.1
 - Subchapter 8.1.2
- Chapter 12 - *Peripherals*
 - Chapter 12.8 - *System Timers*

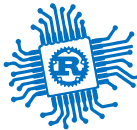


Clocks for RP235x

all peripherals and the MCU use a clock to execute at certain intervals

Source	Usage
<i>external crystal (XOSC)</i>	a stable frequency is required, for instance when using USB
<i>internal ring (ROSC)</i>	low frequency, in between 1.8 - 12 MHz (varies)

Embassy initializes the Raspberry Pi Pico with the clock source from the 12 MHz crystal.

```
1 let p = embassy_rp::init(Default::default());
```

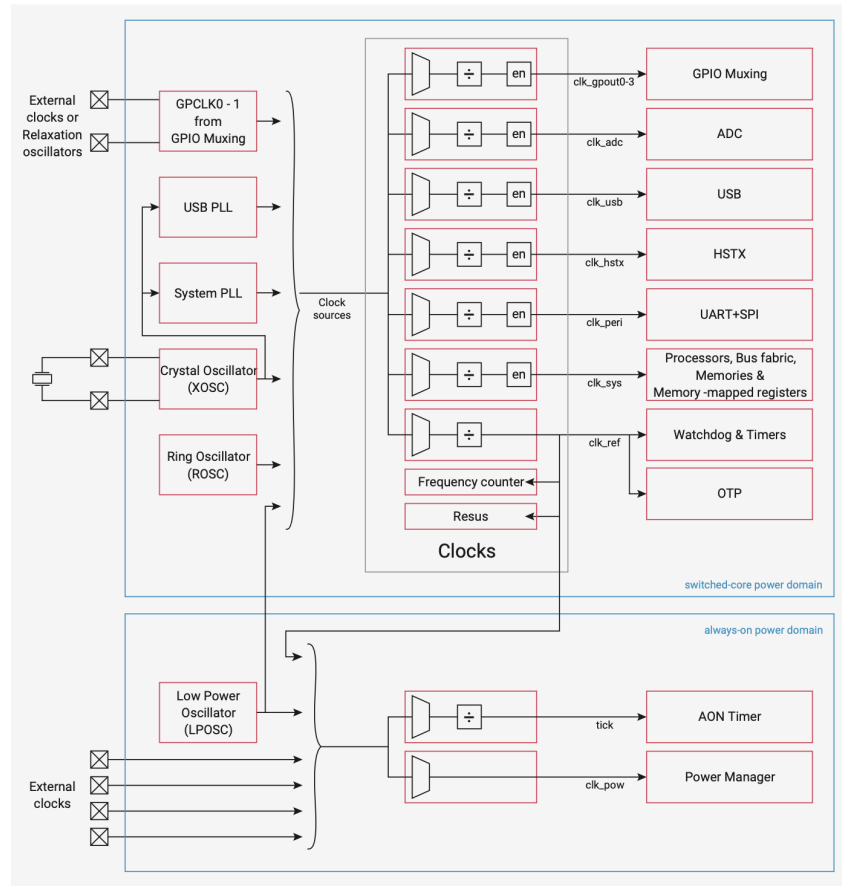



Source

Usage

*LSE, LSE32
and HSE*


oscillators based on crystals external crystals

*LSI, HSI,
HSI48, MSIS
and MSIK*

Internal RC oscillators which can be used as main clock source or as a clock source for peripherals

Embassy initializes the STM32U545RE with the clock source from Multi-Speed Internal oscillator (**MSIS**).

```
1 let p = embassy_stm32::init(Default::default());
```

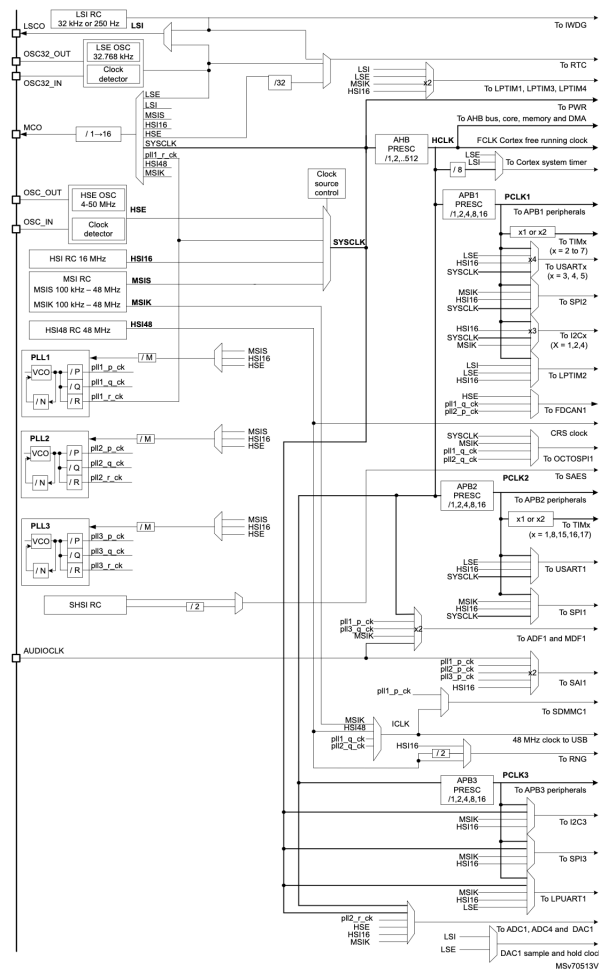




Frequency divider

stabilizing the signal and adjusting it

1. divides down the clock signals used for the timer, giving reduced overflow rates
2. allows the timer to be clocked at a user desired rate

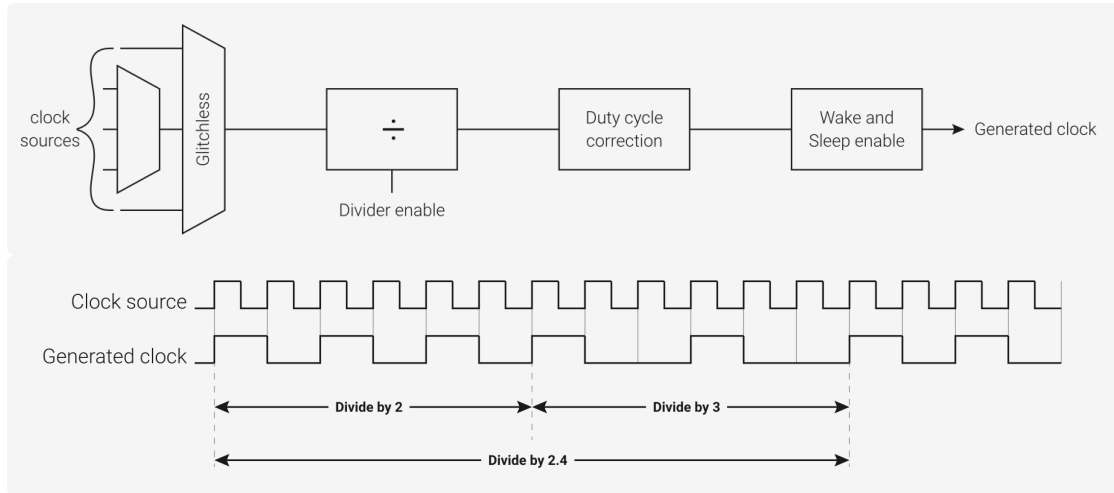





Counter

increments a register at every clock cycle

Registers	Description
value	the current value of the counter
direction	set to count UP or DOWN
reset	UP: the value at which the counter resets to 0 DOWN: the value to which the counter resets after getting to 0

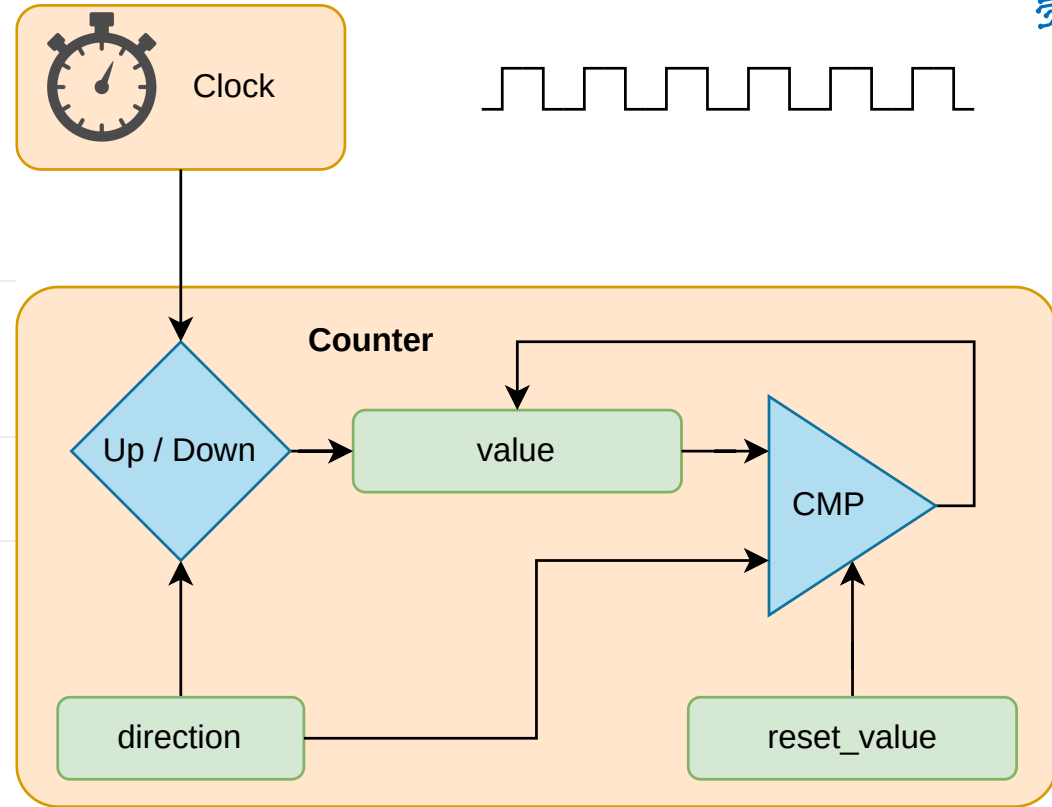

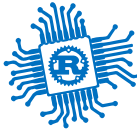

SysTick

ARM Cortex-M time counter

The ARM Cortex-M0+ registers start at a base address of `0xe0000000` (defined as `PPB_BASE` in SDK).


Offset	Name	Info
0xe010	SYST_CSR	SysTick Control and Status Register
0xe014	SYST_RVR	SysTick Reload Value Register
0xe018	SYST_CVR	SysTick Current Value Register
0xe01c	SYST_CALIB	SysTick Calibration Value Register

- decrements the value of `SYST_CVR` every μs
- when `SYST_CVR` becomes 0 :
 - triggers the SysTick exception
 - next clock cycle sets the value of `SYST_CVR` to `SYST_RVR`
- `SYST_CALIB` is the value of `SYST_RVR` for a 10ms interval (might not be available)

SYST_CSR register

Bits	Name	Description	Type	Reset
31:17	Reserved.	-	-	-
16	COUNTFLAG	Returns 1 if timer counted to 0 since last time this was read. Clears on read by application or debugger.	RO	0x0
15:3	Reserved.	-	-	-
2	CLKSOURCE	SysTick clock source. Always reads as one if SYST_CALIB reports NOREF. Selects the SysTick timer clock source: 0 = External reference clock. 1 = Processor clock.	RW	0x0
1	TICKINT	Enables SysTick exception request: 0 = Counting down to zero does not assert the SysTick exception request. 1 = Counting down to zero to asserts the SysTick exception request.	RW	0x0
0	ENABLE	Enable SysTick counter: 0 = Counter disabled. 1 = Counter enabled.	RW	0x0

$$f = \frac{1}{SYST_RVR} * 1,000,000 [Hz]_{SI}$$

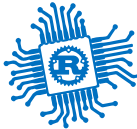

SysTick

ARM Cortex-M peripheral

The ARM Cortex-M0+ registers start at a base address of `0xe0000000` (defined as `PPB_BASE` in SDK).

Offset	Name	Info
0xe010	SYST_CSR	SysTick Control and Status Register
0xe014	SYST_RVR	SysTick Reload Value Register
0xe018	SYST_CVR	SysTick Current Value Register
0xe01c	SYST_CALIB	SysTick Calibration Value Register

```
1  const SYST_RVR: *mut u32 = 0xe000_e014 as *mut u32;
2  const SYST_CVR: *mut u32 = 0xe000_e018 as *mut u32;
3  const SYST_CSR: *mut u32 = 0xe000_e010 as *mut u32;
4
5  // fire systick every 5 seconds
6  let interval: u32 = 5_000_000;
7  unsafe {
8      write_volatile(SYST_RVR, interval);
9      write_volatile(SYST_CVR, 0);
10     // set fields `ENABLE` and `TICKINT`
11     write_volatile(SYST_CSR, 0b11);
12 }
```

SYST_CSR register

Bits	Name	Description	Type	Reset
31:17	Reserved.	-	-	-
16	COUNTFLAG	Returns 1 if timer counted to 0 since last time this was read. Clears on read by application or debugger.	RO	0x0
15:3	Reserved.	-	-	-
2	CLKSOURCE	SysTick clock source. Always reads as one if SYST_CALIB reports NOREF. Selects the SysTick timer clock source: 0 = External reference clock. 1 = Processor clock.	RW	0x0
1	TICKINT	Enables SysTick exception request: 0 = Counting down to zero does not assert the SysTick exception request. 1 = Counting down to zero to asserts the SysTick exception request.	RW	0x0
0	ENABLE	Enable SysTick counter: 0 = Counter disabled. 1 = Counter enabled.	RW	0x0

Register SysTick handler


```
1  #[exception]
2  unsafe fn SysTick() {
3      /* systick fired */
4  }
```




Alarm

counter that triggers interrupts after a time interval

Registers	Description
<code>value</code>	the current value of the counter
<code>direction</code>	set to count UP or DOWN
<code>reset</code>	UP: max value before 0 DOWN: value after 0
<code>alarm_x</code>	when <code>value == alarm_x</code> , triggers an interrupt, <code>x</code> in 1 ... <code>n</code>

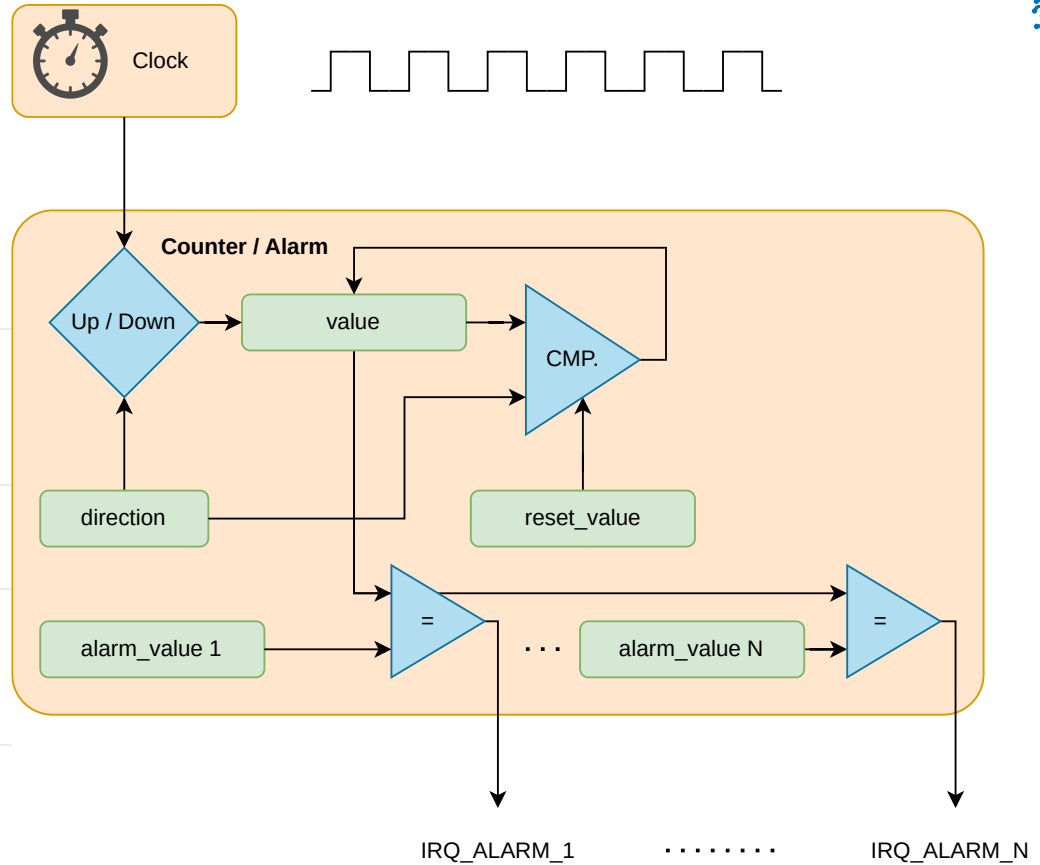


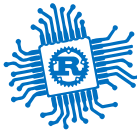


RP2350's Timers

two timers, `TIMER0` and `TIMER1`

- store a 64 bit number (`reset` is $2^{64}-1$)
- start with `0` at (the peripheral's) reset
- increment the number every μs
- in practice fully monotonic (cannot over flow)
- allow 4 alarms that trigger interrupts
 - `TIMER0_IRQ_0` and `TIMER1_IRQ_0`
 - `TIMER0_IRQ_1` and `TIMER1_IRQ_1`
 - `TIMER0_IRQ_2` and `TIMER1_IRQ_2`
 - `TIMER0_IRQ_3` and `TIMER1_IRQ_3`
- `alarm_0 ... alarm_3` registers are only 32 bits wide

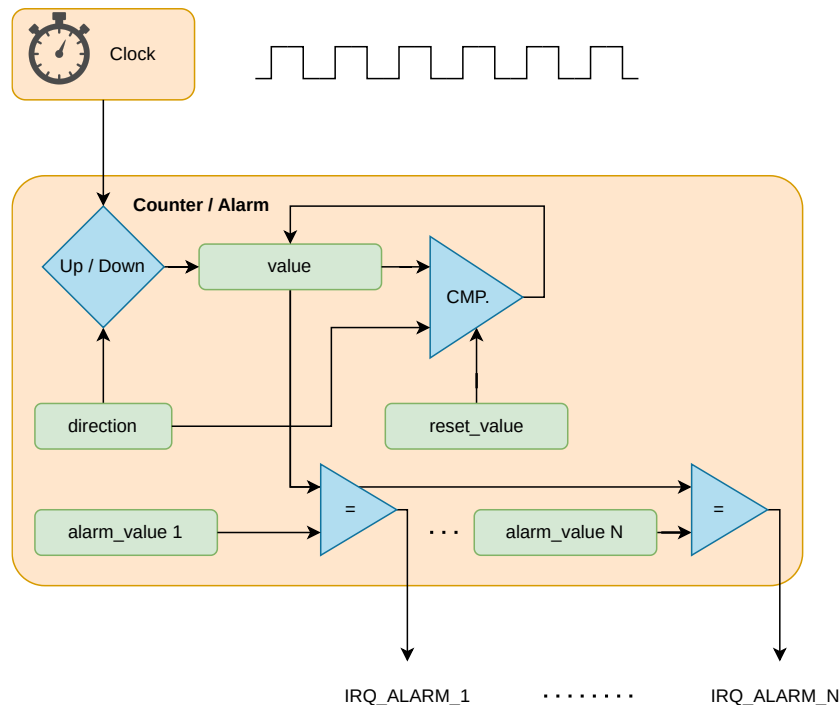

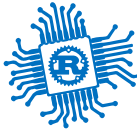

RP2350's Timer instance

read the number of elapsed μ s since reset


Reading the time elapsed since restart

```
1  const TIMERLR: *const u32 = 0x400b_000c;
2  const TIMERHR: *const u32 = 0x400b_0008;
3
4  let time: u64 = unsafe {
5      let low = read_volatile(TIMERLR);
6      let high = read_volatile(TIMERHR);
7      high as u64 << 32 | low
8  }
```

The **reading order matters** as reading `TIMERLR` latches the value in `TIMERHR` (stops being updated) until `TIMERHR` is read. Works only in **single core**.

The `TIMER0` and `TIMER1` registers start at base addresses of `0x400b0000` and `0x400b8000` respectively (defined as `TIMER0_BASE` and `TIMER1_BASE` in SDK).

Offset	Name	Info
0x00	<code>TIMEHW</code>	Write to bits 63:32 of time always write timelw before timehw
0x04	<code>TIMELW</code>	Write to bits 31:0 of time writes do not get copied to time until timehw is written
0x08	<code>TIMEHR</code>	Read from bits 63:32 of time always read timelr before timehr
0x0c	<code>TIMERLR</code>	Read from bits 31:0 of time
0x10	<code>ALARM0</code>	Arm alarm 0, and configure the time it will fire. Once armed, the alarm fires when <code>TIMER_ALARM0 == TIMERLR</code> . The alarm will disarm itself once it fires, and can be disarmed early using the ARMED status register.
0x14	<code>ALARM1</code>	Arm alarm 1, and configure the time it will fire. Once armed, the alarm fires when <code>TIMER_ALARM1 == TIMERLR</code> . The alarm will disarm itself once it fires, and can be disarmed early using the ARMED status register.
0x18	<code>ALARM2</code>	Arm alarm 2, and configure the time it will fire. Once armed, the alarm fires when <code>TIMER_ALARM2 == TIMERLR</code> . The alarm will disarm itself once it fires, and can be disarmed early using the ARMED status register.
0x1c	<code>ALARM3</code>	Arm alarm 3, and configure the time it will fire. Once armed, the alarm fires when <code>TIMER_ALARM3 == TIMERLR</code> . The alarm will disarm itself once it fires, and can be disarmed early using the ARMED status register.
0x20	<code>ARMED</code>	Indicates the armed/disarmed status of each alarm. A write to the corresponding <code>ALARMx</code> register arms the alarm. Alarms automatically disarm upon firing, but writing ones here will disarm immediately without waiting to fire.
0x24	<code>TIMERAWH</code>	Raw read from bits 63:32 of time (no side effects)
0x28	<code>TIMERAWL</code>	Raw read from bits 31:0 of time (no side effects)
0x2c	<code>DBGPAUSE</code>	Set bits high to enable pause when the corresponding debug ports are active
0x30	<code>PAUSE</code>	Set high to pause the timer
0x34	<code>LOCKED</code>	Set locked bit to disable write access to timer Once set, cannot be cleared (without a reset)

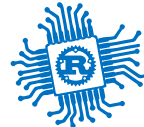

Alarm

triggering an interrupt at an interval

```
1  #[interrupt]
2  unsafe fn TIMER0_IRQ_0() { /* alarm fired */ }

1  const TIMERLR: *const u32 = 0x400b_000c;
2  const ALARM0: *mut u32 = 0x400b_0010;
3  // + 0x2000 is bitwise set
4  const INTE_SET: *mut u32 = 0x400b_0040;
5
6  // set an alarm after 3 seconds
7  let us = 3_0000_0000;
8
9  unsafe {
10     let time = read_volatile(TIMERLR);
11     // use `wrapping_add` as overflowing may panic
12     write_volatile(ALARM0, time.wrapping_add(us));
13     write_volatile(INTE_SET, 1 << 0);
14 };
```

- the alarm can be set only for the lower 32 bits
- maximum 72 minutes (use *RTC* for longer alarms)

The *TIMER0* and *TIMER1* registers start at base addresses of *0x400b0000* and *0x400b8000* respectively (defined as *TIMER0_BASE* and *TIMER1_BASE* in SDK).

Offset	Name	Info
0x00	TIMEHW	Write to bits 63:32 of time always write timelw before timehw
0x04	TIMELW	Write to bits 31:0 of time writes do not get copied to time until timehw is written
0x08	TIMEHR	Read from bits 63:32 of time always read timelr before timehr
0x0c	TIMELR	Read from bits 31:0 of time
0x10	ALARM0	Arm alarm 0, and configure the time it will fire. Once armed, the alarm fires when <code>TIMER_ALARM0 == TIMELR</code> . The alarm will disarm itself once it fires, and can be disarmed early using the ARMED status register.
0x14	ALARM1	Arm alarm 1, and configure the time it will fire. Once armed, the alarm fires when <code>TIMER_ALARM1 == TIMELR</code> . The alarm will disarm itself once it fires, and can be disarmed early using the ARMED status register.
0x18	ALARM2	Arm alarm 2, and configure the time it will fire. Once armed, the alarm fires when <code>TIMER_ALARM2 == TIMELR</code> . The alarm will disarm itself once it fires, and can be disarmed early using the ARMED status register.
0x1c	ALARM3	Arm alarm 3, and configure the time it will fire. Once armed, the alarm fires when <code>TIMER_ALARM3 == TIMELR</code> . The alarm will disarm itself once it fires, and can be disarmed early using the ARMED status register.
Offset	Name	Info
0x38	SOURCE	Selects the source for the timer. Defaults to the normal tick configured in the ticks block (typically configured to 1 microsecond). Writing to 1 will ignore the tick and count clk_sys cycles instead.
0x3c	INTR	Raw Interrupts
0x40	INTE	Interrupt Enable
0x44	INTF	Interrupt Force
0x48	INTS	Interrupt status after masking & forcing



STM32U5's Timers

11 timers and 4 low power timers

Basic Timers

- two basic 16-bit timers

Timers


- PWM generation
- four 32-bit timers
- three 16-bit timers
- two advanced control 16-bit timers

Low Power Timers

- four low power 16-bit timers

Timer type	Timer	Counter resolution	Counter type	Prescaler factor	DMA request generation	Capture/compare channels	Complementary outputs
Advanced control	TIM1, TIM8	16 bits	Up, down, Up/down	Any integer between 1 and 65536	Yes	4	3
General-purpose	TIM2, TIM3, TIM4, TIM5	32 bits	Up, down, Up/down	Any integer between 1 and 65536	Yes	4	No

Timer type	Timer	Counter resolution	Counter type	Prescaler factor	DMA request generation	Capture/compare channels	Complementary outputs
General-purpose	TIM15	16 bits	Up	Any integer between 1 and 65536	Yes	2	1
General-purpose	TIM16, TIM17	16 bits	Up	Any integer between 1 and 65536	Yes	1	1
Basic	TIM6, TIM7	16 bits	Up	Any integer between 1 and 65536	Yes	0	No

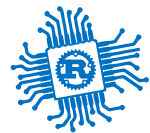

Signals

Digital Signals - Recap



Signals


Analog vs Digital

- *analog signals* are *real signals*
- *digital signals* are a *numerical representation* of an analog signal (software level)
- hardware usually works with two-level digital signals (hardware level)

Exceptions

- in wireless and in high-speed cable communication things get more complicated


for PCB level / between integrated circuits on the same board / inside the same chip - things are a "a little simpler" - as detailed in the following

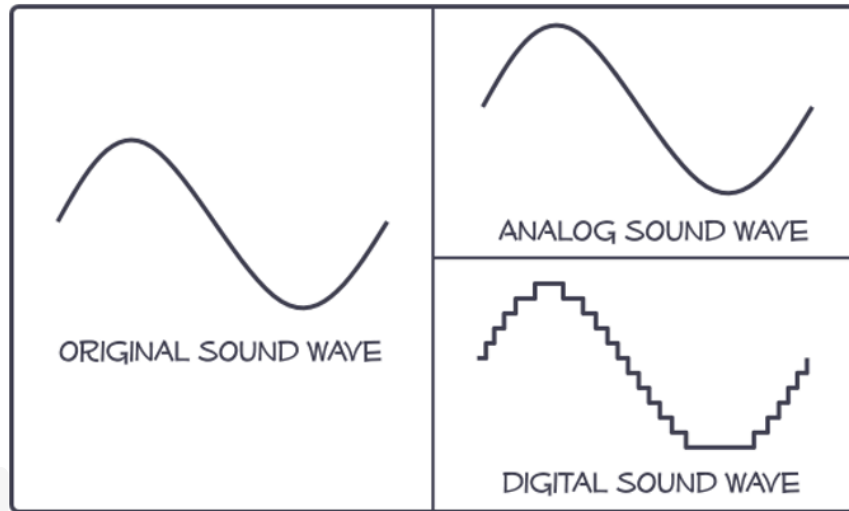




Why use digital in computing?


Signal that we *want* to generate with an output pin

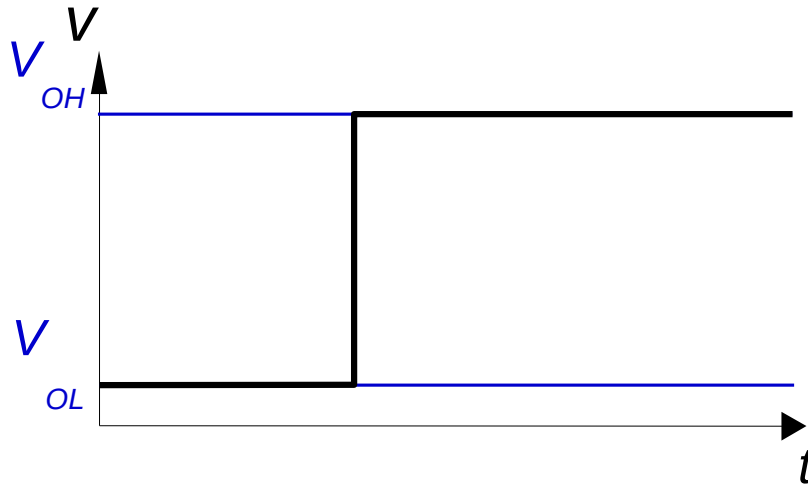


Signal that what we actually generate

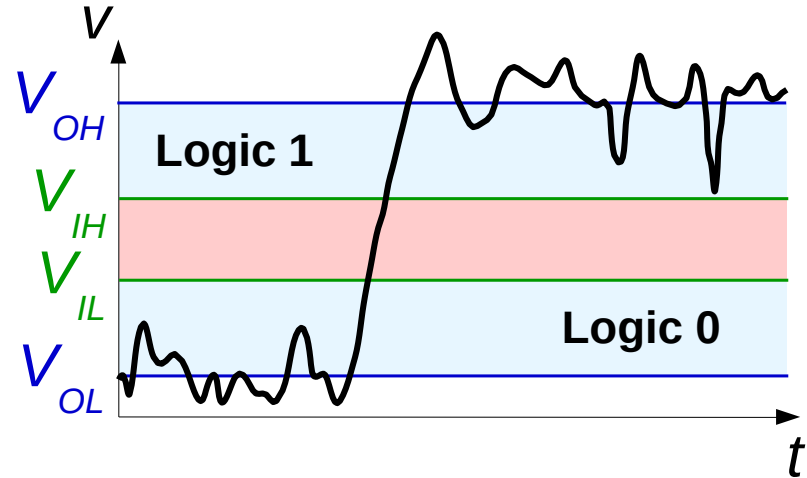


Why we still use it? Because after passing through an IC or a gate inside an IC - the signal is "rebuilt" and if the "digital discipline" described in the following is respected - we can preserve the information after numerous "passes". Thus, each element can behave with a large margin for error, yet the final result is correct.

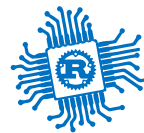

Noise Margin

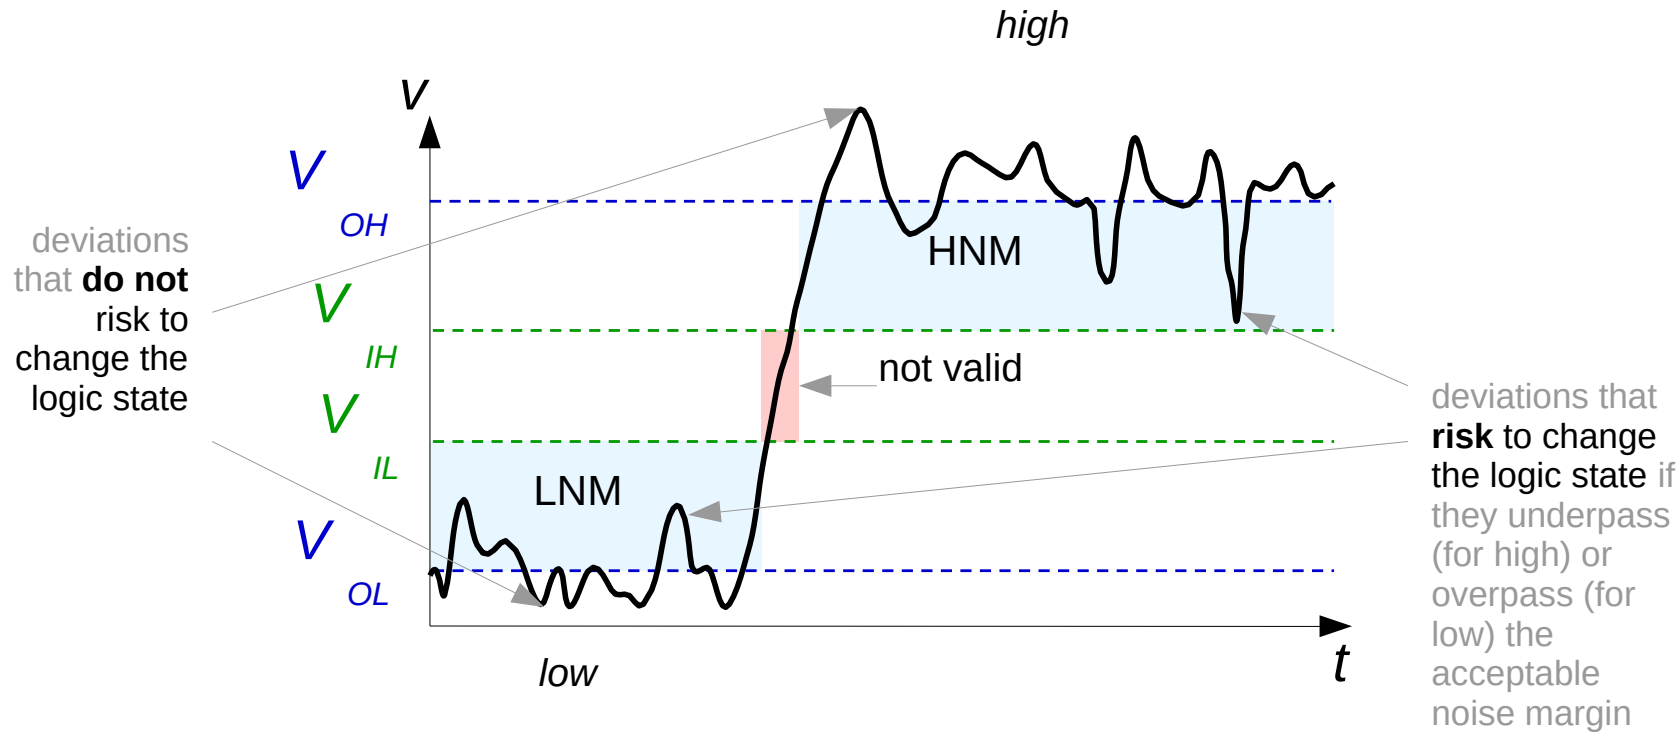


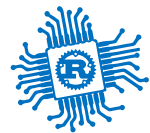

Why is the output not ideal?

The two corresponding voltage output levels are affected by:

- power supply voltage
- output current
- temperature
- variations in the manufacturing process

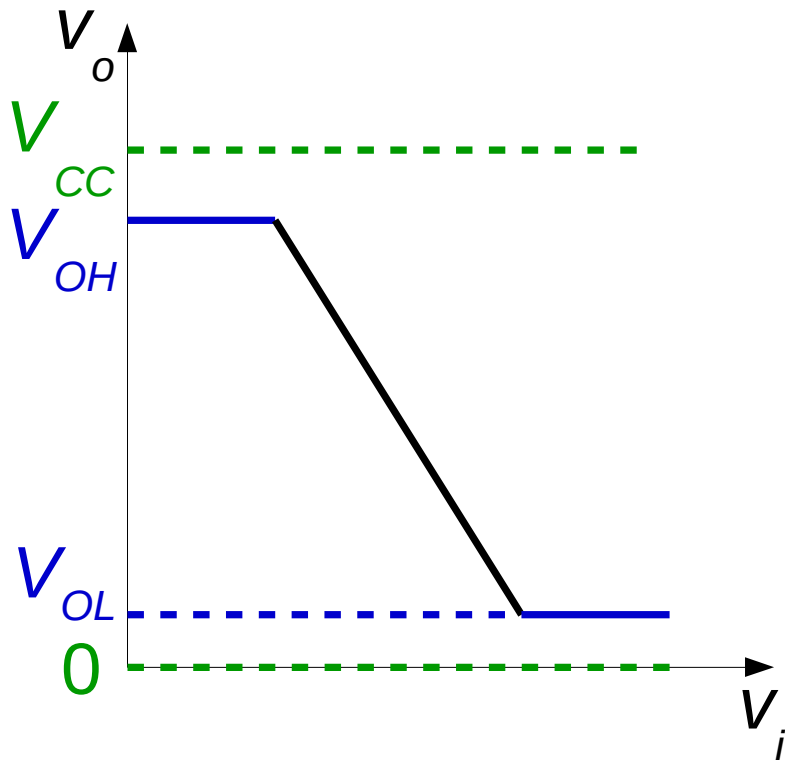


ICs same voltage

Usually will work as is

- usually, they will be compatible
- conditions:

$$V_{OH_transmitter} > V_{IH_receiver}$$


$$V_{OL_transmitter} < V_{IL_receiver}$$

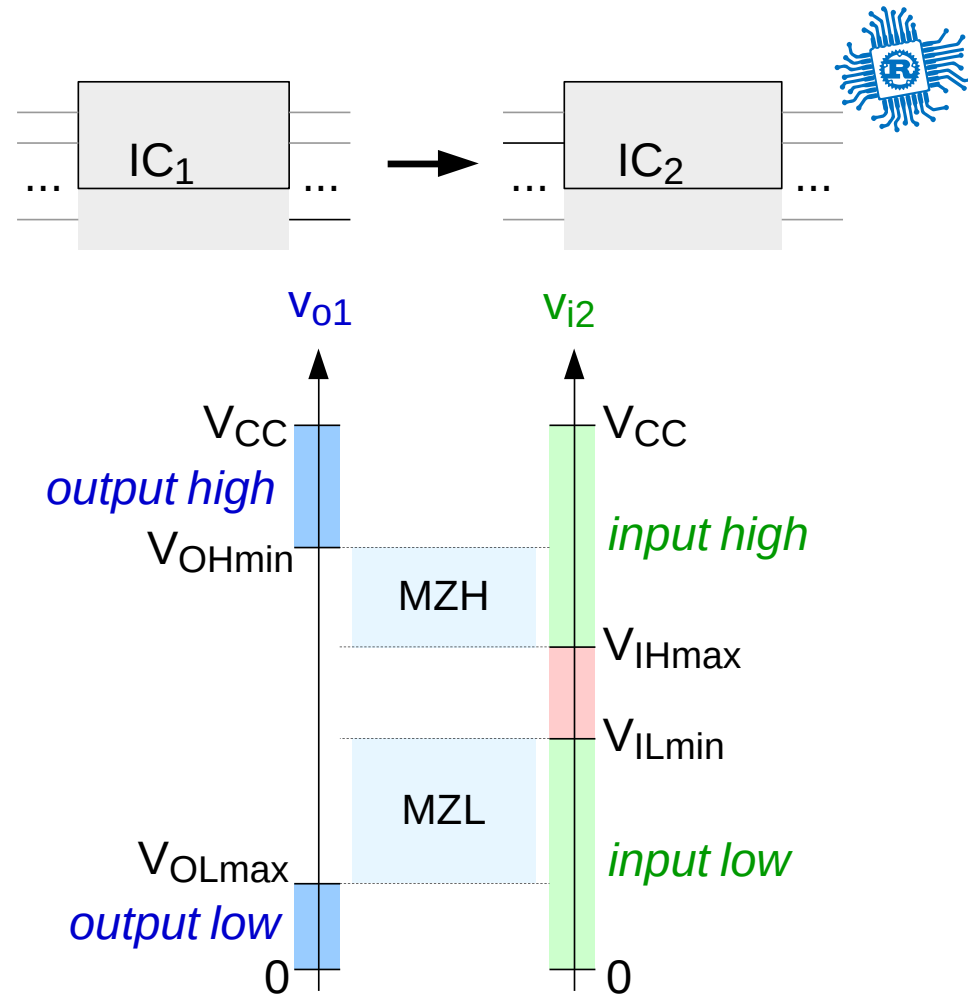

$$V_{CC1} > V_{CC2}$$

Might work, might produce magic smoke

$$V_{OH_transmitter} > V_{CC_receiver}$$

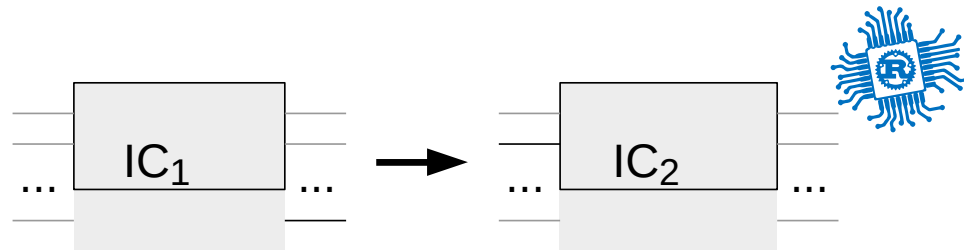


PROBLEM

Solutions:

- level shifter
- resistor divider / voltage limiter

Examples:

- Bi-Directional Level Shifter with 4 Channels
- Level Shifter Multi-Channel
- 8 Channels Level Shifter

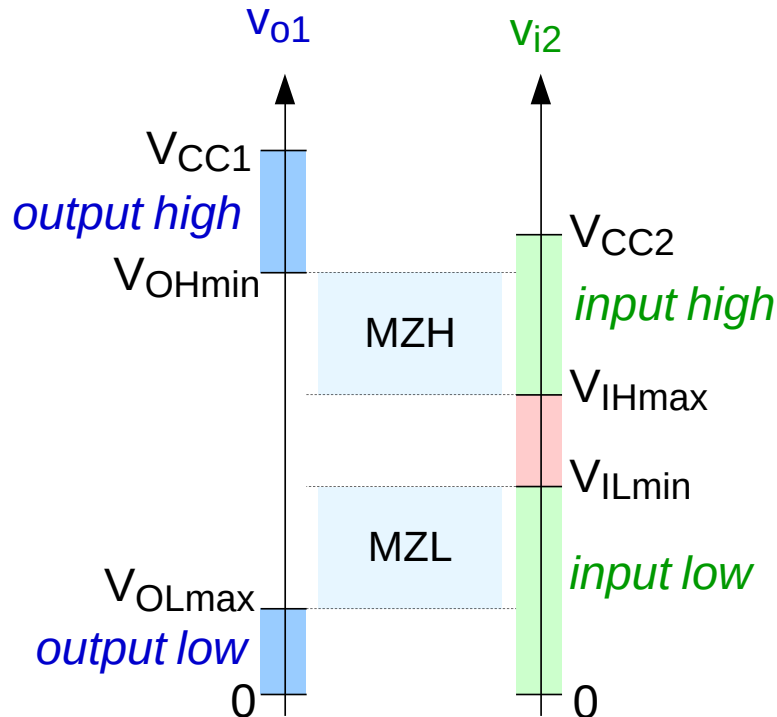

$$V_{CC1} < V_{CC2}$$

Might work

$$V_{CC_transmitter} \lesssim V_{IH_receiver}$$


Might work in an intermittent mode - hard to debug!

Solutions:

- level shifter
- resistor divider / voltage limiter

Examples:



- Bi-Directional Level Shifter with 4 Channels
- Level Shifter Multi-Channel
- 8 Channels Level Shifter

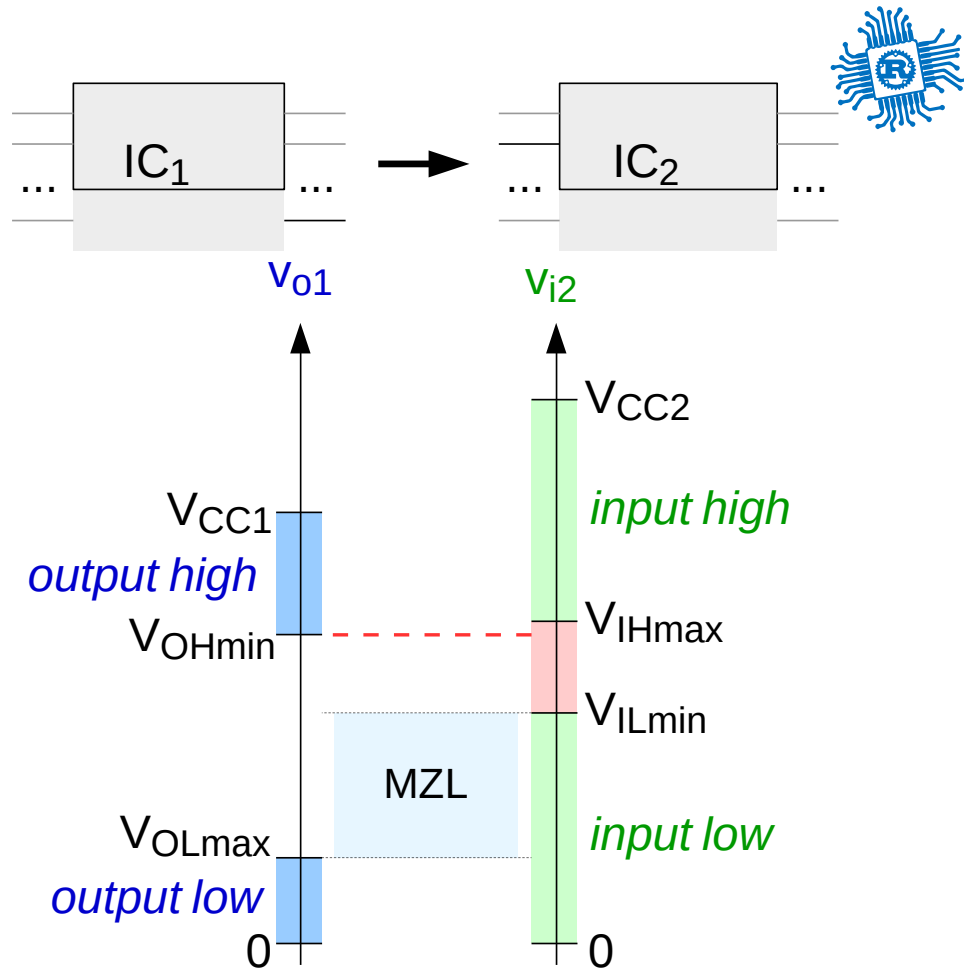




Why Pull-Down R

- Without pull-down – when the button is not pressed, it leaves the input pin floating.
- The second design ensures that the voltage level has a well-defined state, regardless of the button's state.
- R1 is called a "pull-down" resistor.

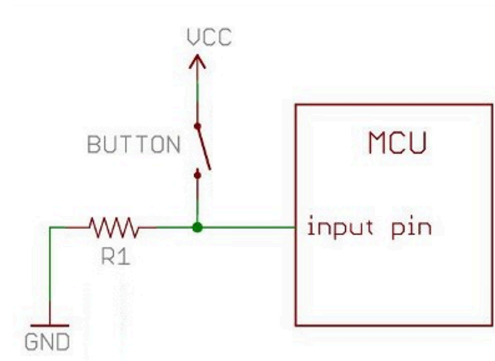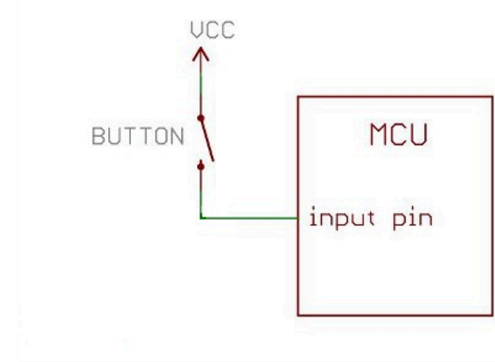

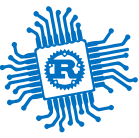


Why Pull-Up R

- Same reasoning
- R1 is called a "pull-up" resistor.

##Obs:

- most microcontrollers have at least a pull-up resistor incorporated on GPIOs - that can be activated in software
- some have both pull-up and pull-down
- typically, these are sized for a 50 - 10 nA current consumption

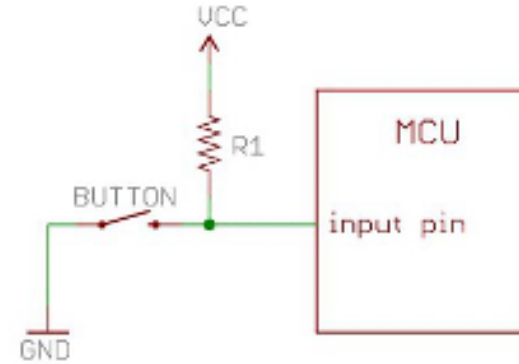



Notes on output pins

- most microcontrollers have a limit of around 10mA per output PIN
- ! do not connect an LED without a resistor in series (to limit the current)
- ! do not connect a motor / any type of inductive load


Solutions:

- use a transistor
- use an IC with incorporated Darlingtontons (eg: ULN2003)



PWM

Pulse Width Modulation

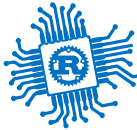

Bibliography

for this section

1. **Raspberry Pi Ltd**, *RP2350 Datasheet*

- Chapter 12 - *Peripherals*
 - Section 12.5 - *PWM*

2. **Paul Denisowski**, *Understanding PWM*





PWM

simulates an *analog* signal (using integration)

- generates a square signal
- if integrated (averaged), it looks like an analog signal

frequency Hz The number of repeats per s

duty_cycle % The percentage of the time when the signal is High

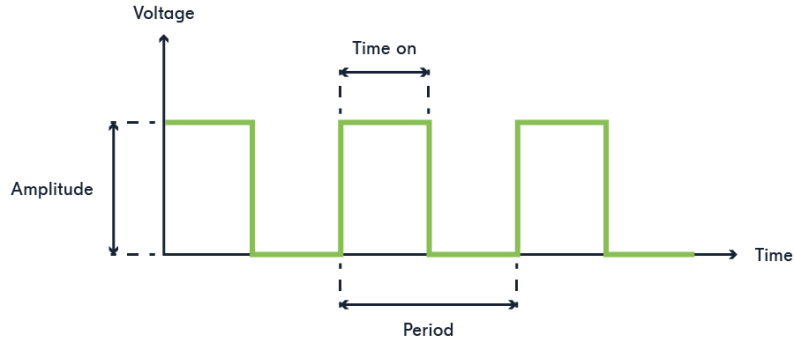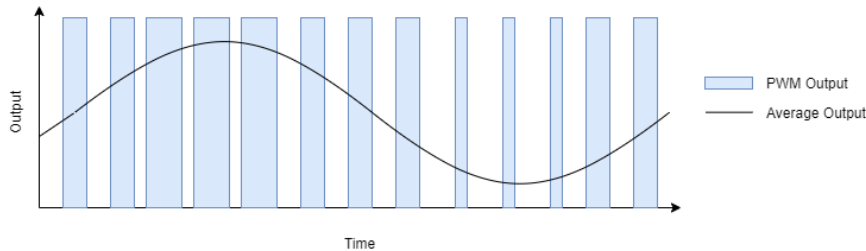

$$f = \frac{1}{\text{period}} \left[\frac{1}{s} = 1Hz \right]_{SI}$$

$$\text{duty_cycle} = \frac{\text{time_on}}{\text{period}} \%$$




PWM

generic device

$$f = \begin{cases} \frac{f_{clock}}{divider \times (top+1)} & correction = 0 \\ \frac{f_{clock}}{divider \times 2 \times (top+1)} & correction = 1 \end{cases}$$


$$pin_{a,b} = \begin{cases} 0 & compare_{a,b} \geq value \\ 1 & compare_{a,b} < value \end{cases}$$

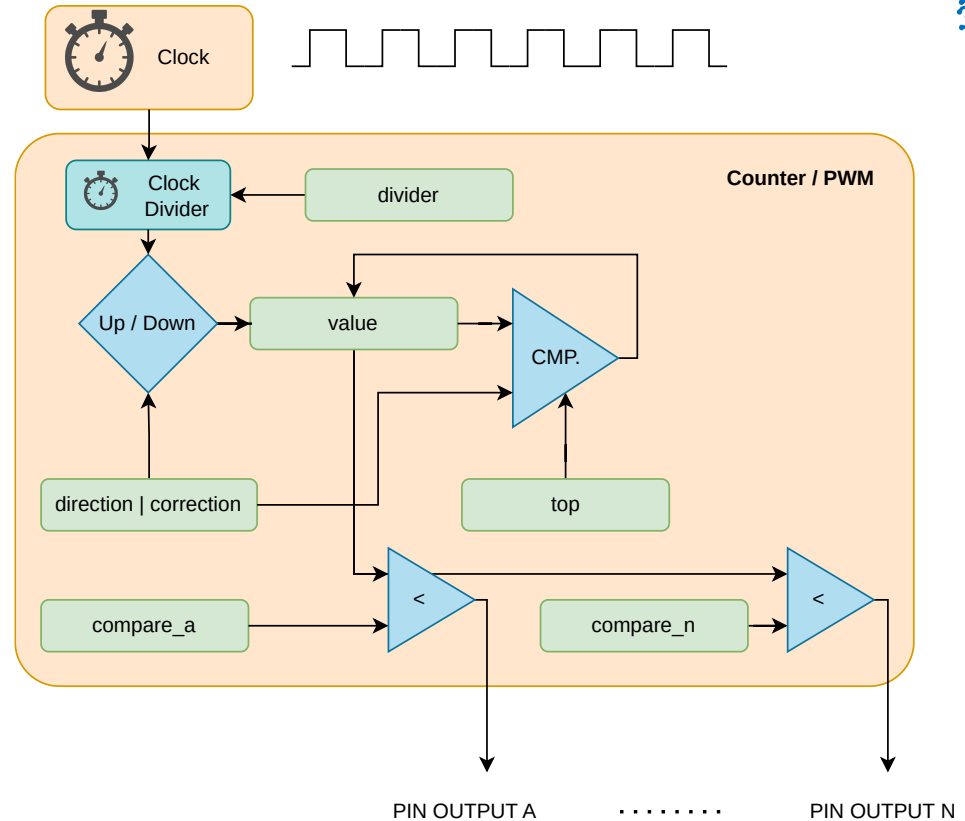




Usage examples

- dimming an LED

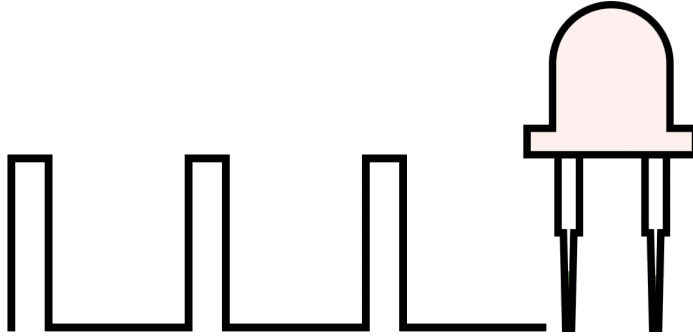

- controlling motors
 - controlling the angle of a stepper motor
 - controlling the RPM of a motor

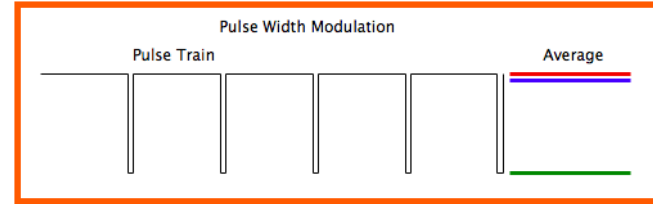




RP2350's PWM

- generates square signals
- counts the pulse width of input signals
- 8 or 12^[1] PWM slices, each A and B channels
- each PWM channel is linked to a fixed pin
- some channels are connected to two pins
- may be used as timers (`IRQ1_INTE`)


Registers

The PWM registers start at a base address of `0x400a8000` (defined as `PWM_BASE` in the SDK).


Offset	Name	Info
0x000	<code>CH0_CSR</code>	Control and status register
0x004	<code>CH0_DIV</code>	INT and FRAC form a fixed-point fractional number. Counting rate is system clock frequency divided by this number. Fractional division uses simple 1st-order sigma-delta.
0x008	<code>CH0_CTR</code>	Direct access to the PWM counter
0x00c	<code>CH0_CC</code>	Counter compare values
0x010	<code>CH0_TOP</code>	Counter wrap value

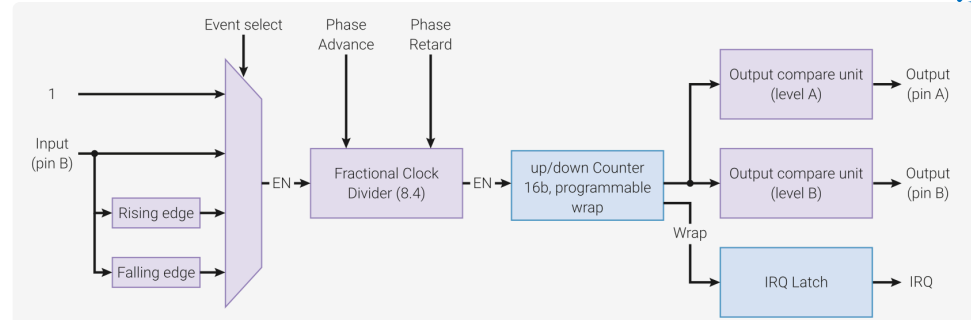

GPIO	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
PWM Channel	0A	0B	1A	1B	2A	2B	3A	3B	4A	4B	5A	5B	6A	6B	7A	7B
GPIO	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
PWM Channel	0A	0B	1A	1B	2A	2B	3A	3B	4A	4B	5A	5B	6A	6B	7A	7B
GPIO	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47
PWM Channel	8A	8B	9A	9B	10A	10B	11A	11B	8A	8B	9A	9B	10A	10B	11A	11B

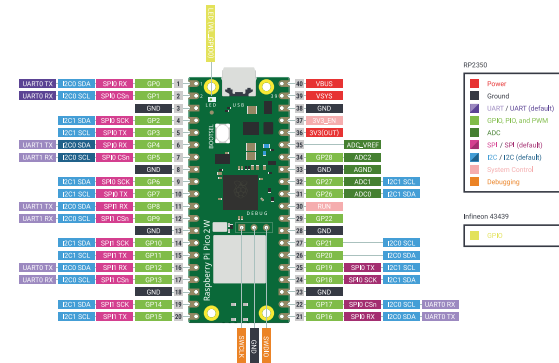


1. Depends on the RP2350 package ↩

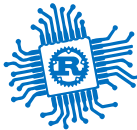


RP2350's PWM Modes

standard mode

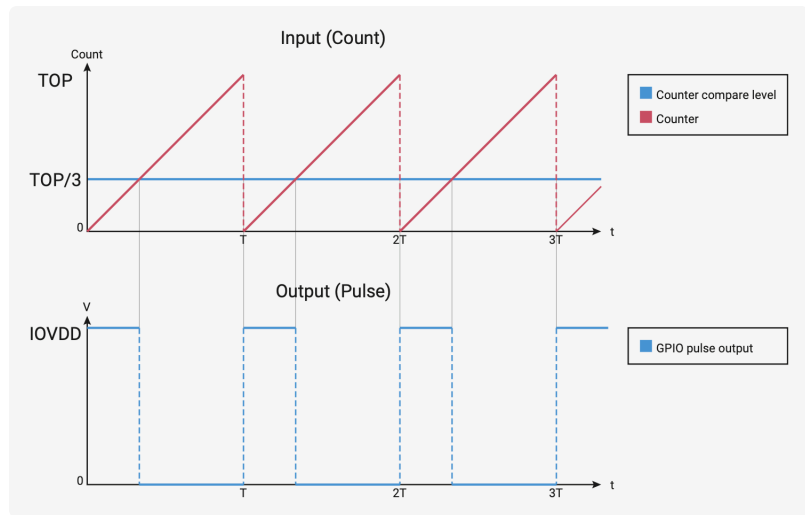

phase-correct mode

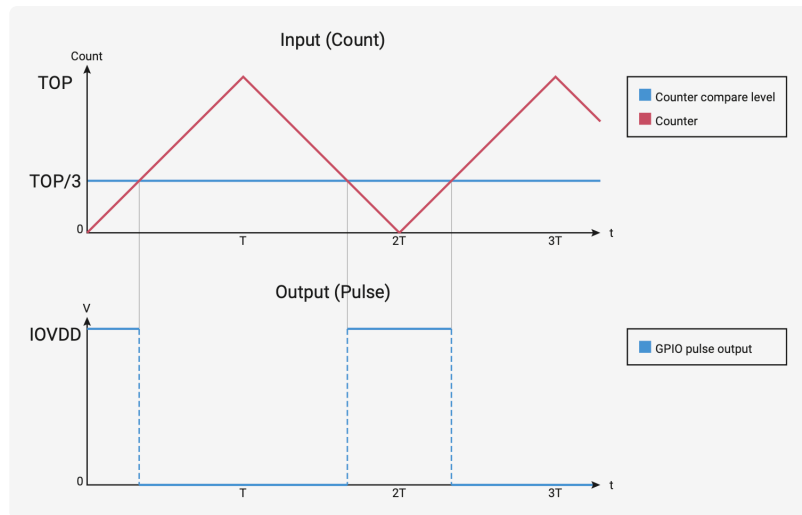

$$period = (TOP + 1) \times (PH_CORRECT + 1) \times \left(DIV_INT + \frac{DIV_FRAC}{16} \right) [s]_{SI}$$

$$f = \frac{f_{sys}}{period} [Hz]_{SI}$$



Example

using Embassy

```
1 use embassy_rp::pwm::{Config, Pwm};
2
3 let p = embassy_rp::init(Default::default());
4
5 let mut c: Config = Default::default();
6 c.top = 0x8000;
7 c.compare_b = 8;
8
9 let mut pwm = Pwm::new_output_b(
10     p.PWM_SLICE4,
11     p.PIN_25,
12     c.clone()
13 );
14
15 loop {
16     info!("LED duty cycle: {}/32768", c.compare_b);
17     Timer::after_secs(1).await;
18     c.compare_b += 10;
19     pwm.set_config(&c);
20 }
```

```
pub struct Config {
    /// Inverts the PWM output signal on channel A.
    pub invert_a: bool,
    /// Inverts the PWM output signal on channel B.
    pub invert_b: bool,
    /// Enables phase-correct mode for PWM operation.
    pub phase_correct: bool,
    /// Enables the PWM slice, allowing it to generate an out
    pub enable: bool,
    /// A fractional clock divider, represented as a fixed-po
    /// 8 integer bits and 4 fractional bits. It allows preci
    /// the PWM output frequency by gating the PWM counter in
    /// A higher value will result in a slower output frequen
    pub divider: fixed::FixedU16<fixed::types::extra::U4>,
    /// The output on channel A goes high when `compare_a` is
    /// counter. A compare of 0 will produce an always low ou
    pub compare_a: u16,
    /// The output on channel B goes high when `compare_b` is
    /// counter.
    pub compare_b: u16,
    /// The point at which the counter wraps, representing th
    /// period. The counter will either wrap to 0 or reverse
    /// setting of `phase_correct`.
    pub top: u16,
}
```



STM32U545RE's PWM

- generates square signals
- counts the pulse width of input signals
- each **timer** (*TIM*) has up to four channels
- each PWM channel is connected to one or more pins
- frequency is determined by the value of the TIMx_ARR register, and the duty cycle by the value of the TIMx_CCRy register.


Pin Alternate functions

Table 28. Alternate function AF0 to AF7⁽¹⁾ (continued)

Port	AF0	AF1	AF2	AF3	AF4	AF5	AF6	AF7
	CRS/LPTIM1/ SYS_AF	LPTIM1/ TIM1/2/8	LPTIM1/2/3/ TIM1/2/3/4/5	ADF1/I2C4/ OC10SPI/ SAI1/SPI2/ TIM18/ USB	DCMI/ I2C12/3/4/ LPTIM3	DCMI/I2C4/ MDF1/ OC10SPI/ SPI1/2/3	I2C3/MDF1/ OC10SPI/ SPI3	USART1/3
PB0	-	TIM1_CH2N	TIM3_CH3	TIM8_CH2N	LPTIM3_CH1	SPI1_NSS	-	USART3_CK
PB1	-	TIM1_CH3N	TIM3_CH4	TIM8_CH3N	LPTIM3_CH2	-	MDF1_SDIO	USART3_RTS_DE
PB2	-	LPTIM1_CH1	-	TIM8_CH4N	I2C3_SMBA	SPI1_RDY	MDF1_CKIO	-

Table 15. ARDUINO® D[7-0] connector (CN9) pinout

Pin	Pin name	Signal name	STM32 pin	MCU function
1	D7	IO	PA8	I/O
2	D6	PWM	PB10	TIM2_CH3
3	D5	PWM	PB4	TIM3_CH1
4	D4	IO	PB5	I/O
5	D3	PWM	PB3	TIM2_CH2
6	D2	IO	PC8	I/O
7	D1 ⁽¹⁾	USART_A_TX	PA2	LPUART1
8	D0 ⁽¹⁾	USART_A_RX	PA3	LPUART1

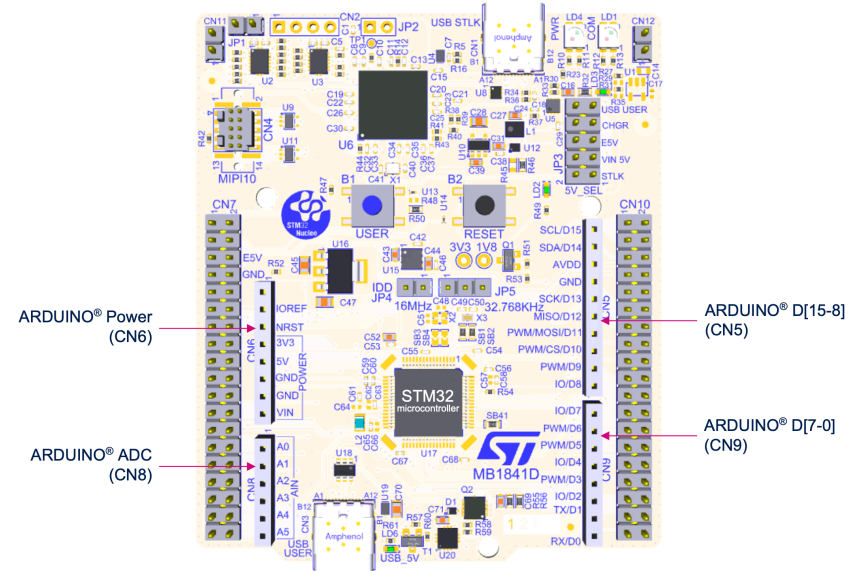



Example

using Embassy


```
1 use embassy_stm32::timer::simple_pwm::PwmPin;
2 use embassy_stm32::timer::simple_pwm::SimplePwm;
3 use embassy_stm32::timer::low_level::CountingMode;
4
5 let p = embassy_stm32::init(Default::default());
6
7 let pin = PwmPin::new(p.PB0, OutputType::PushPull);
8 let mut pwm = SimplePwm::new(
9     p.TIM3, // Timer instance
10    None, None, Some(pin), None, // Pin channel map
11    khz(10), // Frequency
12    CountingMode::default() // Counter config
13);
14 let mut ch3 = pwm.ch3();
15
16 loop {
17     ch3.set_duty_cycle_fully_off();
18     Timer::after_millis(300).await;
19     ch3.set_duty_cycle_fraction(1, 2);
20     Timer::after_millis(300).await;
21     ch3.set_duty_cycle(ch3.max_duty_cycle() - 1);
```

```
#[derive(Debug, Clone, Copy, PartialEq, Eq, Default)]
pub enum CountingMode {
    #[default]
    /// The timer counts up to the reload value and then
    /// resets back to 0.
    EdgeAlignedUp,
    /// The timer counts down to 0 and then resets back to
    /// the reload value.
    EdgeAlignedDown,
    /// The timer counts up to the reload value and then
    /// counts back to 0.
    /// The output compare interrupt flags of channels
    /// configured in output are set when the counter is
    /// counting down.
    CenterAlignedDownInterrupts,
    /// The timer counts up to the reload value and then
    /// counts back to 0.
    /// The output compare interrupt flags of channels
    /// configured in output are set when the counter is
    /// counting up.
    CenterAlignedUpInterrupts,
    /// The timer counts up to the reload value and then
    /// counts back to 0.
    /// The output compare interrupt flags of channels
    /// configured in output are set when the counter is
    /// counting both up or down.
```



ADC

Analog to Digital Converter

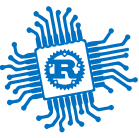

Bibliography

for this section

Raspberry Pi Ltd, *RP2040 Datasheet*


- Chapter 12 - *Peripherals*
 - Section 12.4 - *ADC and Temperature Sensor*
 - Subchapter 12.4.2
 - Subchapter 12.4.3
 - Subchapter 12.4.6



ADC

sampling an analog signal to an array of values

<i>sampling rate</i>	Hz	the frequency at which a new sample is read
<i>resolution</i>	bits	the number of bits used to store a sampled value

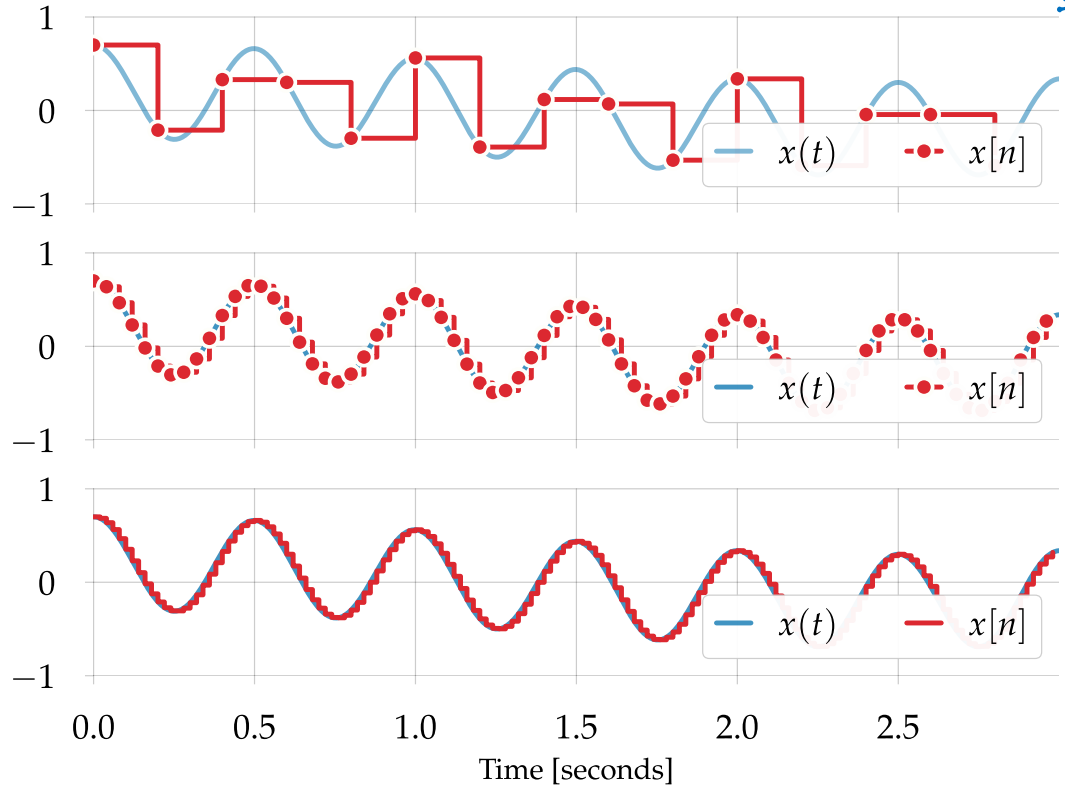


Lower sample rates yield the *aliasing effect*.



Nyquist–Shannon Sampling Theorem

$$sampling_f > 2 \times max_f$$

The **sampling frequency** has to be at least **two times higher** than the **maximum frequency** of the signal to avoid frequency aliasing^[1].

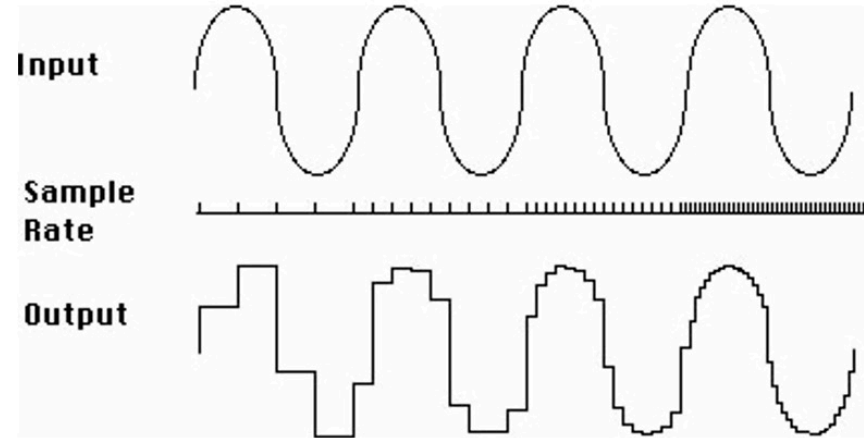


-
1. Aliasing is the overlapping of frequency components. This overlap results in distortion or artifacts when the signal is reconstructed from samples which causes the **reconstructed signal to differ from the original** continuous signal. ↩



Sampling

how the ADC works

- assumes bit_{n-1} of `compare_value` is 1
- compares the input signal with a generated analog signal from `compare_value`
 - if input is lower, bit_{n-1} is 0
 - if input is higher, bit_{n-1} is 1
- repeats for bit_{n-2} , $\text{bit}_{n-3} \dots \text{bit}_0$

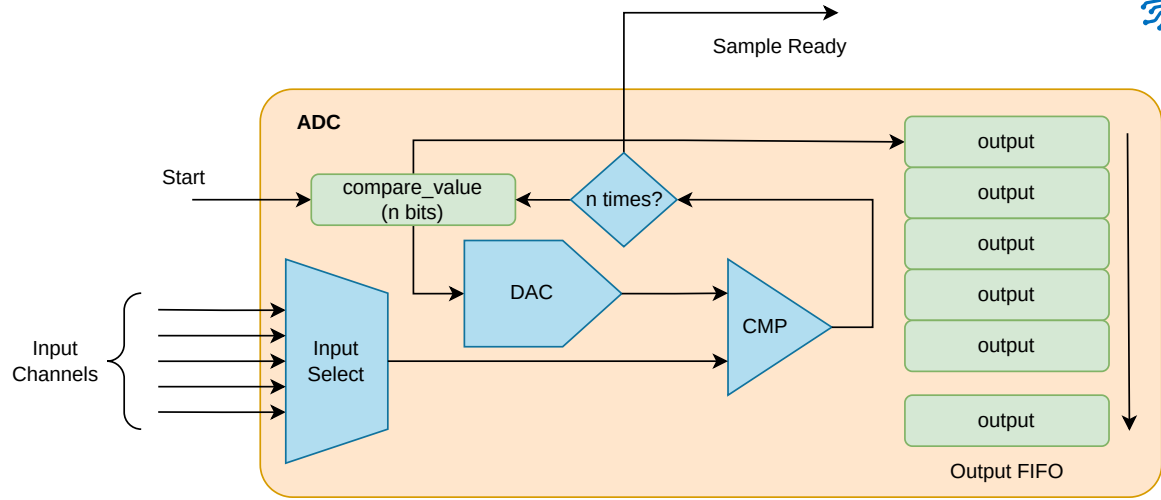

There are different types of ADCs depending on the architecture. The most common used is SAR (Successive Approximation Register) ADC, also integrated in RP2350.






RP2350's ADC

<i>channels</i>	4 or 8 ^[1]
<i>sampling rate</i>	500 kHz
<i>resolution</i>	12 bits
<i>V_{max}</i>	3.3 V

- requires a 48 MHz clock signal
- channel 4 or 8^[1:1] is connected to the internal temperature sensor

$$t = 27 - \frac{(V_{input_4} - 0.706)}{0.001721} [^{\circ}C]_{SI}$$

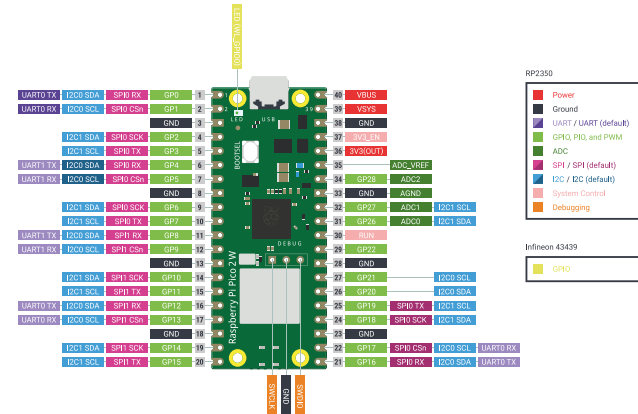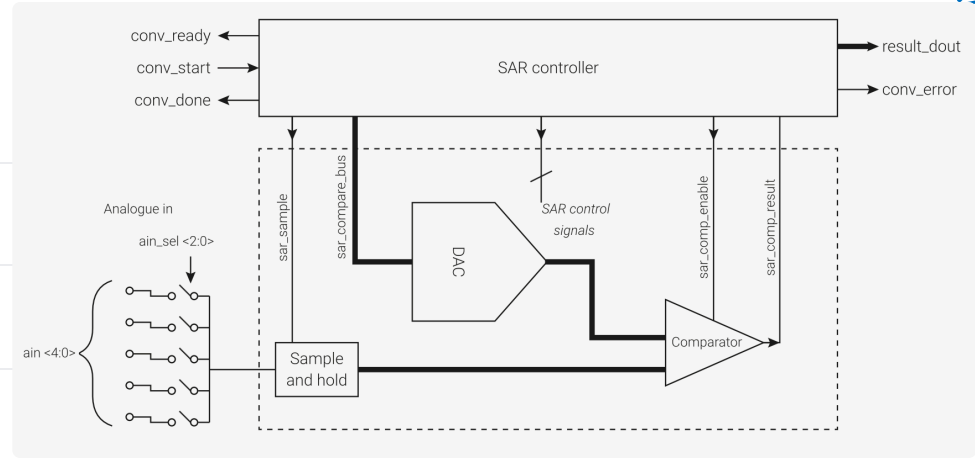

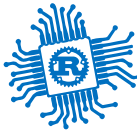

ADC

in Embassy

```
1  use embassy_rp::adc::{Adc, Channel, Config, InterruptHandler};
2
3  bind_interrupts!(struct Irqs {
4      ADC_IRQ_FIFO => InterruptHandler;
5  });
6
7  let p = embassy_rp::init(Default::default());
8  let mut adc = Adc::new(p.ADC, Irqs, Config::default());
9
10 let mut p26 = Channel::new_pin(p.PIN_26, Pull::None);
11
12 loop {
13     let level = adc.read(&mut p26).await.unwrap();
14     info!("Pin 26 ADC: {}", level);
15     let voltage = 3300 * level / 4095;
16     info!("Pin 26 voltage: {:.{}V", voltage / 1000, voltage % 1000);
17     Timer::after_secs(1).await;
18 }
```




STM32U545RE's ADC

ADC1 connectivity

ADC12 and ADC4

	ADC12	ADC4
<i>channels</i>	20	23
<i>sampling rate</i>	2.5 Msps	2.5 Msps
<i>resolution</i>	14 bits	12 bits
V_{max}	3.3 V	3.3 V

- internal channels connected to
 - temperature sensors (V_{SENSE})
 - V_{BAT} monitoring channel
 - internal reference voltage ($V_{REFERENCE}$)
 - V_{CORE} and DAC 1 and 2 output channels

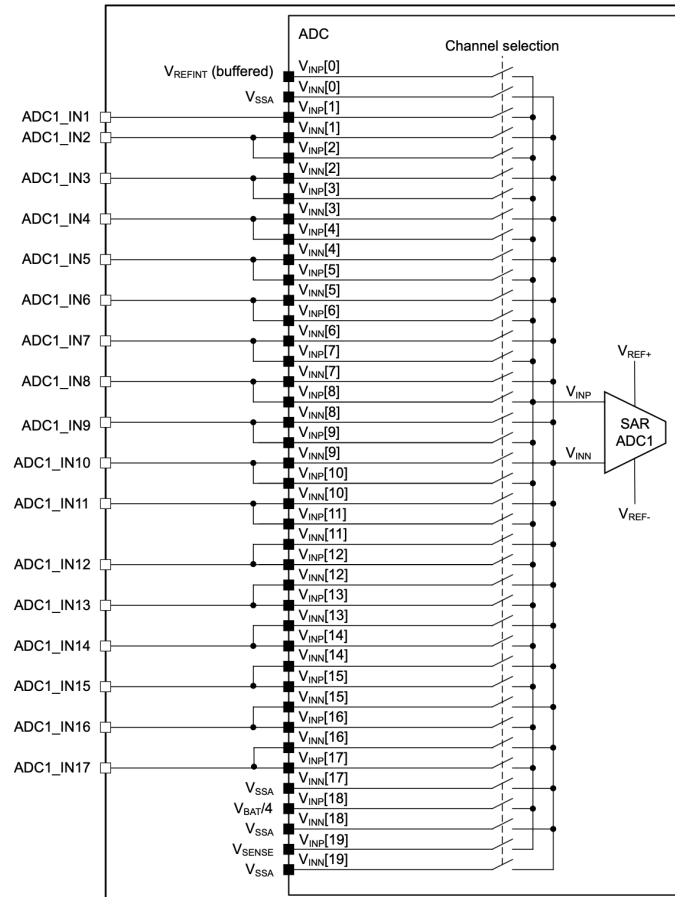



ADC - blocking

in Embassy

```
1  use embassy_stm32::adc;
2
3  let mut p = embassy_stm32::init(Default::default());
4
5  let mut adc1 = adc::Adc::new(p.ADC1);
6
7  adc1.set_resolution(adc::Resolution::BITS14);
8  adc1.set_averaging(adc::Averaging::Samples1024);
9  adc1.set_sample_time(adc::SampleTime::CYCLES160_5);
10
11 let measurement = adc1.blocking_read(&p.PA3);
12
13 let max = adc::resolution_to_max_count(adc::Resolution::BITS14);
14 let voltage: f32 = 3.3 * measurement as f32 / max as f32;
```



ADC - asynchronous

in Embassy

```
1  use embassy_stm32::adc;
2
3  let mut p = embassy_stm32::init(Default::default());
4
5  let mut adc1 = adc::Adc::new(p.ADC1);
6  let mut adc1_pin = p.PA3;
7
8  adc1.set_resolution(adc::Resolution::BITS14);
9  adc1.set_averaging(adc::Averaging::Samples1024);
10 adc1.set_sample_time(adc::SampleTime::CYCLES160_5);
11
12 let mut degraded_channel = adc1_pin.degrade_adc();
13
14 let mut measurements = [0u16; 1];
15 adc1.read(
16     p.GPDMA1_CH0.reborrow(),
17     [(&mut degraded_channel, adc::SampleTime::CYCLES160_5)].into_iter(),
18     &mut measurements,
19 ).await;
20
21 let max = adc::resolution_to_max_count(adc::Resolution::BITS14);
22 let voltage: f32 = 3.3 * measurements[0] as f32 / max as f32;
```



Conclusion

we talked about

- Counters
- SysTick
- Timers and Alarms
- PWM
- Analog and Digital
- ADC