

V.R.O.O.M. User Manual

Contents

1	Introduction	2
2	System Requirements	2
3	Setup and Installation Instructions	2
3.1	First Time Setup	2
3.1.1	Setup Using Executable (Only available for MacOS (M1/ARM))	2
3.1.2	Setup Manually (Works for all platforms)	3
3.2	Setup Each Time the Game is Played	3
4	User Interface Overview	4
4.1	Controller	4
4.2	Voice Commands	4
5	How To Play	5
6	Specific Features	6
6.1	GUI Buttons	6
7	Known Issues and Troubleshooting	6

1 Introduction

This is the user manual for the maze puzzle game: **V.R.O.O.M.**, which is a game in which players control the Maze Navigator through a real world maze with hidden walls. The game works by using software to create virtual walls that are unknown to the player. The player will use the game controller or microphone to control the Maze Navigator through the maze. As the player navigates the maze, they will encounter walls that block their path. It is hugely beneficial for the player to remember the locations of the walls. Once the end of the maze is reached, the player wins!

2 System Requirements

- Computer with Internet access.
- Python version 3.1+ installed.
- Conda installed
- One USB-C port for the provided wireless microphone.

3 Setup and Installation Instructions

3.1 First Time Setup

3.1.1 Setup Using Executable (Only available for MacOS (M1/ARM))

1. Download [Tailscale](#) and create an account:
 - (a) Add Controller: [Tailscale Controller Invite](#)
 - (b) Add Navigator: [Tailscale Navigator Invite](#)
 - (c) Once both devices are added, all three programs work together as long as they are all connected to any network (*eduroam* is set up by default on both the Maze Navigator and Controller).
2. Download and run executable:
 - **MacOS (M1/ARM):** [Maze Program Download](#)
 - go to the path of the downloaded `maze` file and run the following:

```
chmod +x ./maze
```

3.1.2 Setup Manually (Works for all platforms)

1. Download [Tailscale](#) and create an account:
 - (a) Add Controller: [Tailscale Controller Invite](#)
 - (b) Add Navigator: [Tailscale Navigator Invite](#)
 - (c) Once both devices are added, all three programs work together as long as they are all connected to any network (*eduroam* is set up by default on both the Maze Navigator and Controller).

2. GitHub clone repository:

```
git clone https://github.com/180D-FW-2024/Team5
```

3. Setup Virtual Environment:

- (a) `conda create -n maze_env python=3.10`
- (b) `conda activate maze_env`

4. Navigate to /maze-program folder inside of Team5

```
cd /*replace with path*/Team5/maze-program/
```

5. Install dependencies found in `requirements.txt`:

```
pip install -r requirements.txt
```

6. (If you didn't get any errors in step 5, you can skip this step).

The following system-wide dependencies might be required: `portaudio` and `ffmpeg`. There are many ways to download and install them. We recommend using [HomeBrew](#). Once HomeBrew is installed, you can use the following commands to install the dependencies:

```
brew install portaudio
```

```
brew install ffmpeg
```

After installing, repeat step 5.

3.2 Setup Each Time the Game is Played

1. Maze Navigator:

- (a) Plug the power bank into Raspberry Pi 4 using a USB-C to USB-A cable. Plug the USB-C into the RPi and the USB-A into the power bank.

- (b) Turn the Maze Navigator over and make sure that all 4 batteries are installed underneath.
- 2. **Controller:**
 - (a) Plug Raspberry Pi 4 into power bank.
- 3. **Voice Commands:** Plug the microphone dongle into a USB-C port on your computer and hold down the power button on the back of the microphone until the light on the front starts flashing.
- 4. **Give both the Maze Navigator and Controller at least 1 minute to start up and run their respective programs.**
- 5. **Run the Program:**
 - (a) If you setup the program using the executable found in section 3.1.1:
`run the executable maze.exe or use ./maze in the terminal`
 - (b) If you manually setup the program using section 3.1.2, run the following in the terminal:
`python /*replace with path*/Team5/maze-program/maze.py`

4 User Interface Overview

The user has two main ways to play the game:

4.1 Controller

- The three button controller is provided to the user.
- Each button has a movement function for the Maze Navigator:
 - **Left (L):** Rotates the Navigator 90 degrees to the left.
 - **Forward (F):** Moves the Navigator forward one square.
 - **Right (R):** Rotates the Navigator 90 degrees to the right.

4.2 Voice Commands

- The microphone must be connected to the user's computer **before** running the program.
- Voice commands are activated by clicking the **Enable Voice Commands** button in the GUI of the maze program.
- To move the Maze Navigator, speak a sentence into the microphone containing one of the following keywords:

- “Left”, “Forward”, or “Right”.
- The user can speak in sentences instead of just the keyword. For example, "Please move forward." is a completely acceptable input and will move the Maze Navigator forward.
- If the user speaks a sentence containing more than one keyword, priority is given to the keyword spoken first. For example, if the user says, "Move forward, right.", the Maze Navigator will move forward and not right.
- Voice commands can be disabled at any time by clicking **Disable Voice Commands** in the GUI of the maze program.

5 How To Play

- Start the main program, `maze.py` after completing the instructions found in step 3. Press the Start button on the GUI.
- Place the Maze Navigator in the top leftmost square of the maze board. The camera should be facing towards the right as shown by the direction of the triangle in the figure.
- Once the Maze Navigator is positioned correctly, press the **New Maze** Button on the GUI. **Avoid looking at the wall positions after starting the maze you are going to play, as the wall positions should remain hidden.**

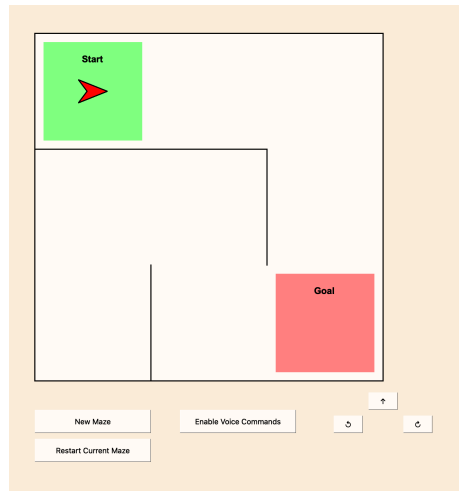


Figure 1: Maze Navigator Positioning

- Use either the controller or microphone to move the Maze Navigator from the top leftmost square labeled **Start** to the bottom rightmost square labeled **Goal**.
- If you move the Maze Navigator forward and it doesn't move, it means there is a wall blocking your path and you must find another way.

6 Specific Features

6.1 GUI Buttons

1. The **Start** button can be used to generate a new maze layout each time you start the program.
2. The **Arrow Keys** can be used to rotate and move the car.
3. The **Enable/Disable Voice Commands** button enables or disables voice commands.
4. the **New Maze** button can be used to restart the game with a new maze layout.
5. the **Restart Current Maze** can be used to restart the game while keeping the current maze configuration.

7 Known Issues and Troubleshooting

- Since we are using the camera to stop forward movement based on the position of the black tape. Reflections and different lighting conditions can result in overshoot or undershoot. Please play in a brightly lit around with consistent lighting.
- If either/both the Maze Navigator and Controller fail to properly connect, the terminal where you ran the main program will output:

```
Maze Navigator/Controller connection timed out.
```

To resolve this issue:

1. Make sure that Tailscale is correctly setup and that both the **maze-navigator** and **maze-controller** are visible in the Tailscale app.
2. Ensure that both the Maze Navigator and Controller are running **before** the main program is started.
3. If problems persist, please restart all three devices and follow the steps found in Section 3 again.

- If you are having trouble getting the voice commands to pick up input: make sure that there aren't any loud/irregular noises that happen when you start the program. The microphone is calibrated for ambient noise when the program is launched, and a loud noise during that process could cause the program to filter out your voice.