



# **ESP8266 RTOS SDK Programming Guide**

**Version 1.0.2**

Espressif Systems IOT Team

Copyright (c) 2015



### Disclaimer and Copyright Notice

Information in this document, including URL references, is subject to change without notice.

THIS DOCUMENT IS PROVIDED AS IS WITH NO WARRANTIES WHATSOEVER, INCLUDING ANY WARRANTY OF MERCHANTABILITY, NON-INFRINGEMENT, FITNESS FOR ANY PARTICULAR PURPOSE, OR ANY WARRANTY OTHERWISE ARISING OUT OF ANY PROPOSAL, SPECIFICATION OR SAMPLE. All liability, including liability for infringement of any proprietary rights, relating to use of information in this document is disclaimed. No licenses express or implied, by estoppel or otherwise, to any intellectual property rights are granted herein.

The WiFi Alliance Member Logo is a trademark of the WiFi Alliance.

All trade names, trademarks and registered trademarks mentioned in this document are property of their respective owners, and are hereby acknowledged.

Copyright © 2015 Espressif Systems Inc. All rights reserved.



# Table of Contents

<b>1. Preamble .....</b>	<b>8</b>
<b>2. Overview .....</b>	<b>9</b>
<b>3. Software APIs .....</b>	<b>10</b>
3.1. Software Timer .....	10
1. os_timer_arm.....	10
2. os_timer_disarm .....	10
3. os_timer_setfn .....	11
4. os_timer_arm_us .....	11
3.2. System APIs .....	12
1. system_get_sdk_version.....	12
2. system_restore .....	12
3. system_restart .....	13
4. system_get_rst_info .....	13
5. system_get_chip_id .....	14
6. system_get_vdd33 .....	14
7. system_adc_read .....	14
8. system_deep_sleep .....	15
9. system_deep_sleep_set_option.....	16
10. system_phy_set_rfoption .....	16
11. system_phy_set_max_tpw.....	17
12. system_phy_set_tpw_via_vdd33.....	17
13. system_print_meminfo.....	18
14. system_get_free_heap_size .....	18
15. system_get_time.....	18
16. system_get_rtc_time.....	19
17. system_rtc_clock_cali_proc .....	19
18. system_rtc_mem_write.....	20
19. system_rtc_mem_read .....	21
20. system_uart_swap.....	21
21. system_uart_de_swap .....	22



22.	system_get_boot_version .....	22
23.	system_get_userbin_addr .....	22
24.	system_get_boot_mode .....	23
25.	system_restart_enhance .....	23
26.	system_get_flash_size_map.....	24
27.	os_delay_us.....	24
28.	os_install_putc1 .....	24
29.	os_putc .....	25
<b>3.3.</b>	<b>SPI Flash Related APIs.....</b>	<b>25</b>
1.	spi_flash_get_id .....	25
2.	spi_flash_erase_sector.....	26
3.	spi_flash_write .....	26
4.	spi_flash_read.....	26
5.	system_param_save_with_protect .....	27
6.	system_param_load .....	28
<b>3.4.</b>	<b>Wi-Fi Related APIs.....</b>	<b>29</b>
1.	wifi_get_opmode .....	29
2.	wifi_get_opmode_default .....	29
3.	wifi_set_opmode.....	30
4.	wifi_set_opmode_current.....	30
5.	wifi_station_get_config.....	31
6.	wifi_station_get_config_default.....	31
7.	wifi_station_set_config .....	31
8.	wifi_station_set_config_current .....	33
9.	wifi_station_connect .....	33
10.	wifi_station_disconnect .....	34
11.	wifi_station_get_connect_status .....	34
12.	wifi_station_scan .....	34
13.	scan_done_cb_t .....	35
14.	wifi_station_ap_number_set.....	36
15.	wifi_station_get_ap_info .....	36
16.	wifi_station_ap_change.....	37
17.	wifi_station_get_current_ap_id.....	37



18. wifi_station_get_auto_connect .....	37
19. wifi_station_set_auto_connect .....	38
20. wifi_station_dhcpc_start .....	38
21. wifi_station_dhcpc_stop .....	39
22. wifi_station_dhcpc_status .....	39
23. wifi_station_set_reconnect_policy .....	39
24. wifi_station_get_reconnect_policy .....	40
25. wifi_softap_get_config .....	40
26. wifi_softap_get_config_default .....	41
27. wifi_softap_set_config .....	41
28. wifi_softap_set_config_current .....	42
29. wifi_softap_get_station_num .....	42
30. wifi_softap_get_station_info .....	42
31. wifi_softap_free_station_info .....	43
32. wifi_softap_dhcps_start .....	44
33. wifi_softap_dhcps_stop .....	44
34. wifi_softap_set_dhcps_lease .....	44
35. wifi_softap_dhcps_status .....	46
36. wifi_softap_set_dhcps_offer_option .....	46
37. wifi_set_phy_mode .....	47
38. wifi_get_phy_mode .....	47
39. wifi_get_ip_info .....	48
40. wifi_set_ip_info .....	48
41. wifi_set_macaddr .....	49
42. wifi_get_macaddr .....	50
43. wifi_status_led_install .....	50
44. wifi_status_led_uninstall .....	51
45. wifi_set_event_handler_cb .....	51
<b>3.5. Upgrade (FOTA) APIs .....</b>	<b>53</b>
1. system_upgrade_userbin_check .....	53
2. system_upgrade_flag_set .....	53
3. system_upgrade_flag_check .....	53
4. system_upgrade_reboot .....	54



3.6.	Sniffer Related APIs .....	55
1.	wifi_promiscuous_enable .....	55
2.	wifi_promiscuous_set_mac .....	55
3.	wifi_set_promiscuous_rx_cb .....	56
4.	wifi_get_channel .....	56
5.	wifi_set_channel .....	56
3.7.	smart config APIs .....	57
1.	smartconfig_start .....	57
2.	smartconfig_stop .....	59
3.8.	cJSON APIs .....	60
1.	cJSON_Parse .....	60
2.	cJSON_Print .....	60
3.	cJSON_Delete .....	60
4.	cJSON_GetArraySize .....	60
5.	cJSON_GetArrayItem .....	61
6.	cJSON_GetObjectItem .....	61
7.	cJSON_CreateXXX .....	61
8.	cJSON_CreateXXXArray .....	62
9.	cJSON_InitHooks .....	62
10.	cJSON_AddItemToArray .....	63
11.	cJSON_AddItemReferenceToArray .....	63
12.	cJSON_AddItemToObject .....	63
13.	cJSON_AddItemReferenceToObject .....	64
14.	cJSON_DetachItemFromArray .....	64
15.	cJSON_DeleteItemFromArray .....	65
16.	cJSON_DetachItemFromObject .....	65
17.	cJSON_DeleteItemFromObject .....	65
18.	cJSON_InsertItemInArray .....	66
19.	cJSON_ReplaceItemInArray .....	66
20.	cJSON_ReplaceItemInObject .....	66
21.	cJSON_Duplicate .....	67
22.	cJSON_ParseWithOpts .....	67
4.	Definitions & Structures .....	68



4.1.	Timer .....	68
4.2.	WiFi Related Structures .....	68
1.	Station Related .....	68
2.	soft-AP related.....	68
3.	scan related .....	69
4.	WiFi event related structure.....	69
<b>5.</b>	<b>Appendix.....</b>	<b>73</b>
5.1.	RTC APIs Example .....	73
5.2.	Sniffer Structure Introduction .....	75
5.3.	ESP8266 soft-AP and station channel configuration .....	78



# 1.

# Preamble

---

The ESP8266EX offers a complete and self-contained Wi-Fi network solution. It can be used to host the applications or to offload Wi-Fi network functions from other application processors. When the ESP8266 hosts an application as the only processor in the device, it boots up directly from an external flash. It has an in-built, high-speed cache to improve the performance of the system and reduce the memory occupation. Alternately, when the ESP8266 is used as a Wi-Fi adapter, wireless internet access can be added to any micro controller-based device through the UART interface or the CPU AHB bridge interface, and thus provide the users with a simple Wi-Fi solution.

ESP8266EX enjoys high level of on-chip integration. It integrates the antenna switch, RF balun, power amplifier, low noise receive amplifier, filters, and power management modules. It requires minimal external circuitry, and the entire solution, including the front-end module, is designed to occupy minimal PCB space

The ESP8266EX also integrates an enhanced version of the 32-bit processor of Tensilica's L106 Diamond series, with on-chip SRAM. The ESP8266EX is often integrated with external sensors and other application specific devices through its GPIOs. The SDK files provide examples of the softwares of the related applications.

The ESP8266EX system has many cutting-edge advantages, including energy-efficient VoIP that can switch rapidly between sleep and wake modes, adaptive radio bias for low-power operations, front-end signal processing capacity, problem-shooting capacity, and the radio system co-existence feature to remove cellular, bluetooth, DDR, LVDS and LCD interference.

The SDK based on the ESP8266 IoT platform offers users a simple, high-speed and efficient software platform for IoT device development. This programming guide provides an overview of the SDK as well as details of the APIs. The target readers are embedded software developers who use the ESP8266 IoT platform for software development.



## 2.

# Overview

The SDK provides its users with a set of interfaces for data reception and transmission. Users do not need to worry about the set-up of the network, including Wi-Fi and TCP/IP. Instead, they can focus on the IoT application development. They can do so by receiving and transmitting data through the interfaces.

All network functions on the ESP8266 IoT platform are realized in the library, and are not transparent to the users. Instead, users can initialize the interface in `user_main.c`.

`void user_init(void)` is the entrance function of the application. It provides users with an initialization interface, and users can add more functions to the interface, including hardware initialization, network parameters setting, and timer initialization.

Notices:

- It is recommended that users set the timer to the periodic mode for periodic checks. In freeRTOS timer or `os_timer`, do not delay in the manner of `while(1)`.
- Since `esp_iot_rtos_sdk_v1.0.4`, functions are stored in CACHE by default, need not be added `ICACHE_FLASH_ATTR` any more. The interrupt functions can also be stored in CACHE. If users want to store some frequently called functions in RAM, please add `IRAM_ATTR` before functions' name.
- Network programming use socket, please do not bind to the same port.
- Priority of the RTOS SDK is 15. `xTaskCreate` is an interface of freeRTOS. For details of the freeRTOS and APIs of the system, please visit <http://www.freertos.org>
  - ▶ When using `xTaskCreate` to create a task, the task stack range is [176, 512].
  - ▶ If an array whose length is over 60 bytes is used in a task, it is suggested that users use `malloc` and `free` rather than local variable to allocate array. Large local variables could lead to task stack overflow.
  - ▶ The RTOS SDK takes some priorities. Priority of the pp task is 13; priority of precise gets timer thread is 12; priority of the lwip task is 10; priority of the ferrets timer is 2; priority of the idle is 0.
  - ▶ Users can use tasks with priorities from 1 to 9. Do not revise `FreeRTOSConfig.h`. task priorities are decided by source code inside the RTOS SDK, and therefore, users can't change `FreeRTOSConfig.h`.



## 3.

# Software APIs

### 3.1. Software Timer

Timer APIs can be found at [/esp-iot-rtos-sdk/include/espressif/Esp\\_timer.h](/esp-iot-rtos-sdk/include/espressif/Esp_timer.h).

Notice: Timers of the following interfaces are software timers. Functions of the timers are executed during the tasks. Since a task can be stopped, or be delayed because there are other tasks with higher priorities, the following `os_timer` interfaces cannot guarantee the precise execution of the timers.

- For the same timer, `os_timer_arm` (or `os_timer_arm_us`) cannot be invoked repeatedly. `os_timer_disarm` should be invoked first.
- `os_timer_setfn` can only be invoked when the timer is not enabled, i.e., after `os_timer_disarm` or before `os_timer_arm` (or `os_timer_arm_us`).

#### 1. `os_timer_arm`

**Function:**

Enable the millisecond timer.

**Functional definition:**

```
void os_timer_arm (  
    os_timer_t *ptimer,  
    uint32_t milliseconds,  
    bool repeat_flag  
)
```

**Parameters:**

`os_timer_t *ptimer` : timer structure  
`uint32_t milliseconds` : Timing, unit: millisecond, the maximum value allowed is 0x41893  
`bool repeat_flag` : Whether the timer will be invoked repeatedly or not

**Return:**

null

#### 2. `os_timer_disarm`

**Function:**

Disarm the timer



**Functional definition:**

```
void os_timer_disarm (os_timer_t *ptimer)
```

**Parameters:**

`os_timer_t *ptimer` : Timer structure

**Return:**

null

### 3. `os_timer_setfn`

**Function:**

Set the timer callback function.

**Notices:**

- The callback function must be set in order to enable the timer.
- Operating system scheduling is disabled in timer callback.

**Functional definition:**

```
void os_timer_setfn(  
    os_timer_t *ptimer,  
    os_timer_func_t *pfunction,  
    void *parg  
)
```

**Parameters:**

`os_timer_t *ptimer` : Timer structure

`os_timer_func_t *pfunction` : timer callback function

`void *parg` : callback function parameter

**Return:**

null

### 4. `os_timer_arm_us`

**Function:**

Enable the microsecond timer.

**Functional definition:**

```
void os_timer_arm_us (  
    os_timer_t *ptimer,  
    uint32_t microseconds,  
    bool repeat_flag  
)
```



**Parameters:**

`os_timer_t *ptimer` : Timer structure  
`uint32_t microseconds` : Timing, Unit: microsecond, the minimum value allowed is 0x64, the maximum value allowed is 0xFFFFFFFF  
`bool repeat_flag` : Whether the timer will be invoked repeatedly or not

**Return:**

null

## 3.2. System APIs

### 1. system\_get\_sdk\_version

**Function:**

Get information of the SDK version.

**Functional definition:**

```
const char* system_get_sdk_version(void)
```

**Parameter:**

none

**Return:**

Information of the SDK version

**Example:**

```
printf("SDK version: %s \n", system_get_sdk_version());
```

### 2. system\_restore

**Function:**

Reset to default settings of the following APIs :

`wifi_station_set_auto_connect`, `wifi_set_phy_mode`, `wifi_softap_set_config` related, `wifi_station_set_config` related, and `wifi_set_opmode`.

**Functional definition:**

```
void system_restore(void)
```

**Parameters:**

null

**Return:**

null



### 3. system\_restart

**Function:**

Restart the system.

**Functional definition:**

```
void system_restart(void)
```

**Parameters:**

null

**Return:**

null

### 4. system\_get\_rst\_info

**Function:**

Get the reason of restart.

**Structure:**

```
enum rst_reason {
    REANSON_DEFAULT_RST      = 0,    // normal startup by power on
    REANSON_WDT_RST          = 1,    // hardware watch dog reset
    // exception reset, GPIO status won't change
    REANSON_EXCEPTION_RST    = 2,
    // software watch dog reset, GPIO status won't change
    REANSON_SOFT_WDT_RST     = 3,
    // software restart ,system_restart , GPIO status won't change
    REANSON_SOFT_RESTART     = 4,
    REANSON_DEEP_SLEEP_AWAKE = 5,    // wake up from deep-sleep
};

struct rst_info {
    uint32 reason;    // enum rst_reason
    uint32 exccause;
    uint32 epc1;
    uint32 epc2;
    uint32 epc3;
    uint32 excvaddr;
    uint32 depc;
};
```



**Prototype:**

```
struct rst_info* system_get_rst_info(void)
```

**Parameter:**

none

**Return:**

Reason of restart.

## 5. system\_get\_chip\_id

**Function:**

Get the chip ID

**Functional definition:**

```
uint32 system_get_chip_id (void)
```

**Parameters:**

null

**Return:**

Chip ID

## 6. system\_get\_vdd33

**Function:**

Measure the power voltage of VDD3P3 pin 3 and 4, unit: 1/1024 V

**Notices:**

- `system_get_vdd33` can only be called when TOUT pin is suspended
- The 107th byte in `esp_init_data_default.bin` (0~127byte) is named as "vdd33\_const", when TOUT pin is suspended vdd33\_const must be set as 0xFF, that is 255

**Functional definition:**

```
uint16 system_get_vdd33(void)
```

**Parameter:**

none

**Return:**

power voltage of VDD33, unit: 1/1024 V

## 7. system\_adc\_read

**Function:**

Measure the input voltage of TOUT pin 6, unit: 1/1024 V

**Notices:**

- `system_adc_read` can only be called when the TOUT pin is connected to the external circuitry, and the TOUT pin input voltage should be limited to 0 ~1.0V.
- When the TOUT pin is connected to the external circuitry, the 107th byte (`vdd33_const`) of `esp_init_data_default.bin`(0~127byte) should be set as the real power voltage of VDD3P3 pin 3 and 4.
- The unit of `vdd33_const` is 0.1V, the effective value range is [18, 36]; if `vdd33_const` is in [0, 18) or (36, 255), 3.3V is used to optimize RF by default.

**Functional definition:**

```
uint16 system_adc_read(void)
```

**Parameter:**

none

**Return:**

input voltage of TOUT pin 6, unit: 1/1024 V

## 8. `system_deep_sleep`

**Function:**

Set the chip to deep-sleep mode. The device will automatically wake up after the deep-sleep time set by the users. Upon waking up, the device boots up from `user_init`.

**Notices:**

- XPD\_DCDC should be connected to EXT\_RSTB through 0R in order to support deep-sleep wakeup.
- `system_deep_sleep(0)`: there is no wake up timer; in order to wake up, connect a GPIO to pin `RST`, the chip will wake up by a falling-edge on pin `RST`

**Functional definition:**

```
void system_deep_sleep(uint32 time_in_us)
```

**Parameters:**

`uint32 time_in_us` : deep-sleep time, unit: microsecond

**Return:**

null



## 9. system\_deep\_sleep\_set\_option

### Function:

Call this API before `system_deep_sleep` to set the activity after the next deep-sleep wakeup. If this API is not called, default to be `system_deep_sleep_set_option(1)`.

### Functional definition:

```
bool system_deep_sleep_set_option(uint8 option)
```

### Parameter:

`uint8 option` :

- `0` : Radio calibration after the deep-sleep wakeup is decided by byte 108 of `esp_init_data_default.bin` (0~127byte).
- `1` : Radio calibration will be done after the deep-sleep wakeup. This will lead to stronger current.
- `2` : Radio calibration will not be done after the deep-sleep wakeup. This will lead to weaker current.
- `4` : Disable radio calibration after the deep-sleep wakeup (the same as modem-sleep). This will lead to the weakest current, but the device can't receive or transmit data after waking up.

### Return:

`true` : succeed  
`false` : fail

## 10. system\_phy\_set\_rfoption

### Function:

Enable RF or not when wakeup from deep-sleep.

### Notices:

- This API can only be called in `user_rf_pre_init`.
- Function of this API is similar to `system_deep_sleep_set_option`, if they are both called, it will disregard `system_deep_sleep_set_option` which is called before deep-sleep, and refer to `system_phy_set_rfoption` which is called when deep-sleep wake up.
- Before calling this API, `system_deep_sleep_set_option` should be called once at least.

### Functional definition:

```
void system_phy_set_rfoption(uint8 option)
```

### Parameter:

`uint8 option` :





`system_phy_set_rfoption(0)` : Radio calibration after deep-sleep wake up depends on `esp_init_data_default.bin` (0~127byte) byte 108.

`system_phy_set_rfoption(1)` : Radio calibration is done after deep-sleep wake up; this increases the current consumption.

`system_phy_set_rfoption(2)` : No radio calibration after deep-sleep wake up; this reduces the current consumption.

`system_phy_set_rfoption(4)` : Disable RF after deep-sleep wake up, just like modem sleep; this has the least current consumption; the device is not able to transmit or receive data after wake up.

**Return:**

null

## 11. `system_phy_set_max_tpw`

**Function:**

Set the maximum value of RF TX Power, unit : 0.25dBm

**Functional definition:**

```
void system_phy_set_max_tpw(uint8 max_tpw)
```

**Parameter:**

`uint8 max_tpw` : the maximum value of RF Tx Power, unit : 0.25dBm, range [0, 82]

it can be set refer to the 34th byte (`target_power_qdb_0`) of

`esp_init_data_default.bin`(0~127byte)

**Return:**

null

## 12. `system_phy_set_tpw_via_vdd33`

**Function:**

Adjust the RF TX Power according to VDD33, unit : 1/1024 V

**Notices:**

When TOUT pin is suspended, VDD33 can be measured by `system_get_vdd33`;

When TOUT pin is connected to the external circuitry, `system_get_vdd33` can not be used to measure VDD33.

**Functional definition:**

```
void system_phy_set_tpw_via_vdd33(uint16 vdd33)
```



**Parameter:**

`uint16 vdd33` : VDD33, unit : 1/1024V, range [1900, 3300]

**Return:**

null

### 13. system\_print\_meminfo

**Function:**

Print the system memory distribution, including data/rodata/bss/heap.

**Functional definition:**

```
void system_print_meminfo (void)
```

**Parameters:**

null

**Return:**

null

### 14. system\_get\_free\_heap\_size

**Function:**

Get the size of available heap.

**Functional definition:**

```
uint32 system_get_free_heap_size(void)
```

**Parameters:**

null

**Return:**

`uint32` : available heap size

### 15. system\_get\_time

**Function:**

Get system time, unit: microsecond.

**Functional definition:**

```
uint32 system_get_time(void)
```

**Parameter:**

null

**Return:**

System time, unit: microsecond.



## 16. `system_get_rtc_time`

### Function:

Get RTC time, unit: RTC clock cycle.

### Example:

If `system_get_rtc_time` returns 10 (it means 10 RTC cycles), and `system_rtc_clock_cali_proc` returns 5.75 (it means 5.75 microseconds per RTC clock cycle), then the actual time is  $10 \times 5.75 = 57.5$  microseconds.

### Notices:

System time will return to zero because of `system_restart`, but the RTC time still goes on. If the chip is reset by pin `EXT_RST` or pin `CHIP_EN` (including the deep-sleep wakeup), situations are shown as below:

- reset by pin `EXT_RST` : RTC memory won't change, RTC timer returns to zero
- watchdog reset : RTC memory won't change, RTC timer won't change
- `system_restart` : RTC memory won't change, RTC timer won't change
- power on : RTC memory is random value, RTC timer starts from zero
- reset by pin `CHIP_EN` : RTC memory is random value, RTC timer starts from zero

### Functional definition:

```
uint32 system_get_rtc_time(void)
```

### Parameter:

null

### Return:

RTC time

## 17. `system_rtc_clock_cali_proc`

### Function:

Get the RTC clock cycle.

### Notices:

The RTC clock cycle has decimal part.

The RTC clock cycle will change according to the temperature, so RTC timer is not very precise.

### Functional definition:

```
uint32 system_rtc_clock_cali_proc(void)
```

**Parameter:**

null

**Return:**

RTC clock period (unit: microsecond), bit11~ bit0 are decimal. ((RTC\_CAL \* 100)>> 12 )


**Notice:**

see RTC demo in Appendix.

## 18. system\_rtc\_mem\_write

**Function:**

During deep-sleep, only RTC is working. So users can store their data in RTC memory if it is needed. The user data segment below (512 bytes) is used to store the user data.

**Notices:**

Read and write unit for data stored in the RTC memory is 4 bytes. `des_addr` is the block number (4 bytes per block). So when storing data at the beginning of the user data segment, `des_addr` will be  $256/4 = 64$ , `save_size` will be data length.

**Functional definition:**

```
bool system_rtc_mem_write (  
    uint32 des_addr,  
    void * src_addr,  
    uint32 save_size  
)
```

**Parameters:**

`uint32 des_addr` : destination address (block number) in RTC memory,  
`des_addr` >=64  
`void * src_addr` : data pointer.  
`uint32 save_size` : data length (unit: byte)

**Return:**


true: succeed  
false: fail



## 19. system\_rtc\_mem\_read

### Function:

Read user data from the RTC memory. The user data segment (512 bytes, as shown below) is used to store user data.



### Notice:

Read and write unit for data stored in the RTC memory is 4 bytes. `src_addr` is the block number (4 bytes per block). So when storing data at the beginning of the user data segment, `src_addr` will be  $256/4 = 64$ , `save_size` will be data length.

### Functional definition:

```
bool system_rtc_mem_read (  
    uint32 src_addr,  
    void * des_addr,  
    uint32 save_size  
)
```

### Parameters:

`uint32 src_addr` : source address of rtc memory, `src_addr`  $\geq 64$   
`void * des_addr` : data pointer  
`uint32 save_size` : data length, unit: byte

### Return:

true: succeed  
false: fail

## 20. system\_uart\_swap

### Function:

UART0 swap. Use MTCK as UART0 RX, MTD0 as UART0 TX, so ROM log will not output from this new UART0. We also need to use MTD0 (U0CTS) and MTCK (U0RTS) as UART0 in hardware.

### Functional definition:

```
void system_uart_swap (void)
```

### Parameter:

null

### Return:

null



## 21. system\_uart\_de\_swap

**Function:**

Disable UART0 swap. Use the original UART0, not MTCK and MTD0.

**Functional definition:**

```
void system_uart_de_swap (void)
```

**Parameter:**

null

**Return:**

null

## 22. system\_get\_boot\_version

**Function:**

Get information of the boot version.

**Functional definition:**

```
uint8 system_get_boot_version (void)
```

**Parameter:**

null

**Return:**

Information of the boot version.

**Notice:**

If boot version  $\geq 3$ , users can enable the enhanced boot mode (refer to [system\\_restart\\_enhance](#))

## 23. system\_get\_userbin\_addr

**Function:**

Get the address of the current running user bin (user1.bin or user2.bin).

**Functional definition:**

```
uint32 system_get_userbin_addr (void)
```

**Parameter:**

null

**Return:**

The address of the current running user bin.



## 24. system\_get\_boot\_mode

### Function:

Get the boot mode.

### Functional definition:

```
uint8 system_get_boot_mode (void)
```

### Parameter:

null

### Return:

```
#define SYS_BOOT_ENHANCE_MODE 0
#define SYS_BOOT_NORMAL_MODE 1
```

### Notices:

Enhanced boot mode: It can load and run FW at any address;

Regular boot mode: It can only load and run at some addresses of user1.bin (or user2.bin).

## 25. system\_restart\_enhance

### Function:

Restarts the system, and enters the enhanced boot mode.

### Functional definition:

```
bool system_restart_enhance(
    uint8 bin_type,
    uint32 bin_addr
)
```

### Parameters:

uint8 bin\_type : type of bin

```
#define SYS_BOOT_NORMAL_BIN 0 // user1.bin or user2.bin
```

```
#define SYS_BOOT_TEST_BIN 1 // can only be Espressif test bin
```

uint32 bin\_addr : starting address of the bin file

### Return:

true: succeed

false: Fail

### Notice:

[SYS\\_BOOT\\_TEST\\_BIN](#) is used for factory test during production; users can apply for the test bin from Espressif Systems.



## 26. system\_get\_flash\_size\_map

**Function:**

Get the current flash size and flash map.

Flash map depends on the selection when compiling, more details in document “2A-ESP8266\_\_IOT\_SDK\_User\_Manual”

**Structure:**

```
enum flash_size_map {  
    FLASH_SIZE_4M_MAP_256_256 = 0,  
    FLASH_SIZE_2M,  
    FLASH_SIZE_8M_MAP_512_512,  
    FLASH_SIZE_16M_MAP_512_512,  
    FLASH_SIZE_32M_MAP_512_512,  
    FLASH_SIZE_16M_MAP_1024_1024,  
    FLASH_SIZE_32M_MAP_1024_1024  
};
```

**Functional definition:**

```
enum flash_size_map system_get_flash_size_map(void)
```

**Parameter:**

null

**Return:**

flash map

## 27. os\_delay\_us

**Function:**

delay function, maximum value: 65535 us

**Functional definition:**

```
void os_delay_us(uint16 us)
```

**Parameter:**

uint16 us – delay time

**Return:**

null

## 28. os\_install\_putc1

**Function:**

Register the print output function.





**Functional definition:**

```
void os_install_putc1(void(*p)(char c))
```

**Parameter:**

`void(*p)(char c)` – pointer of print function

**Return:**

null

**Example:**

`os_install_putc1((void *)uart1_write_char)` in `uart_init` will set `printf` to print from UART 1, otherwise, `printf` will start from UART 0 by default.

## 29. os\_putc

**Function:**

Print a character. Start from from UART0 by default.

**Functional definition:**

```
void os_putc(char c)
```

**Parameter:**

`char c` – character to be printed.

**Return:**

null

## 3.3. SPI Flash Related APIs

More details about flash read/write operation in documentation “99A-SDK-Espressif IOT Flash RW Operation” <http://bbs.espressif.com/viewtopic.php?f=21&t=413>

### 1. spi\_flash\_get\_id

**Function:**

Get ID info of spi flash

**Functional definition:**

```
uint32 spi_flash_get_id (void)
```

**Parameter:**

null

**Return:**

SPI flash ID



## 2. spi\_flash\_erase\_sector

**Function:**

Erase the flash sector.

**Functional definition:**

```
SpiFlashOpResult spi_flash_erase_sector (uint16 sec)
```

**Parameter:**

`uint16 sec` : Sector number, the count starts at sector 0, 4KB per sector.

**Return:**

```
typedef enum{
    SPI_FLASH_RESULT_OK,
    SPI_FLASH_RESULT_ERR,
    SPI_FLASH_RESULT_TIMEOUT
} SpiFlashOpResult;
```

## 3. spi\_flash\_write

**Function:**

Write data to flash.

**Functional definition:**

```
SpiFlashOpResult spi_flash_write (
    uint32 des_addr,
    uint32 *src_addr,
    uint32 size
)
```

**Parameters:**

`uint32 des_addr` : destination address in flash.

`uint32 *src_addr` : source address of the data.

`uint32 size` : length of data

**Return:**

```
typedef enum{
    SPI_FLASH_RESULT_OK,
    SPI_FLASH_RESULT_ERR,
    SPI_FLASH_RESULT_TIMEOUT
} SpiFlashOpResult;
```

## 4. spi\_flash\_read

**Function:**

Read data from flash.

**Functional definition:**

```
SpiFlashOpResult spi_flash_read(  
    uint32 src_addr,  
    uint32 * des_addr,  
    uint32 size  
)
```

**Parameters:**

`uint32 src_addr`: source address of the flash data.  
`uint32 *des_addr`: destination address to keep data.  
`uint32 size`: length of data

**Return:**

```
typedef enum {  
    SPI_FLASH_RESULT_OK,  
    SPI_FLASH_RESULT_ERR,  
    SPI_FLASH_RESULT_TIMEOUT  
} SpiFlashOpResult;
```

**Example:**

```
uint32 value;  
  
uint8 *addr = (uint8 *)&value;  
  
spi_flash_read(0x3E * SPI_FLASH_SEC_SIZE, (uint32 *)addr, 4);  
  
printf("0x3E sec:%02x%02x%02x%02x\r\n", addr[0], addr[1], addr[2], addr[3]);
```

## 5. system\_param\_save\_with\_protect

**Function:**

Write data into flash with protection. Flash read/write has to be 4-bytes aligned.

Protection of flash read/write : use 3 sectors (4KBytes per sector) to save 4KB data with protect, sector 0 and sector 1 are data sectors, back up each other, save data alternately, sector 2 is flag sector, point out which sector is keeping the latest data, sector 0 or sector 1.

**Notice:**

For more details of protection of flash read/write, refer to 99A-SDK-Espressif IOT Flash RW Operation at <http://bbs.espressif.com/viewtopic.php?f=21&t=413>

**Functional definition:**

```
bool system_param_save_with_protect (
    uint16 start_sec,
    void *param,
    uint16 len
)
```

**Parameters:**

**uint16 start\_sec** : start sector (sector 0) of the 3 sectors which are used for flash read/write protection.

For example, in IOT\_Demo we can use the 3 sectors (3 \* 4KB) starting from flash 0x3D000 for flash read/write protection, so the parameter **start\_sec** should be 0x3D

**void \*param** : pointer of the data to be written

**uint16 len** : data length, should be less than a sector, which is 4 \* 1024

**Return:**

true, succeed;

false, fail

## 6. system\_param\_load

**Function:**

Read the data saved into flash with the read/write protection. Flash read/write has to be 4-bytes aligned.

Read/write protection of flash: use 3 sectors (4KB per sector) to save 4KB data with protect, sector 0 and sector 1 are data sectors, back up each other, save data alternately, sector 2 is flag sector, point out which sector is keeping the latest data, sector 0 or sector 1.

**Notice:**

For more details of the read/write protection of flash, refer to 99A-SDK-Espressif IOT Flash RW Operation at <http://bbs.espressif.com/viewtopic.php?f=21&t=413>

**Functional definition:**

```
bool system_param_load (
    uint16 start_sec,
    uint16 offset,
    void *param,
    uint16 len
)
```



**Parameters:**

`uint16 start_sec` : start sector (sector 0) of the 3 sectors used for flash read/write protection. It cannot be sector 1 or sector 2.

For example, in IOT\_Demo, the 3 sectors (3 \* 4KB) starting from flash 0x3D000 can be used for flash read/write protection. The parameter `start_sec` is 0x3D, and it cannot be 0x3E or 0x3F.

`uint16 offset` : offset of data saved in sector

`void *param` : data pointer

`uint16 len` : data length,  $\text{offset} + \text{len} \leq 4 * 1024$

**Return:**

true, succeed;

false, fail

### 3.4. Wi-Fi Related APIs

`wifi_station` APIs and other APIs which sets/gets configuration of the ESP8266 station can only be called if the ESP8266 station is enabled.

`wifi_softap` APIs and other APIs which sets/gets configuration of the ESP8266 soft-AP can only be called if the ESP8266 soft-AP is enabled.

The flash system parameter area is the last 16KB of the flash.

#### 1. `wifi_get_opmode`

**Function:**

get the current operating mode of the Wifi

**Functional definition:**

`uint8 wifi_get_opmode (void)`

**Parameter:**

null

**Return:**

WiFi operating modes:

0x01: station mode

0x02: soft-AP mode

0x03: station+soft-AP mode

#### 2. `wifi_get_opmode_default`

**Function:**

Get the operating mode of the WiFi saved in the flash.



**Functional definition:**

```
uint8 wifi_get_opmode_default (void)
```

**Parameter:**

null

**Return:**

WiFi operating modes:

0x01: station mode

0x02: soft-AP mode

0x03: station+soft-AP mode

### 3. **wifi\_set\_opmode**

**Function:**

Set the WiFi operating mode as station, soft-AP or station+soft-AP, and save it to flash. The default mode is soft-AP mode.

**Notices:**

This configuration will be saved in the flash system parameter area if changed.

**Functional definition:**

```
bool wifi_set_opmode (uint8 opmode)
```

**Parameters:**

**uint8 opmode:** WiFi operating modes:

0x01: station mode

0x02: soft-AP mode

0x03: station+soft-AP mode

**Return:**

true: succeed

false: fail

### 4. **wifi\_set\_opmode\_current**

**Function:**

Set the WiFi operating mode as station, soft-AP or station+soft-AP, and the mode won't be saved to the flash.

**Functional definition:**

```
bool wifi_set_opmode_current (uint8 opmode)
```



**Parameters:**

`uint8 opmode`: WiFi operating modes:  
0x01: station mode  
0x02: soft-AP mode  
0x03: station+soft-AP mode

**Return:**

true: succeed  
false: fail

## 5. `wifi_station_get_config`

**Function:**

Get the configuration parameters of the current WiFi station.

**Functional definition:**

```
bool wifi_station_get_config (struct station_config *config)
```

**Parameter:**

`struct station_config *config` : WiFi station configuration pointer

**Return:**

true: succeed  
false: fail

## 6. `wifi_station_get_config_default`

**Function:**

Get the configuration parameters saved in the flash of the current WiFi station.

**Functional definition:**

```
bool wifi_station_get_config_default (struct station_config *config)
```

**Parameters:**

`struct station_config *config` : WiFi station configuration pointer

**Return:**

true: succeed  
false: fail

## 7. `wifi_station_set_config`

**Function:**

Set the configuration parameters of the WiFi station and save them to the flash.



### Notices:

- This API can be called only when the ESP8266 station is enabled.
- If `wifi_station_set_config` is called in `user_init`, there is no need to call `wifi_station_connect`. The ESP8266 station will automatically connect to the AP (router) after the system initialization. Otherwise, `wifi_station_connect` should be called.
- Generally, `station_config.bssid_set` needs to be 0; and it needs to be 1 only when users need to check the MAC address of the AP.
- This configuration will be saved in the flash system parameter area if changed.

### Functional definition:

```
bool wifi_station_set_config (struct station_config *config)
```

### Parameters:

`struct station_config *config`: WiFi station configuration pointer

### Return:

true: succeed  
false: fail

### Example:

```
void ICACHE_FLASH_ATTR
user_set_station_config(void)
{
    char ssid[32] = SSID;
    char password[64] = PASSWORD;
    struct station_config stationConf;

    stationConf.bssid_set = 0; //need not check MAC address of AP

    os_memcpy(&stationConf.ssid, ssid, 32);
    os_memcpy(&stationConf.password, password, 64);
    wifi_station_set_config(&stationConf);
}

void user_init(void)
{
    wifi_set_opmode(STATIONAP_MODE); //Set softAP + station mode
    user_set_station_config();
}
```





## 8. `wifi_station_set_config_current`

### Function:

Set parameters of the WiFi station. They won't be saved to the flash.

### Notices:

- This API can be called only when the ESP8266 station is enabled.
- If `wifi_station_set_config_current` is called in `user_init`, there is no need to call `wifi_station_connect`. The ESP8266 station will automatically connect to the AP (router) after the system initialization. Otherwise, `wifi_station_connect` should be called.
- Generally, `station_config.bssid_set` needs to be 0, and it needs to be 1 only when users need to check the MAC address of the AP.

### Functional definition:

```
bool wifi_station_set_config_current (struct station_config *config)
```

### Parameters:

`struct station_config *config`: WiFi station configuration pointer

### Return:

true: succeed  
false: fail

## 9. `wifi_station_connect`

### Function:

connect THE ESP8266 WiFi station to the AP.

### Notices:

- Do not call this API in `user_init`. This API should be called when the ESP8266 station is enabled, and the system initialization is completed.
- If the ESP8266 is connected to an AP, call `wifi_station_disconnect` to disconnect.

### Functional definition:

```
bool wifi_station_connect (void)
```

### Parameter:

null

### Return:

true: succeed  
false: fail



## 10. wifi\_station\_disconnect

**Function:**

Disconnects WiFi station from AP.

**Notices:**

Do not call this API in `user_init`. This API need to be called after system initialize done and ESP8266 station enable.

**Functional definition:**

```
bool wifi_station_disconnect (void)
```

**Parameters:**

null

**Return:**

true: succeed  
false: fail

## 11. wifi\_station\_get\_connect\_status

**Function:**

Get the connection status of the ESP8266 WiFi station.

**Functional definition:**

```
uint8 wifi_station_get_connect_status (void)
```

**Parameter:**

null

**Return:**

```
enum{  
    STATION_IDLE = 0,  
    STATION_CONNECTING,  
    STATION_WRONG_PASSWORD,  
    STATION_NO_AP_FOUND,  
    STATION_CONNECT_FAIL,  
    STATION_GOT_IP  
};
```

## 12. wifi\_station\_scan

**Function:**

Scan all available APs.

**Notice:**

Do not call this API in `user_init`. This API need to be called after system initialize done and ESP8266 station enable.



**Functional definition:**

```
bool wifi_station_scan (struct scan_config *config, scan_done_cb_t cb);
```

**Structure:**

```
struct scan_config {  
    uint8 *ssid;        // AP's ssid  
    uint8 *bssid;       // AP's bssid  
    uint8 channel;      //scan a specific channel  
    uint8 show_hidden;  //scan APs of which ssid is hidden.  
};
```

**Parameters:**

`struct scan_config *config`: scan the AP configuration parameters  
if `config==null`: scan all available APs  
if `config.ssid==null && config.bssid==null && config.channel!=null`:  
ESP8266 will scan the APs in specific channels  
`scan_done_cb_t cb`: callback function after scanning

**Return:**

true: succeed  
false: fail

### 13. scan\_done\_cb\_t

**Function:**

Callback function for `wifi_station_scan`

**Functional definition:**

```
void scan_done_cb_t (void *arg, STATUS status)
```

**Parameters:**

`void *arg`: information of APs that are found; save them as linked list;  
refer to struct `bss_info`  
`STATUS status`: get status

**Return:**

null



**Example:**

```
wifi_station_scan(&config, scan_done);
static void ICACHE_FLASH_ATTR scan_done(void *arg, STATUS status) {
    if (status == OK) {
        struct bss_info *bss_link = (struct bss_info *)arg;
        bss_link = bss_link->next.stqe_next; //ignore first
        ...
    }
}
```

## 14. wifi\_station\_ap\_number\_set

**Function:**

Set the number of APs that can be recorded in the ESP8266 station. When the ESP8266 station is connected to an AP, the SSID and password of the AP will be recorded.

**Notice:**

This configuration will be saved in the flash system parameter area if changed.

**Functional definition:**

```
bool wifi_station_ap_number_set (uint8 ap_number)
```

**Parameter:**

**uint8 ap\_number:** the number of APs that can be recorded (MAX: 5)

**Return:**

true: succeed  
false: fail

## 15. wifi\_station\_get\_ap\_info

**Function:**

Get the information of APs (5 at most) recorded by ESP8266 station.

**Functional definition:**

```
uint8 wifi_station_get_ap_info(struct station_config config[])
```

**Parameter:**

**struct station\_config config[]:** information of the APs, the array size should be 5.

**Return:**

The number of APs recorded.



**Example:**

```
struct station_config config[5];  
int i = wifi_station_get_ap_info(config);
```

## 16. wifi\_station\_ap\_change

**Function:**

Switch the ESP8266 station connection to a recorded AP.

**Functional definition:**

```
bool wifi_station_ap_change (uint8 new_ap_id)
```

**Parameter:**

uint8 new\_ap\_id : AP's record id, start counting from 0.

**Return:**

true: succeed  
false: fail

## 17. wifi\_station\_get\_current\_ap\_id

**Function:**

Get the current record id of the AP. The ESP8266 can record the AP of every configuration; start counting from 0.

**Functional definition:**

```
uint8 wifi_station_get_current_ap_id ();
```

**Parameter:**

null

**Return:**

The recorded id of the current AP.

## 18. wifi\_station\_get\_auto\_connect

**Function:**

Check if the ESP8266 station will connect to the recorded AP automatically when the power is on.

**Functional definition:**

```
uint8 wifi_station_get_auto_connect(void)
```

**Parameter:**

null



**Return:**

0: not connect to the AP automatically;  
Non-0: connect to the AP automatically.

## 19. `wifi_station_set_auto_connect`

**Function:**

Set whether the ESP8266 station will connect to the recorded AP automatically when the power is on. It will do so by default.

**Notices:**

If this API is called in `user_init`, it is effective immediately after the power is on. If it is called in other places, it will be effective the next time when the power is on.

This configuration will be saved in flash system parameter area if changed.

**Functional definition:**

```
bool wifi_station_set_auto_connect(uint8 set)
```

**Parameters:**

`uint8 set`: If it will automatically connect to the AP when the power is on  
0: it will not connect automatically  
1: it will connect automatically

**Return:**

true: succeed  
false: fail

## 20. `wifi_station_dhcpc_start`

**Function:**

Enable the ESP8266 station DHCP client.

**Notices:**

(1) The DHCP is enabled by default.  
  
(2) the DHCP and the static IP API (`wifi_set_ip_info`) influence each other, and if the DHCP is enabled, the static IP will be disabled; if the static IP is enabled, the DHCP will be disabled. It depends on the latest configuration.

**Functional definition:**

```
bool wifi_station_dhcpc_start(void)
```

**Parameter:**

null



**Return:**

true: succeed  
false: fail

## 21. `wifi_station_dhcpc_stop`

**Function:**

Disable the ESP8266 station DHCP client.

**Notices:**

- (1) The DHCP is enabled by default.
- (2) the DHCP and the static IP API (`wifi_set_ip_info`) influence each other, and if the DHCP is enabled, the static IP will be disabled; if the static IP is enabled, the DHCP will be disabled.

**Functional definition:**

```
bool wifi_station_dhcpc_stop(void)
```

**Parameter:**

null

**Return:**

true: succeed  
false: fail

## 22. `wifi_station_dhcpc_status`

**Function:**

Get the ESP8266 station DHCP client status.

**Functional definition:**

```
enum dhcp_status wifi_station_dhcpc_status(void)
```

**Parameter:**

null

**Return:**

```
enum dhcp_status {  
    DHCP_STOPPED,  
    DHCP_STARTED  
};
```

## 23. `wifi_station_set_reconnect_policy`

**Function:**



Set whether the ESP8266 station will reconnect to the AP after disconnection. It will do so by default.

**Notice:**

It is suggested that users call this API in `user_init`.

**Functional definition:**

```
bool wifi_station_set_reconnect_policy(bool set)
```

**Parameter:**

`bool set` – if it's true, it will enable reconnection; if it's false, it will disable reconnection

**Return:**

true: succeed

false: fail

## 24. `wifi_station_get_reconnect_policy`

**Function:**

Check whether the ESP8266 station will reconnect to the AP after disconnection. It will do so by default.

**Functional definition:**

```
bool wifi_station_get_reconnect_policy(void)
```

**Parameter:**

null

**Return:**

true: enable the reconnection

false: disable the reconnection

## 25. `wifi_softap_get_config`

**Function:**

Get the current configuration of the ESP8266 WiFi soft-AP.

**Functional definition:**

```
bool wifi_softap_get_config(struct softap_config *config)
```

**Parameter:**

`struct softap_config *config` : ESP8266 soft-AP configuration





**Return:**

true: succeed  
false: fail

## 26. wifi\_softap\_get\_config\_default

**Function:**

Get the configuration of the ESP8266 WiFi soft-AP saved in the flash.

**Functional definition:**

```
bool wifi_softap_get_config_default(struct softap_config *config)
```

**Parameter:**

`struct softap_config *config` : ESP8266 soft-AP configuration

**Return:**

true: succeed  
false: fail

## 27. wifi\_softap\_set\_config

**Function:**

Set the configuration of the WiFi soft-AP and save it to the flash.

**Notices:**

- Call this API when the ESP8266 soft-AP is enabled.
- This configuration will be saved in flash system parameter area if changed.
- The ESP8266 is limited to only one channel, so when in the soft-AP + station mode, the soft-AP will adjust its channel automatically to be the same as the channel of the ESP8266 station. For more details, refer to 5. *appendix*.

**Functional definition:**

```
bool wifi_softap_set_config (struct softap_config *config)
```

**Parameter:**

`struct softap_config *config` : WiFi soft-AP configuration

**Return:**

true: succeed  
false: fail



## 28. wifi\_softap\_set\_config\_current

### Function:

Set the configuration of the WiFi soft-AP; the configuration won't be saved to the flash.

### Notices:

- Call this API when the ESP8266 soft-AP is enabled.
- The ESP8266 is limited to only one channel, so when in the soft-AP + station mode, the soft-AP will adjust its channel automatically to be the same as the channel of the ESP8266 station. For more details, refer to 5. *appendix*.

### Functional definition:

```
bool wifi_softap_set_config_current (struct softap_config *config)
```

### Parameter:

```
struct softap_config *config : WiFi soft-AP configuration
```

### Return:

```
true: succeed  
false: fail
```

## 29. wifi\_softap\_get\_station\_num

### Function:

Get the number of stations connected to the ESP8266 soft-AP.

### Functional definition:

```
uint8 wifi_softap_get_station_num(void)
```

### Parameter:

```
null
```

### Return:

```
the number of stations connected to the ESP8266 soft-AP
```

## 30. wifi\_softap\_get\_station\_info

### Function:

Get the number of stations connected to the ESP8266 soft-AP, including MAC and IP.

### Notice:

This API can not get the static IP, it can only be used when DHCP is enabled.

**Functional definition:**

```
struct station_info * wifi_softap_get_station_info(void)
```

**Input Parameters:**

null

**Return:**

```
struct station_info* : station information structure
```

### 31. wifi\_softap\_free\_station\_info

**Function:**

Free the space occupied by `station_info` when `wifi_softap_get_station_info` is called.

**Functional definition:**

```
void wifi_softap_free_station_info(void)
```

**Parameter:**

null

**Return:**

null

**Examples 1 (Getting MAC and IP information):**

```
struct station_info * station = wifi_softap_get_station_info();
struct station_info * next_station;
while(station) {
    printf(bssid : MACSTR, ip : IPSTR/n,
           MAC2STR(station->bssid), IP2STR(&station->ip));
    next_station = STAILQ_NEXT(station, next);
    os_free(station);    // Free it directly
    station = next_station;
}
```

**Examples 2 (Getting MAC and IP information):**

```
struct station_info * station = wifi_softap_get_station_info();
while(station){
    printf(bssid : MACSTR, ip : IPSTR/n,
           MAC2STR(station->bssid), IP2STR(&station->ip));
    station = STAILQ_NEXT(station, next);
}
wifi_softap_free_station_info();    // Free it by calling functions
```



### 32. `wifi_softap_dhcps_start`

**Function:**

Enable the ESP8266 soft-AP DHCP server.

**Notices:**

- (1) The DHCP is enabled by default.
- (2) the DHCP and the static IP API (`wifi_set_ip_info`) influence each other, and if the DHCP is enabled, the static IP will be disabled; if the static IP is enabled, the DHCP will be disabled. It depends on the latest configuration.

**Functional definition:**

```
bool wifi_softap_dhcps_start(void)
```

**Parameter:**

null

**Return:**

true: succeed  
false: fail

### 33. `wifi_softap_dhcps_stop`

**Function:**

Disable the ESP8266 soft-AP DHCP server. the DHCP is enabled by default.

**Functional definition:**

```
bool wifi_softap_dhcps_stop(void)
```

**Parameter:**

null

**Return:**

true: succeed  
false: fail

### 34. `wifi_softap_set_dhcps_lease`

**Function:**

Set the IP range of the ESP8266 soft-AP DHCP server.

**Notices:**

- The IP range should be in the same sub-net with the ESP8266 soft-AP IP address
- This API should only be called when the DHCP server is disabled (`wifi_softap_dhcps_stop`).



- This configuration will only take effect the next time when the DHCP server is enabled (`wifi_softap_dhcps_start`). If the DHCP server is disabled again, this API should be called to set the IP range; otherwise, when the DHCP server is enabled later, the default IP range will be used.

**Functional definition:**

```
bool wifi_softap_set_dhcps_lease(struct dhcps_lease *please)
```

**Parameter:**

```
struct dhcps_lease {  
    struct ip_addr start_ip;  
    struct ip_addr end_ip;  
};
```

**Return:**

```
true:   succeed  
false:  fail
```

**Example:**

```
void dhcps_lease_test(void)  
{  
    struct dhcps_lease dhcp_lease;  
    const char* start_ip = "192.168.5.100";  
    const char* end_ip = "192.168.5.105";  
  
    dhcp_lease.start_ip.addr = ipaddr_addr(start_ip);  
    dhcp_lease.end_ip.addr = ipaddr_addr(end_ip);  
    wifi_softap_set_dhcps_lease(&dhcp_lease);  
}
```

or

```
void dhcps_lease_test(void)  
{  
    struct dhcps_lease dhcp_lease;  
    IP4_ADDR(&dhcp_lease.start_ip, 192, 168, 5, 100);  
    IP4_ADDR(&dhcp_lease.end_ip, 192, 168, 5, 105);  
    wifi_softap_set_dhcps_lease(&dhcp_lease);  
}  
  
void user_init(void)  
{  
    struct ip_info info;  
    wifi_set_opmode(STATIONAP_MODE); //Set softAP + station mode
```



```
wifi_softap_dhcps_stop();

IP4_ADDR(&info.ip, 192, 168, 5, 1);
IP4_ADDR(&info.gw, 192, 168, 5, 1);
IP4_ADDR(&info.netmask, 255, 255, 255, 0);
wifi_set_ip_info(SOFTAP_IF, &info);
dhcps_lease_test();
wifi_softap_dhcps_start();
}
```

### 35. wifi\_softap\_dhcps\_status

**Function:**

Get the ESP8266 soft-AP DHCP server status.

**Functional definition:**

```
enum dhcp_status wifi_softap_dhcps_status(void)
```

**Parameter:**

null

**Return:**

```
enum dhcp_status {
    DHCP_STOPPED,
    DHCP_STARTED
};
```

### 36. wifi\_softap\_set\_dhcps\_offer\_option

**Function:**

Set the ESP8266 soft-AP DHCP server option.

**Structure:**

```
enum dhcps_offer_option{
    OFFER_START = 0x00,
    OFFER_ROUTER = 0x01,
    OFFER_END
};
```

**Functional definition:**

```
bool wifi_softap_set_dhcps_offer_option(uint8 level, void* optarg)
```



**Parameters:**

`uint8 level` – `OFFER_ROUTER` set the router option

`void* optarg` –

`bit0, 0` disable the router information;

`bit0, 1` enable the router information

**Return:**

`true` : succeed

`false` : fail

**Example:**

```
uint8 mode = 0;
```

```
wifi_softap_set_dhcps_offer_option(OFFER_ROUTER, &mode);
```

### 37. `wifi_set_phy_mode`

**Fuction:**

Set the ESP8266 physical mode (802.11b/g/n).

**Notice:**

The ESP8266 soft-AP only supports bg.

**Functional definition:**

```
bool wifi_set_phy_mode(enum phy_mode mode)
```

**Parameters:**

`enum phy_mode mode` : physical mode

```
enum phy_mode {  
    PHY_MODE_11B = 1,  
    PHY_MODE_11G = 2,  
    PHY_MODE_11N = 3  
};
```

**Return:**

`true` : succeed

`false` : fail

### 38. `wifi_get_phy_mode`

**Function:**

Get the ESP8266 physical mode (802.11b/g/n)



**Functional definition:**

```
enum phy_mode wifi_get_phy_mode(void)
```

**Parameter:**

null

**Return:**

```
enum phy_mode{
    PHY_MODE_11B = 1,
    PHY_MODE_11G = 2,
    PHY_MODE_11N = 3
};
```

### 39. wifi\_get\_ip\_info

**Function:**

Get the IP address of the WiFi station or the soft-AP interface.

**Functional definition:**

```
bool wifi_get_ip_info(
    uint8 if_index,
    struct ip_info *info
)
```

**Parameters:**

`uint8 if_index` : get the IP address of the station or the soft-AP interface  
0x00 for `STATION_IF`, 0x01 for `SOFTAP_IF`.  
`struct ip_info *info` : the IP information obtained

**Return:**

true: succeed  
false: fail

### 40. wifi\_set\_ip\_info

**Function:**

Set the IP address of the station or the soft-AP interface.

**Notice:**

This API should be called in `user_init`.

**Functional definition:**

```
bool wifi_set_ip_info(
    uint8 if_index,
    struct ip_info *info
)
```





**Parameters:**

```
uint8 if_index : set the IP address of the station or the soft-AP interface
#define STATION_IF      0x00
#define SOFTAP_IF       0x01
struct ip_info *info : IP information
```

**Example:**

```
struct ip_info info;

wifi_station_dhcpc_stop();
wifi_softap_dhcps_stop();

IP4_ADDR(&info.ip, 192, 168, 3, 200);
IP4_ADDR(&info.gw, 192, 168, 3, 1);
IP4_ADDR(&info.netmask, 255, 255, 255, 0);
wifi_set_ip_info(STATION_IF, &info);

IP4_ADDR(&info.ip, 10, 10, 10, 1);
IP4_ADDR(&info.gw, 10, 10, 10, 1);
IP4_ADDR(&info.netmask, 255, 255, 255, 0);
wifi_set_ip_info(SOFTAP_IF, &info);

wifi_softap_dhcps_start();
```

**Return:**

```
true: succeed
false: fail
```

## 41. wifi\_set\_macaddr

**Function:**

Set the MAC address

**Notices:**

- This API should be called in `user_init`.

**Functional definition:**

```
bool wifi_set_macaddr(
    uint8 if_index,
    uint8 *macaddr
)
```

**Parameters:**

```
uint8 if_index : set station MAC or soft-AP mac
#define STATION_IF      0x00
#define SOFTAP_IF       0x01
uint8 *macaddr : MAC address
```

**Example:**

```
char sofap_mac[6] = {0x16, 0x34, 0x56, 0x78, 0x90, 0xab};
char sta_mac[6] = {0x12, 0x34, 0x56, 0x78, 0x90, 0xab};

wifi_set_opmode(STATIONAP_MODE);
wifi_set_macaddr(SOFTAP_IF, sofap_mac);
wifi_set_macaddr(STATION_IF, sta_mac);
```

**Return:**

```
true:  succeed
false: fail
```

**42. wifi\_get\_macaddr**

**Function:** get MAC address

**Functional definition:**

```
bool wifi_get_macaddr(
    uint8 if_index,
    uint8 *macaddr
)
```

**Parameter:**

```
uint8 if_index : s set the IP address of the station or the soft-AP
interface
#define STATION_IF    0x00
#define SOFTAP_IF     0x01
uint8 *macaddr : the MAC address
```

**Return:**

```
true:  succeed
false: fail
```

**43. wifi\_status\_led\_install****Function:**

Install the WiFi status LED.

**Functional definition:**

```
void wifi_status_led_install (
    uint8 gpio_id,
    uint32 gpio_name,
    uint8 gpio_func
)
```



**Parameters:**

`uint8 gpio_id` : GPIO id  
`uint8 gpio_name` : GPIO mux name  
`uint8 gpio_func` : GPIO function

**Return:**

`null`

#### 44. `wifi_status_led_uninstall`

**Function:**

Uninstall the WiFi status LED.

**Functional definition:**

```
void wifi_status_led_uninstall ()
```

**Parameter:**

`null`

**Return:**

`null`

#### 45. `wifi_set_event_handler_cb`

**Function:**

Register the Wi-Fi event handler.

**Functional definition:**

```
void wifi_set_event_handler_cb(wifi_event_handler_cb_t cb)
```

**Parameter:**

`wifi_event_handler_cb_t cb` - callback function

**Return:**

`none`

**Example:**

```
void wifi_handle_event_cb(System_Event_t *evt)
{
    printf("event %x\n", evt->event);
    switch (evt->event) {
        case EVENT_STAMODE_CONNECTED:
            printf("connect to ssid %s, channel %d\n",
                evt->event_info.connected.ssid,
                evt->event_info.connected.channel);
            break;
```



```
    case EVENT_STAMODE_DISCONNECTED:
        printf("disconnect from ssid %s, reason %d\n",
               evt->event_info.disconnected.ssid,
               evt->event_info.disconnected.reason);

        break;
    case EVENT_STAMODE_AUTHMODE_CHANGE:
        printf("mode: %d -> %d\n",
               evt->event_info.auth_change.old_mode,
               evt->event_info.auth_change.new_mode);

        break;
    case EVENT_STAMODE_GOT_IP:
        printf("ip:" IPSTR ",mask:" IPSTR ",gw:" IPSTR,
               IP2STR(&evt->event_info.got_ip.ip),
               IP2STR(&evt->event_info.got_ip.mask),
               IP2STR(&evt->event_info.got_ip.gw));

        printf("\n");
        break;
    case EVENT_SOFTAPMODE_STACONNECTED:
        printf("station: " MACSTR "join, AID = %d\n",
               MAC2STR(evt->event_info.sta_connected.mac),
               evt->event_info.sta_connected.aid);

        break;
    case EVENT_SOFTAPMODE_STADISCONNECTED:
        printf("station: " MACSTR "leave, AID = %d\n",
               MAC2STR(evt->event_info.sta_disconnected.mac),
               evt->event_info.sta_disconnected.aid);

        break;
    default:
        break;
}

void user_init(void)
{
    // TODO: add your own code here....
    wifi_set_event_handler_cb(wifi_handle_event_cb);
}
```



## 3.5. Upgrade (FOTA) APIs

### 1. `system_upgrade_userbin_check`

**Function:**

Check the user bin.

**Functional definition:**

```
uint8 system_upgrade_userbin_check()
```

**Parameter:**

none

**Return:**

0x00 : UPGRADE\_FW\_BIN1, i.e. user1.bin

0x01 : UPGRADE\_FW\_BIN2, i.e. user2.bin

### 2. `system_upgrade_flag_set`

**Function:**

Set the upgrade status flag.

**Notice:**

After downloading new softwares, set the flag to `UPGRADE_FLAG_FINISH` and call `system_upgrade_reboot` to reboot the system in order to run the new software.

**Functional definition:**

```
void system_upgrade_flag_set(uint8 flag)
```

**Parameter:**

uint8 flag:

```
#define UPGRADE_FLAG_IDLE      0x00
```

```
#define UPGRADE_FLAG_START    0x01
```

```
#define UPGRADE_FLAG_FINISH   0x02
```

**Return:**

null

### 3. `system_upgrade_flag_check`

**Function:**

Check the upgrade status flag.

**Functional definition:**

```
uint8 system_upgrade_flag_check()
```



**Parameter:**

null

**Return:**

`#define UPGRADE_FLAG_IDLE`      `0x00`

`#define UPGRADE_FLAG_START`    `0x01`

`#define UPGRADE_FLAG_FINISH`   `0x02`

#### 4. **system\_upgrade\_reboot**

**Function:** reboot system to use the new software.

**Functional definition:**

`void system_upgrade_reboot (void)`

**Parameters:**

null

**Return:**

null



## 3.6. Sniffer Related APIs

### 1. `wifi_promiscuous_enable`

**Function:**

Enable the promiscuous mode.

**Notices:**

- (1) The promiscuous mode can only be enabled in the ESP8266 station mode.
- (2) When in the promiscuous mode, the ESP8266 station and soft-AP are disabled.
- (3) Call `wifi_station_disconnect` to disconnect before enabling the promiscuous mode.
- (4) Don't call any other APIs when in the promiscuous mode. Call `wifi_promiscuous_enable(0)` to quit sniffer before calling other APIs.

**Functional definition:**

```
void wifi_promiscuous_enable(uint8 promiscuous)
```

**Parameter:**

`uint8 promiscuous` :

- 0: to disable the promiscuous mode
- 1: to enable the promiscuous mode

**Return:**

null

### 2. `wifi_promiscuous_set_mac`

**Function:**

Set the MAC address filter for the sniffer mode.

**Notices:**

This filter works only for the current sniffer mode.  
If users disable and then enable the sniffer mode, and then enable sniffer, they need to set the MAC address filter again.

**Functional definition:**

```
void wifi_promiscuous_set_mac(const uint8_t *address)
```

**Parameter:**

`const uint8_t *address` : MAC address

**Return:**

null

**Example:**



```
char ap_mac[6] = {0x16, 0x34, 0x56, 0x78, 0x90, 0xab};  
wifi_promiscuous_set_mac(ap_mac);
```

### 3. `wifi_set_promiscuous_rx_cb`

**Function:**

Register the RX callback function in the promiscuous mode. Each time a packet is received, the callback function will be registered.

**Functional definition:**

```
void wifi_set_promiscuous_rx_cb(wifi_promiscuous_cb_t cb)
```

**Parameter:**

`wifi_promiscuous_cb_t cb` : callback function

**Return:**

null

### 4. `wifi_get_channel`

**Function:**

Get the channel number for sniffer functions

**Functional definition:**

```
uint8 wifi_get_channel(void)
```

**Parameters:**

null

**Return:**

channel number

### 5. `wifi_set_channel`

**Function:**

Set the channel number for sniffer functions

**Functional definition:**

```
bool wifi_set_channel (uint8 channel)
```

**Parameters:**

`uint8 channel` : channel number

**Return:**

true: succeed  
false: fail





### 3.7. smart config APIs

Herein we only introduce smart-config APIs, users can inquire Espressif Systems for smart-config documentation which will contain more details. Please make sure the target AP is enabled before enable smart-config.

#### 1. smartconfig\_start

**Function:**

Start smart configuration mode, to connect ESP8266 station to AP, by sniffing for special packets from the air, containing SSID and password of desired AP. You need to broadcast the SSID and password (e.g. from mobile device or computer) with the SSID and password encoded.

**Note:**

- (1) This api can only be called in station mode.
- (2) During smart-config, ESP8266 station and soft-AP are disabled.
- (3) Can not call `smartconfig_start` twice before it finish, please call `smartconfig_stop` first.
- (4) Don't call any other APIs during smart-config, please call `smartconfig_stop` first.

**Structure:**

```
typedef enum {
    SC_STATUS_WAIT = 0,          // Please don't start connection in this phase
    SC_STATUS_FIND_CHANNEL,      // Start connection by APP in this phase
    SC_STATUS_GETTING_SSID_PSWD,
    SC_STATUS_LINK,
    SC_STATUS_LINK_OVER,         // Got IP, connect to AP successfully
} sc_status;

typedef enum {
    SC_TYPE_ESPTOUCH = 0,
    SC_TYPE_AIRKISS,
} sc_type;
```

**Prototype:**

```
bool smartconfig_start(
    sc_callback_t cb,
    uint8 log
)
```

**Parameter:**

`sc_callback_t cb` : smart config callback; executed when smart-config status changed;

parameter `status` of this callback shows the status of smart-config:

- if `status == SC_STATUS_GETTING_SSID_PSWD`, parameter `void *pdata` is a pointer of `sc_type`, means smart-config type: AirKiss or ESP-TOUCH.
- if `status == SC_STATUS_LINK`, parameter `void *pdata` is a pointer of `struct station_config`;
- if `status == SC_STATUS_LINK_OVER`, parameter `void *pdata` is a pointer of mobile phone's IP address, 4 bytes. This is only available in ESPTOUCH, otherwise, it is `NULL`.
- otherwise, parameter `void *pdata` is `NULL`.

`uint8 log` : 1: UART output logs; otherwise: UART only outputs the result.

**Return:**

true: succeed

false: fail

**Example:**

```
void smartconfig_done(sc_status status, void *pdata)
{
    switch(status) {
        case SC_STATUS_WAIT:
            printf("SC_STATUS_WAIT\n");
            break;
        case SC_STATUS_FIND_CHANNEL:
            printf("SC_STATUS_FIND_CHANNEL\n");
            break;
        case SC_STATUS_GETTING_SSID_PSWD:
            printf("SC_STATUS_GETTING_SSID_PSWD\n");
            sc_type *type = pdata;
            if (*type == SC_TYPE_ESPTOUCH) {
                printf("SC_TYPE:SC_TYPE_ESPTOUCH\n");
            } else {
                printf("SC_TYPE:SC_TYPE_AIRKISS\n");
            }
            break;
        case SC_STATUS_LINK:
            printf("SC_STATUS_LINK\n");
```



```
        struct station_config *sta_conf = pdata;
        wifi_station_set_config(sta_conf);
        wifi_station_disconnect();
        wifi_station_connect();
        break;
    case SC_STATUS_LINK_OVER:
        printf("SC_STATUS_LINK_OVER\n");
        if (pdata != NULL) {
            uint8 phone_ip[4] = {0};
            memcpy(phone_ip, (uint8*)pdata, 4);
            printf("Phone ip: %d.%d.%d.%d\n", phone_ip[0], phone_ip[1], phone_ip[2], phone_ip[3]);
        }
        smartconfig_stop();
        break;
    }
}

smartconfig_start(smartconfig_done);
```

## 2. smartconfig\_stop

### Function:

stop smart config, free the buffer taken by `smartconfig_start`.

### Note:

Whether connect to AP succeed or not, this API should be called to free memory taken by `smartconfig_start`.

### Prototype:

```
bool smartconfig_stop(void)
```

### Parameter:

null

### Return:

true: succeed  
false: fail



## 3.8. cJSON APIs

### 1. cJSON\_Parse

**Function:**

Parse the cJSON character string.

**Functional definition:**

```
cJSON *cJSON_Parse (const char *value)
```

**Parameters:**

`const char *value` : the incoming character string

**Return:**

Return to the cJSON structure.

### 2. cJSON\_Print

**Function:**

Change the cJSON structure to character string.

**Functional definition:**

```
char *cJSON_Print (cJSON *item)
```

**Parameters:**

`cJSON *item` : transmit the cJSON structure

**Return:**

character string

### 3. cJSON\_Delete

**Function:**

Delete the cJSON structure to free the cJSON space.

**Functional definition:**

```
void cJSON_Delete (cJSON *c)
```

**Parameters:**

`cJSON *c` : transmit the cJSON

**Return:**

null

### 4. cJSON\_GetArraySize

**Function:**

Get the cJSON array size or object size



**Functional definition:**

```
int cJSON_GetArraySize (cJSON *array)
```

**Parameters:**

`cJSON *array` : transmit the cJSON array

**Return:**

the cJSON array size or object size

## 5. cJSON\_GetArrayItem

**Function:**

Get the array or object items by index.

**Functional definition:**

```
cJSON *cJSON_GetArrayItem(cJSON *array,int item)
```

**Parameters:**

`cJSON *array` : transmit cJSON

`int item` : array or object items

**Return:**

Return to items of the array or the object by index. If items cannot be found, then return to `NULL`.

## 6. cJSON\_GetObjectItem

**Function:**

Get the array or object items by name.

**Functional definition:**

```
cJSON *cJSON_GetObjectItem (cJSON *object, const char *string)
```

**Parameters:**

`cJSON *object` : transmit cJSON

`const char *string` : array or object names

**Return:**

Return to items of the array or the object by name. If items cannot be found, then return to `NULL`.

## 7. cJSON\_CreateXXX

**Function:**

Create cJSON items of different types.

**Functional definition:**



```
cJSON *cJSON_CreateNull (void)    // create Null cJSON structure
cJSON *cJSON_CreateTrue (void)    // create True cJSON structure
cJSON *cJSON_CreateFalse (void)   // create False cJSON structure
cJSON *cJSON_CreateBool (int b)   // create bool cJSON structure
cJSON *cJSON_CreateNumber (double num) // create double num cJSON
structure
cJSON *cJSON_CreateString (const char *string) // create character string
cJSON structure
cJSON *cJSON_CreateArray (void)    // create array cJSON structure
cJSON *cJSON_CreateObject (void)   // create JSON tree cJSON structure
```

**Return:**

cJSON

## 8. cJSON\_CreateXXXArray

**Function:**

Create arrays of multiple types.

**Functional definition:**

```
cJSON *cJSON_CreateIntArray(const int *numbers,int count)
cJSON *cJSON_CreateFloatArray(const float *numbers,int count)
cJSON *cJSON_CreateDoubleArray(const double *numbers,int count)
cJSON *cJSON_CreateStringArray(const char **strings,int count)
```

**Parameters:**

`numbers` : data values

`int count` : number of arrays created

**Return:**

cJSON

## 9. cJSON\_InitHooks

**Function:**

Redefine malloc, realloc, free, etc.

**Functional definition:**

```
void cJSON_InitHooks (cJSON_Hooks* hooks)
```



**Parameters:**

`cJSON_Hooks* hooks` : cJSON callback function

**Return:**

null

## 10. cJSON\_AddItemToArray

**Function:**

Add an item to a specific array, and destroy the current JSON.

**Functional definition:**

```
void cJSON_AddItemToArray (cJSON *array, cJSON *item)
```

**Parameters:**

`cJSON *array` : the specific array

`cJSON *item` : the item to be added

**Return:**

null

## 11. cJSON\_AddItemReferenceToArray

**Function:**

Add an item to a specific array, and not destroy the current JSON.

**Functional definition:**

```
void cJSON_AddItemReferenceToArray (cJSON *array, cJSON *item)
```

**Parameters:**

`cJSON *array` : the specific array

`cJSON *item` : the item to be added

**Return:**

null

## 12. cJSON\_AddItemToObject

**Function:**

Add an item to a specific object, and destroy the current JSON.

**Functional definition:**

```
void cJSON_AddItemToObject (cJSON *object, const char *string, cJSON *item)
```

```
void cJSON_AddItemToObjectCS (cJSON *object, const char *string, cJSON  
*item)
```



**Parameters:**

`cJSON *object` : the current object

`const char *string` : the item to be added

`cJSON *item` : the specific object

**Return:**

null

### 13. cJSON\_AddItemReferenceToObject

**Function:**

Add an item to a specific object, and not destroy the current JSON.

**Functional definition:**

```
void cJSON_AddItemReferenceToObject (  
    cJSON *object,  
    const char *string,  
    cJSON *item)
```

**Parameters:**

`cJSON *object` : the current object

`const char *string` : the item to be added

`cJSON *item` : the specific object

**Return:**

null

### 14. cJSON\_DetachItemFromArray

**Function:**

Detach an item from a specific array.

**Functional definition:**

```
cJSON *cJSON_DetachItemFromArray (cJSON *array, int which)
```

**Parameters:**

`cJSON *array` : the specific array

`int which` : address of the item to be detached





**Return:**

cJSON

### 15. cJSON\_DeleteItemFromArray

**Function:**

Delete an item from a specific array.

**Functional definition:**

```
void cJSON_DeleteItemFromArray (cJSON *array, int which)
```

**Parameters:**

`cJSON *array` : the specific array

`int which` : address of the item to be deleted

**Return:**

null

### 16. cJSON\_DetachItemFromObject

**Function:**

Detach an item from a specific object.

**Functional definition:**

```
cJSON *cJSON_DetachItemFromObject (cJSON *object, const char *string)
```

**Parameters:**

`cJSON *object` : the specific object

`const char *string` : the item to be detached

**Return:**

cJSON structure

### 17. cJSON\_DeleteItemFromObject

**Function:**

Delete an item from a specific object

**Functional definition:**

```
void cJSON_DeleteItemFromObject (cJSON *object, const char *string)
```

**Parameters:**

`cJSON *object` : the specific object

`const char *string` : the item to be deleted

**Return:**

null



## 18. cJSON\_InsertItemInArray

**Function:**

insert an item in an array.

**Functional definition:**

```
void cJSON_InsertItemInArray (cJSON *array, int which, cJSON *newitem)
```

**Parameters:**

`cJSON *array` : the specific array

`int which` : the array position of the new item.

`cJSON *newitem` : the item to be inserted

**Return:**

null

## 19. cJSON\_ReplaceItemInArray

**Function:**

Replace an item in an array.

**Functional definition:**

```
void cJSON_ReplaceItemInArray (cJSON *array, int which, cJSON *newitem)
```

**Parameters:**

`cJSON *array` : the specific array

`int which` : the array position of the item to be replaced

`cJSON *newitem` : the new item

**Return:**

null

## 20. cJSON\_ReplaceItemInObject

**Function:**

Replace an item in an object.

**Functional definition:**

```
void cJSON_ReplaceItemInObject (  
    cJSON *object,  
    const char *string,  
    cJSON *newitem)
```

**Parameters:**

`cJSON *object` : the specific object



`const char *string` : the item to be replaced

`cJSON *newitem` : the new item

**Return:**

null

## 21. cJSON\_Duplicate

**Function:**

duplicate a cJSON and create an identical one.

**Functional definition:**

```
cJSON *cJSON_Duplicate (cJSON *item, int recurse)
```

**Parameters:**

`cJSON *item` : the cJSON to be duplicated

`int recurse` : depth of recursion

**Return:**

cJSON

## 22. cJSON\_ParseWithOpts

**Function:**

Parse the cJSON.

**Functional definition:**

```
cJSON *cJSON_ParseWithOpts (  
    const char *value,  
    const char **return_parse_end,  
    int require_null_terminated)
```

**Parameters:**

`const char *value` : transmit the character string

`const char **return_parse_end` : Parse the address at the end of the character string

`int require_null_terminated` : the location where the parsing terminates

**Return:**

cJSON



## 4. Definitions & Structures

### 4.1. Timer

```
typedef void os_timer_func_t(void *timer_arg);
typedef struct _os_timer_t {
    struct _os_timer_t    *timer_next;
    void                  *timer_handle;
    uint32                timer_expire;
    uint32                timer_period;
    os_timer_func_t       *timer_func;
    bool                  timer_repeat_flag;
    void                  *timer_arg;
} os_timer_t;
```

### 4.2. WiFi Related Structures

#### 1. Station Related

```
struct station_config {
    uint8 ssid[32];
    uint8 password[64];
    uint8 bssid_set;
    uint8 bssid[6];
};
```

##### Notices:

BSSID is the MAC address of the AP. It will be used when several APs have the same SSID.

If `station_config.bssid_set==1` , `station_config.bssid` must be set, otherwise, the connection will fail.

Generally, `station_config.bssid_set` should be set as 0.

#### 2. soft-AP related

```
typedef enum _auth_mode {
    AUTH_OPEN = 0,
    AUTH_WEP,
    AUTH_WPA_PSK,
```



```
AUTH_WPA2_PSK,
AUTH_WPA_WPA2_PSK
} AUTH_MODE;
struct softap_config {
    uint8 ssid[32];
    uint8 password[64];
    uint8 ssid_len;
    uint8 channel;           // support 1 ~ 13
    uint8 authmode;         // Don't support AUTH_WEP in soft-AP mode
    uint8 ssid_hidden;      // default 0
    uint8 max_connection;   // default 4, max 4
    uint16 beacon_interval; // 100 ~ 60000 ms, default 100
};
```

**Notices:**

If `softap_config.ssid_len==0`, check the SSID until there is a termination character; otherwise, set the SSID length according to `softap_config.ssid_len`.

### 3. scan related

```
struct scan_config {
    uint8 *ssid;
    uint8 *bssid;
    uint8 channel;
    uint8 show_hidden; // Scan APs which are hiding their SSID or not.
};
struct bss_info {
    STAILQ_ENTRY(bss_info) next;
    u8 bssid[6];
    u8 ssid[32];
    u8 channel;
    s8 rssi;
    u8 authmode;
    uint8 is_hidden; // SSID of current AP is hidden or not.
};
typedef void (* scan_done_cb_t)(void *arg, STATUS status);
```

### 4. WiFi event related structure

```
enum {
```



```
EVENT_STAMODE_CONNECTED = 0,
EVENT_STAMODE_DISCONNECTED,
EVENT_STAMODE_AUTHMODE_CHANGE,
EVENT_STAMODE_GOT_IP,
EVENT_SOFTAPMODE_STACONNECTED,
    EVENT_SOFTAPMODE_STADISCONNECTED,
EVENT_MAX
};
enum {
    REASON_UNSPECIFIED            = 1,
    REASON_AUTH_EXPIRE            = 2,
    REASON_AUTH_LEAVE             = 3,
    REASON_ASSOC_EXPIRE           = 4,
    REASON_ASSOC_TOOMANY          = 5,
    REASON_NOT_AUTHED             = 6,
    REASON_NOT_ASSOCED            = 7,
    REASON_ASSOC_LEAVE            = 8,
    REASON_ASSOC_NOT_AUTHED       = 9,
    REASON_DISASSOC_PWRCAP_BAD    = 10, /* 11h */
    REASON_DISASSOC_SUPCHAN_BAD   = 11, /* 11h */
    REASON_IE_INVALID             = 13, /* 11i */
    REASON_MIC_FAILURE            = 14, /* 11i */
    REASON_4WAY_HANDSHAKE_TIMEOUT = 15, /* 11i */
    REASON_GROUP_KEY_UPDATE_TIMEOUT = 16, /* 11i */
    REASON_IE_IN_4WAY_DIFFERS     = 17, /* 11i */
    REASON_GROUP_CIPHER_INVALID   = 18, /* 11i */
    REASON_PAIRWISE_CIPHER_INVALID = 19, /* 11i */
    REASON_AKMP_INVALID           = 20, /* 11i */
    REASON_UNSUPP_RSN_IE_VERSION  = 21, /* 11i */
    REASON_INVALID_RSN_IE_CAP     = 22, /* 11i */
    REASON_802_1X_AUTH_FAILED    = 23, /* 11i */
    REASON_CIPHER_SUITE_REJECTED  = 24, /* 11i */

    REASON_BEACON_TIMEOUT         = 200,
    REASON_NO_AP_FOUND            = 201,
};

typedef struct {
    uint8 ssid[32];
```



```
uint8 ssid_len;
uint8 bssid[6];
uint8 channel;
} Event_StaMode_Connected_t;

typedef struct {
    uint8 ssid[32];
    uint8 ssid_len;
    uint8 bssid[6];
    uint8 reason;
} Event_StaMode_Disconnected_t;

typedef struct {
    uint8 old_mode;
    uint8 new_mode;
} Event_StaMode_AuthMode_Change_t;

typedef struct {
    struct ip_addr ip;
    struct ip_addr mask;
    struct ip_addr gw;
} Event_StaMode_Got_IP_t;

typedef struct {
    uint8 mac[6];
    uint8 aid;
} Event_SoftAPMode_StaConnected_t;

typedef struct {
    uint8 mac[6];
    uint8 aid;
} Event_SoftAPMode_StaDisconnected_t;

typedef union {
    Event_StaMode_Connected_t        connected;
    Event_StaMode_Disconnected_t     disconnected;
    Event_StaMode_AuthMode_Change_t  auth_change;
    Event_StaMode_Got_IP_t           got_ip;
    Event_SoftAPMode_StaConnected_t  sta_connected;
```



```
        Event_SoftAPMode_StaDisconnected_t    sta_disconnected;
    } Event_Info_u;

typedef struct _esp_event {
    uint32 event;
    Event_Info_u event_info;
} System_Event_t;
```





## 5.

# Appendix

### 5.1. RTC APIs Example

The example below shows how to check the RTC time, the system time, and changes during system\_restart, as well as how to read and write the RTC memory.

```
#include "ets_sys.h"
#include "osapi.h"
#include "user_interface.h"

os_timer_t rtc_test_t;
#define RTC_MAGIC 0x55aaaa55

typedef struct {
    uint64 time_acc;
    uint32 magic ;
    uint32 time_base;
}RTC_TIMER_DEMO;

void rtc_count()
{
    RTC_TIMER_DEMO rtc_time;
    static uint8 cnt = 0;
    system_rtc_mem_read(64, &rtc_time, sizeof(rtc_time));

    if(rtc_time.magic!=RTC_MAGIC){
        printf("rtc time init...\r\n");
        rtc_time.magic = RTC_MAGIC;
        rtc_time.time_acc= 0;
        rtc_time.time_base = system_get_rtc_time();
        printf("time base : %d \r\n",rtc_time.time_base);
    }

    printf("=====\r\n");
    printf("RTC time test : \r\n");
```



```
uint32 rtc_t1,rtc_t2;
uint32 st1,st2;
uint32 cal1, cal2;

rtc_t1 = system_get_rtc_time();
st1 = system_get_time();

cal1 = system_rtc_clock_cali_proc();
os_delay_us(300);

st2 = system_get_time();
rtc_t2 = system_get_rtc_time();

cal2 = system_rtc_clock_cali_proc();
printf(" rtc_t2-t1 : %d \r\n",rtc_t2-rtc_t1);
printf(" st2-t2 :  %d  \r\n",st2-st1);
printf("cal 1  : %d.%d  \r\n", ((cal1*1000)>>12)/1000,
((cal1*1000)>>12)%1000 );
printf("cal 2  : %d.%d  \r\n",((cal2*1000)>>12)/1000,
((cal2*1000)>>12)%1000 );
printf("=====\r\n\r\n");
rtc_time.time_acc += ( ((uint64)(rtc_t2 - rtc_time.time_base)) *
( (uint64)((cal2*1000)>>12)) ) ;
printf("rtc time acc : %lld \r\n",rtc_time.time_acc);
printf("power on time : %lld us\r\n", rtc_time.time_acc/1000);
printf("power on time : %lld.%02lld S\r\n", (rtc_time.time_acc/1000000)/
100, (rtc_time.time_acc/1000000)%100);

rtc_time.time_base = rtc_t2;
system_rtc_mem_write(64, &rtc_time, sizeof(rtc_time));
printf("-----\r\n");

if(5== (cnt++)){
printf("system restart\r\n");
system_restart();
}else{
printf("continue ... \r\n");
}
}
```



```
void user_init(void)
{
    rtc_count();
    printf("SDK version:%s\n", system_get_sdk_version());

    os_timer_disarm(&rtc_test_t);
    os_timer_setfn(&rtc_test_t, rtc_count, NULL);
    os_timer_arm(&rtc_test_t, 10000, 1);
}
```

## 5.2. Sniffer Structure Introduction

The ESP8266 can enter the promiscuous mode (sniffer) and capture IEEE 802.11 packets in the air.

The following HT20 packet types are supported:

- 802.11b
- 802.11g
- 802.11n (from MCS0 to MCS7)
- AMPDU

The following packet types are not supported:

- HT40
- LDPC

Although the ESP8266 can not decipher some IEEE80211 packets completely, it can Get the length of these packets.

Therefore, when in the sniffer mode, the ESP8266 can either (1) completely capture the packets or (2) Get the length of the packets.

- For packets that ESP8266 can decipher completely, the ESP8266 returns with the
  - MAC addresses of both communication sides and the encryption type
  - the length of the entire packet.
- For packets that ESP8266 cannot completely decipher, the ESP8266 returns with
  - the length of the entire packet.

Structure [RxControl](#) and [sniffer\\_buf](#) are used to represent these two kinds of packets. Structure [sniffer\\_buf](#) contains structure [RxControl](#).



```
struct RxControl {
    signed rssi:8;           // signal intensity of packet
    unsigned rate:4;
    unsigned is_group:1;
    unsigned:1;
    unsigned sig_mode:2;     // 0:is 11n packet; 1:is not 11n packet;
    unsigned legacy_length:12; // if not 11n packet, shows length of packet.
    unsigned damatch0:1;
    unsigned damatch1:1;
    unsigned bssidmatch0:1;
    unsigned bssidmatch1:1;
    unsigned MCS:7;         // if is 11n packet, shows the modulation
                           // and code used (range from 0 to 76)
    unsigned CWB:1; // if is 11n packet, shows if is HT40 packet or not
    unsigned HT_length:16; // if is 11n packet, shows length of packet.
    unsigned Smoothing:1;
    unsigned Not_Sounding:1;
    unsigned:1;
    unsigned Aggregation:1;
    unsigned STBC:2;
    unsigned FEC_CODING:1; // if is 11n packet, shows if is LDPC packet or not.
    unsigned SGI:1;
    unsigned rxend_state:8;
    unsigned ampdu_cnt:8;
    unsigned channel:4; //which channel this packet in.
    unsigned:12;
};

struct LenSeq{
    u16 len; // length of packet
    u16 seq; // serial number of packet, the high 12bits are serial number,
           // low 14 bits are Fragment number (usually be 0)
    u8 addr3[6]; // the third address in packet
};

struct sniffer_buf{
    struct RxControl rx_ctrl;
    u8 buf[36 ]; // head of ieee80211 packet
    u16 cnt;     // number count of packet
};
```



```
    struct LenSeq lenseq[1]; //length of packet
};

struct sniffer_buf2{
    struct RxControl rx_ctrl;
    u8 buf[112];
    u16 cnt;
    u16 len; //length of packet
};
```

The callback function `wifi_promiscuous_rx` contains two parameters ( `buf` and `len`). `len` shows the length of `buf`, it can be: `len = 128`, `len = X * 10`, `len = 12`.

#### LEN == 128

- `buf` contains structure `sniffer_buf2`: it is the management packet, it has 112 bytes of data.
- `sniffer_buf2.cnt` is 1.
- `sniffer_buf2.len` is the length of the management packet.

#### LEN == X \* 10

- `buf` contains structure `sniffer_buf`: this structure is reliable, data packets represented by it have been verified by CRC.
- `sniffer_buf.cnt` shows the number of packets in `buf`. The value of `len` is decided by `sniffer_buf.cnt`.
  - ▶ `sniffer_buf.cnt==0`, invalid buf; otherwise, `len = 50 + cnt * 10`
- `sniffer_buf.buf` contains the first 36 bytes of IEEE80211 packet. Starting from `sniffer_buf.lenseq[0]`, each structure `lenseq` shows the length of a packet. `lenseq[0]` shows the length of the first packet. If there are two packets where (`sniffer_buf.cnt == 2`), `lenseq[1]` shows the length of the second packet.
- If `sniffer_buf.cnt > 1`, it is a AMPDU packet. Because headers of each MPDU packets are similar, we only provide the length of each packet (from the header of MAC packet to FCS)
- This structure contains: length of packet, MAC address of both communication sides, length of the packet header.

#### LEN == 12

- `buf` contains structure `RxControl`; but this structure is not reliable. It cannot show the MAC addresses of both communication sides, or the length of the packet header.
- It does not show the number or the length of the sub-packets of AMPDU packets.




- This structure contains: length of the packet, [rssi](#) and [FEC\\_CODING](#).
- [RSSI](#) and [FEC\\_CODING](#) are used to judge whether the packets are from the same device.

### Summary

It is recommended that users speed up the processing of individual packets, otherwise, some follow-up packets may be lost.

Format of an entire IEEE802.11 packet is shown as below.

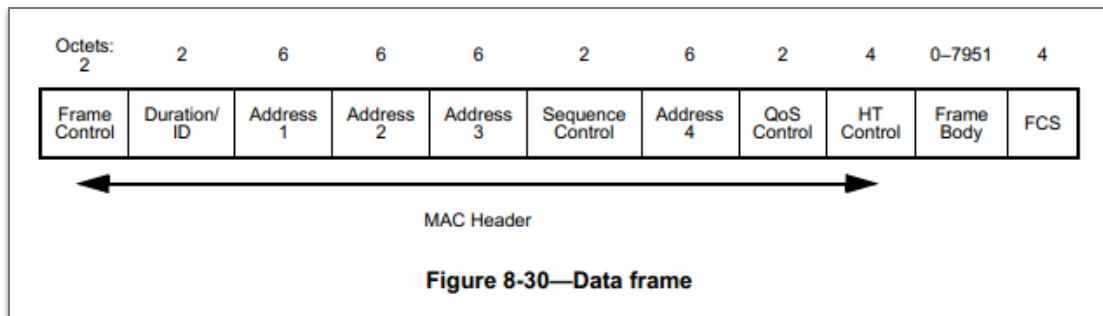

- The first 24 bytes of MAC header of the data packet are needed:
  - ▶ [Address 4](#) field is decided by [FromDS](#) and [ToDS](#) in [Frame Control](#);
  - ▶ [QoS Control](#) field is decided by [Subtype](#) in [Frame Control](#);
  - ▶ [HT Control](#) field is decided by [Order Field](#) in [Frame Control](#);
  - ▶ For more details, refer to *IEEE Std 80211-2012*.
- For WEP encrypted packets, the MAC header is followed by an 4-byte IV, and there is a 4-byte ICV before the FCS.
- For TKIP encrypted packets, the MAC header is followed by a 4-byte IV and a 4-byte EIV, and there are an 8-byte MIC and a 4-byte ICV before the FCS.
- For CCMP encrypted packets, the MAC header is followed by an 8-byte CCMP header, and there is an 8-byte MIC before the FCS.

### 5.3. ESP8266 soft-AP and station channel configuration

Even though ESP8266 supports the soft-AP + station mode, it is limited to only one hardware channel.

In the soft-AP + station mode, the ESP8266 soft-AP will adjust its channel configuration to be same as the ESP8266 station.



This limitation may cause some inconveniences in the softAP + station mode that users need to pay special attention to, for example:

Case 1:

- (1) When the user connects the ESP8266 to a router (for example, channel 6),
- (2) and sets the ESP8266 soft-AP through [wifi\\_softap\\_set\\_config](#),
- (3) If the value is effective, the API will return to true. However, the channel will be automatically adjusted to channel 6 in order to be in line with the ESP8266 station interface. This is because there is only one hardware channel in this mode.

Case 2:

- (1) If the user sets the channel of the ESP8266 soft-AP through [wifi\\_softap\\_set\\_config](#) (for example, channel 5),
- (2) other stations will connect to the ESP8266 soft-AP,
- (3) then the user connects the ESP8266 station to a router (for example, channel 6),
- (4) the ESP8266 softAP will adjust its channel to be as same as the ESP8266 station (which is channel 6 in this case).
- (5) As a result of the change of channel, the station Wi-F connected to the ESP8266 soft-AP in step two will be disconnected.