

## Overview

The USB Audio Speaker application is a simple demonstration program based on the MCUXpresso SDK. It is enumerated as a playback device and users can play music using the device.

## System Requirement

### Hardware requirements

- Mini/micro USB cable
- USB A to micro AB cable
- Hardware (Tower System base/module) with a SCTL board (except MAPS-KS22)
- Personal Computer(PC)

### Software requirements

- The path for the project files for lite version example is:  
<MCUXpresso\_SDK\_Install>/boards/<board>/usb\_examples/usb\_device\_audio\_speaker\_lite/<rtos>/<toolchain>.

For non-lite version example, the path is:

<MCUXpresso\_SDK\_Install>/boards/<board>/usb\_examples/usb\_device\_audio\_speaker/<rtos>/<toolchain>.

Note

The <rtos> is Bare Metal or FreeRTOS OS.

## Getting Started

### Hardware Settings

- Due to the pin mux of SAI and JLINK on 6UL/ULL, the device audio speaker can only run in flash mode.

Note

Set the hardware jumpers (Tower system/base module) to default settings.

### Prepare the example

1. Download the program to the target board.
2. Connect the target board to the external power source (the example is self-powered).
3. Either press the reset button on the board or launch the debugger in the IDE to start running the demo.
4. Connect a USB cable between the PC host and the USB device port on the board.

For detailed instructions, see the appropriate board User's Guide.

## Run the example in Windows (USB AUDIO CLASS 1.0)

1. Plug-in the audio speaker device which is running the Audio Speaker example into the PC.
2. A USB AUDIO DEMO device shows up as enumerated in the Device Manager.
3. Right click on the sound control icon of the Start bar (close to the clock) and select "Playback devices".

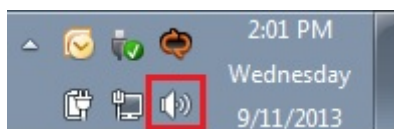


Figure 1: Sound control icon

4. In the pop-up window, select the "Playback" device with the description "USB Audio Device" and click on the "Properties" button.

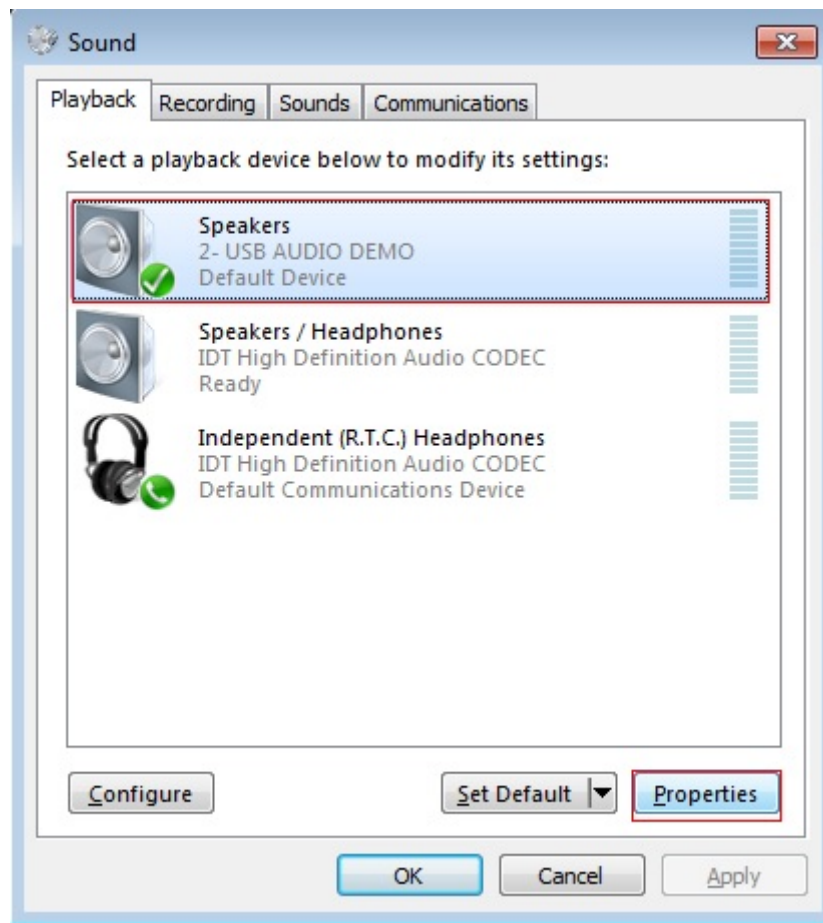


Figure 2: Select properties

5. In the new window, go to "Levels" tab and move the slide until 100%. Click "OK".

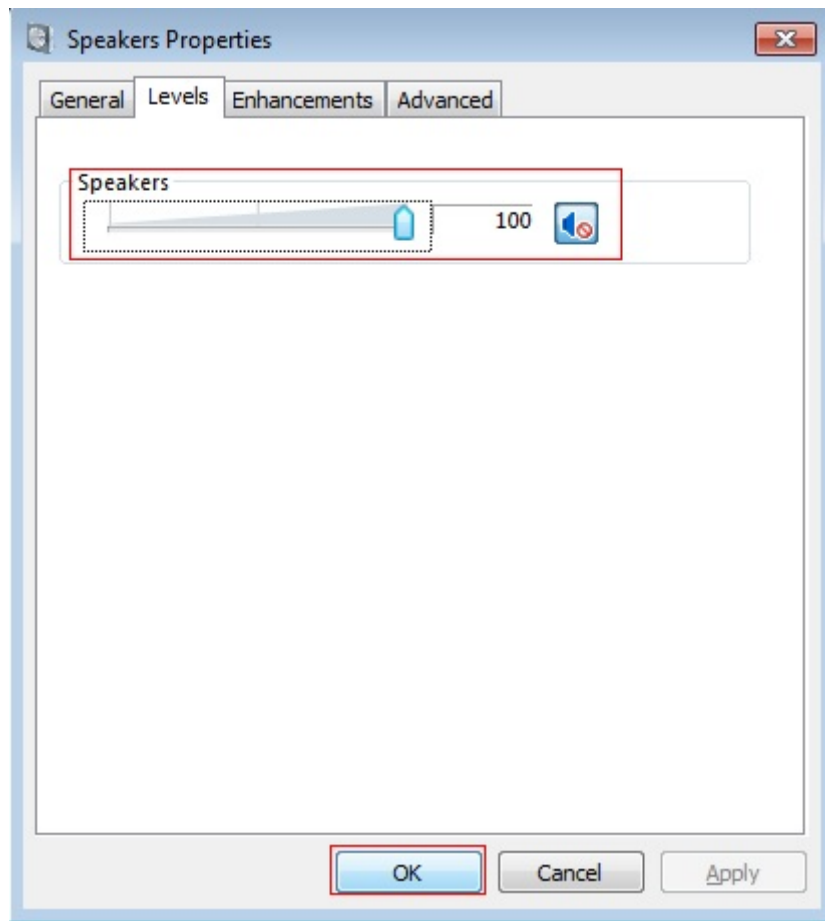


Figure 3: Change level

6. In the previous window, ensure that the "USB Audio Device" is still selected and click on the "Set Default" button. Click on the "OK" button.

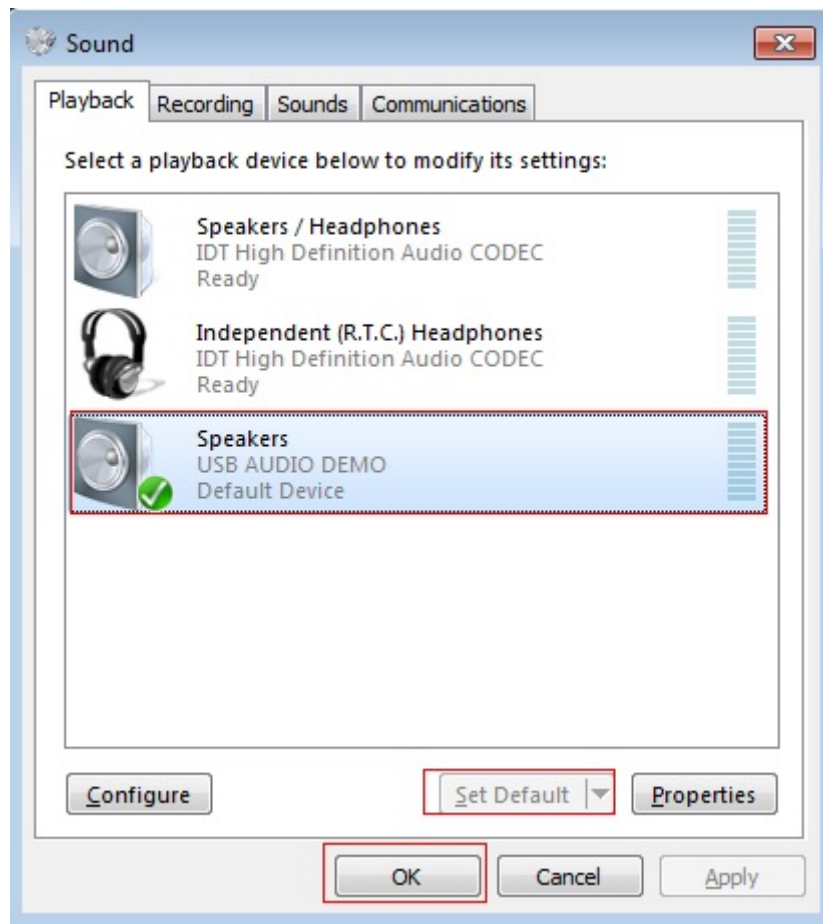


Figure 4: Set default

7. Open the Window Media Player application, select, and play your favorite song.

## Run the example on a Mac<sup>®</sup> (USB AUDIO CLASS 2.0)

1. Plug-in the audio speaker device which is running the Audio Speaker example into the Mac.
2. A USB audio device shows up as enumerated in the sound catalogue under the System Preferences.
3. Select the USB audio speaker device as the default audio device in the sound catalogue under System Preferences.
4. Open the QuickTime application. Select and play your favorite song.

### Note

The device audio speaker example has an ISO IN feedback, please attach the device to a host like PC which supports feedback function. Otherwise, there might be attachment issue or other problems.