




# USB To CANFD Series Products

## User Mannual

Everything we update here:

		
<b>PU2CANFD-X2</b> <b>(USB2CANFD-X2)</b> USB To Dual Channel CANFD	<b>PU2CANFD-C</b> USB To CANFD Cable	<b>PU2CANFD-MPCIE</b> USB To Dual Channel CANFD with mini pcie interface (usb2.0 bus)

Date	Revision	Description
2023/03/23	V1.0	First Released
2023/03/28	V1.1	Update For FD Series Products

# Document Catalogue

Document Catalogue .....	2
1 Introduction .....	4
1.1 Product Series .....	4
1.2 Product Features .....	4
2 Hardware Description .....	5
2.1 USB2CANFD-X2 .....	5
Specification .....	5
Pins Out Description .....	7
LED Indication .....	8
2.2 PU2CANFD-C .....	8
Specification .....	9
Pins Out Description .....	10
LED Indication .....	11
2.3 PU2CANFDX2-MPCIE .....	11
Specification .....	12
Pins Out Description .....	13
LED Indication .....	14
Design Reference .....	15
3 Connection .....	18
3.1 Enable/Disable Build In 120Ω Term Resistor .....	18
3.2 USB2CANFD-X2/PU2CANFD-C Connection .....	19
3.3 PU2CANFDX2-MPCIE Connection Figure .....	20
4 Software Description .....	20
4.1 PCANVIEW For Windows .....	20
4.1.1 Installing drivers .....	21
4.1.2 Start and Initialize PCAN-View .....	21
4.1.3 Receive/Transmit Tab .....	24
4.1.4 Trace Tab .....	26
4.1.5 PCAN-USB Pro FD Tab .....	26
4.1.6 Bus Load Tab .....	27
4.1.7 Status Bar .....	27
4.1.8 PCAN-Basic API .....	28
4.2 PCANVIEW For Linux .....	30
4.2.1 Driver Install .....	30
4.2.2 PCAN-View for Linux .....	30
4.2.3 Transmit/Received Data .....	32
4.3 CAN-UTILS/C/Python For Linux .....	35
4.3.1 Linux Support List .....	35
4.3.2 Hardware Connection .....	37

4.3.3 CAN-UTILS DEMO ..... 38

4.3.4 C Demo ..... 40

4.3.5 Python3 Demo ..... 41

4.3.6 Software Description ..... 42

5Appendix A-ID Setting ..... 48

    Enable/Disable Build In 120Ω TERM Resistor ..... 48

        When you use device under Windows ..... 49

        When you use device Under Linux ..... 49

    Enable/Disable SW CAN Mode ..... 49

        Hardware Connection Enable SWCAN ..... 50

        ID Setting SWCAN Working Mode ..... 50

# 1Introduction

## 1.1 Product Series

Product Name	CAN Version	Bitrate	Isolation	Max Rate	Interface	Time Stamp
USB2CANFD-X2	CAN2.0A/B CANFD 1.0	12Mbit/s	2500V	15000fps/s	USB 2*DSUB 9PIN	1us
PU2CANFDX2-MPCIE	CAN2.0A/B CANFD 1.0	12Mbit/s	2500V	15000fps/s	MINIPCIE (USB Bus)	1us
PU2CANFD-C	CAN2.0A/B CANFD 1.0	12Mbit/s	2500V	15000fps/s	1.5M USB Cable 1*D-Sub 9PIN	1us

The new CAN FD standard (CAN with Flexible Data rate) is primarily characterized by higher bandwidth for data transfer.

The maximum of 64 data bytes per CAN FD frame (instead of 8 so far) can be transmitted with bit rates up to 12 Mbit/s.

Provide Drivers and Software for Windows/Linux/MacOs, Compatible with windows PCAN-View, Linux Socket CAN.

The monitor software PCAN-View and the programming interface PCAN-Basic for the development of applications with CAN connection are included in the scope of supply and support the new standard CAN FD.

## 1.2 Product Features

- 1 True High-speed USB 2.0 Compatible with CAN specifications 2.0A/2.0B/FD;
- 2 CAN FD support for ISO and Non-ISO standard support software switch;
- 3 CAN FD bit rates data field (64 bytes max.) from 25 kbit/s up to 12Mbit/s;
- 4 Class CAN bit rates data field from 25 kbit/s up to 1 Mbit/s;
- 5 Time stamp Resolution Up to 1  $\mu$ s;
- 6 Each CAN FD Signal &Power Separately Isolated Up to 2500 Volts against USB;
- 7 **Support Enable/Disable Build In 120 $\Omega$  termination resistor By PCANVIEW;**
- 8 **Support CAN Clock Settings By PCANVIEW**
- 9 Bus load measurements including error frames and overload frames on physical bus;
- 10 Induced error generation for incoming and outgoing CAN messages;

## 2Hardware Description

### 2.1 USB2CANFD-X2

The USB2CANFD-X2 is a plug and play high speed USB2.0 to CANFD adapter enables the connection of dual channel CANFD networks to a computer via USB. Each CAN FD channel is separately isolated against USB with a maximum of 2500V.





### Specification

Connector	
CANFD	Dual Channel 9PIN D-SUB Connectors
USB	USB plug type A (Computer) USB plug type B (Devcie)
CAN Features	

**High Speed USB2.0 To CAN FD Converter**  
**Data Field Up to 12M Max**  
**Compatible With PCAN Software**


Protocols	CAN 2.0A (standard format) CAN 2.0B (extended format) CAN FD ISO 11898-1:2015 CAN FD non-ISO
CAN bit rates	25 kbit/s up to 1 Mbit/s
CANFD bit rates	25 kbit/s up to 12Mbit/s
USB ESD	IEC 61000-4-2 Level 4 +25 kV (contact discharge) +30 kV (air-gap discharge)
Galvanic isolation	Signal &Power Separately Isolated by 2500 Volts against USB IEC 61000-4-2 Contact IEC 61000-4-2 Air ISO 10605 150 pF / 2 k2 Contact ISO 10605 330 pF 1 2 k2 Contact
Micro controller	180MHZ Cortex-M4 MCU
Timestamp resolution	1 $\mu$ s
Built In 120 $\Omega$ Termination Resistor	Enable/Disable Through Software
Software	Windows PCAN-VIEW Linux PCAN-VIEW (Instruction) Linux SOCKET-CAN: <ul style="list-style-type: none"> <li>● CAN Utils (Instruction) ,</li> <li>● C (Source Code Instruction) ,</li> <li>● Python (Source Code Instruction)</li> <li>● savvyCAN</li> <li>● Busmaster</li> </ul>
PCAN BASIC API Windows 10, 8.1, 7 (32/64-bit) Windows CE 6.x (x86/ARMv4) Linux (32/64-bit)	C#, C++/CLR, Delphi,VB.NET, Java,Phyton 2.6
Third Party Software	LabView, CodeSys, Matlab, BUSMASTER, EasyMotion Studio, CANmoon, XX-SCAN, PCAN-Explorer5
<b>Others</b>	
Temperature	-40°~ 85°
PCBA Size (L * W * H)	84x80x28 mm
Weight	190g

## Pins Out Description
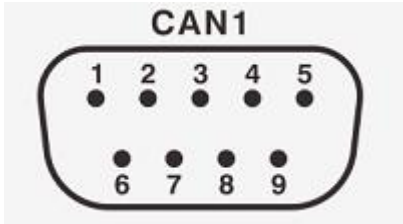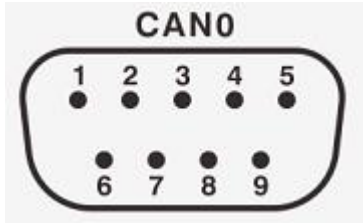
<p style="text-align: center;"><b>CAN1</b></p> 	<p style="text-align: center;"><b>PIN OUT Description</b></p> <table border="1"> <tr><td>1</td><td>NC</td></tr> <tr><td>2</td><td>CANL bus line (dominant low)</td></tr> <tr><td>3</td><td>CAN_GND</td></tr> <tr><td>4</td><td>NC</td></tr> <tr><td>5</td><td>NC</td></tr> <tr><td>6</td><td>NC</td></tr> <tr><td>7</td><td>CANH bus line (dominant high)</td></tr> <tr><td>8</td><td>NC</td></tr> <tr><td>9</td><td>NC</td></tr> </table>	1	NC	2	CANL bus line (dominant low)	3	CAN_GND	4	NC	5	NC	6	NC	7	CANH bus line (dominant high)	8	NC	9	NC
1	NC																		
2	CANL bus line (dominant low)																		
3	CAN_GND																		
4	NC																		
5	NC																		
6	NC																		
7	CANH bus line (dominant high)																		
8	NC																		
9	NC																		
<p style="text-align: center;"><b>CAN0 (Normal)</b></p> 	<p style="text-align: center;"><b>PIN OUT Description</b></p> <table border="1"> <tr><td>1</td><td>NC</td></tr> <tr><td>2</td><td>CANL bus line (dominant low)</td></tr> <tr><td>3</td><td>CAN_GND</td></tr> <tr><td>4</td><td>NC</td></tr> <tr><td>5</td><td>NC</td></tr> <tr><td>6</td><td>NC</td></tr> <tr><td>7</td><td>CANH bus line (dominant high)</td></tr> <tr><td>8</td><td>NC</td></tr> <tr><td>9</td><td>NC</td></tr> </table>	1	NC	2	CANL bus line (dominant low)	3	CAN_GND	4	NC	5	NC	6	NC	7	CANH bus line (dominant high)	8	NC	9	NC
1	NC																		
2	CANL bus line (dominant low)																		
3	CAN_GND																		
4	NC																		
5	NC																		
6	NC																		
7	CANH bus line (dominant high)																		
8	NC																		
9	NC																		

Note1: Not connect GND do not affect normal communication, if cable with shielding suggest connect to GND;

## LED Indication

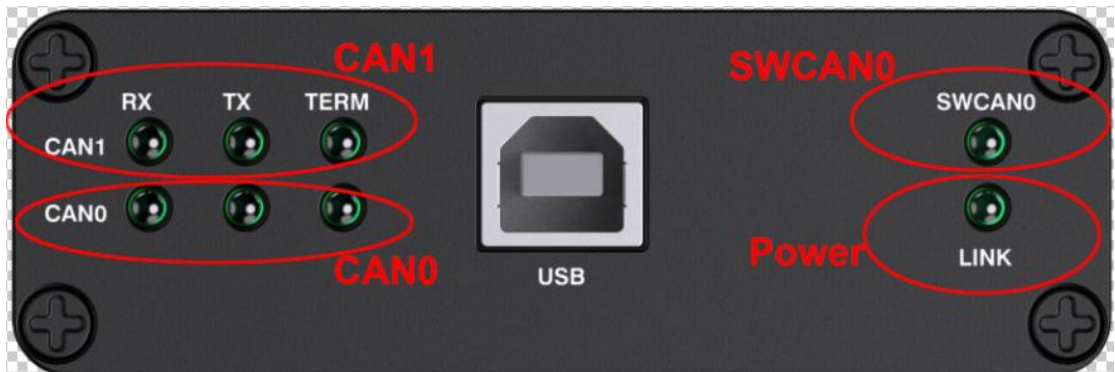

When plug usb2canfd-x2 device to Computer All lights are flashing for one second.  
Then TERM LED And LINK LED turns to be green.

Led Name	Description
Power LED Indicator	Power Up And Driver Installted LINK LED turns to be blinking.
CAN1 LED Indicator	TX LED Blinking, Sending Data; RX LED Blinking, Receiving Data; TERM LED Green,120Ω Activated;
CAN0 LED Indicator	TX LED Blinking, Sending Data; RX LED Blinking, Receiving Data; TERM LED Green,120Ω Activated;

## 2.2 PU2CANFD-C

The PU2CANFD-C is a plug and play high speed USB2.0 to CANFD converter comes with 1.2m high quality Cable enables the connection of one channel CANFD networks to a computer via USB. CANFD is isolated protection against USB 2500V.



High Speed USB2.0 To CAN FD Converter  
Data Field Up to 12M Max  
Compatible With PCAN Software




Specification

Connector	
CANFD	9PIN D-SUB Connectors
USB Cable	1.2M High Quality USB Cable with type A
CAN Features	
Protocols	CAN 2.0A (standard format) CAN 2.0B (extended format) CAN FD ISO 11898-1:2015 CAN FD non-ISO
CAN bit rates	25 kbit/s up to 1 Mbit/s
CANFD bit rates	25 kbit/s up to 12Mbit/s
USB ESD	IEC 61000-4-2 Level 4 +25 kV (contact discharge) +30 kV (air-gap discharge)

**High Speed USB2.0 To CAN FD Converter**  
**Data Field Up to 12M Max**  
**Compatible With PCAN Software**


Galvanic isolation	Signal & Power Separately Isolated by 2500 Volts against USB IEC 61000-4-2 Contact IEC 61000-4-2 Air ISO 10605 150 pF / 2 k2 Contact ISO 10605 330 pF 1 2 k2 Contact
Micro controller	180MHZ Cortex-M4 MCU
Timestamp resolution	1 $\mu$ s
Built In 120 $\Omega$ Termination Resistor	Disable/Enable Through Software
Software	<ul style="list-style-type: none"> <li>● Windows PCAN-VIEW AND API</li> <li>● Linux PCAN-VIEW AND API</li> <li>● Linux SOCKET-CAN: CAN Utils/C Code/Python Code</li> <li>● Mac CAN And API</li> </ul>
PCAN BASIC API Windows Windows CE 6.x Linux (32/64-bit) Mac Os	C#, C++/CLR, Delphi, VB.NET, Java, Phyton 2.6
Third Party Software	LabView, CodeSys, Matlab, BUSMASTER, EasyMotion Studio, CANmoon, XX-SCAN, PCAN-Explorer5 Comes with Products: <ul style="list-style-type: none"> <li>● savvyCAN</li> <li>● Busmaster</li> </ul>
<b>Others</b>	
Temperature	-40°~ 85°

## Pins Out Description

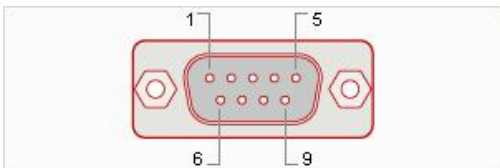	1	NC
	2	CAN-L
	3	GND
	4	NC
	5	NC
	6	NC
	7	CAN-H

	8	NC
	9	NC

LED Indication

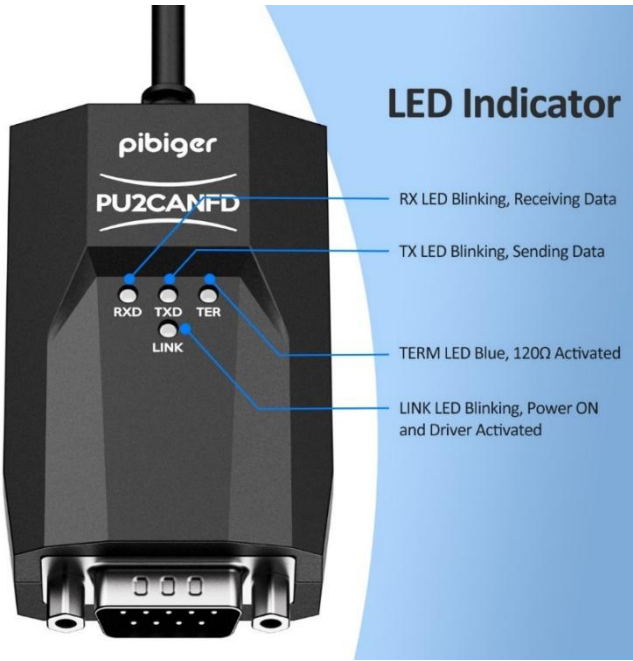


Led Name	LED Status	Description
RXD	Blinking	Receiving Data
TXD	Blinking	Sending Data
TER	Blue Led On	Build In 120Ω Term Resistor Enable;
LINK	Blinking	Power Up and Driver Installed.
	Blue Led On	Power Up Driver Not Installed.

2.3 PU2CANFDX2-MPCIE

The PU2CANFD-MPCIE is a plug and play high speed USB2.0 to CANFD CAN Card. CAN FD each channel is separately isolated against USB with a maximum of 2500V.

High Speed USB2.0 To CAN FD Converter  
Data Field Up to 12M Max  
Compatible With PCAN Software

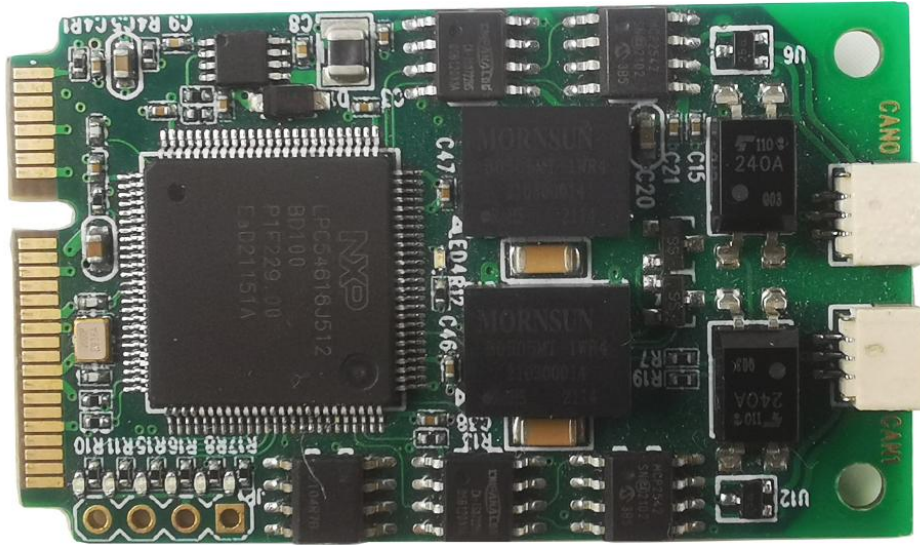


## Specification

<b>Connector</b>	
Dual Channel CANFD	2X3PIN 1mm Connector
Mini PCIE USB	USB BUS
<b>CAN Features</b>	
Protocols	CAN 2.0A (standard format) CAN 2.0B (extended format) CAN FD ISO 11898-1:2015 CAN FD non-ISO
CAN bit rates	25 kbit/s up to 1 Mbit/s
CANFD bit rates	25 kbit/s up to 12Mbit/s
USB ESD	IEC 61000-4-2 Level 4 +25 kV (contact discharge) +30 kV (air-gap discharge)
Galvanic isolation	Signal &Power Separately Isolated by 2500 Volts against USB IEC 61000-4-2 Contact IEC 61000-4-2 Air ISO 10605 150 pF / 2 k2 Contact ISO 10605 330 pF 1 2 k2 Contact
Micro controller	180MHZ Cortex-M4 MCU
Timestamp resolution	1 $\mu$ s
Built In 120 $\Omega$ Termination Resistor	Activated/Deactivated Through Software

High Speed USB2.0 To CAN FD Converter  
Data Field Up to 12M Max  
Compatible With PCAN Software

Software	Windows PCAN-VIEW Linux PCAN-VIEW (Instruction) Linux SOCKET-CAN: <ul style="list-style-type: none"><li>● CAN Utils (Instruction) ,</li><li>● C (Source Code Instruction) ,</li><li>● Python (Source Code Instruction)</li></ul>
PCAN BASIC API Windows 10, 8.1, 7 (32/64-bit) Windows CE 6.x (x86/ARMv4) Linux (32/64-bit)	C#, C++/CLR, Delphi,VB.NET, Java, Python 2.6
Third Party Software	savvyCAN Busmaster
Others	
Temperature	-40°~ 85°
PCBA Size (L * W * H)	84x80x28 mm
Weight	191 g


Pins Out Description

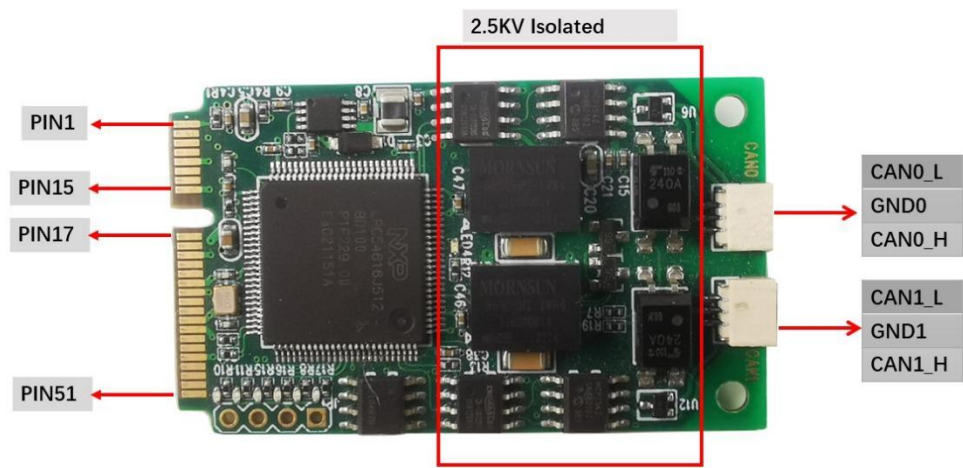


# High Speed USB2.0 To CAN FD Converter

## Data Field Up to 12M Max

## Compatible With PCAN Software

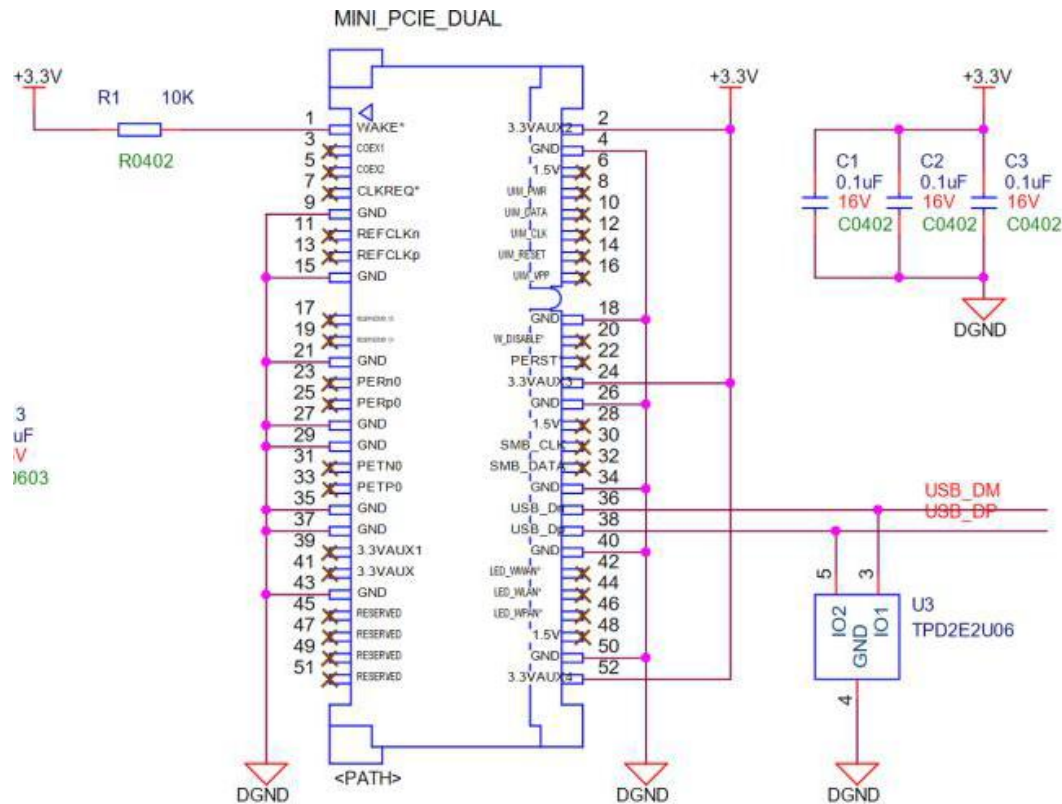

## LED Indication

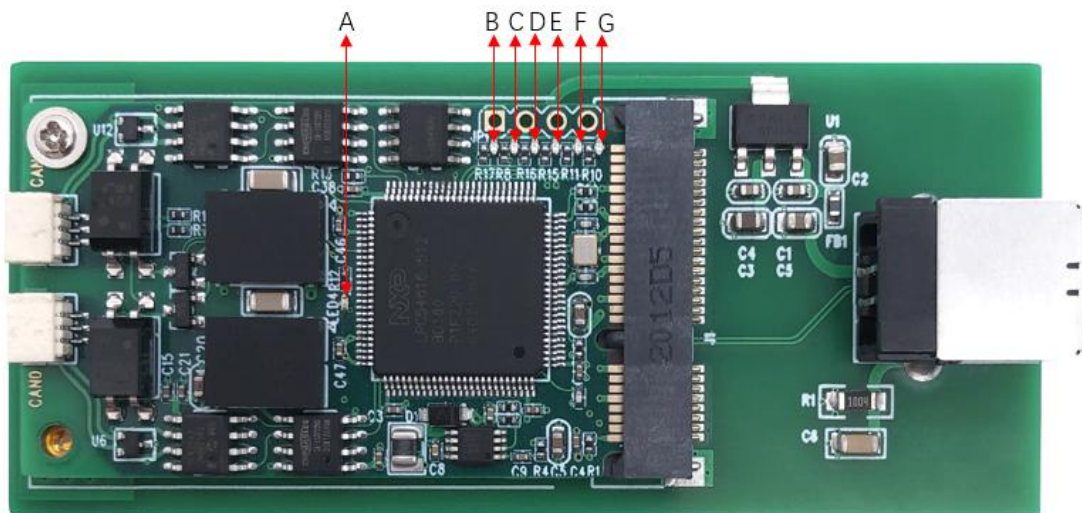

	Description	Indication
A	Power&Driver LED	Blinking, Driver install and Power Up
B	CAN0 120Ω Term	On, CAN0 Term Enable; Off, CAN0 Term Disable
C	CAN1 120Ω Term	On, CAN1 Term Enable; Off, CAN1 Term Disable
D	CAN0 Receive	Blinking, CAN0 Receiving Data;
E	CAN0 Send	Blinking, CAN0 Sending Data;
F	CAN1 Receive	Blinking, CAN1 Receiving Data;
G	CAN1 Send	Blinking, CAN0 Receiving Data;


## Design Reference

### 3PIN Connector Board End

Vendor: HDGC1002WR-S-3P



High Speed USB2.0 To CAN FD Converter  
Data Field Up to 12M Max  
Compatible With PCAN Software

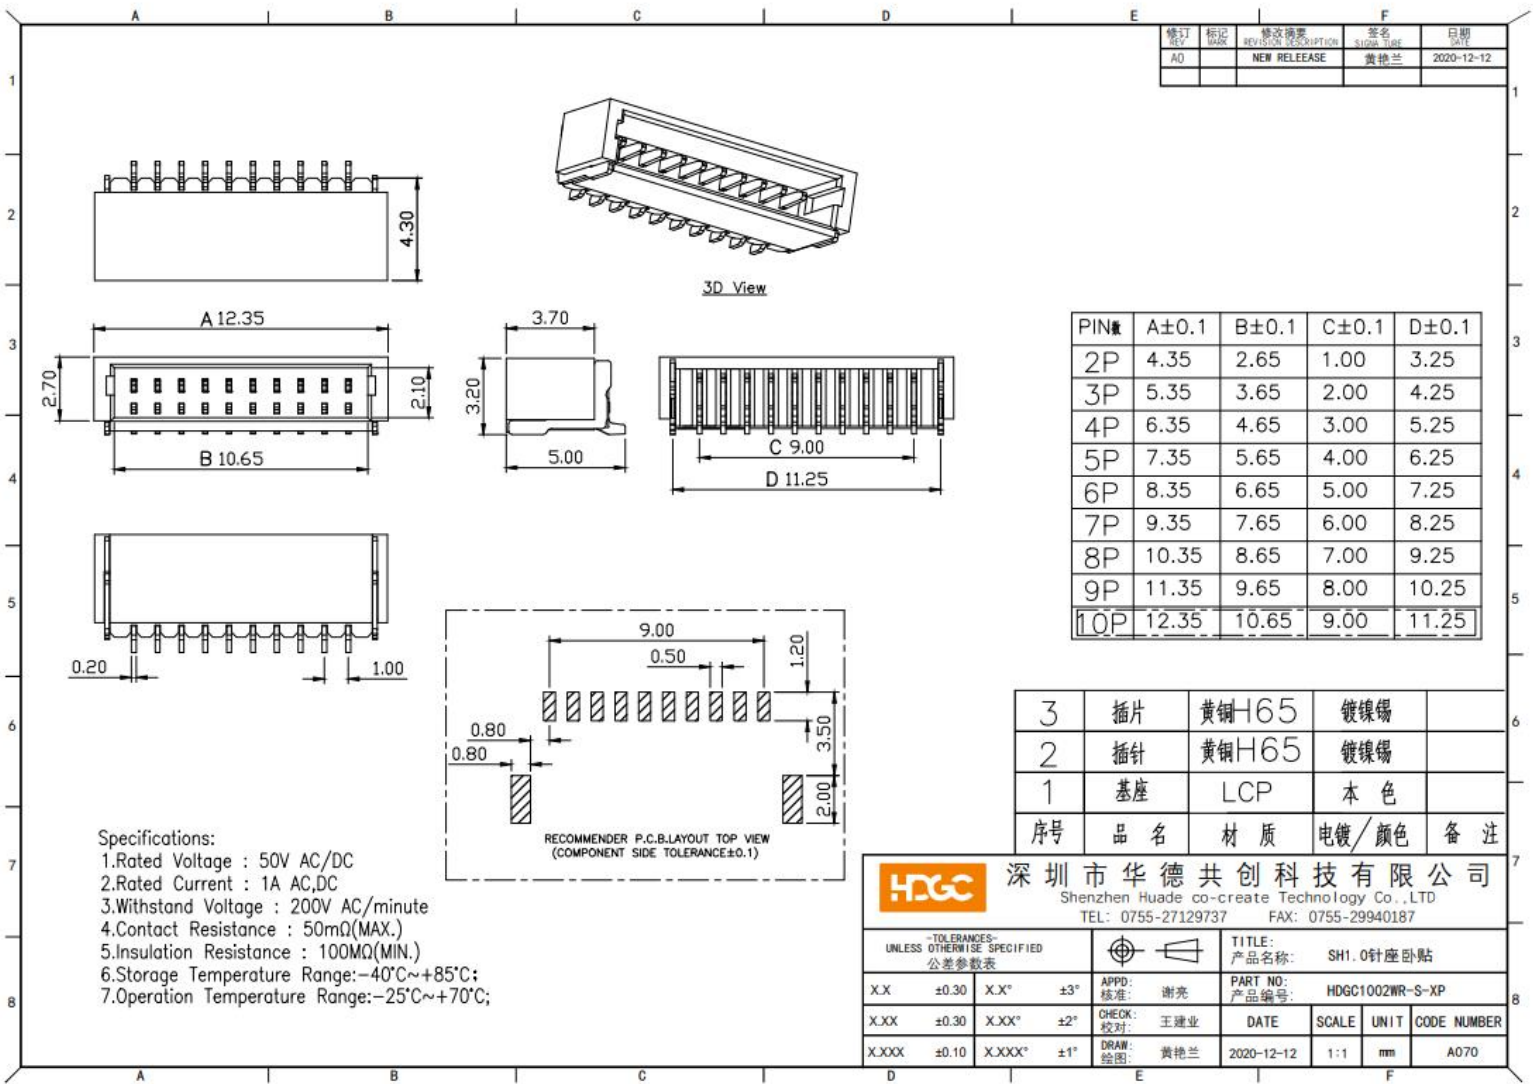


Design End

Vendor: HDGC1002H-5P




High Speed USB2.0 To CAN FD Converter  
Data Field Up to 12M Max  
Compatible With PCAN Software

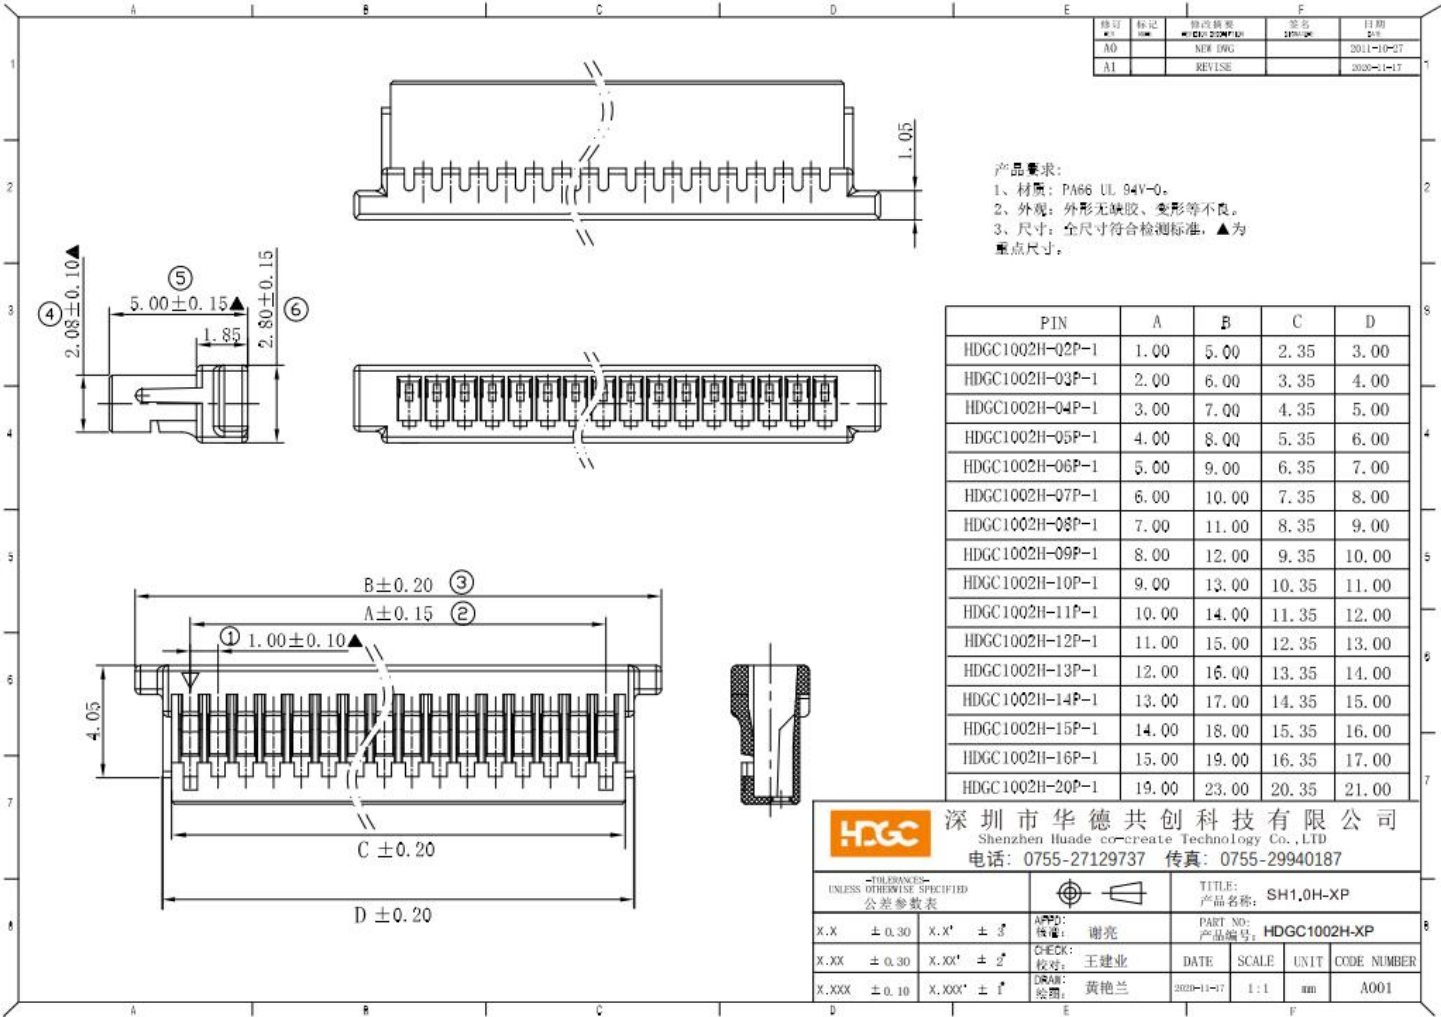

MINIPCIE Connector

Vendor: Lotes, AAA-PCI-049-K01

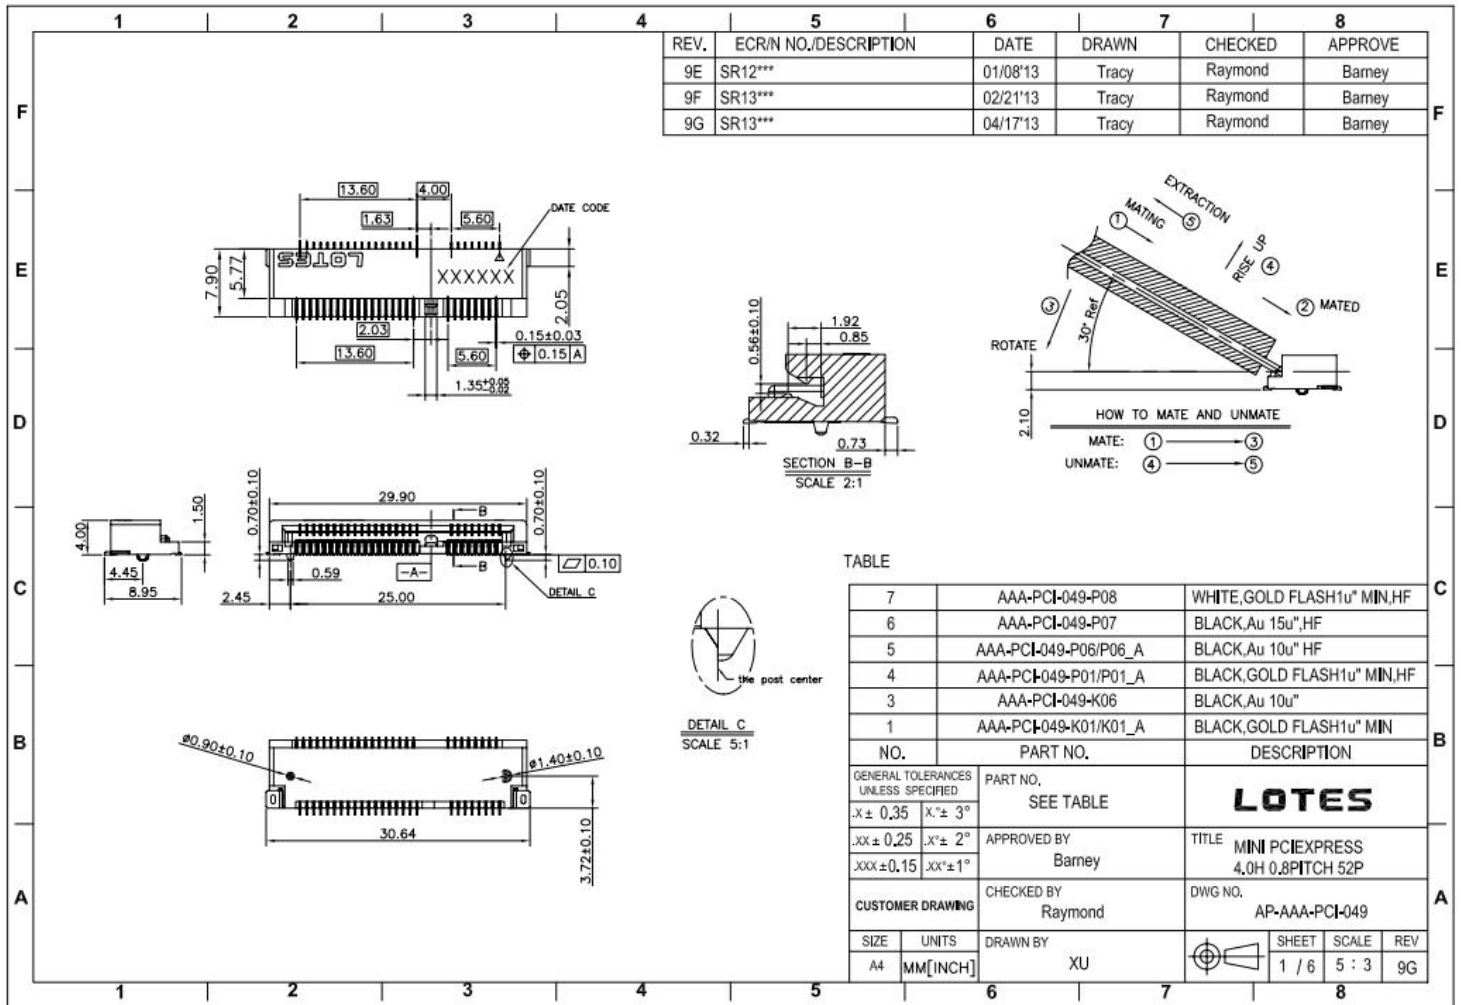

## 3 Connection


### 3.1 Enable/Disable Build In 120Ω Term Resistor

Products **comes enable build in 120Ω term resistor in default.**



If you need external connection of 120Ω termination resistor

Please refer to [chapter 5 Appendix A-ID Setting Reference](#) learn how deactivated it.

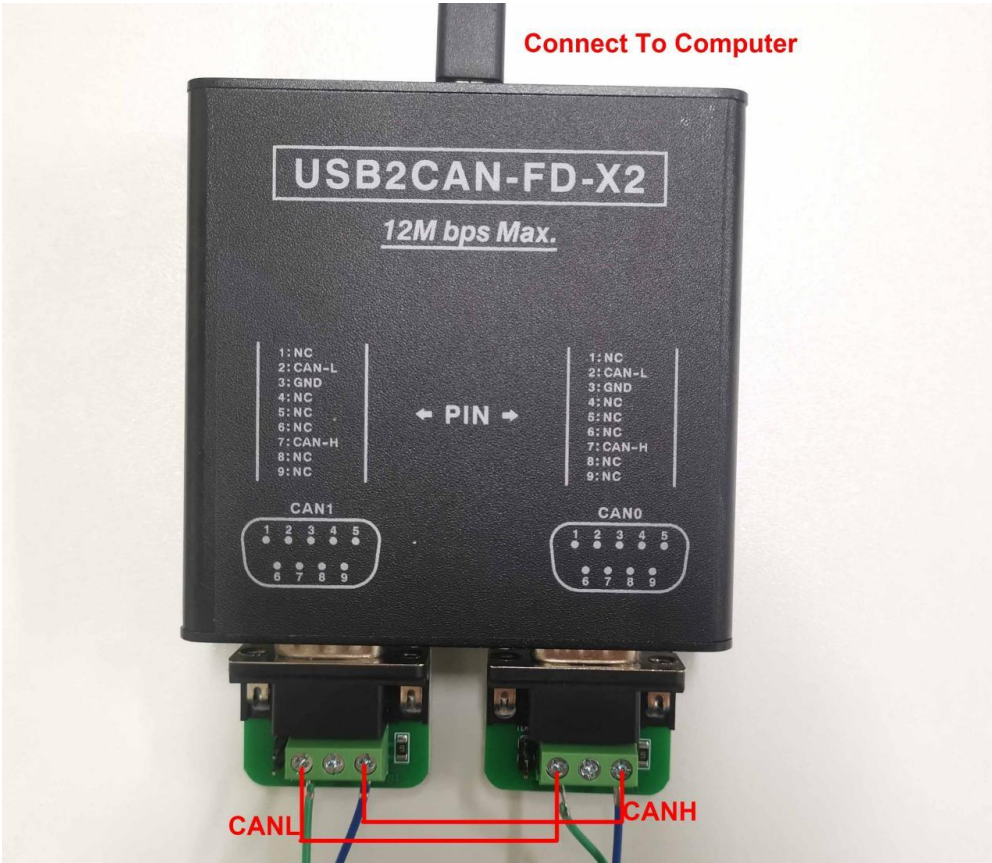3.2 USB2CANFD-X2/PU2CANFD-C Connection





Notes:

	
Note: Remove jumper When build in 120Ω termination resistor <b>Enable</b> .	Note: Add jumper When build in 120Ω termination resistor <b>Disable</b> .




### 3.3 PU2CANFDX2-MPCIE Connection Figure

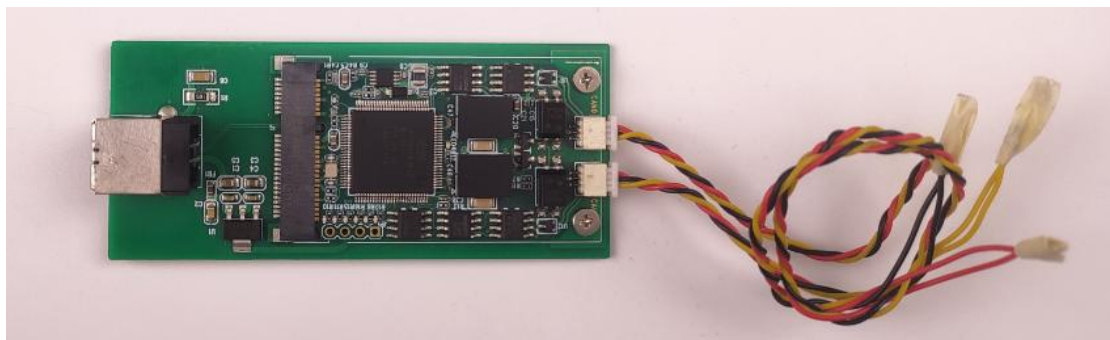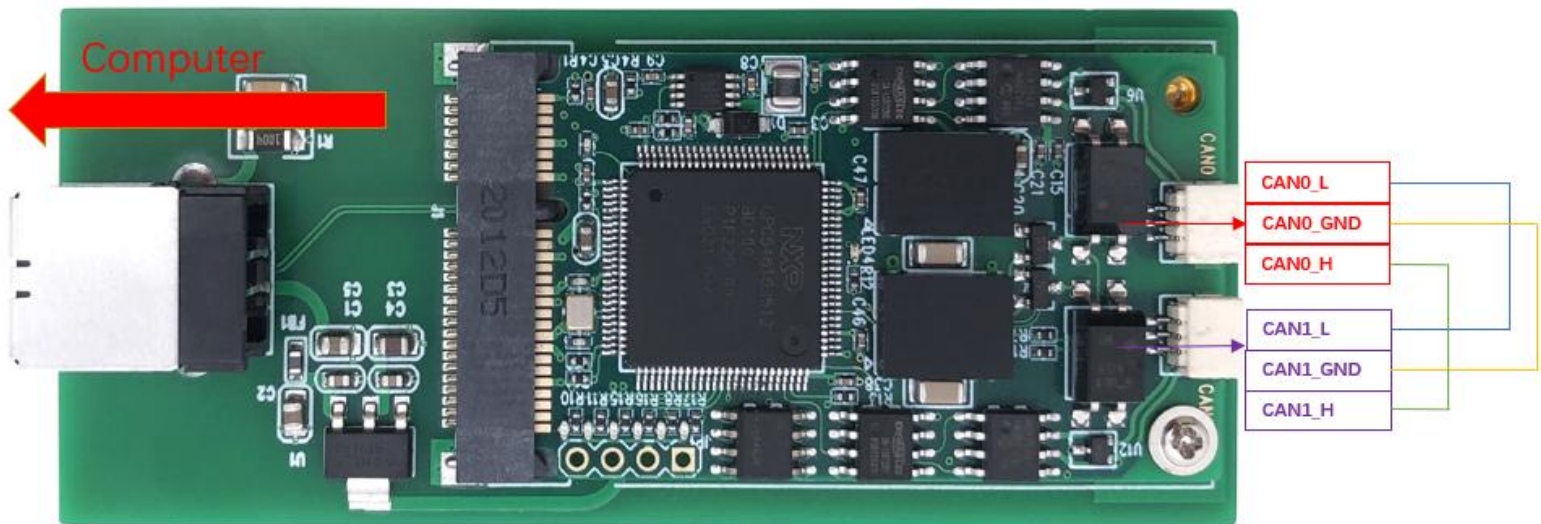

## 4 Software Description


### 4.1 PCANVIEW For Windows

This part is for USB2CANFD-X2 Windows Software PCANVIEW. Connect as below:

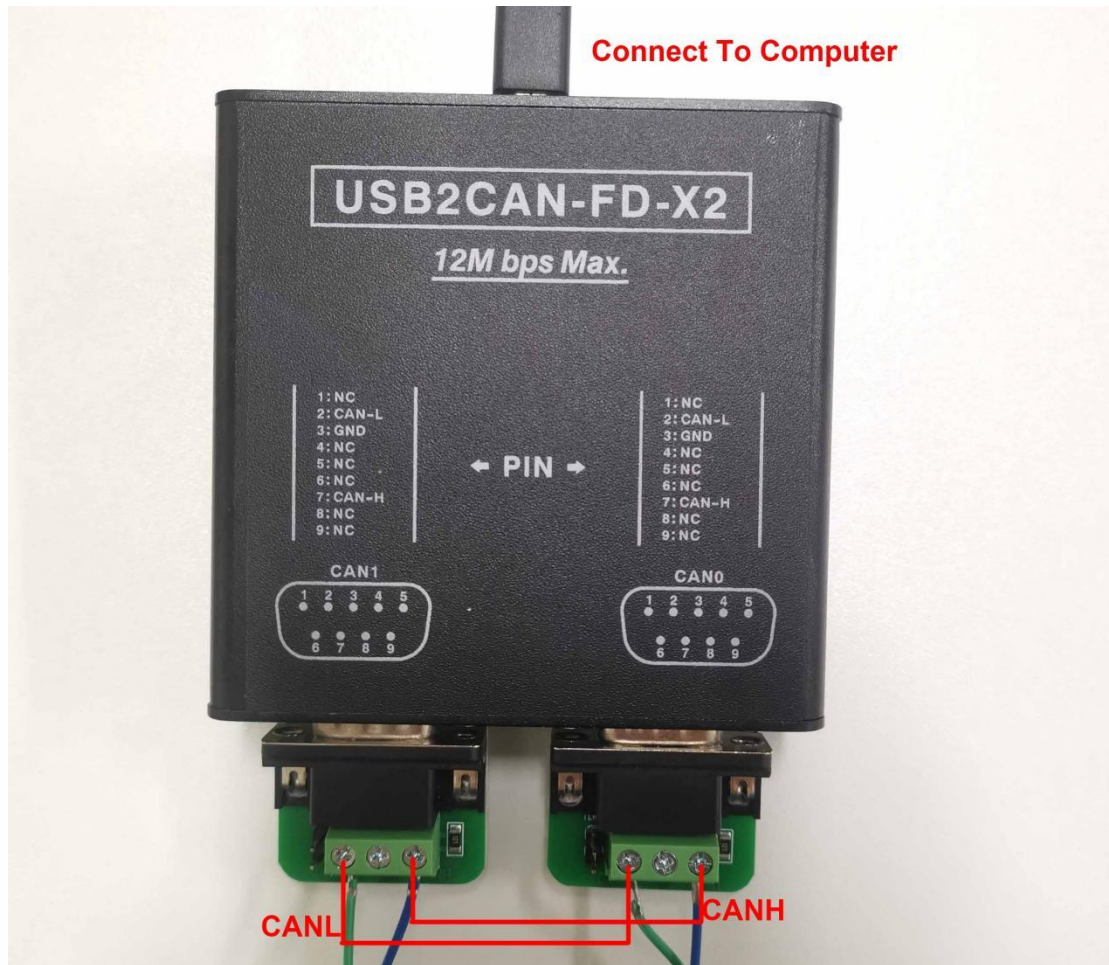

### 4.1.1 Installing drivers

- Connect the USB2CANFD-X2 Device to PC, drivers will recognize automatically;
- If not, Unzip PEAK-System\_Driver-Setup.zip and install PeakOemDrv.exe accordingly.
- After the driver is successfully recognized, the usb2canfd-x2 device can be viewed in device manager as shown in the following figure.

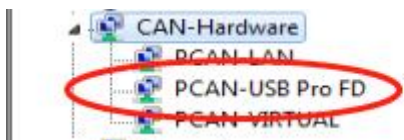

LED Indicate of Link is BLINKING.

### 4.1.2 Start and Initialize PCAN-View

Step1, Open 2 window of PCAN-View. The Connect dialog box appears

Step2, Select an interface from the list. (Channel1, Channel2 Setting as follows)

Step3, From the drop-down menu, choose a Clock Frequency. The selectable bit rates in the following are based on this setting

Step4, From the drop-down list, select a Nominal Bit rate, which is used for the arbitration phase (max. 1Mbit/s).

Step5. Enable the Data Bit rate checkbox.

Step6, From the drop-down menu, choose an additional Data Bit rate for the CAN FD bus. The bit rate selected here is used to transfer the data fields of a CAN FD frame with a higher bit rate.

Step7. Under Filter settings you can limit the range of CAN IDs to be received, either for standard frames (11-bit IDs) or for extended frames (29-bit IDs).

Step8. Activate the Listen-only mode if you do not actively take part in the CAN traffic and just want to observe. This also avoids an unintended disruption of an unknown CAN environment (e.g. due to different bit rates).



Step9. Confirm the settings in the dialog box with OK. The main window of PCAN-View appears (see Figure 14)

Set as below pictures for channel1 and channel 2.

Setting Value:



CANFD,Clock Frequency 60MHz,Nominal Bit Rate 1MBit/s,Data Bit Rate 12MBit/s

High Speed USB2.0 To CAN FD Converter  
Data Field Up to 12M Max  
Compatible With PCAN Software

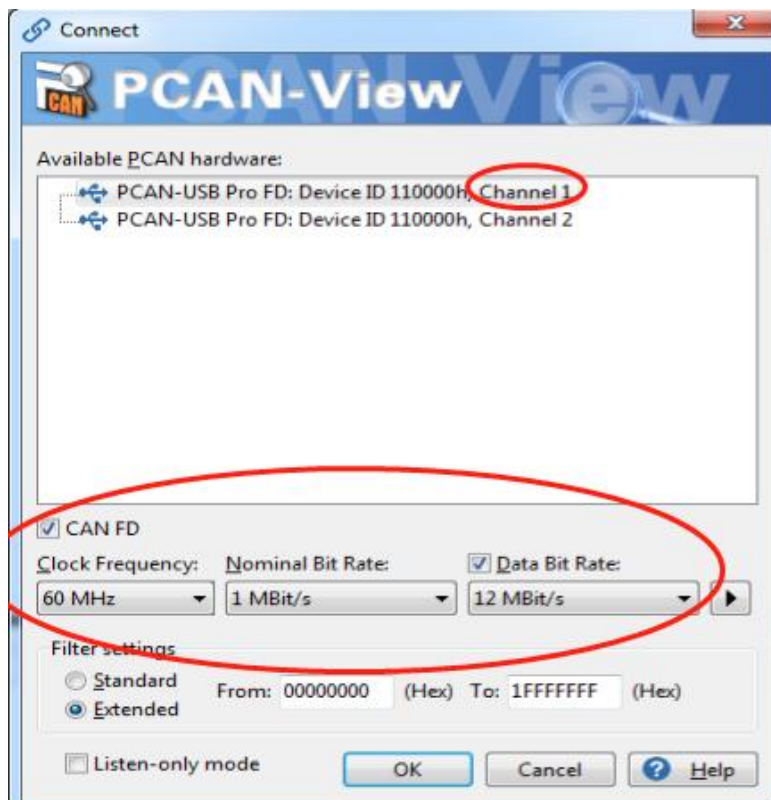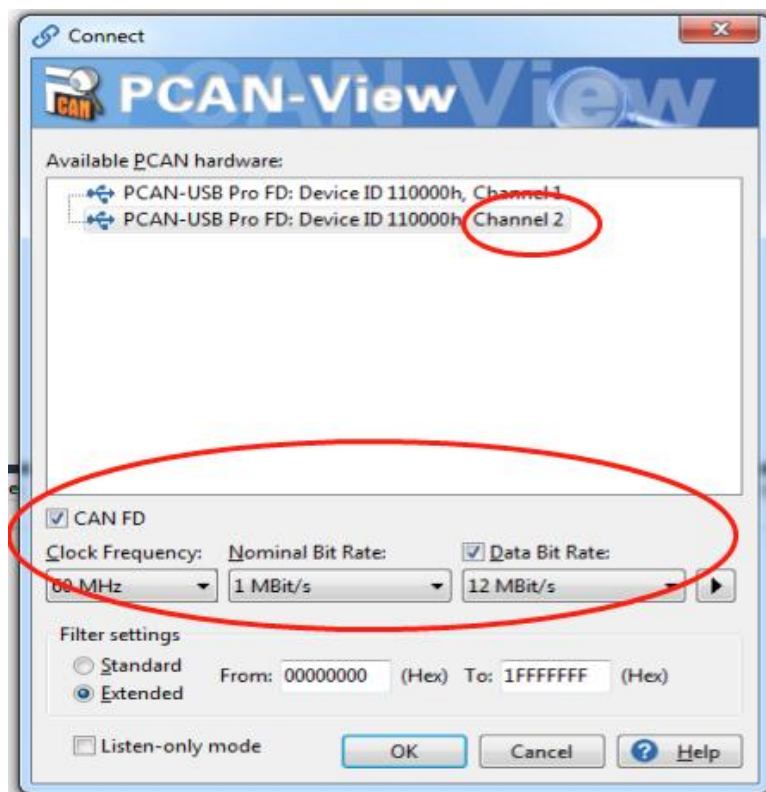



### 4.1.3 Receive/Transmit Tab

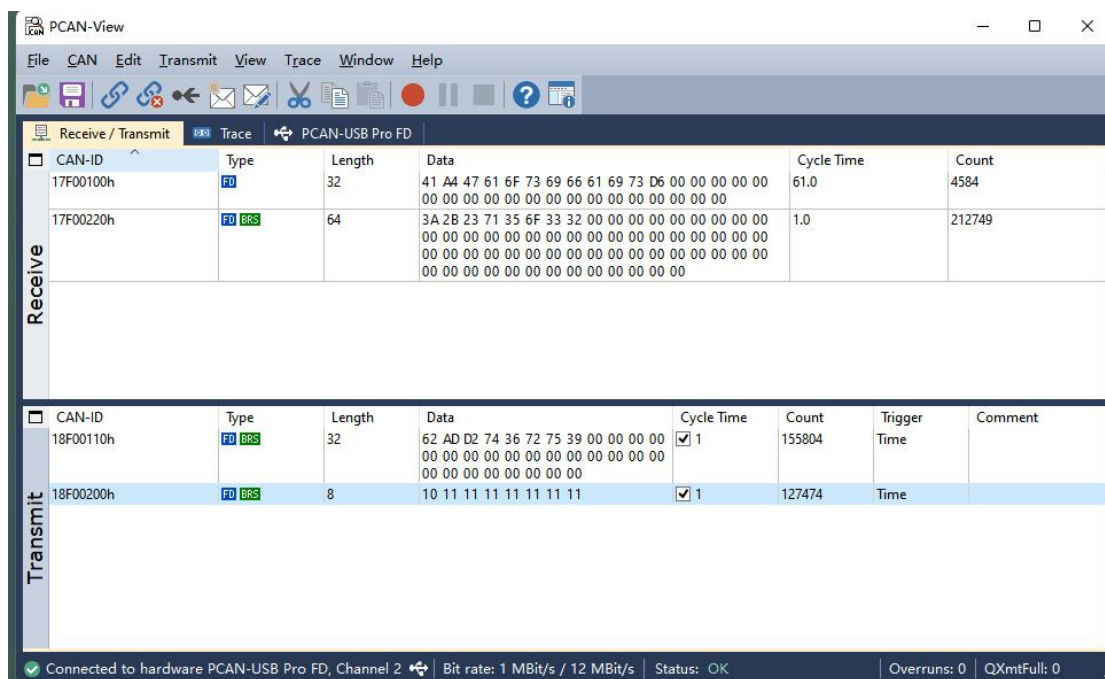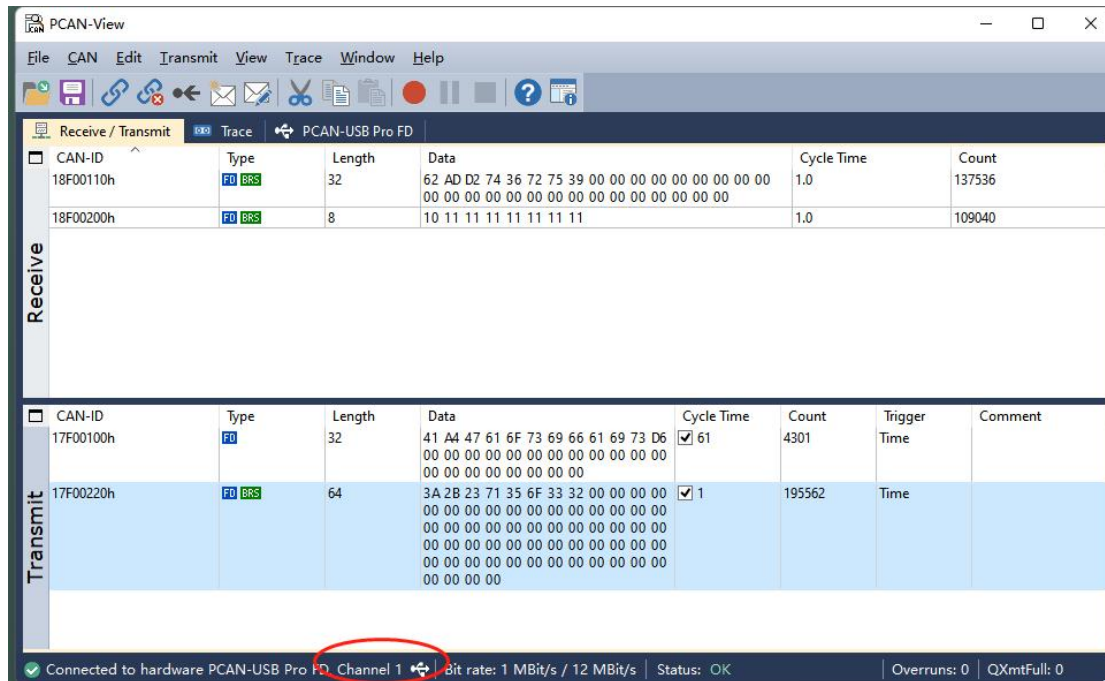

The Receive/Transmit tab is the main element of PCAN-View. It contains two lists, one for received messages and one for the transmit messages. The CAN data format is hexadecimal by default.

Do the following to transmit a CAN FD message:

1. Select the menu command Transmit > New Message

The dialog box New Transmit Message appears.



The screenshot shows the 'New Transmit Message' dialog box. The 'ID: (hex)' field contains '17F00100'. The 'Length:' dropdown is set to '32'. The 'Data: (hex)' field is a grid of 8 bytes, all set to '00'. Below the grid are indices 0 through 7. The 'Cycle Time:' field is set to '1' ms. There is a 'Paused' checkbox. The 'Message Type' section has four checkboxes: 'Extended Frame' (checked), 'CAN FD' (checked), 'Remote Request' (unchecked), and 'Bit Rate Switch' (checked). At the bottom is a 'Comment:' text box and three buttons: 'OK', 'Cancel', and 'Help'.

2. Enable the CAN FD checkbox to define a CAN FD message with a maximum Length of 64 data bytes.
3. Enter the ID, the data Length, and the CAN message Data. With a length of more than 8 bytes, click on and enter the data bytes into the editor.
4. Enter a value into the Cycle Time field to choose manually or periodically message transmission. Enter a value greater than 0 to transmit periodically. Enter the value 0 to transmit only manually.
5. Enable the Bit Rate Switch checkbox, that the data of a CAN FD message is transmitted with the selected Data Bit rate.
6. Confirm the entries with OK. The created transmit message appears on the Receive/Transmit tab.
7. Trigger selected transmit messages manually with the menu command Transmit > Send (alternatively Space bar). The manual transmission for CAN messages being transmitted periodically is carried out additionally.



The PCAN-USB FD Pro tab contains some detailed information about the hardware and driver. In addition, you can assign a Device ID to the adapter. Thus, it can be uniquely identified while operating several PCAN-USB Pro FD adapters on a computer at the same time.


To identify a PCAN-USB Pro FD adapter, you first go to the dialog box for selecting the hardware of PCAN-View. In the list "Available PCAN hardware and PCAN-nets", you can perform a right-click on every USB adapter and execute the command "identify". Thereby, the LED of the corresponding adapter flashes shortly.

### CAN FD ISO-mode

The defined in the ISO 11898-standard is not compatible with the original protocol. PEAK-System takes this into account by supporting both protocol versions with their CAN FD interfaces.

If required, the user can switch to the CAN FD protocol used in the environment with the **Enable / Disable** button ("Non-ISO" and "ISO")

## 4.1.6 Bus Load Tab

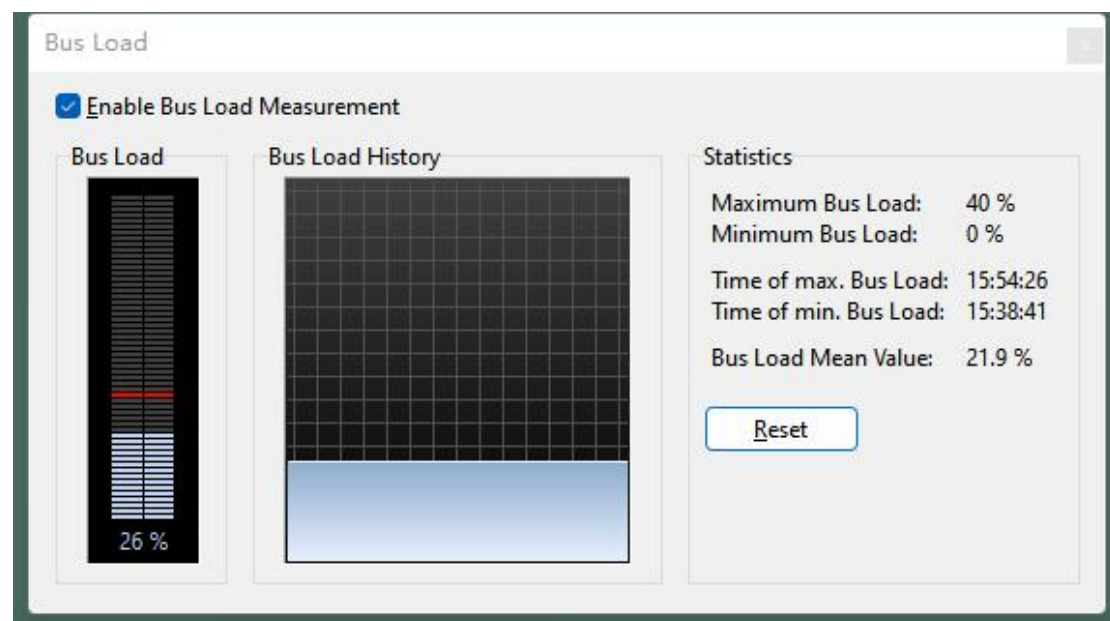

On the Bus Load tab, the current bus load, time course, and statistical information of the CAN channel are displayed. The CAN bus load reflects the utilization of transmission capacity.

## 4.1.7 Status Bar

The status bar shows information about the current CAN connection, about error counters (Overruns, QXmtFull) and shows error messages.

You can find further information about the use of PCAN-View in the help which you can invoke in the program via the Help menu or with the **F1** key

## 4.1.8 PCAN-Basic API

You can find files of the programming interface PCAN-Basic in the directory branch Develop. This API provides basic functions for linking own programs to CAN and CAN FD interfaces by PEAK-System and can be used for the following

operating systems:

- Windows 10, 8.1, 7(32/64-bit)
- Windows CE 6.x (x86/ARMv4)
- Linux (32/64-bit)

The API is designed for cross-platform use. Therefore software projects can easily be ported between platforms with low efforts. For all common programming languages examples are available. Beginning with version 4, PCAN-Basic supports the new CAN FD standard (CAN with Flexible Data Rate) which is primarily characterized by higher bandwidth for data transfer.

More details please refer to: <https://www.peak-system.com>

## 3.8.1 Features of PCAN-Basic

- API for developing applications with CAN and CAN FD connection
- Access to the CAN channels of a PCAN-Gateway via the new PCAN-LAN device type
- Supports the operating systems Windows 10, 8.1, 7 (32/64-bit), Windows CE 6.x, and Linux (32/64-bit)
- Multiple PEAK-System applications and your own can be operated on a physical channel at the same time
- Use of a single DLL for all supported hardware types
- Use of up to 16 channels for each hardware unit (depending on the PEAK CAN interface used)
- Simple switching between the channels of a PEAK CAN interface
- Driver-internal buffer for 32,768 messages per CAN channel
- Precision of time stamps on received messages up to 1  $\mu$ s (depending on the PEAK CAN interface used)

- Supports PEAK-System's trace formats version 1.1 and 2.0 (for CAN FD applications)
- Access to specific hardware parameters, such as listen-only mode Notification of the application through Windows events when a message is received
- Extended system for debugging operations
- Multilingual debugging output
- Output language depends on operating systems
- Debugging information can be defined individually
- Thread-safe API

### 3.8.2 Principle Description of the API

The PCAN-Basic API is the interface between the user application and device driver. In Windows operating systems this is a DLL (Dynamic Link Library).

The sequence of accessing the CAN interface is divided into three phases:

1. Initialization
2. Interaction
3. Completion

#### **Initialization**

A channel must be initialized before using it. This is done by the simple call of the function `CAN_Initialize` for CAN and `CAN_InitializeFD` for CAN FD. Depending on the type of the CAN hardware, up to 16 CAN channels can be opened at the same time. After a successful initialization the CAN channel is ready. No further configuration steps are required.

#### **Interaction**

For receiving and transmitting messages, the functions `CAN_Read` and `CAN_Write` as well as `CAN_ReadFD` and `CAN_WriteFD` are available. Additional settings can be made, e.g. setting up message filters for specific CAN IDs or the listen-only mode for the CAN controller.

When receiving CAN messages, events are used for an automatic notification of an application (client). This offers the following advantages:

- The application no longer needs to check for received messages periodically (no polling).
- The response time at reception is reduced.

#### **Completion**

To end the communication the function `CAN_Uninitialize` is called in order to release the reserved resources for the CAN channel, among others. In addition the CAN channel is marked as "Free" and is available to other applications.

## 4.2 PCANVIEW For Linux

Our DEMO is for **Ubuntu 18.04 64bits system**, For other System,

**Please Refer To:** <https://www.peak-system.com/fileadmin/media/linux/index.htm>

### 4.2.1 Driver Install

**Step1, Install the Necessary Package First**

```
sudo apt-get install gcc  
sudo apt-get install g++  
sudo apt-get install libpopt-dev
```

Step2, Download Driver form below link, we use V8.13.0

<https://www.peak-system.com/fileadmin/media/linux/version-history.html>



**Step3, make and install drivers**

```
tar -xzf peak-linux-driver-8.13.0.tar.gz  
cd peak-linux-driver-8.13.0/  
make clean  
make  
sudo make install
```

### 4.2.2 PCAN-View for Linux

Software for Displaying CAN and CAN FD Messages PCAN-View is a simple CAN monitor software for receiving and transmitting CAN and CAN FD messages PCAN-View for Linux is based on the NCurses library

**Step1, System requirements:**

This software requires the chardev driver Please use the [Driver Package for Proprietary Purposes](#)

## Step2, Install PCAN-View via repository

Installing software through repository needs first to register the repository only once. Next to the first installation of the software, there is nothing you have to do, except installing available updates when prompted by your system.

### Step1 Download and install the following file `peak-system.list` from the PEAK-System website:

```
wget -q http://www.peak-system.com/debian/dists/lsb_release  
-cs / peak-system list -O- sudo tee / etc/ apt/ sources list d/ peak-system list
```

```
innomaker@innomaker:~/Downloads/peak-linux-driver-8.13.0$ wget -q http://www.peak-system.com/debian/dists/lsb_release -cs`/peak-system.list -O- | sudo tee /etc/apt/sources.list.d/peak-system.list  
deb http://www.peak-system.com/debian bionic non-free  
#deb-src http://www.peak-system.com/debian bionic non-free
```

Note: If the `lsb_release` tool is not installed on your Linux system then replace ``lsb_release -cs`` by the name of your Linux distribution For example:

```
wget -q  
http://www.peak-system.com/debian/dists/wheezy/ peak-system list -O-  
sudo tee / etc/ apt/ sources list d/ peak-system list
```

### Step2 Download and install the PEAK-System public key for apt-secure so that the repository is trusted:

```
wget -q http://www.peak-system.com/debian/ peak-system-public-key.asc  
-O- sudo apt-key add -
```

```
innomaker@innomaker:~/Downloads/peak-linux-driver-8.13.0$ wget -q http://www.peak-system.com/debian/peak-system-public-key.asc -O- | sudo apt-key add -  
OK
```

### Step3 Install Pcanview-ncurses

```
sudo apt-get update
```

```
sudo apt-get install pcanview-ncurses
```




High Speed USB2.0 To CAN FD Converter  
Data Field Up to 12M Max  
Compatible With PCAN Software

```
innomaker@innomaker:~/Downloads/peak-linux-driver-8.13.0$ sudo apt-get install pcانview-ncurses
Reading package lists... Done
Building dependency tree
Reading state information... Done
The following packages were automatically installed and are no longer required:
  libegl1-mesa libwayland-egl1-mesa
Use 'sudo apt autoremove' to remove them.
The following NEW packages will be installed:
  Terminalw-ncurses
0 upgraded, 1 newly installed, 0 to remove and 8 not upgraded.
Need to get 80.7 kB of archives.
After this operation, 169 kB of additional disk space will be used.
Get:1 http://www.peak-system.com/debian bionic/non-free amd64 pcانview-ncurses amd64 0.9.1-0 [80.7 kB]
Fetched 80.7 kB in 1s (66.4 kB/s)
Selecting previously unselected package pcانview-ncurses:amd64.
(Reading database ... 170478 files and directories currently installed.)
Preparing to unpack .../pcانview-ncurses_0.9.1-0_amd64.deb ...
Unpacking pcانview-ncurses:amd64 (0.9.1-0) ...
Setting up pcانview-ncurses:amd64 (0.9.1-0) ...
```

## 4.2.3 Transmit/Received Data

### Step1,

Connect hardware to your pc As below, please add on the jumper for 120Ω jumper.

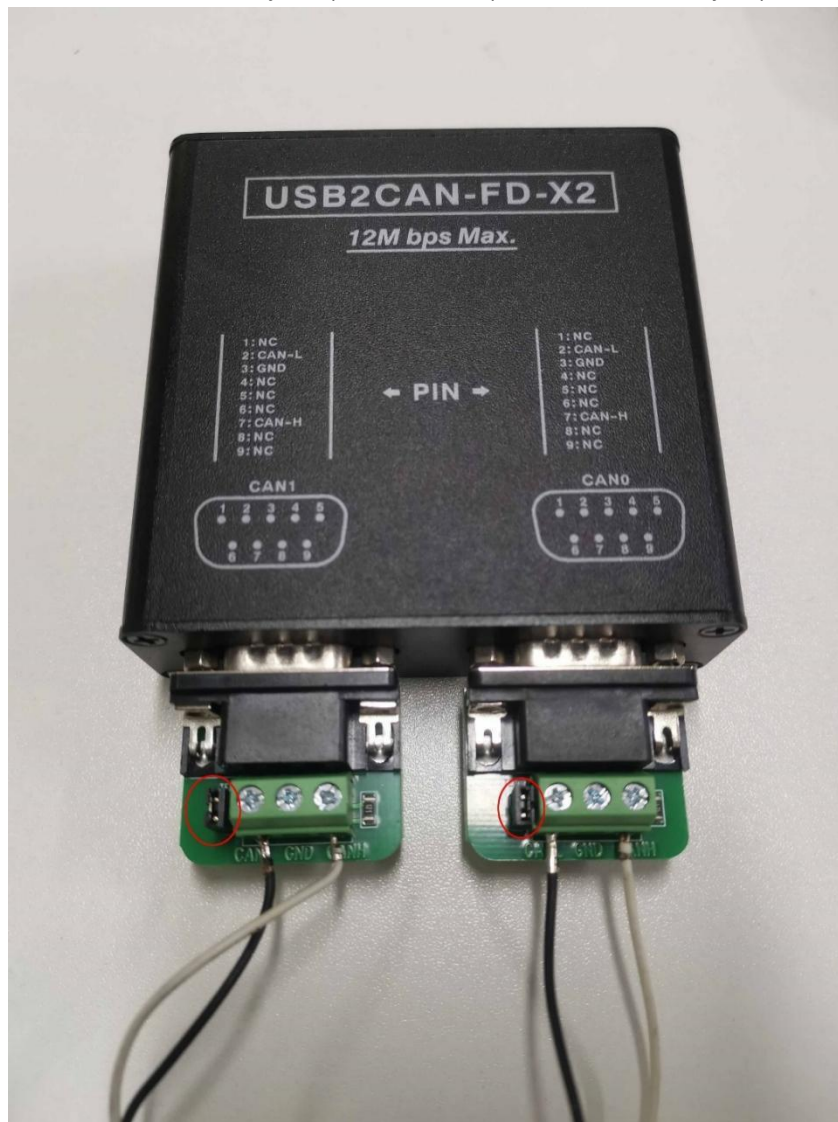





Step2, Open 2 termination window ,One for can0, One for can1


```
cd /usr/bin
```

```
./pcanview
```


choose the same Nominal/Data Bitrate

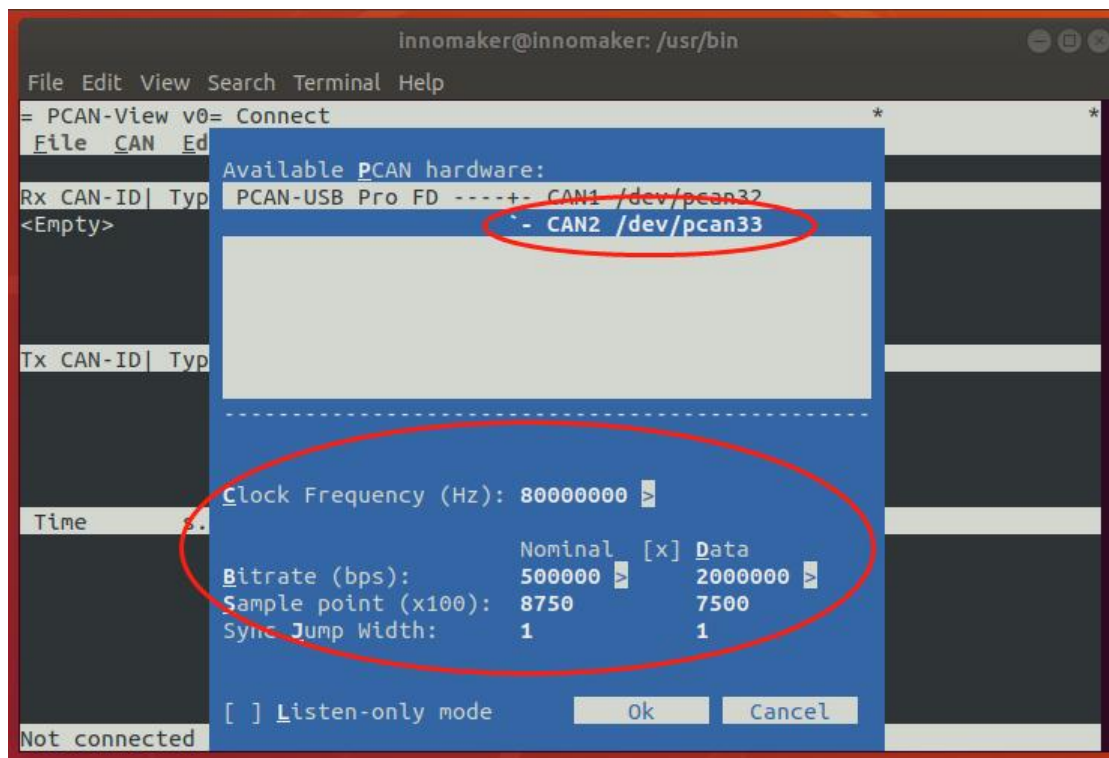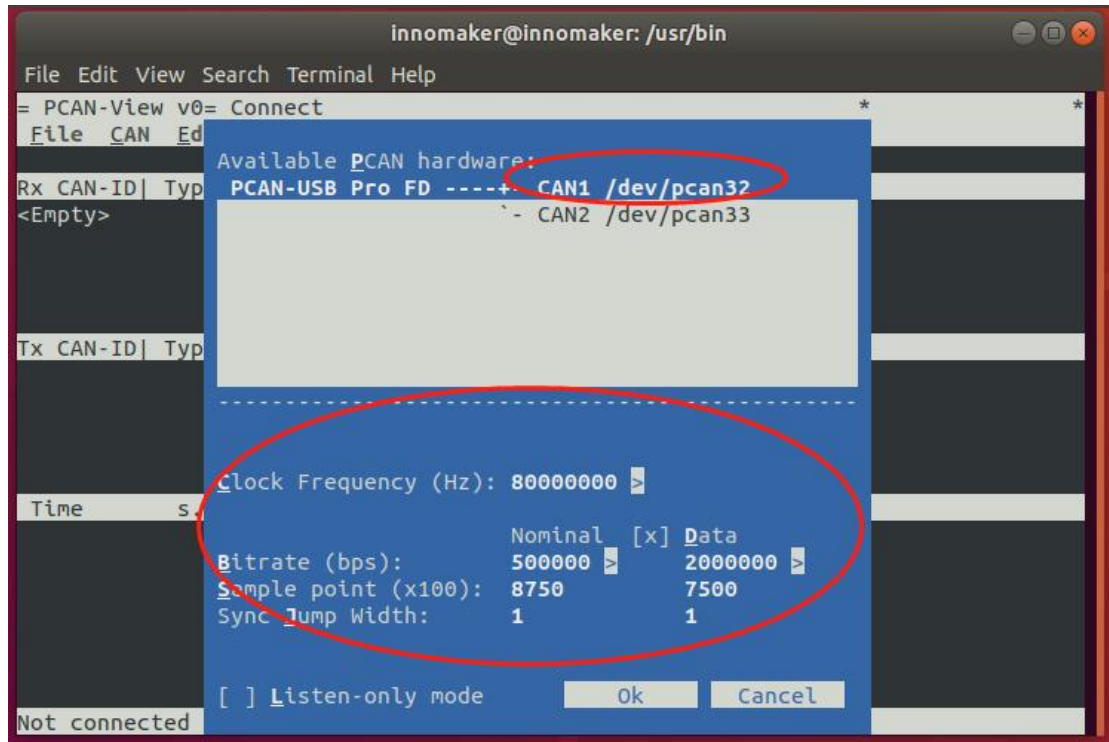


Step3, Create New Message for can0 and can1

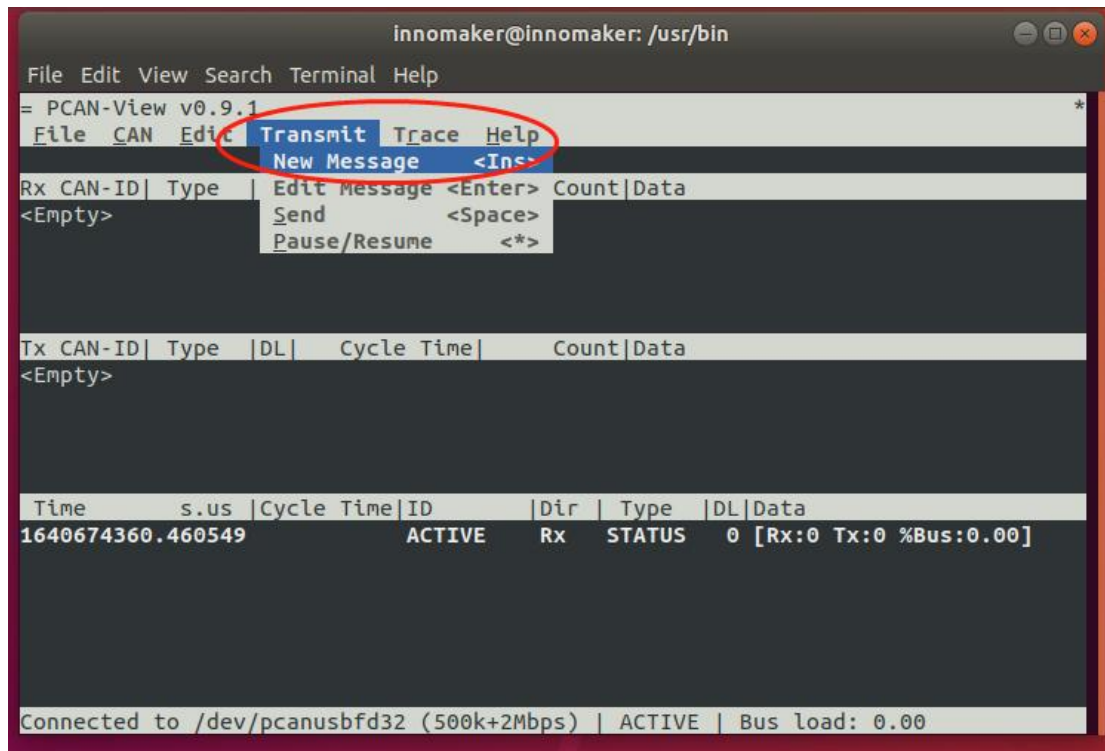


Remember choose bit rate switch

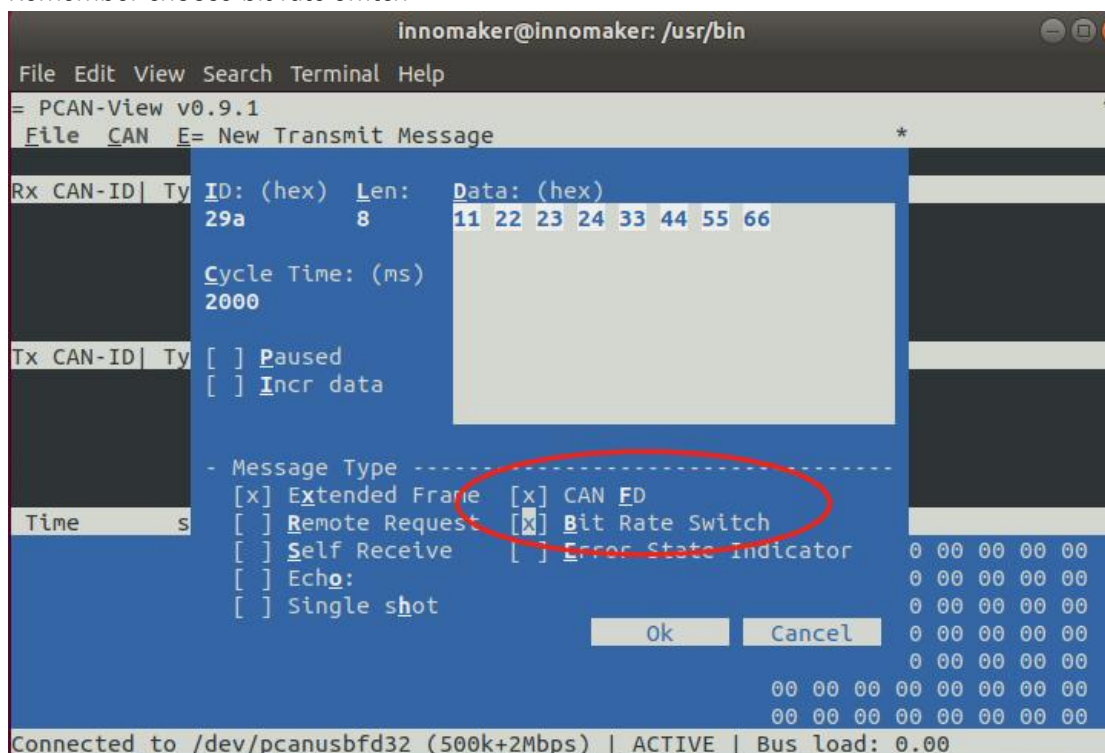

Effect: (Note: )

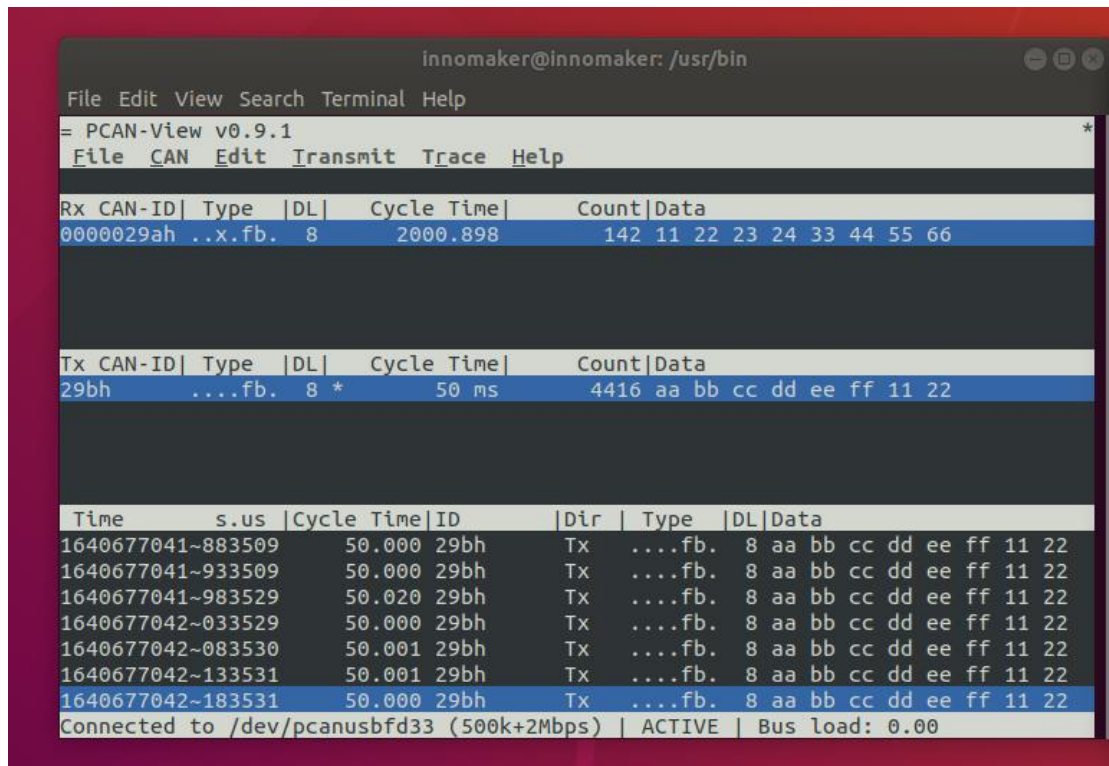

To show DATA Length 64bit, Must Maxmum Preview window

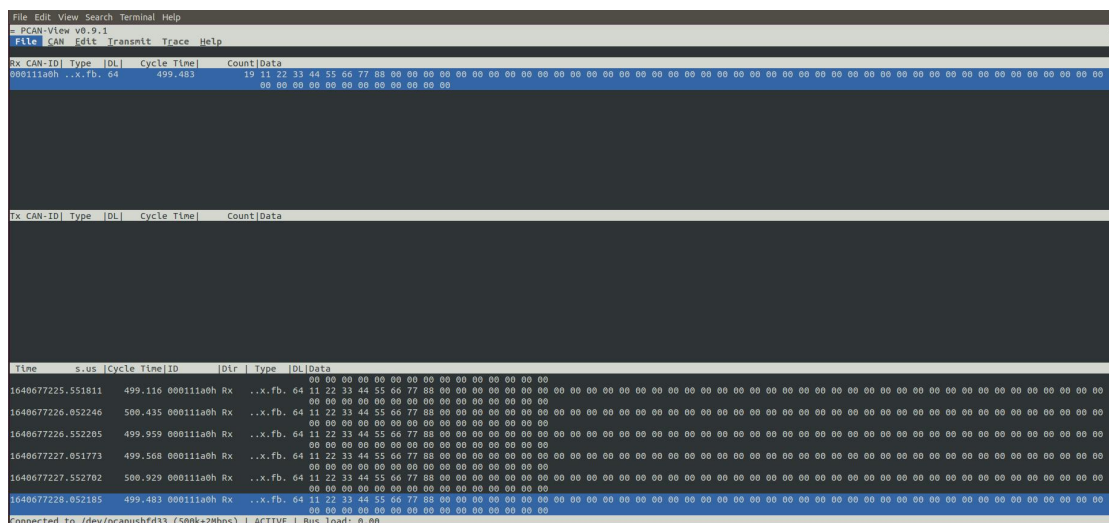






## 4.3 CAN-UTILS/C/Python For Linux

(USE AS SOCKET CAN)

### 4.3.1 Linux Support List

USB2CANFD-X2 device can run properly without any additional driver request on all Linux



system as below.

	amd64	i386	arm64	armhf	ppc64el
Ubuntu:					
Trusty 14.04 LTS					
Xenial 16.04 LTS					
Bionic 18.04 LTS					
Cosmic 18.10					
Disco 19.04					
Eoan 19.10					
Focal 20.04 LTS					
Groovy 20.10					
Hirsute 21.04					
OpenSUSE Tumbleweed	see Xenial				
Debian:					
Wheezy 7.11					
Jessie 8.11					
Stretch 9.9					
Buster 10					
Bullseye 11					



### 4.3.2 Hardware Connection

Connect device to your Linux computer As below picture and follow chapter 2.2 to activated 120Ω resistor by hardware, use the 2pcs db9 to termination board we provide and **put on jumper in red circle**.

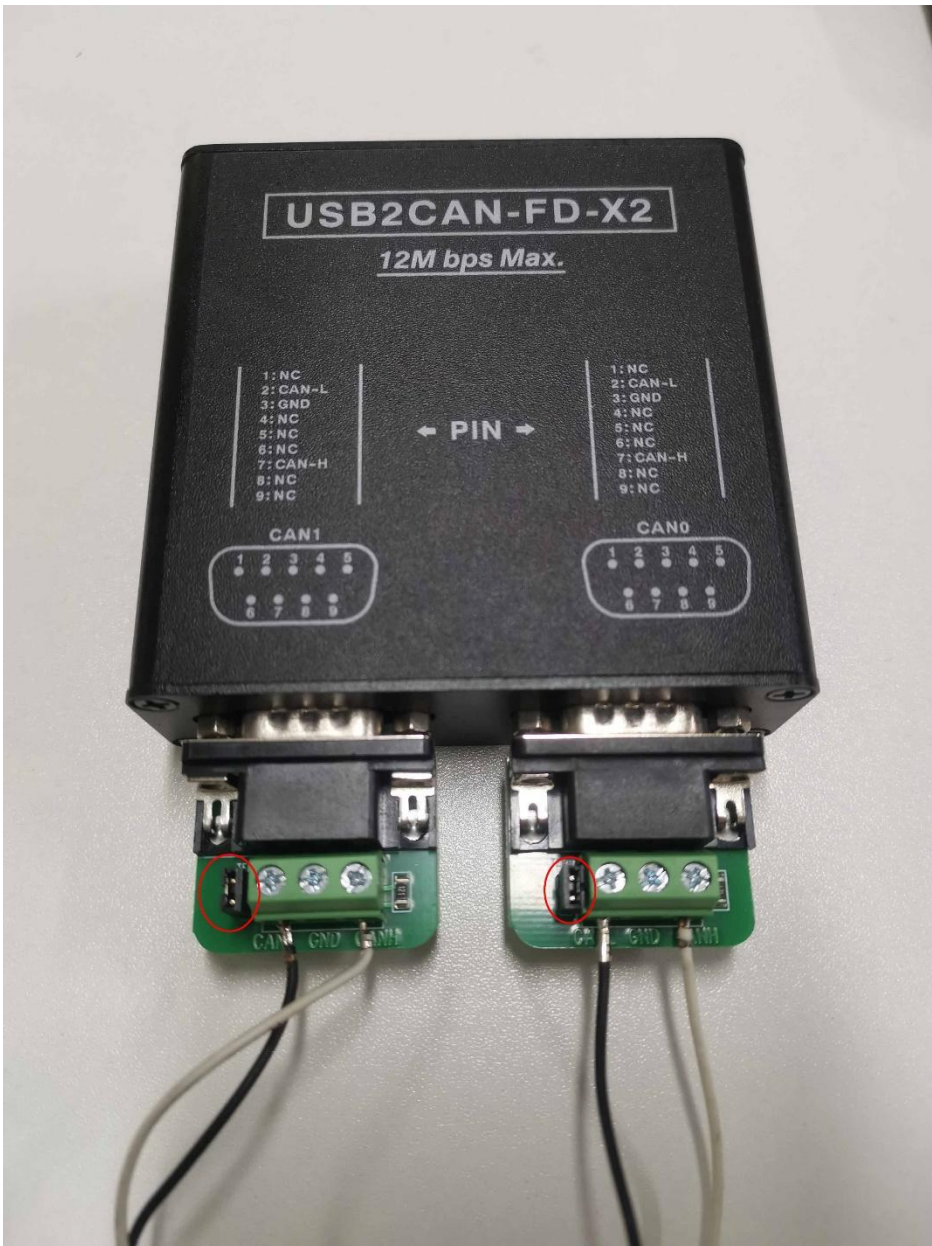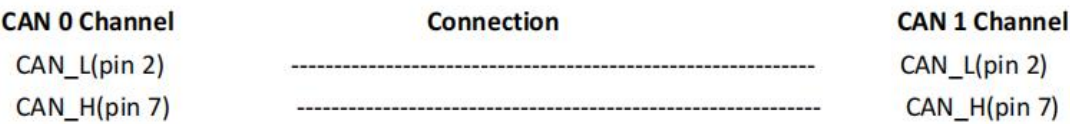

LED Indication should be as below picture:



### 4.3.3 CAN-UTILS DEMO

#### Prepare

Type command `ifconfig -a` to check 'can0' and 'can1' device is available in system, if you can not find the command `ifconfig`, use command `sudo apt-get install net-tools`

```
Virtual-machine:~$ ifconfig -a
can0: flags=128<NOARP>  mtu 16
    unspec 00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00  txqueuelen 10  (UNSPEC)
    RX packets 0  bytes 0 (0.0 B)
    RX errors 0  dropped 0  overruns 0  frame 0
    TX packets 0  bytes 0 (0.0 B)
    TX errors 0  dropped 0 overruns 0  carrier 0  collisions 0

can1: flags=128<NOARP>  mtu 16
    unspec 00-00-00-00-00-00-00-00-00-00-00-00-00-00-00-00  txqueuelen 10  (UNSPEC)
    RX packets 0  bytes 0 (0.0 B)
    RX errors 0  dropped 0  overruns 0  frame 0
    TX packets 0  bytes 0 (0.0 B)
    TX errors 0  dropped 0 overruns 0  carrier 0  collisions 0
```

Type command `dmesg` to check more information

```
[ 4334.851804] usb 1-1: new high-speed USB device number 6 using ehci-pci
[ 4335.120375] usb 1-1: New USB device found, idVendor=0c72, idProduct=0011, bcdDevice= 0.00
[ 4335.120380] usb 1-1: New USB device strings: Mfr=1, Product=2, SerialNumber=0
[ 4335.120384] usb 1-1: Product: PCAN-USB Pro FD
[ 4335.120385] usb 1-1: Manufacturer: PEAK-System Technik GmbH
[ 4335.137143] peak_usb 1-1:1.0: PEAK-System PCAN-USB Pro FD v2 fw v3.2.0 (2 channels)
[ 4335.143995] peak_usb 1-1:1.0 can0: attached to PCAN-USB Pro FD channel 0 (device 0)
[ 4335.151388] peak_usb 1-1:1.0 can1: attached to PCAN-USB Pro FD channel 1 (device 0)
```

Type command `sudo apt-get install can-utils` to install can-utils.

Note:

This tool is a very easy way to test USB2CANFD-X2 module communication. There is only a simple use instruction. For more details, please refer to can-utils user manual and source code. <https://github.com/linux-can/can-utils/>

#### Send/Receive


Initialize CAN port, Open two termination command for can0 and can1.

`sudo ip link set can0 down`

```
sudo ip link set can0 up type can bitrate 50000 dbitrate 2000000 fd on
```

```
sudo ip link set can1 down
```

```
sudo ip link set can1 up type can bitrate 50000 dbitrate 2000000 fd on
```

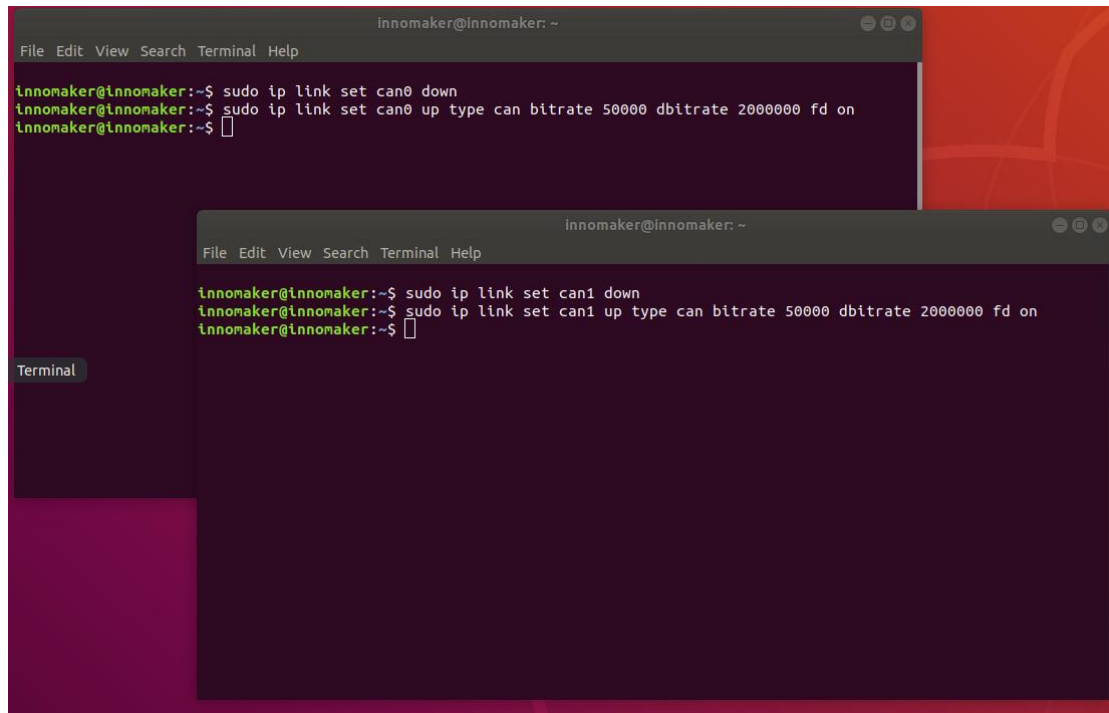

The image shows two terminal windows. The top window has a title bar 'innomaker@innomaker: ~' and a menu bar 'File Edit View Search Terminal Help'. It contains the following commands and output:

```
innomaker@innomaker:~$ sudo ip link set can0 down
innomaker@innomaker:~$ sudo ip link set can0 up type can bitrate 50000 dbitrate 2000000 fd on
innomaker@innomaker:~$
```

The bottom window also has a title bar 'innomaker@innomaker: ~' and a menu bar 'File Edit View Search Terminal Help'. It contains the following commands and output:


```
innomaker@innomaker:~$ sudo ip link set can1 down
innomaker@innomaker:~$ sudo ip link set can1 up type can bitrate 50000 dbitrate 2000000 fd on
innomaker@innomaker:~$
```

<1>Set can0 as receiver

```
candump can0
```

<2>Set can1 as sender

```
cansend can1 500#1E.10.10
```

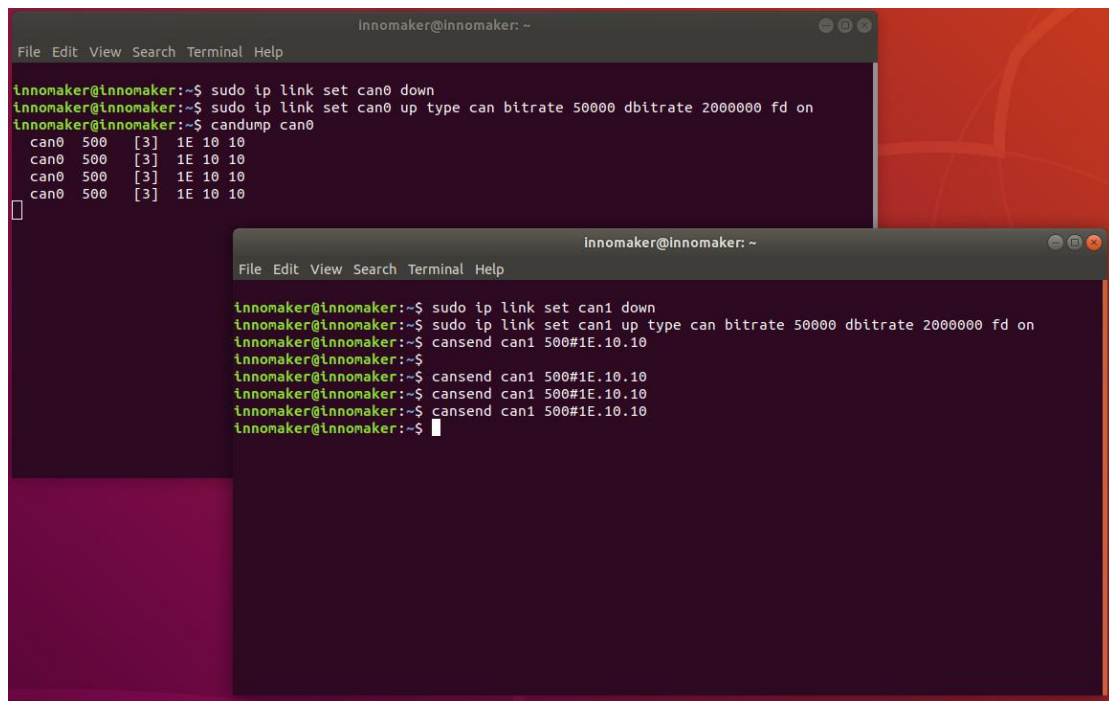

The image shows two terminal windows. The top window displays the configuration of the CAN0 interface, including setting it down, up, and configuring its type, bitrate, and data field size. The bottom window shows the configuration of the CAN1 interface and the transmission of three data frames.

```
innomaker@innomaker: ~  
File Edit View Search Terminal Help  
innomaker@innomaker:~$ sudo ip link set can0 down  
innomaker@innomaker:~$ sudo ip link set can0 up type can bitrate 50000 dbitrate 2000000 fd on  
innomaker@innomaker:~$ candump can0  
can0 500 [3] 1E 10 10  
can0 500 [3] 1E 10 10  
can0 500 [3] 1E 10 10  
can0 500 [3] 1E 10 10  
innomaker@innomaker:~$  
  
innomaker@innomaker: ~  
File Edit View Search Terminal Help  
innomaker@innomaker:~$ sudo ip link set can1 down  
innomaker@innomaker:~$ sudo ip link set can1 up type can bitrate 50000 dbitrate 2000000 fd on  
innomaker@innomaker:~$ cansend can1 500#1E.10.10  
innomaker@innomaker:~$  
innomaker@innomaker:~$ cansend can1 500#1E.10.10  
innomaker@innomaker:~$ cansend can1 500#1E.10.10  
innomaker@innomaker:~$ cansend can1 500#1E.10.10  
innomaker@innomaker:~$  
innomaker@innomaker:~$
```

### 4.3.4 C Demo


<1>Send CAN0 As Receiver,

`sudo ./can0_receive_fd`

<2>Set CAN1 As Sender

`sudo ./can1_send_fd`



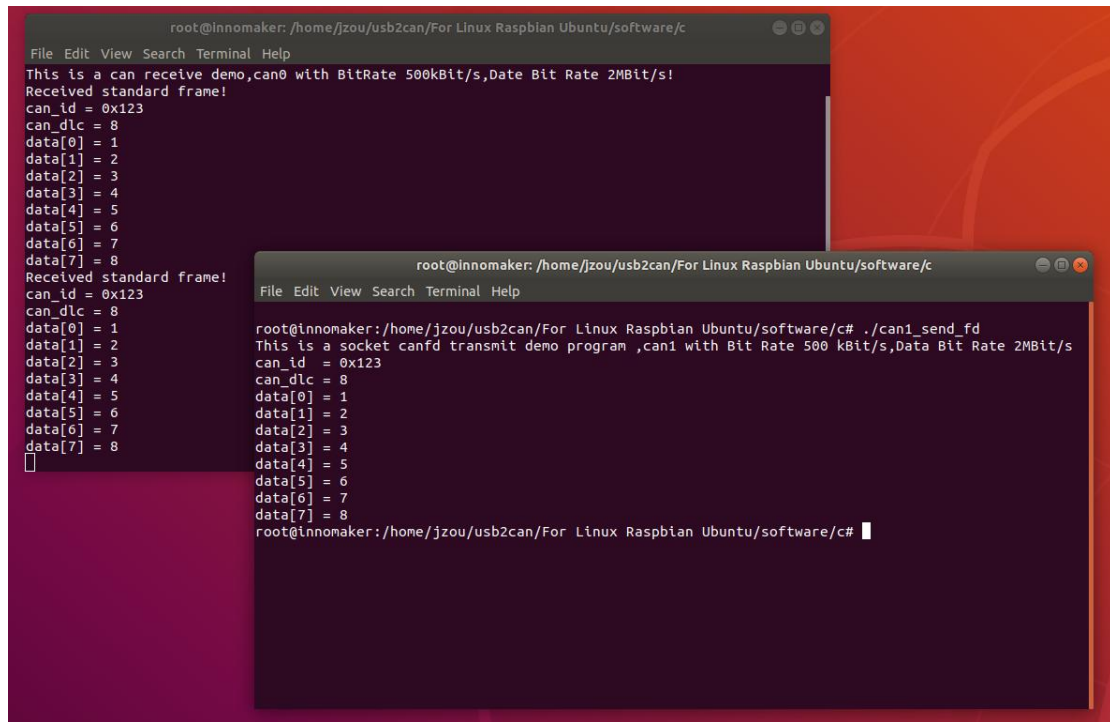


```
root@innomaker: /home/jzou/usb2can/For Linux Raspbian Ubuntu/software/c
File Edit View Search Terminal Help
This is a can receive demo,can0 with BitRate 500kBit/s,Data Bit Rate 2MBit/s!
Received standard frame!
can_id = 0x123
can_dlc = 8
data[0] = 1
data[1] = 2
data[2] = 3
data[3] = 4
data[4] = 5
data[5] = 6
data[6] = 7
data[7] = 8
Received standard frame!
can_id = 0x123
can_dlc = 8
data[0] = 1
data[1] = 2
data[2] = 3
data[3] = 4
data[4] = 5
data[5] = 6
data[6] = 7
data[7] = 8
█

root@innomaker: /home/jzou/usb2can/For Linux Raspbian Ubuntu/software/c# ./can1_send_fd
File Edit View Search Terminal Help
root@innomaker: /home/jzou/usb2can/For Linux Raspbian Ubuntu/software/c# ./can1_send_fd
This is a socket canfd transmit demo program ,can1 with Bit Rate 500 kBit/s,Data Bit Rate 2MBit/s
can_id = 0x123
can_dlc = 8
data[0] = 1
data[1] = 2
data[2] = 3
data[3] = 4
data[4] = 5
data[5] = 6
data[6] = 7
data[7] = 8
root@innomaker: /home/jzou/usb2can/For Linux Raspbian Ubuntu/software/c# █
```

### 4.3.5 Python3 Demo

(1) Check the Python version of your Raspbian. Python 3.7.3 default in 2019-09-26-Raspbian.img. Our Demo can run on any Python3 version.

`python3 -V`

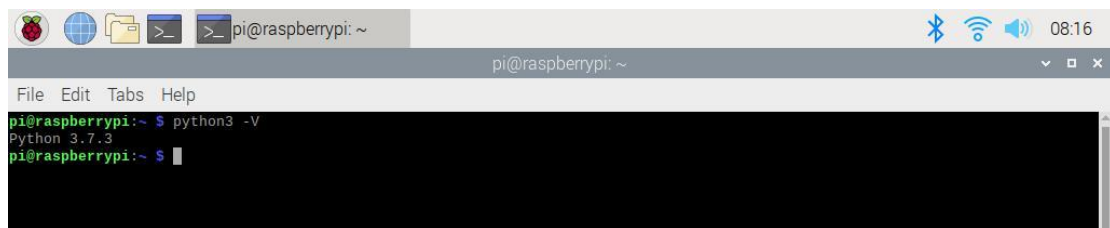

```
pi@raspberrypi: ~
File Edit Tabs Help
pi@raspberrypi:~ $ python3 -V
Python 3.7.3
pi@raspberrypi:~ $ █
```

(2) If you can't find the Python3 in system. Install the Python3

`sudo apt-get install python3-pip`

(3) Install Python CAN library.

`sudo pip3 install python-can`

(4) Set CAN0 as receiver

`sudo python3 receive.py`

(5) Set CAN1 as sender

`sudo python3 send.py`

## 4.3.6 Software Description

Now with previous demo's code to show you how to program socket can in Raspbian with C and Python . The socket can is an implementation of CAN protocols(Controller Area Network) for Linux. CAN is a networking technology which has widespread use in automation, embedded devices, and automotive fields. While there have been other CAN implementations for Linux based on character devices, Socket CAN uses the Berkeley socket API, the Linux network stack and implements the CAN device drivers as network interfaces. The CAN socket API has been designed as similar as possible to the TCP/IP protocols to allow programmers, familiar with network programming, to easily learn how to use CAN sockets. For more Socket CAN detail please refer to below link:  
<https://www.kernel.org/doc/Documentation/networking/can.txt>  
[https://elinux.org/CAN\\_Bus](https://elinux.org/CAN_Bus)

### Programming in C

#### For Sender's codes

(1): Create the socket, If an error occurs then the return result is -1.

```
/*Create socket*/  
s = socket(PF_CAN, SOCK_RAW, CAN_RAW);  
if (s < 0) {  
    perror("Create socket PF_CAN failed");  
    return 1;  
}
```

(2): Locate the interface to "can0" or other name you wish to use. The name will show when you execute "./ifconfig -a".

```
/*Specify can0 device*/  
strcpy(ifr.ifr_name, "can0");  
ret = ioctl(s, SIOCGIFINDEX, &ifr);  
if (ret < 0) {  
    perror("ioctl interface index failed!");  
    return 1;  
}
```

(3): Bind the socket to "can0".

```
/*Bind the socket to can0*/  
addr.can_family = PF_CAN;  
addr.can_ifindex = ifr.ifr_ifindex;  
ret = bind(s, (struct sockaddr *)&addr, sizeof(addr));  
if (ret < 0) {  
    perror("bind failed");  
    return 1;  
}
```

(4): Disable sender's filtering rules,this program only send message do not receive packets.

```
/*Disable filtering rules,this program only send message do not receive packets */  
setsockopt(s, SOL_CAN_RAW, CAN_RAW_FILTER, NULL, 0);
```

(5): Assembly data to send.

```
/*assembly message data! */  
frame.can_id = 0x123;  
frame.can_dlc = 8;  
frame.data[0] = 1;  
frame.data[1] = 2;  
frame.data[2] = 3;  
frame.data[3] = 4;  
frame.data[4] = 5;  
frame.data[5] = 6;  
frame.data[6] = 7;  
frame.data[7] = 8;  
//if(frame.can_id&CAN_EFF_FLAG==0)  
if(!(frame.can_id&CAN_EFF_FLAG))  
    printf("Transmit standard frame!\n");  
else  
    printf("Transmit extended frame!\n");
```

(6): Send message to the can bus.You can use the return value of write() to check whether all data has been sent successfully .

```
/*Send message out */  
nbytes = write(s, &frame, sizeof(frame));  
if(nbytes != sizeof(frame)) {  
    printf("Send frame incompletely!\r\n");  
    system("sudo ifconfig can0 down");  
}
```

(7): Close can0 device and disable socket.

```
/*Close can0 device and destroy socket!*/  
close(s);
```

## For Receiver's codes

(1)step 1 and (2) is same as Sender's code.

(3):It's different from Sender's.

```
/*Bind the socket to can0*/  
addr.can_family = PF_CAN;  
addr.can_ifindex = ifr.ifr_ifindex;  
ret = bind(s, (struct sockaddr *)&addr, sizeof(addr));  
if (ret < 0) {  
    perror("bind failed");  
    return 1;  
}
```

(4): Define receive filter rules,we can set more than one filters rule.

```
/*Define receive filter rules,we can set more than one filter rule!*/  
struct can_filter rfilter[2];  
rfilter[0].can_id = 0x123;//Standard frame id !  
rfilter[0].can_mask = CAN_SFF_MASK;  
rfilter[1].can_id = 0x12345678;//extend frame id!  
rfilter[1].can_mask = CAN_EFF_MASK;
```

(5): Read data back from can bus.

```
nbytes = read(s, &frame, sizeof(frame));
```

## Programming in Python

### Import

**import os**

The OS module in Python provides a way of using operating system dependent functionality. The functions that the OS module provides allows you to interface with the underlying operating system that Python is running on – be that Windows, Mac or Linux. We usually use os.system() function to execute a shell command to set CAN.

**import can**

The python-can library provides Controller Area Network support for Python, providing common abstractions to different hardware devices, and a suite of utilities for sending and receiving messages on a CAN bus.

For more information about python-can, please to below link:

<https://python-can.readthedocs.io/en/stable/index.html>

**ifconfig**

If you are use Ubuntu system, It may can't use the 'ifconfig' command. Please install the net

tools.

```
sudo apt install net-tools
```

## Simple common functions

(1) Set bitrate and start up CAN device.

```
os.system('sudo ip link set can0 type can bitrate 1000000')
```

```
os.system('sudo ifconfig can0 up')
```

(2) Bind the socket to 'can0'.

```
can0 = can.interface.Bus(channel = 'can0', bustype = 'socketcan_ctypes')
```

(3) Assembly data to send.

```
msg = can.Message(arbitration_id=0x123, data=[0, 1, 2, 3], extended_id=False)
```

(4) Send data.

```
can0.send(msg)
```

(5) Receive data.

```
msg = can0.recv(30.0)
```

(6) Close CAN device

```
os.system('sudo ifconfig can0 down')
```

## Error Frame

You may receive some error frame marked in red when you use the USB2CANX2-FD module. They will tell you what problem does the USB2CANX2-FD module meet on your CAN Bus.

Some people would say why didn't they meet the error frame with other tool or USB to CAN module before. The truth is that most of the tool filter out the error frame to avoid controversy and support. They just show nothing when there are some error on the CAN Bus. We want to show the all raw data to help you to analyze your CAN BUS. Some error can be ignored, but some error maybe the hidden danger for your CAN BUS.

For the error frame ID description, please refer to below link:

<https://github.com/linux-can/can-utils/blob/master/include/linux/can/error.h>

Now we take a simple case to show you how to analyze the error frame ID. I made the incorrect connection between the USB2CAN module and the CAN Bus, to see what happens.

←

**CAN 0 Channel**

CAN\_L(pin 2)

CAN\_H(pin 7)

←

**ERRO Connection**

-----

-----

**CAN 1 Channel** ←

CAN\_H(pin 7) ←

CAN\_L(pin 2) ←

←

SeqID	SystemTime	Channel	Direc...	FrameId	Frame...	Frame...	Length	FrameData
4	2020/6/29 14:44:08	0	Recv	0x20000024	Data ...	Stand...	8	0x 00 00 00 00 00 00 00 00
5	2020/6/29 14:44:08	0	Recv	0x20000024	Data ...	Stand...	8	0x 00 00 00 00 00 00 00 00
6	2020/6/29 14:44:08	0	Recv	0x20000024	Data ...	Stand...	8	0x 00 00 00 00 00 00 00 00
7	2020/6/29 14:44:08	0	Recv	0x20000024	Data ...	Stand...	8	0x 00 00 00 00 00 00 00 00
8	2020/6/29 14:44:08	0	Recv	0x20000024	Data ...	Stand...	8	0x 00 00 00 00 00 00 00 00
9	2020/6/29 14:44:08	0	Recv	0x20000024	Data ...	Stand...	8	0x 00 00 00 00 00 00 00 00
10	2020/6/29 14:44:08	0	Recv	0x20000024	Data ...	Stand...	8	0x 00 00 00 00 00 00 00 00
11	2020/6/29 14:44:08	0	Recv	0x20000024	Data ...	Stand...	8	0x 00 00 00 00 00 00 00 00
12	2020/6/29 14:44:08	0	Recv	0x20000024	Data ...	Stand...	8	0x 00 0C 00 00 00 00 00 00
13	2020/6/29 14:44:08	0	Recv	0x20000024	Data ...	Stand...	8	0x 00 0C 00 00 00 00 00 00
14	2020/6/29 14:44:08	0	Recv	0x20000024	Data ...	Stand...	8	0x 00 0C 00 00 00 00 00 00
15	2020/6/29 14:44:08	0	Recv	0x20000024	Data ...	Stand...	8	0x 00 0C 00 00 00 00 00 00
16	2020/6/29 14:44:08	0	Recv	0x20000024	Data ...	Stand...	8	0x 00 30 00 00 00 00 00 00

As Above, We received error frame Id: 0x20000024 and 2 set of 8 byte Frame Data:  
data[0]=0x00, data[1]=0x0C,data[3] to data[7] are all 0x00 .  
data[0]=0x00, data[1]=0x30,data[3] to data[7] are all 0x00 .

According the above error frame ID description link:

```
/* error class (mask) in can_id */
#define CAN_ERR_TX_TIMEOUT 0x00000001U /* TX timeout (by netdevice driver) */
#define CAN_ERR_LOSTARB 0x00000002U /* lost arbitration / data[0] */
#define CAN_ERR_CRTL 0x00000004U /* controller problems / data[1] */
#define CAN_ERR_PROT 0x00000008U /* protocol violations / data[2..3] */
#define CAN_ERR_TRX 0x00000010U /* transceiver status / data[4] */
#define CAN_ERR_ACK 0x00000020U /* received no ACK on transmission */
#define CAN_ERR_BUSOFF 0x00000040U /* bus off */
#define CAN_ERR_BUSERROR 0x00000080U /* bus error (may flood!) */
#define CAN_ERR_RESTARTED 0x00000100U /* controller restarted */
```

This Error frame ID = 0x200000000 | 0x00000020|0x00000004  
= 0x200000000 | CAN\_ERR\_ACK|CAN\_ERR\_CRTL

So the USB2CANX2-FD meet two problem 'received no ACK on transmission' and 'controller



problems'.

For problem 'received no ACK on transmission' may case by the not CAN-BUS or other module on the CAN BUS are only listen mode(No ACK).

For problem 'controller problems', refer to the data[1] description:

```
/* error status of CAN-controller / data[1] */
#define CAN_ERR_CRTL_UNSPEC      0x00 /* unspecified */
#define CAN_ERR_CRTL_RX_OVERFLOW 0x01 /* RX buffer overflow */
#define CAN_ERR_CRTL_TX_OVERFLOW 0x02 /* TX buffer overflow */
#define CAN_ERR_CRTL_RX_WARNING 0x04 /* reached warning level for RX errors */
#define CAN_ERR_CRTL_TX_WARNING 0x08 /* reached warning level for TX errors */
#define CAN_ERR_CRTL_RX_PASSIVE 0x10 /* reached error passive status RX */
#define CAN_ERR_CRTL_TX_PASSIVE 0x20 /* reached error passive status TX */
                                   /* (at least one error counter exceeds */
                                   /* the protocol-defined level of 127) */
#define CAN_ERR_CRTL_ACTIVE      0x40 /* recovered to error active state */
```

data[1] = 0x0C = 0x04|0x08 = CAN\_ERR\_CRTL\_RX\_WARNING|CAN\_ERR\_CRTL\_TX\_WARNING  
It means the USB2CAN module can't send/receive data properly and reached warning level.

data[1] = 0x30 = 0x10|0x20 = CAN\_ERR\_CRTL\_RX\_PASSIVE | CAN\_ERR\_CRTL\_TX\_PASSIVE  
It means the USB2CAN module can't send/receive data too much, USB2CAN module into error status.

Summing up the above, the error frame tell us, USB2CAN module can't get ACK from CAN BUS and can't send data to the CAN Bus. So the CAN Bus may not inexistence or the connection error.

## 5Appendix A-ID Setting

### Enable/Disable Build In 120Ω TERM Resistor

USB To CANFD Series Products comes activated in 120Ω termination resistor, it can be easily enable/disable by PCANVIEW Software through ID setting.

Go to the PCANVIEW Software ID Setting Tab As below picture shows:



#### ID Setting Description is as below:


Device serial number have 4 bytes: Byte3|Byte2|Byte1|Byte0

**Device serial number byte 2 used to control 2 channels of terminal resistor.**

**BYTE2 bit0—3 control channel0--- 1: resistor on 0 :terminal resistor off**

**BYTE2 bit7—4 control channel1--- 1: resistor on 0 :terminal resistor off**

**Note: After Setting IDS, reconnect USB Cable to PC then take effect.**

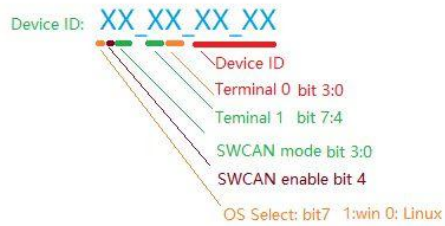

## When you use device under Windows

ID	Description
80FF0000h	CAN0 TERM Enable CAN1 TERM Enable
80000000h	CAN0 TERM Disable CAN1 TERM Disable
800F0000h	CAN0 TERM Enable CAN1 TERM Disable
80F00000h	CAN0 TERM Disable CAN1 TERM Enable


## When you use device Under Linux

ID	Description
08FF0000h	CAN0 TERM Enable CAN1 TERM Enable
08000000h	CAN0 TERM Disable CAN1 TERM Disable
080F0000h	CAN0 TERM Enable CAN1 TERM Disable
08F00000h	CAN0 TERM Disable CAN1 TERM Enable


## Enable/Disable SW CAN Mode

**USB2CANFD-X2** Channel CAN0 support SWCAN, to enable SWCAN, need to power PIN9

with 12V. PIN4 Become CANH\_SW.

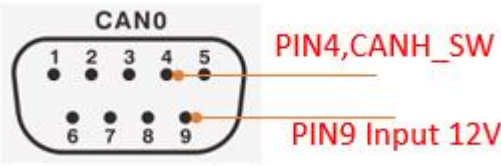

## Hardware Connection Enable SWCAN

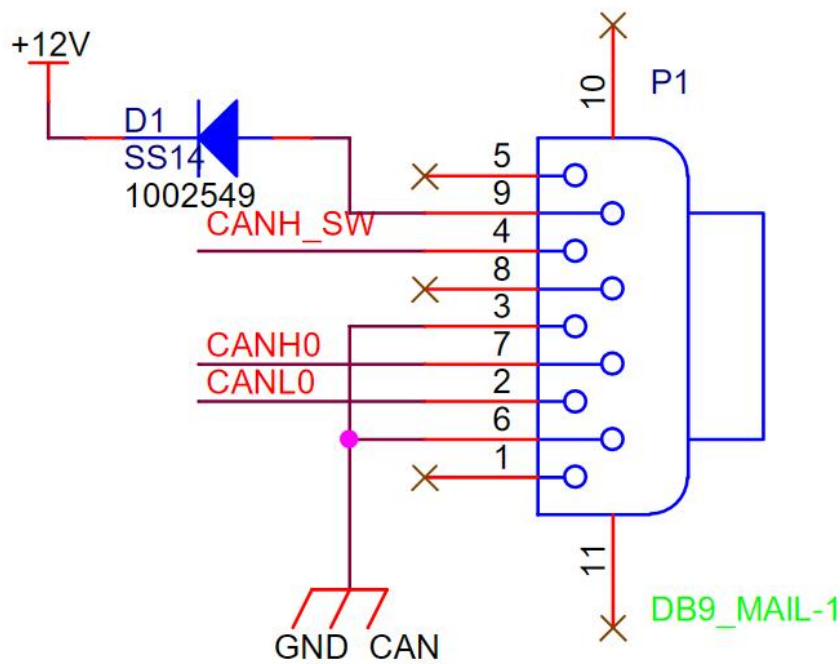

## ID Setting SWCAN Working Mode

ID	SWCAN MODE:	Description
F0000000h	Mode0	0 : sleep
F1000000h	Mode1	1: high speed mode (83.33kbit/s)
F2000000h	Mode2	2: high volage wake up
F3000000h	Mode3	3: normal mode (33.33kbit/s)