

# **Vision SDK (v02.07.00) Linux Development Guide**

## IMPORTANT NOTICE

Texas Instruments and its subsidiaries (TI) reserve the right to make changes to their products or to discontinue any product or service without notice, and advise customers to obtain the latest version of relevant information to verify, before placing orders, that information being relied on is current and complete. All products are sold subject to the terms and conditions of sale supplied at the time of order acknowledgment, including those pertaining to warranty, patent infringement, and limitation of liability.

TI warrants performance of its products to the specifications applicable at the time of sale in accordance with TI's standard warranty. Testing and other quality control techniques are utilized to the extent TI deems necessary to support this warranty. Specific testing of all parameters of each device is not necessarily performed, except those mandated by government requirements.

Customers are responsible for their applications using TI components.

In order to minimize risks associated with the customer's applications, adequate design and operating safeguards ought to be provided by the customer so as to minimize inherent or procedural hazards.

TI assumes no liability for applications assistance or customer product design. TI does not warrant or represent that any license, either express or implied, is granted under any patent right, copyright, mask work right, or other intellectual property right of TI covering or relating to any combination, machine, or process in which such products or services might be or are used. TI's publication of information regarding any third party's products or services does not constitute TI's approval, license, warranty or endorsement thereof.

Reproduction of information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations and notices. Representation or reproduction of this information with alteration voids all warranties provided for an associated TI product or service, is an unfair and deceptive business practice, and TI is neither responsible nor liable for any such use.

Resale of TI's products or services with statements different from or beyond the parameters stated by TI for that product or service voids all express and any implied warranties for the associated TI product or service, is an unfair and deceptive business practice, and TI is not responsible nor liable for any such use.

Also see: Standard Terms and Conditions of Sale for Semiconductor Products.  
[www.ti.com/sc/docs/stdterms.htm](http://www.ti.com/sc/docs/stdterms.htm)

Mailing Address:

Texas Instruments  
Post Office Box 655303  
Dallas, Texas 75265

Copyright © 2014, Texas Instruments Incorporated

**TABLE OF CONTENTS**


---

IMPORTANT NOTICE .....	2
<b>1 Introduction .....</b>	<b>4</b>
<b>2 Application Overview .....</b>	<b>5</b>
<b>3 Use Case Development .....</b>	<b>7</b>
<b>4 Link Development .....</b>	<b>7</b>
<b>5 Algorithm Link Development .....</b>	<b>7</b>
<b>6 Memory map of the application .....</b>	<b>7</b>
6.1 Adding a new section to memory map .....	8
6.2 Changing size of a section in the memory map .....	8
<b>7 Hardware Resources Split .....</b>	<b>8</b>
<b>8 Inter-Processor Communication.....</b>	<b>9</b>
<b>9 EVE Support in Linux .....</b>	<b>12</b>
9.1 EVE Loader.....	12
9.2 A15<->EVE inter-processor communication.....	13
<b>10 Revision History .....</b>	<b>14</b>

## **1 Introduction**

Vision Software Development Kit (SDK) is a multi-processor, multi-channel software development platform for TI family of ADAS SoCs. The software framework allows users to create different ADAS application data flows involving video capture, video pre-processing, video analytics algorithms, and video display.

This document explains procedure for following

1. To develop a use case application using Vision SDK when Linux is running on A15
2. To develop a new link in Linux + vision sdk scenario

This document assumes that the reader is familiar with basics of links and chains architecture used in Vision SDK and has gone through VisionSDK\_DevelopmentGuide.pdf under vision\_sdk/docs


This document explains linux part of vision sdk, how it works and developing application on Linux for vision\_sdk. The motivation behind introducing Linux to vision\_sdk is to utilize SGX through OpenGL APIs and other functionalities provided by this commonly used OS like file management, storage and network streaming.

## 2 Application Overview

The demo `vision_sdk_linux_demo.out` is a single process multi-threaded application in Linux user space that enables users to run / validate supported ADAS usecases and demonstrates how SGX can be used to render video frames captured through VIP on IPU1 & transported on A15. Any other application that needs to work on `vision_sdk` from Linux side should have similar structure.

Things to be noted here are

1. Figure 1 below depicts building blocks of application running on Linux and its counterparts on the other cores.

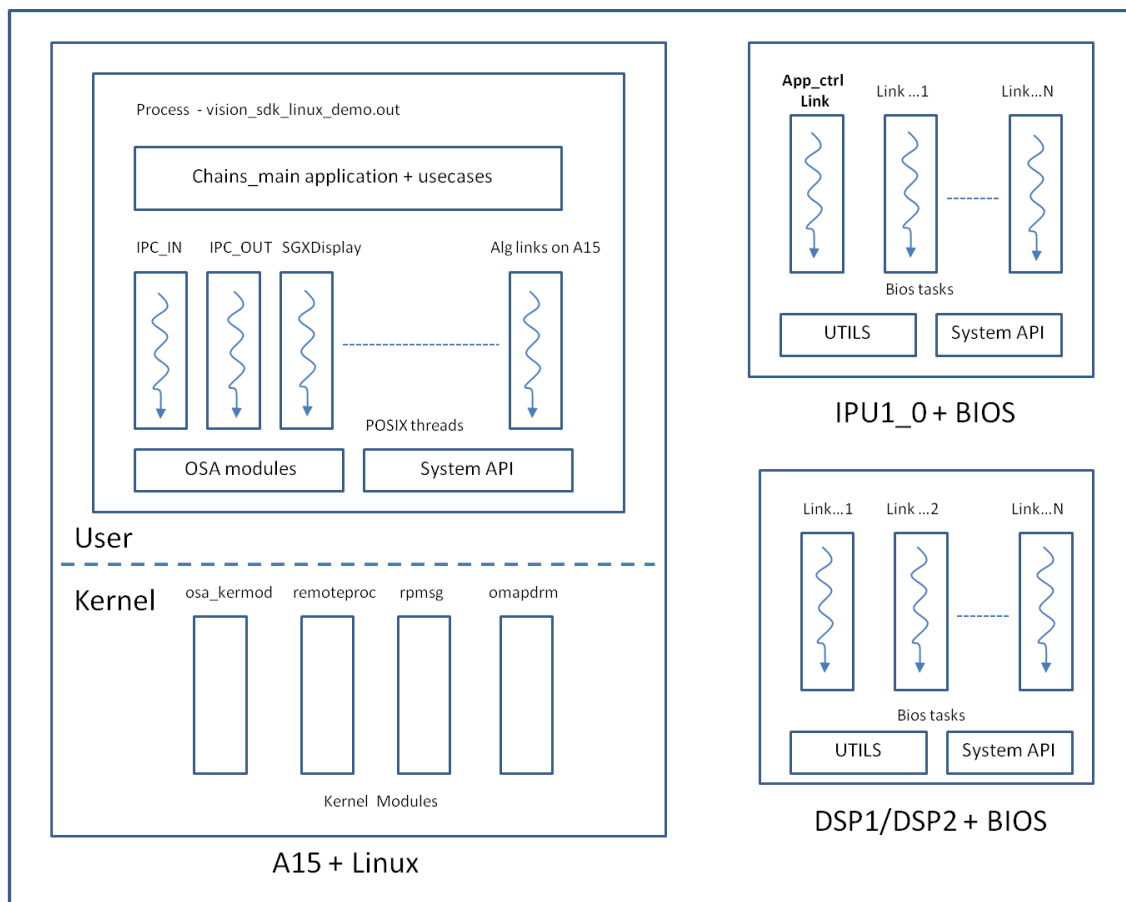

**Figure 1 : Linux + Vision SDK application overview**

2. The application is mainly a chain of links required for the usecase and these links can be instantiated / started / stopped irrespective of which core they are running on.
3. Links which are in Linux user space have exactly same structure as that of bios side except they are pthreads within the same process. These links use OSA modules to interact with Linux for resources; this also includes system calls to interact with kernel modules. System API is used to interact with links on remote cores.

#### 4. Kernel modules involved

- a. `osa_kermod` – Used for marking the mapping of physical address space as cached / non-cached
- b. `remoteproc` (also referred as `rproc`)– Used to load firmware binaries on remote cores at linux boot time. The module with help of iommu driver programs the L2MMU of slave core based on the information available in the executable. This module is also responsible to manage state of remote cores in the defined platform.

More information on `remoteproc` is available in kernel documentation

`$INSTALL_DIR/ti_components/linux/kernel/omap/Documentation/remoteproc.txt`

- c. `rpmsg` – Used for inter-processor communication between A15 and other `remoteproc` managed slave cores. This is a vring based implementation.

More information on `remoteproc` is available in kernel documentation

`$INSTALL_DIR/ti_components/linux/kernel/omap/Documentation/rpmsg.txt`

- d. `omapdrm` – Used for managing display subsystem (DSS) from A15 and displays the video content on HDMI / LCD

- 5. AppCtrl Link on IPU1 – This is link on IPU1\_0 that accepts commands from A15 application to initialize/deintialize peripherals like Video Sensors / HDMI receiver which are controlled from IPU. The implementation of this link is not part for standard link set on bios side but its implemented in `$INSTALL_DIR/vision_sdk/examples/tda2xx/src/common/chains_main_linux.c`. This link is instantiated when `ipu1_0` binary starts execution.

#### 6. Application's runtime flow

- a. Board boots using uboot flashed in to SD / other boot media
- b. Uboot configures PLLs and clks (the work that's done by SBL in bios case) and loads kernel image to memory.
- c. Kernel mounts filesystem and loads required drivers.
- d. In the process of booting kernel loads firmware placed in `/lib/firmware` directory on slave cores e.g. `dra7-ipu1-fw.xem4` for ipu1, `dra7-dsp1-fw.xe66` for dsp1, `dra7-dsp2-fw.xe66` for dsp2 and boots the remote core  
*CAUTION : the firmware names are fixed, if kernel doesn't find the firmware in `/lib/firmware` the corresponding remote proc is not loaded / booted/*
- e. The moment boot process completes and prompt is visible to user, one can expect remotecores to have all links instantiated and running idle / ready to receive commands from Application on A15.
- f. Now user inserts required additional kernel modules through `vision_sdk_load.sh` and then runs the application to create a chain and interact with links on remote cores.

### **3 Use Case Development**

Refer VisionSDK\_DevelopmentGuide.pdf under \$INSTALL\_DIR/vision\_sdk/docs

The vision sdk usecase built for BIOS can be used as it is from linux side just by replacing UTILS calls with OSA and providing supporting build structure.

### **4 Link Development**

Refer VisionSDK\_DevelopmentGuide.pdf under vision\_sdk/docs

Refer Link implementations under \$INSTALL\_DIR/vision\_sdk/linux/src/links

### **5 Algorithm Link Development**

Refer VisionSDK\_DevelopmentGuide.pdf under vision\_sdk/docs

### **6 Memory map of the application**

Memory map of the entire usecase is governed by following following artifacts.

1. DDR\_MEM variable in Rules.make
2. \$INSTALL\_DIR/vision\_sdk/build/tda2xx/mem\_segment\_definition\_<DDR\_MEM>\_linux.xs
3. \$INSTALL\_DIR/toolchain/ti\_components/kernel/omap/arch/arch/dts/dra7-evm-infoadas.dts

#1 – DDR\_MEM is a environment variable that tells build system which .xs is to be picked up for the final executable.

#2 – The .xs file overrides default implementation for the platform defined by xdc.runtime. This file can be modified to increase / decrease size of the section or add / remove sections from the memory map. As linux enables L2MMU for each core all the addresses mentioned in the .xs file are slave virtual addresses.

#3 – The .dts file is used to reserve memory from linux, this is a platform specific file. This ensures linux and bios side don't overwrite into each other. Typically the bios side needs approximately 320 MB and rest all (remaining out of 1.5 GB for evm) can be given to linux. Essentially this creates a hole in linux memory that is later mapped to user space at the application startup time.

In general, if you are planning to have your own memory map for the application, you can follow these steps

1. Evaluate memory requirements of the sections e.g. (Is 128MB SR1 sufficient or you need more?)
2. Add appropriate .xs file under \$INSTALL\_DIR/vision\_sdk/build/tda2xx/ and modify DDR\_MEM in Rules.make or use existing one.
3. Ensure memory is correctly reserved from linux in .dts file in linux kernel
4. Update the resource table in \$INSTALL\_DIR/vision\_sdk/src/links\_common/system/system\_rsc\_table\_ipu.h or dsp.h as required by your memory map.

## 6.1 Adding a new section to memory map

While adding new section in the memory map from ipu / dsp side following things needs to be taken care of:

1. The section doesn't overlap with linux region. It should lie within the hole of memory declared in .dts file in kernel using /memreserve
2. If needed, /memreserve can be used to increase the size of the hole accommodate new section's memory requirement.
3. This newly added section has to be mapped into L2MMU of ipu / dsp by linux and hence it needs to be added in the resource table i.e. in system\_rsc\_table\_ipu.h or system\_rsc\_table\_dsp.h accordingly.
4. If this section is going to be accessed from Linux user space or kernel space, this mapping needs to be taken care by the application or through OSA\_mem module in vision\_sdk

## 6.2 Changing size of a section in the memory map

While changing the size of the section in the memory map from ipu / dsp side following things needs to be taken care of:

1. After making changes in respective .xs file for the section sizes, sections shouldn't overlap with each other or with Linux memory.
2. As you are modifying existing section, no need to change resource table mappings, the updated value will be picked up in resource table in the build process.

## 7 Hardware Resources Split

When A15 is running Linux and IPU is running bios it is important to have hardware resources split mutually exclusively. For example, if an i2c instance is being accessed/owned by A15, IPU shouldn't register handler for the same and vice versa.

Another example would be Ethernet ip incase of NDK running on IPU, it should be disabled from dts file in the kernel.

Hardware resources used by Linux are defined / specified in *\$INSTALL\_DIR/ti\_components/linux/kernel/arch/arch/dts/dra7-evm-infoadas.dts*

This is a platform specific file in kernel where devices are mentioned in form of a device tree. These can be added / removed by system integrator if the ownership of the hardware resource changes.

Current changes in default dra7-evm.dts -> dra7-evm-infoadas.dts

removed – VIPs, Vin, dpi3, sound

Vips, OV sensors, serializers / de-serializers, lvds – fpd links are controlled from IPU1 but I2C initialization happens on A15 through devnodes.sh.



## 8 Inter-Processor Communication

Application writers need not look in to this section unless something related to inter-processor communication needs to be changed. The section briefly describes IPC mechanism used by vision\_sdk when Linux is running on A15. It is assumed that reader has gone through rpmsg and remoteproc basic documentation given in the kernel and familiar with socket API from linux user space.

In the entire tda2xx system there are two types of IPCs

1. BIOS<->BIOS

2. Linux<->BIOS

In the 1<sup>st</sup> case the ipc package existing under \$INSTALL\_DIR/ti\_components/os\_tools/ipc\_<version\_number> is used, while in 2<sup>nd</sup> case a combination of linux kernel modules (rpmsg and rproc) and a part of ipc package (counter part of rpmsg i.e. RPMessage on BIOS) is used.

Once remoteproc loads the slave cores (IPUs/DSPs), it instantiates vrings that are used by rpmsg later for IPC. vrings are circular lists with configurable buffer size of 512 bytes. There are two vrings per pair of processors used for to & fro communication from A15. Based on vrings rpmsg channels are created to connect endpoints and operations on these rpmsg channels are exposed to linux user space through socket API and special type of socket named AF\_RPMSG. "rpmsg-proto" is the driver in kernel used by vision\_sdk that manages state of skbs belonging to type AF\_RPMSG.

Vision SDK implements system API to encapsulate the socket based system calls that are used to utilize functionalities provided by rpmsg driver. These system API are used by links on A15 and IPU / DSP to send /receive commands to / from links on other cores.

Based on rpmsg, Vision SDK system API implements two important modules system\_rpmsg\_msgq and system\_rpmsg\_notify.

Linux side implementation - \$INSTALL\_DIR/vision\_sdk/linux/src/system/system\_rpmsg\_notify.c and system\_rpmsg\_msgq.c

Bios side counterpart - \$INSTALL\_DIR/vision\_sdk/src/links\_common/system/system\_rpmsg\_notify.c and system\_rpmsg\_msgq.c

These modules are functionally similar to MessageQ and Notify modules provided by ipc package but they are based on rpmsg with minimal overhead in Linux user space. These modules create unique rpmsg endpoints for exchanging messages and their acks.

Linux kernel 3.14 onwards, rpmsg-proto in the kernel actually has changed its behavior to support only one endpt per slave. This was done to support features like error recovery from remoteproc module. Now each slave has one endpt and receives all messages through that.

To support this single endpt systems following message types are created

```
SYSTEM_RPMSG_MSGTYPE_NOTIFY    = 0x0,  
/** \brief rpmsg based Notify functionality, payload is linkId */  
  
SYSTEM_RPMSG_MSGTYPE_MSGQ_DATA = 0x1,  
/** \brief rpmsg based MsgQ functionality, payload is pointer to data msg */  
  
SYSTEM_RPMSG_MSGTYPE_MSGQ_ACK  = 0x2,  
/** \brief rpmsg based MsgQ functionality, payload is pointer to ack msg */
```

And these are used from A15 to any slave combination (DSP1, DSP2, IPU1\_0). On the slave side System\_rpmsgCbHandler() decides action on the message based on message types. If it is a notify appropriate notify handler is called in callback context. if it is msgQ data or ack it is put in appropriate queue based on message type, these queues are blocking on get (UTILS\_QUE\_FLAG\_BLOCK\_QUE\_GET), when System\_rpmsgCbHandler puts the message in the respective queue it Utils\_queGet unblocks on the rx side.

There are reserved endpoint numbers, defined in \$INSTALL\_DIR/vision\_sdk/include/link\_api/system\_common.h

```
/**  
 * \brief Remote end point, This will be created on slave cores  
 */  
#define SYSTEM_RPMSG_ENDPT_REMOTE      80  
  
/**  
 * \brief This will be created at host and used by rpmsg notify module  
 *      to receive notifications from slave  
 */  
#define SYSTEM_RPMSG_NOTIFY_ENDPT_HOST  81  
  
/**  
 * \brief This will be created at host and used by rpmsg msgQ module  
 *      to receive data messages from slave  
 */  
#define SYSTEM_RPMSG_MSGQ_DATA_ENDPT_HOST 82  
  
/**  
 * \brief This will be created at host and used by rpmsg msgQ module  
 *      to receive ack messages from slave
```

\*/

```
#define SYSTEM_RPMMSG_MSGQ_ACK_ENDPT_HOST 83
```

If user is planning to add a new rpmsg channel for own purpose, ensure that the End point numbers don't overlap with already reserved ones.

Overall the Linux<->BIOS IPC appears as shown in the figure below.

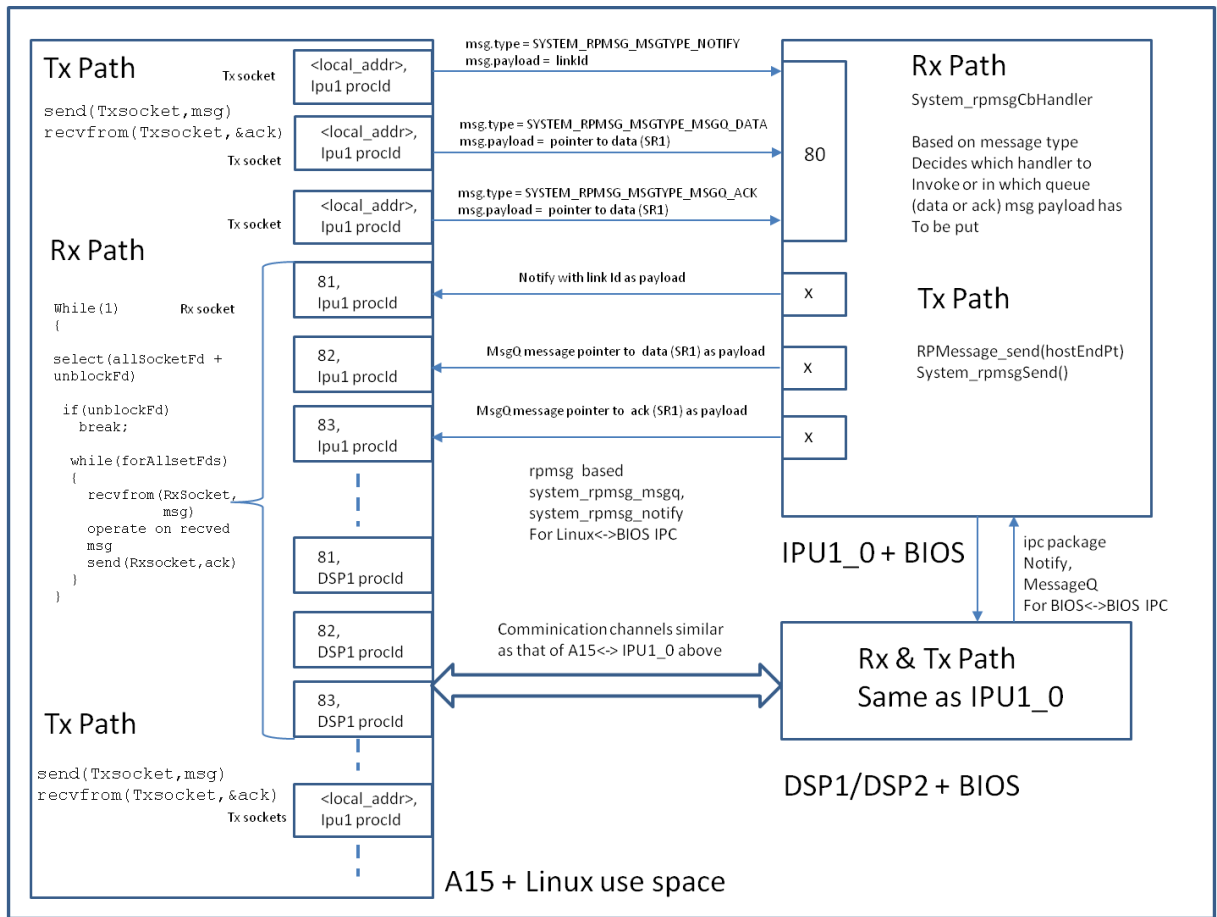


Figure 1 : Inter Processor Communication

The figure shows pseudo operations on Tx and Rx paths to / from Host (A15) to other slave cores for system\_rpsmg\_msgq & system\_rpmsg\_notify. Based on the module just the recv mechanism changes, in case of notify registered callback is executed in interrupt context on bios side while in case of msgq it is still in task context on receipt of message.

DSP1/DSP2 + BIOS above is used just for example, same ipc mechanism is replicated for each of A15<->DSP or any other slave core. Essentially, a pair of sockets (named Tx and Rx) is used for IPC with slave cores. These sockets are of type AF\_RPMMSG. Typically Tx sockets are "connected" (see system call connect()) to remote end point to send msg while Rx sockets on A15 are "bound" (see system call bind()) to specific address (end pt number) to receive message from particular

remote core. Address of the Tx socket is usually allocated by kernel and hence mentioned as <local\_addr> in the figure. Each message send is followed by ack msg from both Host and slave cores to ensure sequential execution of commands.

This kind of IPC mechanism is used for two purposes in vision SDK

1. Inter link communication
2. Notifications

#1 involves command messages and well as video frame transfer. In case of video frame transfer only physical address of the frame (4 bytes) is sent across to minimize any copies. This is typically achieved using `System_rpmsgMsgQSendMsg()`. Note that mapping is already taken care at the init time for both cores.

#2 Involves notifications to the next link. This is achieved using `System_rpmsgSendNotify()`

It is important to note that `system_rpmsg_msgq` and `system_rpmsg_notify` are used by links for IPC, these are not generic modules to be used outside Vision SDK.

## **9 EVE Support in Linux**

### **9.1 EVE Loader**

remoteproc is the linux kernel module that supports boot loading of IPU and DSPs, it picks up binaries from file system (/lib/firmware), parses binary for a special section (.resource\_table), programs L2MMU using IOMMU driver and manages PRCM for the remote core.

This remoteproc module in kernel does not support loading EVEs from A15. There are 4 EVEs in TDA2x and this limitation makes EVEs unusable when Linux is running on A15.

EVE loader is implemented using a scheme described below

- Starterware SBL is built for M4, it is ensured it can control PRCM for EVE and bringup EVEs from IPU
- EVE binaries are built before IPU in the build system
- Convert .xearp32F -> .h (bin to hex converter utility was used)
- Include .h in the IPU's application

*It means A15+ Linux loads IPU and IPU intern loads each of the EVEs*

The picture next describes the executable generation of EVE executables and embedding that into IPU executable

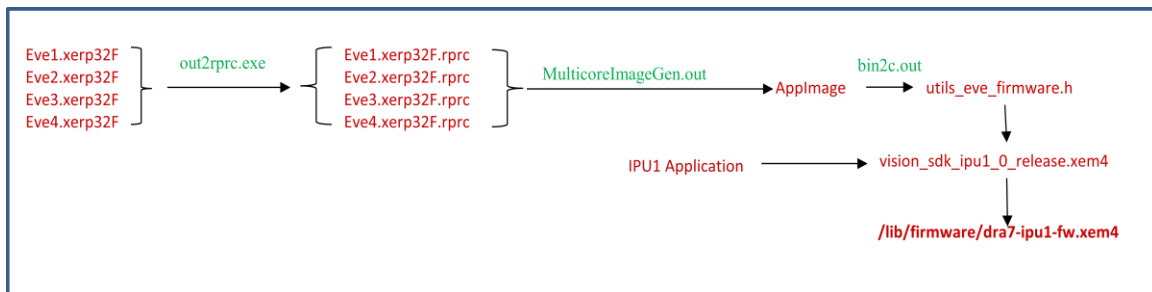


Figure 3 : EVE executable creation and embedding into IPU1 executable

Finally, dra7-ipu1-fw.xem4 used by Linux remoteproc to load and run EVEs through IPU1, System integrator ensures a hole is created in Linux memory for EVEs code & Data so that Linux doesn't overwrite it.

EVE MMU/TLB entries are programmed by IPU when it parses EVE executables in rprc format.

## 9.2 A15<->EVE inter-processor communication

For A15<->EVE communication, **a routing message protocol is designed**, Each system command is an atomic message to EVE is sent through IPU1\_0.

System command sends a 32 bit value across which embeds the task Id (LinkId) for receiving task and the command (same ioctl command but executing on remote core). We use the most significant bit of LinkId to indicate if the message is a routing to EVE or vice versa, and the decision of performing operation / forwarding message is take on IPU1.

Figure below depicts A15->EVE communication, similar logic applies to EVE->A15 communication

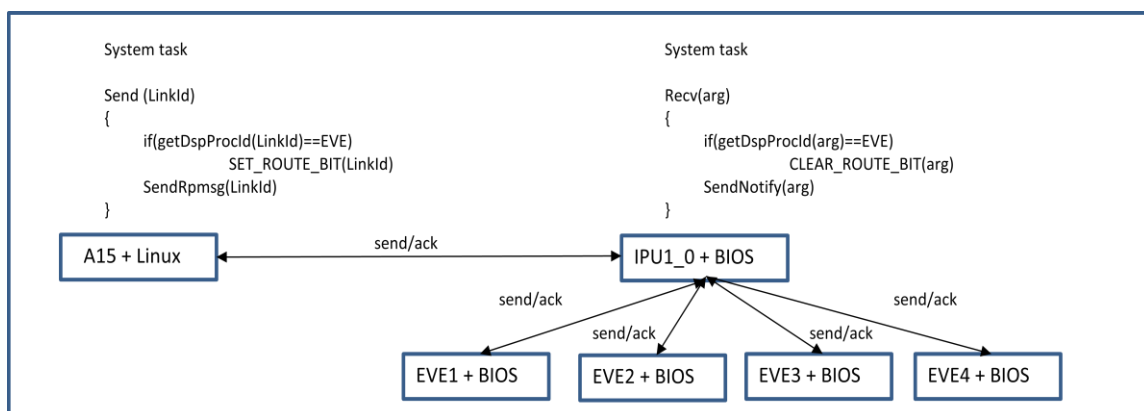


Figure 4 : A15 <-> EVE inter-processor communication

## 10 Revision History

Version	Date	Revision History
0.10	18 July 2014	First Draft
0.20	17 Dec 2014	EVE loader details added
0.30	28 Feb 2015	Updated for v2.6
0.4	08 Apr 2015	Updated IPC for single end pt per slave

« « « § » » »