

BIGTREE TECH

Eddy V1.0

User Manual



Revision Log

Version	Date	Revisions
v1.00	April 19th, 2024	Initial Version
v1.01	April 25th, 2024	1. Mark the BOOT button's location on the product image. 2. Added instructions for restarting Klipper.
v1.02	April 26th, 2024	Include methods for updating firmware via computer.
v1.03	April 30th, 2024	Revised the configuration and calibration instructions.
v1.04	May 15th, 2024	Indicated the position of the center point.
v1.05	June 6th, 2024	Added the <code>z_virtual_endstop</code> instruction to Section 5.1: Important Notes.
v1.06	August 19th, 2024	Merged Klipper branch and adjusted Z-offset configuration.

Table of Contents

Revision Log	2
Table of Contents.....	3
1. Product Information	5
2. Feature Highlights	6
3. Product Dimensions and Interfaces.....	7
3.1. Dimension Diagram.....	7
3.2. Location of the BOOT Button	8
4. Installation Guide	9
4.1. Installation Height	9
4.2. Example using Voron 2.4.....	9
4.3. Installation on Other Machines	10
4.4. Eddy + Manta M5P	10
4.5. Eddy + Manta M8P V2.0.....	11
4.6. Eddy Coil + EBB36 V1.2	11
4.7. Eddy Coil + EBB42 V1.2	12
5. Firmware.....	13
5.1. Compiling Firmware.....	13
5.2. Update Firmware.....	14
5.2.1. Update Firmware via Computer	14
5.2.2. Update Firmware via DFU	15
6. Klipper & Eddy Configuration	17
6.1. Printer.cfg Templates	17
6.2. Z-Endstop Configuration	17
7. Calibration	19
7.1. Drive Current Calibration.....	19
7.2. Mapping Eddy Readings to Nozzle Heights	19
7.3. Bed Mesh Calibration.....	20
7.4. Temperature Compensation Calibration (Eddy USB ONLY)	21
8. Extra Info	23

8.1.	Z-Offset.....	23
8.2.	Bed Mesh Calibrate Parameters.....	23
8.3.	Bed Mesh Scan Height	23
8.4.	Rapid (Continuous) Scanning.....	24
9.	FAQ - Frequently Asked Questions	25

1. Product Information


Name	Eddy
Weight	6g
Voltage	5V
Static Current	30mA
Operating Current	30mA
Cable Length	2.5 m (USB Version), 15 cm (Coil Version)
Connection	USB: 4-pin, 1.5mm pitch Coil: 4-2.54mm DuPont female header, one end with ZH1 5mm 4P connector
Operating Temperature	≤60°C Ambient
Standard Error	0.5μm
Compatible Models	All FDM printers that use the Klipper firmware.

2. Feature Highlights


- Compact size and lightweight;
- Equipped with thermal compensation;
- Highly efficient leveling;
- Broad application, strong compatibility;
- High precision, thermal stability;
- Non-contact operation.

3. Product Dimensions and Interfaces

3.1. Dimension Diagram

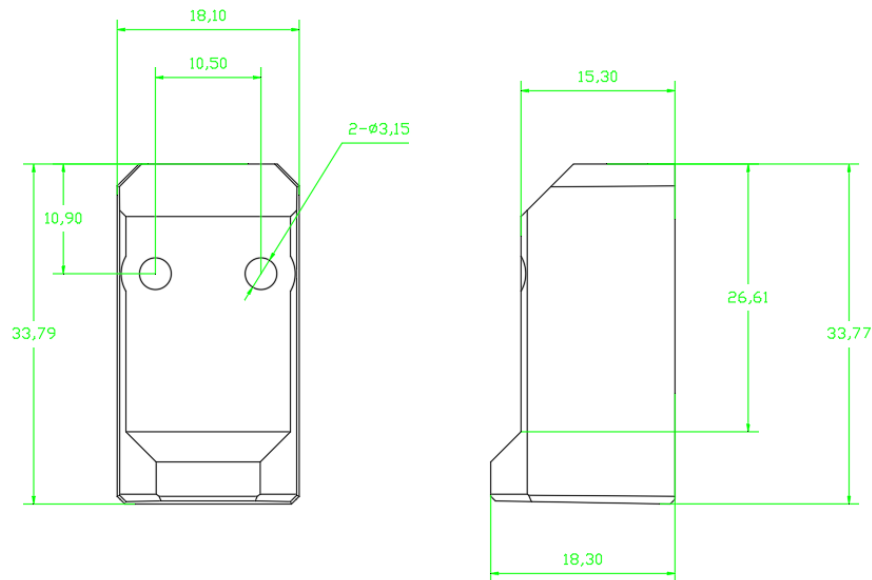

The coil's center point, used for calculating XY offsets, is as follows:

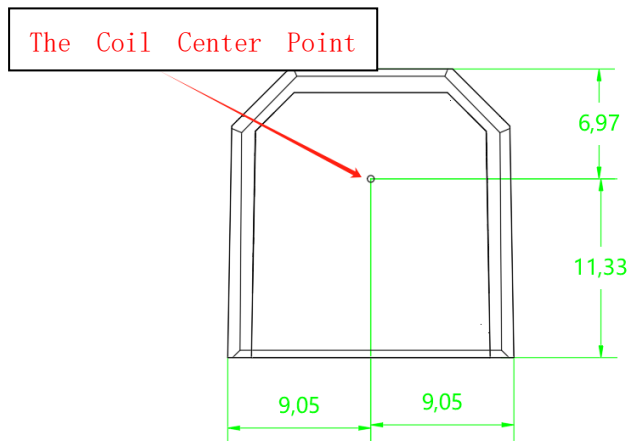

3.2. Location of the BOOT Button



The BOOT button is used when programming Klipper onto the Eddy for the first time; afterward, Klipper can automatically reprogram the RP2040.

Note: Only Eddy V1.0 has the BOOT function; the button on Eddy Coil V1.0 is non-functional.

4. Installation Guide

4.1. Installation Height

Install Eddy **2 to 3 mm** above the nozzle to ensure optimal performance. If you encounter any errors during the calibration process, these may be related to Eddy's installation height. For solutions, please refer to the troubleshooting section of this manual.


Important:


Some people confuse the current calibration height of 20mm with the mounting height of 2-3mm. The 20mm height is only used when calibrating the coil current later in this guide.

4.2. Example using Voron 2.4

Installation replaces the original PL-08N position.

Use two M3x25 screws (included in the package) to secure the Eddy to the X Carriage as shown in the diagram.

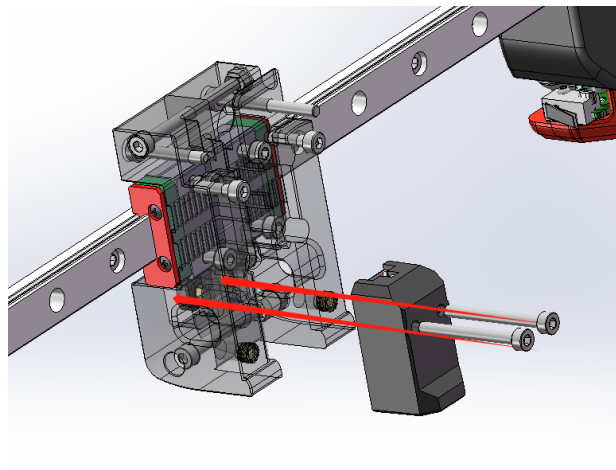


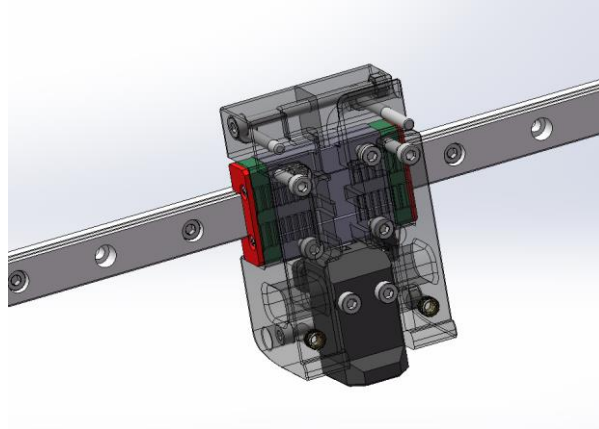


4.3. Installation on Other Machines

Brackets for various common machines are available in our GitHub repository and other popular model-sharing platforms. When installing Eddy, make sure the side with the PCB (the rear side) is positioned as far from the hotend as possible. This placement helps reduce heat transfer from the hotend to Eddy.


4.4. Eddy + Manta M5P

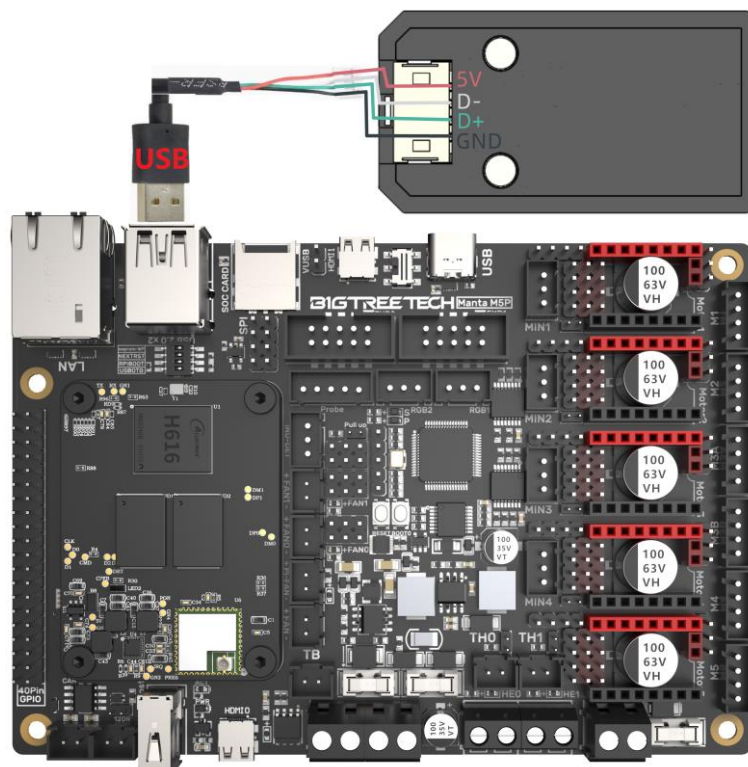


4.5. Eddy + Manta M8P V2.0

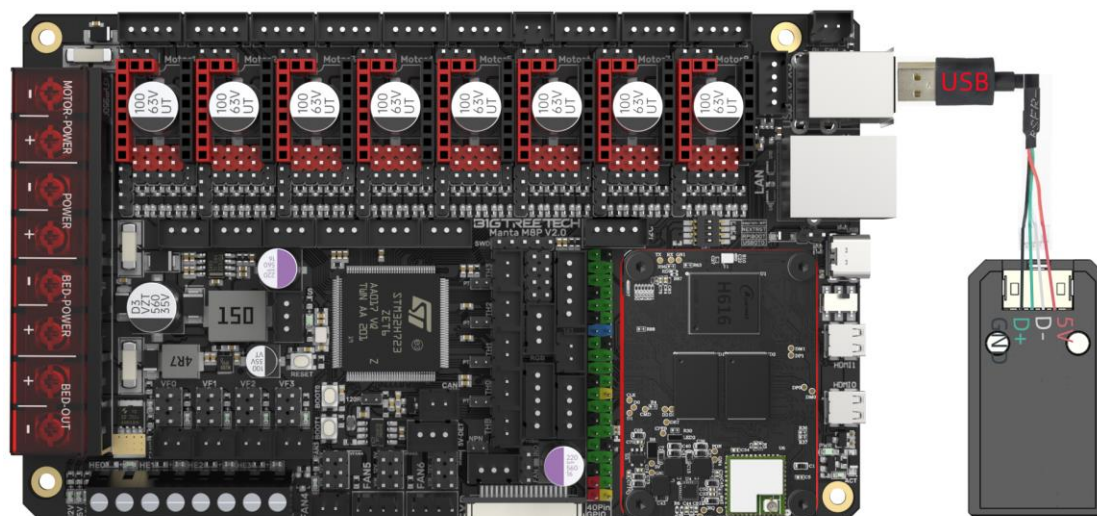

4.6. Eddy Coil + EBB36 V1.2

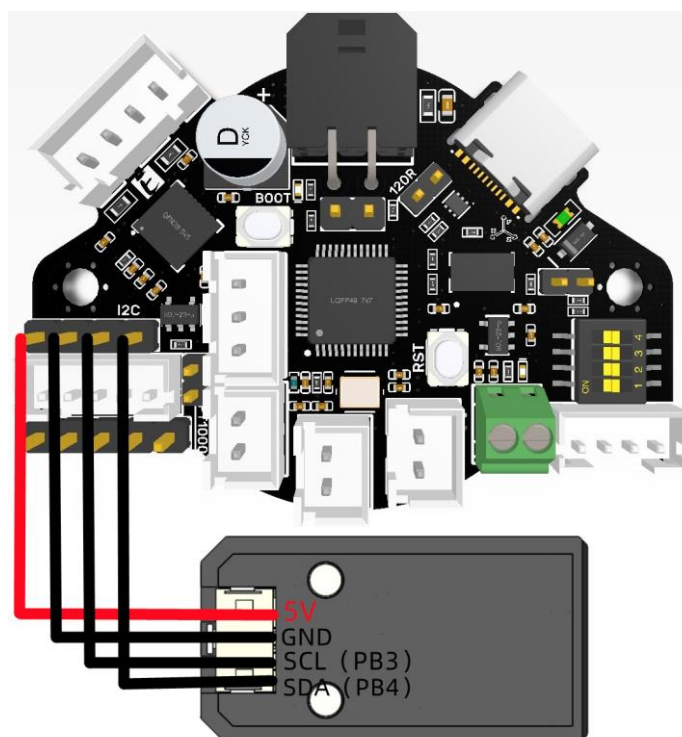

4.7. Eddy Coil + EBB42 V1.2

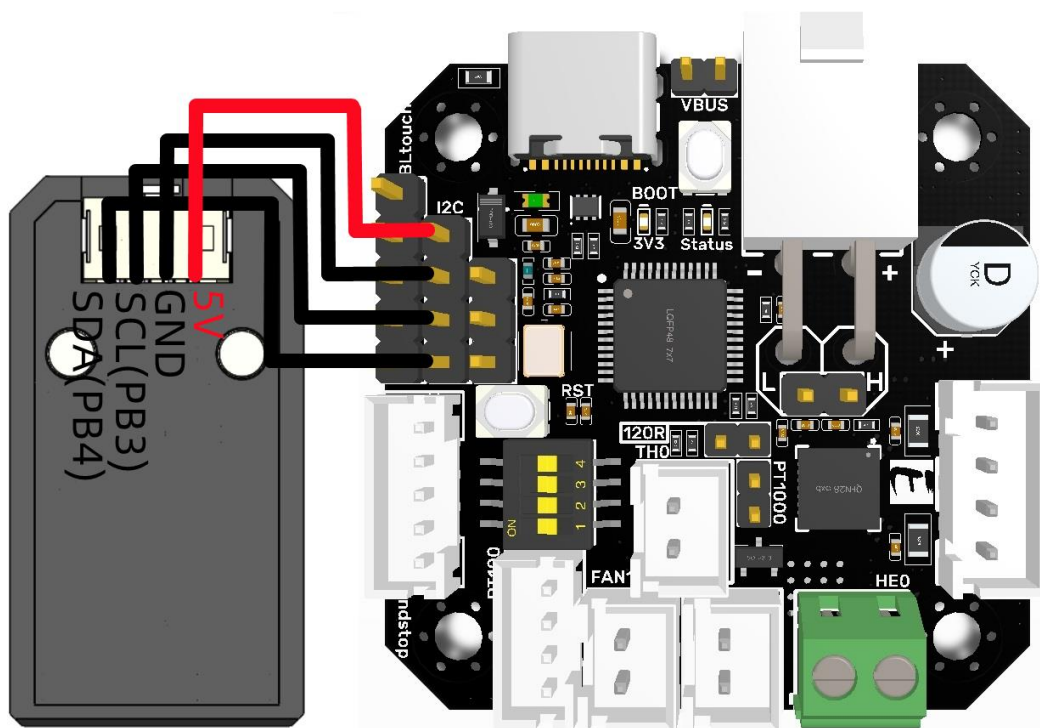

5. Firmware

Important:

Eddy and Eddy Coil are ONLY compatible with Klipper installations that are using a virtual environment based on Python 3. Even if you have Python 3 installed on your system this does not mean that your klippy virtual environment has been created using Python 3. If you receive an error that says something like: *Internal error during connect: split() takes no keyword arguments* then you have a klippy host that is based on a Python 2 virtual environment and you need to get it upgraded. The easiest way to do this is to use [KIAUH](#) which will allow you to reinstall the klippy host without overwriting your configs while selecting the Python 3 option.

5.1. Compiling Firmware

The firmware compilation instructions below only apply to the Eddy USB. If you are using an Eddy Coil then you will have it connected to the I²C port on a toolboard. You will need to compile firmware for that toolboard using the master Klipper branch and then install it onto that toolboard. When configuring the Eddy within Klipper you will just need to specify that it communicates using the I²C port on that toolboard which will depend on the pins for that board.

If you are coming from the old BIGTREETCH branch of Klipper then we recommend using KIAUH to move back to the mainline branch. We also recommend updating the firmware on all of your Klipper devices so that it too is running on a binary compiled from mainline.

1. Ensure that you are using mainline klipper by typing the following commands via SSH:

```
cd ~/klipper  
git checkout master
```

2. Next, type:

```
make menuconfig
```

3. Use these settings to compile the firmware.

```
(Top)
Klipper Firmware Configuration
[*] Enable extra low-level configuration options
  Micro-controller Architecture (Raspberry Pi RP2040) --->
  Bootloader offset (No bootloader) --->
  Flash chip (W25Q080 with CLKDIV 2) --->
  Communication interface (USB) --->
  USB ids --->
() GPIO pins to set at micro-controller startup
```

[*] Enable extra low-level configuration options

Micro-controller Architecture (Raspberry Pi RP2040) --->

Bootloader offset (No bootloader) --->

Flash chip (W25Q080 with CLKDIV 2) --->


Communication interface (USB) --->

USB ids --->

() GPIO pins to set at micro-controller startup

4. Once set, hit 'Q' and when asked, select yes to save.

5. Enter `make` to compile the firmware. When make is completed, the required `klipper.uf2` firmware will be generated in the `home/pi/klipper/out` folder and can be directly downloaded to the computer on the left side of the SSH software.

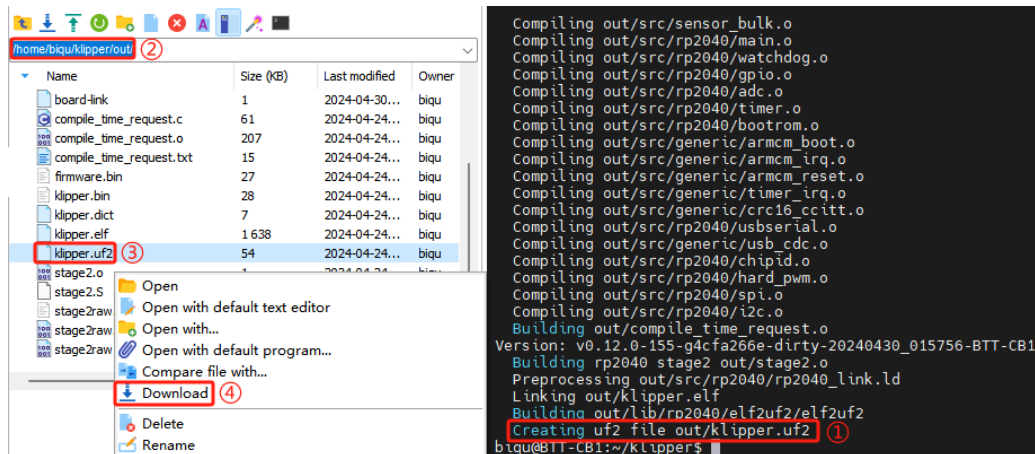

5.2. Update Firmware


5.2.1. Update Firmware via Computer

1. Press and hold the Boot button, then connect Eddy to your computer's

USB port using a USB cable (Don't disassemble your Eddy. The button is fully accessible without disassembly. The image is shown in an exploded view to make the button easier to see.)



2. Once recognized as a storage device, copy the downloaded klipper.uf2 into it. Eddy will automatically update its firmware and restart. The update will be complete after the restart.

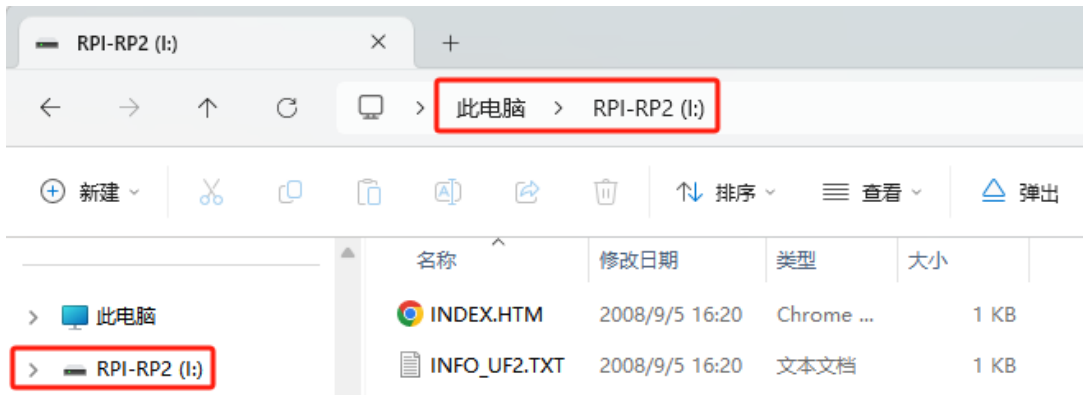

5.2.2. Update Firmware via DFU

1. Press and hold the Boot button, then connect Eddy to the USB port of your Raspberry Pi/BIGTREETECH Pi using a USB cable. (Don't disassemble your Eddy. The button is fully accessible without disassembly. The image is shown in an exploded view to make the button easier to see.)



2. Type `lsusb` into the command line. You should see Eddy.

```
pi@fluidpi: ~$ lsusb
Bus 001 Device 005: ID 2e8a:0003 Raspberry Pi RP2 Boot
Bus 001 Device 004: ID 1d50:6061 OpenMoko, Inc. Geschwister Schneider CAN adapter
Bus 001 Device 003: ID 0424:0c00 Microchip Technology, Inc. (formerly SMSC) SMC9512/9514 Fast Ethernet Adapter

Bus 001 Device 002: ID 0424:9514 Microchip Technology, Inc. (formerly SMSC) SMC9514 Hub
Bus 001 Device 001: ID 1d6b:0002 Linux Foundation 2.0 root hub
pi@fluidpi: ~$
```

3. Type `cd ~/klipper` into command line.
4. Type `make flash FLASH_DEVICE=2e8a:0003` Remember to change 2e8a:0003 to your device ID you found in step 2.
5. Type `ls /dev/serial/by-id/*` into the command line. The found device will be what you enter into your klipper config under [mcu eddy] for the Serial variable.

6. Klipper & Eddy Configuration

6.1. Printer.cfg Templates

Now that you have the right firmware loaded onto your Eddy, it is time to complete the Klipper configuration. BIGTREETECH provides three different sample configuration files to get you going. You will need to decide which one suits your needs the best. Choose the file that works best for you based on the criteria below. Read the comments in the selected configuration file carefully as they will help you to understand how to modify certain parameters to your installation. Each configuration file is linked below, but you can also find them by visiting <https://github.com/bigtreotech/Eddy>

- You wish to use the Eddy as a probe but will use another device as the z-endstop - [Use this config with no homing](#)
- You wish to use the Eddy as a probe AND as the z-endstop - [Use this config which includes homing](#)
- You wish to use the Eddy as a probe AND as the z-endstop and would like to use the beta z-offset functionality - [Use this config which includes homing and z-offset](#)

Whichever config you select, copy the entire contents into your printer.cfg file. If you get gcode macro conflicts then please see the section '[Error: gcode command < ANY GCODE COMMAND > already registered](#)' in the FAQ.

6.2. Z-Endstop Configuration

You can use the Eddy as the Z endstop or you can use another device as an endstop. If you decide to use another device as an endstop then set up your homing and endstop according to that device.

If you want to enable Z-Homing/Endstop for the eddy do the following things:

- a. Under your [stepper_z] in printer.cfg change [endstop_pin: PA5](#) to [endstop_pin: probe:z_virtual_endstop](#) and comment out or remove [position_endstop: 0](#). Note that your current endstop may not be PA5 so just look for the line that matches your current endstop and change it.

b. Ensure that you have selected the correct sample configuration file and that the entire contents of that file have been copied into your printer.cfg file. Take note that if you are using a KNOMI then there may be some macros that conflict with the macros in the KNOMI.cfg file. To resolve the conflicts, comment out the macros in the KNOMI.cfg file and uncomment the lines from the Eddy macros that deal with KNOMI functionality.

c. Edit the parts of the config file that are unique to your setup. These may be things like those in the list below. Follow the comments in the config file to help you to edit the values so that they work best with your setup.

- MCU serial
- X offset and Y offset
- Mesh_min and mesh_max
- Home_xy_position

Important:

The sample configuration requires you to adjust the x_offset and y_offset to match your probe position relative to your nozzle. The settings for the standard Voron X carriage mount are included in all sample configuration files.

7. Calibration

7.1. Drive Current Calibration

With the firmware and configuration done, you are now ready to begin the Eddy's drive current calibration.

1. Place Eddy Approx. 20mm above the bed. If you plan to use the Eddy as an endstop then you will not yet be able to home with it and you will need to manually move the gantry or bed such that the Eddy is 20mm above the bed.
2. From Mainsail or Fluidd run the command
`LDC_CALIBRATE_DRIVE_CURRENT CHIP=btt_eddy`
3. Type `SAVE_CONFIG` to save the drive current to your config.

7.2. Mapping Eddy Readings to Nozzle Heights

Now that the drive current has been calibrated, the Eddy will be able to obtain readings from the print bed. Klipper needs to know how those readings correspond to the height of the nozzle. The following calibration procedure positions the nozzle on the bed so that the Z height is = 0. It then takes readings from the Eddy as it gradually increases the nozzle height so that it can map those readings to known heights.

- If you have used one of the recommended configuration templates, you can simply follow the steps below to run the mapping procedure.
 1. Send the command `PROBE_EDDY_CURRENT_CALIBRATE_AUTO CHIP=btt_eddy`
 2. Follow the prompts on the klipper UI to lower the nozzle until it sandwiches a piece of paper between it and the bed but be careful not to dig into the bed. The paper should still be able to move with some force applied.
 3. Click accept and watch as the Eddy performs the mapping. Be sure to send `SAVE_CONFIG` when it is done.
 4. Skip ahead to **Bed Mesh Calibration**.

- If you have not used a configuration template, follow the steps below to run the mapping procedure.
 1. Home X and Y axes with command `G28 X Y`
 2. Make sure you don't have a bed heightmap loaded.
Send `BED_MESH_CLEAR` from the console to clear the heightmap.
 3. Move Nozzle to Centre of the bed with `G0 X150 Y150 F6000`. The given command assumes a 300x300 printer but you will need to adjust it for your bed size.
 4. Start the Manual Z Offset Calibration ([Paper test](#)) by typing `PROBE_EDDY_CURRENT_CALIBRATE CHIP=btt_eddy`. You will see an adjustment box that will allow you to lower the nozzle. Lower the nozzle until it sandwiches a piece of paper between it and the bed but be careful not to dig into the bed. The paper should still be able to move with some force applied.
 5. Once completed use `SAVE_CONFIG`.

```
09:23 SAVE_CONFIG
```

```
09:23 probe_eddy_current: stddev=144.727 in 3998 queries  
The SAVE_CONFIG command will update the printer config file  
and restart the printer.
```

```
09:22 ACCEPT
```

7.3. Bed Mesh Calibration

1. Home All Axes
2. If your printer supports `z_tilt` or `quad_gantry_level` (QGL), run:
`Z_TILT_ADJUST` or `QUAD_GANTRY_LEVEL` to prevent nozzle collisions during the mesh scan
3. Use command `BED_MESH_CALIBRATE METHOD=scan SCAN_MODE=rapid`
4. Once completed use `SAVE_CONFIG`

7.4. Temperature Compensation Calibration (Eddy USB ONLY)

Important:

The following steps are for Eddy USB Only. Eddy Coil doesn't have temperature compensation so these steps should be disregarded.

When Eddy performs temperature compensation, exercise caution, as the heated bed can reach extremely high temperatures.

1. Home All Axes and move Z 5 mm above the bed by typing `G0 Z5` or using the movement UI.
2. Set idle timeout by typing `SET_IDLE_TIMEOUT TIMEOUT=36000`
3. Run `TEMPERATURE_PROBE_CALIBRATE PROBE=btt_eddy TARGET=56 STEP=4`

Tips:

In the command above, the target is set to 56. That is a good value for many machines however, if your chamber will reach higher than that value then feel free to set the target higher. It will take slightly longer to complete the calibration the higher you go as the probe needs to soak for longer.

4. This will cause the UI to display the z axis adjustment box. Use [the paper method](#) mentioned here to pinch a sheet of paper between the nozzle and the bed and then accept the value.
5. After accepting the value, turn on your heat bed to the maximum value and your nozzle to 220°C.
6. If you are in a room with an air-conditioner or an open window, it would be good to turn it off and/or close the window. We want the temperature of the Eddy to rise and breezes will stop that.
7. As the Eddy temp rises you will automatically be asked to perform the paper pinch method at each 4°C interval. Be careful not to burn yourself on the bed as the bed can get quite hot.
8. Repeat the paper test method until the calibration completes. If you find that the temperature of the Eddy is no longer increasing then you can end the calibration early using the relevant command below.

The following additional gcode commands are available during drift calibration:

TEMPERATURE_PROBE_NEXT - may be used to force a new sample before the step delta has been reached.

TEMPERATURE_PROBE_COMPLETE - may be used to complete calibration before the TARGET has been reached.

ABORT - may be used to end calibration and discard results.

Tip: The Eddy thermal calibration process not only accounts for Eddy probe drift but it also accounts for thermal expansion of the mechanical components within your machine. This expansion can be very significant and it can result in poor first layers when using other probes. It is important to keep in mind that if you perform the thermal calibration with the nozzle and the heated bed turned on then there will be thermal expansion from both the hotend and the heated bed. Therefore, if you later try to perform a paper test and only have either the nozzle or the heated bed turned on you may find that there is about a 0.05 gap (not enough to cause a first layer issue but enough to feel less of a pinch on the paper). If this all sounds a bit confusing then don't worry. All you need to know is that you should perform the calibration with the bed and the nozzle both hot and then subsequently print with the bed and the nozzle both hot and you will get fantastic first layers.

You're all done and your Eddy will now give you a beautiful first layer across a wide temperature range!

8. Extra Info

8.1. Z-Offset

This section only applies to those who are using the Eddy for homing.

The Eddy should not need the use of a z-offset since it is calibrated to understand where z=0 is. Nevertheless, if you would like to use a z-offset then you should use the [sample config file that includes z-offset functionality](#).

To determine the correct Z-offset, follow the steps below.

1. Home your printer.
2. Place a piece of paper beneath the nozzle.
3. Use mainsail or fluidd to set the z height to z=0. DO NOT babystep to get the nozzle to z=0! Set it as the z-axis height.
4. After setting the z-axis height to z=0 check if the pinch on your paper is just right. If not, then use babystepping to go up or down.
5. After babystepping to the correct height, save the adjustment using the button on the mainsail or fluidd UI.

8.2. Bed Mesh Calibrate Parameters

The Eddy allows you to perform a very rapid bed mesh scan before each print to ensure that you get the best first layer possible. To do this, we recommend replacing the standard `BED_MESH_CALIBRATE` macro with our modified version from the sample configuration file and then including a `BED_MESH_CALIBRATE` call in your print start macro.

8.3. Bed Mesh Scan Height

The scan height is set by the `horizontal_move_z` option in `[bed_mesh]`. In addition, it can be supplied with the `BED_MESH_CALIBRATE` gcode command via the `HORIZONTAL_MOVE_Z` parameter.

The scan height must be sufficiently low to avoid scanning errors. Typically, a height of 2mm (ie: `HORIZONTAL_MOVE_Z=2`) should work well, presuming that the probe is mounted correctly.

It should be noted that if the probe is more than 4mm above the surface then the results will be invalid. Thus, scanning is not possible on beds with severe surface deviation or beds with extreme tilt that hasn't been corrected.

8.4. Rapid (Continuous) Scanning

When performing a rapid bed mesh scan there is little time to accumulate many samples per point so that they can be averaged and have noise removed. Therefore, a rapid scan may not be as accurate as a standard bed mesh scan but in most cases it will still produce a fine first layer.

Rapid scans can be improved by allowing the travel planner to slightly overshoot the scanned bed mesh and smooth the moves. You can configure this overshoot in the `bed_mesh` configuration section using the `scan_overshoot` parameter. Note that you will need to ensure that the axis can travel to the mesh boundary plus this overshoot value on your printer so be careful not to specify a value that is too high. Usually, 8mm is plenty.

9. FAQ - Frequently Asked Questions

1. Sometimes I get "Error during homing probe: Eddy current sensor error"

- This generally indicates that the oscillator within the Eddy sensor is not at a valid value before the probe/homing attempt starts. We recommend trying the following steps:
 - 1) Double check your probe height. It may be that it is too close to the bed or too high. Remember that we recommend that it is at 2mm-3mm above the bed when the nozzle is just touching the bed. Around 2.5mm is optimal in most cases but if you are finding that your probe is having errors at high temperatures then try to drop it just below 2mm. However, if your probe is having errors during QGL attempts then you may need to raise it slightly.
 - 2) After you have adjusted the probe height, remove all of the calibration settings from your config file and recalibrate the eddy.
 - 3) If you still receive this error then increase the reg_drive_current value to 16 from 15 if it is currently set to 15.

2. Sometimes I get a "Probe Triggered Before Movement" Error

- This will happen when you try to execute two successive PROBE commands. Always raise the gantry by a few mm between PROBE commands to avoid this.

3. Eddy is performing Z Hops when running Bed Mesh

- Make sure you are using the correct macro call. `BED_MESH_CALIBRATE METHOD=rapid_scan`

- Remove or alter KAMP - Adaptive Bed Mesh and any custom BED_MESH_CALIBRATE macros. Use klipper adaptive mesh instead or alternatively do not include KAMP/Adaptive_Meshing.cfg in your KAMP_Settings.cfg

4. Which Eddy version should I use?

- It depends on your needs. Eddy USB and Eddy Coil are nearly identical, however Eddy Coil is more for toolhead boards and connects via I2C connectors.
- Eddy Coil does not have temperature compensation and so it may be less reliable for homing if you are using it within a sealed chamber.

5. Error: gcode command < ANY GCODE COMMAND > already registered

- This will happen when you have conflicting gcode macros. Check all of your gcode macros for ones that share the same name and arbitrate the conflicts. Generally, you should select the functionality from the Eddy macros if there is a conflict and you are not sure what to do.

6. My z-offset doesn't seem to save and resets, is there a work around or fix?

- Coming from a standard probe, this may seem like a bug. However, if you have calibrated the Eddy correctly and are using the special homing macros, then there will be no need for a z-offset. Explaining why is a bit long winded but essentially when it comes to an Eddy, the z-offset parameter does not adjust the height at which the nozzle prints, it just adjusts the height at which homing or probing triggers.
- While we strongly recommend simply performing the Eddy probe calibration in order to get a nozzle height that is just right, you can still simulate a standard z-offset by using the [Z-offset beta sample configuration file](#). Simply uncomment any macro that is related to the beta z-offset functionality and you will be able to use the standard

mainsail buttons to raise/lower the nozzle and save that height as a z-offset.

7. My Eddy Macros Conflict with My KNOMI Macros

- The Eddy and the KNOMI share similar Macros. All of the needed functionality for the KNOMI has been built into the Eddy macros. Please comment out the KNOMI macros which conflict and use the Eddy macros.
- Note that you may need to uncomment some lines in the Eddy macros that are specifically included for people who run the KNOMI. Check the macros to see which lines have been commented and then uncomment them if they are needed for KNOMI.

8. KAMP and Eddy

- [KAMP aka Klipper-Adaptive-Meshing-Purging](#) should be removed from your Klipper prior to using Eddy. Please comment out the include line. ie#[include ./KAMP/adaptive_meshing.cfg] from your KAMP_SETTINGS.cfg
- Instead KAMP has been integrated into Klipper as of January 2024 and you should use the ADAPTIVE=1 option in your BED_MESH_CALIBRATION calls. You can find more [Information on Adaptive Mesh Here](#)

Should you require further resources for this product, you can find them at [GitHub](<https://github.com/bigtreotech/>). If you cannot find what you need, you may contact our after-sales support (service005@biqu3d.com).

If you encounter any other problems during use or have suggestions or feedback, please contact us. Thank you for choosing BIGTREETECH products.

If you encounter any other problems during use or have suggestions or feedback, please contact us. Thank you for choosing BIGTREETECH products.