

OPENDCS 6

DECODES

Platform Decoding Guide

Document Revision 7  
January, 2018

Cove Software, LLC  
(410) 715-1117  
[info@covesw.com](mailto:info@covesw.com)



**This document is based upon an open-source document delivered to U.S. Geological Survey as part of open source development efforts of many years. Cove Software has customized and enhanced the content to conform to the OPENDCS release.**

**It was subsequently delivered to U.S. Army Corps of Engineers Hydrologic Engineering Center (HEC) under a contract funded by the government.**

**U.S. Government is the sole copyright holder.**

## Table of Contents

1	Introduction .....	1
1.1	What does DECODES Do? .....	1
1.2	DECODES Database.....	2
1.3	DECODES Requirements.....	3
1.4	Resources.....	3
1.5	Revision History .....	3
2	Import and Export.....	4
2.1	Export from the DECODES Database Editor .....	4
2.2	Import with the DECODES Database Editor .....	5
2.3	DB Import Utility (dbimport).....	6
2.4	Platform Export Utility (pxport) .....	7
2.5	Database Export Utility (dbexport).....	7
3	DECODES Database Editor.....	8
3.1	GUI Layout .....	10
3.1.1	List Panels in General .....	10
3.1.2	Edit Panels in General .....	10
3.1.3	Exiting the Editor .....	10
4	Sites.....	12
5	DECODES Configurations.....	13
5.1.1	Decoding Scripts .....	16
6	Platforms .....	19
6.1	Platform Properties.....	20
6.2	Platform Sensors.....	21
6.2.1	Platform Sensor Properties .....	22
6.3	Transport Media .....	23
7	The DECODES Format Language .....	24
7.1	Execution of Format Statements.....	24
7.2	Stepping through the Script and the Data.....	24
7.3	Format Operation Overview .....	25
7.4	Skipping and Positioning Operations.....	27
7.5	The Check Operation .....	27
7.6	The Scan Operation.....	28

7.7	The Jump Operation .....	28
7.8	Repeating Groups of Operations .....	28
7.9	Field Operations.....	29
7.9.1	Pseudo-Binary and Pure-Binary Fields.....	30
7.9.2	Field Length and Delimiters: .....	31
7.9.3	Date Fields.....	32
7.9.4	Time Fields .....	33
7.10	The Time Truncation Operator.....	34
7.10.1	Time Interval Fields .....	34
7.10.2	Minute Interval and Offset Fields.....	34
7.10.3	Format Label Fields .....	35
7.10.4	Sensor Value Fields .....	35
7.11	Other Decoding Features.....	37
7.11.1	How to Omit Specific Sensor Values .....	37
7.11.2	Data Delimited by either a Plus or Minus Sign .....	37
7.12	Format-Language Function Calls .....	38
7.12.1	Comma-Separated Value Data.....	38
7.12.2	Processing SHEF Data .....	39
7.12.3	Defining Symbols to Represent Missing Data.....	43
8	The DECODES Platform Wizard.....	44
8.1	Platform Wizard Start Panel.....	45
8.2	Platform Wizard Site Panel .....	46
8.3	Platform Wizard Sensors Panel.....	47
8.4	Platform Wizard Equipment Model Panel.....	48
8.5	Platform Wizard Decoding Script Panel .....	48
8.6	Platform Specific Information.....	50
8.7	Save Your Work .....	51
9	USGS EDL (Electronic Data Logger) Files.....	52
9.1	How does DECODES find the Platform Record? .....	52
9.2	Time Zones for Dates & Times in EDL Files .....	52
10	Seasonal Data Processing .....	53

# 1 Introduction

DECODES stands for DEvice CONversion and DELivery System. DECODES is the module within OpenDCS (Open Data Collection System) that takes data from a variety of recording devices and converts it into standard engineering units, suitable for entry into a database.

This manual describes how to use configure DECODES to handle data from each of your platforms. Included is a basic description of the database editor, importing & exporting, and the DECODES format language.

For information on running DECODES routing specs, scheduling, and checking status, see the OPENDCS DECODES Routing and Scheduling Guide.

## 1.1 What does DECODES Do?

The types of recording devices include:

- Electronic Data Loggers (EDLs) – typically manually retrieved data,
- GOES DCPs (Data Collection Platforms – data retrieved by satellite telemetry,
- Modem loggers – must be polled via modem
- Network DCPs – either polled via network (including GPRS) or the stations call into a data collection server.

The operations performed by DECODES are below.

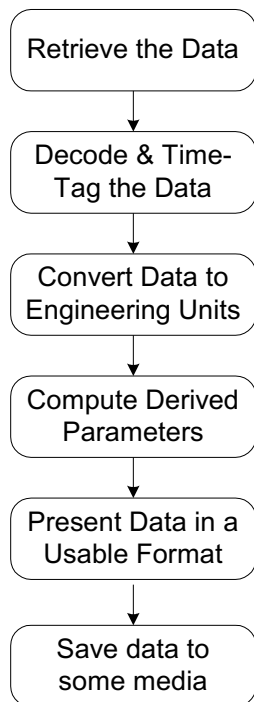


Figure 1: What DECODES Does

DECODES can handle any ASCII format currently in use by the DCS. This includes true ASCII values or the pseudo-binary values common in compact random messages.

## 1.2 DECODES Database

DECODES uses a database of platform specifications to tell it how to decode data from a given station. This database includes:

<b>DataSource</b>	Where to retrieve raw data from: Directory, File, LRGS Network Connection, shared memory, etc. If an LRGS network connection is specified, you can specify network lists, time-ranges, etc.
<b>Sites</b>	Information about a location
<b>Platforms</b>	Information about the logging device. There may be more than one Platform at a Site.
<b>DecodingScript</b>	A structured scripting language that tells DECODES how to extract time-tagged samples from the raw messages
<b>EU-Converters</b>	How to convert raw values into engineering units, and how to convert between various types of engineering units (e.g. feet to meters).
<b>Presentation</b>	How to format each type of sample. For example, you might want all stage values to be presented in centimeters with 10.3 resolution.
<b>DataTypes</b>	DECODES knows how to convert between the USGS (EPA) numeric codes and SHEF physical element codes.
<b>Formatters</b>	How to format data on output. Formatters are implemented for SHEF, SHEFIT, Human-Readable, and "Dump".
<b>Consumers</b>	Where to put the output data: files, directories, pipes, etc.
<b>RoutingSpec</b>	Puts all of the above together. A RoutingSpec says where to get the raw data, how to decode it, how to EU convert it, how to format it, and where to send it.

DECODES can store information in several types of databases:

- XML – This is really just a tree of XML files on the local disk.
- OPENDCS PostgreSQL – The OpenDCS SQL Schema for the PostgreSQL Relational Database Management System
- OPENDCS Oracle - The OpenDCS SQL Schema for the Oracle Relational Database Management System
- CWMS – U.S. Army Corps of Engineers' CWMS (Corps Water Management System) is a multi-office SQL schema running under Oracle
- USBR HDB – U.S. Bureau of Reclamations HDB (Hydrologic Database) is a SQL schema running under Oracle

## 1.3 DECODES Requirements

DECODES is written in 100% pure Java. Therefore there should be no porting issues in running it on any modern computing platform. Cove Software, LLC has verified its operation under Windows (various releases), Linux, and Mac OS X.

DECODES is open-source software. It was developed originally by Ilex Engineering, Inc., under a contract jointly funded by USGS and USACE. The principle author of the software is now employed by Cove Software, LLC.

Cove Software, LLC offers maintenance and support contracts to users of DECODES. For more information visit our web site at [www.covesw.com](http://www.covesw.com), call us at 410.715.1117, or email us at [info@covesw.com](mailto:info@covesw.com).

## 1.4 Resources

See the *OPENDCS6 Installation Guide* for information on:

- Installing OPENDCS in various architectures
- Configuring OPENDCS and DECODES
- Creating a DECODES or Time Series Database
- Using OPENDCS with external database systems like CWMS and HDB

See the *OPENDCS 6 Routing and Scheduling Guide* for information on:

- DECODES Data Sources
- Presentation Groups
- Routing Specifications
- Automated Scheduler
- Output Formatters
- DECODES Consumers

## 1.5 Revision History

Revision 7, January 2018:

- Documented Platform and Platform Sensor Properties

## 2 Import and Export

DECODES supports an XML format for all of its database schema. DECODES meta data (data describing your platforms, sites, devices, etc.) can be imported from and exported to XML.

### 2.1 Export from the DECODES Database Editor

Press 'File – Export' to view the dialog shown in **Error! Reference source not found..** You have four choices as to what to export:

- Entire Database – Create an XML file containing all of your database records. This is the equivalent of the 'dbexport' command.
- All Platforms – Create an XML file containing all of your platform records. This is equivalent to the 'pxport -a' command.
- Platforms in network list - Create an XML file containing platform records for platforms in the specified network list. This is equivalent to the 'pxport -n' command.
- Platforms by Name – Create an XML file containing named-platform records only.

After selecting what to export, specify an output file by either typing the name in the area provided or by pressing the 'Choose' button. Finally press the 'Export' button. As data is exported, a message will be added to the 'Results' area at the bottom.


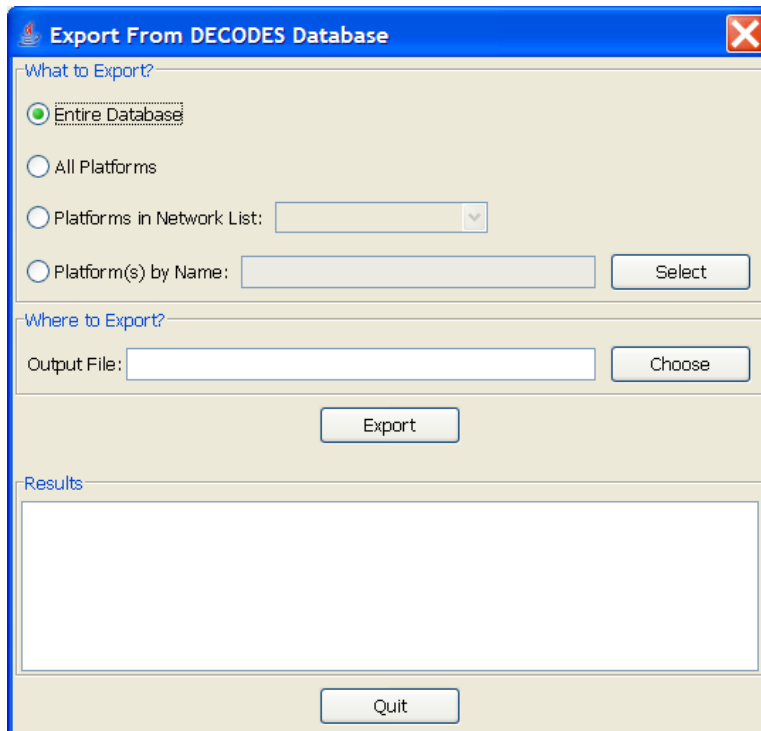


Figure 2: The Export Dialog




## 2.2 Import with the DECODES Database Editor

Select File – Import. You will see the dialog shown in Figure 3. This dialog will allow you to open an XML file, scan its records, select which records to import, and finally, import them into your editable database.

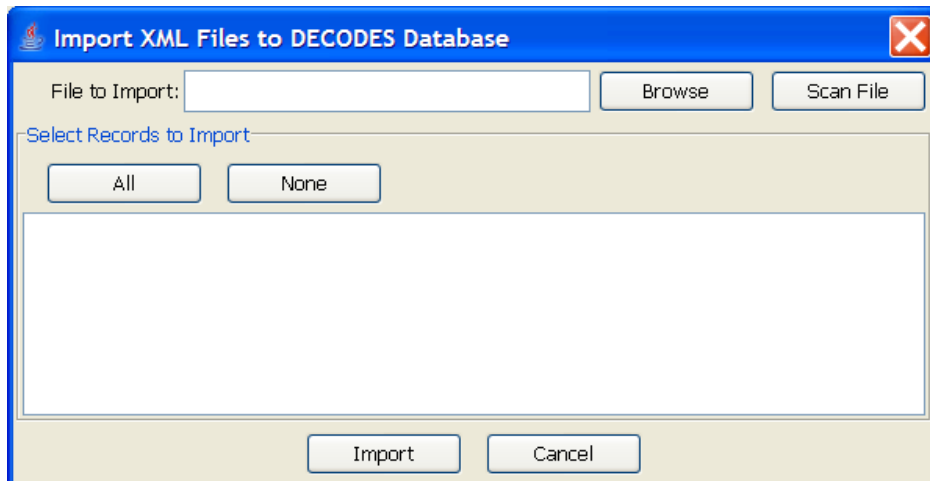

**Figure 3: Import XML Files Dialog.**

Press the ‘Browse’ button or type in the file name in the area provided. After selecting a file, press the ‘Scan File’ button. Figure 4 shows the dialog after a file has been opened and scanned. The user has selected two platforms for import.

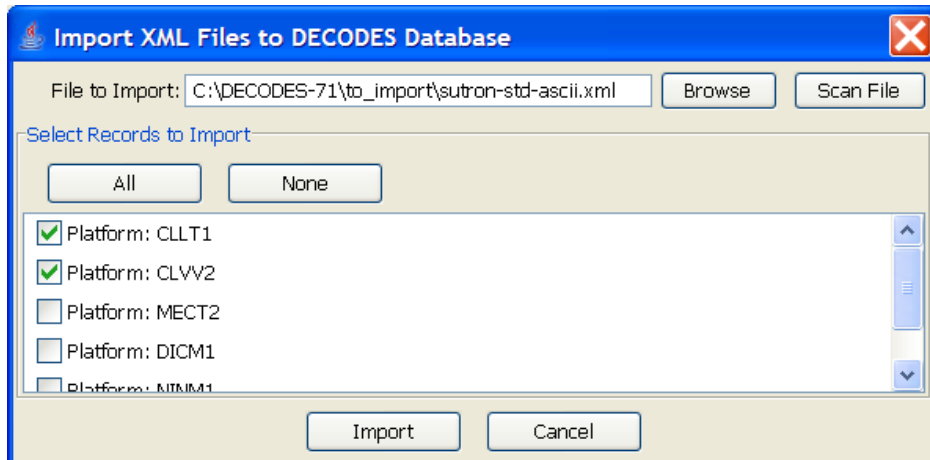

**Figure 4: Import Dialog showing successful scan.**

The ‘All’ button will select all records. The ‘None’ button will de-select all records. Once you have the desired records selected, press the ‘Import’ button at the bottom.

The imported records will be opened in editor tabs. You should then go to each tab and verify the information. Finally press the ‘Commit’ and ‘Close’ buttons on each tab.

If you are sure that all information is correct in all tabs, you can select ‘File – Commit All’ and ‘File – Close All’ as a short cut.

## 2.3 DB Import Utility (dbimport)

### Synopsis:

```
dbimport <options> file1 file2 . . .
```

### Options:

-d <i>debug-level</i>	Level should be 1, 2, or 3 from the least to most verbose.
-v	Validate only: Do not actually import any data. Just issue warnings about conflicts and parsing errors.
-o	Keep old records on conflict. Default is to overwrite old records with new ones.
-r	Write reference list information. Usually reference list info like site name types, data-types, etc., is ignored.
-A <i>agency-code</i>	Specify a default Agency Code used for platform records that do not supply one.
-O <i>platform-owner</i>	Specify the owner for all imported platform records
-C	Link platforms to existing configurations. Do not import configuration records even if they are present in the input data.
-W	Overwrite the entire contents of the current database with the imported data. <b>Caution! This should only be used when you want to replicate a remote DECODES database. All of your current metadata will be erased!</b>
-y	Normally, if you use the -W option it will ask you for confirmation. The '-y' option means 'Yes. I really mean it.' You would use this option when you are periodically replicated a remote database, e.g. from a cron job.

### Description:

This program accepts XML files that were created by the export utilities described above. Imported records are inserted into your editable database.

DbImport normally ignores 'setup' records that are part of a large database dump. This allows you to exchange a dump of your entire database with other users, without fear that special changes they make in the database structure will affect you. The following record types are only imported if the corresponding file is placed on the command line:

- Enumeration Records – found in the file enum/EnumList.xml
- Engineering Units and Conversion – found in the file eu/EngineeringUnitList.xml

If you want to import setup records, use the -r option.

This program writes log messages to a file called "util.log" in the current directory.

### Examples:

```
pxport -a > platform-dump.xml  
...at a different organization  
dbimport platform-dump.xml
```

## 2.4 Platform Export Utility (pxport)

### Synopsis:

```
pxport <options>
```

### Options:

<code>-d debug-level</code>	Level should be 1, 2, or 3 from the least to most verbose.
<code>-n network-list</code>	Export platforms referenced by the named network list.
<code>-s site-name</code>	Export the platform record for a specific site.
<code>-a</code>	Export all platforms.
<code>-c config-name</code>	Export platforms that use a given platform configuration.
<code>-i</code>	Export from the installed database. The default is to export from the editable database.

### Description:

This program writes XML records containing platforms (and all subordinate records such as site, config, script, and transport media). Records are written to standard output.

Multiple instances of the above options are acceptable. See examples below.

This program writes log messages to a file called “util.log” in the current directory.

### Examples:

Dump all platforms to a single XML file:

```
pxport -a > platform-dump.xml
```

Export three specific sites:

```
pxport -s TCLG1 -s HUDG1 -s LHMGI > threesites.xml
```

Export platforms referenced by Atlanta’s network list:

```
pxport -n Atlanta > Atlanta-platforms.xml
```

## 2.5 Database Export Utility (dbexport)

You can export the entire database to an XML file with the ‘dbexport’ command:

```
dbexport > file By default exports the editable database.
```

```
dbexport -i > file Option to export installed database
```

This command is very useful for taking periodic backups of the DECODES database.

### 3 DECODES Database Editor

Start the Database Editor (dbedit) from the launcher with the command:

```
launcher_start
```

Then press the button for DECODES Database Editor.

You can also start the dbedit directly from a terminal with the command:

```
dbedit <options>
```

#### Options:

-d <i>debug-level</i>	Level should be 1, 2, or 3 from the least to most verbose.
-E <i>databaseLoc</i>	Edit the XML database at the specified location. This overrides the editable database location specified in your DECODES Properties file.

The editor starts as shown in Figure 5.

DECODES Database Editor

File

Help

Platforms

Sites

Configs

Equipment

Presentation

Routing

Sources

Network List

Schedule Entry

List

Platforms Defined in the Database

Platform	Agency	Transport-ID	Config	Expiration	Description
ABEE-goes	AE-EDM-...	444A6254	PsBin-AGDM-001		M-0112
ABNMS-goes	ESRD	444717A2	ABMOBILE		Northern Emergency Portable Unit - S...
ABNMS3-goes	ESRD	444B5534	Special-ABMOBIL3		Northern Emergency Portable Unit - S...
ABNMS4-goes	ESRD	444900BC	Shef-AE-WQ-003		Northern Emergency Portable Unit - S...
ABNMS5-goes	ESRD	444824AA	Shef-AE-WQ-002		Northern Emergency Portable Unit - S...
ABNMS6-goes	ESRD	4449C5A2	Shef-AE-WQ-002		Northern Emergency Portable Unit - S...
ABSMS-goes	ESRD	44472238	ABMOBILE		Southern Emergency Portable Unit - S...
AGTK-goes	AE-EDM-...	44415466	PsBin-AGDM-001		M-0112
AKAM-goes	AENV	4441041A	AKAM-spec2		M-0112-AE-LET (remark Mike Coffill ...
ALBE-loggernet	AESRD	Albert_Hall	loggernet-02		Albert Hall - AARD
ALLI-goes	AE-CAL-...	4453C36E	PsBin-AGDM-001		M-0112 (UA omitted till correct sensor...
ANDR-goes	AE-EDM-...	444D301C	PsBin-AGDM-003		M-0112
ARDE-loggernet	AESRD	Ardenville_AG	loggernet-ARDE		Ardenville - AGCM
ATHA-loggernet	AESRD	Athabasca	loggernet-02		Albert Hall - AARD
ATLE-goes	AE-CAL-...	44425368	PsBin-AGDM-003		M-0112
ATMO-goes	AE-EDM-...	444D468C	PsBin-AGDM-002		M-0112
AURO-loggernet	AESRD	Aurora_RAMP	loggernet-AURORA		Aurora Climate Station - RAMP
AVAL-goes	AE-CAL-...	4446E5DC	PsBin-AGDM-003		M-0112
AZUR-goes	AE-CAL-...	4440C3FE	PsBin-AGDM-001		M-0112
BADG-snotel	NRCS	307	SNOTEL-CSV-2		SNOTEL
BAHW-goes	AE-EDM	444DC098	BAHW		M-0112
BALL-loggernet	AESRD	Ballator	loggernet-03		Ballater - AGCM
BANA-goes	AE-EDM	444AE440	Shef-AE-Met-002		M-0112
BANF-loggernet	AESRD	Banff_CS	loggernet-06		Banff - MSC
BARN-goes	AE-CAL-...	44493526	PsBin-AGDM-003		M-0112
BARO-goes	AE-CAL-...	445370E0	PsBin-AGDM-001		M-0112 (UA omitted till correct sensor...
BARR-camp	AESRD	barr	camp-11-1		Barrhead - MSC
BASO-goes	AE-CAL-...	44538064	PsBin-AGDM-001		M-0112
BDAM-loggernet	AESRD	Beaverdam_AG	loggernet-04		Beaverdam - AGCM
BDIA-goes	AE-CAL-...	4441728A	PsBin-AGDM-001		M-0112
BEAU-goes	AE-LET	4446F6AA	Shef-AE-Met-002		M-0112

Open

New

Copy

Delete

Refresh

Figure 5: Database Editor Platform List Screen.

## 3.1 GUI Layout

A row of Tabs appears along the top corresponding to the different kinds of records in the database (Platforms, Sites, Configs, etc.)

### 3.1.1 List Panels in General

Underneath each of those tabs you will see a “List” tab. In Figure 5, the Platform tab is selected, so we see the List of platforms.

Click on the column header in the List tab to sort the elements by the columns value. In Figure 5 the ‘Site’ column header was clicked, so we see elements sorted by Site name.

Along the bottom of the List tab you see buttons with the following labels:

**Open** To edit a database record, click on it in the list and press Open

**New** Press new to create a new database record.

**Copy** To copy a database record, click on it in the list and press Copy. You will be prompted for a name for the copy.

**Delete** To delete a database record, click on it in the list and press Delete.

**Refresh** This is a placeholder for future a feature.

### 3.1.2 Edit Panels in General

When you **Open** a record, a new tab appears to the right of the list tab. For example, Figure 6 shows the result after we do the following:

- Select the **Configs** top-level tab.
- Select the record loggernet-20 from the list
- Press the **Open** button.

Notice the bottom of the Edit Panel. The **Commit** button writes the record back to the database. You can do this at any time. It does not close the panel.

The **Close** button closes the edit panel. If you have made changes to the record you will be asked if you want to save them.

### 3.1.3 Exiting the Editor

You can exit the editor by selecting File-Exit or by closing the window. If you have edit panels open in which changes have not been saved, you will be forced to close these panels before you can exit.

**DECODES Database Editor**

File Help

Platforms Sites **Configs** Equipment Presentation Routing Sources Network List Schedule Entry

List loggernet-20

Name: loggernet-20  
Equipment Model:  **Select**  
Num Platforms:

Description

**Sensors**

Sensor	Name	Data Type	Mode	Sampling Times	Properties
1	Air Temp	SHEF-PE:TA	Fixed	00:00:00 1 hour	
2	Water Temp Max	SHEF-PE:TX	Fixed	00:00:00 1 hour	
3	Water Temp Min	SHEF-PE:TN	Fixed	00:00:00 1 hour	
4	Humidity	SHEF-PE:XR	Fixed	00:00:00 1 hour	
5	Solar Rad	SHEF-PE:RW	Fixed	00:00:00 1 hour	
6	RR	NL-SHEF:RR	Fixed	00:00:00 1 hour	
7	Precip	SHEF-PE:PC	Fixed	00:00:00 15 min...	TimeOffsetSec=-2700
8	Snow Depth	SHEF-PE:SD	Fixed	00:00:00 1 hour	
9	Wind Speed	SHEF-PE:US	Fixed	00:00:00 1 hour	
10	Wind Direction	SHEF-PE:UD	Fixed	00:00:00 1 hour	

**Add Sensor**  
**Edit Sensor**  
**Delete Sensor**  
  
**Add DCP PMs**

**Decoding Scripts**

Name	Type
tsff	Decodes

**Add**  
**Edit**  
**Delete**

**Commit**
**Close**

**Help**

**Figure 6: Platform Config Edit Panel.**

## 4 Sites

In DECODES, a site is simply a location with one or more names. It also has a collection of meta-data it can store about the location.

Figure 7 shows an example of the Site Edit Panel. The left panel shows the names for the site. A site can have several names, but only one of each time. This site has a local name “RNSASRMH” and a wsc (Water Survey of Canada) name of 05DC001. If your organization uses a particular kind of name, you can add it.

On the right are type-in fields for descriptive information about the site such as latitude, longitude, etc.

As in many of the DECODES records, you can adorn the site with a set of Properties (name=value pairs). Properties are used by various formatters and other modules and are described in the appropriate sections.

Type	Identifier
local	RNSASRMH
wsc	05DC001

Latitude:	
Longitude:	
Elevation:	
Elev Units:	ft
Nearest City:	
Time Zone:	
State:	
Country:	
Region:	
Public Name:	

Description, Directions, Etc.

North Saskatchewan River near Rocky Mountain House

Name	Value
------	-------

Figure 7: The Site Edit Panel.



## 5 DECODES Configurations

Suppose you wanted to field 10 new water-level stations. You purchase ten sets of identical equipment (loggers, transmitters, antenna, sensors) and configure them all the same. In this case, you could decode them all with the same Configuration record.

The Configuration record contains:

- A list of sensors (names, data type codes, min/max, other properties)
- A script that handles the decoding using the DECODES Format Language.
- The script contains more information about each sensor such as the engineering units and any coefficients required to convert raw data to the correct units.

Figure 8 shows an example of an open platform configuration.

The panel shows you the current number of platforms that are using this configuration. This may be important if you plan to make modifications. Your modifications will affect all platforms using the config.

The center of the panel contains a list of Sensors defined in this configuration. Using the buttons to the right, you can Delete, Edit, or Add sensors in this list. If you edit or add a sensor, you will see the dialog shown in Figure 9.

At the bottom of the panel you see a list of decoding scripts. Decoding scripts do the work of extracting sensor samples from your raw message. Using the buttons to the right, you can Delete, Edit, or Add scripts in this list. If you edit or add a script, you will see the dialog shown in Figure 10

**DECODES Database Editor**

File Help

Platforms Sites **Configs** Equipment Presentation Routing Sources Network List Schedule Entry

List loggernet-20

Name: loggernet-20

Equipment Model:  **Select**

Num Platforms: 1

Description: Loggernet Decoder, 20th variation

**Sensors**

Sensor	Name	Data Type	Mode	Sampling Times	Properties
1	Air Temp	SHEF-PE:TA	Fixed	00:00:00 1 hour	
2	Water Temp Max	SHEF-PE:TX	Fixed	00:00:00 1 hour	
3	Water Temp Min	SHEF-PE:TN	Fixed	00:00:00 1 hour	
4	Humidity	SHEF-PE:XR	Fixed	00:00:00 1 hour	
5	Solar Rad	SHEF-PE:RW	Fixed	00:00:00 1 hour	
6	RR	NL-SHEF:RR	Fixed	00:00:00 1 hour	
7	Precip	SHEF-PE:PC	Fixed	00:00:00 15 minu...	TimeOffsetSec=-2700
8	Snow Depth	SHEF-PE:SD	Fixed	00:00:00 1 hour	
9	Wind Speed	SHEF-PE:US	Fixed	00:00:00 1 hour	
10	Wind Direction	SHEF-PE:UD	Fixed	00:00:00 1 hour	
11	Battery	SHEF-PE:VB	Fixed	00:00:00 1 hour	

**Decoding Scripts**

Name	Type
tsff	Decodes

**Buttons:** Add Sensor, Edit Sensor, Delete Sensor, Add DCP PMs, Add, Edit, Delete

Figure 8: Platform Config Edit Panel.

**Edit Config Sensor**

Configuration: loggernet-20 Sensor: 7

Sensor Name:

Standard:  Code:

Data Types Standard:  Code:

Standard:  Code:

USGS Stat Code:

Valid Range - Min:  Max:

Recording Mode:

1st Sample Time:  (HH:MM:SS)

Sampling Interval:  (HH:MM:SS)

Equipment Model:  **Select**

**Properties**

Name	Value
TimeOffsetSec	-2700

**Buttons:** Add, Edit, Delete, OK, Cancel

Figure 9: Edit Config Sensor Dialog.

Sensor Properties are used to activate many special features within DECODES.

You can define properties here, and they will apply to all platforms using this configuration. For example, the figure above shows that a time offset of -2700 (seconds) is to be applied to every value for this sensor (to subtract 45 minutes).

If you want the property setting to apply to only a specific platform, apply the property in the Platform Sensor dialog, as described in section 0. Any settings defined in the Platform dialog will override settings made in the Config-Sensor dialog shown above.

### 5.1.1 Decoding Scripts

A sample Decoding Script dialog is shown in Figure 10. This is the trickiest part. You will likely spend more time in this dialog than any other part of DECODES.

At the very top of the screen you see the name of the configuration that this script belongs to, the name of the script, and a selection for data order.

The name of the script must be unique within the configuration. You are strongly encouraged to follow these conventions:

- Script Name ‘ST’ for Self Timed GOES DCP Messages,
- Script Name ‘RD’ for Random GOES DCP Messages,
- Script Name ‘EDL’ for Electronic Data Logger Files.

Below the top line, there are four main areas of this dialog:

- Format Statements
- Sensor Units & Conversions
- Sample Message
- Decoded Data

**Format Statements:** Type the label in the left column and the statement in the right. Each statement must have a label. You can break up a long format statement on two lines with the same label. The figure below shows that a single statement with label “st” has been broken into several lines.

Execution will always start with the first statement in the list. You can select a statement and press the Up or Down buttons to move statements around in the list. You can use the Add button to add a new statement at the end of the list. The Delete button will ask you for confirmation before deleting the selected statement.

The syntax for Format Statements is the topic of the entire Chapter 7 below.

**Sensor Units & Conversions:** In this list you assign units to each sensor and a raw conversion algorithm. In the example shown the user has selected the algorithm for Battery voltage. Linear conversion ( $y = Ax + B$ ) has been selected for both parameters. You then type the coefficients directly in the table.

**Sample Message Area:** You can load raw data and interactively try to decode it using your format statements and conversions. You can do this several ways.

To load a sample GOES DCP message from your LRGS server, do this:

- Press the ‘Load’ button to bring up the dialog shown in Figure 11.
- Select “Load from LRGS”.
- Select an LRGS server from the list.
- Enter the DCP address, and optionally, the channel number.
- Click OK.

To load a sample message of any type from a file, do this:

- Press the ‘Load’ button to bring up the dialog shown in Figure 11.
- Select “Load from File”.
- Enter the file name, or press the ‘Select’ button to navigate to it from a menu.
- Click OK.

You can also copy/paste from other applications directly into the Sample Message area. Use the standard copy/paste commands (CTRL-C=copy, CTRL-V=paste).

Press the ‘Decode’ button to apply the format statements to the raw data. The results are shown in the Decoded Data area at the bottom.

For easy reference, DECODES will assign a color to each sensor. The color will be used for the decoded data, for the sensors in the unit conversion list, and finally, the raw data within the sample message.

After decoding, you can select a cell within the decoded data. The corresponding raw data is highlighted with a yellow background. The example shows that the 16:00 Air Temperature value corresponds to raw characters “DKz” within the message.

**Edit Decoding Script**

Script Name: ST Data Order: Ascending Header Type

**Format Statements**

Label	Format Statement
st	22x,F(S,BC,3,1),F(S,BC,3,2),24x,F(S,BC,3,3),4(F(S,BC,3,4)),
st	3x,F(S,BC,3,18),3x,F(S,BC,3,5),3x,F(S,BC,3,6),27x,F(S,BC,3,8),
st	F(S,BC,3,7),F(S,BC,3,19),3x,F(S,BC,3,9),F(S,BC,3,10),

**Sensor Unit Conversions**

#	Name	Units	Algorithm	A	B	C	D	E	F
1	AT	degC	none						
2	HU	%	none						
3	UA	M/s	none						
4	PR	mM	none						

**Sample Message**

445651CC14104203222G48-0NN142WUB00200  
 BY@\_A@Ah@\_P@XKB0hImDKzEEdG[uG[0B\_wGf^DNG@^KBbPDMJFYIByuByuBytBytF@@AnWF@  
 @GRDGQNB`IDLvDLfGjzD0zG[JGXzBbWDSzFVtDLHG\_rCkFF@InWImWImWImWImWImWImWImWF  
 0iC1@CjSCjCkIC1CmWC1BCj0Ck\CiXChoCj~DUxDVgD`TBW

**Decoded Data**

Date/Time (US/Eastern)	1: AT degC	2: HU %	3: UA M/s	4: PR mM	5: WS M/s	6: WD degAz	7: TN degC	8: de
2014/04/14-15:45:00				370.10				
2014/04/14-16:00:00	7.62	44.5200	1.6090	370.10	5.25	209.20	6.13	7.76
2014/04/14-16:15:00				370.00				
2014/04/14-16:30:00				370.00				

OK Cancel

Figure 10: Decoding Script Edit Dialog Showing Interactive Decoding.

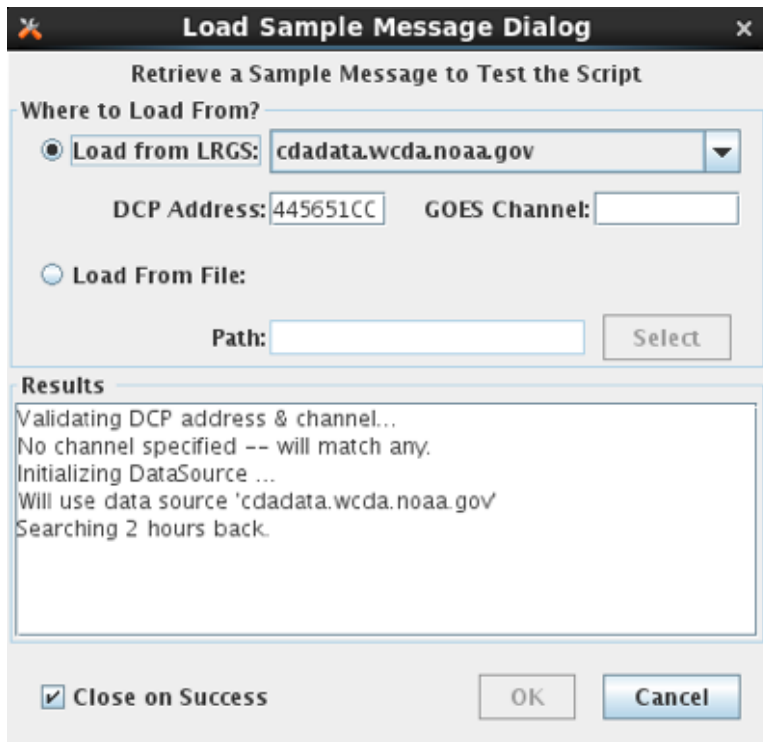


Figure 11: Load Sample Message Dialog.

For even more information on how the script was executed, you can hit the ‘Trace’ button after decoding. A detailed list of operations is shown, as in Figure 12.

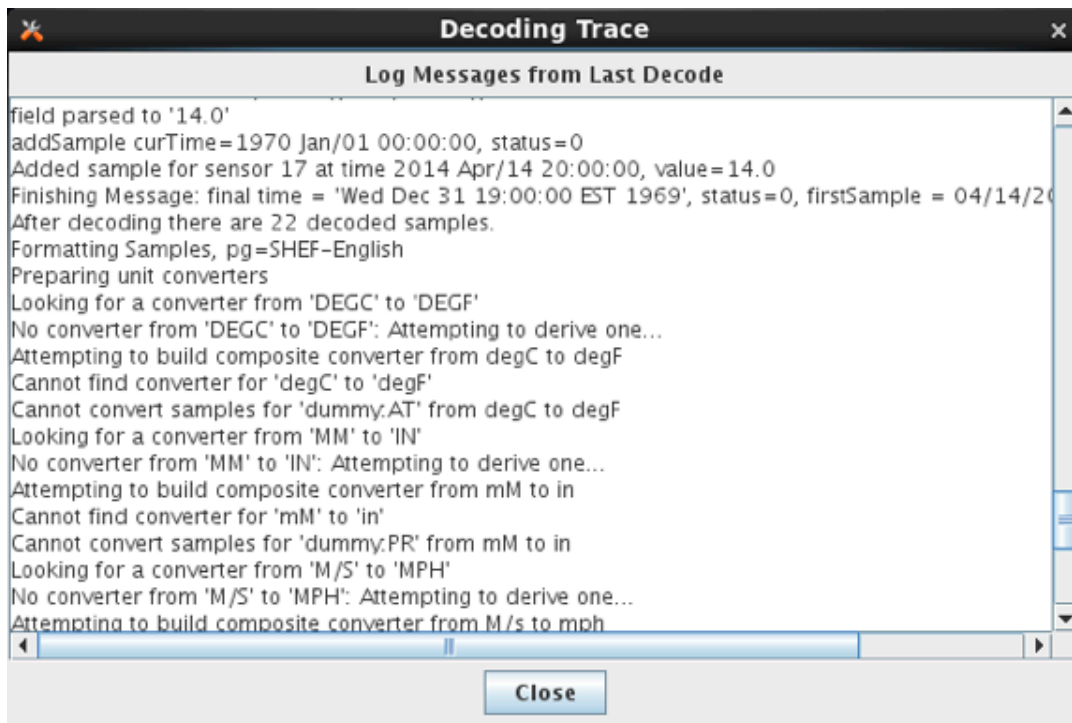


Figure 12: Decoding Script Trace Dialog.

## 6 Platforms

In DECODES, a Platform models a particular data-logger & transmitter. It is a box that emits a message. The platform edit panel is shown in Figure 13.

- A Platform exists at a Site. Press the Site Choose button to bring up a dialog in which you can select a site.
- A Platform is assigned to a Configuration. Press the Config Choose button to make this association. As a shortcut, there is also an Edit button. This is equivalent to going to the Configs tab and opening the selected config.

If you only have a single platform at a site (a typical arrangement), then you do not to enter a Designator. If you have multiple platforms at the same site, then you must add a designator to distinguish them.

The Owner Agency and Description are simple free-form type-in fields. They are informational and not used by other DECODES software.

DECODES Database Editor

File Help

Platforms Sites Configs Equipment Presentation Routing Sources Network List Schedule Entry

List 445651CC

Site: local-SAVA Choose

Designator: goes

Config: PsBin-AGDM-002 Choose Edit

Owner Agency: AE-EDM-ARD

Last Modified (UTC): 04/11/2014 17:31:27

Expiration (UTC):

☒ Production

Make Historical Version

Platform Properties

Description

M-0112 (WS and WD will be installed later)

Platform Sensor Information

Sensor	Name	Actual Site	Properties
1	AT		
2	HU		
3	UA		
4	PR		
5	WS		omit=true

Edit Sensor Info

Transport Media

Type	ID	Script Name	Channel
goes-self-timed	445651CC	ST	142

Add Edit Delete

Commit Close Help

Figure 13: Platform Edit Panel.

## 6.1 Platform Properties

Click on the Platform Properties button to bring up a pre-populated list of available properties that apply to platforms as a whole. The properties currently include:

- **pollPriority:** An integer 1, 2, or 3, with default = 3. This only applies to polled stations. It allows you to determine the priority (order) in which stations will be polled in the network list of polled stations. The highest priority is 1, meaning that it will be polled before any stations with priority 2, or 3.
- **ignoreSeason** – Set to the name of a season you have defined. This station will *not* be decoded during the specified season. A typical use is for stream gauge stations during months when the stream is frozen.
- **processSeason** – Set to the name of a season you have defined. This station will *only* be decoded during the specified season.
- **debugLevel** – Set to 1, 2, or 3 for increasing levels of debugging information when decoding this platform. 3 is the most verbose. This value, if specified, will override the debug level on the routing spec.



## 6.2 Platform Sensors

Platform-specific sensor information is stored here. To modify this information, select the sensor and click 'Edit Sensor Info'. The dialog is shown in Figure 14.

- If a sensor on this platform is actually located at a different site, you can associate the sensor with a site. In most cases, however, the “Actual Site” field is blank, meaning that this sensor is at the same site as the platform.
- You can enter platform-specific max and min limits. For convenience, the dialog shows any max/min that is specified in the config record. *The values here will override the config.*
- A set of properties can be defined. The list show most of the possible properties. You can hover the mouse over a property name for tool-tip help on each.

You can do simple scale and offset adjustments to sensor values on a platform specific basis by defining the following properties:

- preoffset – A number added to each sensor value. This is done prior to scaling.
- scale – A number to be multiplied by each sensor value.
- offset – A number added to each sensor value (after scaling).

Normally values outside the min/max bounds will simply be discarded. You can add additional properties to cause the out-of-bounds values to be replaced with some other special value. Min/Max checks are done after offset and scaling.

- “minReplaceValue” – Add a property with this name if you want a value below the minimum to be replaced with a special value.
- “maxReplaceValue” – Add a property with this name if you want a value above the maximum to be replaced with a special value.

**Platform Sensor Parameters**

Sensor Number: 5    Sensor Name: WS    Param Code: US

Actual Site: (inherited)    **Select**    **Clear**

Min and Max defined here override min/max in configuration.

Platform Specific Min:    Config Min: 0.0

Platform Specific Max:    Config Max: 250.0

USGS DDNO:    ▼

**Additional Properties**

Name	Value
omit	true
CwmsVersion	
modeled	
scale	
modelId	
offset	
maxReplaceValue	

**Add**    **Edit**    **Delete**

**OK**    **Cancel**

Figure 14: Platform Sensor Parameters Dialog.

### 6.2.1 Platform Sensor Properties

There are many properties that can apply to sensors. Properties set in a Platform Sensor record will override any values set in the Config Sensor record. Currently supported properties include:

- ADAPS\_Medium\_type – Medium Type to use in the UGSG StdMsg Output Formatter.
- CwmsDuration – Duration field to use when constructing a CWMS Time Series ID.
- CwmsParamType – ParamType field to use when constructing a CWMS Time Series ID.
- CwmsVersion – Version field to use when constructing a CWMS Time Series ID.
- HydstraMaxGap – Maximum gap used by the Hydstra Output Formatter
- Hydstra Translation Code used by the Hydstra Output Formatter
- TimeOffsetSec – Time adjustment (positive or negative) in seconds to add to this sensor's samples after decoding.
- dataOrder – A=Ascending, D=Descending. Used to override the default data order in the configuration script.
- ignoreSeason / processSeason – These function like the properties of the same name for Platforms. But in this case the processing is controlled for a single sensor.
- interval – In the HDB Consumer used by Bureau of Reclamation, this controls the INTERVAL part of the time series ID.
- minReplaceValue / maxReplaceValue – Normally values outside the min/max bounds will simply be discarded. You can add additional properties to cause the out-of-bounds values to be replaced with some other special value. Min/Max checks are done after offset and scaling.
- modelID – for HDB Consumer, this sets the model ID.
- modeled – for HDB consumer, set to TRUE if this is to be considered modeled data.
- offset p preoffset / scale – described above
- tvacode – Data Type Code to use in TVA transaction file formatter
- omit – set to true to have this sensor's values always omitted from the output.

## 6.3 Transport Media

Transport Media define how the data from this platform is retrieved. The data may need to be decoded differently depending on whether it was received over DOMSAT, DRGS, or EDL file, even though it came from the same platform.

The example shown shows two transport media for GOES-Self-Timed on channel 142.

- For GOES TM records, you must enter both Medium Identifier (GOES DCP Address) and Channel number
- For Data Logger and other types, it is usually sufficient to enter the medium identifier. This is usually a station name or some other unique identifier.

Also in this dialog, you associate each transport medium with the name of a “Script” which will be used to decode the data.

**Edit Transport Medium**

Transport Medium for Platform:

Medium Type: goes-self-timed

Medium Identifier: 445651CC

Decoding Script: ST

Time Zone: MST

Time Adjustment: 0 (# Seconds)

**GOES DCP Channel Parameters**

Channel Number: 142

1st Transmission Time: 00:32:20 (HH:MM:SS)

Transmit Interval: 01:00:00 (HH:MM:SS)

Transmission Duration: 00:00:15 (HH:MM:SS)

Preamble: Short

OK Cancel

Figure 15: Transport Medium Edit Dialog.

You can add a Time Adjustment as a positive or negative number of seconds. This will be added to the message time before any decoding is done. A typical example for this is:

- My GOES DCP transmits right on the hour. So the message is received a few seconds after the top of the hour.
- The most recent water level is from 45 minutes after the previous hour.
- Add a short negative time adjustment like -60. This forces the message time back into the previous hour, so that when DECODES assigns time values it will choose the correct one.

## 7 The DECODES Format Language

DECODES uses Fortran-like format statements to interpret data received from a recording device. A *Decoding Script* is made up of one or more format statements. These format statements consist of two parts:

1. a *label* to identify the format, and
2. a *statement* containing a sequence of format operations.

Within a statement, the format operations are separated from each other by commas. You enter format statements within the Decoding Script Edit Dialog, described in section 5.1.1.

### 7.1 Execution of Format Statements

This is what happens when a routing spec decodes a message:

1. Use the DCP Address and channel number within the message to find a matching transport medium.
2. Get the platform record associated with that transport medium. The platform record is associated with a platform-config record, which in turn contains sensor records and one or more Decoding Scripts.
3. Retrieve the Decoding Script associated with this transport medium. For example, the message came in on channel 31, so use the ‘ST’ (self-timed) script.
4. Parse the script into a hierarchy of executable operations.
5. Starting with the first format statement in the script, execute the operations against the message data.

Step 4 (parsing the script) is only done once. If a second message is received for the same platform, the already-prepared scripts are reused.

Step 5 (executing the script against the message data) is the subject of this chapter.

For troubleshooting an individual platform, you can set a property “debugLevel” to a value of 1, 2, or 3. When data from this platform is decoded, the log verbosity (3 = most verbose) will be set.

### 7.2 Stepping through the Script and the Data

As it is executing, the script keeps track of three things:

- The currently executing format statement
- The current operation within the format statement
- The current position within the message data

The message header (e.g. 37-byte DOMSAT header) is not processed by the script. The data pointer is initialized to the first actual message byte.

The script starts with the first format statement, so position is important. This differs from previous versions of DECODES and EMIT.

Each format statement has a label. Several operations can cause decoding to jump to a new statement, identified by its label. Labels may only contain letters and digits.

Adjacent format statements with the *exact* same label are joined into a single long statement before parsing and executing.

The various operations in the format statements step through the message data from beginning to end. There are operations for skipping characters and lines, and for positioning the data pointer within the message data.

## **7.3 Format Operation Overview**

A quick reference of DECODES format operations is presented in Table 6-1. The subsections that follow provide more detail on each one.

Several of the operators are identified by a letter. The parser is not case-sensitive, so ‘X’ and ‘x’ can both be used for skipping characters.

<b>Command</b>	<b>Description</b>	<b>Examples</b>
<i>nX</i>	Skip <i>n</i> data characters	2X - skip 2 characters (bytes).
<i>nP</i>	Position to the <i>n</i> th character in the current line.	2P - Position to 2 <sup>nd</sup> character in current line.
<i>n/</i>	Skip <i>n</i> data lines	3/ - skip 3 lines
<i>n\</i>	Skip backward <i>n</i> data lines.	
<i>&gt;label</i>	Jump to the format with the specified label	>ST3 -switch to format with label ST3
<i>n(operations...)</i>	Repeat operations enclosed in parenthesis <i>n</i> times	10(F(S,A,6,1)) – repeat “F(s,A,6,1)” 10 times.
<i>C(nN, label)</i>	Check the next ' <i>n</i> ' characters for number characters (digits, decimal point or sign). If all are number-characters, continue to the next format operation. If at least one is not, switch to format with specified label. Do not change the current data pointer.	C(3N, ERROR) - checks the next three characters for digits, decimal point, or sign. If at least one of the three is not, switch to format ERROR
<i>C(S, label)</i>	Check the next character for a sign ('+' or '-'). If it is a sign, continue to the next operation within this format statement; otherwise, switch to specified format.	C(S, ERROR) - checks the next character for a sign, switch to format ERROR
<i>C('str', label)</i>	Compare the string of characters ' <i>str</i> ' with the next length-of-string characters in the device data. If there is a match, continue to the next operation in the current format. Otherwise, switch to the format with the specified label. Do not change the current data pointer.	C('001',NXT) - checks the next three characters for a match with '001'. If there is no match, change to format labeled NXT.
<i>csv(sens#,...)</i>	Parse a series of comma separated values, assigning columns to the specified sensor numbers. Terminates when all specified columns processed or on end of line.	csv(x,1,x,x,2) – Skip 1 <sup>st</sup> CSV column, assign column 2 to sensor #1. Skip 2 more columns and assign the final column to sensor # 2.
<i>S(n, N, label)</i> <i>S(n, S, label)</i> <i>S(n, A, label)</i> <i>S(n, 'str', label)</i>	<p>The second argument defines what to scan for:</p> <p style="padding-left: 40px;">N = scan for any number character (digits or sign)  S = scan for any sign character ('+' or '-')  A = scan for any alphabetic character  '<i>str</i>' = Scan for specified string</p> <p>Scan at most <i>n</i> data bytes until either the target of the scan is found or an end-of-line is found.</p> <p>If the target of the scan is found, continue with the next operation in the current format. Otherwise switch to the format statement with the specified label. After the operation is completed the current data pointer points to where the scan halted, i.e. if target character(s) is found, it points to that character. Otherwise, it is moved '<i>n</i>' characters from the previous position.</p> <p>A special case of the S operation results when <i>n</i> is 0. In this case the current data pointer remains unchanged. If the target of the scan is found, continue with the next operation. Otherwise switch to specified format. This feature allows multiple tests on the same data character.</p>	<p>S(6,N,ERROR) - scan at most the next 6 characters searching for a number or a sign; and if found, set the data pointer to the matching character and continue to the next format operation; if not found, set the data pointer plus 6 and change to the format with the label ERROR</p> <p>S(0,'A',NXT) - check the current data character to see if it matches 'A'; if it does, continue to the next format operation; if not found, change to format with format label NXT; in either case the data pointer is not changed.</p> <p>S(10,'01+',ERROR)- scan the next 10 characters for the string '01+'. If not found, change to format with label ERROR.</p>
<i>nF(FT, DT, L, S, E)</i>	Field Descriptions.	Many varieties.
<i>W</i>	Skip any number of white space characters, including space, tab, carriage return, and linefeed.	

**Table 6-1: Common DECODES Format Operations.**

## 7.4 Skipping and Positioning Operations

To skip a single character:

x

To skip a specified number of characters, place a number before the 'X':

5x

To skip to the end of the current line and continue processing data at the beginning of the next line, use a forward slash:

/

To skip to the end of more than one line, place a number before the slash:

2/

To position the data-pointer to a particular character position on the line, put a number followed by the letter 'p'. The following positions the pointer to the 5<sup>th</sup> character of the line. Note: byte position 1 is the start of the line.

5p

To skip backward a number of lines, use a backslash preceded by a number.

2\

## 7.5 The Check Operation

Check commands are used to check the current location in the data for a specified condition. The data pointer is not altered. If the condition is false, you specify an alternate format statement to jump to.

To check to make sure the next *n* characters are numbers (digits, decimal point, or sign), and jump to the statement labeled 'NAN' if any are not, do the following. Note that if the check is true, we proceed with the next operation, which assigns the numbers to a sensor value.

c(5N, NAN), f(s,a,5,1)

To check if the next character is a sign (either '+' or '-'), and jump to the statement NOSIGN if not:

c(S, NOSIGN), ...

To check to see if the data matches the string 'AA' and skip to the format labeled 'BB' if it does not:

c('AA', BB), ...

In this usage of the check command, the string must match exactly. The check is case sensitive and the entire string must match the current data position. Otherwise the check is false and control jumps to the named format statement.

## 7.6 The Scan Operation

Scan commands are used to scan forward from the current location in the data until a specified condition has occurred. These commands are used to position to a particular location based upon a specified condition.

Scan operations have the following syntax:

```
S(n, condition, label)
```

...where ***n*** is the number of characters to scan (or to the end of the current line), ***condition*** specifies what we are scanning for (see below), and ***label*** specifies the format that we jump to if the condition is not met.

The ***condition*** can be one of the following:

N	Scan for any digit, decimal point, or sign
S	Scan for a sign character, either + or -.
A	Scan for any letter, either upper or lower case
P	Scan for any pseudo-binary character, or the '/' character which is commonly used to represent missing data.
X <i>nn</i>	Scan for a character with the hex value <i>nn</i>
' <i>str</i> '	Scan for the exact string ' <i>str</i> '

If the condition is true (i.e. the requested pattern was found), processing continues to the next operation in the current format statement.

After the operation is completed the current data pointer points to where the scan halted, i.e. if target character(s) is found, it points to that character. Otherwise, it is moved 'n' characters from the previous position.

## 7.7 The Jump Operation

The Jump operation causes an unconditional jump to a specified format statement. The data pointer remains unaffected. The jump operation has the following syntax:

```
>label
```

## 7.8 Repeating Groups of Operations

Any group of operations can be performed repeatedly. Operations enclosed in parentheses and preceded by a number will be performed the specified number of times. For example,

```
8 (x, F(S, B, 3, 1))
```

causes the operations within the parentheses (the **x** operation and the **F** operation) to be performed 8 times.



## 7.9 Field Operations

Field operations are used to extract time and sensor values from the message. The general form of a field description is:

$nF(ft, dt, length, sensor \# \text{ or } fld-ID, E)$

where:

- $n$  is a repetition factor
- $ft$  defines the type of field
- $dt$  defines the type of data
- $length$  defines the field length with optional delimiters.
- $sensor \#$  the sensor number associated with this sensor-value field
- $fld-id$  is used with DATE and TIME fields to specify different representations
- $E$  is used with TIME fields to indicate that the recording of time is viewed as an event

The field type can be one of the following:

D	Date Field (see 0 for Date and Date Components)
D+	Date of period just now ending
YR	Year
MN	Month
DY	Day of Month
JDY	Julian Day of Year
JDY+	Julian Day of Year just now ending
T	Time Field (see 7.9.4 for Time and Time Components)
HR	Hour
MIN	Minutes
SEC	Seconds
A	AM or PM
TI	Time Interval Field (see 7.10.1)
MINT	Minute Interval Field (see 7.10.2)
MOFF	Minute Offset Field (see 7.10.2)
F	Format Label Field (see 0)
S	Sensor Value Field (see 7.10.4)

The data type can be one of the following:

A	ASCII
B	Pseudo Binary (unsigned)
I	Pseudo Binary Signed Integer (signed binary)
L	Labarge pseudo-ASCII
X	Hexadecimal
S	String
BC	Campbell Scientific Binary Format
C	Campbell Scientific Binary Format (first byte defines sign and magnitude)
BD	Design Analysis binary Format (Integer value made negative by sign bit)
BT	Telonics Binary Format (same as BD)
BIN	Pure Binary 2's compliment Signed Integer, MSB-first
UBIN	Unsigned (always a positive) Pure Binary Integer, MSB-first
BINL	Pure Binary 2's compliment Signed Integer, LSB-first
UBINL	Unsigned (always a positive) Pure Binary Integer, LSB-first

In special cases, you may want to process literal data in the script rather than from the message. You can do this by enclosing the literal string with double quotes in the data type field. For example, the following will execute the “MOFF” field type with the literal ASCII string “o”. The effect is to undo a MOFF set from a previous sensor.

```
F(MOFF, "o", 1, 9)
```

### 7.9.1 Pseudo-Binary and Pure-Binary Fields

“Pseudo Binary” can be thought of as a compression technique. NOAA mandates that all DCP data should contain printable ASCII characters. Pseudo Binary divides a number into 6-bit chunks and then encodes each chunk into a byte. The high-order 2-bits are set to 01 resulting in a printable ASCII character. The exception is the binary number 111111 (decimal 63), which is typically encoded as a question-mark.

Example: Encode the number 68561 as a 3-byte pseudo binary number:

- 468561 encodes to binary: 10000101111010001
- Divide into 6-bit chunks: 010000 101111 010001
- Tack on high order bits 01: 01010000 01101111 01010001
- Encoded in ASCII characters: PoQ

With the 'BIN', 'UBIN', 'BINL', and 'UBINL' formats, DECODES now also supports pure binary data in which all 8-bits of each byte are used.

Large integers may be spread over multiple bytes. The formats 'BIN' and 'UBIN' assume that the most-significant-byte is presented first. The formats 'BINL' and 'UBINL' assume that the least-significant-byte is first.

## 7.9.2 Field Length and Delimiters:

**Length** can be optionally followed by the character D and a one or more delimiter characters. The delimiters are usually enclosed in single quotes.

For example:

- |           |   |
|-----------|---|
| 6D' , '   | This indicates that the field has a length of 6 characters or can be delimited by a comma.                                  |
| 8D' , : ' | This indicates that the field has a maximum length of 8 characters and can be delimited either by a space, comma, or colon. |

The delimiter can be simply asserted, enclosed in single quotes, or represented as *xnn* where nn is the hexadecimal representation. If the delimiter is a comma, it must be enclosed in single quotes.

For example:

- |              |  |
|--------------|--|
| <b>6D','</b> | The field is delimited by a comma  |
| <b>6Dx1E</b> | The field is delimited by a period (the hexadecimal representation of a period is 1E). |
| <b>6D' '</b> | The field is delimited by a space  |
| <b>6DS</b>   | The field is delimited by a sign (+ or -) character.                                   |
| <b>6D!</b>   | The field is delimited by any non-numeric character.                                   |

The delimiter 'S' means that the data is delimited by a sign (+ or -).

The delimiter '!' means that the data is delimited by a non-numeric characters. Numeric characters include digits, decimal point, signs, and either 'e' or 'E' (to support exponential notation.)

Care must be taken in positioning your data pointer after a delimited field. The pointer will be left *at* the delimiter. Hence you will probably want to use a skip operation to skip the delimiter after parsing the field.

If the delimiter is not found, the pointer is advanced by *length* characters.

### 7.9.3 Date Fields

Date field descriptions have a field type of 'D'. Date fields are used in EDL files to extract time from the message data. The times are then subsequently used to time-tag data samples.

The form of a date field description is

**F(D, data type, length<Dc>, fld-id)**

The 'fld id' parameter is used to define four different date formats. Possible formats are as follows:

**F(D, type, length<Dc>,1)**

Fld-id 1 indicates the date is in the format year, month, day. The format differs for different field lengths:

- For length 8, we expect the format YY/MM/DD, YY-MM-DD, or YY MM DD
- For length 6, we expect the format YYMMDD
- For length 10, we expect the format YYYY/MM/DD, YYYY-MM-DD or

YYYY MM DD.

**F(D, type, length<Dc>,2)**

Fld-id 2 indicates a Julian day is used. For length 8, fields have the format YYYY-DDD, YYYY/DDD; for length 7, YYYYDDD; for length 6, YY-DDD, YY/DDD; for length 5, YYDDD; for length 3, DDD; for length 2, DD. For cases where the year is not in the date field, the year will default to the current year unless the user specifies a year during the data conversion process. If the user lets the year default and a Julian day is found that exceeds the current Julian day, it will be assumed that the data belongs to the previous year and so the year will be decremented.)

**F(D, type, length<Dc>,3)**

Fld-id 3 indicates only the month and day are recorded. For length 5, fields with format MM/DD, MM-DD, AND MM DD; for length 4, MMDD. The same rules about the missing year apply to the field descriptions for dates with fld id of 3 as the ones for the dates with fld id of 2.

**F(D, type, length<Dc>,4)**

Fld-id 4 indicates the same type of format as fld-id 1 but in a different order-month, day, year. For length 10, fields with format MM/DD/YYYY, MM-DD-YYYY, and MM DD YYYY; length 8, fields with format MM/DD/YY, MM-DD-YY, and MM DD YY; for length 6 MMDDYY.

You can also parse the date components individually:

F(YR, type, length)

Parse a year field. Length can be 2 or 4.

F(MN, type, length)

Parse a month field. If length is 2, expect a number from 1 to 12. If length is 3, expect a 3-character month abbreviation like jan, feb, etc.

F(DY, type, length)	Parse day of month.
.	
F(JDY, type, length)	Parse julian day-of-year.
F(JDY+, type, length)	Parse julian day-of-year just ending.

### The ‘Increment-Day’ Feature:

The ‘D’ and ‘JDY’ field-types may optionally have a plus sign after them. This feature allows us to handle EDL data that gives complete date information only at the end of a day. For example, suppose(( a file started like this:

```
001 20:00 22.1 12.5
001 21:00 22.2 12.5
001 22:00 22.1 12.5
001 23:00 22.3 12.4
004 2003 335 24:00 22.2 12.5
001 01:00 22.3 12.5
...
```

Notice that the line with the label “004” contains the year and the Julian day (335) that has just ended. Data prior to this line is day 335, data after this line is day 336. Hence we want to increment the day after parsing it. So use the JDY+ operator.

## 7.9.4 Time Fields

Field descriptions for times have a field type of 'T' and a data type of 'A' (ASCII). Thus, the form of a field description for a time is:

**F(T, A, length<Dc><, sensor #, E>)**

The optional '*sensor #*' and '*E*' parameters signify that the time recorded is an event. This is used for recorders that record only the time whenever an event occurs e.g. the time is recorded whenever a tipping bucket tips. In this case, the recorded time is considered to be the data. When DECODES encounters a field description for a time and it has a sensor number and the 'E' parameter, DECODES will use the value 1 as the data value associated with that time.

The raw value of 1 can be converted to the desired units via an EU conversion in the script. For example, if a tipping bucket rain gage records the time whenever .01 inches of rain falls, convert the raw value of 1 to .01 with a linear EU conversion.

For length 8, times are expected with format HH-MM-SS or HH:MM:SS; for length 6, HHMMSS; for length 5, HH:MM, HH-MM; for length 4, HHMM; for length 3, HMM; and for length 2, MM.

You can also parse the time components individually:

F(HR, type, length<Dc>)	<i>Numeric Hour Field</i>
F(MIN, type, length<Dc>)	<i>Numeric Minute Field</i>
F(SEC, type, length<Dc>)	<i>Numeric Second Field</i>
F(A, type, length<Dc>)	<i>One of “AM”, “A”, “PM”, “P”</i>

## 7.10 The Time Truncation Operator

Often you may want to discard seconds and minutes from the recorded data. The time truncation operators can be placed at the beginning of your script to accomplish this. The following operators modify the 'current-time' maintained while decodes. Thus they will effect all subsequent FIELD operations.

T (M)	Truncate current time to previous minute (discard seconds)
T (M5)	Truncate to 5 minute interval
T (H)	Truncate current time to previous hour (discard minutes and seconds)

### 7.10.1 Time Interval Fields

Time interval fields have a field type of TI and a data type of 'A' (ASCII). The time interval field describes a field that contains a new time interval for recording data. This field description is useful for recorders that can adjust the recording interval from that set in the SENSORS entity to a new one when certain conditions occur. The form of a field description for a time interval is as follows. The data field format is the same as those for the time field description.

```
F(TI, A, length<Dc>, sensorNum)
```

### 7.10.2 Minute Interval and Offset Fields

Minute interval fields have a field type of MINT. The data type can be ASCII or any of the binary types. It is useful for parsing data where the time interval is given in a number of minutes.

```
F(MINT, A, length<Dc>, sensorNum)
```

Many GOES DCP messages contain a minute offset to the first sample. You can process these with field type 'MOFF':

```
F(MOFF, A, length<Dc>)
```

The offset sets the 'current time' to the message time, minus the parsed number of minutes. It also has the effect of truncating the seconds. So if message time is 14:22:39 and the minute offset in the message is 22, then the current time is set to 14:00:00.

You can use MOFF multiple times in the same message. Each time it sets current time relative to the unchanging message time.

Negative intervals can be specified by adding a minus sign after MINT:

```
F(MINT-, A, length<Dc>, sensorNum)
```

Use the negative interval only when the data is descending (i.e. most recent samples first) AND you are time-tagging based on times or time offsets found IN THE MESSAGE (not including the GOES header).

For example, look at the following GOES DCP message:

```
4804F5C804011203139G31-5HN060W0000177:HG
31#30+3.95500e+00+3.95700e+00+3.95700e+00+3.95700e+00+3.95700e+00+3.95700e+00:HG
196#180+3.94900e+00:HG 206#180+3.96100e+00:VB
31#60+1.18576e+01+1.18620e+01+1.18509e+01:ZL$
```

After the initial :HG, we have 31 (minute offset to first sample) followed by #30 (minute interval of sample values – negative), followed by 6 sample values in exponential notation. Ignore the remainder of the message starting with the second ‘:HG’.

We can process this message with the following format statement:

```
4x,f(moff,a,3d'#'),x,f(mint-,a,2,1),6(f(s,a,12,1))
```

### 7.10.3 Format Label Fields

Format-label fields describe a data field that contains a code that is to be used as a format label to select a new format. DECODES extracts a label from the message data and jumps to a matching format statement.

The data pointer will remain at the character immediately following the extracted format-label.

Format-label fields allow DECODES to switch formats based upon a code found in the device data. For example, if a device records the data in different formats and also records a code that identifies the each format, a statement can be written for each code, using the code itself as a format label.

If DECODES cannot find a match for the label extracted from the data, it will attempt to switch to a format statement with the label ‘ERROR’. If none exists, decoding of this message will be aborted.

The format of a field description for format labels is

**F(F, A, length<Dc>)**

Examples:

**F(F, A, 4)** - Format label field is 4 characters long.

**F(F, A, 8D’,’)** - Format label field is delimited by a comma and has at most 8 characters.

### 7.10.4 Sensor Value Fields

Sensor field descriptions have a field type of ‘S’. They are used to extract data samples from the message. The format of a sensor field description is

**nF(S, data type, length<Dc>, sensor #)**

“Data type” can be any valid type listed above in section Field Operations

Examples:

**F(S, A, 6, 1)** The Data will contain one 6-character ASCII sample for sensor number 1.

- F(S, A, 5D',', 2)** The data is delimited by a comma and has at most 4 ASCII characters; the value was produced by sensor 2.
- 3F(S, B, 3, 1)** 3 signed-binary samples for sensor number 1. Each sample is 3 characters long.



## 7.11 Other Decoding Features

### 7.11.1 How to Omit Specific Sensor Values

There are a number of ways to omit sensor data from decoding, and from output:

1. Field operation with negative sensor number: In your script, for sensor number you may put a negative number or an 'x' in the sensor-number field. DECODES will parse the field as specified but will not save the sensor value.
2. To omit all sensor values of a given data type, create a presentation group. Set the engineering units for the data time to the string "omit". Example: you get scripts from USGS which include Precip, but you don't need or want Precip in your database from any platform.
3. To omit specific sensors from a configuration, add a config-sensor property called "omit" with a value of "true".
4. To omit specific sensors from a specific platform, add a platform-sensor property called "omit" with a value of "true".

### 7.11.2 Data Delimited by either a Plus or Minus Sign

Some platforms send data in a string of values that are delimited only by a sign. For example:

```
HG: +13.2+10.1+8.4+5.1+2.5+0.1-1.5-4.2
```

Notice that the length of the sample changes with the magnitude of the number. Above 10, we have 5 characters "+13.2". Below 10 we have 4 characters "+8.4". Also note that the sign can change.

To handle this, if the delimiter in your field operator is a sign (either '+' or '-'), then either sign will work as a delimiter when parsing the message. Thus, we could parse the above line as follows:

```
4x, 8( F(S,A,6d'+',1) )
```

## 7.12 Format-Language Function Calls

In recent years, several vendors of sensor and logger equipment have started encoding data in ways that are inconvenient or impossible to handle with the simple FIELD operations described above. We have added ‘function calls’ to the language to handle special conditions. A function call looks like it does in other programming languages:

```
FunctionName (arg1, arg2, ...)
```

In keeping with other features of DECODES, function names are not case sensitive.

The following subsections describe each available function in detail.

### 7.12.1 Comma-Separated Value Data

The “csv” function can be used to easily parse comma-separated values within a message. The arguments to the function are a series of DECODES sensor numbers. Use an ‘x’ if you want to skip a column.

For example:

```
csv(1, x, 4, 3, x, 2)
```

This would mean to assign the value in the first column to DECODES sensor number 1, skip the second column, assign the third column to sensor number 4, etc.

The function will stop when it reaches a newline or when it runs out of specified columns.

Supposed the data were as follows:

```
03/01/2014 12:00:00 23.95, 17.2, 8252, 0, 0, 98.1
03/01/2014 13:00:00 23.96, 16.9, 8252, 0, 0, 98.1
03/01/2014 14:00:00 23.97, 15.2, 8252, 0, 0, 98.2
```

We want to parse the date and time from each column and then assign the first column to water level sensor number 1, the second to temperature (sensor 2), and the sixth to humidity (sensor 3). The following statement would handle it:

```
3(/, F(D,A,10,4), x, F(T,A,8), csv(1, 2, x, x, x, 3) )
```

## 7.12.2 Processing SHEF Data

SHEF (Standard Hydro-Meteorological Exchange Format) is defined by the U.S. National Weather Service. DECODES can process files that conform to this format. Such files are distributed by the NWS in various ways such as web-download and LDM (Local Data Manager). This section will explain how to set up a DECODES configuration for SHEF data.

### Required Enumeration Values

First run the reference list editor (“rledit”) and click the enumerations tab. Select the enumeration for Data Type Standard. Make sure an entry “shefcode” exists. If it does not, add it as shown in Figure 16. DECODES will use the “shefcode” data type assigned to your sensors to map codes that appear in the SHEF input files.

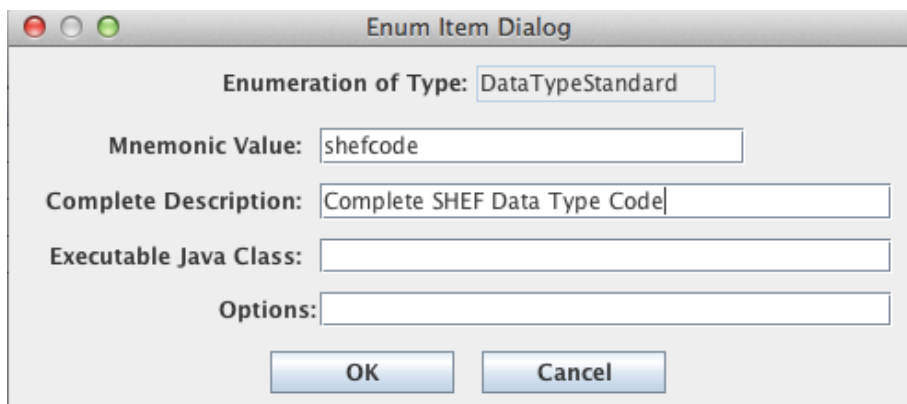
A screenshot of the 'Enum Item Dialog' window. The title bar says 'Enum Item Dialog'. Inside, there's a section 'Enumeration of Type:' with a dropdown menu set to 'DataTypeStandard'. Below this are four text input fields: 'Mnemonic Value:' containing 'shefcode', 'Complete Description:' containing 'Complete SHEF Data Type Code', 'Executable Java Class:' which is empty, and 'Options:' which is empty. At the bottom are 'OK' and 'Cancel' buttons.

Figure 16: Add a Data Type Enumeration Value "shefcode".

Next, select the “Transport Medium Type” enumeration and make sure an entry called “shef” exists. If it does not, add it as shown in Figure 17. The SHEF Transport Medium Type knows how to parse the SHEF header containing the message type (.E or .A), the station name, and the message time stamp.

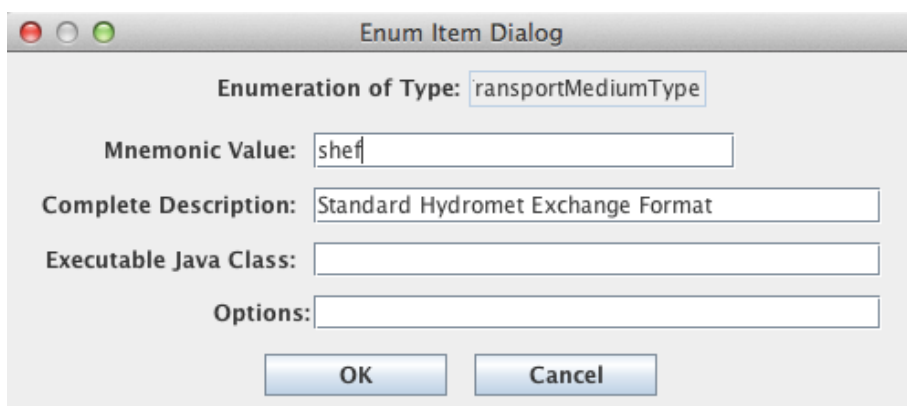
A screenshot of the 'Enum Item Dialog' window. The title bar says 'Enum Item Dialog'. Inside, there's a section 'Enumeration of Type:' with a dropdown menu set to 'ransportMediumType'. Below this are four text input fields: 'Mnemonic Value:' containing 'shef', 'Complete Description:' containing 'Standard Hydromet Exchange Format', 'Executable Java Class:' which is empty, and 'Options:' which is empty. At the bottom are 'OK' and 'Cancel' buttons.

Figure 17: Add a Transport Medium Type Enumeration Value called "shef".

After creating the enumeration entries, make sure you select File – Save to DB from the File menu before exiting rledit.

## A Directory Data Source for Incoming SHEF Files

SHEF files are downloaded from somewhere like web or LDM. DECODES doesn't handle the download. The files land in a directory that DECODES is monitoring. Start the DECODES database editor and click the "Sources" tab. Figure 18 shows a data source that monitors the directory "shef-incoming" under the OPENDCS installation.

Make sure you assign the following properties:

- DirectoryName = *Name of Directory to monitor*
- mediumType = shef
- shefMode = true

An optional property "DoneDir" is shown in the example. Thus, after files are processed by DECODES, they will be moved to the directory "shef-done" under the toolkit installation.

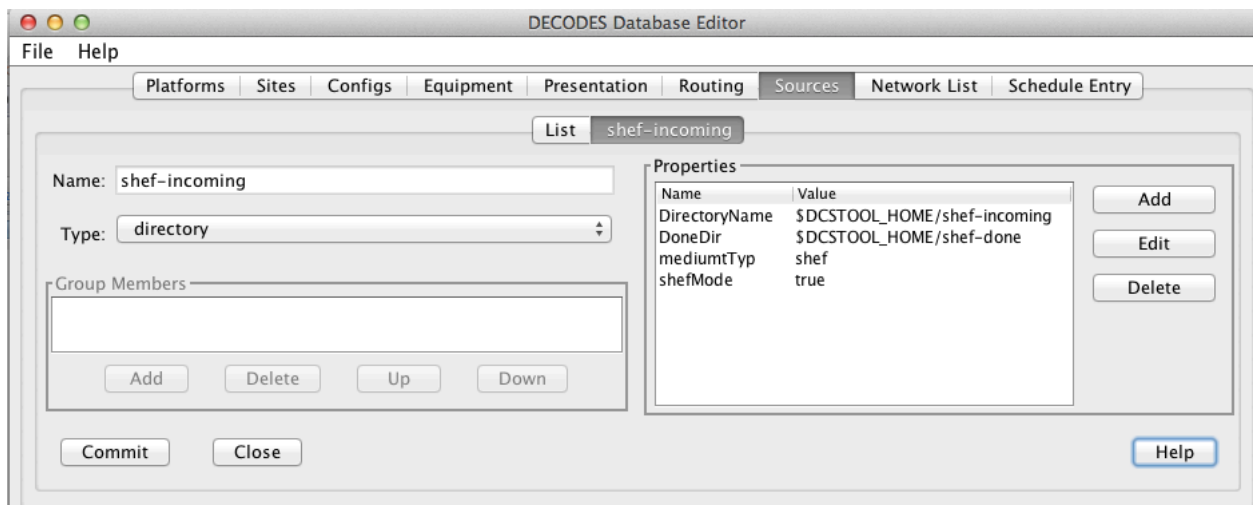


Figure 18: Data Source for Incoming SHEF Files.

## DECODES Configuration for Processing SHEF

Follow the following steps to create a DECODES configuration for processing SHEF:

1. Define the sensors that you want to process. Assign a Data Type with standard "shefcode" to the exact code that occurs in the message. For example, if the message contains SHEF code "HGIFF" assign exactly that data type with standard "shefcode". You may assign other data type codes like CWMS, SHEF-PE, etc. This is shown in Figure 19 below.
2. The script should contain a single line that calls the "shefprocess()" function.
3. Be sure to set the parameter units and any conversions that you want.

An example DECODES script is shown below in Figure 20.

The shefprocess() function parse the SHEF data and handle .A and .E format messages. It will assign the correct time stamps and intervals. For each sensor encountered in a message it will look for an exact match with datatype “shefcode”. If none is found, it will attempt to match “shef-pe” data type codes. If no match is found for either, the sensor will be skipped and a warning will be issued to the log.

**Edit Config Sensor**

Configuration: **sheftest** Sensor: **1**

Sensor Name:

Standard: **shefcode** Code: **HGIFF**

Data Types

Standard: **shef-pe** Code: **HG**

Standard: **shef-newleaf** Code: **HG**

USGS Stat Code:

Valid Range - Min:  Max:

Recording Mode: **Fixed**

1st Sample Time:  (HH:MM:SS)

Sampling Interval:  (HH:MM:SS)

Equipment Model:  **Select**

**Properties**

Name	Value
------	-------

**Add** **Edit** **Delete**

**OK** **Cancel**

**Figure 19: Define a Sensor with "shefcode" Data Type.**



### 7.12.3 Defining Symbols to Represent Missing Data

This feature is added for OpenDCS 6.4.

DECODES handles several common symbols that represent missing data. If you have a DCP that uses an unsupported symbol, you can add it at the beginning of the script by adding a call to the `setMissing` function.

For example

```
start      setMissing(ND), ... (the rest of your script here.
```

Then if a data field contains your symbol, it will be flagged as missing data.

## 8 The DECODES Platform Wizard

The Platform Wizard is a Graphical User Interface (GUI) tool for entering or editing your platform meta-data. It guides you step-by-step through the process of entering site, equipment, configuration, and platform data.

Everything that the Platform Wizard does can also be accomplished with the DECODES Database Editor described above, and you may prefer to continue using that tool. The wizard provides a more directed approach.

The platform wizard has nine panels. Each will be described in the following subsections.

- Start Panel
- Site Panel
- Platform Sensors Panel
- Equipment Model Panel
- Decoding Script Panels for self-timed, random, and EDL
- Platform Specific Information Panel
- “Save Your Work” Panel



## 8.1 Platform Wizard Start Panel

When you start the platform wizard, you see the initial panel shown in Figure 15-21. Here you specify what types of messages this platform can generate: GOES Self Timed or Random, or EDL (Electronic Data Logger) files. You also specify the identifying information for the message. For example, the figure shows that we want to create a platform record for a GOES Self Timed DCP with address “CE4816DE” that transmits on channel 73.

If this is a NEW platform, press Next to continue to the next panel.

If this panel already exists in your database, press the “My Editable Database” button to cause the GUI to be initialized with the information you’ve already entered.

Future versions will allow you to initialize the GUI from remote DECODES databases, the National Weather Service HADS System, and from your NEWSID PDT (Platform Description Table) records.

**DECODES Platform Wizard**

**Welcome to the DECODES Platform Wizard**

The following panels will guide you through the process of creating a new DECODES Platform Specification. Here you enter platform identifiers and optionally initialize from existing repositories.

Platform Type (check all that apply)

☒ GOES Data Collection Platform (DCP)

NESDIS-Assigned DCP Address:

☒ Self Timed Messages on Channel:

☐ Random Messages on Channel:

☐ USGS Electronic Data Logger

USGS Numeric Site ID:

Retrieve Initial Platform Information

Platform information may be available from several sources by pressing these buttons.

Remote DECODES:

NWS Hydrometeorologic Automated Data System (HADS)

NESDIS DAPS Platform Description Table (PDT)

(1/9)

Figure 15-21: Platform Wizard Start Panel.

## 8.2 Platform Wizard Site Panel

The Site Panel is shown in Figure 15-22. Here you enter information about the location. We have also entered the NWSHB5 (National Weather Service Handbook 5) name “VNDI2” for this site.

The screenshot shows the 'DECODES Platform Wizard' window with the 'Site Location Information' tab selected. The window has a blue title bar and standard Windows window controls. The main content area is divided into several sections:

- Site Location Information:** A header section with a text box containing the instruction: "Enter descriptive information about the site location. At least one name must be entered for the site."
- Select Site:** A section with a text box containing "local=CE4816DE", a "Select" button, and a "New" button.
- Names for this Site:** A table with two columns: "Type" and "Name". It contains two entries: "nesdis" with "CE4816DE" and "nwshb5" with "VNDI2". Below the table are "Add Name" and "Delete Name" buttons.
- Location Information:** A section with several input fields: "Latitude" (N 38°57'55"), "Longitude" (W 89°05'20"), "Elevation" (empty), "Elev Units" (ft (feet) with a dropdown arrow), "Nearest City" (VANDALIA), "Time zone" (empty with a dropdown arrow), "State" (IL), "Country" (empty), and "Region" (empty).
- Description, Directions, Etc.:** A large text area containing the text "KASKASKIA RIVER AT VANDALIA".
- Footer:** A section with a "(2/9)" indicator, "Previous", "Next", and "Quit" buttons.

Figure 15-22: Platform Wizard Site Panel.

## 8.3 Platform Wizard Sensors Panel

The next panel, shown in Figure 15-23, allows you to enter information about each sensor on this platform. This Platform has three sensors: Stage, Precip, and Battery. Each reports a value every 15 minutes within a message.

The screenshot shows a software window titled "DECODES Platform Wizard" with a sub-header "Define Platform Sensors". Below the sub-header is a text box with the instruction "Define the sensors on this platform and add a description.".

The main area contains several input fields and buttons:

- Platform Configuration:** A text box containing "MVSHR-SB4-001" with "Select" and "New" buttons to its right.
- Name:** A text box containing "MVSHR-SB4-001".
- Equipment Model:** A text box containing "MVSHR".
- Num Platforms:** A text box containing "0".
- Description:** A text box containing "15 min Stage, Precip, & Battery".

Below these fields is a section titled "Sensors" containing a table with three columns: "Sensor", "Name", "Data Type", "Mode", and "Sampling Times".

Sensor	Name	Data Type	Mode	Sampling Times
1	STAGE	SHEF-PE:HG	Fixed	00:00:00 15 minutes
2	PRECIP	SHEF-PE:PC	Fixed	00:00:00 15 minutes
3	Battery	SHEF-PE:VB	Fixed	00:00:00 15 minutes

To the right of the table are three buttons: "Delete Sensor", "Edit Sensor", and "Add a sensor.". Below the table is a large empty text area and a button labeled "Add DCP PMs".

At the bottom of the window, there is a status bar showing "(3/9)" and three buttons: "Previous", "Next", and "Quit".

Figure 15-23: Platform Wizard Sensors Panel.

## 8.4 Platform Wizard Equipment Model Panel

This panel allows you to enter information for the equipment model.

The screenshot shows a Windows-style dialog box titled "DECODES Platform Wizard" with a subtitle "Select Equipment Model". The main text area contains the instruction: "If you want to use an existing equipment model and platform config, select them here. Otherwise, select '<new>'." Below this, there are two buttons: "Select" and "New". The "Select" button is active, and the text "Select Equipment Model: MVSHR" is displayed. Below this, there are four input fields: "Name: MVSHR", "Type: DCP" (with a dropdown arrow), "Company: Handar", and "Model: 570". To the right of these fields is a large text area labeled "Description". At the bottom of the dialog, there is a "Properties" section with a table showing the following data:

Name	Value
PlatformType	DCP
RetrievalMethod	DCP

Next to the table are three buttons: "Add", "Edit", and "Delete". At the very bottom of the dialog, there are four buttons: "(4/9)", "Previous", "Next", and "Quit".

Figure 15-24: Platform Wizard Equipment Model Panel.

## 8.5 Platform Wizard Decoding Script Panel

Refer back to the start panel in Figure 15-21. There you specified up to three ways to get data from this platform: GOES Self-Timed, GOES Random, and EDL. You will be presented with a separate Decoding Script Panel for each of the three message types. In Figure 15-25 we see the panel for GOES Self-Timed Messages.

The “Load” button along the right makes it easy to retrieve a message of the specified type. This is then shown in the “Sample Message” area. Press the “Decode” button to apply your format statements to the sample message. The results are shown in the “Decoded Data” area at the bottom.

The figure shows a simple ASCII DCP message with 8 fifteen-minute samples for each of the three sensors. Notice how the format statement makes use of the ‘w’ operator and delimited lengths in the ‘F’ field operators. This allows us to correctly handle the 4<sup>th</sup> data line, where an extra space appears before the stage value, and the battery value is only 4 characters long.

**DECODES Platform Wizard**

**Decoding Script for Self Timed GOES Messages**

In this panel, you create a script for decoding data from Self Timed GOES Messages

Config: 
Script Name: 
Data Order:

**Format Statements**

Label	Format Statement
st	/8(w, F(S,A,6d',1), w, F(S,A,6d',2), w, F(S,A,6d',3), /)

Up
Add
Dn
Delete

**Sensor Unit Conversions**

#	Name	Units	Algorithm	A	B	C	D	E	F
1	STAGE	FEET	none						
2	PRECIP	in	none						
3	Battery	V	none						

**Sample Message**

CE4816DE04250123925G44-3NN073E9000153  
2.94 29.71 12.84  
2.94 29.71 12.84  
2.94 29.71 12.84  
2.94 29.71 9.96  
2.94 29.71 12.84  
2.94 29.71 12.84  
2.94 29.71 12.84  
2.94 29.71 12.92

Load
Clear
Decode

**Decoded Data**

	STAGE	PRECIP	Battery
	HG	PC	VB
UTC	ft	in	V
09/06/2004 10:45:00	2.94000	29.7100	12.9200
09/06/2004 11:00:00	2.94000	29.7100	12.8400
09/06/2004 11:15:00	2.94000	29.7100	12.8400
09/06/2004 11:30:00	2.94000	29.7100	12.8400
09/06/2004 11:45:00	2.94000	29.7100	9.9600
09/06/2004 12:00:00	2.94000	29.7100	12.8400
09/06/2004 12:15:00	2.94000	29.7100	12.8400

(5/9)
Previous
Next
Quit

**Figure 15-25: Platform Wizard Decoding Script Panel.**

## 8.6 Platform Specific Information

The next panel, shown in Figure 15-26 allows you to enter platform-specific information. Make sure that you have one “Transport Medium” record at the bottom for each of the 3 ways of retrieving data. Our example shows a single record for GOES Self Timed.

**DECODES Platform Wizard**

**Platform-Specific Information**

Enter platform-specific information in this panel, including a description, sensor properties, and the specifics of your transport media.

Site: nwshb5-VNDI2  
Config: MVSHR-SB4-001  
Owner Agency: CEMVS  
Last Modified: 09/05/2004 16:07:08  
Expiration:

Platform Properties

Description

KASKASKIA RIVER AT VANDALIA  
GOES Self-Timed DCP with Stage, Precip, and Battery

Platform Sensor Information

Sensor	Name	Actual Site	Properties
1	STAGE		
2	PRECIP		
3	Battery		

Clear Sensor Site  
Select Sensor Site  
Sensor Properties

Transport Media

Type	ID	Script Name	Channel
goes-self-timed	CE4816DE	ST	73

Add  
Edit  
Delete

(8/9) Previous Next Quit

Figure 15-26: Platform Wizard "Platform Specific Info" Panel.

## 8.7 Save Your Work

The final panel, shown in Figure 27, allows you to save your work to the editable database, or to a separate XML file.

First press the “Validate Platform” button. If there are any inconsistencies in the data you entered, this will be explained on the screen. You will be directed back to other panels to correct the errors. When finished, return to this panel and press the Validate button again.

The example screen shows that our sample platform validated successfully. So we pressed the “Write to Editable Database” button. This was also successful.

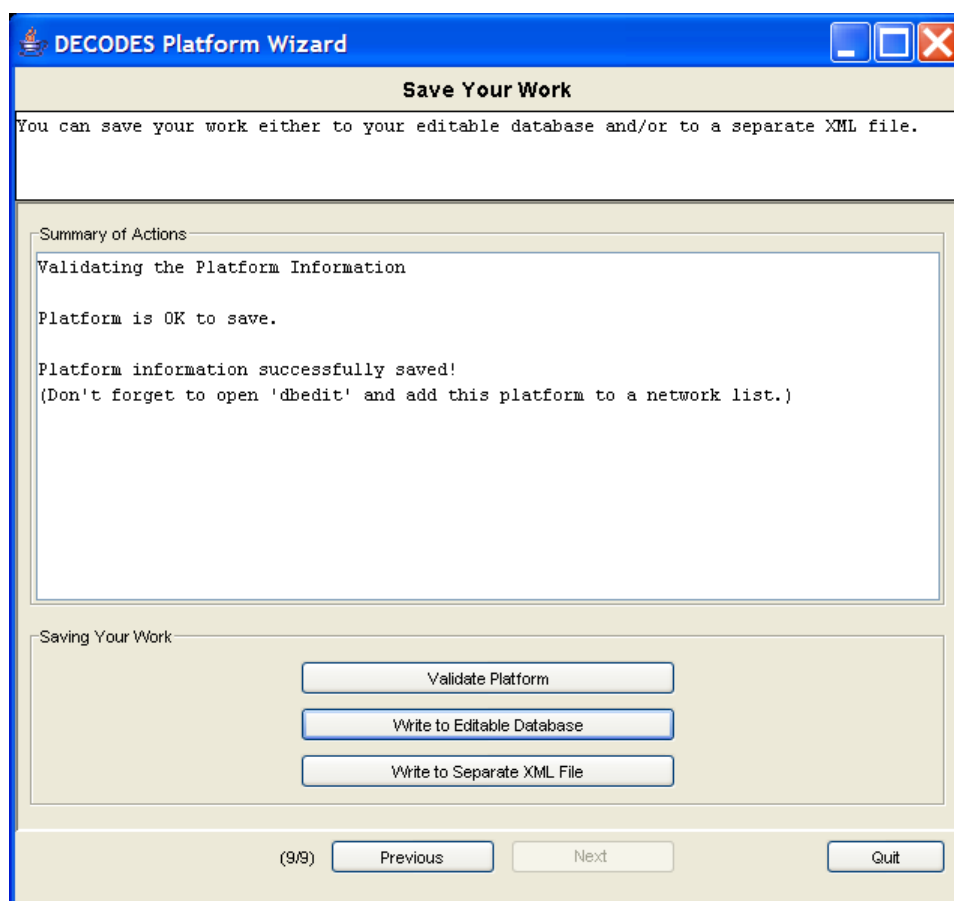


Figure 27: Platform Wizard "Save Your Work" Panel.

## 9 USGS EDL (Electronic Data Logger) Files

EDL (Electronic Data Logger) files can be processed by DECODES routing specs just as easily as DCP messages. This section highlights some of the differences that you'll need to be aware of in setting up your database.

### 9.1 How does DECODES find the Platform Record?

If file contains USGS header with a complete values for STATION and DEVICE, then DECODES can construct a transport medium ID as follows:

```
station-devname-devnum
```

Example: Suppose the file header contains:

```
//STATION 01234567
//DEVICE CR10 1
```

...then the medium ID would be “01234567-CR10-1”. Your platform record would need to have a Transport Medium record with this value.

If your files do not contain a complete USGS header, then you can supply it on the command line with a -D argument. For example:

```
rs -Dfilename=myfile -DMediumID=01234567-CR10-1 myspecname
```

(station number with device number), for example “//STATION cr10

MediumID property set on command line for files that are missing STATION or device number in the file. Example:

```
rs -DMediumID=0143563-cr10-3 specname
```

### 9.2 Time Zones for Dates & Times in EDL Files

Time zone abbreviations can be one of:

- Standard time zone name like America/Chicago.
- Custom Java time zone in the form “GMT-HH:MM”. For example, Eastern US that never uses daylight time could be “GMT-05:00”.
- A sign followed by a minute offset, followed by a flag indicating whether or not daylight time applies: Y, N, or M (see below).

Time zones (as of DECODES 6.1) are stored in the transport medium record (see Figure 15). If none is specified here, the time zone specified in the site record is used. If none there, then “UTC” is assumed.

The daylight time flag can take on three values:



## 10 Seasonal Data Processing

You can control conditional decoding in the following ways:

- Ignore platforms during a specified season
- Only process platforms during a specified season
- Ignore sensors during a specified season
- Only process sensors during a specified season

Refer to the OpenDCS 6 Installation Guide chapter on Reference List Editor. With the reference list editor you can define any annual seasons you need. For each season you specify:

- A unique abbreviation – this will be used to refer to the season from platform and sensor records
- A descriptive name
- A start date/time of the year
- An end date/time of the year
- An optional Time Zone for interpreting the date/times. If left blank, the default time zone on the computer (typically local time) is assumed.


To control the processing of platform messages by season, open the DECODES Database Editor, Platform Tab. Figure 28 illustrates the process.

Open the desired platform and click the Platform Properties button. You will see two properties in the list:

- ignoreSeason – Define if you want the platform to be ignored during a season.
- processSeason – Define if you want the platform to *only* be processed during a season.

To define, double click the property in the list, or select it and click the Edit button. Then in the “Edit Property Value” dialog, select the season from the pull down list.

To *deselect*, simply make the property value blank. A blank selection is always present at the top of the list.

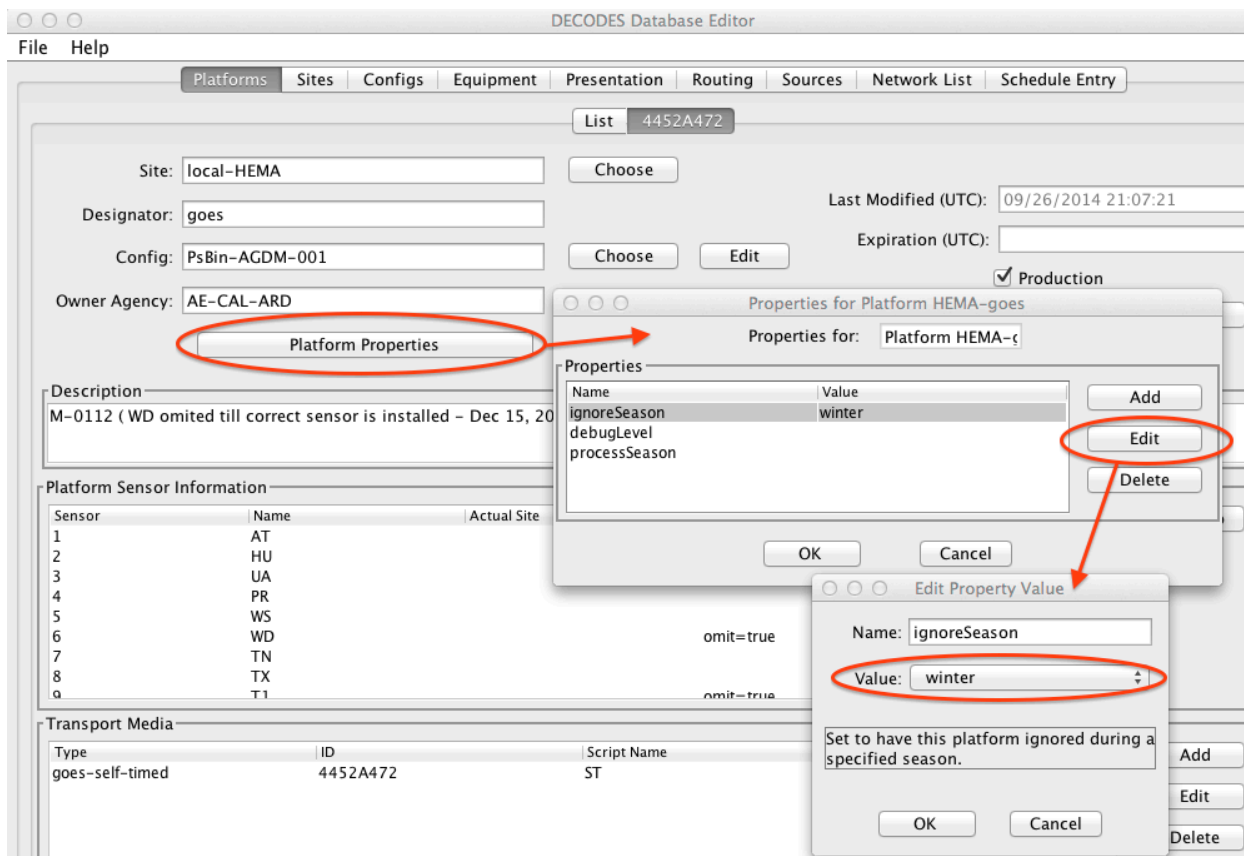

**Figure 28: Seasonal Processing of Platform.**

To control individual sensors, you have two choices.

1. Define the ignoreSeason/processSeason property in a Configuration Sensor record. It will then apply to any platform using this configuration.
2. Define the ignore/Season/processSeason property in a Platform Sensor record.

For example, see Figure 29 below. To have only the PR sensor ignored. While still in the platform tab, select the PR sensor in the list and click Edit Sensor Info. The properties are at the bottom of the Platform Sensor Parameters dialog. Click "ignoreSeason" and press the Edit button. Now define the season.

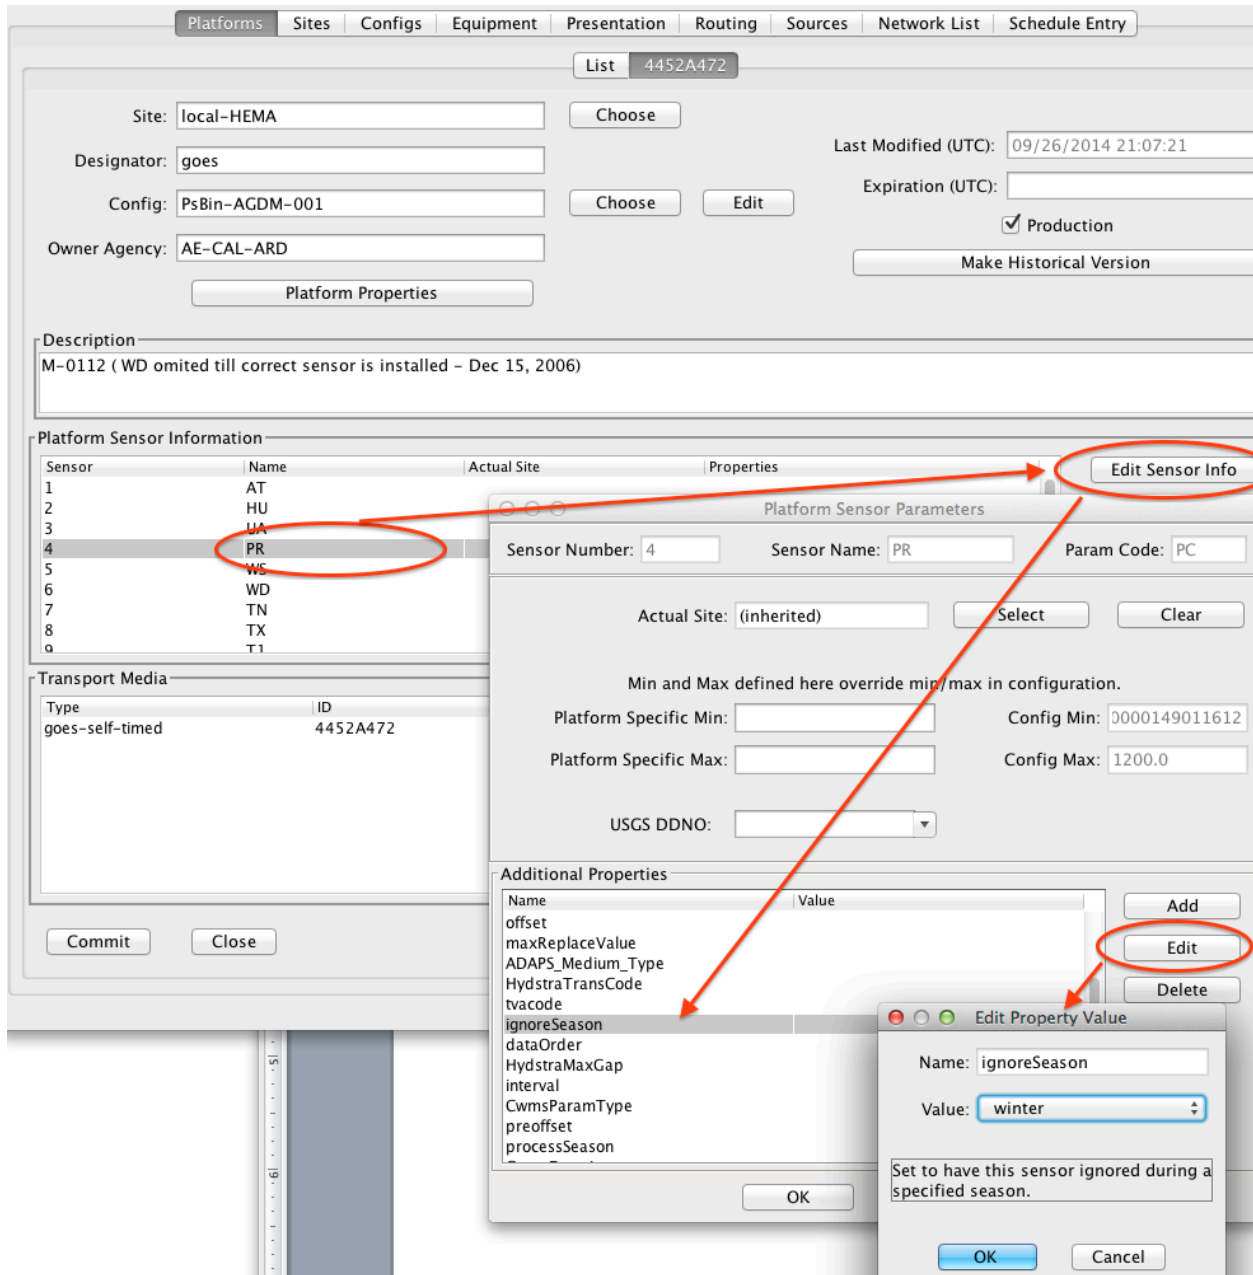


Figure 29: Seasonal Processing of Individual Sensor.