



Cluster management with System Manager

ONTAP 9

NetApp
March 23, 2022

This PDF was generated from https://docs.netapp.com/us-en/ontap/concept_administration_overview.html on March 23, 2022. Always check docs.netapp.com for the latest.

Table of Contents

- Cluster management with System Manager 1
 - Administration overview with System Manager 1
 - Enable new features by adding license keys 2
 - View and submit support cases 2
 - Monitor risks 3
 - Gain insights to help optimize your system 5
 - View hardware configurations to determine problems 6
 - Add disks to a local tier (Add capacity to an aggregate) 8
 - Manage nodes 10

Cluster management with System Manager

Administration overview with System Manager

System Manager is a graphical management interface that enables you to use a web browser to manage storage systems and storage objects (such as disks, volumes, and storage tiers) and perform common management tasks related to storage systems.

The procedures in this section help you manage your cluster with System Manager in ONTAP 9.7 and later releases.



If you are using the classic System Manager (available only in ONTAP 9.7 and earlier), refer to [System Manager Classic \(ONTAP 9.0 to 9.7\)](#)

Using the System Manager Dashboard, you can view at-a-glance information about important alerts and notifications, the efficiency and capacity of storage tiers and volumes, the nodes that are available in a cluster, the status of the nodes in an HA pair, the most active applications and objects, and the performance metrics of a cluster or a node.

With System Manager you can perform many common tasks, such as the following:

- Create a cluster, configure a network, and set up support details for the cluster.
- Configure and manage storage objects, such as disks, local tiers, volumes, qtrees, and quotas.
- Configure protocols, such as SMB and NFS, and provision file sharing.
- Configure protocols such as FC, FCoE, NVMe, and iSCSI for block access.
- Create and configure network components, such as subnets, broadcast domains, data and management interfaces, and interface groups.
- Set up and manage mirroring and vaulting relationships.
- Perform cluster management, storage node management, and storage virtual machine (storage VM) management operations.
- Create and configure storage VMs, manage storage objects associated with storage VMs, and manage storage VM services.
- Monitor and manage high-availability (HA) configurations in a cluster.
- Configure service processors to remotely log in, manage, monitor, and administer the node, regardless of the state of the node.

System Manager terminology

System Manager uses different terminology than the CLI for some ONTAP key functionality.

- **Local tier** – a set of physical solid-state drives or hard-disk drives you store your data on. You might know these as aggregates. In fact, if you use the ONTAP CLI, you will still see the term *aggregate* used to represent a local tier.
- **Cloud tier** – storage in the cloud used by ONTAP when you want to have some of your data off premises for one of several reasons. If you are thinking of the cloud part of a FabricPool, you've already figured it out. And if you are using a StorageGRID system, your cloud might not be off premises at all. (A cloud-like experience on premises is called a *private cloud*.)

- **Storage VM** – a virtual machine running within ONTAP that provides storage and data services to your clients. You might know this as an *SVM* or a *vserver*.
- **Network interface** - an address and properties assigned to a physical network port. You might know this as a *logical interface (LIF)*.
- **Pause** - an action that halts operations. Before ONTAP 9.8, you might have referred to *quiesce* in other versions of System Manager.


Enable new features by adding license keys

Some ONTAP features are enabled by license keys. You can add license keys using System Manager.

Beginning with ONTAP 9.10.1, you use System Manager to install a NetApp License File to enable multiple licensed features all at once. Using a NetApp License File simplifies license installation because you no longer have to add separate feature license keys. You download the NetApp License File from the NetApp Support Site.

If you already have license keys for some features and you are upgrading to ONTAP 9.10.1, you can continue to use those license keys.

Steps

1. Click **Cluster > Settings**.
2. Under **License**, click .
3. Click **Browse** to locate and select the NetApp License File you downloaded.
4. If you have license keys you want to add, select **Use 28-character license keys** and enter the keys.

View and submit support cases

Beginning with ONTAP 9.9.1, you can view support cases from Active IQ associated with the cluster. You can also copy cluster details that you need to submit a new support case on the NetApp Support Site.



When working with ONTAP 9.9.1, to receive alerts about firmware updates, you must be registered with Active IQ Unified Manager. Refer to [Active IQ Unified Manager documentation resources](#).

Steps

1. In System Manager, select **Support**.

A list of open support cases associated with this cluster is displayed.

2. Click on the following links to perform procedures:
 - **Case Number**: See details about the case.
 - **Go to NetApp Support Site**: Navigate to the **My AutoSupport** page on the NetApp Support Site to view knowledge base articles or submit a new support case.
 - **View My Cases**: Navigate to the **My Cases** page on the NetApp Support Site.
 - **View Cluster Details**: View and copy information you will need when you submit a new case.

Monitor risks

Beginning with ONTAP 9.10.0, you can use System Manager to monitor the risks reported by Active IQ Digital Advisor. Beginning with ONTAP 9.10.1, you can use System Manager to also acknowledge the risks.

NetApp Active IQ Digital Advisor reports opportunities to reduce risk and improve the performance and efficiency of your storage environment. With System Manager, you can learn about risks reported by Active IQ and receive actionable intelligence that helps you administer storage and achieve higher availability, improved security, and better storage performance.

Link to your Active IQ account

To receive information about risks from Active IQ, you should first link to your Active IQ account from System Manager.

Steps

1. In System Manager, click **Cluster > Settings**.
2. Under **Active IQ Registration**, click **Register**.
3. Enter your credentials for Active IQ.
4. After your credentials are authenticated, click **Confirm to link Active IQ with System Manager**.

View the number of risks

Beginning with ONTAP 9.10.0, you can view from the dashboard in System Manager the number of risks reported by Active IQ.

Before you begin

You must establish a connection from System Manager to your Active IQ account. Refer to [Link to your Active IQ account](#).

Steps

1. In System Manager, click **Dashboard**.
2. In the **Health** section, view the number of reported risks.



You can view more detailed information about each risk by clicking the message showing the number of risks. See [View details of risks](#).

View details of risks

Beginning with ONTAP 9.10.0, you can view from System Manager how the risks reported by Active IQ are categorized by impact areas. You can also view detailed information about each reported risk, its potential impact on your system, and corrective actions you can take.

Before you begin

You must establish a connection from System Manager to your Active IQ account. Refer to [Link to your Active IQ account](#).

Steps

1. Click **Events > All Events**.
2. In the **Overview** section, under **Active IQ Suggestions**, view the number of risks in each impact area category. The risk categories include:
 - Performance & efficiency
 - Availability & protection
 - Capacity
 - Configuration
 - Security
3. Click on the **Active IQ Suggestions** tab to view information about each risk, including the following:
 - Level of impact to your System
 - Category of the risk
 - Nodes that are affected
 - Type of mitigation needed
 - Corrective actions you can take

Acknowledge risks

Beginning with ONTAP 9.10.1, you can use System Manager to acknowledge any of the open risks.

Steps

1. In System Manager, display the list of risks by performing the procedure in [View details of risks](#).
2. Click on the risk name of an open risk that you want to acknowledge.
3. Enter information into the following fields:
 - Reminder (date)
 - Justification
 - Comments
4. Click **Acknowledge**.



After you acknowledge a risk, it takes a few minutes for the change to be reflected in the list of Active IQ suggestions.

Unacknowledge risks

Beginning with ONTAP 9.10.1, you can use System Manager to unacknowledge any risk that was previously acknowledged.

Steps

1. In System Manager, display the list of risks by performing the procedure in [View details of risks](#).
2. Click on the risk name of an acknowledged risk that you want to unacknowledge.
3. Enter information into the following fields:
 - Justification
 - Comments

4. Click **Unacknowledge**.



After you unacknowledge a risk, it takes a few minutes for the change to be reflected in the list of Active IQ suggestions.

Gain insights to help optimize your system

Beginning with ONTAP 9.11.0, you can view insights in System Manager that help you optimize the capacity and security compliance of your system. Based on best practices, these insights are displayed on one page from which you can initiate immediate actions to optimize your system.

View optimization insights


Steps


1. In System Manager, click **Insights** in the left-hand navigation column.

The **Insights** page shows groups of insights. Each group of insights might contain one or more insights. The following groups are displayed:

- Needs your attention
- Remediate risks
- Optimize your storage

2. (Optional) Filter the insights that are displayed by clicking either of these buttons in the upper-right corner of the page:

-  Display the security-related insights.

-  Display the capacity-related insights.

Respond to insights to optimize your system

In System Manager, you can respond to insights by either dismissing them, exploring different ways to remediate the problems, or initiating the process to fix the problems.

Steps

1. In System Manager, click **Insights** in the left-hand navigation column.
2. Hover over an insight to reveal the buttons to perform the following actions:
 - **Dismiss:** Remove the insight from the view. To “undismiss” the insight, refer to [Customize the setting for insights](#).
 - **Explore:** Find out various ways to remediate the problem mentioned in the insight. This button appears only if there is more than one method of remediation.
 - **Fix:** Initiate the process of remediating the problem mentioned in the insight. You will be asked to confirm whether you want to take the action needed to apply the fix.




Some of these actions can be initiated from other pages in System Manager, but the **Insights** page helps you streamline your day-to-day tasks by allowing you to initiate these action from this one page.

Customize the setting for insights

You can customize which insights you will notified about in System Manager.

Steps

1. In System Manager, click **Insights** in the left-hand navigation column.
2. In the upper-right corner of the page, click .
3. On the **Settings** page, ensure there is a check in the check boxes next to the insights you want to be notified about. If you previously dismissed an insight, you can “undismiss” it by ensuring a check is in its check box.
4. Click **Save**.

View hardware configurations to determine problems

With ONTAP 9.8 and later, you can use System Manager to view the configuration of AFF hardware on your network and determine if problems might arise.

Before you Start

For ONTAP 9.8, System Manager provides a *preview* of the capability to view AFF hardware configurations. Beginning with ONTAP 9.9.1, you can view all AFF hardware configurations.

Steps

To view AFF hardware configurations, perform the following steps:

1. In System Manager, select **Cluster > Hardware**.
2. Hover your mouse over components to view status and other details.

You can view various types of information:

- [Information about controllers](#)
- [Information about disk shelves](#)
- [Information about storage switches](#)

Information about controllers

You can view the following:

Nodes:

- Rear views are displayed.
- Models with an internal disk shelf also show the disk layout in the front view.
- You can view the following platform models:

If your system is running...	Then you can use System Manager to view...
------------------------------	--

ONTAP 9.8	C190, A220, A300, A400, and A700
ONTAP 9.9.1	C190, A220, A250, A300, A320, A400, A700, A700s, A800, FAS500f

Ports:

- Console ports are not shown.
- A port is red if it is down.
- The status of a port and other details are shown when you hover over the port.

FRUs:

Information about FRUs appears only when the state of a FRU is non-optimal.

- Failed PSUs in nodes or chassis.
- High temperatures detected in nodes.
- Failed fans on the nodes or chassis.

Adapter cards:

- Cards with defined part number fields are shown in the slots if external cards has been inserted.
- Ports on cards are shown.
- Certain cards are shown with specific images of the cards. If the card is not in the list of supported part numbers, then a generic graphic is displayed.

Information about disk shelves

You can view the following:

Disk shelves:

- Front and rear views are displayed.
- You can view the following disk shelf models:

If your system is running...	Then you can use System Manager to view...
ONTAP 9.8	DS4243, DS4486, DS212C, DS2246, DS224C, and NS224
ONTAP 9.9.1	All supported disk shelf models

Shelf ports:

- Port status is displayed.
- Remote port information is shown if the port is connected.

Shelf FRUs:

- PSU failure information is shown.

Information about storage switches


- The display shows switches that act as storage switches used to connect shelves to nodes.
- Beginning with 9.9.1, System Manager displays information about a switch that acts as both a storage switch and a cluster, which can also be shared between nodes of an HA pair.
- You can view the following storage switch models:

If your system is running...	Then you can use System Manager to view...
ONTAP 9.8	Cisco Nexus 3232C Switch
ONTAP 9.9.1	Cisco Nexus 3232C Switch Cisco Nexus 9336C-FX2 Switch

- You can view the following:
 - **Storage switch** information includes switch name, IP address, serial number, SNMP version, and system version.
 - **Storage switch port** information includes identity name, identity index, state, and other details, including remote connection.

Video of Hardware Visualization using System Manager in ONTAP 9.8

The hardware visualization feature enables users to quickly visualize hardware status and any potential connection issues.

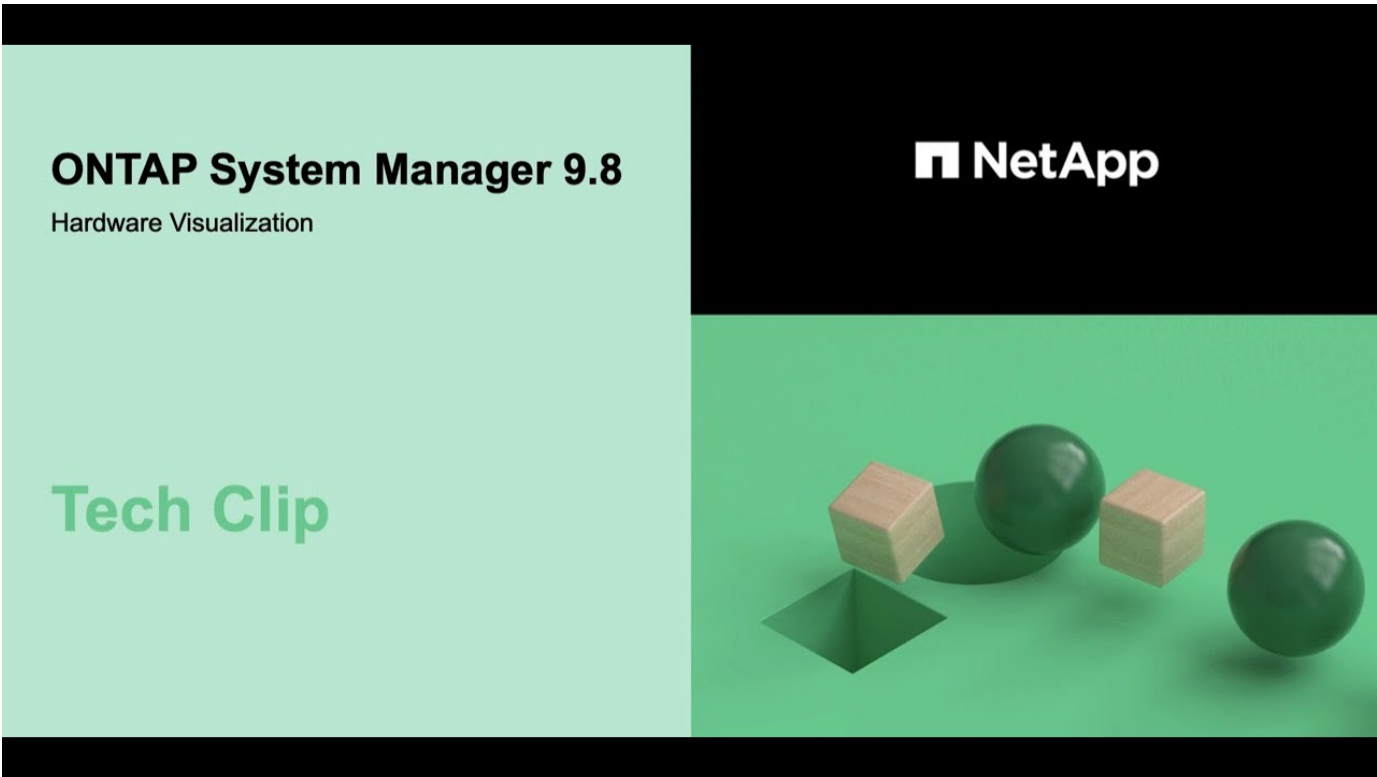

Add disks to a local tier (Add capacity to an aggregate)

You can increase the size of an existing aggregate (local tier) by adding capacity disks.

The process you use to increase capacity depends on the version of ONTAP that you have installed:

If you have installed...	Then increase capacity with this process...
ONTAP 9.7 or earlier	Increase the capacity of an aggregate (ONTAP 9.7 or earlier)
ONTAP 9.8 or later	Increase the capacity of a local tier (ONTAP 9.8 or later)

Increase the capacity of an aggregate (ONTAP 9.7 or earlier)

Using System Manager with ONTAP 9.7 or earlier, you can add capacity to an aggregate by adding capacity disks.

About this task

You perform this task only if you have installed ONTAP 9.7 or earlier. If you installed ONTAP 9.8 or later, refer to [Increase the capacity of a local tier \(ONTAP 9.8 or later\)](#).

Steps

1. Click **(Return to classic version)**.
2. Click **Hardware and Diagnostics > Aggregates**.
3. Select the aggregate to which you want to add capacity disks, and then click **Actions > Add Capacity**.



You should add disks that are of the same size as the other disks in the aggregate.

4. Click **Switch to the new experience**.
5. Click **Storage > Tiers** to verify the size of the new aggregate.

Increase the capacity of a local tier (ONTAP 9.8 or later)

Using System manager with ONTAP 9.8 or later, you can add capacity to a local tier by adding capacity disks.

About this task

You perform this task only if you have installed ONTAP 9.8 or later. If you installed an earlier version of ONTAP, refer to [Increase the capacity of an aggregate \(ONTAP 9.7 or earlier\)](#).

Steps

1. Click **Storage > Tiers**.
2. Click  next to the name of the local tier to which you want to add capacity.
3. Click **Add Capacity**.



If there are no spare disks that you can add, then the **Add Capacity** option is not shown, and you cannot increase the capacity of the local tier.

4. If the node contains multiple storage tiers, then select the number of disks you want to add to the local tier. Otherwise, if the node contains only a single storage tier, the added capacity is estimated automatically.
5. Click **Add**.
6. (Optional) The process takes some time to complete. If you want to run the process in the background, select **Run in Background**.


7. After the process completes, you can view the increased capacity amount in the local tier information at **Storage > Tiers**.

Manage nodes

Reboot, shut down, take over, and give back nodes

You should switch a node's workload to its HA partner (takeover) before rebooting or shutting down the node.

Steps

1. Click **Cluster > Overview**.
2. Under **Nodes**, click .
3. Click the node and select the desired action.

Add nodes to cluster

You can increase the size and capabilities of your cluster by adding new nodes.

Before you Start

You should have already cabled the new nodes to the cluster.

There are separate processes for working with System Manager in ONTAP 9.7 or ONTAP 9.8.

- [Adding nodes to a cluster with System Manager \(ONTAP 9.7\)](#)
- [Adding nodes to a cluster with System Manager \(ONTAP 9.8\)](#)

Adding nodes to a cluster with System Manager (ONTAP 9.7)

Steps

1. Click **(Return to classic version)**.
2. Click **Configurations > Cluster Expansion**.

System Manager automatically discovers the new nodes.
3. Click **Switch to the new experience**.
4. Click **Cluster > Overview** to view the new nodes.

Adding nodes to a cluster with System Manager (ONTAP 9.8)

Steps

1. Select **Cluster > Overview**.

The new controllers are shown as nodes connected to the cluster network but are not in the cluster.

2. Click **Add**.
 - The nodes are added into the cluster.
 - Storage is allocated implicitly.

Copyright Information

Copyright © 2022 NetApp, Inc. All rights reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means-graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system-without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

RESTRICTED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.277-7103 (October 1988) and FAR 52-227-19 (June 1987).

Trademark Information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.