
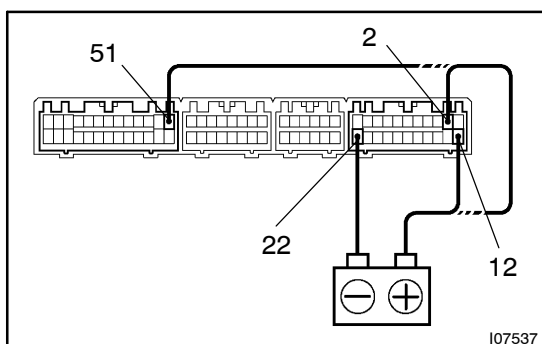


INSPECTION

1. INSPECT DEFOGGER TIMER OPERATION

- (a) Connect the positive (+) lead from the voltmeter to terminal 2, 12 and 42 of panel switch connector and negative (-) lead to terminal 22.
- (b) When the switch is OFF, the voltage should be approx. 12V.
- (c) Turn the defogger switch ON and check that the indicator lights up and that the voltage is less than 1 V.
- (d) After 15 minutes, check that the switch is OFF and the voltage is approx. 12 V.


If operation is not as specified, replace the switch.

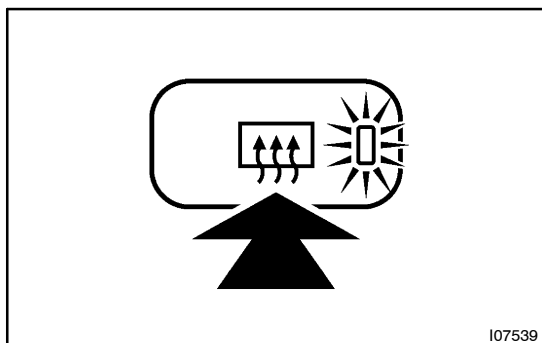


2. INSPECT MIRROR HEATER TIMER OPERATION

- (a) Connect the positive (+) lead from the voltmeter to terminal 2, 12 and 51 of mirror heater switch connector and negative (-) lead to terminal 22.
- (b) When the switch is OFF, the voltage should be approx. 12V.
- (c) Turn the mirror heater switch ON and check that the indicator lights up and that the voltage is less than 1 V.
- (d) After 15 minutes, check that the switch is OFF and the voltage is approx. 12 V.

If operation is not as specified, replace the switch.

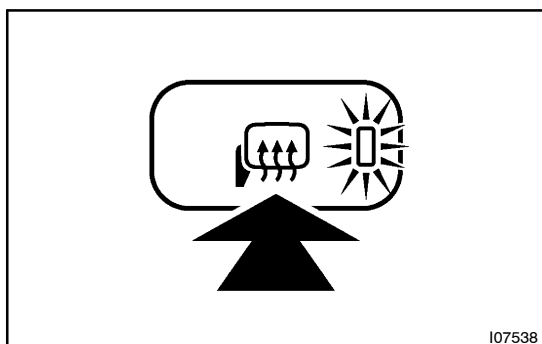

Wire Harness Side

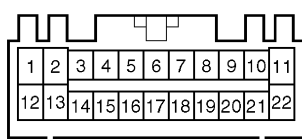


3. INSPECT DEFOGGER SWITCH (in INTEGRATION CONTROL PANEL SWITCH) CIRCUIT

Connector disconnected:

Disconnect the connector from the panel switch and inspect the connector on wire harness side, as shown in the chart.

Tester connection	Condition	Specified condition
22 - Ground	Constant	Continuity
12 - Ground	Constant	Battery voltage
1 - Ground	Ignition switch LOCK or ACC	No voltage
1 - Ground	Ignition switch ON	Battery voltage
2 - Ground	Ignition switch LOCK	No voltage
2 - Ground	Ignition switch ACC or ON	Battery voltage


If the circuit is not as specified, replace the switch.

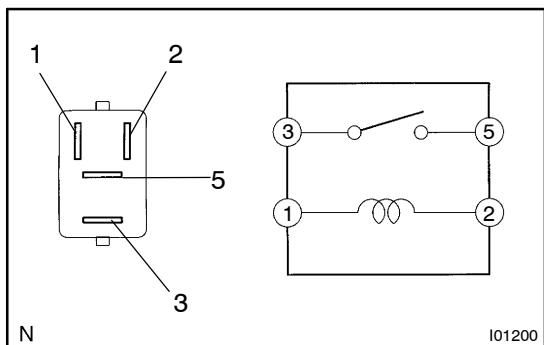

4. INSPECT DEFOGGER RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 - 2	Continuity
Apply B+ between terminals 1 and 2.	3 - 5	Continuity


If continuity is not as specified, replace the relay.

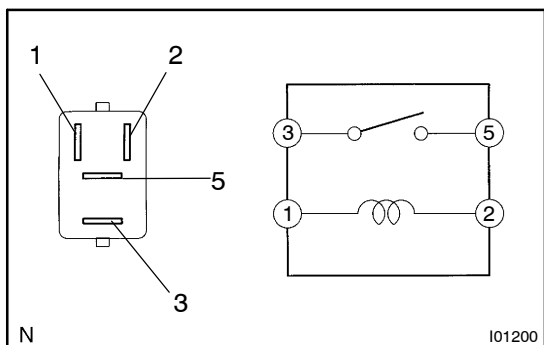

5. INSPECT MIRROR HEATER RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 - 2	Continuity
Apply B+ between terminals 1 and 2.	3 - 5	Continuity

If continuity is not as specified, replace the relay.

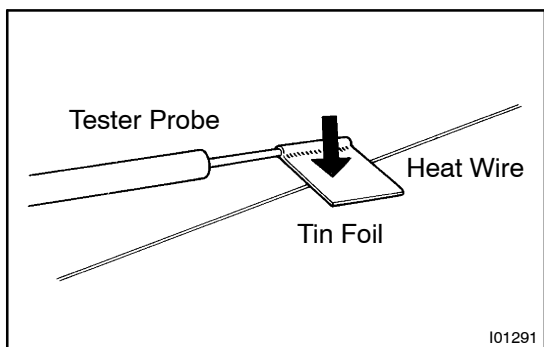


6. INSPECT DEFOGGER WIRE


NOTICE:

- When cleaning the glass, use a soft, dry cloth, and wipe the glass in the direction of the wire. Take care not to damage the wires.
- Do not use detergents or glass cleaners with abrasive ingredients.
- When measuring voltage, wrap a piece of tin foil around the tip of the negative probe and press the foil against the wire with your finger, as shown.

- Turn the ignition switch ON.
- Turn the defogger switch ON.
- Inspect the voltage at the center of each heat wire, as shown.

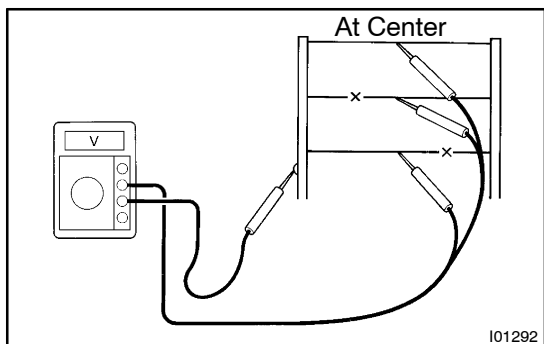

Voltage	Criteria
Approx. 5V	Okay (No break in wire)
Approx. 10V or 0V	Broken wire

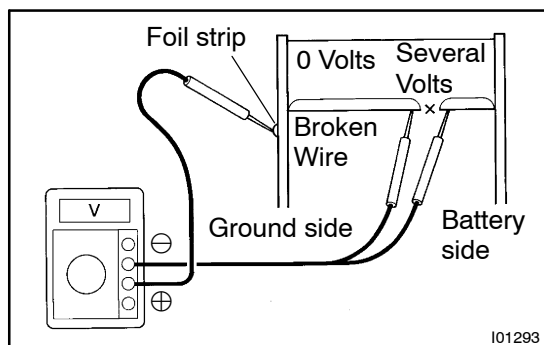
**HINT:**

If there is approximately 10 V, the wire is broken between the center of the wire and the positive (+) end. If there is no voltage, the wire is broken between the center of the wire and ground.


- (d) Place the voltmeter positive (+) lead against the defogger wire on the battery side.
- (e) Place the voltmeter negative (-) lead with the foil strip against the wire on the ground side.
- (f) Slide the positive (+) lead from battery to ground side.
- (g) The point where the voltmeter deflects from several V to zero V is the place where the defogger wire is broken.

HINT:


If the heat wire is not broken, the voltmeter indicates 0 V at the positive (+) end of the heat wire but gradually increases to about 12 V as the meter probe moves to the other end.

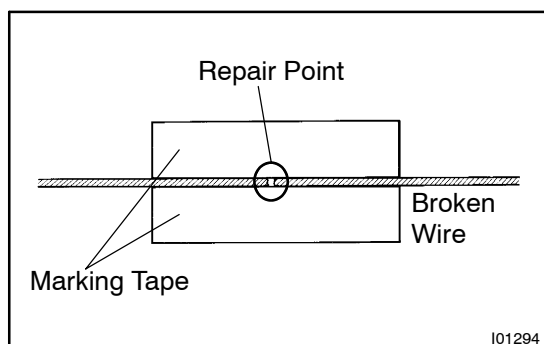**7. IF NECESSARY, REPAIR DEFOGGER WIRE**

- (a) Clean the broken wire tips with grease, wax and silicone remover.
- (b) Place the masking tape along both sides of the wire for repair.
- (c) Thoroughly mix the repair agent (Dupont paste No. 4817).

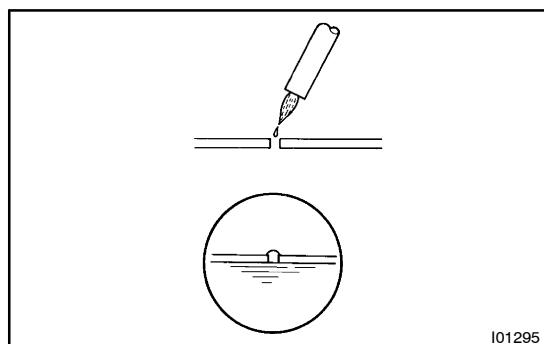

- (d) Using a fine tip brush, apply a small amount of the agent to the wire.
- (e) After a few minutes, remove the masking tape.
- (f) Do not repair the defogger wire for at least 24 hours.

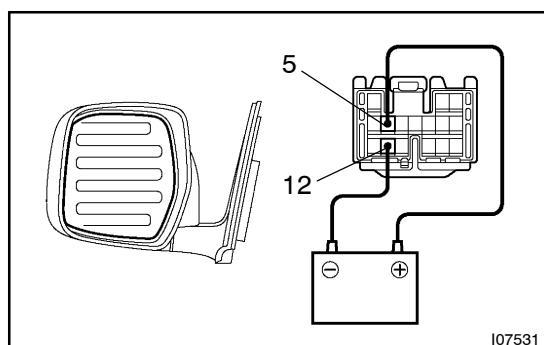**8. w/ Mirror Heater****INSPECT MIRROR HEATER OPERATION**

- (a) Connect the positive (+) lead from the battery to terminal 5 and the negative (-) lead to terminal 12.
- (b) Check that the mirror becomes warm.

HINT:

It will take a short time for the mirror to become warm.