

## EnOcean Equipment Profiles

### REVISION HISTORY

| Ver.  | Editor | Change                                    | Date         |
|-------|--------|---|--------------|
| 2.6.8 | NM     | Last xml edition of the EEP-Specification | Dec 31, 2017 |

Copyright © EnOcean Alliance Inc. (2019). All rights reserved.

The information within this document is the property of the EnOcean Alliance and its use and disclosure are restricted. Elements of the EnOcean Alliance specifications may also be subject to third party intellectual property rights, including without limitation, patent, copyright or trademark rights (such a third party may or may not be a member of the EnOcean Alliance.)

The EnOcean Alliance is not responsible and shall not be held responsible in any manner for identifying or failing to identify any or all such third party intellectual property rights. This document and the information contained herein are provided on an “as is” basis and the EnOcean Alliance disclaims all warranties express or implied, including but not limited to

- (1) any warranty that the use of the information herein will not infringe any rights of third parties (including any intellectual property rights, patent, copyright or trademark rights, or
- (2) any implied warranties of merchantability, fitness for a particular purpose, title or non-infringement.

In no event will the EnOcean Alliance be liable for any loss of profits, loss of business, loss of use of data, interruption of business, or for any other direct, indirect, special or exemplary, incidental, punitive or consequential damages of any kind, in contract or in tort, in connection with this document or the information contained herein, even if advised of the possibility of such loss or damage. All Company, brand and product names may be trademarks that are the sole property of their respective owners.

The above notice and this paragraph must be included on all copies of this document that are made.

The EnOcean Alliance “EnOcean Equipment Profiles definitions” are available free of charge to companies, individuals and institutions for all non-commercial purposes (including educational research, technical evaluation and development of non-commercial tools or documentation.)

This specification includes intellectual property („IPR“) of the EnOcean Alliance and joint intellectual properties („joint IPR“) with contributing member companies. No part of this

## System Specification



specification may be used in development of a product or service for sale without being a participant or promoter member of the EnOcean Alliance and/or joint owner of the appropriate joint IPR.

These errata may not have been subjected to an Intellectual Property review, and as such, may contain undeclared Necessary Claims.

EnOcean Alliance Inc.  
2400 Camino Ramon, Suite 375  
San Ramon, CA 94583  
USA  
Graham Martin  
Chairman & CEO EnOcean Alliance

## D2-01: Electronic Switches and Dimmers with Local Control

This EEP family shall be used for bidirectional actuators that control electric loads, e.g. for lightning purposes. Switching and dimming is controlled and high-resolution energy measurement is supported. Local Control, either thru a user interface or thru other measures shall be supported on the actuator. This may include other EnOcean enabled devices taught-in to a device belonging to the EEP family, e.g. a simple rocker switch or more sophisticated devices like occupancy sensors with timing control. The proposed EEP family serves up to 30 output channels and allows controlling them either individually or as a bulk. Extension of this EEP family is possible in different ways:

1. A new device with a different feature mix creates a new TYPE within this EEP family  
-> new column in following table
2. An additional feature is added and a new device with a new TYPE is created  
-> new column and new line in following table
3. Like 2, but EnOcean communication of the EEP family needs to be extended  
-> new column and new line in following table  
-> one or more additional messages need to be defined

For teach-in and teach-out UTE (Universal Uni- and Bidirectional Teach-In Procedure for EEP based Communication) shall be used.

| Supported function ... of Type         | 00 | 01 | 02 | 03 | 04 | 05 | 06 | 07 | 08 | 09 | 0A | 0B | 0C | 0D | 0E | 0F | 10 | 11 | 12 | 13 | 14 | 15 | 16 |
|--|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| No. of output channels                 | 1  | 1  | 1  | 1  | 1  | 1  | 1  | 1  | 1  | 1  | 1  | 1  | 1  | 1  | 1  | 1  | 2  | 2  | 2  | 4  | 8  | 4  | 2  |
| Switching                              | X  | X  | X  | X  | X  | X  | X  | X  | X  | X  | X  | X  | X  | X  | X  | X  | X  | X  | X  | X  | X  | X  | X  |
| Dimming                                | -  | -  | X  | X  | X  | X  | -  | -  | -  | X  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | X  |
| Dimming configurable                   | -  | -  | -  | -  | X  | X  | -  | -  | -  | X  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | X  |
| Pilot wire                             | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | X  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  |
| Local control                          | X  | X  | X  | X  | X  | X  | -  | -  | X  | X  | X  | X  | X  | X  | X  | X  | X  | X  | X  | X  | X  | X  | X  |
| Local control enable/disable           | -  | -  | -  | -  | X  | X  | -  | -  | X  | -  | X  | X  | X  | X  | X  | X  | -  | -  | X  | -  | -  | X  | X  |
| External Switch / Push Button Control  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | X  | -  | -  | X  | -  | -  | X  | X  | X  |
| External Switch / Push Button Type     | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | X  | -  | -  | X  | -  | -  | X  | X  | X  |
| Auto OFF Timer                         | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | X  | -  | -  | X  | -  | -  | X  | X  | X  |
| Delay OFF Timer                        | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | X  | -  | -  | X  | -  | -  | X  | X  | X  |
| Taught-in devices enable/disable 2)    | -  | -  | -  | -  | X  | X  | -  | -  | X  | X  | X  | X  | X  | X  | X  | X  | -  | -  | X  | -  | -  | -  | -  |
| User interface day/night mode          | -  | -  | -  | -  | -  | X  | -  | -  | X  | -  | X  | X  | X  | X  | X  | X  | -  | -  | X  | -  | -  | X  | X  |
| Over current reporting                 | -  | -  | -  | -  | X  | X  | -  | -  | X  | X  | -  | -  | X  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  |
| Over current configurable              | -  | -  | -  | -  | X  | X  | -  | -  | X  | -  | -  | -  | X  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  |
| Energy measurement                     | X  | -  | X  | -  | X  | X  | X  | -  | X  | X  | -  | X  | X  | -  | X  | -  | X  | -  | -  | -  | -  | -  | -  |
| Power measurement                      | -  | -  | -  | -  | X  | X  | -  | -  | X  | X  | -  | X  | X  | -  | X  | -  | -  | -  | -  | -  | -  | -  | -  |
| Measurement Roll Over 1)               | X  | -  | X  | -  | -  | -  | X  | -  | -  | -  | -  | X  | -  | -  | X  | -  | X  | -  | -  | -  | -  | -  | -  |
| Measurement Auto Scaling 1)            | -  | -  | -  | -  | X  | X  | -  | -  | X  | X  | -  | -  | X  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  |
| Measurement configurable               | -  | -  | -  | -  | -  | X  | -  | -  | X  | X  | -  | X  | X  | -  | X  | -  | -  | -  | -  | -  | -  | -  | -  |
| Measurement report on query            | X  | -  | X  | -  | X  | X  | X  | -  | X  | X  | -  | X  | X  | -  | X  | -  | X  | -  | -  | -  | -  | X  | -  |
| Measurement auto reporting             | -  | -  | -  | -  | X  | X  | -  | -  | X  | X  | -  | X  | X  | -  | X  | -  | -  | -  | -  | -  | -  | -  | -  |
| Default state configurable             | -  | -  | -  | -  | -  | X  | -  | -  | X  | X  | X  | X  | X  | X  | X  | X  | -  | -  | X  | -  | -  | X  | -  |
| Error level reporting                  | -  | -  | -  | -  | -  | X  | -  | -  | X  | X  | -  | -  | X  | -  | -  | -  | -  | -  | -  | -  | -  | X  | -  |
| Power Failure Detection                | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | X  | X  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  |
| Power Failure Detection enable/disable | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | X  | X  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  |
| Maximum Dimming Value                  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | X  |
| Minimum Dimming Value                  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | -  | X  |

1) A device may either support Measurement Roll Over or Measurement Auto Scaling.

2) Enable / disable only effects devices that are taught-in to a device belonging to this EEP family; it does not effect communication between a device belonging to this EEP family and any other entity where this device has been taught-in by itself.

# System Specification

|             |    |  |
|-------------|----|--|
| <b>RORG</b> | D2 | <b>VLD Telegram</b>                                |
| <b>FUNC</b> | 01 | Electronic Switches and Dimmers with Local Control |
| <b>TYPE</b> | 08 | Type 0x08 (description: see table)                 |

**Submitter: Team**

## CMD 0x1 - Actuator Set Output

This message is sent to an actuator. It controls switching / dimming of one or all channels of an actuator.

**Command ID 01 (CMD)**

|                    |      |   |   |   |   |   |   |   |           |   |    |    |    |    |    |    |                |    |    |    |    |    |    |    |
|--------------------|------|---|---|---|---|---|---|---|-----------|---|----|----|----|----|----|----|----------------|----|----|----|----|----|----|----|
|                    | DB_2 |   |   |   |   |   |   |   | DB_1      |   |    |    |    |    |    |    | DB_0           |    |    |    |    |    |    |    |
| DB_2.BIT_7 ← 0     | 7    | 6 | 5 | 4 | 3 | 2 | 1 | 0 | 7         | 6 | 5  | 4  | 3  | 2  | 1  | 0  | 7              | 6  | 5  | 4  | 3  | 2  | 1  | 0  |
| Bit Offset: 0 → 23 | 0    | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8         | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16             | 17 | 18 | 19 | 20 | 21 | 22 | 23 |
|                    | CMD  |   |   |   |   |   |   |   | dim value |   |    |    |    |    |    |    | I/O channel    |    |    |    |    |    |    |    |
|                    |      |   |   |   |   |   |   |   |           |   |    |    |    |    |    |    | Output Value % |    |    |    |    |    |    |    |

### REMARK:

In case an Actuator Set Output message specifies a parameter that is not supported by the addressed device, such device should react as following:

- Channel not supported by device -> ignore message
- Dimming command to switching device -> no change of status
- Dimming command with non-supported speed -> dim with regular speed

### RECOMMENDATION:

Dimmers should take things like phase shifting into account to provide dimming based on power consumption (results in brightness for lamps) rather than interpreting percentage values as phase angle only.

| Offset | Size | Data           | ShortCut | Description        | Valid Range   | Scale | Unit |
|--------|------|----------------|----------|--------------------|---|-------|------|
| 0      | 4    | Not Used (= 0) |          |                    |   |       |      |
| 4      | 4    | Command ID     | CMD      | command identifier | Enum:<br>0x01: ID 01  |       |      |
| 8      | 3    | Dim value      | DV       |                    | Enum:<br>0x00: Switch to new output value<br>0x01: Dim to new output value – dim timer 1<br>0x02: Dim to new output value – dim timer 2<br>0x03: Dim to new output value – dim timer 3<br>0x04: Stop dimming<br>0x05...0x07: not used |       |      |
| 11     | 5    | I/O channel    | I/O      |                    | Enum:<br>Output channel (to load)<br>0x00...0x1D:<br>0x1E: All output channels supported by the device<br>0x1F: Input channel (from mains supply)   |       |      |
| 16     | 1    | Not Used (= 0) |          |                    |   |       |      |
| 17     | 7    | Output value   | OV       |                    | Enum:<br>0x00: Output value 0% or OFF<br>0x01...0x64: Output value 1% to 100% or ON<br>0x65...0x7E: Not used<br>0x7F: Output value not valid / not applicable   |       |      |

# System Specification

## CMD 0x2 - Actuator Set Local

This message is sent to an actuator. It configures one or all channels of an actuator.

Response Timing: None

### RECOMMENDATION:

In case the device implements an internal order for dim timers, this order should be from "dim timer 1" (fast) to "dim timer 3" (slow). The configured time shall always be interpreted for a full range (0 to 100%) dimming.

### Command ID 02 (CMD)

| DB_3 |   |   |   |   |   |   |   | DB_2 |   |    |    |    |    |    |    | DB_1                 |    |    |    |    |    |    |    | DB_0   |    |    |    |    |    |    |    |
|------|---|---|---|---|---|---|---|------|---|----|----|----|----|----|----|----------------------|----|----|----|----|----|----|----|--|----|----|----|----|----|----|----|
| 7    | 6 | 5 | 4 | 3 | 2 | 1 | 0 | 7    | 6 | 5  | 4  | 3  | 2  | 1  | 0  | 7                    | 6  | 5  | 4  | 3  | 2  | 1  | 0  | 7  | 6  | 5  | 4  | 3  | 2  | 1  | 0  |
| 0    | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8    | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16                   | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24   | 25 | 26 | 27 | 28 | 29 | 30 | 31 |
| d/e  |   |   |   |   |   |   |   | CMD  |   |    |    |    |    |    |    | OC RO LC I/O channel |    |    |    |    |    |    |    | dim timer 2 dim timer 3 d/n PF state dim timer 1 |    |    |    |    |    |    |    |
|      |   |   |   |   |   |   |   |      |   |    |    |    |    |    |    | medium slow          |    |    |    |    |    |    |    | EEP2.6 fast                                      |    |    |    |    |    |    |    |

# System Specification

| Offset | Size | Data                         | ShortCut | Description        | Valid Range   | Scale | Unit |
|--------|------|------------------------------|----------|--------------------|---|-------|------|
| 0      | 1    | Taught-in devices            | d/e      |                    | Enum:<br>Disable taught-in devices (with different EEPROM)<br>Enable taught-in devices (with different EEPROM)                                    |       |      |
| 1      | 3    | Not Used (= 0)               |          |                    |   |       |      |
| 4      | 4    | Command ID                   | CMD      | Command identifier | Enum:<br>0x02: ID 02  |       |      |
| 8      | 1    | Over current shut down       | OC       |                    | Enum:<br>Over current shut down: static off<br>Over current shut down: automatic restart  |       |      |
| 9      | 1    | reset over current shut down | RO       |                    | Enum:<br>Reset over current shut down: not active<br>Reset over current shut down: trigger signal   |       |      |
| 10     | 1    | Local control                | LC       |                    | Enum:<br>0b0: Disable local control<br>0b1: Enable local control  |       |      |
| 11     | 5    | I/O channel                  | I/O      |                    | Enum:<br>Output channel (to load)<br>0x00...0x1D:<br>0x1E: All output channels supported by the device<br>0x1F: Input channel (from mains supply) |       |      |
| 16     | 4    | Dim timer 2                  | DT2      |                    | Enum:<br>0x00: Not used<br>Dim timer 2 [0,5 ... 7,5s / steps<br>0x01...0x0F: 0,5s]  |       |      |
| 20     | 4    | Dim timer 3                  | DT3      |                    | Enum:<br>0x00: Not used<br>Dim timer 3 [0,5 ... 7,5s / steps<br>0x01...0x0F: 0,5s]  |       |      |
| 24     | 1    | User interface indication    | d/n      |                    | Enum:<br>0b0: User interface indication: day operation<br>0b1: User interface indication: night operation   |       |      |
| 25     | 1    | Power Failure                | PF       |                    | Enum:<br>0b0: Disable Power Failure Detection<br>0b1: Enable Power Failure Detection  |       |      |
| 26     | 2    | Default state                | DS       |                    | Enum:<br>0b00: Default state: 0% or OFF<br>0b01: Default state: 100% or ON<br>0b10: Default state: remember previous state<br>0b11: Not used      |       |      |
| 28     | 4    | Dim timer 1                  | DT1      |                    | Enum:<br>0x00: Not used<br>Dim timer 1 [0,5 ... 7,5s / steps<br>0x01...0x0F: 0,5s]  |       |      |


# System Specification

## CMD 0x3 - Actuator Status Query

This message is sent to an actuator. It requests the status of one or all channels of an actuator.

### Response Timing:

An Actuator Status Response message shall be received within a maximum of 300ms from the time of transmission of this message. In case no such response is received within this time frame the action shall be treated as completed without result.

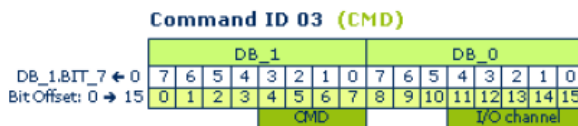

| Offset | Size | Data           | ShortCut | Description        | Valid Range                                 | Scale | Unit |
|--------|------|----------------|----------|--------------------|---|-------|------|
| 0      | 4    | Not Used (= 0) |          |                    |   |       |      |
| 4      | 4    | Command ID     | CMD      | Command identifier | Enum:<br>0x03: ID 03                        |       |      |
| 8      | 3    | Not Used (= 0) |          |                    |   |       |      |
| 11     | 5    | I/O channel    | I/O      |                    | Enum:<br>0x00...0x1D:<br>0x1E:<br>0x1F:     |       |      |
|        |      |                |          |                    | Output channel (to load)                    |       |      |
|        |      |                |          |                    | All output channels supported by the device |       |      |
|        |      |                |          |                    | Input channel (from mains supply)           |       |      |


## CMD 0x4 - Actuator Status Response

This message is sent by an actuator if one of the following events occurs:

- Status of one channel has been changed locally
- Message Actuator Status Query has been received

### Response Timing:

This message shall be sent within a maximum of 50ms from the time of reception of the Actuator Status Query message.

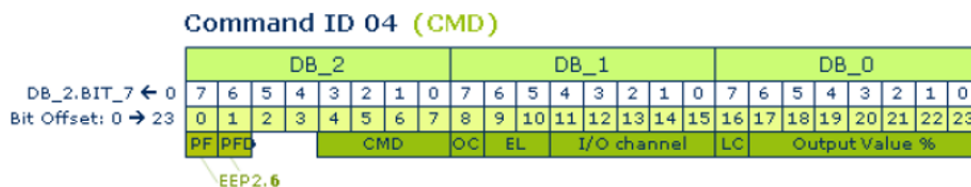

### REMARK 1:

In case an Actuator Status Query message specifies a parameter that is not supported by the device being addresses, such device shall ignore the message and shall not answer using the Actuator Status Response message.

### REMARK 2:

In case an Actuator Status Query message queries all output channels supported by a device being addresses, such device shall answer per each output channel by using an individual Actuator Measurement Response message.

## System Specification

| Offset | Size | Data                    | ShortCut | Description        | Valid Range  | Scale | Unit |
|--------|------|-------------------------|----------|--------------------|--|-------|------|
| 0      | 1    | Power Failure           | PF       |                    | Enum:<br>Power Failure Detection disabled/not supported<br>0b0:<br>Power Failure Detection enabled<br>0b1:   |       |      |
| 1      | 1    | Power Failure Detection | PFD      |                    | Enum:<br>Power Failure not detected/not supported/disabled<br>0b0:<br>Power Failure Detected<br>0b1:   |       |      |
| 2      | 2    | Not Used (= 0)          |          |                    |  |       |      |
| 4      | 4    | Command ID              | CMD      | Command identifier | Enum:<br>0x04: ID 04   |       |      |
| 8      | 1    | Over current switch off | OC       |                    | Enum:<br>Over current switch off: ready / not supported<br>0b0:<br>Over current switch off: executed<br>0b1:   |       |      |
| 9      | 2    | Error level             | EL       |                    | Enum:<br>0b00: Error level 0: hardware OK<br>0b01: Error level 1: hardware warning<br>0b10: Error level 2: hardware failure<br>0b11: Error level not supported |       |      |
| 11     | 5    | I/O channel             | I/O      |                    | Enum:<br>0x00...0x1D: Output channel (to load)<br>0x1E: Not applicable, do not use<br>0x1F: Input channel (from mains supply)                                  |       |      |
| 16     | 1    | Local control           | LC       |                    | Enum:<br>0b0: Local control disabled / not supported<br>0b1: Local control enabled   |       |      |
| 17     | 7    | Output value            | OV       |                    | Enum:<br>0x00: Output value 0% or OFF<br>0x01...0x64: Output value 1% to 100% or ON<br>0x65...0x7E: Not used<br>0x7F: output value not valid / not set         |       |      |




# System Specification

## CMD 0x5 - Actuator Set Measurement

The command defines values at offset 32 and at offset 40 which are the limits for the transmission periodicity of messages. MIT must not be set to 0, MAT >= MIT.

Response Timing: None

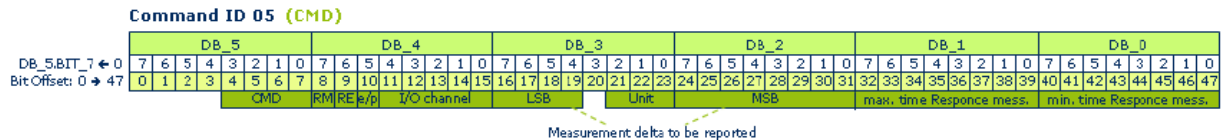

| Offset | Size | Data  | ShortCut | Description                         | Valid Range  | Scale    | Unit |
|--------|------|---|----------|-------------------------------------|--|----------|------|
| 0      | 4    | Not Used (= 0)  |          |                                     |  |          |      |
| 4      | 4    | Command ID  | CMD      | Command identifier                  | Enum:<br>0x05: ID 05   |          |      |
| 8      | 1    | Report measurement                                    | RM       |                                     | Enum:<br>0b0: Report measurement: query only<br>0b1: Report measurement: query / auto reporting  |          |      |
| 9      | 1    | Reset measurement                                     | RE       |                                     | Enum:<br>0b0: Reset measurement: not active<br>0b1: Reset measurement: trigger signal  |          |      |
| 10     | 1    | Measurement mode                                      | e/p      |                                     | Enum:<br>0b0: Energy measurement<br>0b1: Power measurement   |          |      |
| 11     | 5    | I/O channel   | I/O      |                                     | Enum:<br>0x00...0x1D: Output channel (to load)<br>0x1E: All output channels supported by the device<br>0x1F: Input channel (from mains supply) |          |      |
| 16     | 4    | Measurement delta to be reported (LSB)                | MD_LSB   |                                     | 0...4095   | 0...4095 | N/A  |
| 20     | 1    | Not Used (= 0)  |          |                                     |  |          |      |
| 21     | 3    | Unit  | UN       |                                     | Enum:<br>0x00: Energy [Ws]<br>0x01: Energy [Wh]<br>0x02: Energy [KWh]<br>0x03: Power [W]<br>0x04: Power [KW]<br>0x05...0x07: Not used          |          |      |
| 24     | 8    | Measurement delta to be reported (MSB)                | MD_MSB   |                                     | 0...4095   | 0...4095 | N/A  |
| 32     | 8    | Maximum time between two subsequent actuator messages | MAT      | Measurement Response messages [10s] | Enum:<br>1...255: s<br>10...2550<br>0: Reserved  |          |      |
| 40     | 8    | Minimum time between two subsequent actuator messages | MIT      | Measurement Response messages [s]   | Enum:<br>1...255: s<br>1...255<br>0: Reserved  |          |      |


# System Specification

## CMD 0x6 - Actuator Measurement Query

This message is sent to an actuator. The actuator replies with an Actuator Measurement Response message.

### Response Timing:

An Actuator Message Response message shall be received within a maximum of 300ms from the time of transmission of this message. In case no such response is received within this time frame the action shall be treated as completed without result.

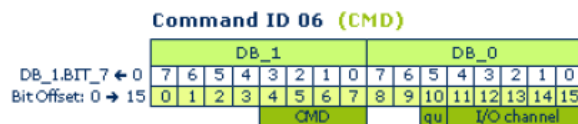

| Offset | Size | Data           | ShortCut | Description        | Valid Range   | Scale | Unit |
|--------|------|----------------|----------|--------------------|---|-------|------|
| 0      | 4    | Not Used (= 0) |          |                    |   |       |      |
| 4      | 4    | Command ID     | CMD      | Command identifier | Enum:<br>0x06: ID 06  |       |      |
| 8      | 2    | Not Used (= 0) |          |                    |   |       |      |
| 10     | 1    | Query          | qu       |                    | Enum:<br>0b0: Query energy<br>0b1: Query power  |       |      |
| 11     | 5    | I/O channel    | I/O      |                    | Enum:<br>Output channel (to load)<br>0x00...0x1D:<br>0x1E: All output channels supported by the device<br>0x1F: Input channel (from mains supply) |       |      |


## CMD 0x7 - Actuator Measurement Response

This message is sent by an actuator if one of the following events occurs:

- Measurement results trigger an automated transmission (see Actuator Set Measurement message)
- Message Actuator Measurement Query has been received

### Response Timing:

This message shall be sent within a maximum of 50ms from the time of reception of the Actuator Measurement Query message.



### REMARK 1:

In case an Actuator Measurement Query message specifies a parameter that is not supported by the device

## System Specification

addressed, such device shall ignore the message and shall not answer using the Actuator Measurement Response message.


REMARK 2:

In case an Actuator Measurement Query message queries all output channels supported by a device being addresses, such device shall answer per each output channel by using an individual Actuator Measurement Response message.

| Offset | Size | Data                        | ShortCut | Description           | Valid Range   | Scale | Unit |
|--------|------|-----------------------------|----------|-----------------------|---|-------|------|
| 0      | 4    | Not Used (= 0)              |          |                       |   |       |      |
| 4      | 4    | Command ID                  | CMD      | Command identifier    | Enum:<br>0x07: ID 07  |       |      |
| 8      | 3    | Unit                        | UN       |                       | Enum:<br>0x00: Energy [Ws]<br>0x01: Energy [Wh]<br>0x02: Energy [KWh]<br>0x03: Power [W]<br>0x04: Power [KW]<br>0x05...0x07: Not used |       |      |
| 11     | 5    | I/O channel                 | I/O      |                       | Enum:<br>0x00...0x1D: Output channel (to load)<br>0x1E: Not applicable, do not use<br>0x1F: Input channel (from mains supply)         |       |      |
| 16     | 32   | Measurement value (4 bytes) | MV       | DB3 = MSB / DB0 = LSB | 0...4294967295  | ...   | N/A  |

### CMD 0x8 - Actuator Set Pilot Wire Mode

#### Command ID 08 (CMD)




| Offset | Size | Data           | ShortCut | Description        | Valid Range   | Scale | Unit |
|--------|------|----------------|----------|--------------------|---|-------|------|
| 0      | 4    | Not Used (= 0) |          |                    |   |       |      |
| 4      | 4    | Command ID     | CMD      | Command identifier | Enum:<br>0x08: ID 08  |       |      |
| 8      | 5    | Not Used (= 0) |          |                    |   |       |      |
| 13     | 3    | Pilotwire mode | PM       |                    | Enum:<br>0x00: Off<br>0x01: Comfort<br>0x02: Eco<br>0x03: Anti-freeze<br>0x04: Comfort-1<br>0x05: Comfort-2 |       |      |

# System Specification

## CMD 0x9 - Actuator Pilot Wire Mode Query


### Command ID 09 (CMD)



| Offset | Size | Data           | ShortCut | Description        | Valid Range          | Scale | Unit |
|--------|------|----------------|----------|--------------------|----------------------|-------|------|
| 0      | 4    | Not Used (= 0) |          |                    |                      |       |      |
| 4      | 4    | Command ID     | CMD      | Command identifier | Enum:<br>0x09: ID 09 |       |      |

## CMD 0xA - Actuator Pilot Wire Mode Response

### Command ID 0A (CMD)



| Offset | Size | Data           | ShortCut | Description        | Valid Range   | Scale | Unit |
|--------|------|----------------|----------|--------------------|---|-------|------|
| 0      | 4    | Not Used (= 0) |          |                    |   |       |      |
| 4      | 4    | Command ID     | CMD      | Command identifier | Enum:<br>0x0A: ID 0A  |       |      |
| 8      | 5    | Not Used (= 0) |          |                    |   |       |      |
| 13     | 3    | Pilotwire mode | PM       |                    | Enum:<br>0x00: Off<br>0x01: Comfort<br>0x02: Eco<br>0x03: Anti-freeze<br>0x04: Comfort-1<br>0x05: Comfort-2 |       |      |

## CMD 0xB - Actuator Set External Interface Settings

Command ID 0B (CMD)

|            | DB_6 |   |   |   |   |   |   |   | DB_5        |   |    |    |    |    |    |    | DB_4 |    |    |    |    |    |    |    | DB_3 |    |    |    |    |    |    |    | DB_2 |    |    |    |    |    |    |    | DB_1 |    |    |    |    |    |    |    | DB_0 |    |    |    |    |    |    |    |
|------------|------|---|---|---|---|---|---|---|-------------|---|----|----|----|----|----|----|------|----|----|----|----|----|----|----|------|----|----|----|----|----|----|----|------|----|----|----|----|----|----|----|------|----|----|----|----|----|----|----|------|----|----|----|----|----|----|----|
| DB Bit     | 7    | 6 | 5 | 4 | 3 | 2 | 1 | 0 | 7           | 6 | 5  | 4  | 3  | 2  | 1  | 0  | 7    | 6  | 5  | 4  | 3  | 2  | 1  | 0  | 7    | 6  | 5  | 4  | 3  | 2  | 1  | 0  | 7    | 6  | 5  | 4  | 3  | 2  | 1  | 0  | 7    | 6  | 5  | 4  | 3  | 2  | 1  | 0  |      |    |    |    |    |    |    |    |
| Bit Offset | 0    | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8           | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16   | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24   | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32   | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40   | 41 | 42 | 43 | 44 | 45 | 46 | 47 | 48   | 49 | 50 | 51 | 52 | 53 | 54 | 55 |
|            | CMD  |   |   |   |   |   |   |   | I/O Channel |   |    |    |    |    |    |    | AOT  |    |    |    |    |    |    |    | DOT  |    |    |    |    |    |    |    | EBM  |    |    |    |    |    |    |    | SWT  |    |    |    |    |    |    |    |      |    |    |    |    |    |    |    |

| Offset | Size | Data                        | ShortCut | Description  | Valid Range  | Scale | Unit |
|--------|------|-----------------------------|----------|--|--|-------|------|
| 0      | 4    | Not Used (= 0)              |          |  |  |       |      |
| 4      | 4    | Command ID                  | CMD      | Command identifier   | Enum:<br>0x0B: ID 0B   |       |      |
| 8      | 3    | Not Used (= 0)              |          |  |  |       |      |
| 11     | 5    | I/O channel                 | I/O      |  | Enum:<br>0x00...0x1D:<br>0x1E: All output channels supported by the device<br>0x1F: Input channel (from mains supply)                          |       |      |
| 16     | 16   | Auto OFF Timer              | AOT      | Timer to automatically set OFF output channel when it is set ON              | Enum:<br>0x0000: Timer deactivated<br>0x0001...0xFFFE: 0.1...6553.4 s<br>0xFFFF: Does not modify saved value                                   |       |      |
| 32     | 16   | Delay OFF Timer             | DOT      | Delay timer before setting output channel to OFF value received by radio cmd | Enum:<br>0x0000: Timer deactivated<br>0x0001...0xFFFE: 0.1...6553.4 s<br>0xFFFF: Does not modify saved value                                   |       |      |
| 48     | 2    | External Switch/Push Button | EBM      | External interface mode  | Enum:<br>0b00: Not applicable<br>0b01: External Switch<br>0b10: External Push Button<br>0b11: Auto detect                                      |       |      |
| 50     | 1    | 2-state switch              | SWT      | Switching state  | Enum:<br>0b00: Change of key state sets ON or OFF<br>0b01: Specific ON/OFF positions. ON when contacts are closed. OFF when contacts are open. |       |      |
| 51     | 5    | Not Used (= 0)              |          |  |  |       |      |

## System Specification


### CMD 0xC - Actuator External Interface Settings Query

#### Command ID 0C (CMD)

| DB_1       |     |   |   |   |   |   |   | DB_0 |             |   |    |    |    |    |    |    |
|------------|-----|---|---|---|---|---|---|------|-------------|---|----|----|----|----|----|----|
| DB Bit     | 7   | 6 | 5 | 4 | 3 | 2 | 1 | 0    | 7           | 6 | 5  | 4  | 3  | 2  | 1  | 0  |
| Bit Offset | 0   | 1 | 2 | 3 | 4 | 5 | 6 | 7    | 8           | 9 | 10 | 11 | 12 | 13 | 14 | 15 |
|            | CMD |   |   |   |   |   |   |      | I/O Channel |   |    |    |    |    |    |    |

| Offset | Size | Data           | ShortCut | Description        | Valid Range   | Scale | Unit |
|--------|------|----------------|----------|--------------------|---|-------|------|
| 0      | 4    | Not Used (= 0) |          |                    |   |       |      |
| 4      | 4    | Command ID     | CMD      | Command identifier | Enum:<br>0x0C: ID 0C  |       |      |
| 8      | 3    | Not Used (= 0) |          |                    |   |       |      |
| 11     | 5    | I/O channel    | I/O      |                    | Enum:<br>0x00...0x1D:<br>0x1E: All output channels supported by the device<br>0x1F: Input channel (from mains supply) |       |      |

## CMD 0xD - Actuator External Interface Settings Response



| Offset | Size | Data                        | ShortCut | Description  | Valid Range  | Scale | Unit |
|--------|------|-----------------------------|----------|--|--|-------|------|
| 0      | 4    | Not Used (= 0)              |          |  |  |       |      |
| 4      | 4    | Command ID                  | CMD      | Command identifier   | Enum:<br>0x0D: ID 0D   |       |      |
| 8      | 3    | Not Used (= 0)              |          |  |  |       |      |
| 11     | 5    | I/O channel                 | I/O      |  | Enum:<br>0x00...0x1D: Output channel (to load)<br>0x1E: Not applicable<br>0x1F: Input channel (from mains supply)                                    |       |      |
| 16     | 16   | Auto OFF Timer              | AOT      | Timer to automatically set OFF output channel when it is set ON              | Enum:<br>0x0000: Timer deactivated<br>0x0001...0xFFFE: 0.1...6553.4 s<br>0xFFFF: Does not modify saved value   |       |      |
| 32     | 16   | Delay OFF Timer             | DOT      | Delay timer before setting output channel to OFF value received by radio cmd | Enum:<br>0x0000: Timer deactivated<br>0x0001...0xFFFE: 0.1...6553.4 s<br>0xFFFF: Does not modify saved value   |       |      |
| 48     | 2    | External Switch/Push Button | EBM      | External interface mode  | Enum:<br>0b00: Not applicable<br>0b01: External Switch<br>0b10: External Push Button<br>0b11: Auto detect  |       |      |
| 50     | 1    | 2-state switch              | SWT      | Switching state  | Enum:<br>0b00: Change of key state sets ON or OFF<br>0b01: Specific ON/OFF positions.<br>ON when contacts are closed.<br>OFF when contacts are open. |       |      |
| 51     | 5    | Not Used (= 0)              |          |  |  |       |      |

## System Specification

### CMD 0xF / ECID 0x00 - Actuator Set Dimming Limits

This message is sent to the actuator. It controls the maximum and minimum brightness of the channel output. If the actuator receives an out of range dimming value or an error command, the following actions should be performed:

- Channel not supported by device -> ignore the message
- Set dimming minimum value is less than 0% -> The minimum value is set to 0%
- Set dimming maximum value greater than 100% -> The maximum value is set to 100%

Command ID **0xF** / Ext. CID **0x00**

| Data Byte  | DB_4 |   |   |   |   |   |   |   | DB_3 |   |    |    |    |    |    |    | DB_2 |    |    |    |    |    |    |    | DB_1 |    |    |    |    |    |    |    | DB_0 |    |    |    |    |    |    |    |
|------------|------|---|---|---|---|---|---|---|------|---|----|----|----|----|----|----|------|----|----|----|----|----|----|----|------|----|----|----|----|----|----|----|------|----|----|----|----|----|----|----|
| DB Bit     | 7    | 6 | 5 | 4 | 3 | 2 | 1 | 0 | 7    | 6 | 5  | 4  | 3  | 2  | 1  | 0  | 7    | 6  | 5  | 4  | 3  | 2  | 1  | 0  | 7    | 6  | 5  | 4  | 3  | 2  | 1  | 0  | 7    | 6  | 5  | 4  | 3  | 2  | 1  | 0  |
| Bit Offset | 0    | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8    | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16   | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24   | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32   | 33 | 34 | 35 | 36 | 37 | 38 | 39 |
| Data       | CMD  |   |   |   |   |   |   |   | ECID |   |    |    |    |    |    |    | I/O  |    |    |    |    |    |    |    | MAXV |    |    |    |    |    |    |    | MINV |    |    |    |    |    |    |    |

| Offset | Size | Data                | ShortCut | Description | Valid Range  | Scale | Unit |
|--------|------|---------------------|----------|-------------|--|-------|------|
| 0      | 4    | Not Used (= 0)      |          |             |  |       |      |
| 4      | 4    | Command ID          | CMD      |             | Enum:<br>0xF: ID F   |       |      |
| 8      | 8    | Extended Command ID | ECID     |             | Enum:<br>0x00: ID 00   |       |      |
| 16     | 5    | I/O Channel         | I/O      |             | Enum:<br>Output channel (to load)<br>0x00...0x1D:                                  |       |      |
|        |      |                     |          |             | 0x1E: All output channels supported by the device                                  |       |      |
|        |      |                     |          |             | 0x1F: Reserved   |       |      |
| 21     | 4    | Not Used (= 0)      |          |             |  |       |      |
| 25     | 7    | Maximum Value       | MAXV     |             | Enum:<br>0x00: Reserved<br>0x01...0x64: Set maximum value<br>0x65...0x7F: Reserved |       |      |
| 32     | 1    | Not Used (= 0)      |          |             |  |       |      |
| 33     | 7    | Minimum Value       | MINV     |             | Enum:<br>0x00...0x63: Set minimum value<br>0x64...0x7F: Reserved                   |       |      |



# System Specification

## CMD 0xF / ECID 0x01 - Actuator Dimming Limits Query

Command ID **0xF** / Ext. CID **0x01**

| Data Byte  | DB_2 |   |   |   |   |   |   |   | DB_1 |   |    |    |    |    |    |    | DB_0 |    |    |    |    |    |    |    |
|------------|------|---|---|---|---|---|---|---|------|---|----|----|----|----|----|----|------|----|----|----|----|----|----|----|
| DB Bit     | 7    | 6 | 5 | 4 | 3 | 2 | 1 | 0 | 7    | 6 | 5  | 4  | 3  | 2  | 1  | 0  | 7    | 6  | 5  | 4  | 3  | 2  | 1  | 0  |
| Bit Offset | 0    | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8    | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16   | 17 | 18 | 19 | 20 | 21 | 22 | 23 |
| Data       | CMD  |   |   |   |   |   |   |   | ECID |   |    |    |    |    |    |    | I/O  |    |    |    |    |    |    |    |

| Offset | Size | Data                | ShortCut | Description | Valid Range  | Scale | Unit |
|--------|------|---------------------|----------|-------------|--|-------|------|
| 0      | 4    | Not Used (= 0)      |          |             |  |       |      |
| 4      | 4    | Command ID          | CMD      |             | Enum:<br>0xF: ID F   |       |      |
| 8      | 8    | Extended Command ID | ECID     |             | Enum:<br>0x01: ID 01   |       |      |
| 16     | 5    | I/O Channel         | I/O      |             | Enum:<br>Single channel (to load)<br>0x00...0x1D:<br>0x1E: All output channels supported by the device<br>0x1F: Reserved |       |      |
| 21     | 3    | Not Used (= 0)      |          |             |  |       |      |

# System Specification

## CMD 0xF / ECID 0x02 - Actuator Dimming Limits Response

Command ID **0xF** / Ext. CID **0x02**

| Data Byte  | DB_4            | DB_3                  | DB_2                    | DB_1                    | DB_0                    |
|------------|-----------------|-----------------------|-------------------------|-------------------------|-------------------------|
| DB Bit     | 7 6 5 4 3 2 1 0 | 7 6 5 4 3 2 1 0       | 7 6 5 4 3 2 1 0         | 7 6 5 4 3 2 1 0         | 7 6 5 4 3 2 1 0         |
| Bit Offset | 0 1 2 3 4 5 6 7 | 8 9 10 11 12 13 14 15 | 16 17 18 19 20 21 22 23 | 24 25 26 27 28 29 30 31 | 32 33 34 35 36 37 38 39 |
| Data       | CMD             | ECID                  | I/O                     | MAXV                    | MINV                    |

| Offset | Size | Data                | ShortCut | Description | Valid Range  | Scale | Unit |
|--------|------|---------------------|----------|-------------|--|-------|------|
| 0      | 4    | Not Used (= 0)      |          |             |  |       |      |
| 4      | 4    | Command ID          | CMD      |             | Enum:<br>0xF: ID F   |       |      |
| 8      | 8    | Extended Command ID | ECID     |             | Enum:<br>0x02: ID 02   |       |      |
| 16     | 5    | I/O Channel         | I/O      |             | Enum:<br>Output channel (to load)<br>0x00...0x1D:                                  |       |      |
|        |      |                     |          |             | 0x1E: All output channels supported by the device                                  |       |      |
|        |      |                     |          |             | 0x1F: Reserved   |       |      |
| 21     | 4    | Not Used (= 0)      |          |             |  |       |      |
| 25     | 7    | Maximum Value       | MAXV     |             | Enum:<br>0x00: Reserved<br>0x01...0x64: Set maximum value<br>0x65...0x7F: Reserved |       |      |
| 32     | 1    | Not Used (= 0)      |          |             |  |       |      |
| 33     | 7    | Minimum Value       | MINV     |             | Enum:<br>0x00...0x63: Set minimum value<br>0x64...0x7F: Reserved                   |       |      |