

Erriez DHT22 library for Arduino

1.2.0

Generated by Doxygen 1.8.13

Contents

1	DHT22 - AM2302/AM2303 temperature and humidity sensor library for Arduino	1
2	Class Index	5
2.1	Class List	5
3	File Index	7
3.1	File List	7
4	Class Documentation	9
4.1	DHT22 Class Reference	9
4.1.1	Detailed Description	9
4.1.2	Constructor & Destructor Documentation	10
4.1.2.1	DHT22()	10
4.1.3	Member Function Documentation	10
4.1.3.1	available()	10
4.1.3.2	begin()	10
4.1.3.3	readHumidity()	11
4.1.3.4	readSensorData()	11
4.1.3.5	readTemperature()	12
5	File Documentation	13
5.1	src/ErriezDHT22.cpp File Reference	13
5.1.1	Detailed Description	13
5.2	src/ErriezDHT22.h File Reference	14
5.2.1	Detailed Description	15
5.2.2	Macro Definition Documentation	15
5.2.2.1	DHT22_MIN_READ_INTERVAL	15
5.2.2.2	DHT22_NUM_DATA_BITS	15
	Index	17

Chapter 1

DHT22 - AM2302/AM2303 temperature and humidity sensor library for Arduino

This is an Arduino library for the calibrated AM2302/AM2303 digital temperature and relative humidity sensor on a [DHT22](#) breakout PCB.

Library features

- Read 16-bit temperature (synchronous blocking)
- Read 16-bit relative humidity (synchronous blocking)
- Configurable number of read retries when a read error occurs (default is 1 read + 2 retries)
- Long time duration example
- Temperature and humidity average with a configurable number of samples to remove jitter

AM2302/AM2303 sensor specifications

- Voltage: 3.3 .. 5V
- Ultra-low power:
 - Typical 15uA dormancy
 - Typical 500uA measuring
- Single wire digital serial interface
- Calibrated digital signal
- Outstanding long term stability
- No additional electronic components needed
- Humidity:
 - Range: 0 .. 99.9 RH (Relative Humidity)
 - Resolution: 0.1 RH
 - Accuracy: +/-2 RH (at 25 degree Celsius)

- Temperature:
 - Range: -40 .. +125 degree Celsius
 - Resolution: 0.1 degree Celsius
 - Accuracy: +/- 0.4 degree Celsius
- Minimum read interval: 2000 ms
- ~31ms to synchronous read humidity, temperature and parity data from sensor (5 Bytes)

Safety warning

According to the datasheet, the AM2302/AM2303 is a low cost consumer temperature sensor. It may not be used in safety critical applications, emergency stop devices or any other occasion that failure of AM2302/AM2303 may cause personal injury.

Hardware

Pull-up resistor DAT pin

- Connect an external 3k3 . . 10k pull-up resistor between the DAT and VCC pins only when:
 - Using a AM2302/AM2303 sensor without a DT22 breakout PCB **and** the MCU IO pin has no built-in or external pull-up resistor.
- The [DHT22](#) breakout PCB contains a 3k3 pull-up resistor between DAT and VCC.
- Please refer to the MCU datasheet or board schematic for more information about IO pin pull-up resistors.

External capacitor

- Tip: Connect a 100nF capacitor between the sensor pins VCC and GND when read errors occurs. This may stabilize the power supply.

Board - DHT22 pins	VCC	GND	DAT
Arduino UNO / Nano / Micro (ATMega328 boards)	5V (or 3V3)	GND	2 (DIGITAL pin)
Arduino Leonardo	5V (or 3V3)	GND	2 (DIGITAL pin)
Arduino Mega2560	5V (or 3V3)	GND	2 (DIGITAL pin)
Arduino DUE (ATSAM3X8E)	3V3	GND	2 (DIGITAL pin)
ESP8266 (ESP12E / WeMos D1 R2 / NodeMCU v2 or v3)	3V3	GND	GPIO4 (D2)
ESP32 (WeMos Lolin32 OLED / WeMos LOLIN D32)	3V3	GND	GPIO4

Notes:

- GPIO4 uses sketch pin number 4 and is labeled as D2 on some WeMos ESP8266 boards.
- Other MCU's may work, but are not tested.

Examples

Arduino IDE | Examples | Erriez [DHT22](#) Temperature & Humidity:

- [DHT22](#) Getting started example.
- [DHT22Average](#) Calculate average temperature and humidity.
- [DHT22DurationTest](#) Test reliability connection.
- [DHT22Logging](#) Write temperature and humidity every 10 minutes to .CSV file on SD-card with DS3231 RTC.
- [DHT22LowPower](#) LowPower AVR targets only. Arduino Pro or Pro Mini at 8MHz is recommended.

Documentation

- [Doxygen online HTML](#)
- [Doxygen PDF](#)
- [AM2303 datasheet](#)
- [DHT22 datasheet](#)

Usage

Initialization

```
{c++}
#include <ErriezDHT22.h>

// Connect DTH22 DAT pin to Arduino board

// Connect DTH22 DAT pin to Arduino DIGITAL pin
#if defined(ARDUINO_ARCH_AVR) || defined(ARDUINO_SAM_DUE)
#define DHT22_PIN 2
#elif defined(ESP8266) || defined(ESP32)
#define DHT22_PIN 4 // GPIO4 (Labeled as D2 on some ESP8266 boards)
#else
#error "May work, but not tested on this target"
#endif

DHT22 dht22 = DHT22(DHT22_PIN);

void setup()
{
    // Initialize serial port
    Serial.begin(115200);
    Serial.println(F("DHT22 temperature and humidity sensor example\n"));

    // Initialize sensor
    dht22.begin();
}
```

Read temperature and humidity

```
{c++}
void loop()
{
    // Check minimum interval of 2000 ms between sensor reads
    if (dht22.available()) {
        // Read temperature from sensor
        int16_t temperature = dht22.readTemperature();

        // Read humidity from sensor
        int16_t humidity = dht22.readHumidity();

        if (temperature == ~0) {
            // Print error (Check hardware connection)
            Serial.print(F("Temperature: Error"));
        } else {
            // Print temperature
            Serial.print(F("Temperature: "));
            Serial.print(temperature / 10);
            Serial.print(F("."));
            Serial.print(temperature % 10);
            Serial.println(F(" *C"));
        }

        if (humidity == ~0) {
            // Print error (Check hardware connection)
            Serial.print(F("Humidity: Error"));
        } else {
            // Print humidity
            Serial.print(F("Humidity: "));
            Serial.print(humidity / 10);
            Serial.print(F("."));
            Serial.print(humidity % 10);
            Serial.println(F(" %"));
        }

        Serial.println();
    }
}
```

Serial output

DHT22 temperature and humidity sensor example

Temperature: 17.7 *C
Humidity: 41.0 %

Temperature: 17.8 *C
Humidity: 41.1 %

...

Library dependencies

- LowPower library for DHT22LowPower.ino.

Library installation

Please refer to the [Wiki](#) page.

Other Arduino Libraries and Sketches from Erriez

- [Erriez Libraries and Sketches](#)

Chapter 2

Class Index

2.1 Class List

Here are the classes, structs, unions and interfaces with brief descriptions:

DHT22	
DHT22 sensor class	9

Chapter 3

File Index

3.1 File List

Here is a list of all documented files with brief descriptions:

src/ ErriezDHT22.cpp	
DHT22 (AM2302/AM2303) Humidity and Temperature sensor library for Arduino	13
src/ ErriezDHT22.h	
DHT22 (AM2302/AM2303) Humidity and Temperature sensor library for Arduino	14

Chapter 4

Class Documentation

4.1 DHT22 Class Reference

DHT22 sensor class.

```
#include <ErriezDHT22.h>
```

Public Member Functions

- [DHT22](#) (uint8_t pin)
Constructor [DHT22](#) sensor.
- void [begin](#) (uint8_t numSamples=0)
Initialize sensor.
- bool [available](#) ()
Check if new temperature or humidity read is allowed.
- bool [readSensorData](#) ()
Read data from sensor.
- int16_t [readTemperature](#) ()
Read temperature from sensor.
- int16_t [readHumidity](#) ()
Read humidity from sensor.

4.1.1 Detailed Description

DHT22 sensor class.

According to the datasheet, the AM2302/AM2303 is a low cost consumer temperature sensor. It may not be used in safety critical applications, emergency stop devices or any other occasion that failure of AM2302/AM2303 may cause personal injury.

The AM2302/AM2303 is factory calibrated. However, deviation may occur with aging.

The temperature/humidity read interval in this library is cached for 2 seconds to prevent heating-up the internal chip with continues reading.

Global interrupts are disabled during a synchronous sensor read transfer. This is required to sample the data bit lengths at maximum speed on low-end devices without any application interrupts. The read calls are protected with a timeout.

The application is responsible for checking ~0 values after a read which means that the read failed or a timeout occurred. Multiple reads by the application with an average calculation is recommended.

Definition at line 80 of file ErriezDHT22.h.

4.1.2 Constructor & Destructor Documentation

4.1.2.1 DHT22()

```
DHT22::DHT22 (
    uint8_t pin ) [explicit]
```

Constructor [DHT22](#) sensor.

Parameters

<i>pin</i>	Data pin sensor.
------------	------------------

Definition at line 39 of file ErriezDHT22.cpp.

4.1.3 Member Function Documentation

4.1.3.1 available()

```
bool DHT22::available ( )
```

Check if new temperature or humidity read is allowed.

The application should call this function and check if a new temperature and humidity can be read to prevent too fast sensor reads.

Return values

<i>true</i>	Available, interval between sensor reads \geq 2000 ms and sensor read was successful.
<i>false</i>	Not available, interval between sensor reads too short, or read failed.

Definition at line 101 of file ErriezDHT22.cpp.

4.1.3.2 begin()

```
void DHT22::begin (
    uint8_t numSamples = 0 )
```

Initialize sensor.

Parameters

<i>numSamples</i>	Number of samples to calculate temperature and humidity average. This allocates <code>sizeof(int16_t) * number of samples</code> . Value 0 (default) will disable average calculation.
-------------------	--

Call this function from `setup()`.

- Connect an external 3k3..10k pull-up resistor between the DAT and VCC pins only when:
 - using a AM2302/AM2303 sensor without a DHT22 breakout PCB
 AND
 - the MCU IO pin has no built-in or external pull-up resistor.
- The DHT22 breakout PCB contains a 3k3 pull-up resistor between DAT and VCC.
- Please refer to the MCU datasheet or board schematic for more information about IO pin pull-up resistors.

Definition at line 75 of file `ErriezDHT22.cpp`.

4.1.3.3 `readHumidity()`

```
int16_t DHT22::readHumidity ( )
```

Read humidity from sensor.

Return values

<i>Humidity</i>	Signed humidity with last digit after the point.
<code>~0</code>	Invalid conversion: Sensor read error occurred.

Definition at line 164 of file `ErriezDHT22.cpp`.

4.1.3.4 `readSensorData()`

```
bool DHT22::readSensorData ( )
```

Read data from sensor.

5 Bytes data will be read when interval between previous read \geq 2000 ms.

The sensor data is read until a valid conversion has been performed. A valid conversion consists of:

- A valid start condition
- A successful sensor read (5 Bytes data)
- A correct checksum

Return values

<i>true</i>	Last conversion was successful.
<i>false</i>	Last conversion was unsuccessful.

Definition at line 212 of file ErriezDHT22.cpp.

4.1.3.5 readTemperature()

```
int16_t DHT22::readTemperature ( )
```

Read temperature from sensor.

Returns the actual temperature, or a cached temperature when read interval is too short.

Return values

<i>Temperature</i>	Signed temperature with last digit after the point.
<i>~0</i>	Invalid conversion: Sensor read occurred.

Definition at line 121 of file ErriezDHT22.cpp.

The documentation for this class was generated from the following files:

- [src/ErriezDHT22.h](#)
- [src/ErriezDHT22.cpp](#)

Chapter 5


File Documentation

5.1 src/ErriezDHT22.cpp File Reference

[DHT22](#) (AM2302/AM2303) Humidity and Temperature sensor library for Arduino.

```
#include "ErriezDHT22.h"
```

Include dependency graph for ErriezDHT22.cpp:

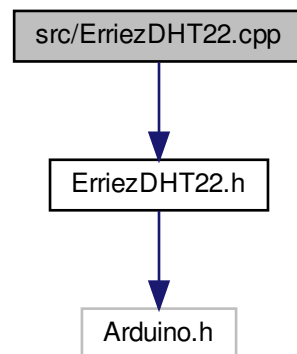

5.1.1 Detailed Description

[DHT22](#) (AM2302/AM2303) Humidity and Temperature sensor library for Arduino.


Source: <https://github.com/Erriez/ErriezDHT22> Documentation: <https://erriez.github.io/ErriezDHT22>

5.2 src/ErriezDHT22.h File Reference


[DHT22](#) (AM2302/AM2303) Humidity and Temperature sensor library for Arduino.

```
#include <Arduino.h>
```

Include dependency graph for ErriezDHT22.h:

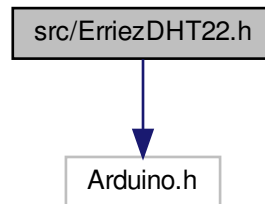

This graph shows which files directly or indirectly include this file:

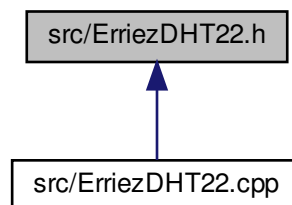

Classes

- class [DHT22](#)
[DHT22](#) sensor class.

Macros

- #define [DHT22_MIN_READ_INTERVAL](#) 2000
Enable debug prints to Serial.
- #define [DHT22_NUM_DATA_BITS](#) (5 * 8)
- #define [DEBUG_PRINTLN](#)(...) {}
Debug print configuration.

5.2.1 Detailed Description

DHT22 (AM2302/AM2303) Humidity and Temperature sensor library for Arduino.

Source: <https://github.com/Erriez/ErriezDHT22> Documentation: <https://erriez.github.io/ErriezDHT22>

5.2.2 Macro Definition Documentation

5.2.2.1 DHT22_MIN_READ_INTERVAL

```
#define DHT22_MIN_READ_INTERVAL 2000
```

Enable debug prints to Serial.

Minimum interval between sensor reads in milli seconds

Definition at line 42 of file ErriezDHT22.h.

5.2.2.2 DHT22_NUM_DATA_BITS

```
#define DHT22_NUM_DATA_BITS (5 * 8)
```

Number of data bits is 5 Bytes * 8 bits: 1 Byte: Humidity high 1 Byte: Humidity low 1 Byte: Temperature high 1 Byte: Temperature low 1 Byte: Parity

Definition at line 50 of file ErriezDHT22.h.

Index

- available
 - DHT22, [10](#)
- begin
 - DHT22, [10](#)
- DHT22, [9](#)
 - available, [10](#)
 - begin, [10](#)
 - DHT22, [10](#)
 - readHumidity, [11](#)
 - readSensorData, [11](#)
 - readTemperature, [12](#)
- DHT22_MIN_READ_INTERVAL
 - ErriezDHT22.h, [15](#)
- DHT22_NUM_DATA_BITS
 - ErriezDHT22.h, [15](#)
- ErriezDHT22.h
 - DHT22_MIN_READ_INTERVAL, [15](#)
 - DHT22_NUM_DATA_BITS, [15](#)
- readHumidity
 - DHT22, [11](#)
- readSensorData
 - DHT22, [11](#)
- readTemperature
 - DHT22, [12](#)
- src/ErriezDHT22.cpp, [13](#)
- src/ErriezDHT22.h, [14](#)