

Pentium

**P54C/P55C PCI Mainboard
User's Guide &
Technical Reference
*5EA5/A5C***

**SOYOTM**

About This Guide

This User's Guide is for assisting system manufacturers and end users in setting up and installing the mainboard. Information in this guide has been carefully checked for reliability; however, no guarantee is given as to the correctness of the contents. The information in this document is subject to change without notice.

Copyright Notice

Copyright 1997, Soyo Computer Inc. All rights reserved. This manual is copyrighted by Soyo Computer Inc. You may not reproduce, transmit, transcribe, store in a retrieval system, or translate into any language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual, or otherwise, any part of this publication without express written permission of Soyo Computer Inc.

Trademarks

Soyo is a registered trademark of Soyo Computer Inc. All trademarks are the property of their owners.

Disclaimer

Soyo Computer Inc. makes no representations or warranties regarding the contents of this manual. We reserve the right to revise the manual or make changes in the specifications of the product described within it at any time without notice and without obligation to notify any person of such revision or change. The information contained in this manual is provided for general use by our customers. Our customers should be aware that the personal computer field is the subject of many patents. Our customers should ensure that they take appropriate action so that their use of our products does not infringe upon any patents. It is the policy of Soyo Computer Inc. to respect the valid patent rights of third parties and not to infringe upon or assist others to infringe upon such rights.

Restricted Rights Legend

Use, duplication, or disclosure by the Government is subject to restrictions set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at 252.277-7013.

Product Rights

Product mentioned in this manual are mentioned for identification purpose only. Product names appearing in this manual may or may not be registered trademarks or copyrights of their respective companies.

If you need any further information, please come to our home page on internet. The address is "<http://www.soyo.com.tw>".

Edition: April 1997

Version 1.1

5EA5/A5C SERIAL

Table of Contents

Chapter 1: Introduction	1
Key Features	1
Unpacking the Mainboard	2
Electrostatic Discharge Precautions	2
Mainboard Layout w/ Default Settings	3
Chapter 2: Hardware Setup	6
Jumpers	6
JP5: CMOS Clear Jumper	6
J25: EMI Ground Pin	6
JP16: PCI Bus Asynchronous/Synchronous Jumper	7
CPU Type Configuration	8
Step 1: Frequency Setting	8
Pentium – 75/90/100 CPU Settings (1.5 x clock)	8
Pentium – 100/120/133 CPU Settings (2.0 x clock)	9
Pentium– 150/166 CPU Settings (2.5 x clock)	10
Pentium – 180/200 CPU Settings (3.0 x clock)	10
AMD K6 – PR233 CPU Setting (4.0 x clock)	11
Step 2: CPU Single/Dual Voltage Setting	12
Single Voltage CPU Setting	12
Dual Voltage CPU Setting	13
Memory Configuration	13
Memory Configuration Table	14
RAM Bank Installation Notice	14
Cache Configuration	14
Cache Size and RAM Locations	14
Multi I/O Port Addresses	15
Connectors	15
COM1, COM2– COM1/COM2 Connectors	15
FDC Connector	15
J19 – Hardware Reset Control	15
J24 – HDD LED Connectors	15
IDE1/IDE2 – On-board Primary/Secondary IDE HDD Connectors	16
CN5 – IR Connector	16
CN2 – Keyboard Connector	16
J17 – Keylock & Power LED Connector	16
CN1 – PS/2 Mouse Connector	16
PRT – Parallel Port Connector	16
PW – Power Supply Connector	16
J23: Sleep Switch Connector Enable/Disable	17

(Connectors Continued)	
CN3 – Universal Serial Bus Connectors	17

Chapter 3: BIOS Setup..... 18

Standard CMOS Setup	19
BIOS Features Setup	21
Chipset Features Setup	24
Power Management Setup	26
PNP/PCI Configuration Setup	29
Load Setup Defaults	31
Load BIOS Defaults	31
Integrated Peripherals	32
Supervisor Password	34
User Password	35
IDE HDD Auto Detection	36

1 Introduction

The EQ82C661X PCI mainboard is a high-performance **AT form-factor** system board that supports P54C/P55C family CPUs. You can order 512K of external cache memory on the mainboard. The mainboard is fully compatible with industry standards, and adds many technical enhancements.

Key Features

- CPU
 - Supports P54C/P55C family CPUs running at 90~200 MHz speeds; Cyrix/IBM CPUs running at PR120⁺~PR200⁺ speeds; and AMD K5/K6 CPUs running at PR75 ~ PR233 speeds
 - Two kinds of mainboards are available: one is the Normal edition which supports above listed CPUs and the other is the IBM CPU attached edition which supports the IBM 6x86 P200⁺ CPU only
 - **Supports SOCKET 7 for upgrade**
 - Supports P54C/P55C series SMM Mode and CPU Stop Clock
- L2 Cache Controller
 - Write Back Cache Modes and Direct Mapped Organization
 - On-board 512K Pipeline Burst SRAMs Cache
- DRAM Controller
 - Supports FPM/EDO/Burst EDO/Synchronous – DRAM
 - **Supports 1 strip of 8/16/32 MB Unbuffered DIMMs**
 - On-board memory configurations from **4 to 256 Mbytes**
 - Supports “**Table-Free**” DRAM configuration in any SIMM bank
- BUS Controller
 - Compliant to PCI specifications v2.1
 - Three 32-bit PCI slots (Masters) and four ISA slots, 4-layer PCB
 - **Supports Universal Serial Bus — USB**
- Peripheral Controller
 - System BIOS built-in NCR805 SCSI Card BIOS and “Plug and Play” function
 - On-board built-in PCI Master IDE controller and floppy controller
 - On-board supports for two high speed UARTS (w/i 16550 FIFO), one ECP/EPP/SPP compatible parallel port, and one PS/2 mouse port
 - **On-board supports FLASH Memory for easy upgrade BIOS**

Unpacking the Mainboard

The mainboard package contains:

- The EQ82C661X Mainboard
- This User's Guide

Note: Do not unpack the mainboard until you are ready to install it.

Follow the precautions below while unpacking the mainboard.

1. Before handling the mainboard, ground yourself by grasping an unpainted portion of the system's metal chassis.
2. Remove the mainboard from its anti-static packaging and place it on a grounded surface, component side up.
3. Check the mainboard for damage. If any chip appears loose, press carefully to seat it firmly in its socket.

Do not apply power if the mainboard appears damaged. If there is damage to the board contact your dealer immediately.

Electrostatic Discharge Precautions

Make sure you ground yourself before handling the mainboard or other system components. Electrostatic discharge can easily damage the components. Note that you must take special precaution when handling the mainboard in dry or air-conditioned environments.

Take these precautions to protect your equipment from electrostatic discharge:

- Do not remove the anti-static packaging until you are ready to install the mainboard and other system components.
- Ground yourself before removing any system component from its protective anti-static packaging. To ground yourself grasp the expansion slot covers or other unpainted portions of the computer chassis.
- Frequently ground yourself while working, or use a grounding strap.
- Handle the mainboard by the edges and avoid touching its components.

Mainboard Layout w/ Default Settings

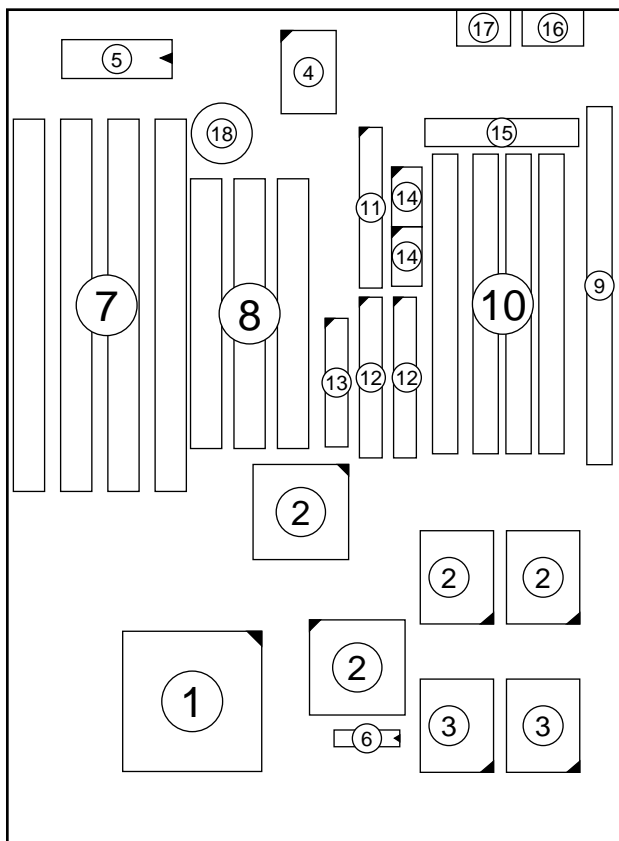


Figure 1–1. Mainboard Layout

- | | |
|---------------------------------|-----------------------------|
| 1. ZIF socket 7 (for P54C/P55C) | 10. SIMM Bank |
| 2. EQ82C661X Chipset | 11. Floppy Connector |
| 3. Pipelined Burst SRAM | 12. IDE1/IDE2 Connector |
| 4. Super I/O Chip | 13. Parallel Port Connector |
| 5. PnP FLASH BIOS | 14. COM1/COM2 Connector |
| 6. TAG SRAM | 15. AT Power Connector |
| 7. ISA Slots | 16. KB Connector |
| 8. PCI Slots | 17. PS/2 Mouse Connector |
| 9. Unbuffered DIMM Bank | 18. 3 Volt. Lithium Battery |

Default settings are as follows: IBM 6x86 P200⁺ CPU, 512K Pipelined Burst cache, On-board PCI E-IDE Enabled, 2 high speed UARTS Enabled (w/ 16550 FIFO), 1 EPP/ECP port (ECP + EPP mode), and 5V SIMM/3.3V DIMM.

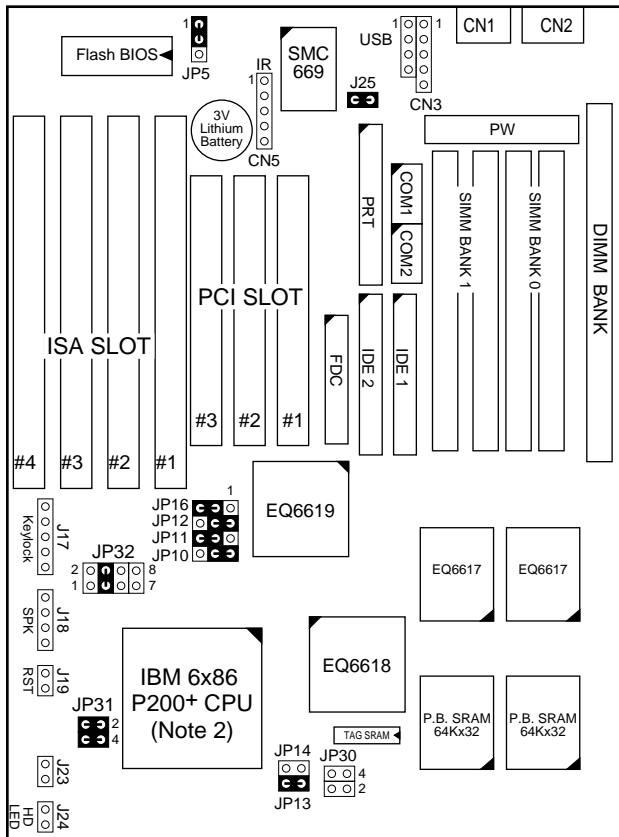


Figure 1–2. IBM CPU Attached Edition Mainboard Default Setting

-
- Note:**
1. Make sure the system is well ventilated to prevent overheating and ensure system stability.
 2. IBM CPU attached edition mainboard only uses IBM 6x86 P200⁺ CPU.
-

Default settings are as follows: Pentium 133MHz (P54C) CPU, 512K Pipelined Burst cache, On-board PCI E-IDE Enabled, 2 high speed UARTS Enabled (w/ 16550 FIFO), 1 EPP/ECP port (ECP + EPP mode), and 5V SIMM/3.3V DIMM.

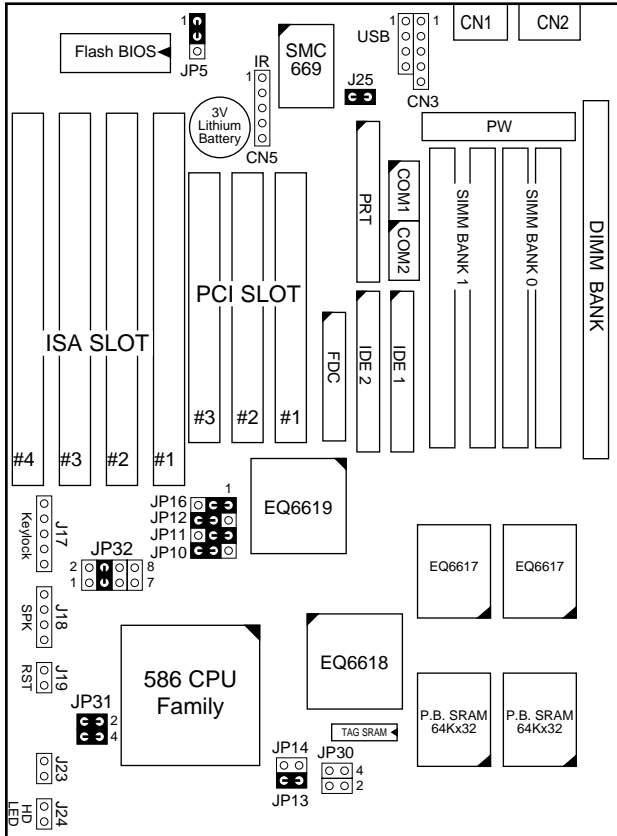


Figure 1–3. Regular Mainboard Default Setting

Note: Make sure the system is well ventilated to prevent overheating and ensure system stability.

2 Hardware Setup



This chapter is designed for Normal edition mainboard use only and it explains how to configure the mainboard’s hardware. After you install the mainboard, you can set jumpers, install memory on the mainboard, and make case connections. Refer to this chapter whenever you upgrade or reconfigure your system.

CAUTION: *Turn off power to the mainboard, system chassis, and peripheral devices before performing any work on the mainboard or system.*

Jumpers

JP5: CMOS Clear Jumper

Clear the CMOS memory by momentarily shorting pin 2–3; then shorting pin 1–2 to retain new settings.



CMOS Setting	JP5
Retain CMOS data (default)	 1
Clear CMOS data	 1

J25: EMI Ground Pin

J25 is designed for eliminating the EMI signals. Short or open J25 when is needed.

JP16: PCI Bus Asynchronous/Synchronous Jumper

Asynchronous and synchronous (default) PCI bus frequency settings are available.

PCI Bus Setting	JP16
Asynchronous	
Synchronous	

Divides the host bus by 2 to get the Asynchronous setting, and sets the PCI bus on 32MHz to get the synchronous setting. Set JP16 to Synchronous mode when the system is unstable.

Host Bus (CPU Bus)	PCI Bus Frequency (Synchronous)	PCI Bus Frequency (Asynchronous)
50 MHz*	25 MHz	32 MHz
55 MHz*	27.5 MHz	32 MHz
60 MHz	30 MHz	32 MHz
66 MHz	33.3 MHz	32 MHz
75 MHz**	37.5 MHz	32 MHz

- *: Do not use Asynchronous setting when the host bus frequency is 50MHz or 55MHz.
- **.: Do not use Synchronous setting when the host bus frequency is 75 MHz.

CPU Type Configuration

This section is designed for normal edition motherboard use only and also shows you how to configure your CPU step by step. Note that you need to check the CPU voltage before installation.

❑ Step 1: Frequency Setting

Pentium – 75/90/100 CPU Settings (1.5 x clock)

AMD K5 – PR75/PR90/PR100/PR120/PR133 (1.5 x clock)

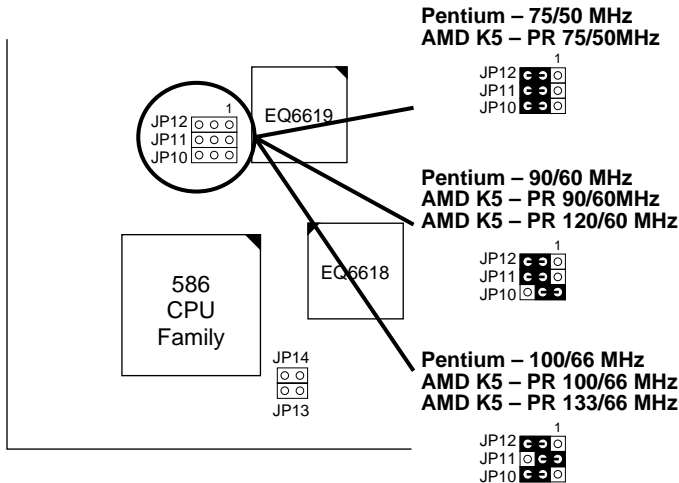


Figure 2-1-1. CPU Jumper Settings

Note: 1. You must equip the CPU with a fan and heat sink for system stability.

2. AMD K5-PR75/90= AMD 5_k86(SSA5)-P75/90.

Pentium – 100/120/133 CPU Settings (2.0 x clock)

Cyrix 6x86/6x86L – PR133+/PR150+/PR166+/PR200+ CPU Settings (2.0 x clock)

AMD K5/K6 – PR150 CPU Setting

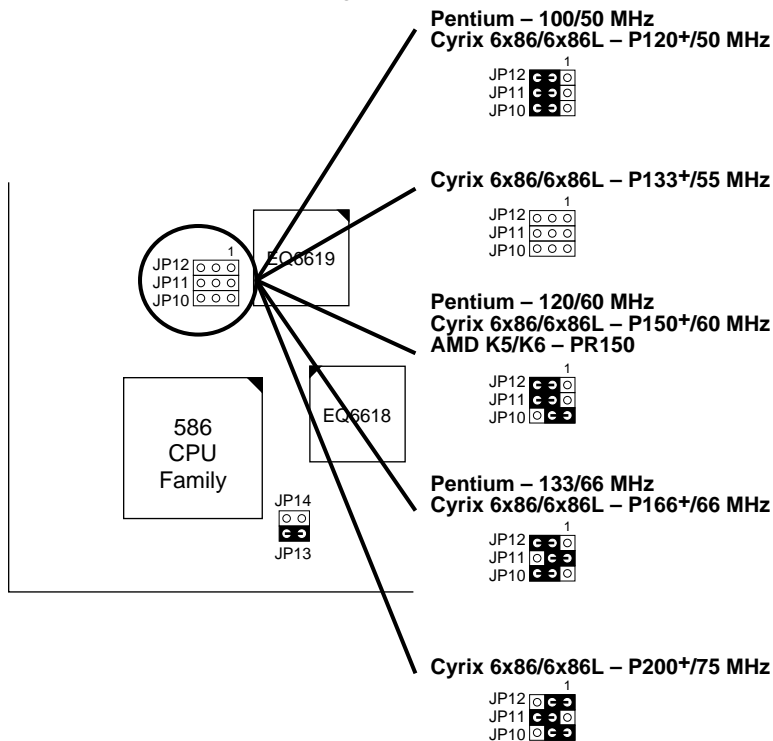


Figure 2–1–2. CPU Jumper Settings

Note: You must equip the CPU with a fan and heat sink for system stability.

Pentium– 150/166 CPU Settings (2.5 x clock) AMD K5/K6 – PR166 CPU Setting

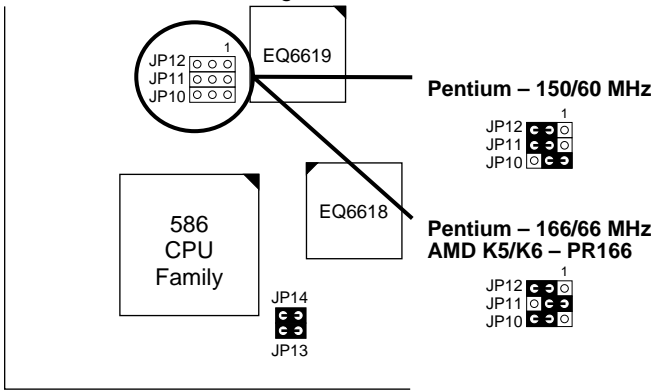


Figure 2–1–3. CPU Jumper Settings

Note: You must equip the CPU with a fan and heat sink for system stability.

Pentium – 180/200 CPU Settings (3.0 x clock) AMD K6 – PR200 CPU Setting

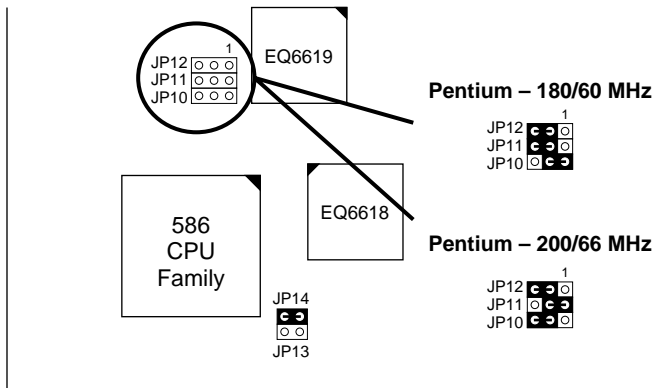


Figure 2–1–4. CPU Jumper Settings

Note: You must equip the CPU with a fan and heat sink for system stability.

AMD K6 – PR233 CPU Setting (4.0 x clock)

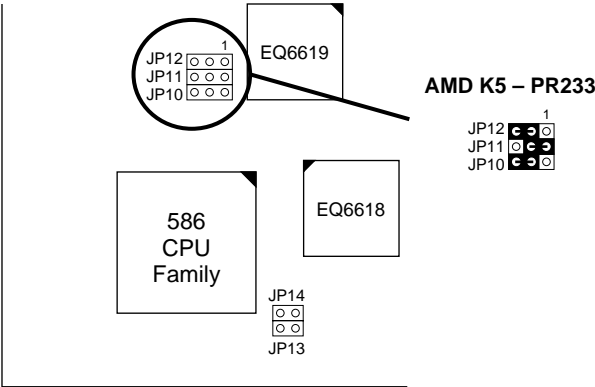


Figure 2–1–5. CPU Jumper Settings

Note: You must equip the CPU with a fan and heat sink for system stability.

❑ Step 2: CPU Single/Dual Voltage Setting

Single Voltage CPU Setting

Signal voltage CPUs use the same voltage for VIO and VCore and has been used traditionally. The CPUs which fall into this category are Intel P54CX, AMD-K5-PRxxxBx, AMD-K5-PRxxxCx, AMD-K5-PRxxxFx, and Cyrix 6x86. Refer to the following figures to set these CPUs' voltage:

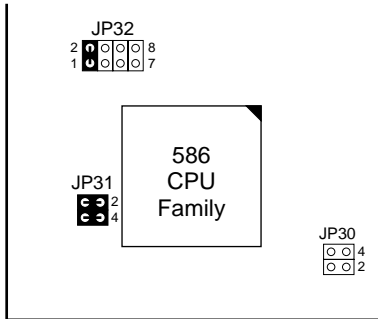


Figure 2–2–1. Single Voltage 3.3V CPU

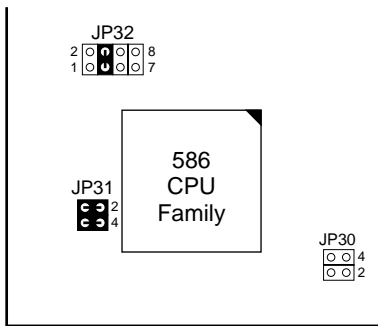


Figure 2–2–2. Single Voltage 3.52V CPU (Default)

Dual Voltage CPU Setting

Dual voltage CPUs are designed to use different voltage for VIO and VCore and they include Intel P55CX, and Cyrix 6x86L. Refer to the following figures to set these CPUs' voltage:

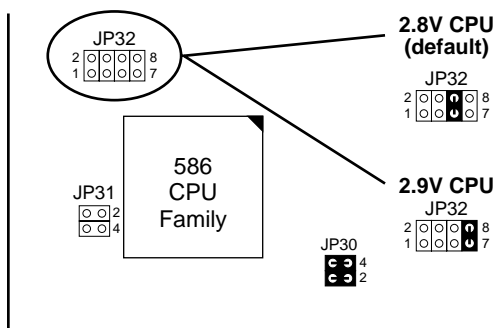


Figure 2–2–3. Intel P55CX, Cyrix 6X86 L Dual Voltage CPU

Note: Due to various design, please ask your CPU dealer for the exact VIO and VCore voltage before you install it.

Memory Configuration

The mainboard supports two banks of **72-pin FPM/EDO/Burst EDO DRAM (SIMM)**, and **one strip of 3.3V 168-pin Unbuffered DIMM**. The mainboard requires SIMM of at least 70ns access time.

The mainboard supports **from 4 to 256 Mbytes** with no other restrictions on memory configurations. You can install SIMM in any combination without having to rely on a memory configuration table. Memory configuration is thus “**Table-Free**” in any SIMM bank. You must install two strips of SIMM modules to complete a bank.

Memory Configuration Table

	SIMM Bank		DIMM Bank
	Bank 1	Bank 2	DIMM
RAM Type	FPM/EDO/BEDO (DRAM)	FPM/EDO/BEDO (DRAM)	FPM/EDO/SDRAM
Single RAM Module Size (MB)	4/8/16/32	4/8/16/32	8/16/32

Note: Do not install FPM/EDO/BEDO SIMM when you already installed SDRAM type of DIMM.

RAM Bank Installation Notice

Due to the RAS line share architecture of ETEQ chipset, the possible combination of DIMM/SIMM in this mainboard are as one of the followings:

1. In Bank 1
2. In Bank 2
3. In Bank 1 & Bank 2
4. In DIMM
5. In Bank 2 & DIMM

Cache Configuration

The mainboard has a write-back caching scheme with built-in 512KB Level 2 Pipelined Burst cache onboard to improve the system performance.

Cache Size and RAM Locations

Cache Size	Cache RAM	TAG RAM	Cacheable Range
512KB	64K x 32, 2pcs on U19, U20	16K x 8 on U21	128 MB

Multi I/O Port Addresses

Default settings for multi-I/O port addresses are shown in the table below.

Port	I/O Address	IRQ	Status
LPT1*	378H	7	ECP + EPP
COM1	3F8H	4	
COM2	2F8H	3	

- * If default I/O port addresses conflict with other I/O cards (e.g. sound cards or I/O cards), you must adjust one of the I/O addresses to avoid address conflict. (You can adjust these I/O addresses from the BIOS.

Note: Some sound cards have a default IRQ setting for IRQ7, which may conflict with printing functions. If this occurs do not use sound card functions at the same time you print.

Connectors

Attach the mainboard to case devices, or an external battery, via connectors on the mainboard. Refer to Figure 1-1 for connector locations and connector pin positions.

COM1, COM2– COM1/COM2 Connectors

Attach COM1/COM2 device cable to these connectors.

FDC Connector

Attach floppy cable to this connector.

J19 – Hardware Reset Control

Attach the Reset switch to J19. Closing the Reset switch restarts the system.

J24 – HDD LED Connectors

Attach the cable of hard disk drive LEDs to this connector. The LED lights when an HDD is active.

IDE1/IDE2 – On-board Primary/Secondary IDE HDD Connectors

Attach cables of hard disk drives to these connectors.

CN5 – IR Connector

Attach a 5-pin infrared device cable to this connector for enabling the infrared transfer function. This mainboard meets the specification of ASKIR and HPSIR.

CN2 – Keyboard Connector

A 5-pin female DIN keyboard connector is located at the rear of the board. Plug the keyboard jack into this connector.

J17 – Keylock & Power LED Connector

J17 is a connector for a lock that may be installed on the system case for enabling or disabling the keyboard. J17 also attaches to the case's Power LED. (Pin 1, 3 for power LED and pin 4, 5 for keylock.)

CN1 – PS/2 Mouse Connector


Attach PS/2 mouse cable to this connector.

PRT – Parallel Port Connector

Attach parallel port cable to this connector.

PW – Power Supply Connector

The mainboard requires a power supply with at least 200 watts and a “power good” signal. PW has two 6-pin male header connectors. Plug the dual connectors from the power directly onto the board connector while making sure the black leads are in the center.

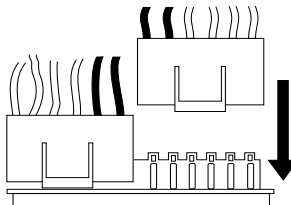

J23: Sleep Switch Connector Enable/Disable

Toggle this jumper to force the system into power saving (Green) mode. Any hardware IRQ signal makes the system wakeup.

CN3 – Universal Serial Bus Connectors

Attach 9-pin USB cable to these connectors for external USB device.

3 BIOS Setup

The mainboard’s BIOS setup program is the ROM PCI/ISA BIOS from Award Software Inc. Enter the Award BIOS program’s Main Menu as follows:

1. Turn on or reboot the system. After a series of diagnostic checks, you are asked to press DEL to enter Setup.
2. Press the key to enter the Award BIOS program and the main screen appears:

ROM PCI/ISA BIOS CMOS SETUP UTILITY AWARD SOFTWARE, INC.	
STANDARD CMOS SETUP	INTEGRATED PERIPHERALS
BIOS FEATURES SETUP	SUPERVISOR PASSWORD
CHIPSET FEATURES SETUP	USER PASSWORD
POWER MANAGEMENT SETUP	IDE HDD AUTO DETECTION
PNP/PCI CONFIGURATION	SAVE & EXIT SETUP
LOAD SETUP DEFAULTS	EXIT WITHOUT SAVING
LOAD BIOS DEFAULTS	
Esc : Quit	↑ ↓ → ← : Select Item
F10 : Save & Exit Setup	(Shift) F2 : Change Color
Time, Date, Hard Disk Type...	

3. Choose an option and press <Enter>. Modify the system parameters to reflect the options installed in the system. (See the following sections.)
4. Press <ESC> at anytime to return to the Main Menu.
5. In the Main Menu, choose “SAVE AND EXIT SETUP” to save your changes and reboot the system. Choosing “EXIT WITHOUT SAVING” ignores your changes and exits the program.

The Main Menu options of the Award BIOS are described in the sections that follow.

Standard CMOS Setup

Run the Standard CMOS Setup as follows.

1. Choose “STANDARD CMOS SETUP” from the Main Menu. A screen appears.

ROM PCI/ISA BIOS
STANDARD CMOS SETUP
AWARD SOFTWARE, INC.

Date (mm:dd:yy) : Fri, Feb 1 1995
Time (hh:mm:ss) : 7 : 30 : 33

HARD DISKS	TYPE	SIZE	CYLS	HEAD	PRECOMP	LANDZ	SECTOR	MODE
Primary Master	: AUTO	0	0	0	0	0	0	AUTO
Primary Slave	: None	0	0	0	0	0	0	----
Secondary Master	: None	0	0	0	0	0	0	----
Secondary Slave	: None	0	0	0	0	0	0	----

Drive A : 1.44M, 3.5 in.
Drive B : None

Video : EGA/VGA
Halt On : All Errors

Base Memory: 640K
Extended Memory: 3328K
Other Memory: 128K

Total Memory: 4096K

Esc : Quit
F11 : Help

↑ ↓ → ← : Select Item
(Shift) F2 : Change Color

PU/PD/+/- : Modify
F3 : Toggle Calendar

2. Use arrow keys to move between items and select values. Modify selected fields using PgUp/PgDn/+/- keys. Some fields let you enter values directly.

Date (mm/dd/yy) Type the current date.

Time (hh:mm:ss) Type the current time.

Primary First, choose the type of hard disk that you
(Secondary) already installed:

- Master & Slave**
- Auto – BIOS detects hard disk type automatically (default)
 - 1 ~ 46 – Selects standard hard disk type
 - User – User defines the type of hard disk.

Next, choose hard disk mode:

- Auto – BIOS detects hard disk mode automatically (default)
- Normal – Normal IDE hard disk (smaller than 528MB)
- LBA – Enhanced-IDE hard disk (larger than 528MB)

Primary (Secondary) Master & Slave (Continued)	Large – Large IDE hard disk (for certain hard disk) <i>Note: If you have any questions on your hard disk type or mode, ask your hard disk provider or previous user for details.</i>
Drive A & B	Choose 360KB , 5 1/4 in., 1.2MB , 5 1/4 in., 720KB , 3 1/2 in., 1.44M , 3 1/2 in.(default), 2.88 MB, 3 1/2 in. or Not installed
Video	Choose Monochrome, Color 40x25, VGA/EGA (default), Color 80x25
Halt On	When BIOS detects system errors, this function will stop the system. Choose one of the following options to make system halt. All Errors (default) All, But Diskette No Errors All, But Keyboard All, But Disk/Key

3. When you finish, press the <ESC> key to return to the Main Menu.

BIOS Features Setup

Run the BIOS Features Setup as follows.

1. Choose “BIOS FEATURES SETUP” from the Main Menu and a screen with a list of items appears. (The screen below shows the BIOS default settings.)

ROM PCI/ISA BIOS BIOS FEATURES SETUP AWARD SOFTWARE, INC.		
CPU Internal Cache	: Enabled	Video BIOS Shadow : Enabled
External Cache	: Enabled	C8000-CBFFF Shadow : Disabled
Quick Power on Self Test	: Enabled	CC000-CFFFF Shadow : Disabled
Boot Sequence	: A,C,SCSI	D0000-D3FFF Shadow : Disabled
Swap Floppy Drive	: Disabled	D4000-D7FFF Shadow : Disabled
Boot Up NumLock Status	: On	D8000-DBFFF Shadow : Disabled
Typematic Rate Setting	: Disabled	DC000-DFFFF Shadow : Disabled
Typematic Rate (Chars/Sec)	: 6	
Typematic Delay (Msec)	: 250	
Security Option	: Setup	ESC : Quit ↑ ↓ → ←: Select Item
IDE Second Channel Control	: Enabled	F1 : Help PU/PD/+/- : Modify
PS/2 Mouse Function Control	: Disabled	F5 : Old Values (Shift)F2 : Color
PCI/VGA Palette Snoop	: Disabled	F6 : Load BIOS Defaults
OS Select for DRAM >64MB	: Non-OS2	F7 : Load Setup Defaults

2. Use the arrow keys to move between items and to select values. Modify the selected fields using the PgUp/PgDn/+/- keys. <F> keys are explained below:
 <F1>: “Help” gives options available for each item.
 Shift <F2>: Change color.
 <F5>: Get the old values. These values are the values with which the user started the current session.
 <F6>: Load all options with the BIOS Setup default values.
 <F7>: Load all options with the Power-On default values.

A short description of screen items follows:

- CPU Internal Cache

This option enables/disables the CPU’s internal cache. (The Default setting is Enabled.)
- External Cache

This option enables/disables the external cache memory. (The Default setting is Enabled.)
- Quick Power On Self Test

Enabled provides a fast POST at boot-up .

Boot Sequence	<p>Choose the boot device sequence as your need. For example, “A, C, SCSI” means BIOS will look for an operating system first from drive A, drive C, then SCSI device. Options of this function are:</p> <p>A, C, SCSI C, A, SCSI C, CD-ROM, A CD-ROM, C, A D, A, SCSI E, A, SCSI F, A, SCSI SCSI, A, C SCSI, C, A C only.</p>
Swap Floppy Drive	<p>Enabled changes the sequence of the A: and B: drives. (The Default setting is Disabled.)</p>
Boot Up Num Lock Status	<p>Choose On or Off. On puts numeric keypad in Num Lock mode at boot-up. Off puts this keypad in arrow key mode at boot-up.</p>
Typematic Rate Setting	<p>Enable this option to adjust the keystroke repeat rate.</p>
Typematic Rate (Chars/Sec)	<p>Choose the rate a character keeps repeating.</p>
Typematic Delay (Msec)	<p>Choose how long after you press a key that a character begins repeating.</p>
Security Option	<p>Choose Setup or System. Use this feature to prevent unauthorized system boot-up or use of BIOS Setup.</p> <p>“System” – Each time the system is booted the password prompt appears.</p> <p>“Setup” – If a password is set, the password prompt only appears if you attempt to enter the Setup program.</p>

IDE Second Channel Control	Default setting is Enabled. Choose Disabled when you need to turn off the onboard IDE second channel.
PS/2 Mouse Function Control	Default setting is Disabled. You need to enable this function when the PS/2 mouse is attached.
PCI/VGA Palette Snoop	<p>Enabled: The color of the monitor may be incorrect if uses with MPEG card. Enable this option to make the monitor normal.</p> <p>Disabled: Default setting.</p>
OS Select for DRAM >64MB	<p>OS2 – Choosing this when you are using OS/2 operation system.</p> <p>Non-OS/2 – Choosing this when you are using no-OS/2 operation system.</p>
Video or Adapter BIOS Shadow	BIOS shadow copies BIOS code from slower ROM to faster RAM. BIOS can then execute from RAM. These 16K segments can be shadowed from ROM to RAM. BIOS is shadowed in a 16K segment if it is enabled and it has BIOS present.

3. After you have finished with the BIOS Features Setup program, press the <ESC> key and follow the screen instructions to save or disregard your settings.

Chipset Features Setup

The Chipset Features Setup option changes the values of the chipset registers. These registers control system options in the computer.

Note: Change these settings only if you are familiar with the Chipset.

Run the Chipset Features Setup as follows.

1. Choose “CHIPSET FEATURES SETUP” from the Main Menu and the following screen appears. (The screen below shows default settings.)

ROM PCI/ISA BIOS CHIPSET FEATURES SETUP AWARD SOFTWARE, INC.	
DRAM Auto Configuration :	60 ns
DRAM Timing Control :	Auto
Read Pipeline :	Disabled
Write Pipeline :	Enabled
Video BIOS Cacheable :	Disabled
System BIOS Cacheable :	Disabled
Memory Hole At 15Mb Addr. :	Disabled
OnChip USB :	Disabled
ESC : Quit ↑ ↓ → ←: Select Item F1 : Help PU/PD/+/- : Modify F5 : Old Values (Shift)F2 : Color F6 : Load BIOS Defaults F7 : Load Setup Defaults	

2. Use the arrow keys to move between items and select values. Modify selected fields using the PgUp/PgDn/+/- keys.

A short description of screen items follows:

DRAM Auto Configuration

Choose **60ns** (default) or **70ns** when the DRAM Timing Control needs to be set to Auto; and; when choose **Disabled**, the DRAM Timing Control can be set to Normal, Medium, Fast, or Turbo.

DRAM Timing Control

Choose Auto, Normal, Medium, Fast, or Turbo. BIOS sets the DRAM Timing automatically when this function is set to Auto. Normal is the slowest and you must check the system stability before you change to the Fast or Turbo setting, otherwise it should be on Auto.

SDRAM Cycle Length	2 (default). This function is shown only when uses SDRAM.
Read Pipeline	Use the default setting.
Write Pipeline	Use the default setting.
Video BIOS Cacheable	Disabled – The ROM area F0000H-FFFFFH is not cached. Enabled – The ROM area F0000H-FFFFFH is cacheable if cache controller is enabled.
System BIOS Cacheable	Disabled – The video BIOS C0000H-C7FFFH is not cached. Enabled – The video BIOS C0000H-C7FFFH is cacheable if cache controller is enabled.
Memory Hole At 15Mb Addr	Choose Enabled or Disabled (default). Some interface cards will map their ROM address to this area. If this occurs, you should select Enabled, otherwise use Disabled.
OnChip USB	Default is Disabled. Enable this function when you use the USB device.
USB Keyboard Support	Enable this function when you use the USB keyboard, but notice that you need to use the regular keyboard first before getting in the BIOS setup.

3. After you have finished with the Chipset Features Setup, press the <ESC> key and follow the screen instructions to save or disregard your settings.

Power Management Setup

The Power Management Setup option sets the system’s power saving functions.

Run the Power Management Setup as follows.

1. Choose “POWER MANAGEMENT SETUP” from the Main Menu and a screen with a list of items appears.

ROM PCI/ISA BIOS CMOS SETUP UTILITY POWER MANAGEMENT SETUP	
Power Management : Disabled	** Power Down & Resume Events **
PM Control by APM : Yes	IRQ 5 (LPT 2) : Primary
Video Off Option : Suspend -> Off	IRQ 6 (Floppy Disk) : Primary
Video Off Method : V/H SYNC+Blank	IRQ 7 (LPT 1) : Primary
Conserve Mode : Disabled	IRQ 8 (RTC Alarm) : Disabled
	IRQ 9 (IRQ2 Redir) : Secondary
** PM Timers **	IRQ 10 (Reserved) : Secondary
HDD Power Down : Disabled	IRQ 11 (Reserved) : Secondary
Doze Mode : Disabled	IRQ 12 (PS/2 mouse) : Primary
Suspend Mode : Disabled	IRQ 13 (Coprocessor) : Primary
	IRQ 14 (Hard Disk) : Primary
** PM Events **	IRQ 15 (Reserved) : Disabled
VGA : OFF	
LPT & COM : LPT/COM	
HDD & FDD : ON	ESC : Quit ↑↓→←: Select Item
DMA/master : OFF	F1 : Help PU/PD/+/- : Modify
Primary INTR : ON	F5 : Old Values (Shift)F2 : Color
IRQ 3 (COM 2) : Primary	F6 : Load BIOS Defaults
IRQ 4 (COM 1) : Primary	F7 : Load Setup Defaults

2. Use the arrow keys to move between items and to select values. Modify the selected fields using the PgUp/PgDn/+/- keys.

A short description of selected screen items follows:

Power

Options are as follows:

Management

- User Define – Let’s you define the HDD and system power down times.
- Disabled – Disables the Green PC Features.
- Min Saving – Doze timer = 1 Hour
Suspend timer = 1 Hour
HDD Power Down = 15 Min
- Max Saving – Doze timer = 10 Sec
Suspend timer = 10 Sec
HDD Power Down = 1 Min

PM Control by APM	Choose Yes (default) or No . APM stands for Advanced Power Management. To use APM, you must run "power.exe" under DOS v6.0 or later version.
Video Off Option	<p>Susp, Stby→off: Video off when the system runs into Suspend or Standby mode.</p> <p>All Modes→off: Video off in all modes.</p> <p>Always On: Video never off.</p> <p>Suspend→off: Video off when system runs into the suspend mode.</p>
Video Off Method	Choose V/H Sync+Blank (default), Blank screen , or DPMS for the selected PM mode.
Conserve Mode	Use the default setting.
HDD Power Down	When the set time has elapsed, the BIOS sends a command to the HDD to power down, which turns off the motor. Time is adjustable from 1 to 15 minutes. The default setting is Disabled. Some older model HDDs may not support this advanced function.
Doze Mode	When the set time has elapsed, the BIOS sends a command to the system to enter doze mode (system clock drops to 33MHz). Time is adjustable from 10 seconds to 1 Hour.
Suspend Mode	The default is Disabled. Only an SL-Enhanced (or SMI) CPU can enter this mode. Time is adjustable from 10 seconds to 1 Hour. Under Suspend mode, the CPU stops completely (no instructions are executed.)
VGA	Choose Off (default) or On to disable or enable the power management.

- | | |
|----------------------|---|
| LPT & COM | Choose LPT/COM (default) or LPT (COM) to enable the power management timer. Choose NONE to disable the power management timer. |
| HDD & FDD | Choose On (default) to enable the power management timer, or Off to disable the power management timer. |
| DMA/master | Choose Off (default) or On . If you choose the system “Off”, will not monitor the signal of DMA/master; and when you choose “On”, the system will not have SMI signal until the master is finished while the master is working. |
| Primary INTR | When On (default) is chosen, you can choose any IRQ #. |
| IRQ# | When set at “Primary” the processor will power down only after the BIOS detects a “no IRQ activity” during the time specified by the Suspend time. If set at “Secondary event” the system will distinguish whether an interrupt accesses and I/O address or not. If it does, the system enters the standby mode. If not, the system enters the dreaming mode; that is the system goes back full-on status but leaves the monitor blank. For instance, if the system connects to a LAN and receives an interrupt from its file server, the system will enter the dreaming mode to execute the corresponding calling routine. |
3. After you have finished with the Power Management Setup, press the <ESC> key to return to the Main Menu.

PNP/PCI Configuration Setup

This option sets the mainboard’s PCI Slots. Run this option as follows:

- 1. Choose “PNP/PCI CONFIGURATION SETUP” from the Main Menu and the following screen appears. (The screen below shows default settings.)

ROM PCI/ISA BIOS PNP/PCI CONFIGURATION AWARD SOFTWARE, INC.	
Resources Controlled By : Manual Reset Configuration Data : Disabled	PCI IRQ Activated By : Level PCI IDE IRQ Map To : PCI-AUTO Primary IDE INT# : A Secondary IDE INT# : B
IRQ-3 assigned to : Legacy ISA* IRQ-4 assigned to : Legacy ISA* IRQ-5 assigned to : PCI/ISA PnP* IRQ-7 assigned to : PCI/ISA PnP* IRQ-9 assigned to : PCI/ISA PnP* IRQ-10 assigned to : PCI/ISA PnP* IRQ-11 assigned to : PCI/ISA PnP* IRQ-12 assigned to : PCI/ISA PnP* IRQ-14 assigned to : PCI/ISA PnP* IRQ-15 assigned to : PCI/ISA PnP* DMA-0 assigned to : PCI/ISA PnP* DMA-1 assigned to : PCI/ISA PnP* DMA-3 assigned to : PCI/ISA PnP* DMA-5 assigned to : PCI/ISA PnP* DMA-6 assigned to : PCI/ISA PnP* DMA-7 assigned to : PCI/ISA PnP*	ESC : Quit ↑↓→←: Select Item F1 : Help PU/PD/+/- : Modify F5 : Old Values (Shift)F2 : Color F6 : Load BIOS Defaults F7 : Load Setup Defaults

*: These items will disappear when Resource Controlled. is Auto.

- 2. Use the arrow keys to move between items and select values.
Modify selected fields using the PgUp/PgDn/+/- keys.

A short description of screen items follows:

Resources Controlled By	Manual – BIOS doesn’t manage PCI/ISA PnP card (i.e., IRQ) automatically.
	Auto – BIOS auto manage PCI and ISA PnP card (recommended).
Reset Configuration Data	Disabled – Retain PnP configuration data in BIOS.
	Enabled – Reset PnP configuration data in BIOS.

**IRQX and
DMAX assigned
to**

Choose **PCI/ISA PnP** or **Legacy ISA**. If the first item is set to Manual, you could choose IRQX and DMAX assigned to PCI/ISA PnP card or ISA card.

**PCI IRQ
Activated By**

Choose **Edge** or **Level**. Most PCI trigger signals are Level. This setting must match the PCI card.

**PCI IDE IRQ
Map To**

Select **PCI-AUTO**, **ISA**, or **assign a PCI SLOT number** (depending on which slot the PCI IDE is inserted). The default setting is PCI-AUTO. If PCI-AUTO does not work, then assign an individual PCI SLOT number.

**Primary IDE
INT#**

Choose INTA#, INTB#, INTC#, or INTD#. The default setting is INTA#.

**Secondary IDE
INT#**

Choose INTA#, INTB#, INTC#, or INTD#. The default setting is INTB#.

3. After you have finished with the PCI Slot Configuration, press the <ESC> key and follow the screen instructions to save or disregard your settings.

Load Setup Defaults

This item loads the system values you have previously saved. Choose this item and the following message appears:

“Load SETUP Defaults (Y/N)? N”

To use the SETUP defaults, change the prompt to “Y” and press <Enter>. This item is recommended if you need to reset the system setup.

Note: The SETUP Defaults are optimized for the most stabilized performance.

Load BIOS Defaults

Choose this item and the following message appears:

“Load BIOS Defaults (Y/N)?N”

To use the BIOS defaults, change the prompt to “Y” and press <Enter>.

Note: BIOS DEFAULTS values are adjusted for high performance. If you run into any problems after loading BIOS DEFAULTS, please load the SETUP DEFAULTS for the stable performance.

Integrated Peripherals

The Integrated Peripherals option changes the values of the chipset registers. These registers control system options in the computer.

Note: Change these settings only if you are familiar with the Chipset.

Run the Integrated Peripherals as follows.

1. Choose “Integrated Peripherals” from the Main Menu and the following screen appears. (The screen below shows default settings:)

ROM PCI/ISA BIOS INTEGRATED PERIPHERALS AWARD SOFTWARE, INC.	
OnChip IDE First Channel : Enabled OnChip IDE Second Channel: Enabled IDE Prefetch Mode : Enabled IDE HDD Block Mode : Enabled IDE Primary Master PIO : Auto IDE Primary Slave PIO : Auto IDE Secondary Master PIO : Auto IDE Secondary Slave PIO : Auto IDE Secondary Master UDMA: Auto IDE Secondary Slave UDMA: Auto Onboard FDC Controller : Enabled Onboard UART 1 : 3F8/IRQ4 Onboard UART 2 : 2F8/IRQ3 Onboard UART 2 Mode : Standard Onbaord Parallel Port : 378/IRQ7 Parallel Port Mode : ECP+EPP ECP Mode Use DMA : 3 Parallel Port EPP Type : EPP1.9	ESC : Quit ↑ ↓ → ←: Select Item F1 : Help PU/PD/+/- : Modify F5 : Old Values (Shift)F2 : Color F6 : Load BIOS Defaults F7 : Load Setup Defaults

2. Use the arrow keys to move between items and select values. Modify selected fields using the PgUp/PgDn/+/- keys.

A short description of screen items follows:

On-chip IDE First Channel/	Enabled – Use the on-board IDE (default)
On-chip IDE Second Channel	Disabled – Turn off the on-board IDE
IDE Prefetch Mode	Use the default setting.
IDE HDD Block Mode	Choose Enabled (default) or Disabled . Enabled invokes multi-sector transfer instead of one sector per transfer. Not all HDDs support this function.

IDE Primary Master PIO/ IDE Primary Slave PIO/ IDE Secondary Master PIO/ IDE Secondary Slave PIO	Choose Auto (default) or mode 0~4 . Mode 0 is the slowest speed, and HDD mode 4 is the fastest speed. For better performance and stability, we suggest you use the Auto setting to set the HDD control timing.
IDE Secondary Master UDMA IDE Secondary Slave UDMA	Choose Auto (default) or Disabled . When Auto is selected, it supports Ultra DMA Mode.
Onboard FDC Controller	Enabled – Use the on-board floppy controller (default). Disabled – Turn off the on-board floppy controller.
Onboard UART 1/ Onboard UART 2	Choose serial port 1 & 2's I/O address. Do not set port 1 & 2 to the same value except for Disabled. COM 1/3F8H COM3/3E8H COM 2/2F8H COM4/2E8H (default)
Onboard UART 2 Mode	Standard – (default) supports a serial infrared IrDA. HPSIR – supports HP serial infrared interface format ASKIR – supports a Sharp serial interface format.
IR Duplex Mode	Use the default setting (Half). This function shows up only when either HPSIR or ASKIR is chosen in the previous function (Onboard UART 2 Mode).
Onboard Parallel Port	Choose the printer I/O address: 378H/IRQ7 (default), 3BCH/IRQ7, 278H/IRQ5

Parallel Port Mode	Choose ECP + EPP (default), Normal or EPP , ECP mode. The mode depends on your external device that connects to this port.
ECP Mode Use DMA	Choose DMA3 (default) or DMA1 . This setting only works when the Onboard Printer Mode is set at the ECP mode.
Parallel Port EPP Type	Choose EPP specification Ver. 1.7 or 1.9 (default).

Supervisor Password

Based on the setting you made in the “Security Option” of the “BIOS FEATURES SETUP”, this Main Menu item lets you configure the system so that a password is required every time the system boots or an attempt is made to enter the Setup program. Change the password as follows:

1. Choose “SUPERVISOR PASSWORD” in the Main Menu and press <Enter>. The following message appears:

“Enter Password:”

2. Enter a password and press <Enter>.
(If you do not wish to use the password function, you can just press <Enter> and a “Password disabled” message appears.)
3. After you enter your password, the following message appears prompting you to confirm the new password:

“Confirm Password:”

4. Re-enter your password and then Press <ESC> to exit to the Main Menu.

Important: *If you forget or lose the password, the only way to access the system is to set jumper JP5 to clear the CMOS RAM. All setup information is lost and you must run the BIOS setup program again.*

User Password

Based on the setting you made in the “Security Option” of the “BIOS FEATURES SETUP”, this Main Menu item lets you configure the system so that a password is required every time the system boots or an attempt is made to enter the Setup program. Change the password as follows:

1. Choose “USER PASSWORD” in the Main Menu and press <Enter>. The following message appears:

“Enter Password:”

2. Enter a password and press <Enter>. (If you do not wish to use the password function, you can just press <Enter> and a “Password disabled” message appears.)
3. After you enter your password, the following message appears prompting you to confirm the new password:

“Confirm Password:”

4. Re-enter your password and then Press <ESC> to exit to the Main Menu.
5. You are not allowed to change any setting in “CMOS SETUP UTILITY” except change user’s password.

Important: If you forget or lose the password, the only way to access the system is to set jumper JP5 to clear the CMOS RAM. All setup information is lost and you must run the BIOS setup program again.

IDE HDD Auto Detection

This Main Menu item automatically detects the hard disk type and configures the STANDARD CMOS SETUP accordingly.

Note: This function is only valid for IDE hard disks.

ROM PCI/ISA BIOS
CMOS SETUP UTILITY
AWARD SOFTWARE, INC.

HARD DISKS	TYPE	SIZE	CYLS	HEAD	PRECOMP	LANDZ	SECTOR	MODE
Primary Master	: None	0	0	0	0	0	0	----
Primary Slave	: None	0	0	0	0	0	0	----
Secondary Master	: None	0	0	0	0	0	0	----
Secondary Slave	: None	0	0	0	0	0	0	----

Do you accept this drive C (Y/N)? N

ESC : Skip