

# Inspection of Pressure-Relieving Devices

API RECOMMENDED PRACTICE 576  
SECOND EDITION, DECEMBER 2000



American  
Petroleum  
Institute

**Helping You  
Get The Job  
Done Right.<sup>SM</sup>**



# **Inspection of Pressure-Relieving Devices**

**Downstream Segment**

API RECOMMENDED PRACTICE 576  
SECOND EDITION, DECEMBER 2000



**American  
Petroleum  
Institute**

**Helping You  
Get The Job  
Done Right.<sup>SM</sup>**

## SPECIAL NOTES

API publications necessarily address problems of a general nature. With respect to particular circumstances, local, state, and federal laws and regulations should be reviewed.

API is not undertaking to meet the duties of employers, manufacturers, or suppliers to warn and properly train and equip their employees, and others exposed, concerning health and safety risks and precautions, nor undertaking their obligations under local, state, or federal laws.

Information concerning safety and health risks and proper precautions with respect to particular materials and conditions should be obtained from the employer, the manufacturer or supplier of that material, or the material safety data sheet.

Nothing contained in any API publication is to be construed as granting any right, by implication or otherwise, for the manufacture, sale, or use of any method, apparatus, or product covered by letters patent. Neither should anything contained in the publication be construed as insuring anyone against liability for infringement of letters patent.

Generally, API standards are reviewed and revised, reaffirmed, or withdrawn at least every five years. Sometimes a one-time extension of up to two years will be added to this review cycle. This publication will no longer be in effect five years after its publication date as an operative API standard or, where an extension has been granted, upon republication. Status of the publication can be ascertained from the API Standards Department [telephone (202) 682-8000]. A catalog of API publications and materials is published annually and updated quarterly by API, 1220 L Street, N.W., Washington, D.C. 20005.

This document was produced under API standardization procedures that ensure appropriate notification and participation in the developmental process and is designated as an API standard. Questions concerning the interpretation of the content of this standard or comments and questions concerning the procedures under which this standard was developed should be directed in writing to the general manager of the Standards Department, American Petroleum Institute, 1220 L Street, N.W., Washington, D.C. 20005. Requests for permission to reproduce or translate all or any part of the material published herein should also be addressed to the general manager.

API standards are published to facilitate the broad availability of proven, sound engineering and operating practices. These standards are not intended to obviate the need for applying sound engineering judgment regarding when and where these standards should be utilized. The formulation and publication of API standards is not intended in any way to inhibit anyone from using any other practices.

Any manufacturer marking equipment or materials in conformance with the marking requirements of an API standard is solely responsible for complying with all the applicable requirements of that standard. API does not represent, warrant, or guarantee that such products do in fact conform to the applicable API standard.

*All rights reserved. No part of this work may be reproduced, stored in a retrieval system, or transmitted by any means, electronic, mechanical, photocopying, recording, or otherwise, without prior written permission from the publisher. Contact the Publisher, API Publishing Services, 1220 L Street, N.W., Washington, D.C. 20005.*

## **FOREWORD**

API publications may be used by anyone desiring to do so. Every effort has been made by the Institute to assure the accuracy and reliability of the data contained in them; however, the Institute makes no representation, warranty, or guarantee in connection with this publication and hereby expressly disclaims any liability or responsibility for loss or damage resulting from its use or for the violation of any federal, state, or municipal regulation with which this publication may conflict.

Suggested revisions are invited and should be submitted to the manager of the Standards Department, American Petroleum Institute, 1220 L Street, N.W., Washington, D.C. 20005.



# CONTENTS

	Page
1 SCOPE.....	1
2 REFERENCES .....	1
3 DEFINITIONS.....	1
3.1 General.....	1
3.2 Dimensional Characteristics of Pressure Relief Valves .....	1
3.3 Operational Characteristics—System Pressures .....	2
3.4 Operational Characteristics—Device Pressures .....	2
4 PRESSURE-RELIEVING DEVICES .....	3
4.1 Pressure Relief Valve .....	3
4.2 Safety Valve .....	3
4.3 Relief Valve .....	4
4.4 Safety Relief Valve.....	5
4.5 Conventional Safety Relief Valve .....	5
4.6 Balanced Safety Relief Valve.....	5
4.7 Pilot-operated Pressure Relief Valve .....	5
4.8 Pressure and/or Vacuum Vent Valve .....	8
4.9 Rupture Disk Device .....	8
5 CAUSES OF IMPROPER PERFORMANCE.....	15
5.1 Corrosion .....	15
5.2 Damaged Seating Surfaces .....	15
5.3 Failed Springs .....	15
5.4 Improper Setting and Adjustment .....	17
5.5 Plugging and Sticking .....	20
5.6 Misapplication of Materials.....	22
5.7 Improper Location, History, or Identification .....	23
5.8 Rough Handling .....	23
5.9 Improper Differential Between Operating and Set Pressures.....	24
5.10 Improper Discharge Piping Test Procedures.....	25
6 INSPECTION AND TESTING .....	25
6.1 Reasons for Inspection.....	25
6.2 Shop Inspection/overhaul .....	25
6.3 Visual On-stream Inspection .....	33
6.4 Inspection Frequency.....	34
6.5 Time of Inspection.....	35
7 RECORDS AND REPORTS .....	35
7.1 Objective .....	35
7.2 The Need to Keep Records .....	35
7.3 Responsibilities .....	36
7.4 Sample Record and Report System.....	36

APPENDIX A	SAMPLE RECORD AND REPORT FORMS . . . . .	37
APPENDIX B	PRESSURE RELIEF VALVE TESTING. . . . .	45

# Figures

1	Full-Nozzle, Top-Guided Safety Valve . . . . .	4
2	Relief Valve . . . . .	4
3	Safety Relief Valve with O-Ring Seal. . . . .	6
4	Conventional Safety Relief Valve . . . . .	7
5	Balanced Bellows Safety Relief Valve . . . . .	7
6	Balanced Bellows Safety Relief Valve with Auxiliary Balancing Piston . . . . .	8
7	Low-Pressure Diaphragm-Type Pilot-Operated Valve . . . . .	9
8	High-Pressure Pilot-Operated Valve . . . . .	10
9	High-Pressure Pilot-Operated Valve with Optional Dual Outlets . . . . .	11
10	Weight-Loaded Pallet Vent Valve . . . . .	12
11	Spring-and Weight-Loaded Vent Valve. . . . .	12
12	Rupture Disk Device—Rupture Disk in a Typical Holder. . . . .	13
13	Conventional Domed Rupture Disk . . . . .	13
14	Scored Tension-Loaded Rupture Disk . . . . .	14
15	Reverse-Acting Scored Rupture Disk. . . . .	16
16	Reverse-Acting Rupture Disk with Knife Blades. . . . .	17
17	Graphite Rupture Disk . . . . .	18
18	Combination of Reverse-Buckling Disk Assembly and Safety Relief Valve . . . .	19
19	Acid Corrosion in Carbon-Steel Bonnet Caused by Leaking Seating Surfaces . .	19
20	Acid Corrosion on 18Cr-8Ni Steel Inlet Nozzle . . . . .	19
21	Chloride Corrosion on 18Cr-8Ni Steel Nozzle (with Machined Seating Surface) . . . . .	19
22	Sulfide Corrosion on Carbon-Steel Disk From Crude-Oil Distillation Unit . . . .	20
23	Chloride Attack on 18Cr-8Ni Steel Disk . . . . .	20
24	Pit-Type Corrosion on 18Cr-8Ni Steel (Type 316) Bellows . . . . .	20
25	Monel Rupture Disks Corroded in Sour-Gas Service . . . . .	21
26	Body and Bonnet Coated With Epoxy for Corrosion Protection. . . . .	21
27	Seating Surface of Disk Deformed by Chattering . . . . .	21
28	Seat and Disk Damaged by Frequent Operation of Valve Set Too Close to Operating Pressure. . . . .	21
29	Spring Failure Due to Corrosion. . . . .	22
30	Spring Failure Due to Stress Corrosion . . . . .	22
31	Inlet Nozzle Plugged with Coke and Catalyst After Nine Months in Reactor Vapor Line . . . . .	22
32	Outlet Valve Plugged with Deposits From Other Valves in Common Discharge Header . . . . .	23
33	Moving Parts of Valve Fouled with Iron Sulfide (FeS <sub>2</sub> ). . . . .	23
34	Valve Stuck Because of Iron Sulfide (FeS <sub>2</sub> ) Deposits . . . . .	24
35	Disk Frozen in Guide Because of Buildup of Products of Corrosion in Sour-Oil Vapor Service . . . . .	24
36	Rough Handling of Valves Should Be Avoided . . . . .	24
37	Identification Tag for Pressure- Relieving Device . . . . .	26
38	Block Valves on Safety-Relief-Valve Inlet and Outlet Sealed Open and Bleeders Installed to Depressure Inlet and Outlet . . . . .	27
39	Sulfur Deposits in Body of Valve on Way to Repair Shop. . . . .	28
40	Safety-Valve and Relief-Valve Leak Detector . . . . .	31
B-1	Typical Safety-Valve and Relief-Valve Test Block Using Air as Test Medium. . .	46



# Inspection of Pressure-Relieving Devices

## 1 Scope

This recommended practice describes the inspection and repair practices for automatic pressure-relieving devices commonly used in the oil and petrochemical industries. As a guide to the inspection and repair of these devices in the user's plant, it is intended to ensure their proper performance. This publication covers such automatic devices as pressure relief valves, pilot-operated pressure relief valves, rupture disks, and weight-loaded pressure vacuum vents.

The scope of this recommended practice includes the inspection and repair of automatic pressure-relieving devices commonly used in the oil and petrochemical industry.

The recommendations in this publication are not intended to supersede requirements established by regulatory bodies. This publication does not cover weak seams or sections in tanks, explosion doors, fusible plugs, control valves, and other devices that either depend on an external source of power for operation or are manually operated. Inspections and tests made at manufacturers' plants, which are usually covered by codes or purchase specifications, are not covered by this publication.

This publication does not cover training requirements for mechanics involved in the inspection and repair of pressure-relieving devices. Those seeking these requirements should see API 510, which gives the requirements for a quality control system and specifies that the repair organization maintain and document a training program ensuring that personnel are qualified.

## 2 References

This following standards and specifications are cited in this recommended practice:

API	
510	<i>Pressure Vessel Inspection Code: Inspection, Rating, Repair, and Alteration</i>
RP 520	<i>Sizing, Selection, and Installation of Pressure-Relieving Devices in Refineries</i> , Part I, "Sizing and Selection," and Part II, "Installation"
RP 521	<i>Guide for Pressure-Relieving and Depressuring Systems</i>
Std 526	<i>Flanged Steel Pressure Relief Valves</i>
Std 527	<i>Seat Tightness of Pressure Relief Valves</i>
Std 620	<i>Design and Construction of Large, Welded, Low-Pressure Storage Tanks</i>
Std 650	<i>Welded Steel Tanks for Oil Storage</i>
Std 2000	<i>Venting Atmospheric and Low-Pressure Storage Tanks (Nonrefrigerated and Refrigerated)</i>

Bull 2521	<i>Use of Pressure-Vacuum Vent Valves for Atmospheric Pressure Tanks to Reduce Evaporation Loss</i>
-----------	-----------------------------------------------------------------------------------------------------

### ASME<sup>1</sup>

PTC 25	<i>Pressure Relief Devices</i>
	<i>Boiler and Pressure Vessel Code</i> ,
Section I	"Power Boilers"
Section IV	"Heating Boilers"
Section VI	"Recommended Rules for Care and Operation of Heating Boilers"
Section VII	"Recommended Guidelines for Care of Power Boilers"
Section VIII	"Pressure Vessels," Division 1

### NACE<sup>2</sup>

Std MR0175	<i>Sulfide Stress Cracking Resistant-Metallic Materials for Oil Field Equipment</i>
------------	-------------------------------------------------------------------------------------

### NB<sup>3</sup>

NB-18	<i>Pressure Relief Device Certifications</i>
NB-23	<i>National Board Inspection Code</i>

## 3 Definitions

### 3.1 GENERAL

**3.1.1 car seal:** A self-locking seal that when placed in position and closed, locks and must be cut with wire cutters or physically broken to be removed. Local jurisdictional requirements may specify the acceptable method(s) of sealing or locking block valves.

**3.1.2 non-reclosing pressure relief device:** A pressure relief device, which remains open after operation. A manual resetting means may be provided.

**3.1.3 pin-actuated device:** A non-reclosing pressure relief device actuated by static pressure and designed to function by buckling or breaking a pin which holds a piston or a plug in place. Upon buckling or breaking of the pin, the piston or plug instantly moves to the full open position.

### 3.2 DIMENSIONAL CHARACTERISTICS OF PRESSURE RELIEF VALVES

**3.2.1 effective discharge area:** A nominal or computed area used with an effective discharge coefficient to calculate

<sup>1</sup> ASME International, Three Park Avenue New York, New York 10016-5990, [www.asme.org](http://www.asme.org).

<sup>2</sup> NACE International, 440 South Creek Drive, Houston, Texas, 77084, [www.nace.org](http://www.nace.org).

<sup>3</sup> National Board of Boiler and Pressure Vessel Inspectors, 1055 Crupper Avenue, Columbus, Ohio 43229, [www.nationalboard.com](http://www.nationalboard.com).

the minimum required relieving capacity for a pressure relief valve per the preliminary sizing equations contained in API RP 520. API Std 526 provides effective discharge areas for a range of sizes in terms of letter designations, “D” through “T”.

**3.2.2 huddling chamber:** An annular pressure chamber located downstream of the seat of a pressure relief valve for the purpose of assisting the valve to achieve lift.

**3.2.3 inlet size:** The nominal pipe size (NPS) of the relief device at the inlet connection, unless otherwise designated.

**3.2.4 lift:** The actual travel of the disk away from the closed position when a pressure relief valve is relieving.

**3.2.5 outlet size:** The nominal pipe size (NPS) of the relief device at the discharge connection, unless otherwise designated.

### 3.3 OPERATIONAL CHARACTERISTICS—SYSTEM PRESSURES

**3.3.1 accumulation:** The pressure increase over the maximum allowable working pressure of the vessel allowed during discharge through the pressure relief device, expressed in pressure units or as a percentage of MAWP or design pressure. Maximum allowable accumulations are established by applicable codes for emergency operating and fire contingencies.

**3.3.2 design pressure:** The design pressure along with the design temperature is used to determine the minimum permissible thickness or physical characteristic of each vessel component as determined by the vessel design rules. The design pressure is selected by the user to provide a suitable margin above the most severe pressure expected during normal operation at a coincident temperature. It is the pressure specified on the purchase order. This pressure may be used in place of the maximum allowable working pressure in all cases where the MAWP has not been established. The design pressure is equal to or less than the MAWP.

**3.3.3 maximum allowable working pressure (MAWP):** The maximum gauge pressure permissible at the top of a completed vessel in its normal operating position at a designated coincident temperature specified for that pressure. The pressure is the least of the values for the internal or external pressure as determined by the vessel design rules for each element of the vessel using actual nominal thickness, exclusive of additional metal thickness allowed for corrosion and loadings other than pressure. The maximum allowable working pressure is the basis for the pressure setting of the pressure relief device(s) that protect the vessel. The MAWP is normally greater than the design pressure but must be equal to the design pressure when the design rules are used only to calculate the minimum thickness for each element and calculations are not made to determine the value of the MAWP.

**3.3.4 maximum operating pressure:** The maximum pressure expected during normal system operation.

**3.3.5 overpressure:** The pressure increase over the set pressure of the pressure relief device allowed to achieve rated flow. Overpressure is expressed in pressure units or as a percentage of set pressure. It is the same as accumulation only when the relieving device is set to open at the maximum allowable working pressure of the vessel.

**3.3.6 rated relieving capacity:** The relieving capacity used as the basis for the application of a pressure relief device determined in accordance with the applicable code or regulation.

**3.3.7 stamped relieving capacity:** The rated relieving capacity that appears on the device nameplate and based on the rated relieving capacity determined at the specified set pressure or burst pressure plus the allowable overpressure.

### 3.4 OPERATIONAL CHARACTERISTICS—DEVICE PRESSURES

**3.4.1 back pressure:** The pressure that exists at the outlet of a pressure relief device as a result of the pressure in the discharge system. It is the sum of the superimposed and built-up back pressures.

**3.4.2 blowdown:** The difference between the set pressure and the closing pressure of a pressure relief valve, expressed as a percentage of the set pressure or in pressure units.

**3.4.3 built-up back pressure:** The increase in pressure at the outlet of a pressure relief device that develops as a result of flow after the pressure relief device opens.

**3.4.4 burst pressure:** The burst pressure of a rupture disk at the specified temperature is the value of the upstream static pressure minus the value of the downstream static pressure just prior to when the disk bursts. When the downstream pressure is atmospheric, the burst pressure is the upstream static gauge pressure.

**3.4.5 burst-pressure tolerance:** The variation around the marked burst pressure at the specified disk temperature in which a rupture disk shall burst.

**3.4.6 closing pressure:** The value of decreasing inlet static pressure at which the valve disc reestablishes contact with the seat or at which lift becomes zero, as determined by seeing, feeling or hearing.

**3.4.7 cold differential test pressure (CDTP):** The pressure at which a pressure relief valve is adjusted to open on the test stand. The CDTP includes corrections for the service conditions of back pressure or temperatures or both.

**3.4.8 leak-test pressure:** The specified inlet static pressure at which a seat leak test is performed.

**3.4.9 manufacturing range:** The pressure range in which the rupture disk shall be marked. Manufacturing ranges are usually catalogued by the manufacturer as a percentage of the specified burst pressure. Catalogued manufacturing ranges may be modified by agreement between the user and the manufacturer.

**3.4.10 marked burst pressure or rated burst pressure:** The rupture disk burst pressure established by tests for the specified temperature and marked on the disk tag by the manufacturer. The marked burst pressure may be any pressure within the manufacturing range unless otherwise specified by the customer. The marked burst pressure is applied to all the rupture disks of the same lot.

**3.4.11 opening pressure:** The value of increasing inlet static pressure at which there is a measurable lift of the disk or at which discharge of the fluid becomes continuous, as determined by seeing, feeling or hearing.

**3.4.12 set pressure:** The inlet gauge pressure at which the pressure relief valve is set to open under service conditions.

**3.4.13 simmer:** The audible or visible escape of compressible fluid between the seat and disc which may occur at an inlet static pressure below the set pressure prior to opening.

**3.4.14 specified burst pressure:** The burst pressure specified by the user. The marked burst pressure may be greater than or less than the specified burst pressure but shall be within the manufacturing range, superimposed back pressure and specified temperature when determining a specified burst pressure.

**3.4.15 superimposed back pressure:** The static pressure that exists at the outlet of a pressure relief device at the time the device is required to operate. It is the result of pressure in the discharge system coming from other sources and may be constant or variable.

## 4 Pressure-Relieving Devices

Pressure-relieving devices protect equipment and personnel by automatically opening at predetermined pressures and preventing the destructive consequences of excessive pressures in process systems and storage vessels.

A pressure relief device is actuated by inlet static pressure and designed to open during emergency or abnormal conditions to prevent a rise of internal fluid pressure in excess of a specified design value. The device also may be designed to prevent excessive internal vacuum. The device may be a pressure relief valve, a non-reclosing pressure relief device or a vacuum relief valve.

Common examples include direct spring loaded pressure relief valves, pilot-operated pressure relief valves, rupture disks, weight-loaded devices, and pressure and/or vacuum vent valves.

## 4.1 PRESSURE RELIEF VALVE

A pressure relief valve is a pressure relief device designed to open and relieve excess pressure and to reclose and prevent further flow of fluid after normal conditions have been restored. A pressure relief valve opens when its upstream pressure reaches the opening pressure. It then allows fluid to flow until its upstream pressure falls to the closing pressure. It then closes, preventing further flow. Examples of specific types of pressure relief valves include; safety valve, relief valve, conventional safety relief valve, balanced safety relief valve, and pilot-operated pressure relief valve.

## 4.2 SAFETY VALVE

A safety valve is a direct spring loaded pressure relief valve that is actuated by the static pressure upstream of the valve and characterized by rapid opening or pop action.

When the static inlet pressure reaches the set pressure, it will increase the pressure in the huddling chamber and overcome the spring force on the disk. This will cause the disk to lift and provide full opening at minimal overpressure. The closing pressure will be less than the set pressure and will be reached after the blowdown phase is completed.

The spring of a safety valve is usually fully exposed, outside of the valve bonnet to protect it from degradation due to the temperature of the relieving medium. A typical safety valve has a lifting lever for manual opening to ensure the freedom of the working parts. Open bonnet safety valves are not pressure tight on the downstream side. Figure 1 illustrates a full-nozzle, top-guided safety valve.

### 4.2.1 Applications

A safety valve is normally used with compressible fluids. Safety valves are used on steam boiler drums and superheaters. They may also be used for general air and steam services in refinery and petrochemical plants. Safety valve discharge piping may contain a vented drip pan elbow or a short piping stack routed to the atmosphere.

### 4.2.2 Limitations

Safety valves should not be used as follows:

- In corrosive services (unless isolated from the process by a rupture disk).
- Where the discharge must be piped to remote locations or a closed system.
- Where the escape of process fluid around blowing valves is not desirable.
- In liquid service.
- As pressure control or bypass valves.

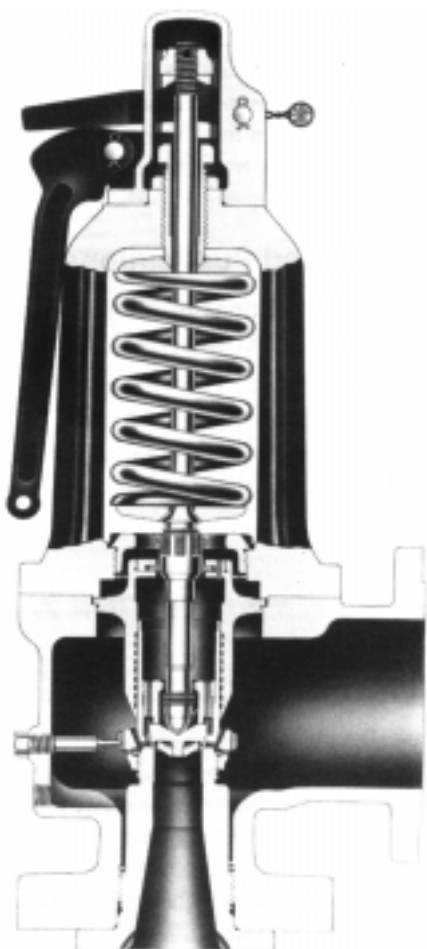


Figure 1—Full-Nozzle, Top-Guided Safety Valve

### 4.3 RELIEF VALVE

A relief valve is a direct spring loaded pressure relief valve actuated by the static pressure upstream of the valve. The valve opens normally in proportion to the pressure increase over the opening pressure.

A relief valve begins to open when the static inlet pressure reaches set pressure. When the static inlet pressure overcomes the spring force, the disk begins to lift off the seat, allowing flow of the liquid. The value of the closing pressure is less than that of the set pressure and will be reached after the blowdown phase is completed. Relief valves usually reach full lift at either 10% or 25% overpressure, depending on the type of valve and trim.

These valves have closed bonnets to prevent the release of corrosive, toxic, flammable, or expensive fluids. They can be supplied with lifting levers, balancing bellows, and soft seats as needed. Figure 2 illustrates one type of relief valve. The ASME Code requires that liquid service relief valves installed after January 1, 1986 have their capacity certified and stamped on the nameplate.

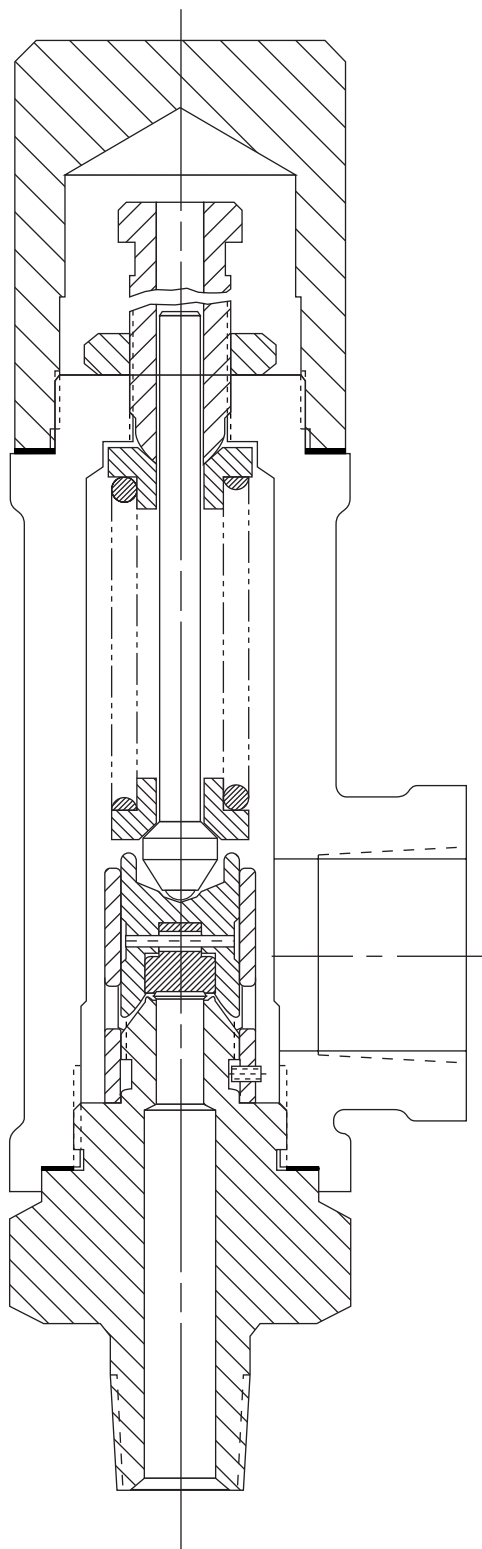


Figure 2—Relief Valve

Some relief valves are manufactured with resilient O-rings or other types of soft seats to supplement or replace the conventional metal-to-metal valve seating surfaces. Usually the valves are similar in most respects to the other pressure relief valves, with the exception that the disks are designed to accommodate some type of resilient seal ring to promote a degree of tightness exceeding that of the usual commercial tightness of conventional metal seats. Figure 3 illustrates one type of O-ring seat seal as installed in a safety relief valve.

#### 4.3.1 Applications

Relief valves are normally used for incompressible fluids (see Part I of API RP 520).

#### 4.3.2 Limitations

Relief valves should not be used as follows:

- a. In steam, air, gas, or other vapor services.
- b. In services piped to a closed header unless the effects of any constant or variable back pressure has been accounted for.
- c. As pressure control or bypass valves.

### 4.4 SAFETY RELIEF VALVE

A safety relief valve is a direct spring-loaded pressure relief valve that may be used as either a safety or relief valve depending on the application.

A safety relief valve is normally fully open at 10% overpressure when in gas or vapor service. When installed in liquid service, full lift will be achieved at approximately 10% or 25% overpressure, depending on trim type.

### 4.5 CONVENTIONAL SAFETY RELIEF VALVE

A conventional safety relief valve is a direct spring loaded pressure relief valve whose operational characteristics (opening pressure, closing pressure, and relieving capacity) are directly affected by changes in the back pressure (see Figure 4).

A conventional safety relief valve has a bonnet that encloses the spring and forms a pressure-tight cavity. The bonnet cavity is vented to the discharge side of the valve.

#### 4.5.1 Applications

Conventional safety relief valves can be used in refinery and petrochemical processes that handle flammable, hot, or toxic material. The effect of temperature and back pressure on the set pressure must be considered when using conventional safety relief valves.

#### 4.5.2 Limitations

Conventional safety relief valves should not be used in the following applications:

- a. Where any built-up back pressures exceeds the allowable overpressure.
- b. Where the CDTP cannot be reduced to account for the effects of variable back pressure (see API RP 520 Part I).
- c. On ASME Section I steam boiler drums or ASME Section I superheaters.
- d. As pressure control or bypass valves.

### 4.6 BALANCED SAFETY RELIEF VALVE

A balanced safety relief valve is a direct spring loaded pressure relief valve that incorporates a bellows or other means for minimizing the effect of back pressure on the operational characteristics of the valve. Whether it is pressure tight on its downstream side depends on its design. See Figures 5 and 6.

#### 4.6.1 Applications

Balanced safety relief valves are normally used in refinery and petrochemical process industries that handle flammable, hot, or toxic material, where high back pressures are present at the valve discharge. This typically occurs where material from the valve is routed to a collection system. They are used as follows:

- a. In gas, vapor, steam, air, or liquid services.
- b. In corrosive service to isolate the spring, bonnet cavity and discharge side of the valve from process material.
- c. When the discharge from the valves must be piped to remote locations.

#### 4.6.2 Limitations

Balanced safety relief valves should not be used as follows:

- a. On ASME Section I steam boiler drums or ASME Section I superheaters.
- b. As pressure control or bypass valves.

Balanced type valves require vented bonnets. A bellows failure allows process media from the discharge side of the valve to discharge from the bonnet vent. Consider the nature of the process media (e.g., liquid/vapor, toxicity, and flammability) when evaluating the bonnet vent disposition. Bonnet vents are typically routed to a drain, a closed system or atmosphere depending on the process media involved.

Balanced safety relief valves may have a back pressure limitation based on the mechanical strength of the bellows. Consult the individual valve manufacturer to assure the allowable back pressure is not exceeded.

### 4.7 PILOT-OPERATED PRESSURE RELIEF VALVE

A pilot-operated safety relief valve is a pressure relief valve in which the major relieving device or main valve is combined with and controlled by a self actuated auxiliary pressure relief valve (pilot).

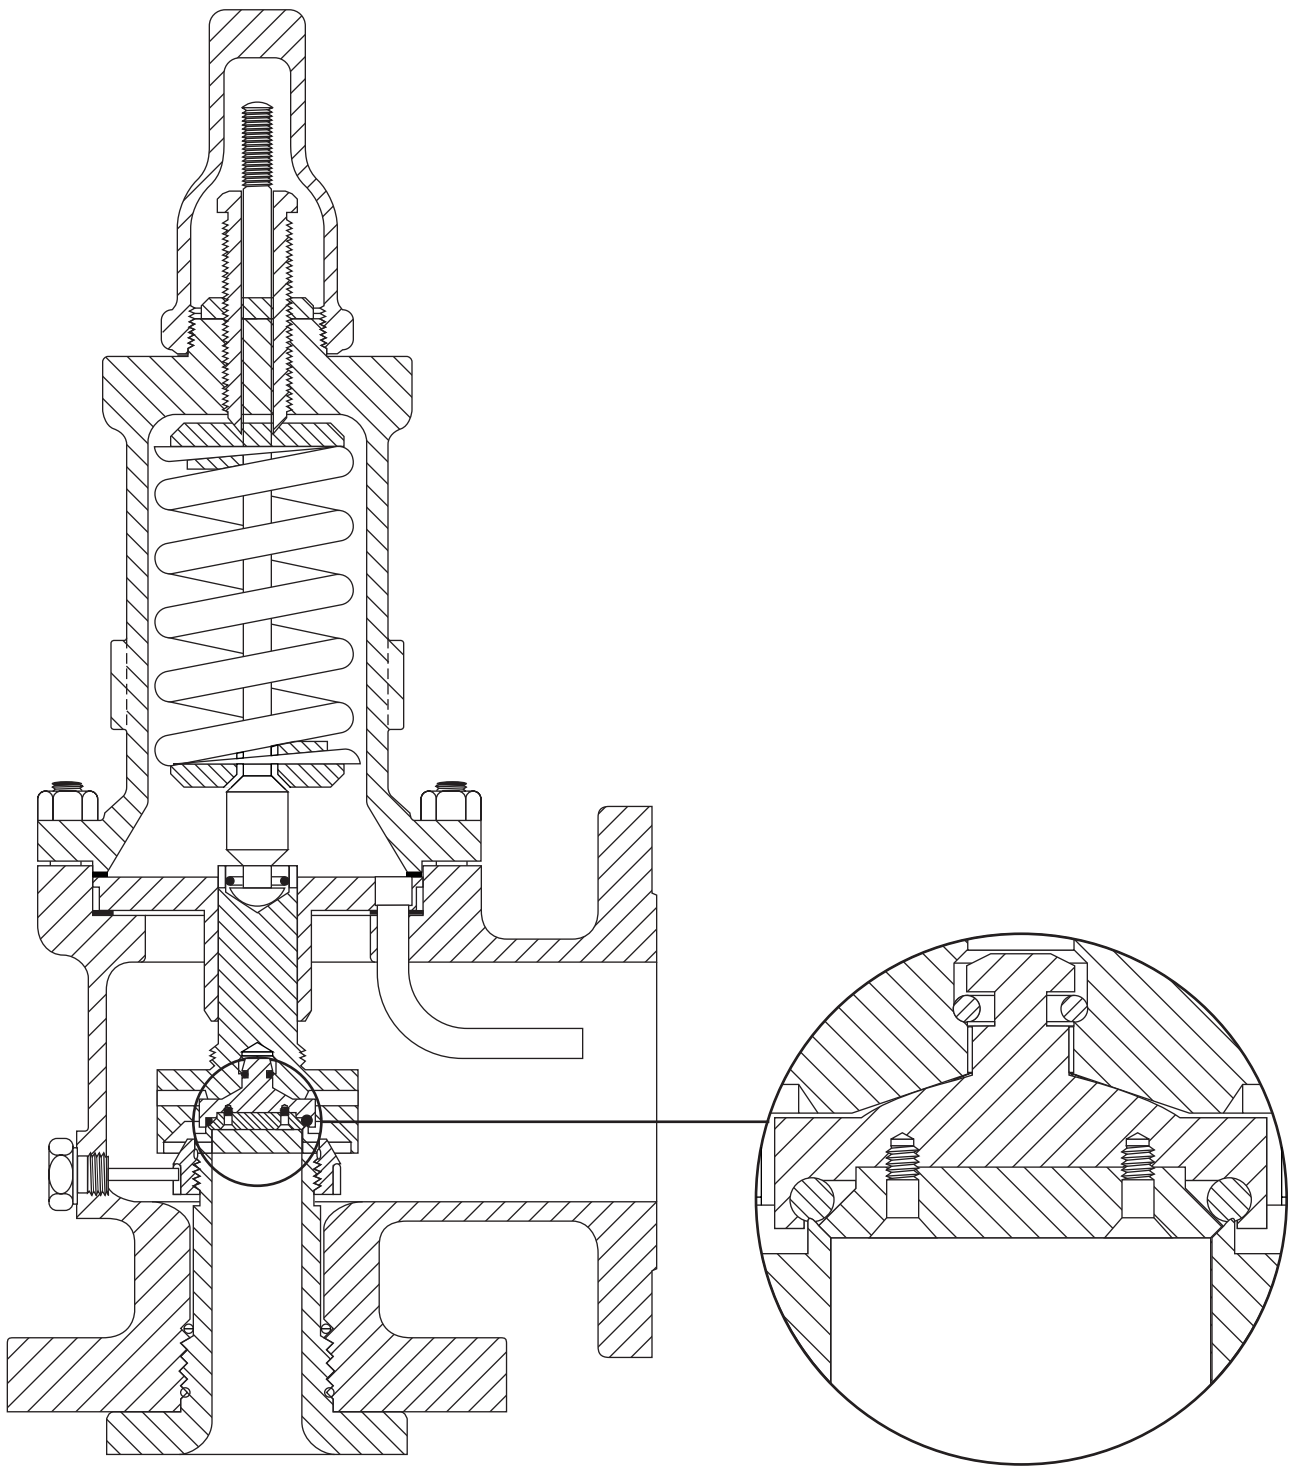


Figure 3—Safety Relief Valve with O-Ring Seal

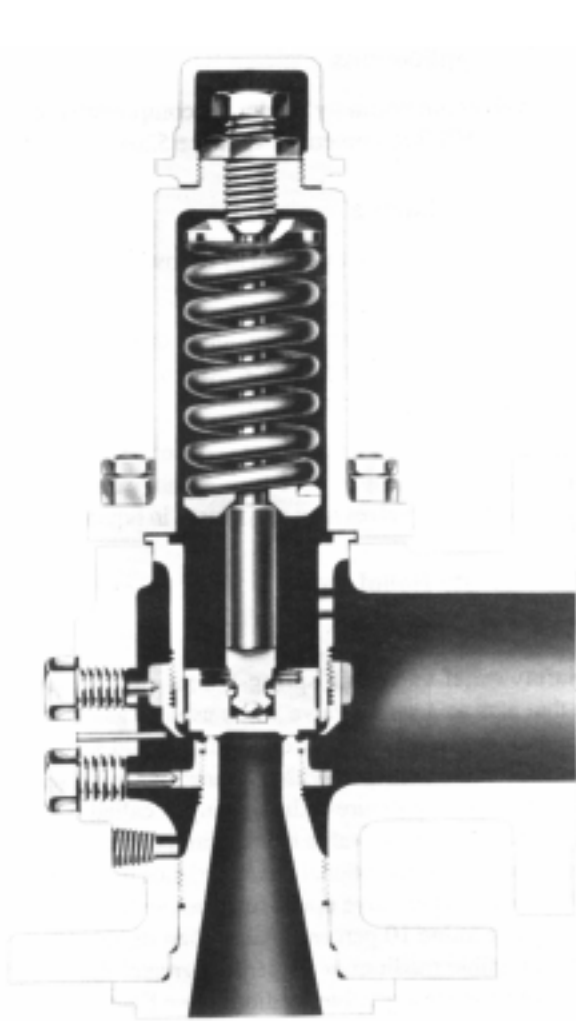


Figure 4—Conventional Safety Relief Valve

Depending on the design, the pilot valve (control unit) and the main valve may be mounted on either the same connection or separately. The pilot is a spring loaded valve that operates when its inlet static pressure exceeds its set pressure. This causes the main valve to open and close according to the pressure. Process pressure is either vented off by the pilot valve to open the main valve or applied to the top of the unbalanced piston, diaphragm, or bellows of the main valve to close it. Figure 7 shows a low-pressure diaphragm-type pilot-operated valve. Figures 8 and 9 shows a high-pressure pilot-operated valve that uses an unbalanced piston and has an integrally mounted pilot. Figure 9 also illustrates optional remote pressure sensing from the vessel and optional dual outlets to equalize thrust.

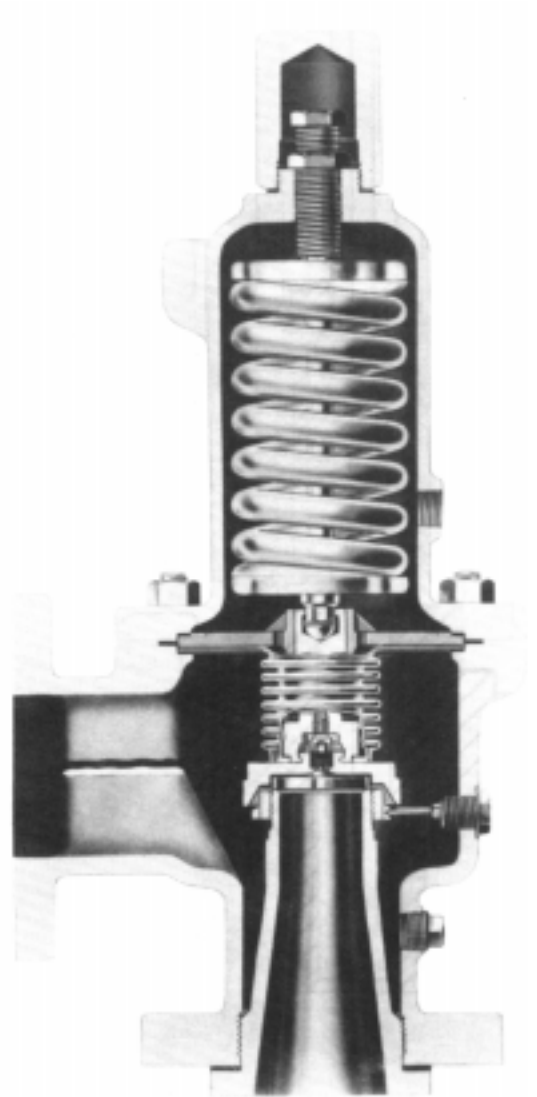


Figure 5—Balanced Bellows Safety Relief Valve

#### 4.7.1 Applications

Pilot-operated safety relief valves are generally used as follows:

- a. Where a large relief area and/or high set pressures are required, since pilot-operated valves can usually be set to the full rating of the inlet flange.
- b. Where a low differential exists between the normal vessel operating pressure and the set pressure of the valves.
- c. On large low-pressure storage tanks (see API Std 620).
- d. Where very short blowdown is required.
- e. Where back pressure is very high and balanced design is required, since pilot-operated valves with the pilots either vented to the atmosphere or internally balanced are inherently balanced by design.

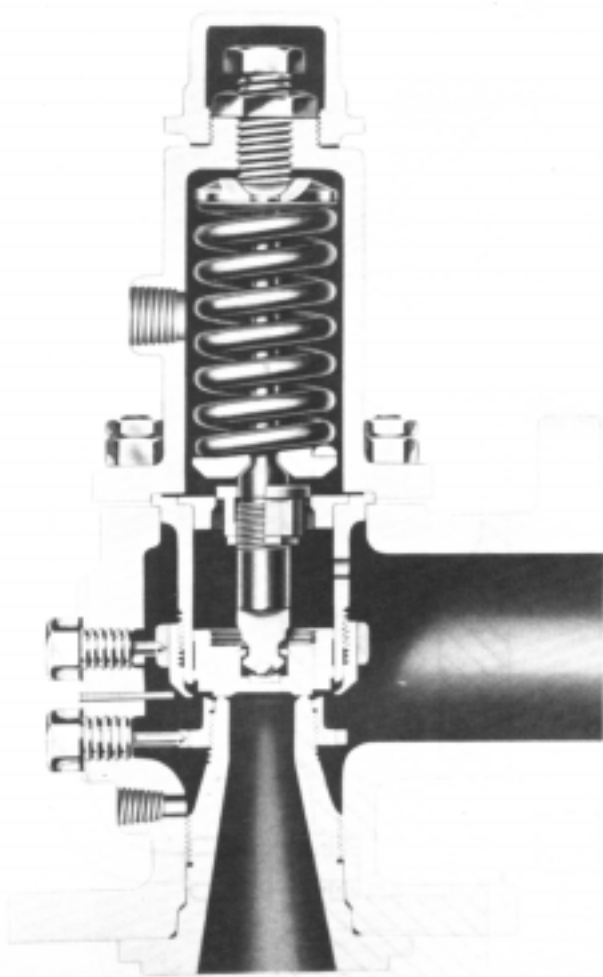


Figure 6—Balanced Bellows Safety Relief Valve with Auxiliary Balancing Piston

- f. Where process conditions require sensing of pressure at one location and relief of fluid at another location.
- g. Where inlet or outlet piping frictional pressure losses are high.
- h. Where in-situ, in-service, set pressure verification is desired.

#### 4.7.2 Limitations

Pilot-operated safety relief valves are not generally used as follows:

- a. In service where fluid is dirty, unless special provisions are taken (such as filters, sense line purging, etc.)
- b. In viscous liquid service, as pilot-operated valve operating times will increase markedly due to flow of viscous liquids through relatively small passages within the pilot.
- c. With vapors that will polymerize in the valves.

- d. In-service where the temperature exceeds the safe limits for the diaphragms, seals, or O-rings selected.
- e. Where chemical compatibility of the lading fluid with the diaphragms, seals, or O-rings of the valves is questionable.
- f. Where corrosion buildup can impede the actuation of the pilot.

### 4.8 PRESSURE AND/OR VACUUM VENT VALVE

A pressure and/or vacuum vent valve (also known as a pressure and/or vacuum relief valve) is an automatic pressure or vacuum-relieving device actuated by the pressure or vacuum in the protected equipment. A pressure and/or vacuum vent valve falls into one of three basic categories:

- a. Weight-loaded pallet vent valve, as shown in Figure 10.
- b. Pilot-operated vent valve, as shown in Figure 7.
- c. Spring and weight-loaded vent valve, as shown in Figure 11.

#### 4.8.1 Applications

Pressure and/or vacuum vent valves are normally used to protect atmospheric and low-pressure storage tanks against a pressure large enough to damage the tank. Single units composed of both pressure vent valves and vacuum vent valves are also known as conservation vent valves, and are normally used on atmospheric storage tanks containing materials with a flash point below 100°F (38°C). However, they may also be used on tanks storing heavier oils (see API Bul 2521 and API Std 2000).

#### 4.8.2 Limitations

Pressure and/or vacuum vent valves are generally not used for applications requiring a set pressure greater than 15 lbf/in.<sup>2</sup> (103 kPa).

### 4.9 RUPTURE DISK DEVICE

The combination of a rupture disk holder and rupture disk is known as a rupture disk device. A rupture disk device is a non-reclosing pressure relief device actuated by the static differential pressure between the inlet and outlet of the device and designed to function by the bursting of a rupture disk. A rupture disk device includes a rupture disk and a rupture disk holder (see Figure 12).

- a. A *rupture disk* is a pressure containing, pressure and temperature sensitive element of a rupture disk device. Rupture disks may be designed in several configurations, such as flat, domed (prebulged), or reverse acting. The rupture disk holder secures the disk in place.
- b. A *nonfragmenting rupture disk* is a rupture disk designed and manufactured to be installed upstream of other piping components, such as pressure relief valves, and will not impair the function of those components when the disk ruptures.



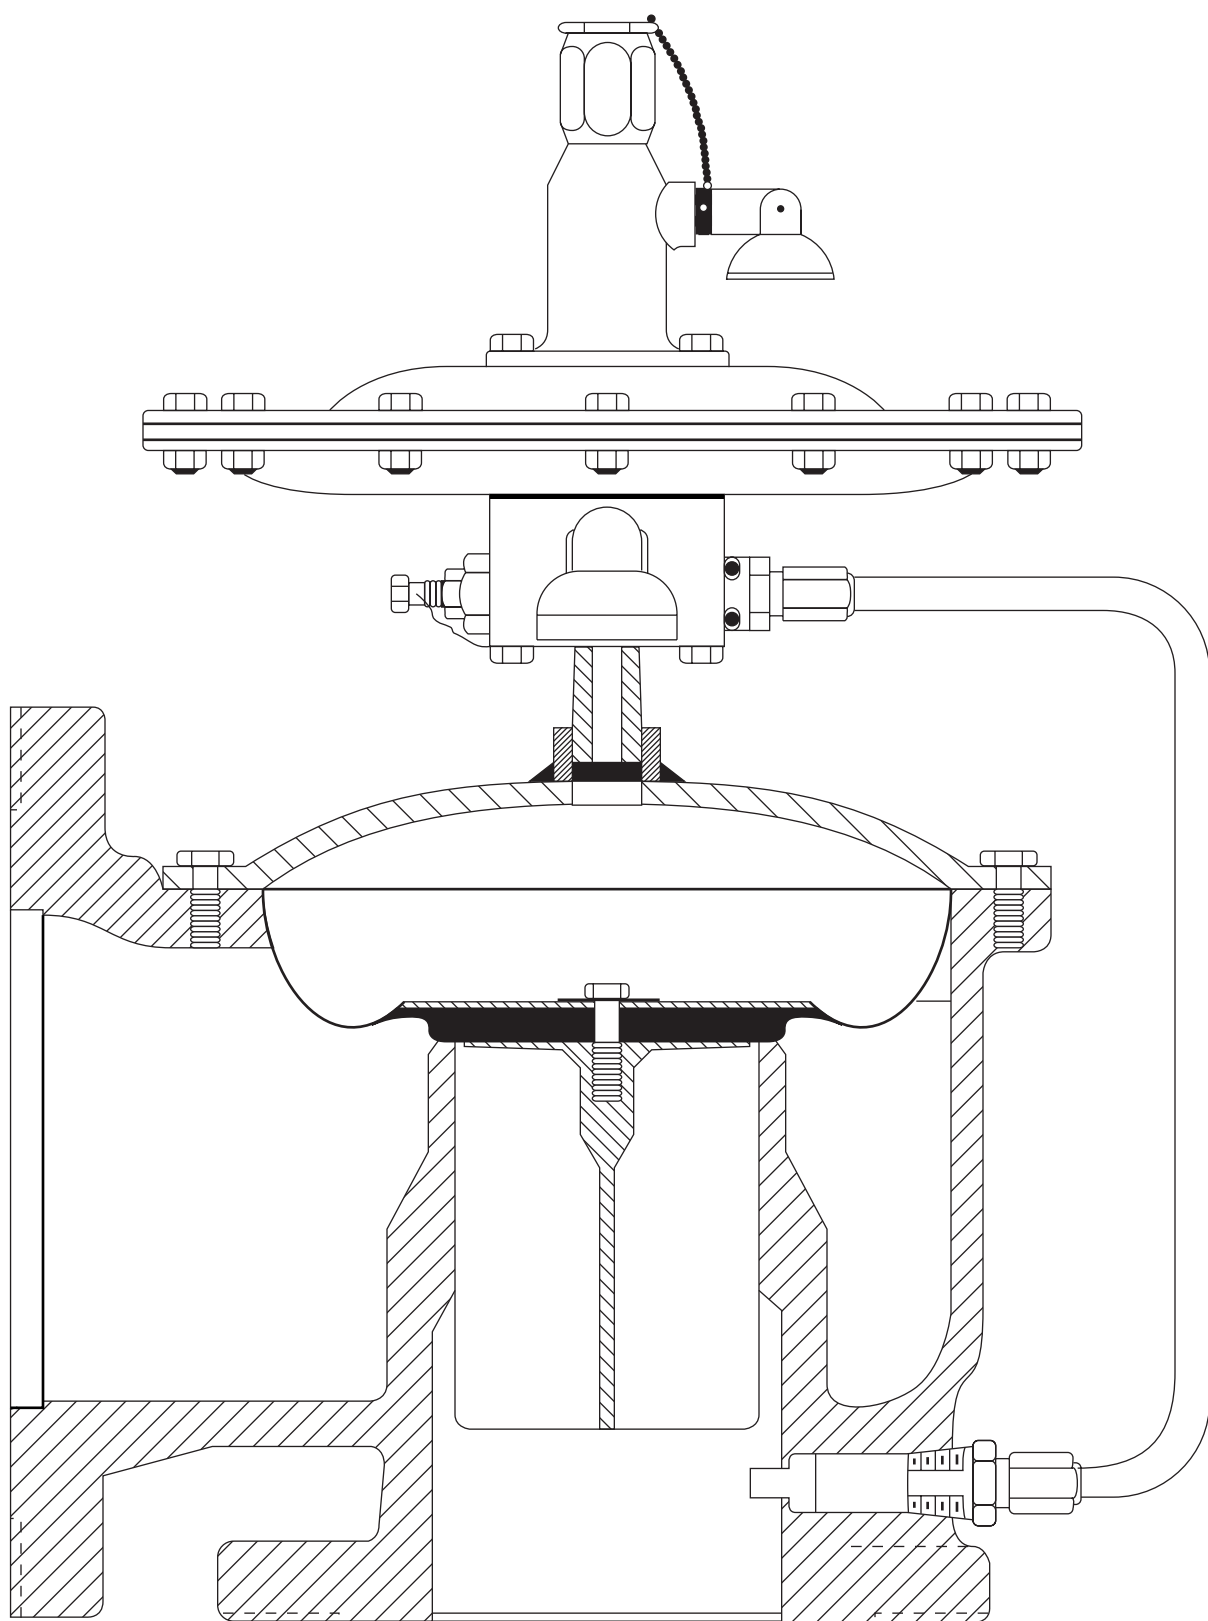


Figure 7—Low-Pressure Diaphragm-Type Pilot-Operated Valve

c. A *rupture disk holder* is the structure, which encloses and clamps the rupture disk in position.

Rupture disks normally require a rupture disk holder although some disks are designed to be installed between standard flanges without holders.

#### 4.9.1 Types of Rupture Disk Devices

##### 4.9.1.1 Conventional Rupture Disk

A conventional domed rupture disk is a prebulged solid metal disk designed to burst when it is overpressured on the concave side (see Figure 13).

The conventional domed rupture disk of flat-seat or angular-seat design generally provides a satisfactory service life when operating conditions are 70% or less of the rated burst pressure of the disk and when limited pressure cycling and temperature variations are present. If vacuum or back pressure

conditions are present, the disk must be furnished with a vacuum support to prevent reverse flexing or implosion. Vacuum supports are designed for continuous service at full vacuum or less. Special designs are available for back pressure conditions that exceed 15 lbf/in.<sup>2</sup> (103 kPa). The conventional domed rupture disk will fragment upon burst.

##### 4.9.1.2 Scored Tension-Loaded Rupture Disk

The scored tension-loaded rupture disk is designed to open along scored lines (see Figure 14). This type of disk is designed to allow a closer ratio (generally 85%) of system operating pressure to disk burst pressure. Because the score lines control the opening pattern, this type of disk is normally nonfragmenting. The scored tension-loaded rupture disk is manufactured from thicker material than is used for unscored disks for the same burst pressure. The disk is mechanically scored to control the burst pressure and burst pattern. The increased material thickness of the disk provides additional resistance to mechanical damage; in most cases, the disk will withstand full vacuum without the addition of a separate vacuum support.

##### 4.9.1.3 Composite Rupture Disk

A composite rupture disk is a flat or domed metallic or nonmetallic multi-piece construction disk. The domed composite rupture disk is designed to burst when it is overpressured on the concave side. The flat composite rupture disk is designed to burst when it is overpressured on the side designated by the manufacturer.

The domed composite rupture disk, available in flat-seat or angular-seat design, permits typical operation to 80% of the rated burst pressure under limited pressure cycling and temperature variations. The burst pressure is controlled by the combination of a slit-top section and a metallic or nonmetallic seal member under the top section. Composite rupture disks are generally available in burst pressures lower than those of the conventional domed rupture disks and may offer a longer service life as a result of the corrosion resistant properties of the seal material selected. The slit-top section provides a predetermined opening pattern for the rupture disk and is designed to minimize fragmentation when the top section is supplied with a nonmetallic seal. As with the conventional domed rupture disk, a support is generally required when vacuum or back pressure conditions are present.

A flat composite rupture disk is available for the protection of low-pressure vessels or the isolation of equipment such as exhaust headers or the outlet sides of pressure relief valves. Intended as corrosion barriers only, flat composite rupture disks may typically operate at 50% of the rated burst pressure and are generally installed between companion flanges rather than specific rupture disk holders. Rupture disks that act in either direction are available; these provide positive pressure and vacuum protection.

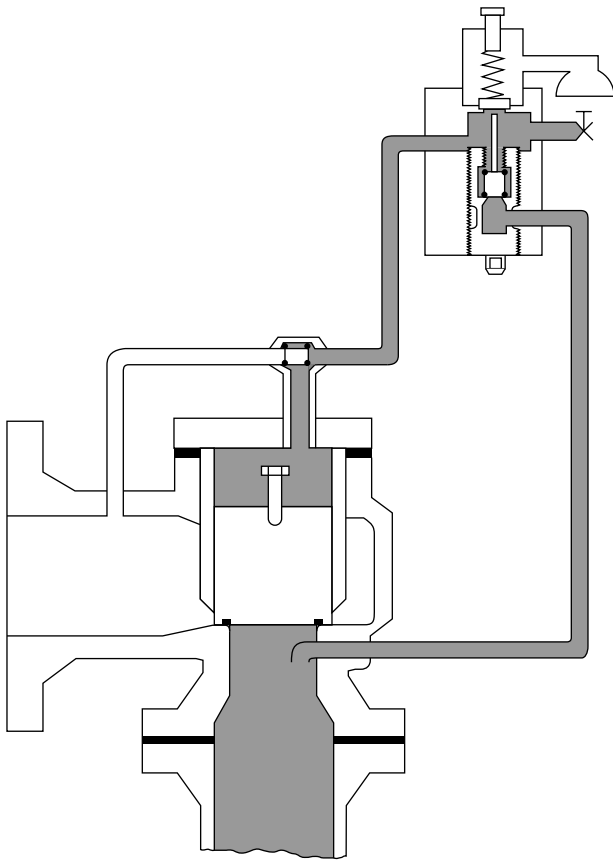


Figure 8—High-Pressure Pilot-Operated Valve

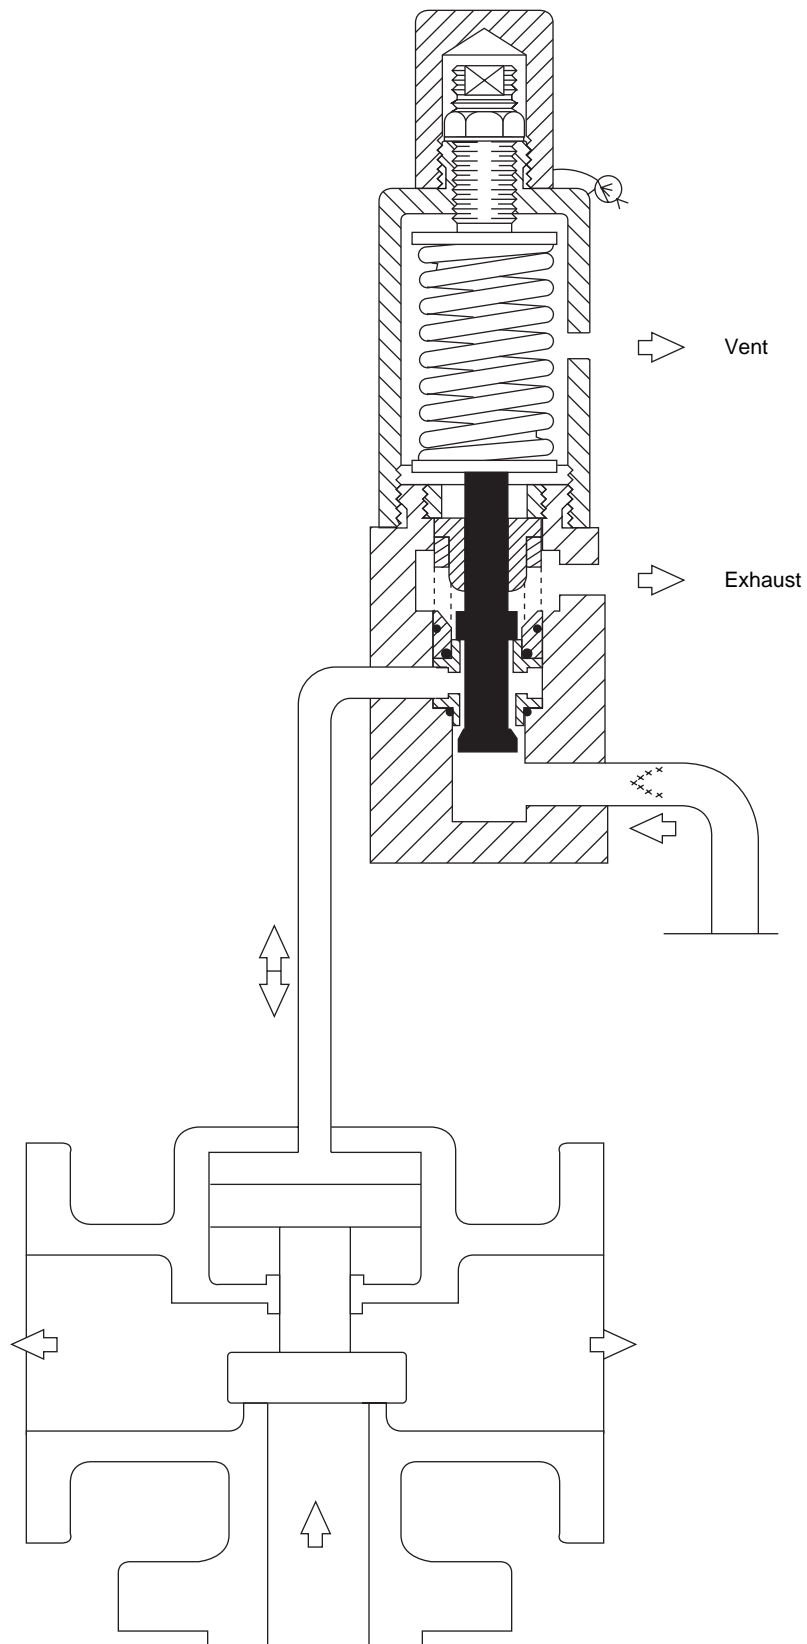


Figure 9—High-Pressure Pilot-Operated Valve with Optional Dual Outlets

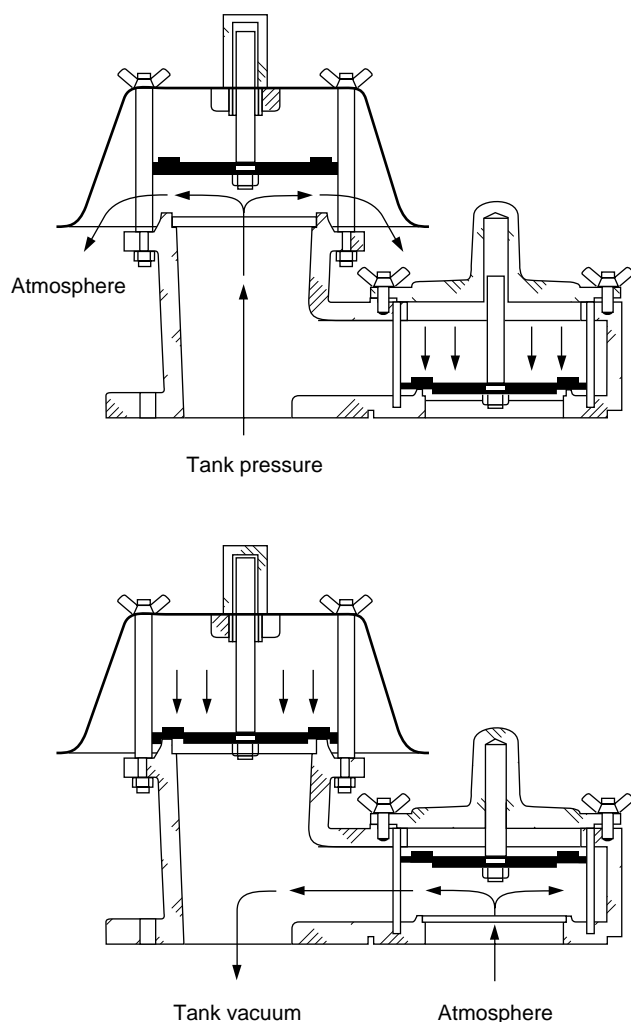


Figure 10—Weight-Loaded Pallet Vent Valve

#### 4.9.1.4 Reverse-Acting Rupture Disk

A reverse-acting rupture disk is a domed solid metal disk designed to burst when it is overpressured on the convex side. Reverse-acting rupture disks are designed to open by such methods as shear, knife blades, knife rings, or scored lines (see Figures 15 and 16).

The reverse-acting rupture disk is designed to allow a closer ratio of system operating pressure to burst pressure, up to 90% of the rated burst pressure. This type of disk is usually nonfragmenting. Because the reverse-acting rupture disk is actuated by overpressure on the convex side, thicker disk materials may be used, thereby improving corrosion resistance, eliminating the need for vacuum support, and providing longer service life under pressure/vacuum cycling conditions and temperature fluctuations. Caution should be exercised when inspecting reverse acting disk utilizing knife blade. If the knife edges become dull, the knife may not sever the disk. High overpressures may result.

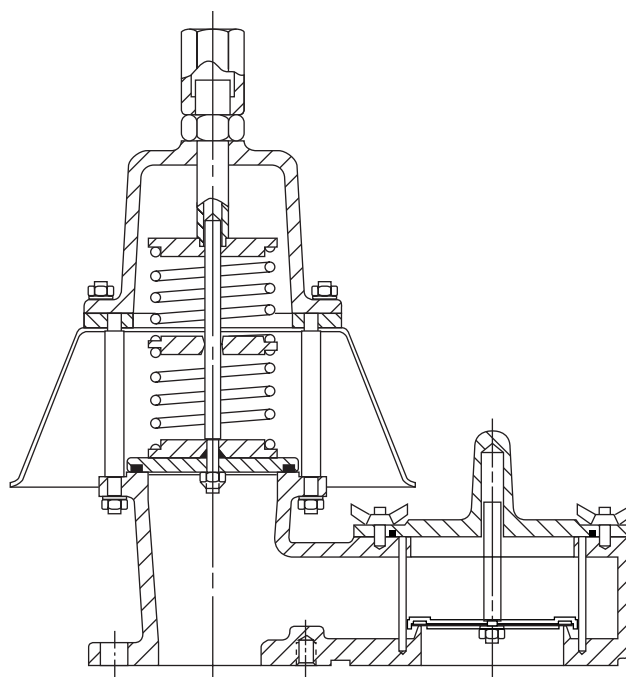


Figure 11—Spring-and Weight-Loaded Vent Valve

#### 4.9.1.5 Graphite Rupture Disk

A graphite rupture disk is manufactured from graphite impregnated with a binder material and designed to burst by bending or shearing (see Figure 17).

Graphite rupture disks are resistant to most acids, alkalis, and organic solvents. Operation to 70% of the rated burst pressure is generally permissible. A support may be required for disks that are rated 15 lbf/in.<sup>2</sup> (103 kPa) or less; a support also may be required under conditions of higher back pressure. Graphite rupture disks fragment upon rupture; provisions for capturing fragments may be required in certain applications.

#### 4.9.2 Applications

Rupture disk devices are sometimes used as follows:

- To protect the upstream side of pressure relief valves against corrosion by the system fluid.
- To protect pressure relief valves against plugging or clogging by viscous fluids or polymerization products.
- Instead of pressure relief valves if the protected system can tolerate process interruptions or loss of fluids in case the disk ruptures.
- Instead of pressure relief valves if extremely fast response is desirable.
- As secondary pressure-relieving devices when the difference between the operating pressure and the rupture pressure is large, depending on the type of rupture disk selected.



Figure 12—Rupture Disk Device—Rupture Disk in a Typical Holder

- f. To protect the downstream sides of pressure relief valves against downstream corrosion from headers or against atmospheric corrosion.
- g. To minimize process/product leakage and reduce fugitive emissions.

The proper receipt, storage, handling, and installation of a rupture disk are critical to its successful performance. Refer to the manufacturer's installation instructions, especially those concerning limits on bolt torque.

Some rupture disks using knife blades to open have failed to open properly. Consultation with the manufacturer concerning proper installation and maintenance of these kinds of rupture disks may be beneficial.

A pressure gauge, a try cock, a free vent, or a suitable tell-tale indicator must be inserted between a rupture disk device installed at the inlet of a pressure relief valve and the valve (see Figure 18), permitting the detection of disk rupture or leakage. Since rupture disks are designed to burst at a specified differential pressure, pressure build up on the downstream side of the disk may inhibit the disk's ability to provide overpressure protection. A rupture disk device must



Figure 13—Conventional Domed Rupture Disk

have full pipe area and must not fragment into the pressure relief valve inlet after the disk bursts. When a rupture disk device is used with a pressure relief valve, consult the ASME Code for the capacity reduction and installation details.

#### 4.9.3 Limitations

For prebulged metal rupture disks installed so that pressure acts against the concave side and for flat metal rupture disks, the operating pressure of the protected system is usually limited to 65-85% of the disk's predetermined bursting pressure. The exact percentage depends on the type of disk used.

The service life of prebulged metal rupture disks under normal operating conditions is usually one year. They are subject to relatively rapid creep stress failure, especially at high operating temperatures. If not replaced periodically, they may fail without warning at normal operating pressures.

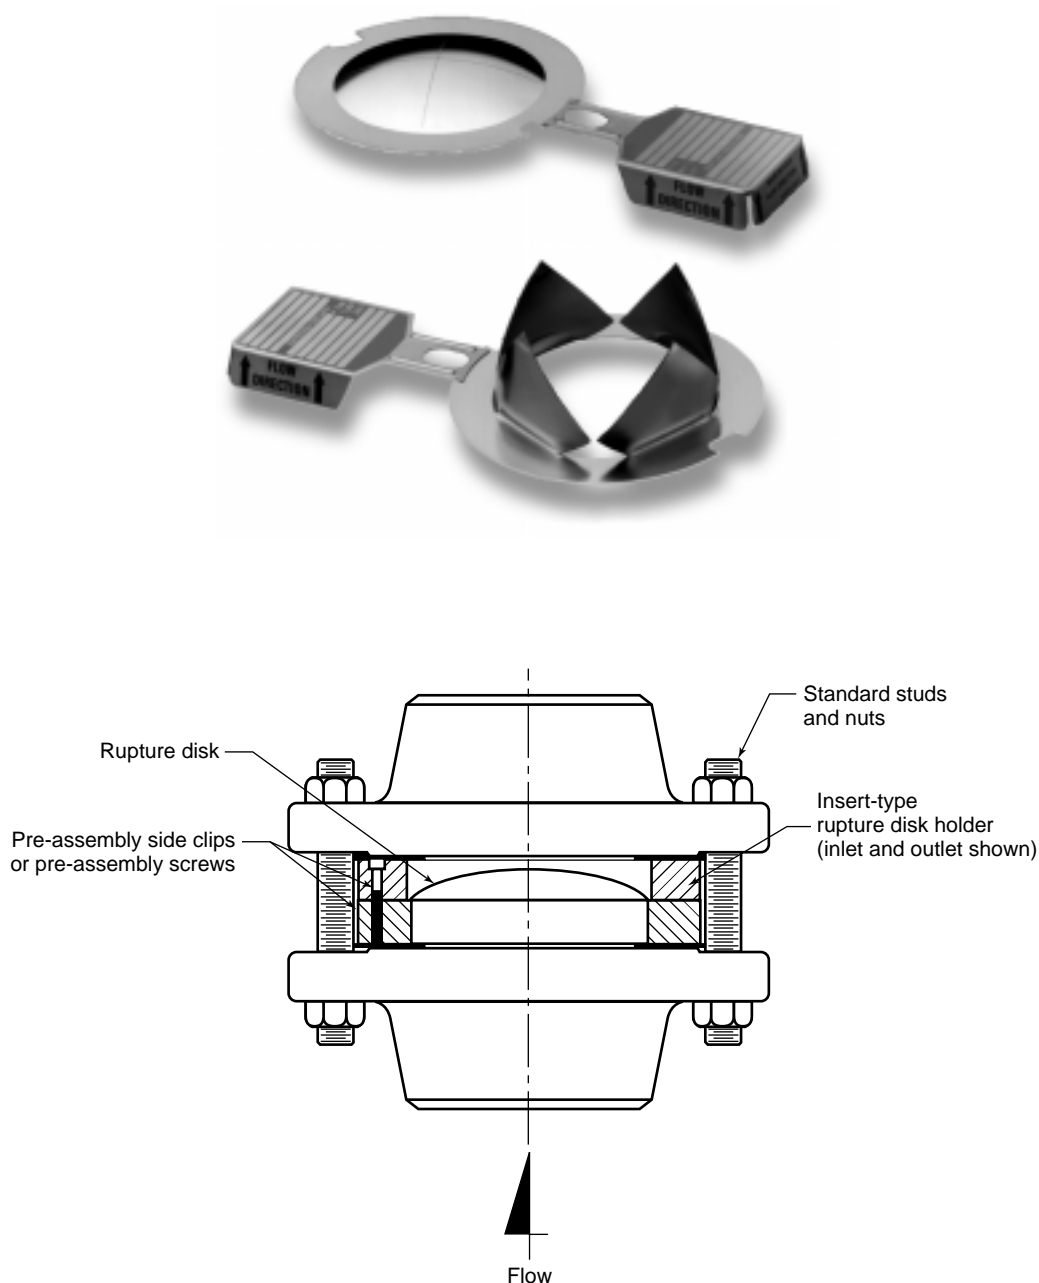


Figure 14—Scored Tension-Loaded Rupture Disk

Higher operating pressures (up to 90% of the disk design bursting pressure) are possible with the reverse-buckling disk. Less fatigue due to pulsating and cyclic operating pressure results in a longer service life than would be expected if the disk were installed with the pressure acting against the concave side. Most reverse-buckling disks should not be used in liquid full service. However, if an assured gas pocket rests against the disk and the disk manufacturer is consulted, liquid service can be considered. With finite lives, these disks should be replaced periodically. Consult the manufacturer for recommended replacement times.

Impervious graphite rupture disks offer nearly the same advantages and disadvantages as the reverse-buckling, metal type. However, with impervious graphite rupture disks, the piping arrangement may be more complicated (see 4.9.1.5), and uneven flange bolt loads or thermal strains in the piping may crack the disk.

Rupture disks that tend to fragment, such as conventional and graphite disks, are typically not installed beneath pressure relief valves unless a means of protecting the pressure relief valve inlet from the fragments is provided.

**CAUTION:** When rupture disks are removed for inspection or when an accompanying relief valve is serviced, the disks can easily be damaged and can fail prematurely if reused. Replacement of disks at every maintenance interval will minimize the chance of damage and premature failure.

## 5 Causes of Improper Performance

### 5.1 CORROSION

Nearly all types of corrosion are present in refinery and chemical plant services. Corrosion is a basic cause of many of the difficulties encountered with pressure relief devices. Corrosion often appears as: pitted or broken valve parts, deposits of corrosive residue that interfere with the operation of the moving parts, or a general deterioration of the material of the relieving device. Figures 19 through 25 illustrate the effects of corrosion on relief devices. In addition to internal parts, exposed studs are vulnerable to environmental corrosion attack.

Corrosion can usually be slowed or stopped by the selection of more suitable devices or device materials. Proper maintenance is also a consideration since a leaking valve allows fluids to circulate in the upper parts of the valve, which can contribute to the corrosion of its movable parts. Protective coatings as shown in Figure 26 may offer protection against corrosion in some services.

In certain applications, a rupture disk device installed on the inlet or outlet of a pressure relief valve can provide added corrosion protection of the valve internals.

In many instances, valves of different construction can avoid, reduce, or even completely contain the effects of corrosion. The use of an O-ring seat in a pressure relief valve will sometimes stop leakage past the seating surface and eliminate corrosion in the valve's working parts (see Figure 3). However, O-ring elastomers may have a limited life under stress due to degradation caused by temperature, aging, or swelling. A bellows seal can be used to protect the spring bonnet cavity and the discharge side of the valve from the corrosive lading fluid. (see Figure 5).

### 5.2 DAMAGED SEATING SURFACES

Because differential loading must be small to prevent leakage of the lading fluid, an optical precision on the order of 3 light beads/bands [0.0000348 in. (0.0008838 mm)] must be maintained in the flatness of seating surfaces on metal-seated pressure relief valves (see API Std 527). Any imperfection in these seating surfaces will contribute to improper valve action in service.

There are many causes of damaged valve seats in refinery or chemical plant service, including the following:

- a. Corrosion.
- b. Foreign particles that get into the valve inlet and pass through the valve when it opens, such as mill scale, welding

spatter or slag, corrosive deposits, coke, or dirt. The particles may damage the seat contact required for tightness in most pressure relief valves. The damage can occur either in the shop during maintenance of the valve or while the valve is in service.

- c. Improper or lengthy piping to the valve inlet or obstructions in the line. These can cause a valve to chatter. The pressure under the seat may become great enough to open the valve. However, as soon as the flow is established, the built-up pressure drop in the connecting piping may be so great that the pressure under the seat falls and allows the valve to close. A cycle of opening and closing may develop, become rapid, and subject the valve seating surfaces to severe hammering, which damages the seating surfaces, sometimes beyond repair. Figures 27 and 28 show seating surfaces damaged by chattering and frequent fluctuations of pressure.

- d. Careless handling during maintenance, such as bumping, dropping, jarring, or scratching of the valve parts.

- e. Leakage past the seating surfaces of a valve after it has been installed. This leakage contributes to seat damage by causing erosion (wire drawing) or corrosion of the seating surface and thus aggravating itself. It may be due to improper maintenance or installation such as misalignment of the parts, piping strains resulting from improper support, or complete lack of support of discharge piping. Other common causes of this leakage are improper alignment of the spindle, improper fitting of the springs to the spring washers, and improper bearing between the spring washers and their respective bearing contacts or between the spindle and disk or disk holder. Spindles should be checked visually for straightness. Springs and spring washers should be kept together as a spring assembly during the life of the spring. Seat leakage may also result from the operating pressure being too close to the set pressure of the valve.

- f. Improper blowdown ring settings. These can cause chattering in pressure relief valves. The relief valve manufacturer should be contacted for specific blowdown ring settings for liquid service and for vapor service.

- g. Severe oversizing of the pressure relief valve for the relief loads encountered can cause the valve to close abruptly, resulting in disc and nozzle seating surface damage.

### 5.3 FAILED SPRINGS

Spring failure occurs in two forms. The first is a weakening of the spring, which causes a reduction in set pressure and the possibility of premature opening. The second is a total failure (complete break) of the spring, which causes uncontrolled valve opening.

Although springs may weaken and fail due to the use of improper materials in high temperature service, failed springs are almost always caused by corrosion. Surface corrosion and stress corrosion cracking are the most prevalent of this type of failure in refineries.

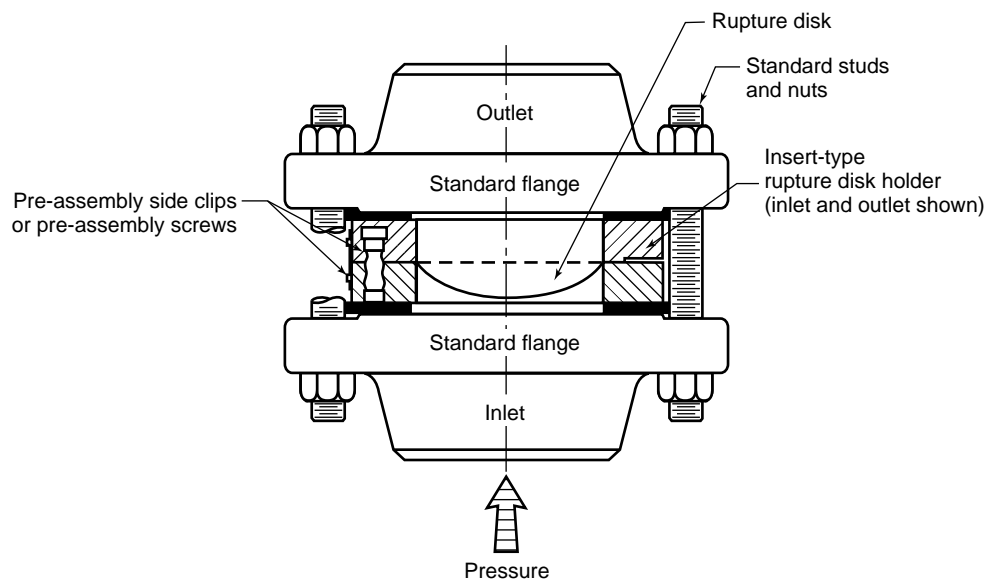


Figure 15—Reverse-Acting Scored Rupture Disk



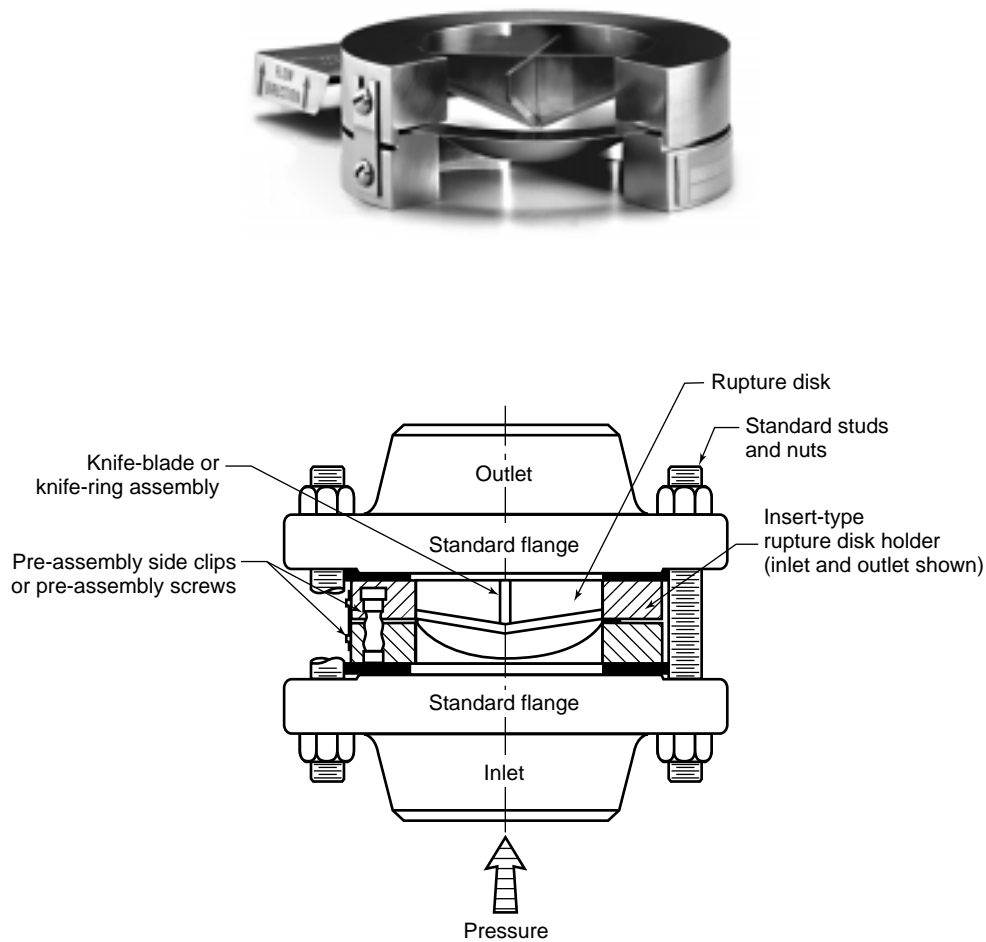


Figure 16—Reverse-Acting Rupture Disk with Knife Blades

Surface corrosion attacks the spring surface until the cross-sectional area is not sufficient to provide the necessary closing force. It may also produce pits that act as stress risers and cause cracks in the spring surface and subsequent spring failure (see Figure 29).

Stress corrosion cracking sometimes causes rapid spring failure. It is especially insidious because it is very difficult to detect before the spring breaks. A brittle-type spring failure due to stress corrosion cracking is shown in Figure 30. Hydrogen sulfide ( $H_2S$ ) frequently causes stress-corrosion cracking of springs (see NACE Standard MR0175 for material recommendations and guidance). Consult the manufacturer to select an appropriate spring in susceptible applications since the material strength, hardness and heat treatment of the spring can affect its resistance to stress corrosion cracking.

Where corrosion prevails, three courses of preventive action may be taken:

- A spring material that will satisfactorily resist the action of the corrosive agent may be used.
- The spring may be isolated by a bellows. Certain pilot-operated pressure relief valves have diaphragms or pistons that isolate the pilot spring from the process.
- The spring may be specially coated with a corrosion-resistant coating that can withstand the operating temperature and environment.

#### 5.4 IMPROPER SETTING AND ADJUSTMENT

Manuals provided by the valve manufacturer help eliminate improper setting and adjustment by indicating how to adjust their valves for temperature, back pressure, and other factors.



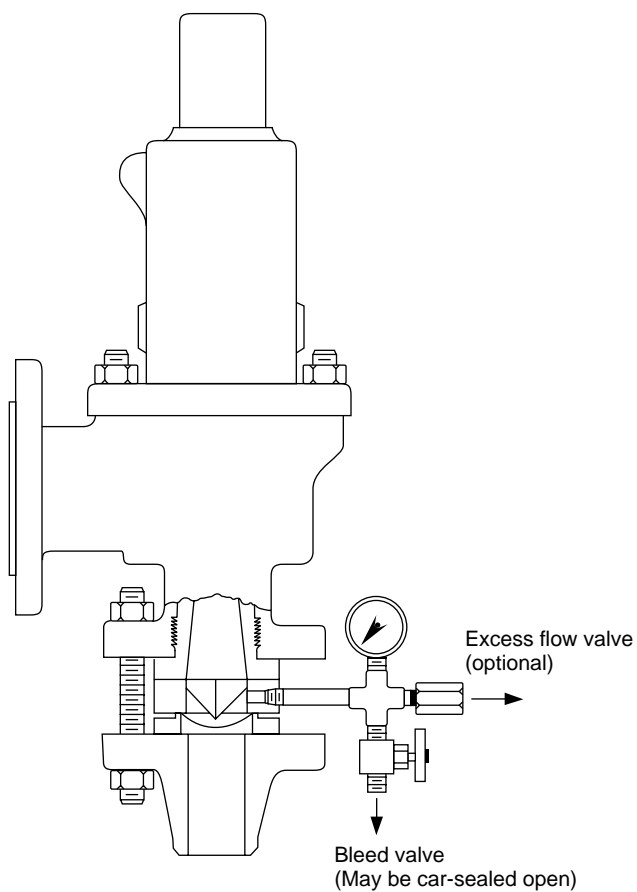


Figure 18—Combination of Reverse-Buckling Disk Assembly and Safety Relief Valve

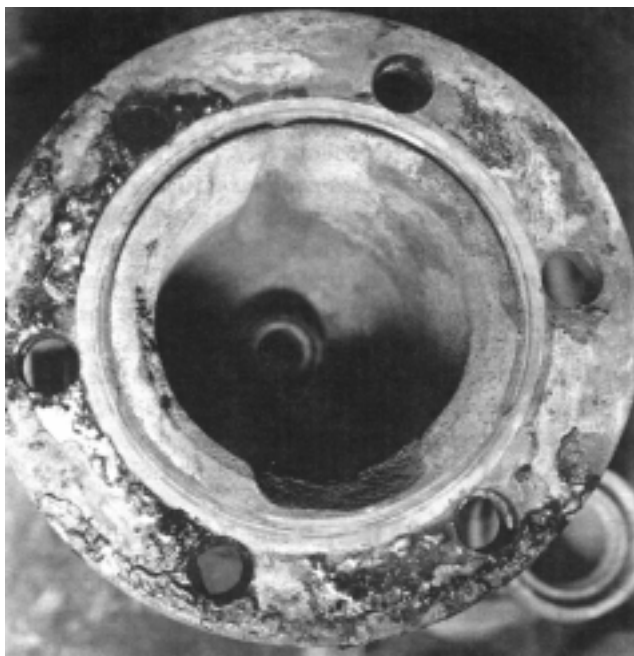


Figure 19—Acid Corrosion in Carbon-Steel Bonnet Caused by Leaking Seating Surfaces

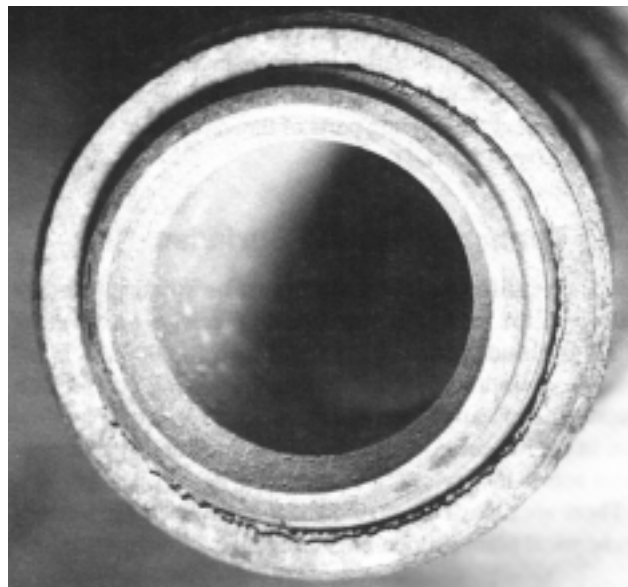


Figure 20—Acid Corrosion on 18Cr-8Ni Steel Inlet Nozzle



Figure 21—Chloride Corrosion on 18Cr-8Ni Steel Nozzle (with Machined Seating Surface)

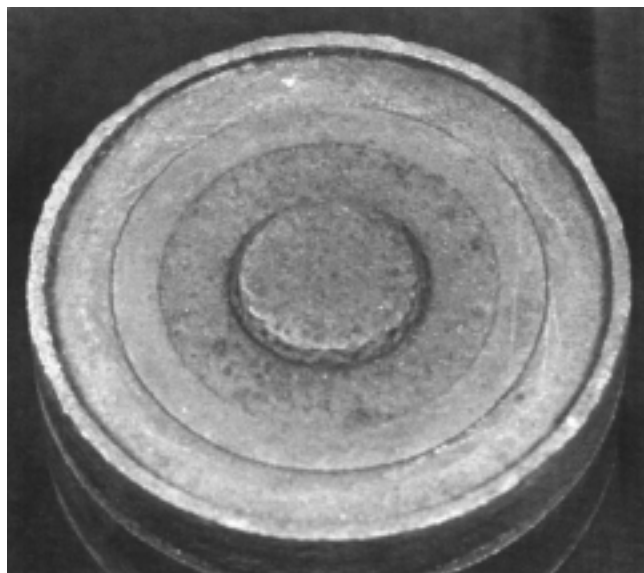


Figure 22—Sulfide Corrosion on Carbon-Steel Disk From Crude-Oil Distillation Unit

the set pressure and the reseating pressure—or valve blow-down and simmer, depending on the design of the valve being tested. Because the density and expansion characteristics of material handled through pressure relief valves are variable and the volume of testing facilities is limited, it is usually impractical to adjust the valve rings on a maintenance shop test block. The rings should therefore be adjusted to obtain a



Figure 23—Chloride Attack on 18Cr-8Ni Steel Disk

pop on the valve test drum and then inspected and readjusted for proper blowdown according to the manufacturer's recommendation. This should permit the best average performance characteristics of the valve when installed. For liquid or vapor service, the relief valve manufacturer should be contacted regarding the proper blowdown ring settings. Full understanding of terminology is important (see ASME PTC 25).

## 5.5 PLUGGING AND STICKING

In refinery and petrochemical services, process solids such as coke or solidified products can sometimes plug various parts of the valve and connected piping. Additionally monomer service can lead to polymer formation and plugging. Extreme cases of fouling are illustrated by Figure 31, which shows the inlet nozzle of a valve plugged solid by a mixture of coke and catalyst, and Figure 32, which shows the outlet nozzle of a valve plugged with deposits from other valves that discharge into a common discharge header. Fouling of a lesser degree, as shown in Figures 33 and 34, is also likely to impede valve operation. All valve parts, particularly guiding surfaces, should be checked thoroughly for any type of fouling. Lubricate all load bearing surfaces such as spindle to disk holder, spring buttons to spindle, disk to disk holder and threads with a lubricant that is compatible with the process materials and service temperatures.



Figure 24—Pit-Type Corrosion on 18Cr-8Ni Steel (Type 316) Bellows



Figure 25—Monel Rupture Disks Corroded in Sour-Gas Service

Valve malfunction may also be due to sticking of the disk or disk holder in the guide which may be caused by corrosion or galling of the metal or by foreign particles in the guiding surfaces. Foreign particles in the guiding surfaces tend to roll metal up, causing severe galling. The use of a bellows can keep the foreign particles away from the guiding surfaces. Sticking of valves can also result from machining of valve parts outside the manufacturer's tolerance limits. Figure 35 shows a disk that is frozen in the guide as a result of corrosion in sour gas service. If corrosion is the cause of the sticking, three possible cures are available. First, the use of a bellows can protect moving parts from the corrosive substance, especially in closed systems (see Figure 4). Second, an O-ring seat (see Figure 3) can seal the guiding surfaces from the lading fluid until a relief cycle occurs. Third, the use of a rupture



Figure 27—Seating Surface of Disk Deformed by Chattering

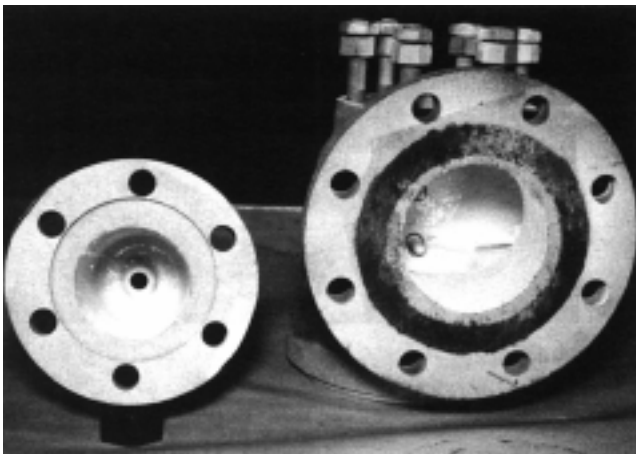


Figure 26—Body and Bonnet Coated With Epoxy for Corrosion Protection

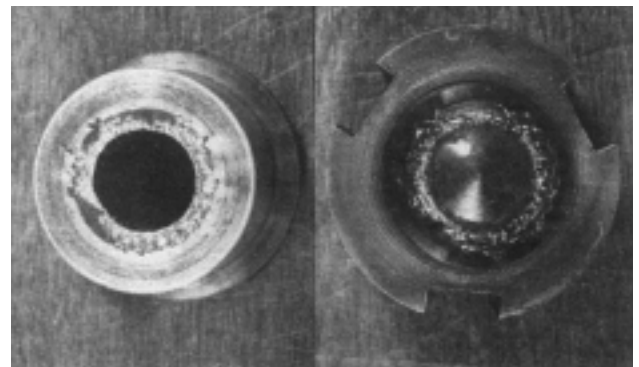


Figure 28—Seat and Disk Damaged by Frequent Operation of Valve Set Too Close to Operating Pressure



Figure 29—Spring Failure Due to Corrosion

disk on the valve inlet will isolate the valve internals from the upstream process material.

When galling of the metal in the guiding surfaces is not due to corrosion or foreign particles, it is often due to valve chatter or flutter caused by improper piping at the valve inlet or outlet or by severe oversizing of the valve. Correction of improper piping at the valve inlet or outlet will usually stop galling. Improper finishing of the guiding surfaces can also cause galling caused by chatter or flutter. To reduce the chances of galling, they should be polished until they are as smooth as possible. Varying the materials and hardness of the contacting parts until the best combinations are found may minimize galling. Consult valve manufacturer for recommendations.

Sticking of pressure relief valves may also be caused by poor alignment of the valve disk, which is usually due to debris on the contact surface between the guide and the body of the valve, or misalignment of a gasket at assembly (see Part II of API RP 520).

## 5.6 MISAPPLICATION OF MATERIALS

In general, the temperature, pressure, corrosion resistance requirements and the atmospheric conditions of the service determine the materials required for a pressure-relieving device in a given service. The selection of standard valves that meet those requirements and are appropriate for those conditions is advisable. Occasionally, however, severe corrosion or unusual pressure or temperature conditions in the process require special consideration. Manufacturers can usually

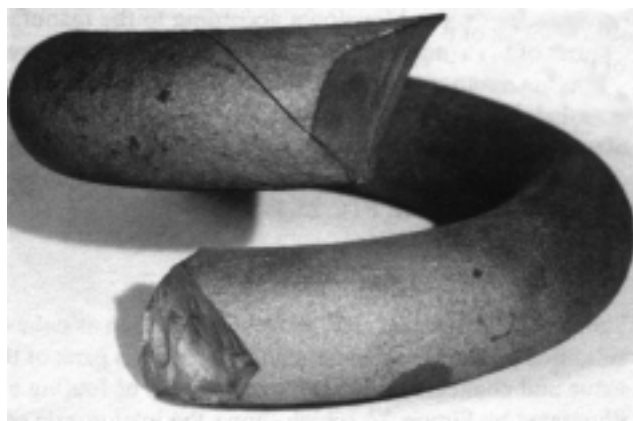


Figure 30—Spring Failure Due to Stress Corrosion

supply valve designs and materials that suit special services. Catalogs show a wide choice of special materials and accessory options for various chemical and temperature conditions. Addition of a rupture disk device at the inlet or outlet may help prevent corrosion.

The hydrogen sulfide ( $H_2S$ ) attack on the carbon steel spring in Figure 22 and the chloride attack on the 18Cr-8Ni steel disk in Figure 23 exemplify the results of the misapplication of materials. Where service experience indicates that a selected valve type or material is not suitable for a given service condition, an immediate correction that will ensure dependable operation should be made. Great care should be taken to record the identity of special materials and the locations requiring them. An adequate system of records should provide the information needed for the repair or reconditioning of valves in special service and for developing optimum purchase specifications.

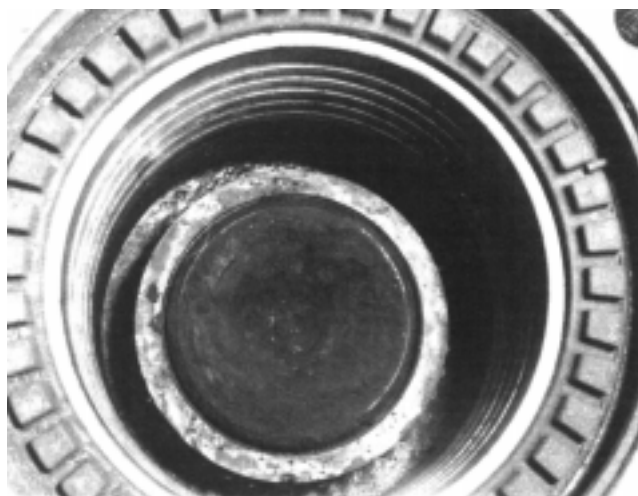


Figure 31—Inlet Nozzle Plugged with Coke and Catalyst After Nine Months in Reactor Vapor Line

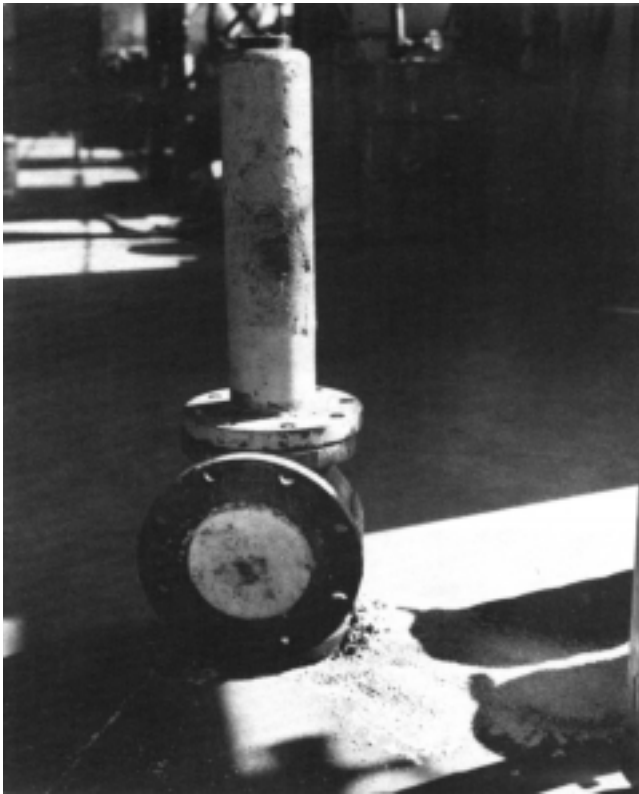


Figure 32—Outlet Valve Plugged with Deposits From Other Valves in Common Discharge Header

### 5.7 IMPROPER LOCATION, HISTORY, OR IDENTIFICATION

If not installed at the exact location for which it was intended a pressure relief valve might not provide the proper protection. To assist in the identification of valves and to provide information necessary for correct repairs and installation, a comprehensive set of specification and historical records should be maintained and referred to when valves are removed for inspection and repair. Most pressure relief valves have an identifying serial or shop number placed on the valve by the manufacturer or an identifying number tagged, stamped, or otherwise placed on the valve by the user. Some users also stamp mating pipe flanges with device numbers. This identification specifies the location of the valve and, by reference to the specification record, its limitations and construction (see Section 7).

### 5.8 ROUGH HANDLING

Because of the difficulty in obtaining absolute tightness in most pressure-relieving devices, valves are manufactured according to a commercial tightness standard (see API Std 527). Valves are checked for tightness in the manufacturer's plant before they are shipped to the user. Valve tightness is sometimes checked by the user in the maintenance shop



Figure 33—Moving Parts of Valve Fouled with Iron Sulfide ( $\text{FeS}_2$ )

before initial use and usually checked after subsequent cleaning, repairing, or testing. Subsequent rough handling of the valve, however, can change the set pressure, damage lifting levers, damage tubing and tubing fittings, damage pilot assemblies or cause internal or external leakage when the valve is in service. Rough handling can occur during shipment, maintenance, or installation.

#### 5.8.1 During Shipment

Because of their operation, most pressure relief valves have a sturdy appearance that may obscure the fact that they are delicate instruments with very close tolerances and sensitive dimensions. Accordingly, commercial carriers sometimes subject them to rough handling. This may cause a valve to leak excessively in service or during testing. This rough handling may also expose the valve inlet to dirt or other foreign particles that could damage the valve seating surface the first time the valve opens and cause leakage thereafter.

Pressure relief valves should be shipped in an upright position—this is especially true of large valves and valves with low set pressures. When large, low-pressure valves are allowed to lie on their sides, the springs may not exert the same force all around the seating surfaces.



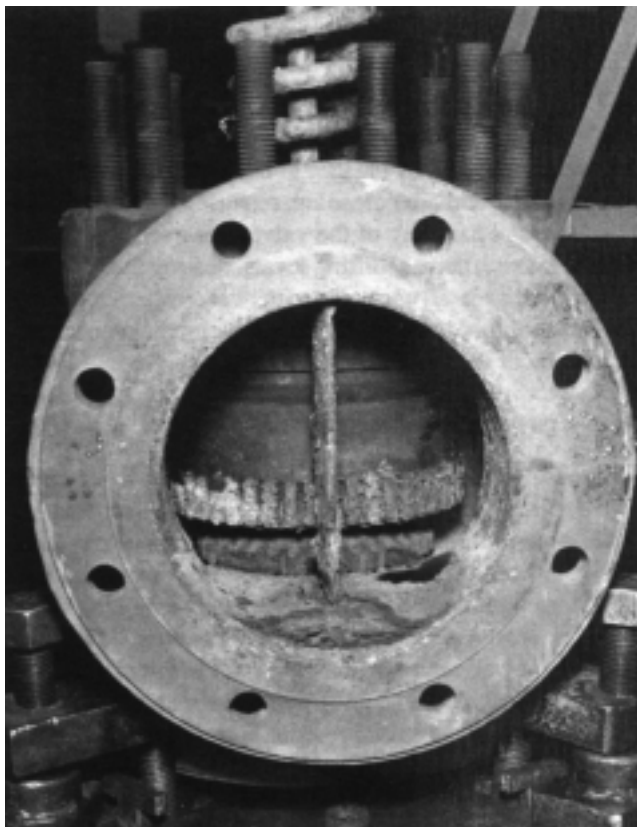


Figure 34—Valve Stuck Because of Iron Sulfide ( $\text{FeS}_2$ ) Deposits



Figure 35—Disk Frozen in Guide Because of Buildup of Products of Corrosion in Sour-Oil Vapor Service



Figure 36—Rough Handling of Valves Should Be Avoided

### 5.8.2 During Maintenance

Pressure relief valve parts are usually precision items manufactured to extremely close tolerances. Rough handling can degrade these tolerances. Rough handling can also destroy the basic valve alignment on which the fine, exacting performance characteristics of the device primarily depend. Careful handling of the valve during all phases of maintenance is important. Both before and after repairs, rough handling of the completely assembled valve should be avoided. Before the valves leave the shop, valve inlets and outlets should be covered.

Rough handling during maintenance includes application of excessive back pressure, which should not be applied to a bellows valve during a maintenance-related test.

### 5.8.3 During Installation

Valve inlets and outlets should have been covered before the valves left the shop. If they were not covered when received for installation, provisions should be made to ensure that in the future they are covered before leaving the shop.

Pressure relief valves should be transported in an upright position.

Rough handling of a pressure relief valve by personnel during installation may cause poor valve performance in service. Bumping or dropping the valve should be carefully avoided. The valves shown in Figure 36 were dropped from the bed of a truck after being repaired. As a result, they leaked once they were installed.

## 5.9 IMPROPER DIFFERENTIAL BETWEEN OPERATING AND SET PRESSURES

The differential between operating and set pressures provides seat loading to keep the pressure relief valve tightly closed. Due to a variety of service conditions and valve designs, only general guidelines can be given for designing a system. NB-23 and Sections VI and VII of the ASME Code are useful references. However, individual applications and experience must ultimately be relied on. Although greater differentials between operating and set pressures promote trouble-free



operation, they may also increase the cost of the equipment. Inspections should record operating experience and provide feedback to be considered in future design and remedial action.

## 5.10 IMPROPER DISCHARGE PIPING TEST PROCEDURES

When hydrostatic tests of discharge piping are performed, blinds must be installed. Otherwise, results such as the following might occur:

- The disk, spring, and body area on the discharge side of the valve are fouled.
- The bellows of a balanced relief valve are damaged by excessive back pressure.
- The dome area and/or pilot assembly of a pilot-operated pressure relief valve are fouled and damaged by the backflow of fluid.

## 6 Inspection and Testing

### 6.1 REASONS FOR INSPECTION

Pressure-relieving devices are installed on process equipment to release excess pressure due to operational upsets, external fires, and other hazards. These hazards are discussed in API RP 520 and API RP 521. Failure of pressure-relieving devices to function properly when needed could result in the overpressure of the vessels, exchangers, boilers, or other equipment they were installed to protect. A properly designed, applied, and installed pressure-relieving device that is maintained in good operating condition is essential to the safety of personnel and the protection of equipment during abnormal circumstances. One of the principal reasons for inspecting pressure-relieving devices is to ensure that they will provide this protection.

Inspections of pressure relief devices must determine the general physical and operating conditions of the devices, and ensure that their performance meets the requirements for a given installation. In making this determination, two types of inspections can be used. They are "shop inspection/overhauls", and "visual on-stream inspections". Pre- and post-testing of the pressure-relieving device should be included in the "shop inspection/overhaul". Each is discussed in the following sections.

### 6.2 SHOP INSPECTION/OVERHAUL

Periodically, pressure relief devices will be removed, disassembled, and inspected. These inspections are referred to as "shop inspection/overhaul" (although some, if not all of the work can be performed in the field). Also, while the device is removed, inlet and outlet piping should be inspected for the

presence of internal deposits, and records should be kept of their condition. If heavy fouling is observed, the piping should be cleaned. If necessary, piping should be dismantled for inspection and cleaning.

#### 6.2.1 Safety

Before inspection and any repairs on pressure-relieving devices are executed, general precautions should be taken to maintain the safety of the equipment protected by the devices, especially if the equipment is in operation. When inspection and repairs on an operating unit are required, the unit operations should be normal and the proper authority and permits for the work should be obtained.

Some pressure-relieving valves have set pressures that exceed their outlet flange rating. If these valves are equipped with outlet block valves, the pressure relief valve inlet block valve should be closed before the outlet valve is closed. Also, the pressure relief valve body must be vented immediately after the outlet isolation block valve is closed. This prevents high pressures from the pressure relief valve inlet from possibly overpressuring the pressure relief valve body. Similar caution must be exercised when installing a blind in the pressure relief valve outlet. Installation of drain valves between the inlet and outlet block valves and the pressure relief valve may be considered.

Before disconnecting pressure-relieving devices, the connected piping and block valves should be checked to ensure that they are sufficiently supported. After reinstalling pressure relief valves, the related piping should be checked to ensure that it is not imposing loads that would cause problems with the pressure relief valve body such as distortion leading to in-service leakage.

Some devices may trap hazardous toxic process material in bonnet cavities or dome cavities. Special steps during decontamination should be taken to minimize exposure of shop personnel.

#### 6.2.2 Valve Identification

To minimize errors in the testing and handling of pressure relief valves, each should carry an identifying tag, stencil, plate, or other means to show its company equipment number. This number allows ready identification of the device's unit, the equipment that the device should be installed on, the device's set pressure, and the date of its last test (see Figure 37 for an example of an identifying tag). If a relief device cannot already be easily and correctly identified by a marking on it, it should be marked and identified as described above before it is removed from its equipment. Also see ASME Section VIII, Division 1, paragraph UG-129 for instructions on marking nameplates of pressure relieving devices.

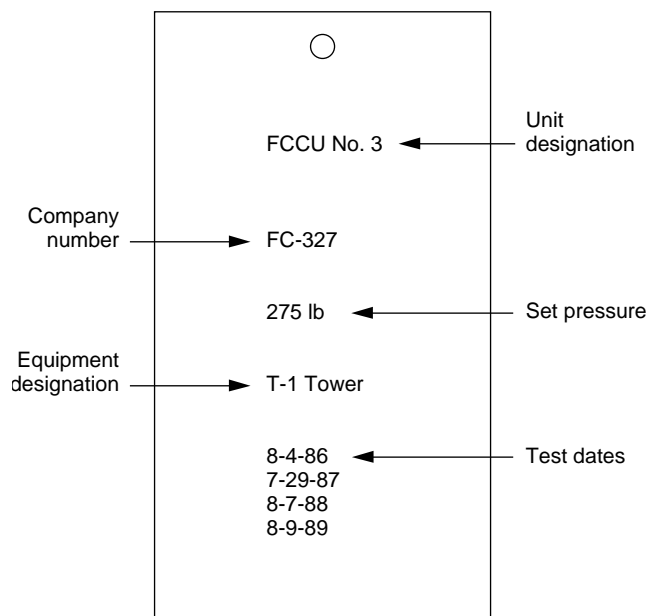


Figure 37—Identification Tag for Pressure-Relieving Device

### 6.2.3 Operating Conditions Noted

An operating history of each pressure relief valve since its last inspection should be obtained and should include pertinent information such as:

- Information on upsets and their effect on the valve.
- The extent of any leakage while in service.
- Any other evidence of malfunctioning.

In addition, records of valve performance during previous runs should be checked to determine whether changes are needed in the valve materials or components or in the inspection interval.

### 6.2.4 Removal of Device from System in Operation

**CAUTION:** The removal of a pressure relief valve from equipment in operation should be planned to minimize its duration. Relief devices are safety devices and should be treated as such. The precautionary steps in 6.2.1 should be followed.

Before a pressure relief valve is inspected and/or repaired while equipment is in operation, the following precautions should be taken:

- Only an authorized person should isolate a relief device by closing any adjacent block valves upstream or downstream.

(See ASME Section VIII, Appendix M). This may require providing or identifying alternate relief protection.

- The space between the relief device and any adjacent block valve should be vented to a safe location to release trapped lading fluid and to determine whether the block valve is holding.

- If a block valve is not installed on the downstream side of a relief device discharging into a common header, a blind or other suitable means should be provided to prevent discharge through the open outlet pipe in case one of the other relief devices opens.

- A blind should be inserted between the pressure relief valve and any adjacent upstream block valve before a pressure relief valve is inspected or repaired in place. If the pressure relief valve discharges into a common discharge header, a blind should be installed between the pressure relief valve and the header.

- If there is a rupture disk device associated with the pressure relief valve and the rupture disk device is disturbed as part of the accompanying relief valve removal, consider the need to install a new rupture disk since the disk could easily be damaged and could fail prematurely if reused.

- All blinds should be removed after the relief device has been inspected, repaired or replaced. The block valves on the inlet and outlet should be opened and locked or sealed in that position. Figure 38 shows a pressure relief valve installation with the block valves sealed open. When used with a relief device, these block valves must have full pipe area through them to prevent flow restriction and possible instability when the relief device opens. In cases where there are in-situ spare pressure relief valves, the outlet side should be protected from an inlet leak through overpressure. The inlet block valve of the spare valve should be closed. The outlet block valve could be locked open, or positive means of venting could be provided, if the outlet is shut.

### 6.2.5 Initial Inspection

Many types of deposits or corrosion products in a pressure relief valve may be loose and may drop out during transportation of the valve to the shop for inspection, testing, maintenance, and resetting. As soon as a valve has been removed from the system, a visual inspection should be made. Figure 39 shows sulfur deposits in a valve. When fouling is a frequent problem, it may be prudent to collect samples for testing and to record deposit locations and appearances. Any obstructions in the valve should be recorded and removed.

**CAUTION:** Valves that have been exposed to materials hazardous to humans or that may contain material that could be an auto-ignition source should be handled with special precautions. Some precautions follow:

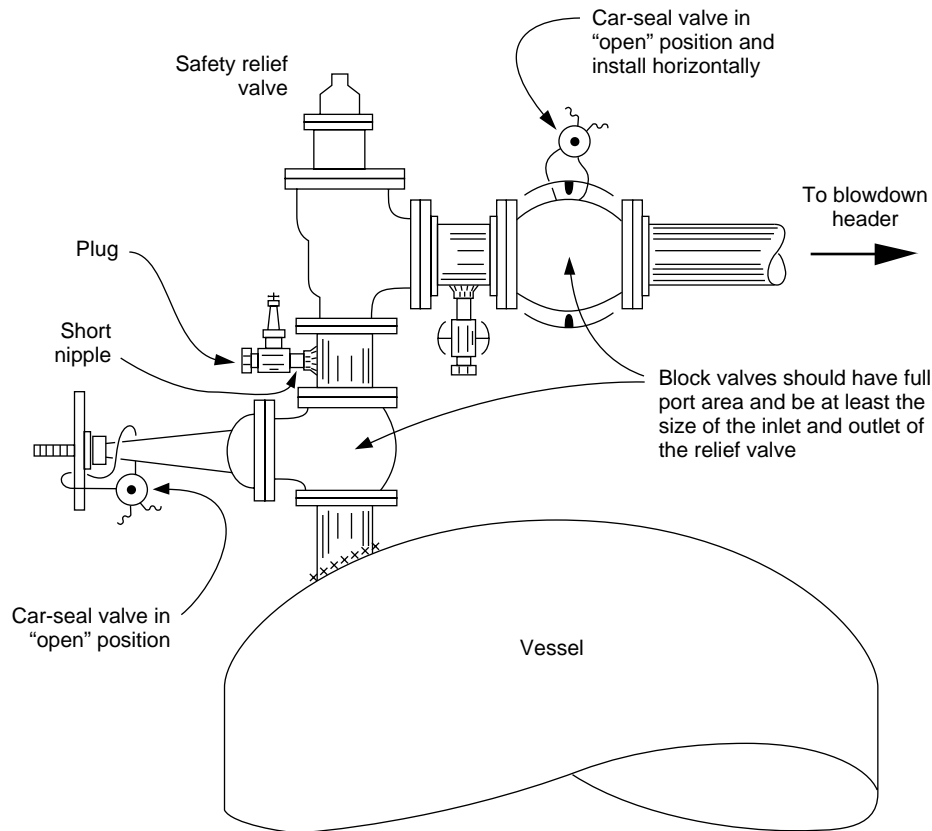


Figure 38—Block Valves on Safety-Relief-Valve Inlet and Outlet Sealed Open and Bleeders Installed to Depressure Inlet and Outlet

- a. Evaluate the potential for the valve to contain pyrophoric or reactive materials and determine the appropriate precautions for the material involved.
- b. Valves in hydrofluoric acid (HF) service must be correctly neutralized immediately after removal. Even after neutralization, the safety precautions indicated by the material safety data sheets and other appropriate sources of handling information must be taken.

Rupture disks are sometimes used to protect other pressure-relieving devices from corrosion. Normally in this case, a rupture disk cannot be inspected without being removed. Therefore, inspection of the disk should be part of the routine developed for inspection of the pressure relief valve (see 6.2.21).

### 6.2.6 Inspection of Adjacent Inlet and Outlet Piping

When a pressure relief valve is removed from service, the upstream and downstream piping is often open and available for inspection. However, where block valves are closed to enable removal of relief devices from equipment during oper-

ation, it is usually impossible to directly inspect this piping. It should instead be directly inspected once the operating equipment is out of service. Before then, radiographs of the piping can indicate any major fouling or stoppage.

Inspection of the piping at the pressure relief valve will often indicate the condition of the process piping whose interior is not visible. Piping should be checked for corrosion, indications of thinning, and deposits that could interfere with valve operation. The character of the deposits may indicate the cause of any leakage from the valve in a closed system. Figures 31 through 35 and Figure 39 show fouling deposits in pressure relief valves.

### 6.2.7 Transportation of Valves to Shop

After a pressure relief valve is removed from its installation, it should be transported to the shop for inspection, testing, maintenance, and resetting. Before moving the valve, flange faces on the valve (and flanges on the piping) should be protected so that gasket faces are not damaged. The valves should be transported in the upright position. Large valves should be handled with suitable rigging equipment to prevent



Figure 39—Sulfur Deposits in Body of Valve on Way to Repair Shop

them from being dropped or roughly handled. Upon arrival at the shop, the valves should not be handled or stored in a careless manner. Caution should be taken to ensure rigging doesn't damage auxiliary piping and pilot assemblies. Where practical, pressure relief valves should be segregated and stored in an upright position away from heavy pipe fittings or other types of valves.

**CAUTION:** Because rough handling can change the pressure setting of a pressure relief valve or deform its parts so that they cannot be set properly, careful handling in transit is very important. Damage to pressure relief valves during transportation to the shop may result in an inaccurate "as received" pop pressure test. Pressure relief valves should be treated as

delicate instruments because their accurate functioning is critical to safe plant operation.

### 6.2.8 Determining "As Received" Pop Pressure

Check that the seals are intact on the pressure set screw cover and blowdown ring screw cover. Before the valve is dismantled, the pop pressure of the valve when removed from service should be obtained. Generally the pressure relief valve is mounted on the test block, and the inlet pressure is slowly increased. The pressure at which the valve relieves is recorded as the "as received" pop pressure.

Typically, the inlet pressure is not increased beyond 150% of the pressure relief valve set pressure.

If initially the valve opens at the cold differential test pressure, CDTP, no further testing to determine the "as received" pop pressure is needed. If the initial pop is at a pressure higher than the CDTP, the valve should be tested a second time. If it then pops near the CDTP, the valve probably did not originally pop at the CDTP because of deposits. If instead on the second try the valve does not pop within the tolerances allowed by the ASME Code, either the valve setting was originally in error or it changed during operation. Pressure relief valves that do not pop at inlet pressures of up to 150% of CDTP should be considered as stuck shut. If the initial pop is at a pressure lower than the CDTP, either the spring has become weakened, the valve was set improperly at its last testing or the setting changed during operation. It is the first test that is recorded as the "as received" pop pressure. This "as received" pop pressure is used in determining the inspection interval.

**CAUTION:** If the valve is extremely fouled and dirty when received and the "as received" popping of the valve may damage the valve's seats, the user may waive the "as received" test and instead reduce the inspection interval. After reducing the valve's inspection interval, the valve should be clean at the next inspection. If it is not clean, the inspection interval should again be shortened or other measures should be taken to reduce the fouling.

### 6.2.9 Visual Inspection

After the "as received" pop test, a valve should be visually inspected to estimate its condition when removed from service. This inspection should be made by the shop's pressure relief valve repair mechanic unless unusual corrosion, deposits, or conditions are noted in the pressure relief valve (see first Caution that follows). The results of this inspection should be noted on appropriate forms. Points that should be checked include:

- a. The flanges, for evidence of pitting, roughening, or decreases in the width of seating surfaces.
- b. The springs, for evidence of corrosion or cracking and for the correct pressure range at the valve's operating pressure and temperature.
- c. If the valve is of the bellows type, the bellows for evidence of corrosion, cracking or deformation.
- d. The positions of the set screws and openings in the bonnet.
- e. The inlet and outlet nozzles, for evidence of deposits of foreign material or corrosion.
- f. The external surfaces, for any indication of a corrosive atmosphere or of mechanical damage.
- g. The body wall thickness.
- h. Valve components and materials, for a match with the information on the identification tag and specification card.
- i. The pilots and associated parts.

**CAUTION:** When unusual corrosion, deposits, or conditions are noted in the pressure relief valve, an inspector should assist in the inspection.

**CAUTION:** If the pressure relief valve is from equipment handling hazardous materials, caution should be exercised during the inspection.

### 6.2.10 Dismantling of Valve

After the valve is received and its testing and initial external inspection is completed, it may require dismantling for a thorough shop inspection and repair. If the valve has been tested at the appropriate API 510 interval, per the guidance for determining the “as received” pop pressure described in 6.2.8, and the results of the “as received” test show that the valve tests properly, disassembly of the valve for further inspection is not required.

When appropriate, valves should be carefully dismantled in accordance with the manufacturer's manuals and recommendations. Before dismantling valves in light hydrocarbon service, thoroughly clean the valve with a solution recommended by chemical cleaning agencies whose chemicals are compatible with the valve material to avoid a flash due to sparks created by the dismantling operations. The pilot assembly and dome area of pilot-operated pressure relief valves in liquid service could be filled with process fluid, therefore added precautions should be taken during disassembly. Proper facilities should be available for segregation of the valve parts as the valve is dismantled. At each stage in the dismantling process, the various parts of the valve should be visually inspected for evidence of wear and corrosion. The valve stem, guide, disk, and nozzle require visual inspection. The bellows in balanced valves should be checked for cracks or other failures that may affect performance (see Figure 24).

### 6.2.11 Cleaning and Inspection of Parts

To keep the parts of each valve separate from those of other valves, the valve parts should be properly marked, segregated, and cleaned thoroughly. The valve parts that most often require cleaning are the nozzles, springs, and seats. Deposits that are difficult to remove should be cleaned with solvents, brushed with wire, glass bead blasted or carefully scraped.

After being cleaned, check each part carefully with the proper equipment for measuring valve dimensions, with frequent reference to the proper drawings and literature.

The components should be checked for wear and corrosion. Seating surfaces on the disk and nozzle should be inspected for roughness or damage (see Figures 27 and 28), which might result in valve leakage. They should also be checked with appropriate seat gauges to assure that neither wear nor previous machining has caused the seat dimensions to exceed the manufacturer's tolerances. Seat flatness can be checked with suitable lap rings recommended by the manufacturer, optical flats, or other suitable inspection devices. If the appropriate equipment is available, the springs should be checked for the proper force. The springs should also be checked for cracking or deformation. The fit between the guide and disk or disk holder should be checked for proper clearance and visually inspected for evidence of scoring. The nozzle should be checked for obstructions and deformation. Bellows should be checked for leaks, cracks, or thin spots that may develop into leaks. In addition, if the bellows has collapsed, it has probably been subjected to back pressure greater than its design pressure. High back-pressure may be due to downstream restrictions, that are created by deposits, or to higher relief flows than used in the original design. The cause should be determined, and corrective action should be taken.

### 6.2.12 Reconditioning and Replacement of Parts

Parts that are worn beyond tolerance or damaged should be replaced or reconditioned. Damaged springs, bellows and soft goods should be replaced. Spare parts for a particular pressure relief valve should be obtained from its manufacturer. The valve body, flanges, and bonnet may be reconditioned by means suitable for repairs to other pressure-containing parts of similar material. If evidence of wear or damage is found on the disk or nozzle, their seating surfaces may be machined or lapped. Follow the manufacturer's recommendations when reconditioning valve parts.

### 6.2.13 Reassembly of Valve

After the valve has been inspected and its parts have been reconditioned or replaced, it should be reassembled in accordance with the manufacturer's instructions. The nozzle and disk seating surfaces should not be oiled. Clearances between assembled parts should be checked. In accordance with the manufacturer's instructions, the spring should be adjusted to

pop as close to the desired set pressure as possible. Blow-down rings should be set carefully and accurately in accordance with the manufacturer's recommendations for the appropriate vapor and liquid service, and the settings should be noted for future reference. Because most test blocks do not have enough capacity to measure the actual blowdown, manufacturer's recommendations and past performance should be evaluated to estimate any necessary adjustment.

#### 6.2.14 Setting of Valve Set Pressure

After the valve has been reconditioned and reassembled, its spring should be adjusted for the last time to ensure the valve will relieve at the required CDTP. Although test procedures will vary with local plant practice, the valve is generally mounted on the test block and air pressure is increased slowly until the valve relieves. The manufacturer's recommendations or National Board Publication NB-18, *Pressure Relief Device Certifications*, should be used to guide the adjustment of the spring to the correct setting. If a new set pressure is required, the manufacturer's limits for adjustment of the spring must not be exceeded and applicable code requirements must be observed. If necessary, a different spring should be provided.

After the valve has been adjusted, it should be popped at least once to prove the accuracy of the setting. Some manufacturers recommend a valve be popped at least three times, as the first pop helps align all of the components after the overhaul while the successive pops verify the set pressure. Normally, the deviation of the pop pressure from the set pressure should not exceed  $\pm 2 \text{ lbf/in.}^2$  ( $\pm 13.8 \text{ kPa}$ ) for pressures less than or equal to  $70 \text{ lbf/in.}^2$  ( $483.0 \text{ kPa}$ ) or  $\pm 3\%$  for pressures greater than  $70 \text{ lbf/in.}^2$  ( $483.0 \text{ kPa}$ ) [see Section VIII, Division 1, paragraph UG 134(d)(1), of the ASME Code]. For pressure relief valves that comply with Section VIII, Division 1, paragraph UG 125(c)(3), of the ASME Code, the deviation shall not be less than 0% or greater than +10%. Any allowance for hot setting should be made in accordance with the manufacturer's data. Any adjustment to the cold differential test pressure required to compensate for in-service back pressure, service temperature, or test media should be made in accordance with the manufacturer's or user's valve specification data.

Follow the valve manufacturer's recommended testing procedure when the pressure relief valve is tested with water. Typically, the pressure will be raised slowly to the required setting. The discharge should be observed for evidence of leakage, or the test gauge should be observed for a momentary drop in pressure. A small continuous stream of water from the valve discharge usually indicates attainment of the CDTP. The pressure at which the valve releases should be within the tolerances noted above before the valve is approved for service.

Pressure relief valves set with water may need to have the water drained (e.g. pilot-operated valve dome area) and the

valve dried prior to installation to assure proper function in service.

#### 6.2.15 Checking Valve for Tightness

Once the valve is set to pop at its CDTP, it should be checked for leakage. On the test block, it can be tested for seat tightness by increasing the pressure on the valve to 90% of the CDTP and observing the discharge side of the valve for evidence of leakage. Methods of determining leakage are covered in Appendix B.2 and Figure 40.

Where applicable, the bonnet, bellows, gasketed joints and auxiliary piping/tubing should be inspected for leakage.

**CAUTION:** Leakage from in-service pressure relief valves should be minimized because of the hazards to the environment, personnel, and equipment and because leakage leads to fouled and inoperable valves and to product loss.

#### 6.2.16 Completion of Necessary Records



All necessary records should be completed before a valve is placed back into service. By helping to determine when to replace the components of the valve and when to retire it, the records are critical to its effective future use. They form the historical record of the conditions and services under which the valve operated. Retention of maintenance and test records may be required by governmental regulations. See Appendix A for example forms. For an explanation of nameplate terms required by repair work, see API Std 526.

#### 6.2.17 Inspection, Testing, Maintenance, and Setting of ASME Section VIII Pressure Relief Valves on Equipment

It is generally more economical and effective to perform a shop inspection/overhaul in the shop at the required intervals than on its equipment. However, when a valve operates in non-fouling service, experience may indicate that inspection of the valve while on the equipment is safe and suitable. When suitable safety precautions have been taken (see 6.2.1), the inlet and outlet block valves may be closed, and the bonnet of the pressure relief valve may be removed for immediate inspection, testing, and any minor repairs. When major repairs are indicated, the valve should be sent to the shop.

In certain cases, the pressure relief valve may be tested for set pressure and leakage with an inert gas testing medium through a bleeder. This method normally yields inaccurate test results for metal-seated pressure relief valves and is inferior to the test block procedure discussed in 6.2.

Reverse-buckling rupture disks may be used to facilitate and allow more frequent on-stream testing of pressure relief valves. For such testing, the section between the rupture disk and the pressure relief valve is generally pressurized with an inert gas testing medium. Since the rupture disk is exposed to pressure on its downstream side when using this procedure,

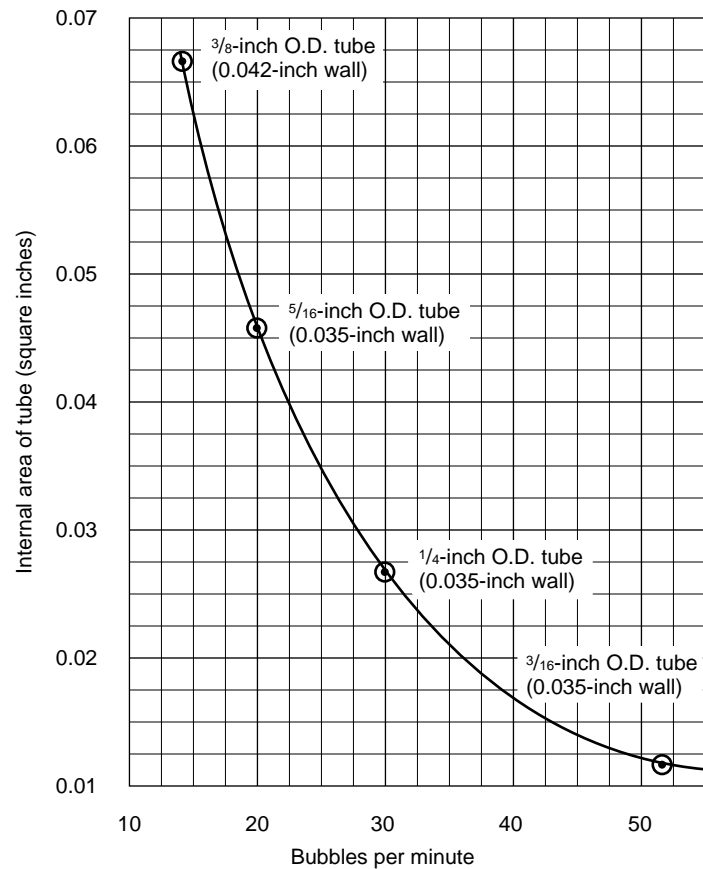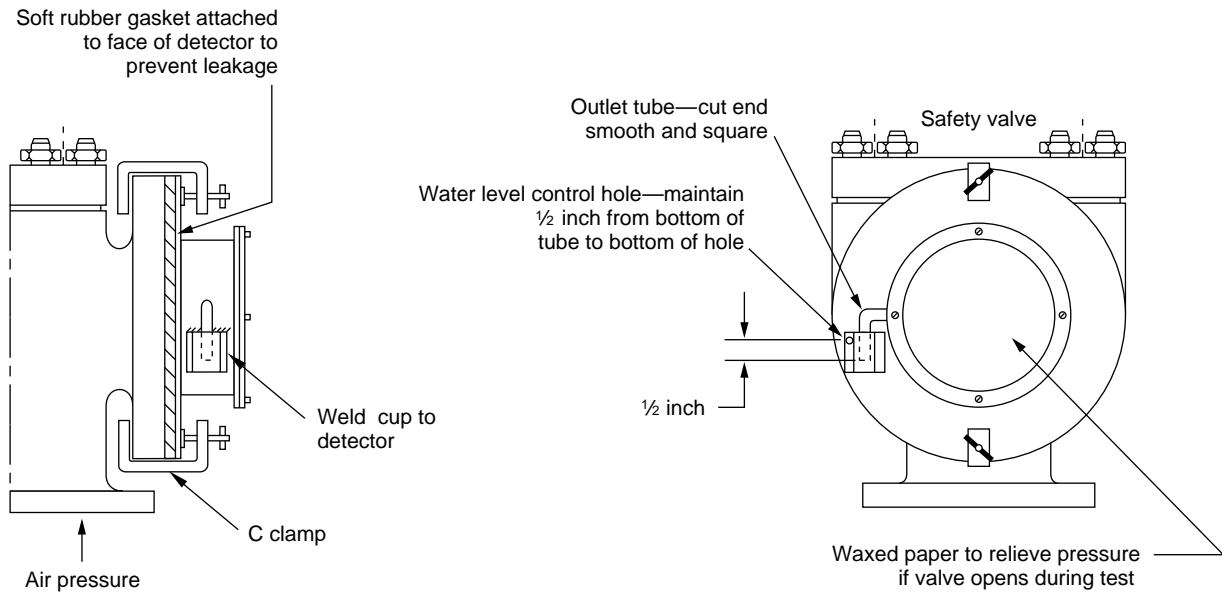

**Leakage rates corresponding to 0.3 cubic feet in 24 hours**

Note: When using this detector, all other valve outlets must be closed. Leakage should be sought at 90% of the set pressure. Bubbles should be counted after they appear at uniform rate.

**Figure 40—Safety-Valve and Relief-Valve Leak Detector**

the rupture disk should be inspected and replaced on a regular basis.

A pressure relief valve may be tested on-stream with specialized equipment by hydraulically lifting the valve stem while the valve remains in service. While a displacement transducer records the exact moment of lift and reseal, a load cell measures the force needed to move the stem. A record of both the valve lift and the reseal pressure may be printed. This method may or may not be accepted by local jurisdictions as a valid method of either verifying or adjusting valve set pressures.

**CAUTION:** There are several things to consider when applying the hydraulic test method:

1. Potential failure of the rupture disk in rupture disk/relief valve combinations.
2. Possible introduction of foreign material into the valve seating area which may result mechanical damage and/or leakage through the valve upon reseal.
3. Possible release of process material to atmosphere.

**CAUTION:** Although it may be satisfactory for a clean-service pressure relief valve, the hydraulic test method of checking the set pressure of a pressure relief valve does not satisfy the need to check for inlet/outlet line fouling or to remove a valve for physical inspection and verification that all of its components are in satisfactory and safe working condition. The hydraulic test method also does not verify the valve blowdown setting.

#### **6.2.18 Inspection, Testing, Maintenance, and Setting of ASME Section I Boiler Safety Valves**

Although safety valves on steam boilers are similar in construction and operation to relieving devices on process equipment, they are designed and installed in accordance with local, state, and federal regulations and power codes. Inspection of these devices should be in accordance with the regulatory requirements and the manufacturer's recommendations. Company practices may be used to establish an inspection policy if they do not conflict with or compromise the intent of any regulatory requirements.

Boiler safety valves can be tested periodically by raising the steam pressure until the valve pops. Precision-calibrated pressure gauges should be used to determine the pressure at which the valve pops. The accumulation and blowdown should also be noted. The ASME Section I Code also requires the boiler safety valves have a substantial lifting device by which the valve disk may be lifted from its seat when the working pressure on the boiler is at least 75% of the set pressure, so that checking for the freedom of moving parts to operate is feasible.

Instead of being tested on the boiler, safety valves may be removed and tested at regular intervals, which may be deter-

mined by local jurisdictional requirements. The testing must meet the requirements of applicable laws, and regulations of the jurisdictions involved. Usually testing for set pressure and blowdown with steam is required.

Some regulatory agencies allow on-stream testing of steam safety valves with special equipment that hydraulically lifts the valve stem while the valve remains in service. While a displacement transducer records the exact moment of lift and reseal, a load cell measures the force needed to move the stem. A record of both the valve lift and the reseal pressure may be printed.

**CAUTION:** This method of checking the set pressure and functioning of a safety valve identifies the opening pressure but does not satisfy the need to periodically remove the valve for physical inspection and verification that all of its components are in satisfactory and safe working condition. The hydraulic test method also does not verify the valve blowdown setting.

#### **6.2.19 Inspection, Testing, Maintenance, and Setting of Pilot-Operated Pressure Relief Valves**

Inspection, testing, maintenance, and setting of the pilot mechanism may be handled separately from the main valve. With test connections, the set pressure of some types of pilots may be accurately tested while the valve is in service. If there is no block valve under the main valve, it may be inspected and repaired only while the vessel is out of service.

Because of the many types of pilot-operated valves available, the valve manufacturer's recommendations for inspection, repair and testing should be consulted and followed.

Many of the considerations that apply to other pressure relief valves also apply to pilot-operated valves. The following is a list of additional considerations that apply to pilot-operated valves.

- a. Inspect soft goods (O-rings, diaphragms, gaskets)
- b. Check for plugging in pilot assembly and external tubing
- c. Check for material trapped in main valve dome area
- d. Check all tubing fittings for leakage
- e. Inspect the pressure pick-up device and its orientation

Manufacturers of diaphragm valves (see Figure 7) frequently recommend semiannual shop inspection/overhauls to allow inspection of the diaphragm and other components.

#### **6.2.20 Inspection, Testing, Maintenance and Setting of Weight Loaded Pressure and/or Vacuum Vents on Tanks**

The inspection, testing, maintenance, and setting of relieving devices on pressure storage tanks is similar to those of pressure relief valves on process equipment.



Pressure and/or vacuum vent valves on atmospheric tanks are designed to vent air and vapor from the tank during filling operations and to admit air when the tank is drawn down (see Figure 9). Pressure and/or vacuum vent valves are in almost continuous service. They are prone to failure by sticking. Periodic examination can detect this condition. Where temperatures fall below freezing, the devices may need to be checked during the cold period to ensure that the pallets do not stick because of icing. These pallets are usually weight loaded. The inspection of each vent valve in place should include the checking of the discharge opening for obstructions. The top of the valve should be removed and the pallets checked for freedom of movement. Seats should be checked to ensure that there is no sticking or leakage, since the forces actuating the valve are small. If the valve has a flame arrester on the inlet nozzle, it should be inspected for excessive fouling or plugging. If necessary, it should be removed for cleaning.

**CAUTION:** Inspection of the flame arrester in service is important because any fouling or plugging may result in equipment damage.

Inspection, testing, maintenance, and setting of weight-loaded pressure and/or vacuum vent valves should include the following special steps:

- a. Sticking should be corrected and prevented. The disks (pallets) of the devices should be checked for sticking. If the disks are stuck, the product's effect on the seal material and on the disk material should be investigated. If necessary the seal material and the disk material should be changed.
- b. The disk should be checked and maintained. Once a disk is removed, it should be cleaned. If any reason exists to suspect the mass of the pallet has been changed (tampering, corrosion, etc.) its mass should be determined. Check the mass against the mass required for the correct relieving pressure of the device. [The setting of a pressure-vacuum device depends on the mass of the disk compared to the area of the opening covered by the disk. Set pressure is usually a standard  $\frac{1}{2}$  oz. per square inch (0.215 kPa), but may go as high as 24 oz. per square inch (10.34 kPa).] If the mass is not correct, mass must be added or removed until the correct mass has been achieved. Be sure that any additional mass added does not restrict the lift of the device below the manufacturer's design. Disk condition and serviceability should be checked, and unusable disks should be replaced.
- c. The seats and pallets of the disk should be checked and cleaned.
- d. The gaskets at the disk seating areas must be checked and, if necessary, replaced.
- e. The protective screens must be checked for serviceability and, if necessary, renewed.
- f. Hinges and hinge pins should be checked for operability and, as necessary, serviced, lubricated, and replaced.

- g. Any special coating used internally or externally on the body should be checked and, if unserviceable, replaced.
- h. The hood should be inspected and, if unserviceable, replaced.
- i. The bolts should be checked and, as required, replaced.
- j. Reassembly and final operability check to assure pallets are free to move.

### 6.2.21 Inspection and Replacement of Rupture Disks

If a disk's manufacturer specifies a bolting torque procedure and the tightened bolts are loosened, the rupture disk should be replaced. Do not reinstall the disk once it has been removed from its holder, even though it has not been ruptured. When stresses are relieved by unbolting, the "set" taken by the disk during its original installation may prevent a tight seal and affect performance if reinstalled.

Because they cannot be tested, rupture disks should be replaced on a regular schedule based on their application, the manufacturer's recommendations, and past experience. If a block valve is located ahead of the disk, the block valve should be locked or car sealed open during operation. If replacement of the disk is necessary, the block valve should be locked, car sealed, or tagged closed until disk installation has been accomplished.

If, however, the risk of a rupture disk opening prematurely is low, and inlet and outlet fouling is monitored, the disk may be left in place indefinitely.

**CAUTION:** The block valve may only be closed in accordance with 6.2.1

**CAUTION:** The pressure relief valve must be designed so that it will not fail to open at its proper pressure setting regardless of any back pressure accumulated between the valve disk and any downstream rupture disk.

## 6.3 VISUAL ON-STREAM INSPECTION

A visual on-stream inspection is more like a survey than a normal inspection and may be considered a control measure. A full, visual on-stream inspection should ensure the following:

- a. The correct relief device was installed.
- b. The company identification (such as a tag or stencil) provides means to establish the proper pressure setting for the equipment protected by the identified device.
- c. If not clear from the records, that the established test interval has not been exceeded.
- d. No gags, blinds, closed valves, or piping obstructions would prevent the valves from functioning properly.
- e. Seals installed to protect the spring setting and ring pin setting have not been broken.
- f. The relief device does not leak. Pressure relief valves that have opened in-service frequently leak. Detection and correc-

tion of this leakage eliminates product loss and possible pollution and prevents fouling and subsequent sticking of the valve. If the valve is a bellows valve, the bellows vent should be checked for leakage.

- g. Bellows vents are open and clear, and any connected piping is routed to a safe location.
- h. Upstream and downstream block valves are sealed or chained and locked in the proper position. Devices that ensure that a block valve is in its proper position include locking plastic bands, car seals, chains and padlocks, and special locking devices made especially for certain types of block valves.
- i. Vent stacks, discharge piping and small nipples are properly supported to avoid breakage or leakage. Inadequately supported or anchored nipples can be damaged during maintenance and by vibration.
- j. Valve body drains and vent stack drains are open.
- k. Any lifting lever is operable and positioned properly.
- l. Any heat tracing, insulation or purge that is critical to the proper operation of the relief system is intact and operating properly.
- m. A gauge installed as part of a combination of a rupture disk and a pressure relief valve or a device for checking pressure between a pressure relief valve and a block valve is serviceable. Check to see that there is no pressure build up indicated by a gauge installed between a rupture disk and a pressure relief valve.
- n. Any rupture disk is properly oriented.

Although the interval selected for on-stream inspection should vary with circumstances and experience, a visual inspection that includes a check for leakage and vibration damage should follow each operation of a pressure relief valve. If sufficiently experienced to recognize any leakage or vibration damage, operating personnel assigned to the process unit could make these inspections.

## 6.4 INSPECTION FREQUENCY

The inspection of pressure-relieving devices provides data that can be evaluated to determine a safe and economical frequency of scheduled inspections. This frequency varies widely with the various operating conditions and environments to which relief devices are subjected. Inspections may usually be less frequent when operation is satisfactory and more frequent when corrosion, fouling, and leakage problems occur. Historical records reflecting periodic test results and service experiences for each relief device are valuable guides for establishing safe and economical inspection frequencies.

A definite time interval between inspections or tests should be established for every pressure-relieving device on operating equipment. Depending on operating experiences, this interval may vary from one installation to another. The time interval should be sufficiently firm to ensure that the inspection or test is made, but it should also be flexible enough to permit revision as justified by past test records.

In API 510, the subsection on pressure-relieving devices establishes a maximum interval between device inspections or tests of 10 years. It also indicates that the intervals between pressure relief device testing or inspection should be determined by the performance of the devices in the particular service concerned.

### 6.4.1 Frequency of Shop Inspection/Overhaul

#### 6.4.1.1 Normal Basis

Normally, the interval between shop inspection/overhaul of pressure-relieving devices should not exceed that necessary to maintain the device in satisfactory operating condition. The frequency of shop inspection/overhauls is normally determined by operating experience in the various services involved. Normally, the interval of a device in a corrosive and/or fouling service would be shorter than the interval required for the same device in a clean, non-fouling, non-corrosive, service. Likewise, more frequent inspection and testing may be needed for pressure relief valves subject to vibration, pulsating loads, low differential between set and operating pressures, and other circumstances leading to valve leakage and poor performance.

Where an adequate inspection or test history extending over a long period of time reflects consistent "as received" test results that coincide with the CDTP (see 6.2), where no change in service is to be made, and where no conflict in jurisdictional requirements exists, an increase in the test interval may be considered. Conversely, if the "as received" test results are erratic or vary significantly from the CDTP, the inspection interval should be decreased or suitable modifications to improve the performance should be made. If a valve fails to activate on the test block at 150% or more of CDTP, it can be assumed that it would have failed to activate on the unit during an overpressure event.

Where corrosion, fouling, and other service conditions are not known and cannot be predicted with any degree of accuracy (as in new processes), the initial inspection should be accomplished as soon as practical after operations begin to establish a safe and suitable testing interval.

#### 6.4.1.2 Manufacturer's Basis

Manufacturers of pressure-relieving devices are sometimes able to assist the user in establishing inspection and test intervals, especially if their designs contain features and components that require special consideration. For example, it may be necessary to inspect or replace certain parts, such as non-metallic diaphragms in pilot-operated valves, at frequencies other than those required for the parts of conventional pressure relief valves. Rupture disks and bellows valves may also require special consideration. Manufacturers are familiar with the nature of the loading, stress levels, and operating limita-

tions of their design and are able to suggest inspection intervals appropriate for their equipment.

#### 6.4.1.3 Other Basis

In some instances, the required frequency of inspection and testing of pressure-relieving devices is established by regulatory bodies. Regulations applicable in the installation's locality should be investigated to avoid conflict.

### 6.4.2 Frequency of Visual On-stream Inspections

As noted in 5.2.3, visual on-stream inspections are intended to find problems with the maintenance and operating practices surrounding pressure-relieving devices. The interval selected should vary with circumstances, based on the results of previous on-stream inspections. The maximum interval for visual on-stream inspections is five years. Although not always a full visual on-stream inspection, some companies perform inspections for leakage and vibration damage each time a relief device operates.

Also, after maintenance turnarounds are completed, some companies perform a full visual on-stream inspection before startup.

## 6.5 TIME OF INSPECTION

### 6.5.1 Routine

The ideal time to inspect pressure relief valves is when the inspection least interferes with the process and maintenance manpower is readily available. These conditions may prevail during planned shutdowns. All relief devices not equipped with block valves should be inspected at this time if an inspection would otherwise become due before the next scheduled shutdown. Even the relief devices with block valves may be inspected at this time to minimize process interruptions and avoid the increased risk of inspecting equipment in operation.

### 6.5.2 Inspection on New Installations

All pressure relief valves and other automatic pressure-relieving devices that depend on a spring adjustment for proper functioning should be inspected and tested before they are installed on process equipment (i.e. verify CDTP pressure and visual inspection as described in 6.2.). This inspection is used to determine any damage or changes in factory adjustment due to shipping, confirm the set pressure, and initiate appropriate records. If the factory setting is done in a nearby shop, this additional testing may be unnecessary.

Pressure and/or vacuum vent valves on atmospheric storage tanks should also be inspected after installation but before the tank is hydrostatically tested or put into service.

### 6.5.3 Unscheduled Inspection

If a valve fails to open within the set pressure tolerance, it requires immediate attention. If it opens at the set pressure but fails to reseal properly, the urgency of inspection and repairs depends on the type of leakage, its environmental and human impact, the amount of leakage, and the characteristics of the leaking substance such as whether it's toxic, flammable, or fouling.

### 6.5.4 Inspection After Extended Shutdowns

A pressure relief valve left on a unit during an extended shutdown should be inspected and tested before the resumption of operations. This inspection is necessary to ensure that corrosion, fouling, tampering, or other conditions or acts that would impede the proper performance of the device have not occurred during the shutdown. When a change in operating conditions is to follow the shutdown, the inspection interval should be reviewed.

## 7 Records and Reports

### 7.1 OBJECTIVE

A suitable system of keeping records and making reports is essential to the effective administration and control of any pressure-relieving device program in a process industry. The system should be as simple and clear as possible.

The principal objective in keeping records is to make available the information needed to ensure that the performance of pressure-relieving devices meets the requirements of their various installations. Records may be considered as tools needed to implement the program, and reports may be considered as the means to distribute those tools to all the participants of the program so that they coordinate their work and effectively discharge their responsibilities. In some cases, reports may be retained in files and considered as permanent records.

### 7.2 THE NEED TO KEEP RECORDS

For each pressure-relieving device in service, a complete, permanent record should be kept. The record of each device should include its specification data and a continuously accumulating history of inspection and test results. Some governmental agencies require that certain records and reports be maintained.

The specification record provides the basic information needed to evaluate the adequacy of a device for a given installation or for a contemplated change in operating conditions, provides the correct dimensional and material information needed to minimize shop errors and expedite repairs, and provides design information that facilitates the purchase of a similar device and that is required to inventory spare parts. This information allows a pressure-relieving device to be assembled, tested, and exchanged with an identical device on

the unit to minimize the time the unit's equipment is unprotected during a scheduled inspection.

Historical records (service records) showing dates and results of inspections and tests are necessary for the follow-up or control phase of the pressure-relieving device program. They enable periodic reviews to determine whether the planned test intervals for a device are being realized. They also provide performance data that helps evaluate the suitability of the device for its particular service, that can indicate problems in the device's design and materials, and that can even indicate a misapplication of the device. It is especially important that the records offer a practical and realistic basis for establishing and maintaining safe and economical inspection intervals for the device.

### 7.3 RESPONSIBILITIES

The duties and responsibilities entailed by the various facets of an inspection and testing program for pressure-relieving devices should be clearly defined to avoid confusion and be explicitly assigned to assure compliance. Some companies assign these duties and responsibilities to equipment inspectors. Others have process unit operators follow up on an established program under the guidance of the engineering-inspection group.

This subsection is not designed to assign responsibilities to any individual. The following outline of duties is meant primarily to facilitate the understanding of how to use the sample record and report forms in the appendix. These duties might be typical of well-designed, pressure-relieving device programs in large process industries. The responsibilities of engineering personnel might include the following:

- a. To furnish specifications.
- b. To determine allowable pressure settings.
- c. To specify test intervals.

- d. To record service data.
- e. To prepare lists of devices due for inspection.
- f. To review performance data and provide engineering services.
- g. To review, approve, and/or purchase replacement valves or spare parts.

The responsibilities of process unit operators might include the following:

- a. To initiate work requests.
- b. To see that devices are reinstalled in their proper location.
- c. To prepare in-service reports.
- d. To check for leaking valves.
- e. To ensure that the correct block valves (if any) are locked or sealed open or closed as required.
- f. To check vents and drains for operability.

The responsibilities of craftsmen might include the following:

- a. To perform the mechanical work required to repair, test, reinstall, and attach identification tags to the devices.
- b. To maintain specification records to facilitate repairs.
- c. To furnish test reports.
- d. To initiate purchase orders for spare parts.

### 7.4 SAMPLE RECORD AND REPORT SYSTEM

The precise recording and reporting format in a pressure-relieving device program is a matter of individual company choice. The forms in Appendix A are samples of records and reports. Much of the report writing, record keeping, inspection, and test scheduling handled by the reports and records could be managed by a properly programmed computer system.

## APPENDIX A—SAMPLE RECORD AND REPORT FORMS

The specification record for a pressure-relieving device shows a typical permanent card-form record for specifying a pressure relief valve. Its card form provides convenience in handling, filing, and reviewing. This record holds the basic information needed to properly repair or replace the valve.

The historical record for a pressure-relieving device shows a typical permanent card-form service record that holds the dates and results of periodic inspections and tests. The information recorded will form a basis for determining test intervals and design changes.

In the record and report program illustrated here, the engineering-inspection group maintains the records and periodically informs the operations group responsible for operating the pressure relief valves of the due dates of any work to be done. A report such as that shown in the inspection and repair work order and report for pressure-relieving devices (with sample data) is a simple and effective means for initiating inspection, testing and repair work. Its return to the engineering-inspection group indicates that the operations group responsible for operating the pressure relief valves has taken action. The report should list all the pressure-relieving devices at a given unit to help minimize oversights and clerical work.

When a valve is sent to the shop for inspection, it is inspected and tested by the maintenance group in the "as

received" condition. A report such as the testing report for a pressure-relieving device is filled out to document the results of this inspection and testing.

Inspection and testing of a device may lead to its setting and repair by the maintenance group. Orders and records such as the condition, repair, and setting record for a pressure-relieving device and the setting record and repair order for pressure-relieving devices should be filled out as appropriate.

At the shop, the valve may have a part replaced with a spare part by the maintenance group. In this case, a report is prepared indicating the replacement as well as other basic information on the condition, repair, and setting record for a pressure-relieving device form.

After a pressure relief valve has been returned to the process unit and installed by the operations group, the authority in the operations group responsible for writing the valve work orders should prepare a report such as the in-service report for a pressure-relieving device. This report is filled out to certify that the valve has been reinstalled in its proper location. The report is then sent to the engineering-inspection group. It serves as an independent check on earlier steps and as the final expected report on this particular inspection of the pressure-relieving device.

### SPECIFICATION RECORD FOR A PRESSURE-RELIEVING DEVICE

Device No.	Unit	Location	Set Pressure	Test Interval
<div style="display: flex; justify-content: space-between;"> <span>Make _____ Style _____</span> <span>Remarks _____</span> </div> <div style="display: flex; justify-content: space-between;"> <span>Body and bonnet material _____</span> <span>_____</span> </div> <div style="display: flex; justify-content: space-between;"> <span>Nozzle and disk material _____</span> <span>_____</span> </div> <div style="display: flex; justify-content: space-between;"> <span>Trim material _____</span> <span>_____</span> </div> <div style="display: flex; justify-content: space-between;"> <span>Spring material:    <input type="radio"/> Carbon steel    <input type="radio"/> Alloy</span> <span>_____</span> </div> <div style="display: flex; justify-content: space-between;"> <span>Spring no. _____</span> <span>_____</span> </div> <div style="display: flex; justify-content: space-between;"> <span>Flange sizes</span> <span>_____</span> </div> <div style="display: flex; justify-content: space-between;"> <span>Inlet _____ Outlet _____</span> <span>_____</span> </div> <div style="display: flex; justify-content: space-between;"> <span>Orifice _____ Back pressure _____</span> <span>_____</span> </div> <div style="display: flex; justify-content: space-between;"> <span>Spring set pressure _____</span> <span>_____</span> </div> <div style="display: flex; justify-content: space-between;"> <span>Relieving pressure _____</span> <span>_____</span> </div> <div style="display: flex; justify-content: space-between;"> <span>Normal operating temperature _____</span> <span>Maintenance engineer s phone no. _____</span> </div>				

## HISTORICAL RECORD FOR A PRESSURE-RELIEVING DEVICE

[illegible]



## TESTING REPORT FOR A PRESSURE-RELIEVING DEVICE

Fill in this report for each device tested and send this report to the quality-assurance group.

Date tested _____ Device no. _____ Unit _____ Location _____ Size _____ Inlet _____ Orifice _____ Outlet _____	Type _____ Make _____ Style _____ Material _____ Special material _____ Body _____ Trim _____
Fill in blanks below on one side only.	
<div style="text-align: center; margin-bottom: 10px;">From unit</div> Date last bench tested _____ Popped at _____ Set pressure _____ Check (dirty pop) pressure _____ If set pressure changed, new set pressure _____ Test used Standard _____ Dry seal _____ Disposition To unit _____ To spare _____ To junk _____ Condition Leaking _____ Stuck _____ Fouled _____ Corroded _____ Tested by _____	<div style="text-align: center; margin-bottom: 10px;">From spare stock or check of new device</div> Set pressure _____ Check pressure _____



## CONDITION, REPAIR, AND SETTING RECORD FOR A PRESSURE-RELIEVING DEVICE

Manufacturer_____	Size in_____inches	Rating_____	Orig. thickness of body_____	Sizing cond._____
Figure no._____	Size out_____inches	Rating_____	Orig. thickness of outer port_____	Amount_____
Serial no._____	Spring no._____		Max. pressure in_____# @_____°F	Mol. wt. or spec. grav._____
Order no._____	Spring range_____		Max. pressure out_____# @_____°F	Rel. temperature_____°F
Material of body_____	Orifice no._____		Bonnet test pressure_____	Compression factor_____
Trim_____	Valve factor_____			Percent accumulation_____
Spring_____	B.D. adj. percent_____			Calculation area_____
Bellows_____				

Set Pressure	Reseat Pressure	Reliev- ing Pressure	Remarks	Test Medium	Dis- man- tled		Disk Stuck		Deposits												Corrosion						Date
					N	Y	N	Y	Nozzle				Body				Bonnet				N	L	M	H	Part		
									N	L	M	H	N	L	M	H	N	L	M	H							

### Legend

#### Deposits and Corrosion

N = None  
L = Light  
M = Medium  
H = Heavy

#### Parts

B = Bonnet  
Be = Bellows  
Bo = Body outlet  
D = Disk  
G = Guide

#### Test Medium

A = Air  
S = Steam  
W = Water  
N = Nitrogen  
O = Other inert gas

#### Dismantled/ Disk Stuck

N = No  
Y = Yes

Device no. \_\_\_\_\_

Sheet no. \_\_\_\_\_

Unit \_\_\_\_\_

Location \_\_\_\_\_

Inspection interval \_\_\_\_\_

## 42

Please relieve, dismantle, repair, and reset the following relief valves. Return properly executed original of this form to the engineering-inspection group after completion of work.

Unit \_\_\_\_\_

Inspector \_\_\_\_\_

Order no. \_\_\_\_\_

Date \_\_\_\_\_

Foreman \_\_\_\_\_

### Dismantled/ Valve Stuck

A = Air  
S = Steam  
W = Water  
N = Nitrogen  
O = Other inert gas

N = No  
Y = Yes

[illegible]

**IN-SERVICE REPORT FOR A PRESSURE-RELIEVING DEVICE**

Upon completion of this report, put it in the special envelope provided and send it to the engineering-inspection group.

Device no.	_____	Unit	_____
Date tested	_____	Location	_____
Date installed	_____		_____



## APPENDIX B—PRESSURE RELIEF VALVE TESTING

### B.1 NEED AND FUNCTION OF TEST BLOCK

After a pressure relief valve is removed from service, it is usually taken to the shop for inspection and repair. An important phase of maintenance is testing to determine the set pressure and tightness of the valve "as received" and after its overhaul. The testing is usually performed on a test block with facilities for applying pressure to a valve and indicating the pressure applied. Most test blocks have facilities for testing with either air or water to simulate, as closely as possible, the media handled by safety and relief valves, respectively. Bottled nitrogen may be used instead, especially for high-pressure valves. See Sections I, IV, and VIII of the ASME Code for requirements for setting safety valves and pressure relief valves in steam service.

The test block and its supporting facilities are necessary for the maintenance of pressure relief valves. It is practically impossible to make accurate adjustments on these devices without some method of measuring their performance. The shop test block, unfortunately, does not duplicate field conditions exactly. Thus, the amount of liquid or gas that it can discharge is limited, and it is not generally practical to measure relieving capacity or blowdown. Also, test stands with insufficient surge volume may fail to cause a distinct pop, and an inaccurate set pressure may result. However, if properly functioning, the shop test block gives good indications of the pressure at which the valve will open and its tightness.

**CAUTION:** For safety, the valve discharge nozzle must be positioned to prevent exposure of personnel to a sudden blast of air, water, or other projectiles from the valve. Ear protection may also be required for personnel working in the test area. Do not attempt to test relief devices at pressures above that for which the test block is designed.

If a pressure relief valve is dirty and popping the valve would damage its seats, the "as received" pop test may be waived. If the test is waived, reduction of the valve's test interval should be considered.

### B.2 TESTING WITH AIR

Most test blocks are designed to test pressure relief valves with air because it is a non-toxic and readily available medium. Air is compressible and causes reaction-type valves to relieve with a short pop and closely approximates operating conditions for pressure relief valves in hydrocarbon or other gas services. The air test is generally used to test safety, relief, and pressure relief valves for set pressure and valve tightness.

The arrangement to detect leakage during the air test depends on the construction of the valve. Blinding of the valve discharge is usually required. Leakage may be detected quali-

tatively by placing a thin membrane, such as a wet paper towel, over the outlet and noting any bulging. This is not a rigid test and is not intended to be used as a commercial standard tightness test. A quantitative measurement may be made by trapping the leakage and conducting it through a tube submerged in water. Figure 40 shows the standard equipment used to determine leakage rates in API Std 527. Leaks can also be detected with ultrasonic sound detection equipment.

### B.3 TESTING WITH WATER


Test blocks may include facilities that test relief valves with a liquid test medium such as water. Water is non-toxic and inexpensive and may allow a close simulation of operating conditions. Because very small water leaks are not readily detected, a water test is usually limited to measuring the set pressure. Leakage or tightness tests are usually made with air (see 6.2). However, leakage tests may instead be made with water as described in API Std 527.

### B.4 DESCRIPTION OF TEST BLOCK

The test block is the assembly of equipment required to test pressure relief valves for set pressure and tightness. It is used often and must be readily available on short notice. Test block designs vary widely and are even offered as packaged equipment by some manufacturers. The schematic arrangement in Figure B-1 shows the essential elements of and instructions for a test block that uses air as the testing medium. Where air pressure is unavailable, water systems may instead be used to test relief valves if acceptable to the local authority or jurisdiction.

The air-system test block includes a compressor or other source of high-pressure air, a supply reservoir, a test drum or surge tank large enough to accumulate enough air to cause the valves to open sharply at the set pressure, and the piping, pressure gauges, valves, and other instrumentation necessary to control the tests. The water-system test block usually includes a positive displacement pump that with a reasonably steady flow of water develops high pressures and the piping, valves, and other instrumentation necessary to control the tests. Some test blocks use a combination gas over water arrangement in which the gas provides the source of pressure.

Both the air-system test block and the water-system test block use a manifold. The wide range of flange sizes on a manifold allows it to test many different valves. To cover the wide range of pressures usually required to test pressure relief valves, several precision-calibrated pressure gauges are connected with the manifold. These pressure gauges should be routinely calibrated, and a progressive calibration record should be maintained.

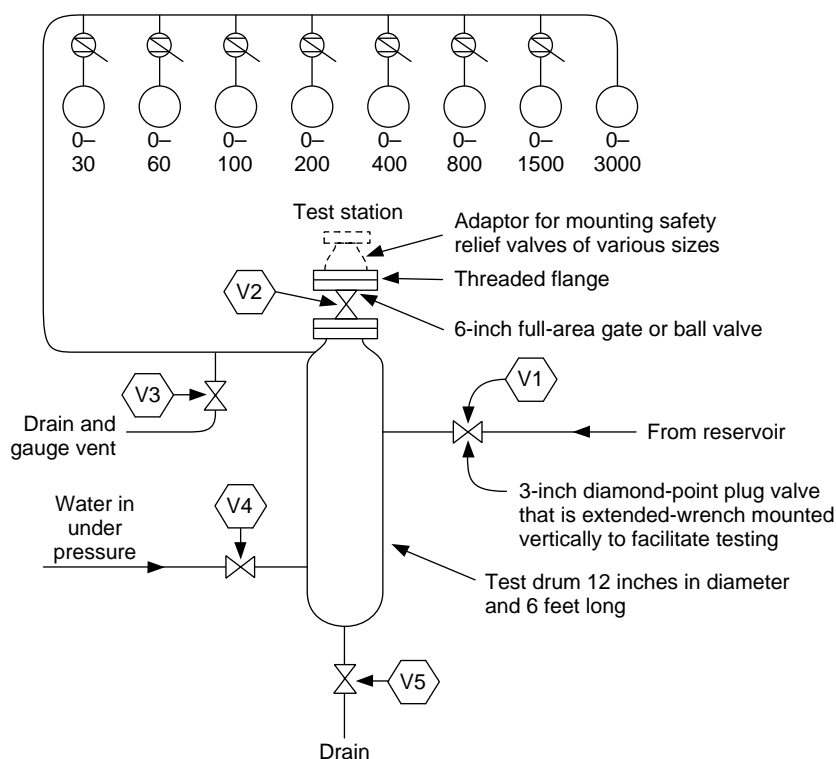

#### Notes on Construction:

1. This layout uses the available air supply at the highest pressure possible. If required, the pressure can be raised further by inserting water that is under pressure into the test drum until the desired pressure is reached.
2. A single test drum is shown. Duplicate stations for flanged valves can be added if desired. Another duplicate station with a smaller test drum is sometimes desirable for testing small valves with screwed connections.
3. Flanged valves are to be secured to test stations by bolting, clamping, or use of a pneumatic clamping device.
4. Line from reservoir to test drum is to be designed for minimum pressure drop to allow reservoir volume to hold up test drum pressure when needed.
5. Test drum pressure and piping are to be made of oxidation-resistant materials.

#### Notes on Operation:

1. When test station is not in use, valves V1, V2, V4, and V5 should be closed. Valve V3 should be opened to prevent possible buildup pressure in the test drum if valve V1 should leak.
2. Before testing the first valve, the test drum should be blown to remove any accumulation of dust or sediment that might blow through the safety relief valve and damage the seats. To blow the drum, close valve V3, open valve V2, and release air through the drum by opening and closing valve V1.
3. Close valve V2.
4. Secure safety relief valve to test station.
5. Open valve V2.
6. If safety-valve set pressure is lower than available air pressure, slowly increase pressure through valve V1 until safety relief valve pops. Then close valve V1. If safety-valve set pressure is higher than available air pressure, open valve V1 and fill test drum with maximum air pressure available. Then close valve V1. Open valve V4 and increase pressure by inserting water that is under pressure until safety relief valve opens. Then close valve V4 and drain water from drum by opening and closing valve V5.
7. If necessary, adjust valve spring so that safety relief valve opens at the required set pressure.
8. Vent test drum to 90% of the set pressure.
9. Test safety relief valve for leakage.
10. After satisfactory test, close valve V2.
11. Remove safety relief valve from test rack. Loosen bolts or clamps slowly to allow pressure in adaptor and valve nozzle to escape.
12. Vent test drum through V3 to approximately 75% of the set pressure of the next valve to be tested. Repeat 4 through 11.
13. If another valve is not to be tested immediately, leave test station as specified in 1.

Figure B-1—Typical Safety-Valve and Relief-Valve Test Block Using Air as Test Medium

# API Related Publications Order Form - 2000

Date: \_\_\_\_\_  
(Month, Day, Year)

☐ API Member  
(Check if Yes)

Invoice To – ☐ Check here if same as "Ship To"

Company: \_\_\_\_\_

Name/Dept.: \_\_\_\_\_

Address: \_\_\_\_\_

City: \_\_\_\_\_ State/Province: \_\_\_\_\_

Zip: \_\_\_\_\_ Country: \_\_\_\_\_

Customer Daytime Telephone No.: \_\_\_\_\_

Fax No.: \_\_\_\_\_

(Essential for Foreign Orders)

Ship To – (UPS will not deliver to a P.O. Box)

Company: \_\_\_\_\_

Name/Dept.: \_\_\_\_\_

Address: \_\_\_\_\_

City: \_\_\_\_\_ State/Province: \_\_\_\_\_

Zip: \_\_\_\_\_ Country: \_\_\_\_\_

Customer Daytime Telephone No.: \_\_\_\_\_

Fax No.: \_\_\_\_\_

(Essential for Foreign Orders)

☐ Payment Enclosed \$ \_\_\_\_\_

☐ Payment By Charge Account:

☐ MasterCard ☐ VISA ☐ American Express

Account No.: \_\_\_\_\_

Name (As It Appears on Card): \_\_\_\_\_

Expiration Date: \_\_\_\_\_

Signature: \_\_\_\_\_

☐ Please Bill Me

P.O. No.: \_\_\_\_\_

Customer Account No.: \_\_\_\_\_

State Sales Tax – The American Petroleum Institute is required to collect sales tax on publications mailed to the following states: AL, AR, CT, DC, FL, GA, IL, IN, IA, KS, KY, ME, MD, MA, MI, MN, MO, NE, NI, NY, NC, ND, OH, PA, RI, SC, TN, TX, VT, VA, WV and WI. Prepayment of orders shipped to these states should include applicable sales tax unless a purchaser is exempt. If exempt, please print your state exemption number and enclose a copy of the current exemption certificate.

Exemption Number: \_\_\_\_\_ State: \_\_\_\_\_

Quantity	Order Number	Title	SO*	Unit Price	Total
	C51008	API 510, Pressure Vessel Inspection Code: Maintenance Inspection, Rating, Repair, & Alteration		\$ 94.00	
	C52017	RP 520, Sizing, Selection & Installation of Pressure-Relieving Devices in Refineries, Part I-Sizing & Selection		\$ 121.00	
	C52024	RP 520, Sizing, Selection & Installation of Pressure-Relieving Devices in Refineries, Part II-Installation		\$ 61.00	
	C52104	RP 521, Guide for Pressure-Relieving & Depressuring Systems		\$ 132.00	
	C52604	RP 526, Flanged Steel Pressure Relief Valves		\$ 77.00	
	C52700	RP 527, Seat Tightness of Pressure Relief Valves		\$ 44.00	
	C62009	Std 620, Design and Construction of Large, Welded, Low-Pressure Storage Tanks		\$ 160.00	
	C65010	Std 650, Welded Steel Tanks for Oil Storage		\$ 248.00	
	C20005	Std 2000, Venting Atmospheric & Low-Pressure Storage Tanks: Nonrefrigerated & Refrigerated		\$ 83.00	

Shipping and Handling – All orders are shipped via UPS or First Class Mail in the U.S. and Canada. Orders to all other countries will be sent by Airmail. U.S. and Canada, \$5 per order handling fee, plus actual shipping costs. All other countries, \$15 per order handling fee, plus actual shipping costs.

Rush Shipping Charge – FedEx, \$10 in addition to customer providing FedEx account number: \_\_\_\_\_. UPS Next Day, \$10 plus the actual shipping costs (1-9 items). UPS

Second Day, add \$10 plus the actual shipping costs (1-9 items).

Rush Bulk Orders – 1-9 items, \$10. Over 9 items, add \$1 each for every additional item. *NOTE: Shipping on foreign orders cannot be rushed without FedEx account number.*

Returns Policy - Only publications received in damaged condition or as a result of shipping or processing errors, if unstamped and otherwise not defaced, may be returned for replacement within 45 days of the initiating invoice date. A copy of the initiating invoice must accompany each return. Material which has neither been damaged in shipment nor shipped in error requires prior authorization and may be subject to a shipping and handling charge. **All returns must be shipped prepaid using third class postage. If returns are due to processing or shipping errors, API will refund the third class postage.**

Subtotal	
State Sales Tax (see above)	
Rush Shipping Charge (see left)	
Shipping and Handling (see left)	
Total (in U.S. Dollars)	

\*To be placed on Standing Order for future editions of this publication, place a check mark in the space provided.

Pricing and availability subject to change without notice.

Mail Orders: American Petroleum Institute, Order Desk, 1220 L Street, NW, Washington, DC 20005-4070, USA  
Fax Orders: 202-962-4776 Phone Orders: 202-682-8375

To better serve you, please refer to this code when ordering: **L A 4 5 0 9 0 2 0 0**

The American Petroleum Institute provides additional resources and programs to industry which are based on API Standards. For more information, contact:

- Training/Workshops Ph: 202-682-8490  
Fax: 202-962-4797
- Inspector Certification Programs Ph: 202-682-8161  
Fax: 202-962-4739
- American Petroleum Institute  
Quality Registrar Ph: 202-682-8574  
Fax: 202-682-8070
- Monogram Licensing Program Ph: 202-962-4791  
Fax: 202-682-8070
- Engine Oil Licensing and  
Certification System Ph: 202-682-8233  
Fax: 202-962-4739

To obtain a free copy of the API Publications, Programs, and Services Catalog, call 202-682-8375 or fax your request to 202-962-4776. Or see the online interactive version of the catalog on our web site at [www.api.org/cat](http://www.api.org/cat).



Helping You  
Get The Job  
Done Right.<sup>SM</sup>





Additional copies available from API Publications and Distribution:  
(202) 682-8375

Information about API Publications, Programs and Services is  
available on the World Wide Web at: <http://www.api.org>



**American  
Petroleum  
Institute**

1220 L Street, Northwest  
Washington, D.C. 20005-4070  
202-682-8000

Order No. C57602