

HDL Compiler™ (Presto VHDL) Reference Manual

Version C-2009.06, June 2009

SYNOPSYS®

Copyright Notice and Proprietary Information

Copyright © 2009 Synopsys, Inc. All rights reserved. This software and documentation contain confidential and proprietary information that is the property of Synopsys, Inc. The software and documentation are furnished under a license agreement and may be used or copied only in accordance with the terms of the license agreement. No part of the software and documentation may be reproduced, transmitted, or translated, in any form or by any means, electronic, mechanical, manual, optical, or otherwise, without prior written permission of Synopsys, Inc., or as expressly provided by the license agreement.

Right to Copy Documentation

The license agreement with Synopsys permits licensee to make copies of the documentation for its internal use only. Each copy shall include all copyrights, trademarks, service marks, and proprietary rights notices, if any. Licensee must assign sequential numbers to all copies. These copies shall contain the following legend on the cover page:

“This document is duplicated with the permission of Synopsys, Inc., for the exclusive use of _____ and its employees. This is copy number _____.”

Destination Control Statement

All technical data contained in this publication is subject to the export control laws of the United States of America. Disclosure to nationals of other countries contrary to United States law is prohibited. It is the reader's responsibility to determine the applicable regulations and to comply with them.

Disclaimer

SYNOPSYS, INC., AND ITS LICENSORS MAKE NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Registered Trademarks (®)

Synopsys, AMPS, Astro, Behavior Extracting Synthesis Technology, Cadabra, CATS, Certify, CHIPit, Design Compiler, DesignWare, Formality, HDL Analyst, HSIM, HSPICE, Identify, iN-Phase, Leda, MAST, ModelTools, NanoSim, OpenVera, PathMill, Physical Compiler, PrimeTime, SCOPE, Simply Better Results, SiVL, SNUG, SolvNet, Syndicated, Synplicity, Synplify, Synplify Pro, Synthesis Constraints Optimization Environment, TetraMAX, the Synplicity logo, UMRBus, VCS, Vera, and YIELDirector are registered trademarks of Synopsys, Inc.

Trademarks (™)

AFGen, Apollo, Astro-Rail, Astro-Xtalk, Aurora, AvanWaves, BEST, Columbia, Columbia-CE, Confirma, Cosmos, CosmosLE, CosmosScope, CRITIC, CustomSim, DC Expert, DC Professional, DC Ultra, Design Analyzer, Design Vision, DesignerHDL, DesignPower, DFTMAX, Direct Silicon Access, Discovery, Eclipse, Encore, EPIC, Galaxy, Galaxy Custom Designer, HANEX, HAPS, HapsTrak, HDL Compiler, Hercules, Hierarchical Optimization Technology, High-performance

ASIC Prototyping System, HSIM^{plus}, i-Virtual Stepper, IICE, in-Sync, iN-Tandem, Jupiter, Jupiter-DP, JupiterXT, JupiterXT-ASIC, Liberty, Libra-Passport, Library Compiler, Magellan, Mars, Mars-Rail, Mars-Xtalk, Milkyway, ModelSource, Module Compiler, MultiPoint, Physical Analyst, Planet, Planet-PL, Polaris, Power Compiler, Raphael, Saturn, Scirocco, Scirocco-i, Star-RCXT, Star-SimXT, System Compiler, System Designer, Taurus, TotalRecall, TSUPREM-4, VCS Express, VCSi, VHDL Compiler, VirSim, and VMC are trademarks of Synopsys, Inc.

Service Marks (SM)

MAP-in, SVP Café, and TAP-in are service marks of Synopsys, Inc.

SystemC is a trademark of the Open SystemC Initiative and is used under license.

ARM and AMBA are registered trademarks of ARM Limited.

Saber is a registered trademark of SabreMark Limited Partnership and is used under license.

All other product or company names may be trademarks of their respective owners.

Contents

What's New in This Release	xiv
About This Reference Manual	xiv
Customer Support.	xvii
1. Introduction to HDL Compiler (Presto VHDL)	
Reading Designs	1-3
Summary of Reading Methods	1-4
Using the analyze and elaborate Commands	1-4
Using the read Command	1-5
Automatic Detection of RTL Language From File Extensions	1-6
Elaboration Reports	1-7
Reporting Elaboration Errors	1-8
Methodology	1-9
Example.	1-10
hdlin_elab_errors_deep FAQs	1-15
Parameterized Models (Generics)	1-17
Configuration Support.	1-20
Example 1: Bind Entity to Architecture	1-21
Example 2: Use Architectures From the Same Library	1-23
Example 3: Use Architectures From Different Libraries	1-24
Example 4: Configuration With a Component Inside a Concurrent Block	1-27
Example 5: Generic in a Configuration	1-29
Example 6: Port Map in a Configuration	1-30

Example 7: Nested Configurations	1-31
Example 8: Indirectly Nested Configurations.....	1-33
Example 9: Embedded Configurations	1-33
Example 10: Multiple Architectures in Embedded Configurations - Last Chosen as Default	1-37
Example 11: Combinations of Embedded, Nested, and Stand-Alone Configurations Require Elaborate with a Configuration Identifier	1-39
Tool Behavior When Using Elaborate With the Entity Name	1-47
Design Libraries	1-49
Predefined Design Libraries	1-49
Creating User-Defined Design Libraries	1-50
User-Defined Design Library Example	1-50
Using Design Units From Design Libraries	1-51
Design Library Reports	1-52
Package Support	1-52
Array Naming Variables	1-53
Licenses	1-54

2. General Coding Considerations

Declarative Region in generate Statements	2-2
Design Units	2-3
Direct Instantiation of Components	2-3
Default Component Port Assignments.....	2-4
Component Name Restrictions	2-5
Component Sources	2-5
Component Port Consistency	2-5
Instantiating Technology-Independent Components	2-6
Component Architecture	2-7
Package Names.....	2-8
Procedures and Functions as Design Components	2-8
Data Types and Data Objects	2-11
Globally Static Expressions in Port Maps	2-12
Aliases	2-12
Deferred Constants	2-13

Aggregates in Constant Record Declarations	2-15
Enumerated Types in the for and for-generate Constructs	2-16
Groups	2-17
Integer Data Types	2-17
Overloading an Enumeration Literal	2-18
Enumeration Encoding	2-18
Constant Floating-Point Support	2-19
Syntax and Declarations	2-19
Operators and Expressions	2-20
Guidelines	2-21
math_real Package Support	2-22
Unsupported Constructs and Operators	2-22
Using the math_real Package	2-22
Arithmetic Functions	2-22
Usage Examples	2-23
Operands	2-24
Operand Bit-Width	2-24
Array Slice Names	2-25
Computable and Noncomputable Operands	2-25
Indexed Name Targets	2-28
Modeling Considerations	2-28
Concatenation	2-28
Unconstrained Type Ports	2-30
Input Ports Associated With the Keyword open	2-30
Multiple Events in a Single Process	2-30
Keeping Signal Names	2-31
Controlling Structure	2-32
Resolution Functions	2-33
Asynchronous Designs	2-34
Using Don't Care Values	2-34
Finite State Machines	2-35
Variables and Commands Specific to FSM Inference	2-35
FSM Coding Requirements	2-36
FSM Example and Inference Report	2-37
State Vector Attribute	2-39
Multibit Inference	2-40
Multibit Inference Overview	2-40

Controlling Multibit Inference	2-40
infer_multibit Attribute Examples	2-41
Simulation/Synthesis Mismatch Issues	2-43
Type Mismatches	2-44
Set and Reset Signals	2-44
Z Values in Expressions	2-44
Don't Care Values in Comparisons	2-44
Ordering of Enumerated Types Using the ENUM_ENCODING attribute	2-45
Sensitivity Lists	2-45
Delay Specifications	2-46
3. Modeling Combinational Logic	
Synthetic Operators	3-2
Logic and Arithmetic Operator Implementation	3-4
Propagating Constants	3-5
Bit-Truncation Coding for DC Ultra Datapath Extraction	3-5
Multiplexing Logic	3-8
SELECT_OP Inference	3-8
MUX_OP Inference	3-10
Variables That Control MUX_OP Inference	3-12
MUX_OP Inference Examples	3-14
MUX_OP Inference Limitations	3-16
Unintended Latches and Feedback Paths in Combinational Logic	3-17
4. Modeling Sequential Logic	
Generic Sequential Cells (SEQGENs)	4-2
Inference Reports for Flip-Flops and Latches	4-4
Register Inference Variables	4-5
Register Inference Attributes	4-6
Inferring D and Set/Reset (SR) Latches	4-7
Inferring SR Latches	4-7

Inferring D Latches	4-9
Overview—Latch Inference	4-9
Basic D Latch	4-10
D Latch With Asynchronous Set	4-11
D Latch With Asynchronous Reset	4-12
D Latch With Asynchronous Set and Reset	4-13
Limitations of D Latch Inference	4-14
Inferring D Flip-Flops	4-14
Overview—Inferring D Flip-Flops	4-15
Enabling Conditions in if Statements	4-16
Positive-Edge-Triggered D Flip-Flop	4-16
Negative-Edge-Triggered D Flip-Flop	4-18
D Flip-Flop With Asynchronous Set	4-19
D Flip-Flop With Asynchronous Reset	4-20
D Flip-Flop With Asynchronous Set and Reset	4-21
D Flip-Flop With Synchronous Set	4-22
D Flip-Flop With Synchronous Reset	4-23
D Flip-Flop With Complex Set/Reset Signals	4-25
D Flip-Flop With Synchronous and Asynchronous Load	4-26
Multiple Flip-Flops: Asynchronous and Synchronous Controls	4-27
Inferring JK Flip-Flops	4-29
Basic JK Flip-Flop	4-29
JK Flip-Flop With Asynchronous Set and Reset	4-31
Inferring Master-Slave Latches	4-32
Master-Slave Latch Overview	4-32
Master-Slave Latch: Single Master-Slave Clock Pair	4-33
Master-Slave Latch: Multiple Master-Slave Clock Pairs	4-33
Master-Slave Latch: Discrete Components	4-35
Limitations of Register Inference	4-36
Unloaded Sequential Cell Preservation	4-37
5. Inferring Three-State Logic	
Inference Report for Three-State Devices	5-2
Inferring a Basic Three-State Driver	5-2
Inferring One Three-State Buffer From a Single Process	5-3

Inferring Two Three-State Buffers	5-4
Three-State Buffer With Registered Enable	5-6
Three-State Buffer With Registered Data	5-7
Understanding the Limitations of Three-State Inference	5-9
6. Directives, Attributes, and Variables	
Directives	6-2
keep_signal_name.	6-2
template.	6-2
translate_off and translate_on	6-2
synthesis_off and synthesis_on	6-2
resolution_method.	6-3
map_to_entity and return_port_name	6-3
dc_tcl_script_begin and dc_tcl_script_end	6-3
Attributes.	6-5
Synopsys Defined Attributes	6-5
IEEE Predefined Attributes	6-11
Variables.	6-11
7. Write Out Designs in VHDL Format	
Netlist Writer Variables	7-2
Writing Out VHDL Files.	7-2
VHDL Write Variables	7-3
Bit and Bit-Vector Variables	7-5
Resolution Function Variables	7-6
Types and Type Conversion Variables	7-7
Architecture and Configuration Variables	7-8
Preserving Port Types.	7-9
VHDL Netlister Coding Considerations.	7-11
Built-In Type Conversion Function	7-11
How the Netlister Handles Custom Types	7-12
Case Sensitivity	7-13

Appendix A. Examples

Read-Only Memory	A-2
Waveform Generator	A-4
Definable-Width Adder-Subtractor	A-6
Count Zeros—Combinational Version.	A-7
Count Zeros—Sequential Version.	A-9
Soft Drink Machine—State Machine Version	A-11
Soft Drink Machine—Count Nickels Version.	A-14
FSM Example: Moore Machine	A-16
FSM Example: Mealy Machine	A-18
Carry-Lookahead Adder	A-20
Carry Value Computations.	A-20
Implementation	A-25
Serial-to-Parallel Converter—Counting Bits	A-26
Input Format	A-26
Implementation Details	A-27
Serial-to-Parallel Converter—Shifting Bits	A-31
Programmable Logic Arrays	A-33

Appendix B. Predefined Libraries

std_logic_1164	B-2
built_in Pragmas	B-2
std_logic_arith	B-4
std_logic_arith Package Overview.	B-4
Modifying the std_logic_arith Package	B-6
std_logic_arith Data Types.	B-7
UNSIGNED.	B-7
SIGNED	B-7
Conversion Functions	B-8
Arithmetic Functions	B-9
Comparison Functions.	B-12
Shift Functions.	B-14

Multiplication Using Shifts	B-15
numeric_std	B-15
Unsupported Constructs and Operators	B-16
Using the numeric_std Package	B-16
numeric_std Data Types	B-16
Conversion Functions	B-17
Resize Functions	B-17
Arithmetic Functions	B-17
Comparison Functions	B-19
Defining Logical Operators Functions	B-22
Shift and Rotate Functions	B-23
Shift and Rotate Operators	B-24
std_logic_misc	B-26
Standard Package	B-27
Data Type BOOLEAN	B-28
Data Type BIT	B-28
Data Type CHARACTER	B-28
Data Type INTEGER	B-29
Data Type NATURAL	B-29
Data Type POSITIVE	B-29
Data Type STRING	B-29
Data Type BIT_VECTOR	B-29
Synopsys Package—ATTRIBUTES	B-29

Appendix C. VHDL Constructs

VHDL Construct Support	C-2
Configurations	C-2
Design Units	C-2
Data Types	C-3
Declarations	C-4
Specifications	C-5
Names	C-6
Operators	C-7
Operands and Expressions	C-9
Sequential Statements	C-10

Concurrent Statements	C-11
Lexical Elements	C-12
Specifics of Identifiers.	C-12
Specifics of Extended Identifiers.	C-12
Predefined Language Environment	C-13
VHDL Reserved Words.	C-13

Appendix D. New Features and Enhancements in Presto VHDL

VHDL-93 Supported Features	D-2
New Features and Enhancements History	D-7

Glossary

Index

Preface

This preface includes the following sections:

- [What's New in This Release](#)
- [About This Reference Manual](#)
- [Customer Support](#)

What's New in This Release

Information about new features, enhancements, and changes, along with known problems, limitations, and resolved Synopsys Technical Action Requests (STARs), is available in the *HDL Compiler (Synthesis) Release Notes* in SolvNet.

To see the *HDL Compiler (Synthesis) Release Notes*,

1. Go to

<https://solvnet.synopsys.com/ReleaseNotes>

If prompted, enter your user name and password. If you do not have a Synopsys user name and password, follow the instructions to register with SolvNet.

2. Click HDL Compiler (Synthesis), then select a release in the list that appears at the bottom.

About This Reference Manual

Presto VHDL translates a VHDL hardware language description into a GTECH netlist that is used by the Design Compiler tool to create an optimized netlist. This manual describes the following:

- Modeling combinational logic, synchronous logic, three-state buffers, and multibit cells with Presto VHDL
- Using Presto VHDL directives, attributes, and variables

Audience

The *HDL Compiler (Presto VHDL) Reference Manual* is written for logic designers and electronic engineers who are familiar with Design Compiler. Knowledge of the VHDL language is required, and knowledge of a high-level programming language is helpful.

Related Publications

For additional information about Presto VHDL, see *Documentation on the Web*, which is available through SolvNet at the following address:

<https://solvnet.synopsys.com/DocsOnWeb>

You might also want to refer to the documentation for the following related Synopsys products:

- Design Compiler
- DesignWare
- Library Compiler
- VHDL System Simulator

Conventions

The following conventions are used in Synopsys documentation.

Convention	Description
Courier	Indicates command syntax.
<i>Courier italic</i>	Indicates a user-defined value in Synopsys syntax, such as <i>object_name</i> . (A user-defined value that is not Synopsys syntax, such as a user-defined value in a Verilog or VHDL statement, is indicated by regular text font italic.)
Courier bold	Indicates user input—text you type verbatim—in Synopsys syntax and examples. (User input that is not Synopsys syntax, such as a user name or password you enter in a GUI, is indicated by regular text font bold.)
[]	Denotes optional parameters, such as <i>pin1 [pin2 ... pinN]</i>
	Indicates a choice among alternatives, such as <i>low medium high</i> (This example indicates that you can enter one of three possible values for an option: low, medium, or high.)
—	Connects terms that are read as a single term by the system, such as <i>set_annotated_delay</i>
Control-c	Indicates a keyboard combination, such as holding down the Control key and pressing c.
\	Indicates a continuation of a command line.
/	Indicates levels of directory structure.
Edit > Copy	Indicates a path to a menu command, such as opening the Edit menu and choosing Copy.

Customer Support

Customer support is available through SolvNet online customer support and through contacting the Synopsys Technical Support Center.

Accessing SolvNet

SolvNet includes an electronic knowledge base of technical articles and answers to frequently asked questions about Synopsys tools. SolvNet also gives you access to a wide range of Synopsys online services including software downloads, documentation on the Web, and “Enter a Call to the Support Center.”

To access SolvNet, go to the SolvNet Web page at the following address:

<https://solvnet.synopsys.com>

If prompted, enter your user name and password. If you do not have a Synopsys user name and password, follow the instructions to register with SolvNet.

If you need help using SolvNet, click HELP in the top-right menu bar or in the footer.

Contacting the Synopsys Technical Support Center

If you have problems, questions, or suggestions, you can contact the Synopsys Technical Support Center in the following ways:

- Open a call to your local support center from the Web by going to <http://solvnet.synopsys.com> (Synopsys user name and password required), and then clicking “Enter a Call to the Support Center.”
- Send an e-mail message to your local support center.
 - E-mail support_center@synopsys.com from within North America.
 - Find other local support center e-mail addresses at <http://www.synopsys.com/Support/GlobalSupportCenters/Pages>
- Telephone your local support center.
 - Call (800) 245-8005 from within the continental United States.
 - Call (650) 584-4200 from Canada.
 - Find other local support center telephone numbers at <http://www.synopsys.com/Support/GlobalSupportCenters/Pages>

1

Introduction to HDL Compiler (Presto VHDL)

The Synopsys Design Compiler tool uses the HDL Compiler (Presto VHDL) tool to read designs written in the VHDL hardware description language.

Note:

This manual also refers to the HDL Compiler (Presto VHDL) as Presto VHDL.

For a list of supported VHDL-93 features, see [“VHDL-93 Supported Features” on page D-2](#).
For other new features, see [“New Features and Enhancements History” on page D-7](#).

This chapter contains the following sections:

- [Reading Designs](#)
- [Elaboration Reports](#)
- [Reporting Elaboration Errors](#)
- [Parameterized Models \(Generics\)](#)
- [Configuration Support](#)
- [Design Libraries](#)
- [Package Support](#)
- [Array Naming Variables](#)
- [Licenses](#)

Reading Designs

When Presto VHDL reads a VHDL design, it checks the code for correct VHDL syntax and builds the generic technology (GTECH) netlist that Design Compiler uses to optimize the design. You can use the `read` command to do both functions automatically, or you can use the `analyze` and `elaborate` commands to do each function separately. It is recommended that you use the `analyze` and `elaborate` commands instead of the `read` command, because

- The `elaborate` command includes the functionality of the `link` command, which resolves design references.
- For parameterized designs, the `read` command builds a design only with the default generic value; if you want to build a new design with a nondefault value, you must use `analyze` and `elaborate`. See [“Parameterized Models \(Generics\)” on page 1-17](#).
- The `read` command ignores stand-alone configurations.

Beginning with the X-2006.06 release, Presto VHDL supports automatic linking of mixed language libraries. In Verilog, the default library is the work directory, and you cannot have multiple libraries. In VHDL, however, you can have multiple design libraries. In earlier versions, Presto VHDL could not link mixed libraries and returned LINK-5 warnings.

If you want to read a VHDL netlist, use the specialized VHDL netlist reader instead of Presto VHDL. The VHDL netlist reader reads netlists faster and uses less memory.

Important:

To enable the VHDL netlist reader, you must set `enable_vhdl_netlist_reader` to true (the default is false) and use the netlist reading commands shown in [Table 1-1 on page 1-4](#).

If the file is not a VHDL netlist or if `enable_vhdl_netlist_reader` is set to false, Presto VHDL reads the design.

This section contains the following subsections:

- [Summary of Reading Methods](#)
- [Using the analyze and elaborate Commands](#)
- [Using the read Command](#)
- [Automatic Detection of RTL Language From File Extensions](#)

Summary of Reading Methods

The recommended and alternative reading commands are shown in [Table 1-1](#).

Table 1-1 Reading Commands

Type of input	Reading method
RTL	<p>Recommended reading method</p> <pre>analyze -format vhd1 { files } elaborate <topdesign></pre> <p>Alternative reading method</p> <pre>read_vhd1 { files } (tcl) read_file -format vhd1 { files } (tcl)</pre>
Gate-level netlists	<p>Recommended reading method</p> <pre>set enable_vhd1_netlist_reader true read_vhd1 -netlist { files } (tcl) or set enable_vhd1_netlist_reader true read_file -format vhd1 -netlist { files } (tcl)</pre> <p>Alternative reading method</p> <p>Any RTL-reading command also works for reading netlists, but is slower and uses more memory than the specialized gate-level netlist reader.</p>

Using the analyze and elaborate Commands

When you are elaborating a design, the last analyzed architecture is used if you do not specify an architecture.

To understand how to use the `analyze` and `elaborate` commands, consider [Example 1-1](#), which represents a single design with no user-defined libraries.

Example 1-1 Design dff_pos

```
library IEEE ;
use IEEE.std_logic_1164.all;

entity dff_pos is
  port (DATA, CLK : in std_logic;
        Q : out std_logic );
end dff_pos;

architecture rtl of dff_pos is
begin
  process (CLK) begin
    if (rising_edge (CLK)) then
```

```
        Q <= DATA;
    end if;
end process;
end rtl;
```

[Example 1-2](#) through [Example 1-4](#) show various reading methods.

Example 1-2

--The analyze and elaborate commands read design dff_pos which is contained
--in a single file, dff_entity_arch.vhd.

```
dc_shell> analyze -format vhdl dff_entity_arch.vhd
dc_shell> elaborate dff_pos
```

Example 1-3

--Design dff_pos is contained in two files, dff_entity.vhd and dff_arch.vhd.
--Each file is analyzed by a separate analyze command and then the
--dff_pos design is elaborated.

```
dc_shell> analyze -format vhdl dff_entity.vhd
dc_shell> analyze -format vhdl dff_arch.vhd
dc_shell> elaborate dff_pos
```

Example 1-4

--Design dff_pos is contained in two files, dff_entity.vhd and dff_arch.vhd.
--Both files are analyzed using a single analyze command, and then elaborated.

```
dc_shell> analyze -format vhdl {dff_entity.vhd dff_arch.vhd}
dc_shell> elaborate dff_pos
```

Using the read Command

For you to use any `read` command, all your entity/architecture definitions must be contained in a single read. The entity and architecture definitions may be contained in separate files. [Table 1-2 on page 1-6](#) shows various reading examples.

When you use the `read` command, you must also use the `current_design` command, to specify the working design, and the `link` command, to resolve design references, before optimizing the design. These operations are automatically done by the `elaborate`

command. If you have configurations, you must use `analyze`. The `read` command ignores configurations and has limited supported for generics. See [“Configuration Support” on page 1-20](#) and [“Parameterized Models \(Generics\)” on page 1-17](#).

Table 1-2 read Command Examples

Example	Description
<code>dc_shell-t> read_file -format vhd ALU.vhd</code>	The <code>read_file</code> command reads the single design in the <code>ALU.vhd</code> file.
<code>dc_shell-t> read_vhdl ALU.vhd</code>	The <code>read_vhdl</code> command reads the single design in the <code>ALU.vhd</code> file.
<code>dc_shell-t> read_vhdl {ALU_subblock.vhd ALU_top.vhd}</code>	The <code>read_vhdl</code> command reads a design consisting of two files: <code>ALU_subblock.vhd</code> and <code>ALU_top.vhd</code> .
<code>dc_shell-t> read_vhdl ALU_subblock.vhd dc_shell-t> read_vhdl ALU_top.vhd</code>	Two <code>read_vhdl</code> commands read a design consisting of two files: <code>ALU_subblock.vhd</code> and <code>ALU_top.vhd</code> .

Automatic Detection of RTL Language From File Extensions

You can specify a file format with the `read_file` command by using the `-format` option. If you do not specify a format, `read_file` infers the format based on the file extension. If the file extension is unknown, the format is assumed to be `.ddc`. The file extensions in [Table 1-3](#) are supported for automatic inference:

Table 1-3 Supported File Extensions for Automatic Inference

Format	File extensions
ddc	.ddc
db	.db, .sldb, .sdb, .db.gz, .sldb.gz, .sdb.gz
VHDL	.vhd, .vhdl, .vhd.gz, .vhdl.gz

The supported extensions are not case sensitive. All formats except `.ddc` can be compressed in gzip (`.gz`) format.

If you specify a file format that is not supported, Design Compiler generates an error message. For example, if you specify `read_file test.vlog`, Design Compiler issues the following DDC-2 error message:


```
Error: Unable to open file 'test.vlog' for reading. (DDC-2)
```

Elaboration Reports

You can control the type and the amount of information that is included in elaboration reports by setting the `hdlin_reporting_level` variable to `basic`, `comprehensive`, `verbose`, or `none`. Table 1-4 shows what is included in the report based on each setting. In the table, `true` indicates that the information will be included in the report, `false` indicates that it will not be included in the report, and `verbose` indicates that the report will include detailed information. If you do not specify a setting, `hdlin_reporting_level` is set to `basic` by default.

Table 1-4 Basic `hdlin_reporting_level` Variable Settings

Information included in report	none	basic	comprehensive	verbose
<code>floating_net_to_ground</code> Reports the floating net to ground connections.	false	false	true	true
<code>fsm</code> Prints a report of inferred state variables.	false	false	true	true
<code>inferred_modules</code> Prints a report of inferred sequential elements.	false	true	true	verbose
<code>mux_op</code> Prints a report of MUX_OPs.	false	true	true	true
<code>syn_cell</code> Prints a report of synthetic cells.	false	false	true	true
<code>tri_state</code> Prints a report of inferred three-state elements.	false	true	true	true

In addition to the basic settings, you can also specify the add (+) or subtract (-) options to customize a report. For example, if you want a report to include floating net-to-ground connections, synthetic cells, inferred state variables, and verbose information for inferred sequential elements, but you do not want to include MUX_OPs or inferred three-state elements, you can set the `hdlin_reporting_level` variable to the following setting:

```
set hdlin_reporting_level verbose-mux_op-tri_state
```

As another example, if you set the `hdlin_reporting_level` variable to the following setting,


```
set hdlin_reporting_level basic+floating_net_to_ground+syn_cell+fsm
```

HDL Compiler issues a report that is equivalent to `set hdlin_reporting_level comprehensive`, meaning that the elaboration report will include comprehensive information for all the information listed in the first column in [Table 1-4](#).

Reporting Elaboration Errors

HDL Compiler (Presto VHDL) elaborates designs in a top-down hierarchical order. The elaboration failure of a top-level module prohibits the elaboration of all associated submodules. The `hdlin_elab_errors_deep` variable allows the elaboration of submodules even if the top-level module elaboration fails, enabling Presto VHDL to report more elaboration, link, and VER-37 errors and warnings in a hierarchical design during the first elaboration run.

To understand how this variable works, consider the four-level hierarchical design in [Figure 1-1 on page 1-9](#). This design has elaboration (ELAB) errors as noted in the figure.

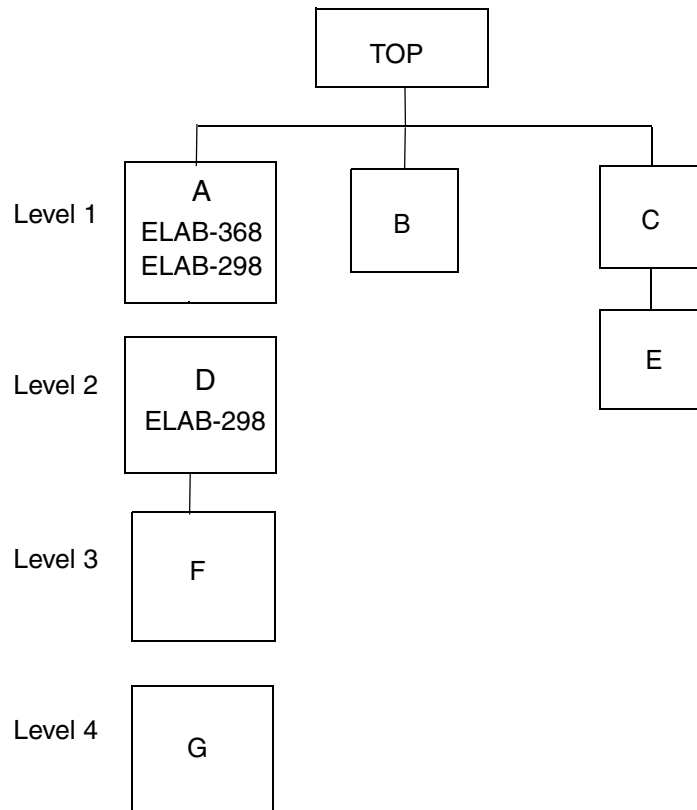Figure 1-1 Hierarchical Design

Under default conditions, when you elaborate the design, Presto VHDL reports only the errors in the first level (ELAB-368 and ELAB-298 in module A). To find the second-level error (ELAB-298 in submodule D), you need to fix the first-level errors and elaborate again.

When you use the `hdlin_elab_errors_deep` variable, you only need to elaborate once to find the errors in module A and submodule D.

The next section describes the `hdlin_elab_errors_deep` variable and provides methodology, examples, and a list of frequently asked questions (FAQ).

Methodology

Use the following methodology to enable Presto VHDL to report elaboration, link, and VER-37 errors across the hierarchy during a single elaboration run.

1. Identify and fix all syntax errors in the design.
2. Set `hdlin_elab_errors_deep` to true.

When you set this variable to true, Presto VHDL reports

“Presto compilation run in rtl debug mode.”

Important:

Important: Presto VHDL does not create designs when you set `hdlin_elab_errors_deep` to true. The tool reports warnings if you try to use commands that require a design. For example, if you run `list_design`, the tool reports


“Warning: No designs to list. (UID-275)”

3. Elaborate your design using the `elaborate` command.
4. Fix any elaboration, link, and VER-37 errors. Review the warnings and fix errors as needed.
5. Set `hdlin_elab_errors_deep` to false.
6. Elaborate your error-free design.
7. Proceed with your normal synthesis flow.

The next section provides examples showing Presto VHDL reporting all errors across the hierarchy, reducing the need for multiple elaboration runs.

Example

This section uses a design to show Presto VHDL's hierarchical error reporting capability which is made available through the `hdlin_elab_errors_deep` variable. [Figure 1-2 on page 1-11](#) shows the block diagram for design Top; [Example 1-5 on page 1-11](#) shows the RTL code. The design errors are noted in the figure.

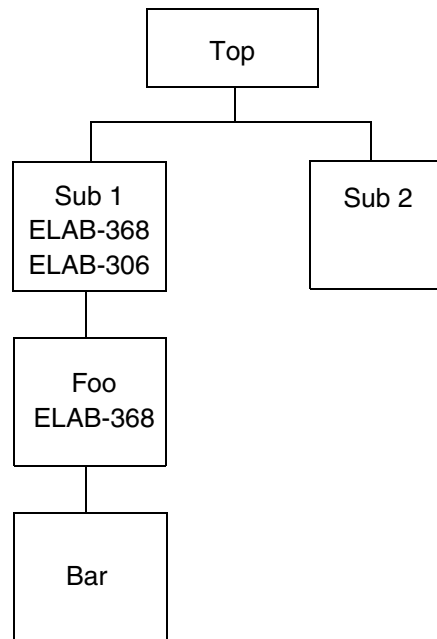Figure 1-2 Hierarchical Design*Example 1-5 VHDL RTL for Design Top*

```

-- entity top
entity top is
port (clk, a, b : in bit;
      c, o: out bit);
end entity top;

architecture A1 of top is
component sub1 is
port ( a, b      : in bit;
      o          : out bit);
end component sub1;
component sub2 is
port ( a, b      : in bit;
      o          : out bit);
end component sub2;
begin
  sub1_inst: sub1 port map (a, b, c);
  sub2_inst: sub2 port map (a, b, o);
end A1;

-- entity sub1
library IEEE;
use IEEE.std_logic_1164.all;
entity sub1 is
port ( a, b      : in bit;

```

```

        o      : out bit);
end entity sub1;
architecture A1 of sub1 is
component foo is
port ( a, b      : in bit;
      o      : out bit);
end component foo;
    signal r      : bit_vector(1 downto 0);
    signal temp, sig, sig1 : std_logic;
    constant icon : integer := 5;
begin

    temp <= TO_STDULOGIC(a or b);
    temp <= '1';          -- ELAB-368  error
    temp <= sig and 'Z';  -- ELAB-306  error

    foo_inst: foo port map (a, b, o);
end A1;

-- entity foo
library IEEE;
use IEEE.std_logic_1164.all;
entity foo is
port ( a, b      : in bit;
      o      : out bit);
end entity foo;
architecture A1 of foo is
component bar is
port ( a, b      : in bit;
      o      : out bit);
end component bar;
signal temp : bit;
begin
    temp <= a and b;
    temp <= '1';          -- ELAB-368  error
    bar_inst: bar port map(a, b, o);
end A1;

-- entity bar
entity bar is
port ( a, b      : in bit;
      o      : out bit);
end entity bar;
architecture A1 of bar is
begin
    o <= not b;
end A1;

-- entity sub2
entity sub2 is
port ( a, b      : in bit;
      o      : out bit);
end entity sub2;
```

```

architecture A1 of sub2 is
begin
    o <= a or b;
end A1;

```

When you elaborate design Top with `hdlin_elab_errors_deep` set to false (default behavior), Presto VHDL reports the first-level errors in sub1 (ELAB-368 and ELAB-306) but does not report the ELAB-368 error in submodule foo. [Example 1-6](#) shows the session log.

Example 1-6

```

analyze -f vhdl test.vhd
Running PRESTO HDLC
Compiling Entity Declaration TOP
Compiling Architecture A1 of TOP
Compiling Entity Declaration SUB1
Compiling Architecture A1 of SUB1
Compiling Entity Declaration FOO
Compiling Architecture A1 of FOO
Compiling Entity Declaration BAR
Compiling Architecture A1 of BAR
Compiling Entity Declaration SUB2
Compiling Architecture A1 of SUB2
Presto compilation completed successfully.
Loading db file '/.../lsi_10k.db'
1
elaborate top
Loading db file '/.../gtech.db'
Loading db file '/.../standard.sldb'
    Loading link library 'lsi_10k'
    Loading link library 'gtech'
Running PRESTO HDLC
Presto compilation completed successfully.
Elaborated 1 design.
Current design is now 'top'.
Information: Building the design 'sub1'. (HDL-193)
Error:  ./test.vhd:39: Net 'temp', or a directly connected net, is driven
by
more than one source, and at least one source is a constant net.
(ELAB-368)
Error:  ./test.vhd:40: Illegal use of tristate value (HDL-140).
(ELAB-306)
*** Presto compilation terminated with 2 errors. ***
Information: Building the design 'sub2'. (HDL-193)
Presto compilation completed successfully.
Warning: Unable to resolve reference 'sub1' in 'top'. (LINK-5)
1
current_design
Current design is 'top'.
{top}
list_design
sub2      top (*)
1

```

When you elaborate design Top with `hdlin_elab_errors_deep` set to true, Presto VHDL reports errors across the hierarchy, as shown in [Example 1-7](#).

Important:

Presto VHDL does not create designs when `hdlin_elab_errors_deep` is set to true. If you run `list_design`, Presto VHDL reports
 “Warning: No designs to list. (UID-275)”

Example 1-7

```
set hdlin_elab_errors_deep TRUE
TRUE
analyze -f vhd1 test.vhd
Running PRESTO HDLC
Compiling Entity Declaration TOP
Compiling Architecture A1 of TOP
Compiling Entity Declaration SUB1
Compiling Architecture A1 of SUB1
Compiling Entity Declaration FOO
Compiling Architecture A1 of FOO
Compiling Entity Declaration BAR
Compiling Architecture A1 of BAR
Compiling Entity Declaration SUB2
Compiling Architecture A1 of SUB2
Presto compilation completed successfully.
Loading db file '/.../lsi_10k.db'
1
elaborate top
Loading db file '/.../gtech.db'
Loading db file '/.../standard.sldb'
  Loading link library 'lsi_10k'
  Loading link library 'gtech'
Running PRESTO HDLC
*** Presto compilation run in rtl debug mode. ***
Presto compilation completed successfully.
Elaborated 1 design.
Current design is now 'top'.
Information: Building the design 'sub1'. (HDL-193)
*** Presto compilation run in rtl debug mode. ***
Error: ./test.vhd:39: Net 'temp', or a directly connected net, is driven
by
more than one source, and at least one source is a constant net.
(ELAB-368)
Error: ./test.vhd:40: Illegal use of tristate value (HDL-140).
(ELAB-306)
*** Presto compilation terminated with 2 errors. ***
*** Presto compilation run with backup flow. ***
Information: Building the design 'sub2'. (HDL-193)
*** Presto compilation run in rtl debug mode. ***
Presto compilation completed successfully.
Information: Building the design 'foo'. (HDL-193)
*** Presto compilation run in rtl debug mode. ***
Error: ./test.vhd:60: Net 'temp', or a directly connected net, is driven
```



```

by
more than one source, and at least one source is a constant net.
(ELAB-368)
*** Presto compilation terminated with 1 errors. ***
*** Presto compilation run with backup flow. ***
Information: Building the design 'bar'. (HDL-193)
*** Presto compilation run in rtl debug mode. ***
Presto compilation completed successfully.
1
current_design
Error: Current design is not defined. (UID-4)
list_design
Warning: No designs to list. (UID-275)
0

```

The `hdlin_elab_errors_deep` variable is designed to save you time in finding design elaboration and linking errors. For VHDL design Top, under default conditions, only the top-level errors are identified:

- ELAB-368 and ELAB-306 in sub1

To find the ELAB-368 error in submodule foo, you need to fix all the errors in sub1 and elaborate again. However, if you set `hdlin_elab_errors_deep` to true, all errors across the hierarchy are identified in one elaboration run. Presto VHDL reports

- ELAB-368 and ELAB-306 in sub1
- ELAB-368 in submodule foo

hdlin_elab_errors_deep FAQs

1. Why should I use the `hdlin_elab_errors_deep` variable?

This variable enables Presto VHDL to report elaboration, linking, and VER-37 errors and warnings across hierarchical designs in a single elaboration run.

2. Why isn't the `hdlin_elab_errors_deep` variable set to true by default?

If the variable were true by default, no designs could be saved. To prevent designs with errors from being propagated, Presto VHDL does not save designs when `hdlin_elab_errors_deep` is set to true.

3. Why can't Presto VHDL save only the designs that don't have errors when `hdlin_elab_errors_deep` is set to true?

When `hdlin_elab_errors_deep` is set to true, Presto VHDL elaborates lower-level designs even if the top-level design has errors. Occasionally, errors in the top level cause lower-level errors that are not reported; the lower-level appears to be error free, but isn't.

4. What types of errors does `hdlin_elab_errors_deep` report?

ELAB errors and warnings, LINK errors and warnings, and the VER-37 internal error.

5. How does Presto VHDL handle parameterized designs that do not have parameters specified?

Presto VHDL reports these as errors during analyze.

6. Why do I have to fix my syntax errors before elaborating?

After doing analyze, Presto VHDL creates an intermediate design that the elaborate command uses to elaborate the design. This intermediate file is created only after all syntax errors are fixed. If you do not fix all the syntax errors, there is no intermediate file to elaborate.

7. I want to use the `read_file` command. What happens if I set `hdlin_elab_errors_deep` to true and use `read_file`?

The `read_file` command is not supported for use with `hdlin_elab_errors_deep` because `read_file` does not include the functionality of the `link` command. The `elaborate` command includes the functionality of the `link` command. The `read_file` command does not allow command-line parameter specification; the `elaborate` command allows this.

8. How much longer does elaboration take when I set `hdlin_elab_errors_deep` to true?

There is a very small increase in elaboration time.

9. Does capacity drop when I set `hdlin_elab_errors_deep` to true? Is there a recommended number of errors I can tell Presto VHDL to stop at? If I have lots of errors, will it hang?

No noticeable difference in performance has been noted.

10. Can I compile when `hdlin_elab_errors_deep` is true?

No design is created when `hdlin_elab_errors_deep` is true. Even if the design appears to be error free, no design will be created. You cannot compile because there is no design to compile.

11. When `hdlin_elab_errors_deep` is true, will all errors be valid?

In most cases, all reported errors are valid.

12. The `hdlin_elab_errors_deep` command seems like a very helpful feature. Why didn't you do it earlier?

Designs are getting bigger and to accommodate these larger designs, more hierarchy is being created. Thus the need for `hdlin_elab_errors_deep` developed over time.

13. Can I use the `-clock_gate` option with the elaborate command when `hdlin_elab_errors_deep` is true?

No. You cannot create clock gating with the `elaborate -clock_gating` command. The tool will error out.

14. Can I get incorrect logic when using `hdlin_elab_errors_deep`?

No, because a design is not created.

15. Is `hdlin_elab_errors_deep` a lint tool?

No, Presto VHDL does not include a lint tool. The Design Compiler tool provides the `check_design` command, which provides the lint function.

16. What happens if I set `hdlin_elab_errors_deep` to true and analyze a design with syntax errors?

The syntax errors are reported (same as default behavior).

17. What happens when I have multiple instances of erroneous designs when `hdlin_elab_errors_deep` is true?

There is no behavior change. Presto VHDL reports ELAB errors when elaborating the design (module declaration), not the instantiation. The error messages do not get multiplied by the number of instances. This is the same as the default behavior.

18. Does Presto VHDL report all syntax errors when I use the `analyze` command? Are all syntax errors reported at once, or do I need to do multiple `analyze` commands?

One `analyze` command reports all the syntax errors.

19. What happens if I read in some designs and later set the `hdlin_elab_errors_deep` variable to true?

Previously read-in designs will still be in memory, but it is better to remove the designs before setting `hdlin_elab_errors_deep` to true.

Parameterized Models (Generics)

Presto VHDL fully supports generic declarations. Generics enable you to assign unique parameter values to each model instance when you elaborate your design.

The model in [Example 1-8](#) uses a generic declaration to determine the bit-width of a register input; the default width is declared as 2.

Example 1-8 Generic Register Model

```
LIBRARY IEEE, SYNOPSYS;
USE IEEE.STD_LOGIC_1164.ALL;
USE IEEE.STD_LOGIC_ARITH.ALL;
USE IEEE.STD_LOGIC_MISC.ALL;
USE SYNOPSYS.ATTRIBUTES.ALL;
```

```

entity DFF is
  generic(N : INTEGER := 2); --flip flop is N bits wide
  port(input  : in STD_LOGIC_VECTOR (N - 1 downto 0);
        clock  : in STD_LOGIC;
        output : out STD_LOGIC_VECTOR (N - 1 downto 0) );
end DFF;

architecture RTL of DFF is
begin

  entry : process (clock)
    variable tmp: STD_LOGIC_VECTOR (N - 1 downto 0);
  begin
    if (clock = '0') then
      tmp := input;
    else
      if (clock = '1') then
        output <= tmp;
      end if;
    end if;
  end process;
end RTL;

```

To analyze the model in [Example 1-8 on page 1-17](#) and store the analyzed results in a user-specified design library, mylib, use the `analyze` command with the `-library` option, as follows (assume that the file name for the model in [Example 1-8 on page 1-17](#) is `n-register.vhd`):

```
dc_shell-t> analyze -format vhd1 n-register.vhd -library
mylib
```

If you want an instance of the register model to have a bit-width of 3, use the `elaborate` command to specify this as follows:

```
dc_shell-t> elaborate DFF -parameters N=3
```

The `list_designs` command shows the design, as follows:

```
dc_shell-t> list_designs
Design
-----
* DFF_N3
```

Using the `read` command with generics is not recommended, because you can build only the default value of the generic. If you do not specify a default generic value, Presto VHDL reports the following:

```
Warning: filename:line: Generic N does not have default
value. (ELAB-943).
```

In addition, you need to either set the variable `hdlin_auto_save_templates` to true or insert the `--synopsys template` directive in the entity declaration, as follows:

```
entity DFF is
  generic(N : INTEGER := 2); --flip flop is N bits wide
  port(input  : in STD_LOGIC_VECTOR (N - 1 downto 0);
        clock  : in STD_LOGIC;
        output : out STD_LOGIC_VECTOR (N - 1 downto 0) );
  -- synopsys template
end DFF;
```

The variables described in [Table 1-5](#) control the naming of designs based on generic models. To list their current values, enter the following:

```
dc_shell-t> printvar template_*
```

Table 1-5 Template Naming Variables

Variable	Description
template_naming_style	Controls how templates (VHDL generics) are named. The default value is <code>%s_%p</code> , where <code>%s</code> is the name of the source design and <code>%p</code> is the parameter list. By default, the design name and the parameter list are separated by an underscore (<code>_</code>). The naming style for the parameter list is the value of the <code>template_separator_style</code> variable.
template_separator_style	Provides a separator character for multiple parameters in a template name. The default value is an underscore (<code>_</code>).
template_parameter_style	Controls how template parameters are named. The default value is <code>%s%d</code> , where <code>%s</code> is the name of a parameter and <code>%d</code> is the value of that parameter. By default, the parameter name and value are not separated. If there are two or more parameters, each parameter name or value pair is separated by the value of the <code>template_separator_style</code> variable.

Configuration Support

To enable configuration support, set `hdlin_enable_configurations` to true (default is false).

Configurations bind entity design units to architecture design units. To specify a configuration, you must use the `analyze` command. For example, if `file.vhdl` contains the configuration `my_configuration`, read the design as follows:

```
analyze -f vhdl file.vhdl
elaborate my_configuration
```

Although VHDL allows different entities to have different architecture definitions of the same name, for example,

```
arch RTL1 of entity1 is
....
arch RTL1 of entity2 is
...
```

the same does not hold for configurations, for example,

```
configuration CNFG1 of entity1 is
....
configuration CNFG1 of entity2 is
...
```

is not supported. Presto VHDL binds the last read definition of `CNFG1` to both entities. Therefore, configuration names for different entities must be unique. There is no configuration/entity pair concept. If configurations for different entities have the same name and they are analyzed sequentially, only the last one remains.

Example 1-9

```
entity conf_0_vhdl is
  port(x: in BIT; y: out BIT);
end conf_0_vhdl;

architecture design_0_vhdl of conf_0_vhdl is
  begin
    y <= x;
  end design_0_vhdl;

configuration trivial_config of work.conf_0_vhdl is

  for design_0_vhdl
  end for;

end trivial_config;
```

[Example 1-10](#) shows the dc_shell log output.

Example 1-10

```
dc_shell> elaborate trivial_config
Running PRESTO HDLC
Loading db file '/SYNOPSYS_ROOT_DIRECTORY/libraries/syn/standard.sldb'
Loading db file '/SYNOPSYS_ROOT_DIRECTORY/libraries/syn/gtech.db'
Loading db file '/SYNOPSYS_ROOT_DIRECTORY/libraries/syn/lsi_10k.db'
format: vhdl
Presto compilation completed successfully.
Current design is now 'conf_0_vhdl'
```

This following subsections describe Presto VHDL support for configurations:

- [Example 1: Bind Entity to Architecture](#)
- [Example 2: Use Architectures From the Same Library](#)
- [Example 3: Use Architectures From Different Libraries](#)
- [Example 4: Configuration With a Component Inside a Concurrent Block](#)
- [Example 5: Generic in a Configuration](#)
- [Example 6: Port Map in a Configuration](#)
- [Example 7: Nested Configurations](#)
- [Example 8: Indirectly Nested Configurations](#)
- [Example 9: Embedded Configurations](#)
- [Example 10: Multiple Architectures in Embedded Configurations - Last Chosen as Default](#)
- [Example 11: Combinations of Embedded, Nested, and Stand-Alone Configurations Require Elaborate with a Configuration Identifier](#)

Example 1: Bind Entity to Architecture

[Example 1-11](#) uses configurations to bind components C1 and C2 to specific entity/architecture combinations.

Example 1-11

```
entity a_bar_b is
  port(a, b: in bit; c: out bit);
end a_bar_b;

architecture struct of a_bar_b is
  begin
    c <= not(a) and b;
  end struct;
```

```

entity a_b_bar is
  port(a, b: in bit; c: out bit);
end a_b_bar;

architecture struct of a_b_bar is
  begin
    c <= a and not(b);
  end struct;

entity conf_1_vhdl is
  port(a, b: in bit; c: out bit);
end conf_1_vhdl;

architecture struct of conf_1_vhdl is
  component a_bar_b port(a, b: in bit; c :out bit); end component;
  component a_b_bar port(a, b: in bit; c :out bit); end component;

  signal a_not_b, not_a_b: bit;
  begin
    C1: a_bar_b port map(a, b, not_a_b);
    C2: a_b_bar port map(a, b, a_not_b);

    c <= not_a_b or a_not_b;
  end struct;

configuration config_example1 of conf_1_vhdl is
  for struct -- of conf_1_vhdl
    for C1: a_bar_b
      use entity work.a_bar_b(struct);
    end for;
    for C2: a_b_bar
      use entity work.a_b_bar(struct);
    end for;
  end for;
end config_example1;

```

[Example 1-12](#) shows the dc_shell log output.

Example 1-12

```

dc_shell> elaborate config_example1
Running PRESTO HDLC
Loading db file '/SYNOPSYS_ROOT_DIRECTORY/libraries/syn/standard.sldb'
Loading db file '/SYNOPSYS_ROOT_DIRECTORY/libraries/syn/gtech.db'
Loading db file '/SYNOPSYS_ROOT_DIRECTORY/libraries/syn/lsi_10k.db'
Component WORK.STRUCT/CONF_1_VHDL.STRUCT.C1 has been configured to use
the
following implementation:
  Work Library: WORK
  Design Name:  A_BAR_B
  Architecture Name: STRUCT
Component WORK.STRUCT/CONF_1_VHDL.STRUCT.C2 has been configured to use
the
following implementation:
  Work Library: WORK
  Design Name:  A_B_BAR

```



```

Architecture Name: STRUCT
Presto compilation completed successfully.
Information: Building the design 'A_BAR_B'. (HDL-193)
Running PRESTO HDLC
Presto compilation completed successfully.
Information: Building the design 'A_B_BAR'. (HDL-193)
Running PRESTO HDLC
Presto compilation completed successfully.
Current design is now 'conf_1_vhdl'

```

Example 2: Use Architectures From the Same Library

[Example 1-13](#) uses configurations to bind two instances of the same component to different architectures of same entity. The component C1 is implemented using architecture struct1, while C2 is implemented using architecture struct2.

Example 1-13

```

entity a_bar_b is
    port(a, b: in bit; c: out bit);
end a_bar_b;

architecture struct1 of a_bar_b is
begin
    c <= not(a) and b;
end struct1;

architecture struct2 of a_bar_b is
begin
    c <= a and not(b);
end struct2;

entity conf_2_vhdl is
    port(a, b: in bit; c: out bit);
end conf_2_vhdl;

architecture struct of conf_2_vhdl is
    component a_bar_b port(a, b: in bit; c :out bit); end component;

    signal a_not_b, not_a_b: bit;
begin
    C1: a_bar_b port map(a, b, not_a_b);
    C2: a_bar_b port map(a, b, a_not_b);

    c <= not_a_b or a_not_b;

end struct;

configuration config_example2 of conf_2_vhdl is
    for struct -- of conf_2_vhdl
        for C1: a_bar_b

```

```

        use entity work.a_bar_b(struct1);
    end for;
    for C2: a_bar_b
        use entity work.a_bar_b(struct2);
    end for;
end for;
end config_example2;
```

[Example 1-14](#) shows the dc_shell log output.

Example 1-14

```

dc_shell> elaborate config_example2
Running PRESTO HDLC
Loading db file '/SYNOPSYS_ROOT_DIRECTORY/libraries/syn/standard.sldb'
Loading db file '/SYNOPSYS_ROOT_DIRECTORY/libraries/syn/gtech.db'
Loading db file '/SYNOPSYS_ROOT_DIRECTORY/libraries/syn/lsi_10k.db'
Component WORK.STRUCT/CONF_2_VHDL.STRUCT.C1 has been configured to use
the
following implementation:
    Work Library: WORK
    Design Name:  A_BAR_B
    Architecture Name: STRUCT1
Component WORK.STRUCT/CONF_2_VHDL.STRUCT.C2 has been configured to use
the
following implementation:
    Work Library: WORK
    Design Name:  A_BAR_B
    Architecture Name: STRUCT2
Presto compilation completed successfully.
Information: Building the design 'A_BAR_B'. (HDL-193)
Running PRESTO HDLC
Presto compilation completed successfully.
Information: Building the design 'A_BAR_B'. (HDL-193)
Running PRESTO HDLC
Presto compilation completed successfully.
Current design is now 'conf_2_vhdl'
```

Example 3: Use Architectures From Different Libraries

[Example 1-15 on page 1-25](#) shows how to use a configuration to do the following:

- Bind architecture struct1 in library lib1 to an instantiation C1 of component a_bar_b
- Bind architecture struct2 in library lib2 to an instantiation C2 of component a_bar_b

Example 1-15

```

--File config3.1.vhdl

    entity a_bar_b is
        port(a, b: in bit; c: out bit);
    end a_bar_b;

    architecture struct1 of a_bar_b is
    begin
        c <= not(a) and b;
    end struct1;

File config3.2.vhdl

    entity a_bar_b is
        port(a, b: in bit; c: out bit);
    end a_bar_b;

    architecture struct2 of a_bar_b is
    begin
        c <= a and not(b);
    end struct2;

--File config3.3.vhdl

    library lib1, lib2;
    use lib1.all;
    use lib2.all;

    entity conf_3_vhdl is
        port(a, b: in bit; c: out bit);
    end conf_3_vhdl;

    architecture struct of conf_3_vhdl is
        component a_bar_b port(a, b: in bit; c :out bit); end component;

        signal a_not_b, not_a_b: bit;
    begin
        C1: a_bar_b port map(a, b, not_a_b);
        C2: a_bar_b port map(a, b, a_not_b);

        c <= not_a_b or a_not_b;

    end struct;

    configuration config_example3 of conf_3_vhdl is
        for struct -- of conf_3_vhdl
            for C1: a_bar_b
                use entity lib1.a_bar_b(struct1);
            end for;
            for C2: a_bar_b
                use entity lib2.a_bar_b(struct2);
            end for;

```

```

        end for;
    end config_example3;

```

Example 1-16 shows the script file.

Example 1-16

```

sh mkdir ./lib1
sh mkdir ./lib2
define_design_lib lib1 -path ./lib1
define_design_lib lib2 -path ./lib2

analyze -f vhdl config3.1.vhdl -lib lib1
analyze -f vhdl config3.2.vhdl -lib lib2
analyze -f vhdl config3.3.vhdl
elaborate config_example3

```

Example 1-17 shows the dc_shell log output.

Example 1-17

```

dc_shell> analyze -f vhdl config3.1.vhdl -lib lib1
Running PRESTO HDLC
Input files:
/TEST_DIRECTORY/config3.1.vhdl
Compiling Entity Declaration A_BAR_B
Compiling Architecture STRUCT1 of A_BAR_B
Presto compilation completed successfully.
1
dc_shell> analyze -f vhdl config3.2.vhdl -lib lib2
Running PRESTO HDLC
Input files:
config3.2.vhdl
Compiling Entity Declaration A_BAR_B
Compiling Architecture STRUCT2 of A_BAR_B
Presto compilation completed successfully.
1
dc_shell> analyze -f vhdl config3.3.vhdl
Running PRESTO HDLC
Input files:
config3.3.vhdl
Compiling Entity Declaration CONF_3_VHDL
Compiling Architecture STRUCT of CONF_3_VHDL
Compiling Configuration CONFIG_EXAMPLE3 of CONF_3_VHDL
Presto compilation completed successfully.
1
dc_shell> elaborate config_example3
Running PRESTO HDLC
Loading db file '/SYNOPSYS_ROOT_DIRECTORY/libraries/syn/standard.sldb'
Loading db file '/SYNOPSYS_ROOT_DIRECTORY/libraries/syn/gtech.db'
Loading db file '/SYNOPSYS_ROOT_DIRECTORY/libraries/syn/lsi_10k.db'
Component WORK.STRUCT/CONF_3_VHDL.STRUCT.C1 has been configured to use
the
following implementation:

```

```

Work Library: LIB1
Design Name:  A_BAR_B
Architecture Name: STRUCT1
Component WORK.STRUCT/CONF_3_VHDL.STRUCT.C2 has been configured to use
the
following implementation:
Work Library: LIB2
Design Name:  A_BAR_B
Architecture Name: STRUCT2
Presto compilation completed successfully.
Information: Building the design 'A_BAR_B'. (HDL-193)
Running PRESTO HDLC
Presto compilation completed successfully.
Information: Building the design 'A_BAR_B'. (HDL-193)
Running PRESTO HDLC
Presto compilation completed successfully.
Current design is now 'conf_3_vhdl'
```

Example 4: Configuration With a Component Inside a Concurrent Block

[Example 1-18](#) shows how to configure a component inside a concurrent block.

Example 1-18

```

entity my_or is
port (a, b: bit; z:out bit);
end entity my_or;

architecture beh of my_or is
begin
    z <= a or b;
end;

entity conf_4_vhdl is
port(A, B: BIT; Z: out BIT);
end;

architecture BEH of conf_4_vhdl is
    component MY_AND
        port(A, B: BIT;
            Z: out BIT);
    end component;

begin

    Z <= A;

    L1: for I in 3 downto 0 generate
        L2: for J in I downto 0 generate
            L3: if J < I generate
```

```

        U1: MY_AND port map ( A, B, Z);
    end generate;
end generate;
end generate;
end;

configuration config_example4 of conf_4_vhdl is
    for beh
        for L1
            for L2
                for L3
                    for U1: MY_AND
                        use entity work.my_or (beh);
                    end for;
                end for;
            end for;
        end for;
    end for;
end config_example4;

```

[Example 1-19](#) shows the dc_shell log output.

Example 1-19

```

dc_shell> elaborate config_example4
Running PRESTO HDLC
Loading db file '/SYNOPSYS_ROOT_DIRECTORY/libraries/syn/standard.sldb'
Loading db file '/SYNOPSYS_ROOT_DIRECTORY/libraries/syn/gtech.db'
Loading db file '/SYNOPSYS_ROOT_DIRECTORY/libraries/syn/lsi_10k.db'
Component WORK.BEH/CONF_4_VHDL.BEH.L1.L2.L3.U1 has been configured to use
the
following implementation:
    Work Library: WORK
    Design Name:  MY_OR
    Architecture Name: BEH
Presto compilation completed successfully.
Information: Building the design 'MY_OR'. (HDL-193)
Running PRESTO HDLC
Presto compilation completed successfully.
Current design is now 'conf_4_vhdl'

```

Example 5: Generic in a Configuration

[Example 1-20](#) shows a component configuration used with a generic. Notice that the MY_AND component is configured to use the MY_OR (width = 8) implementation.

Example 1-20

```
entity my_or is
generic (width : integer);
port (a, b: in bit_vector (width - 1 downto 0);
      z: out bit_vector (width - 1 downto 0));
end entity my_or;

architecture beh of my_or is
begin
    z <= a or b;
end;

entity conf_5_vhdl is
    port(A, B: in BIT_VECTOR (7 downto 0);
         Z:   out BIT_VECTOR (7 downto 0));
end;

architecture BEH of conf_5_vhdl is
    component MY_AND
        generic (width: integer := 5);
        port(A, B: in BIT_VECTOR (width - 1 downto 0);
             Z: out BIT_VECTOR (width - 1 downto 0));
    end component;

begin

    Z <= A;

    L1: for I in 3 downto 0 generate
        U1: MY_AND port map ( A, B, Z);
    end generate;
end;

configuration config_example5 of conf_5_vhdl is
    for beh
        for L1
            for U1: MY_AND
                use entity work.my_or (beh) generic map (width => 8);
            end for;
        end for;
    end for;
end config_example5;
```

[Example 1-21](#) shows the dc_shell log output.

Example 1-21

```
dc_shell> elaborate config_example5
Running PRESTO HDLC
Loading db file '/SYNOPSYS_ROOT_DIRECTORY/libraries/syn/
standard.sldb'
Loading db file '/SYNOPSYS_ROOT_DIRECTORY/libraries/syn/gtech.db'
Loading db file '/SYNOPSYS_ROOT_DIRECTORY/libraries/syn/lsi_10k.db'
Component WORK.BEH/CONF_5_VHDL.BEH.L1.U1 has been configured to use
the
following implementation:
    Work Library: WORK
    Design Name: MY_OR
    Architecture Name: BEH
Presto compilation completed successfully.
Information: Building the design 'MY_OR' instantiated from design
'conf_5_vhdl' with the parameters "width=8". (HDL-193)
Running PRESTO HDLC
Presto compilation completed successfully.
Current design is now 'conf_5_vhdl'
```

Example 6: Port Map in a Configuration

[Example 1-22](#) uses a port map in the configuration.

Example 1-22

```
library ieee;
use ieee.std_logic_1164.all;
use std.standard.time;

entity INVERTER is
port (IN1 : in BIT; OUT1 : out BIT);
end INVERTER;

architecture STRUCT_I of INVERTER is
begin
    out1 <= not in1;
end STRUCT_I;

entity CONFIG_TEST1_VHDL is end CONFIG_TEST1_VHDL;

architecture STRUCT_T of CONFIG_TEST1_VHDL is
    signal S1, S2 : BIT := '1';

    component INV_COMP is
        port (IN_A : in BIT; OUT_A : out BIT);
    end component;

begin

    lh : inv_comp port map (S1, S2);
```



```

end STRUCT_T;

configuration CONFIG_INV of CONFIG_TEST1_VHDL is
for STRUCT_T
  for LH : INV_COMP
    use entity WORK.INVERTER (STRUCT_I)
    generic map (PropTime => TimeH)
    port map (IN1 => IN_A, OUT1 => OUT_A);
  end for;
end for;
end CONFIG_INV;

```

Example 7: Nested Configurations

[Example 1-23](#) uses a configuration inside a configuration.

Example 1-23

```

entity MY_AND is
port ( A, B      : in bit;
      O          : out bit);
end entity MY_AND;

architecture STRUCT1 of MY_AND is
begin
O <= A and B;
end STRUCT1;

entity MY_XOR is
port ( A, B      : in bit;
      O          : out bit);
end entity MY_XOR;

architecture STRUCT1 of MY_XOR is
component MY_AND is
port (A, B : in bit;
      O: out bit);
end component;
begin
  U1: MY_AND port map (A, B, O);
end STRUCT1;

architecture STRUCT2 of MY_XOR is
signal S1, S2, S3, S4 : bit;
begin
S1 <= A and (not B);
S2 <= (not A) and B;
O <= S1 or S2;

```

```

end STRUCT2;

entity CONFIG_FLOW_VHDL is
port (A1, A2, A3, A4, A5, B1, B2, B3, B4, B5      : in bit;
      O1, O2, O3, O4, O5                      : out bit);
end CONFIG_FLOW_VHDL;

architecture A1 of CONFIG_FLOW_VHDL is
component MY_XOR_COM is
port ( A, B      : in bit;
      O          : out bit);
end component;
component MY_AND is
port ( A, B      : in bit;
      O          : out bit);
end component ;
begin
U1 : MY_XOR_COM port map (A1, B1, O1);
U2 : MY_XOR_COM port map (A2, B2, O2);
U3 : MY_XOR_COM port map (A3, B3, O3);
U4 : MY_XOR_COM port map (A4, B4, O4);
V1 : MY_AND port map (A5, B5, O5);
end A1;

configuration TEST_CONFIG of MY_XOR is
  for STRUCT1
    for U1: MY_AND
      use entity WORK.MY_AND;
    end for;
  end for;
end TEST_CONFIG;

configuration MY_CONFIG of CONFIG_FLOW_VHDL is
use WORK.all;
for A1
  for U1, U2 : MY_XOR_COM
    use entity WORK.MY_XOR (STRUCT1);
  end for;
  for U3 : MY_XOR_COM
    use entity WORK.MY_XOR (STRUCT2);
  end for;
  for U4 : MY_XOR_COM
    use configuration WORK.TEST_CONFIG;
  end for;
  for V1 : MY_AND
    -- Use default
  end for;
end for;
end MY_CONFIG;

```

Example 8: Indirectly Nested Configurations

A directly nested configuration is a nested configuration that configures its subdesign by using a “use configuration subconfigure” clause, as shown in [Example 1-24](#); an indirectly nested configuration is a nested configuration that configures its subdesign by using a “for” clause, as shown in [Example 1-25](#).

Example 1-24 Directly Nested Configuration

```
configuration conf_in_conf_configuration of conf_in_conf is
  for test
    for all : conf_test
      use configuration WORK.TEST_CONFIG; -- nested configuration
    end for;
  end for;
end conf_in_conf_configuration;
```

Example 1-25 Indirectly Nested Configuration

```
configuration conf_in_conf_configuration of conf_in_conf is
  for test
    for all : conf_test
      use entity work.conf_test(test);
      for test -- here is the nested configuration
        for all : multi_and -- component name multi_and
          use entity lib1.multiand(rtl); -- configured entity name
        multiand
        end for;
      end for;
    end for;
  end for;
end conf_in_conf_configuration;
```

Example 9: Embedded Configurations

The Presto VHDL tool supports embedded configurations. To enable this feature, set `hdlin_enable_configurations` to true. [Example 1-26](#) shows an embedded configuration.

Example 1-26 Embedded Configuration

```
entity Buf is
  port (Input_pin: in Bit; Output_pin: out Bit);
end Buf;

architecture DataFlow of Buf is begin
  Output_pin <= Input_pin;
end DataFlow;

entity Test_Bench is
end Test_Bench;
```

```

architecture Structure of Test_Bench is
    component Buf is
        port (Comp_I: in Bit; Comp_O: out Bit);
    end component;
    -- A binding indication; generic and port map aspects
within a
    -- binding indication associate actuals (Comp_I, etc.)
with
    -- formals of the entity declaration (Input_pin, etc.):
    for UUT: Buf
        use entity Work.Buf(DataFlow)
        port map (Input_pin => Comp_I,
Output_pin=> Comp_O);

        signal S1,S2: Bit;
begin
    -- A component instantiation statement; generic and port
map aspects
    -- within a component instantiation statement associate
actuals
    -- (S1, etc.) with the formals of a component (Comp_I,
etc.):
    UUT: Buf
        port map (Comp_I => S1, Comp_O => S2);
    -- A block statement; generic and port map aspects within
the
    -- block header of a block statement associates actuals
(in this
    -- case, 4, with the formals defined in the block header:

    B: block
    begin
    end block;
end Structure;

```

You can use an embedded configuration in only one **for** construct in one component, as shown in [Example 1-27](#). However, as a stand-alone configuration, you can use embedded configurations in multi-nested configurations and in several **for** key words, as shown in [Example 1-28](#).

Example 1-27 Embedded Configuration

```
for u1: embed_shift use entity work.embed_shift;
```

Example 1-28 Standalone Configuration

```
configuration embed_top_config of embed_top is
```

```

for arch1
    for swap_exp1 : work.components.swap_exp
        use entity work.swap_exp(comb_seq)
        generic map (width1 => width + 1);
    for comb_seq
        for seq_gen
            for all: work.components.sync_async
                use entity work.sync_async(sync_logic)
                generic map (width2 => width1 + 1);
            ...

```

To read designs with embedded configurations, use the standard VHDL reading methods of `read_vhdl` plus `link` or `analyze` and `elaborate` using the entity name. To help understand how the tool processes embedded configurations, consider the design in [Example 1-29](#). When you read the RTL using `read_vhdl` and `link`, the tool creates the log shown in [Example 1-30](#); if you use `analyze` and `elaborate`, the tool creates the log shown in [Example 1-31](#).

Note:

If you have multiple embedded architectures, you need to follow the usage guidelines described in “[Example 10: Multiple Architectures in Embedded Configurations - Last Chosen as Default](#)” on page 1-37.

Example 1-29 Module `config_simple_embed.vhd`

```

library ieee;
use ieee.std_logic_1164.all;
use ieee.std_logic_unsigned.all;

entity embed_shift is
    generic (width: integer := 4);
    port (
        a : in bit_vector(0 to width - 1);
        b : in integer;
        o : out bit_vector(0 to width - 1)
    );
end entity embed_shift;

architecture tmp1 of embed_shift is
begin
    o <= a sll b;
end architecture tmp1;

entity mix_embed_config is
    port (
        a : in bit_vector(0 to 7);
        b : in integer;
        o : out bit_vector(0 to 7)
    );
end entity mix_embed_config;
architecture tmp of mix_embed_config is

```

```

component my_shift is
generic (width: integer := 8);
port (
  a : in bit_vector(0 to width - 1);
  b : in integer;
  o : out bit_vector(0 to width - 1)
);
end component my_shift;
for ul: my_shift use entity work.embed_shift;
-- use an embedded configuration because the component name is different
-- than the
-- library name
begin
  ul: my_shift
    port map (a, b, o);
end architecture tmp;

```

Example 1-30 Presto Report Log for read_vhdl and link

```

dc_shell> read_vhdl config.support_embedded.config_2.vhd
Loading db file '.../libraries/syn/lsi_10k.db'
Loading db file '.../libraries/syn/gtech.db'
Loading db file '.../libraries/syn/standard.sldb'
  Loading link library 'lsi_10k'
  Loading link library 'gtech'
Loading vhdl file './config_simple_embed.vhd'
Running PRESTO HDLC
Compiling Entity Declaration EMBED_SHIFT
Compiling Architecture TMP1 of EMBED_SHIFT
Compiling Entity Declaration MIX_EMBED_CONFIG
Compiling Architecture TMP of MIX_EMBED_CONFIG
Component WORK.TMP/MIX_EMBED_CONFIG.TMP.U1 has been configured to use the
following
implementation:
  Work Library: WORK
  Design Name:  EMBED_SHIFT
Presto compilation completed successfully.
Current design is now './embed_shift.db:embed_shift'
Loaded 2 designs.
Current design is 'embed_shift'.
embed_shift mix_embed_config
dc_shell> link

```

```

  Linking design 'embed_shift'
  Using the following designs and libraries:

```

```

-----
-
embed_shift                ./embed_shift.db
lsi_10k (library)          .../libraries/syn/lsi_10k.db
mix_embed_config            ./mix_embed_config.db

```

1

Example 1-31 Presto Report Log for Analyze and Elaborate With Entity Name

```

analyze -f vhdl config_simple_embed.vhd
Running PRESTO HDLC
Compiling Entity Declaration EMBED_SHIFT
Compiling Architecture TMP1 of EMBED_SHIFT
Compiling Entity Declaration MIX_EMBED_CONFIG
Compiling Architecture TMP of MIX_EMBED_CONFIG
Presto compilation completed successfully.
1
elaborate mix_embed_config
Loading db file '.../libraries/syn/gtech.db'
Loading db file '.../libraries/syn/standard.sldb'
Loading link library 'gtech'
Running PRESTO HDLC
Component WORK.TMP/MIX_EMBED_CONFIG.TMP.U1 has been configured to use the
following
implementation:
    Work Library: WORK
    Design Name: EMBED_SHIFT
Presto compilation completed successfully.
Elaborated 1 design.
Current design is now 'mix_embed_config'.
Information: Building the design 'EMBED_SHIFT' instantiated from design
'mix_embed_config'
with
    the parameters "width=8". (HDL-193)
Presto compilation completed successfully.
1

```

Example 10: Multiple Architectures in Embedded Configurations - Last Chosen as Default

If you have multiple architectures defined for an entity and you instantiate that entity without a specific binding to a specific architecture, the tool chooses the last architecture that is read as the architecture for that entity. Consider [Example 1-32 on page 1-38](#) in which the MY_AND entity is instantiated by the U2 component. The tool by default will associate the last architecture read, STRUCT4, with U2 and generate a warning shown in [Example 1-33 on page 1-38](#).

To avoid this warning, you need to tell the tool which architecture to choose by specifying the binding in the embedded configuration. If you have several nested designs, you can create a stand-alone configuration to connect the correct working library(s) to the appropriate components/configurations. In Presto, you can select a configuration identifier and use it to elaborate. To insure your design intent is correctly read, elaborate with the configuration identifier, as described in the next section.

Example 1-32 Default Architecture for U2 Component is STRUCT4

```

entity MY_AND is
  port (O : out bit);
end entity MY_AND;

architecture STRUCT3 of MY_AND is
begin
  O <= '1';
end STRUCT3;

architecture STRUCT4 of MY_AND is
begin
  O <= '0';
end STRUCT4;

entity E1 is
  port (O : out bit);
end E1;

architecture A1 of E1 is
  component MY_AND is      -- same name as a previously found entity
    port(O : out bit);
  end component;

begin
  U2 : MY_AND port map (O);
end A1;

```

Example 1-33 Tool Warns When Multiple Architectures are Associated With an Entity

```

dc_shell> read_vhdl test.vhd
Loading db file '.../libraries/syn/gtech.db'
Loading db file '.../libraries/syn/standard.sldb'
Loading link library 'gtech'
Loading vhdl file '.../test.vhd'
Running PRESTO HDLC
Compiling Entity Declaration MY_AND
Compiling Architecture STRUCT3 of MY_AND
Compiling Architecture STRUCT4 of MY_AND
Compiling Entity Declaration E1
Compiling Architecture A1 of E1
Warning: The entity 'MY_AND' has multiple architectures defined. The
last defined
architecture 'STRUCT4' will be used to build the design by default.
(VHD-6)
Presto compilation completed successfully.
Current design is now './MY_AND.db:MY_AND'
Loaded 2 designs.
Current design is 'MY_AND'.
MY_AND E1

```


Example 11: Combinations of Embedded, Nested, and Stand-Alone Configurations Require Elaborate with a Configuration Identifier

In order for the tool to correctly read your design when it contains a combination of embedded, nested, and stand-alone configurations, you must elaborate with the configuration identifier instead of with the entity name. To help understand this requirement, consider the design in [Example 1-35](#) through [Example 1-39 on page 1-43](#). In this design, if you want the tool to select the “swap_seq of swap_exp” architecture, you must elaborate the design using the configuration identifier, as shown in [Example 1-34](#).

Example 1-34 Correct Way to Read the Design with Embedded, Nested, and Stand-Alone Configurations - Use the Configuration Identifier

```
...
analyze -f vhd1 config_nested_sync_async.vhd
analyze -f vhd1 config_nested_swap_exp.vhd
analyze -f vhd1 embed_nested_standalone_top.vhd
elaborate embed_top_config
write -f ddc -h -o t.ddc
...
```

If you elaborate with the entity name (or use `read_vhdl`), the tool chooses the last defined architecture it sees, which is “comb_seq of swap_exp” for this design. The tool does not see the configuration defined in `embed_nest_standalone_top.vhd`. When you use the configuration identifier (`embed_top_config`) to elaborate, the tool reads both the architecture and configuration code and will use the embedded and standalone configuration's declarations for its library and it will choose the correct components.

Example 1-35 Top Module in `embed_nest_standalone_top.vhd`

```
library ieee;
use ieee.std_logic_1164.all;
use ieee.std_logic_unsigned.all;

entity embed_top is
  -- generic (width:integer:= 3);
  generic (width:integer:= 2);
  port (
    clk   : in std_logic;
    rst   : in std_logic;
    din   : in std_logic_vector(0 to width);
    d2    : in std_logic_vector(0 to width);

    dout : out std_logic_vector(0 to width)
  );
end entity embed_top;
```

```

architecture arch1 of embed_top is
    signal tmp_data1, tmp_data2 : std_logic_vector(0 to width);

    for swap_exp2 : work.components.swap_exp use entity
work.swap_exp(swap_seq)
generic map (width1 => 3);

begin
    swap_exp1 : component work.components.swap_exp
        port map (clk => clk, rst => rst, din1 => din, din2 => d2, dout
=> tmp_data1);
    swap_exp2 : component work.components.swap_exp
        port map (clk => clk, rst => rst, din1 => tmp_data1, din2 => d2,
dout =>
tmp_data2);
    swap_exp3 : component work.components.swap_exp
        port map (clk => clk, rst => rst, din1 => tmp_data2, din2 => d2,
dout => dout);
end architecture arch1;

configuration embed_top_config of embed_top is
    for arch1
        for swap_exp1 : work.components.swap_exp
            use entity work.swap_exp(comb_seq) generic map (width1 => width +
1);

            for comb_seq
                for seq_gen
                    for all: work.components.sync_async
                        use entity work.sync_async(sync_logic) generic map (width2
=> width1
+ 1);

                        for sync_logic
                            for next_level : work.components.and_or
                                use entity work.and_or(and_of_logic);
                            end for;
                        end for;
                    end for;
                end for;
            end for;
        end for;

        -- for swap_exp2 : is simple so it embeds on architecture

        -- for sawp_exp3 : work.components.sync_async
        -- use entity work.sync_async(comb_seq);
        for swap_exp3 : work.components.swap_exp
            use entity work.swap_exp(comb_seq);

            for comb_seq
                for seq_gen
                    for all : work.components.sync_async

```

```

        use entity work.sync_async(async_logic);
    end for;
    end for;
    end for;
    end for;
end configuration embed_top_config;

```

Example 1-36 *Sub-module in config_nested_swap_exp.vhd*

```

library ieee;
use ieee.std_logic_1164.all;
use ieee.std_logic_unsigned.all;
library work;
use work.components.all;

entity swap_exp is
    -- generic (width1 : integer := 4);
    generic (width1 : integer := 3);
    port (clk : in std_logic;
          rst : in std_logic;
          din1 : in std_logic_vector(0 to width1 - 1);
          din2 : in std_logic_vector(0 to width1 - 1);

          dout : out std_logic_vector(0 to width1 - 1));
end entity swap_exp;

architecture swap_seq of swap_exp is
    signal int_data : std_logic_vector (0 to width1 - 1);
begin
    swap : process (din1) is
    begin
        int_data(2) <= din1(0);
        int_data(1) <= din1(1);
        int_data(0) <= din1(2);
    end process swap;

    seq : process (clk, rst) is
    begin
        if clk'event and clk = '1' then
            if (rst = '0') then
                -- dout <= 0;
                dout <= (others => '0');
            else
                dout <= int_data;
            end if;
        end if;
    end process seq;
end architecture swap_seq;

architecture comb_seq of swap_exp is
    signal int_data : std_logic_vector (0 to 3);
begin

```

```

    comb : process (din1, din2) is
    begin
        int_data(2) <= not(din1(0) or din2(0));
        int_data(1) <= din1(2) xor din2(1);
        int_data(0) <= din1(1) and din2(2);
    end process comb;

    -- seq_gen: for i in 0 to 3 generate
    seq_gen: for i in 0 to 2 generate
    begin
        reg : component work.components.sync_async
            port map (clk => clk, rst => rst, d1 => int_data(i), d2 =>
int_data(i),
q => dout(i));
        end generate seq_gen;

    end architecture comb_seq;

```

Example 1-37 Sub-Module in config_nested_sync_async.vhd

```

library ieee;
use ieee.std_logic_1164.all;
use ieee.std_logic_unsigned.all;

entity sync_async is
    generic (width2 : integer := 8);
    port (clk : in std_logic;
          rst : in std_logic;
          d1 : in std_logic;
          d2 : in std_logic;

          q : out std_logic);
end entity sync_async;

architecture sync_logic of sync_async is
    signal tmp_data1, tmp_data2 : std_logic_vector(0 to width2-1);
    begin
        next_level : component work.components.and_or
            port map (a => d1, b => d2, o => tmp_data1(0));

        reg: process (clk, rst) is
        begin
            if (clk'event and clk = '1') then
                if (rst = '0') then
                    q <= '0';
                else
                    q <= tmp_data1(0);
                end if;
            end if;
            report ("in SYNC");
        end process reg;
    end architecture sync_logic;

```

```

architecture async_logic of sync_async is
  signal tmp_data1, tmp_data2 : std_logic_vector(0 to width2-1);
begin
  process (clk, rst) is
  begin
    if rst = '0' then
      q <= '0';
    elsif clk'event and clk = '1' then
      q <= d1;
    end if;
    report ("in ASYNC");
  end process;
end architecture async_logic;

```

Example 1-38 *Sub-module in config_nested_and_or.vhd*

```

library ieee;
use ieee.std_logic_1164.all;
use ieee.std_logic_unsigned.all;

entity and_or is
  port (a : in std_logic;
        b : in std_logic;
        o : out std_logic);
end entity and_or;

architecture and_of_logic of and_or is
begin
  o <= a and b;
end architecture and_of_logic;

architecture or_of_logic of and_or is
begin
  o <= a or b;
end architecture or_of_logic;

```

Example 1-39 *Sub-module in config_nested_pkg.vhd*

```

library ieee;
use ieee.std_logic_1164.all;
use ieee.std_logic_unsigned.all;

package components is

  component and_or is
    port (a : in std_logic;
          b : in std_logic;
          o : out std_logic);
  end component and_or;

  component sync_async is
    port (clk : in std_logic;
          rst : in std_logic;
          d1 : in std_logic;

```

```

        d2 : in std_logic;
        q : out std_logic);
end component sync_async;

component swap_exp is
  port (clk : in std_logic;
        rst : in std_logic;
        din1 : in std_logic_vector(0 to 2);
        din2 : in std_logic_vector(0 to 2);
        dout : out std_logic_vector(0 to 2));
end component swap_exp;

end package components;

```

Example 1-40 Presto Log Report

```

analyze -f vhdl config_nested_and_or.vhd
Running PRESTO HDLC
Compiling Entity Declaration AND_OR
Compiling Architecture AND_OF_LOGIC of AND_OR
Compiling Architecture OR_OF_LOGIC of AND_OR
Warning: The entity 'and_or' has multiple architectures defined. The
last defined
architecture 'or_of_logic' will be used to build the design by default.
(VHD-6)
Presto compilation completed successfully.
1
analyze -f vhdl config_nested_pkg.vhd
Running PRESTO HDLC
Compiling Package Declaration COMPONENTS
Presto compilation completed successfully.
1
analyze -f vhdl config_nested_sync_async.vhd
Running PRESTO HDLC
Compiling Entity Declaration SYNC_ASYNC
Compiling Architecture SYNC_LOGIC of SYNC_ASYNC
Compiling Architecture ASYNC_LOGIC of SYNC_ASYNC
Warning: The entity 'sync_async' has multiple architectures defined. The
last defined
architecture 'async_logic' will be used to build the design by default.
(VHD-6)
Presto compilation completed successfully.
1
analyze -f vhdl config_nested_swap_exp.vhd
Running PRESTO HDLC
Compiling Entity Declaration SWAP_EXP
Compiling Architecture SWAP_SEQ of SWAP_EXP
Compiling Architecture COMB_SEQ of SWAP_EXP
Warning: The entity 'swap_exp' has multiple architectures defined. The
last defined
architecture 'comb_seq' will be used to build the design by default.
(VHD-6)
Presto compilation completed successfully.
1
analyze -f vhdl embed_nest_standalone_top.vhd
Running PRESTO HDLC
Compiling Entity Declaration EMBED_TOP
Compiling Architecture ARCH1 of EMBED_TOP

```

```

Compiling Configuration EMBED_TOP_CONFIG of EMBED_TOP
Presto compilation completed successfully.
1
elaborate embed_top_config
Loading db file '../libraries/syn/gtech.db'
Loading db file '../libraries/syn/standard.sldb'
  Loading link library 'gtech'
Running PRESTO HDLC
Component WORK.ARCH1/EMBED_TOP.ARCH1.SWAP_EXP1 has been configured to use
the
following
implementation:
  Work Library: WORK
  Design Name:  SWAP_EXP
  Architecture Name: COMB_SEQ
Component WORK.ARCH1/EMBED_TOP.ARCH1.SWAP_EXP2 has been configured to use
the
following
implementation:
  Work Library: WORK
  Design Name:  SWAP_EXP
  Architecture Name: SWAP_SEQ
Component WORK.ARCH1/EMBED_TOP.ARCH1.SWAP_EXP3 has been configured to use
the
following
implementation:
  Work Library: WORK
  Design Name:  SWAP_EXP
  Architecture Name: COMB_SEQ
Presto compilation completed successfully.
Elaborated 1 design.
Current design is now 'embed_top'.
Information: Building the design 'SWAP_EXP' instantiated from design
'embed_top' with
the parameters "width1=3". (HDL-193)
Component WORK.COMB_SEQ/SWAP_EXP.COMB_SEQ.SEQ_GEN.REG has been configured
to use the
following implementation:
  Work Library: WORK
  Design Name:  SYNC_ASYNC
  Architecture Name: SYNC_LOGIC
  Configuration Name :
WORK.EMBED_TOP_CONFIG.ARCH1.SWAP_EXP1.COMB_SEQ.SEQ_GEN.REG
Presto compilation completed successfully.
Information: Building the design 'SWAP_EXP' instantiated from design
'embed_top' with
the parameters "width1=3". (HDL-193)

Inferred memory devices in process
  in routine swap_exp_width13 line 28 in file
    '../vhdl_rtl/config_nested_swap_exp.vhd'.
=====
| Register Name | Type | Width | Bus | MB | AR | AS | SR | SS | ST |
=====
| dout_reg | Flip-flop | 3 | Y | N | N | N | N | N | N |
=====
Presto compilation completed successfully.
Warning: Design 'swap_exp_width13' was renamed to 'swap_exp_width13_1' to

```

```

avoid
a conflict with another design that has the same name but different
parameters.
(LINK-17)
Information: Building the design 'SWAP_EXP' instantiated from design
'embed_top' with
the parameters "width1=3". (HDL-193)
Component WORK.COMB_SEQ/SWAP_EXP.COMB_SEQ.SEQ_GEN.REG has been configured
to use the
following implementation:
    Work Library: WORK
    Design Name:   SYNC_ASYNC
    Architecture Name: ASYNC_LOGIC
    Configuration Name :
Presto compilation completed successfully.
Warning: Design 'swap_exp_width13' was renamed to 'swap_exp_width13_2' to
avoid a
conflict
with another design that has the same name but
different parameters. (LINK-17)
Information: Building the design 'SYNC_ASYNC' instantiated from design
'swap_exp_width13'
with the parameters "width2=4". (HDL-193)
Component WORK.SYNC_LOGIC/SYNC_ASYNC.SYNC_LOGIC.NEXT_LEVEL has been
configured to use
the following implementation:
    Work Library: WORK
    Design Name:   AND_OR
    Architecture Name: AND_OF_LOGIC
    Configuration Name :
'report' output: in SYNC

```

```

Inferred memory devices in process
    in routine sync_async_width24 line 22 in file
        '../vhdl_rtl/config_nested_sync_async.vhd'.

```

Register Name	Type	Width	Bus	MB	AR	AS	SR	SS	ST
q_reg	Flip-flop	1	N	N	N	N	N	N	N

```

Presto compilation completed successfully.
Information: Building the design 'SYNC_ASYNC' instantiated from design
'swap_exp_width13_2' with the parameters "width2=8". (HDL-193)
'report' output: in ASYNC

```

```

Inferred memory devices in process
    in routine sync_async_width28 line 38 in file
        '../vhdl_rtl/config_nested_sync_async.vhd'.

```

Register Name	Type	Width	Bus	MB	AR	AS	SR	SS	ST
q_reg	Flip-flop	1	N	N	Y	N	N	N	N

```

Presto compilation completed successfully.
Information: Building the design 'AND_OR'. (HDL-193)
Presto compilation completed successfully.

```

```
1
```


Tool Behavior When Using Elaborate With the Entity Name

As noted in the previous sections, under certain conditions you need to elaborate using the configuration identifier. This section describes the problems that arise when you elaborate with the entity name.

[Example 1-41](#) and [Example 1-42](#) show incorrect ways to read the design described in [Example 1-35 on page 1-39](#) through [Example 1-39 on page 1-43](#). Recall that for this design you want the tool to select the “swap_seq of swap_exp” architecture. An explanation of the tool behavior follows the examples.

Example 1-41 Incorrect Way to Read When Using the Stand-Alone Configuration: Elaborate with the Entity Name

```
...
analyze -f vhdl config_nested_sync_async.vhd
analyze -f vhdl config_nested_swap_exp.vhd
analyze -f vhdl embed_nested_standalone_top.vhd
elaborate embed_top
write -f ddc -h -o t.ddc
...
```

Example 1-42 Incorrect Way to Read When Using Stand-Alone Configurations: read_vhdl and link

```
...
read_vhdl config_nested_sync_async.vhd
read_vhdl config_nested_swap_exp.vhd
read_vhdl embed_nested_standalone_top.vhd
link
write -f ddc -h -o t.ddc
...
```

If you use the reading style in [Example 1-41](#) or [Example 1-42](#), Presto only checks the contents from the architecture_body in the embed_nest_standalone_top.vhd file. It will ignore the rest of the RTL code in that module. In this case, it will ignore the entire configuration portion of the top module even if you declare the configuration in the RTL.

The design architecture contains three components: swap_exp1, swap_exp2, and swap_exp3.

For the first component, swap_exp1, Presto ignores whatever you code in the configuration declarative section. Instead, the tool picks up the last defined architecture (comb_seq of swap_exp) by default and will not select the “swap_seq of swap_exp” architecture in the config_nested_swap_exp.vhd module, which is declared in the architecture statements part in the top module. Next, since the architecture “comb_seq of swap_exp” has its own library declared, the tool will search for the last defined architecture in the module of config_nested_sync_async.vhd, which is the architecture “async_logic of sync_async”, and will use it by default instead of other architecture(s) in that module.

For the second component, `swap_exp2`, the tool will be referred by the embedded configuration and will link to the architecture “`swap_seq` of `swap_exp`” in the `config_nested_swap_exp.vhd` module, where it clearly states “use entity `work.swap_exp(swap_seq)`” as the embedded configuration in the architecture body.

For the last component, `swap_exp3`, the tool chooses the last defined architecture “`async_logic` of `sync_async`” by default, for the same reasons as described earlier for `swap_exp1`.

Design Libraries

This section contains the following subsections:

- [Predefined Design Libraries](#)
- [Creating User-Defined Design Libraries](#)
- [User-Defined Design Library Example](#)
- [Using Design Units From Design Libraries](#)
- [Design Library Reports](#)

Predefined Design Libraries

The following packages are analyzed for you:

- std_logic_1164
- std_logic_arith
- numeric_std
- std_logic_misc
- Standard package
- Synopsys ATTRIBUTES package

These packages are contained in the logical libraries IEEE, WORK, DEFAULT, and SYNOPSYS, which are defined during installation. Their default physical locations are defined in the `.synopsys_vss.setup` file, located in the Synopsys synthesis root installation subdirectory. These packages are described in [Appendix B, “Predefined Libraries”](#).

Packages defined in these libraries can be used by your VHDL source code and are found automatically. [Example 1-43](#) shows how to use the predefined std_logic_1164 package from the IEEE library.

Example 1-43 Using Predefined Libraries

```
library IEEE;
use IEEE.std_logic_1164.all;
.
.
.
```

Unlike all the other predefined packages, the Standard package does not require a use clause to enable your design to use the functions with the package.

Note:

These predefined packages are compatible only with the software version they are released with; they are not compatible with other releases of the software. A version number is stored in the intermediate format file, and the file can be read in only by the version in which it was created.

Creating User-Defined Design Libraries

When designs or packages are analyzed, the analyzed results are stored in the WORK library by default. If you want to store the results in a user-defined library, for example, MYLIB, with a physical location of MYLIB_LOC, you can use one of two methods. In the first method, you use the `define_design_lib` variable; in the second, you use the `.synopsys_vss.setup` file. These two methods are described in [Table 1-6](#).

Table 1-6 Methods for Creating User-Defined Libraries

Method	Description
<code>define_design_lib</code>	<p>Use the <code>define_design_lib</code> command to specify the library name and location; for example,</p> <pre>define_design_lib MYLIB -path ./MYLIB_LOC</pre> <p>Then analyze your design to MYLIB, for example,</p> <pre>analyze -library MYLIB -format vhd1 {{....design}}</pre>
<code>.synopsys_vss.setup</code>	<p>Add the user-specified library name and mapping to your <code>.synopsys_vss.setup</code> file; for example,</p> <pre>MYLIB: ./ MYLIB_LOC</pre> <p>Then, analyze your design to MYLIB, for example,</p> <pre>analyze -library MYLIB -format vhd1 <{....design}></pre>

User-Defined Design Library Example

The following steps show you how to store the analysis of two packages in a user-defined library named COMMON-TLS and use these packages in the ALU design.

1. Define a logical library called “COMMON-TLS” and map it to a physical location, using the `define_design_lib` command; for example,
 1. `dc_shell-t> define_design_lib COMMON-TLS -path ./COMMON`
2. Store the analysis of the package files in the user-defined library COMMON-TLS (the packages reside in the files `types.vhd` and `functions.vhd`):
 3. `dc_shell> analyze -format vhd1 -library COMMON-TLS {types.vhd functions.vhd}`

The `-library` option indicates the library name where the analyzed file should be stored. Declare the COMMON-TLS library in the ALU code:

```
library COMMON-TLS;
use COMMON-TLS.types.all;
use COMMON-TLS.functions.all;
```

[Example 1-44](#) shows the complete flow using the analyze and elaborate commands (design ALU is defined in the files ALU_entity.vhd and ALU_arch.vhd.)

Example 1-44 Flow for User-Defined Library Using Analyze

```
dc_shell> define_design_lib WORK -path ./work
dc_shell> define_design_lib COMMON-TLS -path ./COMMON
dc_shell> analyze -format vhdl -library COMMON-TLS {types.vhd
functions.vhd}
dc_shell> analyze -format vhdl {ALU_entity.vhd ALU_arch.vhd}
dc_shell> elaborate ALU_top
```

[Example 1-45](#) shows the flow using the read command.

Example 1-45 Flow for User-Defined Library Using Read

```
dc_shell> define_design_lib WORK -path ./work
dc_shell> define_design_lib COMMON-TLS -path ./COMMON
dc_shell-t> read_vhdl -library COMMON-TLS {types.vhd functions.vhd}
dc_shell-t> read_vhdl {ALU_subblock.vhd ALU_top.vhd}
dc_shell-t> current_design ALU_top
dc_shell-t> link
```

Using Design Units From Design Libraries

Design libraries contain analyzed designs and packages used when you

- Elaborate designs—During elaboration, subdesigns are first linked by a search through designs in memory. Presto VHDL then searches the current design library for pre-existing analyzed files of the subdesigns. The .db files in the search path are also automatically linked during elaboration of a top-level design. See the elaborate man page for syntax details.
- Instantiate design units—Design units from design libraries can be instantiated into other designs. For example, you can instantiate the design adder by using

```
U1: entity adder (adder_arch)
    generic map (N => 16)
    port map (A,B,Z);
```
- Call a package in a library with the use clause—The use clause allows an entity to use a package from a library. Reference these packages in the declaration section of the entity description.

Design Library Reports

To get a complete list of design libraries, use the `report_design_lib -libraries` command. To view the contents of an individual library, such as the IEEE library, use `report_design_lib IEEE`. To find out a library's physical location, use the `get_design_lib_path` command.

See the man pages for command details.

Package Support

Presto VHDL supports the following packages:

- IEEE Package—`std_logic_1164`
- IEEE Package—`std_logic_arith`
- IEEE Package—`numeric_std` (IEEE Standard 1076.3)
- IEEE Package—`std_logic_misc`
- Standard Package
- Synopsys Package—`ATTRIBUTES`

See Appendix B for package details.

Array Naming Variables

The three variables described in [Table 1-7](#) affect how array elements are named. To list their current values, enter

```
dc_shell-t> printvar bus*style
```

Table 1-7 Array Naming Variables

Variable	Description
bus_naming_style	<p>Describes how to name the bits in port, cell, and net arrays. When a multiple-bit array is read in, it is converted to a set of individual single-bit names. The value is a string containing the characters %s and %d, which are replaced by the array name and the bit (element) index, respectively. The default is "%s[%d]".</p> <p>Example:</p> <p>Array X_ARRAY is indexed from 0 to 7 and has bus_naming_style = "%s.%d"; Presto VHDL names the third element of X_ARRAY as X_ARRAY.2.</p> <p>Note: It is recommended that you do not change this default value if the netlist will be written out in Verilog format.</p>
bus_dimension_separator_style	<p>Specifies the style to use in separating multidimensional array indexes. The default is "][".</p>
bus_minus_style	<p>Describes how to represent negative indexes in port, cell, and net names. The value is a string containing the characters %d (replaced by the absolute value of a negative index). The default is "-%d".</p> <p>Example:</p> <p>If bus_minus_style = "M%d", the index value of negative 3 is represented as "M3".</p>

Licenses

The reading and writing license requirements are listed in [Table 1-8](#).

Table 1-8 License Requirements

Reader	Reading License required?		Writing License required?	
	RTL	Netlist	RTL	Netlist
Presto VHDL	Yes	Yes	Not applicable	Not applicable
VHDL netlist reader	Not applicable	No	No	No

2

General Coding Considerations

This chapter discusses coding issues specific to Presto VHDL, in the following sections:

- [Declarative Region in generate Statements](#)
- [Design Units](#)
- [Data Types and Data Objects](#)
- [Operands](#)
- [Modeling Considerations](#)
- [Simulation/Synthesis Mismatch Issues](#)

Declarative Region in generate Statements

Presto VHDL allows declarations within generate statements. Each iteration of the generate statement declares new copies of the objects in the declarative region. Consider [Example 2-1](#), which describes four AND gates and four inverters. This code produces four independent signals named “S”. Presto VHDL distinguishes these signals using a user-specified naming convention. This convention is determined by the `hdlin_generate_naming_style` and `hdlin_generate_separator_style` variables. See the man pages for information about these variables.

Example 2-1 Signal Declarations Within generate Statements

```
G: for I in 0 to 3 generate
  signal S: BIT;
begin
  S <= A(I) and B(I);
  Z(I) <= not S;
end generate;
```

Signals are not the only objects that can be declared within a generate statement. Consider [Example 2-2](#).

Example 2-2 Function Declarations Within Generate Statements

```
G: for I in 0 to 3 generate
  function F (X: in BIT_VECTOR(0 to I)) return BIT is
    variable R: BIT := '1';
  begin
    for J in X'RANGE loop
      R := R and x(j);
    end loop;
    return R;
  end function;
begin
  z(i) <= f (a(0 to i));
end generate;
```

Here, four versions of the function “f” are created, one for each iteration of the generate loop. Because the function is declared in the generate declarative region, it can only be called from the generate body.

Design Units

Design unit requirements specific to Presto VHDL are discussed in the following subsections:

- [Direct Instantiation of Components](#)
- [Default Component Port Assignments](#)
- [Component Name Restrictions](#)
- [Component Sources](#)
- [Component Port Consistency](#)
- [Instantiating Technology-Independent Components](#)
- [Component Architecture](#)
- [Package Names](#)
- [Procedures and Functions as Design Components](#)

Direct Instantiation of Components

Presto VHDL allows components to be directly instantiated in the design without a component declaration. This is a VHDL-93 feature that provides a more concise method of instantiating subdesigns. The following notation is used:

```
instance_label: entity entity_name (architecture_name)
                    generic map (...) port map (...);
```

Presto VHDL always picks the last architecture analyzed for synthesis.

In the following examples, design1 ([Example 2-3](#)) is analyzed into a library called DESIGN1_LIB and design2 instantiates design1 ([Example 2-4 on page 2-4](#)).

Example 2-3 Design 1 RTL

```
-- design1 is contained in the design1.vhd file
-- =====
entity design1 is
  port (a: in bit;
        z: out bit);
end;

architecture rtl of design1 is
begin
  z <= a;
end;
```

Presto VHDL supports the direct instantiation of design1 without a component declaration as shown in [Example 2-4](#). Notice that design2 now requires fewer lines of code.

Example 2-4 Design 2 Instantiates Design 1

```
-- design2 is contained in the design2-presto.vhd file
-- =====
library DESIGN1_LIB;
use DESIGN1_LIB.all;

entity design2 is
  port (b: in bit;
        y: out bit);
end;

architecture rtl of design2 is
begin
  u1: entity DESIGN1_LIB.design1(rtl)
    port map (a => b, z => y);
end;
```

Default Component Port Assignments

Presto VHDL supports the use of default assignments for component port declarations as shown in [Example 2-5](#). This simplifies coding by allowing ports with default assignments to be omitted during component instantiation.

Note:

Default assignments for entity port declarations will be parsed but ignored by Presto VHDL.

Example 2-5 Default Port Assignments

```
component AND3 is
  port (A: in bit;
        B: in bit;
        C: in bit:= '1'; -- default assignment to component port
        Z : out bit
        );
end component;

.
.
.
  U1 : AND3
    port map (A => A1,
              B => B1,
              Z => Z1
              );
```

Component Name Restrictions

You cannot name components with keywords, identifiers from any Synopsys or IEEE package, or the GTECH_ prefix.

Component Sources

A declared component can come from

- The same VHDL source file
- A different VHDL source file
- Another format, such as EDIF, state table, or programmable logic arrays (PLAs)
- A component from a technology library
- A Verilog source file

A component that is not in one of the current VHDL source files must already have been compiled by Design Compiler and must reside either in memory or in a .db file in the search path. Presto VHDL searches for previously compiled components by name, in the following order:

1. In the current design in memory.
2. In the directories and files identified in the Design Compiler link path (`link_library` variable). These files can include previously compiled designs or technology libraries (libraries of technology-specific components).
3. In the directories and files identified in the Design Compiler search path (`search_path` variable).

Component Port Consistency

Presto VHDL checks for consistent port mapping between all loaded designs. For RTL designs that are not VHDL or Verilog, the port names are taken from the original design description, as follows:

- For PLAs or state tables, the port names are the input and output names.
- For components in a technology library, the port names are the input and output pin names.
- For EDIF designs, the port names are the EDIF port names.

The bit-widths of each port must match.

- For VHDL components, Presto VHDL verifies matching.
- For components from other sources, Design Compiler checks matching when linking the component to the VHDL description.

Instantiating Technology-Independent Components

You can directly instantiate GTECH components in your RTL. The GTECH library contains the following technology-independent logical components:

- AND, OR, and NOR gates (2, 3, 4, 5, and 8)
- 1-bit adders and half adders
- 2-of-3 majority
- Multiplexers
- Flip-flops and latches
- Multiple-level logic gates, such as AND-NOT, AND-OR, and AND-OR-INVERT

Caution:

Instantiating GTECH components should be used with caution because it restricts the optimization of logic and might result in a degradation of design quality of results (QoR).

When you instantiate GTECH components, you can set the `map_only` attribute to prevent Design Compiler from ungrouping the GTECH component and selecting a similar cell from the target library. When this attribute is applied, Design Compiler does not optimize the gates; instead, the gates are only mapped to the target technology. The `set_map_only` command in [Example 2-6](#) sets the `map_only` attribute on each cell returned by the `find` command (all cells in the design `RIPPLE_CARRY` that reference a `GTECH_ADD_ABC` cell). If you use your own library with attributes already set in that library, you do not have to set the `map_only` attribute.

Example 2-6 GTECH Component Instantiation

```

library GTECH;
library ieee;
use IEEE.STD_LOGIC_1164.all;
use gtech.gtech_components.all;

entity RIPPLE_CARRY is
  generic(N: NATURAL);

  port(a, b : in std_logic_vector(n-1 downto 0);
        carry_in: in std_logic;
        sum : out std_logic_vector(n-1 downto 0);
        carry_out: out std_logic);
end RIPPLE_CARRY;

architecture TECH_INDEP of RIPPLE_CARRY is

  signal CARRY: std_logic_vector(N downto 0);

  -- synopsys dc_tcl_script_begin
  -- set_map_only [get_cells * -filter "ref_name==GTECH_ADD_ABC"]
  -- synopsys dc_tcl_script_end
begin
  CARRY(0) <= CARRY_IN;

  GEN: for I in 0 to N-1 generate
    U1: GTECH_ADD_ABC port map(
      A          => A(I),
      B          => B(I),
      C          => CARRY(I),
      S          => SUM(I),
      COUT       => CARRY(I+1)
    );

  end generate GEN;

  CARRY_OUT <= CARRY(N);
end TECH_INDEP;

```

To link this design in Design Compiler, you must have the GTECH.db library in your `link_library` variable.

Component Architecture

Presto VHDL uses the following two rules to select which entity and architecture to associate with a component instantiation:

1. Each component declaration must have an entity—a VHDL entity, a design entity from another source or format, or a library component—with the same name. This entity is used for each component instantiation associated with the component declaration.

2. If a VHDL entity has more than one architecture, Presto VHDL uses the last architecture analyzed. You can override this selection by using configurations. See [“Configuration Support” on page 1-20](#).

Package Names

Synopsys supports different packages with the same name if they exist in different libraries.

Procedures and Functions as Design Components

Procedures and functions are represented by gates and cannot exist as entities (components) unless you use the directive `map_to_entity`, which causes Presto VHDL to implement a function or a procedure as a component instantiation. Procedures and functions that use `map_to_entity` are represented as components in designs where they are called.

When you add a `map_to_entity` directive to a subprogram definition, Presto VHDL assumes the existence of an entity with the identified name and the same interface.

Presto VHDL and Design Compiler do not check this assumption until they link the parent design. The matching entity must have the same input and output port names. If the subprogram is a function, you must also provide a `return_port_name` directive where the matching entity has an output port of the same name.

These two directives are called component implication directives:

```
-- synopsys map_to_entity    entity_name
-- synopsys return_port_name port_name
```

Insert these directives after the function or procedure definition, as in the following example:

```
function MUX_FUNC(A,B: in TWO_BIT; C: in BIT)
  return TWO_BIT is

-- synopsys map_to_entity MUX_ENTITY
-- synopsys return_port_name Z
...
```

When Presto VHDL encounters the `map_to_entity` directive, it parses but ignores the contents of the subprogram definition.

The matching entity (*entity_name*) does not need to be written in VHDL. It can be in any format Design Compiler supports.

Note:

Be aware that the behavioral description of the subprogram is not checked against the functionality of the entity overloading it. Pre-synthesis and post-synthesis simulation results might not match if differences in functionality exist between the VHDL subprogram and the overloaded entity.

[Example 2-7](#) shows a function that uses component implication directives. [Figure 2-1 on page 2-10](#) illustrates the corresponding design.

Example 2-7 Using Component Implication Directives on a Function

```
package MY_PACK is
    subtype TWO_BIT is BIT_VECTOR(1 to 2);
    function MUX_FUNC(A,B: in TWO_BIT; C: in BIT) return
        TWO_BIT;
end;

package body MY_PACK is

    function MUX_FUNC(A,B: in TWO_BIT; C: in BIT) return
        TWO_BIT is

        -- synopsys map_to_entity MUX_ENTITY
        -- synopsys return_port_name Z

        -- contents of this function are ignored but should match the
        -- functionality of the entity MUX_ENTITY, so pre- and post
        -- simulation will match
        begin
            if(C = '1') then
                return(A);
            else
                return(B);
            end if;
        end;
end;

use WORK.MY_PACK.ALL;
entity TEST is
    port(A: in TWO_BIT; C: in BIT; TEST_OUT: out TWO_BIT);
end;

architecture ARCH of TEST is
begin
    cal_func: process (a, c)
    begin
        TEST_OUT <= MUX_FUNC(not A, A, C);
        -- Component implication call
    end process;
end;

use WORK.MY_PACK.ALL;

-- the following entity 'overloads' the function MUX_FUNC above

entity MUX_ENTITY is
    port(A, B: in TWO_BIT; C: in BIT; Z: out TWO_BIT);
```


```

end;

architecture ARCH of MUX_ENTITY is
begin
    process (a, b)
    begin
        case C is
            when '1' => Z <= A;
            when '0' => Z <= B;
        end case;
    end process;
end;

```

Figure 2-1 Schematic Design With Component Implication Directives

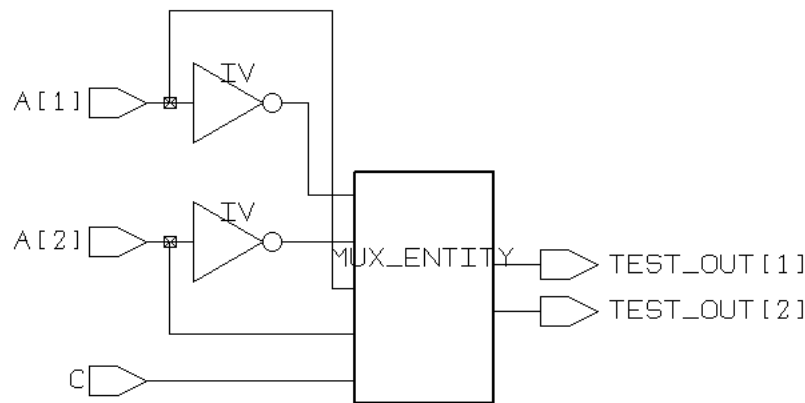

[Example 2-8](#) shows the same design as [Example 2-7](#), but without the creation of an entity for the function. The component implication directives have been removed. [Figure 2-2 on page 2-11](#) illustrates the corresponding design.

Example 2-8 Using Gates to Implement a Function

```

package MY_PACK is
    subtype TWO_BIT is BIT_VECTOR(1 to 2);
    function MUX_FUNC(A,B: in TWO_BIT; C: in BIT)
        return TWO_BIT;
end;

package body MY_PACK is

    function MUX_FUNC(A,B: in TWO_BIT; C: in BIT)
        return TWO_BIT is
    begin
        if(C = '1') then
            return(A);
        else
            return(B);
        end if;
    end;
end;

```


```

use WORK.MY_PACK.ALL;
entity TEST is
    port(A: in TWO_BIT; C: in BIT; Z: out TWO_BIT);
end;

architecture ARCH of TEST is
begin
    process (a, c)
    begin
        Z <= MUX_FUNC(not A, A, C);
    end process;
end;

```

Figure 2-2 Schematic Design Without Component Implication Directives

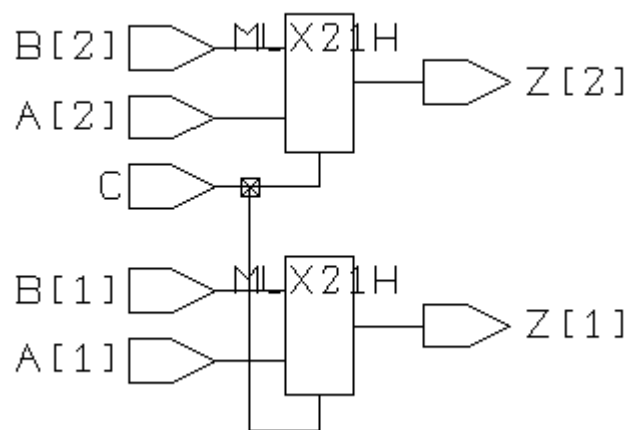

Data Types and Data Objects

Data type and data object requirements specific to Presto VHDL are discussed in the following subsections:

- [Globally Static Expressions in Port Maps](#)
- [Aliases](#)
- [Deferred Constants](#)
- [Aggregates in Constant Record Declarations](#)
- [Enumerated Types in the for and for-generate Constructs](#)
- [Groups](#)
- [Integer Data Types](#)
- [Overloading an Enumeration Literal](#)

- [Enumeration Encoding](#)
- [Constant Floating-Point Support](#)
- [math_real Package Support](#)

Globally Static Expressions in Port Maps

Presto VHDL supports globally static expressions in port maps as shown in [Example 2-9](#).

Example 2-9 Presto VHDL Supports Globally Static Expressions in Port Maps

```
component C is
  port (A, B: in BIT; Z: out BIT);
end component;

...
signal X, Y: BIT
...
U1: C port map (X, '1', Y);
```

Aliases

Presto VHDL supports all alias types except labels, loop parameters, and generate parameters—these cannot be aliased per the VHDL language reference manual.

[Example 2-10](#) shows alias code that is supported in Presto VHDL.

Example 2-10 Presto VHDL Supported Alias

```
entity e is
  port (a, c: in bit;
        z: out bit);
end;

architecture a of e is
  alias b is c;
begin
  z <= a and b;
end;
```

Presto VHDL alias support includes the following:

- Aliases without an explicit subtype indication as shown in [Example 2-11 on page 2-13](#)
- Aliases with an explicit subtype indication
- Aliases to non-objects (that is, types) as shown in [Example 2-12 on page 2-13](#)
- Aliases to subprograms as shown in [Example 2-13 on page 2-13](#)

Example 2-11 Alias Without an Explicit Subtype Indication

```

signal S: BIT_VECTOR (0 to 7);
. . .
alias A is S;

```

In this case, A will have the same type as S.

Example 2-12 Alias to a Type

```

alias SLV is STD_LOGIC_VECTOR;

```

[Example 2-13](#) shows an alias to a subprogram. This is a convenient way to refer to a specific subprogram in a package.

Example 2-13 Aliases to Subprograms

```

library IEEE;
use IEEE.STD_LOGIC_1164.all;
use IEEE.STD_LOGIC_SIGNED.all;
use IEEE.STD_LOGIC_UNSIGNED.all;
. . .
alias    SLV_TO_SINT is
          STD_LOGIC_SIGNED.CONV_INTEGER;
alias    SLV_TO_UINT is
          STD_LOGIC_UNSIGNED.CONV_INTEGER;

```

Subprogram aliases can also contain a signature. This makes it possible to distinguish among the various interpretations of an overloaded subprogram name as shown in [Example 2-14](#).

Example 2-14 Subprogram Alias Containing a Signature

```

library IEEE;
use IEEE.STD_LOGIC_1164.all;
. . .
alias    BV_TO_SLV is To_StdLogicVector
          [BIT_VECTOR return STD_LOGIC_VECTOR];

. . .
x <= BV_TO_SLV ("1101");

```

Deferred Constants

Constants defined in packages are useful for declaring a set of global design parameters that can be shared by multiple design entities. [Example 2-15](#) shows how a constant declared in a global package DEFS is used to define the active edge for the clocks in the design. The value of “1” means that the flip-flops will be clocked on the rising edge of the clock.

[Example 2-15](#) shows a deferred constant declaration in a package.

Example 2-15 *Deferred Constants*

```
-- defs_pkg.vhd
-- =====
library ieee;
use ieee.std_logic_1164.all;

package defs is
constant CLOCK_ACTIVE_EDGE: std_logic := '1';
end;

design1.vhd
=====
library ieee, mylib;
use ieee.std_logic_1164.all;
use mylib.defs.all;

...
process (clk) is
begin
    if (clk'event and clk = CLOCK_ACTIVE_EDGE) then
        Q <= D;
    end if;
end process;
...
```

One of the limitations of normal constant declarations in packages is that if the constant value in the package is changed, then all the designs making use of that package must be reanalyzed in order to use the new constant value. In the above example, this means that if you want to change to a negative clock edge, you need to modify the `CLOCK_ACTIVE_EDGE` from “1” to “0” in `defs_pkg.vhd` and reanalyze all the files that reference this package.

With deferred constants, the constant is declared in the package without initializing its value. The initialization of the constant is deferred to the package body declaration. Now if the constant value is changed in the package body, only the package body needs to be reanalyzed, followed by a re-elaboration of the top-level design. [Example 2-16](#) shows how a deferred constant declaration can be used to define the active edge for the clocks in the design.

Example 2-16 *Deferred Constant Declaration*

```

defs_pkg.vhd
=====
package DEFS is
constant CLOCK_ACTIVE_EDGE: std_logic;
end DEFS;

defs_pkg_body.vhd
=====
package body DEFS is
constant CLOCK_ACTIVE_EDGE: std_logic := '1';
end;
```

Now if you want to change from a positive-edge-triggered to a negative-edge-triggered behavior, you only need to modify and reanalyze the package body, in `defs_pkg_body.vhd`, and, re-elaborate the top-level design to implement the change. This allows for a more flexible and manageable design flow.

Aggregates in Constant Record Declarations

Presto VHDL Compiler supports the use of aggregates in constant record declarations as shown in [Example 2-17](#).

Example 2-17 *Aggregates in Constant Record Declarations*

```

type rec_type is
  record
    A : bit_vector(1 downto 0);
    B : bit_vector(1 downto 0);
  end record;

constant reset_rec : rec_type := (
  A => (others => '0'),
  B => (others => '0')
);
```

Enumerated Types in the for and for-generate Constructs

Presto VHDL supports the use of enumerated types as indexes in the for and for-generate constructs. [Example 2-18](#) uses an enumerated type as an index in a for loop.

Example 2-18 Enumerated Types As Index in for Construct

```
package Defs is
  type color is (RED, GREEN, BLUE);
  subtype col_val is bit_vector (7 downto 0);
  type pixel is array (color range RED to BLUE) of col_val;
  function pix_fn (A1, A2: col_val) return col_val;
end Defs;

package body Defs is
  function pix_fn (A1, A2: col_val) return col_val is
  begin
    return (A1 xor A2);
  end pix_fn;
end Defs;

use work.Defs.all;
entity pix is
  port (A, B: in pixel;
        Z: out pixel
        );
end pix;

architecture rtl of pix is
begin
  process (A, B)
  begin
    for I in RED to BLUE loop      -- enumerated type used here
      Z(I) <= pix_fn(A(I),B(I));
    end loop;
  end process;
end rtl;
```

Groups

Presto VHDL supports VHDL-93 group declarations as shown in [Example 2-19](#). This feature allows you to create groups of named entities. One useful application of this feature is that you can apply attributes to the group as a whole instead of referencing individual signals.

Example 2-19 Group Declarations

```
package Defs is
group sig_grp is (signal<>);
end Defs;

library Synopsys;
use Synopsys.attributes.all;
use work.Defs.all;

entity top is
port (A, B: in bit;
      Z: out bit
    );
end top;

architecture RTL of top is

group sig3_grp is (signal,signal,signal);

group inputs: sig_grp (A, B);
group all_ports: sig3_grp (A, B, Z);

-- input delay of 1.5 will be applied to A & B signals
attribute ARRIVAL of inputs: group is 1.5;

begin
  Z <= A or B;
end RTL;
```

Integer Data Types

Multidigit numbers in VHDL can include underscores (_) to make them easier to read.

Presto VHDL encodes an integer value as a bit vector whose length is the minimum necessary to hold the defined range and encodes integer ranges that include negative numbers as 2's-complement bit vectors.

Overloading an Enumeration Literal

You can overload an enumeration literal by including it in the definition of two or more enumeration types. When you use such an overloaded enumeration literal, Presto VHDL is usually able to determine the literal's type. However, under certain circumstances, determination might be impossible. In such cases, you must qualify the literal by explicitly stating its type. [Example 2-20](#) shows how you can qualify an overloaded enumeration literal.

Example 2-20 Enumeration Literal Overloading

```
type COLOR is (RED, GREEN, YELLOW, BLUE, VIOLET);
type PRIMARY_COLOR is (RED, YELLOW, BLUE);
signal A : COLOR;
...
A <= COLOR'(RED);
```

Enumeration Encoding

Enumeration literals are synthesized into the binary equivalent of their positional value. By default, the first enumeration literal is assigned the value 0, the next enumeration literal is assigned the value 1, and so forth.

Presto VHDL automatically encodes enumeration values into bit vectors that are based on each value's position. The length of the encoding bit vector is the minimum number of bits required to encode the number of enumerated literals. For example, an enumeration type with five values would have a 3-bit encoding vector.

[Example 2-21](#) shows the default encoding of an enumeration type with five values.

Example 2-21 Automatic Enumeration Encoding

```
type COLOR is (RED, GREEN, YELLOW, BLUE, VIOLET);
```

The enumeration values are encoded as follows:

```
RED      = "000"
GREEN    = "001"
YELLOW   = "010"
BLUE     = "011"
VIOLET   = "100"
```

The colors can be compared according to their encoded values; the results of a comparison are

RED < GREEN < YELLOW < BLUE < VIOLET.

You can override the automatic enumeration encodings and specify your own enumeration encodings with the `ENUM_ENCODING` attribute. This interpretation is specific to Presto VHDL, and overriding might result in a simulation/synthesis mismatch. See [“ENUM_ENCODING Attribute” on page 6-9](#).

Constant Floating-Point Support

This section describes constant floating-point support, in the following subsections:

- [Syntax and Declarations](#)
- [Operators and Expressions](#)
- [Guidelines](#)

Syntax and Declarations

Floating-point syntax:

```
constant identifier_list : real_subtype [:= expression] ;
```

You can declare constant floating-point objects in

- Entities (except for generic maps)
- Architectures
- Processes
- Blocks
- Functions (as an argument, a return value, or a declarative part)
- Procedures (as an argument or a declarative part)

The following types can consist of constant floating-point objects:

- Scalar
- Array
- Record

[Example 2-22](#) shows various constant floating-point declarations.

Example 2-22

```
-- real scalar
constant my_const1: real := 4.3 ;
constant my_const2: real := aa + 1.2 ;
```

```

-- real array(subscript op)
type REAL_ARRAY_T is array (3 downto 0) of real;
constant my_const3: REAL_ARRAY_T := (4.4, 3.3, 2.2, 1.1);

-- real array with range(vector op)
type REAL_ARRAY_T2 is array (integer range<>) of real;
constant my_const4: REAL_ARRAY_T2(3 downto 0) := (4.4, 3.3, 2.2,
1.1);
constant my_const5: REAL_ARRAY_T2(1 downto 0) := aa(2 downto 1);

-- real record(field op)
type RECORD_T is record
    rec1: integer;
    rec2: string(3 downto 1);
    rec3: real;
end record;
constant my_rec: RECORD_T := (5, "mmm", 3.14);

-- constant floating point can also be argument and return value
-- of functions and procedures.
function func1(aa : real;
               a, b : in bit) return bit;
function func2(aa, bb : real) return real;
procedure proc1(aa : real;
               a, b : in bit;
               z   : out bit);

```

Operators and Expressions

The following operators are supported for constant floating-point type:

- Adding, signing, multiplying, and absolute value operators
- ** (power) operator (<real_data> ** <integer_data>)
- Relational operators (>, <, =, /=, >=, <=)
- Subscript and vector operators (array)
- Field operator (record)

[Example 2-23](#) shows various expressions that contain constant floating-types. In [Example 2-23](#), my_const1 and my_const2 are constant floating-point types; my_rec is a constant record type; rec1 is an element of my_rec.

Example 2-23

```

my_const1 + 3.14
my_const1/(-my_const2)
abs(-my_const1)
my_const1 ** 5
my_const1 >= my_const2

```

```
my_const1(3), my_const1(2 downto 0)
my_rec.rec1
```

Expressions can contain floating-point numbers and constants, but these expressions are only allowed at the following locations:

- Constant floating-point initialization
- Comparison (relational operation)

The value of an expression that contains a constant floating point must be resolvable at elaboration time.

In [Example 2-24](#), the floating-point constant, my_const1 (3.14), is smaller than 5.6, so the condition in the if statement is true. This causes Presto VHDL to elaborate the first clause of the if statement and ignore the second clause. Presto VHDL assigns bb to false, because my_const1 (equaling 3.14) is known at elaboration time.

Example 2-24

```
constant my_const1 : real :=3.14;
...
if (my_const1 <= 5.6) then
    state <= a;
else
    state <= b;
endif;
...
bb <= (my_const1/=3.14); -- bb is BOOLEAN type
...
```

Guidelines

- Floating-point objects are supported on Linux platforms, 32-bit sparc/hp platforms, and 64-bit sparc/hp platforms.
- Floating-point signal and variable objects are not supported, and can not be synthesized; only constant floating point objects are supported.
- Floating-point objects in the generic map of an entity are not supported.
- The floating-point range is -1.0e38 to 1.0e38 inclusive, the same as the float type in C.
- The floating-point object initialization expression must be present and its value must be resolvable at the time of elaboration, or an error is reported.

math_real Package Support

This section describes Presto VHDL support for the IEEE standard VHDL math_real package, which defines arithmetic functions using REAL type arguments.

This section contains the following:

- [Unsupported Constructs and Operators](#)
- [Using the math_real Package](#)
- [Arithmetic Functions](#)
- [Usage Examples](#)

Unsupported Constructs and Operators

Presto VHDL does not support the following components:

- Is_X() function is a simulation rather than synthesis construct; it is ignored in synthesis
- REAL signals
- REAL types with ranges

Using the math_real Package

The math_real package is typically installed in the Synopsys root directory. Access it with the following statement in your VHDL code:

```
Library IEEE;  
Use IEEE.math_real.all;
```

NOTE : Operations on REAL type data are only supported for constant evaluation.

Arithmetic Functions

The math_real package provides arithmetic functions for use with the REAL data type. These functions can be used in synthesis for constant calculations. [Example 2-25](#) shows the declaration of these functions.

Example 2-25

```
function "***" (X : in INTEGER; Y : in REAL) return REAL;  
function "***" (X : in REAL; Y : in REAL) return REAL;  
function "MOD" (X, Y : in REAL) return REAL;  
function ARCCOS (X : in REAL) return REAL;  
function ARCCOSH (X : in REAL) return REAL;  
function ARCSIN (X : in REAL) return REAL;  
function ARCSINH (X : in REAL) return REAL;
```

```

function ARCTAN (Y : in REAL) return REAL;
function ARCTAN (Y : in REAL; X : in REAL) return REAL;
function ARCTANH (X : in REAL) return REAL;
function CBRT (X : in REAL) return REAL;
function CEIL (X : in REAL) return REAL;
function COS (X : in REAL) return REAL;
function COSH (X : in REAL) return REAL;
function EXP (X : in REAL) return REAL;
function FLOOR (X : in REAL) return REAL;
function LOG (X : in REAL) return REAL;
function LOG (X : in REAL; BASE : in REAL) return REAL;
function LOG10 (X : in REAL) return REAL;
function LOG2 (X : in REAL) return REAL;
function REALMAX (X, Y : in REAL) return REAL;
function REALMIN (X, Y : in REAL) return REAL;
function ROUND (X : in REAL) return REAL;
function SIGN (X : in REAL) return REAL;
function SIN (X : in REAL) return REAL;
function SINH (X : in REAL) return REAL;
function SQRT (X : in REAL) return REAL;
function TAN (X : in REAL) return REAL;
function TANH (X : in REAL) return REAL;
function TRUNC (X : in REAL) return REAL;
procedure UNIFORM(variable SEED1, SEED2 : inout POSITIVE; variable X :
out REAL);

```

Usage Examples

See [Example 2-26](#) and [Example 2-27](#) on page 2-24.

Example 2-26 Constant Evaluation of Parameters

```

library IEEE;
use IEEE.math_real.all;

entity test1 is
  generic (
    param1 : real := 1.1;
    param2 : real := 2.2;
    param3 : real := 3.3;
    param4 : real := 4.4
  );
...

architecture rtl of test1 is

  constant p1 : real      := REALMAX(param1, param2);
  constant p2 : real      := REALMIN(param3, param4);
  constant p3 : real      := ARCTAN(param2);
  constant rp4 : real     := ROUND(param4);

```

```
constant i1 : integer := integer(param4);
```

Example 2-27 User Defined Functions

```
function realtodb(val : real ) return real is
begin
return 20.0*(log10(val));
end function;

CONSTANT Ar      : real      := 1.375;
CONSTANT Ar_db   : real      := realtodb(Ar);
```

Operands

Operand requirements specific to Presto VHDL are discussed in the following subsections:

- [Operand Bit-Width](#)
- [Array Slice Names](#)
- [Computable and Noncomputable Operands](#)
- [Indexed Name Targets](#)

Operand Bit-Width

Presto VHDL uses the bit-width of the largest operand to determine the bit-width needed to implement an operator in a circuit. For example, an INTEGER operand is 32 bits wide by default. An addition of two INTEGER operands causes Presto VHDL to build a 32-bit adder.

To use hardware resources efficiently, always indicate the bit-width of numeric operands. For example, use a subrange of INTEGER when declaring types, variables, or signals.

```
type      ENOUGH:  INTEGER range 0 to 255;
variable WIDE:    INTEGER range -1024 to 1023;
signal    NARROW:  INTEGER range 0 to 7;
```

Array Slice Names

Slice names identify a sequence of consecutive elements of an array variable or signal. The syntax is

identifier (*expression direction expression*)

identifier

The identifier is the name of a signal or variable of an array type. Each *expression* must return a value within the array's index range and must be computable (see [“Computable and Noncomputable Operands” on page 2-25](#)).

direction

The *direction* must be either to or downto. The direction of a slice must be the same as the direction of an identifier's array type. If the left and right expressions are equal, they define a single element.

The value returned to an operator is a subarray containing the specified array elements.

Computable and Noncomputable Operands

A computable operand is one whose value can be determined by Presto VHDL at compile time, that is, the operand value is constant and doesn't depend on any inputs.

Noncomputable operand values depend on inputs that are known only at runtime. Because the operand value varies according to inputs, Presto VHDL needs to build additional logic to determine what the value is at runtime.

Following are examples of computable operands:

- Literal values
- for...loop parameters, when the loop's range is computable
- Variables assigned a computable expression
- Aggregates that contain only computable expressions
- Function calls whose return value is computable
- Expressions with computable operands
- Qualified expressions when the expression is computable
- Type conversions when the expression is computable
- The value of the and or nand operators when one of the operands is a computable '0'

- The value of the or operator or the nor operator when one of the operands is a computable '1'

Additionally, a variable is given a computable value if it is an OUT or INOUT parameter of a procedure that assigns it a computable value.

Typically, the following are noncomputable operands:

- Signals
- Ports
- Variables assigned different computable values that depend on a noncomputable condition
- Variables assigned noncomputable values

[Example 2-28](#) shows some definitions and declarations, followed by several computable and noncomputable expressions.

Example 2-28 *Computable and Noncomputable Expressions*

```

signal S: BIT;
. . .
function MUX(A, B, C: BIT) return BIT is
begin
    if (C = '1') then
        return(A);
    else
        return(B);
    end if;
end;

procedure COMP(A: BIT; B: out BIT) is
begin
    B := not A;
end;

process(S)
    variable V0, V1, V2: BIT;
    variable V_INT:      INTEGER;

    subtype MY_ARRAY is BIT_VECTOR(0 to 3);
    variable V_ARRAY:    MY_ARRAY;
begin
    V0 := '1';           -- Computable (value is '1')
    V1 := V0;            -- Computable (value is '1')
    V2 := not V1;        -- Computable (value is '0')

    for I in 0 to 3 loop
        V_INT := I;      -- Computable (value depends on iteration)
    end loop;

    V_ARRAY := MY_ARRAY'(V1, V2, '0', '0');
    -- Computable ("1000")
    V1 := MUX(V0, V1, V2); -- Computable (value is '1')
    COMP(V1, V2);
    V1 := V2;             -- Computable (value is '0')
    V0 := S and '0';      -- Computable (value is '0')
    V1 := MUX(S, '1', '0'); -- Computable (value is '1')
    V1 := MUX('1', '1', S); -- Computable (value is '1')

    if (S = '1') then
        V2 := '0';       -- Computable (value is '0')
    else
        V2 := '1';       -- Computable (value is '1')
    end if;
    V0 := V2;            -- Noncomputable; V2 depends on S
    V1 := S;             -- Noncomputable; S is a nonfixed signal
    V2 := V1;            -- Noncomputable; V1 is no longer computable
end process;

```

Indexed Name Targets

The syntax for an assignment to an indexed name (identifier) target is

```
identifier(index_expression) := expression; -- Variable assignment  
identifier(index_expression) <= expression; -- Signal assignment
```

The `identifier` is the name of an array type signal or variable.

The `index_expression` must evaluate to an index value for the identifier array's index type and bounds. It does not have to be computable, but more hardware is synthesized if it is not. See [“Computable and Noncomputable Operands” on page 2-25](#).

The assigned `expression` must have the array's element type.

Modeling Considerations

Modeling requirements specific to Presto VHDL are discussed in the following subsections:

- [Concatenation](#)
- [Unconstrained Type Ports](#)
- [Input Ports Associated With the Keyword open](#)
- [Multiple Events in a Single Process](#)
- [Keeping Signal Names](#)
- [Controlling Structure](#)
- [Resolution Functions](#)
- [Asynchronous Designs](#)
- [Using Don't Care Values](#)
- [Finite State Machines](#)
- [Multibit Inference](#)

Concatenation

Both the 87 and 93 VHDL language reference manual (LRM) definitions of the concatenation operator are supported by the HDL Compiler (Presto VHDL) tool. The default support is for the 93 LRM definition. To enable the 87 LRM definition, set `hdl_in_vhdl93_concat` to false. To help understand the difference between the two

definitions, consider [Example 2-29](#). In this example, constant k3 and k4 are defined using concatenation with constants k1 and k2. The value of k3 and k4 will differ according to what VHDL language standard you use: VHDL-87 or VHDL-93.

If you use VHDL-93, the value of K3'left to K3'right is the same as K4'left to K4'right. To determine this value, the tool counts from 0 to 3 and the value does not depend on the K1 and K2 start positions.

If you use VHDL-87, the value of K3'left to K3'right, which is from 0 to 3, is different from K4'left to K4'right, which is from 1 down to -2, because concatenation in VHDL-87 defines the position count from the start position of the left operand K1 position (1) and the procedure (downto) instead of starting from the 0 position, as is the case in the VHDL-93 language standard.

Example 2-29 Understanding Concatenation in VHDL-93 and VHDL-87

```
constant c1 : bit_vector(0 to 3) := "1101";
      constant c2 : bit_vector(0 to 3) := "0010";

      -- value of "c3" is "11010010"
      constant c3 : bit_vector(0 to 7) := c1 & c2;

      -- value of "c4" is "11101"
      constant c4 : bit_vector(0 to 4) := '1' & c1;

      -- value of "c5" is "01"
      constant c5 : bit_vector(0 to 1) := '0' & '1';

type r is 0 to 7;
type r_vector is array (r <> range) of bit;

constant k1 : r_vector(1 downto 0) := "10";
constant k2 : r_vector(0 to 1) := "01";
constant k3 : r_vector := k2 & k1;
constant k4 : r_vector := k1 & k2;
```

[Example 2-30](#) shows the values of constants k2, k3, k4, and k5 when interpreted using VHDL-87 and VHDL-93 definitions.

Example 2-30

```
type r1 is range 0 to 7;
type r2 is range 7 downto 0;
type t1 is array (r1 range <>) of bit;
type t2 is array (r2 range <>) of bit;

subtype s1 is t1(r1);
subtype s2 is t2(r2);

constant k2: t1 := k1(1 to 3) & k1(3 to 4);
      -- 93 concat: k2'left = 0 and k2'right = 4
```

```
-- 87 concat: K2'left = 1 and k2'right = 5

constant k3: t1 := k1(5 to 7) & k1(1 to 2);
-- 93 concat: k3'left = 0 and k3'right = 4
-- 87 concat: k3'left = 5 and k3'right = 9

constant k5: t2 := k4(3 downto 1) & k1(3 to 4);
-- 93 concat: k5'left = 0 and k5'right = 4
-- 87 concat: k5'left = 3 and k5'right = -1
```

Unconstrained Type Ports

Presto VHDL supports the usage of unconstrained type ports when the type of the ports can be deduced. In these cases, you must use the `analyze` and `elaborate` commands to read your design. The read command does not support type conversion on formal ports.

Input Ports Associated With the Keyword open

If you associate an input port with the reserved keyword `open`, you must initialize it with a default expression, or the `analyze` command will report an error. Presto VHDL connects the open port with the default expression after elaboration.

Multiple Events in a Single Process

Presto VHDL supports multiple events in a single process as shown in [Example 2-31](#).

Example 2-31

```
process
begin
    wait until CLOCK'event and CLOCK = '1';
    if (CONDITION) then
        X <= A;
    else
        wait until CLOCK'event and CLOCK = '1';
    end if;
end process;
```

Keeping Signal Names

When a signal is in a path to an output port, Presto VHDL usually keeps the signal's name if the signal isn't removed during optimizations, such as removing redundant code. You can give Presto VHDL guideline information for keeping a signal name by using the `hdlin_keep_signal_name` variable and the `keep_signal_name` directive. The default is `all_driving`. [Table 2-1](#) describes the variable options.

Table 2-1 hdlin_keep_signal_name Variable Options

Option	Description
user	This option works with the <code>keep_signal_name</code> directive. Presto VHDL attempts to preserve a signal if the signal isn't removed by optimizations and that signal is labeled with the <code>keep_signal_name</code> directive. Both dangling and driving nets are considered. Although not guaranteed, Presto VHDL typically keeps the specified signal for this configuration.
all_driving (default)	Presto VHDL attempts to preserve a signal if the signal isn't removed by optimizations and the signal is in an output path. Only driving nets are considered. This option does not guarantee a signal is kept.

Note:

When a signal has no driver, the tool assumes logic 0 (ground) for the driver

To prevent signals from being removed during optimizations, use the `keep_signal_name` directive, as shown in [Example 2-32](#) and [Example 2-33](#). Note that this directive works together with the `hdlin_keep_signal_name` variable. For the examples, this variable is set to `user`. Review the variable options and set this variable to your specific requirements before reading your design.

Example 2-32 Keep Signal tmp

```
entity bus_name is
  port (
    in1 : in bit_vector (1 downto 0) ;
    in2 : in bit_vector (1 downto 0) ;
    z : out bit_vector (1 downto 0));
end bus_name ;

architecture imp of bus_name is
-- synopsys keep_signal_name "tmp"
  signal tmp : bit_vector (1 downto 0);
begin
  process(in1, in2)
  begin
    tmp <= in1 and in2;
    z <= in1;
  end process ;
```

```
end imp;
```

Example 2-33 Keep Signal tmp1 and tmp2

```
entity test is
    port (a, b : in bit; z: out bit );
end;

architecture imp of test is
    -- synopsys keep_signal_name "tmp1, tmp2"
    signal tmp1 : bit;
    signal tmp2 : bit;

begin
    process (a, b)
    begin
        tmp1 <= a and b;
        tmp2 <= a or b;
        z <= b;
    end process;
end imp; ;
```

Controlling Structure

You can use parentheses to force the synthesis of parallel hardware. For example, $(A + B) + (C + D)$ builds an adder for $A+B$, an adder for $C+D$, and an adder to add the result. Design Compiler preserves the subexpressions dictated by the parentheses, but this restriction on Design Compiler optimizations might lead to less-than-optimum area and timing results.

Parentheses can also be helpful in coding for late-arriving signals. For example, if you are adding three signals—A, B, and C—and A is late arriving, then $A+(B+C)$ can be useful in handling the late-arriving signal A. Note that Design Compiler will also try to create a structure to allow the late-arriving signal to meet timing. Any restriction on Design Compiler optimizations might lead to less-than-optimum area and timing results.

Resolution Functions

The resolution function and the coding style determine the choice of wired logic. Synthesis neither checks for nor resolves possible data collisions on a synthesized three-state bus. It is the responsibility of the designer to ensure that the three-state enablers for a common bused line are not active at the same time.

Synopsys has modified the resolution function in `std_logic_1164`, by adding to it the `resolution_method_three_state` directive which enables you create multiply-driven signals of type `std_logic` and `std_logic_vector` that will synthesize into three-state gates when the appropriate coding style is used. If you want wired-and or wired-or gates synthesized, you must write your own package, as shown in [Example 2-34](#).

Presto VHDL does not support arbitrary resolution functions. Only wired AND, wired OR, and three-state functions are allowed. Presto VHDL requires that you mark all resolution functions with a directive indicating the kind of resolution being performed.

Presto VHDL considers the directive only when creating hardware. The body of the resolution function is parsed but ignored.

Do not connect signals that use different resolution functions. Presto VHDL supports only one resolution function per network.

The three resolution function directives are

- `synopsys resolution_method wired_and`
- `synopsys resolution_method wired_or`
- `synopsys resolution_method three_state`

Pre-synthesis and post-synthesis simulation results might not match if the body of the resolution function the simulator uses does not match the directive the synthesizer uses.

[Example 2-34](#) shows how to create and use a resolved signal and how to use compiler directives for resolution functions. The signal's base type is the predefined type `BIT`.

[Figure 2-3](#) shows the design.

Example 2-34 Resolved Signal and Its Resolution Function

```
package RES_PACK is
  function RES_FUNC(DATA: in BIT_VECTOR) return BIT;
  subtype RESOLVED_BIT is RES_FUNC BIT;
end;

package body RES_PACK is
  function RES_FUNC(DATA: in BIT_VECTOR) return BIT is
    -- synopsys resolution_method wired_and
  begin
    -- The code in this function is ignored by Presto VHDL
```

```

-- but parsed for correct VHDL syntax

for I in DATA'range loop
    if DATA(I) = '0' then
        return '0';
    end if;
end loop;
return '1';
end;
end;


use work.RES_PACK.all;

entity WAND_VHDL is
    port(X, Y: in BIT; Z: out RESOLVED_BIT);
end WAND_VHDL;

architecture WAND_VHDL of WAND_VHDL is
begin
    Z <= X;
    Z <= Y;
end WAND_VHDL;

```

Figure 2-3 Design Using Resolved Signal



Asynchronous Designs

If you use asynchronous design techniques—that is, nonclocked designs—synthesis and simulation results might not agree. Because Design Compiler does not issue warning messages for asynchronous designs, you are responsible for verifying the correctness of your circuit. See the *Synopsys Timing Constraints and Optimization User Guide* for additional information.

Using Don't Care Values

Presto VHDL always evaluates comparisons to don't care values to false. This behavior is different from simulation behavior. To prevent a synthesis/simulation mismatch, always use the IEEE 1076.3-1997 STD_MATCH function when using don't care values in comparisons. See [“Don't Care Values in Comparisons” on page 2-44](#).

Finite State Machines

Presto VHDL automatically infers finite state machines (FSMs). For FSM optimization details, see the *Design Compiler Reference Manual: Optimization and Timing Analysis*.

This section includes the following subsections:

- [Variables and Commands Specific to FSM Inference](#)
- [FSM Coding Requirements](#)
- [FSM Example and Inference Report](#)
- [State Vector Attribute](#)

See Appendix A for additional FSM examples.

Variables and Commands Specific to FSM Inference

The variables and commands listed in [Table 2-2](#) are specific to FSM inference.

Table 2-2 Variables and Commands Specific to FSM Inference

Variables/Commands	Description
<code>hdlin_reporting_level</code>	Default is <code>basic</code> . Variable enables and disables FSM inference reports. When set to <code>comprehensive</code> , FSM inference reports are generated when Presto VHDL reads the code. By default, FSM inference reports are not generated. For more information, including valid values, see “Elaboration Reports” on page 1-7 .
<code>fsm_auto_inferring</code>	Default is <code>false</code> . Option determines whether or not Design Compiler automatically extracts the FSM during compile. This option controls Design Compiler extraction. In order to automatically infer and extract an FSM, <code>fsm_auto_inferring</code> must be true. See the <i>Design Compiler Reference Manual: Optimization and Timing Analysis</i> and the man page for additional information.

For more information about these variables and commands, see the man pages.

FSM Coding Requirements

Follow the coding guidelines in [Table 2-3](#) to enable Presto VHDL to infer an FSM.


Table 2-3 RTL Requirements for Automatic Detection of FSMs

Item	Description
Registers	<p>To infer a register as an FSM state register, the register</p> <p>Must never be assigned a value other than the defined state values.</p> <p>Must always be inferred as a flip-flop (not a latch).</p> <p>Must never be a design port, function port, or task port. This would make the encoding visible to the outside.</p> <p>Inside expressions, FSM state registers can be used only as an operand of "==" or "/=" comparisons or as the expression in a case statement that is an implicit comparison to the label expressions, such as "case (cur_state) ...". FSM state registers are not allowed to occur in other expressions—this would make the encoding explicit.</p>
Function	<p>There can be only one FSM design per entity. State variables cannot drive a port. State variables cannot be indexed.</p>
Ports	<p>All ports of the initial design must be either input ports or output ports. Inout ports are not supported.</p>
Combinational feedback loops	<p>Combinational feedback loops are not supported, although combinational logic that does not depend on the state vector is accurately represented.</p>
Clocks	<p>FSM designs can include only a single clock and an optional synchronous or asynchronous reset signal.</p>

FSM Example and Inference Report

When you set the `hdlin_reporting_level` variable to `comprehensive`, Presto VHDL creates an FSM inference report, as shown in [Example 2-36 on page 2-39](#). The report describes the FSM state encoding that Presto VHDL created from the RTL. [Example 2-35 on page 2-38](#) shows the FSM RTL code, and [Figure 2-4](#) shows an FSM state diagram based on that code. For more information about the `hdlin_reporting_level` variable, see [“Elaboration Reports” on page 1-7](#).

Figure 2-4 FSM State Diagram

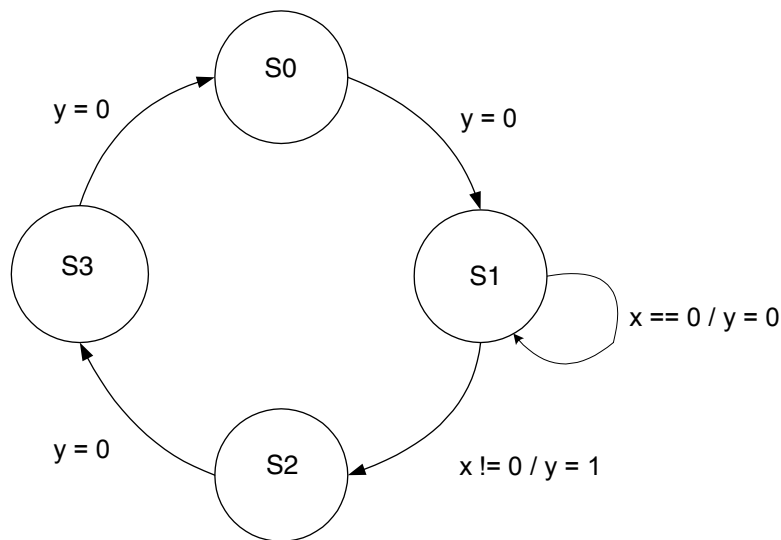

Example 2-35 FSM RTL Code

```

library IEEE;
use IEEE.std_logic_1164.all;

entity FSM is
  port(CLK : in std_logic;
        X   : in std_logic;
        Y   : out std_logic);
end FSM;

architecture STATE_MACHINE_VIEW of FSM is
  -- Declare an enum type for the state
  type STATE_TYPE is (S0, S1, S2, S3);
  signal STATE : STATE_TYPE;
  signal NEXT_STATE : STATE_TYPE;
begin
  -- This process sets the next state on the clock edge.
  SET_STATE: process(CLK, NEXT_STATE) begin
    if (CLK'event and CLK = '1') then
      STATE <= NEXT_STATE;
    end if;
  end process SET_STATE;

  -- This process determines the next state and output
  -- values based on the current state and input values.
  SET_NEXT_STATE: process(STATE,X) begin
    -- SET defaults for NEXT_STATE and all outputs.
    Y <= '0';
    NEXT_STATE <= S0;
    case STATE is
      when S0 =>
        Y <= '0';
        NEXT_STATE <= S1;
      when S1 =>
        if (X = '0') then
          Y <= '0';
          NEXT_STATE <= S1;
        else
          Y <= '1';
          NEXT_STATE <= S2;
        end if;
      when S2 =>
        Y <= '0';
        NEXT_STATE <= S3;
      when S3 =>
        Y <= '0';
        NEXT_STATE <= S0;
    end case;
  end process SET_NEXT_STATE;
end STATE_MACHINE_VIEW;

```

Example 2-36 Finite State Machine Inference Report

```

statistics for FSM inference:
  state register: STATE
  states
  =====
  S0:             00
  S1:             01
  S2:             10
  S3:             11

```

State Vector Attribute

When inferring FSMs, always check your FSM inference report to verify that Presto VHDL correctly inferred the FSM. If you want to change a state encoding, you can do so by using the `STATE_VECTOR` attribute in the architecture to specify state vectors for your design in the RTL.

When writing a state machine in VHDL, you can use a `STATE_VECTOR` attribute to provide information to Design Compiler. Use a `STATE_VECTOR` attribute in the architecture; the attribute value is the name of the state signal. Use only one `STATE_VECTOR` attribute for an architecture, as shown in [Example 2-37](#).

Example 2-37 Using STATE_VECTOR Attribute in Architecture

```

entity FSM1_ST is
  port(clk : in BIT; toggle : in BIT; opl : out BIT);
end FSM1_ST;

architecture STATE_MACHINE_VIEW of FSM1_ST is
  -- Declare an enum type for the state
  type STATE_TYPE is (ZERO, ONE);
  signal STATE : STATE_TYPE;
  signal NEXT_STATE : STATE_TYPE;
  -- Set the state vector attribute
  attribute STATE_VECTOR : STRING;
  attribute STATE_VECTOR of STATE_MACHINE_VIEW :
    architecture is "STATE";

```

See the *Design Compiler Reference Manual: Optimization and Timing Analysis* for more information on specifying and encoding state machines.

Multibit Inference

Presto VHDL can infer multibit components. These components reduce area and power consumption in a design, but their primary benefits are the creation of a more uniform structure for layout during place and route.

This section contains the following:

- [Multibit Inference Overview](#)
- [Controlling Multibit Inference](#)
- [infer_multibit Attribute Examples](#)

Multibit Inference Overview

Multibit inference allows you to map registers, multiplexers, and three-state cells to regularly structured logic or multibit library cells. Multibit library cells (the macrocells, such as a 16-bit banked flip-flop, in the library) have these advantages:

- Smaller area and delay, due to shared transistors (as in select or set/reset logic) and optimized transistor-level layout
In the use of 1-bit components, the select or set/reset logic is repeated in each 1-bit component.
- Reduced clock skew in sequential gates, because the clock paths are balanced internally in the hard macro implementing the multibit component.
- Lower power consumption by the clock in sequential banked components, due to reduced capacitance driven by the clock net
- Better performance due to the optimized multibit layout
- Improved regular layout of the datapath

Multibit components might not be efficient in the following instances:

- As state machine registers
- In small bused logic that would benefit from single-bit design

Controlling Multibit Inference

Presto VHDL infers as multibit components only register, multiplexer, and three-state cells that have identical structures for each bit.

To direct Presto VHDL to infer multibit components, do one of the following:

- Embed the attribute, `infer_multibit`, in the HDL source.

The attribute gives you control over individual case statements. Set the `infer_multibit` attribute to true on signals and variables to infer them as multibit components. See [Example 2-38 on page 2-42](#).

- Use the `dc_shell` variable, `hdlin_infer_multibit`.

This variable controls multibit inference for all bused registers, multiplexers, and three-state cells you input in the same `dc_shell` session. The options are

- `default_none`: Infers multibit components for signals that have the `infer_multibit` attribute set to true in the VHDL RTL. This is the default.
- `default_all`: Infers multibit components for all bused registers, multiplexers, and three-state cells. To disable multibit mapping for certain signals, set `infer_multibit` to false in the VHDL code on those signals.
- `never`: Does not infer multibit components, regardless of the attributes or directives in the HDL source.

To adjust the design after layout, use the following commands:

- `create_multibit`: Infers multibit components in a mapped design.
- `remove_multibit`: Removes multibit components from a mapped design.

For more information on how Design Compiler handles multibit components in a mapped design, see the *Design Compiler Reference Manual: Optimization and Timing Analysis*.

infer_multibit Attribute Examples

In [Example 2-38](#), the `infer_multibit` attribute—highlighted in bold—is set on signal `q`. [Example 2-39](#) shows the inference report. In this report, the column MB indicates that the component is inferred as a multibit component.

Example 2-38 *Inferring a Multibit 4-Bit Latch With Asynchronous Reset*

```

library IEEE, Synopsys;
use IEEE.std_logic_1164.all;
use Synopsys.attributes.all;
entity d_latch_async_reset_4 is
port (enable, reset : in std_logic;
      data : in std_logic_vector(3 downto 0);
      q : out std_logic_vector(3 downto 0));
end d_latch_async_reset_4;

architecture rtl of d_latch_async_reset_4 is
attribute async_set_reset of reset : signal is "true";
attribute infer_multibit of q : signal is "true";
begin
    proc1 : process (enable, data, reset)
    begin
        if (reset = '1') then
            q <= "0000";
        elsif (enable = '1') then
            q <= data;
        end if;
    end process proc1;
end rtl;

```

Example 2-39 *Inference Report for a 4-Bit Latch With Asynchronous Reset*

Register Name	Type	Width	Bus	MB	AR	AS	SR	SS	ST
q_reg	Latch	4	Y	Y	Y	N	-	-	-

[Example 2-40](#) shows the same VHDL code but illustrates how to prevent multibit inference of signal q. Bold highlights the `infer_multibit` attribute. The inference report is shown in [Example 2-41](#). In this report, the column MB indicates that the component is not inferred as a multibit component.

Example 2-40 Latch With Asynchronous Reset Without Multibit Inference

```

library IEEE, Synopsys;
use IEEE.std_logic_1164.all;
use Synopsys.attributes.all;
entity d_latch_async_reset_4_nomb is
port (enable, reset : in std_logic;
      data : in std_logic_vector(3 downto 0);
      q : out std_logic_vector(3 downto 0));
end d_latch_async_reset_4_nomb;
architecture rtl of d_latch_async_reset_4_nomb is
attribute async_set_reset of reset : signal is "true";
attribute infer_multibit of q : signal is "false";
begin
    proc1 : process (enable, data, reset)
    begin
        if (reset = '1') then
            q <= "0000";
        elsif (enable = '1') then
            q <= data;
        end if;
    end process proc1;
end rtl;

```

Example 2-41 Inference Report for a Latch Without Multibit Inference

```

=====
| Register Name | Type | Width | Bus | MB | AR | AS | SR | SS | ST |
=====
| q_reg        | Latch | 4 | Y | N | Y | N | - | - | - |
=====

```

Simulation/Synthesis Mismatch Issues

The following sections describe simulation/synthesis mismatch issues:

- [Type Mismatches](#)
- [Set and Reset Signals](#)
- [Z Values in Expressions](#)
- [Don't Care Values in Comparisons](#)
- [Ordering of Enumerated Types Using the ENUM_ENCODING attribute](#)
- [Sensitivity Lists](#)
- [Delay Specifications](#)

Type Mismatches

The `numeric_std` package and the `std_logic_arith` package have overlapping operations. Use of these two packages simultaneously during analysis could cause type mismatches.

Set and Reset Signals

A simulation/synthesis mismatch can occur if the set/reset signal is masked by an X during initialization in simulation. Use of the `sync_set_reset` directive reduces mismatches. For examples, see [“D Flip-Flop With Synchronous Set” on page 4-22](#) and [“D Flip-Flop With Synchronous Reset” on page 4-23](#).

Z Values in Expressions

The use of the `z` value in an expression always evaluates to false and can cause a simulation/synthesis mismatch. For details, see [“Understanding the Limitations of Three-State Inference” on page 5-9](#).

Don't Care Values in Comparisons

To prevent simulation/synthesis mismatch, do not use don't care values in comparisons unless you use the IEEE 1076.3-1997 `STD_MATCH` function.

Don't care types are treated differently in simulation than they are in synthesis. To a simulator, a don't care value is a distinct value, different from a 1 or a 0. In synthesis, however, a don't care value becomes a 0 or a 1. When a don't care value is used in a comparison, Presto VHDL always evaluates the comparison to false. Because of this difference in treatment, there is the potential for a simulation/synthesis mismatch whenever a comparison is made with a don't care value.

For example,

```
if X = '-' then
...
```

is synthesized as

```
if FALSE then
```

The following case statement causes a synthesis/simulation mismatch because the simulator evaluates 1- to match 11 and 10 but the synthesis tool evaluates 1- to false; the same hold true for the 0- evaluation.

```

case (A)
  1- : .... -- you want 1- to match 11 and 10 but
          -- Presto VHDL always evaluates this comparison
          -- to false
  0- : .... -- you want 0- to match 00 and 01 but
          -- Presto VHDL always evaluates this comparison
          -- to false
  default : ....
endcase

```

To fix this mismatch problem, always use the `STD_MATCH` function; for example, rewrite the code above by using if statements, as follows:

```

if (STD_MATCH (A, "1,-"))
  ....
elseif (STD_MATCH (A, "0,-"))
  ....
else

```

Presto VHDL issues a warning similar to the following when it synthesizes such comparisons:

```

Warning: A partial don't-care value was read in routine test
line 24 in file 'test.vhd' This may cause simulation to
disagree with synthesis. (HDL-171)

```

Ordering of Enumerated Types Using the `ENUM_ENCODING` attribute

If you set the encoding of your enumerated types by using the `ENUM_ENCODING` attribute, the ordering operators compare your encoded value ordering, not the declaration ordering. Because this interpretation is specific to Presto VHDL, it might cause a mismatch with the VHDL simulator, which uses the declaration's order of enumerated types. See [“Enumeration Encoding” on page 2-18](#) and [“ENUM_ENCODING Attribute” on page 6-9](#).

Sensitivity Lists

Presto VHDL generates a warning if all the signals read by the process are not listed in the sensitivity list. The circuit Presto VHDL synthesizes is sensitive to all signals the process reads. To guarantee the same results from a VHDL simulator, follow these guidelines when developing the sensitivity list:

- For sequential logic, include the clock signal and all asynchronous control signals in the sensitivity list.
- For combinational logic, all inputs must be in the sensitivity list.

Presto VHDL checks sensitivity lists for completeness and issues a warning message for any signal that is read inside a process but is not in the sensitivity list. An error message is issued if a clock signal is read as data in a process.

Note:

The IEEE VHDL standard does not allow a sensitivity list if the process has a wait statement. If your code has this condition, Presto VHDL will issue a warning and ignores the code.

Delay Specifications

Delays are ignored for synthesis; their use may cause a synthesis/simulation mismatch.

3

Modeling Combinational Logic

This chapter describes coding guidelines specific to Presto VHDL that are useful in combinational logic synthesis.

This chapter contains the following sections:

- [Synthetic Operators](#)
- [Logic and Arithmetic Operator Implementation](#)
- [Propagating Constants](#)
- [Bit-Truncation Coding for DC Ultra Datapath Extraction](#)
- [Multiplexing Logic](#)
- [Unintended Latches and Feedback Paths in Combinational Logic](#)

Synthetic Operators


Synopsys provides a collection of IP, referred to as the DesignWare Basic IP Library, as part of the HDL Compiler products. Basic IP provide basic implementations of common arithmetic functions that can be referenced by HDL operators in your VHDL or Verilog source code.

The DesignWare paradigm is built on a hierarchy of abstractions. HDL operators (either built-in operators like + and *, or HDL functions and procedures) are associated with synthetic operators, which are bound in turn to synthetic modules. Each synthetic module can have multiple architectural realizations, called implementations. When you use the HDL addition operator “+” in a design description, Presto VHDL infers the need for an adder resource, and puts an abstract representation of the addition operation into your circuit netlist. The same holds true when you instantiate a DesignWare component. For example, an instantiation of DW01_add will be mapped to the synthetic operator associated with it. See [Figure 3-1](#).

A synthetic library contains definitions for synthetic operators, synthetic modules, and bindings. It also contains declarations that associate synthetic modules with their implementations.

For more information about DesignWare synthetic operators, modules, and libraries, see the Synopsys DesignWare documentation.

Figure 3-1 DesignWare Hierarchy

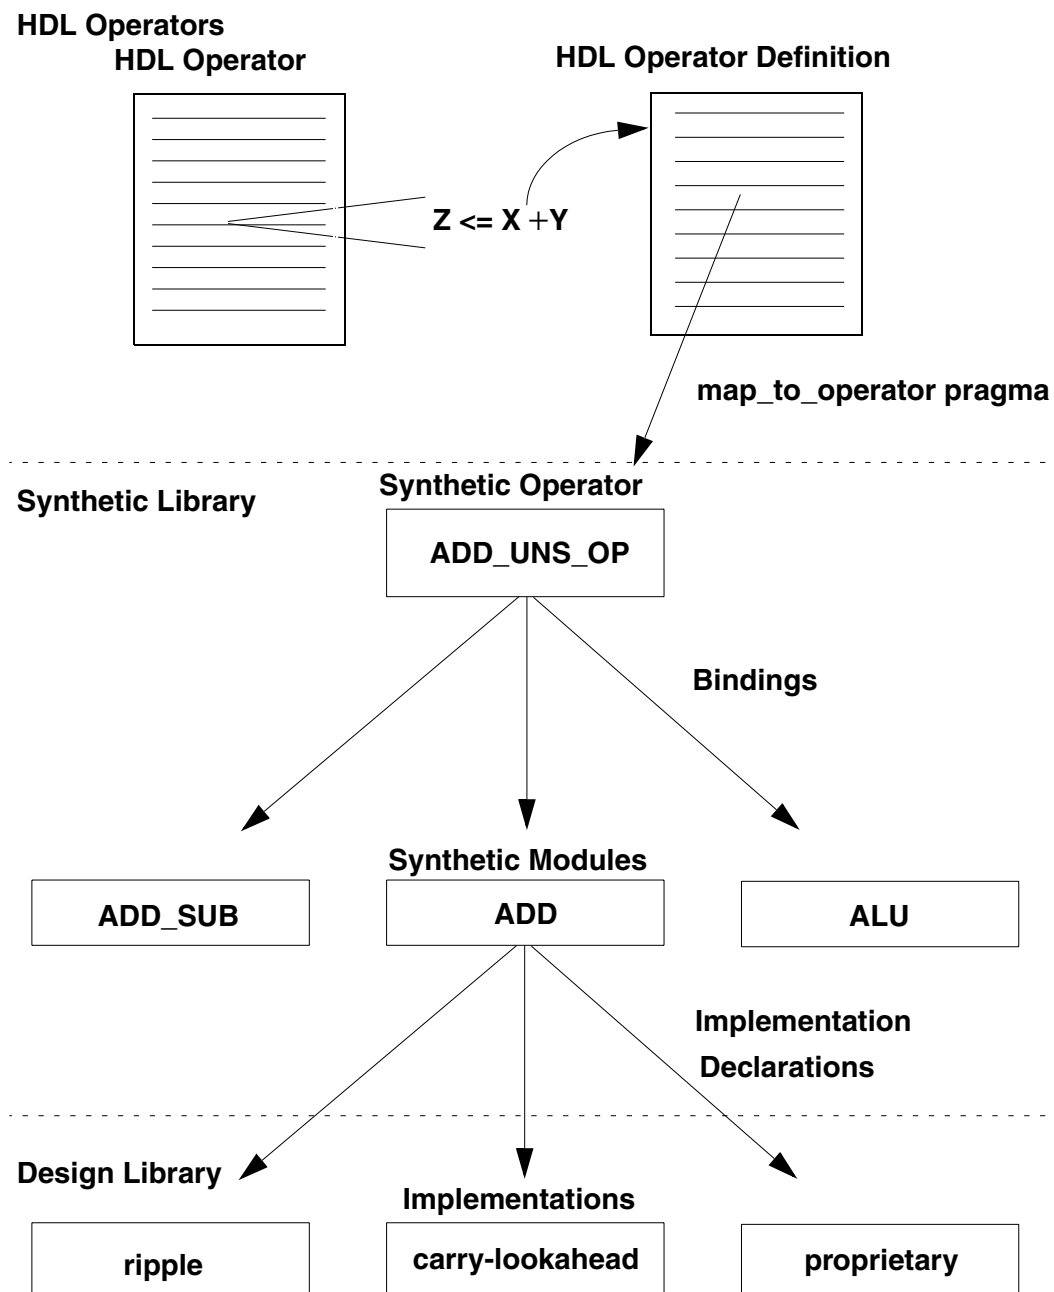

Logic and Arithmetic Operator Implementation

When Presto VHDL elaborates a design, it maps HDL operators to synthetic (DesignWare) operators that appear in the generic netlist. When Design Compiler optimizes the design, it maps these operators to DesignWare synthetic modules and chooses the best implementation, based on constraints, option settings, and wire-load models.

A Design Compiler license includes a DesignWare-Basic license that enables the DesignWare synthetic modules listed in [Table 3-1](#). These modules support common logic and arithmetic HDL operators. By default, adders and subtractors must be more than 4 bits wide to be mapped to these modules. If they are smaller, the operators are mapped to combinational logic.

Table 3-1 Operators Supported by a DesignWare-Basic License

HDL operator	Linked to DesignWare synthetic module
Comparison (> or <)	DW01_cmp2
Absolute value (abs)	DW01_absval
Addition (+)	DW01_add
Subtraction (-)	DW01_sub
Addition or Subtraction (+ or -)	DW01_addsub
Incrementer (+)	DW01_inc
Decrementer (-)	DW01_dec
Incrementer or decrementer (+ or -)	DW01_incdec
Multiplier (*)	DW02_mult

Synopsys creates numerous DesignWare synthetic modules in addition to the basic modules. The DesignWare Building Block IP (formally called Foundation Library) is a collection of reusable intellectual property blocks that are integrated into the Synopsys synthesis environment. This library contains high-performance implementations of Basic Library IP plus many IP that implement more advanced arithmetic and sequential logic functions. For more information about DesignWare synthetic modules, see the DesignWare documentation.

Propagating Constants

Constant propagation is the compile-time evaluation of expressions containing constants. Presto VHDL uses constant propagation to reduce the amount of hardware required to implement operators. For example, a "+" operator with a constant 1 as an input causes an incrementer, rather than a general adder, to be built. If both adder arguments are constants, no hardware is constructed, because the expression's value is calculated by Presto VHDL and inserted directly in the circuit.

Other operators that benefit from constant propagation include comparators and shifters. Shifting a vector by a constant amount requires no logic to implement; it requires only a reshuffling (rewiring) of bits.

Bit-Truncation Coding for DC Ultra Datapath Extraction

Datapath design is commonly used in applications that contain extensive data manipulation, such as 3-D, multimedia, and digital signal processing (DSP). Datapath extraction transforms arithmetic operators, such as addition, subtraction, and multiplication, into datapath blocks to be implemented by a datapath generator.

The DC Ultra tool enables datapath extraction after timing-driven resource sharing and explores various datapath and resource-sharing options during compile.

As of release T-2002.05, DC Ultra datapath optimization supports datapath extraction of expressions containing truncated operands unless both of the following two conditions exist:

- The operands have upper bits truncated.
- The width of the resulting expression is greater than the width of the truncated operand.

Both conditions must be true to prevent extraction. For lower-bit truncations, the datapath is extracted in all cases.

Bit truncation can be either explicit or implicit. [Table 3-2](#) describes both types of truncation.

Table 3-2 Explicit and Implicit Bit Truncation

Truncation type	Description
Explicit bit truncation	<p>An explicit upper-bit truncation is one in which you specify the bit range for truncation.</p> <p>The following code indicates explicit upper-bit truncation of operand A:</p> <pre>signal A = std_logic_vector (i downto 0); z <= A (j downto 0); -- where j < i</pre>

Table 3-2 *Explicit and Implicit Bit Truncation (Continued)*

Truncation type	Description
Implicit bit truncation	<p>An implicit upper-bit truncation is one that occurs through assignment. Unlike explicit upper-bit truncation, here you do not explicitly define the range for truncation.</p> <p>The following code indicates implicit upper-bit truncation of operand Y:</p> <pre> signal A,B = std_logic_vector (7 downto 0); signal C,Y = std_logic_vector (8 downto 0); Y = A + B + C; </pre> <p>Because A and B are each 8 bits wide, the return value of A+B will be 8 bits wide. However, because Y, which is 9 bits wide, is assigned to be the 9-bit wide addition (A+B)+C, the most significant bit (MSB) of the addition (A+B) is implicitly truncated. In this example, the MSB is the carryout.</p>

To see how bit truncation affects datapath extraction, consider the code in [Example 3-1](#).

In this example, d has the upper bit truncated, but e is only 8-bits so this code is extracted.

Example 3-1 *Design test1: Truncated Operand Is Extracted*

```

library IEEE;
use IEEE.std_logic_1164.all;
use IEEE.std_logic_unsigned.all;
entity test1 is
  port (a,b,c : in std_logic_vector(7 downto 0);
        e : out std_logic_vector(7 downto 0)); -- e is 8-bits wide
end test1;
architecture rtl of test1 is
  signal d : std_logic_vector(15 downto 0); -- d is 16-bits wide
begin
  d <= a * b;
  e <= c + d (7 downto 0); -- explicit upper bit truncation
end rtl;

```

In [Example 3-2](#), d is truncated to 8-bits and in an expression assigned to e which is 9-bits. This code is not extracted.

Example 3-2 *Design test2: Truncated Operand Is Not Extracted*

```

library IEEE;
use IEEE.std_logic_1164.all;
use IEEE.std_logic_unsigned.all;
entity test2 is
  port (a,b,c : in std_logic_vector(7 downto 0);
        e : out std_logic_vector(8 downto 0)); -- e is 9-bits wide
end test2;
architecture rtl of test2 is
  signal d : std_logic_vector(15 downto 0); -- d is 16-bit wide
begin

```

```

d <= a * b;
e <= '0'&c + d(7 downto 0); -- explicit upper bit truncation
end rtl;

```

In [Example 3-3](#), the expression assigned to e contains implicit upper-bit truncation and the width of e is greater than the width of the implicitly truncated operand, so the code is not extracted.

Example 3-3 Design test3: Truncated Operand Is Not Extracted

```

library IEEE;
use IEEE.std_logic_1164.all;
use IEEE.std_logic_unsigned.all;
entity test3 is
  port (a,b : in std_logic_vector(7 downto 0);
        e : out std_logic_vector(7 downto 0)); -- e is 8-bits wide
end test3;

architecture rtl of test3 is
  signal d : std_logic_vector(15 downto 0);
begin
  d <= a * b;
  e <= a + b + d(7 downto 0); -- implicit upper bit truncation
end rtl;

```

In [Example 3-4](#), there is lower-bit truncation but no upper-bit truncation so this code is extracted.

Example 3-4 Design test4: Truncated Operand is Extracted

```

library IEEE;
use IEEE.std_logic_1164.all;
use IEEE.std_logic_unsigned.all;
entity test4 is
  port (a,b : in std_logic_vector(7 downto 0);
        e : out std_logic_vector(7 downto 0));
end test4;
architecture rtl of test4 is
  signal d : std_logic_vector(15 downto 0); -- d is 16-bit wide
begin
  d <= a * b; -- no implicit upper bit truncation of d
  e <= d(15 downto 8); -- explicit lower bit truncation of d
end rtl;

```

Multiplexing Logic


Multiplexers are commonly modeled with if and case statements. To implement this logic, Presto VHDL uses SELECT_OP cells, which Design Compiler maps to combinational logic or multiplexers in the technology library. If you want Design Compiler to preferentially map multiplexing logic to multiplexers—or multiplexer trees—in your technology library, you must infer MUX_OP cells.

The following sections describe multiplexer inference:

- [SELECT_OP Inference](#)
- [MUX_OP Inference](#)
- [Variables That Control MUX_OP Inference](#)
- [MUX_OP Inference Examples](#)
- [MUX_OP Inference Limitations](#)


SELECT_OP Inference

By default, Presto VHDL uses SELECT_OP components to implement conditional operations implied by if and case statements. An example SELECT_OP cell implementation for an 8-bit data signal is shown in [Figure 3-2](#).

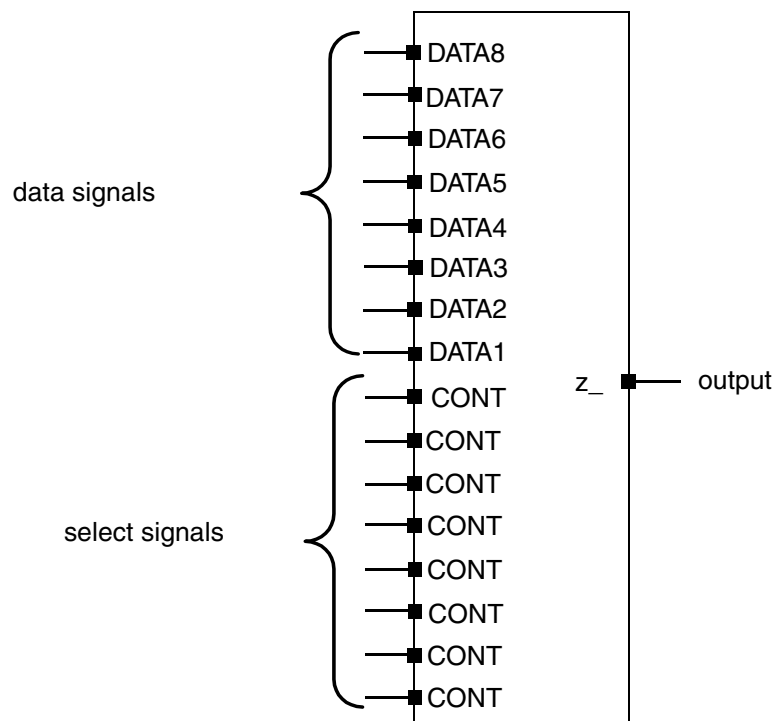Figure 3-2 SELECT_OP Implementation for an 8-bit Data Signal

Note that for an 8-bit data signal, 8 selection bits are needed - this is called a one-hot implementation.

SELECT_OPs behave like one-hot multiplexers; the control lines are mutually exclusive, and each control input allows the data on the corresponding data input to pass to the output. To determine which data signal is chosen, Presto VHDL generates selection logic, as shown in [Figure 3-3](#).

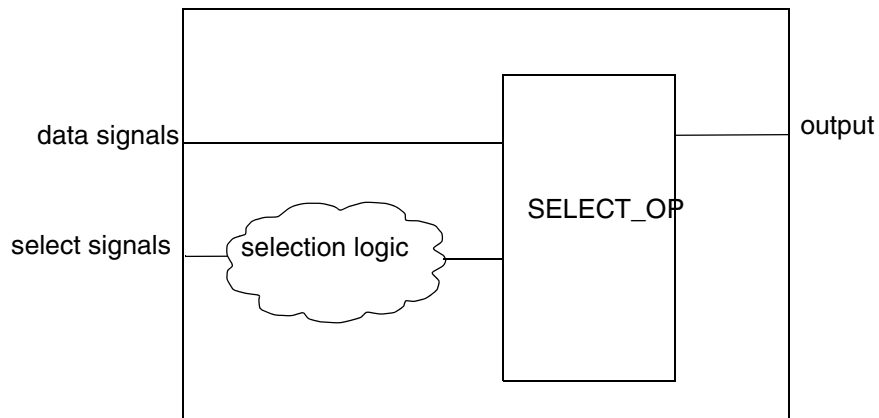Figure 3-3 Presto VHDL Output—SELECT_OP and Selection Logic


Depending on the design constraints, Design Compiler will implement the `SELECT_OP` with either combinational logic or multiplexer cells from the technology library.

MUX_OP Inference

If you want Design Compiler to preferentially map multiplexing logic in your RTL to multiplexers—or multiplexer trees—in your technology library, you need to infer `MUX_OP` cells. These cells are hierarchical generic cells optimized to use the minimum number of select signals. They are typically faster than the `SELECT_OP` cell, which uses a one-hot implementation. Although `MUX_OP` cells improve design speed, they also might increase area. During optimization, Design Compiler preferentially maps `MUX_OP` cells to multiplexers—or multiplexer trees—from the technology library, unless the area costs are prohibitive, in which case combinational logic is used. See the *Design Compiler Reference Manual: Optimization and Timing Analysis* for information about how Design Compiler maps `MUX_OP` cells to multiplexers in the target technology library.

[Figure 3-4](#) shows a `MUX_OP` cell for an 8-bit data signal. Notice that the `MUX_OP` cell only needs three control lines to select an output; compare this with the `SELECT_OP` which needed eight control lines.


Figure 3-4 MUX_OP Generic Cell for an 8-bit Data Signal

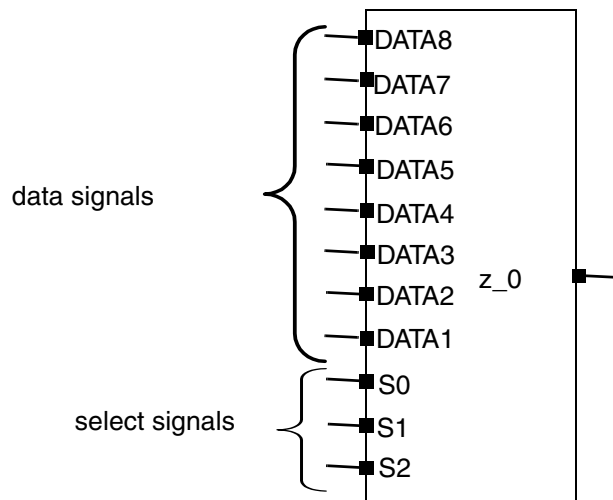

Note that for an 8-bit word, only 3 selection bits are needed.

The MUX_OP cell contains internal selection logic to determine which data signal is chosen; Presto VHDL does not need to generate any selection logic, as shown in [Figure 3-5](#).

Figure 3-5 Presto VHDL Output—MUX_OP Generic Cell for 8-Bit Data

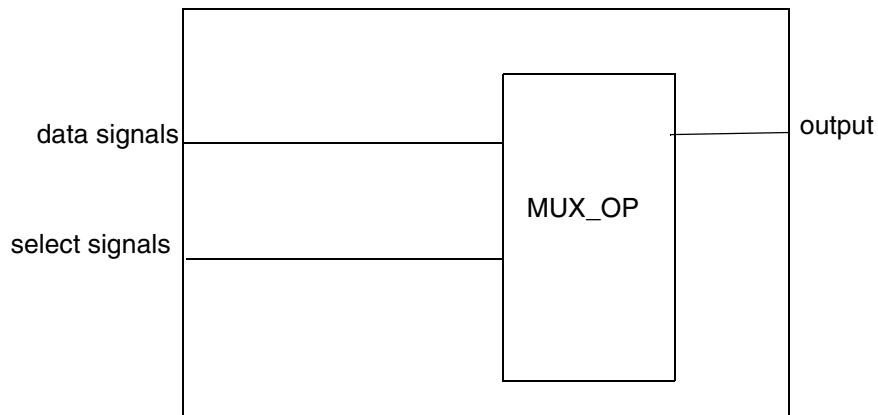

Use the following methods to infer MUX_OP cells:

- To generate MUX_OP cells for a specific case or if statement, use the `infer_mux` attribute or the `--synopsys infer_mux` directive in the VHDL description.
- Attach the `infer_mux` attribute to a case statement, by using the following syntax:

```
case var is --synopsys infer_mux
```

- Attach the `infer_mux` directive, as follows:

```
case SEL3 is -- synopsys infer_mux
  when "00"   => DOUT3 <= DIN3(0);
  when "01"   => DOUT3 <= DIN3(1);
  when "10"   => DOUT3 <= DIN3(2);
  when "11"   => DOUT3 <= DIN3(3);
```

- To generate MUX_OP cells for all case statements in a block, set the `infer_mux` attribute on the block.

- Attach the `infer_mux` attribute to a process, by using the following syntax:

```
attribute infer_mux of process_label : label is "true";
```

- To generate MUX_OP cells for all case and if statements, use the `hdlin_infer_mux` variable.

Variables That Control MUX_OP Inference

The variables that control MUX_OP cell inference are listed in [Table 3-3](#).

Table 3-3 MUX_OP Inference Variables

Variable	Description
<code>hdlin_infer_mux</code>	<p>This variable controls MUX_OP inference for all designs you input in the same Design Compiler session.</p> <p>Options:</p> <ul style="list-style-type: none"> • <code>default</code>—Infers MUX_OPs for case and if statements in processes that have the <code>infer_mux</code> directive or attribute attached. • <code>none</code>—Does not infer MUX_OPs, regardless of the directives set in the VHDL description. Presto VHDL generates a warning if <code>hdlin_infer_mux = none</code> and <code>infer_mux</code> are used in the RTL. • <code>all</code>—Infers MUX_OPs for every case and if statement in your design for which one can be used. This can negatively affect the quality of results, because it might be more efficient to implement the MUX_OPs as random logic instead of using a specialized multiplexer structure.

Table 3-3 MUX_OP Inference Variables (Continued)

Variable	Description
<code>hdlin_mux_size_limit</code>	<p>This variable sets the maximum size of a MUX_OP that Presto VHDL can infer. The default value is 32. If you set this variable to a value greater than 32, Presto VHDL may take an unusually long elaboration time.</p> <p>If the number of branches in a case statement exceeds the maximum size specified by this variable, Presto VHDL generates the following message:</p> <pre>Warning: A mux was not inferred because case statement %s has a very large branching factor. (HDL-383)</pre>
<code>hdlin_mux_size_min</code>	Sets the minimum number of data inputs for a MUX_OP inference. Default value is 2.
<code>hdlin_mux_oversize_ratio</code>	Defined as the ratio of the number of MUX_OP inputs to the unique number of data inputs. When this ratio is exceeded, a MUX_OP will not be inferred and the circuit will be generated with SELECT_OPs. Default value is 100.
<code>hdlin_mux_size_only</code>	<p>To ensure that MUX_OP cells are mapped to MUX technology cells, you must apply a <code>size_only</code> attribute to the cells to prevent logic decomposition in later optimization steps. You can set the <code>size_only</code> attribute on each MUX_OP manually or allow the tool to set it automatically. The automatic behavior can be controlled by the <code>hdlin_mux_size_only</code> variable.</p> <p>Options:</p> <ul style="list-style-type: none"> • 0—Specifies that no cells receive the <code>size_only</code> attribute. • 1—Specifies that MUX_OP cells that are generated with the <code>RTL infer_mux</code> pragma and that are on set/reset signals receive the <code>size_only</code> attribute. This is the default setting. • 2—Specifies that all MUX_OP cells that are generated with the <code>RTL infer_mux</code> pragma receive the <code>size_only</code> attribute. • 3—Specifies that all MUX_OP cells on set/reset signals receive the <code>size_only</code> attribute: for example, MUX_OP cells that are generated by setting the <code>hdlin_infer_mux</code> variable to <code>all</code>. • 4—Specifies that all MUX_OP cells receive the <code>size_only</code> attribute: for example, MUX_OP cells that are generated by the <code>hdlin_infer_mux</code> variable set to <code>all</code>. <p>By default, the <code>hdlin_mux_size_only</code> variable is set to 1, meaning that MUX_OP cells that are generated with the <code>RTL infer_mux</code> pragma and that are on set/reset signals receive the <code>size_only</code> attribute.</p>

MUX_OP Inference Examples

In [Example 3-5](#), two MUX_OPs and one SELECT_OP are inferred, as follows:

- In the process proc1, a MUX_OP is inferred for the case statement, because the `infer_mux` attribute is placed on proc1.
- In the process proc2, there are two case statements.
 - For the first case statement, a SELECT_OP is inferred. This is the default inference.
 - However, the second case statement in proc2 has the `infer_mux` pragma set on it which causes Presto VHDL to infer the MUX_OP cell.

[Example 3-6](#) shows the inference report for the MUX_OPs. [Figure 3-6](#) shows a representation of the Presto VHDL implementation.

Example 3-5 Two MUX_OPs and One SELECT_OP Inferred

```
library ieee, synopsys;
use ieee.std_logic_1164.all;
use synopsys.attributes.all;

entity test is
  port (DIN1 : in  std_logic_vector (7 downto 0);
        DIN2 : in  std_logic_vector (7 downto 0);
        DIN3 : in  std_logic_vector (3 downto 0);
        SEL1 : in  std_logic_vector (2 downto 0);
        SEL2 : in  std_logic_vector (2 downto 0);
        SEL3 : in  std_logic_vector (1 downto 0);
        DOUT1 : out std_logic;
        DOUT2 : out std_logic;
        DOUT3 : out std_logic
  );
end test;

architecture rtl of test is

  attribute infer_mux of proc1 : label is "TRUE";

begin

  -- A MUX_OP for DOUT1 will be inferred from the
  -- infer_mux attribute set on proc1

  proc1 : process (SEL1, DIN1)
  begin
    case SEL1 is
      when "000" => DOUT1 <= DIN1(0);
      when "001" => DOUT1 <= DIN1(1);
      when "010" => DOUT1 <= DIN1(2);
      when "011" => DOUT1 <= DIN1(3);
```

```

        when "100" => DOUT1 <= DIN1(4);
        when "101" => DOUT1 <= DIN1(5);
        when "110" => DOUT1 <= DIN1(6);
        when "111" => DOUT1 <= DIN1(7);
        when others => DOUT1 <= DIN1(0);
    end case;
end process;

proc2 : process (SEL2, SEL3, DIN2, DIN3)
begin

    -- A SELECT_OP will be generated for DOUT2
    -- in the absence of an infer_mux attribute

    case SEL2 is
        when "000" => DOUT2 <= DIN2(0);
        when "001" => DOUT2 <= DIN2(1);
        when "010" => DOUT2 <= DIN2(2);
        when "011" => DOUT2 <= DIN2(3);
        when "100" => DOUT2 <= DIN2(4);
        when "101" => DOUT2 <= DIN2(5);
        when "110" => DOUT2 <= DIN2(6);
        when "111" => DOUT2 <= DIN2(7);
        when others => DOUT2 <= DIN2(0);
    end case;

    -- A MUX_OP will be inferred for DOUT3 from the
    -- infer_mux pragma placed on this case statement

    case SEL3 is -- synopsys infer_mux
        when "00"  => DOUT3 <= DIN3(0);
        when "01"  => DOUT3 <= DIN3(1);
        when "10"  => DOUT3 <= DIN3(2);
        when "11"  => DOUT3 <= DIN3(3);
        when others => DOUT3 <= DIN3(0);
    end case;
end process;


end rtl;
```

[Example 3-6](#) shows the MUX_OP inference report for the code in [Example 3-5](#). The tool displays inference reports by default. If you do not want these reports displayed, you can turn them off using the `hdlin_reporting_level` variable. For more information about the `hdlin_reporting_level` variable, see [“Elaboration Reports” on page 1-7](#).

Example 3-6 Inference Report for the Process in Example 3-5

Statistics for MUX_OPs

block name/line	Inputs	Outputs	# sel inputs	MB
proc1/24	8	1	3	N
proc2/55	4	1	2	N

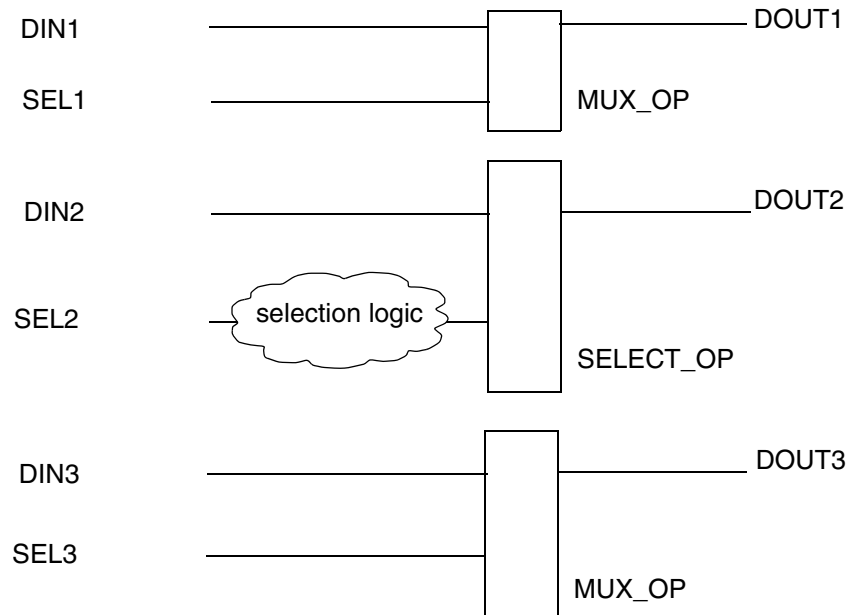Figure 3-6 Presto VHDL Implementation

MUX_OP Inference Limitations

Presto VHDL does not infer MUX_OP cells for

- case statements in while loops
- case statements embedded in if-then-else statements, unless the case statement appears in an if (CLK'event...) or in an elsif (CLK'event...) branch in the VHDL description

MUX_OP cells are inferred for incompletely specified case statements, such as case statements that

- Contain an if statement or an others clause that covers more than one value
- Have a missing case statement branch or a missing assignment in a case statement branch

- Contain don't care values (X or "-")
- Are in an elsif (CLK'event...) branch

but the logic might be nonoptimum, because other optimizations are disabled when you infer MUX_OP cells under these conditions. For example, Presto VHDL optimizes default branches by default. If the `infer_mux` attribute is on the case statement, this optimization is not done.

When inferring a MUX_OP for an incompletely specified case statement, Presto VHDL generates the following ELAB-304 warning:

```
Warning: Case statement has an infer_mux attribute and a
default branch or incomplete mapping. This can cause
nonoptimal logic if a mux is inferred. (ELAB-304)
```

Unintended Latches and Feedback Paths in Combinational Logic

Presto VHDL infers a latch when a signal or variable in a combinational process (one without a wait or if signal'event statement) is not fully specified in the VHDL description. A variable or signal is fully specified when it is assigned under all possible conditions. A variable or signal is not fully specified when a condition exists under which the variable is not assigned.

[Example 3-7](#) shows several variables. A, B, and C are fully specified; X is not.

Example 3-7 Variable X Is Not Fully Specified

```
process (COND1)
  variable A, B, C, X : BIT;
begin
  A := '0'      -- A is fully specified
  C := '0'      -- C is fully specified

  if (COND1) then
    B := '1';    -- B is assigned when COND1 is TRUE
    C := '1';    -- C is already fully specified
    X := '1';    -- X is assigned when COND1 is TRUE
  else
    B := '0';    -- B is assigned when COND1 is FALSE
  end if;

  -- B is assigned under all branches of if (COND1),
  -- that is, both when COND1 is TRUE and when
  -- COND1 is FALSE, so B is fully specified.

  -- C is assigned regardless of COND1, so C is fully
  -- specified. (The second assignment to C does
  -- not change this.)
```

```

    -- X is not assigned under all branches of
    --   if (COND1), namely, when COND1 is FALSE,
    --   so X is not fully specified.
end process;
...

```

The conditions of each if and else statement are considered independent in [Example 3-7](#).

In [Example 3-8](#), variable A is not fully specified.

Example 3-8 Variable A Is Not Fully Specified

```

if (COND1) then
    A <= '1';
end if;

if (not COND1) then
    A <= '0';
end if;

```

A variable or signal that is not fully specified is considered conditionally specified, and Presto VHDL infers a latch to store the variable value. You can conditionally assign a variable, but you cannot read a conditionally specified variable. You can, however, both conditionally assign and read a signal.

If a fully specified variable is read before its assignment statements, combinational feedback might exist. For example, the following fragment synthesizes combinational feedback for VAL.

```

process(D, LOAD)
    variable VAL: BIT;
begin
    if (LOAD = '1') then
        VAL := D;
    else
        VAL := VAL;
    end if;
    VAL_OUT <= VAL;
end process;

```

In a combinational process, you can ensure that a variable or signal is fully specified, by providing an initial (default) assignment to the variable at the beginning of the process. This default assignment ensures that the variable is always assigned a value, regardless of conditions. Subsequent assignment statements can override the default. A default assignment is made to variables A and C in

[Example 3-7](#).

Another way to ensure that you do not imply combinational feedback is to use a sequential process (one with a wait or if signal'event statement). In such a case, variables and signals are registered. The registers break the combinational feedback loop.

Presto VHDL infers latches for incompletely specified case statements that use an others clause, where the others clause covers more than one value. To avoid latch inference, use a default statement before the case statements.

4

Modeling Sequential Logic


This chapter contains the following sections, which describe how to infer latches and flip-flops:

- [Generic Sequential Cells \(SEQGENs\)](#)
- [Inference Reports for Flip-Flops and Latches](#)
- [Register Inference Variables](#)
- [Register Inference Attributes](#)
- [Inferring D and Set/Reset \(SR\) Latches](#)
- [Inferring D Flip-Flops](#)
- [Inferring JK Flip-Flops](#)
- [Inferring Master-Slave Latches](#)
- [Limitations of Register Inference](#)
- [Unloaded Sequential Cell Preservation](#)

Generic Sequential Cells (SEQGENs)

When Presto VHDL reads a design, it uses generic sequential cells (SEQGENs), shown in [Figure 4-1](#), to represent inferred flip-flops and latches.

Figure 4-1 SEQGEN Cell and Pin Assignments

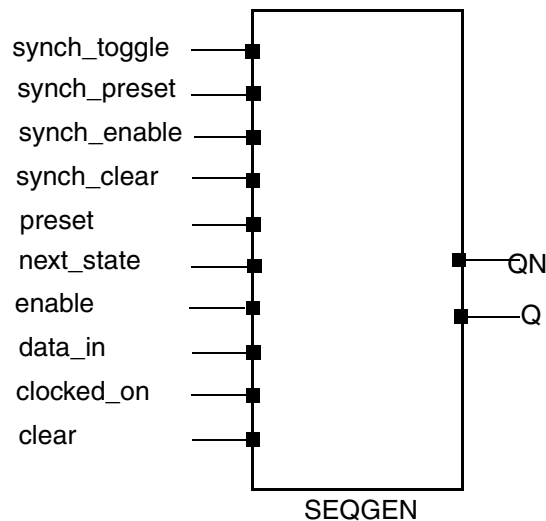

To illustrate how Presto VHDL uses SEQGENs to implement a flip-flop, consider [Example 4-1](#). This code infers a D flip-flop with an asynchronous reset.

Example 4-1 D Flip-Flop With Asynchronous Reset


```
library IEEE;
use IEEE.std_logic_1164.all;

entity dff_async_reset is
  port (DATA, CLK, RESET : in std_logic;
        Q : out std_logic );
end dff_async_reset;

architecture rtl of dff_async_reset is
begin
  process ( CLK, RESET) begin
    if (RESET = '1') then
      Q <= '0';
    elsif (CLK'event and CLK = '1') then
      Q <= DATA;
    end if;
  end process;
end rtl;
```


Figure 4-2 shows the SEQGEN implementation.

Figure 4-2 D Flip-flop With an Asynchronous Reset: Presto VHDL SEQGEN Implementation

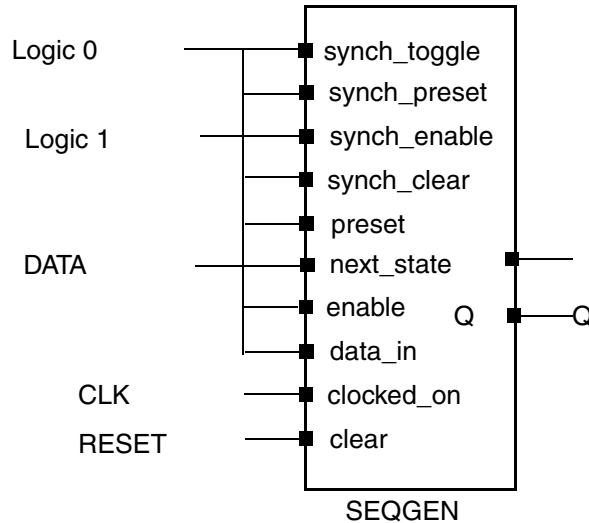

After Design Compiler compiles the design, SEQGENs are mapped to the appropriate latch or flip-flop in the technology library. Figure 4-3 shows an example implementation after compile.

Figure 4-3 D Flip-flop with an Asynchronous Reset: Design Compiler Implementation

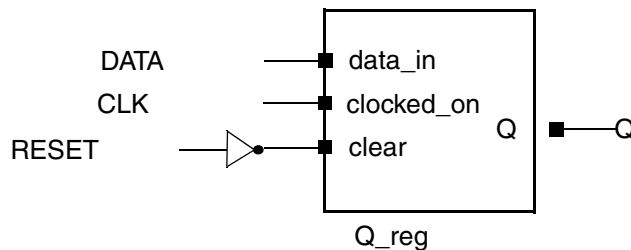

Note:

If the technology library does not contain the specific inferred flip-flop or latch, Design Compiler creates combinational logic for the missing function, if possible. For example, if you infer a D flip-flop with a synchronous set but your target technology library does not contain this type of flip-flop, Design Compiler will create combinational logic for the synchronous set function. Design Compiler cannot create logic to duplicate an asynchronous preset/reset. Your library must contain the sequential cell with the asynchronous control pins.

Inference Reports for Flip-Flops and Latches

Presto VHDL provides inference reports that describe each inferred flip-flop or latch. You can enable or disable the generation of inference reports by using the `hdlin_reporting_level` variable. By default, `hdlin_reporting_level` is set to `basic`. When `hdlin_reporting_level` is set to `basic` or `comprehensive`, Presto Verilog generates a report similar to [Example 4-2](#). This basic inference report shows only which type of register was inferred.

Example 4-2 Inference Report for a D Flip-Flop With Asynchronous Reset

```
=====
| Register Name | Type | Width | Bus | MB | AR | AS | SR | SS | ST |
=====
| Q_reg        | Flip-flop | 1 | N | N | Y | N | N | N | N |
=====
```

In the report, the columns are abbreviated as follows:

- MB represents multibit cell
- AR represents asynchronous reset
- AS represents asynchronous set
- SR represents synchronous reset
- SS represents synchronous set
- ST represents synchronous toggle

A “Y” in a column indicates that the respective control pin was inferred for the register; an “N” indicates that the respective control pin was not inferred for the register. For a D flip-flop with an asynchronous reset, there should be a “Y” in the AR column. The report also indicates the type of register inferred, latch or flip-flop, and the name of the inferred cell.

When the `hdlin_reporting_level` variable is set to `verbose`, the report indicates how each pin of the SEQGEN cell is assigned, along with which type of register was inferred.

[Example 4-3](#) shows a verbose inference report.

Example 4-3 Verbose Inference Report for a D Flip-Flop With Asynchronous Reset

```
=====
| Register Name | Type | Width | Bus | MB | AR | AS | SR | SS | ST |
=====
| Q_reg        | Flip-flop | 1 | N | N | Y | N | N | N | N |
=====
```

```
Sequential Cell (Q_reg)
  Cell Type: Flip-Flop
  Multibit Attribute: N
  Clock: CLK
  Async Clear: RESET
```

```

Async Set: 0
Async Load: 0
Sync Clear: 0
Sync Set: 0
Sync Toggle: 0
Sync Load: 1

```

If you do not want inference reports, set `hdlin_reporting_level` to `none`. For more information about the `hdlin_reporting_level` variable, see [“Elaboration Reports” on page 1-7](#).

Register Inference Variables

The variables in [Table 4-1](#) control register inference. These are set before the design is read and apply to all applicable cells in the design. Use of these variables may have unintended consequences. For example, when the `hdlin_ff_always_sync_set_reset` variable is set to true, Presto VHDL treats every signal in every process as though the `sync_set_reset` directive is attached to it. Therefore, it checks all processes for all constant (0 or 1) assignments for a register input. The control for these constant-assigned signals becomes part of the set/reset logic.

Table 4-1 Variables That Control Register Inference

Variable	Description
<code>hdlin_keep_feedback</code> (Default is false.)	When this variable is true, Presto VHDL keeps all flip-flop feedback loops. When this variable is false, Presto VHDL removes all flip-flop feedback loops. For example, Presto VHDL removes feedback loops inferred from a statement such as <code>Q=Q</code> . Removing the state feedback from a simple D flip-flop creates a synchronous loaded flip-flop.
<code>hdlin_ff_always_sync_set_reset</code> (Default is false.)	When this variable is true, Presto VHDL attempts to infer synchronous set and reset conditions for all flip-flops.
<code>hdlin_ff_always_async_set_reset</code> (Default is false.)	When this variable is true, Presto VHDL attempts to infer asynchronous set and reset conditions for all flip-flops.

Register Inference Attributes

Use the attributes in [Table 4-2](#) to direct Presto VHDL to the type of sequential device you want inferred. Attributes are added to the RTL on specific processes.

Table 4-2 Attributes for Controlling Register Inference

Attribute	Description
<code>async_set_reset</code>	<p>When a single-bit signal has this attribute set to true, Presto VHDL searches for a branch that uses the signal as a condition and then checks whether the branch contains an assignment to a constant value. If the branch does, the signal becomes an asynchronous reset or set. See Example 4-4 on page 4-8, Example 4-11 on page 4-11, and Example 4-13 on page 4-12. Attach this attribute to 1-bit signals by using the following syntax:</p> <pre>attribute async_set_reset of signal_name_list : signal is "true";</pre>
<code>async_set_reset_local</code>	<p>VHDL Compiler treats listed signals in the specified process as if they have the <code>async_set_reset</code> attribute set to true.</p> <p>Attach this attribute to a process label by using the following syntax:</p> <pre>attribute async_set_reset_local of process_label : label is "signal_name_list";</pre>
<code>async_set_reset_local_all</code>	<p>VHDL Compiler treats all signals in the specified processes as if they have the <code>async_set_reset</code> attribute set to true.</p> <p>Attach this attribute to process labels by using the following syntax:</p> <pre>attribute async_set_reset_local_all of process_label_list : label is "true";</pre>
<code>sync_set_reset</code>	<p>When a single-bit signal has this attribute set to true, Presto VHDL checks the signal to determine whether it synchronously sets or resets a register in the design. See Example 4-33 on page 4-22 and Example 4-35 on page 4-24. Attach this attribute to 1-bit signals by using the following syntax:</p> <pre>attribute sync_set_reset of signal_name_list : signal is "true";</pre>
<code>sync_set_reset_local</code>	<p>VHDL Compiler treats listed signals in the specified process as if they have the <code>sync_set_reset</code> attribute set to true.</p> <p>Attach this attribute to a process label by using the following syntax:</p> <pre>attribute sync_set_reset_local of process_label : label is "signal_name_list";</pre>

Table 4-2 Attributes for Controlling Register Inference (Continued)

Attribute	Description
<code>sync_set_reset_local_all</code>	<p>VHDL Compiler treats all signals in the specified processes as if they have the <code>sync_set_reset</code> attribute set to true.</p> <p>Attach this attribute to process labels by using the following syntax:</p> <pre>attribute sync_set_reset_local_all of process_label_list : label is "true";</pre>
<code>one_cold</code> <code>one_hot</code>	<p>These attributes prevent Presto VHDL from implementing priority-encoding logic for the set and reset signals and are useful if you know your design has a one-hot or one-cold implementation. See Example 4-15 on page 4-13, Example 4-31 on page 4-21, and Example 4-43 on page 4-31. Attach the attributes to set or reset signals on sequential devices by using the following syntax:</p> <pre>attribute one_cold signal_name_list : signal is "true"; or attribute one_hot signal_name_list : signal is "true";</pre> <p>You might want to add an assertion to the VHDL code to ensure that the group of signals has a one-cold or one-hot implementation. Presto VHDL does not produce any logic to check this assertion.</p>
<code>clocked_on_also</code>	<p>This attribute is set with the <code>set_signal_type</code> command in an embedded Design Compiler script and used for master-slave inference. See “Inferring Master-Slave Latches” on page 4-32.</p>

Inferring D and Set/Reset (SR) Latches

This section describes how to infer SR and D latches, in the following subsections:

- [Inferring SR Latches](#)
- [Inferring D Latches](#)
- [Limitations of D Latch Inference](#)

Inferring SR Latches

Use SR latches with caution, because they are difficult to test. Design Compiler does not ensure that the logic driving the inputs is hazard-free, so you must verify that the inputs are hazard-free and do not glitch.

[Example 4-4](#) provides the VHDL code that implements the SR latch described in the truth table in [Table 4-3](#). [Example 4-5](#) shows the inference report generated by Presto VHDL.

Table 4-3 SR Latch Truth Table (NAND Type)

Set	Reset	y
0	0	Not stable
0	1	1
1	0	0
1	1	y

Example 4-4 SR Latch

```

library IEEE, synopsys;
use IEEE.std_logic_1164.all;
use synopsys.attributes.all;

entity sr_latch is
  port (SET, RESET : in std_logic;
        Q : out std_logic );
  attribute async_set_reset of SET, RESET :
    signal is "true";
end sr_latch;

architecture rtl of sr_latch is
begin
  process (SET, RESET) begin
    if (SET = '0') then
      Q <= '1';
    elsif (RESET = '0') then
      Q <= '0';
    end if;
  end process;

end rtl;

```

Example 4-5 Inference Report for an SR Latch

```

=====
| Register Name | Type | Width | Bus | MB | AR | AS | SR | SS | ST |
=====
| Q_reg        | Latch | 1 | N | N | Y | Y | - | - | - |
=====

```

```

Sequential Cell (Q_reg)
  Cell Type: Latch
  Multibit Attribute: N
  Clock: 0

```

```
Async Clear: RESET'  
Async Set: SET'  
Async Load: 0
```

Inferring D Latches

The following sections provide code examples and inference reports for D latches:

- [Overview—Latch Inference](#)
- [Basic D Latch](#)
- [D Latch With Asynchronous Set](#)
- [D Latch With Asynchronous Reset](#)
- [D Latch With Asynchronous Set and Reset](#)

Overview—Latch Inference

When you do not specify a variables value under all conditions, such as an incompletely specified if statement, Presto VHDL infers a D latch.

For example, the if statement in [Example 4-6](#) infers a D latch, because there is no else clause. The resulting value for output Q is specified only when input enable has a logic 1 value. As a result, output Q becomes a latched value.

Example 4-6 Latch Inference

```
process(DATA, GATE) begin  
  if (GATE = '1') then  
    Q <= DATA;  
  end if;  
end process;
```

To avoid latch inference, assign a value to the signal under all conditions, as shown in [Example 4-7](#).

Example 4-7 Fully Specified Signal: No Latch Inference

```
process(DATA, GATE) begin  
  if (GATE = '1') then  
    Q <= DATA;  
  else  
    Q <= '0';  
  end if;  
end process;
```

Variables declared locally within a subprogram do not hold their value over time, because each time a subprogram is called, its variables are reinitialized. Therefore, Presto VHDL does not infer latches for variables declared in subprograms. In [Example 4-8](#), Presto VHDL does not infer a latch for output Q.

Example 4-8 Function: No Latch Inference

```
function MY_FUNC(DATA, GATE : std_logic) return std_logic is
    variable STATE: std_logic;
begin
    if (GATE = '1') then
        STATE := DATA;
    end if;
    return STATE;
end;
. . .
Q <= MY_FUNC(DATA, GATE);
```

Basic D Latch

When you infer a D latch, make sure you can control the gate and data signals from the top-level design ports or through combinational logic. Controllable gate and data signals ensure that simulation can initialize the design.

[Example 4-9](#) provides the VHDL template for a D latch. Presto VHDL generates the verbose inference report shown in [Example 4-10](#).

Example 4-9 Basic D Latch

```
library IEEE;
use IEEE.std_logic_1164.all;

entity d_latch is
    port (GATE, DATA: in std_logic;
          Q : out std_logic );
end d_latch;

architecture rtl of d_latch is
begin
    process (GATE, DATA) begin
        if (GATE = '1') then
            Q <= DATA;
        end if;
    end process;

end rtl;
```

Example 4-10 Verbose Inference Report for a D Latch

Register Name	Type	Width	Bus	MB	AR	AS	SR	SS	ST
Q_reg	Latch	1	N	N	N	N	-	-	-

```
=====
Sequential Cell (Q_reg)
  Cell Type: Latch
  Multibit Attribute: N
  Clock: 0
  Async Clear: 0
  Async Set: 0
  Async Load: GATE
```

D Latch With Asynchronous Set

Use the `async_set_reset` attribute to specify the asynchronous set or reset controls. Presto VHDL examines the polarity of the constants assigned to the signals with the `async_set_reset` attribute to determine if the signal is an AR ('0') or an AS ('1').

[Example 4-11](#) provides the VHDL template for a D latch with an asynchronous set. Presto VHDL generates the verbose inference report shown in [Example 4-12](#).

Example 4-11 D Latch With Asynchronous Set

```
library IEEE, synopsys;
use IEEE.std_logic_1164.all;
use synopsys.attributes.all;

entity d_latch_async_set is
  port (GATE, DATA, SET : in std_logic;
        Q : out std_logic );
  attribute async_set_reset of SET :
    signal is "true";
end d_latch_async_set;

architecture rtl of d_latch_async_set is
begin
  process (GATE, DATA, SET) begin
    if (SET = '0') then
      Q <= '1';
    elsif (GATE = '1') then
      Q <= DATA;
    end if;
  end process;
end rtl;
```

Example 4-12 Verbose Inference Report for a D Latch With Asynchronous Set

```
=====
| Register Name | Type | Width | Bus | MB | AR | AS | SR | SS | ST |
=====
|      Q_reg    | Latch |    1  |  N  |  N |  N |  Y |  - |  - |  - |
=====
```

```
Sequential Cell (Q_reg)
  Cell Type: Latch
```

```

Multibit Attribute: N
Clock: 0
Async Clear: 0
Async Set: SET'
Async Load: GATE

```

D Latch With Asynchronous Reset

Use the `async_set_reset` attribute to specify asynchronous set or reset controls.

[Example 4-13](#) provides the VHDL template for a D latch with an asynchronous reset. Presto VHDL generates the verbose inference report shown in [Example 4-14](#).

Example 4-13 D Latch With Asynchronous Reset

```

library IEEE, synopsys;
use IEEE.std_logic_1164.all;
use synopsys.attributes.all;

entity d_latch_async_reset is
  port (GATE, DATA, RESET : in std_logic;
        Q : out std_logic );
  attribute async_set_reset of RESET :
    signal is "true";
end d_latch_async_reset;

architecture rtl of d_latch_async_reset is
begin
  process (GATE, DATA, RESET) begin
    if (RESET = '0') then
      Q <= '0';
    elsif (GATE = '1') then
      Q <= DATA;
    end if;
  end process;
end rtl;

```

Example 4-14 Inference Report for D Latch With Asynchronous Reset

Register Name	Type	Width	Bus	MB	AR	AS	SR	SS	ST
Q_reg	Latch	1	N	N	Y	N	-	-	-

```

Sequential Cell (Q_reg)
  Cell Type: Latch
  Multibit Attribute: N
  Clock: 0
  Async Clear: RESET'
  Async Set: 0
  Async Load: GATE

```

D Latch With Asynchronous Set and Reset

[Example 4-15](#) provides the VHDL template for a D latch with an active-low asynchronous set and reset. This template uses the `async_set_reset` attribute to direct Presto VHDL to the asynchronous signals in the process.

The template in [Example 4-15](#) uses the `one_cold` attribute to prevent priority encoding of the set and reset signals. If you do not specify the `one_cold` attribute, the set signal has priority, because it is used as the condition for the if clause. Use `one_cold` for active-low signals and `one_hot` for active-high signals. [Example 4-16](#) shows the verbose inference report.

Example 4-15 D Latch With Asynchronous Set and Reset

```
library IEEE, synopsys;
use IEEE.std_logic_1164.all;
use synopsys.attributes.all;
entity d_latch_async is
  port (GATE, DATA, SET, RESET :in std_logic;
        Q : out std_logic );
  attribute one_cold of SET, RESET :
    signal is "true";
end d_latch_async;
architecture rtl of d_latch_async is
  attribute async_set_reset of SET, RESET :
    signal is "true";
begin
  process (GATE, DATA, SET, RESET) begin
    if (SET = '0') then
      Q <= '1';
    elsif (RESET = '0') then
      Q <= '0';
    elsif (GATE = '1') then
      Q <= DATA;
    end if;
  end process;
end rtl;
```

Example 4-16 Inference Report for D Latch With Asynchronous Set and Reset

Register Name	Type	Width	Bus	MB	AR	AS	SR	SS	ST
Q_reg	Latch	1	N	N	Y	Y	-	-	-

```
Sequential Cell (Q_reg)
  Cell Type: Latch
  Multibit Attribute: N
  Clock: 0
  Async Clear: RESET'
  Async Set: SET'
  Async Load: GATE
```

Limitations of D Latch Inference

A variable must always have a value before it is read. As a result, you cannot read a conditionally assigned variable after the if statement in which it is assigned. A conditionally assigned variable is assigned a new value under some, but not all, conditions. [Example 4-17](#) shows an invalid use of the conditionally assigned variable VALUE.

Example 4-17 Invalid Use of a Conditionally Assigned Variable

```
signal X, Y : std_logic;
. . .
process
  variable VALUE : std_logic;
begin

  if (condition) then
    VALUE := X;
  end if;

  Y <= VALUE;  -- Invalid read of variable VALUE
end;
```

Inferring D Flip-Flops

The following subsections describe various types of D flip-flop inference:

- [Overview—Inferring D Flip-Flops](#)
- [Enabling Conditions in if Statements](#)
- [Positive-Edge-Triggered D Flip-Flop](#)
- [Negative-Edge-Triggered D Flip-Flop](#)
- [D Flip-Flop With Asynchronous Set](#)
- [D Flip-Flop With Asynchronous Reset](#)
- [D Flip-Flop With Asynchronous Set and Reset](#)
- [D Flip-Flop With Synchronous Set](#)
- [D Flip-Flop With Synchronous Reset](#)
- [D Flip-Flop With Complex Set/Reset Signals](#)
- [D Flip-Flop With Synchronous and Asynchronous Load](#)
- [Multiple Flip-Flops: Asynchronous and Synchronous Controls](#)

Overview—Inferring D Flip-Flops

Presto VHDL infers a D flip-flop whenever the condition of a wait or if statement uses an edge expression. Use the following syntax to describe a rising edge:

```
SIGNAL'event and SIGNAL = '1'
```

Use the following syntax to describe a falling edge:

```
SIGNAL'event and SIGNAL = '0'
```

If you are using the IEEE std_logic_1164 package, you can use the following syntax to describe a rising edge and a falling edge:

```
if (rising_edge (CLK)) then
```

```
if (falling_edge (CLK)) then
```

You can use the following syntax for a bused clock. You can also use a member of a bus as a signal.

```
sig(3)'event and sig(3) = '1'
```

```
rising_edge (sig(3))
```

If possible, use the if statement, because it provides greater control over the inferred registers. Only one wait statement per process is allowed.

In a process that models sequential logic, Presto VHDL allows statements to precede or to follow the if statement as long as no statement following the if statement tries to write a value that is assigned within the if statement. See [Example 4-18](#).

Example 4-18 Presto VHDL Supports Statements Preceding and Following if ck'EVENT

```
P: process (ck)
  variable X, Y: BIT;
begin
  Y := not D; -- assignment before the if statement
  if ck'EVENT and ck = '1' then
    X := D;
  end if;
  Q <= X and Y; -- assignment after the if statement
end process;
```

There are cases in which statements appearing before the if statement would make the code unsynthesizable. Specifically, when the statements preceding the if statement writes to a variable that was also written to within the if body, as shown in [Example 4-19](#), the code would not be synthesizable.

Example 4-19 *Code Cannot Be Synthesized—if ck'EVENT Statement Writes to a Variable Written to in Body*

```
P: process (ck)
  variable X: BIT;
begin
  X := D1;
  if ck'EVENT and CK = '1' then
    X := D2; -- conflicts with previous assignment
  end if;
  Q <= X;
end process;
```

Enabling Conditions in if Statements

Presto VHDL allows conditions in the test of the if statement that are not part of the clock edge test. When other conditions appear in the test, Presto VHDL synthesizes them by assuming they are enable conditions. Presto VHDL also recognizes permutations of the conditions in the if statement. [Example 4-20](#) shows the coding style supported by Presto VHDL.

Example 4-20 *Presto VHDL Supports Enabling Expressions in if Statements*

```
process (ck)
begin
  if (ck = '1' and en = '1' and ck'EVENT) then
    --sequential_statements
  end if;
end process;
```

Positive-Edge-Triggered D Flip-Flop

When you infer a D flip-flop, make sure you can control the clock and data signals from the top-level design ports or through combinational logic. Controllable clock and data signals ensure that simulation can initialize the design. If you cannot control the clock and data signals, infer a D flip-flop with asynchronous reset or set, or with synchronous reset or set.

[Example 4-21](#) uses the 'event attribute and [Example 4-22](#) uses the rising_edge function to code a positive-edge-triggered D flip-flop. [Example 4-23](#) shows the verbose inference report.

Example 4-21 Positive-Edge-Triggered D Flip-Flop Using 'event Attribute

```

library IEEE ;
use IEEE.std_logic_1164.all;

entity dff_pos is
  port (DATA, CLK : in std_logic;
        Q : out std_logic );
end dff_pos;

architecture rtl of dff_pos is
begin
  process (CLK) begin
    if (CLK'event and CLK = '1') then
      Q <= DATA;
    end if;
  end process;
end rtl;

```

Example 4-22 Positive-Edge-Triggered D Flip-Flop Using rising_edge

```

library IEEE ;
use IEEE.std_logic_1164.all;

entity dff_pos is
  port (DATA, CLK : in std_logic;
        Q : out std_logic );
end dff_pos;
architecture rtl of dff_pos is
begin
  process (CLK) begin
    if (rising_edge (CLK)) then
      Q <= DATA;
    end if;
  end process;
end rtl;

```

Example 4-23 Inference Report for Positive-Edge-Triggered D Flip-Flop

Register Name	Type	Width	Bus	MB	AR	AS	SR	SS	ST
Q_reg	Flip-flop	1	N	N	N	N	N	N	N

```

Sequential Cell (Q_reg)
  Cell Type: Flip-Flop
  Multibit Attribute: N
  Clock: CLK
  Async Clear: 0
  Async Set: 0
  Async Load: 0

```

```
Sync Clear: 0
Sync Set: 0
Sync Toggle: 0
Sync Load: 1
```

Negative-Edge-Triggered D Flip-Flop

[Example 4-24](#) uses the 'event attribute and [Example 4-25](#) uses the falling_edge function to code a negative-edge-triggered D flip-flop.

Presto VHDL generates the verbose inference report shown in [Example 4-26](#).

Example 4-24 Negative-Edge-Triggered D Flip-Flop Using 'event

```
library IEEE;
use IEEE.std_logic_1164.all;

entity dff_neg is
  port (DATA, CLK : in std_logic;
        Q : out std_logic );
end dff_neg;

architecture rtl of dff_neg is
begin
  process (CLK) begin
    if (CLK'event and CLK = '0') then
      Q <= DATA;
    end if;
  end process;
end rtl;
```

Example 4-25 Negative-Edge-Triggered D Flip-Flop Using falling_edge

```
library IEEE;
use IEEE.std_logic_1164.all;

entity dff_neg is
  port (DATA, CLK : in std_logic;
        Q : out std_logic );
end dff_neg;

architecture rtl of dff_neg is
begin
  process (CLK) begin
    if (falling_edge (CLK)) then
      Q <= DATA;
    end if;
  end process;
end rtl;
```

Example 4-26 Inference Report for Negative-Edge-Triggered D Flip-Flop

Register Name	Type	Width	Bus	MB	AR	AS	SR	SS	ST
Q_reg	Flip-flop	1	N	N	N	N	N	N	N

```

Sequential Cell (Q_reg)
  Cell Type: Flip-Flop
  Multibit Attribute: N
  Clock: CLK'
  Async Clear: 0
  Async Set: 0
  Async Load: 0
  Sync Clear: 0
  Sync Set: 0
  Sync Toggle: 0
  Sync Load: 1

```

D Flip-Flop With Asynchronous Set

[Example 4-27](#) provides the VHDL template for a D flip-flop with an asynchronous set. Presto VHDL generates the verbose inference report shown in [Example 4-28](#).

Example 4-27 D Flip-Flop With Asynchronous Set

```

library IEEE;
use IEEE.std_logic_1164.all;

entity dff_async_set is
  port (DATA, CLK, SET : in std_logic;
        Q : out std_logic );
end dff_async_set;

architecture rtl of dff_async_set is
begin
  process (CLK, SET) begin
    if (SET = '0') then
      Q <= '1';
    elsif (CLK'event and CLK = '1') then
      Q <= DATA;
    end if;
  end process;
end rtl;

```

Example 4-28 Inference Report for a D Flip-Flop With Asynchronous Set

Register Name	Type	Width	Bus	MB	AR	AS	SR	SS	ST
Q_reg	Flip-flop	1	N	N	N	Y	N	N	N

```

Sequential Cell (Q_reg)

```

```

Cell Type: Flip-Flop
Multibit Attribute: N
Clock: CLK
Async Clear: 0
Async Set: SET'
Async Load: 0
Sync Clear: 0
Sync Set: 0
Sync Toggle: 0
Sync Load: 1

```

D Flip-Flop With Asynchronous Reset

[Example 4-29](#) provides the VHDL template for a D flip-flop with an asynchronous reset. Presto VHDL generates the verbose inference report shown in [Example 4-30](#).

Example 4-29 D Flip-Flop With Asynchronous Reset

```

library IEEE;
use IEEE.std_logic_1164.all;

entity dff_async_reset is
  port (DATA, CLK, RESET : in std_logic;
        Q : out std_logic );
end dff_async_reset;

architecture rtl of dff_async_reset is
begin
  process ( CLK, RESET) begin
    if (RESET = '1') then
      Q <= '0';
    elsif (CLK'event and CLK = '1') then
      Q <= DATA;
    end if;
  end process;
end rtl;

```

Example 4-30 Inference Report for a D Flip-Flop With Asynchronous Reset

```

=====
| Register Name | Type | Width | Bus | MB | AR | AS | SR | SS | ST |
=====
| Q_reg         | Flip-flop | 1 | N | N | Y | N | N | N | N |
=====

```

```

Sequential Cell (Q_reg)
  Cell Type: Flip-Flop
  Multibit Attribute: N
  Clock: CLK
  Async Clear: RESET
  Async Set: 0
  Async Load: 0
  Sync Clear: 0

```

```

Sync Set: 0
Sync Toggle: 0
Sync Load: 1

```

D Flip-Flop With Asynchronous Set and Reset

[Example 4-31](#) provides the VHDL template for a D flip-flop with active-high asynchronous set and reset pins.

The template in [Example 4-31](#) uses the `one_hot` attribute to prevent priority encoding of the set and reset signals. If you do not specify the `one_hot` attribute, the reset signal has priority, because it is used as the condition for the if clause. The `one_cold` attribute would be used instead of the `one_hot` if you had active-low signals. Presto VHDL generates the verbose inference report shown in [Example 4-32](#).

Example 4-31 D Flip-Flop With Asynchronous Set and Reset

```

library IEEE, synopsys;
use IEEE.std_logic_1164.all;
use synopsys.attributes.all;
entity dff_async is
  port (DATA, CLK, SET, RESET : in std_logic;
        Q : out std_logic );
  attribute one_hot of SET, RESET : signal is "true";
end dff_async;

architecture rtl of dff_async is
begin
  process (CLK, SET, RESET) begin
    if (RESET = '1') then
      Q <= '0';
    elsif (SET = '1') then
      Q <= '1';
    elsif (CLK'event and CLK = '1') then
      Q <= DATA;
    end if;
  end process;
end rtl;

```

Example 4-32 Inference Report for a D Flip-Flop With Asynchronous Set and Reset

```

=====
| Register Name | Type | Width | Bus | MB | AR | AS | SR | SS | ST |
=====
| Q_reg        | Flip-flop | 1 | N | N | Y | Y | N | N | N |
=====

```

```

Sequential Cell (Q_reg)
  Cell Type: Flip-Flop
  Multibit Attribute: N
  Clock: CLK
  Async Clear: RESET
  Async Set: SET
  Async Load: 0
  Sync Clear: 0

```

```

Sync Set: 0
Sync Toggle: 0
Sync Load: 1

```

D Flip-Flop With Synchronous Set

Use the `sync_set_reset` pragma to infer a D flip-flop with a synchronous set/reset. When you compile your design, the SEQGEN inferred by Presto VHDL will be either

- Mapped to a flip-flop in the technology library with a synchronous set/reset pin or
- Mapped to a regular D flip-flop. In this case, Design Compiler builds synchronous set/reset logic in front of the D pin.

The choice depends on which method provides a better optimization result.

It is important to use the `sync_set_reset` pragma to label the set/reset signal. This pragma tells Design Compiler that the signal should be kept as close to the register as possible during mapping, preventing a simulation/synthesis mismatch which can occur if the set/reset signal is masked by an X during initialization in simulation.

[Example 4-33](#) shows the recommended coding style for a synchronous set/reset flip-flop, using the `sync_set_reset` pragma. Presto VHDL generates the verbose inference report shown in [Example 4-34](#)

Example 4-33 D Flip-Flop With Synchronous Set

```

library IEEE, synopsys;
use IEEE.std_logic_1164.all;
use synopsys.attributes.all;

entity dff_sync_set is
  port (DATA, CLK, SET : in std_logic;
        Q : out std_logic );
  attribute sync_set_reset of SET : signal is "true";
end dff_sync_set;

architecture rtl of dff_sync_set is
begin
  process (CLK) begin
    if (CLK'event and CLK = '1') then
      if (SET = '1') then
        Q <= '1';
      else
        Q <= DATA;
      end if;
    end if;
  end process;
end rtl;

```


Example 4-34 Inference Report for a D Flip-Flop With Synchronous Set

```
=====
| Register Name | Type | Width | Bus | MB | AR | AS | SR | SS | ST |
=====
| Q_reg        | Flip-flop | 1 | N | N | N | N | N | Y | N |
=====
```

```
Sequential Cell (Q_reg)
  Cell Type: Flip-Flop
  Multibit Attribute: N
  Clock: CLK
  Async Clear: 0
  Async Set: 0
  Async Load: 0
  Sync Clear: 0
  Sync Set: SET
  Sync Toggle: 0
  Sync Load: 1
```

D Flip-Flop With Synchronous Reset

Use the `sync_set_reset` pragma to infer a D flip-flop with a synchronous set/reset. When you compile your design, the SEQGEN inferred by Presto VHDL will be mapped to a flip-flop in the technology library with a synchronous set/reset pin or Design Compiler will use a regular D flip-flop and build synchronous set/reset logic in front of the D pin. The choice depends on which method provides a better optimization result.

It is important to use the `sync_set_reset` pragma to label the set/reset signal. This pragma tells Design Compiler that the signal should be kept as close to the register as possible during mapping, preventing a simulation/synthesis mismatch which can occur if the set/reset signal is masked by an X during initialization in simulation.

[Example 4-35](#) shows the recommended coding style for a synchronous set/reset flip-flop using the `sync_set_reset` pragma. Presto VHDL generates the verbose inference report shown in [Example 4-36](#).

Example 4-35 D Flip-Flop With Synchronous Reset

```

library IEEE, synopsys;
use IEEE.std_logic_1164.all;
use synopsys.attributes.all;

entity dff_sync_reset is
  port (DATA, CLK, RESET : in std_logic;
        Q : out std_logic );
  attribute sync_set_reset of RESET :
    signal is "true";
end dff_sync_reset;

architecture rtl of dff_sync_reset is
begin
  process (CLK) begin
    if (CLK'event and CLK = '1') then
      if (RESET = '0') then
        Q <= '0';
      else
        Q <= DATA;
      end if;
    end if;
  end process;

end rtl;

```

Example 4-36 Inference Report for a D Flip-Flop With Synchronous Reset

Register Name	Type	Width	Bus	MB	AR	AS	SR	SS	ST
Q_reg	Flip-flop	1	N	N	N	N	Y	N	N

```

Sequential Cell (Q_reg)
  Cell Type: Flip-Flop
  Multibit Attribute: N
  Clock: CLK
  Async Clear: 0
  Async Set: 0
  Async Load: 0
  Sync Clear: RESET'
  Sync Set: 0
  Sync Toggle: 0
  Sync Load: 1

```

D Flip-Flop With Complex Set/Reset Signals

While many set/reset signals are simple signals, some include complex logic. To enable Presto to generate a clean set/reset (that is, one attached to only the appropriate set/reset pin), use the following coding guidelines:

- Apply the appropriate set/reset attribute (`sync_set_reset` or `async_set_reset`) to the set/reset signal. For example,

```
entity data is
  port (DATA : in std_logic;
        CLK : in std_logic;
        RESET: in std_logic;
        ENABLE : in std_logic;
        Q : out std_logic );
  attribute async_set_reset of RESET :
    signal is "true";
end data;
```

- Use no more than two operands in the set/reset logic expression conditional.
- Use the set/reset signal as the first operand in the set/reset logic expression conditional.

This coding style supports usage of the negation operator on the set/reset signal and the logic expression. The logic expression can be a simple expression or any expression contained inside parentheses. However, any deviation from these coding guidelines will not be supported. For example, the following coding styles are not supported: using a subscripted value as reset, using a more complex expression other than the OR of two expressions, or using a `rst` (or `~rst`) that does not appear as the first argument in the expression.

Examples:

```
process(...)
  if (rst='1' OR logic_expression)
    q <= 0;

  else ...
  else ...

...

a <= rst OR NOT( a | b & c );
process(...)
if (a)
q = 0;
else ...;
else ...;
```

```

...

process(...)
if ( NOT rst OR NOT (a OR b OR c))
q = 0;
else ...
else ...

```

D Flip-Flop With Synchronous and Asynchronous Load

To infer a component with both synchronous and asynchronous controls, you must check the asynchronous conditions before you check the synchronous conditions.

[Example 4-37](#) provides the VHDL template for a D flip-flop with a synchronous load (called SLOAD) and an asynchronous load (called ALOAD). Presto VHDL generates the verbose inference report shown in [Example 4-38](#).

Example 4-37 D Flip-Flop With Synchronous and Asynchronous Load

```

library IEEE;
use IEEE.std_logic_1164.all;

entity dff_a_s_load is
port(SLOAD, ALOAD, ADATA, SDATA,CLK : in std_logic; Q : out std_logic );
end dff_a_s_load;

architecture rtl of dff_a_s_load is

signal asyn_rst, asyn_set :std_logic ;
begin
asyn_set <= ALOAD AND  (ADATA);
asyn_rst <= ALOAD AND  NOT(ADATA);

process (CLK,asyn_set, asyn_rst)
begin
if (asyn_set ='1') then
Q <= '1';
elsif (asyn_rst ='1') then
q <= '0';
elsif (clk'event and clk ='1' and SLOAD = '1') then Q <= SDATA ; end if;
end process;

end rtl;

```

Example 4-38 Inference Report for a D Flip-Flop With Synchronous and Asynchronous Load

```

=====
| Register Name | Type | Width | Bus | MB | AR | AS | SR | SS | ST |
=====
| Q_reg        | Flip-flop | 1 | N | N | Y | Y | N | N | N |
=====

```

```

Sequential Cell (Q_reg)
  Cell Type: Flip-Flop
  Multibit Attribute: N
  Clock: CLK
  Async Clear: ADATA' ALOAD
  Async Set: ADATA ALOAD
  Async Load: 0
  Sync Clear: 0
  Sync Set: 0
  Sync Toggle: 0
  Sync Load: SLOAD

```

Multiple Flip-Flops: Asynchronous and Synchronous Controls

If a signal is synchronous in one process but asynchronous in another, set both the `sync_set_reset` and `async_set_reset` attributes on the signal.

In [Example 4-39](#), the `infer_sync` process uses the reset signal as a synchronous reset and the `infer_async` process uses the reset signal as an asynchronous reset. [Example 4-40](#) shows the verbose inference report.

Example 4-39 Multiple Flip-Flops: Asynchronous and Synchronous Controls

```

library IEEE, synopsys;
use IEEE.std_logic_1164.all;
use synopsys.attributes.all;

entity multi_attr is
  port (DATA1, DATA2, CLK, RESET, SLOAD : in std_logic;
        Q1, Q2 : out std_logic );
end multi_attr;

architecture rtl of multi_attr is
  attribute async_set_reset of RESET :
    signal is "true";
  attribute sync_set_reset of RESET :
    signal is "true";
begin

  infer_sync: process (CLK) begin
    if (CLK'event and CLK = '1') then
      if (RESET = '0') then
        Q1 <= '0';
      elsif (SLOAD = '1') then
        Q1 <= DATA1;
      end if;
    end if;
  end process infer_sync;

  infer_async: process (CLK, RESET) begin
    if (RESET = '0') then
      Q2 <= '0';
    end if;
  end process infer_async;
end architecture rtl;

```

```

    elsif (CLK'event and CLK = '1' and SLOAD = '1') then
        Q2 <= DATA2;
    end if;
end process infer_async;

end rtl;

```

Example 4-40 Inference Reports for [Example 4-39](#)

Inferred memory devices in process
in routine multi_attr line 17 in file
'/remote/vhdl_example/multi_attr.vhd'.

Register Name	Type	Width	Bus	MB	AR	AS	SR	SS	ST
Q1_reg	Flip-flop	1	N	N	N	N	Y	N	N

Inferred memory devices in process
in routine multi_attr line 27 in file
'/remote/vhdl_example/multi_attr.vhd'.

Register Name	Type	Width	Bus	MB	AR	AS	SR	SS	ST
Q2_reg	Flip-flop	1	N	N	Y	N	N	N	N

Sequential Cell (Q1_reg)
Cell Type: Flip-Flop
Multibit Attribute: N
Clock: CLK
Async Clear: 0
Async Set: 0
Async Load: 0
Sync Clear: RESET'
Sync Set: 0
Sync Toggle: 0
Sync Load: SLOAD

Sequential Cell (Q2_reg)
Cell Type: Flip-Flop
Multibit Attribute: N
Clock: CLK
Async Clear: RESET'
Async Set: 0
Async Load: 0
Sync Clear: 0
Sync Set: 0
Sync Toggle: 0
Sync Load: SLOAD

Inferring JK Flip-Flops

This section contains code examples and inference reports for the following types of JK flip-flops:

- [Basic JK Flip-Flop](#)
- [JK Flip-Flop With Asynchronous Set and Reset](#)

Basic JK Flip-Flop

When you infer a JK flip-flop, make sure you can control the J, K, and clock signals from the top-level design ports to ensure that simulation can initialize the design.

[Example 4-41](#) provides the VHDL code that implements the JK flip-flop described in the truth table in [Table 4-4](#).

In the JK flip-flop, the J and K signals act as active-high synchronous set and reset. Use the `sync_set_reset` attribute to indicate that the J and K signals are the synchronous set and reset for the design.

[Example 4-42 on page 4-30](#) shows the verbose inference report generated by Presto VHDL.

Table 4-4 Truth Table for JK Flip-Flop

J	K	CLK	Qn+1
0	0	Rising	Qn
0	1	Rising	0
1	0	Rising	1
1	1	Rising	not (Qn)
X	X	Falling	Qn

Example 4-41 JK Flip-Flop

```

library IEEE, synopsys;
use IEEE.std_logic_1164.all;
use synopsys.attributes.all;

entity jk is
  port(J, K, CLK : in std_logic;
        Q_out : out std_logic );
  attribute sync_set_reset of J, K :
    signal is "true";
end jk;

architecture rtl of jk is
  signal Q : std_logic;
begin
  process
    variable JK : std_logic_vector ( 1 downto 0);
  begin
    wait until (CLK'event and CLK = '1');
    JK := (J & K);
    case JK is
      when "01" => Q <= '0';
      when "10" => Q <= '1';
      when "11" => Q <= not (Q);
      when "00" => Q <= Q;
      when others => Q <= 'X';
    end case;
  end process;

  Q_out <= Q;
end rtl;

```

Example 4-42 Inference Report for a JK Flip-Flop

Register Name	Type	Width	Bus	MB	AR	AS	SR	SS	ST
Q_reg	Flip-flop	1	N	N	N	N	Y	Y	N

```

Sequential Cell (Q_reg)
  Cell Type: Flip-Flop
  Multibit Attribute: N
  Clock: CLK
  Async Clear: 0
  Async Set: 0
  Async Load: 0
  Sync Clear: J' K
  Sync Set: J K'
  Sync Toggle: 0
  Sync Load: K

```


JK Flip-Flop With Asynchronous Set and Reset

[Example 4-43](#) provides the VHDL template for a JK flip-flop with asynchronous set and reset. Use the `sync_set_reset` attribute to indicate the JK function. Use the `one_hot` attribute to prevent priority encoding of the set and reset signals. Presto VHDL generates the verbose inference report shown in [Example 4-44](#).

Example 4-43 JK Flip-Flop With Asynchronous Set and Reset

```
library IEEE, synopsys;
use IEEE.std_logic_1164.all;
use synopsys.attributes.all;

entity jk_async_sr is
  port (SET, RESET, J, K, CLK : in std_logic;
        Q_out : out std_logic );
  attribute sync_set_reset of J, K :
    signal is "true";
  attribute one_hot of SET,RESET : signal is "true";
end jk_async_sr;

architecture rtl of jk_async_sr is
  signal Q : std_logic;
begin
  process (CLK, SET, RESET)
    variable JK : std_logic_vector (1 downto 0);
  begin
    if (RESET = '1') then
      Q <= '0';
    elsif (SET = '1') then
      Q <= '1';
    elsif (CLK'event and CLK = '1') then
      JK := (J & K);
      case JK is
        when "01" => Q <= '0';
        when "10" => Q <= '1';
        when "11" => Q <= not(Q);
        when "00" => Q <= Q;
        when others => Q <= 'X';
      end case;
    end if;
  end process;

  Q_out <= Q;
end rtl;
```

Example 4-44 Inference Report for a JK Flip-Flop With Asynchronous Set and Reset

```
=====
| Register Name | Type | Width | Bus | MB | AR | AS | SR | SS | ST |
=====
| Q_reg        | Flip-flop | 1 | N | N | Y | Y | Y | Y | N |
=====
```

Sequential Cell (Q_reg)

```
Cell Type: Flip-Flop
Multibit Attribute: N
Clock: CLK
Async Clear: RESET
Async Set: SET
Async Load: 0
Sync Clear: J' K
Sync Set: J K'
Sync Toggle: 0
Sync Load: K
```

Inferring Master-Slave Latches

This section contains the following subsections:

- [Master-Slave Latch Overview](#)
- [Master-Slave Latch: Single Master-Slave Clock Pair](#)
- [Master-Slave Latch: Multiple Master-Slave Clock Pairs](#)
- [Master-Slave Latch: Discrete Components](#)

Master-Slave Latch Overview

Design Compiler infers master-slave latches by using the `clocked_on_also` attribute.

In your VHDL description, describe the master-slave latch as a flip-flop, using only the slave clock. Specify the master clock as an input port, but do not connect it. In addition, set the `clocked_on_also` attribute on the master clock port (called MCK in these examples).

This coding style requires that cells in the target technology library contain slave clocks defined with the `clocked_on_also` attribute. The `clocked_on_also` attribute defines the slave clocks in the cell's state declaration. For more information about defining slave clocks in the target technology library, see the *Library Compiler User Guide*.

If Design Compiler does not find any master-slave latches in the target technology library, the tool leaves the master-slave generic cell (MSGEN) unmapped. Design Compiler does not use D flip-flops to implement the equivalent functionality of the cell.

Note:

Although the vendor's component behaves as a master-slave latch, Library Compiler supports only the description of a master-slave flip-flop.

Master-Slave Latch: Single Master-Slave Clock Pair

[Example 4-45](#) provides the VHDL template for a master-slave latch.

See “[dc_tcl_script_begin and dc_tcl_script_end](#)” on [page 6-3](#) for more information on the `dc_tcl_script_begin` and `dc_tcl_script_end` compiler directives. Presto VHDL generates the verbose inference report shown in [Example 4-46](#).

Example 4-45 Master-Slave Latch

```
library IEEE;
use IEEE.std_logic_1164.all;

entity mslatch is
  port(MCK, SCK, DATA : in std_logic;
        Q : out std_logic );
end mslatch;

architecture rtl of mslatch is
begin

  --synopsys dc_tcl_script_begin
  --set_attribute -type string MCK signal clocked_on_also
  --set_attribute -type boolean MCK level_sensitive true
  --synopsys dc_tcl_script_end

  process(SCK, DATA) begin
    if (SCK'event and SCK= '1') then
      Q <= DATA;
    end if;
  end process;

end rtl;
```

Example 4-46 Inference Report for a Master-Slave Latch

```
=====
| Register Name | Type | Width | Bus | MB | AR | AS | SR | SS | ST |
=====
| Q_reg        | Flip-flop | 1 | N | N | N | N | N | N | N |
=====
```

Master-Slave Latch: Multiple Master-Slave Clock Pairs

If the design requires more than one master-slave clock pair, you must specify the associated slave clock in addition to the `clocked_on_also` attribute. [Example 4-47](#) illustrates the use of `clocked_on_also` with the `associated_clock` option.

[Example 4-48](#) shows the verbose inference reports.

Example 4-47 Inferring Master-Slave Latches With Two Pairs of Clocks

```

library IEEE;
use IEEE.std_logic_1164.all;

entity mslatch2 is
  port(SCK1, MCK1, DATA1, SCK2, MCK2, DATA2 : in std_logic;
        Q1, Q2 : out std_logic );
end mslatch2;

architecture rtl of mslatch2 is
begin

--synopsys dc_tcl_script_begin
--set_attribute -type string MCK1 signal clocked_on_also
--set_attribute -type boolean MCK1 level_sensitive true
--set_attribute -type string MCK1 associated_clock SCK1
--set_attribute -type string MCK2 signal clocked_on_also
--set_attribute -type boolean MCK2 level_sensitive true
--set_attribute -type string MCK2 associated_clock SCK2
--synopsys dc_tcl_script_end

process (SCK1, DATA1) begin
  if (SCK1'event and SCK1 = '1') then
    Q1 <= DATA1;
  end if;
end process;

process (SCK2, DATA2) begin
  if (SCK2'event and SCK2 = '1') then
    Q2 <= DATA2;
  end if;
end process;

end rtl;

```

Example 4-48 Inference Reports for Master-Slave Latch: Multiple Clock Pairs

```

Inferred memory devices in process
      in routine mslatch2 line 21 in file
          '../rtl/ch4.ex4.47.master.slave.latch.2clks.vhd'
=====
|   Register Name   |   Type   | Width | Bus | MB | AR | AS | SR | SS | ST |
=====
|       Q1_reg      | Flip-flop |    1  |  N  |  N |  N |  N |  N |  N |  N |
=====

Inferred memory devices in process
      in routine mslatch2 line 27 in file
          '../rtl/ch4.ex4.47.master.slave.latch.2clks.vhd'
=====
|   Register Name   |   Type   | Width | Bus | MB | AR | AS | SR | SS | ST |
=====
|       Q2_reg      | Flip-flop |    1  |  N  |  N |  N |  N |  N |  N |  N |
=====

```

Master-Slave Latch: Discrete Components

If your target technology library does not contain master-slave latch components, you can infer two-phase systems using two D latches. [Example 4-49](#) shows a simple two-phase system with clocks MCK and SCK. [Example 4-50](#) shows the verbose inference reports.

Example 4-49 Two-Phase Clocks

```
library IEEE;
use IEEE.std_logic_1164.all;

entity LATCH_VHDL is
  port(MCK, SCK, DATA: in std_logic;
        Q : out std_logic );
end LATCH_VHDL;

architecture rtl of LATCH_VHDL is
  signal TEMP : std_logic;
begin
  process (MCK, DATA) begin
    if (MCK = '1') then
      TEMP <= DATA;
    end if;
  end process;

  process (SCK, TEMP) begin
    if (SCK = '1') then
      Q <= TEMP;
    end if;
  end process;

end rtl;
```

Example 4-50 Inference Reports for Two-Phase Clocks

```
Inferred memory devices in process
  in routine LATCH_VHDL line 10 in file
    '/remote/vhdl_example/latch_vhdl.vhd'.
```

Register Name	Type	Width	Bus	MB	AR	AS	SR	SS	ST
TEMP_reg	Latch	1	N	N	N	N	-	-	-

```
Inferred memory devices in process
  in routine LATCH_VHDL line 15 in file
    '/remote/vhdl_example/latch_vhdl.vhd'.
```

Register Name	Type	Width	Bus	MB	AR	AS	SR	SS	ST
Q_reg	Latch	1	N	N	N	N	-	-	-

```
Sequential Cell (TEMP_reg)
  Cell Type: Latch
  Multibit Attribute: N
  Clock: 0
  Async Clear: 0
  Async Set: 0
  Async Load: MCK
```

```
Sequential Cell (Q_reg)
  Cell Type: Latch
  Multibit Attribute: N
  Clock: 0
  Async Clear: 0
  Async Set: 0
  Async Load: SCK
```

Limitations of Register Inference

For best results when inferring registers, restrict each process to inferring a single type of memory cell, use the templates provided in this chapter, and understand the following inference limitations.

Presto VHDL cannot infer the following components. You must instantiate them in your VHDL description.

- Flip-flops and latches with three-state outputs
- Flip-flops with bidirectional pins
- Flip-flops with multiple clock inputs
- Multiport latches
- Register banks

Note:

Although you can instantiate flip-flops with bidirectional pins, Design Compiler interprets these cells as black boxes.

If you use an if statement to infer D flip-flops, your design must meet the following requirements:

- The edge expression, such as CLK'event rising_edge (CLK), must be the only condition of an if or an elsif clause.

The following if statement is invalid, because it has multiple conditions in the if clause:

```
if (edge and RST = '1')
```

- You can have only one edge expression in an if clause, and the if clause must not have an else clause.

The following if statement is invalid, because you cannot include an else clause when using an edge expression as the if or elsif condition:

```
if X > 5 then
    sequential_statement;
elsif edge then
    sequential_statement;
else
    sequential_statement;
end if;
```

- An edge expression cannot be part of another logical expression or be used as an argument.

The following function call is invalid, because you cannot use the edge expression as an argument:

```
any_function(edge);
```

- If you are using only wait statements for sequential inferencing, only one wait statement is allowed in a process. Coding styles using multiple wait statements, such as FSMs using multiple wait statements, are not supported. The tool generates the following error message if you use multiple wait statements in a process:

```
Presto does not support processes with multiple event
statements. (ELAB-336)
```

Unloaded Sequential Cell Preservation

Presto Verilog does not automatically keep unloaded or undriven flip-flops or latches in a design. These cells are determined to be unnecessary and are removed during optimization. You can use the `hdlin_preserve_sequential` variable to control which cells to preserve:

- To preserve unloaded/undriven flip-flops and latches in your GTECH netlist, set `hdlin_preserve_sequential` to `all`.
- To preserve all unloaded flip-flops only, set `hdlin_preserve_sequential` to `ff`.
- To preserve all unloaded latches only, set `hdlin_preserve_sequential` to `latch`.
- To preserve all unloaded sequential cells, including unloaded sequential cells that are used solely as loop variables, set `hdlin_preserve_sequential` to `all+loop_variables`.
- To preserve flip-flop cells only, including unloaded sequential cells that are used solely as loop variables, set `hdlin_preserve_sequential` to `ff+loop_variables`.

- To preserve unloaded latch cells only, including unloaded sequential cells that are used solely as loop variables, set `hdlin_preserve_sequential` to `latch+loop_variables`.

[Example 4-51](#) and [Example 4-52](#) indicate which components are saved when `hdlin_preserve_sequential` is set to `all` (the default is `none`). For more details about `hdlin_preserve_sequential`, see the man page.

Important:

To preserve unloaded cells through compile, you also need to set `compile_delete_unloaded_sequential_cells` to `false` (the default is `true`); otherwise, Design Compiler will optimize them away.

[Example 4-51](#) has `hdlin_preserve_sequential` set to `all` to save the unloaded cell `sum2` and the combinational logic preceding it; note that the combinational logic after it is not saved. If you also want to save the combinational logic after `sum2`, you need to recode the design as shown in [Example 4-52](#).

Example 4-51 Preserves an Unloaded Cell (sum2) and Two Adders

```
set hdlin_preserve_sequential = all
.
.
.
library IEEE;
use IEEE.std_logic_1164.all;
use IEEE.std_logic_unsigned.all;

entity seq_cell_ex2 is
  port(
    in1, in2, in3 : in    std_logic_vector(1 downto 0);
    out_z          : out  std_logic_vector(1 downto 0);
    clk            : in    std_logic);
end seq_cell_ex2;

architecture rtl of seq_cell_ex2 is
  signal sum1, sum2 : std_logic_vector(1 downto 0);
  signal save : std_logic_vector(1 downto 0);
begin
  process (clk) begin
    if (clk'event and clk = '1') then
      sum1 <= in1 + in2;
      sum2 <= in1 + in2 + in3; -- sum2 reg is saved

    end if;
  end process;

  out_z <= not sum1;
```



```
end rtl;
```

Example 4-52 preserves the sum2 register and all combinational logic before it.

Example 4-52 Preserves an Unloaded Cell (save) and Three Adders

```
set hdlin_preserve_sequential = all
.
.
.
library IEEE;
use IEEE.std_logic_1164.all;
use IEEE.std_logic_unsigned.all;

entity seq_cell_ex3 is
  port(
    in1, in2, in3 : in    std_logic_vector(1 downto 0);
    out_z          : out  std_logic_vector(1 downto 0);
    clk            : in    std_logic);
end seq_cell_ex3;

architecture rtl of seq_cell_ex3 is

  signal sum1, sum2 : std_logic_vector(1 downto 0);
  signal save : std_logic_vector(1 downto 0);
begin
  process (clk) begin
    if (clk'event and clk = '1') then
      sum1 <= in1 + in2;
      sum2 <= in1 + in2 + in3; -- this combinational logic
                                -- is saved
    end if;
  end process;

  out_z <= not sum1;

  process (clk) begin
    if (clk'event and clk = '1') then
      save <= sum1 + sum2; -- this combinational logic is saved
    end if;
  end process;
end rtl;
```

Note:

By default, the `hdlin_preserve_sequential` variable does not preserve variables used in for loops as unloaded registers. To preserve these variables, you must set `hdlin_preserve_sequential` to `ff+loop_variables`.

Note:

The tool does not distinguish between unloaded cells (those not connected to any output port) and feedthroughs. See [Example 4-53](#) for an example of a feedthrough.

Example 4-53

```
entity reg1 is
  port (
    d0, clk : in bit;
    q0: out bit);
end entity reg1;

architecture behave of reg1 is
begin -- behave
  storage: process (clk)
    variable temp1, temp2 : bit;
  begin
    if clk'event and clk = '1' then
      temp1 := d0;
      temp2 := temp1;
    end if;
    q0 <= temp2;
  end process storage;
end behave;
```

With `hdlin_preserve_sequential` set to `ff`, Presto VHDL builds two registers: one for the feedthrough cell `temp1` and the other for the loaded cell `temp2`, as shown in the following memory inference report:

Example 4-54 Feedthrough Register temp1

Register Name	Type	Width	Bus	MB	AR	AS	SR	SS	ST
temp1_reg	Flip-flop	1	N	N	N	N	N	N	N
temp2_reg	Flip-flop	1	N	N	N	N	N	N	N

5

Inferring Three-State Logic

Presto VHDL infers a three-state buffer when you assign the value of Z to a signal or variable. The Z value represents the high-impedance state. Presto VHDL infers one three-state buffer per process. You can assign high-impedance values to single-bit or bused signals (or variables). Presto VHDL does not provide any variables, attributes, or directives to control the inference.

This chapter includes the following sections:

- [Inference Report for Three-State Devices](#)
- [Inferring a Basic Three-State Driver](#)
- [Inferring One Three-State Buffer From a Single Process](#)
- [Inferring Two Three-State Buffers](#)
- [Three-State Buffer With Registered Enable](#)
- [Three-State Buffer With Registered Data](#)
- [Understanding the Limitations of Three-State Inference](#)

Inference Report for Three-State Devices

The `hdlin_reporting_level` variable determines whether Presto VHDL generates a three-state inference report. If you do not want inference reports, set `hdlin_reporting_level` to `none`. The default is `basic`, meaning that a report will be generated. [Example 5-1](#) shows a three-state inference report:

Example 5-1 Three-State Inference Report

```
Inferred tri-state devices in process
  in routine three_state_basic line 11 in file
    '/remote/.../tristate-basic.vhd'.
=====
| Register Name |           Type           | Width | MB |
=====
|  OUT1_tri    | Tri-State Buffer         |    1  |  N  |
=====
Presto compilation completed successfully.
```

The first column of the report indicates the name of the inferred three-state device. The second column indicates the type of inferred device. The third column indicates the width of the inferred device. The fourth column indicates whether the device is multibit.

Presto VHDL generates the same report for the default and verbose reports for three-state inference. For more information about the `hdlin_reporting_level` variable, see [“Elaboration Reports” on page 1-7](#).

Inferring a Basic Three-State Driver

[Example 5-2](#) provides the VHDL template for a basic three-state buffer. Presto VHDL generates the inference report shown in [Example 5-3](#). [Figure 5-1](#) shows the compiled output.

Example 5-2 Basic Three-State Buffer

```
library IEEE, synopsys;
use IEEE.std_logic_1164.all;
entity three_state_basic is
port(IN1, ENABLE : in std_logic;
      OUT1 : out std_logic );
end;

architecture rtl of three_state_basic is
begin

process (IN1, ENABLE) begin
  if (ENABLE = '1') then
    OUT1 <= IN1;
  else
```

```

        OUT1 <= 'Z';    -- assigns high-impedance state
    end if;
end process;


end rtl;

```

Example 5-3 Inference Report for a Basic Three-State Buffer

Register Name	Type	Width	MB
OUT1_tri	Tri-State Buffer	1	N

Figure 5-1 A Basic Three-State Buffer

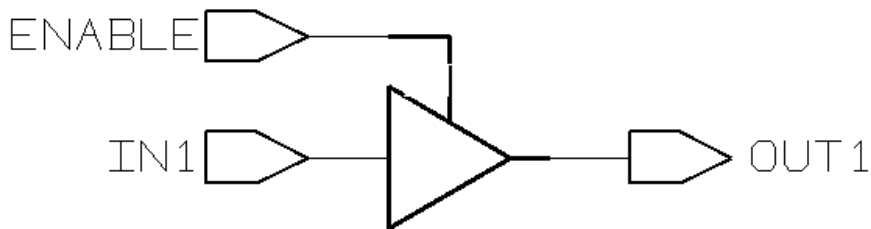

Inferring One Three-State Buffer From a Single Process

[Example 5-4](#) provides an example of placing all high-impedance assignments in a single process. In this case, the data is gated and Presto VHDL infers a single three-state buffer. [Example 5-5](#) shows the inference report.

Example 5-4 Inferring One Three-State Buffer From a Single Process

```

library IEEE;
use IEEE.std_logic_1164.all;

entity three_state is
    port ( A, B, SELA, SELB : in std_logic ;
          T : out std_logic );
end three_state;

architecture rtl of three_state is
begin
    infer : process (SELA, A, SELB, B) begin
        T <= 'Z';
        if (SELA = '1') then
            T <= A;
        elsif (SELB = '1') then

```

```

        T <= B;
    end if;
end process infer;

end rtl;

```

Example 5-5 Single Process Inference Report

Register Name	Type	Width	MB
T_tri	Tri-State Buffer	1	N

Inferring Two Three-State Buffers

[Example 5-6](#) provides an example of placing each high-impedance assignment in a separate process. In this case, Presto VHDL infers multiple three-state buffers. [Example 5-7](#) shows the inference report. [Figure 5-2](#) shows the design.

Example 5-6 Inferring Two Three-State Buffers

```

library IEEE;
use IEEE.std_logic_1164.all;

entity three_state is
    port ( A, B, SELA, SELB : in std_logic ;
          T : out std_logic );
end three_state;

architecture rtl of three_state is
begin
    infer1 : process (SELA, A) begin
        if (SELA = '1') then
            T <= A;
        else
            T <= 'Z';
        end if;
    end process infer1;

    infer2 : process (SELB, B) begin
        if (SELB = '1') then
            T <= B;
        else
            T <= 'Z';
        end if;
    end process infer2;

end rtl;


```

Example 5-7 Inference Report for Two Three-State Buffers

Register Name	Type	Width	MB
T_tri	Tri-State Buffer	1	N

Register Name	Type	Width	MB
T_tri2	Tri-State Buffer	1	N

Figure 5-2 Two Three-State Buffers

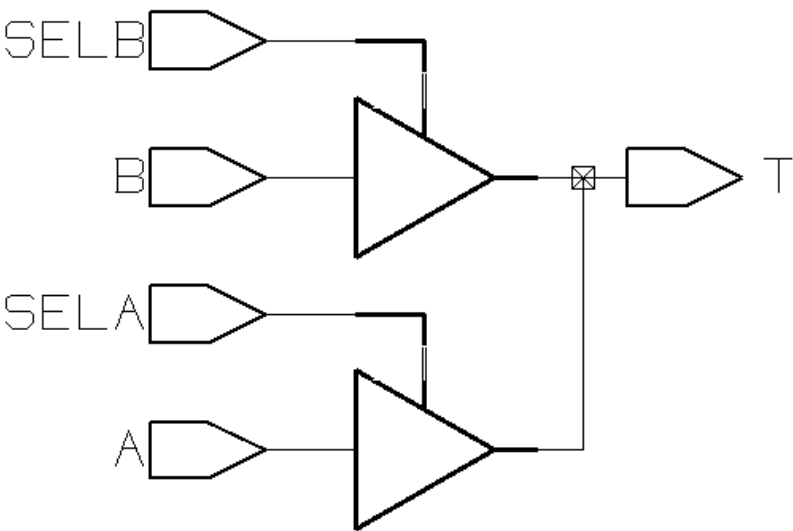

Three-State Buffer With Registered Enable

When a variable, such as `THREE_STATE` in [Example 5-8](#), is assigned to a register and defined as a three-state buffer within the same process, Presto VHDL also registers the enable pin of the three-state gate. [Example 5-8](#) shows an example of this type of code, and [Example 5-9](#) shows the inference report. [Figure 5-3](#) shows the schematic generated by the code, a three-state buffer with a register on its enable pin.

Example 5-8 Inferring a Three-State Buffer With Registered Enable

```
library IEEE;
use IEEE.std_logic_1164.all;


entity three_state is
  port ( DATA, CLK, THREE_STATE : in std_logic ;
        OUT1 : out std_logic );
end three_state;

architecture rtl of three_state is
begin
  infer : process (THREE_STATE, CLK) begin
    if (THREE_STATE = '0') then
      OUT1 <= 'Z';
    elsif (CLK'event and CLK = '1') then
      OUT1 <= DATA;
    end if;
  end process infer;
end rtl;
```

Example 5-9 Inference Report for a Three-State Buffer With Registered Enable

```
=====
| Register Name | Type | Width | Bus | MB | AR | AS | SR | SS |
| ST |
=====
| OUT1_reg | Flip-flop | 1 | N | N | N | N | N | N |
| N |
| OUT1_tri_enable_reg | Flip-flop | 1 | N | N | N | N | N | N |
| N |
=====

=====
| Register Name | Type | Width | MB |
=====
| OUT1_tri | Tri-State Buffer | 1 | N |
=====
```

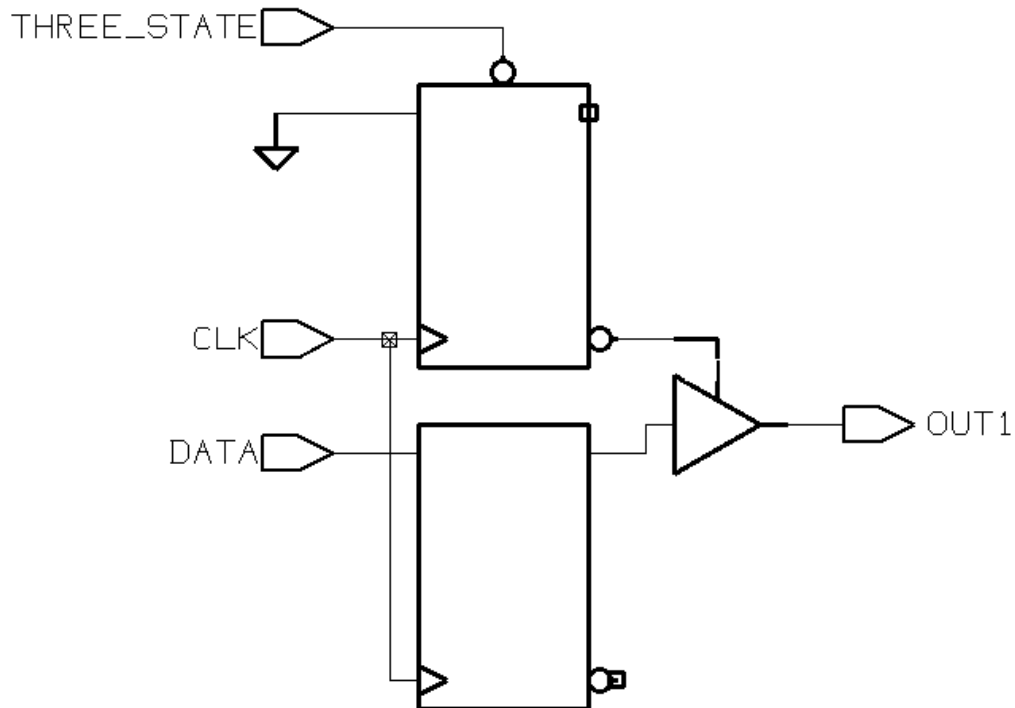
Figure 5-3 Three-State Buffer With Registered Enable

Three-State Buffer With Registered Data

[Example 5-10](#) uses two processes to instantiate a three-state buffer, with a flip-flop on the input pin. [Example 5-11](#) shows the inference report. [Figure 5-4](#) shows the schematic generated by the code.

Example 5-10 Three-State Buffer With Registered Data

```
library IEEE;
use IEEE.std_logic_1164.all;

entity ff_3state2 is
  port ( DATA, CLK, THREE_STATE : in std_logic ;
        OUT1 : out std_logic );
end ff_3state2;

architecture rtl of ff_3state2 is
  signal TEMP : std_logic;
begin

  process (CLK) begin
    if (CLK'event and CLK = '1') then
```

```

        TEMP <= DATA;
    end if;
end process;

process (THREE_STATE, TEMP) begin
    if (THREE_STATE = '0') then
        OUT1 <= 'Z';
    else
        OUT1 <= TEMP;
    end if;
end process;

end rtl;


```

Example 5-11 Inference Report for a Three-State Buffer With Registered Data

Register Name	Type	Width	Bus	MB	AR	AS	SR	SS
ST								
TEMP_reg	Flip-flop	1	N	N	N	N	N	N
N								

Register Name	Type	Width	MB
OUT1_tri	Tri-State Buffer	1	N

Figure 5-4 Three-State Buffer With Registered Data

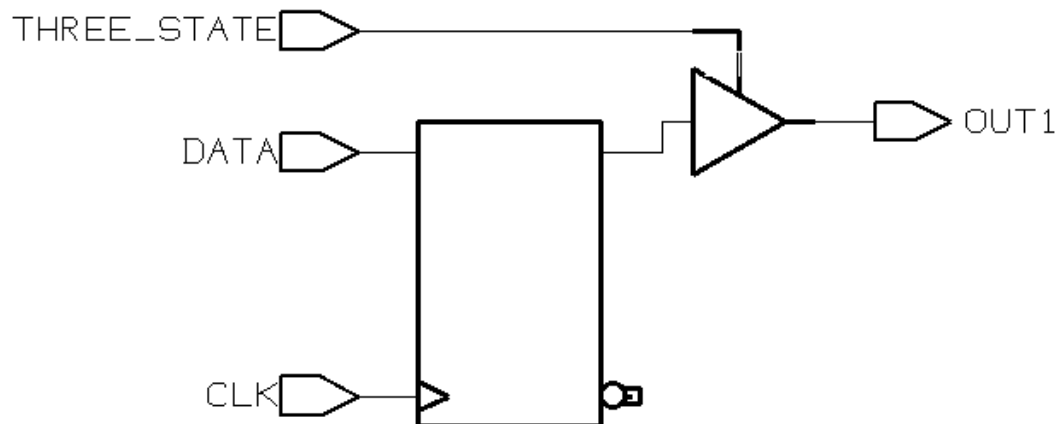

Understanding the Limitations of Three-State Inference

You can use the Z value as

- A signal assignment
- A variable assignment
- A function call argument
- A return value
- An aggregate definition

You cannot use the `z` value in an expression, except for concatenation and comparison with `z`, such as in

```
if (IN_VAL = 'Z') then y<=0 endif;
```

This is an example of permissible use of the `z` value in an expression, but it always evaluates to false. So it is also a simulation/synthesis mismatch.

This code

```
OUT_VAL <= ('Z' and IN_VAL);
```

is an example of an incorrect use of the `z` value in an expression. It is incorrect because it is not a comparison expression. This code generates an error because Presto VHDL cannot compute any expressions that use 'Z' as an input.

Be careful when using expressions that compare with the `z` value. Design Compiler always evaluates these expressions to false, and the pre-synthesis and post-synthesis simulation results might differ. For this reason, Presto VHDL issues a warning when it synthesizes such comparisons.

6

Directives, Attributes, and Variables

This chapter describes the directives, attributes, and HDL read variables supported by Presto VHDL in the following sections:

- [Directives](#)
- [Attributes](#)
- [Variables](#)

Directives

Presto VHDL directives are special comments that affect the actions of the Synopsys Presto VHDL and Design Compiler. These comments are ignored by other VHDL tools. They begin with two hyphens (--) and are followed by `pragma` or `synopsys`.

Note:

Presto VHDL displays a syntax error if an unrecognized directive is encountered after `--synopsys` or `--pragma`.

This section describes the following directives:

- [keep_signal_name](#)
- [template](#)
- [translate_off](#) and [translate_on](#)
- [synthesis_off](#) and [synthesis_on](#)
- [resolution_method](#)
- [map_to_entity](#) and [return_port_name](#)
- [dc_tcl_script_begin](#) and [dc_tcl_script_end](#)

keep_signal_name

You can give Presto VHDL guideline information for keeping a signal name by using the `hdlin_keep_signal_name` variable (default is `all_driving`) and the `keep_signal_name` directive. For details, see [“Keeping Signal Names” on page 2-31](#).

template

The `template` directive is used to read a design with a generic given that the generic default is specified. See [“Parameterized Models \(Generics\)” on page 1-17](#).

translate_off and translate_on

The code contained within these directives is ignored and treated as comments.

synthesis_off and synthesis_on

The code contained within these directives is ignored and treated as comments.

resolution_method

Resolution directives determine the resolution function associated with resolved signals. Presto VHDL does not support arbitrary resolution functions. It only supports the following three resolution methods:

```
-- synopsys resolution_method wired_and
-- synopsys resolution_method wired_or
-- synopsys resolution_method three_state
```

For more details, see [“Resolution Functions” on page 2-33](#).

map_to_entity and return_port_name

Component implication directives map VHDL subprograms onto existing components or VHDL entities.

Synopsys supports the following component implication directives:

```
-- synopsys map_to_entity entity_name
-- synopsys return_port_name port_name
```

See [“Procedures and Functions as Design Components” on page 2-8](#). Other directives, such as `map_to_operator`, are used to drive inference of HDL operators such as `*`, `+`, and `-`. See the *DesignWare Developer Guide* for more information about synthetic comments.

dc_tcl_script_begin and dc_tcl_script_end

You can embed Tcl commands that set design constraints and attributes within the RTL by using the `dc_tcl_script_begin` and `dc_tcl_script_end` directives, as shown in [Example 6-1](#).

Example 6-1

```
...
-- synopsys dc_tcl_script_begin
-- set_max_area 0.0
-- set_drive -rise 1 port_b
-- set_max_delay 0.0 port_z
-- synopsys dc_tcl_script_end
...
```

Design Compiler interprets the statements embedded between the `dc_tcl_script_begin` and the `dc_tcl_script_end` directives. If you want to comment out part of your script, use the `#` comment character.

The following items are not supported in embedded Tcl scripts:

- Hierarchical constraints
- Wildcards
- List commands
- Multiple-line commands

Following are guidelines for using embedded Tcl scripts:

- You cannot embed Tcl scripts outside an entity or architecture; they must be embedded inside an entity or architecture.
- Constraints and attributes declared inside an entity or architecture apply only to the enclosing entity or architecture.
- Any `dc_shell` scripts embedded in functions apply to the whole module.
- Include only commands that set constraints and attributes. Do not use action commands such as `compile`, `gen`, and `report`. The tool ignores these commands and issues a warning or error.
- The constraints or attributes set in the embedded script go into effect after the `read` command is executed. Therefore, variables that affect the read process itself are not in effect before the read. For example, if you set the `hdlin_no_latches` variable to true in the embedded script, this variable does not influence latch inference in the current read.
- Design Compiler performs error checking after the `read` command finishes. Syntactic and semantic errors in `dc_shell` strings are reported at this time.
- You can have more than one `dc_tcl_script_begin` / `dc_tcl_script_end` pair per file or entity/architecture. The compiler does not issue an error or warning when it sees more than one pair. Each pair is evaluated and set on the applicable code.
- An embedded `dc_shell` script does not produce any information or status messages unless there is an error in the script.
- If you use embedded Tcl scripts while running in `dcsh` mode, Design Compiler issues the following error message:

```
Error: Design 'MID' has embedded Tcl commands which are ignored in EQN mode. (UIO-162)
```
- Usage of built-in Tcl commands is not recommended.
- Usage of output redirection commands is not recommended.

Attributes

This section describes the following:

- [Synopsys Defined Attributes](#)
- [IEEE Predefined Attributes](#)

Synopsys Defined Attributes

The Synopsys defined attributes are listed in [Table 6-1](#). When you use these attributes, insert the following line in your VHDL description, just before the entity declaration.

```
use SYNOPSYS.ATTRIBUTES.all;
```

These attributes are included in the ATTRIBUTES package.

Table 6-1 Attributes Supported by Presto VHDL

Attribute	Description
arrival	See Table 6-2 on page 6-7 .
async_set_reset	See Table 4-2 on page 4-6 .
async_set_reset_local	See Table 4-2 on page 4-6 .
async_set_reset_local_all	See Table 4-2 on page 4-6 .
dont_touch	See Table 6-2 on page 6-7 .
dont_touch_network	See Table 6-2 on page 6-7 .
drive_strength	See Table 6-2 on page 6-7 .
enum_encoding	See “Synopsys Defined Attributes” on page 6-5 .
equal	See Table 6-2 on page 6-7 .
fall_arrival	See Table 6-2 on page 6-7 .
fall_drive	See Table 6-2 on page 6-7 .
infer_multibit	See “Multibit Inference” on page 2-40 .
infer_mux	See “MUX_OP Inference” on page 3-10 .

Table 6-1 Attributes Supported by Presto VHDL (Continued)

Attribute	Description
load	See Table 6-2 on page 6-7 .
logic_one	See Table 6-2 on page 6-7 .
logic_zero	See Table 6-2 on page 6-7 .
map_to_module	See “map_to_entity and return_port_name” on page 6-3 .
max_area	See Table 6-2 on page 6-7 .
max_delay	See Table 6-2 on page 6-7 .
max_fall_delay	See Table 6-2 on page 6-7 .
max_rise_delay	See Table 6-2 on page 6-7 .
max_transition	See Table 6-2 on page 6-7 .
min_delay	See Table 6-2 on page 6-7 .
min_fall_delay	See Table 6-2 on page 6-7 .
min_rise_delay	See Table 6-2 on page 6-7 .
one_cold	See Table 4-2 on page 4-6 .
one_hot	See Table 4-2 on page 4-6 .
opposite	See Table 6-2 on page 6-7 .
rise_arrival	See Table 6-2 on page 6-7 .
rise_drive	See Table 6-2 on page 6-7 .
sync_set_reset	See Table 4-2 on page 4-6 .
sync_set_reset_local	See Table 4-2 on page 4-6 .
sync_set_reset_local_all	See Table 4-2 on page 4-6 .
unconnected	See “Synopsys Defined Attributes” on page 6-5 .

The design attributes are described in [Table 6-2](#).

Table 6-2 Design Attributes

Attribute	Type	Description
Input port Attributes		
MAX_AREA	real	-- Maximum desired area, in technology library -- area units. attribute MAX_AREA of EXAMPLE : entity is 500.0;
MAX_TRANSITION	real	-- Maximum allowable transition time for any -- network in the design, in technology library -- time units. attribute MAX_TRANSITION of EXAMPLE : entity is 3.0;
ARRIVAL	real	-- Expected signal arrival time, in technology -- library time units. Sets both RISE_ARRIVAL and -- FALL_ARRIVAL. attribute ARRIVAL of A : signal is 1.5;
DRIVE_STRENGTH	real	-- Input signal's drive strength, in technology -- library load units. Sets both RISE_DRIVE and -- FALL_DRIVE. attribute DRIVE_STRENGTH of A, B : signal is 0.01;
RISE_ARRIVAL	real	-- Input signal's rise time. attribute RISE_ARRIVAL of C : signal is 1.5;
FALL_ARRIVAL	real	-- Input signal's fall time. attribute FALL_ARRIVAL of A, B : signal is 1.5;
FALL_DRIVE	real	-- Input signal's drive strength while falling. attribute FALL_DRIVE of B : signal is 0.01;
RISE_DRIVE	real	-- Input signal's drive strength while rising. attribute RISE_DRIVE of A : signal is 0.01;
EQUAL	boolean	-- Applied to pairs of input ports; true -- if both ports are logically equal. attribute EQUAL of A, B : signal is TRUE; The attributes EQUAL and OPPOSITE are used only for pairs of single-bit ports (signals).

Table 6-2 Design Attributes (Continued)

Attribute	Type	Description
OPPOSITE	boolean	-- Applied to pairs of input ports; true -- if the two ports are logically opposite. attribute OPPOSITE of A, B: signal is TRUE;
LOGIC_ONE	boolean	-- True if the input port is always at logic one. attribute LOGIC_ONE of A : signal is TRUE;
LOGIC_ZERO	boolean	-- True if the input port is always at logic zero attribute LOGIC_ZERO of A, B: signal is TRUE;
DONT_TOUCH_NETWORK	boolean	-- True if the network connected to the input -- port is to be excluded from optimization attribute DONT_TOUCH_NETWORK of A : signal is TRUE;
Output Port Attributes		
LOAD	real	-- Loading on output port, in library load units. attribute LOAD of Y, Z : signal is 5.0;
UNCONNECTED	boolean	-- May be set to true if the output port is not -- connected to external circuitry. attribute UNCONNECTED of X : signal is TRUE;
MIN_RISE_DELAY	real	-- Minimum allowable delay time before -- the output port's signal rises.attribute MIN_RISE_DELAY of X : signal is 5.0;
MIN_FALL_DELAY	real	-- Minimum allowable delay time before -- the output port's signal falls. attribute MIN_FALL_DELAY of Y : signal is 5.0;
MAX_DELAY	real	-- Maximum allowable delay time, from any -- input signal connected to the output -- port, in technology library time units. -- Sets both MAX_RISE_DELAY and MAX_FALL_DELAY. attribute MAX_DELAY of X : signal is 20.0;

Table 6-2 Design Attributes (Continued)

Attribute	Type	Description
MAX_RISE_DELAY	real	-- Maximum allowable delay time before -- the output port's signal rises. attribute MAX_RISE_DELAY of Z : signal is 20.0;
MAX_FALL_DELAY	real	-- Maximum allowable delay time before -- the output port's signal falls. attribute MAX_FALL_DELAY of X, Y : signal is 20.0;
MIN_DELAY	real	-- Minimum allowable delay time, from any -- input signal connected to the output -- port, in technology library time units. -- Sets both MIN_RISE_DELAY and MIN_FALL_DELAY attribute MIN_DELAY of X, Z : signal is 5.0;
Cell attributes		
DONT_TOUCH	boolean	-- True if the instance is not to be optimized. attribute DONT_TOUCH of INSTANCE : label is TRUE; A dont_touch attribute cannot be set to false.

ENUM_ENCODING Attribute

You can override the automatic enumeration encodings and specify your own enumeration encodings with the `ENUM_ENCODING` attribute. This interpretation is specific to Presto VHDL. This attribute allows Presto VHDL to interpret your logic correctly. Place the synthesis attribute `ENUM_ENCODING` on your primary logic type.

The `ENUM_ENCODING` attribute must be a string containing a series of vectors, one for each enumeration literal in the associated type. The encoding vector is specified by '0's, '1's, 'D's, 'U's, and 'Z's, separated by blank spaces.

The possible encoding values for the `ENUM_ENCODING` attribute are '0', '1', 'D', 'U', and 'Z' and are described in [Table 6-3](#).

Table 6-3 Encoding Values for the ENUM_ENCODING Attribute

Encoding value	Description
'0'	Bit value '0'.
'1'	Bit value '1'.

Table 6-3 Encoding Values for the ENUM_ENCODING Attribute (Continued)

Encoding value	Description
'D'	Don't care (can be either '0' or '1'). To use don't care information, see "Don't Care Inference" on page 9-35.
'U'	Unknown. If 'U' appears in the encoding vector for an enumeration, you cannot use that enumeration literal except as an operand to the = and /= operators. You can read an enumeration literal encoded with a 'U' from a variable or signal, but you cannot assign it. For synthesis, the = operator returns false and /= returns true when either of the operands is an enumeration literal whose encoding contains 'U'.
'Z'	High impedance. See "Three-State Inference" on page 6-2 for more information.

The first vector in the attribute string specifies the encoding for the first enumeration literal, the second vector specifies the encoding for the second enumeration literal, and so on. The `ENUM_ENCODING` attribute must immediately follow the type declaration.

[Example 6-2](#) illustrates how the default encodings from [Example 2-21 on page 2-18](#) can be changed with the `ENUM_ENCODING` attribute.

Example 6-2 Using the ENUM_ENCODING Attribute

```
attribute ENUM_ENCODING: STRING;
-- Attribute definition

type COLOR is (RED, GREEN, YELLOW, BLUE, VIOLET);
attribute ENUM_ENCODING of
  COLOR: type is "010 000 011 100 001";
-- Attribute declaration
```

The enumeration values are encoded as follows:

```
RED      = "010"
GREEN    = "000"
YELLOW   = "011"
BLUE     = "100"
VIOLET   = "001"
```

The result is GREEN < VIOLET < RED < YELLOW < BLUE.

Note:

The interpretation of the `ENUM_ENCODING` attribute is specific to Presto VHDL. Other VHDL tools, such as simulators, use the standard encoding (ordering).

IEEE Predefined Attributes

See [“Names” on page C-6](#) for the IEEE predefined attributes supported by Presto VHDL.

Variables

Presto VHDL read variables are described in [Table 6-4](#).

Table 6-4 Variables

Name	Default	Description
hdlin_elab_errors_deep	false	Allows the elaboration of submodules even if the top-level module elaboration fails, enabling Presto to report more elaboration, link, and VER-37 errors and warnings in a hierarchical design during the first elaboration run. See “Reporting Elaboration Errors” on page 1-8 .
hdlin_enable_configurations	False	Enables configuration support.
hdlin_generate_separator_style	_	Specifies the separator string for instances generated in multiple- nested loops. This is a VHDL only supported variable. Verilog generate naming follows the Verilog LRM standard, so this variable is not required.
hdlin_infer_enumerated_types	False	Infers enumerated types.
hdlin_infer_function_local_latches	False	Allows latches to be inferred for function- and procedure-scope variables.
hdlin_keep_signal_name	all_driving	Attempts to keep a signal name if there is path from the signal to an output port. This includes preserving cells between the signal and the output port.
hdlin_mux_oversize_ratio	100	Defined as the ratio of the number of MUX inputs to the unique number of data inputs. When this ratio is exceeded, a MUX will not be inferred and the circuit will be generated with SELECT_OPs.
hdlin_mux_size_min	2	Sets the minimum number of data inputs for MUX inference.

Table 6-4 Variables (Continued)

Name	Default	Description
hdlin_mux_size_only	1	Controls which MUX_OP cells receive the <code>size_only</code> attribute. By default, MUX_OP cells that are generated with the RTL <code>infer_mux</code> pragma and that are on set/reset signals receive the <code>size_only</code> attribute. For more information and a complete list of options, see Table 3-3 on page 3-12 .
hdlin_no_sequential_mapping	False	Prevents sequential mapping.
hdlin_one_hot_one_cold_on	True	Optimizes according to <code>one_hot</code> and <code>one_cold</code> attributes.
hdlin_optimize_array_references	True	Optimizes constant offsets in array references.
hdlin_optimize_enum_types	False	Simplifies comparisons based on enumerated type information.

Table 6-4 Variables (Continued)

Name	Default	Description
hdlin_preserve_sequential	none	<p>Preserves unloaded sequential cells (latches or flip-flops) that would otherwise be removed during optimization by Presto Verilog. The following options are supported:</p> <ul style="list-style-type: none"> • <code>none</code> or <code>false</code>—No unloaded sequential cells are preserved. This is the default behavior. • <code>all</code> or <code>true</code>—All unloaded sequential cells are preserved, excluding unloaded sequential cells that are used solely as loop variables. • <code>all+loop_variables</code> or <code>true+loop_variables</code>—All unloaded sequential cells are preserved, including unloaded sequential cells that are used solely as loop variables. • <code>ff</code>—Only flip-flop cells are preserved, excluding unloaded sequential cells that are used solely as loop variables. • <code>ff+loop_variables</code>—Only flip-flop cells are preserved, including unloaded sequential cells that are used solely as loop variables. • <code>latch</code>—Only unloaded latch cells are preserved, excluding unloaded sequential cells that are used solely as loop variables. • <code>latch+loop_variables</code>—Only unloaded latch cells are preserved, including unloaded sequential cells that are used solely as loop variables. <p><i>Important:</i> To preserve unloaded cells through compile, you must set <code>compile_delete_unloaded_sequential_cells</code> to <code>false</code>.</p> <p>See “Unloaded Sequential Cell Preservation” on page 4-37.</p>
hdlin_prohibit_nontri_multiple_drivers	True	Issues an error when a non-tri net is driven by more than one process or continuous assignment.

Table 6-4 Variables (Continued)

Name	Default	Description
hdlin_support_subprogram_var_init	True	Controls whether or not Presto VHDL honors the initial value given to a variable. When this variable is set to false, the default, Presto VHDL issues a warning that the initial value given to a variable is ignored.
hdlin_vhdl_87	False	When true, directs Presto VHDL to use the VHDL-87 standard.

7

Write Out Designs in VHDL Format

While using Design Compiler, you can write out any design in a variety of formats, including VHDL. Existing gate-level netlists, sets of logic equations, or technology-specific circuits can be automatically converted to a VHDL description. The resulting VHDL description can serve as documentation of the original design, and you can use it as a starting point for reimplementing in a new technology. In addition, you can give the VHDL description to a VHDL simulator to provide circuit timing information.

The following sections discuss how to write out designs in VHDL format.

- [Netlist Writer Variables](#)
- [Writing Out VHDL Files](#)
- [VHDL Write Variables](#)
- [Bit and Bit-Vector Variables](#)
- [Resolution Function Variables](#)
- [Types and Type Conversion Variables](#)
- [Architecture and Configuration Variables](#)
- [Preserving Port Types](#)
- [VHDL Netlist Coding Considerations](#)

Netlist Writer Variables

The netlist writer variables discussed in this chapter are listed in [Table 7-1](#).

Table 7-1 Variable Summary

Group	Attributes/Directives/Variables
Write variables	vhdlout_dont_create_dummy_nets, vhdlout_equations, vhdlout_follow_vector_direction, vhdlout_separate_scan_in vhdlout_local_attributes, vhdlout_upcase, vhdlout_use_packages, vhdl, out_write_architecture, vhdlout_write_components, vhdlout_write_entity, vhdlout_write_top_configuration
Bit and bit-vector variables	vhdlout_three_state_name, vhdlout_unknown_name, vhdlout_zero_name, vhdlout_bit_type, vhdlout_bit_vector_type, vhdlout_one_name
Resolution function variables	vhdlout_three_state_res_func, vhdlout_wired_and_res_func, vhdlout_wired_or_res_func
Types and type conversion variables	vhdlout_package_naming_style, vhdlout_preserve_hierarchical_types, vhdlout_single_bit
Architecture and configuration variables	vhdlout_top_configuration_arch_name, vhdlout_top_configuration_entity_name, vhdlout_top_configuration_name

Writing Out VHDL Files

To write out VHDL design files, use the `write` command.

```
dc_shell> write -format vhd1 -output my_file.vhd1
```

The `write -format vhd1` command is valid whether or not the current design originated as a VHDL source file. You can write out any design, regardless of initial format (equation, netlist, and so on), as a VHDL design.

For more information about the `write` command, see the *Design Compiler Command-line Interface Guide*.

VHDL Write Variables

Several `dc_shell` variables affect how designs are written out as VHDL files. These variables must be set before you write out the design. They can be set interactively or in your `.synopsys_dc.setup` file.

The variables described below affect writing out VHDL (`vhdlout_variables`). To list them, enter

```
dc_shell> man vhdlto_variables
```

```
vhdlout_dont_create_dummy_nets
```

Controls whether the VHDL writer creates dummy nets for connecting unused pins or ports.

By default, this variable is set to false and the VHDL writer creates dummy nets.

Set this variable to true to disable dummy net creation.

```
vhdlout_equations
```

When set to true, this variable determines that combinational logic is written with technology-independent Boolean equations, sequential logic is written with technology-independent wait and if statements, and three-state drivers are written with technology-independent code.

By default, this variable is set to false and all mapped logic is written with technology-specific netlists.

Set this variable to true to force the VHDL writer to write technology-independent logic.

```
vhdlout_follow_vector_direction
```

Controls how the VHDL writer determines the array range direction.

By default, this variable is false and the VHDL writer uses ascending array range values, regardless of the original array range direction.

Set this variable to true to force the VHDL writer to determine the array range direction from the original design.

```
vhdlout_local_attributes
```

This variable is obsolete. Use the `write_script` command instead (see the `write_script` man page).

```
vhdlout_separate_scan_in
```

Controls how the scan chain is written out in VHDL.

By default, this variable is false and the VHDL writer writes the scan chain in the same file as the design. In this case, the scan chain is not visible in the testbench and parallel-load simulation is not possible.

Set this variable to true to force the VHDL writer to write the scan chain as a separate package to enable parallel-load simulation.

`vhdlout_upcase`

Determines, when set to true, that identifiers are written out in uppercase to the VHDL file.

When this variable is set to false, identifiers are written out with their Design Compiler names. The default is false.

`vhdlout_use_packages`

This variable is a list of package names. A use clause is written into the VHDL file for each of these packages for all entities; library clauses are also written out as needed.

If this variable is not set or is set to an empty list (`{ }`), it has no effect on the `write` command.

To use packages from specific libraries, you can prefix the library to the package name. For example,

```
vhdlout_use_packages = {IEEE.std_logic_1164, \
                      IEEE.std_logic_arith, \
                      VENDOR.PARTS.FFD}
```

becomes

```
use IEEE.std_logic_1164.all;
use IEEE.std_logic_arith.all;
use VENDOR.PARTS.FFD;
```

`vhdlout_write_architecture`

When this variable is set to true (the default), an architecture definition is written out to the VHDL file.

`vhdlout_write_components`

This variable controls whether component declarations for cells mapped to a technology library are written out (if set to true) or not (false).

Component declarations are required by VHDL. If you set this variable to false, make sure a package containing the necessary component declarations is listed in `vhdlout_use_packages`.

The default is true. See also the `vhdlout_use_packages` variable.

`vhdlout_write_entity`

When this variable is set to true (the default), an entity definition is written out to the VHDL file and to any conversion packages as necessary.

`vhdlout_write_top_configuration`

When this variable is set to true, a top-level configuration definition is written out to the VHDL file.

The default is false.

Bit and Bit-Vector Variables

Bit and bit-vector variables, whose descriptions follow, define the names of bits, bit vectors, and the associated types.

`vhdlout_bit_type`

The name of the bit type used for writing out single-bit values, used with the following variables:

```
vhdlout_one_name
vhdlout_three_state_name
vhdlout_zero_name
vhdlout_bit_vector_type
```

The default is `std_logic`. For example, a simulator uses a bit type of `t_logic`, defined as

```
type t_logic is (U, D, Z, ..., F0, F1, ...);
and a bit vector type of t_logic_vector, defined as
```

```
type t_logic_vector is array (integer range <>) of
t_logic;
```

The following `dc_shell` commands define the appropriate bit and bit vector types and values to write.

```
vhdlout_bit_type           = t_logic
vhdlout_bit_vector_type    = t_logic_vector
vhdlout_one_name           = F1
vhdlout_zero_name          = F0
vhdlout_three_state_name   = Z
```

When writing a generic three-state model, Design Compiler displays an error if `vhdlout_bit_type` is set to its default value of a bit. Set `vhdlout_bit_type` to a bit type that includes a high-impedance value ('Z'). For more information about inferred three-state devices, see [Chapter 5, "Inferring Three-State Logic."](#)

`vhdlout_bit_vector_type`

The name of the bit vector type used for writing multiple-bit values, used with the `vhdlout_bit_type`, `vhdlout_one_name`, and `vhdlout_zero_name` variables.

The default is `std_logic_vector`. For an example, see the description of `vhdlout_bit_type`.

`vhdlout_one_name`

The name of the enumeration literal that represents a logic 1.

The default is '1'. For an example, see the description of `vhdlout_bit_type`.

`vhdlout_three_state_name`

The name of the high-impedance bit value used for three-state device values.

The default is 'Z'.

`vhdlout_unknown_name`

The value used to drive a signal to the unknown state, usually a character literal or an enumeration name.

The default is 'X'.

`vhdlout_zero_name`

The name of the enumeration literal that represents a logic 0.

The default is '0'. For an example, see the description of `vhdlout_bit_type`.

Resolution Function Variables

The resolution function variables, whose descriptions follow, name resolution functions that are written out.

`vhdlout_three_state_res_func`

Names a three-state resolution function to use instead of the default function. You must supply this function in a package listed in `vhdlout_use_packages`.

If the variable is set to " " (the default), a resolution function is written out if needed.

`vhdlout_wired_and_res_func`

Names a wired AND resolution function to use instead of the default function. You must supply this function in a package listed in `vhdlout_use_packages`.

If the variable is set to " " (the default), a resolution function is written out if needed.

`vhdlout_wired_or_res_func`

Names a wired OR resolution function to use instead of the default. You must supply this function in a package listed in `vhdlout_use_packages`.

If the variable is set to " " (the default), a resolution function is written out if needed.

Types and Type Conversion Variables

The following types and type conversion variables define type conversion functions and how the VHDL writer writes out types.

`vhdlout_package_naming_style`

This variable controls how packages of conversion functions are named. The default value is "CONV_PACK_%d", where %d is a number that is incremented as necessary to produce a unique name. By default, the package name and the number are separated by underscores (_).

`vhdlout_preserve_hierarchical_types`

This variable affects how ports on lower-level designs are written out. Top-level design ports are controlled by `vhdlout_single_bit`. (A design is considered lower-level if it is instantiated by any of the designs being written out.)

When this variable is set to USER, all ports on lower-level designs are written with their original data types. This option affects only designs that are read in VHDL format.

When set to VECTOR, all ports on lower-level designs are written with their ports bused; ports keep their names. These bused ports contrast to ports that are bit-blasted.

Bit-blasting is the term for breaking down a bus to its individual bus members. The port types are defined by `vhdlout_bit_vector_type` or by `vhdlout_bit_type`, in the case of single-bit ports. This setting is likely to give the most efficient description for simulation. The default is VECTOR. You must ensure that `vhdlout_bit_vector_type` is an array type whose elements are of `vhdlout_bit_type`.

When this variable is set to BIT, typed ports are bit-blasted. If the type of a port is N bits wide, it is written to the VHDL file as N separate ports. Each port is given the type defined by `vhdlout_bit_type`. This variable has no effect if you set `vhdlout_single_bit` to BIT. `vhdlout_preserve_hierarchical_types` is then ignored, and the whole design hierarchy is written out bit-blasted.

This variable cannot take on a higher value than the current setting of `vhdlout_single_bit`. The descending order is {USER, VECTOR, BIT}. Thus, the combination of `vhdlout_single_bit` set to VECTOR and `vhdlout_preserve_hierarchical_types` set to USER is not possible.

`vhdlout_single_bit`

This variable affects how ports on the top-level design are written out. Lower-level design ports are controlled by `vhdlout_preserve_hierarchical_types`. A design is considered lower-level if it is instantiated by any of the designs being written out.

When this variable is set to USER, all ports on the top-level design are written with their original data types. This option affects only designs that are read in VHDL format. The default is USER.

When this variable is set to `VECTOR`, all ports on the top-level design are written with their ports bused. Ports keep their names (in contrast to bit-blasted ports). Port types are defined by `vhdlout_bit_vector_type` or by `vhdlout_bit_type`, in the case of single-bit ports. For buses, the range always starts with 0 and goes in ascending order, regardless of what the range definition was in the HDL source. Ensure that `vhdlout_bit_vector_type` is an array type whose elements are of `vhdlout_bit_type`.

When this variable is set to `BIT`, typed ports are bit-blasted. If the type of a port is N bits wide, it is written to the VHDL file as N separate ports. Each port is given the type defined by `vhdlout_bit_type`.

To determine the current value of this variable, use the `list vhdlout_single_bit` command.

Architecture and Configuration Variables

The following architecture and configuration variables control the names of the architectures, configurations, and entities written to the VHDL file.

`vhdlout_top_configuration_arch_name`

Determines the architecture name that is written out in a configuration definition. The default value is "A".

`vhdlout_top_configuration_entity_name`

Determines the entity name that is written out in a configuration definition. The default value is "E".

`vhdlout_top_configuration_name`

Determines the configuration name that is written out in a configuration definition. The default value is "CFG_TB_E".

Preserving Port Types

[Example 7-1](#) shows how to write out the current design in VHDL format with port types (vector or record types) preserved.

Example 7-1 Preserving Port Types When Writing VHDL

```
-- The design must originate in VHDL format
dc_shell> read_vhdl my_design.vhdl

-- Set the variable that causes the port types to be
      preserved
dc_shell> set vhdnout_single_bit user

-- Now write the current design in VHDL format
dc_shell> write -format vhdl -output design_out.vhdl
```

[Example 7-2](#) shows a VHDL input file. [Example 7-3](#) and [Example 7-4](#) show the corresponding output files.

Example 7-2 Original VHDL Input File

```
library IEEE;
use IEEE.std_logic_1164.all;

entity test_vhdl is
port ( a: in std_logic_vector (3 downto 0);
      b: out std_logic_vector ( 3 downto 0));
end test_vhdl;

architecture structural of test_vhdl is
begin
    b <= not a;
end structural;
```

The dc_shell commands in [Example 7-3](#) use the default values of the vhdnout_variables (described in “VHDL Write Variables” on page 7-3) to generate the test_vhdl output file.

Example 7-3 *TEST_VHDL Written Out in Default VHDL Format*

```

library IEEE;

use IEEE.std_logic_1164.all;

package CONV_PACK_test_vhdl is

-- define attributes
attribute ENUM_ENCODING : STRING;

end CONV_PACK_test_vhdl;

library IEEE;

use IEEE.std_logic_1164.all;

use work.CONV_PACK_test_vhdl.all;

entity test_vhdl is

    port( a : in std_logic_vector (3 downto 0);  b : out std_logic_vector
(3
        downto 0));

end test_vhdl;

architecture SYN_structural of test_vhdl is

    component GTECH_NOT
        port( A : in std_logic;  Z : out std_logic);
    end component;

begin

    I_0 : GTECH_NOT port map( A => a(3), Z => b(3));
    I_1 : GTECH_NOT port map( A => a(2), Z => b(2));
    I_2 : GTECH_NOT port map( A => a(1), Z => b(1));
    I_3 : GTECH_NOT port map( A => a(0), Z => b(0));

end SYN_structural;

```

If you set `vhdlout_single_bit` to `bit`, the output file generated is shown in [Example 7-4](#).

Example 7-4 TEST_VHDL Written Out With Port Types in VHDL Format

```
library IEEE;

use IEEE.std_logic_1164.all;

entity test_vhdl is

    port( a_3_port, a_2_port, a_1_port, a_0_port : in std_logic;
          b_3_port,
            b_2_port, b_1_port, b_0_port : out std_logic);

end test_vhdl;

architecture SYN_structural of test_vhdl is

    component GTECH_NOT
        port( A : in std_logic;  Z : out std_logic);
    end component;

begin

    I_0 : GTECH_NOT port map( A => a_3_port, Z => b_3_port);
    I_1 : GTECH_NOT port map( A => a_2_port, Z => b_2_port);
    I_2 : GTECH_NOT port map( A => a_1_port, Z => b_1_port);
    I_3 : GTECH_NOT port map( A => a_0_port, Z => b_0_port);

end SYN_structural;
```

VHDL Netlist Coding Considerations

To understand how the VHDL netlister writes out designs, you need to be familiar with the following coding considerations:

- [Built-In Type Conversion Function](#)
- [How the Netlister Handles Custom Types](#)
- [Case Sensitivity](#)

These issues are discussed in the next sections.

Built-In Type Conversion Function

The VHDL netlister does not use packages and does not check for type equivalence. If you do not provide your own type conversion functions, the VHDL netlister translates only the logic values 0 and 1. [Example 7-5](#) shows the VHDL netlister's built-in type conversion function that converts from type `std_logic_vector` to type `my_bit`.

Example 7-5 Type Conversion Function

```
-- User-defined type declaration
attribute ENUM_ENCODING : STRING;
type my_bit is (A, B, C) ;
attribute ENUM_ENCODING of my_bit : type is "00 01 11";

-- std_logic_vector to enum type function
function std_logic_vector_to_my_bit(arg : in std_logic_vector ( 1 to 2 ))
return my_bit is
-- synopsys built_in SYN_FEED_THRU;
begin
    case arg is
        when "00" => return A;
        when "01" => return B;
        when "11" => return C;
        when others => assert FALSE -- this should not happen.
            report "un-convertible value"
            severity warning;
            return A;
    end case;
end;
```

How the Netlister Handles Custom Types

All types you use should be resolved. If types are not resolved, the VHDL netlister uses built-in resolution functions to resolve conflicts between multiple drivers on the same signal. Use the following functions to specify your own resolution function to the VHDL netlister:

```
vhdlout_three_state_res_func
vhdlout_wired_and_res_func
vhdlout_wired_or_res_func
```

[Example 7-6](#) shows the resolution function the VHDL netlister writes out. This resolution function is used to resolve the value for multiple sources driving a signal, port, or pin.

Example 7-6 VHDL Resolution Function

```
function X( inputs : in vhdout_bit_vector_type ) return vhdout_bit_type is
-- synopsys resolution_method three_state
variable retval: vhdout_bit_type;
begin
    retval := vhdout_three_state_name;
    for i in inputs'range loop
        if inputs(i) /= vhdout_three_state_name then
            if ( retval = vhdout_three_state_name ) then
                retval := inputs(i);
            else
                retval := vhdout_unknown_name
                exit;
            end if;
        end if;
    end loop;
    return retval;
end X;
```

[Example 7-7](#) shows a simplified description of the process flow for the resolution function in [Example 7-6](#).

In this example, the `vhdlout_three_state_name` and `vhdlout_unknown_name` variables use the default values `z` and `x`, respectively, for brevity. You can set the values for both of these variables.

Example 7-7 Pseudocode of VHDL Resolution Function

```
if the only logic values are 'z'
    return 'z'
if there are 'z's and another logic value
    return the other logic value
if there are non-'z' logic values that are different
    return 'x'
else
    return the common logic value
```

Case Sensitivity

The VHDL netlist writer is case insensitive. For example, `\A` and `\a` are considered to be unique identifiers; however, the VHDL netlist writer considers them to be the same identifier.

Note that the VHDL netlist reader is case sensitive and supports the VHDL 93 standard.

A

Examples

Source files for examples demonstrating the use of VHDL are typically in the /synopsys/syn/examples/vhdl directory. These examples are included in the following sections:

- [Read-Only Memory](#)
- [Waveform Generator](#)
- [Definable-Width Adder-Subtractor](#)
- [Count Zeros—Combinational Version](#)
- [Count Zeros—Sequential Version](#)
- [Soft Drink Machine—State Machine Version](#)
- [Soft Drink Machine—Count Nickels Version](#)
- [FSM Example: Moore Machine](#)
- [FSM Example: Mealy Machine](#)
- [Carry-Lookahead Adder](#)
- [Serial-to-Parallel Converter—Counting Bits](#)
- [Serial-to-Parallel Converter—Shifting Bits](#)
- [Programmable Logic Arrays](#)

Read-Only Memory

[Example A-1 on page A-3](#) shows how you can define a read-only memory in VHDL. The ROM is defined as an array constant, ROM. Each line of the constant array specification defines the contents of one ROM address. To read from the ROM, index into the array.

The number of ROM storage locations and bit-width is easy to change. The subtype ROM_RANGE specifies that the ROM contains storage locations 0 to 7. The constant ROM_WIDTH specifies that the ROM is 5 bits wide.

After you define a ROM constant, you can index into that constant many times to read many values from the ROM. If the ROM address is computable, no logic is built and the appropriate data value is inserted. If the ROM address is not computable, logic is built for each index into the value. For this reason, consider resource sharing when using a ROM. In [Example A-1 on page A-3](#), ADDR is not computable, so logic is synthesized to compute the value.

Presto VHDL does not actually instantiate a typical array-logic ROM, such as those available from ASIC vendors. Instead, it creates the ROM from random logic gates (AND, OR, NOT, and so on). This type of implementation is preferable for small ROMs and for ROMs that are regular. For very large ROMs, consider using an array-logic implementation supplied by your ASIC vendor.


[Example A-1 on page A-3](#) shows the VHDL source code and the synthesized circuit schematic.

Example A-1 Implementation of a ROM in Random Logic

```

package ROMS is
  -- declare a 5x8 ROM called ROM
  constant ROM_WIDTH: INTEGER := 5;
  subtype ROM_WORD is BIT_VECTOR (1 to ROM_WIDTH);
  subtype ROM_RANGE is INTEGER range 0 to 7;
  type ROM_TABLE is array (0 to 7) of ROM_WORD;
  constant ROM: ROM_TABLE := ROM_TABLE'(
    ROM_WORD'("10101"),      -- ROM contents
    ROM_WORD'("10000"),
    ROM_WORD'("11111"),
    ROM_WORD'("11111"),
    ROM_WORD'("10000"),
    ROM_WORD'("10101"),
    ROM_WORD'("11111"),
    ROM_WORD'("11111"));
end ROMS;
use work.ROMS.all;  -- Entity that uses ROM
entity ROM_5x8 is
  port(ADDR: in ROM_RANGE;
        DATA: out ROM_WORD);
end;
architecture BEHAVIOR of ROM_5x8 is
begin
  DATA <= ROM(ADDR);      -- Read from the ROM
end BEHAVIOR;

```

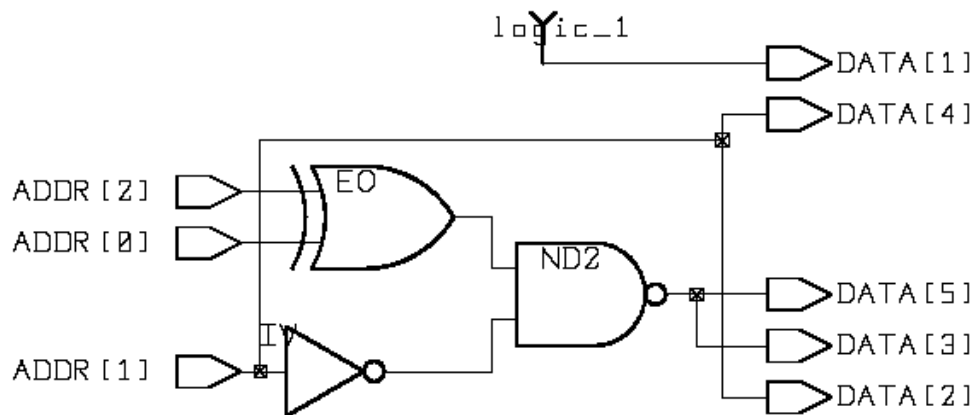


Waveform Generator

The waveform generator example shows how to use the previous ROM example to implement a waveform generator.

Assume that you want to produce the waveform output shown in [Figure A-1](#).

1. First, declare a ROM wide enough to hold the output signals (4 bits) and deep enough to hold all time steps (0 to 12, for a total of 13).
2. Next, define the ROM so that each time step is represented by an entry in the ROM.
3. Finally, create a counter that cycles through the time steps (ROM addresses), generating the waveform at each time step.

Figure A-1 Waveform Example

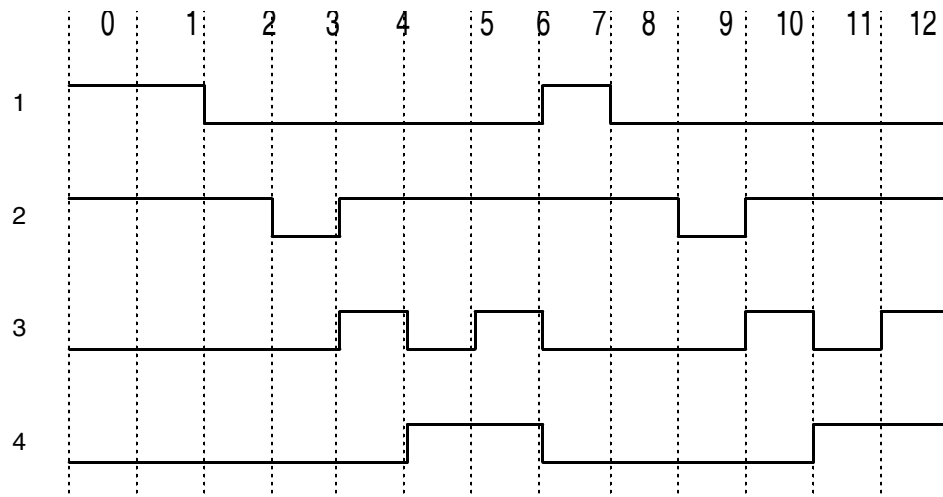

Example A-2 shows an implementation for the waveform generator. It consists of a ROM, a counter, and some simple reset logic.

Example A-2 Implementation of a Waveform Generator

```

package ROMS is
  -- a 4x13 ROM called ROM that contains the waveform
  constant ROM_WIDTH: INTEGER := 4;
  subtype ROM_WORD is BIT_VECTOR (1 to ROM_WIDTH);
  subtype ROM_RANGE is INTEGER range 0 to 12;
  type ROM_TABLE is array (0 to 12) of ROM_WORD;
  constant ROM: ROM_TABLE := ROM_TABLE'(
    "1100",    -- time step 0
    "1100",    -- time step 1
    "0100",    -- time step 2
    "0000",    -- time step 3
    "0110",    -- time step 4
    "0101",    -- time step 5
    "0111",    -- time step 6
    "1100",    -- time step 7
    "0100",    -- time step 8
    "0000",    -- time step 9
    "0110",    -- time step 10
    "0101",    -- time step 11
    "0111");   -- time step 12
end ROMS;

use work.ROMS.all;
entity WAVEFORM is          -- Waveform generator
  port(CLOCK: in BIT;
        RESET: in BOOLEAN;
        WAVES: out ROM_WORD);
end;

architecture BEHAVIOR of WAVEFORM is
  signal STEP: ROM_RANGE;
begin

  TIMESTEP_COUNTER: process  -- Time stepping process
  begin
    wait until CLOCK'event and CLOCK = '1';
    if RESET then             -- Detect reset
      STEP <= ROM_RANGE'low;   -- Restart
    elsif STEP = ROM_RANGE'high then -- Finished?
      STEP <= ROM_RANGE'high; -- Hold at last value
    -- STEP <= ROM_RANGE'low; -- Continuous wave
    else
      STEP <= STEP + 1;        -- Continue stepping
    end if;
  end process TIMESTEP_COUNTER;

  WAVES <= ROM(STEP);
end BEHAVIOR;

```

When the counter STEP reaches the end of the ROM, STEP stops, generates the last value, then waits until a reset. To make the sequence automatically repeat, remove the following statement:

```
STEP <= ROM_RANGE'high; -- Hold at last value
```

Use the following statement instead (commented out in [Example A-2 on page A-5](#)):

```
STEP <= ROM_RANGE'low; -- Continuous wave
```

Definable-Width Adder-Subtractor

VHDL lets you create functions for use with array operands of any size. This example shows an adder-subtractor circuit that, when called, is adjusted to fit the size of its operands.

[Example A-3](#) shows an adder-subtractor defined for two unconstrained arrays of bits (type `BIT_VECTOR`) in a package named `MATH`. When an unconstrained array type is used for an argument to a subprogram, the actual constraints of the array are taken from the actual parameter values in a subprogram call.

Example A-3 MATH Package for [Example A-4 on page A-7](#)

```
package MATH is
  function ADD_SUB(L, R: BIT_VECTOR; ADD: BOOLEAN)
    return BIT_VECTOR;
  -- Add or subtract two BIT_VECTORS of equal length
end MATH;

package body MATH is
  function ADD_SUB(L, R: BIT_VECTOR; ADD: BOOLEAN)
    return BIT_VECTOR is
    variable CARRY: BIT;
    variable A, B, SUM:
      BIT_VECTOR(L'length-1 downto 0);
  begin
    if ADD then
      -- Prepare for an "add" operation
      A := L;
      B := R;
      CARRY := '0';
    else
      -- Prepare for a "subtract" operation
      A := L;
      B := not R;
      CARRY := '1';
    end if;

    -- Create a ripple carry chain; sum up bits
    for i in 0 to A'left loop
```

```

        SUM(i) := A(i) xor B(i) xor CARRY;
        CARRY := (A(i) and B(i)) or
                  (A(i) and CARRY) or
                  (CARRY and B(i));
    end loop;
    return SUM;          -- Result
end;
end MATH;

```

Within the function `ADD_SUB`, two temporary variables, `A` and `B`, are declared. These variables are declared to be the same length as `L` (and necessarily, `R`) but have their index constraints normalized to `L'length-1` downto 0. After the arguments are normalized, you can create a ripple carry adder by using a for loop.

No explicit references to a fixed array length are in the function `ADD_SUB`. Instead, the VHDL array attributes `'left` and `'length` are used. These attributes allow the function to work on arrays of any length.

[Example A-4](#) shows how to use the adder-subtractor defined in the `MATH` package. In this example, the vector arguments to functions `ARG1` and `ARG2` are declared as `BIT_VECTOR(1 to 6)`. This declaration causes `ADD_SUB` to work with 6-bit arrays.

Example A-4 Implementation of a 6-Bit Adder-Subtractor

```

use work.MATH.all;

entity EXAMPLE is
    port (ARG1, ARG2: in BIT_VECTOR(1 to 6);
          ADD: in BOOLEAN;
          RESULT : out BIT_VECTOR(1 to 6));
end EXAMPLE;

architecture BEHAVIOR of EXAMPLE is
begin
    RESULT <= ADD_SUB(ARG1, ARG2, ADD);
end BEHAVIOR;

```

Count Zeros—Combinational Version

The count zeros—combinational example, [Example A-5 on page A-8](#), illustrates a design problem in which an 8-bit-wide value is given and the circuit determines two things:

- That no more than one sequence of zeros is in the value.
- The number of zeros in that sequence (if any). This computation must be completed in a single clock cycle.

The circuit produces two outputs: the number of zeros found and an error indication.

A valid input value can have at most one consecutive series of zeros. A value consisting entirely of ones is defined as a valid value. If a value is invalid, the zero counter resets to 0. For example, the value 00000000 is valid and has eight zeros; value 11000111 is valid and has three zeros; value 00111100 is invalid.

[Example A-5](#) shows the VHDL description for the circuit. It consists of a single process with a for loop that iterates across each bit in the given value. At each iteration, a temporary INTEGER variable (TEMP_COUNT) counts the number of zeros encountered. Two temporary Boolean variables (SEEN_ZERO and SEEN_TRAILING), initially false, are set to true when the beginning and end of the first sequence of zeros are detected.

If a zero is detected after the end of the first sequence of zeros (after SEEN_TRAILING is true), the zero count is reset (to 0), ERROR is set to true, and the for loop is exited.

[Example A-5](#) shows a combinational (parallel) approach to counting the zeros. The next example shows a sequential (serial) approach.

Example A-5 Count Zeros—Combinational

```
entity COUNT_COMB_VHDL is
  port(DATA: in BIT_VECTOR(7 downto 0);
        COUNT: out INTEGER range 0 to 8;
        ERROR: out BOOLEAN);
end;

architecture BEHAVIOR of COUNT_COMB_VHDL is
begin
  process(DATA)
    variable TEMP_COUNT : INTEGER range 0 to 8;
    variable SEEN_ZERO, SEEN_TRAILING : BOOLEAN;
  begin
    ERROR <= FALSE;
    SEEN_ZERO := FALSE;
    SEEN_TRAILING := FALSE;
    TEMP_COUNT := 0;
    for I in 0 to 7 loop
      if (SEEN_TRAILING and DATA(I) = '0') then
        TEMP_COUNT := 0;
        ERROR <= TRUE;
        exit;
      elsif (SEEN_ZERO and DATA(I) = '1') then
        SEEN_TRAILING := TRUE;
      elsif (DATA(I) = '0') then
        SEEN_ZERO := TRUE;
        TEMP_COUNT := TEMP_COUNT + 1;
      end if;
    end loop;

    COUNT <= TEMP_COUNT;
  end process;
```



```
end BEHAVIOR;
```

Count Zeros—Sequential Version

The count zeros—sequential example, [Example A-6 on page A-10](#), shows a sequential (clocked) variant of the preceding design (Count Zeros—Combinational Version).

The circuit now accepts the 8-bit data value serially, 1 bit per clock cycle, by using the DATA and CLK inputs. The other two inputs are

- RESET, which resets the circuit
- READ, which causes the circuit to begin accepting data bits

The circuit's three outputs are

- IS_LEGAL, which is true if the data was a valid value
- COUNT_READY, which is true at the first invalid bit or when all 8 bits have been processed
- COUNT, the number of zeros (if IS_LEGAL is true)

Note:

The output port COUNT is declared with mode BUFFER so that it can be read inside the process. OUT ports can only be written to, not read in.

Example A-6 Count Zeros—Sequential

```

entity COUNT_SEQ_VHDL is
  port(DATA, CLK: in BIT;
        RESET, READ: in BOOLEAN;
        COUNT: buffer INTEGER range 0 to 8;
        IS_LEGAL: out BOOLEAN;
        COUNT_READY: out BOOLEAN);
end;
architecture BEHAVIOR of COUNT_SEQ_VHDL is
begin
  process
    variable SEEN_ZERO, SEEN_TRAILING: BOOLEAN;
    variable BITS_SEEN: INTEGER range 0 to 7;
  begin
    wait until CLK'event and CLK = '1';

    if(RESET) then
      COUNT_READY    <= FALSE;
      IS_LEGAL        <= TRUE;           -- signal assignment
      SEEN_ZERO       := FALSE;         -- variable assignment
      SEEN_TRAILING := FALSE;
      COUNT           <= 0;
      BITS_SEEN       := 0;
    else
      if (READ) then
        if (SEEN_TRAILING and DATA = '0') then
          IS_LEGAL <= FALSE;
          COUNT <= 0;
          COUNT_READY <= TRUE;
        elsif (SEEN_ZERO and DATA = '1') then
          SEEN_TRAILING := TRUE;
        elsif (DATA = '0') then
          SEEN_ZERO := TRUE;
          COUNT <= COUNT + 1;
        end if;

        if (BITS_SEEN = 7) then
          COUNT_READY <= TRUE;
        else
          BITS_SEEN := BITS_SEEN + 1;
        end if;

      end if;      -- if (READ)
    end if;      -- if (RESET)
  end process;
end BEHAVIOR;

```

Soft Drink Machine—State Machine Version

The soft drink machine—state machine example, [Example A-7](#), is a control unit for a soft drink vending machine.

The circuit reads signals from a coin input unit and sends outputs to a change dispensing unit and a drink dispensing unit.

Here are the design parameters for [Example A-7](#) and [Example A-8 on page A-14](#):

- This example assumes that only one kind of soft drink is dispensed.
- This is a clocked design with CLK and RESET input signals.
- The price of the drink is 35 cents.
- The input signals from the coin input unit are NICKEL_IN (nickel deposited), DIME_IN (dime deposited), and QUARTER_IN (quarter deposited).
- The output signals to the change dispensing unit are NICKEL_OUT and DIME_OUT.
- The output signal to the drink dispensing unit is DISPENSE (dispense drink).

The first VHDL description for this design uses a state machine description style. The second VHDL description is in [Example A-8 on page A-14](#).

Example A-7 Soft Drink Machine—State Machine

```
library synopsys; use synopsys.attributes.all;

entity DRINK_STATE_VHDL is
  port (NICKEL_IN, DIME_IN, QUARTER_IN, RESET: BOOLEAN;
        CLK: BIT;
        NICKEL_OUT, DIME_OUT, DISPENSE: out BOOLEAN);
end;

architecture BEHAVIOR of DRINK_STATE_VHDL is
  type STATE_TYPE is (IDLE, FIVE, TEN, FIFTEEN,
                     TWENTY, TWENTY_FIVE, THIRTY, OWE_DIME);
  signal CURRENT_STATE, NEXT_STATE: STATE_TYPE;
  attribute STATE_VECTOR : STRING;
  attribute STATE_VECTOR of BEHAVIOR : architecture is
    "CURRENT_STATE";

  attribute sync_set_reset of reset : signal is "true";
  begin

    process (NICKEL_IN, DIME_IN, QUARTER_IN,
             CURRENT_STATE, RESET, CLK)
    begin
      -- Default assignments
      NEXT_STATE <= CURRENT_STATE;
```

```
NICKEL_OUT <= FALSE;
DIME_OUT <= FALSE;
DISPENSE <= FALSE;

-- Synchronous reset
if(RESET) then
    NEXT_STATE <= IDLE;
else

    -- State transitions and output logic
    case CURRENT_STATE is
        when IDLE =>
            if(NICKEL_IN) then
                NEXT_STATE <= FIVE;
            elsif(DIME_IN) then
                NEXT_STATE <= TEN;
            elsif(QUARTER_IN) then
                NEXT_STATE <= TWENTY_FIVE;
            end if;

        when FIVE =>
            if(NICKEL_IN) then
                NEXT_STATE <= TEN;
            elsif(DIME_IN) then
                NEXT_STATE <= FIFTEEN;
            elsif(QUARTER_IN) then
                NEXT_STATE <= THIRTY;
            end if;

        when TEN =>
            if(NICKEL_IN) then
                NEXT_STATE <= FIFTEEN;
            elsif(DIME_IN) then
                NEXT_STATE <= TWENTY;
            elsif(QUARTER_IN) then
                NEXT_STATE <= IDLE;
                DISPENSE <= TRUE;
            end if;

        when FIFTEEN =>
            if(NICKEL_IN) then
                NEXT_STATE <= TWENTY;
            elsif(DIME_IN) then
                NEXT_STATE <= TWENTY_FIVE;
            elsif(QUARTER_IN) then
                NEXT_STATE <= IDLE;
                DISPENSE <= TRUE;
                NICKEL_OUT <= TRUE;
            end if;

        when TWENTY =>
            if(NICKEL_IN) then
                NEXT_STATE <= TWENTY_FIVE;
            elsif(DIME_IN) then
                NEXT_STATE <= THIRTY;
            elsif(QUARTER_IN) then
```

```

        NEXT_STATE <= IDLE;
        DISPENSE <= TRUE;
        DIME_OUT <= TRUE;
    end if;

    when TWENTY_FIVE =>
        if(NICKEL_IN) then
            NEXT_STATE <= THIRTY;
        elsif(DIME_IN) then
            NEXT_STATE <= IDLE;
            DISPENSE <= TRUE;
        elsif(QUARTER_IN) then
            NEXT_STATE <= IDLE;
            DISPENSE <= TRUE;
            DIME_OUT <= TRUE;
            NICKEL_OUT <= TRUE;
        end if;

    when THIRTY =>
        if(NICKEL_IN) then
            NEXT_STATE <= IDLE;
            DISPENSE <= TRUE;
        elsif(DIME_IN) then
            NEXT_STATE <= IDLE;
            DISPENSE <= TRUE;
            NICKEL_OUT <= TRUE;
        elsif(QUARTER_IN) then
            NEXT_STATE <= OWE_DIME;
            DISPENSE <= TRUE;
            DIME_OUT <= TRUE;
        end if;

    when OWE_DIME =>
        NEXT_STATE <= IDLE;
        DIME_OUT <= TRUE;

    end case;
end if;
end process;

-- Synchronize state value with clock
-- This causes it to be stored in flip-flops
process
begin
    wait until CLK'event and CLK = '1';
    CURRENT_STATE <= NEXT_STATE;
end process;
end BEHAVIOR;

```

Soft Drink Machine—Count Nickels Version

The soft drink machine—count nickels example, [Example A-8](#), uses the same design parameters as the preceding [Example A-7 on page A-11](#) (Soft Drink Machine—State Machine Version), with the same input and output signals. In this version, a counter counts the number of nickels deposited. This counter is incremented by 1 if the deposit is a nickel, by 2 if it is a dime, and by 5 if it is a quarter.

Example A-8 Soft Drink Machine—Count Nickels

```
entity DRINK_COUNT_VHDL is
  port(NICKEL_IN, DIME_IN, QUARTER_IN, RESET: BOOLEAN;
        CLK: BIT;
        NICKEL_OUT, DIME_OUT, DISPENSE: out BOOLEAN);
end;

architecture BEHAVIOR of DRINK_COUNT_VHDL is
  signal CURRENT_NICKEL_COUNT,
        NEXT_NICKEL_COUNT: INTEGER range 0 to 7;
  signal CURRENT_RETURN_CHANGE, NEXT_RETURN_CHANGE : BOOLEAN;
begin

  process(NICKEL_IN, DIME_IN, QUARTER_IN, RESET, CLK,
        CURRENT_NICKEL_COUNT, CURRENT_RETURN_CHANGE)
    variable TEMP_NICKEL_COUNT: INTEGER range 0 to 12;
  begin
    -- Default assignments
    NICKEL_OUT <= FALSE;
    DIME_OUT <= FALSE;
    DISPENSE <= FALSE;
    NEXT_NICKEL_COUNT <= 0;
    NEXT_RETURN_CHANGE <= FALSE;

    -- Synchronous reset
    if (not RESET) then
      TEMP_NICKEL_COUNT := CURRENT_NICKEL_COUNT;

      -- Check whether money has come in
      if (NICKEL_IN) then
        -- NOTE: This design will be flattened, so
        --       these multiple adders will be optimized
        TEMP_NICKEL_COUNT := TEMP_NICKEL_COUNT + 1;
      elsif(DIME_IN) then
        TEMP_NICKEL_COUNT := TEMP_NICKEL_COUNT + 2;
      elsif(QUARTER_IN) then
        TEMP_NICKEL_COUNT := TEMP_NICKEL_COUNT + 5;
      end if;

      -- Enough deposited so far?
      if(TEMP_NICKEL_COUNT >= 7) then
        TEMP_NICKEL_COUNT := TEMP_NICKEL_COUNT - 7;
        DISPENSE <= TRUE;
      end if;

      -- Return change
      if(TEMP_NICKEL_COUNT >= 1 or
```

```
        CURRENT_RETURN_CHANGE) then
    if (TEMP_NICKEL_COUNT >= 2) then
        DIME_OUT <= TRUE;
        TEMP_NICKEL_COUNT := TEMP_NICKEL_COUNT - 2;
        NEXT_RETURN_CHANGE <= TRUE;
    end if;
    if (TEMP_NICKEL_COUNT = 1) then
        NICKEL_OUT <= TRUE;
        TEMP_NICKEL_COUNT := TEMP_NICKEL_COUNT - 1;
    end if;
end if;

    NEXT_NICKEL_COUNT <= TEMP_NICKEL_COUNT;
end if;
end process;


-- Remember the return-change flag and
-- the nickel count for the next cycle
process
begin
    wait until CLK'event and CLK = '1';
    CURRENT_RETURN_CHANGE <= NEXT_RETURN_CHANGE;
    CURRENT_NICKEL_COUNT <= NEXT_NICKEL_COUNT;
end process;

end BEHAVIOR;
```

FSM Example: Moore Machine

Figure A-2 is a diagram of a simple Moore finite state machine. It has one input (X), four internal states (S0 to S3), and one output (Z).

Figure A-2 Moore Machine Specification

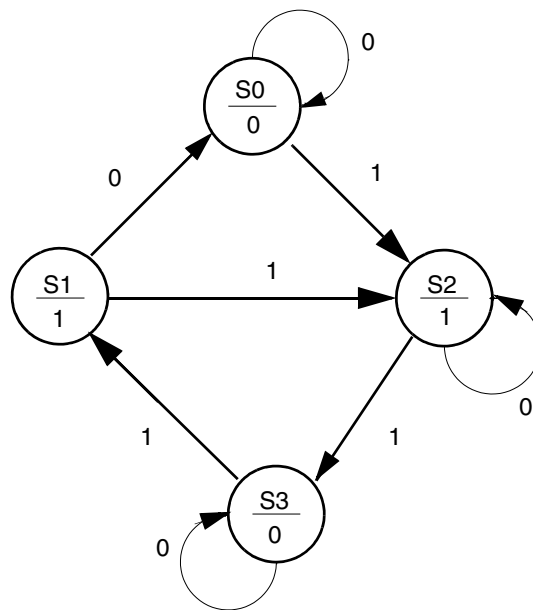

Present state	Next state		Output (Z)
	X=0	X=1	
S0	S0	S2	0
S1	S0	S2	1
S2	S2	S3	1
S3	S3	S1	0

The VHDL code implementing this finite state machine is shown in [Example A-9](#).

The machine description includes two processes. One process defines the synchronous elements of the design (state registers); the other process defines the combinational part of the design (state assignment case statement).

Example A-9 Implementation of a Moore Machine

```

entity MOORE is                                -- Moore machine
  port(X, CLOCK: in BIT;
        Z: out BIT);
end;

architecture BEHAVIOR of MOORE is
  type STATE_TYPE is (S0, S1, S2, S3);
  signal CURRENT_STATE, NEXT_STATE: STATE_TYPE;
begin

  -- Process to hold combinational logic
  COMBIN: process(CURRENT_STATE, X)
  begin
    case CURRENT_STATE is
      when S0 =>

```




```
        Z <= '0';
        if X = '0' then
            NEXT_STATE <= S0;
        else
            NEXT_STATE <= S2;
        end if;
    when S1 =>
        Z <= '1';
        if X = '0' then
            NEXT_STATE <= S0;
        else
            NEXT_STATE <= S2;
        end if;
    when S2 =>
        Z <= '1';
        if X = '0' then
            NEXT_STATE <= S2;
        else
            NEXT_STATE <= S3;
        end if;
    when S3 =>
        Z <= '0';
        if X = '0' then
            NEXT_STATE <= S3;
        else
            NEXT_STATE <= S1;
        end if;
    end case;
end process;

-- Process to hold synchronous elements (flip-flops)
SYNCH: process
begin
    wait until CLOCK'event and CLOCK = '1';
    CURRENT_STATE <= NEXT_STATE;
end process;
end BEHAVIOR;
```

FSM Example: Mealy Machine

Figure A-3 is a diagram of a simple Mealy finite state machine. The VHDL code for implementing this finite state machine is shown in Example A-10. The machine description includes two processes, as in the previous Moore machine example.

Figure A-3 Mealy Machine Specification

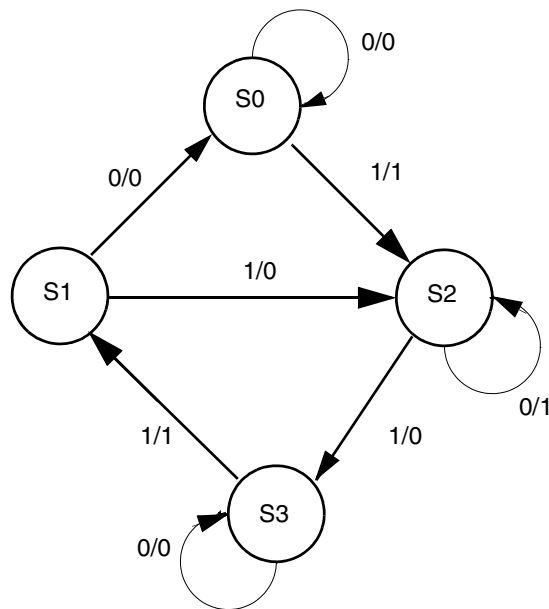

Present state	Next state		Output (Z)	
	X=0	X=1	X=0	X=1
S0	S0	S2	0	1
S1	S0	S2	0	0
S2	S2	S3	1	0
S3	S3	S1	0	1

Example A-10 Implementation of a Mealy Machine

```

entity MEALY is                                -- Mealy machine
  port(X, CLOCK: in BIT;
        Z: out BIT);
end;

architecture BEHAVIOR of MEALY is
  type STATE_TYPE is (S0, S1, S2, S3);
  signal CURRENT_STATE, NEXT_STATE: STATE_TYPE;
begin

  -- Process to hold combinational logic.
  COMBIN: process(CURRENT_STATE, X)
  begin
    case CURRENT_STATE is
      when S0 =>
        if X = '0' then
          Z <= '0';
          NEXT_STATE <= S0;
        else
          Z <= '1';
        end if;
      when S1 =>
        if X = '0' then
          Z <= '0';
          NEXT_STATE <= S0;
        else
          Z <= '0';
          NEXT_STATE <= S2;
        end if;
      when S2 =>
        if X = '0' then
          Z <= '1';
          NEXT_STATE <= S2;
        else
          Z <= '0';
          NEXT_STATE <= S3;
        end if;
      when S3 =>
        if X = '0' then
          Z <= '0';
          NEXT_STATE <= S3;
        else
          Z <= '1';
          NEXT_STATE <= S1;
        end if;
    end case;
  end process;


  CURRENT_STATE <= NEXT_STATE;
end;

```

```

        NEXT_STATE <= S2;
    end if;
    when S1 =>
        if X = '0' then
            Z <= '0';
            NEXT_STATE <= S0;
        else
            Z <= '0';
            NEXT_STATE <= S2;
        end if;
    when S2 =>
        if X = '0' then
            Z <= '1';
            NEXT_STATE <= S2;
        else
            Z <= '0';
            NEXT_STATE <= S3;
        end if;
    when S3 =>
        if X = '0' then
            Z <= '0';
            NEXT_STATE <= S3;
        else
            Z <= '1';
            NEXT_STATE <= S1;
        end if;
    end case;
end process;
-- Process to hold synchronous elements (flip-flops)
SYNCH: process
begin
    wait until CLOCK'event and CLOCK = '1';
    CURRENT_STATE <= NEXT_STATE;
end process;
end BEHAVIOR;

```

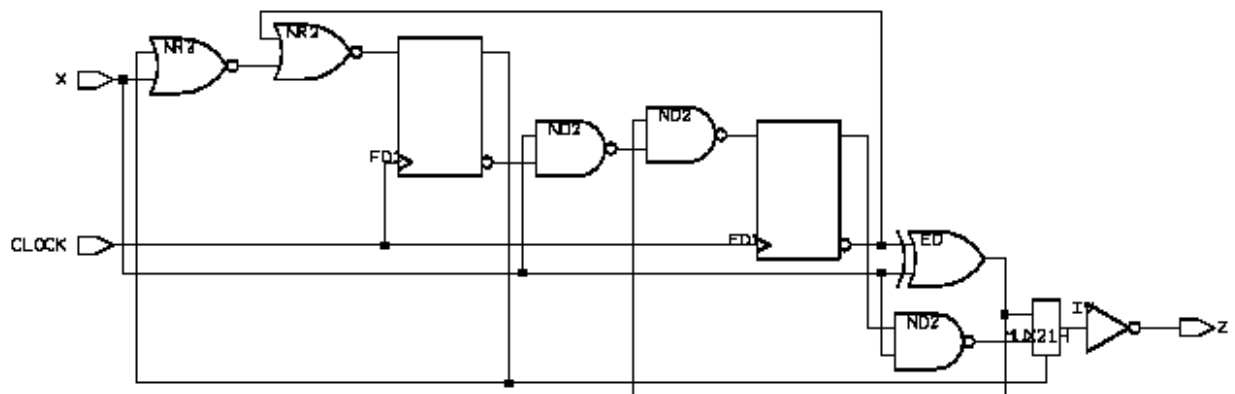

Carry-Lookahead Adder

This example uses concurrent procedure calls to build a 32-bit carry-lookahead adder. The adder is built by partitioning of the 32-bit input into eight slices of 4 bits each. Each of the eight slices computes propagate and generate values by using the PG procedure.

Propagate (output P from PG) is '1' for a bit position if that position propagates a carry from the next-lower position to the next-higher position. Generate (output G) is '1' for a bit position if that position generates a carry to the next-higher position, regardless of the carry-in from the next lower position. The carry-lookahead logic reads the carry-in, propagate, and generate information computed from the inputs. The logic computes the carry value for each bit position and makes the addition operation an XOR of the inputs and the carry values.


Carry Value Computations

The carry values are computed by a three-level tree of 4-bit carry-lookahead blocks.

- The first level of the tree computes the 32 carry values and the eight group-propagate and generate values. Each of the first-level group-propagate and generate values tells if that 4-bit slice propagates and generates carry values from the next-lower group to the next-higher group. The first-level lookahead blocks read the group carry computed at the second level.
- The second-level lookahead blocks read the group-propagate and generate information from the four first-level blocks and then compute their own group-propagate and generate information. The second-level lookahead blocks also read group carry information computed at the third level to compute the carries for each of the third-level blocks.
- The third-level block reads the propagate and generate information of the second level to compute a propagate and generate value for the entire adder. It also reads the external carry to compute each second-level carry. The carry-out for the adder is '1' if the third-level generate is '1' or if the third-level propagate is '1' and the external carry is '1'.

The third-level carry-lookahead block is capable of processing four second-level blocks. But because there are only two second-level blocks, the high-order 2 bits of the computed carry are ignored; the high-order 2 bits of the generate input to the third-level are set to 0, "00", and the propagate high-order bits are set to "11". These settings cause the unused portion to propagate carries but not to generate them. [Figure A-4](#) shows the overall structure for the carry-lookahead adder.

Figure A-4 Carry-Lookahead Adder Block Diagram

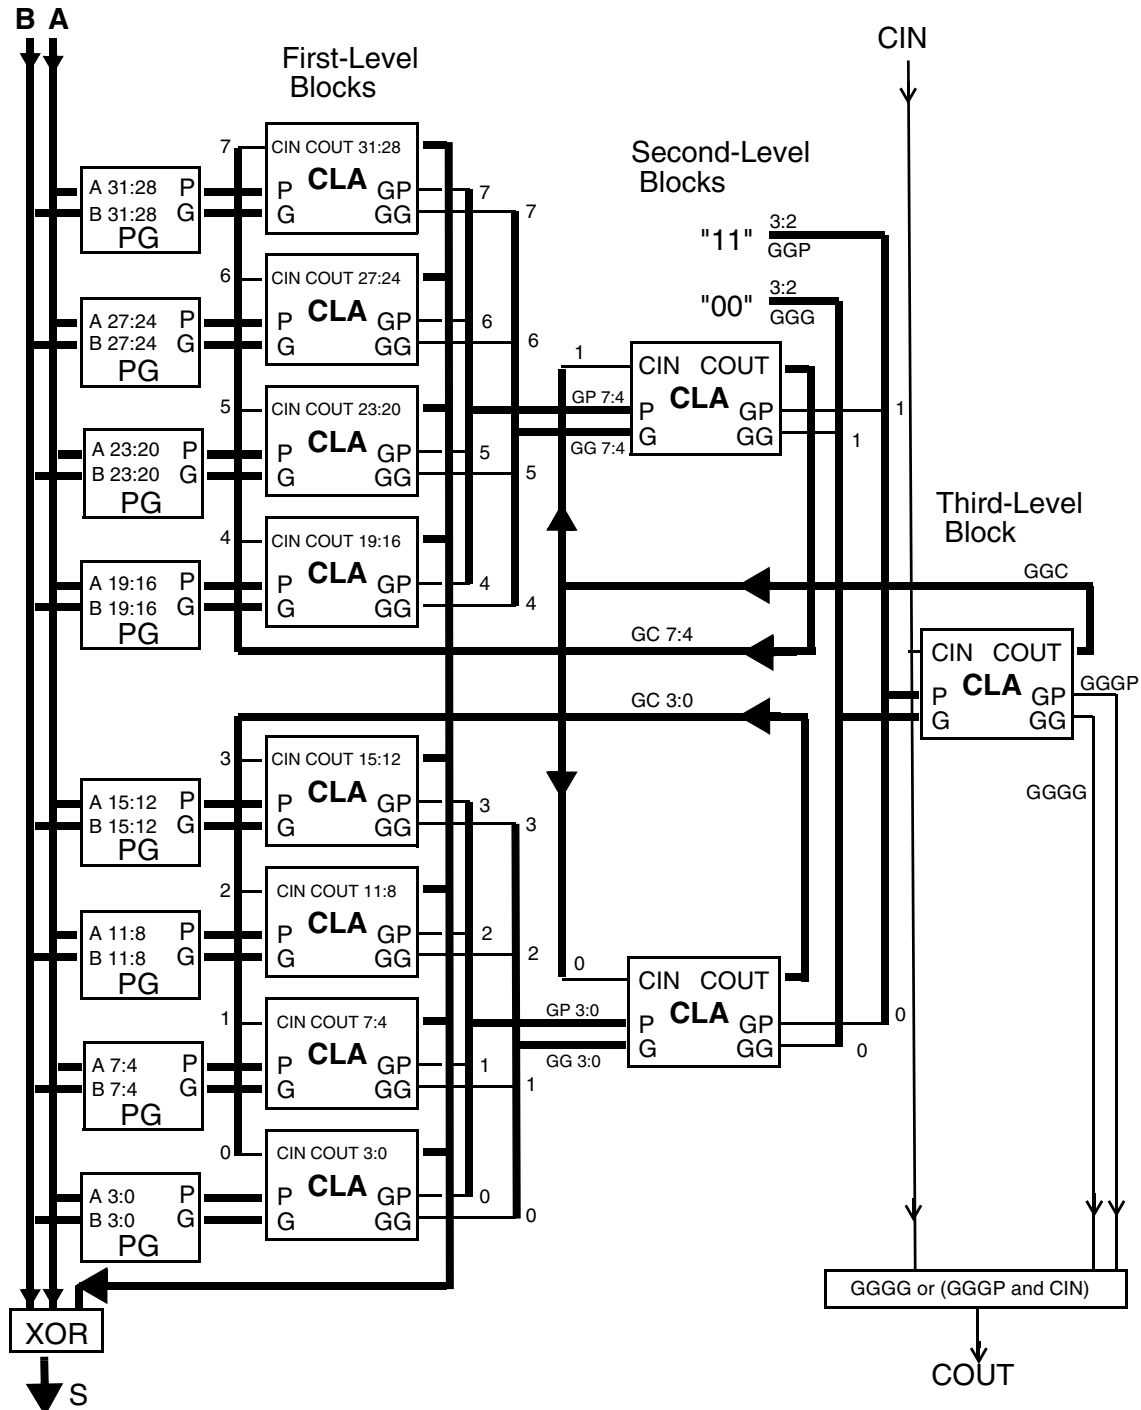

The VHDL implementation of the design in [Figure A-4](#) is accomplished with the following procedures:

CLA

Names a 4-bit carry-lookahead block.

PG

Computes first-level propagate and generate information.

SUM

Computes the sum by adding the XOR values to the inputs with the carry values computed by CLA.

BITSLICE

Collects the first-level CLA blocks, the PG computations, and the SUM. This procedure performs all the work for a 4-bit value except for the second- and third-level lookaheads.

[Example A-11](#) shows a VHDL description of the adder.

Example A-11 Carry-Lookahead Adder

```
package LOCAL is
    constant N:    INTEGER := 4;

    procedure BITSlice(
        A, B: in BIT_VECTOR(3 downto 0);
        CIN: in BIT;
        signal S: out BIT_VECTOR(3 downto 0);
        signal GP, GG: out BIT);
    procedure PG(
        A, B: in BIT_VECTOR(3 downto 0);
        P, G: out BIT_VECTOR(3 downto 0));
    function SUM(A, B, C: BIT_VECTOR(3 downto 0))
        return BIT_VECTOR;
    procedure CLA(
        P, G: in BIT_VECTOR(3 downto 0);
        CIN: in BIT;
        C: out BIT_VECTOR(3 downto 0);
        signal GP, GG: out BIT);
end LOCAL;

package body LOCAL is
    -----
    -- Compute sum and group outputs from a, b, cin
    -----

    procedure BITSlice(
        A, B: in BIT_VECTOR(3 downto 0);
        CIN: in BIT;
        signal S: out BIT_VECTOR(3 downto 0);
        signal GP, GG: out BIT) is

        variable P, G, C: BIT_VECTOR(3 downto 0);
    begin
        PG(A, B, P, G);
```

```

    CLA(P, G, CIN, C, GP, GG);
    S <= SUM(A, B, C);
end;

-----
-- Compute propagate and generate from input bits
-----

procedure PG(A, B: in BIT_VECTOR(3 downto 0);
             P, G: out BIT_VECTOR(3 downto 0)) is

begin
    P := A or B;
    G := A and B;
end;

-----
-- Compute sum from the input bits and the carries
-----

function SUM(A, B, C: BIT_VECTOR(3 downto 0))
    return BIT_VECTOR is

begin
    return(A xor B xor C);
end;

-----
-- 4-bit carry-lookahead block
-----

procedure CLA(
    P, G: in BIT_VECTOR(3 downto 0);
    CIN: in BIT;
    C: out BIT_VECTOR(3 downto 0);
    signal GP, GG: out BIT) is
    variable TEMP_GP, TEMP_GG, LAST_C: BIT;
begin
    TEMP_GP := P(0);
    TEMP_GG := G(0);
    LAST_C := CIN;
    C(0) := CIN;

    for I in 1 to N-1 loop
        TEMP_GP := TEMP_GP and P(I);
        TEMP_GG := (TEMP_GG and P(I)) or G(I);
        LAST_C := (LAST_C and P(I-1)) or G(I-1);
        C(I) := LAST_C;
    end loop;

    GP <= TEMP_GP;
    GG <= TEMP_GG;
end;
end LOCAL;

use WORK.LOCAL.ALL;

-----

```

```

-- A 32-bit carry-lookahead adder
-----

entity ADDER is
  port(A, B: in BIT_VECTOR(31 downto 0);
        CIN: in BIT;
        S: out BIT_VECTOR(31 downto 0);
        COUT: out BIT);
end ADDER;
architecture BEHAVIOR of ADDER is

  signal GG,GP,GC: BIT_VECTOR(7 downto 0);
    -- First-level generate, propagate, carry
  signal GGG, GGP, GGC: BIT_VECTOR(3 downto 0);
    -- Second-level gen, prop, carry
  signal GGGG, GGGP: BIT;
    -- Third-level gen, prop

begin
  -- Compute Sum and 1st-level Generate and Propagate
  -- Use input data and the 1st-level Carries computed
  -- later.
  BITSlice(A( 3 downto 0),B( 3 downto 0),GC(0),
            S( 3 downto 0),GP(0), GG(0));
  BITSlice(A( 7 downto 4),B( 7 downto 4),GC(1),
            S( 7 downto 4),GP(1), GG(1));
  BITSlice(A(11 downto 8),B(11 downto 8),GC(2),
            S(11 downto 8),GP(2), GG(2));
  BITSlice(A(15 downto 12),B(15 downto 12),GC(3),
            S(15 downto 12),GP(3), GG(3));
  BITSlice(A(19 downto 16),B(19 downto 16),GC(4),
            S(19 downto 16),GP(4), GG(4));
  BITSlice(A(23 downto 20),B(23 downto 20),GC(5),
            S(23 downto 20),GP(5), GG(5));
  BITSlice(A(27 downto 24),B(27 downto 24),GC(6),
            S(27 downto 24),GP(6), GG(6));
  BITSlice(A(31 downto 28),B(31 downto 28),GC(7),
            S(31 downto 28),GP(7), GG(7));

  -- Compute first-level Carries and second-level
  -- generate and propagate.
  -- Use first-level Generate, Propagate, and
  -- second-level carry.
  process(GP, GG, GGC)
    variable TEMP: BIT_VECTOR(3 downto 0);
  begin
    CLA(GP(3 downto 0), GG(3 downto 0), GGC(0), TEMP,
        GGP(0), GGG(0));
    GC(3 downto 0) <= TEMP;
  end process;

  process(GP, GG, GGC)
    variable TEMP: BIT_VECTOR(3 downto 0);
  begin
    CLA(GP(7 downto 4), GG(7 downto 4), GGC(1), TEMP,
        GGP(1), GGG(1));
    GC(7 downto 4) <= TEMP;
  end process;

```



```

-- Compute second-level Carry and third-level
--   Generate and Propagate
-- Use second-level Generate, Propagate and Carry-in
--   (CIN)
process(GGP, GGG, CIN)
  variable TEMP: BIT_VECTOR(3 downto 0);
begin
  CLA(GGP, GGG, CIN, TEMP, GGGP, GGGG);
  GGC <= TEMP;
end process;

-- Assign unused bits of second-level Generate and
--   Propagate
GGP(3 downto 2) <= "11";
GGG(3 downto 2) <= "00";

-- Compute Carry-out (COUT)
-- Use third-level Generate and Propagate and
--   Carry-in (CIN).
COUT <= GGGG or (GGGP and CIN);
end BEHAVIOR;

```

Implementation

In the carry-lookahead adder implementation, procedures perform the computation of the design. The procedures can also be in the form of separate entities and used by component instantiation, producing a hierarchical design. Presto VHDL does not collapse a hierarchy of entities, but it does collapse the procedure call hierarchy into one design.

The keyword *signal* is included before some of the interface parameter declarations. This keyword is required for the out formal parameters when the actual parameters must be signals.

The output parameter C from the CLA procedure is not declared as a signal; thus, it is not allowed in a concurrent procedure call. Only signals can be used in such calls. To overcome this problem, subprocesses are used, declaring a temporary variable TEMP. TEMP receives the value of the C parameter and assigns it to the appropriate signal (a generally useful technique).

Serial-to-Parallel Converter—Counting Bits

This example shows the design of a serial-to-parallel converter that reads a serial, bit-stream input and produces an 8-bit output.

The design reads the following inputs:

SERIAL_IN

The serial input data.

RESET

The input that, when it is '1', causes the converter to reset. All outputs are set to 0, and the converter is prepared to read the next serial word.

CLOCK

The value of RESET and SERIAL_IN, which is read on the positive transition of this clock. Outputs of the converter are also valid only on positive transitions.

The design produces the following outputs:

PARALLEL_OUT

The 8-bit value read from the SERIAL_IN port.

READ_ENABLE

The output that, when it is '1' on the positive transition of CLOCK, causes the data on PARALLEL_OUT to be read.

PARITY_ERROR

The output that, when it is '1' on the positive transition of CLOCK, indicates that a parity error has been detected on the SERIAL_IN port. When a parity error is detected, the converter halts until restarted by the RESET port.

Input Format


When no data is being transmitted to the serial port, keep it at a value of '0'. Each 8-bit value requires 10 clock cycles to read it. On the 11th clock cycle, the parallel output value can be read.

In the first cycle, a '1' is placed on the serial input. This assignment indicates that an 8-bit value follows. The next 8 cycles transmit each bit of the value. The most significant bit is transmitted first. The 10th cycle transmits the parity of the 8-bit value. It must be '0' if an even number of '1' values are in the 8-bit data, and '1' otherwise. If the converter detects a parity error, it sets the PARITY_ERROR output to '1' and waits until the value is reset.

On the 11th cycle, the READ_ENABLE output is set to '1' and the 8-bit value can be read from the PARALLEL_OUT port. If the SERIAL_IN port has a '1' on the 11th cycle, another 8-bit value is read immediately; otherwise, the converter waits until SERIAL_IN goes to '1'.

Figure A-5 shows the timing of this design.

Figure A-5 Sample Waveform Through the Converter

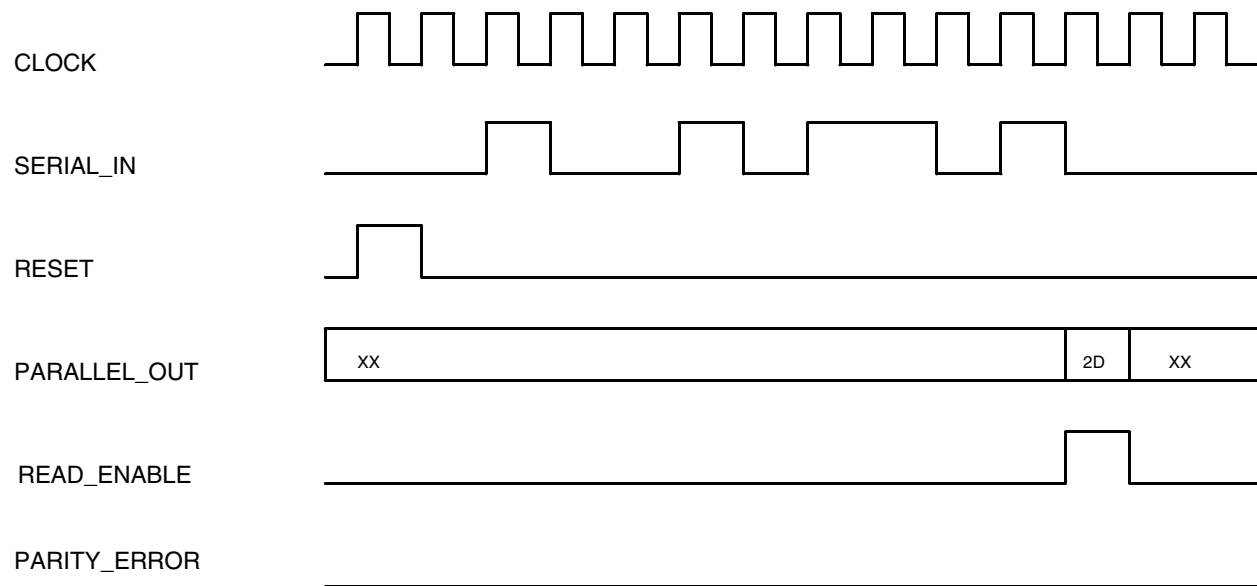

Implementation Details

The implementation of the converter is as a four-state finite-state machine with synchronous reset. When a reset is detected, the converter enters a WAIT_FOR_START state. Description of the states follow.

WAIT_FOR_START

Stay in this state until a '1' is detected on the serial input. When a '1' is detected, clear the PARALLEL_OUT registers and go to the READ_BITS state.

READ_BITS

If the value of the current_bit_position counter is 8, all 8 bits have been read. Check the computed parity with the transmitted parity. If it is correct, go to the ALLOW_READ state; otherwise, go to the PARITY_ERROR state.

If all 8 bits have not yet been read, set the appropriate bit in the PARALLEL_OUT buffer to the SERIAL_IN value, compute the parity of the bits read so far, and increment the current_bit_position.

ALLOW_READ

This is the state where the outside world reads the PARALLEL_OUT value. When that value is read, the design returns to the WAIT_FOR_START state.

PARITY_ERROR_DETECTED

In this state, the PARITY_ERROR output is set to '1' and nothing else is done.

This design has four values stored in registers:

CURRENT_STATE

Remembers the state as of the last clock edge.

CURRENT_BIT_POSITION

Remembers how many bits have been read so far.

CURRENT_PARITY

Keeps a running XOR of the bits read.

CURRENT_PARALLEL_OUT

Stores each parallel bit as it is found.

The design has two processes: the combinational NEXT_ST containing the combinational logic and the sequential SYNCH that is clocked.

NEXT_ST performs all the computations and state assignments. The NEXT_ST process starts by assigning default values to all the signals it drives. This assignment guarantees that all signals are driven under all conditions. Next, the RESET input is processed. If RESET is not active, a case statement determines the current state and its computations. State transitions are performed by assignment of the next state's value you want to the NEXT_STATE signal.

The serial-to-parallel conversion itself is performed by these two statements in the NEXT_ST process:

```
NEXT_PARALLEL_OUT(CURRENT_BIT_POSITION) <= SERIAL_IN;
NEXT_BIT_POSITION <= CURRENT_BIT_POSITION + 1;
```

The first statement assigns the current serial input bit to a particular bit of the parallel output. The second statement increments the next bit position to be assigned.

SYNCH registers and updates the stored values previously described. Each registered signal has two parts, NEXT_... and CURRENT_... :

NEXT_...

Signals hold values computed by the NEXT_ST process.

CURRENT_...

Signals hold the values driven by the SYNCH process. The CURRENT_... signals hold the values of the NEXT_... signals as of the last clock edge.

[Example A-12](#) shows a VHDL description of the converter.

Example A-12 Serial-to-Parallel Converter—Counting Bits

```
-- Serial-to-Parallel Converter, counting bits

package TYPES is
  -- Declares types used in the rest of the design
  type STATE_TYPE is (WAIT_FOR_START,
                      READ_BITS,
                      PARITY_ERROR_DETECTED,
                      ALLOW_READ);
  constant PARALLEL_BIT_COUNT: INTEGER := 8;
  subtype PARALLEL_RANGE is INTEGER
    range 0 to (PARALLEL_BIT_COUNT-1);
  subtype PARALLEL_TYPE is BIT_VECTOR(PARALLEL_RANGE);
end TYPES;

use WORK.TYPES.ALL;      -- Use the TYPES package

entity SER_PAR is        -- Declare the interface
  port(SERIAL_IN, CLOCK, RESET: in BIT;
        PARALLEL_OUT: out PARALLEL_TYPE;
        PARITY_ERROR, READ_ENABLE: out BIT);
end;

architecture BEHAVIOR of SER_PAR is
  -- Signals for stored values
  signal CURRENT_STATE, NEXT_STATE: STATE_TYPE;
  signal CURRENT_PARITY, NEXT_PARITY: BIT;
  signal CURRENT_BIT_POSITION, NEXT_BIT_POSITION:
    INTEGER range PARALLEL_BIT_COUNT downto 0;
  signal CURRENT_PARALLEL_OUT, NEXT_PARALLEL_OUT:
    PARALLEL_TYPE;
begin
  NEXT_ST: process(SERIAL_IN, CURRENT_STATE, RESET,
                  CURRENT_BIT_POSITION, CURRENT_PARITY,
                  CURRENT_PARALLEL_OUT)
  -- This process computes all outputs, the next
  -- state, and the next value of all stored values
  begin
    PARITY_ERROR <= '0'; -- Default values for all
    READ_ENABLE <= '0'; -- outputs and stored values
    NEXT_STATE <= CURRENT_STATE;
    NEXT_BIT_POSITION <= 0;
    NEXT_PARITY <= '0';
    NEXT_PARALLEL_OUT <= CURRENT_PARALLEL_OUT;

    if (RESET = '1') then      -- Synchronous reset
      NEXT_STATE <= WAIT_FOR_START;
    else
      case CURRENT_STATE is    -- State processing
        when WAIT_FOR_START =>
```

```

        if (SERIAL_IN = '1') then
            NEXT_STATE <= READ_BITS;
            NEXT_PARALLEL_OUT <=
                PARALLEL_TYPE'(others=>'0');
        end if;
    when READ_BITS =>
        if (CURRENT_BIT_POSITION =
            PARALLEL_BIT_COUNT) then
            if (CURRENT_PARITY = SERIAL_IN) then
                NEXT_STATE <= ALLOW_READ;
                READ_ENABLE <= '1';
            else
                NEXT_STATE <= PARITY_ERROR_DETECTED;
            end if;
        else
            NEXT_PARALLEL_OUT(CURRENT_BIT_POSITION) <=
                SERIAL_IN;
            NEXT_BIT_POSITION <=
                CURRENT_BIT_POSITION + 1;
            NEXT_PARITY <= CURRENT_PARITY xor
                SERIAL_IN;
        end if;
    when PARITY_ERROR_DETECTED =>
        PARITY_ERROR <= '1';
    when ALLOW_READ =>
        NEXT_STATE <= WAIT_FOR_START;
    end case;
end if;
end process;

SYNCH: process
    -- This process remembers the stored values
    -- across clock cycles
begin
    wait until CLOCK'event and CLOCK = '1';
    CURRENT_STATE <= NEXT_STATE;
    CURRENT_BIT_POSITION <= NEXT_BIT_POSITION;
    CURRENT_PARITY <= NEXT_PARITY;
    CURRENT_PARALLEL_OUT <= NEXT_PARALLEL_OUT;
end process;

PARALLEL_OUT <= CURRENT_PARALLEL_OUT;

end BEHAVIOR;

```

Serial-to-Parallel Converter—Shifting Bits

This example describes another implementation of the serial-to-parallel converter in the last example. This design performs the same function as the previous one but uses a different algorithm to do the conversion.

The previous implementation used a counter to indicate the bit of the output that was set when a new serial bit was read. In this implementation, the serial bits are shifted into place. Before the conversion occurs, a '1' is placed in the least-significant bit position. When that '1' is shifted out of the most significant position (position 0), the signal NEXT_HIGH_BIT is set to '1' and the conversion is complete.

[Example A-13](#) shows the listing of the second implementation. The differences are highlighted in bold. The differences relate to the removal of the ..._BIT_POSITION signals, the addition of ..._HIGH_BIT signals, and the change in the way NEXT_PARALLEL_OUT is computed.

Example A-13 Serial-to-Parallel Converter—Shifting Bits

```
package TYPES is
  -- Declares types used in the rest of the design
  type STATE_TYPE is (WAIT_FOR_START,
                      READ_BITS,
                      PARITY_ERROR_DETECTED,
                      ALLOW_READ);
  constant PARALLEL_BIT_COUNT: INTEGER := 8;
  subtype PARALLEL_RANGE is INTEGER
    range 0 to (PARALLEL_BIT_COUNT-1);
  subtype PARALLEL_TYPE is BIT_VECTOR(PARALLEL_RANGE);
end TYPES;

use WORK.TYPES.ALL;      -- Use the TYPES package

entity SER_PAR is        -- Declare the interface
  port(SERIAL_IN, CLOCK, RESET: in BIT;
        PARALLEL_OUT: out PARALLEL_TYPE;
        PARITY_ERROR, READ_ENABLE: out BIT);
end;

architecture BEHAVIOR of SER_PAR is
  -- Signals for stored values
  signal CURRENT_STATE, NEXT_STATE: STATE_TYPE;

  signal CURRENT_PARITY, NEXT_PARITY: BIT;
  signal CURRENT_HIGH_BIT, NEXT_HIGH_BIT: BIT;
  signal CURRENT_PARALLEL_OUT, NEXT_PARALLEL_OUT:
    PARALLEL_TYPE;
begin

  NEXT_ST: process(SERIAL_IN, CURRENT_STATE, RESET,
                  CURRENT_HIGH_BIT, CURRENT_PARITY,
                  CURRENT_PARALLEL_OUT)
    -- This process computes all outputs, the next
```

```

-- state, and the next value of all stored values
begin
  PARITY_ERROR <= '0'; -- Default values for all
  READ_ENABLE <= '0'; -- outputs and stored values
  NEXT_STATE <= CURRENT_STATE;
  NEXT_HIGH_BIT <= '0';
  NEXT_PARITY <= '0';
  NEXT_PARALLEL_OUT <= PARALLEL_TYPE('others=>'0');
  if(RESET = '1') then -- Synchronous reset
    NEXT_STATE <= WAIT_FOR_START;
  else
    case CURRENT_STATE is -- State processing
      when WAIT_FOR_START =>
        if (SERIAL_IN = '1') then
          NEXT_STATE <= READ_BITS;
          NEXT_PARALLEL_OUT <=
            PARALLEL_TYPE('others=>'0');
        end if;
      when READ_BITS =>
        if (CURRENT_HIGH_BIT = '1') then
          if (CURRENT_PARITY = SERIAL_IN) then
            NEXT_STATE <= ALLOW_READ;
            READ_ENABLE <= '1';
          else
            NEXT_STATE <= PARITY_ERROR_DETECTED;
          end if;
        else
          NEXT_HIGH_BIT <= CURRENT_PARALLEL_OUT(0);
          NEXT_PARALLEL_OUT <=
            CURRENT_PARALLEL_OUT(
              1 to PARALLEL_BIT_COUNT-1) &
              SERIAL_IN;
          NEXT_PARITY <= CURRENT_PARITY xor
            SERIAL_IN;
        end if;
      when PARITY_ERROR_DETECTED =>
        PARITY_ERROR <= '1';
      when ALLOW_READ =>
        NEXT_STATE <= WAIT_FOR_START;
    end case;
  end if;
end process;

SYNCH: process
  -- This process remembers the stored values
  -- across clock cycles
begin
  wait until CLOCK'event and CLOCK = '1';
  CURRENT_STATE <= NEXT_STATE;
  CURRENT_HIGH_BIT <= NEXT_HIGH_BIT;
  CURRENT_PARITY <= NEXT_PARITY;
  CURRENT_PARALLEL_OUT <= NEXT_PARALLEL_OUT;
end process;

PARALLEL_OUT <= CURRENT_PARALLEL_OUT;

end BEHAVIOR;

```


Note:

The synthesized schematic for the shifter implementation is much simpler than that of the previous count implementation in [Example A-12 on page A-29](#). It is simpler because the shifter algorithm is inherently easier to implement.

With the count algorithm, each of the flip-flops holding the PARALLEL_OUT bits needed logic that decoded the value stored in the BIT_POSITION flip-flops to see when to route in the value of SERIAL_IN. Also, the BIT_POSITION flip-flops needed an incrementer to compute their next value.

In contrast, the shifter algorithm requires neither an incrementer nor flip-flops to hold BIT_POSITION. Additionally, the logic in front of most PARALLEL_OUT bits needs to read only the value of the previous flip-flop or '0'. The value depends on whether bits are currently being read. In the shifter algorithm, the SERIAL_IN port needs to be connected only to the least significant bit (number 7) of the PARALLEL_OUT flip-flops.

These two implementations illustrate the importance of designing efficient algorithms. Both work properly, but the shifter algorithm produces a faster, more area-efficient design.

Programmable Logic Arrays

This example shows a way to build programmable logic arrays (PLAs) in VHDL. The PLA function uses an input lookup vector as an index into a constant PLA table and then returns the output vector specified by the PLA.

The PLA table is an array of PLA rows, where each row is an array of PLA elements. Each element is either a one, a zero, a minus, or a space ('1', '0', '-', or ' '). The table is split between an input plane and an output plane. The input plane is specified by 0s, 1s, and minuses. The output plane is specified by 0s and 1s. The two planes' values are separated by a space.

In the PLA function, the output vector is first initialized to be all 0s. When the input vector matches an input plane in a row of the PLA table, the 1s in the output plane are assigned to the corresponding bits in the output vector. A match is determined as follows:

- If a 0 or 1 is in the input plane, the input vector must have the same value in the same position.
- If a minus is in the input plane, it matches any input vector value at that position.

The generic PLA table types and the PLA function are defined in a package named LOCAL. An entity PLA_VHDL that uses LOCAL needs only to specify its PLA table as a constant, then call the PLA function.

The PLA function does not explicitly depend on the size of the PLA. To change the size of the PLA, change the initialization of the TABLE constant and the initialization of the constants INPUT_COUNT, OUTPUT_COUNT, and ROW_COUNT. In [Example A-14](#), these constants are initialized to a PLA equivalent to the ROM shown previously ([Example A-1 on page A-3](#)). Accordingly, the synthesized schematic is the same as that of the ROM, with one difference: in [Example A-1](#), the DATA output port range is 1 to 5; in [Example A-14](#), the OUT_VECTOR output port range is 4 down to 0.

[Example A-14](#) shows the capabilities of VHDL. It is more efficient to define the PLA directly by using the PLA input format. See the *Design Compiler Reference Manual: Optimization and Timing Analysis* for more information about the PLA input format.

Example A-14 Programmable Logic Array

```
package LOCAL is
  constant INPUT_COUNT: INTEGER := 3;
  constant OUTPUT_COUNT: INTEGER := 5;
  constant ROW_COUNT: INTEGER := 6;
  constant ROW_SIZE: INTEGER := INPUT_COUNT +
                                OUTPUT_COUNT + 1;

  type PLA_ELEMENT is ('1', '0', '-', ' ');
  type PLA_VECTOR is
    array (INTEGER range <>) of PLA_ELEMENT;
  subtype PLA_ROW is
    PLA_VECTOR(ROW_SIZE - 1 downto 0);
  subtype PLA_OUTPUT is
    PLA_VECTOR(OUTPUT_COUNT - 1 downto 0);
  type PLA_TABLE is
    array(ROW_COUNT - 1 downto 0) of PLA_ROW;

  function PLA(IN_VECTOR: BIT_VECTOR;
               TABLE: PLA_TABLE)
    return BIT_VECTOR;
end LOCAL;

package body LOCAL is

  function PLA(IN_VECTOR: BIT_VECTOR;
               TABLE: PLA_TABLE)
    return BIT_VECTOR is
    subtype RESULT_TYPE is
      BIT_VECTOR(OUTPUT_COUNT - 1 downto 0);
    variable RESULT: RESULT_TYPE;
    variable ROW: PLA_ROW;
    variable MATCH: BOOLEAN;
    variable IN_POS: INTEGER;

  begin
    RESULT := RESULT_TYPE'(others => BIT('0'));

    for I in TABLE'range loop
```

```

    ROW := TABLE(I);

    MATCH := TRUE;
    IN_POS := IN_VECTOR'left;

    -- Check for match in input plane
    for J in ROW_SIZE - 1 downto OUTPUT_COUNT loop
        if(ROW(J) = PLA_ELEMENT'( '1' )) then
            MATCH := MATCH and
                (IN_VECTOR(IN_POS) = BIT'( '1' ));
        elsif(ROW(J) = PLA_ELEMENT'( '0' )) then
            MATCH := MATCH and
                (IN_VECTOR(IN_POS) = BIT'( '0' ));
        else
            null;      -- Must be minus ("don't care")
        end if;
        IN_POS := IN_POS - 1;
    end loop;

    -- Set output plane
    if(MATCH) then
        for J in RESULT'range loop
            if(ROW(J) = PLA_ELEMENT'( '1' )) then
                RESULT(J) := BIT'( '1' );
            end if;
        end loop;
    end if;
end loop;

    return(RESULT);
end;
end LOCAL;


use WORK.LOCAL.all;

entity PLA_VHDL is
    port(IN_VECTOR: BIT_VECTOR(2 downto 0);
          OUT_VECTOR: out BIT_VECTOR(4 downto 0));
end;

architecture BEHAVIOR of PLA_VHDL is
    constant TABLE: PLA_TABLE := PLA_TABLE'(
        PLA_ROW'( "--- 10000"),
        PLA_ROW'( "-1- 01000"),
        PLA_ROW'( "0-0 00101"),
        PLA_ROW'( "-1- 00101"),
        PLA_ROW'( "1-1 00101"),
        PLA_ROW'( "-1- 00010"));

begin
    OUT_VECTOR <= PLA(IN_VECTOR, TABLE);
end BEHAVIOR;

```

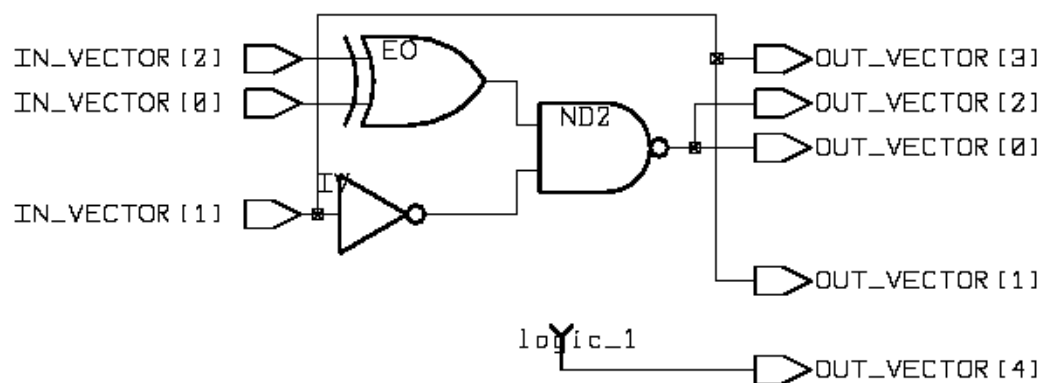

B

Predefined Libraries

This appendix describes the following packages that are included in a Presto VHDL installation:

- [std_logic_1164](#)
- [std_logic_arith](#)
- [numeric_std](#)
- [std_logic_misc](#)
- [Standard Package](#)
- [Synopsys Package—ATTRIBUTES](#)

std_logic_1164

The std_logic_1164 package is typically installed in the \$SYNOPSYS/packages/IEEE/src/std_logic_1164.vhd subdirectory of the Synopsys root directory. The std_logic_1164.vhd file has been updated with Synopsys synthesis directives, such as the built_in pragma described below. Presto VHDL automatically uses the built_in pragmas to improve performance. You can also write your own built_in pragmas.

built_in Pragmas

The Synopsys IEEE std_logic_1164 package contains the following built_in functions that enable Presto VHDL to quickly and easily interpret your code:

- SYN_AND
- SYN_OR
- SYN_NAND
- SYN_NOR
- SYN_XOR
- SYN_XNOR
- SYN_NOT
- SYN_BUF

These functions are automatically enabled by Presto VHDL for the respective operators in your code and you do not have to use these in your code. If you want to create your own built_in functions, label them with the built_in pragma. When you use a built_in pragma, Presto VHDL parses but ignores the body of the function and directly substitutes the appropriate logic for the function.

Create a built_in function by using the built_in pragma as shown in [Example B-1](#). Presto VHDL interprets a comment as a directive if the first word of the comment is pragma.

[Example B-1](#) shows the XOR built_in function.

Example B-1 XOR built_in Function

```
function "XOR" (L, R: STD_LOGIC_VECTOR) return STD_LOGIC_VECTOR is
  -- pragma built_in SYN_XOR
  begin
    if (L = '1') xor (R = '1') then
      return '1';
    else
      return '0';
    end if;
  end "XOR";
```

Example B-2 shows the SYN_AND built_in function.

Example B-2 SYN_AND built_in Function

```
function "AND" (L, R: STD_LOGIC_VECTOR) return
STD_LOGIC_VECTOR is
  -- pragma built_in SYN_AND
  variable MY_L: STD_LOGIC_VECTOR (L'length-1 downto 0);
  variable MY_R: STD_LOGIC_VECTOR (L'length-1 downto 0);
  variable RESULT: STD_LOGIC_VECTOR (L'length-1 downto 0);
begin
  assert L'length = R'length;
  MY_L := L;
  MY_R := R;
  for i in RESULT'range loop
    if (MY_L(i) = '1') and (MY_R(i) = '1') then
      RESULT(i) := '1';
    else
      RESULT(i) := '0';
    end if;
  end loop;
  return RESULT;
end "AND";
```

Example B-3 shows the SYN_NOT built_in function.

Example B-3 SYN_NOT built_in Function

```
function "NOT" (L: STD_LOGIC_VECTOR) return STD_LOGIC_VECTOR is
  -- pragma built_in SYN_NOT
  variable MY_L: STD_LOGIC_VECTOR (L'length-1 downto 0);
  variable RESULT: STD_LOGIC_VECTOR (L'length-1 downto 0);
begin
  MY_L := L;
  for i in result'range loop
    if (MY_L(i) = '0' or MY_L(i) = 'L') then
      RESULT(i) := '1';
    elsif (MY_L(i) = '1' or MY_L(i) = 'H') then
      RESULT(i) := '0';
    else
      RESULT(i) := 'X';
    end if;
  end loop;
  return RESULT;
end "NOT";
```

Example B-4 shows the SYN_FEED_THRU built_in function which performs type conversion between unrelated types. The synthesized logic from SYN_FEED_THRU wires the single input of a function to the return value.

Example B-4 *SYN_FEED_THRU built_in Function*

```
type COLOR is (RED, GREEN, BLUE);
attribute ENUM_ENCODING : STRING;
attribute ENUM_ENCODING of COLOR : type is "01 10 11";
...

function COLOR_TO_BV (L: COLOR) return BIT_VECTOR is
-- pragma built_in SYN_FEED_THRU
begin
    case L is
        when RED    => return "01";
        when GREEN  => return "10";
        when BLUE   => return "11";
    end case;
end COLOR_TO_BV;
```

std_logic_arith

This section contains the following subsections:

- [std_logic_arith Package Overview](#)
- [Modifying the std_logic_arith Package](#)
- [std_logic_arith Data Types](#)
- [UNSIGNED](#)
- [SIGNED](#)
- [Conversion Functions](#)
- [Arithmetic Functions](#)
- [Comparison Functions](#)
- [Shift Functions](#)
- [Multiplication Using Shifts](#)

std_logic_arith Package Overview

The std_logic_arith package is typically installed in the \$SYNOPSYS/packages/IEEE/src/std_logic_arith.vhd subdirectory of the Synopsys root directory. To use this package in a VHDL source file, include the following lines at the beginning of the source file:

```
library IEEE;
use IEEE.std_logic_arith.all;
```


Functions defined in the `std_logic_arith` package provide conversion to and from the predefined VHDL data type `INTEGER`, arithmetic, comparison, and `BOOLEAN` operations. This package lets you perform arithmetic operations and numeric comparisons on array data types. The package defines some arithmetic operators (+, -, *, ABS) and the relational operators (<, >, <=, >=, =, /=). (IEEE VHDL does not define arithmetic operators for arrays and defines the comparison operators in a manner inconsistent with an arithmetic interpretation of array values.)

The package also defines two major data types of its own: `UNSIGNED` and `SIGNED` (see [“std_logic_arith Data Types” on page B-7](#) for details). The `std_logic_arith` package is legal VHDL; you can use it for both synthesis and simulation.

You can configure the `std_logic_arith` package to work on any array of single-bit types. You encode single-bit types in 1 bit with the `ENUM_ENCODING` attribute.

You can make the vector type (for example, `std_logic_vector`) synonymous with either `SIGNED` or `UNSIGNED`. This way, if you plan to use mostly `UNSIGNED` numbers, you do not need to convert your vector type to call `UNSIGNED` functions. The disadvantage of making your vector type synonymous with either `UNSIGNED` or `SIGNED` is that it causes redefinition of the standard VHDL comparison functions (=, /=, <, >, <=, >=).

[Table B-1](#) shows that the standard comparison functions for `BIT_VECTOR` do not match the `SIGNED` and `UNSIGNED` functions.

Table B-1 UNSIGNED, SIGNED, and BIT_VECTOR Comparison Functions

ARG1	op	ARG2	UNSIGNED	SIGNED	BIT_VECTOR
"000"	=	"000"	true	true	true
"00"	=	"000"	true	true	false
"100"	=	"0100"	true	false	false
"000"	<	"000"	false	false	false
"00"	<	"000"	false	false	true
"100"	<	"0100"	false	true	false

Modifying the std_logic_arith Package

The std_logic_arith package is written in standard VHDL. You can modify or add to it. When you change the content, you must reanalyze the package.

For example, to convert a vector of multivalued logic to an INTEGER, you can write the function shown in [Example B-5](#). This MVL_TO_INTEGER function returns the integer value corresponding to the vector when the vector is interpreted as an unsigned (natural) number. If unknown values are in the vector, the return value is -1.

Example B-5 New Function Based on a std_logic_arith Package Function

```
library IEEE;
use IEEE.std_logic_1164.all;

function MVL_TO_INTEGER(ARG : MVL_VECTOR)
  return INTEGER is
  -- pragma built_in SYN_FEED_THRU
  variable uns: UNSIGNED (ARG'range);
begin
  for i in ARG'range loop
    case ARG(i) is
      when '0' | 'L' => uns(i) := '0';
      when '1' | 'H' => uns(i) := '1';
      when others    => return -1;
    end case;
  end loop;
  return CONV_INTEGER(uns);
end;
```

Note the use of the CONV_INTEGER function in [Example B-5](#).

Design Compiler performs almost all synthesis directly from the VHDL descriptions. However, several functions are hard-wired for efficiency. They can be identified by the following comment in their declarations:

```
-- pragma built_in
```

This statement marks functions as special, causing the body of the function to be ignored. Modifying the body does not change the synthesized logic unless you remove the built_in comment. If you want new functionality, write it by using the built_in function; this is more efficient than removing the built_in function and modifying the body of the function.

std_logic_arith Data Types

The std_logic_arith package defines two data types: UNSIGNED and SIGNED.

```
type UNSIGNED is array (natural range <>) of std_logic;
type SIGNED is array (natural range <>) of std_logic;
```

These data types are similar to the predefined VHDL type BIT_VECTOR, but the std_logic_arith package defines the interpretation of variables and signals of these types as numeric values.

UNSIGNED

The UNSIGNED data type represents an unsigned numeric value. Presto VHDL interprets the number as a binary representation, with the farthest-left bit being most significant. For example, the decimal number 8 can be represented as

```
UNSIGNED'("1000")
```

When you declare variables or signals of type UNSIGNED, a larger vector holds a larger number. A 4-bit variable holds values up to decimal 15, an 8-bit variable holds values up to 255, and so on. By definition, negative numbers cannot be represented in an UNSIGNED variable. Zero is the smallest value that can be represented.

[Example B-6](#) illustrates some UNSIGNED declarations. The most significant bit is the farthest-left array bound, rather than the high- or low-range value.

Example B-6 UNSIGNED Declarations

```
variable VAR: UNSIGNED (1 to 10);
-- 10-bit number
-- VAR(VAR'left) = VAR(1) is the most significant bit

signal SIG: UNSIGNED (5 downto 0);
-- 6-bit number
-- SIG(SIG'left) = SIG(5) is the most significant bit
```

SIGNED

The SIGNED data type represents a signed numeric value. Presto VHDL interprets the number as a 2's-complement binary representation, with the farthest-left bit as the sign bit. For example, you can represent decimal 5 and -5 as

```
SIGNED'("0101") -- represents +5
SIGNED'("1011") -- represents -5
```

When you declare SIGNED variables or signals, a larger vector holds a larger number. A 4-bit variable holds values from -8 to 7; an 8-bit variable holds values from -128 to 127. A SIGNED value cannot hold as large a value as an UNSIGNED value with the same bit-width.

[Example B-7](#) shows some SIGNED declarations. The sign bit is the farthest-left bit, rather than the highest or lowest.

Example B-7 SIGNED Declarations

```
variable S_VAR: SIGNED (1 to 10);
-- 10-bit number
-- S_VAR(S_VAR'left) = S_VAR(1) is the sign bit

signal S_SIG: SIGNED (5 downto 0);
-- 6-bit number
-- S_SIG(S_SIG'left) = S_SIG(5) is the sign bit
```

Conversion Functions

The std_logic_arith package provides three sets of functions to convert values between its UNSIGNED and SIGNED types and the predefined type INTEGER. This package also provides the std_logic_vector. [Example B-8](#) shows the declarations of these conversion functions, with BIT and BIT_VECTOR types.

Example B-8 Conversion Functions

```
subtype SMALL_INT is INTEGER range 0 to 1;
function CONV_INTEGER(ARG: INTEGER) return INTEGER;
function CONV_INTEGER(ARG: UNSIGNED) return INTEGER;
function CONV_INTEGER(ARG: SIGNED) return INTEGER;
function CONV_INTEGER(ARG: STD_ULOGIC) return SMALL_INT;

function CONV_UNSIGNED(ARG: INTEGER;
                       SIZE: INTEGER) return UNSIGNED;
function CONV_UNSIGNED(ARG: UNSIGNED;
                       SIZE: INTEGER) return UNSIGNED;
function CONV_UNSIGNED(ARG: SIGNED;
                       SIZE: INTEGER) return UNSIGNED;
function CONV_UNSIGNED(ARG: STD_ULOGIC;
                       SIZE: INTEGER) return UNSIGNED;

function CONV_SIGNED(ARG: INTEGER;
                     SIZE: INTEGER) return SIGNED;
function CONV_SIGNED(ARG: UNSIGNED;
                     SIZE: INTEGER) return SIGNED;
function CONV_SIGNED(ARG: SIGNED;
                     SIZE: INTEGER) return SIGNED;
function CONV_SIGNED(ARG: STD_ULOGIC;
                     SIZE: INTEGER) return SIGNED;

function CONV_STD_LOGIC_VECTOR(ARG: INTEGER;
                               SIZE: INTEGER) return STD_LOGIC_VECTOR;
function CONV_STD_LOGIC_VECTOR(ARG: UNSIGNED;
                               SIZE: INTEGER) return STD_LOGIC_VECTOR;
function CONV_STD_LOGIC_VECTOR(ARG: SIGNED;
                               SIZE: INTEGER) return STD_LOGIC_VECTOR;
```

```
function CONV_STD_LOGIC_VECTOR (ARG: STD_ULOGIC;
                                SIZE: INTEGER) return STD_LOGIC_VECTOR;
```

There are four versions of each conversion function. The VHDL operator overloading mechanism determines the correct version from the function call's argument types.

The CONV_INTEGER functions convert an argument of type INTEGER, UNSIGNED, SIGNED, or STD_ULOGIC to an INTEGER return value. The CONV_UNSIGNED and CONV_SIGNED functions convert an argument of type INTEGER, UNSIGNED, SIGNED, or STD_ULOGIC to an UNSIGNED or SIGNED return value whose bit width is SIZE.

The CONV_INTEGER functions have a limitation on the size of operands. VHDL defines INTEGER values as being between -2147483647 and 2147483647 . This range corresponds to a 31-bit UNSIGNED value or a 32-bit SIGNED value. You cannot convert an argument outside this range to an INTEGER.

The CONV_UNSIGNED and CONV_SIGNED functions each require two operands. The first operand is the value converted. The second operand is an INTEGER that specifies the expected size of the converted result. For example, the following function call returns a 10-bit UNSIGNED value representing the value in sig.

```
ten_unsigned_bits := CONV_UNSIGNED(sig, 10);
```

If the value passed to CONV_UNSIGNED or CONV_SIGNED is smaller than the expected bit-width (such as representing the value 2 in a 24-bit number), the value is bit-extended appropriately. Presto VHDL places 0s in the more significant (left) bits for an UNSIGNED return value, and it uses sign extension for a SIGNED return value.

You can use the conversion functions to extend a number's bit-width even if conversion is not required. For example,

```
CONV_SIGNED(SIGNED'("110"), 8) -> "11111110"
```

An UNSIGNED or SIGNED return value is truncated when its bit-width is too small to hold the ARG value. For example,

```
CONV_SIGNED(UNSIGNED'("1101010"), 3) -> "010"
```

Arithmetic Functions

The std_logic_arith package provides arithmetic functions for use with combinations of the Synopsys UNSIGNED and SIGNED data types and the predefined types STD_ULOGIC and INTEGER. These functions produce adders and subtractors.

There are two sets of arithmetic functions: binary functions having two arguments, such as $A+B$ or $A*B$, and unary functions having one argument, such as $-A$. [Example B-9](#) and [Example B-10](#) show the declarations for these functions.

Example B-9 Binary Arithmetic Functions

```

function "+" (L: UNSIGNED; R: UNSIGNED) return UNSIGNED;
function "+" (L: SIGNED; R: SIGNED) return SIGNED;
function "+" (L: UNSIGNED; R: SIGNED) return SIGNED;
function "+" (L: SIGNED; R: UNSIGNED) return SIGNED;
function "+" (L: UNSIGNED; R: INTEGER) return UNSIGNED;
function "+" (L: INTEGER; R: UNSIGNED) return UNSIGNED;
function "+" (L: SIGNED; R: INTEGER) return SIGNED;
function "+" (L: INTEGER; R: SIGNED) return SIGNED;
function "+" (L: UNSIGNED; R: STD_ULOGIC) return UNSIGNED;
function "+" (L: STD_ULOGIC; R: UNSIGNED) return UNSIGNED;
function "+" (L: SIGNED; R: STD_ULOGIC) return SIGNED;
function "+" (L: STD_ULOGIC; R: SIGNED) return SIGNED;

function "+" (L: UNSIGNED; R: UNSIGNED) return STD_LOGIC_VECTOR;
function "+" (L: SIGNED; R: SIGNED) return STD_LOGIC_VECTOR;
function "+" (L: UNSIGNED; R: SIGNED) return STD_LOGIC_VECTOR;
function "+" (L: SIGNED; R: UNSIGNED) return STD_LOGIC_VECTOR;
function "+" (L: UNSIGNED; R: INTEGER) return STD_LOGIC_VECTOR;
function "+" (L: INTEGER; R: UNSIGNED) return STD_LOGIC_VECTOR;
function "+" (L: SIGNED; R: INTEGER) return STD_LOGIC_VECTOR;
function "+" (L: INTEGER; R: SIGNED) return STD_LOGIC_VECTOR;
function "+" (L: UNSIGNED; R: STD_ULOGIC) return STD_LOGIC_VECTOR;
function "+" (L: STD_ULOGIC; R: UNSIGNED) return STD_LOGIC_VECTOR;
function "+" (L: SIGNED; R: STD_ULOGIC) return STD_LOGIC_VECTOR;
function "+" (L: STD_ULOGIC; R: SIGNED) return STD_LOGIC_VECTOR;
function "-" (L: UNSIGNED; R: UNSIGNED) return UNSIGNED;
function "-" (L: SIGNED; R: SIGNED) return SIGNED;
function "-" (L: UNSIGNED; R: SIGNED) return SIGNED;
function "-" (L: SIGNED; R: UNSIGNED) return SIGNED;
function "-" (L: UNSIGNED; R: INTEGER) return UNSIGNED;
function "-" (L: INTEGER; R: UNSIGNED) return UNSIGNED;
function "-" (L: SIGNED; R: INTEGER) return SIGNED;
function "-" (L: INTEGER; R: SIGNED) return SIGNED;
function "-" (L: UNSIGNED; R: STD_ULOGIC) return UNSIGNED;
function "-" (L: STD_ULOGIC; R: UNSIGNED) return UNSIGNED;
function "-" (L: SIGNED; R: STD_ULOGIC) return SIGNED;
function "-" (L: STD_ULOGIC; R: SIGNED) return SIGNED;

function "-" (L: UNSIGNED; R: UNSIGNED) return STD_LOGIC_VECTOR;
function "-" (L: SIGNED; R: SIGNED) return STD_LOGIC_VECTOR;
function "-" (L: UNSIGNED; R: SIGNED) return STD_LOGIC_VECTOR;
function "-" (L: SIGNED; R: UNSIGNED) return STD_LOGIC_VECTOR;
function "-" (L: UNSIGNED; R: INTEGER) return STD_LOGIC_VECTOR;
function "-" (L: INTEGER; R: UNSIGNED) return STD_LOGIC_VECTOR;
function "-" (L: SIGNED; R: INTEGER) return STD_LOGIC_VECTOR;
function "-" (L: INTEGER; R: SIGNED) return STD_LOGIC_VECTOR;
function "-" (L: UNSIGNED; R: STD_ULOGIC) return STD_LOGIC_VECTOR;
function "-" (L: STD_ULOGIC; R: UNSIGNED) return STD_LOGIC_VECTOR;
function "-" (L: SIGNED; R: STD_ULOGIC) return STD_LOGIC_VECTOR;
function "-" (L: STD_ULOGIC; R: SIGNED) return STD_LOGIC_VECTOR;

function "*" (L: UNSIGNED; R: UNSIGNED) return UNSIGNED;
function "*" (L: SIGNED; R: SIGNED) return SIGNED;
function "*" (L: SIGNED; R: UNSIGNED) return SIGNED;
function "*" (L: UNSIGNED; R: SIGNED) return SIGNED;

```

Example B-10 Unary Arithmetic Functions

```

function "+" (L: UNSIGNED) return UNSIGNED;
function "+" (L: SIGNED)    return SIGNED;
function "-" (L: SIGNED)    return SIGNED;
function "ABS" (L: SIGNED) return SIGNED;

```

The binary and unary arithmetic functions in [Example B-9](#) and [Example B-10](#) determine the width of their return values, as follows:

1. When only one UNSIGNED or SIGNED argument is present, the width of the return value is the same as that argument's.
2. When both arguments are either UNSIGNED or SIGNED, the width of the return value is the larger of the two argument widths. An exception is that when an UNSIGNED number is added to or subtracted from a SIGNED number that is the same size or smaller, the return value is a SIGNED number 1 bit wider than the UNSIGNED argument. This size guarantees that the return value is large enough to hold any (positive) value of the UNSIGNED argument.

[Table B-2](#) illustrates the number of bits returned by addition (+) and subtraction (–).

```

signal U4: UNSIGNED (3 downto 0);
signal U8: UNSIGNED (7 downto 0);
signal S4: SIGNED   (3 downto 0);
signal S8: SIGNED   (7 downto 0);

```

Table B-2 *Number of Bits Returned by Addition and Subtraction*

+ or -	U4	U8	S4	S8
U4	4	8	5	8
U8	8	8	9	9
S4	5	9	4	8
S8	8	9	8	8

In some circumstances, you might need to obtain a carry-out bit from the addition or subtraction operation. To do this, extend the larger operand by 1 bit. The high bit of the return value is the carry, as illustrated in [Example B-11](#).

Example B-11 Using the Carry-Out Bit

```
process
  variable a, b, sum: UNSIGNED (7 downto 0);
  variable temp: UNSIGNED (8 downto 0);
  variable carry: BIT;
begin
  temp := CONV_UNSIGNED(a,9) + b;
  sum := temp(7 downto 0);
  carry := temp(8);
end process;
```

Comparison Functions

The `std_logic_arith` package provides functions for comparing UNSIGNED and SIGNED data types with each other and with the predefined type INTEGER. Presto VHDL compares the numeric values of the arguments, returning a BOOLEAN value. For example, the following expression evaluates true.

```
UNSIGNED'("001") > SIGNED'("111")
```

The `std_logic_arith` comparison functions are similar to the built-in VHDL comparison functions. The only difference is that the `std_logic_arith` functions accommodate signed numbers and varying bit-widths. The predefined VHDL comparison functions perform bitwise comparisons and do not have the correct semantics for comparing numeric values (see [“Ordering of Enumerated Types Using the ENUM_ENCODING attribute” on page 2-45](#)).

These functions produce comparators. The function declarations are listed in two groups: ordering functions ("`<`", "`<=`", "`>`", "`>=`"), shown in [Example B-12](#), and equality functions ("`=`", "`/=`"), shown in [Example B-13](#).

Example B-12 Ordering Functions

```

function "<" (L: UNSIGNED; R: UNSIGNED) return BOOLEAN;
function "<" (L: SIGNED;          R: SIGNED)          return BOOLEAN;
function "<" (L: UNSIGNED;          R: SIGNED)          return BOOLEAN;
function "<" (L: SIGNED;          R: UNSIGNED)         return BOOLEAN;
function "<" (L: UNSIGNED;          R: INTEGER)         return BOOLEAN;
function "<" (L: INTEGER;          R: UNSIGNED)        return BOOLEAN;
function "<" (L: SIGNED;          R: INTEGER)          return BOOLEAN;
function "<" (L: INTEGER;          R: SIGNED)           return BOOLEAN;

function "<=" (L: UNSIGNED;          R: UNSIGNED) return BOOLEAN;
function "<=" (L: SIGNED;          R: SIGNED)          return BOOLEAN;
function "<=" (L: UNSIGNED;          R: SIGNED)          return BOOLEAN;
function "<=" (L: SIGNED;          R: UNSIGNED)         return BOOLEAN;
function "<=" (L: UNSIGNED;          R: INTEGER)         return BOOLEAN;
function "<=" (L: INTEGER;          R: UNSIGNED)        return BOOLEAN;
function "<=" (L: SIGNED;          R: INTEGER)          return BOOLEAN;
function "<=" (L: INTEGER;          R: SIGNED)           return BOOLEAN;

function ">" (L: UNSIGNED; R: UNSIGNED) return BOOLEAN;
function ">" (L: SIGNED;          R: SIGNED)          return BOOLEAN;
function ">" (L: UNSIGNED;          R: SIGNED)          return BOOLEAN;
function ">" (L: SIGNED;          R: UNSIGNED)         return BOOLEAN;
function ">" (L: UNSIGNED;          R: INTEGER)         return BOOLEAN;
function ">" (L: INTEGER;          R: UNSIGNED)        return BOOLEAN;
function ">" (L: SIGNED;          R: INTEGER)          return BOOLEAN;
function ">" (L: INTEGER;          R: SIGNED)           return BOOLEAN;

function ">=" (L: UNSIGNED;          R: UNSIGNED) return BOOLEAN;
function ">=" (L: SIGNED;          R: SIGNED)          return BOOLEAN;
function ">=" (L: UNSIGNED;          R: SIGNED)          return BOOLEAN;
function ">=" (L: SIGNED;          R: UNSIGNED)         return BOOLEAN;
function ">=" (L: UNSIGNED;          R: INTEGER)         return BOOLEAN;
function ">=" (L: INTEGER;          R: UNSIGNED)        return BOOLEAN;
function ">=" (L: SIGNED;          R: INTEGER)          return BOOLEAN;
function ">=" (L: INTEGER;          R: SIGNED)           return BOOLEAN;

```

Example B-13 Equality Functions

```

function "=" (L: UNSIGNED; R: UNSIGNED) return BOOLEAN;
function "=" (L: SIGNED; R: SIGNED) return BOOLEAN;
function "=" (L: UNSIGNED; R: SIGNED) return BOOLEAN;
function "=" (L: SIGNED; R: UNSIGNED) return BOOLEAN;
function "=" (L: UNSIGNED; R: INTEGER) return BOOLEAN;
function "=" (L: INTEGER; R: UNSIGNED) return BOOLEAN;
function "=" (L: SIGNED; R: INTEGER) return BOOLEAN;
function "=" (L: INTEGER; R: SIGNED) return BOOLEAN;

function "/=" (L: UNSIGNED; R: UNSIGNED) return BOOLEAN;
function "/=" (L: SIGNED; R: SIGNED) return BOOLEAN;
function "/=" (L: UNSIGNED; R: SIGNED) return BOOLEAN;
function "/=" (L: SIGNED; R: UNSIGNED) return BOOLEAN;
function "/=" (L: UNSIGNED; R: INTEGER) return BOOLEAN;
function "/=" (L: INTEGER; R: UNSIGNED) return BOOLEAN;
function "/=" (L: SIGNED; R: INTEGER) return BOOLEAN;
function "/=" (L: INTEGER; R: SIGNED) return BOOLEAN;

```

Shift Functions

The `std_logic_arith` package provides functions for shifting the bits in SIGNED and UNSIGNED numbers. These functions produce shifters. [Example B-14](#) shows the shift function declarations. For a list of shift and rotate operators, see [“Operators” on page C-7](#).

Example B-14 Shift Functions

```

function SHL(ARG: UNSIGNED;
             COUNT: UNSIGNED) return UNSIGNED;
function SHL(ARG: SIGNED;
             COUNT: UNSIGNED) return SIGNED;

function SHR(ARG: UNSIGNED;
             COUNT: UNSIGNED) return UNSIGNED;
function SHR(ARG: SIGNED;
             COUNT: UNSIGNED) return SIGNED;

```

The SHL function shifts the bits of its argument ARG left by COUNT bits. SHR shifts the bits of its argument ARG right by COUNT bits.

The SHL functions work the same for both UNSIGNED and SIGNED values of ARG, shifting in zero bits as necessary. The SHR functions treat UNSIGNED and SIGNED values differently. If ARG is an UNSIGNED number, vacated bits are filled with 0s; if ARG is a SIGNED number, the vacated bits are copied from the ARG sign bit.

[Example B-15](#) shows some shift function calls and their return values.

Example B-15 Shift Operations

```

variable U1, U2: UNSIGNED (7 downto 0);
variable S1, S2: SIGNED   (7 downto 0);
variable COUNT: UNSIGNED (1 downto 0);

. . .
U1 := "01101011";
U2 := "11101011";

S1 := "01101011";
S2 := "11101011";

COUNT := CONV_UNSIGNED(ARG => 3, SIZE => 2);

. . .
SHL(U1, COUNT) = "01011000"
SHL(S1, COUNT) = "01011000"
SHL(U2, COUNT) = "01011000"
SHL(S2, COUNT) = "01011000"

SHR(U1, COUNT) = "00001101"
SHR(S1, COUNT) = "00001101"
SHR(U2, COUNT) = "00011101"
SHR(S2, COUNT) = "11111101"

```

Multiplication Using Shifts

You can use shift operations for simple multiplication and division of UNSIGNED numbers if you are multiplying or dividing by a power of 2.

For example, to divide the following UNSIGNED variable U by 4, use this syntax:

```

variable U: UNSIGNED (7 downto 0) := "11010101";

variable quarter_U: UNSIGNED (5 downto 0);

quarter_U := SHR(U, "01");

```

numeric_std

This section describes Presto VHDL support for the numeric_std, the IEEE Standard VHDL Synthesis Package, which defines numeric types and arithmetic functions.

This section contains the following:

- [Unsupported Constructs and Operators](#)
- [Using the numeric_std Package](#)
- [numeric_std Data Types](#)

- [Conversion Functions](#)
- [Resize Functions](#)
- [Arithmetic Functions](#)
- [Comparison Functions](#)
- [Defining Logical Operators Functions](#)
- [Shift and Rotate Functions](#)
- [Shift and Rotate Operators](#)

Caution:

The numeric_std package and the std_logic_arith package have overlapping operations. Use of these two packages simultaneously during analysis could cause type mismatches.

Unsupported Constructs and Operators

Presto VHDL does not support the following numeric_std package component:

- TO_01 function as a simulation construct

Using the numeric_std Package

The numeric_std package is typically installed in the Synopsys root directory. Access it with the following statement in your VHDL code:

```
library IEEE;
use IEEE.numeric_std.all;
```

numeric_std Data Types

The numeric_std package defines the following two data types in the same way that the std_logic_arith package does:

- UNSIGNED

type UNSIGNED is array (NATURAL range <>) of STD_LOGIC;
See [“UNSIGNED” on page B-7](#) for more information.

- SIGNED

type SIGNED is array (NATURAL range <>) of STD_LOGIC;
See [“SIGNED” on page B-7](#) for more information.

Conversion Functions

The `numeric_std` package provides functions to convert values between its UNSIGNED and SIGNED types. [Table B-3](#) shows the declarations of these conversion functions.

Table B-3 numeric_std Conversion Functions

Parameters			
Operator	Arg	Size	Return type
TO_INTEGER	UNSIGNED		NATURAL
TO_INTEGER	SIGNED		INTEGER
TO_UNSIGNED	INTEGER	NATURAL	UNSIGNED
TO_SIGNED	INTEGER	NATURAL	SIGNED

TO_INTEGER, TO_SIGNED, and TO_UNSIGNED are similar to CONV_INTEGER, CONV_SIGNED, and CONV_UNSIGNED in `std_logic_arith` (see [“Conversion Functions” on page B-8](#)).

Resize Functions

The resize function `numeric_std` supports is shown in the declarations in [Table B-4](#).

Table B-4 numeric_std Resize Functions

Parameters			
Operator	Arg	Size	Return type
RESIZE	NATURAL	NATURAL	SIGNED
RESIZE	NATURAL	NATURAL	UNSIGNED

Arithmetic Functions

The `numeric_std` package provides arithmetic functions for use with combinations of Synopsys UNSIGNED and SIGNED data types and the predefined types STD_ULONGIC and INTEGER. These functions produce adders and subtracters.

There are two sets of arithmetic functions, which the `numeric_std` package defines in the same way the `std_logic_arith` package does (see [“Arithmetic Functions” on page B-9](#) for more information):

- Binary functions having two arguments, such as

$A+B$

$A*B$

[Table B-5](#) shows the declarations for these functions.

- Unary functions having one argument, such as

$-A$

`abs A`

[Table B-6](#) shows the declarations for these functions.

Table B-5 numeric_std Binary Arithmetic Functions

Parameters			
Operator	L	R	Return type
"+"	UNSIGNED	UNSIGNED	UNSIGNED
"+"	SIGNED	SIGNED	SIGNED
"+"	UNSIGNED	NATURAL	UNSIGNED
"+"	NATURAL	UNSIGNED	UNSIGNED
"+"	INTEGER	SIGNED	SIGNED
"+"	SIGNED	INTEGER	SIGNED
"_"	UNSIGNED	UNSIGNED	UNSIGNED
"_"	SIGNED	SIGNED	SIGNED
"_"	UNSIGNED	NATURAL	UNSIGNED
"_"	NATURAL	UNSIGNED	UNSIGNED
"_"	SIGNED	INTEGER	SIGNED
"_"	INTEGER	SIGNED	SIGNED
"*"	UNSIGNED	UNSIGNED	UNSIGNED

Table B-5 numeric_std Binary Arithmetic Functions (Continued)

Operator	Parameters		Return type
	L	R	
"**"	SIGNED	SIGNED	SIGNED
"**"	UNSIGNED	NATURAL	UNSIGNED
"**"	NATURAL	UNSIGNED	UNSIGNED
"**"	SIGNED	INTEGER	SIGNED
"**"	INTEGER	SIGNED	SIGNED

Table B-6 numeric_std Unary Arithmetic Functions

Operator	Arg	Return Type
"abs"	SIGNED	SIGNED
"_"	SIGNED	SIGNED

Comparison Functions

The `numeric_std` package provides functions to compare UNSIGNED and SIGNED data types with each other and with the predefined type INTEGER. Presto VHDL compares the numeric values of the arguments and returns a BOOLEAN value.

These functions produce comparators. The function declarations are listed in two groups:

- Ordering functions (" $<$ ", " $<=$ ", " $>$ ", " $>=$ "), shown in [Table B-7](#)
- Equality functions (" $=$ ", " \neq "), shown in [Table B-8](#)

Table B-7 *numeric_std Ordering Functions*

Parameters			
Operator	L	R	Return type
">"	UNSIGNED	UNSIGNED	BOOLEAN
">"	SIGNED	SIGNED	BOOLEAN
">"	NATURAL	UNSIGNED	BOOLEAN
">"	INTEGER	SIGNED	BOOLEAN
">"	UNSIGNED	NATURAL	BOOLEAN
">"	SIGNED	INTEGER	BOOLEAN
"<"	UNSIGNED	UNSIGNED	BOOLEAN
"<"	SIGNED	SIGNED	BOOLEAN
"<"	NATURAL	UNSIGNED	BOOLEAN
"<"	INTEGER	SIGNED	BOOLEAN
"<"	UNSIGNED	NATURAL	BOOLEAN
"<"	SIGNED	INTEGER	BOOLEAN
"<="	UNSIGNED	UNSIGNED	BOOLEAN
"<="	SIGNED	SIGNED	BOOLEAN
"<="	NATURAL	UNSIGNED	BOOLEAN
"<="	INTEGER	SIGNED	BOOLEAN
"<="	UNSIGNED	NATURAL	BOOLEAN
"<="	SIGNED	INTEGER	BOOLEAN
">="	UNSIGNED	UNSIGNED	BOOLEAN
">="	SIGNED	SIGNED	BOOLEAN

Table B-7 *numeric_std Ordering Functions (Continued)*

Parameters			
Operator	L	R	Return type
">="	NATURAL	UNSIGNED	BOOLEAN
">="	INTEGER	SIGNED	BOOLEAN
">="	UNSIGNED	NATURAL	BOOLEAN
">="	SIGNED	INTEGER	BOOLEAN

Table B-8 *numeric_std Equality Functions*

Parameters			
Operator	L	R	Return type
"="	UNSIGNED	UNSIGNED	BOOLEAN
"="	SIGNED	SIGNED	BOOLEAN
"="	NATURAL	UNSIGNED	BOOLEAN
"="	INTEGER	SIGNED	BOOLEAN
"="	UNSIGNED	NATURAL	BOOLEAN
"="	SIGNED	INTEGER	BOOLEAN
"/="	UNSIGNED	UNSIGNED	BOOLEAN
"/="	SIGNED	SIGNED	BOOLEAN
"/="	NATURAL	UNSIGNED	BOOLEAN
"/="	INTEGER	SIGNED	BOOLEAN
"/="	UNSIGNED	NATURAL	BOOLEAN
"/="	SIGNED	INTEGER	BOOLEAN

Defining Logical Operators Functions

The `numeric_std` package provides functions that define all of the logical operators: NOT, AND, OR, NAND, NOR, XOR, and XNOR. These functions work just like similar functions in `std_logic_1164`, except that they operate on SIGNED and UNSIGNED values rather than on `STD_LOGIC_VECTOR` values. [Table B-9](#) shows these function declarations.

Table B-9 numeric_std Logical Operators Functions

Parameters			
Operator	L	R	Return type
"not"	UNSIGNED		UNSIGNED
"and"	UNSIGNED	UNSIGNED	UNSIGNED
"or"	UNSIGNED	UNSIGNED	UNSIGNED
"nand"	UNSIGNED	UNSIGNED	UNSIGNED
"nor"	UNSIGNED	UNSIGNED	UNSIGNED
"xor"	UNSIGNED	UNSIGNED	UNSIGNED
"xnor"	UNSIGNED	UNSIGNED	UNSIGNED
"not"	SIGNED		SIGNED
"and"	SIGNED	SIGNED	SIGNED
"or"	SIGNED	SIGNED	SIGNED
"nand"	SIGNED	SIGNED	SIGNED
"nor"	SIGNED	SIGNED	SIGNED
"xor"	SIGNED	SIGNED	SIGNED
"xnor"	SIGNED	SIGNED	SIGNED

Shift and Rotate Functions

The `numeric_std` package provides functions for shifting the bits in UNSIGNED and SIGNED numbers. These functions produce shifters. [Table B-10](#) shows the shift function declarations.

Table B-10 numeric_std Shift and Rotate Functions

Parameters			
Operator	Arg	Count	Return type
SHIFT_LEFT	UNSIGNED	NATURAL	UNSIGNED
SHIFT_RIGHT	UNSIGNED	NATURAL	UNSIGNED
SHIFT_LEFT	SIGNED	NATURAL	SIGNED
SHIFT_RIGHT	SIGNED	NATURAL	SIGNED
ROTATE_LEFT	UNSIGNED	NATURAL	UNSIGNED
ROTATE_RIGHT	UNSIGNED	NATURAL	UNSIGNED
ROTATE_LEFT	SIGNED	NATURAL	SIGNED
ROTATE_RIGHT	SIGNED	NATURAL	SIGNED

The SHIFT_LEFT function shifts the bits of its argument ARG left by COUNT bits. SHIFT_RIGHT shifts the bits of its argument ARG right by COUNT bits.

The SHIFT_LEFT functions work the same for both UNSIGNED and SIGNED values of ARG, shifting in zero bits as necessary. The SHIFT_RIGHT functions treat UNSIGNED and SIGNED values differently:

- If ARG is an UNSIGNED number, vacated bits are filled with 0s.
- If ARG is a SIGNED number, the vacated bits are copied from the ARG sign bit.

[Example B-17 on page B-26](#) shows some shift function calls and their return values.

The ROTATE_LEFT and ROTATE_RIGHT functions are similar to the shift functions. [Example B-16 on page B-25](#) shows some rotate function declarations.

Shift and Rotate Operators

The `numeric_std` package provides shift operators and rotate operators, which work in the same way that shift functions and rotate functions do. The shift operators are `sll`, `srl`, `sla`, and `sra`. [Table B-11](#) shows some shift and rotate operator declarations. [Example B-16 on page B-25](#) includes some shift and rotate operators.

Table B-11 `numeric_std` Shift and Rotate Operators

Parameters			
Operator	Arg	Count	Return type
"sll"	UNSIGNED	INTEGER	UNSIGNED
"sll"	SIGNED	INTEGER	SIGNED
"srl"	UNSIGNED	INTEGER	UNSIGNED
"srl"	SIGNED	INTEGER	SIGNED
"rol"	UNSIGNED	INTEGER	UNSIGNED
"rol"	SIGNED	INTEGER	SIGNED
"ror"	UNSIGNED	INTEGER	UNSIGNED
"ror"	SIGNED	INTEGER	SIGNED

Example B-16 *Some numeric_std Shift and Rotate Functions and Shift and Rotate Operators*

```

Variable U1, U2: UNSIGNED (7 downto 0);
Variable S1, S2: SIGNED (7 downto 0);
Variable COUNT: NATURAL;
...
U1 := "01101011";
U2 := "11101011";
S1 := "01101011";
S2 := "11101011";
COUNT := 3;
...
SHIFT_LEFT (U1, COUNT) = "01011000"
SHIFT_LEFT (S1, COUNT) = "01011000"
SHIFT_LEFT (U2, COUNT) = "01011000"
SHIFT_LEFT (S2, COUNT) = "01011000"

SHIFT_RIGHT (U1, COUNT) = "00001101"
SHIFT_RIGHT (S1, COUNT) = "00001101"
SHIFT_RIGHT (U2, COUNT) = "00011101"
SHIFT_RIGHT (S2, COUNT) = "11111101"

ROTATE_LEFT (U1, COUNT) = "01011011"
ROTATE_LEFT (S1, COUNT) = "01011011"
ROTATE_LEFT (U2, COUNT) = "01011111"
ROTATE_LEFT (S2, COUNT) = "01011111"

ROTATE_RIGHT (U1, COUNT) = "01101101"
ROTATE_RIGHT (S1, COUNT) = "01101101"
ROTATE_RIGHT (U2, COUNT) = "01111101"
ROTATE_RIGHT (S2, COUNT) = "01111101"

U1 sll COUNT = "01011000"
S1 sll COUNT = "01011000"
U2 sll COUNT = "01011000"
S2 sll COUNT = "01011000"

U1 srl COUNT = "00001101"
S1 srl COUNT = "00001101"
U2 srl COUNT = "00011101"
S2 srl COUNT = "11111101"

U1 rol COUNT = "01011011"
S1 rol COUNT = "01011011"
U2 rol COUNT = "01011111"
S2 rol COUNT = "01011111"

U1 ror COUNT = "01101101"
S1 ror COUNT = "01101101"
U2 ror COUNT = "01111101"
S2 ror COUNT = "01111101"

```

std_logic_misc

The std_logic_misc package is typically installed in the \$SYNOPSYS/packages/IEEE/src/std_logic_misc.vhd directory. It declares the primary data types that the Synopsys VSS tools support.

Boolean reduction functions take one argument (an array of bits) and return a single bit. For example, the AND reduction of "101" is "0", the logical AND of all 3 bits.

Several functions in the std_logic_misc package provide Boolean reduction operations for the predefined type STD_LOGIC_VECTOR. [Example B-17](#) shows the declarations of these functions.

Example B-17 Boolean Reduction Functions

```
function AND_REDUCE (ARG: STD_LOGIC_VECTOR) return UX01;
function NAND_REDUCE (ARG: STD_LOGIC_VECTOR) return UX01;
function OR_REDUCE (ARG: STD_LOGIC_VECTOR) return UX01;
function NOR_REDUCE (ARG: STD_LOGIC_VECTOR) return UX01;
function XOR_REDUCE (ARG: STD_LOGIC_VECTOR) return UX01;
function XNOR_REDUCE (ARG: STD_LOGIC_VECTOR) return UX01;
function AND_REDUCE (ARG: STD_ULONGIC_VECTOR) return UX01;
function NAND_REDUCE (ARG: STD_ULONGIC_VECTOR) return UX01;
function OR_REDUCE (ARG: STD_ULONGIC_VECTOR) return UX01;
function NOR_REDUCE (ARG: STD_ULONGIC_VECTOR) return UX01;
function XOR_REDUCE (ARG: STD_ULONGIC_VECTOR) return UX01;
function XNOR_REDUCE (ARG: STD_ULONGIC_VECTOR) return UX01;
```

These functions combine the bits of the STD_LOGIC_VECTOR, as the name of the function indicates. For example, XOR_REDUCE returns the XOR of all bits in ARG. [Example B-18](#) shows some reduction function calls and their return values.

Example B-18 Boolean Reduction Operations

```
AND_REDUCE ("111")      = '1'
AND_REDUCE ("011")      = '0'

OR_REDUCE ("000")       = '0'
OR_REDUCE ("001")       = '1'

XOR_REDUCE ("100")       = '1'
XOR_REDUCE ("101")       = '0'

NAND_REDUCE ("111") = '0'
NAND_REDUCE ("011") = '1'

NOR_REDUCE ("000")      = '1'
NOR_REDUCE ("001")      = '0'

XNOR_REDUCE ("100") = '0'
XNOR_REDUCE ("101") = '1'
```

Standard Package

The STANDARD package of data types is included in all VHDL source files by an implicit use clause.

Presto VHDL implements the synthesizable subset of the STANDARD package listed in [Example B-19](#).

Example B-19 Presto VHDL STANDARD Package

```
package STANDARD is

    type BOOLEAN is (FALSE, TRUE);

    type BIT is ('0', '1');

    type CHARACTER is (
        NUL, SOH, STX, ETX, EOT, ENQ, ACK, BEL,
        BS, HT, LF, VT, FF, CR, SO, SI,
        DLE, DC1, DC2, DC3, DC4, NAK, SYN, ETB,
        CAN, EM, SUB, ESC, FSP, GSP, RSP, USP,

        ' ', '!', '"', '#', '$', '%', '&', '\',
        '(', ')', '*', '+', ',', '-', '.', '/',
        '0', '1', '2', '3', '4', '5', '6', '7',
        '8', '9', ':', ';', '<', '=', '>', '?',

        '@', 'A', 'B', 'C', 'D', 'E', 'F', 'G',
        'H', 'I', 'J', 'K', 'L', 'M', 'N', 'O',
        'P', 'Q', 'R', 'S', 'T', 'U', 'V', 'W',
        'X', 'Y', 'Z', '[', '\', ']', '^', '_',

        '`', 'a', 'b', 'c', 'd', 'e', 'f', 'g',
        'h', 'i', 'j', 'k', 'l', 'm', 'n', 'o',
        'p', 'q', 'r', 's', 't', 'u', 'v', 'w',
        'x', 'y', 'z', '{', '|', '}', '~', DEL);

    type INTEGER is range -2147483647 to 2147483647;

    subtype NATURAL is INTEGER range 0 to 2147483647;

    subtype POSITIVE is INTEGER range 1 to 2147483647;

    type STRING is array (POSITIVE range <>)
        of CHARACTER;

    type BIT_VECTOR is array (NATURAL range <>)
        of BIT;
end STANDARD;
```

This section describes the following synthesizable data types:

- [Data Type BOOLEAN](#)
- [Data Type BIT](#)
- [Data Type CHARACTER](#)
- [Data Type INTEGER](#)
- [Data Type NATURAL](#)
- [Data Type POSITIVE](#)
- [Data Type STRING](#)
- [Data Type BIT_VECTOR](#)

Data Type BOOLEAN

The BOOLEAN data type is actually an enumerated type with two values, false and true, where false < true. Logical functions, such as equality (=) and comparison (<) functions, return a BOOLEAN value.

Convert a BIT value to a BOOLEAN value as follows:

```
BOOLEAN_VAR := (BIT_VAR = '1');
```

Data Type BIT

The BIT data type represents a binary value as one of two characters, '0' or '1'. Logical operations such as “and” can take and return BIT values.

Convert a BOOLEAN value to a BIT value as follows:

```
if (BOOLEAN_VAR) then
    BIT_VAR := '1';
else
    BIT_VAR := '0';
end if;
```

Data Type CHARACTER

The CHARACTER data type enumerates the ASCII character set. Nonprinting characters are represented by a three-letter name, such as NUL for the null character. Printable characters are represented by themselves, in single quotation marks, as follows:


```
variable CHARACTER_VAR: CHARACTER;  
...  
CHARACTER_VAR := 'A';
```

Data Type INTEGER

The INTEGER data type represents positive and negative whole numbers.

Data Type NATURAL

The NATURAL data type is a subtype of INTEGER that is used for representing natural (nonnegative) numbers.

Data Type POSITIVE

The POSITIVE data type is a subtype of INTEGER that is used for representing positive (nonzero, nonnegative) numbers.

Data Type STRING

The STRING data type is an unconstrained array of characters. A STRING value is enclosed in double quotation marks, as follows:

```
variable STRING_VAR: STRING(1 to 7);  
...  
STRING_VAR := "Rosebud";
```

Data Type BIT_VECTOR

The BIT_VECTOR data type represents an array of BIT values.

Synopsys Package—ATTRIBUTES

The ATTRIBUTES package declares all supported synthesis attributes; the source code is typically installed in the Synopsys libraries \$SYNOPSYS/packages/synopsys/src/attributes.vhd directory. Supported attributes include

- Design Compiler constraint attributes, described in [“Synopsys Defined Attributes” on page 6-5](#)
- State vector attribute, described in [“State Vector Attribute” on page 2-39](#)

- Enumeration encoding attribute, described in [“Enumeration Encoding” on page 2-18](#)

Reference this package when you use synthesis attributes:

```
library SYNOPSYS;  
use SYNOPSYS.ATTRIBUTES.all;
```

C

VHDL Constructs

Many VHDL language constructs, although useful for simulation and other stages in the design process, are not relevant to synthesis. Because these constructs cannot be synthesized, Presto VHDL does not support them.

This appendix provides a list of synthesizable VHDL language constructs, with the level of support for each, followed by a list of VHDL reserved words.

This appendix includes the following sections:

- [VHDL Construct Support](#)
- [Predefined Language Environment](#)
- [VHDL Reserved Words](#)

VHDL Construct Support

A construct can be fully supported, ignored, or unsupported. Ignored and unsupported constructs are defined as follows:

- Ignored means that the construct is allowed in the VHDL source but is ignored by Presto VHDL.
- Unsupported means that the construct is not allowed in the VHDL source and that Presto VHDL flags it as an error. If errors are in a VHDL description, the description is not read.

The following subsections describe the constructs:

- [Configurations](#)
- [Design Units](#)
- [Data Types](#)
- [Declarations](#)
- [Specifications](#)
- [Names](#)
- [Operators](#)
- [Operands and Expressions](#)
- [Sequential Statements](#)
- [Concurrent Statements](#)
- [Lexical Elements](#)

Configurations

The HDL Compiler (Presto Verilog) tool supports standalone, nested, and embedded configurations. For details, see [“Configuration Support” on page 1-20](#).

Design Units

entity

The entity statement part is ignored.

Default values for ports are ignored.

generics

In addition to supporting integer-type generics, Presto VHDL adds support for the following types: `bit`, `bit_vector`, `std_ulogic`, `std_ulogic_vector`, `std_logic`, `std_logic_vector`, `signed`, and `unsigned`. Presto VHDL also supports integer arrays and strings as generics.

architecture

Multiple architectures are allowed. Global signal interaction between architectures is unsupported.

configuration

Configuration declarations and block configurations are supported, but only to specify the top-level architecture for a top-level entity. See [“Configuration Support” on page 1-20](#).

The use clauses and attribute specifications are unsupported.

package

Packages are fully supported.

library

Libraries and separate compilation are supported.

subprogram

Default values for parameters are unsupported. Assigning to indexes and slices of unconstrained out parameters is unsupported, unless the actual parameter is an identifier.

Subprogram recursion is unsupported if the recursion is not bounded by a static value.

Resolution functions are supported for wired-logic and three-state functions only.

Subprograms can be declared only in packages and in the declaration part of an architecture.

Data Types

enumeration

Enumeration is fully supported.

real

Constant real data types are fully supported.

integer

Infinite-precision arithmetic is unsupported.

Integer types are automatically converted to bit vectors whose width is as small as possible to accommodate all possible values of the type's range. The type's range can be either in unsigned binary for nonnegative ranges or in 2's-complement form for ranges that include negative numbers.

physical

Physical type declarations are ignored. The use of physical types is ignored in delay specifications.

floating

Floating-point type declarations are ignored. The use of floating-point types is unsupported except for floating-point constants used with Synopsys defined attributes.

array

Array ranges and indexes other than integers are unsupported.

Multidimensional arrays are supported. See [Table D-2 on page D-7](#).

record

Record data types are fully supported.

access

Access type declarations are ignored, and the use of access types is unsupported.

file

File type declarations are ignored, and the use of file types is unsupported.

incomplete type declarations

Incomplete type declarations are unsupported.

Declarations

constant

Constant declarations are supported except for deferred constant declarations.

signal

Register and bus declarations are unsupported. Resolution functions are supported for wired and three-state functions only. Declarations other than from a globally static type are unsupported. Initial values are unsupported.

variable

Declarations other than from a globally static type are unsupported. Initial values are unsupported.

shared variable

Variable shared by different processes. Shared variables are fully supported.

file

File declarations are unsupported.

interface

Buffer and linkage are translated to out and inout, respectively.

alias

Alias declarations are supported. See [Table D-2 on page D-7](#).

component

Component declarations that list a name other than a valid entity name are unsupported. However, Presto VHDL allows components to be directly instantiated in the design without a component declaration. See [“Direct Instantiation of Components” on page 2-3](#).

attribute

Attribute declarations are fully supported, but the use of user-defined attributes is unsupported.

group

Presto VHDL supports VHDL-93 group declarations. This allows you to create groups of named entities. One useful application of this feature is that you can apply attributes to the group as a whole instead of referencing individual signals. See [“Groups” on page 2-17](#).

Specifications

attribute

Presto supports the ``leftof`, ``rightof`, `pos`, `val`, `succ`, and `pred` attributes for enum data types. Presto supports the `pos`, `val`, `succ`, and `pred` attributes for integer and range data types. Presto supports the `'high(n)`, `'low(n)`, `'left(n)`, `'right(n)`, and `'length(n)` attributes on multidimensional arrays. Others and `all` are unsupported in attribute specifications. User-defined attributes can be specified, but the use of user-defined attributes is unsupported.

configuration

Configuration specifications are unsupported.

disconnection

Disconnection specifications are unsupported. Attribute declarations are fully supported, but the use of user-defined attributes is unsupported.

Names

simple

Simple names are fully supported.

selected

Selected (qualified) names outside a use clause are unsupported. Overriding the scopes of identifiers is unsupported.

operator symbol

Operator symbols are fully supported.

indexed

Indexed names are fully supported, with one exception: Indexing an unconstrained out parameter in a procedure is unsupported.

slice

Slice names are fully supported, with one exception: Using a slice of an unconstrained out parameter in a procedure is unsupported unless the actual parameter is an identifier.

attribute

Only the following predefined attributes are supported: `base`, `left`, `right`, `high`, `low`, `range`, `reverse_range`, `length`, and `ascending`. The `event` and `stable` attributes are supported only as described with the `wait` and `if` statements. User-defined attribute names are unsupported. The use of attributes with selected names (name.name'attribute) is unsupported.

[Table C-1](#) shows the values of some array attributes for the variable `MY_VECTOR` in [Example C-1](#).

Table C-1 Array Index Attributes

Attribute Expression	Value
<code>MY_VECTOR'left</code>	5
<code>MY_VECTOR'right</code>	−5
<code>MY_VECTOR'high</code>	5
<code>MY_VECTOR'low</code>	−5
<code>MY_VECTOR'length</code>	11
<code>MY_VECTOR'range</code>	(5 downto −5)
<code>MY_VECTOR'reverse_range</code>	(−5 to 5)

Example C-1 Unconstrained Array Type Definition

```
type BIT_VECTOR is array(INTEGER range <>) of BIT;
-- An unconstrained array definition
. . .
variable MY_VECTOR : BIT_VECTOR(5 downto -5);
```

See [Table 6-2 on page 6-7](#) for Synopsys defined attributes.

Operators

logical

Logical operators are fully supported.

relational

Relational operators are fully supported.

addition

Concatenation and arithmetic operators are fully supported. The default concatenation support is for the 93 LRM definition. To enable the 87 LRM definition, see [“Concatenation” on page 2-28](#).

signing

Signing operators are fully supported.

divide, mod, rem

The / (division), mod, and rem operators are fully supported in the std_logic_arith and the numeric_std packages.

multiply

The * multiply operator is fully supported.

exponentiation

The ** operator is supported only when both operands are constant or when the left operand is 2. Presto VHDL predefines the exponentiation operator for all integer types.

absolute value

The abs operator is fully supported. Presto VHDL predefines the absolute value operator for all integer types.

operator overloading

Operator overloading is fully supported.

short-circuit operation

The short-circuit behavior of operators is not supported.

Shift and rotate operators

You can define shift and rotate operators for any one-dimensional array type whose element type is either of the predefined types, BIT or Boolean. The right operand is always of type integer. The type of the result of a shift operator is the same as the type of the left operand. The shift and rotate operators are included in the list of VHDL reserved words in [Table C-2 on page C-13](#). There is more information about the shift and rotate operators that numeric_std supports in [“Shift and Rotate Functions” on page B-23](#). The shift operators are

sll

Shift left logical

srl

Shift right logical

sla

Shift left arithmetic

sra

Shift right arithmetic

The rotate operators are

rol

Rotate left logical

ror

Rotate right logical

[Example C-2](#) illustrates the use of shift and rotate operators.

Example C-2 Use of Shift and Rotate Operators

```
architecture arch of shift_op is
begin
    a <= "01101";
    q1 <= a sll 1;           -- q1 = "11010"
    q2 <= a srl 3;           -- q2 = "00001"
    q3 <= a rol 2;           -- q3 = "10101"
    q4 <= a ror 1;           -- q4 = "10110"
    q5 <= a sla 2;           -- q5 = "10100"
    q6 <= a sra 1;           -- q6 = "00110"
end;
```

XNOR Operator

You can define the binary logical operator XNOR for predefined types BIT and Boolean as well as for any one-dimensional array type whose element type is BIT or Boolean. The operands must be the same type and length. The result also has the same type and length. The XNOR operator is included in the list of VHDL reserved words in [Table C-2 on page C-13](#).

Example C-3 Showing Use of XNOR Operator

```
a <= "10101";
b <= "11100";
c <= a xnor b;           -- c = "10110"
```

Operands and Expressions

based literal

Based literals are fully supported.

null literal

Null slices, null ranges, and null arrays are unsupported.

physical literal

Physical literals are ignored.

string

Strings are fully supported.

aggregate

The use of types as aggregate choices is supported. Record aggregates are supported.

function call

Function calls are supported. Function conversions on input ports are supported, because type conversions on formal ports in a connection specification (port map) are supported. Presto supports the usage of unconstrained type ports when the type of the ports can be deduced. In these cases, you must use analyze/elaborate to read your design. The read command does not support type conversion on formal ports.

qualified expression

Qualified expressions are fully supported.

type conversion

Type conversion is fully supported.

allocator

Allocators are unsupported.

static expression

Static expressions are fully supported.

universal expression

Floating-point expressions are unsupported, except in a Synopsys-recognized attribute definition. Infinite-precision expressions are not supported. Precision is limited to 32 bits; all intermediate results are converted to integers.

Sequential Statements

wait

The wait statement is unsupported unless it is in one of the following forms:

```
wait until          clock = VALUE;
wait until clock'event and clock = VALUE;
wait until not clock'stable and clock = VALUE;
```

Where, *VALUE* is '0', '1', or an enumeration literal whose encoding is 0 or 1. A wait statement in this form is interpreted to mean "wait until the falling (*VALUE* is '0') or rising (*VALUE* is '1') edge of the signal named *clock*." You cannot use wait statements in subprograms or for-loop statements. If any path through the logic has a wait statement, all the paths must have a wait statement. Presto VHDL supports only one wait statement per process.

assert

Assert statements are treated like display statements. An code snippet is shown below.

```
Assert (c) report "...";

-- is the same as

If (!c)
    $display ("...");
```

report

Report statements are ignored.

statement label

Statement labels are ignored.

signal

Guarded signal assignment is unsupported. The transport and after signals are ignored. Multiple waveform elements in signal assignment statements are unsupported.

variable

Variable statements are fully supported.

procedure call

Type conversion on formal parameters is unsupported. Assignment to single bits of vectored ports is unsupported.

if

The if statements are fully supported.

case

The case statements are fully supported.

loop

The for loops are supported, with two constraints: The loop index range must be globally static, and the loop body must not contain a wait statement. The while loops are supported, but the loop body must contain at least one wait statement. Combinational while loops are supported if the iterative bound is statically determinable. The loop statements with no iteration scheme (infinite loops) are supported, but the loop body must contain at least one wait statement.

next

Next statements are fully supported.

exit

Exit statements are fully supported.

return

Return statements are fully supported.

null

Null statements are fully supported.

Concurrent Statements

block

Guards on block statements are supported. Ports and generics in block statements are unsupported.

process

Sensitivity lists in process statements are ignored.

concurrent procedure call

Concurrent procedure call statements are fully supported.

concurrent assertion

Concurrent assertion statements are ignored.

concurrent signal assignment

The `guarded` keyword is supported. The `transport` keyword is ignored. Multiple waveforms are unsupported.

component instantiation

Type conversion on formal ports of a connection specification is supported. Presto supports the usage of unconstrained type ports when the type of the ports can be deduced. In these cases, you must use `analyze/elaborate` to read your design. The `read` command does not support type conversion on formal ports.

generate

The generate statements are fully supported.

Lexical Elements

An identifier in VHDL is a user-defined name for any of these: constant, variable, function, signal, entity, port, subprogram, parameter, or instance.

Specifics of Identifiers

The characteristics of identifiers are as follows:

- They can be composed of letters, digits, and the underscore character (`_`).
- Their first character must be a letter, unless it is an extended identifier (see [Example C-4 on page C-13](#)).
- They can be of any length.
- They are case-insensitive.
- All of their characters are significant.

Specifics of Extended Identifiers

The characteristics of extended identifiers are as follows:

- Any of the following can be defined as one:
 - Identifiers that contain special characters
 - Identifiers that begin with numbers
 - Identifiers that have the same name as a keyword
- They start with a backslash character (`\`), followed by a sequence of characters, followed by another backslash (`\`).
- They are case-sensitive.

[Example C-4](#) shows some extended identifiers.

Example C-4 Sample Extended Identifiers

```

\ a+b \           \ 3state \
\ type \         \ (a&b) | c \

```

Predefined Language Environment

severity_level type

The severity_level type is unsupported.

time type

The time type is ignored if time variables and constants are used only in after clauses. In the following two code fragments, both the after clause and TD are ignored:

```

constant TD: time := 1.4 ns;
X <= Y after TD;

X <= Y after 1.4 ns;

```

now function

The now function is unsupported.

TEXTIO package

The TEXTIO package is unsupported. The TEXTIO package defines types and operations for communication with a standard programming environment (terminal and file I/O). This package is not needed for synthesis; therefore, Presto VHDL does not support it.

predefined attributes

These predefined attributes are supported: base, left, right, high, low, range, reverse_range, ascending, and length. The event and stable attributes are supported only in the if and wait statements.

VHDL Reserved Words

[Table C-2](#) lists the words that are reserved for the VHDL language and cannot be used as identifiers:

Table C-2 VHDL Reserved Words

abs	access	after	alias	all	and
architecture	array	assert	attribute	begin	block
body	buffer	bus	case	component	configuration

Table C-2 VHDL Reserved Words (Continued)

constant	disconnect	downto	else	elsif	end
entity	exit	file	for	function	generate
generic	group	guarded	if	impure	in
inertial	inout	is	label	library	linkage
literal	loop	map	mod	nand	new
next	nor	not	null	of	on
open	or	others	out	package	port
postponed	procedure	process	pure	range	record
register	reject	rem	report	return	rol
ror	select	severity	shared	signal	sla
sll	sra	srl	subtype	then	to
transport	type	unaffected	units	until	use
variable	wait	when	while	with	xnor
xnor					

D

New Features and Enhancements in Presto VHDL

This appendix describes new features and enhancements in Presto VHDL in the following sections.

- [VHDL-93 Supported Features](#)
- [New Features and Enhancements History](#)

VHDL-93 Supported Features

[Table D-1](#) lists VHDL-93 specific constructs and the level of support for these constructs in Presto VHDL. The VHDL-93 specific changes are indicated in the column titled “Construct.”

The following values are used in the table:

- Reserved—This word is a reserved keyword for the tool.
- Yes—This feature is supported for synthesis.
- Ignored—This feature may be coded but is ignored for synthesis.
- No—This feature is not supported; use will generate an error.

For detailed construct definitions, see the VHDL language reference manual (IEEE 1076-1993).

Table D-1 VHDL-93 Supported Features

Topic	Construct	Presto VHDL	Notes
Reserved keywords	group	Reserved	
	impure	Reserved	
	inertial	Reserved	
	literal	Reserved	
	postponed	Reserved	
	pure	Reserved	
	reject	Reserved	
	rol	Reserved	
	ror	Reserved	
	shared	Reserved	
	sla	Reserved	
	sll	Reserved	
	sra	Reserved	

Table D-1 VHDL-93 Supported Features (Continued)

Topic	Construct	Presto VHDL	Notes
	srl	Reserved	
	unaffected	Reserved	
	xnor	Reserved	
Identifiers	Extended identifiers	Yes	
Bit string literals	Bit string literals can be assigned to: std_logic_vector std_ulogic_vector	Yes	
Signal assignment	Assignment supports optional label inertial reject	Yes Ignored Ignored	
Variables	Assignment supports optional label Shared variables	Yes Yes	
Files	New open_mode values 'image and 'value attributes VHDL-93 file declaration syntax	No No No	
Record declaration	“end record <type>;” The record type may optionally be added after “end record”.	Yes	
Standard data types	Extended character sets supported in character and strings New file-related types: file_open_kind, file_open_status	Yes No	
Standard subtypes	New implicit subtype “delay_length”	No	
Shift operators	sll srl	Yes Yes	

Table D-1 VHDL-93 Supported Features (Continued)

Topic	Construct	Presto VHDL	Notes
	sla	Yes	
	sra	Yes	
	rol	Yes	
	ror	Yes	
Logical operators	xnor	Yes	
Alias	Alias everything except: generate parameters labels loop parameter	Yes	See “Aliases” on page 2-12 for details.
Entity	“end entity <name>;” Extra keyword “entity” can be used	Yes	
Architecture	“end architecture <name>;” Extra keyword “architecture” can be used	Yes	
Groups	Group template declaration	Yes	
	Group declaration	Yes	
Assert	Supports optional label	Ignored	
Block statement	“label: block is” Extra keyword “is” can be used	Yes	
Case	Supports optional label	Yes	
Component declaration	Component declaration is optional	Yes	
	“component <name> is” Extra keyword “is” can be used	Yes	
	“end component <name>;” Component name can be added	Yes	
Component instantiation	Direct instantiation with entity/ architecture pair	Yes	

Table D-1 VHDL-93 Supported Features (Continued)

Topic	Construct	Presto VHDL	Notes
Configuration declaration	Configuration declaration can override configuration specification “end configuration <name>;” Extra keyword “configuration” supported	No Yes	Configuration is ignored, use “elaborate -arch”
Concurrent signal assignment	unaffected inertial reject supports optional label	Yes Ignored Ignored Yes	
Exit statement	supports optional label	Yes	
Function	“end function <name>;” Extra keyword “function” can be used pure impure	Yes Ignored Ignored	All functions are implicitly considered pure
Generate Statement	Local declarations	Yes	
If statement	Supports optional label	Yes	
Next statement	Supports optional label	Yes	
Null statement	Supports optional label	Yes	
Packages	Shared variables Group declaration	Yes Yes	
Procedures	“end procedure <name>;” Extra keyword “procedure” can be used	Yes	

Table D-1 VHDL-93 Supported Features (Continued)

Topic	Construct	Presto VHDL	Notes
Process	“process (...) is” Extra keyword “is” can be used	Yes	
	postponed	Ignored	
Wait statement	Supports optional label	Yes	
Predefined attributes	signal'DRIVING	No	Planned for future Presto VHDL release
	signal'DRIVING_VALUE	No	
	obj'ASCENDING	Yes	
	type'IMAGE(obj)	No	
	type'VALUE(string)	No	
	obj'SIMPLE_NAME	No	
	obj'INSTANCE_NAME	No	
	obj'PATH_NAME	No	

New Features and Enhancements History

[Table D-2](#) lists the new features and enhancements implemented in Presto VHDL.

Table D-2 New Features and Enhancements in Presto VHDL

Topic	Description
As of the C-2009.06 release	
Automatic detection of RTL language from file extensions by using the <code>read_file -format</code> command.	See “Automatic Detection of RTL Language From File Extensions” on page 1-6 .
Reporting simplification by using the <code>hdlm_reporting_level</code> variable.	See “Elaboration Reports” on page 1-7 .
Controlling the automatic setting of the <code>size_only</code> attribute on MUX_OPs by using the <code>hdlm_mux_size_only</code> variable.	See “MUX_OP Inference” on page 3-10 .
As of the B-2008.09 release	
Embedded configurations	See “Configuration Support” on page 1-20 .
VHDL 87 concatenation support	See “Concatenation” on page 2-28 .
As of the A-2007.12 release	
<code>keep_signal_name</code> pragma	See “Keeping Signal Names” on page 2-31 .
<code>math_real</code> package support	See “math_real Package Support” on page 2-22 .
As of the Z-2007.03 release	
Improved set/reset inference	See “D Flip-Flop With Complex Set/Reset Signals” on page 4-25 .
As of the Y-2006.06 release	
Improved elaboration error reporting	Presto VHDL supports hierarchical error reporting. See “Reporting Elaboration Errors” on page 1-8 .

Table D-2 New Features and Enhancements in Presto VHDL (Continued)

Topic	Description
Enhanced library linking	Beginning with the Y-2006.06 release, Presto VHDL supports automatic linking of mixed language libraries. In Verilog, the default library is the work directory, and you cannot have multiple libraries. In VHDL however, you can have multiple design libraries. In earlier versions, Presto VHDL could not link mixed libraries and returned LINK-5 warnings. See “Reading Designs” on page 1-3 .
Real data types	Constant real data types are fully supported. See “Data Types” on page C-3 . Example: sample_in : IN fsigned(4 DOWNT0 -7); sample_out <= sample_in + 1.5;
Enhanced generic and string support	Presto VHDL supports integer arrays and strings as generics. See “Data Types” on page C-3 . Example: TYPE integer_vect IS ARRAY (natural RANGE <>) OF integer; ki_coeff : integer_vect:=(10,13,15,16); generic (g: string:= "abc");
Enhanced enum, integer, and array attribute support	Presto VHDL expands attribute support for enum and integer data types. See “Specifications” on page C-5 .
Unconstrained entity and component ports support	Presto supports the usage of unconstrained type ports when the type of the ports can be deduced. See “Unconstrained Type Ports” on page 2-30 and “Operands and Expressions” on page C-9 and “Concurrent Statements” on page C-11 . Example: COMPONENT my_comp PORT (sample_in1 : IN unsigned;
STD_MATCH	Support for STD_MATCH. See “Don’t Care Values in Comparisons” on page 2-44 .

Glossary

anonymous type

A predefined or underlying type with no name, such as a universal integer.

architecture body

The VHDL description of the internal organization or operation of a design entity.

ASIC

Application-specific integrated circuit.

behavioral view

The set of VHDL statements that describe the behavior of a design by using sequential statements. These statements are similar in expressive capability to those found in many other programming languages. See also *data flow view*, *sequential statement*, and *structural view*.

bit-width

The width of a variable, signal, or expression in bits. For example, the bit-width of the constant "5" is 3 bits.

character literal

Any value of type CHARACTER in single quotation marks.

computable

Any expression whose (constant) value can be determined.

concurrent statements

VHDL statements that execute asynchronously in no defined relative order. Concurrent statements make up the data flow and structural views in VHDL.

configuration body

The VHDL description of how component instances are bound to design entities to form a complete, linked design.

constraints

The designer's specification of design performance goals. Design Compiler uses constraints to direct the optimization of a design to meet area and timing goals.

convert

To change one type to another. Only integer types and subtypes are convertible, along with same-size arrays of convertible element types.

data flow view

The set of VHDL statements that describe the behavior of a design by using concurrent statements. These descriptions are usually at the level of Boolean equations combined with other operators and function calls. See also *behavioral view*, *concurrent statements*, and *structural view*.

Design Compiler

The Synopsys tool that synthesizes and optimizes ASIC designs from multiple input sources and formats.

design constraints

See *constraints*.

design entity

In VHDL, the combination of an entity declaration and one or more architectural bodies constitute a design entity.

flip-flop

An edge-sensitive memory device.

HDL

Hardware Description Language.

identifier

A sequence of letters, underscores, and numbers. An identifier cannot be a VHDL reserved word, such as type or loop. An identifier must begin with a letter or an underscore.

latch

A level-sensitive memory device.

netlist

A network of connected components that together define a design.

optimization

The modification of a design in an attempt to improve some performance aspect of the design. Design Compiler optimizes designs and tries to meet specified design constraints for area and speed.

package

A collection of declarations that is available to more than one design entity.

port

A signal declared in the interface list of an entity.

reduction operator

An operator that takes an array of bits and produces a single-bit result, namely the result of the operator applied to each successive pair of array elements.

register

A memory device containing one or more flip-flops or latches used to hold a value.

resource sharing

The assignment of similar VHDL operations, such as +, to a common netlist cell. Netlist cells are the resources—they are equivalent to built hardware.

RTL

Register transfer level, a set of structural and data flow statements.

sequential statement

The set of VHDL statements that execute in sequence.

signal

An electrical quantity that can be used to transmit information. A signal is declared with a type and receives its value from one or more drivers. Signals are created in VHDL through either signal or port declarations.

signed value

A value that can be positive, 0, or negative.

structural view

The set of VHDL statements used to instantiate primitive and hierarchical components in a design. A VHDL design at the structural level is also called a netlist. See also *behavioral view* and *data flow view*.

subtype

A type declared as a constrained version of another type.

synthesis

The creation of optimized circuits from a high-level description.

technology library

A library of ASIC cells available to Design Compiler during the synthesis process. A technology library can contain area, timing, and functional information on each ASIC cell.

translation

The mapping of high-level language constructs onto a lower-level form.

type

In VHDL, the mechanism by which objects are restricted in the values they are assigned and the operations that can be applied to them.

unsigned

A value that can be only positive or 0.

variable

A VHDL object local to a process or subprogram that has a single current value.

VHDL

VHSIC Hardware Description Language, used to describe discrete systems.

VHSIC

Very-high-speed integrated circuit, a high-technology program of the United States Department of Defense.

Index

Symbols

" - " operator 3-4
" + " operator 3-4
"* " operator C-7
"* *" operator C-7
"<=" operator B-12
"<" operator 3-4
">=" operator B-12
">" operator 3-4, B-12
"/ " operator C-7

A

adders

- carry-lookahead adder A-20
- Definable-Width Adder-Subtractor A-6
- numeric_std package B-17

adder-subtractor (example) A-6

aggregates C-9

alias declarations
supported C-5

architecture
consistency
component instantiation 2-8

arithmetic functions
numeric_std
unary B-18

numeric_std package
binary B-17

assert statement C-10

assignment statement
indexed name target 2-28

asynchronous processes 2-45

attribute declarations C-5

attributes

- ascending C-6
- ENUM_ENCODING 6-9
- event C-6
- high C-6
- infer_mux 6-5
- left C-6
- length C-6
- load 6-6
- logic_one 6-6
- logic_zero 6-6
- low C-6
- map_only 2-6
- map_to_module 6-6
- max_area 6-6
- max_delay 6-6
- max_fall_delay 6-6
- max_rise_delay 6-6
- max_transition 6-6
- min_delay 6-6
- min_fall_delay 6-6

- min_rise_delay 6-6
- one_cold 6-6
- one_hot 6-6
- opposite 6-6
- range C-6
- reverse_range C-6
- right C-6
- rise_arrival 6-6
- rise_drive 6-6
- stable C-6
- STATE_VECTOR 2-39
- sync_set_reset 6-6
- Synopsys-defined C-7
- unconnected 6-6
- VHDL
 - ENUM_ENCODING 2-19, 6-9
 - ENUM_ENCODING values 6-9
- ATTRIBUTES package 1-52, B-1, B-29

B

- binary arithmetic functions
 - example B-10
 - numeric_std package B-18
- bit name
 - variable type 7-5
- bit vectors
 - variable type 7-5
- BIT_VECTOR type B-5, B-27
- bit-blasting 7-7
- bit-width (of operands) 2-24
- Boolean reduction functions B-26
- built_in directive
 - logic functions B-2
 - type conversion B-3
 - using B-2
- built_in pragma
 - example of using B-2
- bused clock
 - syntax 4-15

C

- carry-out bit
 - example of using B-12
- case statements
 - embedded in if-then-else statements, unless the case statement appears in an if (CLK'event...) 3-16
 - FSM coding requirements 2-36
 - generate MUX_OP cells 3-11
 - hdlin_infer_mux 3-12
 - hdlin_mux_size_limit 3-13
 - in an elsif (CLK'event...) branch 3-16, 3-17
 - in while loops 3-16
 - infer multibit components 2-41
 - infer MUX_OP cells 3-11
 - infer_mux attribute 3-11
 - infer_mux directive 3-12
 - missing assignment in a case statement
 - branch 3-16
 - SELECT_OP Inference 3-8
 - supported constructs C-11
 - Supports optional label D-4
 - used in multiplexing logic 3-8
- clock, bused 4-15
- combinational feedback
 - paths 3-17
- comparison functions
 - numeric_std B-19
- component
 - declaration
 - writing out 7-4
 - implication
 - three-state driver 5-1
 - instantiation
 - search order 2-5
 - mapping subprogram to 2-8
- component declarations C-5
- computable operands 2-25
- conditionally assigned variable 4-14
- conditionally specified signal 3-18
- constant declaration

- supported C-4
- constant propagation 3-5
- continuous assignments
 - hdlin_prohibit_nontri_multiple_drivers 6-13
- control unit (example)
 - counting A-14
 - state machine A-11
- Controlling Register Inference 4-5
- conversion functions
 - arithmetic
 - binary B-9
 - numeric_std package
 - TO_INTEGER B-17
 - TO_SIGNED B-17
 - TO_UNSIGNED B-17
 - std_logic_arith package B-8

D

- data type
 - abstract
 - BOOLEAN B-28
 - array attributes
 - index C-6
 - BIT B-28
 - BIT_VECTOR B-29
 - BOOLEAN B-28
 - CHARACTER B-28
 - integer
 - defined B-29
 - supported C-3
 - SYNOPSIS
 - std_logic_signed 2-17
- data types
 - numeric_std
 - SIGNED B-16
 - UNSIGNED B-16
- dc_script_end directive 6-3, 6-4
- dc_shell variables
 - vhdlout_ 7-3
 - vhdlout_bit_type 7-5

- vhdlout_bit_vector_type 7-5
- vhdlout_dont_create_dummy_nets 7-3
- vhdlout_equations 7-3
- vhdlout_follow_vector_direction 7-3
- vhdlout_local_attributes 7-3
- vhdlout_one_name 7-5
- vhdlout_preserve_hierarchical_types 7-7
- vhdlout_separate_scan_in 7-3
- vhdlout_single_bit 7-7
- vhdlout_three_state_name 7-6
- vhdlout_three_state_res_func 7-6
- vhdlout_unknown_name 7-6
- vhdlout_upcase 7-4
- vhdlout_use_packages 7-4
- vhdlout_wired_and_res_func 7-6
- vhdlout_wired_or_res_func 7-6
- vhdlout_write_components 7-4
- vhdlout_zero_name 7-6
- write variables 7-3
- Design Compiler 2-34
 - component instantiation 2-5
 - write command 7-2
- directives
 - built_in 7-12, B-6
 - identifying B-6
 - dc_script_begin 6-3
 - dc_script_end 6-3
 - keep_signal_name 2-31
 - map_to_entity 2-8, 6-3
 - resolution_method 2-33
 - return_port_name 2-8, 6-3
 - using 2-33
- don't care 3-17
- don't care inference
 - simulation versus synthesis 2-44
- don't cares
 - encoding values for the ENUM_ENCODING
 - attribute 6-9
 - in case statements 3-17
 - simulation/synthesis mismatch 2-44

E

- edge expression 4-36
- elaboration reports 1-7
- embedding constraints and attributes
 - dc_script_end 6-3
- embedding constraints and attributes
 - dc_script_begin 6-3
- encoding
 - values
 - ENUM_ENCODING attribute 6-9
- entity
 - consistency
 - component instantiation 2-7
- ENUM_ENCODING attribute 2-19, 6-9
 - values 6-9
 - vectors 6-9
- enumerated types
 - ordering 2-45
- enumeration data type
 - encoding
 - ENUM_ENCODING attribute 2-19, 6-9
 - ENUM_ENCODING value 6-9
 - literal value 2-18
 - example
 - encoding 2-18
 - literal, overloaded 2-18
- equality functions
 - example B-14
- errors 6-4, 6-13
- escaped identifier. *See* extended identifier
- examples
 - adder-subtractor A-6
 - asynchronous design
 - incorrect 2-34
 - carry-lookahead adder A-20
 - component implication 2-9
 - control unit
 - counting A-14
 - state machine A-11
 - count zeros
 - combinational A-7
 - sequential A-9
 - Mealy finite state machine A-18
 - Moore finite state machine A-16
 - PLA A-33
 - ROM A-2
 - serial-to-parallel converter
 - counting bits A-26
 - shifting bits A-31
 - three-state component
 - registered input 5-7
 - two-phase clocked design 4-35
 - waveform generator
 - simple A-4
 - writing out port types 7-9
- Explicit bit-truncation 3-5
- extended identifier C-12

F

- falling_edge 4-18
- feedback paths 3-17
- file declarations C-5
- file formats, automatic detection of 1-6
- finite state machine 2-35
 - automatic detection 2-35
- finite state machines
 - automatic detection 2-35
 - coding guidelines 2-36
 - fsm_auto_inferring 2-35
 - Inference Report 2-39
 - Mealy finite state machine A-18
 - Moore finite state machine A-16
 - STATE_VECTOR attribute 2-39
- flip 1-18, 4-36
- flip-flop
 - async_set_reset 4-6
 - clocked_on_also 4-7
 - clocked_on_also attribute 4-32
 - creating parameterized models 1-18
 - D Flip-Flop With Asynchronous Reset 4-20
 - D Flip-Flop With Asynchronous Set 4-19

- D Flip-Flop With Asynchronous Set and Reset 4-21
- D Flip-Flop With Synchronous and Asynchronous Load 4-26
- D Flip-Flop With Synchronous Reset 4-23
- D Flip-Flop With Synchronous Set 4-22
- forcing specific GTECH components 2-6
- hdlin_ff_always_async_set_reset 4-5
- hdlin_ff_always_sync_set_reset 4-5
- hdlin_keep_feedback 4-5
- if (falling_edge (CLK)) then 4-15
- if (rising_edge (CLK)) then 4-15
- If the technology library does not contain the specific inferred flip-flop 4-3
- infer a register as an FSM state register 2-36
- infer as multibit 2-40
- inference design requirements 4-36
- Inference Report for a D Flip-Flop With Asynchronous Reset 4-20
- Inference Report for a D Flip-Flop With Asynchronous Set 4-19
- Inference Report for a D Flip-Flop With Asynchronous Set and Reset 4-21
- Inference Report for a D Flip-Flop With Synchronous and Asynchronous Load 4-26
- Inference Report for a D Flip-Flop With Synchronous Reset 4-24
- Inference Report for a D Flip-Flop With Synchronous Set 4-23
- Inference Report for a JK Flip-Flop 4-30
- Inference Report for a JK Flip-Flop With Asynchronous Set and Reset 4-31
- Inference Report for Negative-Edge-Triggered D Flip-Flop 4-19
- Inference Report for Positive-Edge-Triggered D Flip-Flop 4-17
- Inferring D Flip-Flops 4-15
- JK Flip-Flop With Asynchronous Set and Reset 4-31
- JK flip-flops 4-29
- master-slave latches 4-32
- Multiple Flip-Flops with Asynchronous and Synchronous Controls 4-27

- Negative-Edge-Triggered D Flip-Flop 4-18
- Negative-Edge-Triggered D Flip-Flop Using 'event 4-18
- Negative-Edge-Triggered D Flip-Flop Using falling_edge 4-18
- on the input pin of a three-state buffer 5-7
- one_cold 4-7
- Positive-Edge-Triggered D Flip-Flop 4-16
- Positive-Edge-Triggered D Flip-Flop Using 'event Attribute 4-17
- Positive-Edge-Triggered D Flip-Flop Using rising_edge 4-17
- Register banks 4-36
- SEQGENs 4-2
- SIGNAL'event and SIGNAL = '0' 4-15
- sync_set_reset 4-6
- unmapped master-slave generic cell (MSGEN) 4-32
- used to describe the master-slave latch 4-32
- using the IEEE std_logic_1164 package 4-15
- with bidirectional pins 4-36
- with multiple clock inputs 4-36
- with three-state outputs 4-36
- FSM inference report 2-37
- fully specified
 - signal 3-17
 - variable 3-17
- function
 - resolution
 - example 2-33
- functions 6-4
 - implementations
 - mapped to gates 2-10

G

- GTECH.db generic library
 - component instantiation
 - structural design 2-6
 - link_library variable
 - Design Compiler 2-7
- guard

on block statement C-11
 guarded keyword C-11

H

hdlin_infer_enumerated_types 6-11
 hdlin_infer_function_local _latches 6-11
 hdlin_infer_function_local_latches 6-11
 hdlin_infer_mux 3-12
 hdlin_keep_signal_name variable 2-31
 hdlin_mux_oversize_ratio 3-13, 6-11
 hdlin_mux_size_limit 3-13
 hdlin_mux_size_min 3-13, 6-11
 hdlin_mux_size_only variable 3-13, 6-12
 hdlin_no_sequential_mapping 6-12
 hdlin_one_hot_one_cold_on 6-12
 hdlin_optimize_array_references 6-12
 hdlin_optimize_enum_types 6-12
 hdlin_preserve_sequential variable 4-37
 hdlin_prohibit_nontri_multiple _drivers 6-13
 hdlin_report_fsm directive 2-35
 hdlin_reporting_level variable 1-7, 2-37, 4-4, 5-2
 hierarchy
 preserving types 7-7
 high impedance state 5-1

I

identifiers
 characteristics C-12
 extended C-12
 if statements
 D flip-flop inference requirements 4-36
 hdlin_infer_mux 3-12
 in an invalid use of a conditionally assigned variable 4-14
 in case statements 3-16
 incompletely specified 4-9
 infer MUX_OP cells 3-11

infers a D flip-flop 4-15
 infers a D latch 4-9
 optional label D-5
 support for the event and stable attributes C-6
 supported construct C-11
 Implicit bit-truncation 3-6
 incompletely specified case statement 3-17
 incompletely specified signals and variables 3-17
 indexed name target 2-28
 infer_mux 3-11, 3-12
 inference report
 description 5-2
 inference reports 4-4, 5-2
 inferred registers
 limitations 4-36
 instantiation
 component
 search order 2-5
 integer data type
 encoding 2-17
 subrange 2-17

K

keep_signal_name directive 2-31
 Keeping Signal Names 2-31

L

language constructs, VHDL
 concurrent statements
 assertion C-11
 block C-11
 generate C-12
 procedure call C-11
 process C-11
 signal assignment C-11
 data types
 access C-4

- array C-4
- enumeration C-3
- file C-4
- floating C-4
- incomplete type declarations C-4
- integer C-3
- physical C-4
- record C-4
- declaration
 - attribute C-5
 - component C-5
 - constant C-4
 - file C-5
 - interface C-5
 - signal C-4
 - variable C-4
- design units
 - architecture C-3
 - configuration C-3
 - entity C-2
 - library C-3
 - package C-3
 - subprogram C-3
- expressions
 - aggregate C-9
 - allocator C-9
 - based literal C-9
 - function call C-9
 - null literal C-9
 - physical literal C-9
 - static expression C-9
 - string C-9
 - type conversion C-9
 - universal expression C-10
- names
 - attribute C-6
 - indexed C-6
 - operator symbol C-6
 - selected C-6
 - simple C-6
 - slice C-6
- operands
 - aggregate C-9
 - allocator C-9
 - based literal C-9
 - function call C-9
 - null literal C-9
 - physical literal C-9
 - static expression C-9
 - string C-9
 - type conversion C-9
 - universal expression C-10
- operators
 - addition C-7
 - logical C-7
 - miscellaneous C-7
 - multiplying C-7
 - relational C-7
 - short-circuit operation C-7
 - signing C-7
- predefined language environment
 - now function C-13
 - predefined attributes C-13
 - severity_level type C-13
 - TEXTIO package C-13
 - time type C-13
- reserved words C-13
- sequential statements
 - assertion C-10
 - case C-11
 - exit C-11
 - if C-11
 - loop C-11
 - next C-11
 - null C-11
 - procedure call C-10
 - report C-10
 - return C-11
 - signal C-10
 - statement labels C-10
 - variable C-10
 - wait C-10
- specifications
 - attribute C-5

- configuration C-5
- disconnection C-5
- latches
 - async_set_reset attribute 4-11
 - clocked_on_also 4-32
 - D latch inference 4-10
 - D latch with an asynchronous reset 4-12
 - D Latch With Asynchronous Set 4-11
 - generic sequential cells (SEQGENs) 4-2
 - hdlin_infer_block_local_latches 6-11
 - If the technology library does not contain the specific inferred latch 4-3
 - infer multibit components 2-41
 - Inference Report for an SR Latch 4-8
 - Inference Report for D Latch With Asynchronous Set 4-11
 - master-slave latches 4-32
 - Multiport latches 4-36
 - one_cold attribute 4-13
 - read a conditionally assigned variable 4-14
 - Register banks 4-36
 - SR latch inference 4-7
 - Unintended Latches in Combinational Logic 3-17
 - variables declared in subprograms 4-10
 - Verbose Inference Report for a D Latch 4-10
 - with three-state outputs 4-36
- license requirements 1-54
- loops
 - case statements
 - in while loops 3-16
 - combinational feedback loop 3-19
 - create a ripple carry adder A-7
 - enumerated types as indexes 2-16
 - for...loop parameters 2-25
 - generate loop 2-2
 - hdlin_keep_feedback 4-5
 - support in Presto VHDL C-11
 - that iterates across each bit in the given value A-8
 - using wait statements in for-loop statements C-10

M

- map_only attribute 2-6
- map_to_entity directive 2-8
- math_real package support 2-22
- Mealy finite state machine (example) A-18
- Moore finite state machine (example) A-16
- multiplexing logic
 - case statements embedded in if-then-else statements 3-16
 - case statements in an elsif (CLK'event...) 3-17
 - case statements in while loops 3-16
 - case statements that contain an if statement 3-16
 - case statements that contain don't care values 3-17
 - case statements that have a missing case statement branch 3-16
- Design Compiler implementation 3-10
- hdlin_infer_mux variable 3-12
- hdlin_mux_oversize_ratio 3-13
- hdlin_mux_oversize_ratio 6-11
- hdlin_mux_size_limit 3-13
- hdlin_mux_size_min 3-13, 6-11
- implement conditional operations implied by if and case statements 3-8
- incompletely specified case statement 3-17
- infer MUX_OP cells 3-10
- infer_mux attribute 3-11, 6-5
- inference report for MUX_OPs 3-14
- MUX_OP cells 3-8
- MUX_OP Inference Limitations 3-16
- preferentially map multiplexing logic to multiplexers 3-8
- SELECT_OP cells 3-8
- synopsys infer_mux directive 3-11
- warning message 3-17
- with if and case statements 3-8
- multiplication using shifts B-15
- MUX_OP cells, setting the size_only attribute 3-13
- MUX_OP Inference 3-10

N

names

- slice names 2-25

N-bit adder

declaration

- example, ripple-carry 2-7
- ripple-carry design 2-6

new features and differences D-1

noncomputable operands 2-26

numeric_std package

- accessing B-16

arithmetic functions

- binary B-18
- unary B-18

comparison functions

- ordering B-19

data types

- UNSIGNED B-16

- IEEE documentation 1-52, B-1

- location B-16

logical operators

- AND B-22
- NAND B-22
- NOR B-22
- NOT B-22
- OR B-22
- XNOR B-22
- XOR B-22

- resize function B-17

rotate

- functions B-23
- operators B-24

shift

- functions B-23
- operators B-24

- use with std_logic_arith package B-15

O

operands

- bit-width 2-24
- computable 2-25

operators

ordering

- and enumerated types 2-45

rotate

- numeric_std package B-24

shift

- numeric_std package B-24

optimization 2-35

ordering

functions

- example B-13

overloading

enumeration

- literal 2-18

P

PLA (example) A-33

ports

- bit-blasting 7-7

pragmas. *See* directives

predefined attributes

- supported C-13

processes

- asynchronous 2-45
- sensitivity lists 2-46
- synchronous 2-45

R

read_file -format command 1-6

register inference

- D latch 4-9
- edge expressions 4-15
- if versus wait 4-15
- signal edge 4-15
- SR latch 4-7
- wait versus if 4-15

report statement C-10

resize function

- numeric_std package B-17

resolution function

- directives
 - resolution_method three_state 2-33
 - resolution_method wired_and 2-33
 - resolution_method wired_or 2-33
- writing out 7-6
 - vhdlout_wired_and_res_func 7-6
 - vhdlout_wired_or_res_func 7-6
- resolution_method
 - three_state directive 2-33
 - wired_and directive 2-33
 - wired_or directive 2-33
- rising_edge 1-4, 4-17
- ROM (example) A-2
- rotate
 - functions
 - numeric_std package B-23
 - operators C-8
 - numeric_std package B-24

S

- SELECT_OP 3-8
- sensitivity lists 2-46
- serial-to-parallel converter (example)
 - shifting bits A-31
- set_map_only command 2-6
- shared variable C-4
- shift
 - functions
 - example B-14
 - numeric_std B-23
 - operations B-15
 - operators
 - numeric_std package B-24
- signals
 - edge detection 4-15
 - supported C-4
- SIGNED data type
 - defined B-7
- simulation
 - don't care values 2-44

- state machine (example)
 - controller A-11
 - Mealy A-18
 - Moore A-16
- state vector
 - attribute 2-39
- STATE_VECTOR attribute 2-39
- statement
 - assignment
 - indexed name target, syntax 2-28
- statement labels C-10
- std_logic_1164 package B-2
- std_logic_arith package
 - "<=" function B-12
 - ">=" function B-12
 - ">" function B-12
- arithmetic functions B-9
- Boolean reduction functions B-26
- built_in functions B-6
- comparison functions B-12
- conversion functions B-9
- data types B-7
 - modifying the package B-6
- ordering functions B-12
- shift function B-14
 - using the package B-4
- std_logic_misc package B-26
- subprogram
 - mapping to components
 - example 2-9
 - matching entity 2-8
- subrange
 - integer data type 2-17
- SYN_FEED_THRU
 - example of using B-4
- synchronous
 - processes 2-45
- Synopsys packages
 - std_logic_misc B-26
- Synopsys-defined VHDL attributes C-7
- synthetic comments. *See* directives

T

- three-state
 - gate 5-6
 - registered enable 5-7
 - without registered enable 5-7
 - inference 5-1
 - registered drivers 5-6, 5-7
 - registered input 5-7
 - vhdlout_three_state_name variable 7-6
- time type C-13
- transport keyword C-11
- two-phase design 4-35
- type
 - conversion variable
 - functions 7-7
 - variable
 - preserving hierarchy 7-7

U

- unary
 - arithmetic functions
 - example B-11
 - numeric_std B-18
- unconstrained arrays
 - example using A-6
- unloaded sequential cell preservation 4-37
- UNSIGNED data type
 - defined B-7
 - numeric_std package B-16

V

- variables
 - conditionally assigned 4-14
 - hdlin_keep_signal_name 2-31
 - vhdlout_top_configuration_arch_name 7-8
 - vhdlout_top_configuration_entity_name 7-8
 - vhdlout_top_configuration_name 7-8
- VHDL
 - BIT data type B-28

- BIT_VECTOR data type B-29
- BOOLEAN data type B-28
- CHARACTER data type B-28
- component
 - implication 2-8
- concurrent statements
 - supported C-11
- data type, supported
 - enumeration C-3
- data type, unsupported
 - integer C-3
- declarations C-4
- design
 - units C-2
 - writing out 7-2
- expressions, supported C-9
- integer data type 2-17, B-29
- names C-6
- NATURAL subtype B-29
- operators
 - supported C-7
- package
 - composition 2-7
- ports, writing out 7-7
- POSITIVE subtype B-29
- predefined
 - language environment C-13
- sensitivity lists 2-46
- sequential statements, supported C-10
- specifications C-5
- STRING type B-29
- three-state components 5-1
- writing out 7-2
- VHDL assertions 4-7
- VHDL Compiler
 - attributes
 - Synopsys C-6
 - write_script command 7-3
 - component
 - instantiation, entities 2-7
 - don't care information 2-34
 - enumeration encoding 2-18

- integer encoding 2-17
- sensitivity lists 2-46
- STATE_VECTOR attribute 2-39
- vhdlout_variables 7-3
- vhdlout_bit_type variable 7-5
- vhdlout_bit_vector_type variable 7-5
- vhdlout_dont_create_dummy_nets variable 7-3
- vhdlout_equations variable 7-3
- vhdlout_follow_vector_direction variable 7-3
- vhdlout_local_attributes variable 7-3
- vhdlout_one_name variable 7-5
- vhdlout_package_naming_style 7-7
- vhdlout_preserve_hierarchical_types variable 7-7
- vhdlout_separate_scan_in variable 7-3
- vhdlout_single_bit variable 7-7
- vhdlout_three_state_name variable 7-6
- vhdlout_three_state_res_func variable 7-6
- vhdlout_top_configuration_arch_name 7-8

- vhdlout_top_configuration_entity_name variable 7-8
- vhdlout_top_configuration_name variable 7-8
- vhdlout_unknown_name variable 7-6
- vhdlout_upcase variable 7-4
- vhdlout_use_packages variable 7-4
- vhdlout_wired_and_res_func variable 7-6
- vhdlout_wired_or_res_func variable 7-6
- vhdlout_write_architecture variable 7-4
- vhdlout_write_components variable 7-4
- vhdlout_write_entity variable 7-4
- vhdlout_write_top_configuration variable 7-4
- vhdlout_zero_name variable 7-6

W

- warnings
 - asynchronous designs 2-34
- waveform generator (example)
 - simple A-4
- write command 7-2
- writing out VHDL 7-2