

Gesture-MotionTracking Introduction Manual V.1.2



Github <https://github.com/emakefun/Gesture-MotionTracking>

Chang history

Date	Version	Description	Author
2018-5-25	V. 1. 0	Create	Jason. Yang
2018-7-4	V. 1. 1	Review	Ken. chen
2019-5-6	V.1.2	Modify NRF24L01 wiring instructions	Abbott.chen

Contents

1. Device list introduction.....	4
2. NANO Processor Introduction.....	5
2.1 Power Supply.....	5
2.2 Memory.....	5
2.3 Input and Output	5
2.4 Communication Interface.....	6
2.5 Downloader.....	6
2.6 Attention.....	6
3. Blumodule introduction (JDY-16)	6
3.1 Features	6
3.2 Operating Steps.....	7
3.3 Connection method of Nano and JDY-16.....	10
4. NRF24L01 Wireless Module Introduction	11
4.1 Module Features.....	11
4.2 Experimental Purpose	12
4.3 The components needed for this experiment	12
4.4 Experimental schematic diagram	13
5 Mpu6050.....	15
5.1 Introduction.....	15
5.2 Module Schematic	16
Figure 11: Schematic of the mpu6050 module	16
5.3 Communication between Nano and mpu6050.....	16
5.3.3 Experiment 2 Reading data from Gyro	25
5.4 Motion Data Analysis	29
5.5 Data Processing and Implementation.....	33
6 Principle of motion tracking control	39
6.1 Racing direction coordinate angle model	39
7. Protocol	48
8. Comprehensive experiment:	50
8.1 Nrf24L01 wireless control	50
8.2 Bluetooth communication mode control.....	52

1. Device list introduction

The required kits are shown in the table below.

MPU6050 Module	1
JDY-16 Bluetooth Module	1
NRF24L01+ Module	2
Arduino NANO Main Control Board	1
mini Bread Board	2
Gloves	1
Male to Female DuPont line	Several
Battery	1

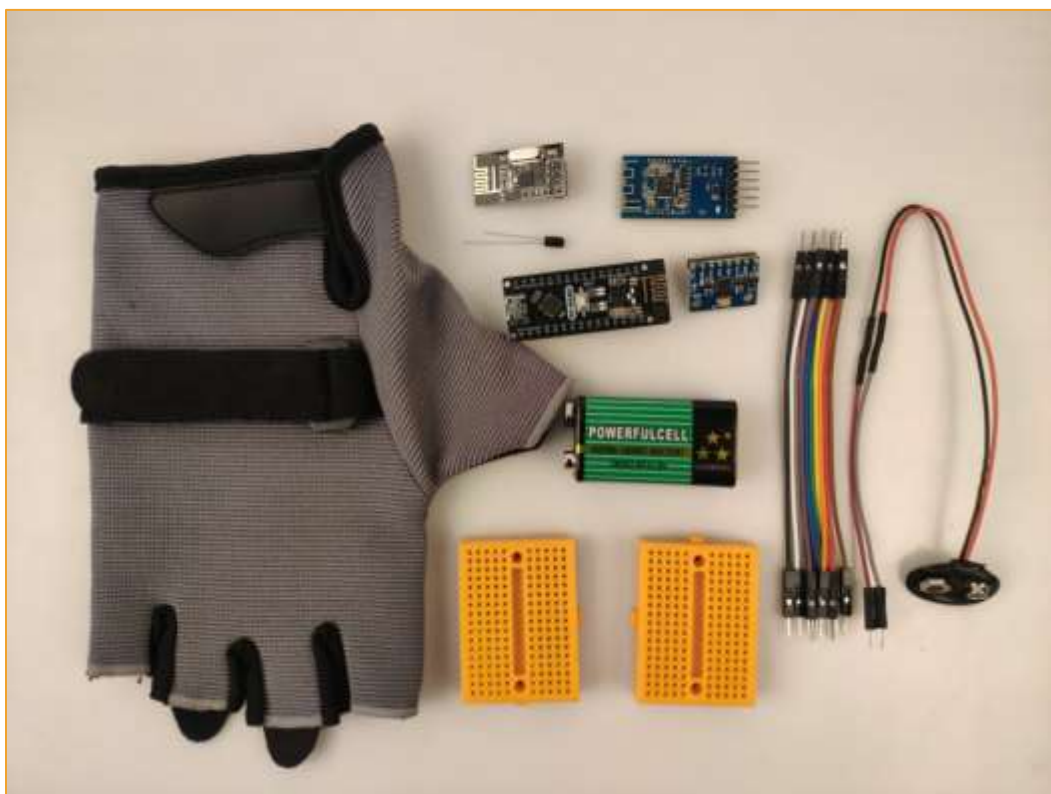


Figure 1: Device List

2. NANO Processor Introduction

The Arduino Nano microprocessor is ATmega328 (Nano3.0) with USB-mini interface, which has 14 digital input/output pins (6 of which can be used as PWM output), 8 analog inputs, and a 16 MHz ceramic resonator, 1 mini-B USB connection, an ICSP header and a reset button.

- ◆ The processor ATmega328
- ◆ Working voltage 5v
- ◆ Input voltage (recommended) 7-12v
- ◆ Input voltage (range) 6-20v
- ◆ Digital IO pin 14 (6 of which can be used as PWM output)
- ◆ Analog input pin 6
- ◆ IO pin DC 40 mA
- ◆ Flash Memory 16 or 32 KB (in which 2 KB for bootloader)
- ◆ SRAM 1KB or 2KB
- ◆ EEPROM 0.5 KB or 1KB (ATmega328)
- ◆ CH340 USB to serial port chip
- ◆ Clock 16 MHz

2.1 Power Supply

Arduino Nano power supply mode: mini-B USB interface power supply and external vin connection
7~12V external DC power supply

2.2 Memory

ATmega168/ATmega328 includes on-chip 16KB/32KB Flash, of which 2KB is used for Bootloader. There are also 1KB/2KB SRAM and 0.5KB/1KB EEPROM.

2.3 Input and Output

- ◆ 14 digital input and output ports: The working voltage is 5V, and each channel can output and access the maximum current of 40mA. Each channel is equipped with a 20-50K ohm internal pull-up resistance (not connected by default). In addition, some pins have specific functions.
- ◆ Serial signal RX (0), TX (1): It provides serial port receiving signal with TTL voltage level, connected to the corresponding pin of FT232RL.
- ◆ External Interrupt (No. 2 and No. 3): Trigger interrupt pin, which can be set to rising edge, falling edge or simultaneous trigger.
- ◆ Pulse Width Modulation PWM (3, 5, 6, 9, 10, 11): Provides 6 channel, 8-bit PWM outputs.

- ◆ SPI (10(SS), 11(MOSI), 12(MISO), 13(SCK)):SPI Communication Interface.
- ◆ LED (No. 13): Arduino is specially used to test the reserved interface of the LED. When the output is high, the LED is lit. When the output is low, the LED is off.
- ◆ 6 analog inputs A0 to A5: Each channel has a resolution of 10 bits (that is, the input has 1024 different values), the default input signal range is 0 to 5V, and the input upper limit can be adjusted by AREF. In addition, some pins have specific functions.
- ◆ TWI interface (SDA A4 and SCL A5): Supports communication interface (compatible with I2C bus).
- ◆ AREF: The reference voltage of the analog input signal.
- ◆ Reset: The microcontroller chip is reset when the signal is low.

2.4 Communication Interface

Serial port: The built-in UART of ATmega328 can communicate with external serial port through digital port 0 (RX) and 1 (TX).

2.5 Downloader

The MCU on the Arduino Nano has a bootloader program, so you can download the program directly from the Arduino software. You can also directly download the program to the MCU through the ICSP header on the Nano.

2.6 Attention

The Arduino Nano provides an automatic reset design that can be reset by the host. In this way, the software can be automatically reset by the Arduino software in the program to the Nano, without pressing the reset button.

3. Blumodule introduction (JDY-16)

3.1 Features

- ◆ BLE high speed transparent transmission supports 8K Bytes rate communication.
- ◆ Send and receive data without byte limit, support 115200 baud rate continuously send and receive data.
- ◆ Support 3 modes of work (see the description of AT+STARTEN instruction function).
- ◆ Support (serial port, IO, APP) sleep wake up
- ◆ Support WeChat Airsync, WeChat applet and APP communication.
- ◆ Support 4 channel IO port control and high precision RTC clock.
- ◆ Support PWM function (can be controlled by UART, IIC, APP, etc.).
- ◆ Support UART and IIC communication mode, default to UART communication.
- ◆ iBeacon mode (support WeChat shake protocol and Apple iBeacon protocol).

- ◆ Host transparent transmission mode (transmission of data between application modules, host and slave communication).

Wireless communication module configuration

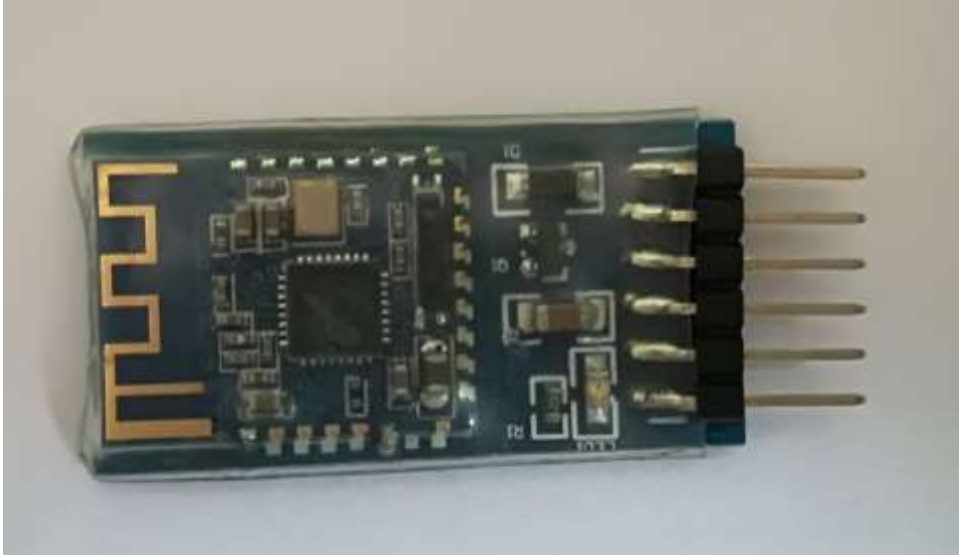


Figure 2: JDY-16 module physical map

(1) The cable of Nano and JDY-16

JDY-16 Module	Arduino NANO
VCC	5V
GND	GND
RXD	D2
TXD	D3
STAT	NC
PWRC	NC

Download program MotionTrack\JDY-16\AT_CMD\ AT_CMD.ino

(2) Configuration requirements:

Implement master-slave binding of two JDY-16 Bluetooth modules.

3.2 Operating Steps

1. Connect the Nano and JDY-16 modules with the DuPont line.

2. Enter the AT command mode

Connect the downloader to the computer and open the serial port assistant. Set the baud rate to 9600, the data bit to 8 bits, the stop bit to 1 bit, and no parity bit.

Test communication:

Send: AT

Back: OK



Figure 3: Send AT Command Diagram

3. Send: AT+HOSTEN1\r\n ----- Set Bluetooth as the main mode

Back: OK

Back: OK



Figure 4: Setting Host Mode

4. Scan the surrounding JDY-16 Bluetooth:

1. Slave transmission: AT+SCAN\r\n----- Query the slave's own address

Back: OK

+DEV:1=3CA5090A160F, -62, JDY-16

+STOP:SCAN

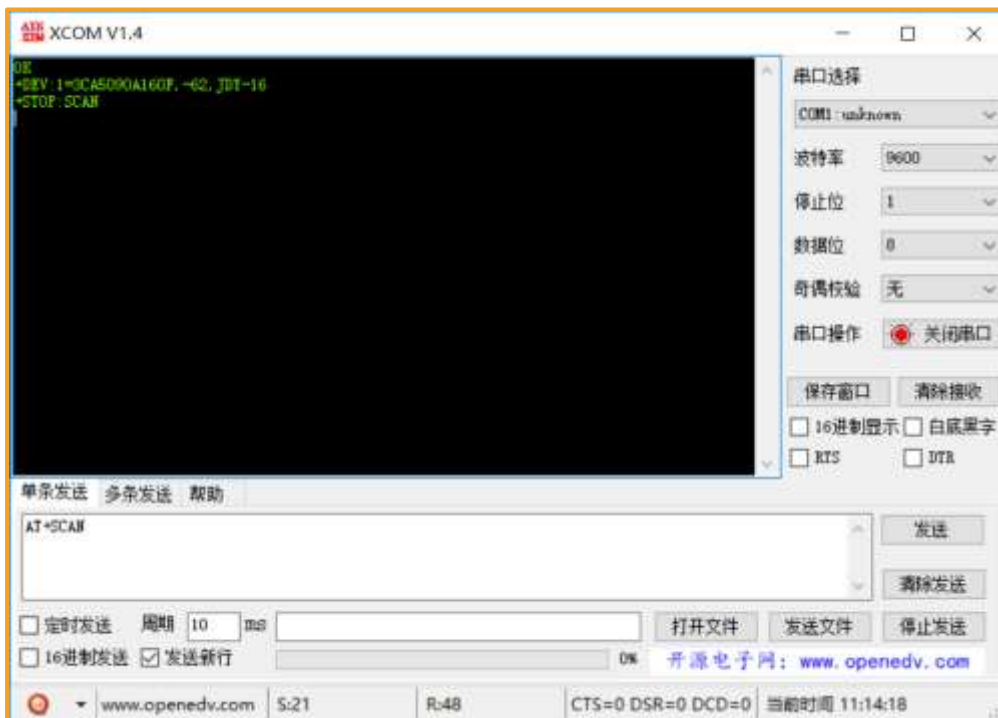


Figure 5: Querying peripheral Bluetooth devices

5. Connect Bluetooth

Host sends: AT+CONN3CA5090A160F\r\n----- Host binding slave address

Back: OK

Connected to the power supply, the two Bluetooth can be connected to each other, send data through the host Bluetooth, the slave Bluetooth can receive the same data.

Or you can directly program the prepared master-slave configuration procedure to set the master-slave Bluetooth, then the host programs the connection procedure and automatically connects. (Note that only the Bluetooth module of JDY-16 can be automatically connected at present)

3.3 Connection method of Nano and JDY-16


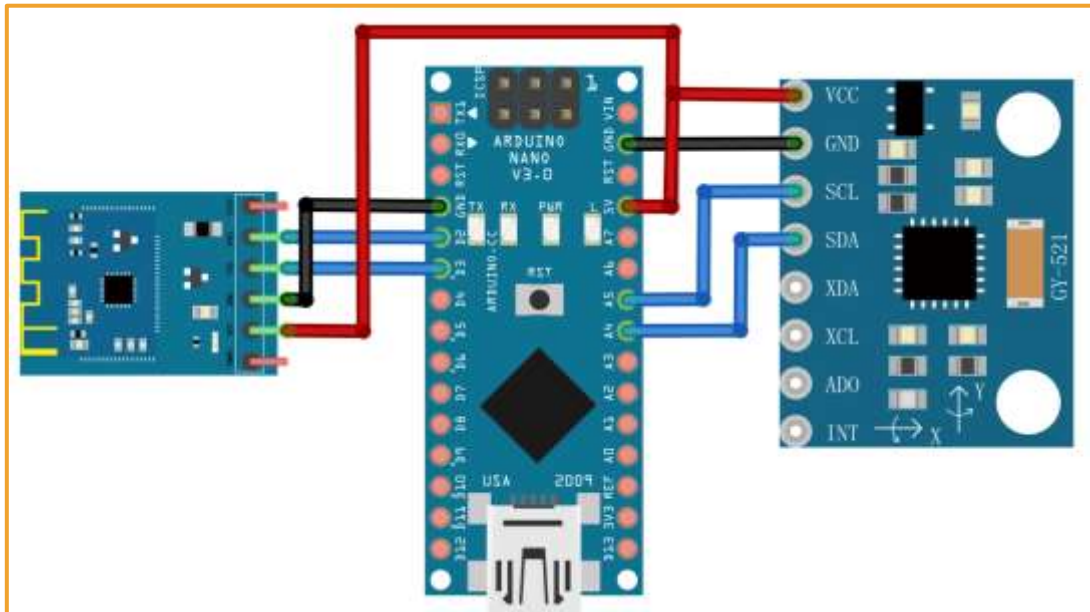


Figure 6: Nano and JDY-16 connection diagram

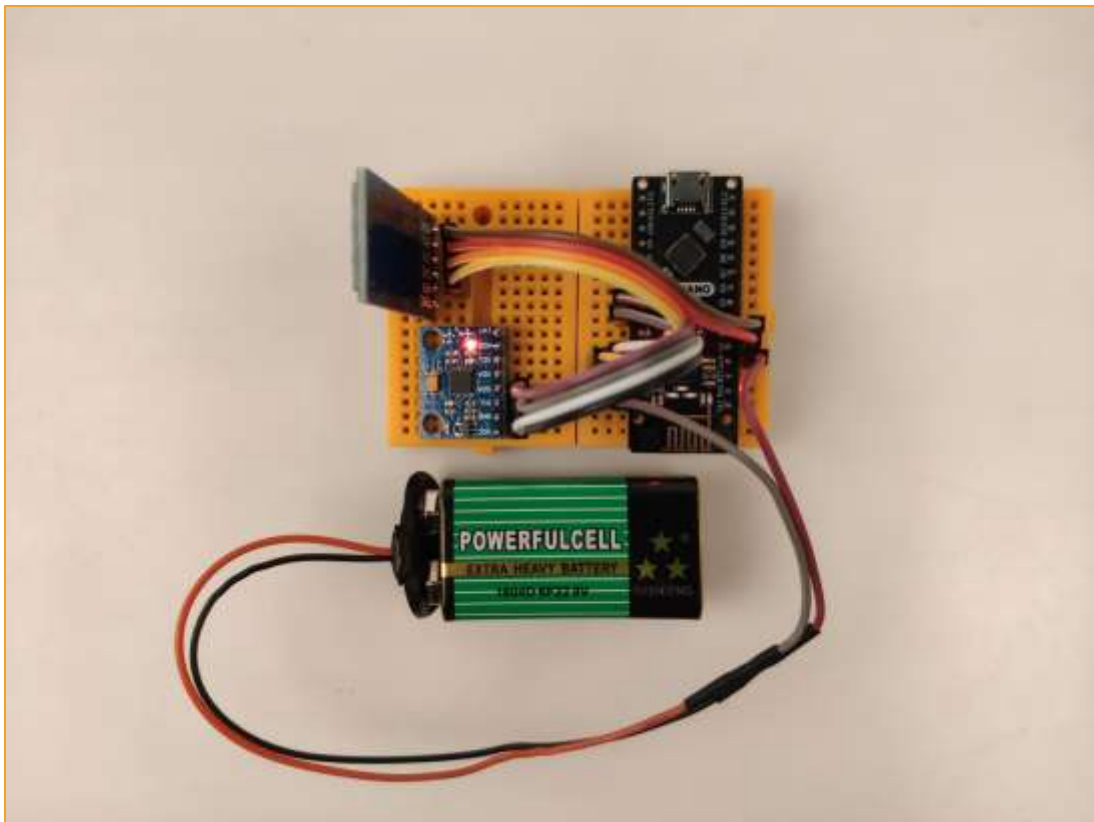

4. NRF24L01 Wireless Module Introduction

The nRF24L01+ module is a 2.4G wireless communication module developed by Nordic based on the nRF24L01 chip. Adopt FSK modulation and integrate Nordic's own Enhanced Short Burst protocol. Point-to-point or 1-to-6 wireless communication can be achieved. Wireless communication speed can reach up to 2M (bps). The NRF24L01 has four operating modes: transceiver mode, configuration mode, idle mode, and shutdown mode. The physical map used in this experiment is on the left side of Figure 7. For the stable reception of the Nrf24L01 receipt, it is recommended to connect the 10uF capacitor between VCC and GND as shown on the right.

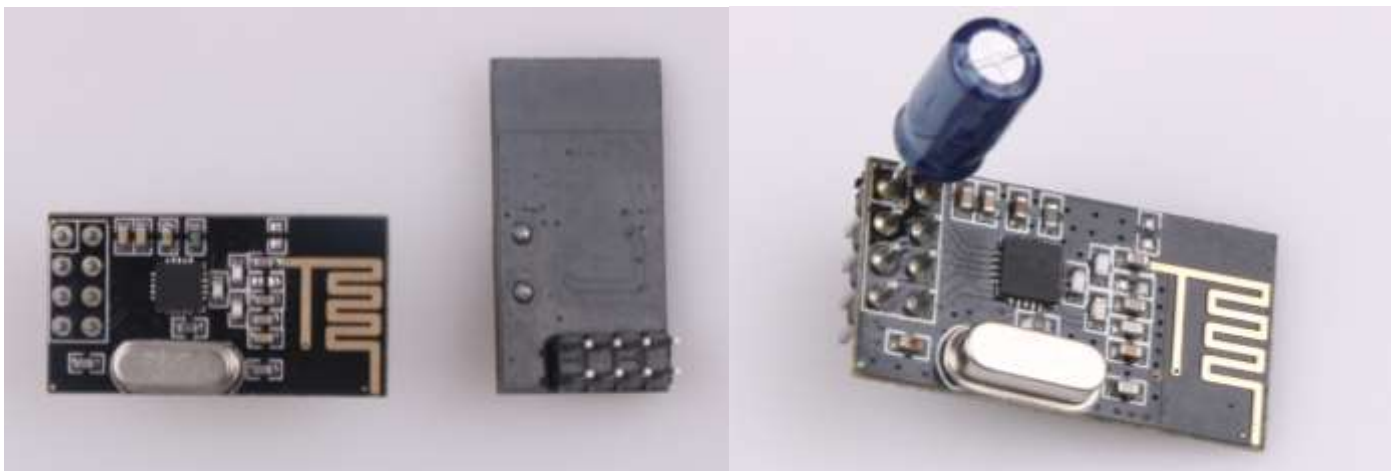


Figure 7: Nrf24l01+ physical map and solder diagram

4.1 Module Features

- ◆ 2.4GHz ,small size, 15x29mm (including antenna)
- ◆ Support six-channel data reception
- ◆ Low working voltage: 1.9~3.6V
- ◆ Data transfer rate supports: 1Mbps、 2Mbps
- ◆ Low power consumption design, working current at receiving is 12.3mA, 11.3mA at 0dBm power emission, 900nA at power-down mode
- ◆ Automatic retransmission function, automatic detection and retransmission of lost data packets, retransmission time and retransmission times can be controlled by software
- ◆ Automatic response function, after receiving valid data, the module automatically sends an answer signal
- ◆ Built-in hardware CRC error detection and point-to-multipoint communication address control
- ◆ NRF24L01 chip details please refer to 《nRF24L01 Datasheet.pdf》

Pin information

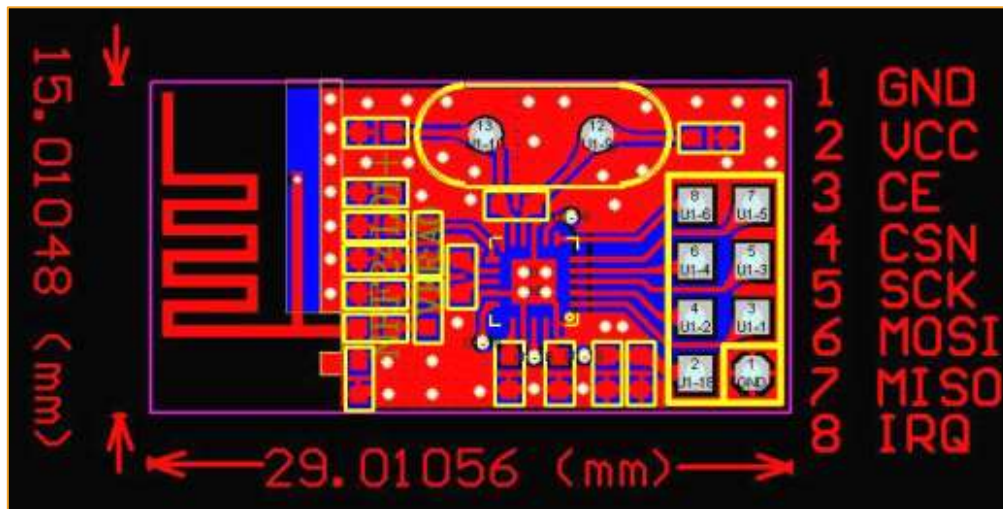


Figure 8: Nrf24L01 pin information diagram

Pin	Symbol	Function	Direction
1	GND	GND	
2	+5V	Power Supply	
3	CE	Control Line At Working Mode	IN
4	CSN	Chip Select Signal, Low Level Working	IN
5	SCK	SPI Clock	IN
6	MOSI	SPI Input	IN
7	MISO	SPI Output	OUT
8	IPQ	Interrupt Output	OUT+

4.2 Experimental Purpose

1. Learn about nRF24L01+module and how to connect with Arduino.
2. How to use arduino and nRF24L01+ module to finish receiving and sending data.

4.3 The components needed for this experiment

- ◆ Arduino UNO R3 Motherboard
- ◆ Arduino NANO Motherboard
- ◆ nRF24L01 Module*2
- ◆ Several wires

4.4 Experimental schematic diagram

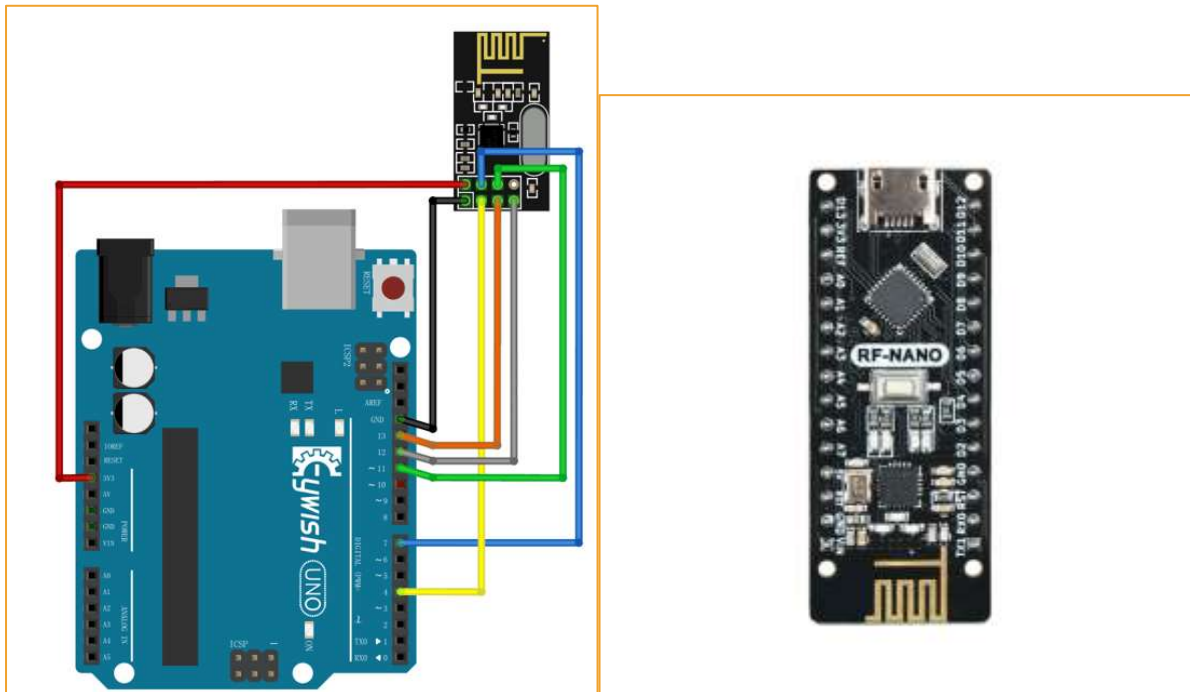


Figure 9: Nano and Nrf24L01 connection diagram

Arduino and NRF24L01 mode of connection

arduino Nano	nRF24L01
+3.3V	VCC
GND	GND
7pin	4pin CSN
4pin	3pin CE
11pin	6pin MOSI
12pin	7pin MISO
13pin	5pin SCK

arduino Uno	nRF24L01
+3.3V	VCC
GND	GND
7	4pin CSN
4	3pin CE
11pin	6pin MOSI
12pin	7pin MISO

13pin

5pin SCK

4.4 Program principle

Launch process

- 1、 Firstly, configure the nRF24L01 to transmit mode.
- 2、 Then write the address TX_ADDR of the receiving end and the data TX_PLD to be sent into the nRF24L01 buffer area by the SPI port in time sequence.
- 3、 Arduino configures the CE to be high for at least 10 μ s and transmits data after a delay of 130 μ s. If the auto answer is on, the nRF24L01 enters the receive mode immediately after transmitting the data and receives the answer signal. If a reply is received, the communication is considered successful.
- 4、 NRF24L01 will automatically set TX_DS high and the TX_PLD will be cleared from the transmit stack. If no response is received, the data will be automatically retransmitted. If the number of retransmissions (ARC_CNT) reaches the upper limit, MAX_RT is set high and TX_PLD will not be cleared; MAX_RT When TX_DS is set high, IRQ goes low to trigger MCU interrupt. When the last transmission is successful, if the CE is low, the nRF24L01 will enter standby mode.
- 5、 If there is data in the transmission stack and CE is high, the next transmission is started; if there is no data in the transmission stack and CE is high, the nRF24L01 will enter standby mode 2.

Receive data process

- 1、 When the nRF24L01 receives data, please configure the nRF24L01 to receive mode firstly.
- 2、 Then delay 130 μ s into the receiving state to wait for the arrival of data. When the receiver detects a valid address and CRC, it stores the data packet in the receiver stack. At the same time, the interrupt sign RX_DR is set high and the IRQ goes low to notify the MCU to fetch the data.
- 3、 If auto-response is turned on at this time, the receiver will enter the transmit status echo response signal at the same time. When the last reception is successful, if CE goes low, the nRF24L01 will go into idle mode 1.

nRF24L01 transceiver test program please refer to "MotionTrack\nRF24l01+\program"

5 Mpu6050

5.1 Introduction

MPU6050 is the world's first 6-axis motion processing component with integrated 3-axis gyroscope and 3-axis accelerator. It can connect to other magnetic sensors or other sensors' digital motion processing (DMP) via a second I2C port. The hardware acceleration engine mainly outputs a complete 9-axis fusion calculation technique to the host MCU in the form of a single data stream by the I2C port.

MPU6050 chip comes with a data processing sub module DMP, has built-in hardware filtering algorithm, using DMP output data has been able to meet the requirements well in many applications. We don't need our software to do the filtering. This course will build a complete sports gloves based on reading DMP as output data through Arduino.


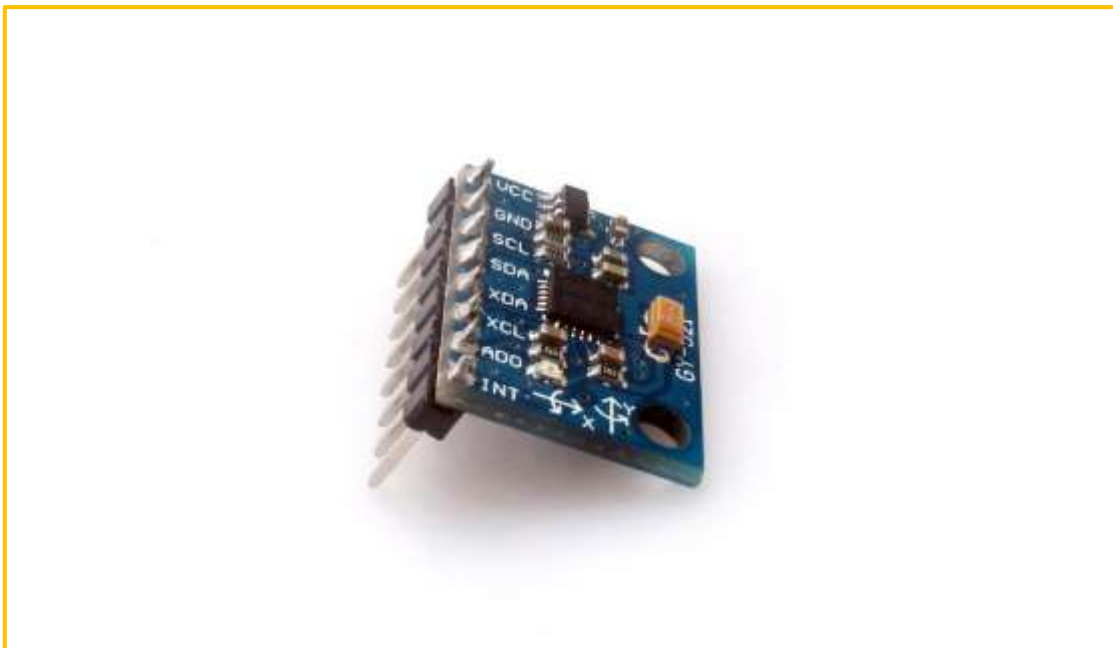


Figure 10: mpu6050 module physical map

Features

- ◆ The integrated calculus data of digital output of 6 axis or 9 axis rotation matrix, quaternion and Euler angle format.
- ◆ 3-axis angular velocity sensor (gyroscope) with 131 LSBs/°/sec sensitivity and full-range sensing range of ± 250 , ± 500 , ± 1000 , and ± 2000 °/sec.
- ◆ Programmable control, 3-axis accelerator with program control range of $\pm 2g$, $\pm 4g$, $\pm 8g$, and $\pm 16g$.
- ◆ The Digital Motion Processing (DMP) engine reduces the load of complex fusion calculation data, sensor synchronization, and gesture sensing.

- ## 5.2 Module Schematic

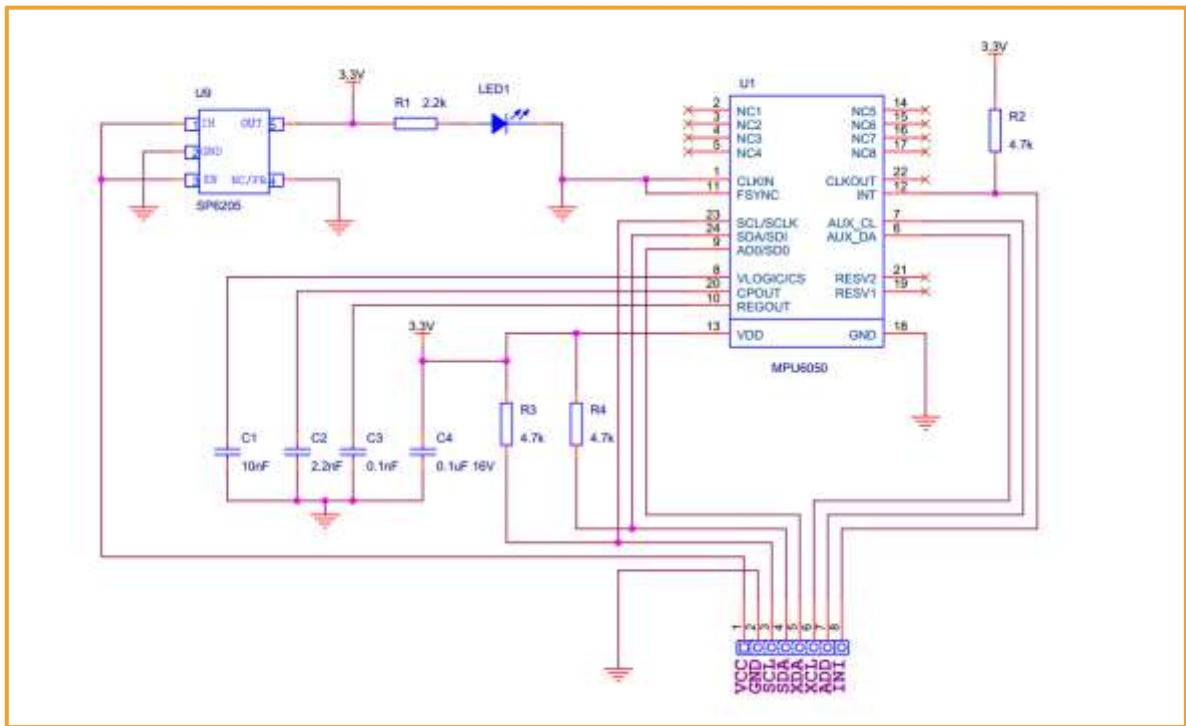

5.3 Communication between Nano and mpu6050

The data interface of the integrated MPU6050 module uses the I2C bus protocol, so we need the help of the Wire library to communicate between NANO and the MPU6050. The corresponding connection of the NANO board is as follows:

MPU6050 Module	Arduino NANO
VCC	5V

GND	GND
SCL	A5
SDA	A4
XDA	NC
XCL	NC
ADD	NC
INT	NC/GND

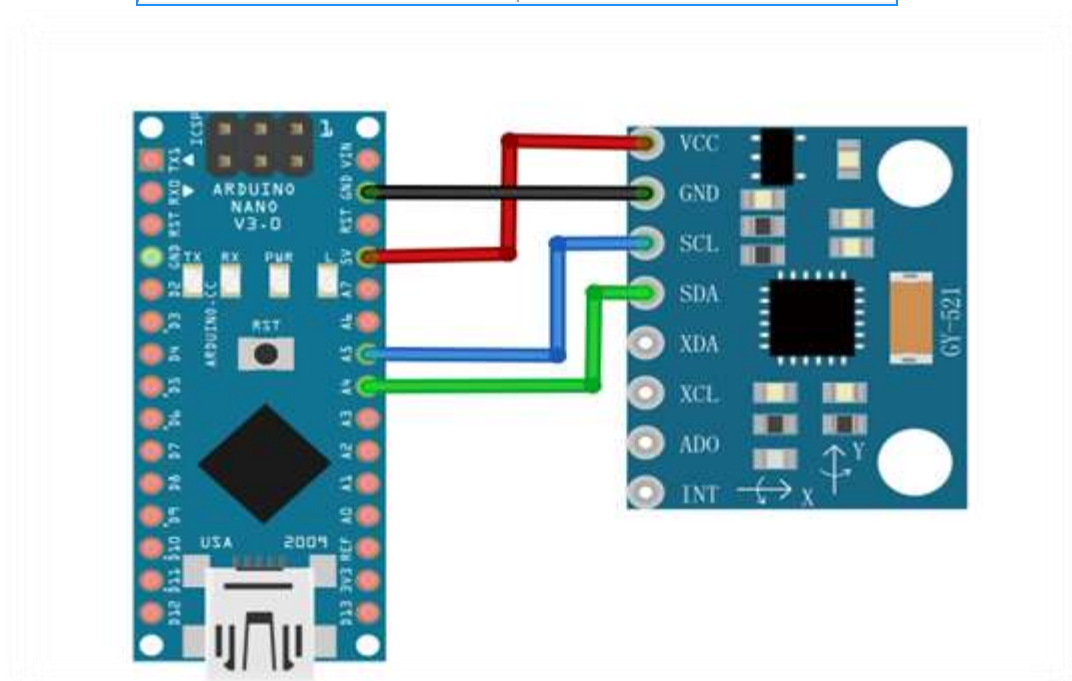


Figure 12: Connection diagram of Nano and mpu6050

MPU6050 writing and reading data are realized by the chip's internal registers, the register addresses are all 1 byte, namely, 8 bits of the address space. Please refer to "**RM-MPU-6000A.pdf**" 1.1.

Before write data to the device every time, firstly turn on the wire transfer mode and specify the bus address of the device. The bus address of the MPU6050 is 0x68 (the address is 0x69 when the AD0 pin is high). Then write a byte of the register start address, and then write data of any length. These data will be continuously written to the specified start address, and the current register length will be written to the register of the following address. Turn off the wire transfer mode after writing is complete. The following sample code writes a byte 0 to the 0x6B register of the MPU6050.

```
Wire.beginTransmission(0x68); // Strat the transmission of the MPU6050
```

```
Wire.write(0x6B); // Specify register address
Wire.write(0); // Write one byte of data
Wire.endTransmission(true); // End transfer, true means release bus
```

Reading Data from MPU-6050

Reading and writing are alike, firstly opening the Wire transfer mode, and then writing a byte of the register start address. Next, reading the data of the specified address into the cache of the Wire library and turn off the transport mode. Finally, reading the data from the cache. The following example code starts with the 0x3B register of MPU6050 and reads 2 bytes of data:

```
Wire.beginTransmission(0x68); // Start the transmission of the MPU6050
Wire.write(0x3B); // Specify register address
Wire.requestFrom(0x68, 2, true); // Read the data to the cache
Wire.endTransmission(true); // Close transmission mode
int val = Wire.read() << 8 | Wire.read(); // Two bytes form a 16-bit integer
```

Specific Implementation

The Wire library usually should be initialized in the setup function:

```
Wire.begin();
```

You must start the device before you perform any operations on the MPU6050, and writing a byte to its 0x6B will be enough. It is usually done in the setup function, as shown in section 1.1.

MPU6050 Data Format

The data we are interested in is in the 14 byte register of 0x3B to 0x48. These data will be dynamically updated with an update frequency of up to 1000HZ. The address of the underlying register and the name of the data are listed below. Note that each data is 2 bytes.

0x3B, the X axis component of the accelerometer is ACC_X

0x3D, the Y axis component of the accelerometer is ACC_Y

0x3F, the Z axis component of the accelerometer is ACC_Z

0x41, the current temperature is TEMP

0x43, angular velocity around the X axis GYR_X

0x45, angular velocity around the Y axis GYR_Y

0x47, angular velocity around the Z axis GYR_Z

The coordinate definition of the MPU6050 chip is: face the chip toward itself and turn the surface text to the correct angle. At this time, the center of the chip is taken as the origin, the horizontal to the right is the X axis, and the vertical is the Y axis, pointing your own is the Z axis, as shown as the below:

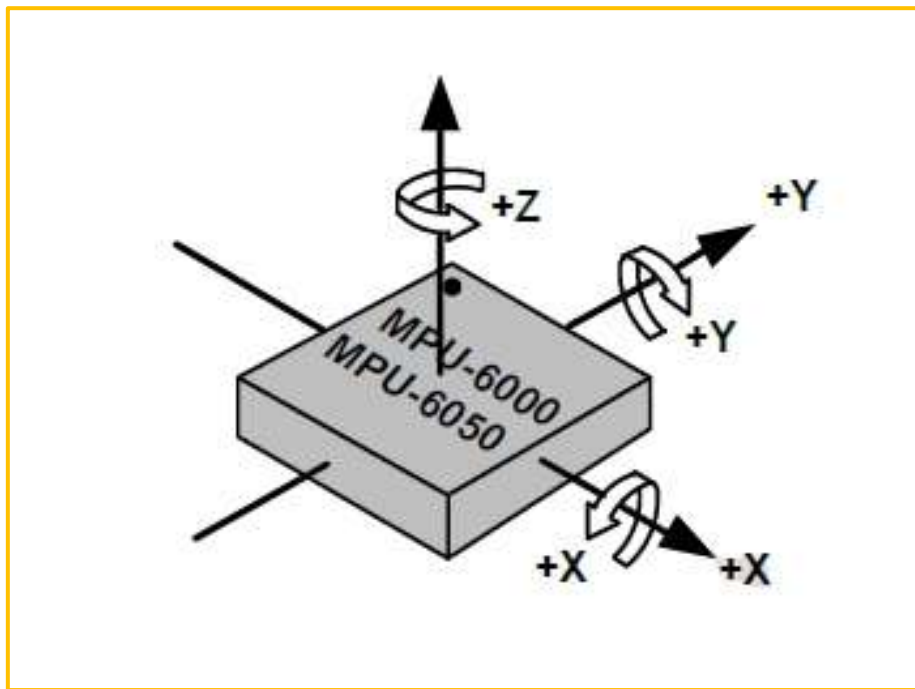


Figure 13: mpu6050 rotation and angular velocity diagram

We only care about the meaning of accelerometer and angular velocity meter data. Now we are familiar with the use of mpu6050 through two experiments.

5.3.2 Experiment 1 Reading Accelerometer

The three axes components of accelerometer, ACC_X, ACC_Y and ACC_Z are all 16-bit signed integers, which indicate the acceleration of the device in three axial directions. When the negative value is taken, the acceleration is negative along the coordinate axis and the positive value is positive.

The three acceleration components are all in multiples of the gravitational acceleration g , and the range of acceleration that can be expressed, that is, the magnification can be uniformly set, and there are four optional magnifications: 2g, 4g, 8g, and 16g. Taking ACC_X as an example, if the magnification is set to 2g (default), it means that when ACC_X takes the minimum value -32768, the current acceleration is 2 times the gravitational acceleration along the positive direction of the X axis, and so on. Obviously,

the lower the magnification, the better the accuracy, and the higher the magnification, the larger the range, which is set according to the specific application.

AFS_SEL	Full Scale Range	LSB Sensitivity
0	$\pm 2g$	16384LSB/g
1	$\pm 4g$	8192LSB/g
2	$\pm 8g$	4096LSB/g
3	$\pm 16g$	2048LSB/g

The relationship between the rotation direction of the three-axis accelerometer and the module is as follows:

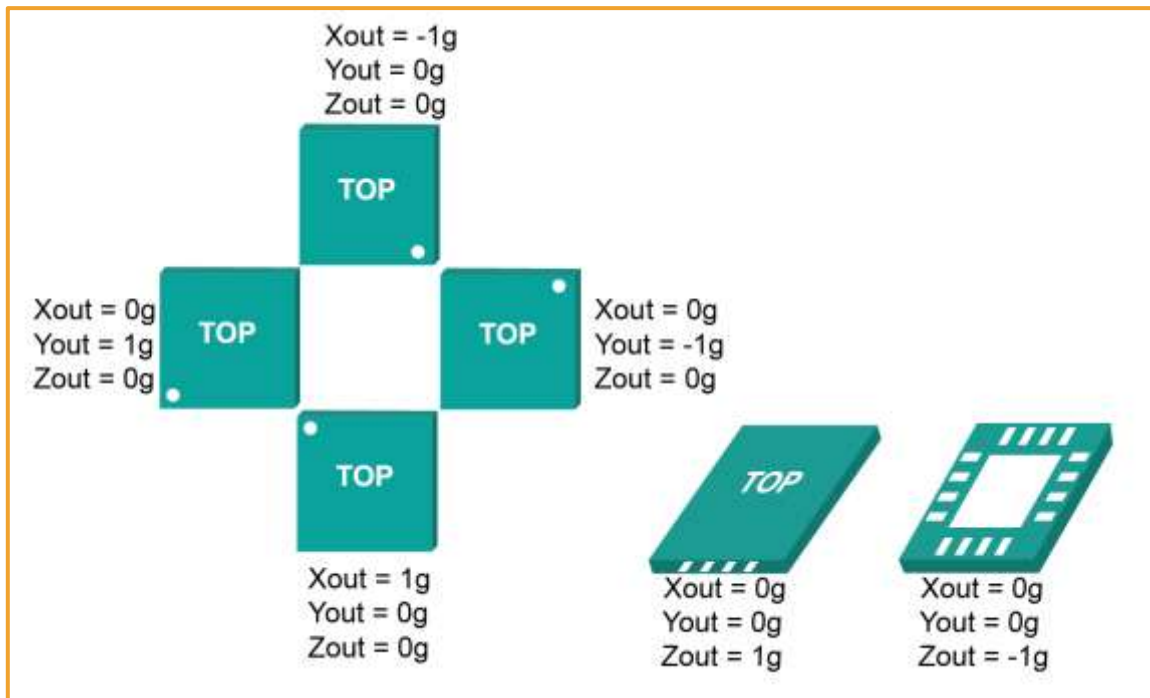


Figure 14: Mpu6050 module rotation and acceleration pattern

The data read by the MPU6050 is fluctuating, so it needs to be verified. That is, when the chip is in a stationary state, this reading should theoretically be zero. But it tends to have an offset. For example, we read 200 values at 10ms intervals and then average them. This value is called zero offset. The calibrated reading is obtained by subtracting the zero offset from each reading. Since the theoretical value of ACC_X and ACC_Y should be zero, the two reading offsets can be calibrated by statistical mean. ACC_Z needs to be processed in one step. In the process of statistical offset, the gravitation acceleration g of the Z axis is subtracted for each reading. If the acceleration magnification is $2g$, then 16384 is subtracted, and then the statistical mean calibration is performed. General calibration can be done each time the system is started, then you should make a trade-off between accuracy and start-up time.

5.3.2.1 Experimental Purpose

By rotating the mpu6050 to observe the output data relation between the three axes of the accelerometer.

5.3.2.2 Experiment Code

Code Location: MotionTrack\Lesson\mpu6050_accel\ mpu6050_accel.ino

```
#include "Wire.h"
// I2Cdev and MPU6050 must be installed as libraries, or else
the .cpp/.h files
// for both classes must be in the include path of your project
#include "I2Cdev.h"
#include "MPU6050.h"
#define LED_PIN 13
MPU6050 accelgyro;
struct RAW_type
{
    uint8_t x;
    uint8_t y;
    uint8_t z;
};
int16_t ax, ay, az;
int16_t gx, gy, gz;
struct RAW_type accel_zero_offsent;
char str[512];
bool blinkState = false ;
float AcceRatio = 16384.0;
float accx, accy, accz;

void setup() {
    int i ;
    int32_t ax_zero = 0, ay_zero = 0, az_zero = 0 ;
    // join I2C bus (I2Cdev library doesn't do this automatically)
    Wire.begin();
    Serial.begin(115200);
    // initialize device
    Serial.println("Initializing I2C devices...");
    accelgyro.initialize();
    delay(500) ;
    accelgyro.setFullScaleAccelRange(MPU6050_ACCEL_FS_2);
    Serial.println("Testing device connections...");
    Serial.println(accelgyro.testConnection() ? "MPU6050 connection
successful" : "MPU6050 connection failed");
}
```

```
for( i = 0 ; i < 200 ; i++)
{
    accelgyro.getMotion6(&ax, &ay, &az, &gx, &gy, &gz);
    ax_zero += ax ;
    ay_zero += ay ;
    az_zero += az ;
}
accel_zero_offsent.x = ax_zero/200 ;
accel_zero_offsent.y = ay_zero/200 ;
accel_zero_offsent.z = az_zero/200 ;
Serial.print(accel_zero_offsent.x); Serial.print("\t");
Serial.print(accel_zero_offsent.y); Serial.print("\t");
Serial.print(accel_zero_offsent.z); Serial.print("\n");
pinMode(LED_PIN, OUTPUT);
}

void loop() {
    // read raw accel/gyro measurements from device
    delay(1000);
    accelgyro.getMotion6(&ax, &ay, &az, &gx, &gy, &gz);
    sprintf(str,"%d,%d,%d\n",ax-accel_zero_offsent.x, ay-
    accel_zero_offsent.y ,az-accel_zero_offsent.z);
    Serial.print(str);
    accx = (float)( ax-accel_zero_offsent.x )/AcceRatio;
    accy = (float)( ay-accel_zero_offsent.y )/AcceRatio ;
    accz = (float)( az-accel_zero_offsent.z )/AcceRatio ;
    Serial.print(accx);Serial.print("g\t");
    Serial.print(accy);Serial.print("g\t");
    Serial.print(accz);Serial.print("g\n");

    blinkState = !blinkState;
    digitalWrite(LED_PIN, blinkState);
}
```

1. Rotate 90 degrees around the X axis

When the X axis is rotated 90 degrees, the Y axis is slowly upward and the Z axis is slowly downward. When the axis reaches exactly 90 degrees, since the Y axis is in the opposite direction to the gravity, the output of the Y axis is $1g$ ($1g=9.8m/s^2$), while the value of the Z axis decreases from 1 to 0.

2. Back to the initial position and reverse rotation 90 degrees


When you get back to the initial position, the Y axis value is slowly reduced to 0, while the Z axis is slowly increasing to 1. Then turn 90 degrees in reverse direction, and the Y axis decreases gradually until -1, because the Y axis is in accordance with the gravity direction, and the acceleration value should be negative. The Z axis decreases slowly to 0.

3. Back to the initial position

Explain as follows: Then return to the initial position from the reverse 90 degrees. At this time, the data of the Y-axis and the Z-axis are slowly restored to the initial value, the Y-axis is 0, and the Z-axis is 1.

After analyzing the rotation of the X-axis, the rotation of the Y-axis is similar, so we won't talk about it in details. Now let's talk about the Z axis, because when rotating around the Z axis, it is equivalent to swinging 90 degrees to the left and right. At this time, the output of the Z axis is always 1, and the X axis and the Y axis are orthogonal to the gravity axis, so the output values are all 0, of course, this is the value under relatively static conditions. If the device is installed on a vehicle, the X and Y axes may not necessarily be 0 when the car is turning left and right.

Experimental Result

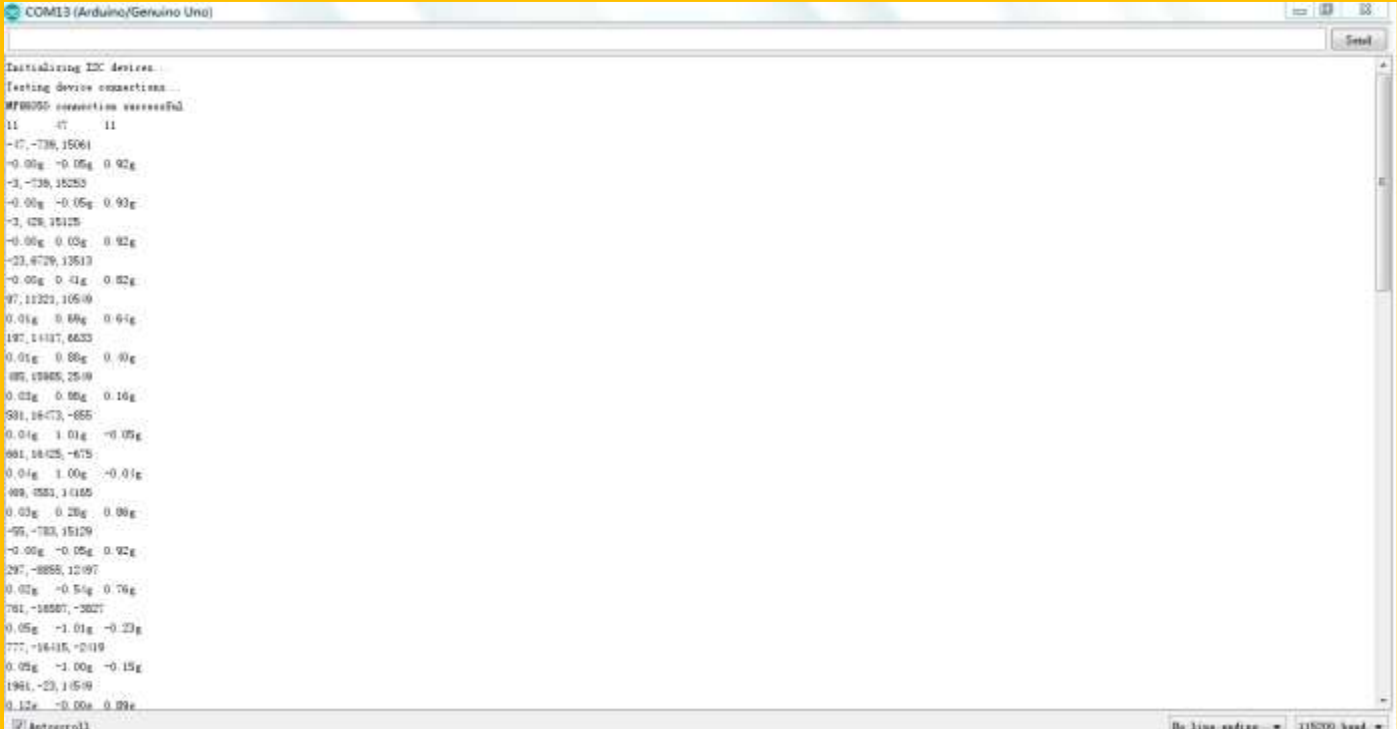

```

COM13 (Arduino/Genuino Uno)

Initializing I2C devices...
Testing device connections...
MPU6050 connection successful
11      47      11
-47,-738,15061
-0.00g -0.06g 0.92g
-3,-738,15253
-0.00g -0.06g 0.93g
-3,428,15125
-0.00g 0.03g 0.92g
-23,6729,13513
-0.00g 0.41g 0.82g
97,11323,10509
0.01g 0.88g 0.61g
197,11117,6633
0.01g 0.88g 0.60g
89,10805,2509
0.03g 0.88g 0.16g
581,16473,-855
0.04g 1.01g -0.05g
881,16425,-675
0.04g 1.00g -0.01g
489,1583,11185
0.03g 0.28g 0.88g
-99,-783,15129
-0.00g -0.05g 0.92g
297,-8855,12097
0.02g -0.54g 0.76g
781,-18587,-3827
0.05g -1.01g -0.23g
777,-16415,-2019
0.05g -1.00g -0.15g
1981,-23,11509
0.12g -0.00g 0.89g
  
```

5.3.3 Experiment 2 Reading data from Gyro

The angular velocity components GYR_X, GYR_Y and GYR_Z, which rotate around three coordinate axes of X, Y and Z, are all 1-bit signed integers. From the origin to the axis of rotation, the value is positive for the clockwise rotation and negative for the counterclockwise rotation.

The three angular velocity components are all in degrees/second. The angular velocity range that can be expressed, that is, the magnification can be uniformly set. There are 4 optional magnifications: 250 degrees/second, 500 degrees/second, 1000 degrees/second, 2000. Degrees/second. Taking GYR_X as an example, if the magnification is set to 250 degrees/second, it means that when the GYR takes a positive maximum value of 32768, the current angular velocity is 250 degrees/second clockwise; if it is set to 500 degrees/second, the current value of 32768 indicates the current the angular velocity is 500 degrees/second clockwise. Obviously, the lower the magnification, the better the accuracy, and the higher the magnification, the larger the range.

AFS_SEL	Full Scale Range	LSB Sensitivity
0	±250°/s	131LSB/°/s
1	±500°/s	65.5LSB/°/s
2	±1000°/s	32.8LSB/°/s
3	±2000°/s	16.4LSB/°/s

Program Location “MotionTrack\Lesson\mpu6050_gryo\ mpu6050_gryo.ino”

Experiment Code

```
#include "Wire.h"

// I2Cdev and MPU6050 must be installed as libraries, or else
the .cpp/.h files
// for both classes must be in the include path of your project
#include "I2Cdev.h"
#include "MPU6050.h"
#define LED_PIN 13

MPU6050 accelgyro;

struct RAW_type
{
    uint8_t x;
    uint8_t y;
    uint8_t z;
};

int16_t ax, ay, az;
int16_t gx, gy, gz;
struct RAW_type accel_zero_offsent ,gyro_zero_offsent;

bool blinkState = false;
char str[512];
```

```
float pi = 3.1415926;
float AcceRatio = 16384.0;
float GyroRatio = 131.0;
float Rad = 57.3 ; //180.0/pi;
float gyro_x,gyro_y,gyro_z;

void setup() {
    int i ;
    int32_t ax_zero = 0,ay_zero = 0,az_zero = 0,gx_zero =0 ,gy_zero =
0,gz_zero = 0 ;
    // join I2C bus (I2Cdev library doesn't do this automatically)
    Wire.begin();

    Serial.begin(115200);

    // initialize device
    // Serial.println("Initializing I2C devices...");
    accelgyro.initialize();
    delay(500) ;
    accelgyro.setFullScaleGyroRange(MPU6050_GYRO_FS_250);

    Serial.println("Testing device connections...");
    Serial.println(accelgyro.testConnection() ? "MPU6050 connection
successful" : "MPU6050 connection failed");
    for( i = 0 ; i < 200 ; i++)
    {
        accelgyro.getMotion6(&ax, &ay, &az, &gx, &gy, &gz);
        gx_zero += gx ;
        gy_zero += gy ;
        gz_zero += gz ;
    }
    gyro_zero_offsent.x = gx_zero/200 ;
    gyro_zero_offsent.y = gy_zero/200 ;
```

```
gyro_zero_offsent.z = gz_zero/200;
pinMode(LED_PIN, OUTPUT);
}

void loop() {
    // read raw accel/gyro measurements from device
    accelgyro.getMotion6(&ax, &ay, &az, &gx, &gy, &gz);

    //sprintf(str,"%d,%d,%d\n", gx-gyro_zero_offsent.x ,gy-
gyro_zero_offsent.y, gz-gyro_zero_offsent.z);
    //Serial.print(str);
    gyrox = (float) (gx-gyro_zero_offsent.x)/AcceRatio;
    gyroy = (float) (gy-gyro_zero_offsent.y)/AcceRatio ;
    gyroz = (float) (gz-gyro_zero_offsent.z)/AcceRatio ;
    Serial.print(gyrox);Serial.print("g\t");
    Serial.print(gyroy);Serial.print("g\t");
    Serial.print(gyroz);Serial.print("g\n");

    delay(100);
    // blink LED to indicate activity
    blinkState = !blinkState;
    digitalWrite(LED_PIN, blinkState);
}
```

When we rotate in the positive direction of the x-axis, we see that the printed gyrox data is positive, otherwise it is negative.

```

C:\>
Initializing I2C devices...
Testing device connections...
MPU9250 connection successful
7.41 dec/s      -32.11 dec/s      -3.89 dec/s
9.78 dec/s      -4.42 dec/s      -0.71 dec/s
12.21 dec/s      -4.99 dec/s      -0.80 dec/s
8.47 dec/s      -4.21 dec/s      0.06 dec/s
10.18 dec/s      0.34 dec/s      0.81 dec/s
8.34 dec/s      -6.69 dec/s      -0.00 dec/s
12.73 dec/s      -5.20 dec/s      2.63 dec/s
10.21 dec/s      0.81 dec/s      1.12 dec/s
9.47 dec/s      0.07 dec/s      -0.00 dec/s
3.69 dec/s      -2.78 dec/s      -1.34 dec/s
17.29 dec/s      -1.92 dec/s      1.17 dec/s
0.24 dec/s      -1.32 dec/s      -0.75 dec/s
5.27 dec/s      -2.94 dec/s      -5.47 dec/s
12.59 dec/s      9.05 dec/s      -4.11 dec/s
5.52 dec/s      6.50 dec/s      2.66 dec/s
4.02 dec/s      -4.11 dec/s      -1.48 dec/s
5.60 dec/s      -6.06 dec/s      -3.09 dec/s
11.16 dec/s      -7.30 dec/s      -3.50 dec/s
11.09 dec/s      -0.74 dec/s      0.18 dec/s
4.74 dec/s      7.41 dec/s      -6.87 dec/s
9.72 dec/s      -0.09 dec/s      0.27 dec/s
13.79 dec/s      -2.14 dec/s      1.23 dec/s
4.89 dec/s      4.05 dec/s      -3.02 dec/s
1.05 dec/s      5.27 dec/s      -3.14 dec/s
0.79 dec/s      12.18 dec/s      -1.60 dec/s
-9.31 dec/s      13.02 dec/s      -0.73 dec/s
2.79 dec/s      -3.80 dec/s      5.60 dec/s
1.61 dec/s      1.52 dec/s      -0.30 dec/s
12.79 dec/s      6.05 dec/s      -0.87 dec/s
5.45 dec/s      -2.50 dec/s      -0.02 dec/s
  
```

5.4 Motion Data Analysis

After converting the reading data of the accelerometer and the angular speed meter and them to physical values, the data are interpreted differently according to different applications. In this chapter, the aircraft motion model is taken as an example to calculate the current flight attitude based on acceleration and angular velocity.

5.4.1 Accelerometer Model

We can think of the accelerometer as a ball in a positive cube box that is held in the center of the cube by a spring. When the box is moving, the value of the current acceleration can be calculated from the position of the imaginary ball as shown as below:

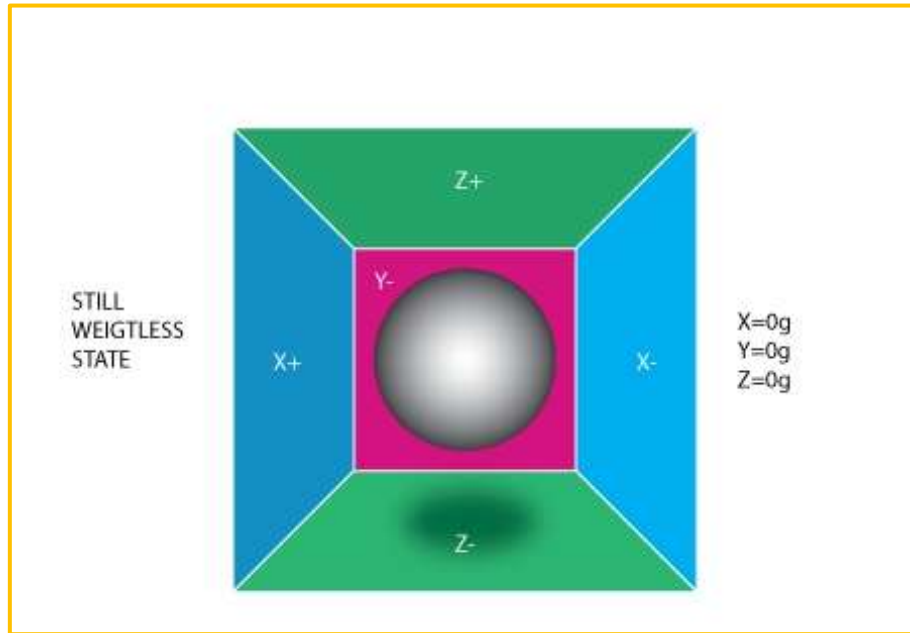


Figure 15: Weight loss state acceleration value

If we impose a horizontal left force on the box, then obviously the box will have a left acceleration, then the imaginary ball in the box will stick to the right side of the box due to inertia. As shown in the following figure:

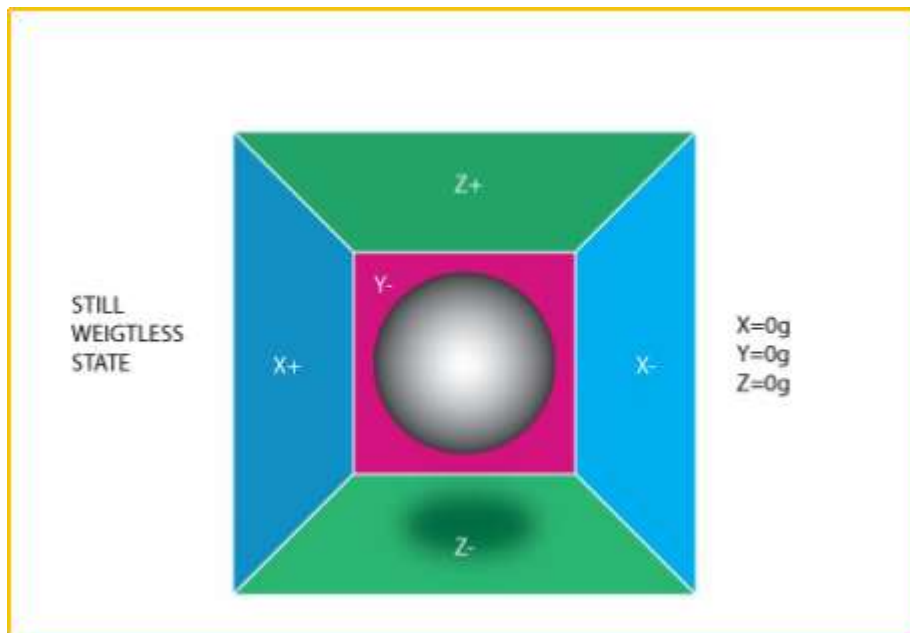


Figure 16: Acceleration of an object moving to the right

In order to ensure the physical meaning of the data, the MPU6050 accelerometer marks the opposite values in three axes of imaginary ball as real acceleration. When the imaginary ball position is biased toward the forward of an axis, the acceleration of the axis is negative, and when the imaginary ball position is biased toward a negative axis, the axis's acceleration

reading is positive. According to the above analysis, when we put the MPU6050 chip on the local level, the chip surface is toward the sky, at this time due to the gravity, the position of the ball is toward the negative direction of Z axis, thus the Z axis acceleration reading should be positive, and ideally should be “g”. Note that this is not the gravitational acceleration but the acceleration of physical motion, this can be understood: the acceleration of gravity is equal to its own movement acceleration value, but in the opposite direction, that is why the chip can remain stationary.

5.4.2 Roll-pitch-yaw model and attitude calculation

A general model for representing the current flight attitude of an aircraft is to establish the coordinate system as shown below and representing the rotation of the X axis by “Roll”, the rotation of the Y axis by “Pitch”, the rotation of the Z axis by “Yaw”.

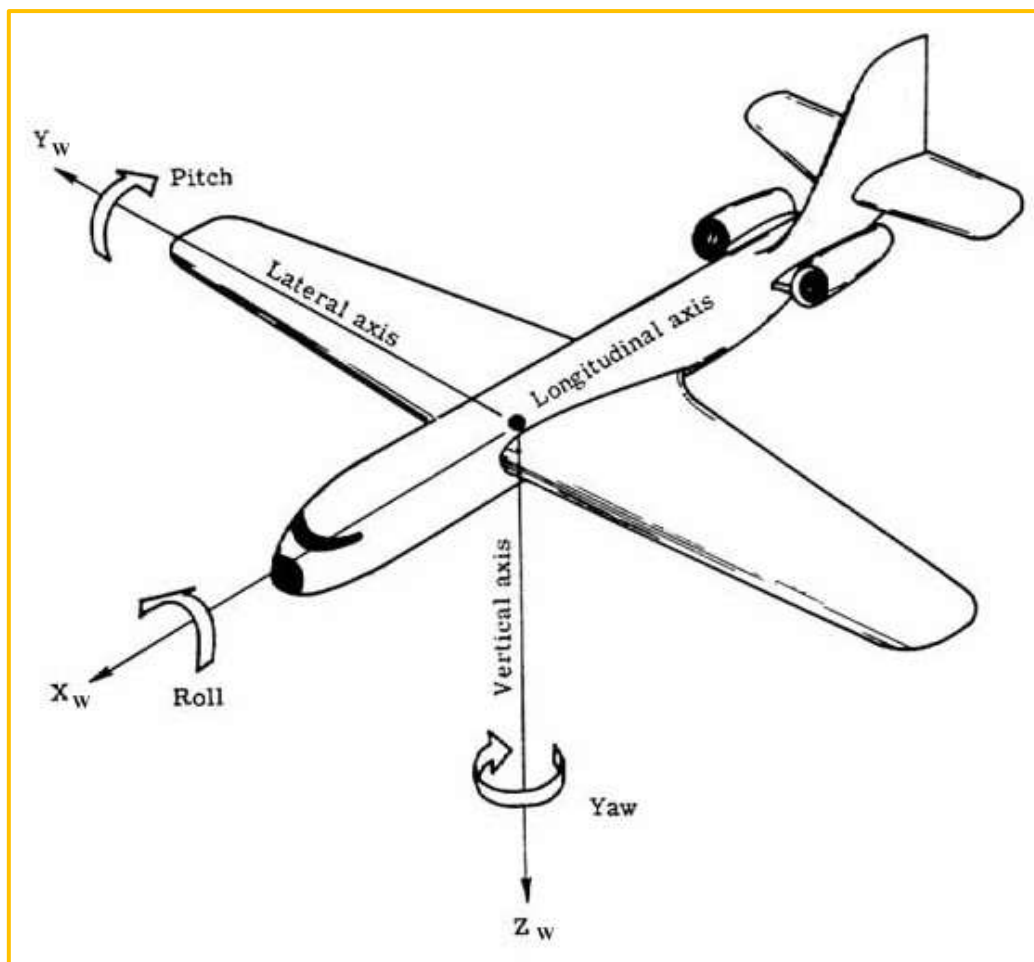


Figure 17: Roll-pitch-yaw model

Since MPU6050 can obtain the upward acceleration of three axes and gravity is always vertical down, we can calculate the current attitude according to the acceleration of gravity

relative to the chip. For the sake of convenience, we have the chip facing down on the plane shown above, and the coordinates are in perfect coincidence with the coordinate system of the aircraft. The acceleration in the three axes forms an acceleration vector “ $a(x, y, z)$ ”. Assuming that the chip is in a state of uniform linear motion, then the “ a ” should be perpendicular to the ground, namely, the negative direction of Z axis, and the length is $|a|=g=\sqrt{x^2+y^2+z^2}$ (equal to the acceleration of gravity but the opposite direction, seeing in Section 3.1). If the chip (coordinate system) rotates, the negative direction of the Z axis will no longer coincide with the “ a ” because the acceleration vector a is still up vertically. Seeing below.

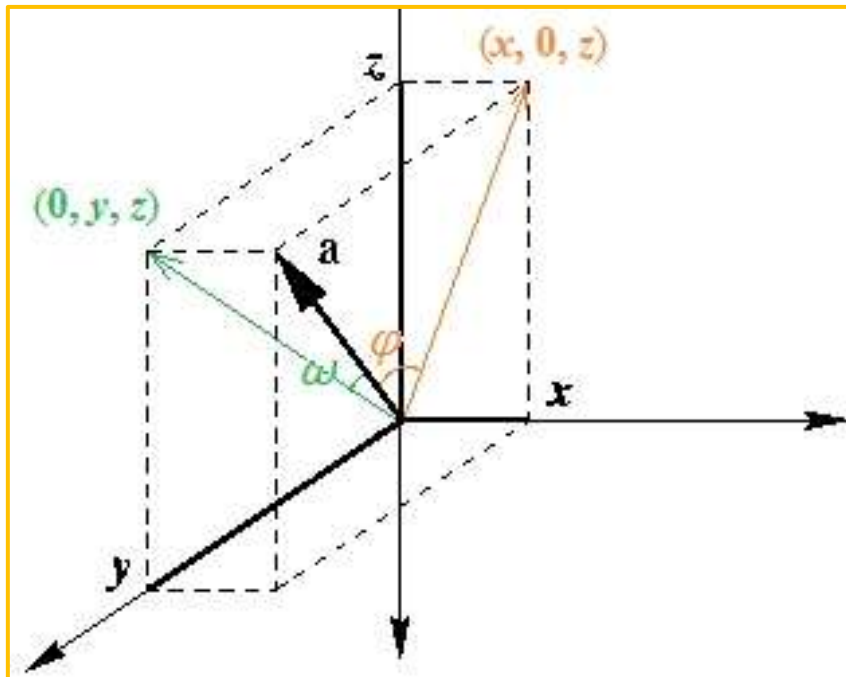


Figure 18: Attitude angle calculation model

For the sake of convenience, the the positive direction of Z axis of the coordinate system above is (the belly and the front of the chip) downward, and the X axis is toward to the right (the direction of the plane flying). At this point, the Roll angle “ ϕ ” (yellow) of the chip is formed by the acceleration vector and its projection $(x, 0, z)$ on the XZ plane, the Pitch angle “ ω ” (green) is formed by the acceleration vector and its projection on the YZ plane. The dot product formula can calculate the angle between two vectors: $a \cdot b = |a| \cdot |b| \cdot \cos \theta$. After simple deduction:

$$\phi = \cos^{-1}(\sqrt{x^2 + z^2}/g) \text{ and } \omega = \cos^{-1}(\sqrt{y^2 + z^2}/g).$$

Note that since the arccos function can only return positive values, you need to take the positive and negative values of the angle according to different circumstances. When the y axis is positive, the Roll angle takes a negative value, and when the X axis is negative, the Pitch angle is negative.

5.4.3 Yaw Angle Problem

Since there is no reference, the absolute current angle of the Yaw can't be calculated, we can only obtain the variation of Yaw, namely, angular velocity GYR_Z. Of course, we can use the method of GYR_Z integral to calculate the current Yaw angle (according to the initial value), by virtue of measurement accuracy, the calculated value is drifting, it is completely meaningless after a period of time. However, in most applications, such as UAVs, only GRY_Z is required.

If you have to get the absolute angle of Yaw, then choose MPU9250, a 9-axis motion tracking chip, it can provide 3-axis compass additional data, so we can calculate the Yaw angle according to the direction of the earth's magnetic field, the specific method is not mentioned here.

5.5 Data Processing and Implementation

MPU6050 chip provides data with a serious noise, when the chip is processing in a static state, the data may swing more than 2%. In addition to the noise, there still exists other offsets, that is to say, the data does not swing around the static working point, so the data offset should be calibrated firstly, and then eliminating the noise by filtering algorithm. The effect of the Kalman filter is undoubtedly the best for data with a large amount of noise. Here we don't consider algorithmic details, you can refer to http://www.starlino.com/imu_guide.html.


5.5.1 Experiment 3 imu_kalman gets Roll and Pitch

The aim is to display the 3D motion state of the mpu6050 in real-time by reading the mpu6050, and transmitting the real-time acceleration ACCEL_X, ACCEL_Y, ACCEL_Z data and gyro data GYRO_X, GYRO_Y, and GYRO_Z to the processing program.

5.5.2 Experiment Code

Arduino experiment code **"MotionTrack\Lesson\mpu6050\mpu6050.ino"** can get roll and pitch.


Running result is as follows:

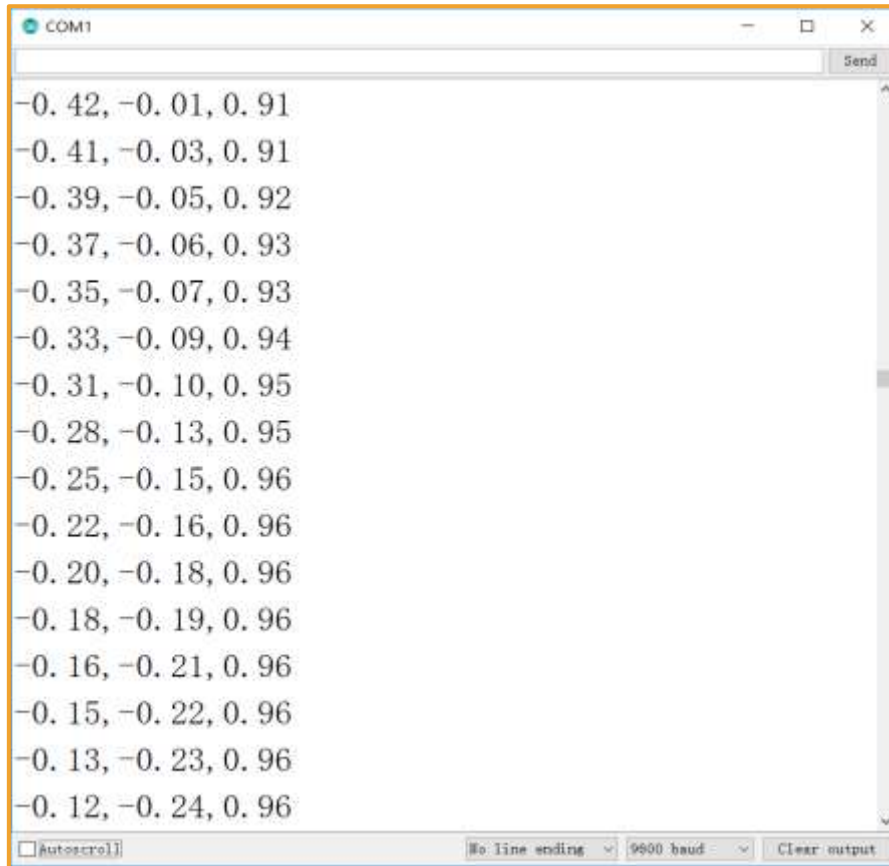

After uploading the program to the Arduino NANO main control board, open the Processing program **“MotionTrack\Processing_demo\mpu6050\mpu6050.pde”**

with Processing software (download address <https://www.processing.org>).

Note that the number in "[]" is not the port number of Arduino NANO, but the serial number of the communication port. You need to open the device manager of the computer to view the serial number. For example, my display is COM1, and the serial port used for our processing. It starts with the subscript 0. So I changed the value in "[]" in the Processing main program to 0. Once the changes are complete, click Run Sketch to run Processing..

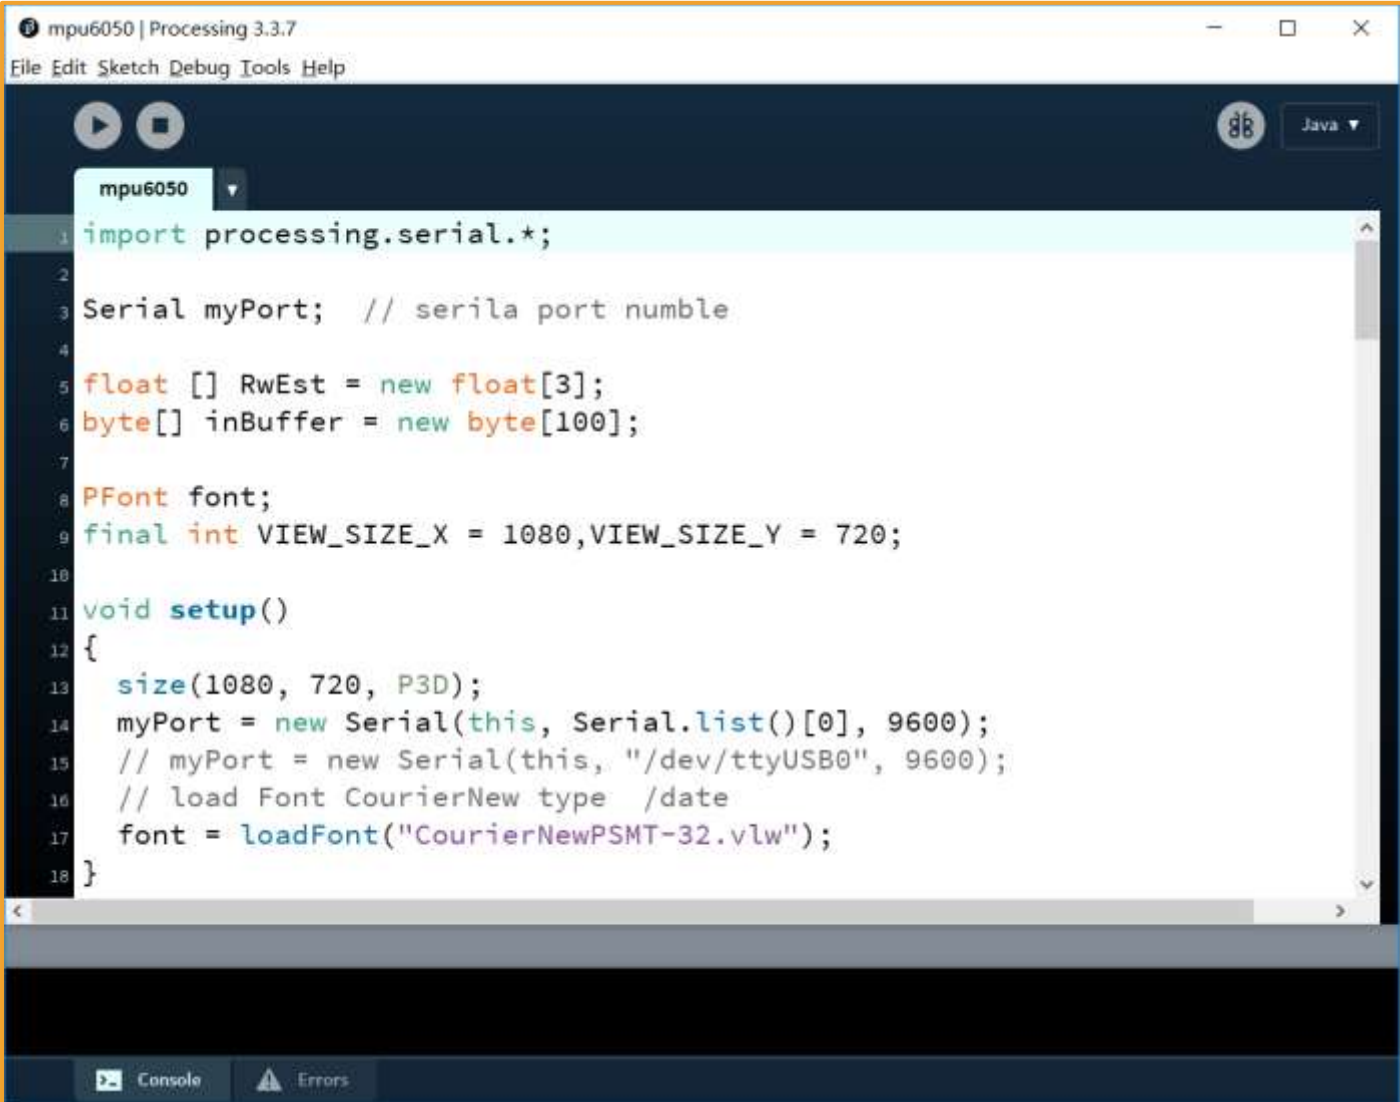

The screenshot shows the Processing IDE window titled "mpu6050 | Processing 3.3.7". The menu bar includes "File", "Edit", "Sketch", "Debug", "Tools", and "Help". The toolbar contains icons for running, stopping, and a palette. A dropdown menu shows "mpu6050". The code editor displays the following Java code:

```
1 import processing.serial.*;
2
3 Serial myPort; // serial port number
4
5 float [] RwEst = new float[3];
6 byte[] inBuffer = new byte[100];
7
8 PFont font;
9 final int VIEW_SIZE_X = 1080, VIEW_SIZE_Y = 720;
10
11 void setup()
12 {
13   size(1080, 720, P3D);
14   myPort = new Serial(this, Serial.list()[0], 9600);
15   // myPort = new Serial(this, "/dev/ttyUSB0", 9600);
16   // load Font CourierNew type /date
17   font = loadFont("CourierNewPSMT-32.vlw");
18 }
```

At the bottom, there are tabs for "Console" and "Errors".

```
import processing.serial.*;

Serial myPort; // serial port number

float [] RwEst = new float[3];
byte[] inBuffer = new byte[100];

PFont font;
final int VIEW_SIZE_X = 1080, VIEW_SIZE_Y = 720;

void setup()
{
    size(1080, 720, P3D);
    myPort = new Serial(this, Serial.list()[0], 9600);
    // myPort = new Serial(this, "/dev/ttyUSB0", 9600);
    // load Font CourierNew type /date
    font = loadFont("CourierNewPSMT-32.vlw");
}

void readSensors() {
    if (myPort.available() > 0) {
        if (myPort.readBytesUntil('\n', inBuffer) > 0) {
            String inputString = new String(inBuffer);
            String [] inputStringArr = split(inputString, ',');
            RwEst[0] = float(inputStringArr[0]);
            RwEst[1] = float(inputStringArr[1]);
            RwEst[2] = float(inputStringArr[2]);
        }
    }
}
```

```
void buildBoxShape() {  
    //box(60, 10, 40);  
    noStroke();  
    beginShape(QUADS);  
  
    //Z+  
    fill(#00ff00);  
    vertex(-30, -5, 20);  
    vertex(30, -5, 20);  
    vertex(30, 5, 20);  
    vertex(-30, 5, 20);  
  
    //Z-  
    fill(#0000ff);  
    vertex(-30, -5, -20);  
    vertex(30, -5, -20);  
    vertex(30, 5, -20);  
    vertex(-30, 5, -20);  
  
    //X-  
    fill(#ff0000);  
    vertex(-30, -5, -20);  
    vertex(-30, -5, 20);  
    vertex(-30, 5, 20);  
    vertex(-30, 5, -20);  
  
    //X+  
    fill(#ffff00);  
    vertex(30, -5, -20);  
    vertex(30, -5, 20);  
    vertex(30, 5, 20);  
    vertex(30, 5, -20);  
  
    //Y-  
    fill(#ff00ff);  
    vertex(-30, -5, -20);  
    vertex(30, -5, -20);  
    vertex(30, -5, 20);  
    vertex(-30, -5, 20);  
}
```

```
//Y+
fill(#00ffff);
vertex(-30, 5, -20);
vertex(30, 5, -20);
vertex(30, 5, 20);
vertex(-30, 5, 20);

endShape();
}

void drawCube() {
  pushMatrix();
  // normalize3DVec(RwEst);
  translate(300, 450, 0);
  scale(4, 4, 4);
  rotateX(HALF_PI * -RwEst[1]);
  //rotateY(HALF_PI * -0.5);
  rotateZ(HALF_PI * -RwEst[0]);
  buildBoxShape();
  popMatrix();
}

void draw() {
  // getInclination();
  readSensors();
  background(#214565);
  fill(#ffffff);
  textFont(font, 20);
  text("RwEst :\n" + RwEst[0] + "\n" + RwEst[1] + "\n" + RwEst[2], 220, 180);
  // display axes
  pushMatrix();
  translate(450, 250, 0);
  stroke(#ffffff);
  // scale(100, 100, 100);
  line(0, 0, 0, 100, 0, 0);
  line(0, 0, 0, 0, -100, 0);
  line(0, 0, 0, 0, 0, 100);
  line(0, 0, 0, -RwEst[0], RwEst[1], RwEst[2]);
  popMatrix();
  drawCube();
}
```

We can see that our running results are as follows:

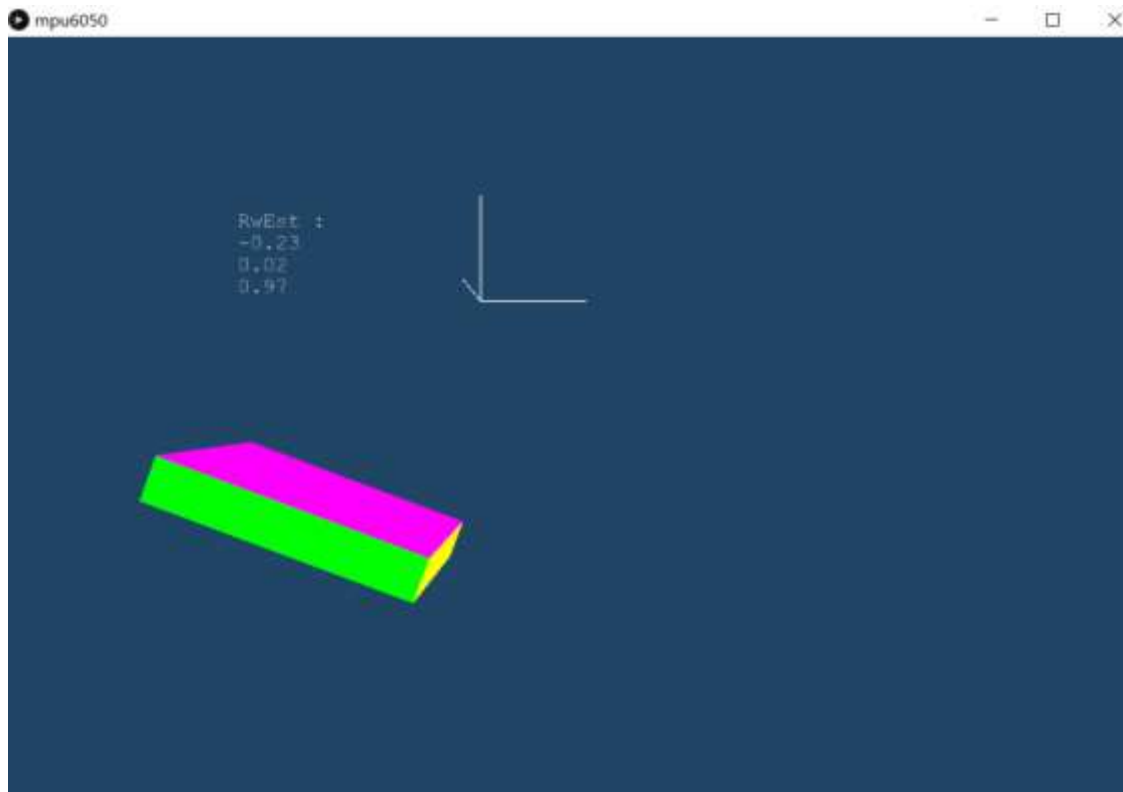


Figure 19: Processing presentation renderings

6 Principle of motion tracking control

Through the previous data acquisition of mpu6050 to get the Roll angle and Pitch, we establish the following correspondence.

Control the lower machine moving object: We can control any lower machine object by getting the speed and direction through mpu6050.

By reading the mpu6050 real-time verified acceleration ACCEL_X, ACCEL_Y, ACCEL_Z data and gyroscope data GYRO_X, GYRO_Y, GYRO_Z data are transmitted to the quaternion processing function, the program displays the Roller and Pitch angle states of the mpu6050 in real time.

6.1 Racing direction coordinate angle model

In order to facilitate the control of the car, we now establish the following model of the direction of the motor with the coordinate angle

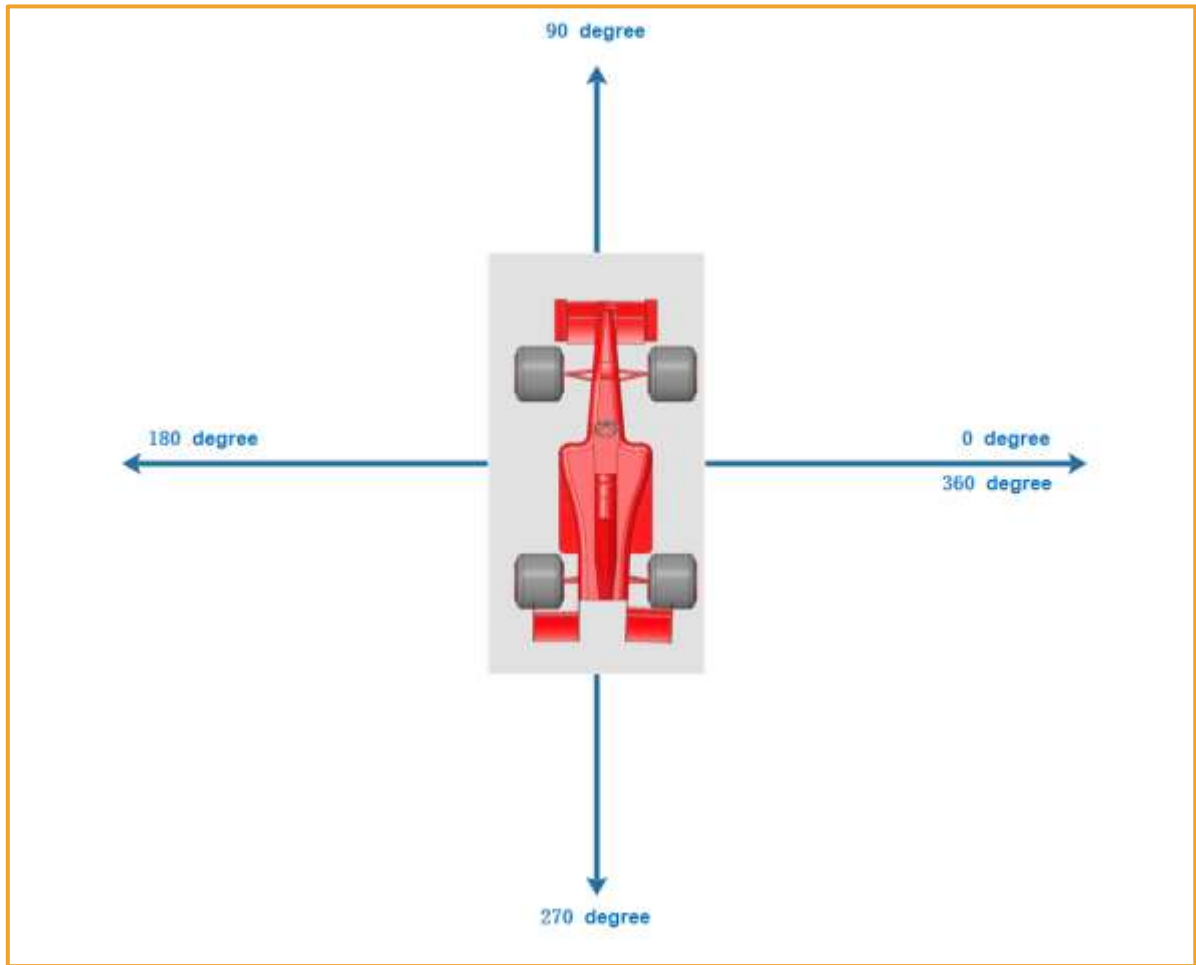


Figure 20: Racing direction angle coordinates

As shown above, we define the front of the car as 90 degrees, 270 degrees to the rear, 180 degrees to the right, and 0/360 degrees to the left.

0~90 stands for the right front direction. 90~180 stands for the left front 180~270 for the left rear and 270~360 for the right rear.

Similarly, we installed the mpu6050 on the sports gloves. We built the following motion model.

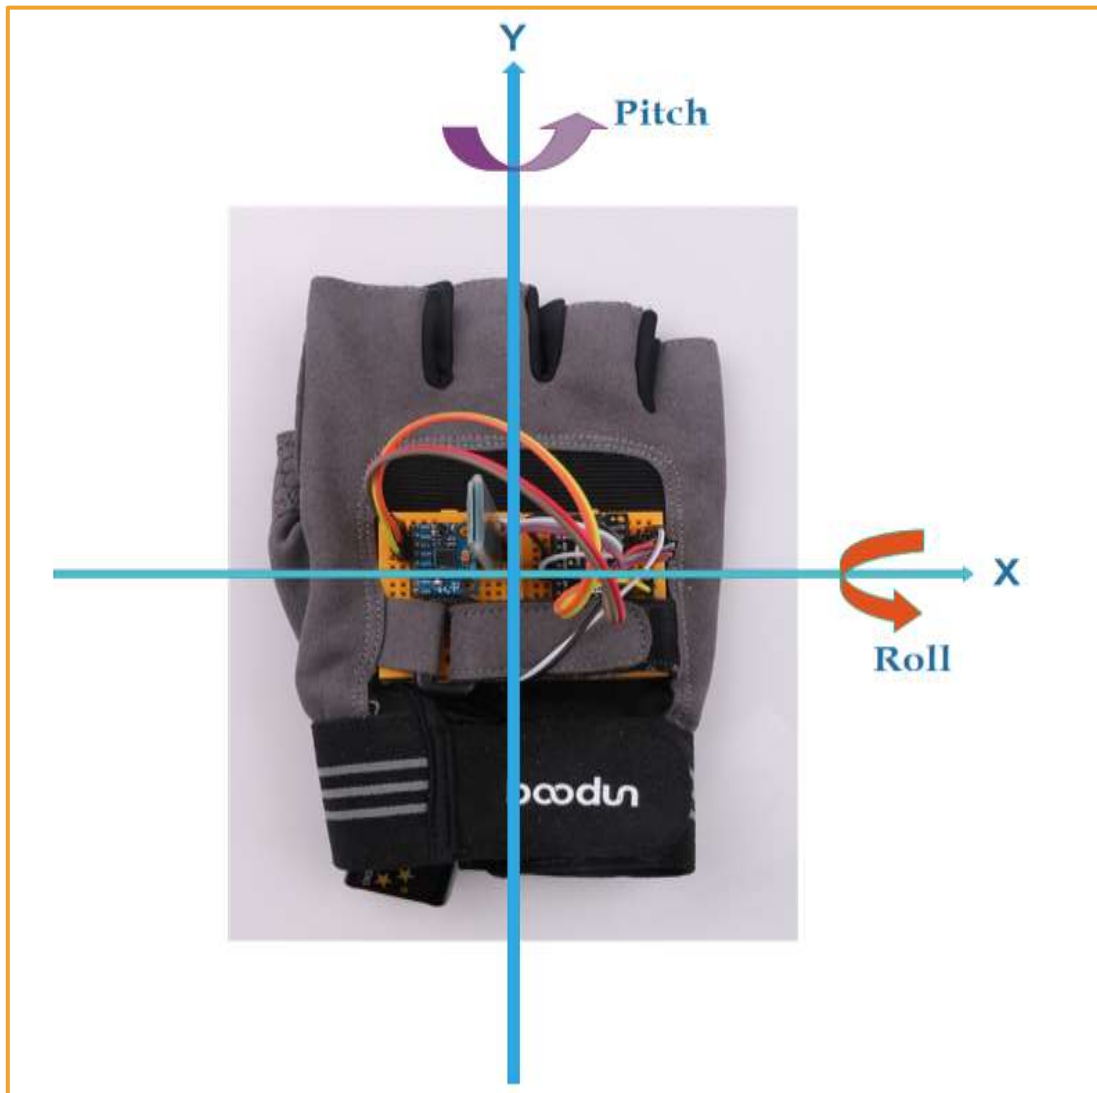


Figure 21: Directional coordinates of the sports gloves

Through the 5.5.2 Roll-pitch-yaw data model, the sports gloves rotate around the figure Y (turning the back of the hand left and right) and we get the Pitch angle.

Rotating around X (flip back and forth) we get the Roll angle.

Now that we have an understanding of the coordinates of the attitude angle and the angular coordinates of the car, we will now describe it to the scene.

When the sports gloves are tilted to the right front direction, as shown in the figure below, if they are in the coordinate system, they are inclined to the 0 to 90 degree area.

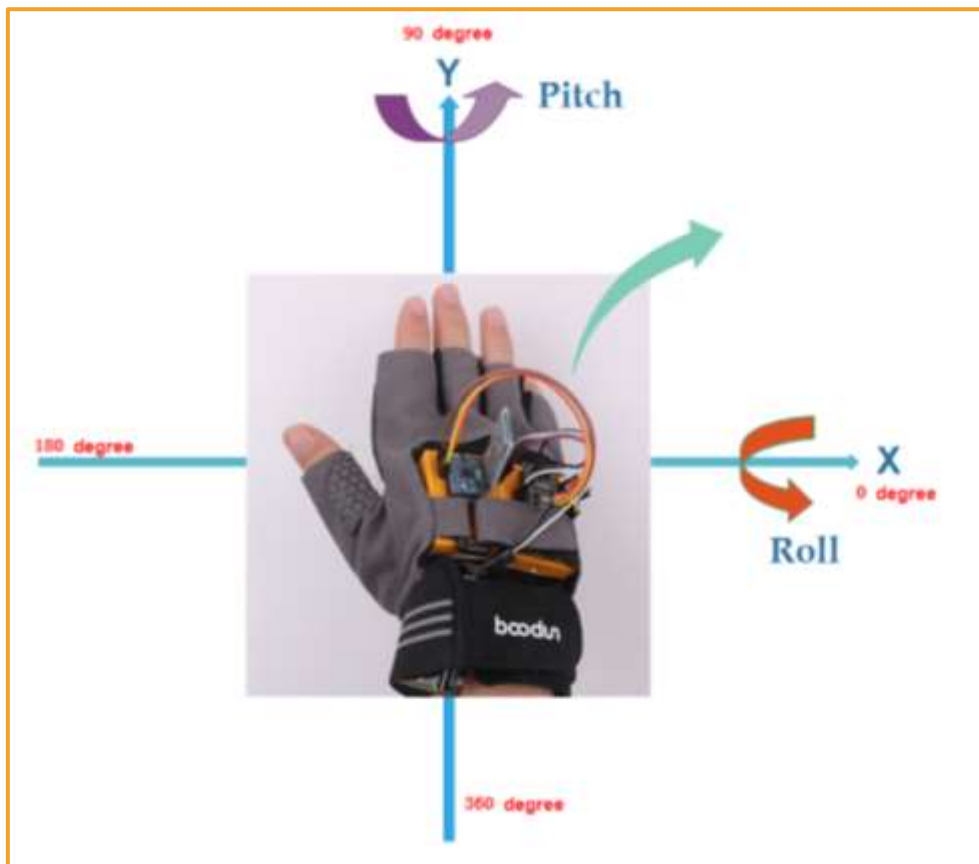


Figure 22: Schematic diagram of the sports gloves tilting to the right front direction
The corner corresponding to the below car is as follows

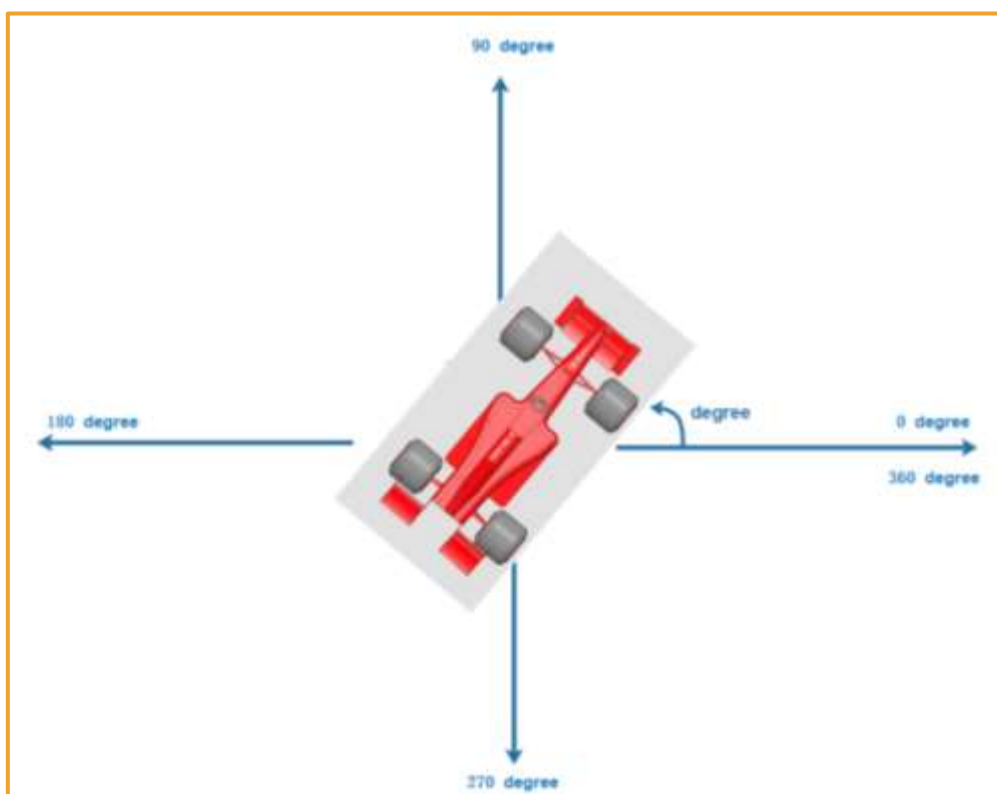


Figure 23: Schematic diagram of the right front movement of the car

Through the attitude of the sports gloves, we need to calculate the angle degree of the movement of the lower machine. So we built the following three-dimensional model

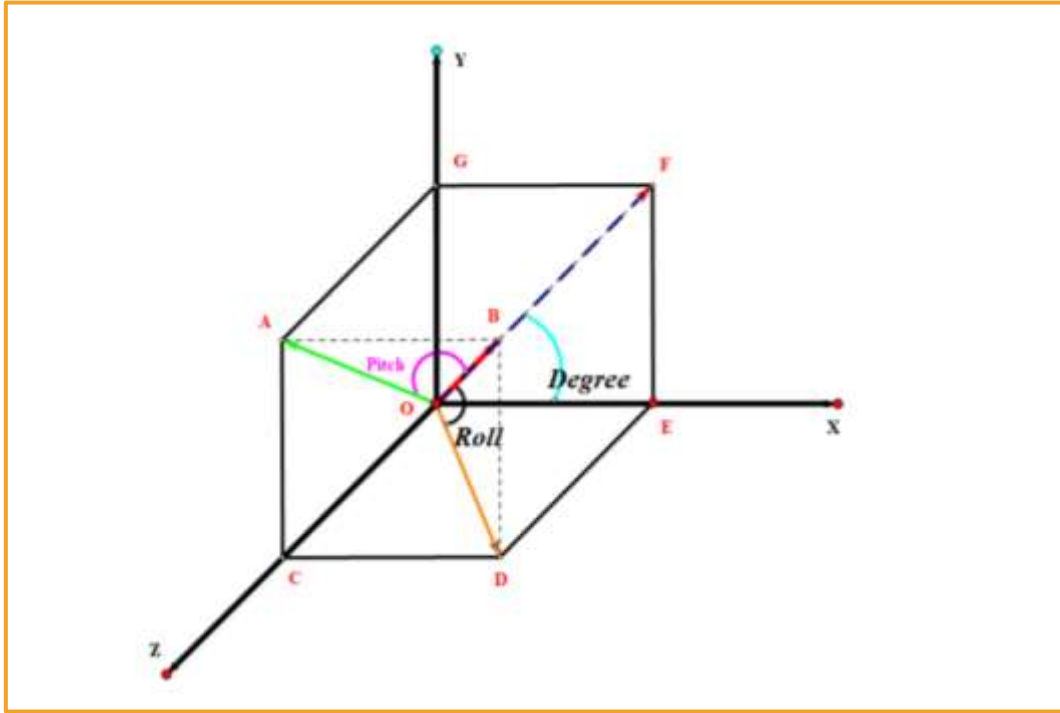


Figure 24: Stereo model diagram based on sports gloves

For convenience of representation, the Z-axis positive direction of the upper coordinate system (the front of the moving glove) is upward, and the positive X-axis direction (the right side of the sports glove) is to the right.

In the initial state, the sports gloves remain the same lever with XY .

At this time, the direction in which the sports gloves is tilted is represented by OB, and the Roll angle (black) is the angle between the acceleration vector OB and its projection (x, 0, z) on the XZ plane, and the Pitch angle (purple) is its projection on the YZ plane (The angle between 0, y, and z). The blue color is degree at which the sports gloves project the projection (x, o, y) on the XY plane. We use this angle to control the steering angle of the lower car.

We have already got Roll and Pitch through the previous 5.6.1 experiment. Now we calculate the degree by the following formula.

In the Figure:

$$BA \perp OA \quad AB = OB \times \sin(Pitch)$$

$$BD \perp OD \quad BD = OB \times \sin(Roll)$$

$$\tan(\text{degree}) = \frac{FE}{OE} = \frac{BD}{AB} = \frac{\sin(\text{Roll})}{\sin(\text{Pitch})} \approx \frac{\text{Roll}}{\text{Pitch}}$$

$$\text{degree} = \arctan\left(\frac{\text{Roll}}{\text{Pitch}}\right)$$

Above we have got the steering cosine angle, we need to multiply the coefficient into the coordinate degree.

$$\frac{180}{\pi} = 57.3$$

The above analysis is only an angle analysis when tilted like the upper right. Similarly, when the sports gloves are tilted to the left front

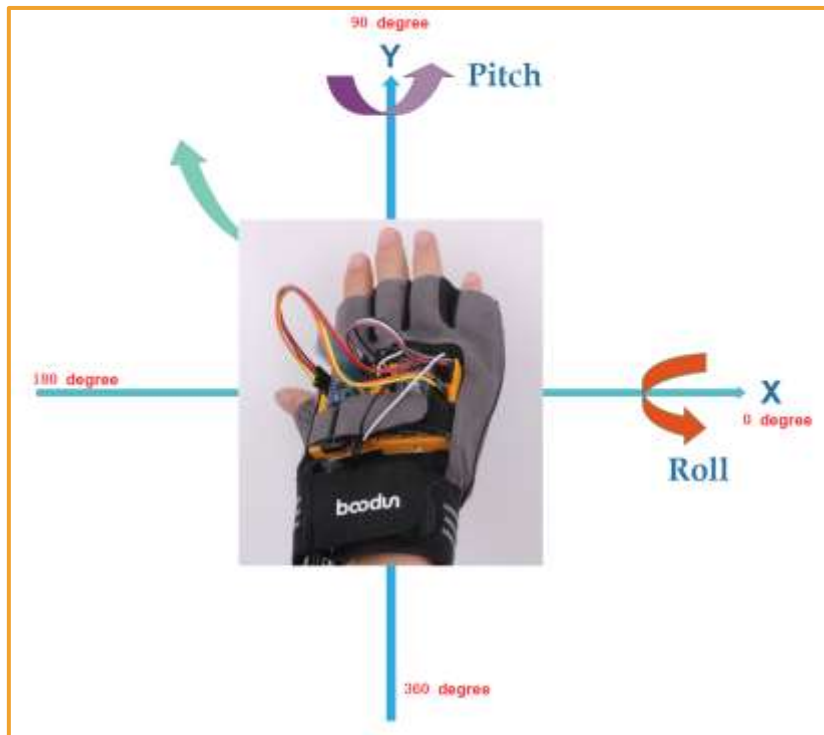


Figure 25: Schematic diagram of the sports gloves tilting to the left front direction

$$\text{degree} = \arctan\left(-\frac{\text{Pitch}}{\text{Roll}}\right) * 57.3 + 90^\circ$$

Similarly, when the sports gloves are tilted to the left

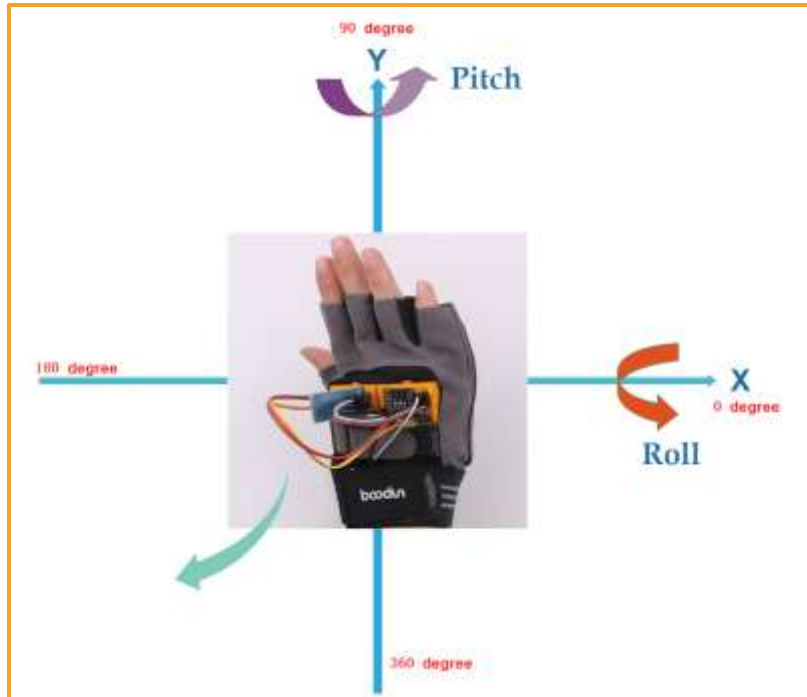


Figure 26: Schematic diagram of the left rear direction of the sports gloves

$$\text{degree} = \arctan\left(\frac{\text{Roll}}{\text{Pitch}}\right) * 57.3 + 180^\circ$$

Similarly, when the sports gloves are tilted to the lower right

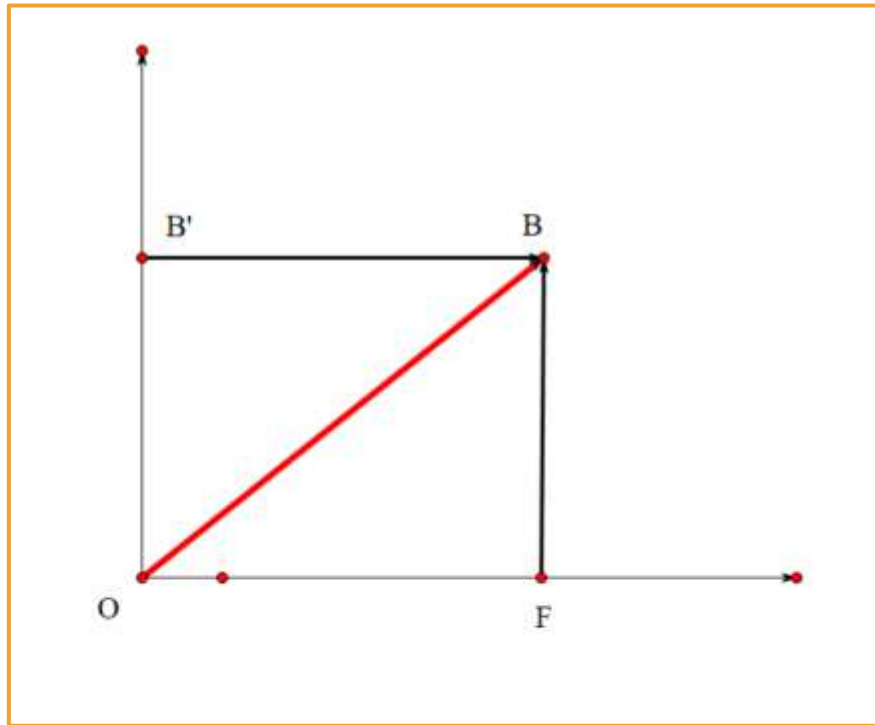


Figure 27: Schematic diagram of the right rear direction of the sports gloves

$$\text{degree} = \arctan\left(-\frac{\text{Pitch}}{\text{Roll}}\right) * 57.3 + 270^\circ$$

Now let's talk about how to control the speed of the car.

From the above figure we can see that for the sports gloves in the mpu6050 and the plane XY plane tilt angle, we use the following plane to represent



$\angle B'OB$ is the angle of inclination relative to the initial state, using this degree of tilt to control the speed of the car.

$$\angle B'OB = \angle OBF = \arcsin\left(\frac{OF}{OB}\right) = \arcsin\left(\frac{\sqrt{OE^2 + EF^2}}{OB}\right)$$

$$EF = BD \quad OE = AB$$

$$\angle OBF = \arcsin(\sqrt{\sin^2(\text{Roll}) + \sin^2(\text{Pitch})}) \approx \arcsin(\sqrt{\text{Roll}^2 + \text{Pitch}^2})$$

The above is the arc angle. We also need to multiply the coefficient. The range of this angle is (0~90). We directly use this angle as the control speed of the car.

```
float CalculateSpeed(float roll, float pitch)
{
    float inclination = asin(sqrt(roll*roll +pitch*pitch))*Rad;
    return inclination;
}

void HandInclination(void)
{
    static int count = 0;
    static int SendSpeed = 0, SendDegree = 0;
    count++;
    speed = CalculateSpeed(roll, pitch);
    if ((-0.2 <= pitch) && (pitch <= 0.2) && (-0.2 <= roll) && (roll <= 0.2)) {
        degree = 90;
        SendSpeed = 0;
        SendDegree += 90;
    } else if (pitch < 0 && roll < 0) {
        degree = atan(roll/pitch)*Rad;
        SendDegree += ((unsigned int) (degree/10))*10;
    } else if (pitch > 0 && roll < 0) {
        degree = atan(-pitch/roll)*Rad + 90;
        SendDegree += ((unsigned int) (degree/10))*10;
    } else if (pitch > 0 && roll > 0) {
        degree = atan(roll/pitch)*Rad + 180;
    } else if (pitch < 0 && roll > 0) {
        degree = atan(-pitch/roll)*Rad + 270;
        SendDegree += ((unsigned int) (degree/10))*10;
    } else {
        degree = 90;
        SendSpeed = 0;
        SendDegree = 90;
    }
    SendDegree = (int) (speed/10)*10;
    if (degree < 30 || degree > 330) {
        SendDegree = 0;
    }
    if (count >= 3) {
        count = 0;
        Send_Direction(SendDegree/3);
        Send_Speed(SendSpeed);
        SendDegree = 0;
        SendSpeed = 0;
    }
}
```

7. Protocol

Use Bluetooth to control the car, in fact is using the Android app to send instructions to the Arduino serial port via Bluetooth to control the car. Since it involves wireless communication, one of the essential problems is the communication between the two devices. But there is no common "language" between them, so it is necessary to design communication protocols to ensure perfect interaction between Android and Arduino. The main process is: The Android recognizes the control command and package it into the corresponding packet, then sent to the Bluetooth module (JDY-16), JDY-16 received data and send to Arduino, then Arduino analysis the data then perform the corresponding action. The date format that the Android send as below, mainly contains 8 fields.

Protocol Header	Data Length	Device Type	Device Address	Function Code	Control Data	Check Sum	Protocol End Code
-----------------	-------------	-------------	----------------	---------------	--------------	-----------	-------------------

In the 8 fields above, we use a structural body to represent.

```
typedef struct
{
    unsigned char start_code;    // 8bit 0xAA
    unsigned char len;
    unsigned char type;
    unsigned char addr;
    unsigned short int function; // 16 bit
    unsigned char *data;        // n bit
    unsigned short int sum;      // check sum
    unsigned char end_code;      // 8bit 0x55
}ST_protocol;
```

“Protocol Header” means the beginning of the packet, such as the uniform designation of 0xAA.

“Data length” means except the valid data length of the start and end codes of the data.

“Device type” means the type of device equipment

“Device address” means the address that is set for control

“Function code” means the type of equipment functions that need to be controlled, the function types we currently support as follows.


```
typedef enum
{
    E_BATTERY = 1,
    E_LED = 2,
    E_BUZZER = 3,
    E_INFO = 4,
    E_ROBOT_CONTROL = 5,
    E_ROBOT_CONTROL_SPEED = 6,
    E_TEMPERATURE = 7,
    E_IR_TRACKING = 8,
    E_ULTRASONIC = 9,
    E_VERSION = 10,
    E_UPGRADE = 11,
}E_CONTROL_FUNC ;
```

“Data” means the specific control value of a car, such as speed, angle.

“Checksum” is the result of different or calculated data bits of the control instruction.

“Protocol end code ” is the end part of the data bag when receiving this data ,it means that the data pack has been sent, and is ready for receiving the next data pack, here we specified it as 0x55.

For example, a complete packet can be such as "AA 070101065000 5F55", in which:

"07" is Transmission Data Length 7 bytes.

"06" is the "device type", such as motor, LED, buzzer and so on. The 06 here refers to the transmission speed, and the 05 refers to the transmission direction.


"50 (or 0050)" is the controlling data, 0x50 in hexadecimal is 80 when converted to binary, which means the speed value is 80. If the data is 05, it means the controlling direction, that is 80 degrees (forward).

"005F" is a checksum that is $0x07+0x01+0x01+0x06+0x50=0x5F$.

"55" is the end code of the Protocol, indicating the end of data transfer.

8. Comprehensive experiment:

8.1 Nrf24L01 wireless control

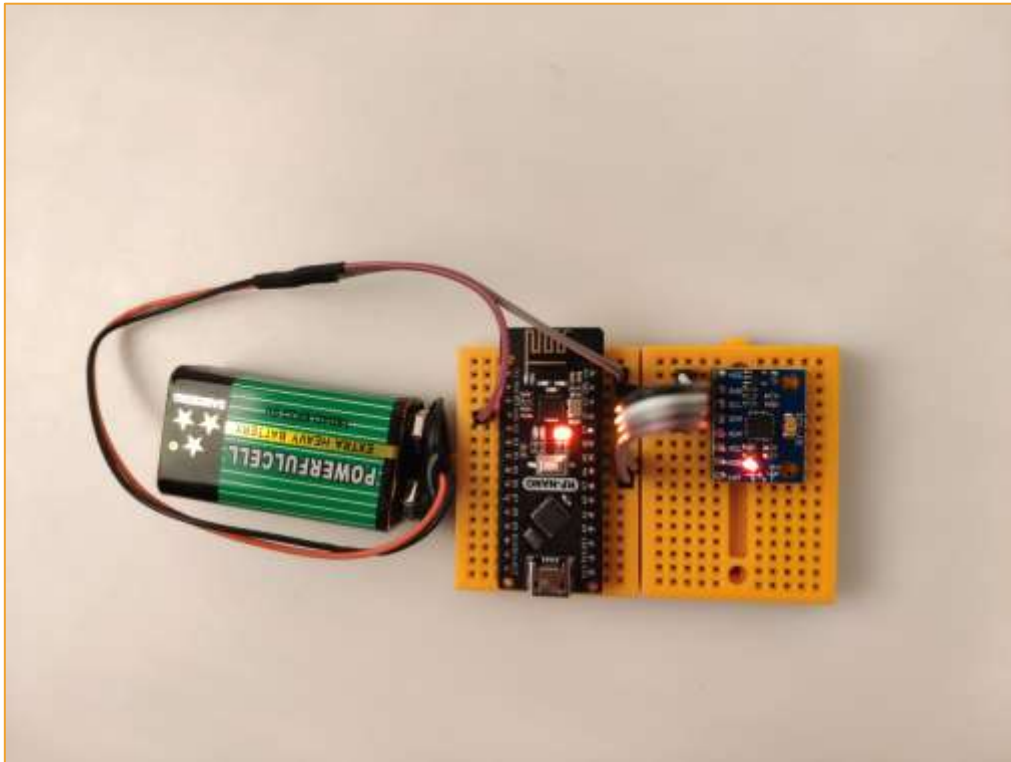

8.1.1 Gesture control Hummer-bot smart car

Connect according to the connection line of the previous chapter, then connect the 9v dry battery to the Arduino NANO, and download the program. After power-on, the Nrf24L01 module sends data to the Hummer-Bot Nrf24L01, and then adjust the position of the glove to control the Hummer-Bot multi-function car, so the car controlled by the sports gloves is born!!

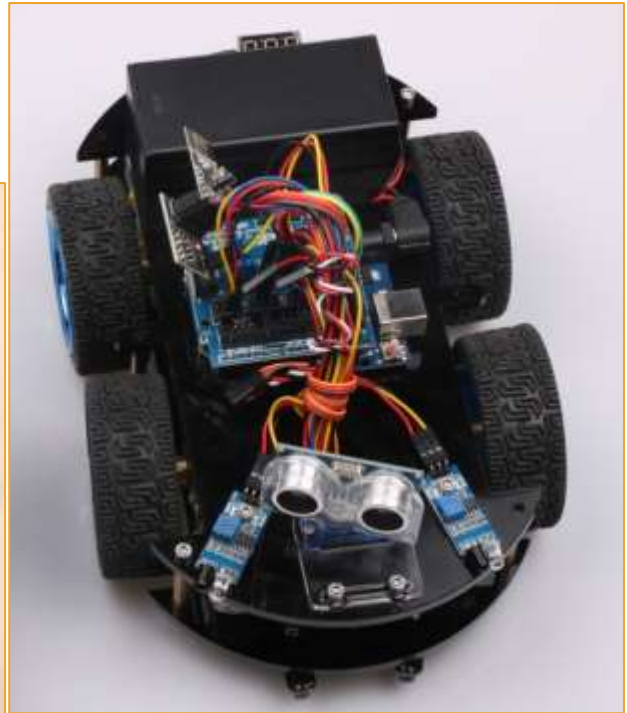
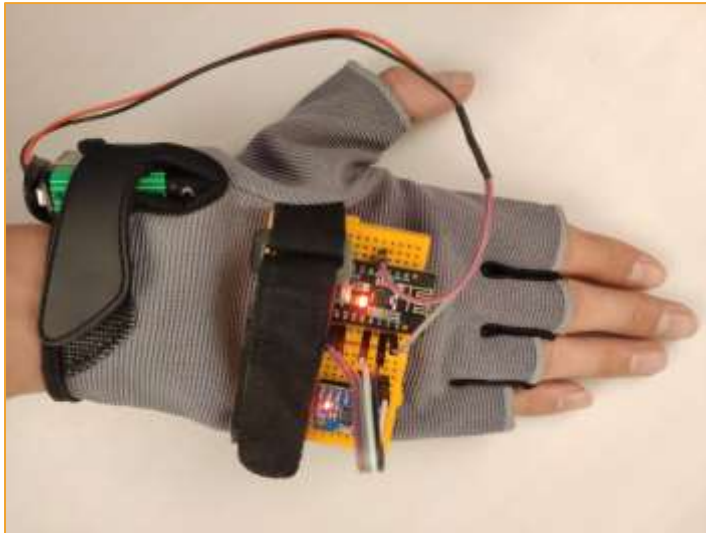


Figure 28: Gesture control hummer-bot

- Program link of the lower computer: <https://github.com/keywish/keywish-hummer-bot>
- Hummer-Bot Multi-function car purchase link: Buy on Amazon:
<https://www.amazon.com/dp/B078WM15DK>
- Control demo video Gesture-MotionTracking\video\Control_Hunner-bot.mp4

8.1.2 Gesture Control Beetle-bot Smart Car



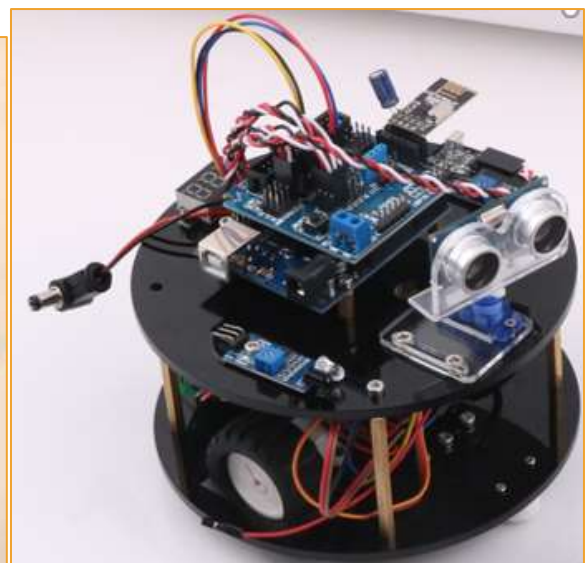


Figure 29: Gesture Control Beetle-bot

- Information on Beetle-bot <https://github.com/keywish/keywish-beetle-bot>

8.2 Bluetooth communication mode control

Connect according to the Bluetooth cable, then connect the 9v dry battery to the Arduino NANO and download the program (**MotionTrack\Lesson\MotionTrack_Bluetooth\ MotionTrack_Bluetooth.ino**). Note that you need to modify the MAC address of the Bluetooth of the lower computer. After power-on, the sports gloves automatically connect to the Bluetooth module of the car.

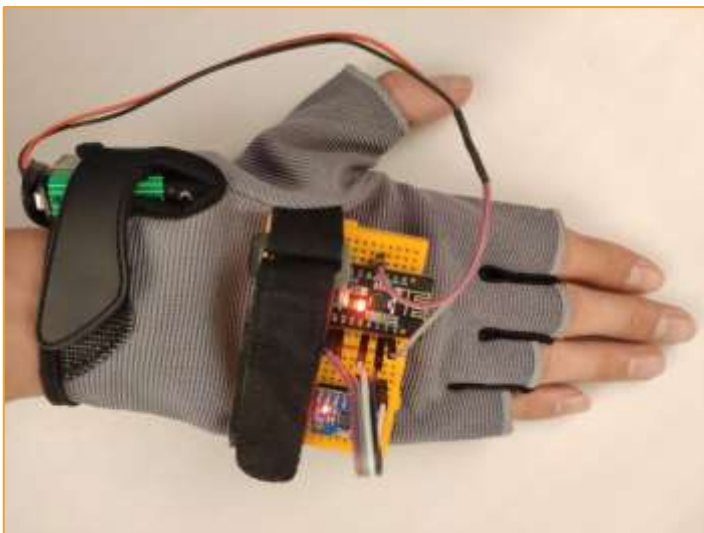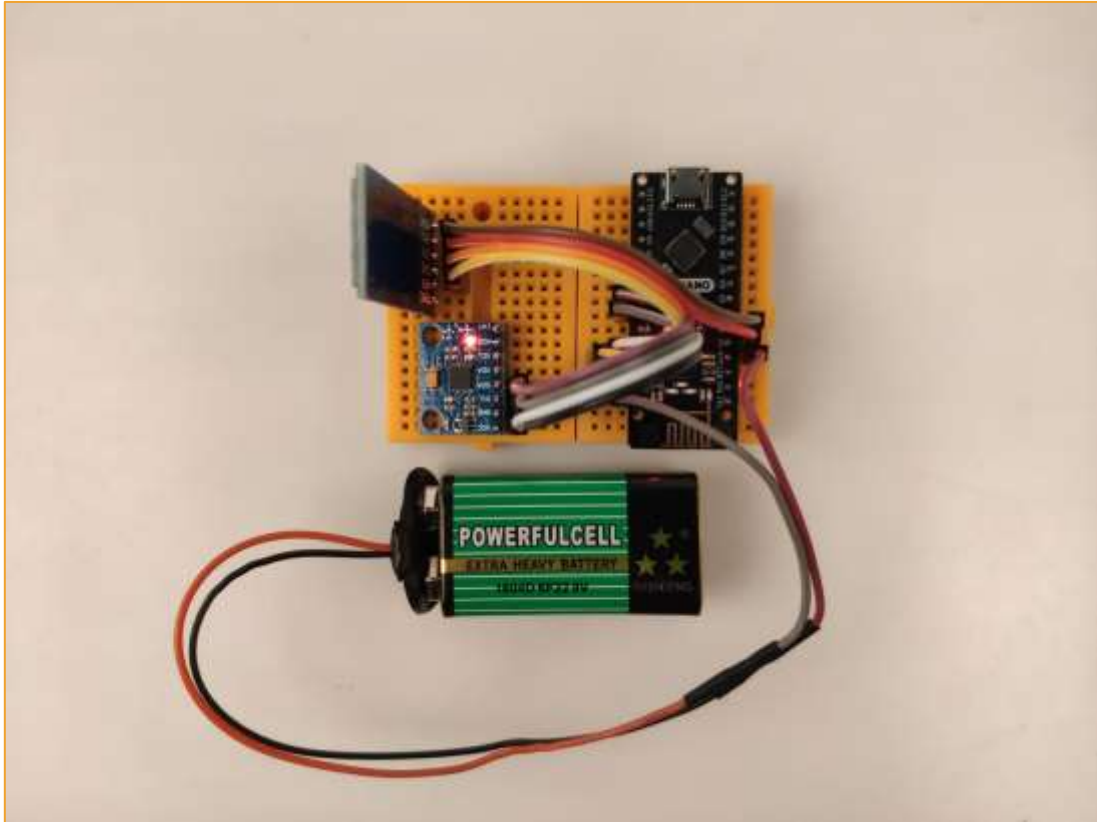

8.2.1 Gesture control Aurora-Racing



Figure 30: Gesture Control Aurora-Racing

- Product Information: <https://github.com/keywish/Aurora-Racing>
- Production video: gitee\MotionTrack\video\ Control_RacingCar.mp4
- Purchase link: <https://www.amazon.com/dp/B07DDG2YQQ>

8.2.2 Gesture control Panther-tank

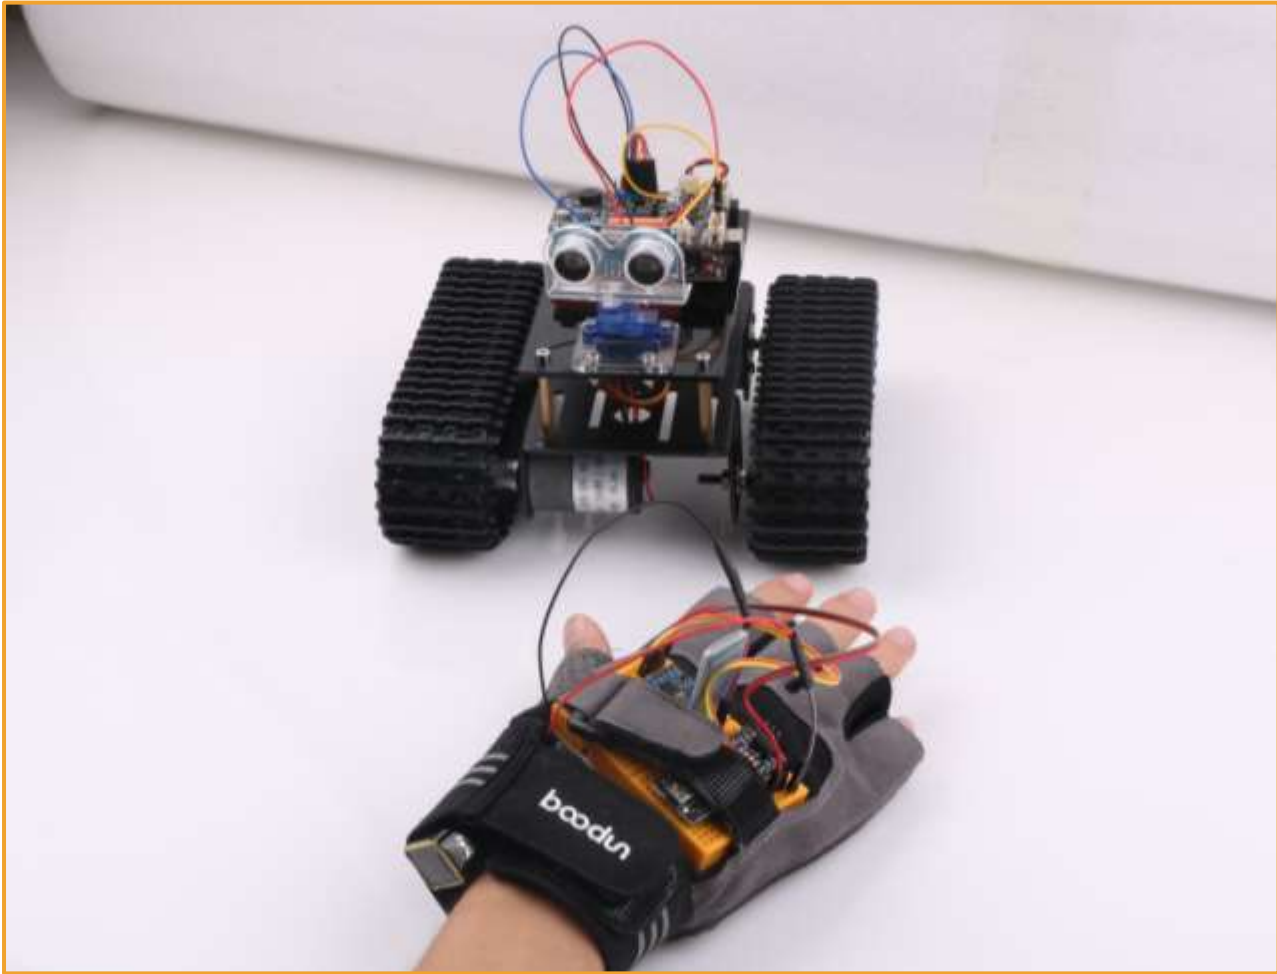


Figure 31: Gesture Control Pather-tank

- For Panther-tank production materials, please refer to <https://github.com/keywish/keywish-panther-tank>

8.2.3 Gesture control balance car

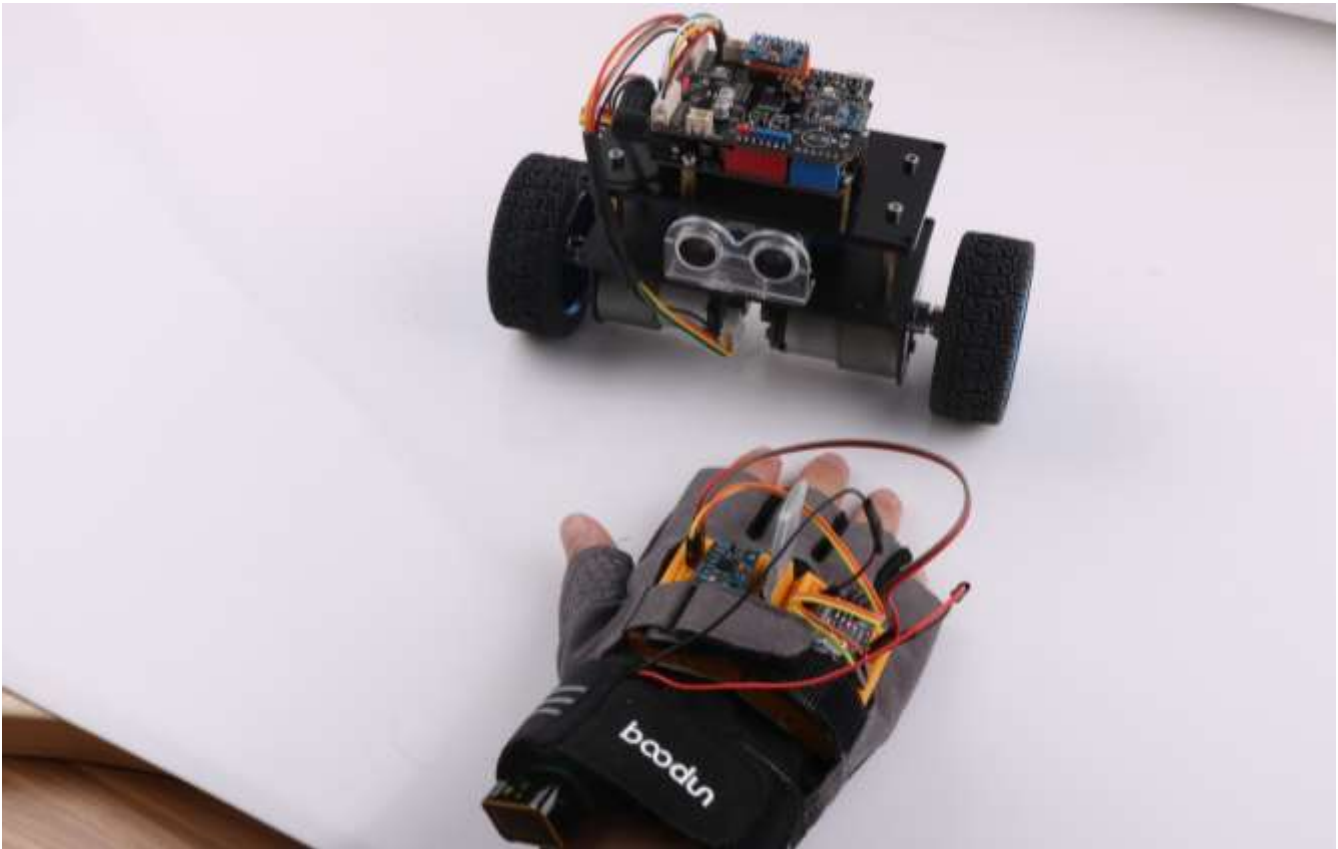


Figure 32: Gesture Control Mini balance-car

- For Balance product information, please refer to <https://github.com/keywish/mini-balance-car>