

# Pi Pico Rx

## User Manual



Revision 2  
Copyright © Jonathan P Dawson 2024

## Default Home Screen

Mode (LSB/USB/AM/FM/CW)

Volume Battery Voltage

Signal Strength  
(dBm)




Signal Strength Meter  
(S Units)

Tuning Frequency


Tuning Step

## Optional Secondary TFT Display

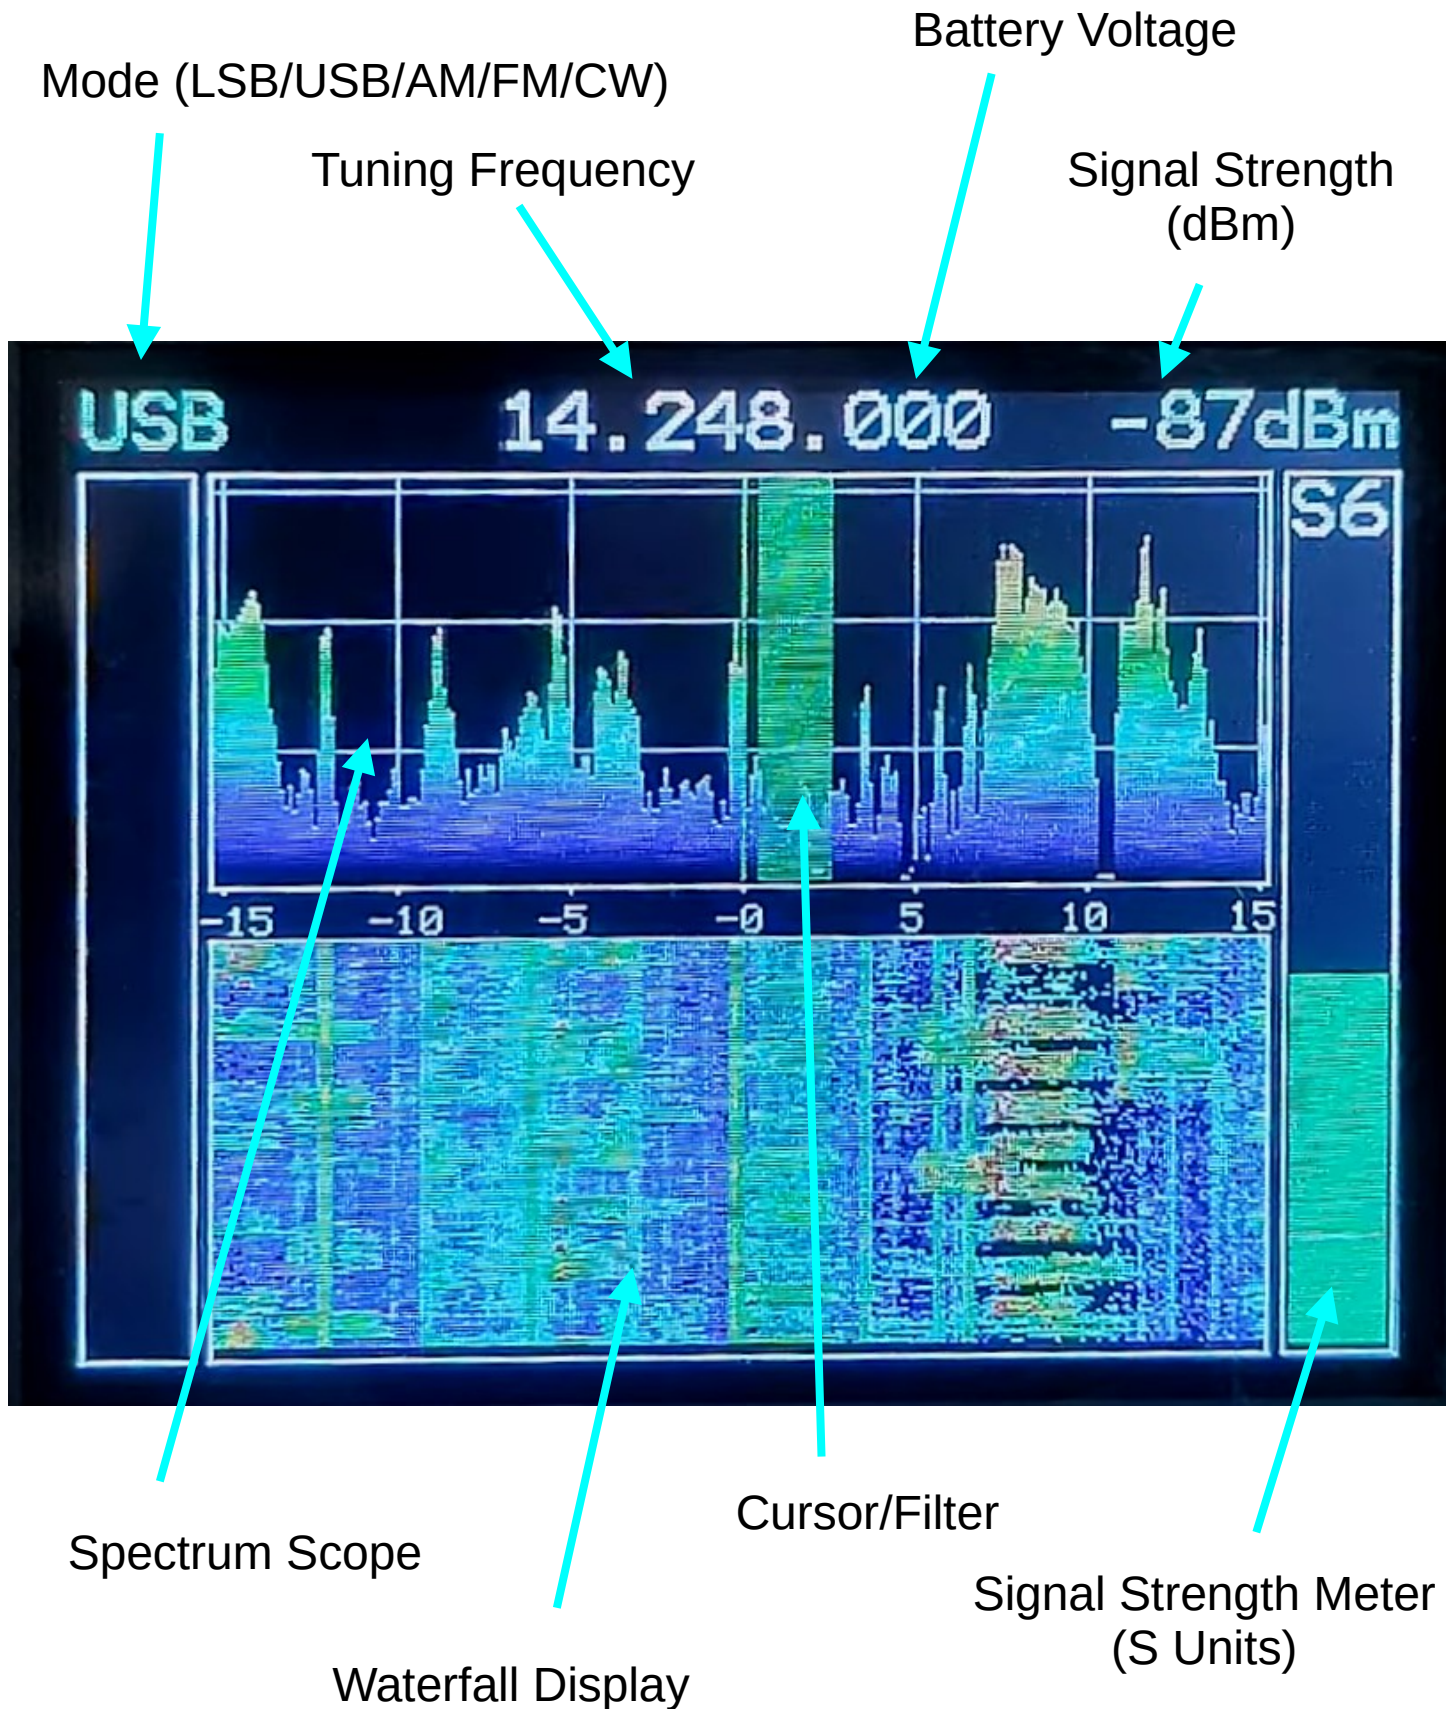

# Home Page Actions



Menu

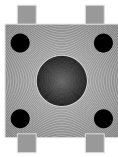

press




Enter Menu

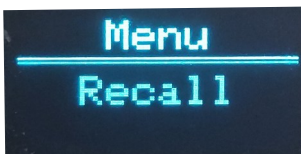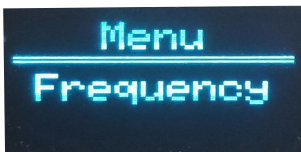

...

Encoder

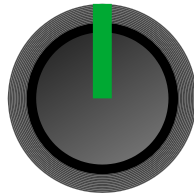


press



Memory Recall



Back

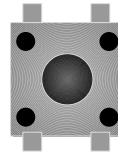


press




Change View



# Tuning

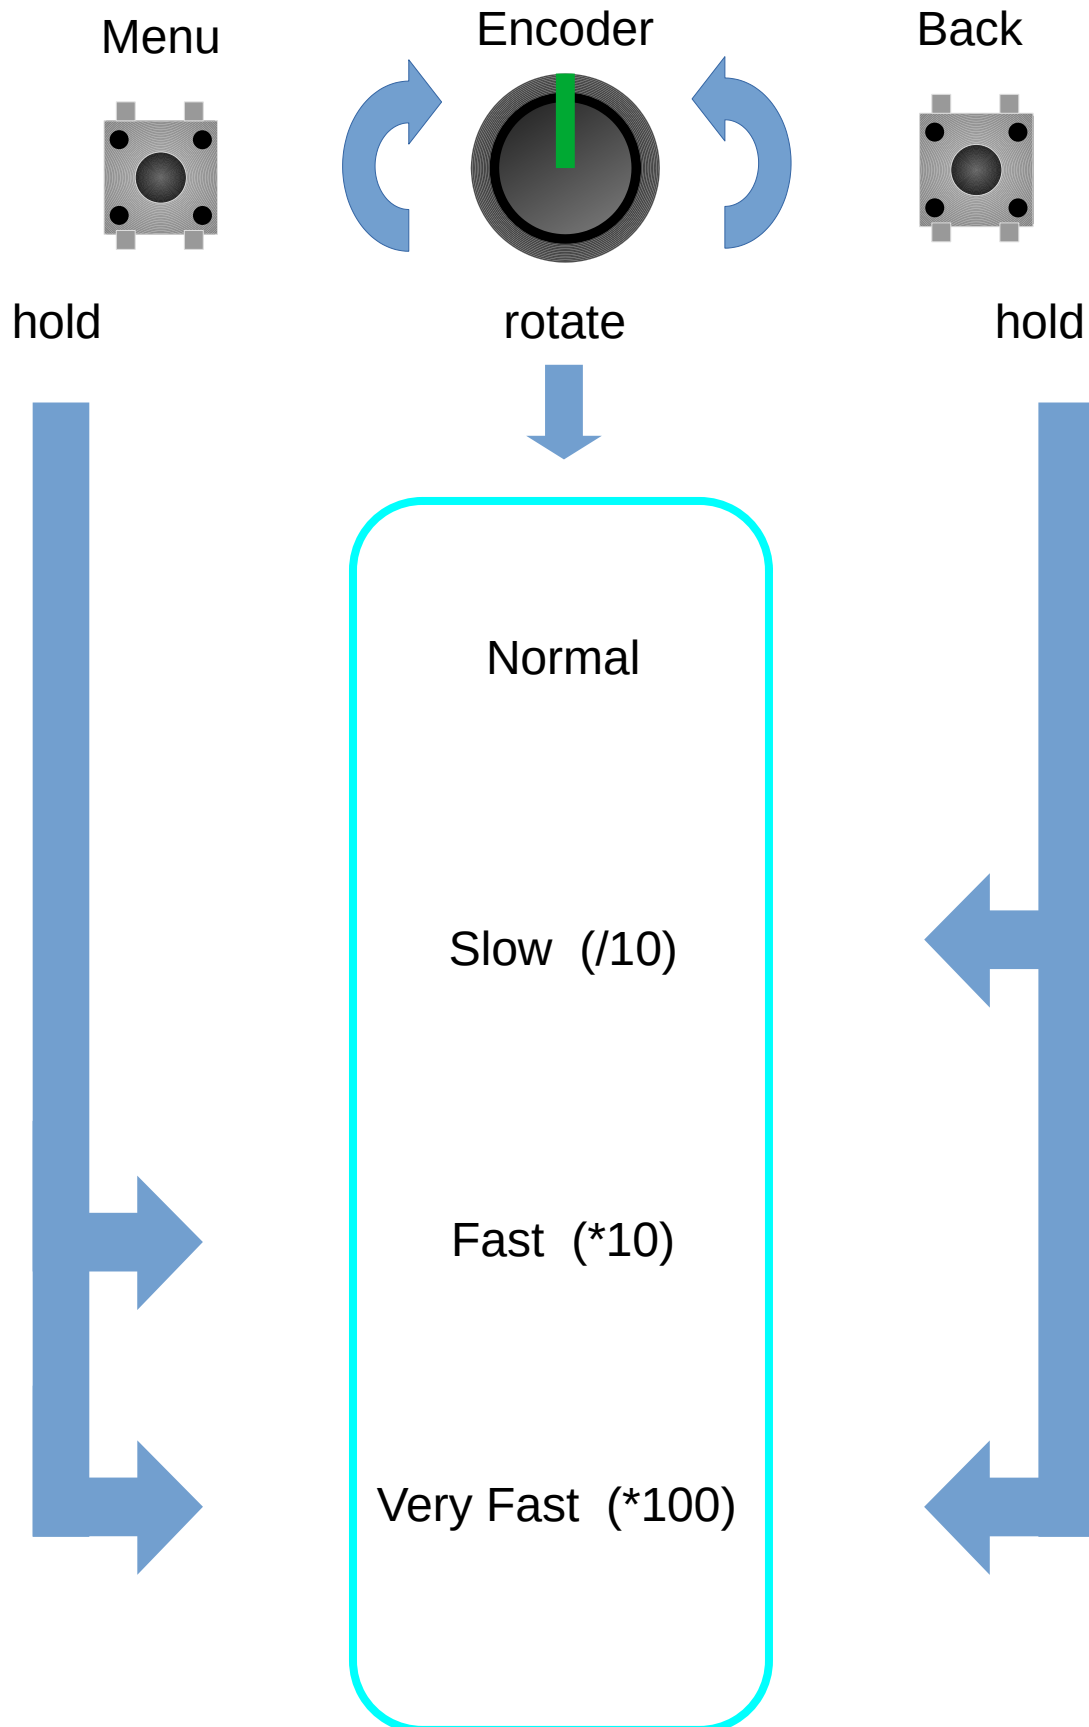


# Shortcuts

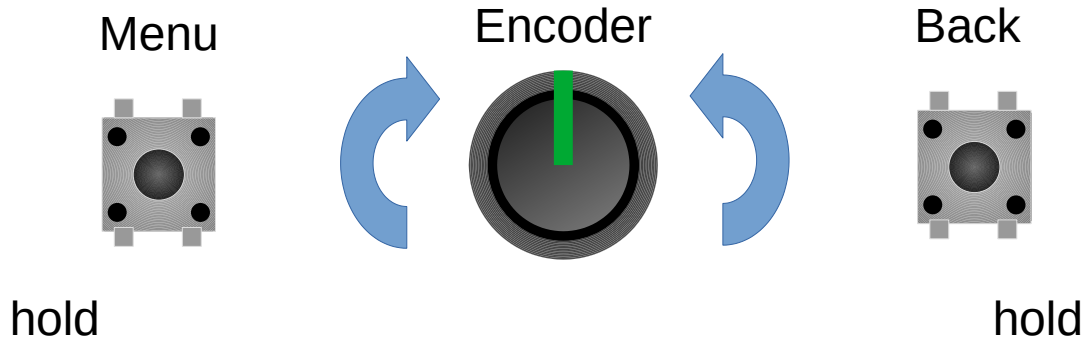

Shortcut	Description
Encoder Rotate	Tuning Up/Down
Encoder Rotate + Menu held	Tuning Up/Down x10
Encoder Rotate + Menu held + Back held	Tuning Up/Down /10
Encoder Rotate + Menu held + Back held	Tuning Up/Down x100
Encoder Rotate + Encoder Held	Volume Up/Down
Encoder Rotate + Encoder Held + Menu Held	Mode Select (AM/AMS/FM/CW/LSB/USB)
Encoder Rotate + Encoder Held + Back Held	Squelch Up/Down


## Main Menu

Menu

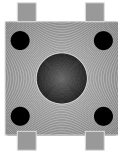


press = accept/change

Encoder

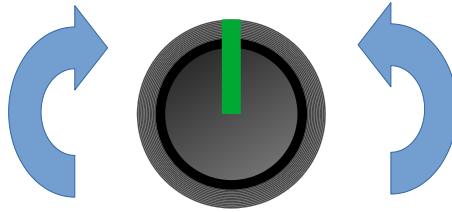

rotate

Back

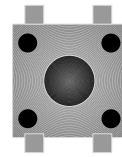

press = return/cancel



Frequency  
Memory Recall  
Memory Store  
Volume  
Mode  
AGC Speed  
AGC Gain  
Bandwidth  
Squelch  
Squelch Timeout  
Auto Notch  
De-emphasis  
Spectrum Zoom  
IQ Correction  
Band Start  
Band Stop  
Frequency Step  
CW Tone  
HW Config



# Menu Settings – Part 1

Setting	Range	Description
Frequency	0-30 MHz	Manual Frequency Entry. Selecting a frequency outside the current band will reset the band limits to allow free-tuning across the full frequency range.
Memory Recall	0-511	Select One of 512 memory channels (A channel can be a single frequency or a band of interest)
Memory Store	0-511	Save the current frequency, mode etc. in one of 512 memory channels
Volume	0-9	Audio Volume 0=mute
Mode		Receiver mode (AM, AMS, FM, LSB, USB, CW)
AGC	Very Slow – Fast Manual	Automatic gain control adjusts the gain so that weak and strong stations have a similar volume level. Fast settings respond quickly to changes in signal level, slow settings change more gradually. A slow setting might prevent adjustments to gain during gaps in speech. Manual gain control is also possible, this might be useful when a constant gain is desirable, e.g. when working with digital modes.
AGC Gain	(0dB to 60dB)	In Manual mode, this settings specifies the gain directly. In other modes, this setting specifies the maximum gain limit for the AGC.  Note: If you set a low gain value might prevent weak signals being heard, if the receiver seems deaf, check this setting!
Bandwidth	Very Narrow – Very Wide	Adjust the filter bandwidth, a narrow setting reduces background noise and can improve intelligibility of weak signals. A wider settings allows through a greater range of frequencies giving better sound quality for strong signals.



## Menu Settings – Part 2


Setting	Range	Description
Auto Notch	On/Off	The automatic notch filter can be used to remove interfering tones. If stable interference is detected consistently at the same frequency, a narrow notch is enabled to automatically suppress the interference.
Squelch	S0 - S9+30dB	The squelch function gates background noise. The signal is muted unless the signal strength reaches a defined level. Squelch can be adjusted to allow signals to be audible when active, but remove background noise when inactive.
Squelch Timeout	50ms-5s	This setting specifies the timeout for the squelch function. When a signal falls below the squelch threshold it will continue to be heard until the timeout expires.
De-Emphasis	off/50us/75us	Enable de-emphasis filter
IQ-Correction	On/Off	Compensates for differences in phase/magnitude in the IQ inputs. Enable this setting to improve image rejection (remove mirror frequencies).
Spectrum Zoom	1-4	Zoom level for spectrum scope. 1=30kHz, 2=15kHz, 3=7.5kHz, 4=3.75kHz
Band Start/Band Stop	0-30MHz	The band-start and band-stop settings define the tuning range of the current band. The band-start and band stop settings are stored in memory channels allowing memory channels to hold bands as well as individual frequencies.
Frequency Step	10Hz-100kHz	Set the default tuning step. Note that fast and slow tuning from /10 to *100 the nominal frequency step can be achieved by holding the menu/back buttons.
CW Tone	100Hz - 3000Hz	When received, the CW signal has a very narrow bandwidth close to DC, lower than the range of human hearing. The CW tone increases the frequency of the CW signal to a frequency that can be heard comfortably. A frequency between 500Hz and 1000Hz is typical.

## Menu Settings – Part 2

Setting	Range	Description
HW Configuration	0-9	The Pi Pico RX is designed to be as flexible as possible to allow different configurations and experimentation by constructors. A separate hardware configuration menu is provided to configure the hardware.


# Hardware Configuration Menu

Menu




press = accept/change

Encoder

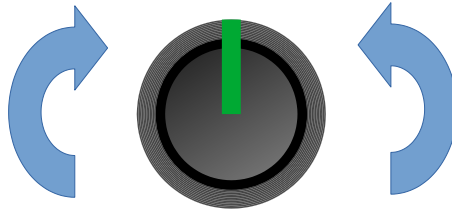

rotate

Back

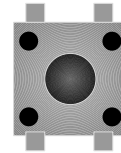

press = return/cancel



Display Timeout  
Regulator Mode  
Reverse Encoder  
Encoder Resolution  
Swap IQ  
Gain Cal  
Freq Cal  
Flip OLED  
OLED Type  
TFT Settings  
TFT Colour  
Bands  
Display Contrast  
USB Upload

# Hardware Configuration Settings-Part 1

Setting	Range	Description
Display Timeout	Never, 5 seconds – 4 minutes	Display turns off after a period of inactivity. This can be useful for power saving when running from batteries. This may also help prevent noise being generated by the display being received.
Regulator Mode	FM/PWM	The Pi Pico contains a switched-mode regulator. Under light loading, the regulator can switch into a FM mode to save power, this does however increase supply ripple. The PWM setting reduces supply ripple.
Reverse Encoder	On/Off	This allows the direction of the encoder to be reversed (clockwise/anticlockwise). This allows for variations in hardware construction where the encoder is wired in a different configuration.
Swap IQ	On/Off	Swap the I/Q ADC input channels. Can be used to correct for a difference in wiring of the LO inputs, or IQ inputs. It causes the received spectrum to be reversed so that positive frequencies become negative and vice-versa. This is also useful for checking image rejection.
Gain Cal	1-100dB	Specifies the gain of the receiver, this is used by the software to calculate the signal strength for the S-meter and dBm signal strength. The breadboard version of the receiver with default components has a gain of 57dB. Constructors may use alternative gain values, additional filters or preamplifiers. This setting also allows the S-meter to be calibrated so that it reads the correct signal strength with a known input signal.
Freq Cal	-100 to +100 ppm	Allows oscillator frequency to be calibrated to account for process variations in the pi-pico crystal oscillator. Frequency can be tuned using a reference oscillator or frequency counter. It may also be possible to calibrate by “zero-beating” a station with a known carrier frequency e.g. WWV.
Flip OLED	On/Off	Allows the display to be flipped horizontally, this may be useful to constructors who need to place the display in a different orientation. Only landscape orientations are supported.

## Hardware Configuration Settings-Part 2

Setting	Range	Description
OLED Type	SSD1306 /SH1106	Allows different types of OLED display to be used. I2C OLED displays using SD1306 and SH1106 driver chips are supported.
Display Contrast	0 to 15	Allows contrast of OLED display to be adjusted. Lower values reduce power consumption, higher values improve readability in bright surroundings.
TFT Settings	Off, Rotation 1-8.	An optional SPI TFT (ili9341) display can be connected to provide an enhanced waterfall/spectrum scope. By default the secondary TFT display is disabled. To allow for variations in hardware, 8 different rotation settings are provided.
TFT Colour	RGB/ BGR	To allow for variations in hardware, 2 different colour settings are provided.
Bands	Band 1-5 0 to 32MHz	Pi Pico Rx provides 3 GPIO outputs to control up to 8 band filters. The default settings are intended to work with the PCB version and provide a good compromise for a general coverage receiver. The boundary between the bands can be configured through this menu, this allows constructors to define their own custom bands (e.g. one band-pass filter for each amateur radio band).
USB Upload (Memory)		Allows user specified memory channels to be loaded in bulk via USB replacing the default memory channels. A simple Python utility can be used to upload settings from a CSV files via USB serial interface.
USB Upload (Firmware)		Places Pi Pico into USB firmware upload mode. The device appears as a USB drive, and can be upgraded by dropping writing a .uf2 firmware image. This is equivalent to holding the pico push-button during power on.

## Scanning



Pi Pico RX provides a scan feature, the scan feature can be accessed as a separate “home screen view”. (Different views can be selected by pressing the “back” button on the home screen.

There are 2 scanning modes, *frequency scan* and *memory scan*. In frequency scan mode, the receiver searches for signals in the current band frequency range (e.g. 20m SSB band). In *memory scan* mode, the receiver searches memory channels for active signals.

The encoder controls both the direction and speed of the search.

In both modes, the squelch setting is used to determine the threshold level, if the signal strength exceeds the squelch threshold, the search is halted. Searching can be continued by rotating the encoder.

The current signal strength and squelch level are indicated by a vertical bar on the right hand side.

# CAT Control

Cat control is provided through a USB serial port interface. The Pi Pico Rx emulates a subset Kenwood TS-480. The CAT interface allows the receiver to be controlled via a host device by software such as grig, wsjtx and fldigi.

The screenshot shows the 'Settings' window with the 'Radio' tab selected. The 'Rig' is set to 'Kenwood TS-480' and the 'Poll Interval' is '1 s'. Under 'CAT Control', the 'Serial Port' is '/dev/ttyACM0' and the 'Baud Rate' is '115200'. The 'Data Bits' are set to 'Default', 'Stop Bits' to 'Default', and 'Handshake' to 'Default'. The 'Force Control Lines' section has 'DTR' and 'RTS' dropdowns. On the right, the 'PTT Method' is 'VOX', 'Transmit Audio Source' is 'Front/Mic', 'Mode' is 'USB', and 'Split Operation' is 'None'. There are 'Test CAT' and 'Test PTT' buttons. At the bottom are 'Cancel' and 'OK' buttons.

Section	Parameter	Value
General Settings	Rig	Kenwood TS-480
	Poll Interval	1 s
	Serial Port	/dev/ttyACM0
	Baud Rate	115200
	Data Bits	Default
	Stop Bits	Default
	Handshake	Default
	DTR	[Dropdown]
	RTS	[Dropdown]
	PTT & Audio	PTT Method
Transmit Audio Source		Front/Mic
Mode		USB
Split Operation		None
Test CAT		[Button]



## USB Audio

The Pi Pico Rx supports USB audio, and when connected should appear as a USB microphone. This allows a host device to easily make audio recordings (e.g. using audacity), and is compatible with software such as wsjtx, fldigi and QSSTV. When combined with USB cat control allows a fully functional PC connection using only a single USB cable. The direct digital audio connection provides superior audio quality compared to an analogue connection using a sound card.

