


Getting Started

Create Applications with MDK Version 5 for ARM® Cortex®-M Microcontrollers

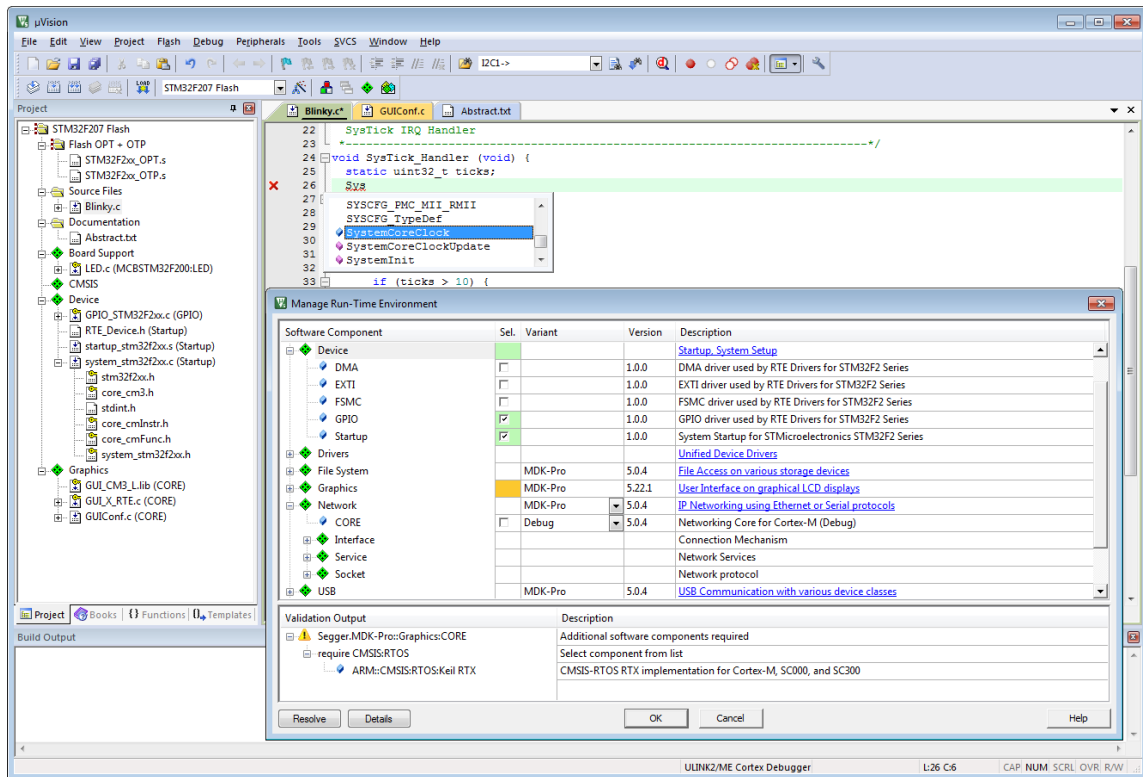

Information in this document is subject to change without notice and does not represent a commitment on the part of the manufacturer. The software described in this document is furnished under license agreement or nondisclosure agreement and may be used or copied only in accordance with the terms of the agreement. It is against the law to copy the software on any medium except as specifically allowed in the license or nondisclosure agreement. The purchaser may make one copy of the software for backup purposes. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or information storage and retrieval systems, for any purpose other than for the purchaser's personal use, without written permission.

Copyright © 1997-2014 ARM Germany GmbH
All rights reserved.

µVision[®], Cortex[®], CoreSight[™], MDK[™], RL-ARM[™], ULINK[®], Device Database[®], and ARTX[™] are trademarks or registered trademarks of ARM Germany GmbH and ARM Ltd.

Microsoft[®] and Windows[™] are trademarks or registered trademarks of Microsoft Corporation.

PC[®] is a registered trademark of International Business Machines Corporation.

NOTE

We assume you are familiar with Microsoft Windows, the hardware, and the instruction set of the Cortex-M processor.

Every effort was made to ensure accuracy in this manual and to give appropriate credit to persons, companies, and trademarks referenced herein.

Preface

Thank you for using the Keil MDK Version 5 Microcontroller Development Kit available from ARM. To provide you with the very best software tools for developing Cortex-M processor based embedded applications we design our tools to make software engineering easy and productive. ARM also offers therefore complementary products such as the ULINK Debug and Trace Adapters and a range of evaluation boards. MDK is expandable with various third party tools, starter kits, and debug adapters.

Chapter Overview

The book starts with the installation of MDK and describes the software components along with complete workflow from starting a project up to debugging on hardware. It contains the following chapters:

MDK Introduction provides an overview about the MDK Core, the Software Packs, and describes the product installation along with the use of example projects.

CMSIS is ground-up software framework for embedded applications that run on Cortex-M based microcontrollers. It provides consistent software interfaces and hardware abstraction layers that simplify software reuse.

Create Applications guides you towards creating and modifying projects using CMSIS and device-related software components. A hands-on tutorial shows the main configuration dialogs for setting tool options.

Debug Applications describes the process of debugging applications on real hardware and explains how to connect

Middleware gives further details on the middleware that is available for users of the MDK-Professional edition.

Using Middleware explains how to create applications that uses the middleware available with MDK-Professional and contains essential tips and tricks to get you started quickly.

Contents

Preface	3
Contents	4
MDK Introduction.....	6
MDK Core	6
Software Packs	6
MDK Editions.....	7
Installation	8
Software and Hardware Requirements	8
Install MDK Core	8
Install Software Packs.....	9
Verify Installation using Example Projects	10
Use Software Packs	14
Access Documentation	16
Request Assistance	16
CMSIS.....	17
CMSIS-CORE	18
Using CMSIS-CORE.....	18
CMSIS-RTOS RTX.....	21
Software Concepts.....	21
Using CMSIS-RTOS RTX	22
CMSIS-RTOS RTX API Functions.....	27
CMSIS-RTOS User Code Templates	28
CMSIS-DSP	37
Create Applications	39
Blinky with CMSIS-RTOS RTX.....	40
Blinky with Infinite Loop Design.....	48
Debug Applications.....	51
Debugger Connection	51
Using the Debugger	52
Debug Toolbar	53
Command Window	54
Disassembly Window	54
Breakpoints.....	55
Watch Window	56
Call Stack and Locals Window.....	56
Register Window	57

Memory Window.....	57
Peripheral Registers	58
Trace	59
Trace with Serial Wire Output.....	60
Trace Exceptions	62
Logic Analyzer	63
Debug (printf) Viewer	64
Event Counters.....	65
Trace with 4-Pin Output	66
Trace with On-Chip Trace Buffer.....	66
RTOS Debugging	67
System and Thread Viewer.....	67
Event Viewer	68
Middleware.....	69
Network Component.....	71
File System Component.....	73
USB Device Component.....	74
USB Host Component	75
Graphics Component	76
Driver Components.....	77
FTP Server Example.....	78
Using Middleware.....	80
USB HID Example	81
Add Software Components.....	82
Configure Middleware.....	84
Configure Drivers	86
Adjust System Resources	87
Implement Application Features.....	88
Build and Download	91
Verify and Debug	91
Index	93


MDK Introduction

The Keil Microcontroller Development Kit (MDK) helps you to create embedded applications for ARM Cortex-M processor-based devices. MDK is a powerful, yet easy to learn and easy to use development system. MDK Version 5 consists of the MDK Core plus device-specific Software Packs, which can be downloaded and installed based on the requirements of your application.

MDK Version 5 is capable of using MDK Version 4 projects after installation of the Legacy Support from www.keil.com/mdk5/legacy. This adds support for ARM7, ARM9, and ARM Cortex-R processor-based devices.


MDK Core

The MDK Core includes all the components that you need to create, build, and debug an embedded application for Cortex-M processor based microcontroller devices. The Pack Installer manages Software Packs that can be added any time to the MDK Core. This makes new device support and middleware updates independent from the toolchain.

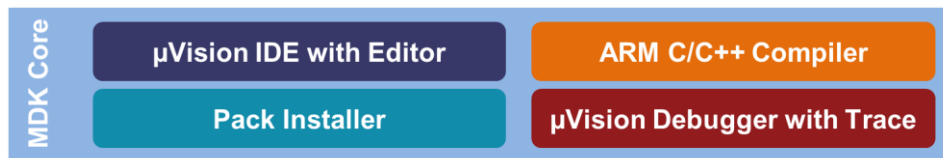

Software Packs

Software Packs contain device support, CMSIS libraries, middleware, board support, code templates, and example projects.

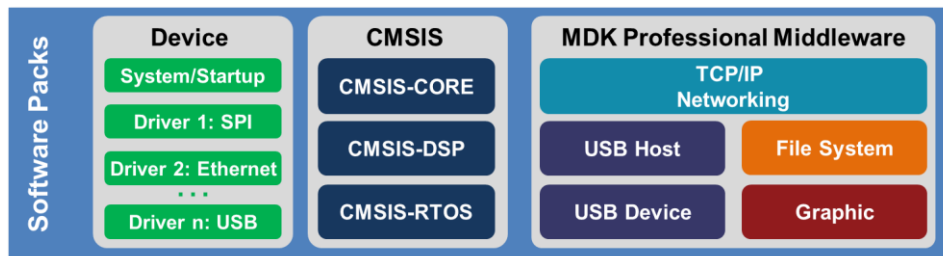

MDK Editions

MDK provides the tools and the environment to create and debug applications using C/C++ or assembly language and is available in various editions. Each edition includes the μ Vision IDE, debugger, compiler, assembler, linker, middleware libraries, and the RTX RTOS.

- **MDK-Professional** contains extensive middleware libraries for sophisticated embedded applications and all features of **MDK-Standard**.
- **MDK-Standard** supports Cortex-M, selected Cortex-R, and ARM7/9 processor based microcontrollers.
- **MDK-Cortex-M** supports Cortex-M processor based microcontrollers.
- **MDK-Lite** is code size restricted to 32 KB and intended for product evaluation, small projects, and the educational market.

The product selector, available at www.keil.com/arm/selector.asp, gives an overview of the features enabled in each edition.

License Types

With the exception of **MDK-Lite**, the MDK editions require activation using a license code. The following licenses types are available:

- **Single-User License** (Node-Locked) grants the right to use the product by one developer on two computers at the same time.
- **Floating-User License** or **FlexLM License** grants the right to use the product on several computers by a number of developers at the same time.

For further details, refer to the *Licensing User's Guide* at www.keil.com/support/man/docs/license.

Installation

Software and Hardware Requirements

MDK has the following minimum hardware and software requirements:

- A PC running Microsoft Windows (32-bit or 64-bit) operating system
- 2 GB RAM and 4 GB hard-disk space
- 1280 x 800 or higher screen resolution; a mouse or other pointing device

Install MDK Core


Download **MDK-ARM v5** from www.keil.com/download - Product Downloads and run the installer.

Follow the instructions to install the MDK Core on your local computer. The installation also adds the Software Packs for ARM **CMSIS** and **MDK-Professional Middleware**.

After the MDK Core installation is complete, the **Pack Installer** is started automatically, which allows you to add supplementary Software Packs. As a minimum, you need to install a Software Pack that supports your target microcontroller device.


Install Software Packs

The **Pack Installer** is a utility for managing Software Packs on the local computer.

 The **Pack Installer** runs automatically during the installation but also may be run from μ Vision using the menu item **Project – Manage – Pack Installer**. To get access to devices and example projects you should install the Software Pack related to your target device or evaluation board.

NOTE

To obtain information of published Software Packs the Pack Installer connects to www.keil.com/pack.

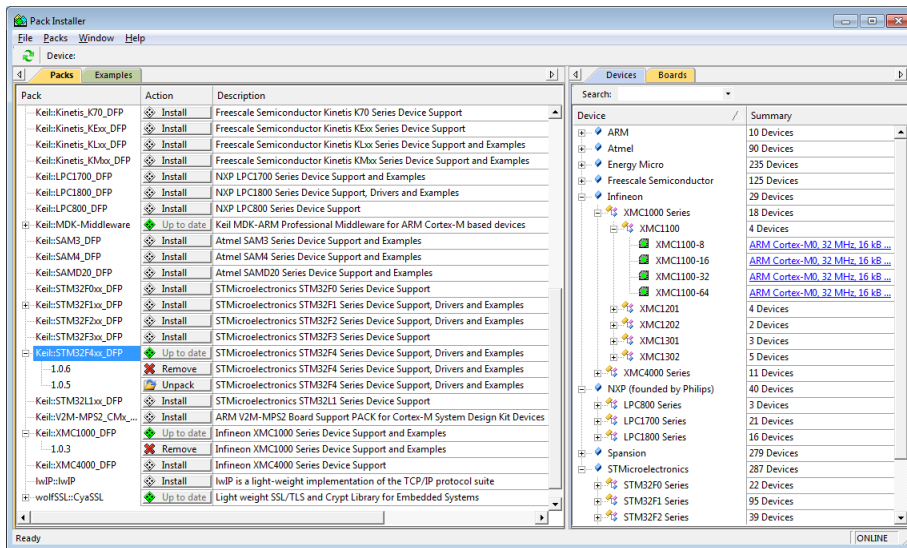

The status bar, located at the bottom of the Pack Installer, shows information about the Internet connection and the installation progress.


TIP: The Device Database at www.keil.com/dd2 lists all available devices and provides download access to the related Software Packs. If the Pack Installer cannot access www.keil.com/pack you can manually install Software Packs using the menu command **File – Import** or by double-clicking *.PACK files.


Verify Installation using Example Projects

Once you have selected, downloaded, and installed a Software Pack for your device, you can verify your installation using one of the examples provided in the Software Pack. To verify the Software Pack installation, we recommend using a *Blinky* example, which typically flashes LEDs on a target board.

TIP: Review the videos on www.keil.com/mdk5/blinky that explain how to connect and work with an evaluation kit.

Copy an Example Project


 In the Pack Installer, select the tab **Examples**. Use filters in the toolbar to narrow the list of examples.

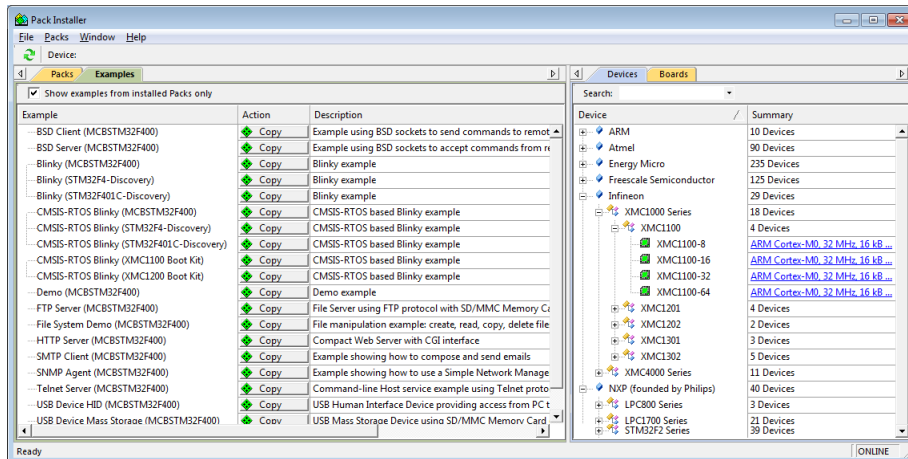

Click **Copy** and enter the **Destination Folder** name of your working directory.

NOTE

You must copy the example projects to a working directory of your choice.

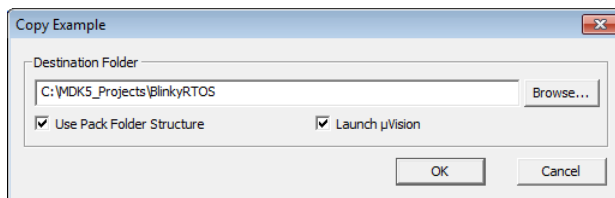


- Enable **Launch µVision** to open the example project directly in the IDE.

- Enable **Use Pack Folder Structure** to copy example projects into a common folder. This avoids overwriting files from other example projects. Disable **Use Pack Folder Structure** to reduce the complexity of the example path.
- Click **OK** to start the copy process.

Use an Example Application with μ Vision


Now μ Vision starts and loads the example project where you can:

 Build the application, which compiles and links the related source files.

 Download the application, typically to on-chip Flash ROM of a device.

 Run the application on the target hardware using with the debugger.

The step-by-step instructions show you how to execute these tasks. After copying the example, μ Vision starts and looks similar to the picture below.

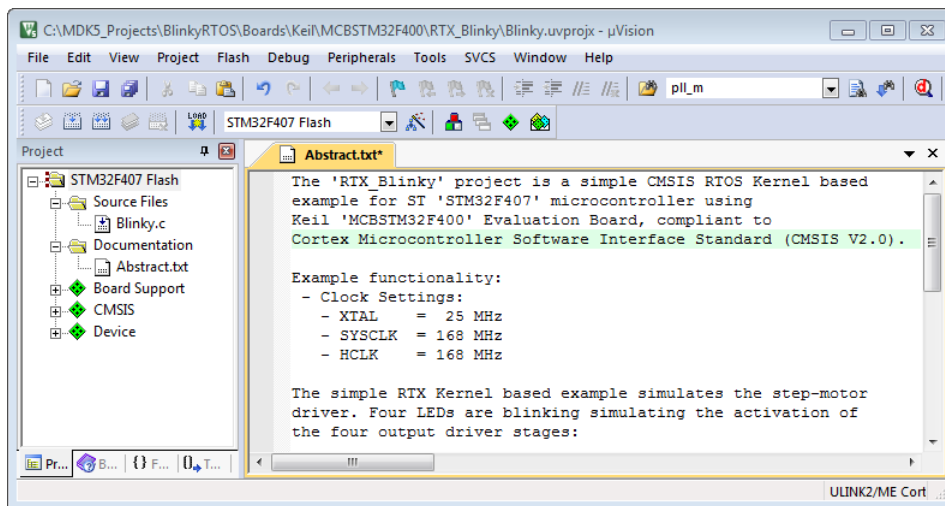


TIP: Most example projects contain an *Abstract.txt* file with essential information about the operation and hardware configuration.

Build the Application



Build the application using the toolbar button **Rebuild**.

The **Build Output** window shows information about the build process. An error-free build shows information about the program size.

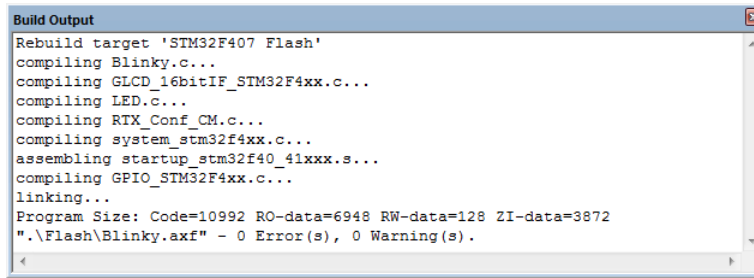

```
Rebuild target 'STM32F407 Flash'
compiling Blinky.c...
compiling GLCD_16bitIF_STM32F4xx.c...
compiling LED.c...
compiling RTX_Conf_CM.c...
compiling system_stm32f4xx.c...
assembling startup_stm32f40_41xxx.s...
compiling GPIO_STM32F4xx.c...
linking...
Program Size: Code=10992 RO-data=6948 RW-data=128 ZI-data=3872
".\Flash\Blinky.axf" - 0 Error(s), 0 Warning(s).
```

Download the Application


Connect the target hardware to your computer using a *debug adapter* that typically connects via USB. Several evaluation boards provide an on-board debug adapter.




Now, review the settings for the debug adapter. Typically, example projects are pre-configured for evaluation kits and there is no need to modify these settings.



Click **Options for Target** on the toolbar and select the **Debug** tab. Verify that the correct debug adapter of the evaluation board that you are using is selected and enabled. For example, **CMSIS-DAP Debugger** is a debug adapter that is part of several starter kits.

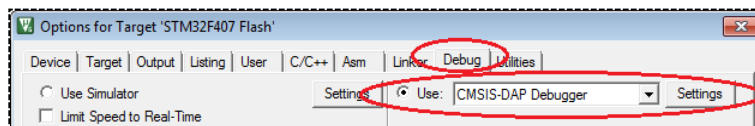


- Click the **Utilities** tab to verify Flash programming. Enable **Use Debug Driver** to perform flash download via the debug adapter you selected on the **Debug** tab.

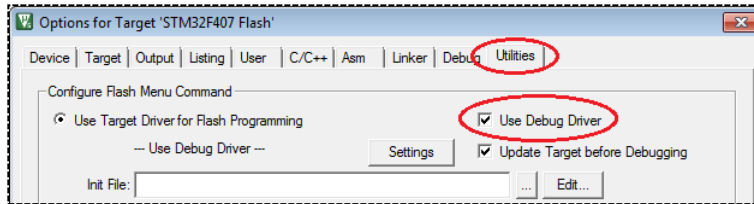

TIP: Click the button **Settings** to verify communication settings and diagnose problems with your target hardware. For further details, click the button **Help** in the dialogs. If you have any problems, refer to the user's guide of the starter kit.

- Click **Download** on the toolbar to load the application to your target hardware.

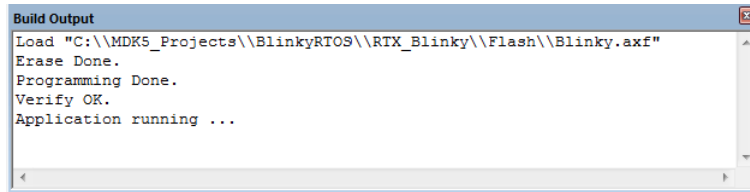

The **Build Output** window shows information about the download progress.


Run the Application


- Click **Start/Stop Debug Session** on the toolbar to start debugging the application on hardware.
- Click **Run** on the debug toolbar to start executing the application. LEDs should flash on the target hardware.

Use Software Packs

Software Packs contain information for the μ Vision Device Database and software components that are available as building blocks for the application software.


The information in the Device Database pre-configures development tools for you and shows only the options that are relevant for the selected device.

-  Start μ Vision and use the menu item **Project - New μ Vision Project**. After you have selected a project directory and specified the project name, you will be asked to select a target device.

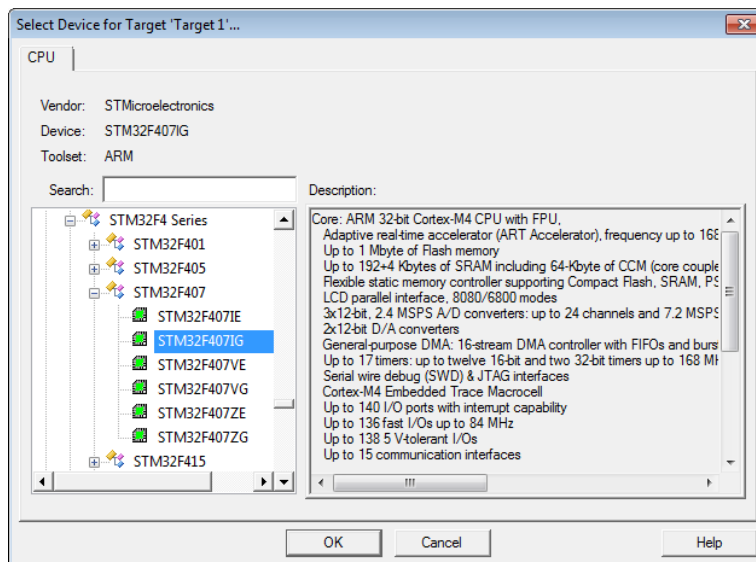

TIP: You will see only devices that are part of the installed Software Packs. If you are missing a device, use the Pack Installer to add the related Software Pack.

After selecting the device, the **Manage Run-Time Environment** window shows the related software components for this device.

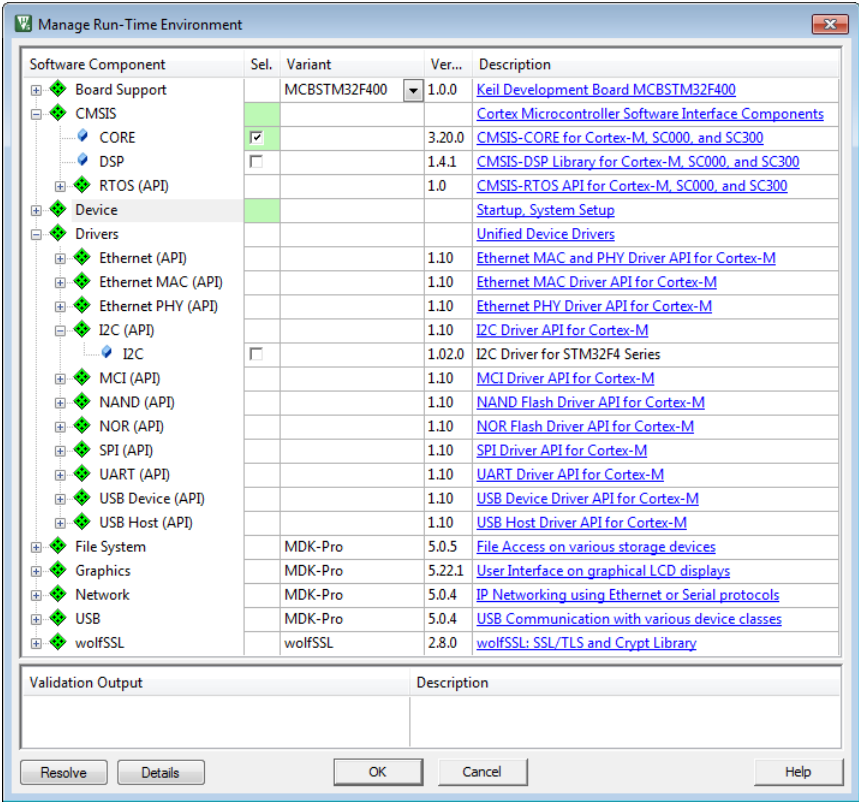

TIP: The links in the column *Description* provide access to the documentation of each software component.

NOTE

The notation `::<Component Class>:<Group>:<Name>` is used to refer to components. For example, `::CMSIS:CORE` refers to the component CMSIS-CORE selected in the dialog above.

Access Documentation

MDK provides online manuals and context-sensitive help. The μ Vision **Help** menu opens the main help system that includes the *μ Vision User's Guide*, getting started manuals, compiler, linker and assembler reference guides.

Many dialogs have context-sensitive **Help** buttons that access the documentation and explain dialog options and settings.

You can press **F1** in the editor to access help on language elements like RTOS functions, compiler directives, or library routines. Use **F1** in the command line of the **Output** window for help on debug commands, and some error and warning messages.

The **Books** window may include device reference guides, data sheets, or board manuals. You can even add your own documentation and enable it in the **Books** window using the menu **Project – Manage – Components, Environment, Books – Books**.

The **Manage Run-Time Environment** dialog offers access to documentation via links in the *Description* column.

In the **Project** window, you can right-click a software component group and open the documentation of the corresponding element.

You can access the latest information on the web at www.keil.com/mdk5.

Request Assistance

If you have suggestions or you have discovered an issue with the software, please report them to us. Support and information channels are accessible at www.keil.com/support.

When reporting an issue, include your license code (if you have one) and product version, available from the μ Vision menu **Help – About**.

CMSIS

The **Cortex Microcontroller Software Interface Standard** (CMSIS) provides a ground-up software framework for embedded applications that run on Cortex-M based microcontrollers. The CMSIS enables consistent and simple software interfaces to the processor and the peripherals, simplifying software reuse, reducing the learning curve for microcontroller developers.

NOTE

*This chapter is intended as reference section. The chapter **Create Applications** on page 39 shows you how to use CMSIS for creating application code.*

The CMSIS, defined in close cooperation with various silicon and software vendors, provides a common approach to interface peripherals, real-time operating systems, and middleware components.

The CMSIS application software components are:

- **CMSIS-CORE:** Defines the API for the Cortex-M processor core and peripherals and includes a consistent system startup code. The software components **::CMSIS:CORE** and **::Device:Startup** are all you need to create and run applications on the native processor that uses exceptions, interrupts, and device peripherals.
- **CMSIS-RTOS:** Provides standardized real-time operating systems and enables therefore software templates, middleware, libraries, and other components that can work across supported RTOS systems. This manual explains the usage of the CMSIS-RTOS RTX implementation.
- **CMSIS-DSP:** Is a library collection for digital signal processing (DSP) with over 60 Functions for various data types: fix-point (fractional q7, q15, q31) and single precision floating-point (32-bit).

CMSIS-CORE

This section explains the usage of CMSIS-CORE in applications that run natively on a Cortex-M processor. This type of operation is known as *bare-metal*, because it uses no real-time operating system.


Using CMSIS-CORE

A native Cortex-M application with CMSIS uses the software component **::CMSIS:CORE**, which should be used together with the software component **::Device:Startup**. These components provide the following central files:

NOTE

In actual file names, <device> is the name of the microcontroller device.

- The **startup_<device>.s** file with reset handler and exception vectors.
- The **system_<device>.c** configuration file for basic device setup (clock and memory BUS).
- The **<device>.h** include file for user code access to the microcontroller device.

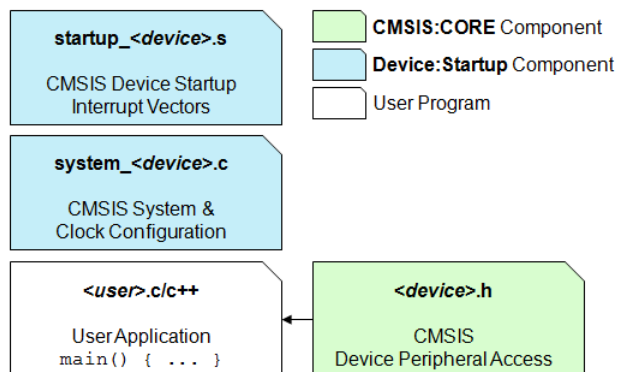


The **<device>.h** header file is included in C source files and defines:

- Peripheral Access with standardized register layout.
- Access to Interrupts and Exceptions and the Nested Interrupt Vector Controller (NVIC).
- Intrinsic Functions to generate special instructions, for example to activate sleep mode.
- SysTick Timer (SYSTICK) functions to configure and start a periodic timer interrupt.
- Debug Access for *printf*-style I/O and ITM communication via on-chip CoreSight.

Adding Software Components to the Project

The files for the components **::CMSIS:CORE** and **::Device:Startup** are added to a project using the μ Vision dialog **Manage Run-Time Environment**. Just select the software components as shown below:

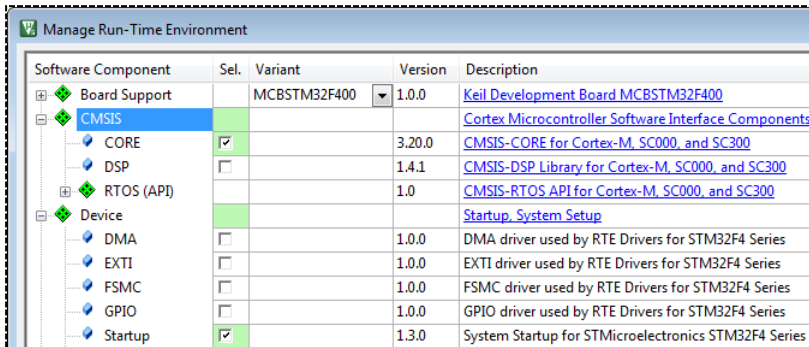

The μ Vision environment adds the related files.

Source Code Example

The following sample source code lines show the usage of the CMSIS-CORE layer.

Example of using the CMSIS-CORE layer

```
#include "stm32f10x.h" // File name depends on device used

uint32_t volatile msTicks; // Counter for millisecond Interval

void SysTick_Handler (void) { // SysTick Interrupt Handler
    msTicks++; // Increment Counter
}

void WaitForTick (void) {
    uint32_t curTicks;
    curTicks = msTicks; // Save Current SysTick Value
    while (msTicks == curTicks) { // Wait for next SysTick Interrupt
        __WFE (); // Power-Down until next Event
    }
}

void TIM1_UP_IRQHandler (void) { // Timer Interrupt Handler
    ; // Add user code here
}

void timer1_init(int frequency) { // Set up Timer (device specific)
    NVIC_SetPriority (TIM1_UP_IRQn, 1); // Set Timer priority
    NVIC_EnableIRQ (TIM1_UP_IRQn); // Enable Timer Interrupt
}


// Configure & Initialize the MCU
```

```
void Device_Initialization (void) {
    if (SysTick_Config (SystemCoreClock / 1000)) {      // SysTick lms
        : // Handle Error
    }
    timer1_init ();                                     // Setup device-specific timer
}

// The processor clock is initialized by CMSIS startup + system file
void main (void) {                                     // User application starts here
    Device_Initialization ();                           // Configure & Initialize MCU

    while (1) {                                         // Endless Loop (the Super-Loop)
        disable_irq ();                                // Disable all interrupts
        // Get_InputValues ();
        enable_irq ();                                 // Enable all interrupts
        // Process_Values ();
        WaitForTick ();                                // Synchronize to SysTick Timer
    }
}
```

For more information, refer to the CMSIS-CORE documentation. In the Project window, right-click the group CMSIS, and choose **Open Documentation**.

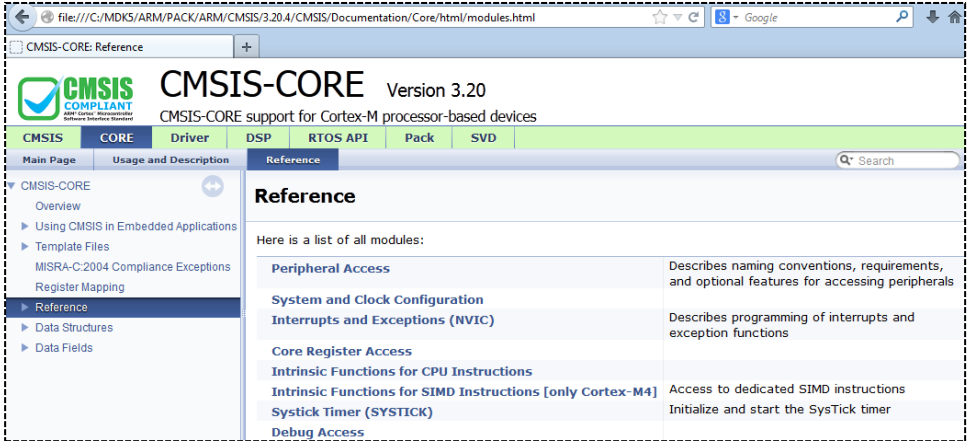

CMSIS-RTOS RTX

This section introduces the CMSIS RTOS RTX Real-Time Operating System, describes the advantages, and explains configuration settings and features of this RTOS.

NOTE

MDK is compatible with many third-party RTOS solutions, which you may use. However, CMSIS-RTOS RTX is well integrated into MDK, is feature-rich and tailored towards the requirements of deeply embedded systems.

Software Concepts

There are two basic design concepts for embedded applications:

- **Infinite Loop Design:** involves running the program as an endless loop. Program functions (threads) are called from within the loop, while interrupt service routines (ISRs) perform time-critical jobs including some data processing.
- **RTOS Design:** involves running several threads with a **Real-Time Operating System (RTOS)**. The RTOS provides inter-thread communication and time management functions. A preemptive RTOS reduces the complexity of interrupt functions, because high-priority threads can perform time-critical data processing.

Infinite Loop Design

Running an embedded program in an endless loop is an adequate solution for simple embedded applications. Time-critical functions, typically triggered by hardware interrupts, execute in an ISR that also performs any required data processing. The main loop contains only basic operations that are not time-critical and run in the background.

Advantages of an RTOS Kernel

RTOS kernels, like the CMSIS-RTOS RTX, are based on the idea of parallel execution threads (tasks). As in the real world, your application will have to fulfill multiple different tasks. An RTOS-based application recreates this model in your software with various benefits:

- Thread priority and run-time scheduling is handled by the RTOS Kernel, using a proven code base.
- The RTOS provides well-defined interface for communication between threads.
- A pre-emptive multi-tasking concept simplifies the progressive enhancement of an application even across a larger development team. New functionality can be added without risking the response time of more critical threads.
- Infinite Loop software concepts often poll for occurred interrupts. In contrast, RTOS Kernels themselves are interrupt driven and can largely eliminate polling. This allows the CPU to sleep or process threads more often.

Modern RTOS Kernels are transparent to the interrupt system, which is mandatory for systems with hard real-time requirements. Communication facilities can be used for IRQ-to-task communication and allow Top-Half/Bottom-Half handling of your interrupts.

Using CMSIS-RTOS RTX

CMSIS-RTOS RTX is implemented as a library and exposes the functionality through the header file **cmsis_os.h**.


Execution of the CMSIS-RTOS RTX starts with the function *main()* as the first thread. This has the benefit that developers can initialize other middleware libraries that create threads internally, but the remaining part of the user application uses just the **main** thread. Consequently, the usage of the RTOS can be invisible to the application programmer, but libraries can use CMSIS-RTOS RTX features.

The software component **::CMSIS:RTOS:Keil RTX** must be used together with the components **::CMSIS:CORE** and **::Device:Startup**. Selecting these components provides the following central CMSIS-RTOS RTX files:

NOTE

In the actual file names, <device> is the name of the microcontroller device; <device core> represents the device processor family.

- The file **RTX_<core>.lib** is the library with RTOS functions.
- The configuration file **RTX_Conf_CM.c** for defining thread options, timer configurations, and RTX kernel settings.
- The header file **cmsis_os.h** exposes the RTX functionality to the user application.
- The function *main()* is executed as a thread.

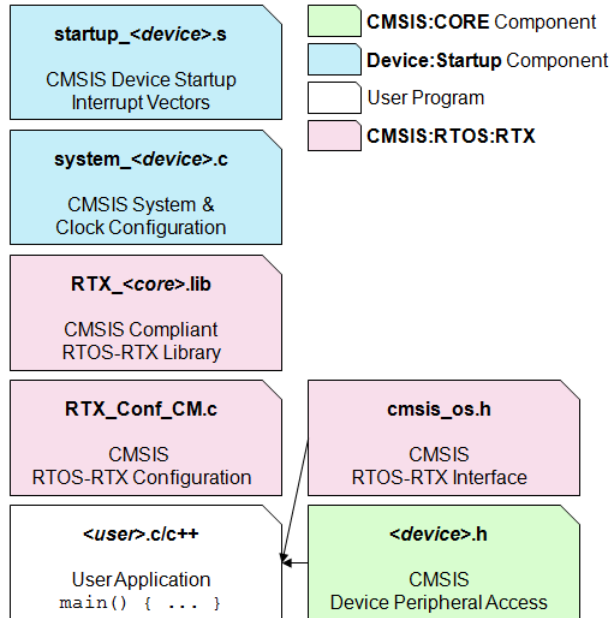

Once these files are part of the project, developers can start using the CMSIS-RTOS RTX functions. The code example shows the use of CMSIS-RTOS RTX functions:

Example of using CMSIS-RTOS RTX functions

```
#include "cmsis_os.h"           // CMSIS RTOS header file

void job1 (void const *argument) {    // Function 'job1'
    // execute some code
    osDelay (10);                  // Delay execution for 10ms
}

osThreadDef(job1, osPriorityLow, 1, 0); // Define job1 as thread

int main (void) {
    osKernelInitialize ();          // Initialize RTOS kernel
    // setup and initialize peripherals
    osThreadCreate (osThread(job1), NULL); // Create the thread

    osKernelStart ();               // Start kernel & job1 thread
}
```

Header File `cmsis_os.h`

The file `cmsis_os.h` is a template header file for the CMSIS-RTOS RTX and contains:

- CMSIS-RTOS API function definitions.
- Definitions for parameters and return types.
- Status and priority values used by CMSIS-RTOS API functions.
- Macros for defining threads and other kernel objects such as mutex, semaphores, or memory pools.

All definitions are prefixed with **os** to give a unique name space for the CMSIS-RTOS functions. Definitions that are prefixed **os_** are not be used in the application code but are local to this header file. All definitions and functions that belong to a module are grouped and have a common prefix, for example, **osThread** for threads.

Define and Reference Object Definitions

With the **#define osObjectsExternal**, objects are defined as external symbols. This allows creating a consistent header file for the entire project as shown below:

Example of a header file: `osObjects.h`

```
#include "cmsis_os.h"                // CMSIS RTOS header

extern void thread_1 (void const *argument); // Function prototype
osThreadDef (thread_1, osPriorityLow, 1, 100); // Thread definition

osPoolDef (MyPool, 10, long);        // Pool definition
```

This header file, called `osObjects.h`, defines all objects when included in a C/C++ source file. When **#define osObjectsExternal** is present before the header file inclusion, the objects are defined as external symbols. Thus, a single consistent header file can be used throughout the entire project.


Consistent header file usage in a C file

```
#define osObjectExternal // Objects defined as external symbols
#include "osObjects.h"   // Reference to the CMSIS-RTOS objects
```

For details, refer to the online documentation section **Header File Template: `cmsis_os.h`**.

CMSIS-RTOS RTX Configuration

The file *RTX_Conf_CM.c* contains the configuration parameters of the CMSIS-RTOS RTX. A copy of this file is part of every project using the RTX component.

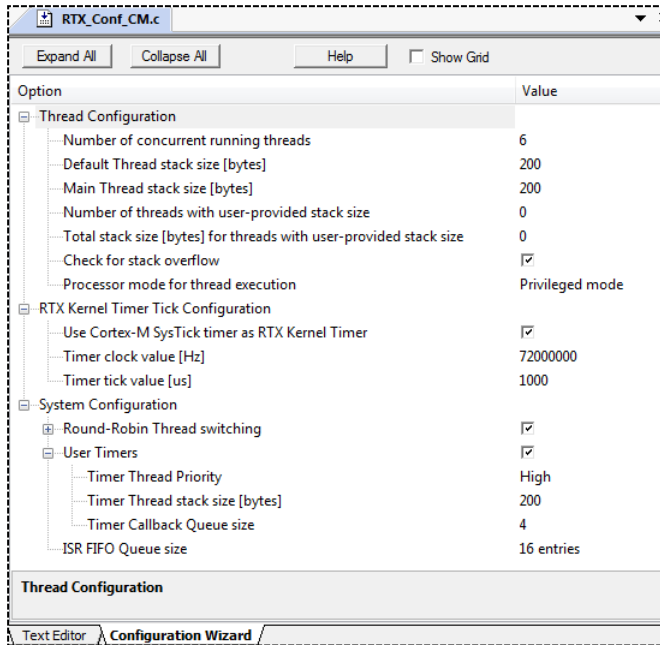

You can set parameters for the thread stack, configure the Tick Timer, set Round-Robin time slice, and define user timer behaviour for threads.

For more information about configuration options, open the RTX documentation from the **Project** window, right-click the file *RTX_Conf_CM.c* and choose **Open documentation**. The section **Configuration of CMSIS-RTOS RTX** describes all available settings. The following highlights the most important settings that need adaptation in your application.

Thread Stack Configuration

Threads are defined in the code with the function *osThreadDef()*. The parameter *stacksz* specifies the stack requirement of a thread and has an impact on the method for allocating stack. CMSIS-RTOS RTX offer two methods for allocating stack requirements in the file *RTX_Conf_CM.c*:

- Using a fixed memory pool: if the parameter *stacksz* is 0, then the value specified for **Default Thread stack size [bytes]** sets the stack size for the thread function.

- Using a user space: if `stacksz` is not 0, then the thread stack is allocated from a user space. The total size of this user space is specified by **Total stack size [bytes] for threads with user-provided stack size**.

Thread Configuration	
Number of concurrent running threads	6
Default Thread stack size [bytes]	200
Main Thread stack size [bytes]	200
Number of threads with user-provided stack size	0
Total stack size [bytes] for threads with user-provided stack size	0

Number of concurrent running threads specifies the maximum number of threads that allocate the stack from the fixed size memory pool.

Default Thread stack size [bytes] specifies the stack size (in words) for threads defined without a user-provided stack.

Main Thread stack size [bytes] is the stack requirement for the `main()` function.

Number of threads with user-provided stack size specifies the number of threads defined with a specific stack size.

Total stack size [bytes] for threads with user-provided stack size is the combined requirement (in words) of all threads defined with a specific stack size.


NOTE

Consider these settings carefully. If you do not allocate enough memory or you do not specify enough threads, your application will not work.

For details, refer to the online documentation section **Configuration of CMSIS-RTOS RTX – Thread Stack and Processor Mode**.

RTX Kernel Timer Tick Configuration

CMSIS-RTOS RTX functions provide delays in units of milliseconds derived from the **Timer tick value**. We recommend configuring the Timer Tick to generate 1-millisecond intervals. Configuring a longer interval may reduce energy consumption, but has an impact on the granularity of the timeouts.



It is good practise to enable **Use Cortex-M SysTick timer as RTX Kernel Timer**. This selects the built-in SysTick timer with the processor clock as the clock source. In this case, the **Timer clock value** should be **identical** to the CMSIS variable *SystemCoreClock* of the startup file *system_<device>.c*.

For details, refer to the online documentation section **Configuration of CMSIS-RTOS RTX – Tick Timer Configuration**.

CMSIS-RTOS RTX API Functions


The table below lists the various API function categories that are available with the CMSIS-RTOS RTX.

API Category	Description	Page
Thread Management	Define, create, and control thread functions.	29
Timer Management	Create and control timer and callback functions.	31
Signal Management	Control or wait for signal flags.	32
Mutex Management	Synchronize thread execution with a Mutex.	33
Semaphore Management	Control access to shared resources.	33
Memory Pool Management	Define and manage fixed-size memory pools	35
Message Queue Management	Control, send, receive, or wait for messages.	35
Mail Queue Management	Control, send, receive, or wait for mail.	36

CMSIS-RTOS User Code Templates

MDK provides user code templates you can use to create C source code for the application.

- ✎ In the **Project** window, right click a group, select **Add New Item to Group**, choose **User Code Template** and select **CMSIS-RTOS Thread** and click **Add**.

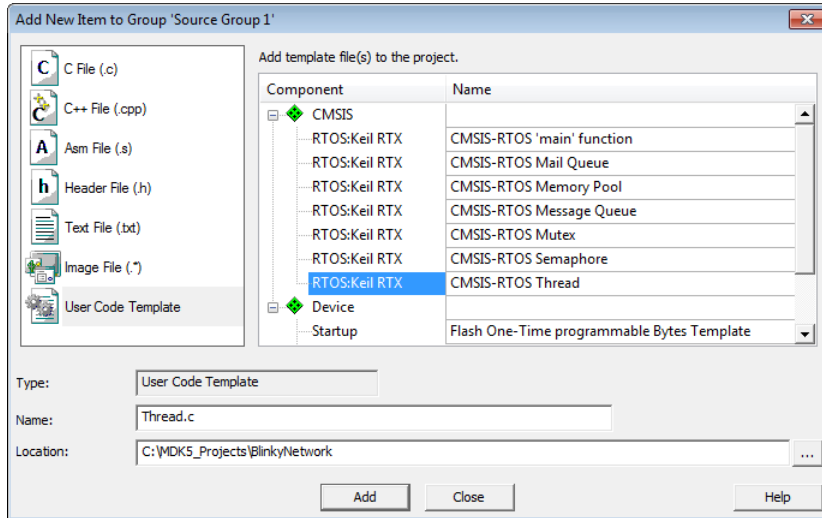


Thread Management

The Thread Management function group allows defining, creating, and controlling thread functions in the system. The function *main()* is a special thread function that is started at system initialization and has the initial priority *osPriorityNormal*.

The CMSIS-RTOS RTX assumes threads are scheduled as shown in the figure **Thread State and State Transitions**. Thread states change as described below:

- A thread is created using the function *osThreadCreate()*. This puts the thread into the **READY** or **RUNNING** state (depending on the thread priority).
- CMSIS-RTOS is pre-emptive. The active thread with the highest priority becomes the **RUNNING** thread provided it is not waiting for any event. The initial priority of a thread is defined with the *osThreadDef()* but may be changed during execution using the function *osThreadSetPriority()*.
- The **RUNNING** thread transfers into the **WAITING** state when it is waiting for an event.
- Active threads can be terminated any time using the function *osThreadTerminate()*. Threads can also terminate by exit from the usual *forever loop* and just a *return* from the thread function. Threads that are terminated are in the **INACTIVE** state and typically do not consume any dynamic memory resources.

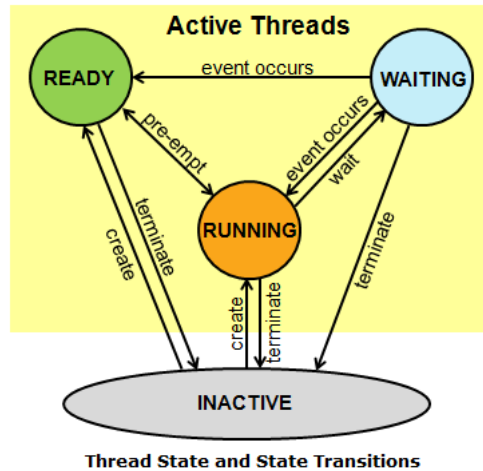

Single Thread Program

A standard C program starts execution with the function *main()*. Usually, this function is an endless loop in an embedded application and can be thought of as a single thread that is executed continuously. For example:

Main function as endless loop; Single thread design, no RTOS used

```
int main (void) {
    int counter = 0;

    while (1) {                                // Loop forever
        counter++;                             // Increment counter
    }
}
```

Simple RTX Program using Round-Robin Task Switching

```
#include "cmsis_os.h"

int counter1;
int counter2;

void job1 (void const *arg) {
    while (1) {                                // Loop forever
        counter1++;                             // Increment counter1
    }
}

void job2 (void const *arg) {
    while (1) {                                // Loop forever
        counter2++;                             // Increment counter2
    }
}

osThreadDef (job1, osPriorityNormal, 1, 0); // Define thread for job1
osThreadDef (job2, osPriorityNormal, 1, 0); // Define thread for job2

int main (void) {
    osKernelInitialize ();                     // main() runs as thread
                                           // Initialize RTX

    osThreadCreate (osThread (job1), NULL);   // Create and start job1
    osThreadCreate (osThread (job2), NULL);   // Create and start job2

    osKernelStart ();                         // Start RTX kernel

    while (1) {
        osThreadYield ();                     // Next thread
    }
}
```

Preemptive Thread Switching

Threads with the same priority need a Round-Robin timeout or an explicit call of the *osDelay()* function to execute other threads. In the example above, if *job2* has a higher priority than *job1*, execution of *job2* starts instantly. *Job2* preempts execution of *job1* (this is a very fast task switch requiring a few ms only).

Start *job2* with Higher Thread Priority


```
:
osThreadDef (osThread (job2), osPriorityAboveNormal, 1, 0);
:
}
```

Timer Management

Timer Management functions allow creating and controlling of timers and callback functions in the system. A callback function is called when a period expires whereby both one-shot and periodic timers are possible. A timer can be started, restarted, or stopped.

Timers are handled in the thread *osTimerThread()*. Callback functions run under control of this thread and may use other CMSIS-RTOS API calls.

The figure below shows the behaviour of a periodic timer. For one-shot timers, the timer stops after execution of the callback function.

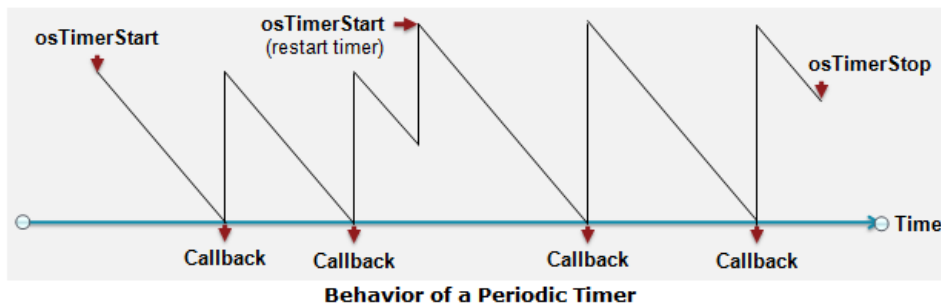

RTX allows creating one-shot timers and timers that execute periodically.

One-Shot and Periodic Timers

```
#include "cmsis_os.h"

void Timer1_Callback (void const *arg);    // Timer callback
void Timer2_Callback (void const *arg);    // Prototype functions

osTimerDef (Timer1, Timer1_Callback);      // Define timers
osTimerDef (Timer2, Timer2_Callback);

uint32_t exec1;                            // Callback function arguments
uint32_t exec2;

void TimerCreate_example (void) {
    osTimerId id1;                          // Timer identifiers
    osTimerId id2;

    // Create one-shoot timer
    exec1 = 1;
    id1 = osTimerCreate (osTimer(Timer1), osTimerOnce, &exec1);
    if (id1 != NULL) {
        // One-shoot timer created
    }

    // Create periodic timer
    exec2 = 2;
    id2 = osTimerCreate (osTimer(Timer2), osTimerPeriodic, &exec2);
    if (id2 != NULL) {
        // Periodic timer created
    }
}
```


Signal Management

Signal Management functions allow you to control or wait for signal flags. Each thread has assigned signal flags.

Mutex Management

Mutex Management functions synchronize the execution of threads and protect access to a shared resource, for example, a shared memory image.

The CMSIS-RTOS Mutex template provides function bodies you can use to add your code.

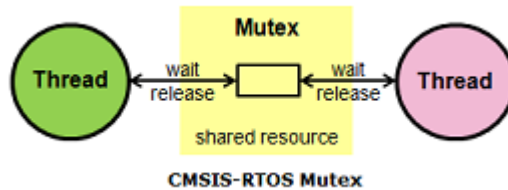


✎ In the **Project** window, right click a group, select **Add New Item to Group**, choose **User Code Template**, and select **CMSIS-RTOS Mutex**.

Semaphore Management

Semaphore Management functions manage and protect access to shared resources. For example, a Semaphore can manage the access to a group of identical peripherals. Although they have a simple set of calls to the operating system, they are the classic solution in preventing race conditions. However, they do not resolve resource deadlocks. RTX ensures that atomic operations used with semaphores are not interrupted.

The number of available resources is specified as parameter of the *osSemaphoreCreate()* function. Each time a Semaphore token is obtained with *osSemaphoreWait()*, the semaphore count is decremented. When the semaphore count is 0, no Semaphore token can be obtained. Semaphores are released with *osSemaphoreRelease()*; this function increments the semaphore count.

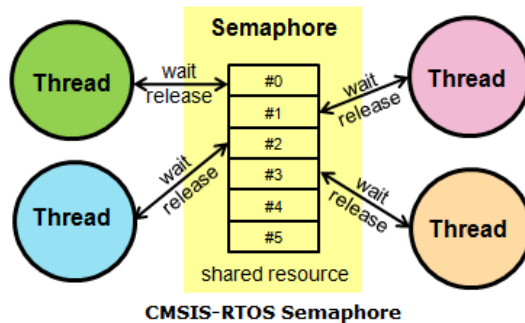

The example creates and initializes a Semaphore object to manage access to shared resources. The parameter *count* specifies the number of available resources. The *count* value 1 creates a binary semaphore.

Thread management using one semaphore

```
#include "cmsis_os.h" // CMSIS-RTOS RTX header file

osThreadId tid_thread1; // ID for thread 1
osThreadId tid_thread2; // ID for thread 2

osSemaphoreId semID; // Semaphore ID
osSemaphoreDef (semaphore); // Semaphore definition


// Thread 1 - High Priority - Active every 3ms
void thread1 (void const *argument) {
    int32_t val;
    while (1) {
        osDelay(3); // Pass control for 3ms
        val = osSemaphoreWait (semID, 1); // Wait 1ms for free token
        if (val > 0) { // If free token acquired
            : // do your job
            osSemaphoreRelease (semID); // Return token to semaphore
        }
    }
}

// Thread 2 - Normal Priority -
// Looks for a free semaphore and uses resources whenever available
void thread2 (void const *argument) {
    while (1) {
        osSemaphoreWait (semID, osWaitForever); // Wait for free semaphore
        osSemaphoreRelease (semID); // Return token to semaphore
    }
}

// Thread definitions
osThreadDef (thread1, osPriorityHigh, 1, 0);
osThreadDef (thread2, osPriorityNormal, 1, 0);

void StartApplication (void) {
    semID = osSemaphoreCreate (osSemaphore(semaphore), 1);
    tid_thread1 = osThreadCreate (osThread(thread1), NULL);
    tid_thread2 = osThreadCreate (osThread(thread2), NULL);
}
```


The CMSIS-RTOS Semaphore template provides function bodies you can use to add your code.

 In the **Project** window, right click a group, select **Add New Item to Group**, choose **User Code Template** and select **CMSIS-RTOS Semaphore**.

Memory Pool Management

The Memory Pool Management provides thread-safe and fully reentrant allocation functions for fixed sized memory pools. These functions have a deterministic execution time that is independent of the pool usage. Built-in memory allocation routines enable you to use the system memory dynamically by creating memory pools and use fixed sized blocks from the memory pool. The memory pool needs a proper initialization to the size of the object.


The CMSIS-RTOS Memory Pool template provides function bodies you can use to add your code.


 In the Project window, right click a group, select **Add New Item to Group**, choose **User Code Template**, and select **CMSIS-RTOS Memory Pool**.

Message Queue Management

Message Queue Management functions allow to control, send, receive, or wait for messages. A message can be an integer or pointer value that is sent to a thread or interrupt service routine.

The CMSIS-RTOS Message Queue template provides function bodies you can use to add your code.

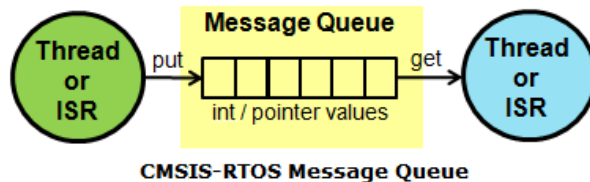



 In the **Project** window, right-click a group, select **Add New Item to Group**, choose **User Code Template**, and select **CMSIS-RTOS Message Queue**.

Mail Queue Management

The Mail Queue Management function group allows controlling, sending, receiving, or waiting for mail. A mail is a memory block that is sent to a thread or to an interrupt service routine.

The CMSIS-RTOS Mail Queue template provides function bodies you can use to add your code.

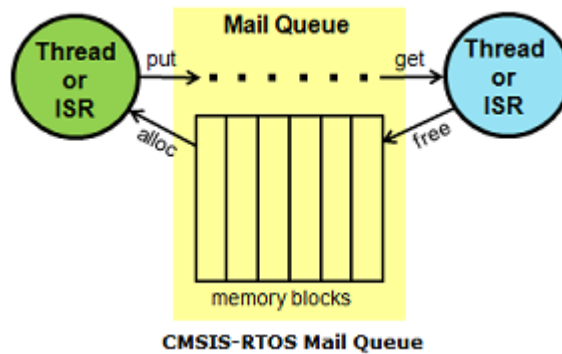


 In the **Project** window, right click a group, select **Add New Item to Group**, choose **User Code Template**, and select **CMSIS-RTOS Mail Queue**.

CMSIS-DSP

The CMSIS-DSP library is a suite of common digital signal processing (DSP) functions. The library is available in several different variants optimized for the various Cortex-M processors.

When enabling the software component **::CMSIS:DSP** in the dialog **Manage Run-Time Environment**, the optimum library for the selected device is included into the project.

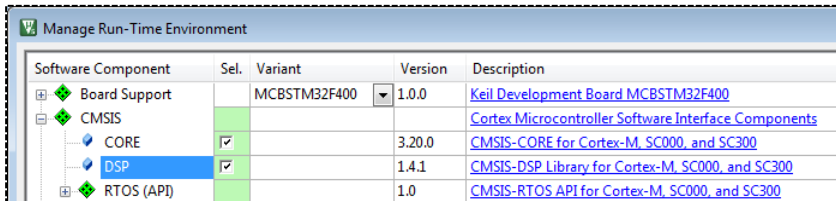

The code example below shows the use of CMSIS-DSP library functions.

Multiplication of two matrixes using DSP functions

```
#include "arm_math.h"                // ARM::CMSIS:DSP

const float32_t buf_A[9] = {        // Matrix A buffer and values
    1.0, 32.0, 4.0,
    1.0, 32.0, 64.0,
    1.0, 16.0, 4.0,
};

float32_t buf_AT[9];                // Buffer for A Transpose (AT)
float32_t buf_ATmA[9];              // Buffer for (AT * A)

arm_matrix_instance_f32 A;           // Matrix A
arm_matrix_instance_f32 AT;          // Matrix AT(A transpose)
arm_matrix_instance_f32 ATmA;        // Matrix ATmA( AT multiplied by A)

uint32_t rows = 3;                  // Matrix rows
uint32_t cols = 3;                  // Matrix columns

int main(void) {
    // Initialize all matrixes with rows, columns, and data array
    arm_mat_init_f32 (&A, rows, cols, (float32_t *)buf_A); // Matrix A
    arm_mat_init_f32 (&AT, rows, cols, buf_AT);             // Matrix AT
    arm_mat_init_f32 (&ATmA, rows, cols, buf_ATmA);          // Matrix ATmA

    arm_mat_trans_f32 (&A, &AT);                             // Calculate A Transpose (AT)
    arm_mat_mult_f32 (&AT, &A, &ATmA);                       // Multiply AT with A

    while (1);
}
```

For more information, refer to the CMSIS-DSP documentation.

file:///C:/MDK5/ARM/PACK/ARM/CMSIS/3.20.4/CMSIS/Documentation/DSP/html/modules.html

CMSIS-DSP: Reference

CMSIS COMPLIANT
ARM Cortex-M Processors
Software Interface Standard

CMSIS-DSP

Version 1.4.1

CMSIS DSP Software Library

CMSIS **CORE** **Driver** **DSP** **RTOS API** **Pack** **SVD**

Main Page Usage and Description **Reference** Search

- ▼ CMSIS-DSP
 - CMSIS DSP Software Library
 - Change Log
 - Deprecated List
 - ▶ **Reference**
 - ▶ Data Structures
 - ▶ Data Fields

Reference

Here is a list of all modules: [detail level 1 2]

- ▶ Basic Math Functions
- ▶ Fast Math Functions
- ▶ Complex Math Functions
- ▶ Filtering Functions
- ▶ Matrix Functions
- ▶ Transform Functions
- ▶ Controller Functions
- ▼ Statistics Functions
 - Maximum
 - Mean

Create Applications

This chapter guides you through the steps required to create and modify projects using CMSIS described in the previous chapter.

NOTE

The example code in this section works for the STM32F4-Discovery evaluation board (populated with STM32F407VG). Adapt the code and port pin configurations when using another starter kit or board.

The tutorial creates the project *Blinky* in the two basic design concepts:

- RTOS Design using CMSIS-RTOS RTX.
- Infinite Loop Design for *bare-metal* systems without RTOS Kernel.

For the project *Blinky*, you will create the following application files:

- main.c* This file contains the *main()* function that initializes the RTOS kernel, the peripherals, and starts thread execution.
- LED.c* The file contains functions to initialize and control the GPIO port and the thread function *blink_LED()*. The *LED_Initialize()* function initializes the GPIO port pin. The functions *LED_On()* and *LED_Off()* control the port pin that interface to the LED.
- LED.h* The header file contains the function prototypes for the functions in *LED.c* and is included into the file *main.c*.

In addition, you will configure the system clock and the CMSIS-RTOS RTX.

Blinky with CMSIS-RTOS RTX


The section explains the creation of the project using the following steps:

- **Setup the Project:** create a project file and select the microcontroller device along with the relevant CMSIS components.
- **Configure the Device Clock Frequency:** configure the system clock frequency for device and the CMSIS-RTOS RTX kernel.
- **Create the Source Code Files:** add and create the application files.
- **Build the Application Image:** compile and link the application code for download to on-chip Flash memory of a microcontroller device.


Using the Debugger on page 52 guides you through the steps to connect your evaluation board to the PC and to download the application to the target hardware.

Setup the Project

From the μ Vision menu bar, choose **Project – New μ Vision Project**.

-  Select an empty folder and enter the project name, for example, *Blinky*. Click **Save**, which creates an empty project file with the specified name (*Blinky.uvproj*).


Next, the dialog **Select Device for Target** opens.

-  Select a device and click **OK**.

The device selection defines essential tool settings such as compiler controls, the memory layout for the linker, and the Flash programming algorithms.

The dialog **Manage Run-Time Environment** opens and shows the software components that are installed and available for the selected device.

☞ Expand **::CMSIS:RTOS** and enable **:Keil RTX**.

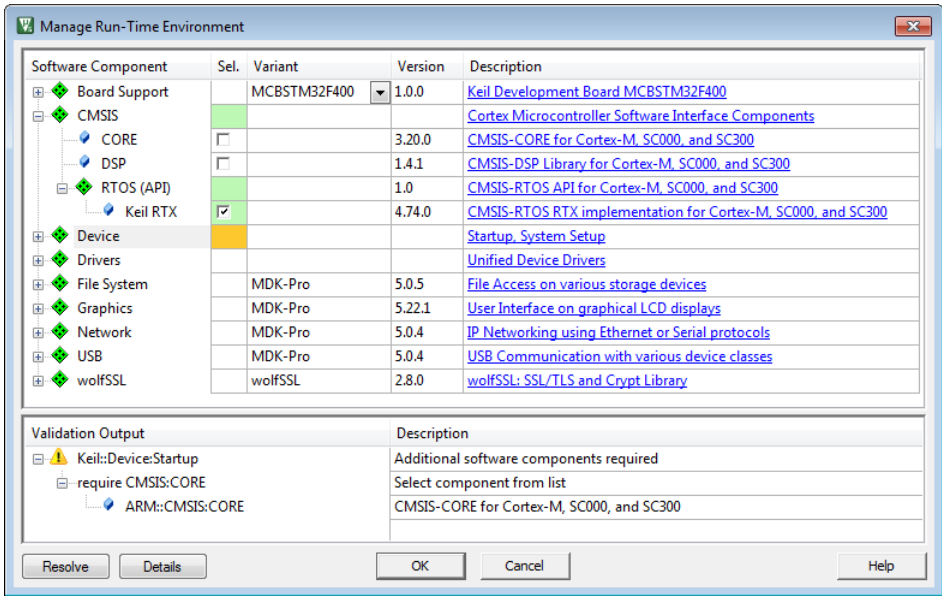

The **Validation Output** field shows dependencies to other software components. In this case, the component **::Device:Startup** is required.


TIP: A click on a message highlights the related software component.

☞ Click **Resolve**.

This resolves all dependencies and enables other required software components (here, **::CMSIS:Core** and **::Device:Startup**).

☞ Click **OK**.

The selected software components are included into the project together with the startup file, the RTX configuration file, and the CMSIS system files. The **Project** window displays the selected software components along with the related files. Double-click on a file to open it in the Editor.

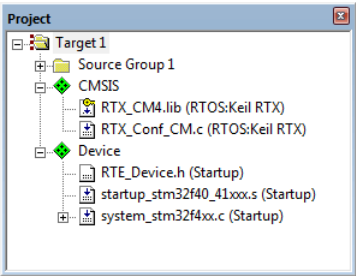

Configure the Device Clock Frequency


The system or core clock is defined in the `system_<device>.c` file. The core clock also is the input clock frequency for the RTOS Kernel Timer and, therefore, the RTX configuration file needs to match this setting.

The clock configuration for an application depends on various factors such as the clock source (XTAL or on-chip oscillator), and the requirements for memory and peripherals. Silicon vendors provide the device-specific file `system_<device>.c` and therefore it is required to read the related documentation.

TIP: Open the reference manual from the **Books** window for detailed information about the microcontroller clock system.

The STM32F4-Discovery Kit runs with an external 8MHz XTAL. However, the PLL generates a core clock frequency of 168MHz. Make the following modifications:

- Set the PLL parameters in the file `system_stm32f4xx.c`.

 To edit the file `system_stm32f4xx.c`, expand the group **Device** in the **Project** window, double-click on the file name, and modify the code as shown below.

Set PLL Parameters in `system_stm32f4xx.c`

```
:
/***** PLL Parameters *****/
/* PLL_VCO = (HSE_VALUE or HSI_VALUE / PLL_M) * PLL_N */
#define PLL_M 8
#define PLL_N 336


/* SYSCLK = PLL_VCO / PLL_P */
#define PLL_P 2

/* USB OTG FS, SDIO and RNG Clock = PLL_VCO / PLLQ */
#define PLL_Q 7
:
```


Customize the CMSIS-RTOS RTX Kernel

✎ In the **Project** window, expand the group **CMSIS**, open the file **RTX_Conf_CM.c**, and click the tab **Configuration Wizard** at the bottom of the editor.

Expand **RTX Kernel Timer Tick Configuration** and set the **Timer clock value** to match the core clock

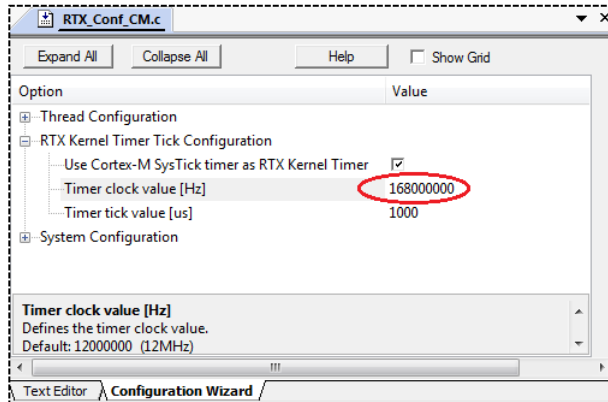


TIP: You may copy the compiler define settings and **system_<device>.c** from example projects. Right click on the filename in the editor and use **Open Containing Folder** to locate the file.

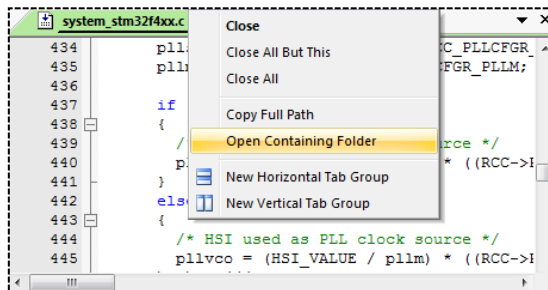

Create the Source Code Files

Add your application code using pre-configured **User Code Templates** containing routines that resemble the functionality of the software component.

☞ In the **Project** window, right-click **Source Group 1** and open the dialog **Add New Item to Group**.

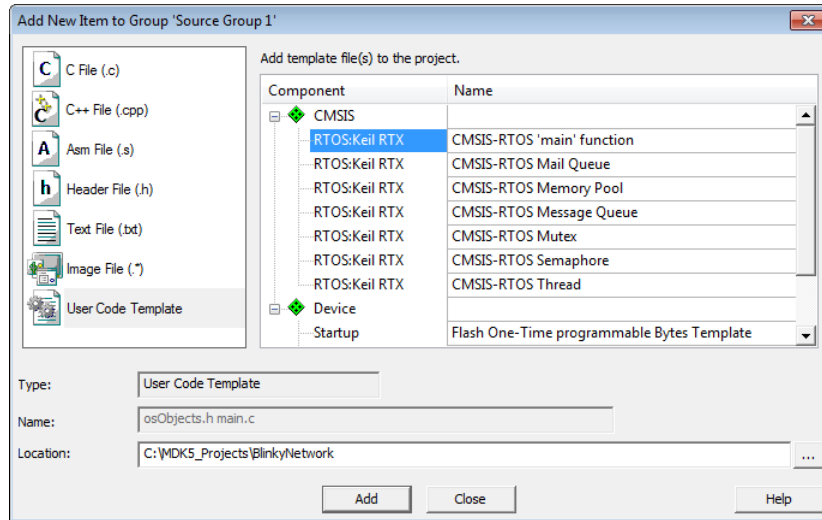

☞ Click on **User Code Template** to list available code templates for the software components included in the project. Select **CMSIS-RTOS 'main'** function and click **Add**.

This adds the file *main.c* to the project group **Source Group 1**. Now, add user code to this file.


☞ Right-click on a blank line in the file *main.c* and select **Insert '#include files'**. Include the header file *cmsis_os.h* for the CMSIS-RTOS RTX.

Then, add the code below to create a function *blink_LED* that blinks LEDs on the evaluation kit. Define *blink_LED* as an RTOS thread using *osThreadDef()* and start it with *osThreadCreate()*.

Code for main.c

```
/*-----  
 * CMSIS-RTOS 'main' function template  
 *-----*/  
  
#define osObjectsPublic          // Define objects in main module  
#include "osObjects.h"          // RTOS object definitions  
#include "cmsis_os.h"           // ARM::CMSIS:RTOS:Keil RTX  
#include "LED.h"                // Initialize and set GPIO Port  
  
/*  
 * main: initialize and start the system  
 */  
int main (void) {  
    osKernelInitialize ();        // Initialize CMSIS-RTOS  
    // initialize peripherals here  
    LED_Initialize ();           // Initialize LEDs  
  
    // create 'thread' functions that start executing,  
    // example: tid_name = osThreadCreate (osThread(name), NULL);  
    Init_BlinkyThread ();        // Start Blinky thread  
    osKernelStart ();            // Start thread execution  
  
    while (1);  
}
```

Create an empty C-file named *LED.c* using the dialog **Add New Item to Group** and add the code to initialize and access the GPIO port pins that control the LEDs.

 Right-click in the editor and select **Insert '#include files** to include the CMSIS-CORE device header file *stm32f4xx.h*.

Code for *LED.c*

```

/*-----
 * File LED.c
 *-----*/
#include "stm32f4xx.h"           // Device header
#include "cmsis_os.h"           // RTOS:Keil RTX header

void blink_LED (void const *argument);           // Prototype function

osThreadDef (blink_LED, osPriorityNormal, 1, 0); // Define blinky thread

// Initialize GPIO Port
void LED_Initialize (void) {
    RCC->AHB1ENR |= RCC_AHB1ENR_GPIODEN;        // Enable Port D clock
    GPIOD->MODER |= GPIO_MODER_MODER13_0;        // Port D.13 output
}

/* Turn LED on */
void LED_On (void) {
    GPIOD->BSRRL = (1<<13);                      // LED on: set Port
}

/* Turn LED off */
void LED_Off (void) {
    GPIOD->BSRRH = (1<<13);                      // LED off: clear Port
}

// Blink LED function
void blink_LED(void const *argument) {
    for (;;) {
        LED_On ();                             // Switch LED on
        osDelay (500);                          // Delay 500 ms
        LED_Off ();                             // Switch off
        osDelay (500);                          // Delay 500 ms
    }
}

void Init_BlinkyThread (void) {
    osThreadCreate (osThread(blink_LED), NULL);  // Create thread
}

```

Create an empty header file named *LED.h* using the dialog **Add New Item to Group** and define the function prototypes of *LED.c*.

Code for *LED.h*

```

/*-----
 * File LED.h
 *-----*/

void LED_Initialize ( void );           // Initialize GPIO
void LED_On ( void );                   // Switch Pin on
void LED_Off ( void );                  // Switch Pin off

void blink_LED ( void const *argument ); // Blink LEDs in a thread
void Init_BlinkyThread ( void );         // Initialize thread


```

Build the Application Image



Build the application, which compiles and links all related source files.

Build Output shows information about the build process. An error-free build displays program size information, zero errors, and zero warnings.

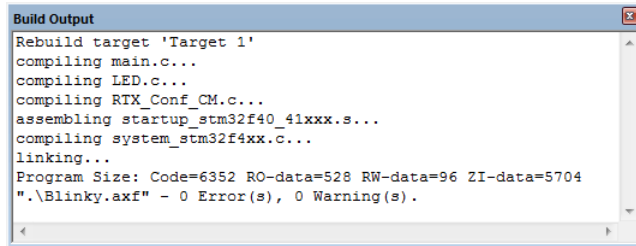

```
Build Output
Rebuild target 'Target 1'
compiling main.c...
compiling LED.c...
compiling RTX_Conf_CM.c...
assembling startup_stm32f40_41xxx.s...
compiling system_stm32f4xx.c...
linking...
Program Size: Code=6352 RO-data=528 RW-data=96 ZI-data=5704
".\Blinky.axf" - 0 Error(s), 0 Warning(s).
```

The section **Using the Debugger** on page 52 guides you through the steps to connect your evaluation board to the workstation and to download the application to the target hardware.


TIP: You may verify the correct clock and RTOS configuration of the target hardware by checking the one-second interval of the LED.

Blinky with Infinite Loop Design

Based on the previous example, we create a Blinky application with the infinite loop design and without using CMSIS-RTOS RTX functions. The project contains the user code files:

- main.c* This file contains the *main()* function, the function *SysTick_Init()* to initialize the System Tick Timer and its handler function *SysTick_Handler()*. The function *Delay()* waits for a certain time.
- LED.c* The file contains functions to initialize the GPIO port pin and to set the port pin on or off. The *LED_Initialize()* function initializes the GPIO port pin. The functions *LED_On()* and *LED_Off()* enable or disable the port pin.
- LED.h* The header file contains the function prototypes created in *LED.c* and must be included into the file *main.c*.

Open the **Manage Run-Time Environment** and deselect the software component **::CMSIS:RTOS:Keil RTX**.

 Open the file *main.c* and add the code to initialize the System Tick Timer, write the System Tick Timer Interrupt Handler, and the delay function.

```

/*-----
 * file main.c
 *-----*/

#include "LED.h"                // Initialize and set GPIO Port
#include "stm32f4xx.h"          // Device header

int32_t volatile msTicks = 0;    // Interval counter in ms

// Set the SysTick interrupt interval to 1ms
void SysTick_Init (void) {
    if (SysTick_Config (SystemCoreClock / 1000)) {
        // handle error
    }
}

// SysTick Interrupt Handler function called automatically
void SysTick_Handler (void) {
    msTicks++;                  // Increment counter
}


// Wait until msTick reaches 0
void Delay (void) {
    while (msTicks < 499);      // Wait 500ms
    msTicks = 0;                // Reset counter
}

```



```
int main (void) {
    // initialize peripherals here
    LED_Initialize ();           // Initialize LEDs
    SysTick_Init ();            // Initialize SysTick Timer

    while (1) {
        LED_On ();              // Switch on
        Delay ();               // Delay
        LED_Off ();             // Switch off
        Delay ();               // Delay
    }
}
```


 Open the file *LED.c* and remove unnecessary functions. The code should look like this.

```
/*-----
 * File LED.c
 *-----*/
#include "stm32f4xx.h"           // Device header

// Initialize GPIO Prot
void LED_Initialize (void) {
    RCC->AHB1ENR |= RCC_AHB1ENR_GPIODEN; // Enable Port D clock
    GPIOD->MODER |= GPIO_MODER_MODER13_0; // Port D.13 output
}

/* Turn LED on */
void LED_On (void) {
    GPIOD->BSRRL = (1<<13);          // LED on: set Port
}

/* Turn LED off */
void LED_Off (void) {
    GPIOD->BSRRH = (1<<13);          // LED off: clear Port
}
```

 Open the file *LED.h* and modify the code.

```
/*-----
 * file: LED.h
 *-----*/
void LED_Initialize (void);       // Initialize LED Port Pins
void LED_On (void);              // Set LED on
void LED_Off (void);             // Set LED off
```

Build the Application Image



Build the application, which compiles and links all related source files.

The section **Using the Debugger** on page 52 guides you through the steps to connect your evaluation board to the PC and to download the application to the target hardware.



TIP: You may verify the correct clock configuration of the target hardware by checking the one-second interval of the LED.

Debug Applications

The ARM CoreSight™ technology integrated into the ARM Cortex-M processor-based devices provides powerful debug and trace capabilities. It enables run-control to start and stop programs, breakpoints, memory access, and Flash programming. Features like PC sampling, data trace, exceptions including interrupts, and instrumentation trace are available in most devices. Devices integrate instruction trace using ETM, ETB, or MTB to enable analysis of the program execution. Refer to www.keil.com/coresight for a complete overview of the debug and trace capabilities.

Debugger Connection

MDK contains the μ Vision Debugger that connects to various Debug/Trace adapters, and allows you to program the Flash memory. It supports traditional features like simple and complex breakpoints, watch windows, and execution control. Using trace, additional features like event/exception viewers, logic analyzer, execution profiler, and code coverage are supported.


- The ULINK2 and ULINK-ME Debug adapters interface to JTAG/SWD debug connectors and support trace with the Serial Wire Output (SWO). The ULINK_{pro} Debug/Trace adapter also interfaces to ETM trace connectors and uses streaming trace technology to capture the complete instruction trace for code coverage and execution profiling. Refer to www.keil.com/ulink for more information.
- CMSIS-DAP based USB JTAG/SWD debug interfaces are typically part of an evaluation board or starter kit and offer integrated debug features. In addition, several proprietary interfaces that offer a similar technology are supported.
- MDK supports third-party debug solutions such as Segger J-Link or J-Trace. Some starter kit boards provide the J-Link Lite technology as an on-board solution.

Using the Debugger

Next, you will debug the *Blinky* application created in the previous chapter on hardware. You need to configure the debug connection and Flash programming utility.


Select the debug adapter and configure debug options.

- From the toolbar, choose **Options for Target**, click the **Debug** tab, enable **Use**, and select the applicable debug driver.

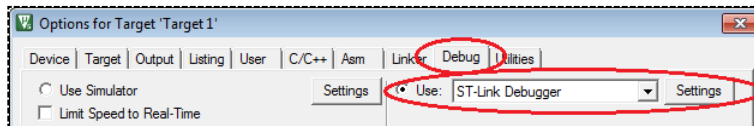

Configure Flash programming options.


- Switch to the dialog **Utilities** and enable **Use Debug Driver**.

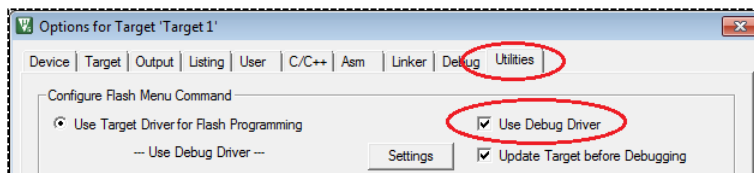


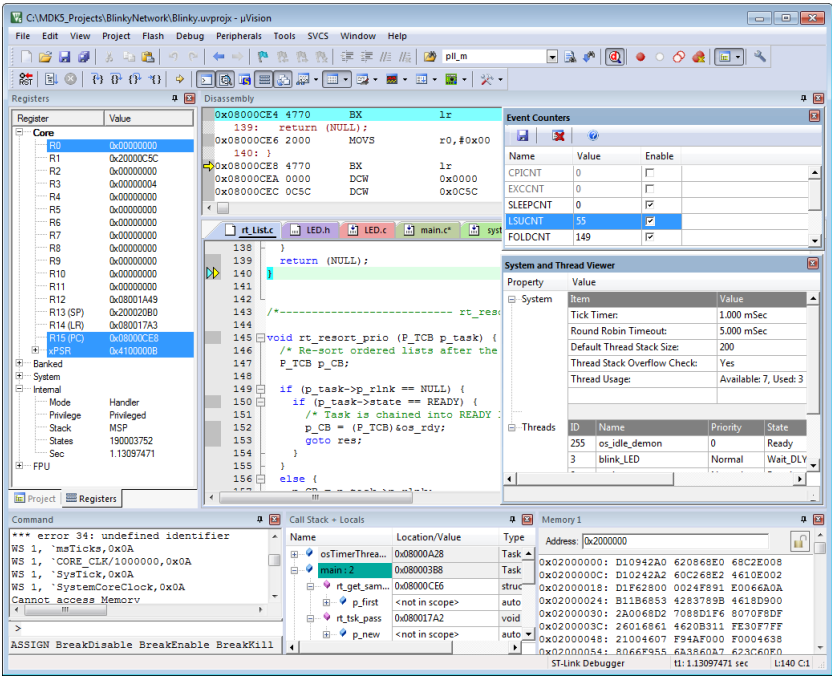
The device selection already configures the Flash programming algorithm for on-chip memory. Verify the configuration using the **Settings** button.

Program the application into Flash memory.

- From the toolbar, choose **Download**. The **Build Output** window shows messages about the download progress.

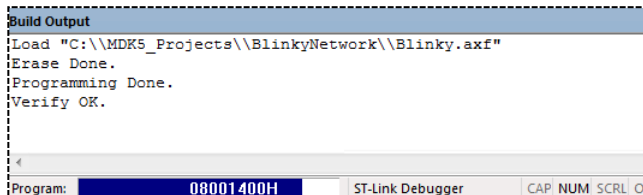

 Start debugging on hardware. From the toolbar, select **Start/Stop Debug Session**.









During the start of a debugging session, μ Vision loads the application, executes the startup code, and stops at the main C function.

 Click **Run** on the toolbar. The LED flashes with a frequency of one second.


Debug Toolbar

The debug toolbar provides quick access to many debugging commands such as:

-  **Step** steps through the program and into function calls.
-  **Step Over** steps through the program and over function calls.
-  **Step Out** steps out of the current function.
-  **Stop** halts program execution.
-  **Reset** performs a CPU reset.
-  **Show** to the statement that executes next (current PC location).

Command Window

You may also enter debug commands in the **Command** window.

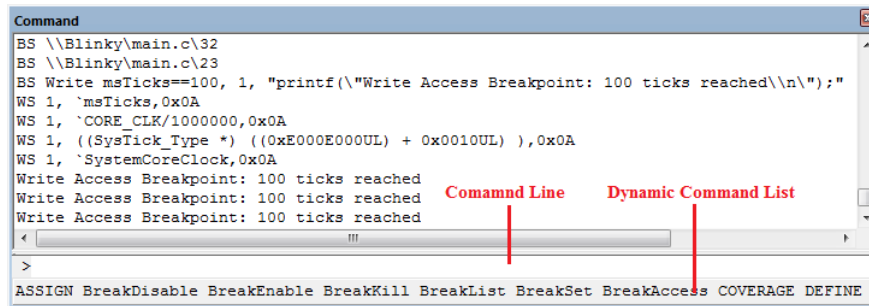


On the **Command Line** enter debug commands or press **F1** to access detailed help information.

Disassembly Window

The **Disassembly** window shows the program execution in assembly code intermixed with the source code (when available). When this is the active window, then all debug stepping commands work at the assembly level.

The window margin shows markers for breakpoints, bookmarks, and for the next execution statement.

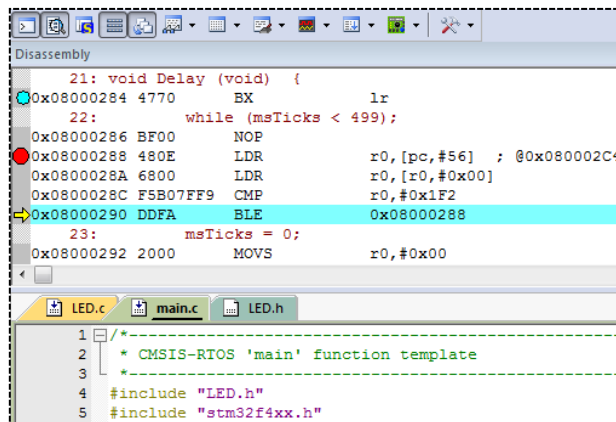

Breakpoints

You can set breakpoints


- While creating or editing your program source code. Click in the grey margin of the editor or **Disassembly** window to set a breakpoint.
- Using the Breakpoint buttons in the toolbar.
- Using the window Debug – Breakpoints.
- Entering commands in the **Command** window.
- Using the context menu of the **Disassembly** window or editor.

Breakpoints Window

You can define sophisticated breakpoints using the **Breakpoints** window.

Open the **Breakpoints** window from the menu **Debug**.

Enable or disable breakpoints using the checkbox in the field **Current Breakpoints**. Double-click on an existing breakpoint to modify the definition.

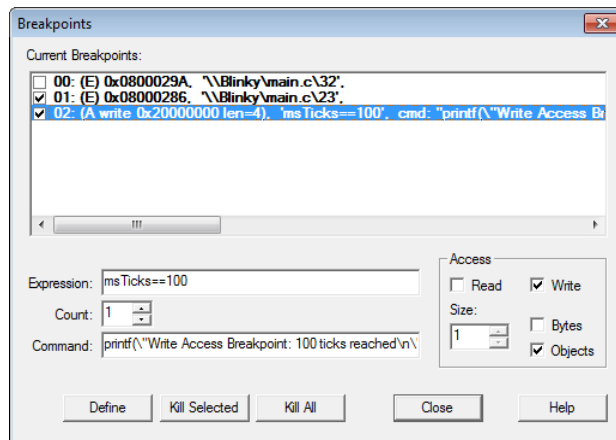

Enter an **Expression** to add a new breakpoint. Depending on the expression, one of the following breakpoint types is defined:

- **Execution Breakpoint (E):** is created when the expression specifies a code address and triggers when the code address is reached.
- **Access Breakpoint (A):** is created when the expression specifies a memory access (read, write, or both) and triggers on the access to this memory address. A compare (==) operator may be used to compare for a specified value.

If a **Command** is specified for a breakpoint, μ Vision executes the command and resumes executing the target program.


The **Count** value specifies the number of times the breakpoint expression is true before the breakpoint halts program execution.

Watch Window

The **Watch** window allows you to observe program symbols, registers, memory areas, and expressions.



Open a **Watch** window from the toolbar or the menu using **View – Watch Windows**.

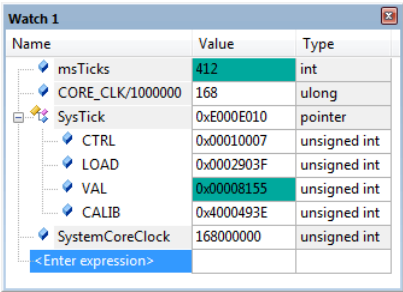

Name	Value	Type
msTicks	412	int
CORE_CLK/1000000	168	ulong
SysTick	0xE000E010	pointer
CTRL	0x00010007	unsigned int
LOAD	0x0002903F	unsigned int
VAL	0x00008155	unsigned int
CALIB	0x4000493E	unsigned int
SystemCoreClock	168000000	unsigned int
<Enter expression>		

Add variables to the **Watch** window with:

- Click on the field **<Enter expression>** and double-click or press **F2**.
- In the Editor when the cursor is located on a variable, use the context menu select **Add <item name> to...**
- Drag and drop a variable into a **Watch** window.
- In the **Command** window, use the **WATCHSET** command.


The window content is updated when program execution is halted, or during program execution when **View – Periodic Window Update** is enabled.

Call Stack and Locals Window

The **Call Stack + Locals** window shows the function nesting and variables of the current program location.



Open the **Call Stack + Locals** window from the toolbar or the menu using **View – Call Stack Window**.

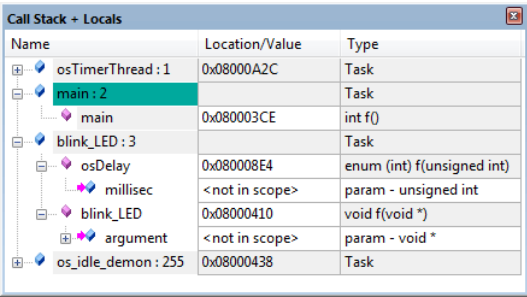

Name	Location/Value	Type
osTimerThread : 1	0x08000A2C	Task
main : 2		Task
main	0x080003CE	int f()
blink_LED : 3		Task
osDelay	0x080008E4	enum (int) f(unsigned int)
millisec	<not in scope>	param - unsigned int
blink_LED	0x08000410	void f(void *)
argument	<not in scope>	param - void *
os_idle_demon : 255	0x08000438	Task


When program execution stops, the **Call Stack + Locals** window automatically shows the current function nesting along with local variables. Tasks are shown for applications that use the CMSIS-RTOS RTX.

Register Window

The **Register** window shows the content of microcontroller registers.

- Open the **Registers** window from the toolbar or the menu **View – Registers Window**.


You can modify the content of a register by double-click on the value of a register, or press **F2** to edit the selected value. Currently modified registers are highlighted in blue. The window updates the values when program execution halts.

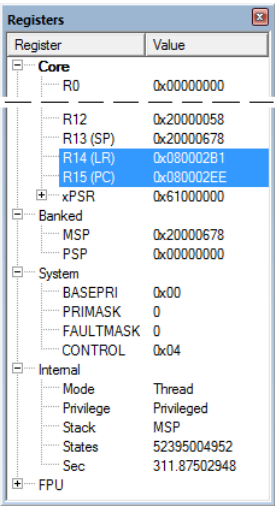

Memory Window

Monitor memory areas using **Memory Windows**.

- Open a **Memory** window from the toolbar or the menu using **View – Memory Windows**.
 - Enter an expression in the **Address** field to monitor the memory area.
 - To modify memory content, use the **Modify Memory at ...** command from context menu of the **Memory** window double-click on the value.
 - The **Context Menu** allows you to select the output format.
 - To update the **Memory Window** periodically, enable **View – Periodic Window Update**. Use **Update Windows** in the **Toolbox** to refresh the windows manually.
- Stop refreshing the **Memory** window by clicking the **Lock** button. You can use the Lock feature to compare values of the same address space by viewing the same section in a second **Memory** window.

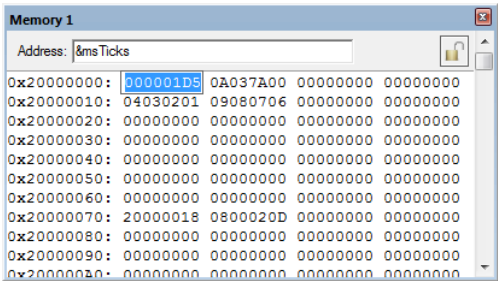

Peripheral Registers

Peripheral registers are memory mapped registers to which a processor can write to and read from to control a peripheral. The menu **Peripherals** provides access to **Core Peripherals**, such as the Nested Vector Interrupt Controller or the System Tick Timer. You can access device peripheral registers using the **System Viewer**.

NOTE

The content of the menu Peripherals changes with the selected microcontroller.

System Viewer

System Viewer windows display information about device peripheral registers.




Open a peripheral register from the toolbar or the menu **Peripherals – System Viewer**.

With the **System Viewer**, you can:

- View peripheral register properties and values. Values are updated periodically when **View — Periodic Window Update** is enabled.
- Change property values while debugging.
- Search for specific properties using **TR1 Regular Expressions** in the search field. The Appendix of the *µVision User's Guide* describes the syntax of regular expressions.

For details about accessing and using peripheral registers, refer to the online documentation.

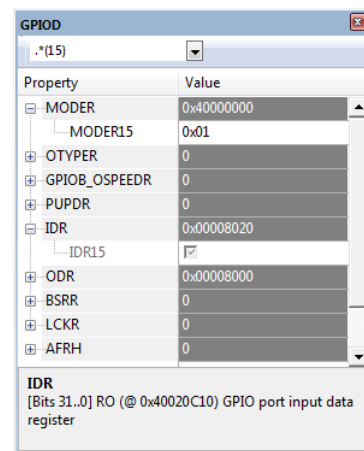


Trace

Run-Stop Debugging, as described previously, has some limitations that become apparent when testing time-critical programs, such as motor control or communication applications. As an example, breakpoints and single stepping commands change the dynamic behavior of the system. As an alternative, use the trace features explained in this section to analyze running systems.

Cortex-M processors integrate CoreSight logic that is able to generate the following trace information using:

- **Data Watchpoints** record memory accesses with data value and program address and, optionally, stop program execution.
- **Exception-Trace** outputs details about interrupts and exceptions.
- **Instrumented Trace** communicates program events and enables printf-style debug messages and the RTOS Event Viewer.
- **Instruction Trace** streams the complete program execution for recording and analysis.

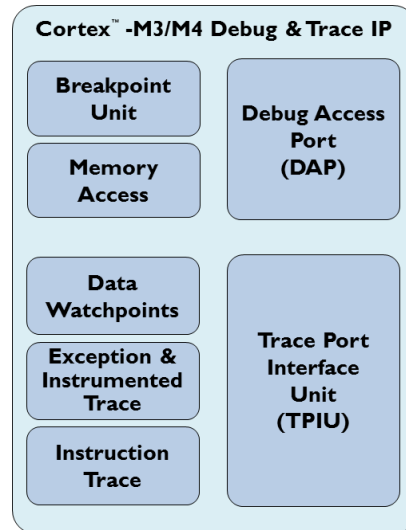

The **Trace Port Interface Unit (TPIU)** is available on most Cortex-M3 and Cortex-M4 based microcontrollers and outputs above trace information via:

- **Serial Wire Trace Output (SWO)** works only in combination with the Serial Wire Debug mode (not with JTAG) and does not support Instruction Trace.
- **4-Pin Trace Output** available on high-end microcontrollers and has the high bandwidth required for Instruction Trace.

On some microcontrollers, the trace information can be stored on an on-chip **Trace Buffer** that can be read using the standard debug interface.

- Cortex-M3 and Cortex-M4 has an optional **Embedded Trace Buffer (ETB)** that stores all trace data described above.
- Cortex-M0+ has an optional **Micro Trace Buffer (MTB)** that supports instruction trace only.


The required trace interface needs to be supported by both the microcontroller and the debug adapter. The following table shows supported trace methods of various debug adapters.

Feature	ULINK _{pro}	ULINK _{pro} -D	ULINK2	ST-Link v2
Thread Management	✓	✓	✓	✓
Maximum SWO clock frequency	200 MHz	200 MHz	3.75 MHz	2 MHz
4-Pin Trace Output for Streaming	✓	✗	✗	✗
Embedded Trace Buffer (ETB)	✓	✓	✓	✗
Micro Trace Buffer (MTB)	✓	✓	✓	✗


Trace with Serial Wire Output

To use the Serial Wire Trace Output (SWO), use the following steps:

- Click **Options for Target** on the toolbar and select the **Debug** tab. Verify that you have selected and enabled the correct *debug adapter*.

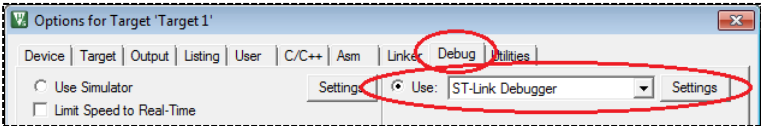


- Click the **Settings** button. On the **Debug** dialog, select the debug **Port** and set the **Max Clock** frequency for communicating with the debug unit of the device.

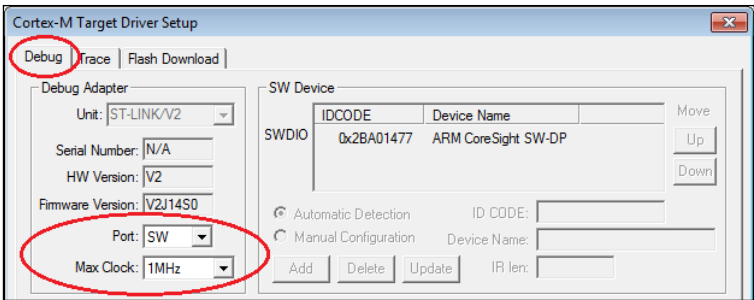

Click the **Trace** tab. Ensure the **Core Clock** has the right setting. Set **Trace Enable** and select the **Trace Events** you want to monitor.

Enable **ITM Stimulus Port 0** for printf-style debugging.

Enable **ITM Stimulus Port 31** to view RTOS Events.

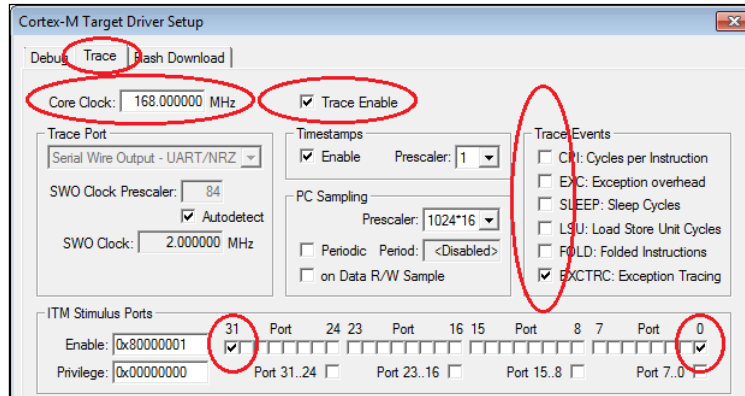

NOTE


When many trace features are enabled, the Serial Wire Output communication can overflow. The μ Vision Status Bar displays such connection errors.




The ULINKpro Debug/Trace Adapter has high trace bandwidth and such communication overflows are rare. Enable only the trace features that are currently required to avoid overflows in the trace communication.

Trace Exceptions

The **Exception Trace** window displays statistical data about traced exceptions and interrupts.

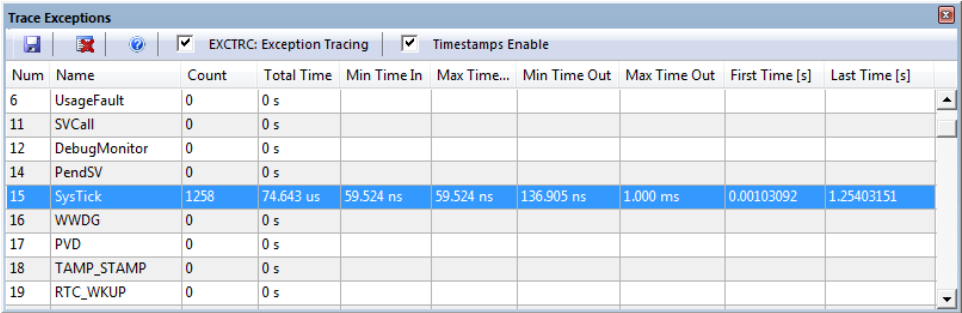 Click on **Trace Windows** and select **Trace Exceptions** from the toolbar or use the menu **View – Trace – Trace Exceptions** to open the window.



Trace Exceptions									
<div></div> <div><input checked="" type="checkbox"/> EXCTRC: Exception Tracing <input checked="" type="checkbox"/> Timestamps Enable</div>									
Num	Name	Count	Total Time	Min Time In	Max Time...	Min Time Out	Max Time Out	First Time [s]	Last Time [s]
6	UsageFault	0	0 s						
11	SVCcall	0	0 s						
12	DebugMonitor	0	0 s						
14	PendSV	0	0 s						
15	SysTick	1258	74.643 us	59.524 ns	59.524 ns	136.905 ns	1.000 ms	0.00103092	1.25403151
16	WWDG	0	0 s						
17	PVD	0	0 s						
18	TAMP_STAMP	0	0 s						
19	RTC_WKUP	0	0 s						


To retrieve data in the **Trace Exceptions** window:

- Set **Trace Enable** in the Debug Settings Trace dialog as described above.
- Enable **EXCTRC: Exception Tracing**.
- Set **Timestamps Enable**.

NOTE
The variable accesses configured in the *Location Analyzer* are also shown in the *Trace Data Window*.

Logic Analyzer

The Logic Analyzer Window displays changes of variable values over time. Up to four variables can be monitored. To add a variable to the Logic Analyzer, right click it in while in debug mode and select **Add <variable> to... - Logic Analyzer**. Open the Logic Analyzer Window by choosing **View - Analysis Windows - Logic Analyzer**.

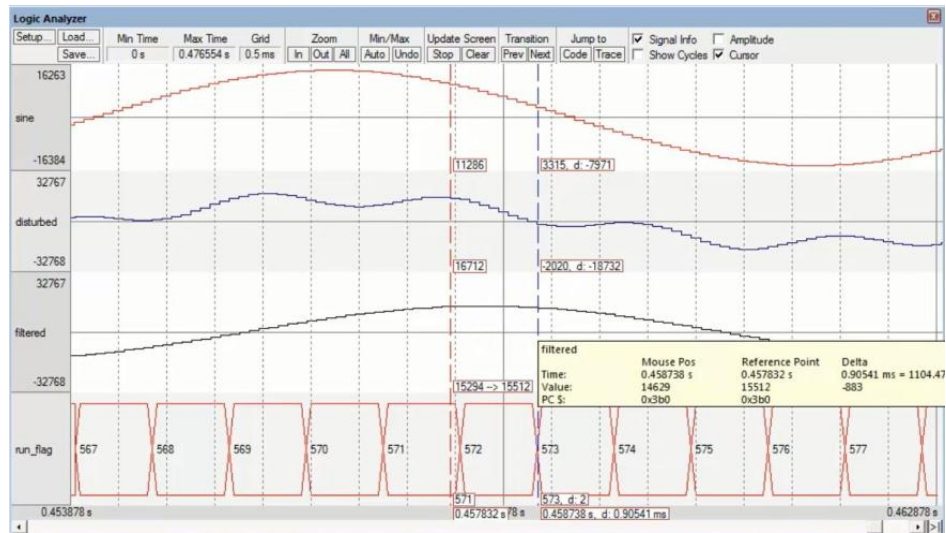

To retrieve data in the **Logic Analyzer** window:

- Set **Trace Enable** in the Debug Settings Trace dialog as described above.
- Set **Timestamps Enable**.

NOTE

The variable accesses monitored in the Location Analyzer are also shown in the Trace Data Window. Refer to the *µVision User's Guide – Debugging* for more information.

Debug (printf) Viewer

The **Debug (printf) Viewer** window displays data streams that are transmitted sequentially through the **ITM Stimulus Port 0**. To use the **Debug (printf) Viewer**, add the following *fputc* function that uses the CMSIS function *ITM_SendChar* to your source code.

```
#include <stdio.h>
#include "stm32f4xx.h"           // Device header

struct __FILE { int handle; };
FILE __stdout;
FILE __stdin;


int fputc(int c, FILE *f) {
    ITM_SendChar(c);
    return (c);
}
```

This *fputc* function redirects any *printf* messages (as shown below) to the **Debug (printf) Viewer**.

```
int seconds;                    // Second counter
:
while (1) {
    LED_On ();                  // Switch on
    delay ();                   // Delay
    LED_Off ();                 // Switch off
    delay ();                   // Delay
    printf ("Seconds=%d\n", seconds++); // Debug output
}
```



Click on **Serial Windows** and select **Debug (printf) Viewer** from the toolbar or use the menu **View – Serial Windows – Debug (printf) Viewer** to open the window.

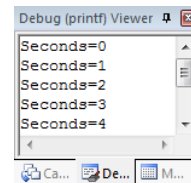


To retrieve data in the **Debug (printf) Viewer** window:

- Set **Trace Enable** in the Debug Settings Trace dialog as described above.
- Set **Timestamps Enable**.

Event Counters

Event Counters displays cumulative numbers, which show how often an event is triggered.

-  From toolbar use **Trace Windows – Event Counters**
- From menu **View – Trace – Event Counters**

Event Counters			
Name	Value	Enable	
CPICNT	698857	<input checked="" type="checkbox"/>	
EXCCNT	540	<input checked="" type="checkbox"/>	
SLEEPcnt	256	<input checked="" type="checkbox"/>	
LSUCNT	698580	<input checked="" type="checkbox"/>	
FOLDcnt	0	<input checked="" type="checkbox"/>	

To retrieve data in this window:

- Set **Trace Enable** in the Debug Settings Trace dialog as described above.
- **Enable** Event Counters as needed in the dialog

Event counters are performance indicators:

- **CPICNT**: Exception overhead cycle: indicates Flash wait states.
- **EXCCNT**: Extra Cycle per Instruction: indicates exception frequency.
- **SLEEPcnt**: Sleep Cycle: indicates the time spend in sleep mode.
- **LSUCNT**: Load Store Unit Cycle: indicates additional cycles required to execute a multi-cycle load-store instruction.
- **FOLDcnt**: Folded Instructions: indicates instructions that execute in zero cycles.

Trace with 4-Pin Output

Using the 4-Pin trace output provides all the features described in the section **Trace with Serial Wire Output** but has a higher trace communication bandwidth. In addition also instruction trace is possible.

The **ULINKpro Debug/Trace Adapter** supports this parallel 4-Pin trace output (also called ETM Trace) allows detailed insight into program execution.

NOTE

*Refer to the **μVision User's Guide, Debugging** for more information about the features described below.*

When used with ULINKpro, MDK can stream the instruction trace data for the following advanced analysis features:

- **Code Coverage** marks code that has been executed and gives statistics on code execution. This helps to identify sporadic execution errors and is frequently a requirement for software certification.
- The **Performance Analyzer** records and displays execution times for functions and program blocks. It shows the processor cycle usage and enables you to find hotspots in algorithms for optimization.
- The **Trace Data Window** shows the history of executed instructions for Cortex-M devices.

Trace with On-Chip Trace Buffer

- In some cases, trace output pins are not available on the microcontroller or target hardware. As an alternative, an on-chip **Trace Buffer** can be used that supports the **Trace Data Window**.

RTOS Debugging

When using a Real-time Operating System for an application, RTOS-aware debugging is important. MDK supports various real-time operating systems, including CMSIS-RTOS RTX.

System and Thread Viewer


The **System and Thread Viewer** window shows system state information. Open this window with the menu **Debug – OS Support –System and Thread Viewer**.

System and Thread Viewer

Property		Value						
System	Item	Value						
	Tick Timer:	1.000 mSec						
	Round Robin Timeout:	5.000 mSec						
	Default Thread Stack Size:	200						
	Thread Stack Overflow Check:	Yes						
	Thread Usage:	Available: 7, Used: 7						
Threads	ID	Name	Priority	State	Delay	Event Value	Event Mask	Stack Load
	255	os_idle_demon	0	Running				0%
	7	clock	Normal	Wait_AND		0x0000	0x0100	40%
	6	phaseD	Normal	Wait_AND		0x0000	0x0001	40%
	5	phaseC	Normal	Wait_AND		0x0000	0x0001	40%
	4	phaseB	Normal	Wait_DLY	294	0x0000	0x0001	44%
	3	phaseA	Normal	Wait_DLY	294	0x0000	0x0001	44%
	2	main	Normal	Wait_DLY				32%
	1	osTimerThread	High	Wait_MBX				40%

Event Viewer

The **Event Viewer** uses the ITM stimulus port 31 to transmit debug and thread information and requires **Trace** setup as described on page 59. It shows the thread-switching of CMSIS-RTOS RTX over time. Open this window with the menu **Debug – OS Support – Event Viewer**.

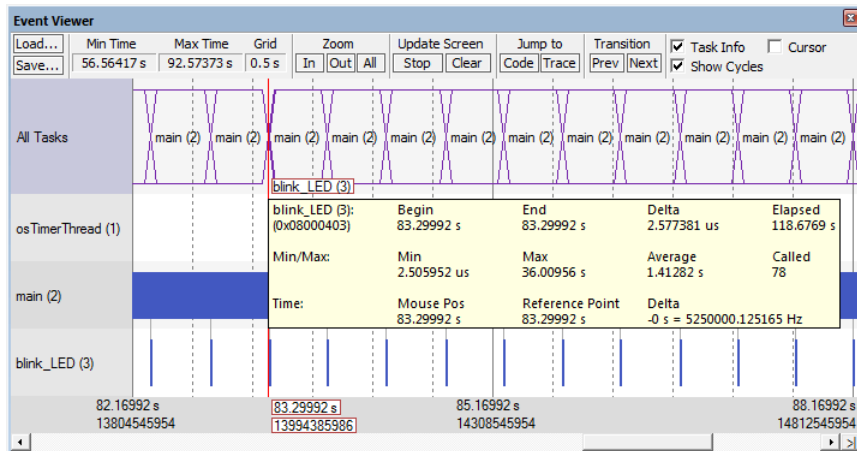

To retrieve data in the **Event Viewer** window:

- Set **Trace Enable** in the Debug Settings Trace dialog as described above.
- Enable **ITM Stimulus Port 31**.
- Set **Timestamps Enable**.

Middleware

Today's microcontroller devices offer a wide range of communication peripherals to meet many embedded design requirements. Middleware is essential to make efficient use of these complex on-chip peripherals.


NOTE

This chapter describes the middleware that is part of MDK-Professional. MDK also works with middleware available from several other vendors.

Refer to www.keil.com/dd2/pack for a list of public Software Packs.

MDK-Professional provides a Software Pack that includes royalty-free middleware with components for **TCP/IP networking**, **USB Host** and **USB Device** communication, **file system** for data storage, and a **graphical user interface**.

Refer to www.keil.com/mdk5/middleware for more information about the middleware provided as part of MDK-Professional.

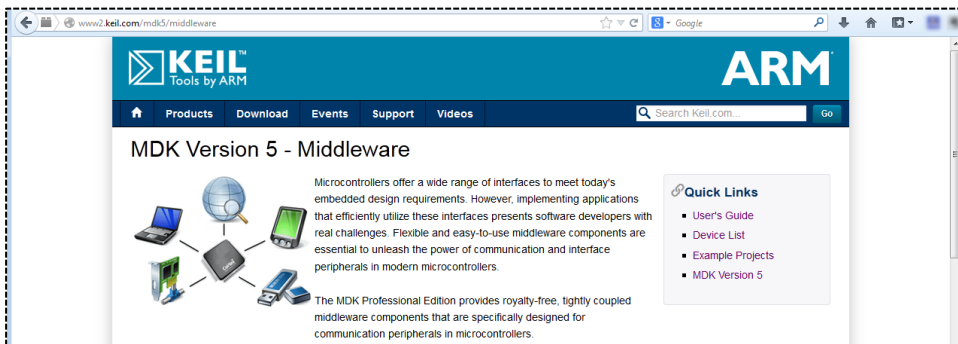

This web page provides an overview of the middleware and links to:

- **MDK-Professional Middleware User's Guide**
- **Device List** along with information about device-specific drivers
- Information about **Example Projects** with usage instructions

The middleware interfaces to the device peripherals using device-specific drivers. Refer to **Driver Components** on page 77 for more information.

Combining several components is common for a microcontroller application. The **Manage Run-Time Environment** dialog makes it easy to select and combine

MDK-Professional Middleware. It is even possible to expand the middleware component list with third-party components that are supplied as a Software Pack.

Typical examples for the usage of MDK-Professional Middleware are:


- Web server with storage capabilities: Network and File System Component
- USB memory stick: USB Device and File System Component
- Industrial control unit with display and logging functionality: Graphics, USB Host, and File System Component

Refer to the **FTP Server Example** on page 78 that exemplifies a combination of several middleware components.

The following sections give an overview for each software component of the MDK-Professional Middleware.

Network Component

The **Network Component** uses TCP/IP communication protocols and contains support for services, protocol sockets, and physical communication interfaces.

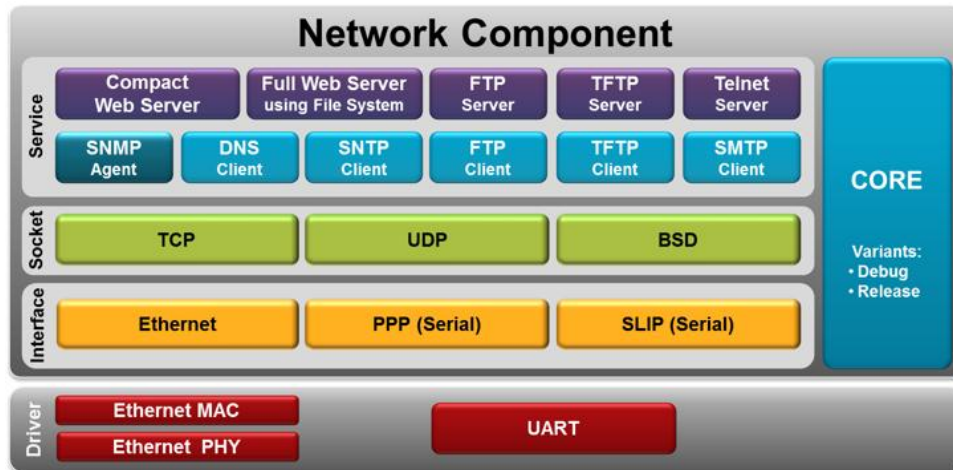

The various **services** provide program templates for common networking tasks.

- **Compact Web Server** stores web pages in ROM whereas the **Full Web Server** uses the file system for page data storage. Both servers support dynamic page content using scripting, AJAX, and SOAP technologies.
- **FTP** or **TFTP** support file transfer. FTP provides full file manipulation commands, whereas TFTP can boot load remote devices. Both support the client and server.
- **Telnet Server** provides a Command Line Interface over an IP network.
- **SNMP agent** reports device information to a network manager using the Simple Network Management Protocol.
- **DNS client** resolves domain names to the respective IP address. It makes use of a freely configurable name server.
- **SNTP client** synchronizes clocks and enables a device to get an accurate time signal over the data network.
- **SMTP** client sends status emails using the Simple Mail Transfer Protocol.

All **Services** rely on a communication socket that can be either **TCP** (a connection-oriented, reliable full-duplex protocol), **UDP** (transaction-oriented protocol for data streaming), or **BSD** (Berkeley Standard Socket interface).


The physical **interface** can be either **Ethernet** (for LAN connections) or a serial connection such as **PPP** (for a direct connection between two devices) or **SLIP** (Internet Protocol over a serial connection).

Depending on the interface, the Network Component relies on certain **Drivers** to be present for providing the device-specific hardware interface. Ethernet requires an **Ethernet MAC** and **PHY** driver, whereas serial connections (PPP/SLIP) require a **UART** or a **Modem** driver.

The **Network Core** is available in a *Debug* variant with extensive diagnostic messages and a *Release* variant that omits these diagnostics.

File System Component

The **File System Component** allows your embedded applications to create, save, read, and modify files in storage devices such as RAM, Flash memory, Memory Cards, or USB sticks.

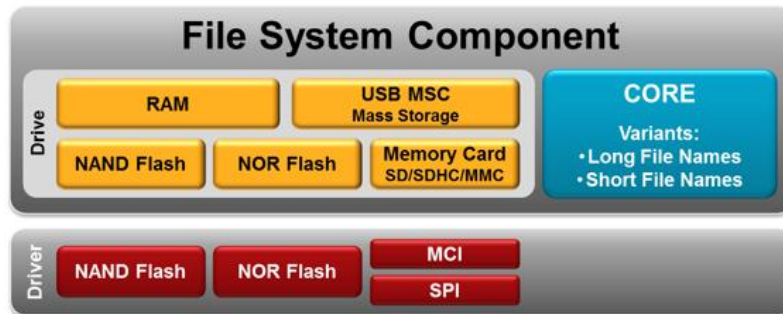


Each storage device is accessed and referenced as a **Drive**. The File System Component supports multiple drives of the same type. For example, you might have more than one memory card in your system.

The **File System Core** is thread-safe, supports simultaneous access to multiple drives, and uses a FAT system available in two file name variants: short 8.3 file names and long file names with up to 255 characters.

To access the physical media, for example NAND and NOR Flash chips, or memory cards using MCI or SPI, **Drivers** have to be present.

USB Device Component

The **USB Device component** implements a USB device interface and uses standard device driver classes that are available on most computer systems, avoiding host driver development.

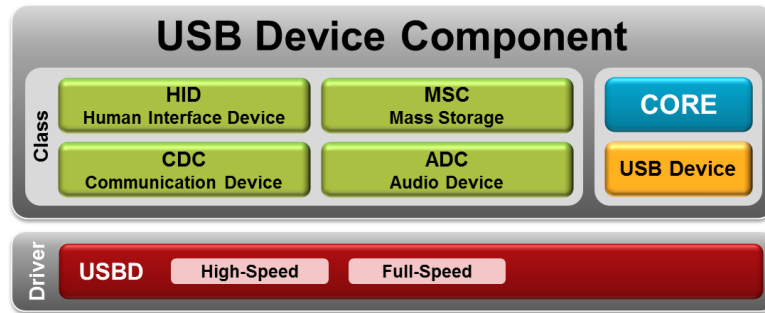


- **Human Interface Device Class (HID)** implements a keyboard, joystick or mouse. However, HID can be used for simple data exchange.
- **Mass Storage Class (MSC)** is used for file exchange (for example an USB stick).
- **Communication Device Class (CDC)** implements a virtual serial port.
- **Audio Device Class (ADC)** performs audio streaming.

Composite USB devices implement multiple device classes.

This component requires a **USB Device Driver** to be present. Depending on the application, it has to comply with the USB 1.1 (Full-Speed USB) and/or the USB 2.0 (High-Speed USB) specification.

USB Host Component

The **USB Host Component** implements a USB Host interface and supports Mass Storage and Human Interface Device classes.

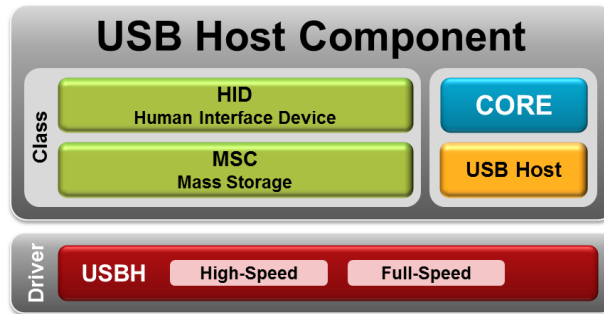


- **HID** connects to any HID class equipment.
- **MSC** connects any USB memory stick to your device.

This component requires a **USB Host Driver** to be present. Depending on the application, it must comply with the USB 1.1 (Full-Speed USB) and/or the USB 2.0 (High-Speed USB) specification.

Graphics Component

The **Graphics Component** is a comprehensive library that includes everything you need to build graphical user interfaces.

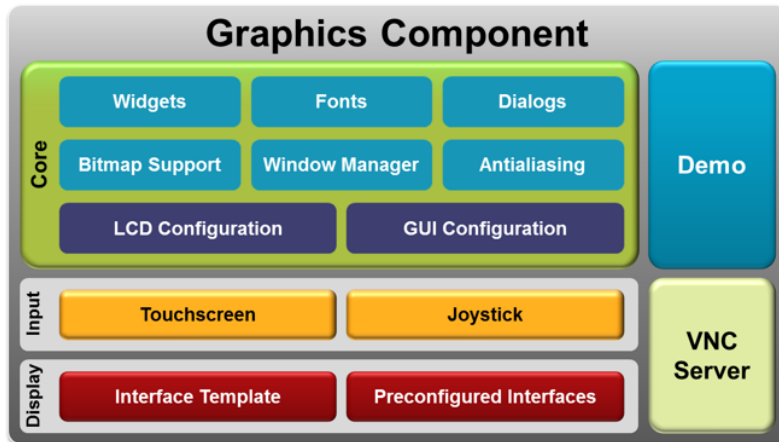

Core functions include:

- A **Window Manager** to manipulate any number of windows or dialogs
- Ready-to-use **Fonts** and window elements, called **Widgets**, and **Dialogs**
- **Bitmap Support** including JPEG and other common formats
- **Anti-Aliasing** for smooth display
- Flexible, configurable **Display** and **User Interface** parameters
- The user interface may be controlled using input devices like a **Touch Screen** or a **Joystick**.

The Graphics Component interfaces to a wide range of display controllers using **preconfigured interfaces** for popular displays or a flexible **interface template** that may be adapted to new displays.


The **VNC Server** allows remote control of your graphical user interface via TCP/IP using the **Network Component**.

Demo shows all main features and is a rich source of code snippets for the GUI

Driver Components

Device-specific **drivers** provide the interface between the middleware and the microcontroller peripherals. These drivers are not limited to the MDK-Professional Middleware and are useful for various other middleware stacks to utilize those peripherals.

The device-specific drivers are usually part of the Software Pack that supports the microcontroller device and comply with the CMSIS-Driver standard. The Device Database on www.keil.com/dd2 lists drivers included in the Software Pack for the device.

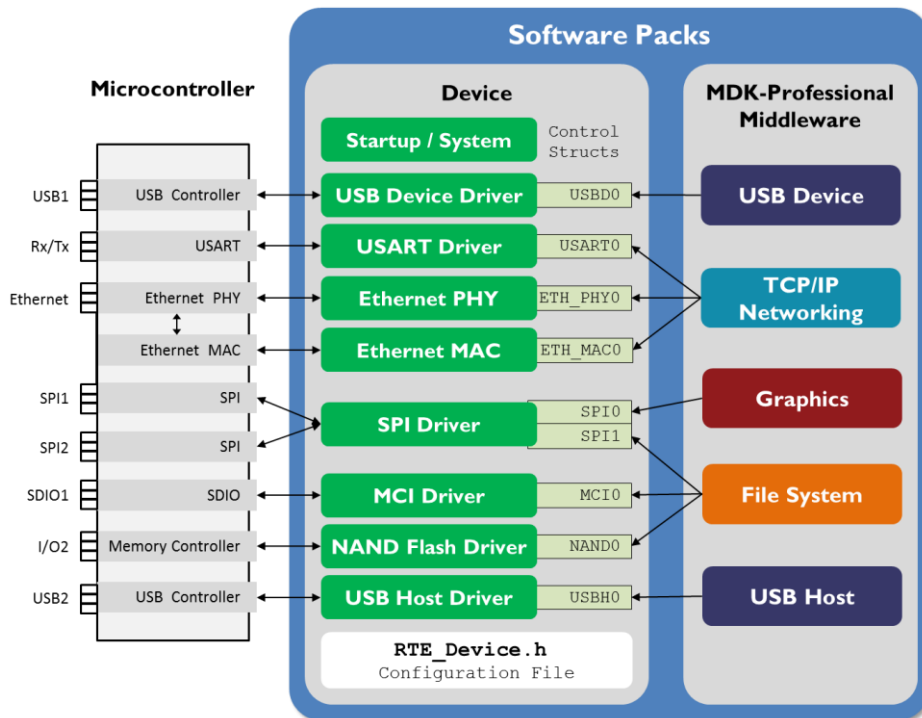

The middleware components have various configuration files that connect to these drivers. For most devices, the **RTE_Device.h** file configures the drivers to the actual pin connection of the microcontroller device.

The middleware connects to a driver instance via a *control struct*. The name of this *control struct* reflects the peripheral interface of the device. Drivers for most of the communication peripherals are part of the Software Packs that provide device support.

Use traditional C source code to implement missing drivers according the CMSIS-Driver standard. Refer to www.keil.com/cmsis/driver for detailed information about the API interface of these CMSIS drivers.


NOTE

Application Note 250: Creating a Software Pack with a New Peripheral Driver available on www.keil.com/appnotes explains how to create a new peripheral driver that does not exist in a Software Pack.

FTP Server Example


The FTP Server Example is one of the reference application samples that shows a combination of several middleware components. Refer to **Verify Installation using Example Projects** on page 10 for more information the various example projects available.

Using a FTP Server, you can exchange and manipulate files over a TCP/IP network. The Middleware documentation has more details on the FTP Server and the reference application:

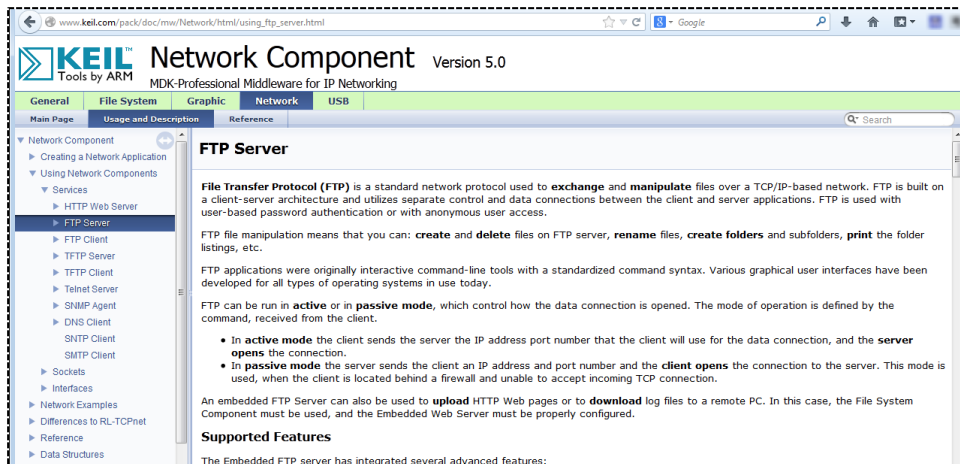

Several middleware components are the building blocks of this FTP server. A **File System** is required to handle the file manipulation. Various parts of the **Network** component build up the networking interface.

The following diagram represents the software components that are used from the MDK-Professional Middleware to create the FTP Server example.

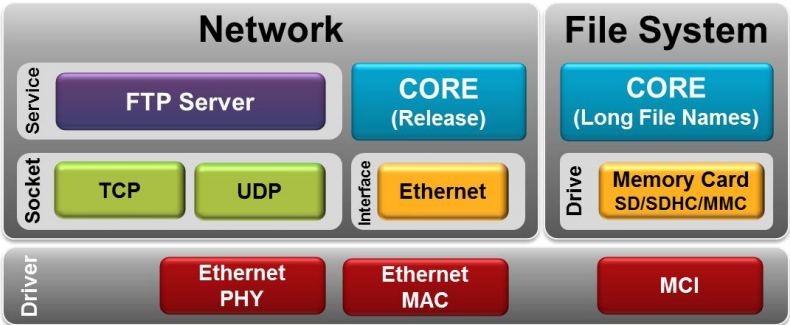

As explained before, **Drivers** provide the interface between the microcontroller peripherals and the MDK-Professional Middleware.

The FTP example selects the components shown below in the **Manage Run-Time Environment** dialog.

The screenshot shows the 'Manage Run-Time Environment' dialog with a tree view on the left and a table on the right. The tree view shows the following structure:

- Drivers
 - Ethernet (API)
 - Ethernet MAC (API)
 - Ethernet MAC
 - Ethernet PHY (API)
 - DP83848C
 - ST802RT1
- File System
- Graphics
- Network
 - CORE
 - Interface
 - ETH
 - PPP
 - SLIP
 - Service
 - DNS Client
 - FTP Client
 - FTP Server
 - Socket
 - BSD
 - TCP
 - UDP


The table on the right lists the selected components and their versions:

Software Component	Sel.	Variant	Version	Description
Unified Device Drivers				
Ethernet (API)			1.10	Ethernet MAC and PHY Driver API for Cortex-M
Ethernet MAC (API)			1.10	Ethernet MAC Driver API for Cortex-M
Ethernet MAC			1.02.0	Ethernet MAC Driver for STM32F2 Series
Ethernet PHY (API)			1.10	Ethernet PHY Driver API for Cortex-M
DP83848C			5.01.0	Ethernet PHY DP83848C Driver
ST802RT1			5.01.0	Ethernet PHY ST802RT1 Driver
File Access on various storage devices		MDK-Pro	5.0.4	File Access on various storage devices
User Interface on graphical LCD displays		MDK-Pro	5.22.1	User Interface on graphical LCD displays
IP Networking using Ethernet or Serial protocols		MDK-Pro	5.0.4	IP Networking using Ethernet or Serial protocols
Networking Core for Cortex-M (Release)		Release	5.0.4	Networking Core for Cortex-M (Release)
Connection Mechanism				Connection Mechanism
Network Ethernet Interface		1	5.0.4	Network Ethernet Interface
Network PPP over Serial Interface		Custo.	5.0.4	Network PPP over Serial Interface
Network SLIP Interface		Custo.	5.0.4	Network SLIP Interface
Network Services				Network Services
DNS Client			5.0.4	DNS Client
FTP Client			5.0.4	FTP Client
FTP Server			5.0.4	FTP Server
Network protocol				Network protocol
BSD Socket			5.0.4	BSD Socket
TCP Socket			5.0.4	TCP Socket
UDP Socket			5.0.4	UDP Socket

Using Middleware

The chapter explains how to create an application that uses MDK-Professional Middleware components. For more information on the topics in this chapter, refer to the MDK-Professional Middleware User's Guide that has sections for every component describing:

- **Example projects** outline key product features of the software components, are tested, implemented, and proven on several evaluation boards and can be used as reference application or starting point for your development.
- **Resource Requirements** explain for every software component the thread and stack resources for CMSIS-RTOS and memory footprint.
- **Create an Application** contains the required steps for using the components in an embedded application.
- **Reference** documents the files of the component and each API function.

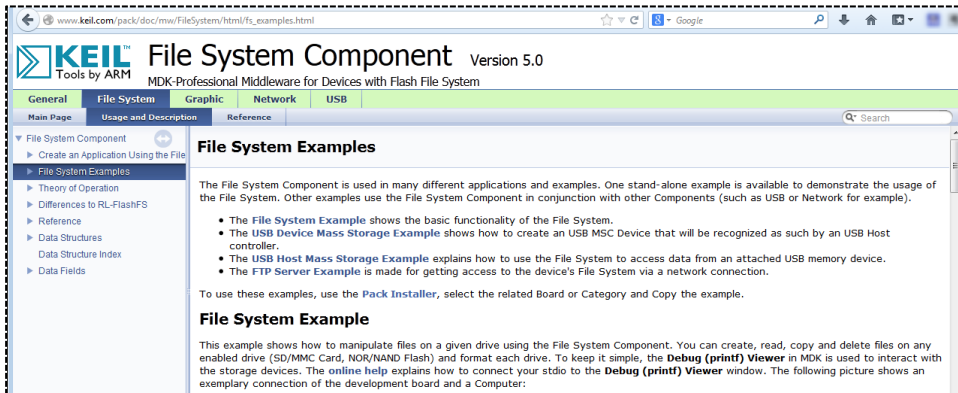

The generic steps to use the various middleware components are:

- **Add Software Components:** Select in the **Manage Run-Time Environment** dialog the software components that are required in your application.

- **Configure Middleware:** Adjust the parameters of the software components in the related configuration files.
- **Configure Drivers:** Identify and configure the peripheral interfaces that connect the middleware components with physical I/O pins of the microcontroller.
- **Adjust System Resources:** The middleware components use RTOS, memory, and stack resources and this may imply configurations, for example to CMSIS-RTOS RTX.
- **Implement Application Features:** Use the API functions of the middleware components to implement the application specific behaviour. Code templates help you create the related source code.
- **Build and Download:** After compiling and linking of the application use the steps described in the chapter **Using the Debugger** on page 52 to download the image to target hardware.
- **Verify and Debug:** Test utilities along with the debug and trace features described in the chapter **Debug Applications** on page 50 allows testing of the application.

USB HID Example

While above steps are generic and apply to all components of the MDK-Professional Middleware, the USB HID example described in the following sections shows these steps in practice. This example creates an USB HID Device application that connects a microcontroller to a host computer via USB. On the PC the utility program *HIDClient.exe* is used to control the LEDs on the development board.

The USB HID example described in the following sections uses the STM32F4-Discovery Kit populated with a STM32F407VG microcontroller. It is based on the project **Blinky with CMSIS-RTOS RTX** on page 40 along with the source files *main.c*, *LED.c*, *LED.h*, and the configuration files.

NOTE

You must adapt the code and port pin configurations when using this example on other starter kits or evaluation boards.

Add Software Components

To create the USB HID Device example, start with the project **Blinky with CMSIS-RTOS RTX** that is described on page 40.

- ◆ Use the **Manage Run-Time Environment** dialog to add application-specific software components.

From the *USB Device Component* described on page 74:

- Select **::USB:CORE** to include the basic functionality required for USB communication.
- Set **::USB:Device** to '1' to create one USB Device instance.
- Set **::USB:Device:HID** to '1' to create a HID Device Class instance. If you select multiple instances of the same class or include other device classes, you will create a Composite USB Device.

From the *Driver Components* described on page 77:

- Select from **::Drivers:USB Device (API)** an appropriate driver suitable for your application. Some devices may have specific drivers for USB Full-Speed and High-Speed whereas other microcontrollers may have a combined driver.

TIP: Click on the hyperlinks in the **Description** column to view detailed documentation for each software component.

The picture below shows the **Manage Run-Time Environment** dialog after adding these components.


Manage Run-Time Environment				
Software Component	Sel.	Variant	Version	Description
Board Support		Discovery	1.0.0	ST STM32F4 Discovery Board
CMSIS				Cortex Microcontroller Software Interface Components
CORE	<input checked="" type="checkbox"/>		3.20.0	CMSIS-CORE for Cortex-M, SC000, and SC300
DSP	<input type="checkbox"/>		1.4.1	CMSIS-DSP Library for Cortex-M, SC000, and SC300
RTOS (API)			1.0	CMSIS-RTOS API for Cortex-M, SC000, and SC300
Keil RTX	<input checked="" type="checkbox"/>		4.74.0	CMSIS-RTOS RTX implementation for Cortex-M, SC000, and SC300
Device				Startup, System Setup
GPIO	<input checked="" type="checkbox"/>		1.0.0	GPIO driver used by RTE Drivers for STM32F4 Series
Startup	<input checked="" type="checkbox"/>		1.3.0	System Startup for STMicroelectronics STM32F4 Series
ST Lib				
Drivers				Unified Device Drivers
USB Device (API)			1.10	USB Device Driver API for Cortex-M
Full-speed	<input checked="" type="checkbox"/>		1.03.0	USB Device Full-Speed Driver for STM32F4 Series
High-speed	<input type="checkbox"/>		1.03.0	USB Device High-Speed Driver for STM32F4 Series
USB Host (API)			1.10	USB Host Driver API for Cortex-M
File System		MDK-Pro	5.0.4	File Access on various storage devices
Graphics		MDK-Pro	5.22.1	User Interface on graphical LCD displays
Network		MDK-Pro	5.0.4	IP Networking using Ethernet or Serial protocols
USB		MDK-Pro	5.0.4	USB Communication with various device classes
CORE	<input checked="" type="checkbox"/>		5.0.4	USB Core for Cortex-M
Device	1		5.0.4	USB Device
Host	0		5.0.4	USB Host
Device				USB Device Classes
ADC	0		5.0.4	USB Device: Audio Device Class (ADC)
CDC	0		5.0.4	USB Device: Communication Device Class (CDC)
Custom Class	0		5.0.4	USB Device: Custom Class
HID	1		5.0.4	USB Device: Human Interface Device (HID) Class
MSC	0		5.0.4	USB Device: Mass Storage Class (MSC)
Host				USB Host Classes

Configure Middleware

Every MDK-Professional Middleware component has a set of configuration files that adjusts application specific parameters and determines the driver interfaces. These configuration files are accessed in the **Project** window in the component class group and usually have names like *Component_Config_0.c* or *Component_Config_0.h*.

Some of the settings in these files require corresponding settings in the driver and device configuration file (RTE_Device.h) that is subject of the next section.

For the USB HID Device example, there are two configuration files available: *USBD_Config_0.c* and *USBD_Config_HID_0.h*.

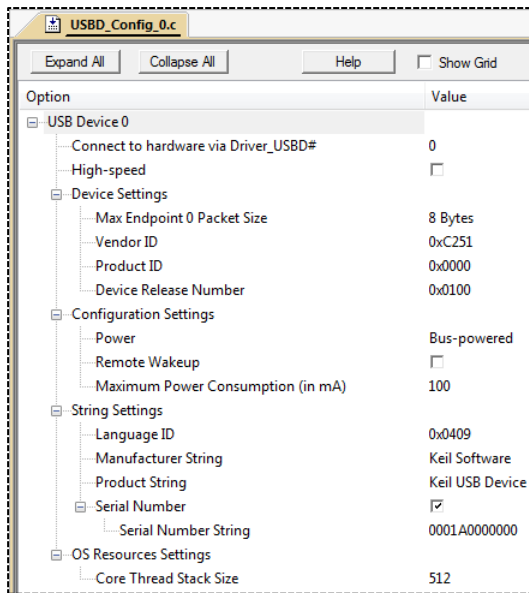

The file *USBD_Config_0.c* contains a number of important settings for the specific USB Device:

- The setting **Connect to Hardware via Driver_USBD#** specifies the *control struct* that reflects the peripheral interface, in this case, the USB Controller that is used as device interface. For microcontrollers with only one USB Controller the number is '0'. Refer to "Driver Components" on page 77 for more information.
- Select **High-Speed** if supported by the USB Controller. Using this setting requires a driver that supports USB High-Speed communication.

- Set the **Vendor ID (VID)** to a private VID. The USB Implementer's Forum (<http://www.usb.org/developers/vendor/>) provides more information on how to apply for a valid Vendor ID.
- Every device needs a unique **Product ID**. Together with the VID, it is used by the Host computer's operating system to find a driver for your device.
- The **Manufacturer** and the **Product String** can be set to identify the USB Device in PC operating systems.


The file *USBD_Config_HID_0.h* contains Device Class specific Endpoint Settings Numbers. For this example, no changes are required.

Configure Drivers

Drivers have certain properties that define attributes such as I/O pin assignments, clock configuration, or usage of DMA channels. For many devices, the **RTE_Device.h** configuration file contains these driver properties. This **RTE_Device.h** file typically requires configuration of the actual peripheral interfaces that are used by the application. Depending on the microcontroller device, you can enable different hardware peripherals, specify pin settings, or change the clock settings for your implementation.

The USB HID Device example requires the following settings:

- The STM32F4-Discovery Kit has an external 8 MHz oscillator. Under **Clock Configuration**, change the value of **High-speed External Clock** to 8000000.
- Enable **USB OTG Full-Speed**, expand this section, and make sure to select only the **Device [Driver_USBD0]**. This **Driver_USBD0** identifies the *control struct* of the peripheral interface and matches with the setting *Connect to Hardware via Driver_USBD#* in the step **Configure Middleware**.
- You may disable **Endpoints 2** and **3** to reduce the memory footprint, since the HID device requires a single Endpoint only.

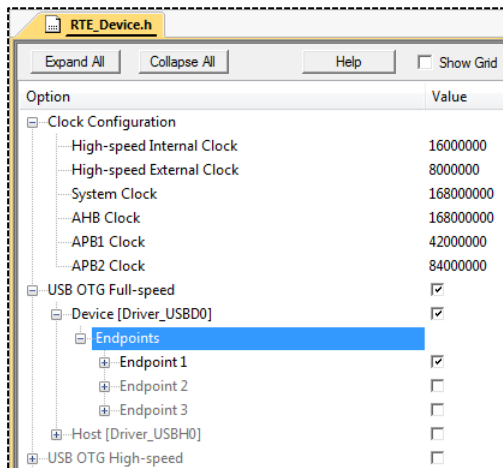


NOTE

The Clock Configuration values in the **RTE_Device.h** file are important for the middleware components and must match the settings in the **system_stm32f4xx.c** file.

Adjust System Resources

Every middleware component has certain memory and RTOS resources requirements. The section “**Resource Requirements**” in the MDK-Professional Middleware User’s Guide documents the requirements for each component.

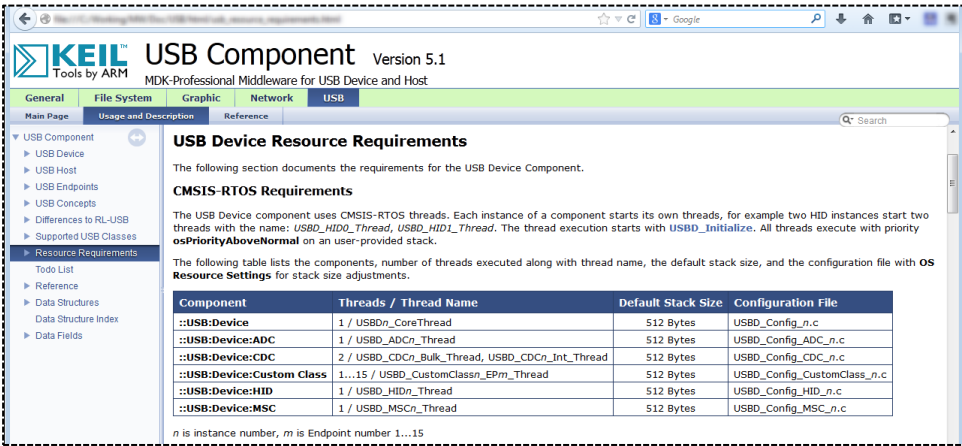

Most middleware components use the CMSIS-RTOS so it is important that the RTOS is configured to support the requirements.

For CMSIS-RTOS RTX, the *RTX_Conf_CM.c* file configures thread and stack settings. Refer to “CMSIS-RTOS RTX Configuration” on page 25 for more information.


For the USB HID Device example, the following settings apply:

- The **::USB:Device** component requires one thread (called `USBDn_CoreThread`) and a user-provided stack of 512 bytes.
- The **::USB:Device:HID** component also requires one thread (called `USBD_HIDn_Thread`) and a user-provided stack of 512 bytes.

Reflect these requirements with the settings in the *RTX_Conf_CM.c* file:

- **Number of concurrent running threads:** 6 (default) is enough to run the two threads of the USB Device component concurrently. Adjust this setting if the user application executes additional threads.
- **Default Thread stack size [bytes]:** This setting is not important as the USB component runs on user-provided stack.
- **Main Thread stack size [bytes]:** 512. Stack is required for the API calls that initialize the USB Device component.

- **Number of threads with user-provided stack size:** 2. Specifies the two threads (for `::USB:Device` and `::USB:Device:HID`) with a user-provided stack.
- **Total stack size [bytes] for threads with user-provided stack size:** 1024. Specifies the total stack size of the two threads.
- **The Timer Clock value [Hz]** 168000000. Matches the system clock.

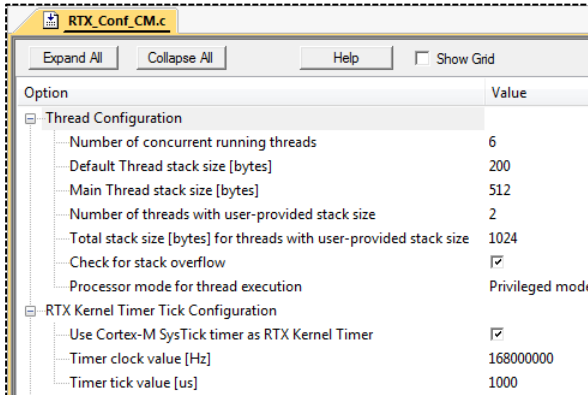


Implement Application Features

Now, create the code that implements the application specific features. This includes modifications to the files *main.c*, *LED.c*, and *LED.h* that were initially created for the project “Blinky with CMSIS-RTOS RTX”.

The middleware provides **User Code Templates** as starting point for the application software. For the USB HID Device example add the user code template `::USB:Device:HID` with the default file name *USBD_User_HID_0.c*.

- 👉 In the **Project** window, right-click **Source Group 1** and open the dialog **Add New Item to Group**. Select the `::USB:Device:HID` user code template and click **Add**.

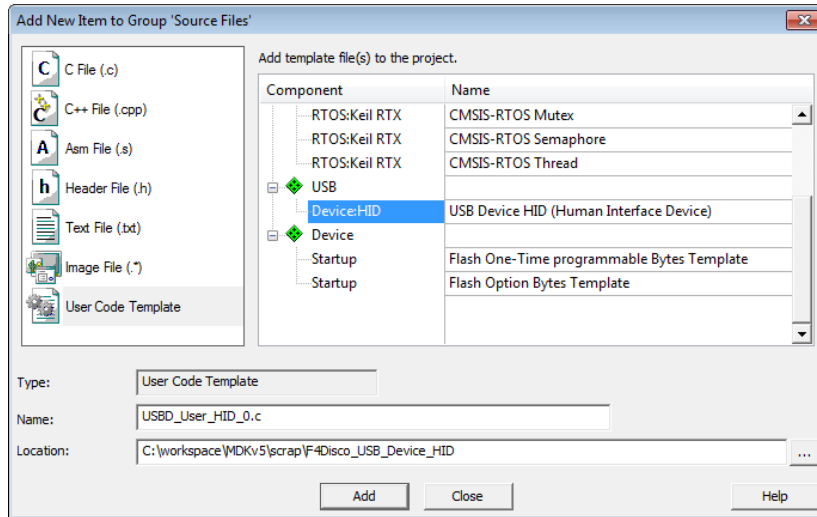

To connect the PC USB application to the microcontroller device, the function *USBD_HID0_SetReport* needs modifications. This function handles data coming from the USB Host, which are created in our example with the utility program **HIDClient.exe**.

👉 Open the file *USBD_User_HID_0.c* in the editor and modify the code as shown below. This will control the LEDs on the evaluation board.

```


:
#include "LED.h"                // access functions to LEDs
:
:
bool USBD_HID0_SetReport (uint8_t rtype, uint8_t req, uint8_t rid,
                        const uint8_t *buf, int32_t len) {
    uint8_t i;

    switch (rtype) {
        case HID_REPORT_OUTPUT:
            for (i = 0; i < 4; i++) {
                if (*buf & (1 << i)) LED_On (i);
                else LED_Off (i);
            }
            break;

        case HID_REPORT_FEATURE:
            break;
    }
    return true;
}
:
:

```

Expand the functions in the file *LED.c* to control several LEDs on the STM32F4-Discovery Kit and remove the thread that blinks the LED as it is no longer required.

 Open the file *LED.c* in the editor and modify the code as shown below.


```
/*-----
 * File LED.c
 *-----*/
#include "stm32f4xx.h"           // Device header
#include "LED.h"                 // Initialize and set GPIO Port

// Initialize GPIO Port
void LED_Initialize (void) {
    RCC->AHB1ENR |= RCC_AHB1ENR_GPIODEN;    // Enable Port D clock
    GPIOD->MODER |= GPIO_MODER_MODER12_0;    // Port D.12 output
    GPIOD->MODER |= GPIO_MODER_MODER13_0;    // Port D.13 output
    GPIOD->MODER |= GPIO_MODER_MODER14_0;    // Port D.14 output
    GPIOD->MODER |= GPIO_MODER_MODER15_0;    // Port D.15 output
}


const int Pin_LED[] = { 12, 13, 14, 15 }; // LED Port mapping

// LED_On: Turn on requested LED
// Parameter: num - LED number
void LED_On (unsigned int num) {
    GPIOD->BSRRLL = (1<<Pin_LED[num]);      // LED on: set Port
}

// LED_Off: Turns off requested LED
// Parameter: num - LED number
void LED_Off (unsigned int num) {
    GPIOD->BSRRH = (1<<Pin_LED[num]);        // LED off: clear Port
}
```

 Open the file *LED.h* in the editor and modify it to coincide with the changes to *LED.c*. The functions *LED_On* and *LED_Off* now have a parameter.

```
/*-----
 * File LED.h
 *-----*/
void LED_Initialize ( void );
void LED_On ( unsigned int num );
void LED_Off ( unsigned int num );
```

 Change the file *main.c* as shown below. Instead of starting the thread that blinks the LED, add code to initialize and start the USB Device Component. Refer to the middleware user's guide for further details.

```
/*-----
 * File main.c
 *-----*/
#include "cmsis_os.h"           // CMSIS-RTOS
#include "rl_usb.h"             // Middleware USB Component
#include "LED.h"                // Initialize and set GPIO Port
```

```

/*
 * main: initialize and start the system
 */
int main (void) {
    osKernelInitialize ();          // Initialize CMSIS-RTOS

    // initialize peripherals here
    LED_Initialize ();             // Initialize LEDs

    USBD_Initialize (0);           // USB Device 0 Initialization
    USBD_Connect (0);              // USB Device 0 Connect

    osKernelStart ();              // Start thread execution
    while (1);
}

```

Build and Download

Build the project and download it to the target as explained in chapters **Create Applications** on page 39 and **Using the Debugger** on page 50.


Verify and Debug

Connect the development board to your PC using another USB cable. This provides the connection to the USB device peripheral of the microcontroller. Once the board is connected, a notification appears that indicates the installation of the device driver for the USB HID Device.


The utility program *HIDClient.exe* that is part of MDK enables testing of the connection between the PC and the development board. This utility is located the MDK installation folder `.\Keil\ARM\Utilities\HID_Client\Release`. To test the functionality of the USB HID device run the *HIDClient.exe* utility and follow these steps:

- Select the Device to establish the communication channel. In our example, it is “**Keil USB Device**”.
- Test the application by changing the **Outputs (LEDs)** checkboxes. The respective LEDs will switch accordingly on the development board.

If you are having problems connecting to the development board, you can use the debugger to find the root cause.

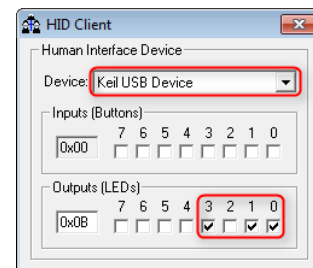

 From the toolbar, select **Start/Stop Debug Session**.

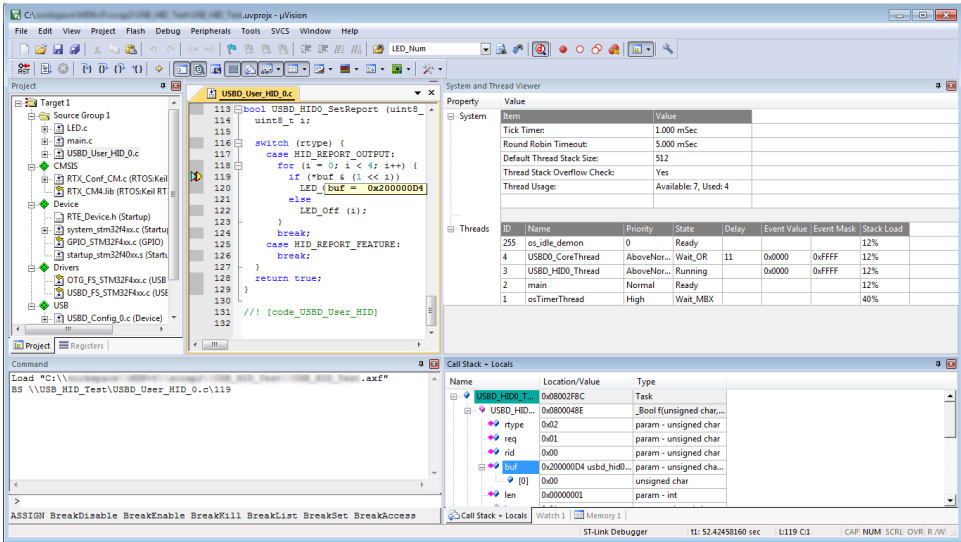

Use debug windows to narrow down the problem. For example, use the **Call Stack + Locals** window to examine the value of local variables in the `USB_User_HID_0.c` file. Breakpoints help you to stop at certain lines of code so that you can examine the variable contents.

NOTE

Debugging of communication protocols can be difficult. When starting the debugger or using breakpoints, communication protocol timeouts may exceed making it hard to debug the application. Use therefore breakpoints carefully.

In case that the USB communication fails, disconnect USB, reset your target hardware, run the application and reconnect it to the PC.

Index

A

Add New Item to Group.....	45, 87
Adding Software Components	19
Applications	
Add Source Code	44
Build.....	47
Configure Device Clock Frequency	42
Create	39
Customize CMSIS-RTOS RTX.....	43
Debug	51
Setup the Project.....	40

B

Breakpoints	
Access	55
Command	55
Execution.....	55
Build Output.....	12, 13, 47, 52

C

CMSIS.....	17
CORE	18
DSP	37
RTX.....	21
RTX API	27
User Code Template	28
cmsis_os.h.....	23, 24, 44
CMSIS-DAP	51
Code Coverage	66
Compare memory areas.....	57
CoreSight	59

D

Debug	
Breakpoints	55
Breakpoints Window.....	55
Command Window	54
Connection	51
Disassembly Window	54
Memory Window	57
Peripheral Registers.....	58
Register Window.....	57
Stack and Locals Window	56
Start Session.....	53
System Viewer Window.....	58
Toolbar.....	53
Using Debugger.....	52

Watch Window	56
Debug (printf) Viewer.....	64
Debug tab.....	12, 52, 60
Device Database.....	9
device.h	18
Documentation	16

E

Example Projects	10, 69, 78
------------------------	------------

F

File System	
FAT.....	73
Flash.....	73

G

Graphics Component	
Anti-Aliasing.....	76
Bitmap Support	76
Demo.....	76
Dialogs	76
Display	76
Fonts.....	76
Joystick	76
Touch Screen.....	76
User Interface.....	76
VNC Server.....	76
Widgets	76
Window Manager.....	76

H

HIDClient.exe	90
---------------------	----

I

Infinite Loop Design	21
----------------------------	----

L

Legacy Support	6
----------------------	---

M

MDK	
Core.....	6
Core Install.....	8
Editions	7
Installation Requirements	8
Introduction.....	6
License Types	7

Middleware	69
Add Software Components.....	80, 81
Adjust System Resources	80, 86
Configure.....	80, 83
Configure Drivers.....	80, 85
Create an Application	80
Debug	81, 90
Drivers	77
Example projects	80
File System Component	73
FTP Server Example	78
Graphics Component.....	76
Implement Application Features	81, 87
Network Component	71
Resource Requirements	80
USB Device Component	74
USB HID Example.....	81
USB Host Component	75
Using	80

N

Network Component	
BSD.....	71
DNS Client.....	71
Ethernet	72
FTP.....	71
Modem	72
PPP	72
SLIP	72
SMTP Client.....	71
SNMP Agent	71
SNTP Client	71
TCP	71
Telnet Server	71
TFTP	71
UART	72
UDP.....	71
Web Server.....	71

O

Options for Target	12, 52, 60
osObjectsExternal	24

P

Pack Installer.....	9
Performance Analyzer	66

R

RTE_Device.h.....	77, 83, 85
RTOS	
Mail Queue Management	36

Memory Pool Management	35
Message Queue Management.....	35
Mutex Management	33
Preemptive Thread Switching	31
Semaphore Management	33
Signal Management.....	32
Single Thread Program.....	30
Thread Management.....	29
Timer Management	31
RTOS Debugging.....	67
Event Viewer.....	68
ITM Stimulus	68
System and Thread Viewer	67
RTOS Design	22
RTX	
Configuration	25
Using RTX	22
RTX_Conf_CM.c.....	23, 86

S

Software Packs	6
Install.....	9
Use	14
Verify Installation	10
Start/Stop Debug Session.....	13, 53, 91
Support.....	16
system_<device>.c.....	18, 27, 42

T

Trace	59
4-Pin Trace Output.....	59, 66
Data Watchpoints	59
Debug (printf) Viewer.....	64
ETB	59
Event Counters	65
Exception Trace	59
fputc function	64
Instruction Trace	59
Instrumented Trace.....	59
ITM Stimulus	61, 64
ITM_SendChar.....	64
Logic Analyzer.....	63
MTB.....	59
SWO.....	59, 60
TPIU.....	59
Trace Buffer	59
Trace Buffer	66
Trace Data Window	66
Trace Exceptions	62

U

ULINK	51	Composite Device	74
ULINKpro	61, 66	HID	74
USB Device		MSC	74
ADC	74	USB Host	
CDC	74	HID	75
		MSC	75
		User Code Templates	44, 87