

# Modbus RTU 2CH relay module RS485/TTL UART 2CH IN 2CH OUT

## 1, Overview


LC 2 channel Modbus relay module equipped with mature and stable 8-bit MCU and RS485 level communication chip, adopt standard MODBUS RTU format RS485 communication protocol, It can realize 2 way input signal detection and 2 way relay output, can be used for digital detection or power control occasions.

## 2, Function


1. Onboard mature and stable 8-bit MCU and RS485 level communication chip.
2. Communication protocol: support standard Modbus RTU protocol
3. Communication Interface: support RS485/TTL UART interface
4. Communication baud rate: 4800/9600/19200, default 9600bps, Support power-down save.
5. Optocoupler input signal range, DC3.3-30V (this input can't use relay control)
6. Output signal: relay switch signal, support manual control, flash OFF/ON mode, The delay base is 0.1S, the maximum allowable flash OFF/ON time is  $0xFFFF * 0.1S = 65535 * 0.1S = 6553.5S$
7. Device address: range: 1-255, default 255, Support power-down save
8. Baud rate/optocoupler input status/relay status/device address can be read by software/commands.
9. On-board 2 way 5V, 10A/250V AC 10A/30V DC relay, can continuously sucking 100,000 times, it has diode flow protection for short response times.
10. On-board relay switch indicator.
11. Supply voltage: DC7-24V, with input anti-reverse protection

## 3, Introduced the hardware and instructions

### 1. board size:

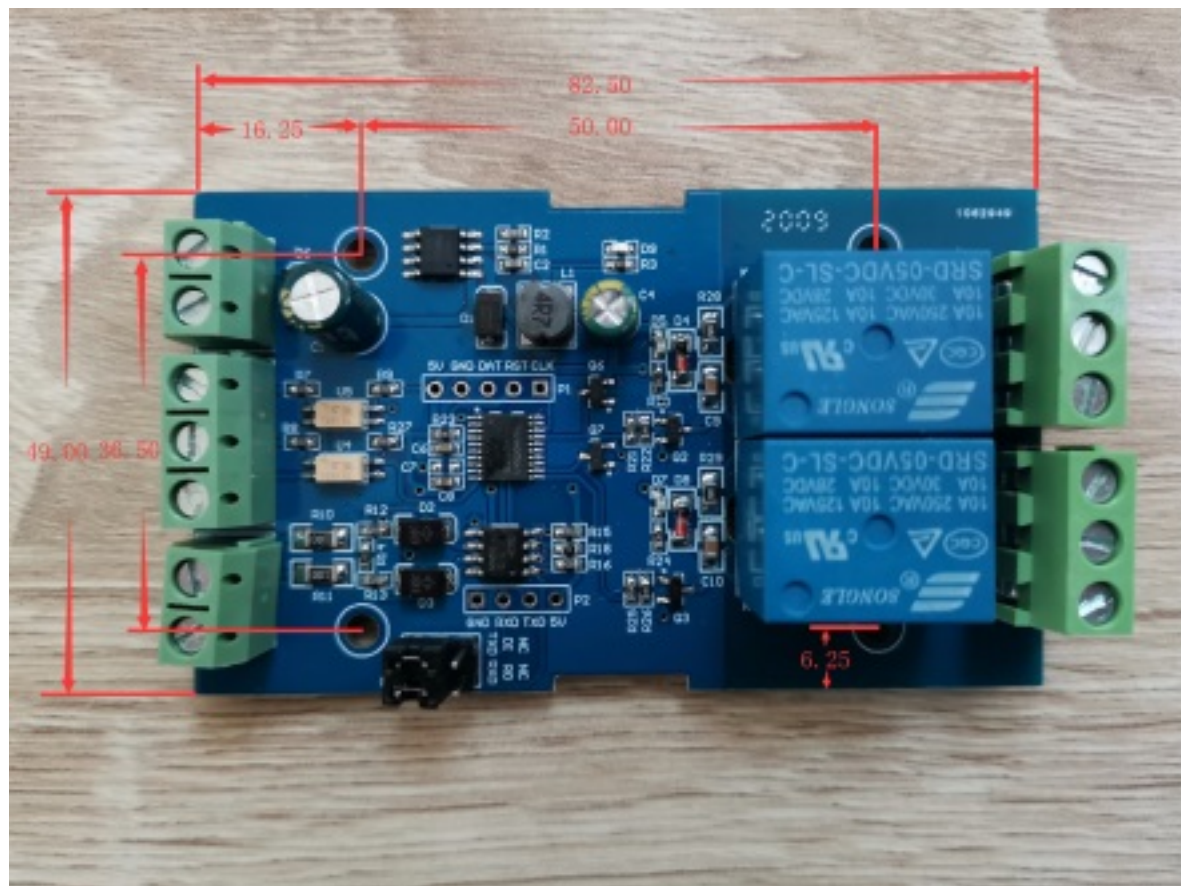

**2.interface description.**

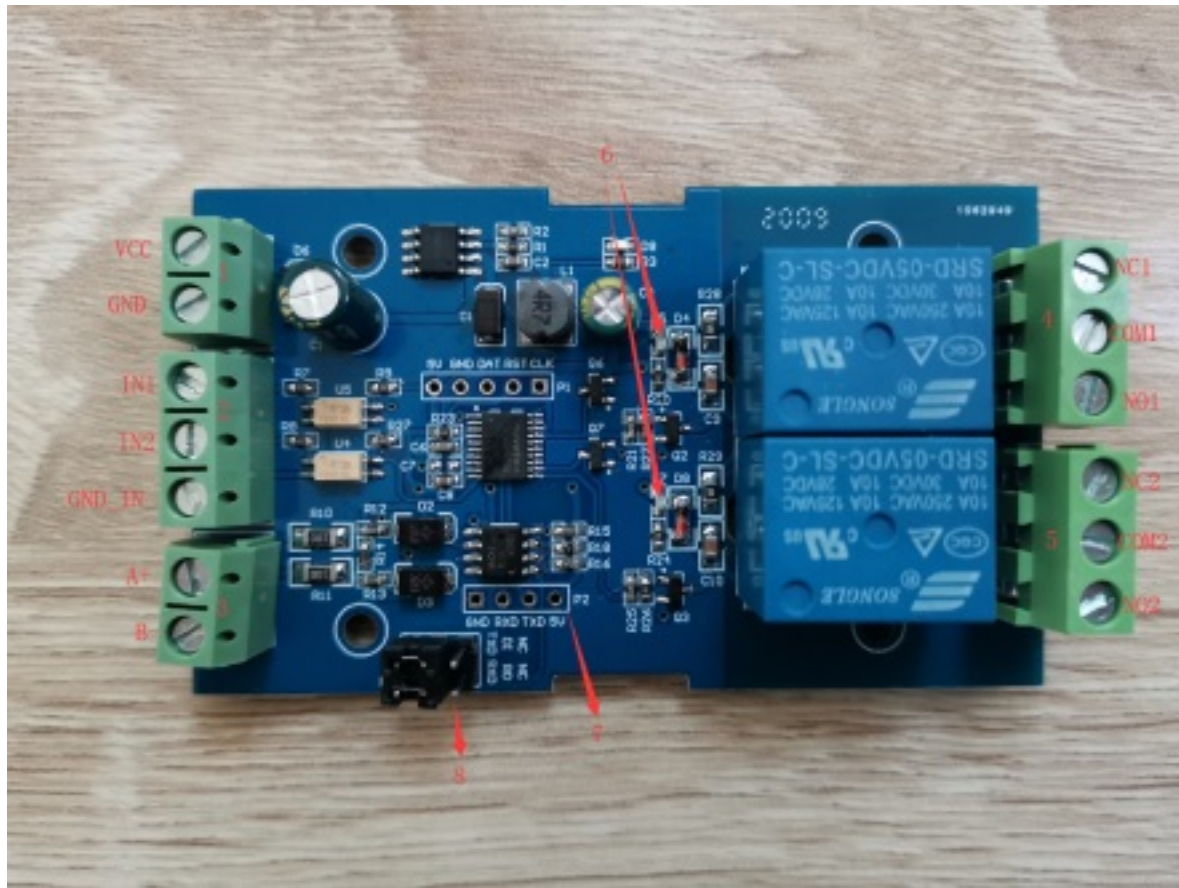

1,VCC, GND : DC7-24V power input

2, DC3.3-30V Optocoupler signal input:

IN1 : channel 1 positive

IN2 : channel 2 positive

GND\_IN : common terminal negative

3, A+, B- : RS485 communication Interface

4,relay 1 switch signal output:

NC1 : Normally closed end

COM 1: Common end

NO1 : normally opened end

5,Relay 2 switch signal output:

NC2 : Normally closed end

COM 2: Common end

NO2 : Normally opened end

6, Relay indicator: Lights up when the relay ON.

7, GND, RXD, TXD: TTL level UART communication Interface, GND, RXD, TXD separately connect to the external control terminal GND, TXD, RXD; support connect 3.3V/5v external TTL serial ports .

8. RS485 and TTL serial ports select , when use RS485 communicating, DI connect to TXD , RO connect to RXD: DI and RO connect NC terminal when use TTL communicating.

### **3, Modbus RTU introduction of instruction**

Modbus device through receive from external control terminal (like Host computer/MCU ) Modbus RTU instruction to perform related operations, one frame instruction generally consists of device address, function code, register address, register data, and check code, frame length is related to function code. Each frame data's first byte is the device address. can set range on 1-255 default 255 (scilicet 0xFF), the last 2 byte is CRC check code.

Suppose the device address is 255, the commonly used Modbus RTU instructions are as follows:

#### **(2) 1, Open no.1 relay (manual mode)**

send : FF 05 00 00 FF 00 99 E4

return : FF 05 00 00 FF 00 99 E4

remarks: (1) the 3--4th byte of the transmitted frame represents the relay address, the relay 1-relay 8 address are respectively 0x0000, 0x0001, 0x0002, 0x0003, 0x0004, 0x0005, 0x0006, 0x0007 (2) the 5--6th byte of the transmitted frame represents Data, 0xFF00 represent turn on relay, 0x0000 represents turn off relay

#### **2, Turn off the relay No. 1 (manual mode)**

send : FF 05 00 00 00 00 D8 14

return : FF 05 00 00 00 00 D8 14

#### **3, Turn on the relay No. 2 (manual mode)**

send : FF 05 00 01 FF 00 C8 24

Return : FF 05 00 01 FF 00 C8 24

#### **4, Turn off the relay no.2 (manual mode )**

send : FF 05 00 01 00 00 89 D4

return : FF 05 00 01 00 00 89 D4

#### **5, Turn on all relay**

send : FF 0F 00 00 00 08 01 FF 30 1D

return : FF 0F 00 00 00 08 41 D3

#### **6, Turn off all relay**

send :FF 0F 00 00 00 08 01 00 70 5D

return :FF 0F 00 00 00 08 41 D3

#### **7,Set the device address to 1**

send :00 10 00 00 00 01 02 00 01 6A 00

return :00 10 00 00 00 01 02 00 01 6A 00

remark:The 9th byte of the transmitted frame, 0x01 is the written device address.

#### **8, Set the device address to 255**

send :00 10 00 00 00 01 02 00 FF EB 80

return :00 10 00 00 00 01 02 00 FF EB 80

remark:The 9th byte of the transmitted frame, 0xFF is the written device address.

#### **9,Read device address**

send:00 03 00 00 00 01 85 DB

return :00 03 02 00 FF C5 C4

remarks:The 5th byte of the Return frame, 0xFF is the read device address

#### **10, read relay state**

send :FF 01 00 00 00 08 28 12

return :FF 01 01 01 A1 A0

remarks:The 4th byte of the Return frame, Bit0--Bit7 of 0x01 representing relay 1-relay 8, 0 is turn off .1 is turn on.

#### **11, Read optocoupler input status**

send : FF 02 00 00 00 08 6C 12

return : FF 02 01 01 51 A0

remarks:The 4th byte of the Return frame, Bit0--Bit7 of 0x01 represent optocoupler1-optocoupler 8 input signal ,0 represent low level ,1 represent high level

#### **12, Set the baud rate to 4800**

send : FF 10 03 E9 00 01 02 00 02 4A 0C

return :FF 10 03 E9 00 01 C5 A7

remarks: the 9th byte of the transmitted frame is the baud rate setting value ,0x02, 0x03, x04 represents 4800, 9600, 19200

#### **13, Set the baud rate to 9600**

send : FF 10 03 E9 00 01 02 00 03 8B CC

return : FF 10 03 E9 00 01 C5 A7

#### **14,Set the baud rate to 9600**

send :FF 10 03 E9 00 01 02 00 04 CA 0E

return : FF 10 03 E9 00 01 C5 A7

#### 15,Read the baud rate

send : FF 03 03 E8 00 01 11 A4

return : FF 03 02 00 04 90 53

remarks :The 5th byte of the Return frame represent baud rate, 0x02, 0x03, x04 represents 4800,9600,19200.

#### (2) 16,Turn on no.1 relay (flash ON mode )

send :FF 10 00 03 00 02 04 00 04 00 14 C5 9F

return :FF 10 00 03 00 02 A4 16

remarks:(1)the 3-4th byte of the transmitted frame is represent relay address,relay1-relay8's address separately is 0x0003,0x0008,0x000D,0x0012,0x0017,0x001C,0x0021,0x0026

(2)The 10th-11th byte of the transmitted frame represents the delay setting value, and the delay base is 0.1S, so the delay time is  $0x0014 \times 0.1 = 20 \times 0.1S = 2S$ , and the relay automatically turns off after turned on 2S

#### (2) 17. Turn off no.1 relay(flash OFF mode)

send : FF 10 00 03 00 02 04 00 02 00 1E A5 99

return : FF 10 00 03 00 02 A4 16

remarks:(1)the 3-4th byte of the transmitted frame is represent relay address,relay1-relay8's address separately is 0x0003,0x0008,0x000D,0x0012,0x0017,0x001C,0x0021,0x0026.

(2)The 10th-11th byte of the transmitted frame represents the delay setting value, and the delay base is 0.1S, so the delay time is  $0x001E \times 0.1 = 30 \times 0.1S = 3S$ ,and the relay automatically turns off after turned on 3S

#### 4,Simple instructions


Modbus relay module can via RS485/TTL UART interface received from host computer /MCU's Modbus RTU command to perform related operations.The following is an example of using the host computer software via the RS485 interface to open relay 1 (manual mode),suppose device address for 255.baud rate is 9600,Then steps of usage as follows:

1, VCC, GND: Connect to the power

2, A+, B- : Connect to A+ and B- of external device

3,turn on host computer software ModbusRTU configuration Tool,choose correct port number, baud rate is 9600.default address is 255,click open serial ports4,

then click "JD1 ON" button can turn on relay 1 ,meanwhile indicator of relay 1 lights up as below:

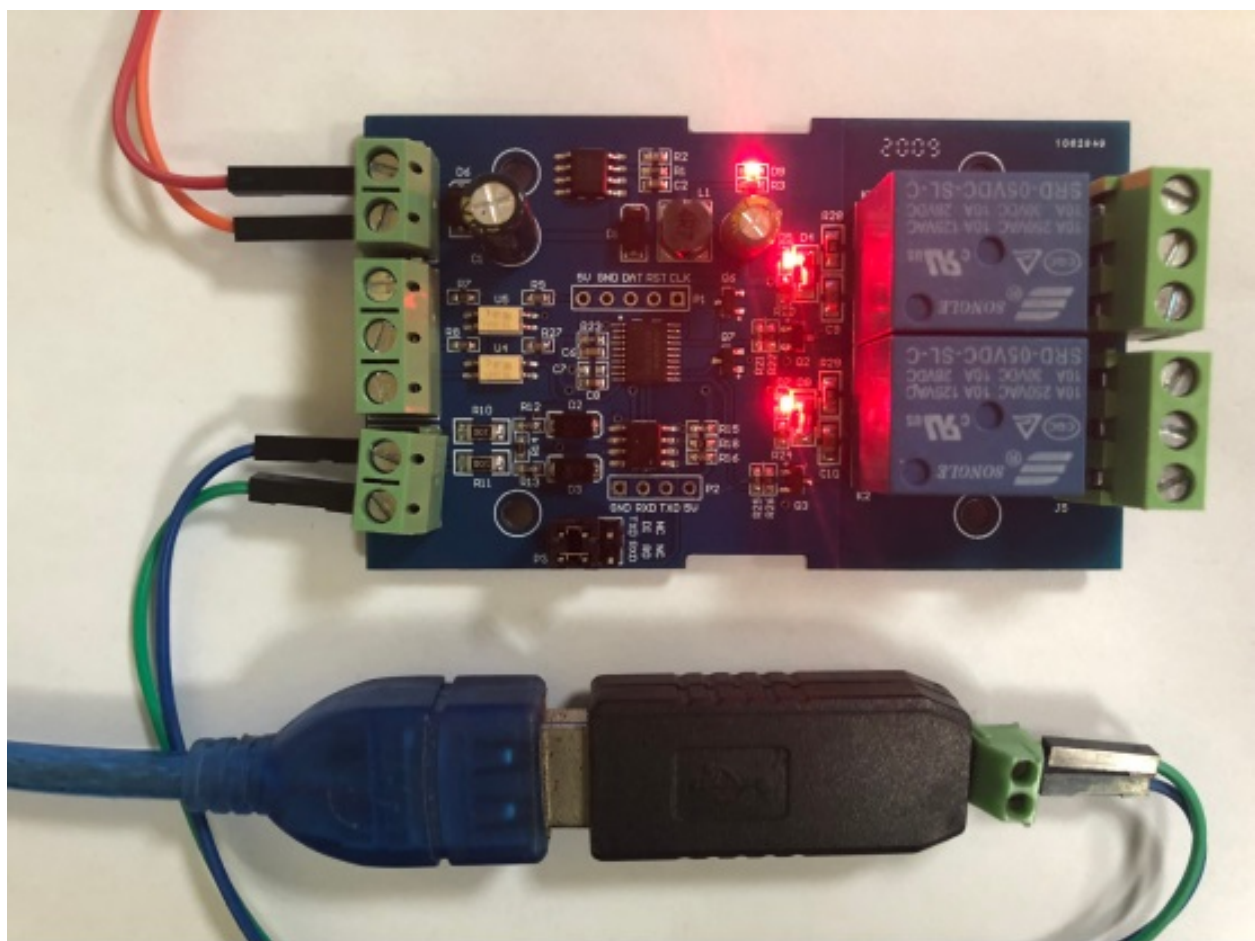



## 5,How to generate check code

Modbus RTU command are send through upper PC software (like:ModbusRTU configuration Tool ),CRC check code is auto generated, if want use serial debugging software (like SSCOM )to test Modbus relay module then need manually generated

CRC check code put on the end of transmitted frame, such as turn on the first relay (manual mode)

1.Turn on/off of relay (manual mode) transmitted frame composition :

device address (1Byte) +function code (1Byte) + register address (2Byte) +register data (2Byte) +CRC check code (2Byte)

2, Suppose the device address is 0xFF, Then the first 6 bytes of the transmitted frame are FF 05 00 00 FF 00

3.Use the CRC check tool to check the 6 bytes

<http://www.ip33.com/crc.html>

4,Exchange checksum calculation result E499 high and low byte position then get CRC check code 99E4,and complete transmission frame:FF 05 00 00 FF 00 99 E4

5,Through serial port debugging software SSCOM V5.13.1 use the transmission frame send to modbus relay module can open first way relay (manual mode),as bellow:

**CRC ( 循环冗余校验 ) 在线计算**

☒Hex   ☐Ascii

需要校验的数据 :

输入的数据为16进制, 例如 : 31 32 33 34

参数模型 NAME :

宽度 WIDTH :

多项式 POLY ( Hex ) :  例如 : 3D65

初始值 INIT ( Hex ) :  例如 : FFFF

结果异或值 XOROUT ( Hex ) :  例如 : 0000

☒输入数据反转 ( REFIN )   ☒输出数据反转 ( REFOUT )

校验计算结果 ( Hex ) :

高位在左低位在右, 使用时请注意高低位顺序!!!





Please refer our data if you need more detailed instructions and usage of way in host computer control modbus relay

