

# Bluetooth® Low Energy Application Developer's Guide



# Contents

|  |           |
|--|-----------|
| <b>Chapter 1 Introduction.....</b>   | <b>6</b>  |
| <b>Chapter 2 Prerequisites.....</b>  | <b>7</b>  |
| 2.1 RTOS task queues and events.....   | 7         |
| 2.2 GATT database.....   | 7         |
| 2.3 Non-Volatile Memory (NVM) access .....                                       | 8         |
| <b>Chapter 3 Host Stack Initialization and APIs.....</b>                         | <b>10</b> |
| 3.1 Host Task initialization.....  | 10        |
| 3.2 Main function to initialize the host.....                                    | 10        |
| 3.3 HCI entry and exit points.....   | 11        |
| 3.4 Host Stack libraries and API availability.....                               | 11        |
| 3.5 Synchronous and asynchronous functions.....                                  | 12        |
| 3.6 Radio TX Power level.....  | 12        |
| 3.6.1 TX Power Level to +5 dBm (LDO-HF Bumped Up)(KW34/KW35/KW36 platforms)..... | 12        |
| <b>Chapter 4 Generic Access Profile (GAP) Layer.....</b>                         | <b>14</b> |
| 4.1 Central setup.....   | 15        |
| 4.1.1 Scanning.....  | 15        |
| 4.1.2 Initiating and closing a connection.....                                   | 16        |
| 4.1.3 Pairing and bonding.....   | 18        |
| 4.2 Peripheral setup.....  | 21        |
| 4.2.1 Advertising.....   | 21        |
| 4.2.2 Pairing and bonding.....   | 23        |
| 4.3 LE data packet length extension.....   | 25        |
| 4.4 Privacy feature.....   | 26        |
| 4.4.1 Introduction.....  | 26        |
| 4.4.1.1 Resolvable private addresses.....  | 27        |
| 4.4.1.2 Non-resolvable private addresses.....                                    | 27        |
| 4.4.1.3 Multiple identity resolving keys.....                                    | 27        |
| 4.4.2 Host privacy.....  | 27        |
| 4.4.3 Controller privacy.....  | 28        |
| 4.4.3.1 Privacy mode.....  | 28        |
| 4.4.3.2 Scanning and initiating.....   | 29        |
| 4.4.3.3 Advertising.....   | 29        |
| 4.4.3.4 Connected.....   | 29        |
| 4.5 Setting PHY mode in a connection.....  | 29        |
| 4.6 Bonded devices data management.....  | 30        |
| 4.7 Controller enhanced notifications.....                                       | 32        |
| 4.8 Extended Advertising (KW37).....   | 35        |
| 4.8.1 Peripheral Setup.....  | 36        |
| 4.8.2 Central setup.....   | 39        |
| 4.9 Periodic Advertising (KW37).....   | 40        |
| 4.9.1 Peripheral Setup.....  | 41        |
| 4.9.2 Central Setup.....   | 41        |
| <b>Chapter 5 Generic Attribute Profile (GATT) Layer.....</b>                     | <b>43</b> |

|   |           |
|---|-----------|
| 5.1 Client APIs.....                                      | 43        |
| 5.1.1 Installing client callbacks.....                    | 43        |
| 5.1.1.1 Client procedure callback.....                    | 43        |
| 5.1.1.2 Notification and indication callbacks.....        | 44        |
| 5.1.2 MTU exchange.....                                   | 45        |
| 5.1.3 Service and characteristic discovery.....           | 46        |
| 5.1.3.1 Discover all primary services.....                | 46        |
| 5.1.3.2 Discover primary services by UUID.....            | 47        |
| 5.1.3.3 Discover included services.....                   | 49        |
| 5.1.3.4 Discover all characteristics of a service.....    | 50        |
| 5.1.3.5 Discover characteristics by UUID.....             | 52        |
| 5.1.3.6 Discover characteristic descriptors.....          | 53        |
| 5.1.4 Reading and writing characteristics.....            | 54        |
| 5.1.4.1 Characteristic value read procedure.....          | 54        |
| 5.1.4.2 Characteristic read by UUID procedure.....        | 56        |
| 5.1.4.3 Characteristic read multiple procedure.....       | 57        |
| 5.1.4.4 Characteristic write procedure.....               | 59        |
| 5.1.5 Reading and writing characteristic descriptors..... | 61        |
| 5.1.6 Resetting procedures.....                           | 63        |
| 5.2 Server APIs.....                                      | 63        |
| 5.2.1 Server callback.....                                | 63        |
| 5.2.2 Sending notifications and indications.....          | 64        |
| 5.2.3 Attribute write notifications.....                  | 64        |
| <b>Chapter 6 GATT database application interface.....</b> | <b>66</b> |
| 6.1 Writing and reading attributes.....                   | 66        |
| 6.2 Finding attribute handles.....                        | 66        |
| <b>Chapter 7 Creating GATT database.....</b>              | <b>68</b> |
| 7.1 Creating static GATT database.....                    | 68        |
| 7.1.1 Declaring custom 128-bit UUIDs.....                 | 68        |
| 7.1.2 Declaring a service.....                            | 69        |
| 7.1.2.1 Service declaration macros.....                   | 69        |
| 7.1.2.2 Include declaration macros.....                   | 69        |
| 7.1.3 Declaring a characteristic.....                     | 70        |
| 7.1.3.1 Characteristic declaration macros.....            | 70        |
| 7.1.3.2 Declaring characteristic values.....              | 70        |
| 7.1.3.3 Declaring characteristic descriptors.....         | 71        |
| 7.1.4 Static GATT database definition examples.....       | 71        |
| 7.2 Creating a GATT database dynamically.....             | 72        |
| 7.2.1 Initialization and release.....                     | 72        |
| 7.2.2 Adding services.....                                | 72        |
| 7.2.3 Adding characteristics and descriptors.....         | 73        |
| 7.2.4 Removing services and characteristics.....          | 73        |
| <b>Chapter 8 Creating a Custom Profile.....</b>           | <b>74</b> |
| 8.1 Defining custom UUIDs.....                            | 74        |
| 8.2 Creating service functionality.....                   | 74        |
| 8.3 GATT client interactions.....                         | 75        |
| <b>Chapter 9 Application Structure.....</b>               | <b>77</b> |

|  |    |
|--|----|
| 9.1 Folder structure.....                              | 77 |
| 9.2 Application main framework.....                    | 78 |
| 9.2.1 Main task.....                                   | 78 |
| 9.2.2 Application messaging.....                       | 78 |
| 9.2.3 Idle task.....                                   | 78 |
| 9.3 Bluetooth LE connection manager.....               | 79 |
| 9.3.1 GAP generic event.....                           | 79 |
| 9.3.2 GAP configuration.....                           | 79 |
| 9.3.3 GAP connection event.....                        | 80 |
| 9.3.4 Privacy.....                                     | 80 |
| 9.4 GATT database.....                                 | 81 |
| 9.5 RTOS specifics.....                                | 81 |
| 9.5.1 Operating system selection.....                  | 81 |
| 9.5.2 Bluetooth Low Energy tasks configuration.....    | 82 |
| 9.6 Board configuration.....                           | 82 |
| 9.7 Bluetooth Low Energy initialization.....           | 82 |
| 9.8 Bluetooth Low Energy host stack configuration..... | 83 |
| 9.9 Profile configuration.....                         | 84 |
| 9.10 Application code.....                             | 85 |
| 9.11 Multiple connections.....                         | 87 |
| 9.12 Bluetooth address generation.....                 | 87 |
| 9.13 Repeated attempts.....                            | 88 |

## **Chapter 10 Low-Power Management..... 89**

|   |    |
|---|----|
| 10.1 System considerations.....                                     | 89 |
| 10.2 When/how to enter low-power.....                               | 89 |
| 10.3 Deep sleep modes for Kinetis MCU-based platforms.....          | 90 |
| 10.4 Deep sleep modes for QN908X MCU-based platforms.....           | 91 |
| 10.5 Low-power usage examples.....                                  | 91 |
| 10.5.1 Using low-power when Bluetooth Low Energy stack is idle..... | 91 |
| 10.5.2 Using low-power when advertising.....                        | 91 |
| 10.5.3 Using low-power when scanning.....                           | 91 |
| 10.5.4 Using low-power in connection.....                           | 91 |

## **Chapter 11 Over the Air Programming (OTAP)..... 93**

|   |     |
|---|-----|
| 11.1 General functionality.....                       | 93  |
| 11.2 Bluetooth Low Energy OTAP service-profile.....   | 94  |
| 11.2.1 OTAP service and characteristics.....          | 94  |
| 11.2.2 OTAP server and OTAP client interactions.....  | 96  |
| 11.3 Bluetooth Low Energy OTAP protocol.....          | 96  |
| 11.3.1 Protocol design considerations.....            | 96  |
| 11.3.2 Bluetooth Low Energy OTAP commands.....        | 97  |
| 11.3.2.1 New image notification command.....          | 97  |
| 11.3.2.2 New image info request command.....          | 98  |
| 11.3.2.3 New image info response command.....         | 99  |
| 11.3.2.4 Image block request command.....             | 99  |
| 11.3.2.5 Image chunk command.....                     | 100 |
| 11.3.2.6 Image transfer complete command.....         | 101 |
| 11.3.2.7 Error notification command.....              | 101 |
| 11.3.2.8 Stop image transfer command.....             | 102 |
| 11.3.3 OTAP client-server interactions.....           | 102 |
| 11.4 Bluetooth Low Energy OTAP image file format..... | 103 |
| 11.4.1 Bluetooth Low Energy OTAP header.....          | 105 |

|  |     |
|--|-----|
| 11.4.1.1 Upgrade file identifier.....                                  | 106 |
| 11.4.1.2 Header version.....   | 106 |
| 11.4.1.3 Header length.....  | 106 |
| 11.4.1.4 Header field control.....                                     | 106 |
| 11.4.1.5 Company identifier.....                                       | 106 |
| 11.4.1.6 Image ID.....   | 106 |
| 11.4.1.7 Image version.....  | 106 |
| 11.4.1.8 Header string.....  | 107 |
| 11.4.1.9 Total image file size.....                                    | 107 |
| 11.5 Building Bluetooth Low Energy OTAP image file from SREC file..... | 107 |
| 11.6 Building Bluetooth Low Energy OTAP image file from BIN file.....  | 111 |
| 11.7 Bluetooth Low Energy OTAP application integration.....            | 114 |
| 11.7.1 OTAP server.....  | 114 |
| 11.7.2 OTAP client.....  | 119 |
| 11.8 OTAP bootloader.....  | 129 |
| 11.9 Secured OTAP bootloader.....                                      | 132 |

|   |            |
|---|------------|
| <b>Chapter 12 Creating a Bluetooth Low Energy Application When the Bluetooth Low Energy Host Stack is Running on Another Processor.....</b> | <b>134</b> |
| 12.1 Serial manager and FSCI configuration.....   | 134        |
| 12.1.1 Serial manager initialization.....   | 134        |
| 12.1.2 FSCI configuration and initialization.....   | 134        |
| 12.1.3 FSCI handlers (GAP, GATT and GATTDB) registration.....   | 135        |
| 12.2 Bluetooth Low Energy host stack initialization.....  | 135        |
| 12.3 GATT database configuration.....   | 136        |
| 12.4 FSCI host layer.....   | 136        |

|   |            |
|---|------------|
| <b>Chapter 13 Revision history.....</b> | <b>137</b> |
|---|------------|

# Chapter 1

## Introduction

This document explains how to integrate the Bluetooth® Low Energy Host Stack in an application and provides detailed explanation of the most commonly used APIs and code examples.

The document also sets out the prerequisites and the initialization of the Bluetooth Low Energy Host Stack, followed by the presentation of APIs grouped by layers and by application role, as described below.

First, the Generic Access Profile (GAP) layer is divided into two sections according to the GAP role of the device: Central and Peripheral.

The basic setup of two such devices is explained with code examples, such as how to prepare the devices for connections, how to connect them together, and pairing and bonding processes.

Next, the Generic Attribute Profile (GATT) layer introduces the APIs required for data transfer between the two connected devices. Again, the chapter is divided into two sections according to the GATT role of the device: Client and Server.

The document further describes the usage of the GATT Database APIs in the application to manipulate the data in the GATT server database.

Then, the document shows a user-friendly method to statically build a GATT Database. The method involves the use of a predefined set of macros that the application may include to build the database at application compile time.

The following section contains instructions on how to build a custom profile. The subsequent section is dedicated to the structure of the typical application.

Additionally, the document has a chapter dedicated to low-power management and how the low-power modes of the hardware and software can be used by an application.

The next section describes the Over The Air Programming (OTAP) capabilities offered by the Host Stack via a dedicated Service/Profile and how to use them in an application. This section also contains a detailed description of the components of the Framework involved in the OTAP process and the Bootloader application, which does the actual upgrade of the image on a device.

Finally, the document has a section, which describes how to build a Bluetooth Low Energy application when the Host Stack is running on a separate processor.

## Chapter 2

# Prerequisites

The Bluetooth Low Energy Host Stack library contains a number of external references that the application must define to provide the full functionality of the Host.

Failing to do so results in linkage errors when trying to build the application binary.

### 2.1 RTOS task queues and events

These task queues are declared in the *ble\_host\_tasks.h* as follows:

```

/*! App to Host message queue for the Host Task */
extern msgQueue_t gApp2Host_TaskQueue;
/*! HCI to Host message queue for the Host Task */
extern msgQueue_t gHci2Host_TaskQueue;
/*! Event for the Host Task Queue */
extern osaEventId_t gHost_TaskEvent;

```

See [Host Task initialization](#) for more details about the RTOS Tasks required by the Host.

### 2.2 GATT database

For memory efficiency reasons, the Host Stack does not allocate memory for the GATT Database.

Instead, the application must allocate memory, define and populate the database according to its requirements and constraints. It may do so either statically, at application compile time, or dynamically.

Regardless of how the GATT Database is created by the application, the following two external references from *gatt\_database.h* must be defined:

```

/*! The number of attributes in the GATT Database. */
extern uint16_t gGattDbAttributeCount_c;

/*! Reference to the GATT database */
extern gattDbAttribute_t* gattDatabase;

```

The attribute template is defined as shown here:

```

typedef struct {
    uint16_t handle ;
    /*!< Attribute handle - cannot be 0x0000; attribute handles need not be consecutive, but must be
    strictly increasing. */
    uint16_t permissions ;
    /*!< Attribute permissions as defined by ATT. */
    uint32_t uuid ;
    /*!< The UUID should be read according to the gattDbAttribute_t.uuidType member: for 2-byte and
    4-byte UUIDs, this contains the value of the UUID; for 16-byte UUIDs, this is a pointer to the
    allocated 16-byte array containing the UUID. */
    uint8_t * pValue ;
    /*!< Pointer to allocated value array. */
    uint16_t valueLength ;
    /*!< Size of the value array. */
    uint16_t uuidType : 2;
    /*!< Identifies the length of the UUID; the 2-bit values are interpreted according to the
    bleUuidType_t enumeration. */
    uint16_t maxVariableValueLength : 10;

```

```

/*!< Maximum length of the attribute value array; if this is set to 0, then the attribute's length
(valueLength) is fixed and cannot be changed. */
} gattDbAttribute_t ;

```

## 2.3 Non-Volatile Memory (NVM) access

The Host Stack contains an internal device information management that relies on accessing the Non-Volatile Memory for storing and loading bonded devices data.

The application developers determine the NVM access mechanism through the definition of three functions and one variable. The functions must first preprocess the information and then perform standard NVM operations (erase, write, read). The declarations are as follows:

```

extern void App_NvmErase
(
    uint8_t mEntryIdx
);
extern void App_NvmWrite
(
    uint8_t mEntryIdx,
    void* pBondHeader
    void* pBondDataDynamic,
    void* pBondDataStatic,
    void* pBondDataDeviceInfo,
    void* pBondDataDescriptor,
    uint8_t mDescriptorIndex
);
extern void App_NvmRead
(
    uint8_t mEntryIdx,
    void* pBondHeader
    void* pBondDataDynamic,
    void* pBondDataStatic,
    void* pBondDataDeviceInfo,
    void* pBondDataDescriptor,
    uint8_t mDescriptorIndex
);

```

The device information is divided into several components to ensure that even software wear leveling mechanisms can be used optimally. The components sizes are fixed (defined in *ble\_constants.h*) and have the following meaning:

| API pointer to bond component  | Component size ( <i>ble_constants.h</i> ) | Description   |
|--|---|---|
| <b>pBondHeader:</b> points to a <code>bleBondIdentityHeaderBlob_t</code> element         | <code>gBleBondIdentityHeaderSize_c</code> | Bonding information which is sufficient to identify a bonded device.          |
| <b>pBondDataDynamic:</b> points to a <code>bleBondDataDynamicBlob_t</code> element       | <code>gBleBondDataDynamicSize_c</code>    | Bonding information that might change frequently.                             |
| <b>pBondDataStatic:</b> points to a <code>bleBondDataStaticBlob_t</code> element         | <code>gBleBondDataStaticSize_c</code>     | Bonding information that is unlikely to change frequently.                    |
| <b>pBondDataDeviceInfo:</b> points to a <code>bleBondDataDeviceInfoBlob_t</code> element | <code>gBleBondDataDeviceInfoSize_c</code> | Additional bonding information that can be accessed using the host stack API. |
| <b>pBondDataDescriptor:</b> points to a <code>bleBondDataDescriptorBlob_t</code> element | <code>gBleBondDataDescriptorSize_c</code> | Bonding information used to store one CCCD.                                   |



The application developer need not care about the format of the bonding information as this is handled by the host stack. Each bonding data slot must contain one bonding header blob, one dynamic data blob, one static data blob, one device information blob and an array of descriptor blobs equal to *gcGapMaximumSavedCccds\_c* (*ble\_constants.h*). A slot is uniquely identified by the *mEntryIdx* parameter. A descriptor is uniquely identified by the pair *mEntryIdx* - *mDescriptorIndex*.

If one or more pointers passed as parameters are NULL, the read from or write to the corresponding blob of the bonding slot must be ignored. The erase function must clear the entire bonding data slot specified by the entry index.

The current implementation of the aforementioned functions uses either the framework NVM module or a RAM buffer. Additional details about the NVM configuration and functionality can be found in the *Connectivity Framework Reference Manual*.

To enable the NVM mechanism make sure:

- *gAppUseNvm\_d* (*app\_preinclude.h*) is set to 1 and
- *gUseNVMLink\_d*=1 in the linker options of the toolchain.

If *gAppUseNvm\_d* is set to 0 then all bonding data will be stored in RAM and will be accessible until reset or power cycle.

---

#### NOTE

The default NVM module configurations are applied in the *app\_preinclude.h* file if *gAppUseNvm\_d* is set to 1.

---

# Chapter 3

## Host Stack Initialization and APIs

### 3.1 Host Task initialization

The application developer is required to configure the Host Task as part of the Host Stack requirement. The task is the context for running all the Host layers (GAP, GATT, ATT, L2CAP, SM, GATTDB)

The prototype of the task function is located in the *ble\_host\_tasks.h* file:

```
void Host_TaskHandler(void * args);
```

It should be called with *NULL* as an argument in the task code from the application.

Application developers are required to define task events and queues as explained in [RTOS Task Queues and Events](#).

The Controller task always has a higher priority than the Host task. The priority values are configured by *gHost\_TaskPriority\_c* (*ble\_host\_task\_config.h*) and *gControllerTaskPriority\_c* (*ble\_controller\_task\_config.h*). Note that changing these values can have a significant impact on the Bluetooth Low Energy stack.

The priority levels are defined in accordance with the OS Abstraction (OSA) priority levels, where 0 is the maximum priority and 15 is the minimum priority. For additional information, see the *Connectivity Framework Reference Manual*. Note that RTOS-specific priority levels may differ from one operating system to another.

### 3.2 Main function to initialize the host

The Host Stack must be initialized after platform setup is complete and all RTOS tasks have been started.


The function that needs to be called is located in the *ble\_general.h* file and has the following prototype:

```
bleResult_t Ble_HostInitialize
(
    gapGenericCallback_t genericCallback,
    hciHostToControllerInterface_t hostToControllerInterface
);
```

The genericCallback is the main callback installed by the application. It receives most of the events from the GAP layer, which are called generic events. A generic event has a type (see *gapGenericEventType\_t*) and data according to the event type (a union).

The hostToControllerInterface is the HCI exit point of the Host Stack. This is the function that the Host calls every time it tries to send an HCI message to the LE Controller.

The completion of the Host Stack initialization is signaled in the *genericCallback* by the *gInitializationComplete\_c* generic event. After this event is received, the main application logic may be started.

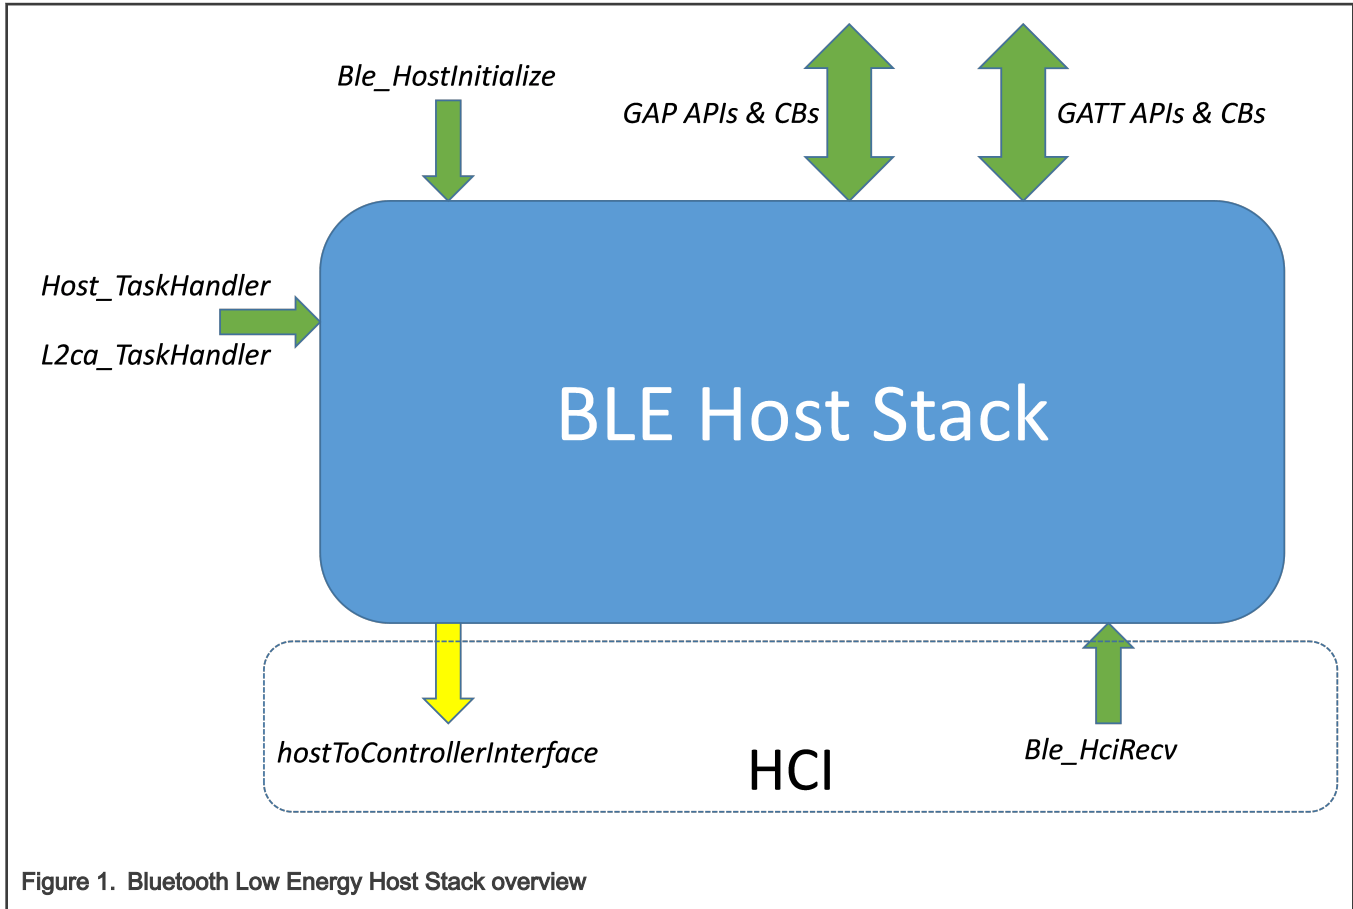

### 3.3 HCI entry and exit points

The HCI entry point of the Host Stack is the second function located in the *ble\_general.h* file:

```
void Ble_HciRecv
(
    hciPacketType_t packetType,
    void* pPacket,
    uint16_t packetSize
);
```

This is the function that the application must call to insert an HCI message into the Host.

Therefore, the *Ble\_HciRecv* function and the *hostToControllerInterface* parameter of the *Ble\_Initialize* function represent the two points that need to be connected to the LE Controller (see Figure 1), either directly (if the Controller software runs on the same chip as the Host) or through a physical interface (for example, UART).

### 3.4 Host Stack libraries and API availability

All the APIs referenced in this document are available in the *Central and Peripheral* libraries. The support for Bluetooth 5.0 Advertising Extensions comes in separate host libraries, similarly distributed by GAP/GATT role support as the legacy ones, as follows:

For example, *llib\_ble\_5-0\_host\_cm0p\_iar.a* and *lib\_ble\_5-0\_AE\_host\_cm0p\_iar.a*, for *iar* projects, and *lib\_ble\_5-0\_host\_cm0p\_gcc.a* and *lib\_ble\_5-0\_AE\_host\_cm0p\_gcc.a* for MCUX projects is a full-featured library with complete support for both Central and Peripheral APIs, at GAP level, as well as Client and Server APIs, at GATT level.

However, some applications may be targeted to memory-constrained devices and do not need the full support. In the interest of reducing code size and RAM utilization, two more libraries are provided:

- **lib\_ble\_5-0\_host\_peripheral\_cm0p\_iar.a**, **lib\_ble\_5-0\_AE\_host\_peripheral\_cm0p\_iar.a**, **lib\_ble\_5-0\_host\_peripheral\_cm0p\_gcc.a**, and **lib\_ble\_5-0\_AE\_host\_peripheral\_cm0p\_gcc.a**
  - Supports only APIs for the *GAP Peripheral* and *GAP Broadcaster* roles
  - Supports only APIs for the *GATT Server* role
- **lib\_ble\_5-0\_host\_central\_cm0p\_iar.a** and **lib\_ble\_5-0\_AE\_host\_central\_cm0p\_iar.a**, **lib\_ble\_5-0\_host\_central\_cm0p\_gcc.a**, and **lib\_ble\_5-0\_AE\_host\_central\_cm0p\_gcc.a**
  - Supports only APIs for the *GAP Central* and *GAP Observer* roles
  - Supports only APIs for the *GATT Client* role

If one attempts to use an API that is not supported (for instance, calling *Gap\_Connect* with the *lib\_ble\_5-0\_host\_peripheral\_cm0p\_iar.a* and *lib\_ble\_5-0\_host\_peripheral\_cm0p\_gcc.a*), then the API returns the **gBleFeatureNotSupported\_c** error code. Similarly, if the API for AE is used with a host library that does not have support for AE (for instance, calling *Gap\_SetExtAdvertisingParameters* with the *lib\_ble\_5-0\_host\_peripheral\_cm0p\_iar.a* and *lib\_ble\_5-0\_host\_peripheral\_cm0p\_gcc.a*), then **gBleFeatureNotSupported\_c** is returned.

#### NOTE

See the *Bluetooth Low Energy Host Stack API Reference Manual* for explicit information regarding API support. Each function documentation contains this information in the *Remarks* section.

## 3.5 Synchronous and asynchronous functions

The vast majority of the GAP and GATT APIs are executed **asynchronously**. Calling these functions generates an RTOS message and places it in the Host Task message queue.

Therefore, the actual result of these APIs is signaled in **events** triggered by specific callbacks installed by the application. See the *Bluetooth Low Energy Host Stack API Reference Manual* for specific information about the events that are triggered by each API.

However, there are a few APIs which are executed immediately (**synchronously**). This is explicitly mentioned in the *Bluetooth Low Energy Host Stack API Reference Manual* in the *Remarks* section of each function documentation.

If nothing is mentioned, then the API is asynchronous.

## 3.6 Radio TX Power level

The controller interface includes APIs that can be used to set the Radio TX Power to a different level than the default one.

The power level can be set differently for advertising and connection channels with the following macros:

```
#define Controller_SetAdvertisingTxPowerLevel(level) \
    Controller_SetTxPowerLevel(level,gAdvTxChannel_c)
```

and

```
#define Controller_SetConnectionTxPowerLevel(level) \
    Controller_SetTxPowerLevel(level,gConnTxChannel_c)
```

The numeric power levels are distributed evenly between the minimum and maximum output power values (in dBm). For more information, see the silicon datasheet.

### 3.6.1 TX Power Level to +5 dBm (LDO-HF Bumped Up)(KW34/KW35/KW36 platforms)

The radio transmits an output power up to +5 dBm. However, the default support of the radio configuration allows to transmit only up to +3.5 dBm. Thus, in order to support +5 dBm, there are some conditions that should be met.

The radio allows the increase of transmit output power by the HF LDO regulator. The input of low-dropout (LDO) regulator is VDD\_RF, that can be either external (bypass mode) or tied to the DCDC\_1P5 output. It also has a programmable level. Hence, the first condition to be able to transmit at +5 dBm is to supply the VDD\_RFX pins with at least 1.55 V. This is configured through the DCDC driver included in the wireless connectivity example. In order to support 1.55 V at DCDC\_1P5 pin, the following structure contained in the “board.c” file is configured as shown below:

```
#if gDCDC_Enabled_d == 1
const dcdcConfig_t mDcdcDefaultConfig =
{
    #if APP_DCDC_MODE == gDCDC_Mode_Buck_c
        .vbatMin = 1800,
        .vbatMax = 4200,
    #elif APP_DCDC_MODE == gDCDC_Mode_Boost_c
        .vbatMin = 900,
        .vbatMax = 1800,
    #endif
    .dcdcMode = APP_DCDC_MODE,
    .vBatMonitorIntervalMs = APP_DCDC_VBAT_MONITOR_INTERVAL,
    .pfDCDCAppCallback = NULL, /* .pfDCDCAppCallback = DCDCallback, */
    .dcdcMcuVOutputTargetVal = gDCDC_McuV_OutputTargetVal_1_550_c,
    .dcdc1P8OutputTargetVal = gDCDC_1P8OutputTargetVal_1_800_c
};
#endif
```

The second condition is to define the following definition in the “app\_preinclude.h” file:

```
#define mDefaultTxPowerUsePaBump_c 1
```

Moreover, the application verifies the call to the API “Controller\_BumpPaPowerUp()”. This API receives the “mDefaultTxPowerUsePaBump\_c” defined as parameter. Hence, it should be called as shown next:

```
(void)Controller_BumpPaPowerUp(mDefaultTxPowerUsePaBump_c);
```

This API is called before calling “Controller\_SetTxPowerLevel()” function. Finally, the TX power level is set to the maximum, in this case, the API should be called with the number 31 as parameter. This way, the output power of the radio would be around +5 dBm.

## Chapter 4


# Generic Access Profile (GAP) Layer

The GAP layer manages connections, security, and bonded devices.

The GAP layer APIs are built on top of the Host-Controller Interface (HCI), the Security Manager Protocol (SMP), and the Device Database.

GAP defines four possible roles that a Bluetooth Low Energy device may have in a Bluetooth Low Energy system (see [Table 1](#)):

- **Central**
  - Scans for advertisers (Peripherals and Broadcasters)
  - Initiates connection to Peripherals; Master at Link Layer (LL) level
  - Usually acts as a GATT Client, but can also contain a GATT Database itself
- **Peripheral**
  - Advertises and accepts connection requests from Centrals; LL Slave
  - Usually contains a GATT Database and acts as a GATT Server, but may also be a Client
- **Observer**
  - Scans for advertisers, but does not initiate connections; Transmit is optional
- **Broadcaster**
  - Advertises, but does not accept connection requests from Centrals; Receive is optional

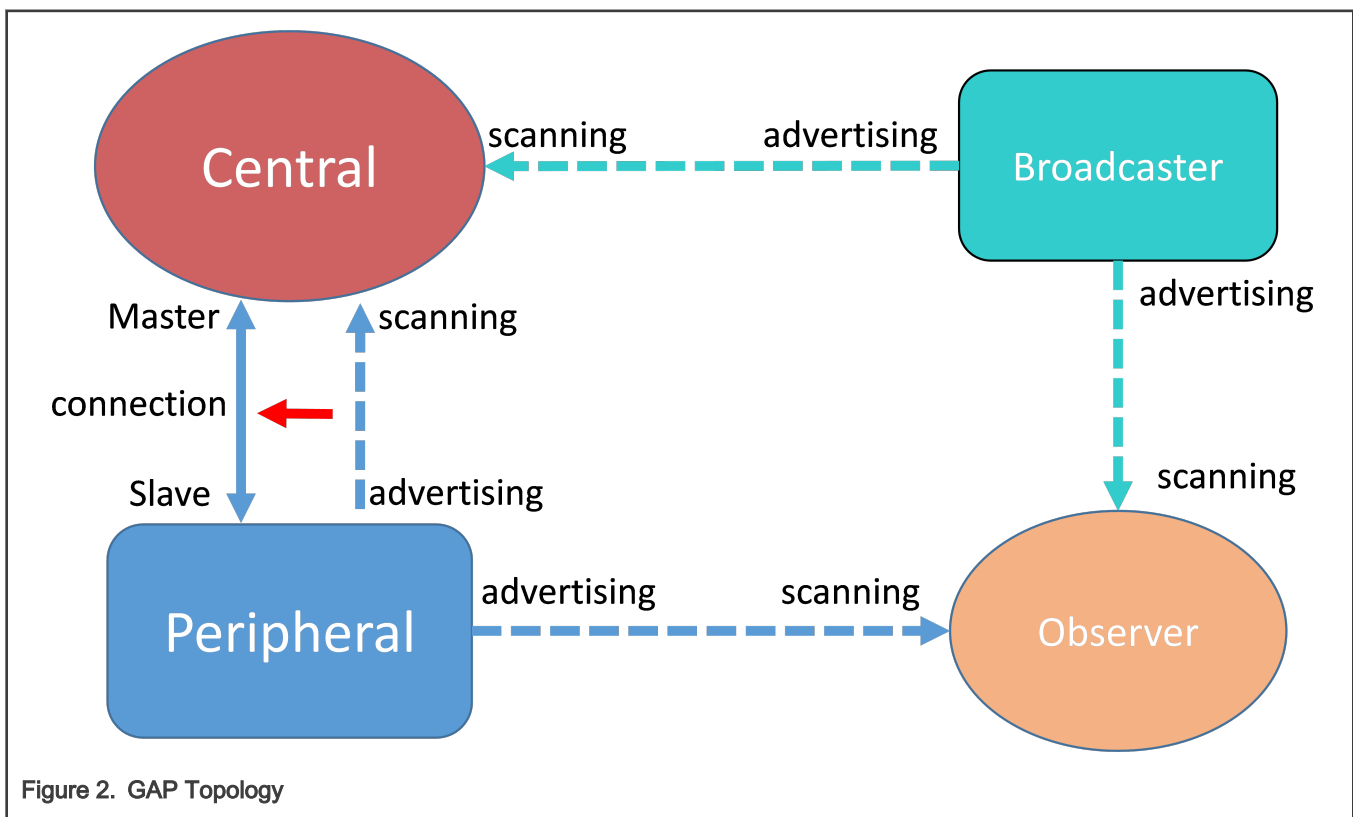

## 4.1 Central setup

Usually, a Central must start scanning to find Peripherals. When the Central has scanned a Peripheral it wants to connect to, it stops scanning and initiates a connection to that Peripheral. After the connection has been established, it may start pairing, if the Peripheral requires it, or directly encrypt the link, if the two devices have already bonded in the past.

### 4.1.1 Scanning

The most basic setup for a Central device begins with scanning, which is performed by the following function from *gap\_interface.h*:

If the *pScanningParameters* pointer is NULL, the currently set parameters are used. If no parameters have been set after a device power-up, the standard default values are used:

```
#define gGapDefaultScanningParameters_d \
{ \
    /* type */                gGapScanTypePassive_c, \
    /* interval */            gGapScanIntervalDefault_d, \
    /* window */              gGapScanWindowDefault_d, \
    /* ownAddressType */      gBleAddrTypePublic_c, \
    /* filterPolicy */         gScanAll_c \
    /* scanning PHY */        gLePhyLMFlag_c\
}
```

The easiest way to define non-default scanning parameters is to initialize a *gapScanningParameters\_t* structure with the above default and change only the required fields.

For example, to perform active scanning and only scan for devices in the White List, the following code can be used:

```
gapScanningParameters_t scanningParameters = gGapDefaultScanningParameters_d;
scanningParameters.type = gGapScanTypeActive_c;
scanningParameters.filterPolicy = gScanWhiteListOnly_c;
Gap_StartScanning(&scanningParameters, scanningCallback, enableFilterDuplicates, duration, period);
```

The *scanningCallback* is triggered by the GAP layer to signal events related to scanning.

The most important event is the *gDeviceScanned\_c* event, which is triggered each time an advertising device is scanned. This event's data contains information about the advertiser:

```
typedef struct
{
    bleAddressType_t        addressType ;
    bleDeviceAddress_t      aAddress ;
    int8_t                  rssi ;
    uint8_t                 dataLength ;
    uint8_t *               data ;
    bleAdvertisingReportEventType_t advEventType ;
    bool_t                  directRpaUsed;
    bleDeviceAddress_t      directRpa;
    bool_t                  advertisingAddressResolved;
} gapScannedDevice_t;
```

If this information signals a known Peripheral that the Central wants to connect to, the latter must stop scanning and connect to the Peripheral.

To stop scanning, call this function:

```
bleResult_t Gap_StopScanning (void);
```

By default, the GAP layer is configured to report all scanned devices to the application using the *gDeviceScanned\_c* event type. However, some use cases may require to perform specific GAP Discovery Procedures in which the advertising reports have to

be filtered by the Flags AD value from the advertising data. Other use cases require the Host stack to automatically initiate a connection when a specific device has been scanned.

To enable filtering based on the Flags AD value or to set device addresses for automatic connections, the following function must be called before the scanning is started:

```
bleResult_t Gap_SetScanMode
(
    gapScanMode_t          scanMode,
    gapAutoConnectParams_t* pAutoConnectParams,
    gapConnectionCallback_t connCallback
);
```

The default value for the scan mode is *gNoDiscovery\_c*, which reports all packets regardless of their content and does not perform any automatic connection.

To enable Limited Discovery, the *gLimitedDiscovery\_c* value must be used, while the *gGeneralDiscovery\_c* value activates General Discovery.

To enable automatic connection when specific devices are scanned, the *gAutoConnect\_c* value must be set, in which case the *pAutoConnectParams* parameter must point to the structure that holds the target device addresses and the connection parameters to be used by the Host for these devices.

If scanMode is set to *gAutoConnect\_c*, connCallback must be set and will be triggered by GAP to send the events related to the connection.

#### 4.1.2 Initiating and closing a connection

To connect to a scanned Peripheral, extract its address and address type from the *gDeviceScanned\_c* event data, stop scanning, and call the following function:

```
bleResult_t Gap_Connect
(
    const gapConnectionRequestParameters_t * pParameters,
    gapConnectionCallback_t                connCallback
);
```

An easy way to create the connection parameter structure is to initialize it with the defaults, then change only the necessary fields. The default structure is defined as shown here:

```
#define gGapDefaultConnectionRequestParameters_d \
{ \
    /* scanInterval */      gGapScanIntervalDefault_d, \
    /* scanWindow */        gGapScanWindowDefault_d, \
    /* filterPolicy */       gUseDeviceAddress_c, \
    /* ownAddressType */     gBleAddrTypePublic_c, \
    /* peerAddressType */    gBleAddrTypePublic_c, \
    /* peerAddress */        { 0, 0, 0, 0, 0, 0 }, \
    /* connIntervalMin */    gGapDefaultMinConnectionInterval_d, \
    /* connIntervalMax */    gGapDefaultMaxConnectionInterval_d, \
    /* connLatency */        gGapDefaultConnectionLatency_d, \
    /* supervisionTimeout */ gGapDefaultSupervisionTimeout_d, \
    /* connEventLengthMin */ gGapConnEventLengthMin_d, \
    /* connEventLengthMax */ gGapConnEventLengthMax_d, \
    /* initiatingPHYS */     gLePhyLMFlag_c \
}
```



In the following example, Central scans for a specific Heart Rate Sensor with a known address. When it finds it, it immediately connects to it.

```
static bleDeviceAddress_t heartRateSensorAddress = { 0xa1, 0xb2, 0xc3, 0xd4, 0xe5, 0xf6 };
static bleAddressType_t hrsAddressType = gBleAddrTypePublic_c;
static bleAddressType_t ownAddressType = gBleAddrTypePublic_c;
void gapScanningCallback( gapScanningEvent_t * pScanningEvent)
{
    switch (pScanningEvent-> eventType )
    {
        /* ... */
        case gDeviceScanned_c:
        {
            if (hrsAddressType == pScanningEvent-> eventData . scannedDevice . addressType
            && Ble_DeviceAddressesMatch(heartRateSensorAddress, pScanningEvent-> eventData . scannedDevice .
            aAddress ))
            {
                gapConnectionRequestParameters_t connReqParams =
                gGapDefaultConnectionRequestParameters_d;
                connReqParams. peerAddressType = hrsAddressType;
                Ble_CopyDeviceAddress(connReqParams. peerAddress , heartRateSensorAddress);
                connReqParams. ownAddressType = ownAddressType;
                bleResult_t result = Gap_StopScanning();
                if (gBleSuccess_c != result)
                {
                    /* Handle error */
                }
                else
                {
                    /* There is no need to wait for the gScanStateChanged_c event because
                     * the commands are queued in the host task
                     * and executed consecutively. */
                    result = Gap_Connect(&connReqParams, connectionCallback);
                    if (gBleSuccess_c != result)
                    {
                        /* Handle error */
                    }
                }
            }
            break;
        }
        /* ... */
    }
}
```

The *connCallback* is triggered by GAP to send all events related to the active connection. It has the following prototype:

```
typedef void (* gapConnectionCallback_t )
(
    deviceId_t          deviceId,
    gapConnectionEvent_t * pConnectionEvent
);
```

The very first event that should be listened inside this callback is the *gConnEvtConnected\_c* event. If the application decides to drop the connection establishment before this event is generated, it should call the following macro:

```
#define Gap_CancelInitiatingConnection()\
    Gap_Disconnect(gCancelOngoingInitiatingConnection_d)
```

This is useful, for instance, when the application chooses to use an expiration timer for the connection request.

Upon receiving the *gConnEvtConnected\_c* event, the application may proceed to extract the necessary parameters from the event data (*pConnectionEvent->event.connectedEvent*). The most important parameter to be saved is the *deviceId*.

The *deviceId* is a unique 8-bit, unsigned integer, used to identify an active connection for subsequent GAP and GATT API calls. All functions related to a certain connection require a *deviceId* parameter. For example, to disconnect, call this function:

```
bleResult_t Gap_Disconnect
(
    deviceId_t deviceId
);
```

### 4.1.3 Pairing and bonding

After the user has connected to a Peripheral, use the following function to check whether this device has bonded in the past:

```
bleResult_t Gap_CheckIfBonded
(
    deviceId_t    deviceId,
    bool_t *      pOutIsBonded
);
```

If it has, link encryption can be requested with:

```
bleResult_t Gap_EncryptLink
(
    deviceId_t    deviceId,
);
```

If the link encryption is successful, the *gConnEvtEncryptionChanged\_c* connection event is triggered. Otherwise, a *gConnEvtAuthenticationRejected\_c* event is received with the *rejectReason* event data parameter set to *gLinkEncryptionFailed\_c*.

On the other hand, if this is a new device (not bonded), pairing may be started as shown here:

```
bleResult_t Gap_Pair
(
    deviceId_t            deviceId,
    const gapPairingParameters_t * pPairingParameters
);
```

The pairing parameters are shown here:

```
typedef struct gapPairingParameters_tag {
    bool_t                withBonding ;
    gapSecurityModeAndLevel_t securityModeAndLevel ;
    uint8_t               maxEncryptionKeySize ;
    gapIoCapabilities_t    localIoCapabilities ;
    bool_t                oobAvailable ;
    gapSmpKeyFlags_t       centralKeys ;
    gapSmpKeyFlags_t       peripheralKeys ;
    bool_t                leSecureConnectionSupported ;
    bool_t                useKeypressNotifications ;
} gapPairingParameters_t;
```

The names of the parameters are self-explanatory. The *withBonding* flag should be set to *TRUE* if the Central must/wants to bond.

For the Security Mode and Level, the GAP layer defines them as follows:

- Security Mode 1 Level 1 stands for no security requirements
- Except for Level 1 (which is only used with Mode 1), Security Mode 1 requires encryption, while Security Mode 2 requires data signing
- Mode 1 Level 2 and Mode 2 Level 1 do not require authentication (in other words, they allow Just Works pairing, which has no MITM protection), while Mode 1 Level 3 and Mode 2 Level 2 require authentication (must pair with PIN or OOB data, which provide MITM protection).
- Starting with Bluetooth specification 4.2 OOB pairing offers MITM protection only in certain conditions. The application must inform the stack if the OOB data exchange capabilities offer MITM protection via a dedicated API.
- Security Mode 1 Level 4 is reserved for authenticated pairing (with MITM protection) using a LE Secure Connections pairing method.
- If a pairing method is used but it does not offer MITM protection then the pairing parameters must use Security Mode 1 level 2. If the requested pairing parameters are incompatible (for example, Security Mode 1 Level 4 without LE Secure Connections enabled), a `gBleInvalidParameter_c` status is returned by the security API functions: `Gap_SetDefaultPairingParameters`, `Gap_SendSlaveSecurityRequest`, `Gap_Pair` and `Gap_AcceptPairingRequest`.

Table 1. GAP Security Modes and Levels

| —  | No security                | No MITM protection                             | Legacy MITM protection                    | LE secure connections with MITM protection    |
|--|----------------------------|--|---|---|
| <b>Mode 1 (encryption)</b><br>distributed LTK (EDIV+RAND) or generated LTK | <b>Level 1</b> no security | <b>Level 2</b><br>unauthenticated encryption   | <b>Level 3</b> authenticated encryption   | <b>Level 4</b> LE SC authenticated encryption |
| <b>Mode 2 (data signing)</b><br>distributed CSRK                           | —                          | <b>Level 1</b><br>unauthenticated data signing | <b>Level 2</b> authenticated data signing | —   |

The *centralKeys* should have the flags set for all the keys that are available in the application. The IRK is mandatory if the Central is using a Private Resolvable Address, while the CSRK is necessary if the Central wants to use data signing. The LTK is provided by the Peripheral and should only be included if the Central intends on becoming a Peripheral in future reconnections (GAP role change).

The *peripheralKeys* should follow the same guidelines. The LTK is mandatory if encryption is to be performed, while the peer's IRK should be requested if the Peripheral is using Private Resolvable Addresses.

See [Table 2](#) for detailed guidelines regarding key distribution.

The first three rows are both guidelines for Pairing Parameters (*centralKeys* and *peripheralKeys*) and for distribution of keys with `Gap_SendSmpKeys`.

If LE Secure Connections Pairing is performed (Bluetooth LE 4.2 and above), then the LTK is generated internally, so the corresponding bits in the key distribution fields from the pairing parameters are ignored by the devices.

The Identity Address shall be distributed if the IRK is also distributed (its flag has been set in the Pairing Parameters). Therefore, it can be “asked” only by asking for IRK (it does not have a separate flag in a `gapSmpKeyFlags_t` structure), hence the N/A.

The negotiation of the distributed keys is as follows:

- In the SMP Pairing Request (started by `Gap_Pair`), the Central sets the flags for the keys it wants to distribute (*centralKeys*) and receive (*peripheralKeys*).

Table 2. Key Distribution guidelines

|  | CENTRAL   |  | PERIPHERAL  |  |
|--|---|--|---|--|
|  | Central keys  | Peripheral keys  | Peripheral keys   | Central keys   |
| <b>Long Term Key (LTK) +EDIV +RAND</b>           | If it wants to be a peripheral in a future reconnection   | If it wants encryption                                 | If it wants encryption                                    | If it wants to become a central in a future reconnection |
| <b>Identity Resolving Key (IRK)</b>              | If it uses or intends to use private resolvable addresses | If a peripheral is using a private resolvable address  | If it uses or intends to use private resolvable addresses | If a central is using a private resolvable address       |
| <b>Connection Signature Resolving Key (CSRK)</b> | If it wants to sign data as GATT Client                   | If it wants the peripheral to sign data as GATT Client | If it wants to sign data as GATT Client                   | If it wants the Central to sign data as GATT Client      |
| <b>Identity address</b>                          | If it distributes the IRK                                 | N/A  | If it distributes the IRK                                 | N/A  |

- The Peripheral examines the two distributions and must send an SMP Pairing Response (started by the *Gap\_AcceptPairingRequest*) after performing any changes it deems necessary. The Peripheral is only allowed to set to 0 some flags that are set to 1 by the Central, but not the other way around. For example, it cannot request/distribute keys that were not offered/requested by the Central. If the Peripheral is adverse to the Central's distributions, it can reject the pairing by using the *Gap\_RejectPairing* function.
- The Central examines the updated distributions from the Pairing Response. If it is adverse to the changes made by the Peripheral, it can reject the pairing (*Gap\_RejectPairing*). Otherwise, the pairing continues and, during the key distribution phase (the *gConnEvtKeyExchangeRequest\_c* event) only the final negotiated keys are included in the key structure sent with *Gap\_SendSmpKeys*.
- For LE Secure Connections (Both devices set the SC bit in the AuthReq field of the Pairing Request and Pairing Response packets) the LTK is not distributed it is generated and the corresponding bit in the Initiator Key Distribution and Responder Key Distribution fields of the Pairing Response packet shall be set to 0.

If LE Secure Connections Pairing (Bluetooth LE 4.2 and above) is used, and OOB data needs to be exchanged, the application must obtain the local LE SC OOB Data from the host stack by calling the *Gap\_LeScGetLocalOobData* function. The data is contained by the generic *gLeScLocalOobData\_c* event.

The local LE SC OOB Data is refreshed in the following situations:

- The *Gap\_LeScRegeneratePublicKey* function is called (the *gLeScPublicKeyRegenerated\_c* generic event is also generated as a result of this API).
- The device is reset (which also causes the Public Key to be regenerated).


If the pairing continues, the following connection events may occur:

- **Request events**
  - *gConnEvtPasskeyRequest\_c*: a PIN is required for pairing; the application must respond with the *Gap\_EnterPasskey(deviceId, passkey)*.
  - *gConnEvtOobRequest\_c*: if the pairing started with the *oobAvailable* set to *TRUE* by both sides; the application must respond with the *Gap\_ProvideOob(deviceId, oob)*.
  - *gConnEvtKeyExchangeRequest\_c*: the pairing has reached the key exchange phase; the application must respond with the *Gap\_SendSmpKeys(deviceId, smpKeys)*.
  - *gConnEvtLeScOobDataRequest\_c*: the stack requests the LE SC OOB Data received from the peer (r, Cr and Addr); the application must respond with *Gap\_LeScSetPeerOobData(deviceId, leScOobData)*.
  - *gConnEvtLeScDisplayNumericValue\_c*: the stack requests the display and confirmation of the LE SC Numeric Comparison Value; the application must respond with *Gap\_LeScValidateNumericValue(deviceId, ncvValidated)*.

### • Informational events

- *gConnEvtKeysReceived\_c*: the key exchange phase is complete; keys are automatically saved in the internal device database and are also provided to the application for immediate inspection; application does not have to save the keys in NVM storage because this is done internally if *withBonding* was set to TRUE by both sides.
- *gConnEvtAuthenticationRejected\_c*: the peer device rejected the pairing; the *rejectReason* parameter of the event data indicates the reason that the Peripheral does not agree with the pairing parameters (it cannot be *gLinkEncryptionFailed\_c* because that reason is reserved for the link encryption failure).
- *gConnEvtPairingComplete\_c*: the pairing process is complete, either successfully, or an error may have occurred during the SMP packet exchanges; note that this is different from the *gConnEvtKeyExchangeRequest\_c* event; the latter signals that the pairing was rejected by the peer, while the former is used for failures due to the SMP packet exchanges.
- *gConnEvtLeScKeypressNotification\_c*: the stack informs the application that a remote SMP Keypress Notification has been received during Passkey Entry Pairing Method.

After the link encryption or pairing is completed successfully, the Central may immediately start exchanging data using the GATT APIs.

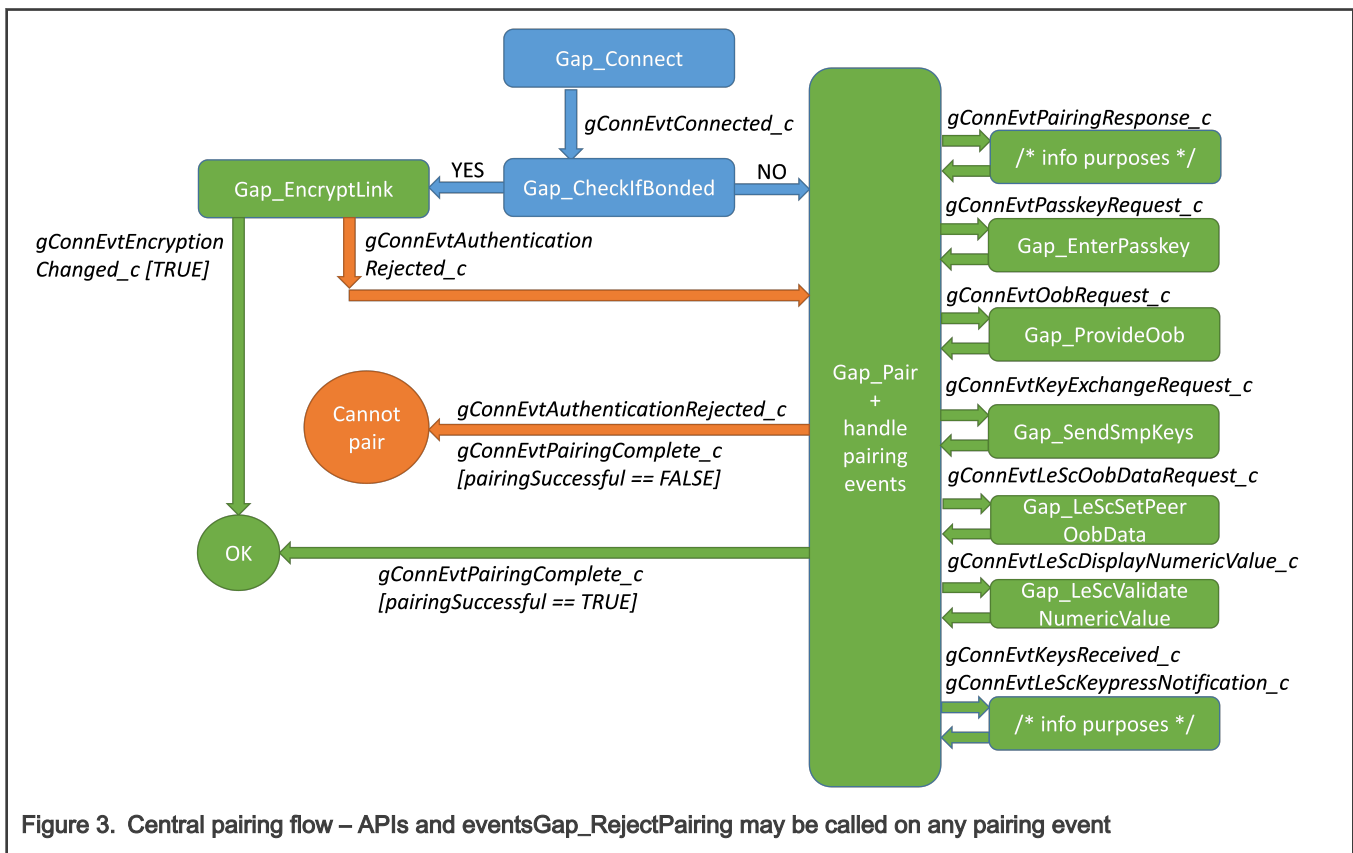

## 4.2 Peripheral setup

The Peripheral starts advertising and waits for scan and connection requests from other Centrals.

### 4.2.1 Advertising

Before starting advertising, the advertising parameters should be configured. Otherwise, the following defaults are used.

```
#define gGapDefaultAdvertisingParameters_d \
{ \
```

```

/* minInterval */      gGapAdvertisingIntervalDefault_c, \
/* maxInterval */      gGapAdvertisingIntervalDefault_c, \
/* advertisingType */   gConnectableUndirectedAdv_c, \
/* addressType */       gBleAddrTypePublic_c, \
/* directedAddressType */ gBleAddrTypePublic_c, \
/* directedAddress */   {0U, 0U, 0U, 0U, 0U, 0U}, \
/* channelMap */        (gapAdvertisingChannelMapFlags_t) gGapAdvertisingChannelMapDefault_c, \
/* filterPolicy */      gProcessAll_c \
}

```

To set different advertising parameters, a *gapAdvertisingParameters\_t* structure should be allocated and initialized with defaults. Then, the necessary fields may be modified.

After that, the following function should be called:

```

bleResult_t Gap_SetAdvertisingParameters
(
    const gapAdvertisingParameters_t *    pAdvertisingParameters
);

```

The application should listen to the *gAdvertisingParametersSetupComplete\_c* generic event.

Next, the advertising data should be configured and, if the advertising type supports active scanning, the scan response data should also be configured. If either of these is not configured, they are defaulted to empty data.

The function used to configure the advertising and/or scan response data is shown here:

```

bleResult_t Gap_SetAdvertisingData
(
    const gapAdvertisingData_t *    pAdvertisingData,
    const gapScanResponseData_t *    pScanResponseData
);

```

Either of the two pointers may be *NULL*, in which case they are ignored (the corresponding data is left as it was previously configured, or empty if it has never been set), but not both at the same time.

The application should listen to the *gAdvertisingDataSetupComplete\_c* generic event.

After all the necessary setup is done, advertising may be started with this function:

```

bleResult_t Gap_StartAdvertising
(
    gapAdvertisingCallback_t    advertisingCallback,
    gapConnectionCallback_t    connectionCallback
);

```

The *advertisingCallback* is used to receive advertising events (advertising state changed or advertising command failed), while the *connectionCallback* is only used if a connection is established during advertising.

The connection callback is the same as the callback used by the Central when calling the *Gap\_Connect* function.

If a Central initiates a connection to this Peripheral, the *gConnEvtConnected\_c* connection event is triggered.

To stop advertising while the Peripheral has not yet received any connection requests, use this function:

```

bleResult_t Gap_StopAdvertising (void);

```

This function should not be called after the Peripheral enters a connection.

## 4.2.2 Pairing and bonding

After a connection has been established to a Central, the Peripheral's role regarding security is a passive one. It is the Central's responsibility to either start the pairing process or, if the devices have already bonded in the past, to encrypt the link using the shared LTK.

If the Central attempts to access sensitive data without authenticating, the Peripheral sends error responses (at ATT level) with proper error code (Insufficient Authentication, Insufficient Encryption, Insufficient Authorization, and so on), thus indicating to the Central that it needs to perform security procedures.

All security checks are performed internally by the GAP module and the security error responses are sent automatically. All the application developer needs to do is register the security requirements.

First, when building the GATT Database (see [Creating GATT database](#)), the sensitive attributes should have the security built into their access permissions (for example, read-only / read with authentication / write with authentication / write with authorization, and so on.).

Second, if the GATT Database requires additional security besides that already specified in attribute permissions (for example, certain services require higher security in certain situations), the following function must be called:

```
bleResult_tGap_RegisterDeviceSecurityRequirements
(
    gapDeviceSecurityRequirements_t * pSecurity
);
```

The parameter is a pointer to a structure which contains a “device master security setting” and service-specific security settings. All these security requirements are pointers to *gapSecurityRequirements\_t* structures. The pointers that are to be ignored should be set to *NULL*.

Although the Peripheral does not initiate any kind of security procedure, it can inform the Central about its security requirements. This is usually done immediately after the connection to avoid exchanging useless packets for requests that might be denied because of insufficient security.

The informing is performed through the Slave Security Request packet at SMP level. To use it, the following GAP API is provided:

```
bleResult_tGap_SendSlaveSecurityRequest
(
    deviceId_t          deviceId,
    const gapPairingParameters_t* pPairingParameters
);
```

The *gapPairingParameters\_t* structure includes two important fields. The *withBonding* field indicates to the Central whether this Peripheral can bond and the *securityModeAndLevel* field informs about the required security mode and level that the Central should pair for. See Section 4.1.3 for an explanation about security modes and levels, as defined by the GAP module.

This request expects no reply, nor any immediate action from the Central. The Central may easily choose to ignore the Slave Security Request.

If the two devices have bonded in the past, the Peripheral should expect to receive a *gConnEvtLongTermKeyRequest\_c* connection event (unless LE Secure Connections Pairing was performed, as specified in Bluetooth Low Energy 4.2 and above), which means that the Central has also recognized the bond and, instead of pairing, it goes directly to encrypting the link using the previously shared LTK. At this point, the local LE Controller requests that the Host provides the same LTK it exchanged during pairing.

When the devices have been previously paired, along with the Peripheral's LTK, the EDIV (2 bytes) and RAND (8 bytes) values were also sent (their meaning is defined by the SMP). Therefore, before providing the key to the Controller, the application should check that the two values match with those received in the *gConnEvtLongTermKeyRequest\_c* event. If they do, the application should reply with:

```
bleResult_tGap_ProvideLongTermKey
(
```

```

    deviceId_t      deviceId,
    const uint8_t   aLtk,
    uint8_t         ltkSize
);

```

The LTK size cannot exceed the maximum value of 16.

If the EDIV and RAND values do not match, or if the Peripheral does not recognize the bond, it can reject the encryption request with:

```

bleResult_tGap_DenyLongTermKey
(
    deviceId_t deviceId
);

```

If LE SC Pairing was used then the LTK is generated internally by the host stack and it is not requested from the application during post-bonding link encryption. In this scenario, the application is only notified of the link encryption through the *gConnEvtEncryptionChanged\_c* connection event.

If the devices are not bonded, the Peripheral should expect to receive the *gConnEvtPairingRequest\_c*, indicating that the Central has initiated pairing.

If the application agrees with the pairing parameters (see [Pairing and bonding](#) for detailed explanations), it can reply with:

```

bleResult_tGap_AcceptPairingRequest
(
    deviceId_t      deviceId,
    const gapPairingParameters_t * pPairingParameters
);

```

This time, the Peripheral sends its own pairing parameters, as defined by the SMP.

After sending this response, the application should expect to receive the same pairing events as the Central (see [Pairing and bonding](#)), with one exception: the *gConnEvtPasskeyRequest\_c* event is not called if the application sets the Passkey (PIN) for pairing before the connection by calling the API:

```

bleResult_tGap_SetLocalPasskey
(
    uint32_t passkey
);

```

This is done because, usually, the Peripheral has a static secret PIN that it distributes only to trusted devices. If, for any reason, the Peripheral must dynamically change the PIN, it can call the aforementioned function every time it wants to, before the pairing starts (for example, right before sending the pairing response with *Gap\_AcceptPairingRequest*).

If the Peripheral application never calls *Gap\_SetLocalPasskey*, then the *gConnEvtPasskeyRequest\_c* event is sent to the application as usual.

The following API can be used by the Peripheral to reject the pairing process:

```


bleResult_tGap_RejectPairing
(
    deviceId_t      deviceId,
    gapAuthenticationRejectReason_t reason
);

```

The *reason* should indicate why the application rejects the pairing. The value *gLinkEncryptionFailed\_c* is reserved for the *gConnEvtAuthenticationRejected\_c* connection event to indicate the link encryption failure rather than pairing failures. Therefore, it is not meant as a pairing reject reason.



The *Gap\_RejectPairing* function may be called not only after the Pairing Request was received, but also during the pairing process, when handling pairing events or asynchronously, if for any reason the Peripheral decides to abort the pairing. This also holds true for the Central.

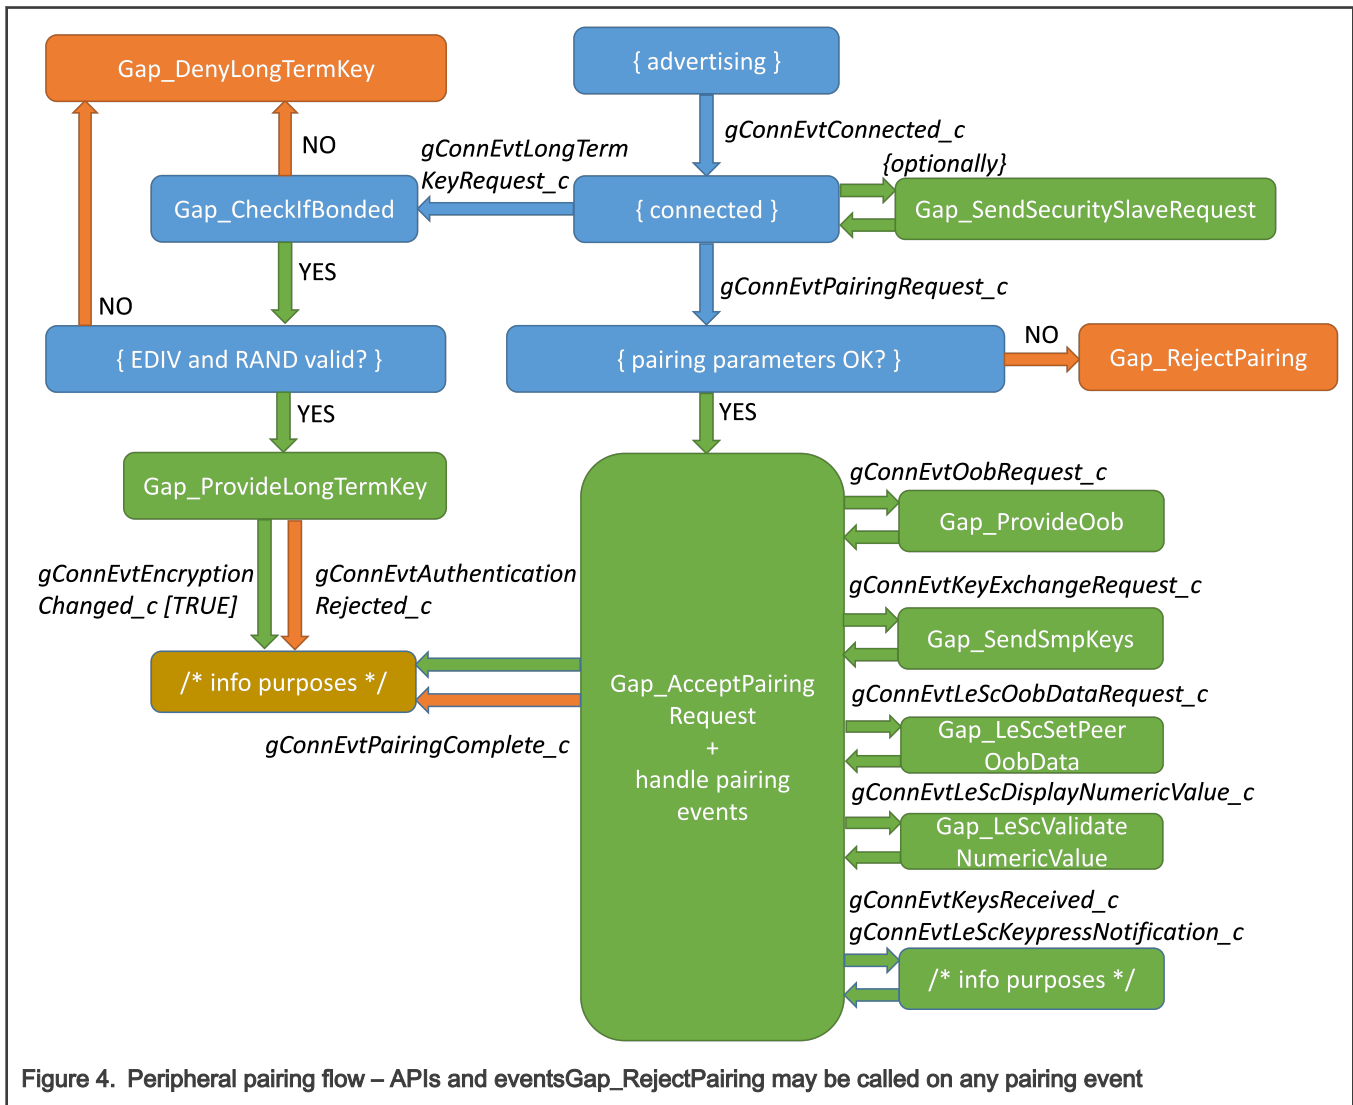

For both the Central and the Peripheral, bonding is performed internally and is not the application's concern. The application is informed about whether or not bonding occurred through the *gConnEvtPairingComplete\_c* event parameters.

### 4.3 LE data packet length extension

This new feature extends the maximum data channel payload length from 27 to 251 octets.

The length management is done automatically by the link layer immediately after the connection is established. The stack passes the default values for maximum transmission number of payload octets and maximum packet transmission time that the application configures at compilation time in *ble\_globals.c*.

```

#ifndef gBleDefaultTxOctets_c
#define gBleDefaultTxOctets_c 0x00FB
#endif

#ifndef gBleDefaultTxTime_c


```

```
#define gBleDefaultTxTime_c 0x0848
#endif
```

The device can update the data length anytime, while in connection. The function that triggers this mechanism is the following:

```
bleResult_tGap_UpdateLeDataLength
(
    deviceId_t      deviceId,
    uint16_t        txOctets,
    uint16_t        txTime
);
```

After the procedure executes, a *gConnEvtLeDataLengthChanged\_c* connection event is triggered with the maximum values for number of payload octets and time to transmit and receive a link layer data channel PDU. The event is send event if the remote device initiates the procedure. This procedure is detailed below:

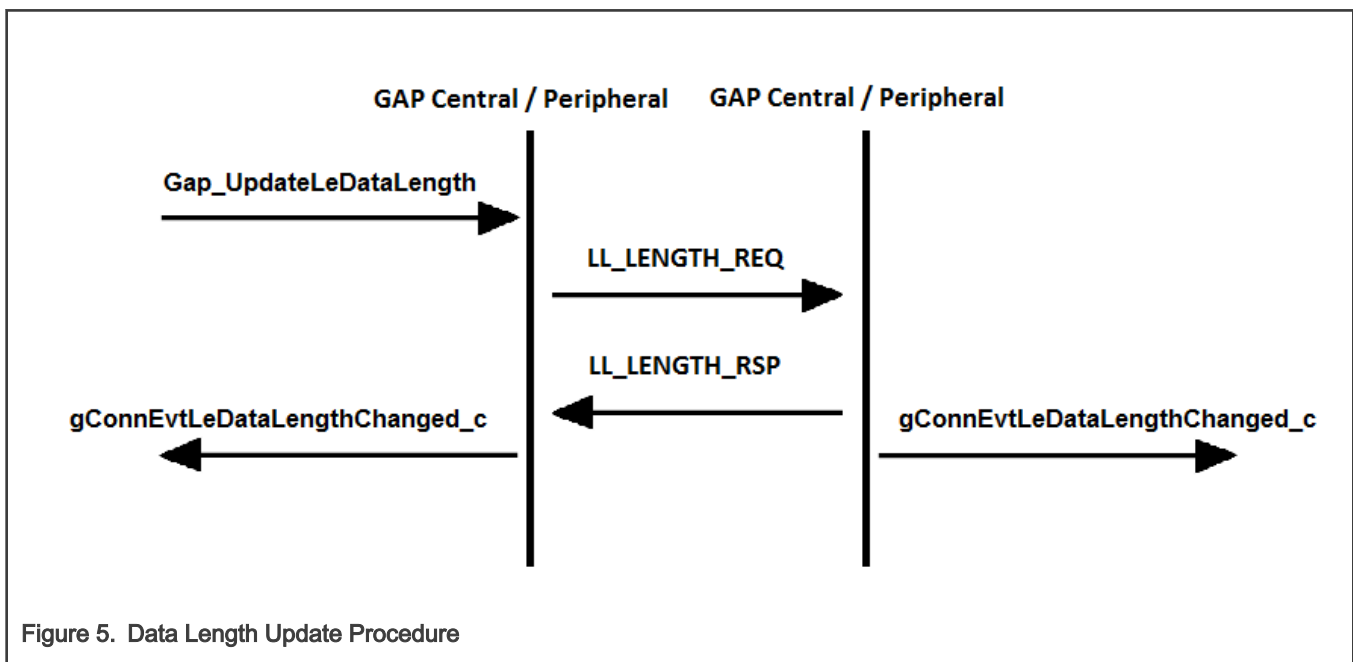

## 4.4 Privacy feature

### 4.4.1 Introduction

Starting with Bluetooth 4.2, Privacy can be enabled either in the Host or in the Controller:

- **Host Privacy** consists of:
  - Random address generation - Periodically regenerating a random address (Resolvable or Non-Resolvable Private Address) inside the Host and the applying it into the Controller.
  - Random address resolution - Try to resolve incoming RPAs using the IRKs stored in the bonded devices list. The address resolution is performed when a connection is established with a device or for the auto-connect scan. The advertising packets that have an RPA will not be resolved automatically due to the high MCU processing that will require. Each of the use cases will be detailed in the following sections.

The random address resolution is performed by default by the Host whenever the Controller was not able to resolve an RPA. The random address generation is performed by the Host only when Host Privacy is requested to be enabled.
- **Controller Privacy**, introduced by Bluetooth 4.2, consists of writing the local IRK in the Controller, together with all known peer IRKs, and letting the Controller perform hardware, fully automatic RPA generation and resolution. The

Controller uses a Resolving List to store these entries and the size of the list is platform dependent, given by `gMaxResolvingListSize_c`. For RPA resolution, the entries that do not fit in this list will be processed by the Host to be resolved using the IRKs from bonded devices list.

Either Host Privacy or Controller Privacy can be enabled at any time. Trying to enable one while the other is in progress generates a `gBleInvalidState_c` error. The same error is returned when trying to enable the same privacy type twice, or when trying to disable privacy when it is not enabled.

The recommended way of using Privacy is the Controller Privacy. However, enabling Controller Privacy requires at least a pair of local IRK and peer IRK, so this can only be enabled only after a pairing is performed with a peer and the IRKs are exchanged during the Key Distribution phase. When a device starts, if Privacy is required the workflow is the following:

1. Enable Host Privacy using the local IRK.
2. Connect to a peer and perform pairing and bonding to exchange IRKs.
3. Disable Host Privacy.
4. Enable Controller Privacy using the local IRK and the peer IRK and peer identity address.

#### 4.4.1.1 Resolvable private addresses

A Resolvable Private Address (RPA) is a random address generated using an Identity Resolving Key (IRK). This address appears completely random to an outside observer, so a device may periodically regenerate its RPA to maintain privacy, as there is no correlation between any two different RPAs generated using the same IRK.

On the other hand, an IRK can also be used to resolve an RPA, in other words, to check if this RPA has been generated with this IRK. This process is called “resolving the identity of a device”. Whoever has the IRK of a device can always try to resolve its identity against an RPA.

For example, let's assume device A is frequently changing its RPA using IRKA. At some point, A bonds with B. A must give B a way to recognize it in a subsequent connection when it (A) has a different address. To achieve this purpose, A distributes the IRKA during the Key Distribution phase of the pairing process. B stores the IRKA it received from A.

Later, B connects to a device X that uses RPAX. This address appears completely random, but B can try to resolve RPAX using IRKA. If the resolving operation is successful, it means that IRKA was used to generate RPAX, and since IRKA belongs to device A, it means that X is A. So B was able to recognize the identity of device X, but nobody else can do that since they don't have IRKA.

#### 4.4.1.2 Non-resolvable private addresses

A Non-Resolvable Private Address (NRPA) is a completely random address that has no generation pattern and thus cannot be resolved by a peer.

A device that uses an NRPA that is changed frequently is impossible to track because each new address appears to belong to a new device.

#### 4.4.1.3 Multiple identity resolving keys

If a device bonds with multiple peers, all of which are using RPAs, it needs to store the IRK of each in order to be able to recognize them later (see previous section).

This means that whenever the device connects to a peer that uses an unknown RPA, it needs to try and resolve the RPA with each of the stored IRKs. If the number of IRKs is large, then this introduces a lot of computation.

Performing all these resolving operations in the Host can be costly. It is much more efficient to take advantage of hardware acceleration and enable the Controller Privacy.

### 4.4.2 Host privacy

To enable or disable Host Privacy, the following API may be used:

```
bleResult_tGap_EnableHostPrivacy
(
```

```

    bool_t          enable,
    const uint8_t *  aIrk
);

```

When *enable* is set to TRUE, the *aIrk* parameter defines which type of Private Address to generate. If *aIrk* is NULL, then a new NRPA is generated periodically and written into the Controller. Otherwise, an IRK is copied internally from the *aIrk* address and it is used to periodically generate a new RPA.

The lifetime of the Private Address (NRPA or RPA) is a number of seconds contained by the *gGapHostPrivacyTimeout* external constant, which is defined in the *ble\_config.c* source file. The default value for this is 900 (15 minutes).

When Host Privacy is enabled, the Host will ignore the *ownAddressType* value for the advertising, scanning or connect parameters. It will always use the random address type in order to use the RPA configured in the Controller in the packets sent over the air.

As mentioned in the Introduction section, call this API for random address generation. For random address resolution there is no need to do so, it is performed by default against the bonded devices list.

### 4.4.3 Controller privacy

To enable or disable Controller Privacy, the following API may be used:

```

bleResult_t Gap_EnableControllerPrivacy
(
    bool_t          enable,
    const uint8_t *  aOwnIrk,
    uint8_t         peerIdCount,
    const gapIdentityInformation_t* aPeerIdentities
);

```

When *enable* is set to TRUE, *aOwnIrk* parameter shall not be NULL, *peerIdCount* shall not be zero or greater than *gMaxResolvingListSize\_c*, and *aPeerIdentities* shall not be NULL.

The IRK defined by *aOwnIrk* is used by the Controller to periodically generate a new RPA. The lifetime of the RPA is a number of seconds contained by the *gGapControllerPrivacyTimeout* external constant, which is defined in the *ble\_config.c* source file. The default value for this is 900 (15 minutes).

The *aPeerIdentities* is an array of identity information for each bonded device. The identity information contains the device's identity address (public or random static address) and the device's IRK. This array can be obtained from the Host with the *Gap\_GetBondedDevicesIdentityInformation* API.

Enabling Controller Privacy involves a quick sequence of commands to the Controller. When the sequence is complete, the *gControllerPrivacyStateChanged\_c* generic event is triggered.

#### 4.4.3.1 Privacy mode

In Bluetooth LE 5.0, the privacy mode has been introduced as an optional feature and is part of the GAP identity structure together with the address and address type. There are two modes: Network Privacy Mode (default) and Device Privacy Mode. These are valid only for Controller Privacy.

A device in network privacy mode will only accept packets from peers using private addresses.

A device in device privacy mode will also accept packets from peers using identity addresses, even if the peer had previously distributed the IRK. Private addresses are also accepted.

The privacy mode of a device is stored in NVM together with the IRK with a default value of Network. If the application wants to change this value it can extract the peer identities, modify the privacy mode from network to device and then enable Controller Privacy with the value.

To change the privacy mode of a device and make the change persistent, the user must call the following API:

```
bleResult_t Gap_SetPrivacyMode
(
    uint8_t nvmIndex,
    blePrivacyMode_t privacyMode
);
```

#### 4.4.3.2 Scanning and initiating

When a Central device is scanning while Controller Privacy is enabled, the Controller actively tries to resolve any RPA contained in the Advertising Address field of advertising packets. If any match is found against the peer IRK list, then the *advertisingAddressResolved* parameter from the scanned device structure is set to TRUE.

In this case, the *addressType* and *aAddress* fields no longer contain the actual Advertising Address as seen over the air, but instead they contain the identity address of the device whose IRK was able to resolve the Advertising Address. In order to connect to this device, these fields shall be used to complete the *peerAddressType* and *peerAddress* fields of the connection request parameter structure, and the *usePeerIdentityAddress* field shall be set to TRUE.

If *advertisingAddressResolved* is equal to FALSE, then the advertiser is using a Public or Random Static Address, a NRPA or a PRA that could not be resolved. Therefore, the connection to this device is initiated as if Controller Privacy was not enabled, by setting *usePeerIdentityAddress* to FALSE.

#### 4.4.3.3 Advertising

When a Peripheral starts advertising while Controller Privacy is enabled, the *ownAddressType* field of the advertising parameter structure is unused. Instead, the Controller always generates an RPA and advertises with it as Advertising Address.

If directed advertising is used, the Host will only allow advertising to a device in the resolving list in order to be able to generate RPAs.

#### 4.4.3.4 Connected

When a device connects while Controller Privacy is enabled, the *gConnEvtConnected\_c* connection event parameter structure contains more relevant fields than without Controller Privacy.

The *peerRpaResolved* field equals TRUE if the peer was using an RPA that was resolved using an IRK from the list. In that case, the *peerAddressType* and *peerAddress* fields contain the identity address of the resolved device, and the actual RPA used to create the connection (the RPA that a Central used when initiating the connection, or the RPA that the Peripheral advertised with) is contained by the *peerRpa* field.

The *localRpaUsed* field equals TRUE if the local Controller was automatically generating an RPA when the connection was created, and the actual RPA is contained by the *localRpa* field.

### 4.5 Setting PHY mode in a connection

In Bluetooth LE 5.0, the user is able to change the PHY mode in a connection through the Link Layer PHY Update Procedure and choose between default 1 Mbit/s, 2 Mbit/s high data rate or the coded S2 or S8 PHYs with 500 Kbps or 125 Kbps for longer range.

To set the PHY, the user can call:

```
bleResult_t Gap_LeSetPhy
(
    bool_t          defaultMode,
    deviceId_t      deviceId,
    uint8_t         allPhys,
    uint8_t         txPhys,
    uint8_t         rxPhys,
```

```
uint16_t    phyOptions
);
```

There are two modes to use this API:

1. If `defaultMode` is set to `TRUE`, the user can call this function without being in a connection, i.e. provide a device ID. The PHY option is used by the Link Layer in the PHY response when a connection is created and the peer device initiates the PHY Update Procedure. The application should listen for `gLePhyEvent_c` with the `gPhySetDefaultComplete_c` sub event type for the confirmation of the operation.
2. If `defaultMode` is set to `FALSE`, the user must also provide a valid device ID. The Host asks the Link Layer to initiate the PHY Update Procedure with the peer device using the provided parameters.

The application should listen for `gLePhyEvent_c` with the `gPhyUpdateComplete_c` sub event type for the confirmation of the update procedure to have ended. The result of the operation populates in the `txPhy` and `rxPhy` of the event. The result is from the negotiation of the local parameters and the peer PHY preferences.

To read the current PHY on a connection, call the following API:

```
bleResult_t Gap_LeReadPhy
(
    deviceId_t deviceId
);
```

The application should listen for `gLePhyEvent_c` with the `gPhyRead_c` sub event type for the confirmation of the operation. The `txPhy` and `rxPhy` indicate the current modes used in the connection.

## 4.6 Bonded devices data management

The Host handles the management of the bonding data without requiring application intervention. The application must provide are the NVM write, read, and erase functions presented in section 2.3 and the Host will create bonds if bonding is required after the pairing.

The bonded data structure is presented below, together with the GAP APIs that access it, for most APIs require a connection to be established with the device in the bonded list, the others can be accessed any time using the NVM index.

1. Bond Header – identity address and address type that uniquely identify a device together with the IRK and privacy mode.
  - `Gap_GetBondedDevicesIdentityInformation` – for all bonds
2. Bond Data Dynamic - security counters for signed operations – managed by the stack
3. Bond Data Static – LTK, CSRK, Rand, EDIV, security information for read and write authorizations
  - `Gap_SaveKeys` – NVM index
  - `Gap_LoadKeys` – NVM index
  - `Gap_LoadEncryptionInformation` - deviceId
  - `Gap_Authorize` – deviceId - GATT Server only
4. Bond Data Device Info - custom peer information (service discovery data) and device name
  - `Gap_SaveCustomPeerInformation` - deviceId
  - `Gap_LoadCustomPeerInformation` - deviceId
  - `Gap_SaveDeviceName` - deviceId
  - `Gap_GetBondedDeviceName` – NVM index
5. Bond Data Descriptor List - configuration of indications and notifications for CCCD handles – GATT Server only
  - `Gap_CheckNotificationStatus` - deviceId
  - `Gap_CheckIndicationStatus` - deviceId

However, there may be some cases when an application wants to manage this data to read data from a bonded device created by the Host, create a bond obtained out of band or update an existing bond. For this use case, two GAP APIs and a GAP event have been added.

#### 1. Load the Keys of a bonded device.

The user can call the following function to read the keys exchanged during pairing and stored by the Bluetooth LE stack in the bond area when the pairing is complete.

The application is informed of the NVM index through the `gBondCreatedEvent_c` sent by the stack immediately after the bond creation. The application is responsible for passing the memory in the `pOutKeys` OUT parameter to fill in the keys, if any of the keys are set to NULL, the stack will not fill that information. The `pOutKeyFlags` OUT parameter will indicate to the application which of the keys were stored by the stack as not all of them may have been distributed during pairing.

The `pOutLeSc` indicates if Bluetooth LE 4.2 LE Secure Connections Pairing was used, while the `pOutAuth` indicates if the peer device is authenticated for MITM protection. All these OUT parameters are recommended to be retrieved from the bond and added if later passed as input parameters for the save keys API.

This function executes synchronously.

```
bleResult_t Gap_LoadKeys
(
    uint8_t          nvmIndex,
    gapSmpKeys_t*    pOutKeys,
    gapSmpKeyFlags_t* pOutKeyFlags,
    bool_t*          pOutLeSc,
    bool_t*          pOutAuth);
);
```

The `gapSmpKeys_t` is the structure used during the key distribution phase, as well as in the `gConnEvtKeysReceived_c` event and is as follows. The difference is that the Bluetooth LE device address cannot be set to NULL neither when loading a bond or when creating one as it identifies the bonded device together with the NVM index.

| Event Data  | Data type        | Data Description   |
|-------------|------------------|--|
| cLtkSize    | uint8_t          | Encryption Key Size filled by the stack. If aLtk is NULL, this is ignored.   |
| aLtk        | uint8_t*         | Long Term (Encryption) Key. NULL if LTK is not distributed, else size is given by cLtkSize.                            |
| alrk        | uint8_t*         | Identity Resolving Key. NULL if alrk is not distributed.   |
| aCsrk       | uint8_t*         | Connection Signature Resolving Key. NULL if aCsrk is not distributed.  |
| cRandSize   | uint8_t          | Size of RAND filled by the stack; usually equal to <code>gcSmpMaxRandSize_c</code> . If aLtk is NULL, this is ignored. |
| aRand       | uint8_t*         | RAND value used to identify the LTK. If aLtk is NULL, this is ignored.   |
| ediv        | uint16_t         | EDIV value used to identify the LTK. If aLtk is NULL, this is ignored.   |
| addressType | bleAddressType_t | Public or Random address.  |
| aAddress    | uint8_t*         | Device Address. It cannot be NULL.   |

The structure for the GAP SMP Key Flags is the following:

| Flag Type | Description                                   |
|-----------|---|
| gNoKeys_c | No key is available.                          |
| gLtk_c    | Long-Term Key available.                      |
| gIrk_c    | Identity Resolving Key available.             |
| gCsrk_c   | Connection Signature Resolving Key available. |

## 2. Save the Keys to create a bond or update an existing bonded device.

The user can call the following function to create a bond on a device based on information obtained Out of Band. For instance, one can use the output of Gap\_LoadKeys from the previous section. This can be useful in transferring a bond created by the stack after a pairing procedure or if the application wants to manipulate bonding data. The behavior of the stack remains the same, if the bonding is required after a pairing, the stack will store the bonding information if possible. In this case, the NVM index is passed to the application through gBondCreatedEvent\_c.

This function executes asynchronously, as the stack can create a bond during the execution. The application should listen for the previous mentioned event gBondCreatedEvent\_c. The result of the function call is passed synchronously. However, if an asynchronous error has occurred during the actual save, it is passed to the application through the gInternalError\_c event with a gSaveKeys\_c error source.

The stack creates a bond if the NVM index is free or update the keys from an NVM index if it stores a valid entry.

The address from the GAP SMP Keys structure must not be NULL. If other members of the structure are NULL, they are ignored.

LE SC flag indicates if Bluetooth LE 4.2 Secure Connections was used during pairing and Auth specifies if the peer is authenticated for MITM protection.

```
bleResult_t Gap_SaveKeys
(
    uint8_t          nvmIndex,
    gapSmpKeys_t*    pKeys,
    bool_t           leSc,
    bool_t           auth
);
```

## 3. Bond created event.

A GAP event is added to the Bluetooth LE Generic Callback to inform the application of the NVM index whenever the stack creates a bond or when a Gap\_SaveKeys request succeeds. The event is also generated if the NVM index was a valid occupied entry and only some of the keys in the bonded information have been updated.

The NVM index is then used in the GAP APIs to save or load information from the bond.

| Event Data  | Data type          | Data Description                              |
|-------------|--------------------|---|
| nvmIndex    | uint8_t            | NVM index for the new created bond            |
| addressType | bleAddressType_t   | Public or Random (static) address of the bond |
| address     | bleDeviceAddress_t | Address of the bond                           |

## 4.7 Controller enhanced notifications

This chapter describes how the application can configure and monitor the notifications generated by the Bluetooth Controller when advertising, scan, or connection events occur. This feature is proprietary to NXP that is available on selected Controllers.



The user can choose between two options:

1. Enable notifications from the GAP layer and monitor GAP events in the GAP Generic Callback. The controller issues HCI vendor-specific events processed by the Bluetooth LE Host and presented to the application in the GAP Generic Callback.
2. Enable notifications from the Controller interface and monitor controller events in a user-defined Application Callback.
3. Combination of the above two options: configure feature at GAP layer and install an Application Callback through the Controller interface. After setting the callback, the HCI vendor-specific events will not be issued and implicitly the GAP events. Instead, the user receives the notifications in the installed callback until setting the callback to NULL again if it wants to revert to GAP events.

#### NOTE

The application callback does not run on ISR context as current system architecture defines that the Link Layer notifications are processed on the Controller task.

#### • GAP configuration:

The user should call the following function to enable various events from the mask or use Event None to disable the feature. The Device ID is valid only for connection events.

```
bleResult_t Gap_ControllerEnhancedNotification
(
    uint16_t eventType,
    deviceId_t deviceId
);
```

The event type is a bitmask having the following options:

| Event Type            | Event Description                      |
|-----------------------|--|
| gNotifEventNone_c     | No enhanced notification event enabled |
| gNotifConnEventOver_c | Connection event over                  |
| gNotifConnRxPdu_c     | Connection RX PDU                      |
| gNotifAdvEventOver_c  | Advertising event over                 |
| gNotifAdvTx_c         | Advertising ADV transmitted            |
| gNotifAdvScanReqRx_c  | Advertising SCAN REQ RX                |
| gNotifAdvConnReqRx_c  | Advertising CONN REQ RX                |
| gNotifScanEventOver_c | Scanning event over                    |
| gNotifScanAdvPktRx_c  | Scanning ADV PKT RX                    |
| gNotifScanRspRx_c     | Scanning SCAN RSP RX                   |
| gNotifScanReqTx_c     | Scanning SCAN REQ TX                   |
| gNotifConnCreated_c   | Connection created                     |

After enabling events, the user should wait for a gControllerNotificationEvent\_c GAP Generic Event in the GAP Generic Callback. The first event received should have the event type set to gNotifEventNone\_c with a status of success confirming the selected event mask has been enabled. The same event types apply for both the GAP command and the GAP event. The structure for the Controller Notification event is the following:

| Event Data | Data type              | Data Description  |
|------------|------------------------|---|
| eventType  | bleNotificationEvent_t | Enhanced notification event type  |
| deviceId   | deviceId_t             | Device id of the peer, valid for connection events                        |
| rssi       | int8_t                 | RSSI, valid for RX event types  |
| channel    | uint8_t                | Channel, valid for connection event over or Rx/Tx events                  |
| ce_counter | uint16_t               | Connection event counter, valid for connection events only                |
| status     | bleResult_t            | Status of the request to select which events to be enabled/disabled       |
| timestamp  | uint16_t               | Timestamp in 625 us slots, valid for Conn RX event and Conn Created event |

- **Controller configuration:**

The user should call the following function to enable various events from the mask or use Event None to disable the feature. The same event types apply as the GAP layer types. The connection handle is valid only for connection events.

```
bleResult_t Controller_ConfigureEnhancedNotification
(
    uint16_t eventType,
    uint16_t conn_handle
);
```

The event monitoring is done in a user installed callback by calling:

```
bleResult_t Controller_RegisterEnhancedEventCallback
(
    bleCtrlNotificationCallback_t notificationCallback
);
```

Where the types are the following:

```
typedef struct bleCtrlNotificationEvent_tag
{
    uint16_t event_type; /*!bleNotificationEventType_t */
    uint16_t conn_handle;
    int8_t rssi;
    uint8_t channel_index;
    uint16_t conn_ev_counter;
    uint16_t timestamp;
} bleCtrlNotificationEvent_t;
typedef void (*bleCtrlNotificationCallback_t)
(
    bleCtrlNotificationEvent_t *pNotificationEvent
);
```

The event structure is nearly identical as the GAP one, except there is no status as the function call executes synchronously.

| Event Data      | Data type              | Data Description  |
|-----------------|------------------------|---|
| event_type      | bleNotificationEvent_t | Enhanced notification event type  |
| conn_handle     | uint16_t               | Connection handle of the peer, valid for connection events                |
| rssi            | int8_t                 | RSSI, valid for RX event types  |
| channel_index   | uint8_t                | Channel, valid for connection event over or Rx/Tx events                  |
| conn_ev_counter | uint16_t               | Connection event counter, valid for connection events only                |
| timestamp       | uint16_t               | Timestamp in 625 us slots, valid for Conn RX event and Conn Created event |

## 4.8 Extended Advertising (KW37)


Starting with Bluetooth 5, the advertising channels are separated in primary advertising channels and secondary advertising channels:


### 1. Primary advertising channels

- 3 legacy advertising channels 37, 38 and 39
- Can use either legacy 1M PHY or new LE Coded PHY
- PHY payload can vary from 6 to 37 bytes
- Packets on these channels are part of the advertising events

### 2. Secondary advertising channels

- 37 channels, the same channel index as the data channels
- Can use any LE PHY, but the same PHY during an Extended Advertising Event
- PHY payload can vary from 0 to 255 bytes
- Auxiliary packets on these channels are part of the Extended Advertising Event that begins at the same time with the advertising event on primary channel and ends with the last packet on the secondary channel

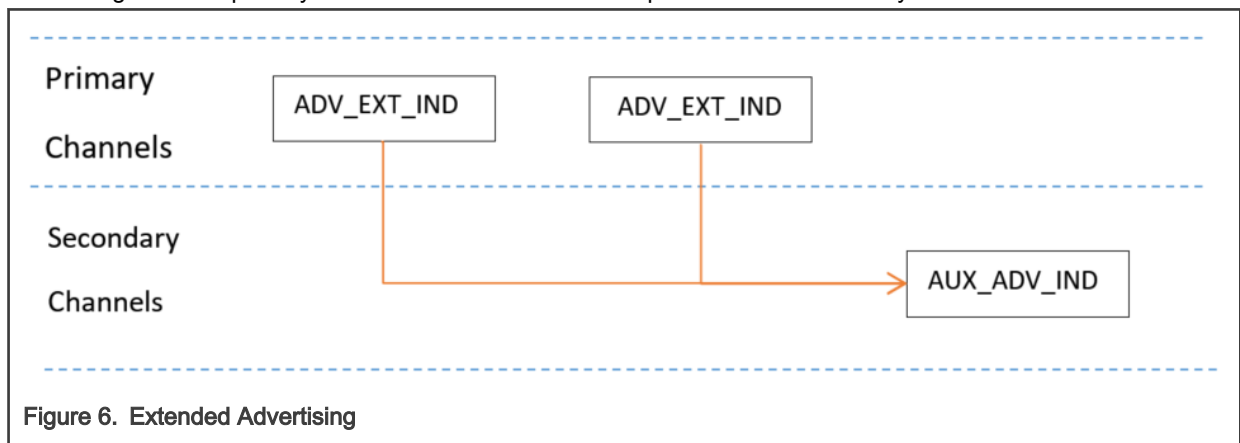

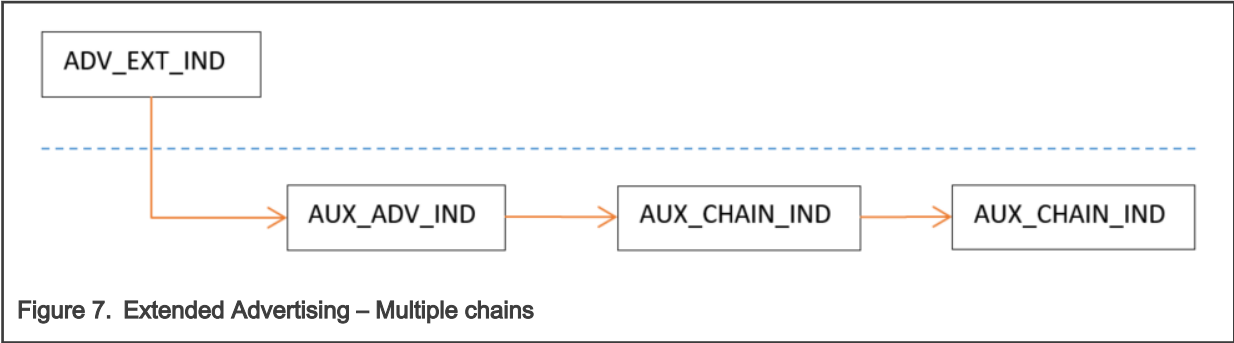

An advertising data set is represented by advertising PDUs belonging together in an advertising event. Each set has different advertising parameters: PDU type, advertising interval and PHY mode. The advertising data sets are identified by the Advertising SID (Set ID) field from the ADI – Advertising Data Info. Advertising data or Scan response data can be changed for each advertising data set and the random value of DID (Data ID) field will be updated to differentiate between them.

4.8.1 Peripheral Setup

This section describes the extended advertising GAP API. The application should not use both the extended and legacy API (described in section 4.2.1). If this requirement cannot be met, the application should at least wait for the generated events in the Advertising Callback prior to using the other API. That is, it is advisable to call legacy functions only after the event pertaining to an extended API is received, and vice versa. This GAP constraint can be considered an extension of the HCI constraint from the Bluetooth 5 specification: "A Host should not issue legacy commands to a Controller that supports the LE Feature (Extended Advertising)".

The application configures extended advertising by going through the following states:

- 1. Set the extended advertising parameters by calling:

```
bleResult_t Gap_SetExtAdvertisingParameters
(
    gapExtAdvertisingParameters_t*    pAdvertisingParameters
);
```

It may use the default set of parameters *gGapDefaultExtAdvertisingParameters\_d*. The application should wait for a *gExtAdvertisingParametersSetupComplete\_c* event in the Generic Callback. Only one advertising set can be configured at a time.

Comparing with the legacy *Gap\_SetAdvertisingParameters* command, the new set of parameters is:

Table 3. New extended advertising parameters

| Parameter        | Description   |
|------------------|---|
| SID              | Value of the Advertising SID subfield in the ADI field of the PDU.  |
| handle           | Used to identify an advertising set. Possible values are 0x00 or 0x01 since the current implementation supports two advertising sets.   |
| extAdvProperties | BIT0 - Connectable advertising<br>BIT1 - Scannable advertising<br>BIT2 - Directed advertising<br>BIT3 - High Duty Cycle Directed Connectable advertising (≤ 3.75 ms Advertising Interval) |

Table continues on the next page...

Table 3. New extended advertising parameters (continued)

| Parameter                 | Description   |
|---------------------------|---|
|                           | <p>BIT4 - Use legacy advertising PDUs</p> <p>BIT5 - Omit advertiser's address from all PDUs ("anonymous advertising")</p> <p>BIT6 - Include TxPower in the extended header of the advertising PDU</p> <p>If legacy advertising PDU types are being used (BIT4 = 1), permitted properties values are presented in the next table. If the advertising set already contains data, the type shall be one that supports advertising data and the amount of data shall not exceed 31 octets.</p> <p>If extended advertising PDU types are being used (BIT4 = 0), then the advertisement shall <b>not be both connectable and scannable</b>. While high duty cycle directed connectable advertising (<math>\leq 3.75</math> ms advertising interval) shall not be used (BIT3 = 0).</p> |
| txPower                   | Maximum power level at which the advertising packets are to be transmitted, the Controller can choose any power level $\leq$ txPower. Value 127 to be used if Host has no preference.   |
| primaryPHY                | PHY for ADV_EXT_IND: LE 1 M or LE Coded   |
| secondaryPHY              | PHY for AUX_ADV_IND and periodic advertising: LE 1 M, LE 2 M or LE Coded. Ignored for legacy advertising.   |
| secondaryAdvMaxSkip       | Maximum advertising events that the Controller can skip before sending the AUX_ADV_IND packets on the secondary advertising channel. Higher values may result in lower power consumption. Ignored for legacy advertising.   |
| enableScanReqNotification | Whether to enable notifications when scanning PDUs (SCAN_REQ, AUX_SCAN_REQ) are received. If enabled, the application is notified upon scan requests by <i>gExtScanNotification_c</i> events in the Advertising Callback.   |

**NOTE**

When using LE Coded PHY for advertising, the default coding scheme chosen by link layer is S=8 (125 kb/s data rate). To change the default coding scheme, the user has two options:

- At compile time by defining `mLongRangeAdvCodingScheme_c`, or
- At run time by calling the API `Controller_ConfigureAdvCodingScheme()`.

In both cases, the value of the define or the parameter of the API has to be an appropriate value for primary and secondary PHYs as defined by the enumeration `advCodingScheme_tag` found in `controller_interface.h`.

Table 4. Advertising Event Properties values for legacy PDUs

| Event Type                           | PDU Type | Advertising Event Properties | Advertising Data |
|--------------------------------------|----------|------------------------------|------------------|
| Connectable and scannable undirected | ADV_IND  | 00010011b                    | Supported        |

*Table continues on the next page...*

Table 4. Advertising Event Properties values for legacy PDUs (continued)

| Event Type                                   | PDU Type        | Advertising Event Properties | Advertising Data |
|--|-----------------|------------------------------|------------------|
| Connectable directed (low duty cycle)        | ADV_DIRECT_IND  | 00010101b                    | Not allowed      |
| Connectable directed (high duty cycle)       | ADV_DIRECT_IND  | 00011101b                    | Not allowed      |
| Scannable undirected                         | ADV_SCAN_IND    | 00010010b                    | Supported        |
| Non-connectable and non-scannable undirected | ADV_NONCONN_IND | 00010000b                    | Supported        |

- Set the advertising data and/or scan response data by calling:

```
bleResult_t Gap_SetExtAdvertisingData
(
    uint8_t          handle,
    gapAdvertisingData_t* pAdvertisingData,
    gapScanResponseData_t* pScanResponseData
);
```

Either of the *pAdvertisingData* or *pScanResponseData* parameters can be NULL, but not both. For extended advertising (BIT4 = 0) only one must be different than NULL – the scannable advertising bit (BIT1) indicates whether *pAdvertisingData* (BIT1 = 0) or *pScanResponseData* (BIT1 = 1) is accepted. The total amount of Advertising Data shall not exceed 1650 bytes. Application should wait for a *gExtAdvertisingDataSetupComplete\_c* event in the Generic Callback.

- Enable extended advertising by calling:

```
bleResult_t Gap_StartExtAdvertising
(
    gapAdvertisingCallback_t advertisingCallback,
    gapConnectionCallback_t connectionCallback,
    uint8_t                 handle,
    uint16_t                duration,
    uint8_t                 maxExtAdvEvents
);
```

Advertising may be enabled for each previously configured advertising set, identified by the *handle* parameter. If *duration* is set to 0, advertising continues until the Host disables it, otherwise advertising is only enabled for this period (multiple of 10 ms). *maxExtAdvEvents* represent the maximum number of extended advertising events the Controller shall attempt to send prior to terminating the extended advertising, ignored if set to 0.

Application should wait for a *gExtAdvertisingStateChanged\_c* or a *gAdvertisingCommandFailed\_c* event in the Advertising Callback.

- Disable advertising by calling:

```
bleResult_t Gap_StopExtAdvertising
(
    uint8_t handle
);
```

Application should wait for a *gExtAdvertisingStateChanged\_c* or a *gAdvertisingCommandFailed\_c* event in the Advertising Callback.

- Remove the advertising set by calling:

```
bleResult_t Gap_RemoveAdvSet
(
```

```
uint8_t handle
);
```

Application should wait for a *gExtAdvertisingSetRemoveComplete\_c* event in the Generic Callback.

## 4.8.2 Central setup

The application configures the extended scanning by going through the following states:

1. Start scanning by calling:

```
bleResult_t Gap_StartScanning
(
    const gapScanningParameters_t*    pScanningParameters,
    gapScanningCallback_t              scanningCallback,
    gapFilterDuplicates_t              enableFilterDuplicates,
    uint16_t                           duration,
    uint16_t                           period
)
```

Application may use the default set of parameters *gGapDefaultExtScanningParameters\_d*. If the *pScanningParameters* pointer is NULL, the latest set of parameters are used. The *scanningPHYs* parameter indicates the PHYs on which the advertising packets should be received on the **primary advertising channel**. As a result, permitted values for the parameter are 0x01 (scan LE 1M), 0x04 (scan LE Coded) and 0x05 (scan both LE 1M and LE Coded). There are no strict timing rules for scanning, yet if both PHYs are enabled for scanning, the scan interval value must be large enough to accommodate two scan windows (*interval* >= 2 \* *window*).

If the advertiser uses legacy advertising PDUs, the device may actively scan by sending a SCAN\_REQ PDU to the advertiser on the LE 1M primary advertising channel (no secondary channel in legacy advertising). Respectively, if the advertiser uses extended advertising PDUs, the active scan operation takes place on the secondary advertising channel. After the device receives a scannable ADV\_EXT\_IND PDU on the primary advertising channel (PHY LE 1M or Coded), it starts listening for the AUX\_ADV\_IND PDU on the secondary advertising channel (PHY 1M, 2M or Coded). Once received, the device sends an AUX\_SCAN\_REQ to the advertiser. Next, an AUX\_SCAN\_RSP PDU should be received, containing the scan response data.

Application should wait for a *gScanStateChanged\_c* or a *gScanCommandFailed\_c* in the Scanning Callback.

2. Collect information by waiting for *gDeviceScanned\_c* (legacy advertising PDUs) or *gExtDeviceScanned\_c* (extended advertising PDUs) event in the Scanning Callback. The *gExtDeviceScanned\_c* event contains additional information pertaining to the extended received PDU, such as: primary PHY, secondary PHY, advertising SID, interval of the periodic advertising if enabled in the set.
3. Stop scanning by calling:

```
bleResult_t Gap_StopScanning(void);
```

Application should wait for a *gScanStateChanged\_c* or a *gScanCommandFailed\_c* in the Scanning Callback.


4. Connect to a device by calling:

```
bleResult_t Gap_Connect
(
    const gapConnectionRequestParameters_t*    pParameters,
    gapConnectionCallback_t                    connCallback
);
```

The *initiatingPHYs* parameter indicates the PHYs on which the advertising packets should be received on the primary advertising channel and the PHYs for which connection parameters have been specified. The parameter is a bitmask of PHYs: BIT0 = LE 1M, BIT1 = LE 2M and BIT2 = LE Coded. The Host may enable one or more initiating PHYs, but it must





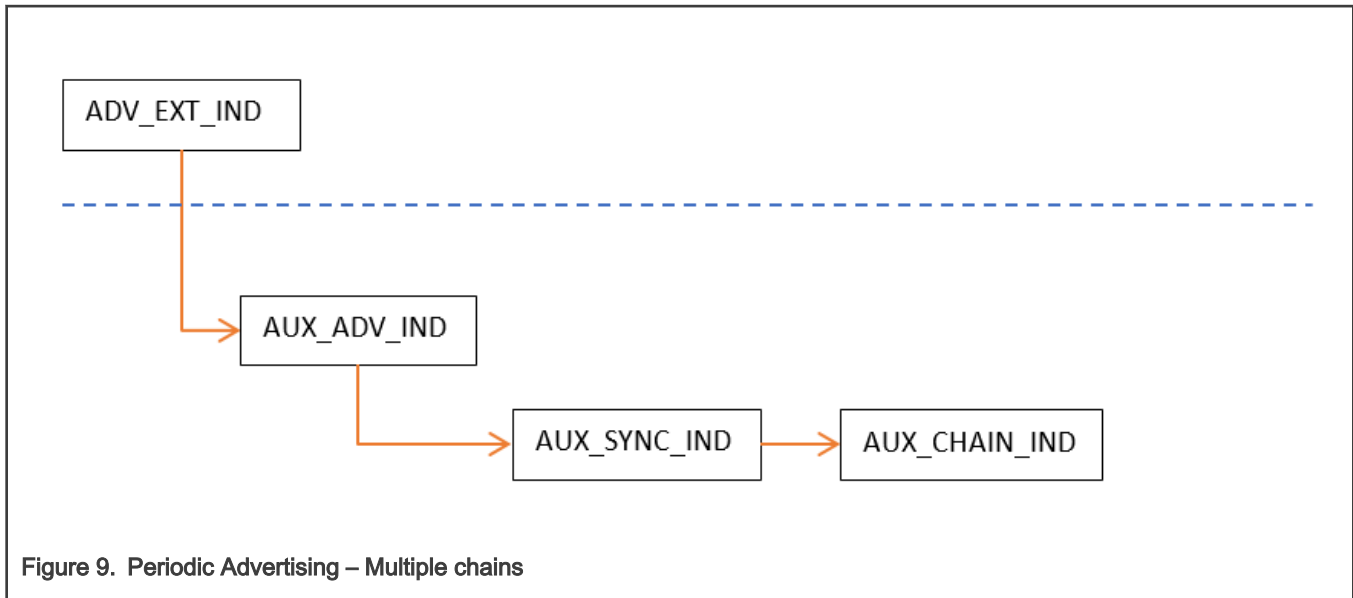

#### 4.9.1 Peripheral Setup

1. First set the extended advertising parameters using `Gap_SetExtAdvertisingParameters`. The extended advertising type must be set to non-connectable and non-scannable.
2. Set the periodic advertising parameters using the same handle as in the previous command.

```

bleResult_t Gap_SetPeriodicAdvParameters
(
    gapPeriodicAdvParameters_t*    pAdvertisingParameters
);
  
```

Wait for a *gPeriodicAdvParamSetupComplete\_œ* event in the generic callback.

3. Next, set the periodic advertising data by calling:

```

bleResult_t Gap_SetPeriodicAdvertisingData
(
    uint8_t                handle,
    gapAdvertisingData_t*   pAdvertisingData
);
  
```

*pAdvertisingData* cannot be NULL. If periodic advertising data must be empty, set *cNumAdStructures* to 0. Wait for a *gPeriodicAdvDataSetupComplete\_c* event in the generic callback.

4. Start extended advertising using `Gap_StartExtAdvertising`.
5. Last, enable Periodic Advertising. Periodic advertising will start only after extended advertising is started.

```

bleResult_t Gap_StartPeriodicAdvertising
(
    uint8_t handle
);
  
```

Wait for a *gPeriodicAdvertisingStateChanged\_c* event in the advertising callback.

#### 4.9.2 Central Setup

The application may decide to listen to periodic advertisings by going through the following states:

1. [Optional] Add a known periodic advertiser to the periodic advertiser list held in the Controller by calling:

```
bleResult_t Gap_UpdatePeriodicAdvList
(
    gapPeriodicAdvListOperation_t operation,
    bleAddressType_t               addrType,
    uint8_t*                       pAddr,
    uint8_t                        SID
);
```

Wait for the *gPeriodicAdvListUpdateComplete\_c* event in the Generic Callback.

2. Synchronize with a periodic advertiser by calling:

```
bleResult_t Gap_PeriodicAdvCreateSync
(
    gapPeriodicAdvSyncReq_t* pReq,
    gapScanningCallback_t    scanningCallback
);
```

*pReq* parameter *filterPolicy* can be set to *gUseCommandParameters\_c* to synchronize with the given peer, or to *gUsePeriodicAdvList\_c* to start synchronizing with all the devices in the previously populated periodic advertiser list.

Wait for the *gPeriodicAdvSyncEstablished\_c* event and check the status. If scanning is not enabled at the time this command is sent, synchronization will occur after scanning is started. Synchronization is pending until *gPeriodicAdvSyncEstablished\_c* event is received. If it was successful, the *syncHandle* is returned in this event.

3. Terminate the synchronization with the periodic advertiser by calling:

```
bleResult_t Gap_PeriodicAdvTerminateSync
(
    uint16_t syncHandle
);
```

Application may cancel a pending synchronization by calling *Gap\_PeriodicAdvTerminateSync* with *syncHandle* set to reserved value *gBlePeriodicAdvOngoingSyncCancelHandle* and wait for *gPeriodicAdvCreateSyncCancelled\_c* event. Otherwise, to terminate an already established sync with an advertiser use the *syncHandle* value from the *gPeriodicAdvSyncEstablished\_c* event and wait for a *gPeriodicAdvSyncTerminated\_c* event.

# Chapter 5

## Generic Attribute Profile (GATT) Layer

The GATT layer contains the APIs for discovering services and characteristics and transferring data between devices.

The GATT layer is built on top of the Attribute Protocol (ATT), which transfers data between Bluetooth Low Energy devices on a dedicated L2CAP channel (channel ID 0x04).

As soon as a connection is established between devices, the GATT APIs are readily available. No initialization is required because the L2CAP channel is automatically created.

To identify the GATT peer instance, the same *deviceId* value from the GAP layer (obtained in the *gConnEvtConnected\_* connection event) is used.

There are two GATT roles that define the two devices exchanging data over ATT:

- GATT Server – the device that contains a GATT Database, which is a collection of services and characteristics exposing meaningful data. Usually, the Server responds to *requests* and *commands* sent by the Client, but it can be configured to send data on its own through *notifications* and *indications*.
- GATT Client – the “active” device that usually sends *requests* and *commands* to the Server to *discover* Services and Characteristics on the Server’s Database and to exchange data.

There is no fixed rule deciding which device is the Client and which one is the Server. Any device may initiate a request at any moment, thus temporarily acting as a Client, at which the peer device may respond, provided it has the Server support and a GATT Database.

Often, a GAP Central acts as a GATT Client to discover Services and Characteristics and obtain data from the GAP Peripheral, which usually has a GATT Database. Many standard Bluetooth Low Energy profiles assume that the Peripheral has a database and must act as a Server. However, this is by no means a general rule.

### 5.1 Client APIs

A Client can configure the ATT MTU, discover Services and Characteristics, and initiate data exchanges.

All the functions have the same first parameter: a *deviceId* which identifies the connected device whose GATT Server is targeted in the GATT procedure. This is necessary because a Client may be connected to multiple Servers at the same time.

First, however, the application must install the necessary callbacks.

#### 5.1.1 Installing client callbacks

There are three callbacks that the Client application must install.

##### 5.1.1.1 Client procedure callback

All the procedures initiated by a Client are asynchronous. They rely on exchanging ATT packets over the air.

To be informed of the procedure completion, the application must install a callback with the following signature:

```
typedef void (* gattClientProcedureCallback_t )
(
    deviceId_t          deviceId,
    gattProcedureType_t procedureType,
    gattProcedureResult_t procedureResult,
    bleResult_t         error
);
```

To install this callback, the following function must be called:

```
bleResult_t GattClient_RegisterProcedureCallback
(
    gattClientProcedureCallback_t callback
);
```

The *procedureType* parameter may be used to identify the procedure that was started and has reached completion. Only one procedure may be active at a given moment. Trying to start another procedure while a procedure is already in progress returns the error *gGattAnotherProcedureInProgress\_c*.

The *procedureResult* parameter indicates whether the procedure completes successfully or an error occurs. In the latter case, the *error* parameter contains the error code.

```
void gattClientProcedureCallback
(
    deviceId_t          deviceId,
    gattProcedureType_t procedureType,
    gattProcedureResult_t procedureResult,
    bleResult_t         error
)
{
    switch (procedureType)
    {
        /* ... */
    }
}

GattClient_RegisterProcedureCallback(gattClientProcedureCallback);
```

### 5.1.1.2 Notification and indication callbacks

When the Client receives a notification from the Server, it triggers a callback with the following prototype:

```
typedef void (* gattClientNotificationCallback_t )
(
    deviceId_t          deviceId,
    uint16_t            characteristicValueHandle,
    uint8_t *           aValue,
    uint16_t            valueLength
);
```

The *deviceId* identifies the Server connection (for multiple connections at the same time). The *characteristicValueHandle* is the attribute handle of the Characteristic Value declaration in the GATT Database. The Client must have discovered it previously to be able recognize it.

The callback must be installed with:

```
bleResult_t GattClient_RegisterNotificationCallback
(
    gattClientNotificationCallback_t callback
);
```

Very similar definitions exist for indications.

When receiving a notification or indication, the Client uses the *characteristicValueHandle* to identify which Characteristic was notified. The Client must be aware of the possible Characteristic Value handles that can be notified/indicated at any time, because it has previously activated them by writing its CCCD (see [Reading and writing characteristic descriptors](#)).

### 5.1.2 MTU exchange

A radio packet sent over the Bluetooth Low Energy contains a maximum of 27 bytes of data for the L2CAP layer. Because the L2CAP header is 4 bytes long (including the Channel ID), all layers above L2CAP, including ATT and GATT, may only send 23 bytes of data in a radio packet (as per Bluetooth 4.1 Specification for Bluetooth Low Energy).

#### NOTE

This number is fixed and cannot be increased in Bluetooth Low Energy 4.1.

To maintain a logical mapping between radio packets and ATT packets, the Standard has set the default length of an ATT packet (the so-called *ATT\_MTU*) also equal to 23. Thus, any ATT request fits in a single radio packet. If the layer above ATT wishes to send more than 23 bytes of data, it needs to fragment the data into smaller packets and issue multiple ATT requests.

However, the ATT protocol allows devices to increase the ATT\_MTU, only if both can support it. Increasing the ATT\_MTU has only one effect: the application does not have to fragment long data, however it can send more than 23 bytes in a single transaction. The fragmentation is moved on to the L2CAP layer. Over the air though, there would still be more than one radio packet sent.

If the GATT Client supports a larger than default MTU, it should start an MTU exchange as soon as it connects to any Server. During the MTU exchange, both devices would send their maximum MTU to the other, and the minimum of the two is chosen as the new MTU.

For example, if the Client supports a maximum ATT\_MTU of 250, and the Server supports maximum 120, after the exchange, both devices set the new ATT\_MTU value equal to 120.

To initiate the MTU exchange, call the following function from *gatt\_client\_interface.h*:

```
bleResult_t result = GattClient_ExchangeMtu(deviceId);

if (gBleSuccess_c != result)
{
    /* Treat error */
}
```

The value of the maximum supported ATT\_MTU of the local device does not have to be included in the request because it is static. It is defined in the *ble\_constants.h* file under the name *gAttMaxMtu\_c*. Inside the GATT implementation, the ATT Exchange MTU Request (and Response, for Servers) uses that value.

When the exchange is complete, the Client callback is triggered by the *gGattProcExchangeMtu\_c* procedure type.

```
void gattClientProcedureCallback
(
    deviceId_t deviceId,
    gattProcedureType_t procedureType,
    gattProcedureResult_t procedureResult,
    bleResult_t error
)
{
    switch (procedureType)
    {
        /* ... */
        case gGattProcExchangeMtu_c:
            if (gGattProcSuccess_c == procedureResult)
            {
                /* To obtain the new MTU */
                uint16_t newMtu;
                bleResult_t result = Gatt_GetMtu(deviceId, &newMtu);
                if (gBleSuccess_c == result)
                {
                    /* Use the value of the new MTU */
                    (void) newMtu;
                }
            }
    }
}
```

```

    }
    else
    {
        /* Handle error */
    }
    break;

    /* ... */
}
}

```

### 5.1.3 Service and characteristic discovery

There are multiple APIs that can be used for Discovery. The application may use any of them, according to its necessities.

#### 5.1.3.1 Discover all primary services

The following API can be used to discover all the Primary Services in a Server's database:

```

bleResult_t GattClient_DiscoverAllPrimaryServices
(
    deviceId_t      deviceId,
    gattService_t * aOutPrimaryServices,
    uint8_t         maxServiceCount,
    uint8_t *       pOutDiscoveredCount
);

```

The *aOutPrimaryServices* parameter must point to an allocated array of services. The size of the array must be equal to the value of the *maxServiceCount* parameter, which is passed to make sure the GATT module does not attempt to write past the end of the array if more Services are discovered than expected.

The *pOutDiscoveredCount* parameter must point to a static variable because the GATT module uses it to write the number of Services discovered at the end of the procedure. This number is less than or equal to the *maxServiceCount*.

If there is equality, it is possible that the Server contains more than *maxServiceCount* Services, but they could not be discovered as a result of the array size limitation. It is the application developer's responsibility to allocate a large enough number according to the expected contents of the Server's database.

In the following example, the application expects to find no more than 10 Services on the Server.

```

#define mcMaxPrimaryServices_c 10
static gattService_t primaryServices[mcMaxPrimaryServices_c];
uint8_t mcPrimaryServices;

bleResult_t result = GattClient_DiscoverAllPrimaryServices
(
    deviceId,
    primaryServices,
    mcMaxPrimaryServices_c,
    &mcPrimaryServices
);

if (gBleSuccess_c != result)
{
    /* Treat error */
}

```

The operation triggers the Client Procedure Callback when complete. The application may read the number of discovered services and each service's handle range and UUID.

```
void gattClientProcedureCallback
(
    deviceId_t          deviceId,
    gattProcedureType_t procedureType,
    gattProcedureResult_t procedureResult,
    bleResult_t         error
)
{
    switch (procedureType)
    {
        /* ... */
        case gGattProcDiscoverAllPrimaryServices_c:
            if (gGattProcSuccess_c == procedureResult)
            {
                /* Read number of discovered services */
                PRINT( mcPrimaryServices );
                /* Read each service's handle range and UUID */
                for (int j = 0; j < mcPrimaryServices; j++)
                {
                    PRINT( primaryServices[j]. startHandle );
                    PRINT( primaryServices[j]. endHandle );
                    PRINT( primaryServices[j]. uuidType );
                    PRINT( primaryServices[j]. uuid );
                }
            }
            else
            {
                /* Handle error */
                PRINT( error );
            }
            break;
        /* ... */
    }
}
```

### 5.1.3.2 Discover primary services by UUID

To discover only Primary Services of a known type (Service UUID), the following API can be used:

```
bleResult_t GattClient_DiscoverPrimaryServicesByUuid
(
    deviceId_t          deviceId,
    bleUuidType_t       uuidType,
    const bleUuid_t *    pUuid,
    gattService_t *      aOutPrimaryServices,
    uint8_t             maxServiceCount,
    uint8_t *            pOutDiscoveredCount
);
```

The procedure is very similar to the one described in [Discover all primary services](#). The only difference is this time we are filtering the search according to a Service UUID described by two extra parameters: *pUuid* and *uuidType*.

This procedure is useful when the Client is only interested in a specific type of Services. Usually, it is performed on Servers that are known to contain a certain Service, which is specific to a certain profile. Therefore, most of the times the search is expected to find a single Service of the given type. As a result, only one structure is usually allocated.

For example, when two devices implement the Heart Rate (HR) Profile, an HR Collector connects to an HR Sensor and may only be interested in discovering the Heart Rate Service (HRS) to work with its Characteristics. The following code example shows how to achieve this. Standard values for Service and Characteristic UUIDs, as defined by the Bluetooth SIG, are located in the *ble\_sig\_defines.h* file.

```
static gattService_t heartRateService;
static uint8_t mcHrs;

bleResult_t result = GattClient_DiscoverPrimaryServicesByUuid
(
    deviceId,
    gBleUuidType16_c,          /* Service UUID type */
    gBleSig_HeartRateService_d, /* Service UUID */
    &heartRateService,          /* Only one HRS is expected to be found */
    1,
    &mcHrs                      /* Will be equal to 1 at the end of the procedure
                                if the HRS is found, 0 otherwise */
);
if (gBleSuccess_c != result)
{
    /* Treat error */
}
```

In the Client Procedure Callback, the application should check if any Service with the given UUID was found and read its handle range (also perhaps proceed with Characteristic Discovery within that service range).

```
void gattClientProcedureCallback
(
    deviceId_t deviceId,
    gattProcedureType_t procedureType,
    gattProcedureResult_t procedureResult,
    bleResult_t error
)
{
    switch (procedureType)
    {
        /* ... */
        case gGattProcDiscoverPrimaryServicesByUuid_c:
            if (gGattProcSuccess_c == procedureResult)
            {
                if (1 == mcHrs)
                {
                    /* HRS found, read the handle range */
                    PRINT( heartRateService.startHandle );
                    PRINT( heartRateService.endHandle );
                }
                else
                {
                    /* HRS not found! */
                }
            }
            else
            {
                /* Handle error */
                PRINT( error );
            }
            break;
        /* ... */
    }
```



```

    }
}

```

### 5.1.3.3 Discover included services

[Discover all primary services](#) shows how to discover Primary Services. However, a Server may also contain Secondary Services, which are not meant to be used standalone and are usually included in the Primary Services. The inclusion means that all the Secondary Service's Characteristics may be used by the profile that requires the Primary Service.

Therefore, after a Primary Service has been discovered, the following procedure may be used to discover services (usually Secondary Services) included in it:

```

bleResult_t GattClient_FindIncludedServices
(
    deviceId_t      deviceId,
    gattService_t * pIoService,
    uint8_t         maxServiceCount
);

```

The service structure that *pIoService* points to must have the *aIncludedServices* field linked to an allocated array of services, of size *maxServiceCount*, chosen according to the expected number of included services to be found. This is the application's choice, usually following profile specifications.

Also, the service's range must be set (the *startHandle* and *endHandle* fields), which may have already been done by the previous Service Discovery procedure (as described in [Discover all primary services](#) and [Discover primary services by UUID](#)).

The number of discovered included services is written by the GATT module in the *cNumIncludedServices* field of the structure from *pIoService*. Obviously, a maximum of *maxServiceCount* included services is discovered.

The following example assumes the Heart Rate Service was discovered using the code provided in [Discover primary services by UUID](#).

```

/* Finding services included in the Heart Rate Primary Service */
gattService_t * pPrimaryService = &heartRateService;

#define mxMaxIncludedServices_c 3
static gattService_t includedServices[mxMaxIncludedServices_c];

/* Linking the array */
pPrimaryService-> aIncludedServices = includedServices;

bleResult_t result = GattClient_FindIncludedServices
(
    deviceId,
    pPrimaryService,
    mxMaxIncludedServices_c
);

if (gBleSuccess_c != result)
{
    /* Treat error */
}

```

When the Client Procedure Callback is triggered, if any included services are found, the application can read their handle range and their UUIDs.

```

void gattClientProcedureCallback
(
    deviceId_t deviceId,
    gattProcedureType_t procedureType,

```

```

    gattProcedureResult_t procedureResult,
    bleResult_t error
)
{
    switch (procedureType)
    {
        /* ... */
        case gGattProcFindIncludedServices_c:
            if (gGattProcSuccess_c == procedureResult)
            {
                /* Read included services data */
                PRINT( pPrimaryService-> cNumIncludedServices );
                for (int j = 0; j < pPrimaryService-> cNumIncludedServices ; j++)
                {
                    PRINT( pPrimaryService-> aIncludedServices [j]. startHandle );
                    PRINT( pPrimaryService-> aIncludedServices [j]. endHandle );
                    PRINT( pPrimaryService-> aIncludedServices [j]. uuidType );
                    PRINT( pPrimaryService-> aIncludedServices [j]. uuid );
                }
            }
            else
            {
                /* Handle error */
                PRINT( error );
            }
            break;
        /* ... */
    }
}

```

#### 5.1.3.4 Discover all characteristics of a service

The main API for Characteristic Discovery has the following prototype:

```

bleResult_t GattClient_DiscoverAllCharacteristicsOfService
(
    deviceId_t      deviceId,
    gattService_t * pIoService,
    uint8_t         maxCharacteristicCount
);

```

All required information is contained in the service structure pointed to by *pIoService*, most importantly being the service range (*startHandle* and *endHandle*) which is usually already filled out by a Service Discovery procedure. If not, they need to be written manually.

Also, the service structure's *aCharacteristics* field must be linked to an allocated characteristic array.

The following example discovers all Characteristics contained in the Heart Rate Service discovered in Section [Discover primary services by UUID](#).

```

gattService_t* pService = &heartRateService

#define mcMaxCharacteristics_c 10
static gattCharacteristic_t hrsCharacteristics[mcMaxCharacteristics_c];

pService->aCharacteristics = hrsCharacteristics;

bleResult_t result = GattClient_DiscoverAllCharacteristicsOfService
(

```

```

    deviceId,
    pService,
    mcMaxCharacteristics_c
);

```

The Client Procedure Callback is triggered when the procedure completes.

```

voidgattClientProcedureCallback
(
    deviceId_t          deviceId,
    gattProcedureType_t procedureType,
    gattProcedureResult_t procedureResult,
    bleResult_t         error
)
{
    switch (procedureType)
    {
        /* ... */
        casegGattProcDiscoverAllCharacteristics_c:
            if (gGattProcSuccess_c == procedureResult)
            {
                /* Read number of discovered Characteristics */
                PRINT(pService-> cNumCharacteristics );
                /* Read discovered Characteristics data */
                for ( uint8_t j = 0; j < pService-> cNumCharacteristics ; j++)
                {
                    /* Characteristic UUID is found inside the value field
                     * to avoid duplication */
                    PRINT(pService-> aCharacteristics [j]. value . uuidType );
                    PRINT(pService-> aCharacteristics [j]. value . uuid );

                    /* Characteristic Properties indicating the supported operations:
                     * - Read
                     * - Write
                     * - Write Without Response
                     * - Notify
                     * - Indicate
                     */
                    PRINT(pService-> aCharacteristics [j]. properties );

                    /* Characteristic Value Handle - used to identify
                     * the Characteristic in future operations */
                    PRINT(pService-> aCharacteristics [j]. value . handle );
                }
            }
            else
            {
                /* Handle error */
                PRINT( error );
            }
            break;
        /* ... */
    }
}

```

### 5.1.3.5 Discover characteristics by UUID

This procedure is useful when the Client intends to discover a specific Characteristic in a specific Service. The API allows for multiple Characteristics of the same type to be discovered, but most often it is used when a single Characteristic of the given type is expected to be found.

Continuing the example from [Discover primary services by UUID](#), let's assume the Client wants to discover the Heart Rate Control Point Characteristic inside the Heart Rate Service, as shown in the following code.

```
gattService_t * pService = &heartRateService;

static gattCharacteristic_t hrcpCharacteristic;
static uint8_t mcHrcpChar;

bleResult_t result = GattClient_DiscoverCharacteristicOfServiceByUuid
(
    deviceId,
    gBleUuidType16_c,
    gBleSig_HrControlPoint_d,
    pService,
    &hrcpCharacteristic,
    1,
    &mcHrcpChar
);
```

This API can be used as in the previous examples, in other words, following a Service Discovery procedure. However, the user may want to perform a Characteristic search with UUID over the entire database, skipping the Service Discovery entirely. To do so, a dummy service structure must be defined and its range must be set to maximum, as shown in the following example:

```
gattService_t dummyService;
dummyService.startHandle = 0x0001;
dummyService.endHandle = 0xFFFF;
static gattCharacteristic_t hrcpCharacteristic;
static uint8_t mcHrcpChar;

bleResult_t result = GattClient_DiscoverCharacteristicOfServiceByUuid
(
    deviceId,
    gBleUuidType16_c,
    gBleSig_HrControlPoint_d,
    &dummyService,
    &hrcpCharacteristic,
    1,
    &mcHrcpChar
);
```

In either case, the value of the *mcHrcpChar* variable should be checked in the procedure callback.

```
void gattClientProcedureCallback
(
    deviceId_t          deviceId,
    gattProcedureType_t procedureType,
    gattProcedureResult_t procedureResult,
    bleResult_t         error
)
{
    switch (procedureType)
    {
        /* ... */
        case gGattProcDiscoverCharacteristicByUuid_c:
    }
```

```

        if (gGattProcSuccess_c == procedureResult)
        {
            if (1 == mcHrcpChar)
            {
                /* HRCP found, read discovered data */
                PRINT(hrcpCharacteristic. properties );
                PRINT(hrcpCharacteristic. value . handle );
            }
            else
            {
                /* HRCP not found! */
            }
        }
        else
        {
            /* Handle error */
            PRINT(error);
        }
        break;
    }
    /* ... */
}

```

### 5.1.3.6 Discover characteristic descriptors

To discover all descriptors of a Characteristic, the following API is provided:

```

bleResult_t GattClient_DiscoverAllCharacteristicDescriptors
(
    deviceId_t          deviceId,
    gattCharacteristic_t * pIoCharacteristic,
    uint16_t            endingHandle,
    uint8_t             maxDescriptorCount
);

```

The *pIoCharacteristic* pointer must point to a Characteristic structure with the *value.handle* field set (either by a discovery operation or by the application) and the *aDescriptors* field pointed to an allocated array of Descriptor structures.

The *endingHandle* should be set to the handle of the next Characteristic or Service declaration in the database to indicate when the search for descriptors must stop. The GATT Client module uses ATT Find Information Requests to discover the descriptors, and it does so until it discovers a Characteristic or Service declaration or until *endingHandle* is reached. Thus, by providing a correct ending handle, the search for descriptors is optimized, sparing unnecessary extra air packets.

If, however, the application does not know where the next declaration lies and cannot provide this optimization hint, the *endingHandle* should be set to *0xFFFF*.

Continuing the example from [Discover characteristics by UUID](#), the following code assumes that the Heart Rate Control Point Characteristic has no more than 5 descriptors and performs Descriptor Discovery.

```

#define mcMaxDescriptors_c 5
static gattAttribute_t aDescriptors[mcMaxDescriptors_c];
hrcpCharacteristic. aDescriptors = aDescriptors;

bleResult_t result = GattClient_DiscoverAllCharacteristicDescriptors
(
    deviceId,
    &hrcpCharacteristic,
    0xFFFF, /* We don't know where the next Characteristic/Service begins */
    mcMaxDescriptors_c
);

```

```

);

if (gBleSuccess_c != result)
{
    /* Handle error */
}

```

The Client Procedure Callback is triggered at the end of the procedure.

```

void gattClientProcedureCallback
(
    deviceId_t          deviceId,
    gattProcedureType_t procedureType,
    gattProcedureResult_t procedureResult,
    bleResult_t         error
)
{
    switch (procedureType)
    {
        /* ... */
        case gGattProcDiscoverAllCharacteristicDescriptors_c:
            if (gGattProcSuccess_c == procedureResult)
            {
                /* Read number of discovered descriptors */
                PRINT(hrcpCharacteristic.cNumDescriptors);
                /* Read descriptor data */
                for (uint8_t j = 0; j < hrcpCharacteristic.cNumDescriptors; j++)
                {
                    PRINT(hrcpCharacteristic.aDescriptors[j].handle);
                    PRINT(hrcpCharacteristic.aDescriptors[j].uuidType);
                    PRINT(hrcpCharacteristic.aDescriptors[j].uuid);
                }
            }
            else
            {
                /* Handle error */
                PRINT(error);
            }
            break;

        /* ... */
    }
}

```

## 5.1.4 Reading and writing characteristics

### 5.1.4.1 Characteristic value read procedure

The main API for reading a Characteristic Value is shown here:

```

bleResult_t GattClient_ReadCharacteristicValue
(
    deviceId_t          deviceId,
    gattCharacteristic_t * pIoCharacteristic,
    uint16_t            maxReadBytes
);

```

This procedure assumes that the application knows the Characteristic Value Handle, usually from a previous Characteristic Discovery procedure. Therefore, the *value.handle* field of the structure pointed by *ploCharacteristic* must be completed.

Also, the application must allocate a large enough array of bytes where the received value (from the ATT packet exchange) is written. The *maxReadBytes* parameter is set to the size of this allocated array.

The GATT Client module takes care of long characteristics, whose values have a greater length than can fit in a single ATT packet, transparently by issuing repeated ATT Read Blob Requests when needed.

The following examples assume that the application knows the Characteristic Value Handle and that the value length is variable, but limited to 50 bytes.

```
gattCharacteristic_t myCharacteristic;
myCharacteristic.value.handle = 0x10AB;

#define mcMaxValueLength_c 50
static uint8_t aValue[mcMaxValueLength_c];

myCharacteristic.value.paValue = aValue;

bleResult_t result = GattClient_ReadCharacteristicValue
(
    deviceId,
    &myCharacteristic,
    mcMaxValueLength_c
);

if (gBleSuccess_c != result)
{
    /* Handle error */
}
```

Regardless of the value length, the Client Procedure Callback is triggered when the reading is complete. The received value length is also filled in the *value* structure.

```
void gattClientProcedureCallback
(
    deviceId_t          deviceId,
    gattProcedureType_t procedureType,
    gattProcedureResult_t procedureResult,
    bleResult_t         error
)
{
    switch (procedureType)
    {
        /* ... */
        case gattProcReadCharacteristicValue_c:
            if (gGattProcSuccess_c == procedureResult)
            {
                /* Read value length */
                PRINT(myCharacteristic.value.valueLength);
                /* Read data */
                for (uint16_t j = 0; j < myCharacteristic.value.valueLength; j++)
                {
                    PRINT(myCharacteristic.value.paValue[j]);
                }
            }
            else
            {
                /* Handle error */
            }
        }
    }
```

```

        PRINT(error);
    }
    break;

    /* ... */
}
}

```

#### 5.1.4.2 Characteristic read by UUID procedure

This API for this procedure is shown here:

```

bleResult_t GattClient_ReadUsingCharacteristicUuid
(
    deviceId_t          deviceId,
    bleUuidType_t       uuidType,
    const bleUuid_t*    pUuid,
    const gattHandleRange_t* pHandleRange,
    uint8_t*            aOutBuffer,
    uint16_t            maxReadBytes,
    uint16_t*           pOutActualReadBytes
);

```

This provides support for an important optimization, which involves reading a Characteristic Value without performing any Service or Characteristic Discovery.

For example, the following is the process to write an application that connects to any Server and wants to read the device name.

The device name is contained in the Device Name Characteristic from the GAP Service. Therefore, the necessary steps involve discovering all primary services, identifying the GAP Service by its UUID, discovering all Characteristics of the GAP Service and identifying the Device Name Characteristic (alternatively, discovering Characteristic by UUID inside GAP Service), and, finally, reading the device name by using the Characteristic Read Procedure.

Instead, the Characteristic Read by UUID Procedure allows reading a Characteristic with a specified UUID, assuming one exists on the Server, without knowing the Characteristic Value Handle.

The described example is implemented as follows:

```

#define mcMaxValueLength_c 20
static uint8_t aValue[2 + mcMaxValueLength_c]; //First 2 bytes are the handle
static uint16_t deviceNameLength;

bleUuid_t uuid = {
    .uuid16 = gBleSig_GapDeviceName_d
};

bleResult_t result = GattClient_ReadUsingCharacteristicUuid
(
    deviceId,
    gBleUuidType16_c,
    &uuid,
    &pHandleRange,
    aValue,
    mcMaxValueLength,
    &pOutActualReadBytes
);

if (gBleSuccess_c != result)
{

```



```

    /* Handle error */
}

```

The Client Procedure Callback is triggered when the reading is complete. Because only one air packet is exchanged during this procedure, it can only be used as a quick reading of Characteristic Values with length no greater than  $ATT\_MTU - 1$ .

```

void gattClientProcedureCallback
(
    deviceId_t          deviceId,
    gattProcedureType_t procedureType,
    gattProcedureResult_t procedureResult,
    bleResult_t         error
)
{
    switch (procedureType)
    {
        /* ... */
        case gattProcReadUsingCharacteristicUuid_c:
            if (gGattProcSuccess_c == procedureResult)
            {
                /* Read characteristic value handle */
                PRINT(aValue[0] | (aValue[1] << 8));
                deviceNameLength -= 2;

                /* Read value length */
                PRINT(deviceNameLength);
                /* Read data */
                for ( uint8_t j = 0; j < deviceNameLength; j++)
                {
                    PRINT(aValue[2 + j]);
                }
            }
            else
            {
                /* Handle error */
                PRINT(error);
            }
            break;

        /* ... */
    }
}

```

#### 5.1.4.3 Characteristic read multiple procedure

The API for this procedure is shown here:

```

bleResult_t GattClient_ReadMultipleCharacteristicValues
(
    deviceId_t          deviceId,
    uint8_t             cNumCharacteristics,
    gattCharacteristic_t * aIoCharacteristics
);

```

This procedure also allows an optimization for a specific situation, which occurs when multiple Characteristics, whose values are of known, fixed-length, can be all read in one single ATT transaction (usually one single over-the-air packet).

The application must know the value handle and value length of each Characteristic. It must also write the *value.handle* and *value.maxValueLength* with the aforementioned values, respectively, and then link the *value.paValue* field with an allocated array of size *maxValueLength*.

The following example involves reading three characteristics in a single packet.

```
#define mcNumCharacteristics_c 3

#define mcChar1Length_c 4
#define mcChar2Length_c 5
#define mcChar3Length_c 6

static uint8_t aValue1[mcChar1Length_c];
static uint8_t aValue2[mcChar2Length_c];
static uint8_t aValue3[mcChar3Length_c];

static gattCharacteristic_t myChars[mcNumCharacteristics_c];

myChars[0].value.handle = 0x0015;
myChars[1].value.handle = 0x0025;
myChars[2].value.handle = 0x0035;

myChars[0].value.maxValueLength = mcChar1Length_c;
myChars[1].value.maxValueLength = mcChar2Length_c;
myChars[2].value.maxValueLength = mcChar3Length_c;

myChars[0].value.paValue = aValue1;
myChars[1].value.paValue = aValue2;
myChars[2].value.paValue = aValue3;

bleResult_t result = GattClient_ReadMultipleCharacteristicValues
(
    deviceId,
    mcNumCharacteristics_c,
    myChars
);

if (gBleSuccess_c != result)
{
    /* Handle error */
}
```

When the Client Procedure Callback is triggered, if no error occurs, each Characteristic's value length should be equal to the requested lengths.

```
void gattClientProcedureCallback
(
    deviceId_t          deviceId,
    gattProcedureType_t procedureType,
    gattProcedureResult_t procedureResult,
    bleResult_t         error
)
{
    switch (procedureType)
    {
        /* ... */
        case gGattProcReadMultipleCharacteristicValues_c:
            if (gGattProcSuccess_c == procedureResult)
            {

```

```

        for ( uint8_t i = 0; i < mcNumCharacteristics_c; i++)
        {
            /* Read value length */
            PRINT(myChars[i]. value . valueLength );
            /* Read data */
            for ( uint8_t j = 0; j < myChars[i]. value . valueLength ; j++)
            {
                PRINT(myChars[i]. value . paValue [j]);
            }
        }
    }
    else
    {
        /* Handle error */
        PRINT(error);
    }
    break;

    /* ... */
}
}

```

#### 5.1.4.4 Characteristic write procedure

There is a general API that may be used for writing Characteristic Values:

```

bleResult_t GattClient_WriteCharacteristicValue
(
    deviceId_t                deviceId,
    const gattCharacteristic_t * pCharacteristic,
    uint16_t                  valueLength,
    const uint8_t *           aValue,
    bool_t                    withoutResponse,
    bool_t                    signedWrite,
    bool_t                    doReliableLongCharWrites,
    const uint8_t *           aCsrk
);

```

It has many parameters to support different combinations of Characteristic Write Procedures.

The structure pointed to by the *pCharacteristic* is only used for the *value.handle* field which indicates the Characteristic Value Handle. The value to be written is contained in the *aValue* array of size *valueLength*.

The *withoutResponse* parameter can be set to *TRUE* if the application wishes to perform a Write Without Response Procedure, which translates into an ATT Write Command. If this value is selected, the *signedWrite* parameter indicates whether data should be signed (Signed Write Procedure over ATT Signed Write Command), in which case the *aCsrk* parameters must not be NULL and contains the CSRK to sign the data with. Otherwise, both *signedWrite* and *aCsrk* are ignored.

Finally, *doReliableLongCharWrites* should be sent to *TRUE* if the application is writing a long Characteristic Value (one that requires multiple air packets due to *ATT\_MTU* limitations) and wants the Server to confirm each part of the attribute that is sent over the air.

To simplify the application code, the following macros are defined:

```

#define GattClient_SimpleCharacteristicWrite(deviceId, pChar, valueLength, aValue) \
    GattClient_WriteCharacteristicValue\
        (deviceId, pChar, valueLength, aValue, FALSE, FALSE, FALSE, NULL)

```

This is the simplest usage for writing a Characteristic. It sends an ATT Write Request if the value length does not exceed the maximum space for an over-the-air packet ( $ATT\_MTU - 3$ ). Otherwise, it sends ATT Prepare Write Requests with parts of the attribute, without checking the ATT Prepare Write Response data for consistency, and in the end an ATT Execute Write Request.

```
#define GattClient_CharacteristicWriteWithoutResponse(deviceId, pChar, valueLength, aValue) \
    GattClient_WriteCharacteristicValue\
        (deviceId, pChar, valueLength, aValue, TRUE, FALSE, FALSE, NULL)
```

This usage sends an ATT Write Command. Long Characteristic values are not allowed here and trigger a *gBleInvalidParameter\_c* error.

```
#define GattClient_CharacteristicSignedWrite(deviceId, pChar, valueLength, aValue, aCsrk) \
    GattClient_WriteCharacteristicValue\
        (deviceId, pChar, valueLength, aValue, TRUE, TRUE, FALSE, aCsrk)
```

This usage sends an ATT Signed Write Command. The CSRK used to sign data must be provided.

This is a short example to write a 3-byte long Characteristic Value.

```
gattCharacteristic_t myChar;
myChar.value.handle = 0x00A0; /* Or maybe it was previously discovered? */

#define mcValueLength_c 3
uint8_t aValue[mcValueLength_c] = { 0x01, 0x02, 0x03 };

bleResult_t result = GattClient_SimpleCharacteristicWrite
(
    deviceId,
    &myChar,
    mcValueLength_c,
    aValue
);

if (gBleSuccess_c != result)
{
    /* Handle error */
}
```

The Client Procedure Callback is triggered when writing is complete.

```
void gattClientProcedureCallback
(
    deviceId_t          deviceId,
    gattProcedureType_t procedureType,
    gattProcedureResult_t procedureResult,
    bleResult_t         error
)
{
    switch (procedureType)
    {
        /* ... */
        case gGattProcWriteCharacteristicValue_c:
            if (gGattProcSuccess_c == procedureResult)
            {
                /* Continue */
            }
            else
            {
                /* Handle error */
            }
    }
}
```

```

        PRINT(error);
    }
    break;

    /* ... */
}
}

```

### 5.1.5 Reading and writing characteristic descriptors

Two APIs are provided for these procedures which are very similar to Characteristic Read and Write.

The only difference is that the handle of the attribute to be read/written is provided through a pointer to an *gattAttribute\_t* structure (same type as the *gattCharacteristic\_t.value* field).

```

bleResult_t GattClient_ReadCharacteristicDescriptor
(
    deviceId_t          deviceId,
    gattAttribute_t *   pIoDescriptor,
    uint16_t            maxReadBytes
);

```

The *pIoDescriptor->handle* is required (it may have been discovered previously by *GattClient\_DiscoverAllCharacteristicDescriptors*). The GATT module fills the value that was read in the fields *pIoDescriptor->aValue* (must be linked to an allocated array) and *pIoDescriptor->valueLength* (size of the array).

Writing a descriptor is also performed similarly with this function:

```

bleResult_t GattClient_WriteCharacteristicDescriptor
(
    deviceId_t          deviceId,
    gattAttribute_t *   pDescriptor,
    uint16_t            valueLength,
    uint8_t *           aValue
);

```

Only the *pDescriptor->handle* must be filled before calling the function.

One of the most frequently written descriptors is the Client Characteristic Configuration Descriptor (CCCD). It has a well-defined UUID (*gBleSig\_CCCD\_d*) and a 2-byte long value that can be written to enable/disable notifications and/or indications.

In the following example, a Characteristic's descriptors are discovered and its CCCD written to activate notifications.

```

static gattCharacteristic_t myChar;
myChar.value.handle = 0x00A0; /* Or maybe it was previously discovered? */

#define mcMaxDescriptors_c 5
static gattAttribute_t aDescriptors[mcMaxDescriptors_c];
myChar.aDescriptors = aDescriptors;

/* ... */

{
    bleResult_t result = GattClient_DiscoverAllCharacteristicDescriptors
    (
        deviceId,
        &myChar,
        0xFFFF,
        mcMaxDescriptors_c
    );
}

```

```

    if (gBleSuccess_c != result)
    {
        /* Handle error */
    }
}

/* ... */

void gattClientProcedureCallback
(
    deviceId_t          deviceId,
    gattProcedureType_t procedureType,
    gattProcedureResult_t procedureResult,
    bleResult_t         error
)
{
    switch (procedureType)
    {
        /* ... */
        case gGattProcDiscoverAllCharacteristicDescriptors_c:
            if (gGattProcSuccess_c == procedureResult)
            {
                /* Find CCCD */
                for (uint8_t j = 0; j < myChar. cNumDescriptors ; j++)
                {
                    if (gBleUuidType16_c == myChar. aDescriptors [j]. uuidType
                        && gBleSig_CCCD_d == myChar. aDescriptors [j]. uuid . uuid16 )
                    {
                        uint8_t cccdValue[2];
                        packTwoByteValue(gCccdNotification_c, cccdValue);
                        bleResult_t result = GattClient_WriteCharacteristicDescriptor
                        (
                            deviceId,
                            &myChar. aDescriptors [j],
                            2,
                            cccdValue
                        );

                        if (gBleSuccess_c != result)
                        {
                            /* Handle error */
                        }
                        break;
                    }
                }
            }
            else
            {
                /* Handle error */
                PRINT(error);
            }
            break;

        case gGattProcWriteCharacteristicDescriptor_c:
            if (gGattProcSuccess_c == procedureResult)
            {
                /* Notification successfully activated */
            }
            else

```

```

        {
            /* Handle error */
            PRINT(error);
        }

        /* ... */
    }
}

```

### 5.1.6 Resetting procedures

To cancel an ongoing Client Procedure, the following API can be called:

```
bleResult_t GattClient_ResetProcedure (void);
```

It resets the internal state of the GATT Client and new procedure may be started at any time.

## 5.2 Server APIs

Once the GATT Database has been created and the required security settings have been registered with *Gap\_RegisterDeviceSecurityRequirements*, all ATT Requests and Commands and attribute access security checks are handled internally by the GATT Server module.

Besides this automatic functionality, the application may use GATT Server APIs to send Notifications and Indication and, optionally, to intercept Clients' attempts to write certain attributes.

### 5.2.1 Server callback

The first GATT Server call is the installation of the Server Callback, which has the following prototype:

```

typedef void (* gattServerCallback_t )
(
    deviceId_t          deviceId,    /*!< Device ID identifying the active connection. */
    gattServerEvent_t * pServerEvent /*!< Server event. */
);

```

The callback can be installed with:

```

bleResult_t GattServer_RegisterCallback
(
    gattServerCallback_t callback
);

```

The first member of the *gattServerEvent\_t* structure is the *eventType*, an enumeration type with the following possible values:

- *gEvtMtuChanged\_c*: Signals that the Client-initiated MTU Exchange Procedure has completed successfully and the *ATT\_MTU* has been increased. The event data contains the new value of the *ATT\_MTU*. Is it possible that the application flow depends on the value of the *ATT\_MTU*, for example, there may be specific optimizations for different *ATT\_MTU* ranges. This event is not triggered if the *ATT\_MTU* was not changed during the procedure.
- *gEvtHandleValueConfirmation\_c*: A Confirmation was received from the Client after an Indication was sent by the Server.
- *gEvtAttributeWritten\_c*, *gEvtAttributeWrittenWithoutResponse\_c*: See [Attribute write notifications](#).
- *gEvtCharacteristicCccdWritten\_c*: The Client has written a CCCD. The application should save the CCCD value for bonded devices with *Gap\_SaveCccd*.
- *gEvtError\_c*: An error occurred during a Server-initiated procedure.

## 5.2.2 Sending notifications and indications

The APIs provided for these Server-initiated operations are very similar:

```
bleResult_t GattServer_SendNotification
(
    deviceId_t      deviceId,
    uint16_t        handle
);
bleResult_t GattServer_SendIndication
(
    deviceId_t      deviceId,
    uint16_t        handle
);
```

Only the attribute handle needs to be provided to these functions. The attribute value is automatically retrieved from the GATT Database.

Note that it is the application developer's responsibility to check if the Client designated by the *deviceId* has previously activated Notifications/Indications by writing the corresponding CCCD value. To do that, the following GAP APIs should be used:

```
bleResult_t Gap_CheckNotificationStatus
(
    deviceId_t      deviceId,
    uint16_t        handle,
    bool_t *        pOutIsActive
);
bleResult_t Gap_CheckIndicationStatus
(
    deviceId_t      deviceId,
    uint16_t        handle,
    bool_t *        pOutIsActive
);
```

### NOTE

It is necessary to use these two functions with the *Gap\_SaveCccd* only for bonded devices, because the data is saved in NVM and reloaded at reconnection. For devices that do not bond, the application may also use its own bookkeeping mechanism.

There is an important difference between sending Notifications and Indications: the latter can only be sent one at a time and the application must wait for the Client Confirmation (signaled by the *gEvtHandleValueConfirmation\_c* Server event, or by a *gEvtError\_c* event with *gGattClientConfirmationTimeout\_c* error code) before sending a new Indication. Otherwise, a *gEvtError\_c* event with *gGattIndicationAlreadyInProgress\_c* error code is triggered. The Notifications can be sent consecutively.

## 5.2.3 Attribute write notifications

When the GATT Client reads and writes values from/into the Server's GATT Database, it uses ATT Requests.

The GATT Server module implementation manages these requests and, according to the database security settings and the Client's security status (authenticated, authorized, and so on), automatically sends the ATT Responses without notifying the application.

There are however some situations where the application needs to be informed of ATT packet exchanges. For example, a lot of standard profiles define, for certain Services, some, so-called, Control-Point Characteristics. These are Characteristics whose values are only of immediate significance to the application. Writing these Characteristics usually triggers specific actions.

For example, consider a fictitious Smart Lamp. It has Bluetooth Low Energy connectivity in the Peripheral role and it contains a small GATT Database with a Lamp Service (among other Services). The Lamp Service contains two Characteristics: the Lamp State Characteristic (LSC) and the Lamp Action Characteristic (LAC).



LSC is a “normal” Characteristic with Read and Write properties. Its value is either 0, lamp off, or 1, lamp on). Writing the value sets the lamp in the desired state. Reading it provides its current state, which is only useful when passing the information remotely.

The LAC has only one property, which is Write Without Response. The user can use the Write Without Response procedure to write only the value 0x01 (all other values are invalid). Whenever the user writes 0x01 in LAC, the lamp switches its state.

The LAC is a good example of a Control-Point Characteristic for these reasons:

- Writing a certain value (in this case 0x01) triggers an action on the lamp.
- The value the user writes has immediate significance only (“0x01 switches the lamp”) and is never used again in the future. For this reason, it does not need to be stored in the database.

Obviously, whenever a Control-Point Characteristic is written, the application must be notified to trigger some application-specific action.

The GATT Server allows the application to register a set of attribute handles as “write-notifiable”, in other words, the application wants to receive an event each time any of these attributes is written by the peer Client.

All Control-Point Characteristics in the GATT Database must have their Value handle registered. In fact, the application may register any other handle for write notifications for its own purposes with the following API:

```
bleResult_t GattServer_RegisterHandlesForWriteNotifications
(
    uint8_t      handleCount,
    const uint16_t * aAttributeHandles
);
```

The *handleCount* is the size of the *aAttributeHandles* array and it cannot exceed *gcGattMaxHandleCountForWriteNotifications\_c*.

After an attribute handle has been registered with this function, whenever the Client attempts to write its value, the GATT Server Callback is triggered with one of the following event types:

- *gEvtAttributeWritten\_c* is triggered when the attribute is written with a Write procedure (ATT Write Request). In this instance, the application has to decide whether the written value is valid and whether it must be written in the database, and, if so, the application must write the value with the *GattDb\_WriteAttribute*, see Chapter 6. At this point, the GATT Server module does not automatically send the ATT Write Response over the air. Instead, it waits for the application to call this function:

```
bleResult_t GattServer_SendAttributeWrittenStatus
(
    deviceId_t    deviceId,
    uint16_t      attributeHandle,
    uint8_t       status
);
```

The value of the *status* parameter is interpreted as an ATT Error Code. It must be equal to the *gAttErrCodeNoError\_c* (0x00) if the value is valid and it is successfully processed by the application. Otherwise, it must be equal to a profile-specific error code (in interval 0xE0-0xFF) or an application-specific error code (in interval 0x80-0x9F).

- *gEvtAttributeWrittenWithoutResponse\_c* is triggered when the attribute is written with a Write Without Response procedure (ATT Write Command). Because this procedure expects no response, the application may process it and, if necessary, write it in the database. Regardless of whether the value is valid or not, no response is needed from the application.
- *gEvtLongCharacteristicWritten\_c* is triggered when the Client has completed writing a Long Characteristic value; the event data includes the handle of the Characteristic Value attribute and a pointer to its value in the database.

## Chapter 6

# GATT database application interface

For over-the-air packet exchanges between a Client and a Server, the GATT Server module automatically retrieves data from the GATT Database and responds to all ATT Requests from the peer Client, provided it passes the security checks. This ensures that the Server application does not have to perform any kind of searches over the database.

However, the application must have access to the database to write meaningful data into its Characteristics. For example, a temperature sensor must periodically write the temperature, which is measured by an external thermometer, into the Temperature Characteristic.

For these kinds of situations, a few APIs are provided in the *gatt\_db\_app\_interface.h* file.

### NOTE

All functions provided by this interface are executed synchronously. The result of the operation is saved in the return value and it generates no event.

## 6.1 Writing and reading attributes

These are the two functions to perform basic attribute operations from the application:

```
bleResult_t GattDb_WriteAttribute
(
    uint16_t          handle,
    uint16_t          valueLength,
    const uint8_t *    aValue
);
```

The value length must be valid, as defined when the database is created. Otherwise, a *gGattInvalidValueLength\_c* error is returned.

Also, if the database is created statically, as explained in [Creating GATT database](#), the *handle* may be referenced through the enumeration member with a friendly name defined in the *gatt\_db.h*.

```
bleResult_t GattDb_ReadAttribute
(
    uint16_t          handle,
    uint16_t          maxBytes,
    uint8_t *          aOutValue,
    uint16_t *         pOutValueLength
);
```

The *aOutValue* array must be allocated with the size equal to *maxBytes*.

## 6.2 Finding attribute handles

Although the application should be fully aware of the contents of the GATT Database, in certain situations it might be useful to perform some dynamic searches of certain attribute handles.

To find a specific Characteristic Value Handle in a Service whose declaration handle is known, the following API is provided:

```
bleResult_t GattDb_FindCharValueHandleInService
(
    uint16_t          serviceHandle,
    bleUuidType_t      characteristicUuidType,
    const bleUuid_t *  pCharacteristicUuid,
);
```

```
uint16_t *      pOutCharValueHandle
);
```

If the return value is *gBleSuccess\_c*, the handle is written at *pOutCharValueHandle*. If the *serviceHandle* is invalid or not a valid Service declaration, the *gBleGattDbInvalidHandle\_c* is returned. Otherwise, the search is performed starting with the *serviceHandle+1*. If no Characteristic of the given UUID is found, the function returns the *gBleGattDbCharacteristicNotFound\_c* value.

To find a Characteristic Descriptor of a given type in a Characteristic, when the Characteristic Value Handle is known, the following API is provided:

```
bleResult_t GattDb_FindDescriptorHandleForCharValueHandle
(
    uint16_t      charValueHandle,
    bleUuidType_t descriptorUuidType,
    const bleUuid_t * pDescriptorUuid,
    uint16_t *      pOutDescriptorHandle
);
```

Similarly, the function returns *gBleGattDbInvalidHandle\_c* if the handle is invalid. Otherwise, it starts searching from the *charValueHandle+1*. Then, *gBleGattDbDescriptorNotFound\_c* is returned if no Descriptor of the specified type is found. Otherwise, its attribute handle is written at the *pOutDescriptorHandle* and the function returns *gBleSuccess\_c*.

One of the most commonly used Characteristic Descriptor is the Client Configuration Characteristic Descriptor (CCCD), which has the UUID equal to *gBleSig\_CCCD\_d*. For this specific type, a special API is used as a shortcut:

```
bleResult_t GattDb_FindCccdHandleForCharValueHandle
(
    uint16_t      charValueHandle,
    uint16_t *      pOutCccdHandle
);
```

# Chapter 7

## Creating GATT database

The GATT Database contains several *GATT Services* where each Service must contain at least one *GATT Characteristic*.

The Attribute Database contains a collection of *attributes*. Each attribute has four fields:

- The *attribute handle* – a 2-byte database index, which starts from 0x0001 and increases with each new attribute, not necessarily consecutive; maximum value is 0xFFFF.
- The *attribute type* or *UUID* – a 2-byte, 4-byte, or 16-byte UUID.
- The *attribute permissions* – 1 byte containing access flags; this defines whether the attribute's value can be read or written and the security requirements for each operation type
- The *attribute value* – an array of maximum 512 bytes.

The ATT does not interpret the UUIDs and values contained in the database. It only deals with data transfer based on the attributes' handles.

The GATT gives meaning to the attributes based on their UUIDs and groups them into Characteristics and Services.

There are two possible ways of defining the GATT Database: at compile-time (statically) or at runtime (dynamically).

### 7.1 Creating static GATT database

To define a GATT Database at compile-time, several macros are provided by the GATT\_DB API. These macros expand in many different ways at compilation, generating the corresponding *Attribute Database* on which the Attribute Protocol (ATT) may operate.

This is the default way of defining the database.

The GATT Database definition is written in two files that are required to be added to the application project together with all macro expansion files:

- *gatt\_db.h* - contains the actual declaration of Services and Characteristics
- *gatt\_uuid128.h* – contains the declaration of Custom UUIDs (16-byte wide); these UUIDs are given a user-friendly name that is used in *gatt\_db.h* file instead of the entire 16-byte sequence

#### 7.1.1 Declaring custom 128-bit UUIDs

All Custom 128-bit UUIDs are declared in the required file *gatt\_uuid128.h*.

Each line in this file contains a single UUID declaration. The declaration uses the following macro:

- *UUID128 (name, byte1, byte2, ..., byte16)*

The *name* parameter is the user-friendly handle that references this UUID in the *gatt\_db.h* file.

The 16 bytes are written in the *LSB-first* order each one using the 0xZZ format.

#### NOTE

On some occasions, it is desired to reuse an 128-bit UUID declared in *gatt\_uuid128.h*. The 16 byte array is available through its friendly name and be accessed by including *gatt\_db\_handles.h* in the application. It is strongly advised to use it only in read-only operations. For example:

```
(gatt_uuid128.h)
UUID128(uuid_service_wireless_uart, 0xE0, 0x1C, 0x4B, 0x5E, 0x1E, 0xEB, 0xA1, 0x5C, 0xEE, 0xF4, 0x5E,
0xBA, 0x00, 0x01, 0xFF, 0x01)
(app.c)
#include "gatt_db_handles.h"
```

```

.....
/* Start Service Discovery*/
BleServDisc_FindService(peerDeviceId, gBleUuidType128_c, (bleUuid_t*) &uuid_service_wireless_uart);

```

## 7.1.2 Declaring a service

There are two types of Services:

- *Primary Services*
- *Secondary Services* - these are only to be included by other Primary or Secondary Services

The Service declaration attribute has one of these UUIDs, as defined by the Bluetooth SIG:

- 0x2800 a.k.a. <<*Primary Service*>> - for a Primary Service declaration
- 0x2801 a.k.a. <<*Secondary Service*>> - for a Secondary Service declaration

The Service declaration attribute permissions are read-only and no authentication required. The Service declaration attribute value contains the *Service UUID*. The *Service Range* starts from the Service declaration and ends at the next service declaration. All the Characteristics declared within the Service Range are considered to belong to that Service.

### 7.1.2.1 Service declaration macros

The following macros are to be used for declaring a Service:

- *PRIMARY\_SERVICE* (*name*, *uuid16*)
  - Most often used.
  - The *name* parameter is common to all macros; it is a universal, user-friendly identifier for the generated attribute.
  - The *uuid16* is a 2-byte SIG-defined UUID, written in 0xZZZZ format.
- *PRIMARY\_SERVICE\_UUID32* (*name*, *uuid32*)
  - This macro is used for a 4-byte, SIG-defined UUID, written in 0xZZZZZZZZ format.
- *PRIMARY\_SERVICE\_UUID128* (*name*, *uuid128*)
  - The *uuid128* is the friendly name given to the custom UUID in the *gatt\_uuid128.h* file.
- *SECONDARY\_SERVICE* (*name*, *uuid16*)
- *SECONDARY\_SERVICE\_UUID32* (*name*, *uuid32*)
- *SECONDARY\_SERVICE\_UUID128* (*name*, *uuid128*)
  - All three are similar to Primary Service declarations.

### 7.1.2.2 Include declaration macros

Secondary Services are meant to be included by other Services, usually by Primary Services. Primary Services may also be included by other Primary Services. The inclusion is done using the Include declaration macro:

- *INCLUDE* (*service\_name*)
  - The *service\_name* parameter is the friendly name used to declare the Secondary Service.
  - This macro is used only for Secondary Services with a SIG-defined, 2-byte, Service UUID.
- *INCLUDE\_CUSTOM* (*service\_name*)
  - This macro is used for Secondary Services that have either a 4-byte UUID or a 16-byte UUID.

The effect of the service inclusion is that the *including* Service is considered to contain all the Characteristics of the *included* Service.

### 7.1.3 Declaring a characteristic

A Characteristic must only be declared inside a Service. It belongs to the most recently declared Service, so the GATT Database must always begin with a Service declaration.

The Characteristic declaration attribute has the following UUID, as defined by the Bluetooth SIG:

- 0x2803 a.k.a. <<*Characteristic*>>

The Characteristic declaration attribute permissions are: read-only, no authentication required.

The Characteristic declaration attribute value contains:

- the *Characteristic UUID*
- the *Characteristic Value* 's declaration handle
- the *Characteristic Properties* – Read, Write, Notify, and so on. (1 byte of flags)

The *Characteristic Range* starts from the Characteristic declaration and ends before a new Characteristic or a Service declaration.

After the Characteristic declaration these follow:

- A *Characteristic Value* declaration (mandatory; immediately after the Characteristic declaration).
- Zero or more *Characteristic Descriptor* declarations.

#### 7.1.3.1 Characteristic declaration macros

The following macros are used to declare Characteristics:

- *CHARACTERISTIC* (*name*, *uuid16*, *properties*)
- *CHARACTERISTIC\_UUID32* (*name*, *uuid32*, *properties*)
- *CHARACTERISTIC\_UUID128* (*name*, *uuid128*, *properties*)
- See Service declaration for *uuidXXX* parameter explanation.

The *properties* parameter is a bit mask. The flags are defined in the *gattCharacteristicPropertiesBitFields\_t*.

#### 7.1.3.2 Declaring characteristic values

The Characteristic Value declaration immediately follows the Characteristic declaration and uses one of the following macros:

- *VALUE* (*name*, *uuid16*, *permissions*, *valueLength*, *valueByte1*, *valueByte2*, ...)
- *VALUE\_UUID32* (*name*, *uuid32*, *permissions*, *valueLength*, *valueByte1*, *valueByte2*, ...)
- *VALUE\_UUID128* (*name*, *uuid128*, *permissions*, *valueLength*, *valueByte1*, *valueByte2*, ...)
- See Service declaration for *uuidXXX* parameter explanation.
- The *permissions* parameter is a bit mask; the flags are defined in *gattAttributePermissionsBitFields\_t*.
  - The *valueLength* is the number of bytes to be allocated for the Characteristic Value. After this parameter, exactly [*valueLength*] bytes follow in 0xZZ format, representing the initial value of this Characteristic.

These macros are used to declare Characteristic Values of *fixed lengths*.

Some Characteristics have *variable length values*. For those, the following macros are used:

- *VALUE\_VARLEN* (*name*, *uuid16*, *permissions*, *maximumValueLength*, *initialValueLength*, *valueByte1*, *valueByte2*, ...)
- *VALUE\_UUID32\_VARLEN* (*name*, *uuid32*, *permissions*, *maximumValueLength*, *initialValueLength*, *valueByte1*, *valueByte2*, ...)
- *VALUE\_UUID128\_VARLEN* (*name*, *uuid128*, *permissions*, *maximumValueLength*, *initialValueLength*, *valueByte1*, *valueByte2*, ...)

- The number of bytes allocated for this Characteristic Value is *maximumValueLength*.
- The number of *valueByteXXX* parameters shall be equal to *initialValueLength*.

Obviously, *initialValueLength* is, at most, equal to *maximumValueLength*.

### 7.1.3.3 Declaring characteristic descriptors

Characteristic's Descriptors are declared after the Characteristic Value declaration and before the next Characteristic declaration.

The macros used to declare Characteristic Descriptors are very similar to those used to declare fixed-length Characteristic Values:

- *DESCRIPTOR (name, uuid16, permissions, descriptorValueLength, descriptorValueByte1, descriptorValueByte2, ...)*
- *DESCRIPTOR\_UUID32 (name, uuid32, permissions, descriptorValueLength, descriptorValueByte1, descriptorValueByte2, ...)*
- *DESCRIPTOR\_UUID128 (name, uuid128, permissions, descriptorValueLength, descriptorValueByte1, descriptorValueByte2, ...)*

A special Characteristic Descriptor that is used very often is the *Client Characteristic Configuration Descriptor (CCCD)*. This is the descriptor where clients write some of the bits to activate Server notifications and/or indications. It has a reserved, 2-byte, SIG-defined UUID (0x2902), and its attribute value consists of only 1 byte (out of which 2 bits are used for configuration, the other 6 are reserved).

Because the CCCD appears very often in Characteristic definitions for standard Bluetooth Low Energy profiles, a special macro is used for CCCD declaration:

- *CCCD (name)*

This simple macro is basically equivalent to the following Descriptor declaration:

```
DESCRIPTOR (name,
    0x2902,
    (gGattAttPermAccessReadable_c
    | gGattAttPermAccessWritable_c),
    2, 0x00, 0x00)
```

### 7.1.4 Static GATT database definition examples

The GAP Service must be present on any GATT Database. It has the Service UUID equal to 0x1800, <<GAP Service>>, and it contains three read-only Characteristics no authentication required: *Device Name*, *Appearance*, and *Peripheral Preferred Connection Parameters*. These also have well defined UUIDs in the SIG documents.

The definition for this Service is shown here:

```
PRIMARY_SERVICE(service_gap, 0x1800)

CHARACTERISTIC(char_device_name, 0x2A00, (gGattCharPropRead_c) )
    VALUE(value_device_name, 0x2A00, (gGattAttPermAccessReadable_c),
        6, "Sensor")

CHARACTERISTIC(char_appearance, 0x2A01, (gGattCharPropRead_c) )
    VALUE(value_appearance, 0x2A01, (gGattAttPermAccessReadable_c), 2, 0xC2, 0x03)

CHARACTERISTIC(char_ppcp, 0x2A04, (gGattCharPropRead_c) )
    VALUE(value_ppcp, 0x2A04, (gGattAttPermAccessReadable_c),
        8, 0x0A, 0x00, 0x10, 0x00, 0x64, 0x00, 0xE2, 0x04)
```

Another often encountered Service is the Scan Parameters Service:

```
PRIMARY_SERVICE(service_scan_parameters, 0x1813)

    CHARACTERISTIC(char_scan_interval_window, 0x2A4F, (gGattCharPropWriteWithoutRsp_c) )
        VALUE(value_scan_interval_window, 0x2A4F, (gGattAttPermAccessWritable),
            4, 0x00, 0x00, 0x00, 0x00)

    CHARACTERISTIC(char_scan_refresh, 0x2A31, (gGattCharPropRead_c | gGattCharPropNotify_c) )
        VALUE(value_scan_refresh, 0x2A31, (gGattAttPermAccessReadable_c), 1, 0x00)
        CCCD(cccd_scan_refresh)
```

#### NOTE

All “user-friendly” names given in declarations are statically defined as *enum* members, numerically equal to the *attribute handle* of the declaration. This means that one of those names can be used in code wherever an attribute handle is required as a parameter of a function if *gatt\_db\_handles.h* is included in the application source file. For example, to write the value of the Scan Refresh Characteristic from the application-level code, use these instructions:

```
#include "gatt_db_handles.h"
...
uint8_t scan_refresh_value = 0x12;
GattDb_WriteAttribute( char_scan_refresh, &scan_refresh_value, 1);
```

## 7.2 Creating a GATT database dynamically

To define a GATT Database at runtime, the *gGattDbDynamic\_d* macro must be defined in *app\_preinclude.h* with the value equal to 1.

Then, the application must use the APIs provided by the *gatt\_db\_dynamic.h* interface to add and remove Services and Characteristics as needed.

See section 7.1 for a detailed description of Service and Characteristic parameters.

### 7.2.1 Initialization and release

Before anything can be added to the database, it must be initialized with an empty collection of attributes.

The *GattDbDynamic\_Init()* API is automatically called by the *GattDb\_Init()* implementation provided in the *gatt\_database.c* source file. Application-specific code does not need to call this API again, unless at some point it destroys the database with *GattDb\_ReleaseDatabase()*.

### 7.2.2 Adding services

The APIs that can be used to add Services are self-explanatory:

- *GattDbDynamic\_AddPrimaryServiceDeclaration*
  - The Service UUID is specified as parameter.
- *GattDbDynamic\_AddSecondaryServiceDeclaration*
  - The Service UUID is specified as parameter.
- *GattDbDynamic\_AddIncludeDeclaration*
  - The Service UUID and handle range are specified as parameters.

The functions have an optional out parameter *pOutHandle*. If its value is not NULL, the execution writes a 16-bit value in the pointed location representing the attribute handle of the added declaration.

This handle can be used by the application as parameter in some *GattDbApp* APIs or in the Service removal functions.



At least one Service needs to be added before any Characteristic.

### 7.2.3 Adding characteristics and descriptors

The APIs for adding Characteristics and Descriptors are enumerated below:

- *GattDbDynamic\_AddCharacteristicDeclarationAndValue*
  - The Characteristic UUID, properties, access permissions and initial value are specified as parameters.
- *GattDbDynamic\_AddCharacteristicDeclarationWithUniqueValue*
  -
- *GattDbDynamic\_AddCharacteristicDescriptor*
  - The Descriptor UUID, access permissions and initial value are specified as parameters.
- *GattDbDynamic\_AddCccd*
  - Shortcut for a CCCD.

### 7.2.4 Removing services and characteristics

To remove a Service or a Characteristic, the following APIs may be used, both of which only require the declaration handle as parameter:

- *GattDbDynamic\_RemoveService*
- *GattDbDynamic\_RemoveCharacteristic*

# Chapter 8

## Creating a Custom Profile

This chapter describes how the user can create customizable functionality over the Bluetooth Low Energy host stack by defining profiles and services. The Temperature Profile, used by the Temperature Sensor and Collector applications is used as a reference to explain the steps of building custom functionality.

### 8.1 Defining custom UUIDs

The first step when defining a new service included in a profile is to define the custom 128-bit UUID for the service and the included characteristics. These values are defined in *gatt\_uuid128.h* which is located in the application folder. For example, the Temperature Profile uses the following UUID for the service:

```
/* Temperature */
UUID128(uuid_service_temperature,
0xfB, 0x34, 0x9b, 0x5f, 0x80, 0x00, 0x00, 0x80, 0x00, 0x10, 0x00, 0x02, 0x00, 0xfe, 0x00, 0x00)
```

The definition of the services and characteristics are made in *gattdb.h*, as explained in [Creating GATT database](#). For more details on how to structure the database, see [Application Structure](#).

### 8.2 Creating service functionality

All defined services in the SDK have a common template which helps the application to act accordingly.

The service locally stores the device identification for the connected client. This value is changed on subscription and non-subscription events.

```
/*! Temperature Service - Subscribed Client*/
static deviceId_t mTms_SubscribedClientId;
```

The service is initialized and changed by the application through a service configuration structure. It usually contains the service handle, initialization values for the service (for example, the initial temperature for the Temperature Service) and in some cases user-specific structures that can store saved measurements (for example, the Blood Pressure Service). Below is an example for the custom Temperature Service:

```
/*! Temperature Service - Configuration */
typedef struct tmsConfig_tag
{
    uint16_t serviceHandle ;
    int16_t initialTemperature ;
} tmsConfig_t ;
```

The initialization of the service is made by calling the start procedure. The function requires as input a pointer to the service configuration structure. This function is usually called when the application is initialized. It resets the static device identification for the subscribed client and initializes both dynamic and static characteristic values. An example for the Temperature Service (TMS) is shown below:

```
bleResult_t Tms_Start ( tmsConfig_t *pServiceConfig)
{
    mTms_SubscribedClientId = gInvalidDeviceId_c;

    return Tms_RecordTemperatureMeasurement (pServiceConfig-> serviceHandle ,
                                              pServiceConfig-> initialTemperature );
}
```

The service subscription is triggered when a device connects to the server. It requires the peer device identification as an input parameter to update the local variable. On disconnect, the unsubscribe function is called to reset the device identification. For the Temperature Service:

```
bleResult_t Tms_Subscribe ( deviceId_t deviceId)
{
    mTms_SubscribedClientId = deviceId;
    return gBleSuccess_c;
}

bleResult_t Tms_Unsubscribe (void)
{
    mTms_SubscribedClientId = gInvalidDeviceId_c;
    return gBleSuccess_c;
}
```

Depending on the complexity of the service, the API implements additional functions. For the Temperature Service, there is only a temperature characteristic that is notifiable by the server. The API implements the record measurement function which saves the new measured value in the GATT database and send the notification to the client device if possible. The function needs the service handle and the new temperature value as input parameters:

```
bleResult_t Tms_RecordTemperatureMeasurement ( uint16_t serviceHandle, int16_t temperature)
{
    uint16_t handle;
    bleResult_t result;
    bleUuid_t uuid = Uuid16(gBleSig_Temperature_d);

    /* Get handle of Temperature characteristic */
    result = GattDb_FindCharValueHandleInService(serviceHandle,
        gBleUuidType16_c, &uuid, &handle);

    if (result != gBleSuccess_c)
        return result;

    /* Update characteristic value */
    result = GattDb_WriteAttribute(handle, sizeof( uint16_t ), ( uint8_t *)&temperature);

    if (result != gBleSuccess_c)
        return result;

    Hts_SendTemperatureMeasurementNotification(handle);

    return gBleSuccess_c;
}
```

To accommodate some use cases where the service is reset, the stop function is called. The reset also implies a service unsubscribe. Below is an example for the Temperature Service:

```
bleResult_t Tms_Stop ( tmsConfig_t *pServiceConfig)
{
    return Tms_Unsubscribe();
}
```

### 8.3 GATT client interactions

The client side of the service, which includes the service discovery, notification configuration, attribute reads and others are left to be handled by the application. The application calls the GATT client APIs and reacts accordingly. The only exception for this rule is that the service interface declares the client configuration structure. This structure usually contains the service handle and

the handles of all the characteristic values and descriptors discovered. Additionally it can contain values that the client can use to interact with the server. For the Temperature Service client, the structure is as follows:

```
/*! Temperature Client - Configuration */
typedef struct tmcConfig_tag
{
    uint16_t          hService;
    uint16_t          hTemperature ;
    uint16_t          hTempCccd ;
    uint16_t          hTempDesc ;
    gattDbCharPresFormat_t  tempFormat ;
} tmcConfig_t ;
```

## Chapter 9

# Application Structure

This chapter describes the organization of the Bluetooth Low Energy demo applications that can be found in the SDK. By familiarizing with the application structure, the user is able to quickly adapt its design to an existing demo or create a new application.

The Temperature Sensor application is used as a reference to showcase the architecture.

### 9.1 Folder structure

This figure shows the application folder structure:

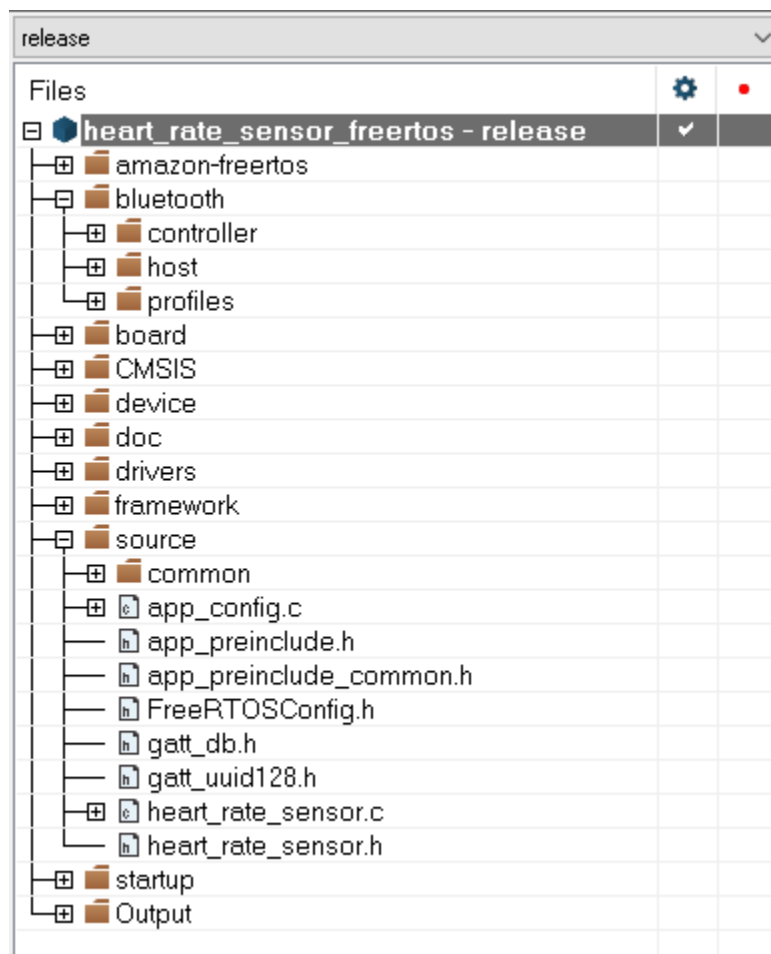


Figure 10. Application Folder structure in workspace

The *app* folder follows a specific structure which is recommended for any application developed using the Bluetooth Low Energy Host Stack:

- the *common* group contains the application framework shared by all profiles and demo applications:
  - Application Main Framework
  - Bluetooth Low Energy Connection Manager
  - Bluetooth Low Energy Stack and Task Initialization and Configuration

### — GATT Database

- the *source* group contains code specific to the HRS application

The *bluetooth* folder/group contains:

- *controller/interface* and *host/interface* – public interfaces for the Controller and the Host; Functionality is included in the libraries located in subfolders *controller/lib* and *host/lib*, not shown in the IAR project structure, but added into the toolchain linker settings under the library category.
- *profiles* contains profile-specific code; it is used by each demo application of standard profiles.

The *framework* folder/group contains framework components used by the demo applications. For additional information, see the *Connectivity Framework Reference Manual*.

The *amazon-freertos* folder contains sources for the supported operating system.

## 9.2 Application main framework

The Application Main module contains common code used by all the applications, such as:

- The Main Task.
- Messaging framework between the Host Stack Task and the Application Task.
- The Idle Task used in low-power enabled applications.

### 9.2.1 Main task

The Main Task (*main\_task*) is the first task created by the operation system and is also the one that initializes the rest of the system. It initializes framework components (Memory Manager, Timer Manager, etc.) and the Bluetooth Host Stack (*Ble\_Initialize*). It also calls *BleApp\_Init* from *app.c*, which is used to initialize peripheral drivers specific to the implemented application.

The function calls *App\_Thread* which represents the Application Task. This task reuses the stack allocated for the Main Task and is called to process all the events and messages sent by the Host Stack.

The stack size and priority of the main task are defined in *fs/\_os\_abstraction\_config.h*:

```
#ifndef gMainThreadStackSize_c
#define gMainThreadStackSize_c 1024
#endif
#ifndef gMainThreadPriority_c
#define gMainThreadPriority_c 7
#endif
```

### 9.2.2 Application messaging

The module contains a wrapper that is used to create messages for events generated by the Host Stack in the Host Task context and send them to be processed by the application in the context of the Application Task.

For example, connection events generated by the Host are received by *App\_ConnectionCallback*. The function creates a message, places it in the Host to Application queue and signals the Application with *gAppEvtMsgFromHostStack\_c*. The Application Task de-queues the message and calls *App\_HandleHostMessageInput*, which calls the corresponding callback implemented the application specific code (*app.c*), in this example: *BleApp\_ConnectionCallback*.

It is strongly recommended that the application developer use the *app.c* module to add custom code on this type of callbacks.

### 9.2.3 Idle task

The Idle task is created when applications enable the usage of the Framework Low-Power module. It contains code to be executed before node enters and right after it exits sleep mode. For more details on the low-power functionality, review [Low-Power Management](#).

When running FreeRTOS as the operating system, the application will hook the idle task implemented in the FreeRTOS library, by linking *vApplicationIdleHook*.

The application developer should use this function as container for application specific code:

```
static void App_Idle(void);
```

The stack size is defined in *AppMain.h*:

```
#ifndef gAppIdleTaskStackSize_c
#define gAppIdleTaskStackSize_c (500)
#endif
```

## 9.3 Bluetooth LE connection manager

The connection manager is a helper module that contains common application configurations and interactions with the Bluetooth host stack. It implements the following events and methods:

- Host Stack GAP Generic Event
- Host Stack Connection Event on both GAP Peripheral and GAP Central configuration
- Host Stack configuration for GAP Peripheral or GAP Central

### 9.3.1 GAP generic event

The GAP Generic Event is triggered by the Host Stack and sent to the application via the generic callback. Before any application-specific interactions, the Connection Manager callback is called to handle common application events, such as device address storage.

```
void BleApp_GenericCallback ( gapGenericEvent_t * pGenericEvent)
{
    /* Call Bluetooth Low Energy Conn Manager */
    BleConnManager_GenericEvent(pGenericEvent);

    switch (pGenericEvent-> eventType )
    {
        ...
    }
}
```

### 9.3.2 GAP configuration

The GAP Central or Peripheral Configuration is used to create common configurations (such as setting the public address, registering the security requirements, adding bonds in whitelist), that can be customized by the application afterwards. It is called inside the *BleApp\_Config* function, before any application-specific configuration GAP Connection Event:

```
static void BleApp_Config()
{
    /* Set common GAP configuration */
    BleConnManager_GapCommonConfig();
    ...
}
```

### 9.3.3 GAP connection event

The GAP Connection Event is triggered by the Host Stack and sent to the application via the connection callback. Before any application-specific interactions, the Connection Manager callback is called to handle common application events, such as device connect, disconnect or pairing related requests. It is called inside the registered connection like below:

```
static void BleApp_ConnectionCallback ( deviceId_t peerDeviceId, gapConnectionEvent_t *
pConnectionEvent)
{
    /* Connection Manager to handle Host Stack interactions */
    BleConnManager_GapPeripheralEvent(peerDeviceId, pConnectionEvent);

    switch (pConnectionEvent-> eventType )
    {
        ...
    }
}
```

It is strongly recommended that the application developer use the app.c module to add custom code.

### 9.3.4 Privacy

To enable or disable Privacy, the following APIs may be used:

```
bleResult_t BleConnManager_EnablePrivacy
(
    void
);
```

```
bleResult_t BleConnManager_DisablePrivacy
(
    void
);
```

The function `BleConnManager_EnablePrivacy` will call `BleConnManager_EnablePrivacyInternal` after checking if the privacy is enabled.

```
static bleResult_t BleConnManager_EnablePrivacyInternal
(
    bool_t bCheckNewBond
);
```

If the privacy feature is supported (`gAppUsePrivacy_d = 1`), the Connection Manager will activate Controller Privacy or Host Privacy depending on the board capabilities.

The `bCheckNewBond` is a boolean that tells the Manager whether it should check or not if a bond between the devices already exists.

At the application layer, for privacy usage, the user must be aware that when connecting with more than one device, the privacy must be turned off before the second and subsequent connections are established and enabled right after the establishment. This does not apply to the first connection.

Below is an example that enables and disables the Privacy by requests (`reqOff_c == mAppPrivacyChangeReq` and `reqOn_c == mAppPrivacyChangeReq`) or until the timer expires (`mPrivacyDisableDurationSec_c` seconds).

```
if( reqOff_c == mAppPrivacyChangeReq )
{
    if( gBleSuccess_c == BleConnManager_DisablePrivacy() )
    {
```



```

        TMR_StartLowPowerTimer(mPrivacyDisableTimerId, gTmrLowPowerSingleShotMillisTimer_c,
                               TmrSeconds(mPrivacyDisableDurationSec_c), PrivacyEnableTimerCallback, NULL);
    }
    mAppPrivacyChangeReq = reqDisabled_c;
}
else if( reqOn_c == mAppPrivacyChangeReq )
{
    BleConnManager_EnablePrivacy();
    mAppPrivacyChangeReq = reqDisabled_c;
}

```

## 9.4 GATT database

The *gatt\_db* contains a set of header files grouped in the *macros* subfolder. These macros are used for static code generation for the GATT Database by expanding the contents of the *gatt\_db.h* file in different ways. [Creating GATT database](#) explains how to write the *gatt\_db.h* file using user-friendly macros that define the GATT Database.

At application compile-time, the *gatt\_database.c* file is populated with enumerations, structures and initialization code used to allocate and properly populate the GATT Database. In this way, the *gattDatabasearray* and the *gGattDbAttributeCount\_c* variable (see [GATT database](#)) are created and properly initialized.

### NOTE

Do not modify any of the files contained in the *gatt\_db* folder and its subfolder.

To complete the GATT Database initialization, this demo application includes the required *gatt\_db.h* and *gatt\_uuid128.h* files in its specific application folder, along with other profile-specific configuration and code files.

## 9.5 RTOS specifics

### 9.5.1 Operating system selection

The SDK offers different projects for each supported operating system (FreeRTOS OS) and for bare metal configuration. To switch between systems, the user needs to switch the workspace.

The RTOS source code is found in the KSDK package and is linked in the workspace in the *amazon-freertos/freertos* virtual folder, as shown below:

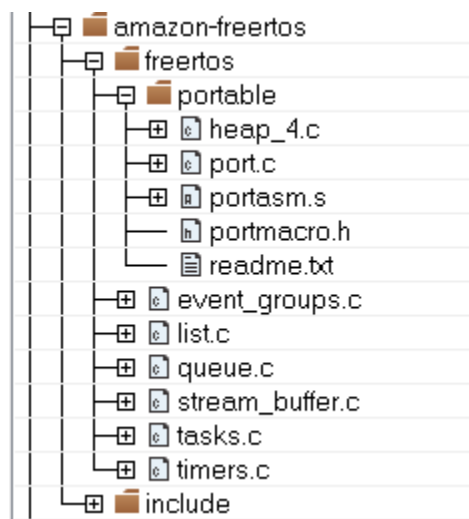


Figure 11. Location of FreeRTOS source code in workspace

## 9.5.2 Bluetooth Low Energy tasks configuration

Application developers are provided with four files for RTOS task initialization:

- *ble\_controller\_task\_config.h* and *ble\_controller\_task.c* for the Controller,
- *ble\_host\_task\_config.h*, and *ble\_host\_tasks.c* for the Host.

Reusing these files is recommended because they perform all the necessary RTOS-related work. The application developer should only modify the macros from *\*\_config.h* files whenever tasks need a bigger stack size or different priority settings. The new values should be overridden in the *app\_preinclude.h* file.

## 9.6 Board configuration

The configuration files for the supported boards can be found in the *board* folder. The files contain clock and pin configurations that are used by the drivers. The user can customize the board files by modifying the configuration of the pins and clock source according to his design.

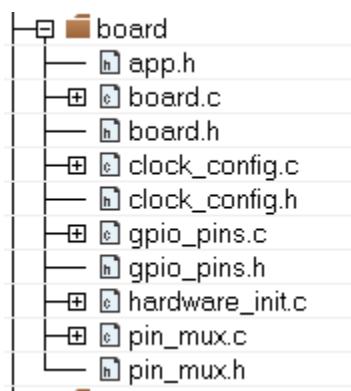


Figure 12. Board configuration files

## 9.7 Bluetooth Low Energy initialization

The *ble\_init.h* and *ble\_init.c* files contain the declaration and the implementation of the following function:

```

bleResult_t Ble_Initialize
(
    gapGenericCallback_t gapGenericCallback
)
{
    #if (gUseHciTransportDownward_d == 1)

    #elif (gUseHciTransportUpward_d == 1)

    #else
        /* Bluetooth Low Energy Host Stack Init */
        return Ble_HostInitialize(gapGenericCallback,
            ( hciHostToControllerInterface_t ) Controller_RecvPacket);
    #endif
}

```

### NOTE

This function should be used by your application because it correctly performs all the necessary Bluetooth Low Energy initialization.

Step-by-step analysis is provided below:

- First, the *Ble\_HostTaskInit* function from *ble\_host\_task\_config.h* is called. This creates the two tasks required by the Bluetooth Low Energy Host Stack.
- Next, the initialization is split in two paths based on the *gUseHciTransportDownward\_d* compiler switch
  - If it is activated (equal to 1), the Host stack communicates with an external Controller through an HCI interface. In this example, the HCI interface is initialized using the Serial Manager (USB). Then, the *Ble\_HostInitialize* function initializes the Host with the transport packet transmit function used as the *hciHostToControllerInterface\_t* parameter.
  - If the compiler switch is not activated (equal to 0), which is the default setting for the demos, the Controller library is available and the Controller task is initialized by the *Controller\_TaskInit*. Then, the two stacks with *Controller\_Init* and *Ble\_HostInitialize* are initialized linking the Controller's HCI interface with the Host's.

## 9.8 Bluetooth Low Energy host stack configuration

The Bluetooth Low Energy host stack is pre-configured into four available libraries:

- Peripheral Host Stack library
- Central Host Stack library
- Central and Peripheral Host Stack library
- FSCI Central and Peripheral Host Stack library

The libraries are found in the *middleware/wireless/bluetooth/host/lib* folder. The user should add the best matching library for its use case to the linker options of its project. For example, the temperature sensor uses the Peripheral Host Stack library, as shown below:

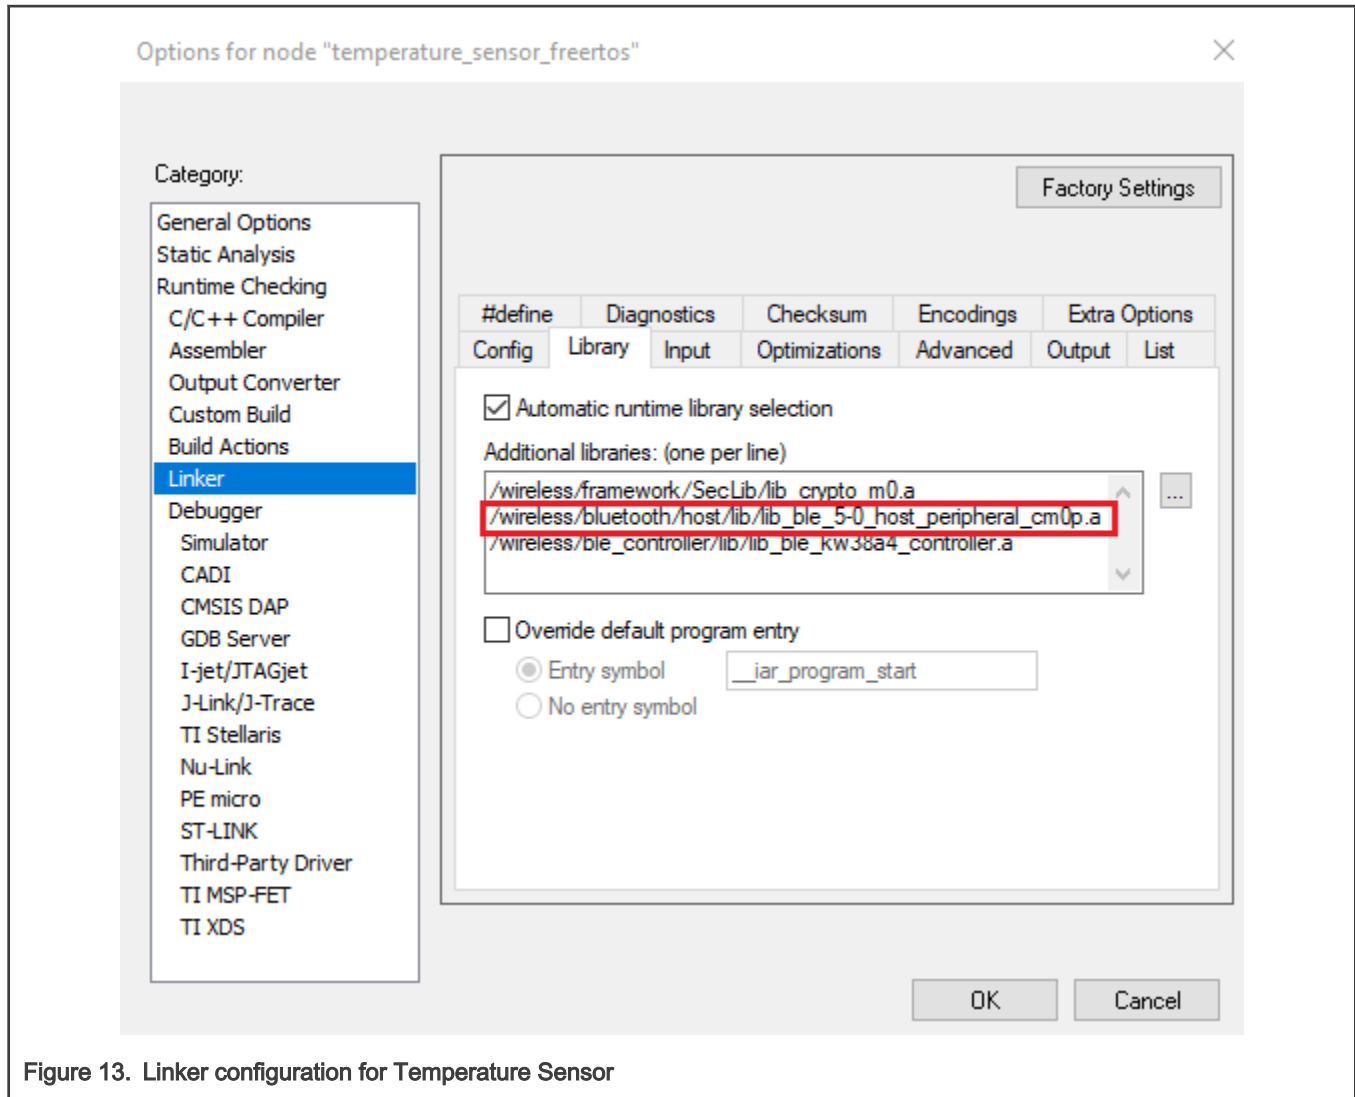


Figure 13. Linker configuration for Temperature Sensor

## 9.9 Profile configuration

The implemented profiles and services are located in *middleware/wireless/bluetooth/profiles* folder. The application links every service source file and interface it needs to implement the profile. For example, for the Temperature Sensor the tree looks as follows:

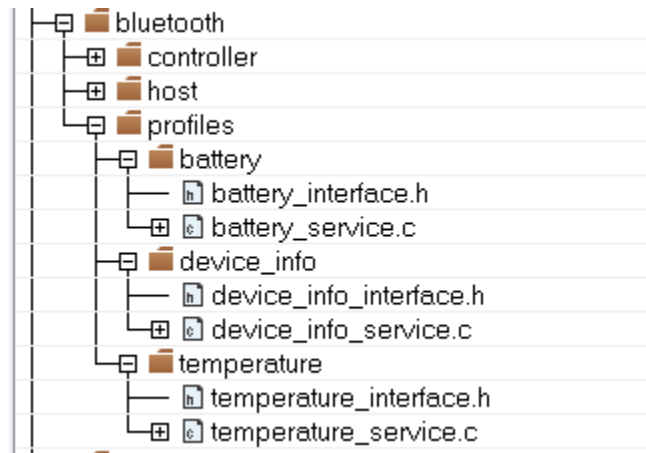


Figure 14. Linker configuration for Temperature Sensor

The Temperature Profile implements the custom Temperature service, the Battery, and Device Information services.

## 9.10 Application code

The application folder contains the following modules:

- `app.c` and `app.h`. This module stores the application-specific functionality (APIs for specific triggers, handling of peripherals, callbacks from the stack, handling of low-power, and so on).

Before initializing the Bluetooth Low Energy Host stack, the main task calls *BleApp\_Init*. This function can store initializations of modules that work independently of the host stack.

After the stack is initialized, the generic callback the application calls *BleApp\_Config*. The function contains configurations made to the host stack after the initialization. This includes registering callbacks, setting security for services, starting services, allocating timers, adding devices to white list, and so on. For example, the temperature sensor configures the following:

```

static void BleApp_Config()
{
    /* Common GAP configuration */
    BleConnManager_GapCommonConfig();

    /* Register for callbacks */
    App_RegisterGattServerCallback(BleApp_GattServerCallback);

    mAdvState.advOn = FALSE;

    /* Start services */
    tmsServiceConfig.initialTemperature = 100 * BOARD_GetTemperature();
    Tms_Start(&tmsServiceConfig);

    basServiceConfig.batteryLevel = BOARD_GetBatteryLevel();
    Bas_Start(&basServiceConfig);
    Dis_Start(&disServiceConfig);

    /* Allocate application timer */
    appTimerId = TMR_AllocateTimer();

    #if (cPWR_UsePowerDownMode)
        PWR_ChangeDeepSleepMode(3);
        PWR_AllowDeviceToSleep();
    #endif
}

```

```
#endif
}
```

To start the application functionality, `BleApp_Start` is called. This function usually contains code to start advertising for sensor nodes or scanning for central devices. In the example of the Temperature Sensor, the function is the following:

```
void BleApp_Start(void)
{
    Led1On();

    if (mPeerDeviceId == gInvalidDeviceId_c)
    {
        /* Device is not connected and not advertising*/
        if (!mAdvState.advOn)
        {
            BleApp_Advertise();
        }
    }
    else
    {
        BleApp_SendTemperature();
    }
}
```

- *app\_config.c*. This file contains data structures that are used to configure the stack.

This includes advertising data, scanning data, connection parameters, advertising parameters, SMP keys, security requirements, and so on.

- *app\_preinclude.h*.

This header file contains macros to override the default configuration of any module in the application. It is added as a preinclude file in the preprocessor command line in IAR:

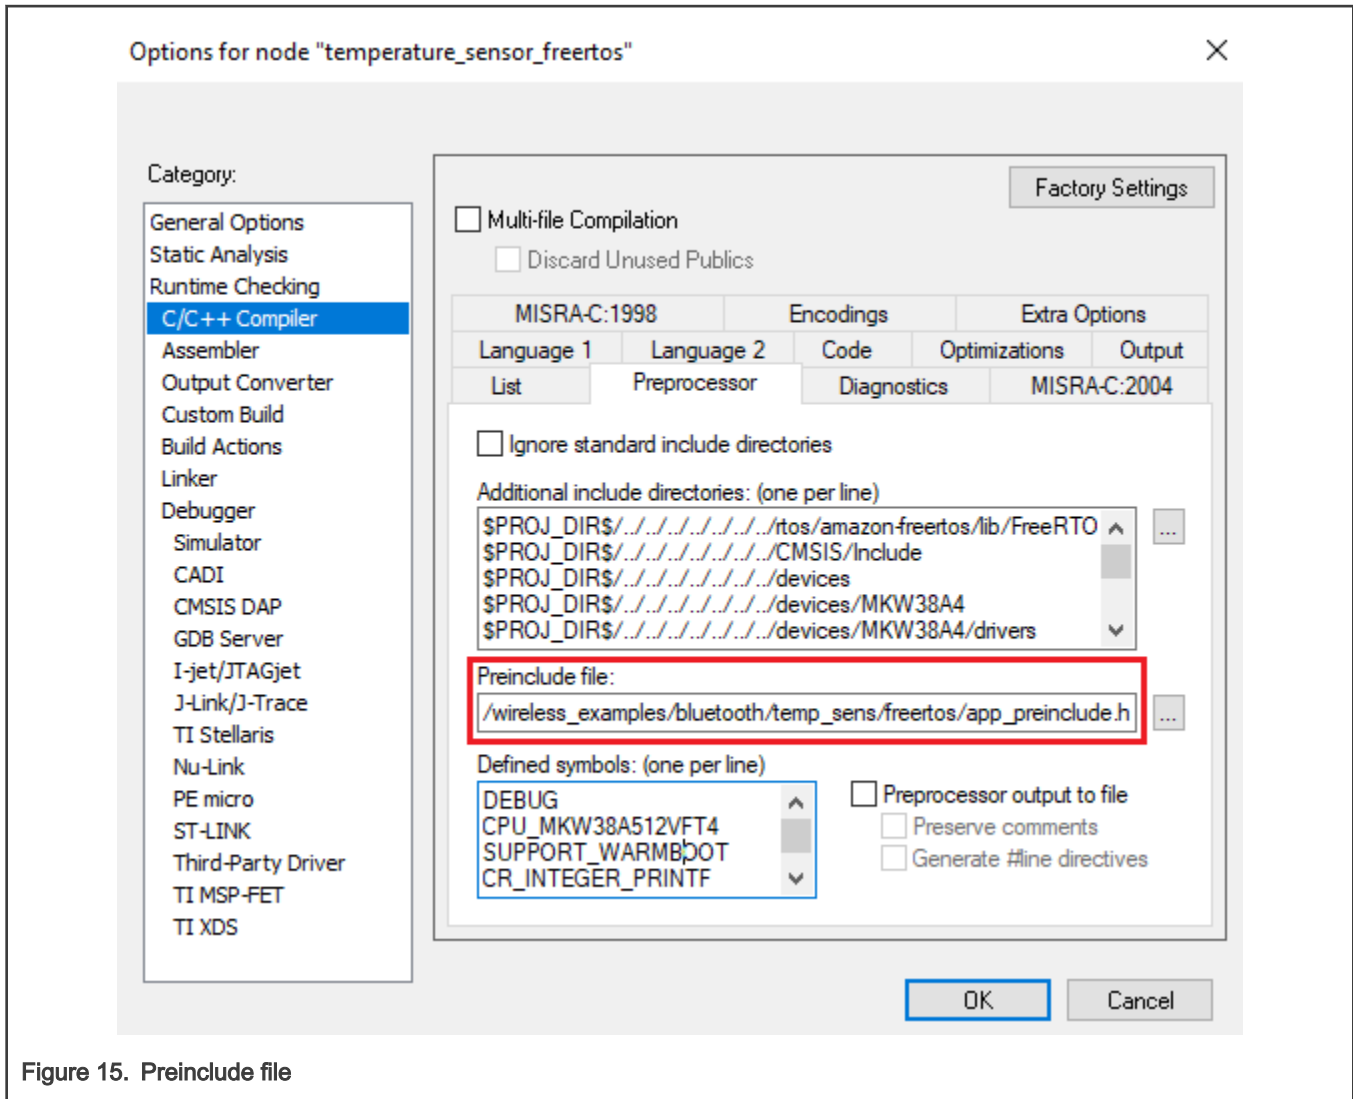


Figure 15. Preinclude file

- *gatt\_db.h* and *gatt\_uuid128.h*. The two header files contain the definition of the GATT database and the custom UUIDs used by the application. See [Creating GATT database](#) for more information.

## 9.11 Multiple connections

Applications can be configured to support multiple connections by setting *gAppMaxConnections\_c* to a value up to the chip specific maximum number of connections. See the chip documentation for the supported number of connections. The application can save information about the peer devices it connects to according to the value of *gAppMaxConnections\_c*. The Bluetooth Low Energy profile associated to the application use case should be instantiated to support the use of its functionality for each peer device. When handling multiple connections, the applications can behave as either the GAP central, GAP peripheral, or both at the same time. It is up to the application code to decide whether to start the advertising or scanning before creating the next connection. The supported combinations enable a device to connect as a slave to multiple masters, as a master to multiple slaves, or for it to be a master for some peers and a slave to others. The demo applications provide this functionality as an example of exercising multiple connection support, where the GAP role can be changed from central to peripheral and the information is saved for each peer device.

## 9.12 Bluetooth address generation

BD\_ADDR is represented by 48 bits that uniquely identify a device and consist of a 24-bit OUI (Organizationally Unique Identifier) and a 24-bit random part that varies between devices. There are multiple options of storing and using the BD\_ADDR. Depending

on the chip, it may be read from a device specific register (if supported), from the global hardware parameters stored in the flash, or generated randomly based on the processor-unique identifier. The demo applications provide a combination of the last two options. Before calling the *Controller\_Init* function, the global hardware parameters are read from the flash. If a useful value is found (which has at least one byte different than 0xFF), the value is used and set in an array that is used by the controller as an external reference outside the library code and set in the *Controller\_Init* function. Otherwise, if all the values found in flash hardware parameters are 0xFF, a random address is generated. The OUI is configured at the compile time through `BD_ADDR_OUI`, while the random device part is generated using SHA-256 with an input from a board-unique identifier. The result is concatenated and stored in the flash hardware parameters for a later use. At any point after the controller initialization is complete, you may set a new `BD_ADDR` by calling *bleResult\_t Controller\_SetDeviceAddress(uint8\_t\* bdAddr)*

## 9.13 Repeated attempts

Applications can be configured to enable protection against repeated Pairing Requests/Slave Security Requests coming from the same device. This is to prevent an intruder from repeating the pairing process with a large number of different keys in order to extract information about the local device's private key. If this feature is enabled, after a pairing procedure fails, another attempt to pair coming from the same device will only be allowed after a time period has passed. For each failure, the waiting period doubles up until a maximum period.

The following `app_preinclude.h` macros support this feature:

- `gRepeatedAttempts_d`
  - Set to 1 to enable the feature. By default, it is disabled (0).
- `gRepeatedAttemptsNoOfDevices_c`
  - Number of remote devices to keep track of. By default, the value is 4.
  - If a new device needs to be added and the list is full, one of the oldest entries will be replaced.
- `gRepeatedAttemptsTimeoutMin_c`
  - Minimum waiting period in seconds – default 10.
- `gRepeatedAttemptsTimeoutMax_c`
  - Maximum waiting period in seconds – default 640. The waiting period doubles after each failed pairing with the same device.



# Chapter 10

## Low-Power Management

### 10.1 System considerations

The Arm® Cortex® CPU and the Bluetooth Low Energy core have their own power modes. Thus, the low-power mode is a combination between a Bluetooth Low Energy Link Layer power mode and an MCU low-power mode.

For the MCU, there are two types of low-power modes defined, sleep modes (based on the Arm architecture sleep modes) and deep sleep modes (based on the Arm architecture deep sleep modes). Only deep sleep modes are of interest in this document. The MCU deep sleep modes used by this component are LLS2/3 and VLLS0/1 for the Kinetis MCUs and PD0/1 for the QN908X MCUs.

For Kinetis MCU-based platforms, the Bluetooth Low Energy Link Layer also has a sleep and a deep sleep mode. However, this component uses only the deep sleep mode. To function, the Bluetooth Low Energy Link layer needs a clock from the RF Reference Oscillator and requests it through a signal called Bluetooth Low Energy Sysclk Request. The RSIM module monitors the signal, and, when it is asserted high, RSIM generates an interrupt request. This interrupt can be configured in LLWU to wake up the system. Upon entering deep sleep, the Bluetooth Low Energy Link Layer de-asserts the Bluetooth Low Energy Sysclk Request since the RF clock is not needed in deep sleep. With a programmable timeout before Bluetooth Low Energy reference clock register reaches the value in the Bluetooth Low Energy wake-up instant register during deep sleep. The Bluetooth Low Energy link Layer asserts Bluetooth Low Energy Sysclk Request again. If the RSIM module is enabled to generate an interrupt on this event and this interrupt is configured in LLWU module to wake up the chip, the Bluetooth Low Energy link layer wakes up the entire SoC just before it exits DSM.

For the QN908x MCU-based platforms, the Bluetooth Low Energy core has only one deep sleep mode. When in the deep sleep mode, the Bluetooth Low Energy core uses the 32k clock to track the time. If a Bluetooth Low Energy event is expected, it can wake up itself and the chip. For a proper functionality, the Bluetooth Low Energy core needs a stable AHB clock, which is derived from the 32 MHz crystal. This is why the Bluetooth Low Energy core uses the NVDS value of "Crystal wake-up time" to wake up the chip in advance, so that the crystal is stable at the Bluetooth Low Energy event time. The user can modify the crystal wake-up value; lower values decrease power consumption but can make the Bluetooth Low Energy unstable or unusable if too low.

### 10.2 When/how to enter low-power

The system should enter low-power when the entire system is idle and all software layers agree on that. For this use case, an idle task which must have the lowest priority in the system is defined and used to enter and exit low-power. Therefore, the system enters low-power on idle task, which runs when there are no events for other tasks.

In that task, the low-power examples call the static function *AppIdle*. The following steps explain this example:

- The device checks if the device can enter sleep (all software layers that called *PWR\_DisallowDeviceToSleep* have called back *PWR\_AllowDeviceToSleep*).
- The device enters low-power by calling *PWR\_EnterLowPower*.
- When returning from sleep, the application checks up for the wake up reason. In this example, the node handles the keyboard press that caused the wake up.

```
static void App_Idle(void)
{
    if( PWR_CheckIfDeviceCanGoToSleep() )
    {
        /* Enter Low Power */
        PWR_EnterLowPower();

#ifdef gFSCI_IncludeLpmCommands_c
        /* Send Wake Up indication to FSCI */
        FSCI_SendWakeUpIndication();
#endif
    }
}
```

```

#endif

#if gKBD_KeysCount_c > 0
    /* Woke up on Keyboard Press */
    if (PWRLib_MCU_WakeupReason.Bits.FromKeyBoard)
    {
        KBD_SwitchPressedOnWakeUp();
    }
#endif
}
else
{
    /* Enter MCU Sleep */
    PWR_EnterSleep();
}
}

```

- The node re-enters sleep when the idle task runs again.

Each software layer/entity running on the system can prevent it from entering low-power by calling *PWR\_DisallowDeviceToSleep*. The system stays awake until all software layers that called *PWR\_DisallowDeviceToSleep* call back *PWR\_AllowDeviceToSleep* and the system reaches idle task. The MCU enters either sleep or deep sleep depending on the type of the timers started. Low-power timers are the only timers that do not prevent the system from entering deep sleep. If any other timers are started, the MCU enters sleep instead of deep sleep. The user should stop all timers other than the low-power ones. The functions that start timers, like *LED\_StartFlash*, prevent the system from entering deep sleep.

### 10.3 Deep sleep modes for Kinetis MCU-based platforms

See the *Kinetis Wireless Dual Mode (Bluetooth LE and IEEE® 802.15.4) Microcontrollers Low-power Library Overview* section of *Connectivity Framework Reference Manual* for the list of supported deep sleep modes and their description.

A summary of the available power modes can be found in the table below:

**Table 5. Available power modes**

| Low-Power Mode | Required State |                         | Wake Up Sources |                 |       |        |      |
|----------------|----------------|-------------------------|-----------------|-----------------|-------|--------|------|
|                | MCU            | Bluetooth LE Link Layer | GPIO            | Bluetooth LE LL | LPTMR | DCDC** | UART |
| <b>1</b>       | LLS3           | DSM                     | x               | x               | x     |        |      |
| <b>2</b>       | LLS2           | IDLE                    | x               |                 | x     | x      |      |
| <b>3</b>       | LLS3           | IDLE                    | x               |                 | x     | x      |      |
| <b>4</b>       | VLLS0/1*       | IDLE                    | x               |                 |       | x      |      |
| <b>5</b>       | VLLS2          | IDLE                    | x               |                 |       | x      |      |
| <b>6</b>       | STOP           | IDLE/RUN                | x               | x               | x     | x      | x    |

\* VLLS0 if DCDC bypassed/ VLLS1 otherwise

\*\* Available in buck mode only

The application can decide to configure `cMCU_SleepDuringBleEvents` to allow better power consumption when the LL performs an action. For instance, if the user configures the system to use low power mode 1 and this configuration is enabled, during Bluetooth Low Energy events, the low power mode 6 will be used. After LL completed the event, the user selected low power mode will be restored, as in this example low power mode 1.

## 10.4 Deep sleep modes for QN908X MCU-based platforms

QN908x has only two deep sleep modes called power down 0 (PD0) and power down 1 (PD1). See “[UM11023 QN908x User Manual](#)” for details. For both modes the required RAM memory blocks are powered up (the user can configure the blocks that stay powered up and powered down during deep sleep). CPU registers values can be retained during deep sleep (the user can disable this feature).

See *Low power library for QN908X MCU based platforms* section of *Connectivity Framework Reference Manual* for the list of supported deep sleep modes and their description.

## 10.5 Low-power usage examples

### 10.5.1 Using low-power when Bluetooth Low Energy stack is idle

The most efficient low-power mode to be used in this scenario, while retaining the SRAM is deep sleep mode 3. The user can configure the MCU deep sleep duration through `cPWR_DeepSleepDurationMs` at compile time or by calling `PWR_SetDeepSleepTimeInMs` at runtime. This value affects the application low power timers callback execution time as the system will not wake up until the deep sleep duration expires. The user could set the deep sleep duration to the application's lowest power timer duration, but it is recommended to let the system do this by enabling `cPWR_CheckLowPowerTimers`. This way, the deep sleep duration is adjusted automatically by the low power module to the shortest LP timer duration, if any LP timer is active. This is not applicable for the QN908X MCU based platforms.

To allow the device to enter sleep, call `PWR_ChangeDeepSleepMode` and `PWR_AllowDeviceToSleep` after the stack is initialized.

```
PWR_ChangeDeepSleepMode(3);  
PWR_AllowDeviceToSleep();
```

### 10.5.2 Using low-power when advertising

Advertising requires the Bluetooth Low Energy Link Layer to send the advertising packet and listen for connection requests on configured interval, without the intervention of the higher layers. Thus, deep sleep mode 1 is the best candidate for this use case.

To allow the device to enter deep sleep mode 1, call `PWR_ChangeDeepSleepMode` before calling the function to start advertising.

```
PWR_ChangeDeepSleepMode(1);  
BleApp_Advertise();
```

MCU enters sleep and wakes up on advertising events. The Bluetooth Low Energy enters DSM between advertising events.

### 10.5.3 Using low-power when scanning

Scanning requires the Bluetooth Low Energy Link Layer to be in running mode during the whole procedure. The device enters sleep after the scanning is finished or remain active if a suitable device is found. So, the deep sleep mode 1 is the best candidate for this use case.

To allow the device to enter deep sleep mode 1, call `PWR_ChangeDeepSleepMode` before starting a scan. If the scanner performs a low-duty cycle scan (the scan window value is smaller than the scan interval value), the system will enter a low-power mode when the scanning window finishes.

```
PWR_ChangeDeepSleepMode(1);  
App_StartScanning();
```

### 10.5.4 Using low-power in connection

Low-power during a connection needs to take into account the connection interval, the slave latency and the supervision timeout. The Bluetooth Low Energy link layer must periodically send empty PDUs to maintain the connection, so it must be in DSM. Thus, deep sleep mode 1 is the best candidate for this use case.

When a connection is created, the application is notified in `BLE_SignalFromISRCallback` to deny sleep and be ready for other procedures like service discovery.

```
PWR_DisallowDeviceToSleep();
```

These functions are called on the `gConnEvtConnected_c` event. It needs to allow the system to sleep on account of the callback executed previously that denied device to sleep.

```
case gConnEvtConnected_c:
{
    PWR_ChangeDeepSleepMode(1);
    PWR_AllowDeviceToSleep();
}
```

# Chapter 11

## Over the Air Programming (OTAP)

This chapter contains a detailed description of the Over The Air Programming capabilities of the Bluetooth Low Energy Host Stack enabled by dedicated GATT Service/Profile, the support modules needed for OTA programming and the Bootloader application which performs the actual image upgrade on a device.

The image transfer is done using a dedicated protocol which is designed to run on both the Bluetooth Low Energy transport and serial transport.

The container for the upgrade image is an image file which has a predefined format which is described in detail. The image file format is independent of the protocol but must contain information specific to the image upgrade infrastructure on an OTAP Client device. Detailed information on how to build an image file starting from a generic format executable generated by an embedded cross-compiling toolchain is shown.

The demo applications implement a typical scenario where a new image is sent from a PC via serial interface to a Bluetooth Low Energy OTAP Server and then over the air to an OTAP Client which is the target of the upgrade image. There are 3 applications involved in the OTAP demo: 1 PC application which builds the image file and serves it to the embedded OTAP Server and 2 embedded applications (OTAP Server and OTAP Client). This chapter contains enough information for building Bluetooth Low Energy OTAP applications which implement different image upgrade scenarios specific to other use cases.

### 11.1 General functionality

A Bluetooth Low Energy OTAP system consists of an OTAP Server and an OTAP Client which exchange an image file over the air using the infrastructure provided by Bluetooth Low Energy (GAP, GATT, SM) via a custom GATT Service and GATT Profile. Additionally, a third application may be used to serve an image to the embedded OTAP Server.

The OTAP Server runs on the GATT Client via the Bluetooth Low Energy OTAP Profile and the OTAP Client runs on the GATT Server via the Bluetooth Low Energy OTAP Service. For the moment the OTAP Server runs on the GAP Central and the OTAP Client runs on the GAP Peripheral.

The diagram below shows a typical image upgrade scenario.

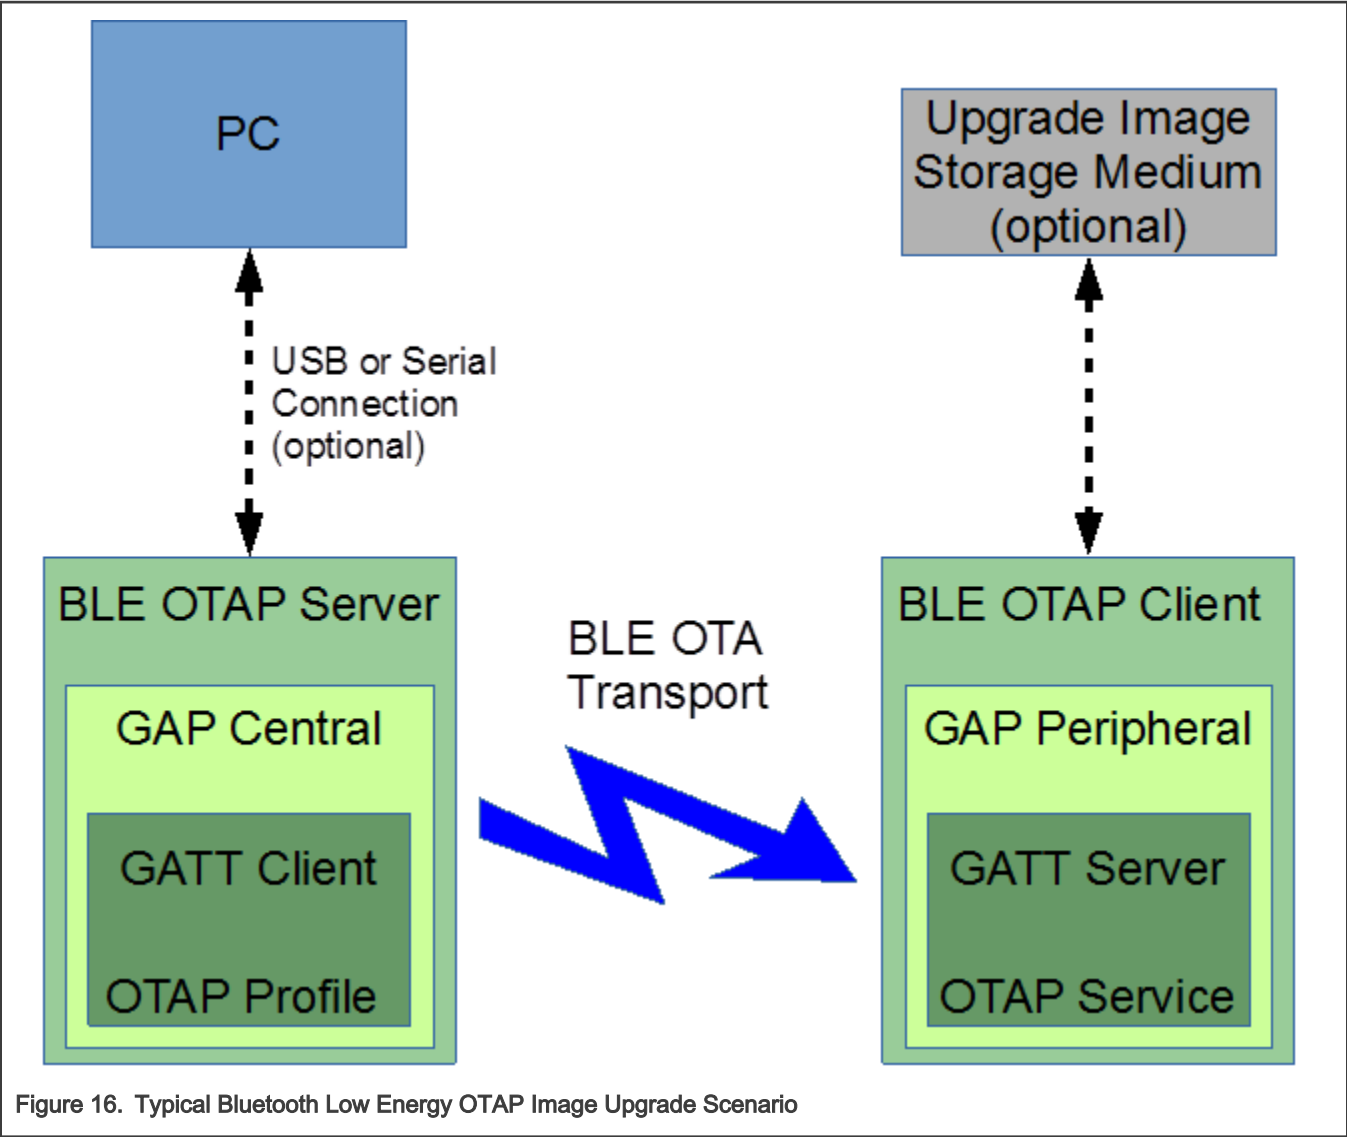


Figure 16. Typical Bluetooth Low Energy OTAP Image Upgrade Scenario

## 11.2 Bluetooth Low Energy OTAP service-profile

The Bluetooth Low Energy OTAP Service is implemented using the Bluetooth Low Energy GATT Server which runs on the OTAP Client (GAP Peripheral).

The Bluetooth Low Energy OTAP Service does not require any other Bluetooth Low Energy services. Because it is a custom service it has a 128-bit UUID. The service has 2 custom characteristics which also have 128-bit UUIDs.

The service must be included in the GATT Database of the GATT Server as described in the *Creating a GATT Database* section of this document.

### 11.2.1 OTAP service and characteristics

The OTAP Service has a custom 128-bit UUID which is shown below. The UUID is based on a base 128-bit UUID used for Bluetooth Low Energy custom services and characteristics. These are shown in the tables below.

Table 6. Base Bluetooth Low Energy 128-bit UUID

|  |                                       |
|--|---------------------------------------|
| Base Bluetooth Low Energy 128-bit UUID | 00000000 -ba5e-f4ee-5ca1-eb1e5e4b1ce0 |
|--|---------------------------------------|

The OTAP Service custom 128-bit UUID is built using the base UUID by replacing the most significant 4 bytes which are 0 with a value specific to the OTAP Service which is 01FF5550 in hexadecimal format.

**Table 7. Bluetooth Low Energy OTAP Service UUID**

| Service                           | UUID (128-bit)                        |
|-----------------------------------|---------------------------------------|
| Bluetooth Low Energy OTAP Service | 01ff5550 -ba5e-f4ee-5ca1-eb1e5e4b1ce0 |

The Bluetooth Low Energy OTAP Service Characteristics UUIDs are built the same as the Bluetooth Low Energy OTAP Service UUID starting from the base 128-bit UUID but using other values for the most significant 4 bytes.

**Table 8. Bluetooth Low Energy OTAP Service Characteristics**

| Characteristic                          | UUID (128-bit)                        | Properties             | Descriptors |
|---|---------------------------------------|------------------------|-------------|
| Bluetooth Low Energy OTAP Control Point | 01ff5551 -ba5e-f4ee-5ca1-eb1e5e4b1ce0 | Write, Indicate        | CCC         |
| Bluetooth Low Energy OTAP Data          | 01ff5552 -ba5e-f4ee-5ca1-eb1e5e4b1ce0 | Write Without Response | -           |

Both characteristics are implemented as variable length characteristics.

The Bluetooth Low Energy OTAP Control Point Characteristic is used for exchanging OTAP commands between the OTAP Server and the OTAP Client. The OTAP Client sends commands to the OTAP Server using ATT Notifications for this characteristic and the OTAP Server sends commands to the OTAP Client by making ATT Write Requests to this characteristic. Both ATT Writes and ATT Notifications are acknowledged operations via ATT Write Responses and ATT Confirmations.

The Bluetooth Low Energy OTAP Data characteristic is used by the OTAP Server to send parts of the OTAP image file to the OTAP Client when the ATT transfer method is chosen by the application. The ATT Write Commands (GATT Write Without Response operation) is not an acknowledged operation.

The Bluetooth Low Energy OTAP service and characteristics 128-bit UUIDs are defined in the *gatt\_uuid128.h* just as shown below.

```

UUID128(uuid_service_otap, 0xE0, 0x1C, 0x4B, 0x5E, 0x1E, 0xEB, 0xA1, 0x5C, 0xEE, 0xF4, 0x5E, 0xBA,
0x50, 0x55, 0xFF, 0x01)
UUID128(uuid_char_otap_control_point, 0xE0, 0x1C, 0x4B, 0x5E, 0x1E, 0xEB, 0xA1, 0x5C, 0xEE, 0xF4,
0x5E, 0xBA, 0x51, 0x55, 0xFF, 0x01)
UUID128(uuid_char_otap_data, 0xE0, 0x1C, 0x4B, 0x5E, 0x1E, 0xEB, 0xA1, 0x5C, 0xEE, 0xF4, 0x5E, 0xBA,
0x52, 0x55, 0xFF, 0x01)

```

The service is included into the GATT database of the device. It is declared in the *gatt\_db.h* file as shown below.

```

PRIMARY_SERVICE_UUID128(service_otap, uuid_service_otap)
CHARACTERISTIC_UUID128(char_otap_control_point, uuid_char_otap_control_point, (gGattCharPropWrite_c |
gGattCharPropIndicate_c))
VALUE_UUID128_VARLEN(value_otap_control_point, uuid_char_otap_control_point,
(gPermissionFlagWritable_c), 16, 16, 0x00)
CCCD(cccd_otap_control_point)
CHARACTERISTIC_UUID128(char_otap_data, uuid_char_otap_data, (gGattCharPropWriteWithoutRsp_c))
VALUE_UUID128_VARLEN(value_otap_data, uuid_char_otap_data, (gPermissionFlagWritable_c), gAttMaxMtu_c
- 3, gAttMaxMtu_c - 3, 0x00)

```

The Bluetooth Low Energy OTAP Control Point characteristic should be large enough for the longest command which can be exchanged between the OTAP Server and The OTAP Client.

The Bluetooth Low Energy OTAP Data characteristic should be large enough for the longest data chunk command the OTAP Client expects from the OTAP Server to be sent via ATT. The maximum length of the OTAP Data Characteristic value is ATT\_MTU- 3. 1 byte is used for the ATT OpCode and 2 bytes are used for the Attribute Handle when performing a Write Without Response, the only operation permitted for this characteristic value.

### 11.2.2 OTAP server and OTAP client interactions

The OTAP Server application scans for devices advertising the OTAP Service. When it finds one it connects to that device and notifies it of the available image files or waits for requests regarding available image files. The behavior is specific to each application which needs the OTAP functionality. The Bluetooth Low Energy OTAP Protocol described below details how to do this.

After an OTAP Server (GAP Central, GATT Client) connects to an OTAP Client (GAP Peripheral, GATT Server) it scans the device database and identifies the handles of the OTAP Control Point and OTAP Data characteristics and their descriptors. Then it writes the CCC Descriptor of the OTAP Control point to allow the OTAP Client to send it commands via ATT Indications. It can send commands to the OTAP Client by using ATT Write Commands to the OTAP Control Point characteristic.

After the connection is established, if the OTAP Client wants to use the L2CAP CoC transfer method it must register a L2CAP PSM with the OTAP Server.

The OTAP Client only starts any image information request or image transfer request procedures only after the OTAP Server writes the OTAP Control Point CCCD to ensure there is bidirectional communication between the devices.

## 11.3 Bluetooth Low Energy OTAP protocol

The protocol consists of a set of commands (messages) which allow the OTAP Client to request or be notified about the available images on an OTAP Server and to request the transfer of parts of images from the OTAP Server.

All commands with the exception of the image data transfer commands are exchanged through the OTAP Control Point characteristic of the OTAP Service. The data transfer commands are sent only from the OTAP Server to the OTAP Client either via the OTAP Data characteristic of the OTAP Service or via a dedicated Credit Based Channel assigned to a L2CAP PSM.

### 11.3.1 Protocol design considerations

The OTAP Client is a GAP Peripheral thus a device which has limited resources. This is why the OTAP Protocol was designed in such a way that it is at the discretion of the OTAP Client if, when, how fast and how much of an available upgrade image is transferred from the OTAP Server. The OTAP Client also decides which is the image transfer method based on its capabilities. Two image transfer methods are supported at this moment: the ATT Transfer Method and the L2CAP PSM CoC Transfer Method.

The ATT Transfer Method is supported by all devices which support Bluetooth Low Energy but it has the disadvantage of a small data payload size and a larger Bluetooth Low Energy stack protocols overhead leading to a lower throughput. This disadvantage has been somewhat reduced by the introduction of the Long Frames feature in the Bluetooth Low Energy specification 4.2 Link Layer which allows for a larger ATT\_MTU value. The L2CAP PSM CoC Transfer Method is an optional feature available for devices running a Bluetooth stack version 4.1 and later. The protocol overhead is smaller and the data payload is higher leading to a high throughput. The L2CAP PSM Transfer Method is the preferred transfer method and it is available on all Bluetooth Low Energy Devices if the application requires it.

Based on application requirements and device resources and capabilities the OTAP Clients can request blocks of OTAP images divided into chunks. To minimize the protocol overhead and maximize throughput an OTAP Client makes a data block request specifying the block size and the chunk size and the OTAP Server sends the requested data chunks (which have a sequence number) without waiting for confirmation. The block size, chunk size and number of chunks per block are limited and suitable values must be used based on application needs.

The OTAP Client can stop or restart an image block transfer at any time if the application requires it or a transfer error occurs. The OTAP Server implementation can be almost completely stateless. The OTAP Server does not need to remember what parts of an image have been transferred, this is the job of the OTAP Client which can request any part of an image at any time. This allows it to download parts of the image whenever and how fast its resources allow it. The OTAP Server simply sends image information and image parts on request.

The Bluetooth Low Energy OTAP Protocol is designed to be used not only on Bluetooth Low Energy transport medium but on any transport medium, for example a serial communication interface or another type of wireless interface. This may be useful when transferring an upgrade image from a PC or a mobile device to the OTAP Server to be sent via Bluetooth Low Energy to the OTAP Clients which require it. In the OTAP Demo Applications the embedded OTAP Server relays OTAP commands between an OTAP Client and a PC via a serial interface and using a FSCI type protocol. Effectively the OTAP Client downloads the upgrade image from the PC and not from the OTAP Server. Other transfer methods may be used based on application needs.



### 11.3.2 Bluetooth Low Energy OTAP commands

The Bluetooth Low Energy OTAP Commands general format is shown below. A command consists of two parts, a Command ID and a Command Payload as shown in the table below.

**Table 9. Bluetooth Low Energy OTAP General Command Format**

| Field Name   | CmdId | CmdPayload |
|--------------|-------|------------|
| Size (Bytes) | 1     | variable   |

Commands are sent over the transport medium starting with the Command ID and continuing with the Command Payload.

All multibyte command parameters in the Command Payload are sent in a least significant octet first order (little endian).

A summary of the commands supported by the Bluetooth Low Energy OTAP Protocol is shown in the table below. Each of the commands is then detailed in its own section.

**Table 10. Bluetooth Low Energy OTAP Commands Summary**

| CmdId | Command Name            |
|-------|-------------------------|
| 0x01  | New Image Notification  |
| 0x02  | New Image Info Request  |
| 0x03  | New Image Info Response |
| 0x04  | Image Block Request     |
| 0x05  | Image Chunk             |
| 0x06  | Image Transfer Complete |
| 0x07  | Error Notification      |
| 0x08  | Stop Image Transfer     |

#### 11.3.2.1 New image notification command

This command can be sent by an OTAP Server to an OTAP Client, usually immediately after the first connection, to notify the OTAP Client of the available images on the OTAP Server.

**Table 11. New Image Notification Command Parameters**

| CmdId | Name                   | Dir  | Parameters   | Param Size (Bytes) | Description  | Total Size (CmdId+Payload) |
|-------|------------------------|------|--------------|--------------------|--|----------------------------|
| 0x01  | New Image Notification | S->C | ImageId      | 2                  | Short image identifier used for transactions between the OTAP Server and OTAP Client. Should be unique for all images on a server. | 15                         |
|       |                        |      | ImageVersion | 8                  | Image file version.  |                            |

*Table continues on the next page...*

**Table 11. New Image Notification Command Parameters (continued)**

|  |  |  |               |   |   |  |
|--|--|--|---------------|---|---|--|
|  |  |  |               |   | Contains sufficient information to identify the target hardware, stack version and build version. |  |
|  |  |  | ImageFileSize | 4 | Image file size in bytes.   |  |

The *ImageId* parameter should not be 0x0000 which is the reserved value for the current running image or 0xFFFF which is the reserved value for “no image available”.

### 11.3.2.2 New image info request command

This command can be sent by an OTAP Client to an OTAP Server to inquire about available upgrade images on the OTAP Server.

**Table 12. New Image Info Request Command Parameters**

| CmdId | Name                   | Dir  | Parameters   | Param Size (Bytes) | Description   | Total Size (CmdId+Payload) |
|-------|------------------------|------|--------------|--------------------|---|----------------------------|
| 0x02  | New Image Info Request | C->S | CurrImageId  | 2                  | Id of the currently running image. Should be 0x0000.  | 11                         |
|       |                        |      | CurrImageVer | 8                  | Version of the currently running image. A value of all zeroes signals that the client is looking for all images available on an OTAP Server. A value of all zeroes requests information about all images on the server. |                            |

The *CurrImageId* parameter should be set to 0x0000 to signify the current running image.

The *CurrImageVer* parameter should contain sufficient information about the target device for the OTAP Server to determine if it has an upgrade image available for the requesting OTAP Client.

A value of all zeroes for the *CurrImageVer* means that an OTAP Client is requesting information about all available images on an OTAP Server and the OTAP Server should send a New Image Info Response for each image.

### 11.3.2.3 New image info response command

This command is sent by the OTAP Server to the OTAP Client as a response to a New Image Information Request Command.

**Table 13. New Image Info Response Command Parameters**

| CmdId | Name                    | Dir  | Parameters    | Param Size (Bytes) | Description  | Total Size (CmdId+Payload) |
|-------|-------------------------|------|---------------|--------------------|--|----------------------------|
| 0x03  | New Image Info Response | S->C | ImageId       | 2                  | Image Id. Value 0xFFFF is reserved as "no image available" | 15                         |
|       |                         |      | ImageVersion  | 8                  | Image file version.  |                            |
|       |                         |      | ImageFileSize | 4                  | Image file size.   |                            |

The *ImageId* parameter with a value of 0xFFFF is reserved for the situation where no upgrade image is available for the requesting device.

### 11.3.2.4 Image block request command

This command is sent by the OTAP Client to the OTAP Server to request a part of the upgrade image after it has determined the OTAP Server has an upgrade image available.

When an OTAP Server Receives this command it should stop any image file chunk transfer sequences in progress.

**Table 14. Image Block Request Command Parameters**

| CmdId | Name                | Dir  | Parameters    | Param Size (Bytes) | Description  | Total Size (CmdId+Payload) |
|-------|---------------------|------|---------------|--------------------|--|----------------------------|
| 0x04  | Image Block Request | C->S | ImageId       | 2                  | Image Id   | 16                         |
|       |                     |      | StartPosition | 4                  | Start position of the image block to be transferred.   |                            |
|       |                     |      | BlockSize     | 4                  | Requested total block size in bytes.   |                            |
|       |                     |      | ChunkSize     | 2                  | Should be optimized to the TransferChannel type. The maximum number of chunks per block is 256. Value is in bytes. |                            |

*Table continues on the next page...*

**Table 14. Image Block Request Command Parameters (continued)**

|  |  |  |                   |   |  |  |
|--|--|--|-------------------|---|--|--|
|  |  |  | TransferMethod    | 1 | 0x00 - ATT<br>0x01 – L2CAP<br>PSM Credit<br>based channel          |  |
|  |  |  | L2capChannelOrPsm | 2 | 0x0004 - ATT<br>Other values –<br>PSM for credit<br>based channels |  |

The *ImageId* parameter contains the ID of the upgrade image.

The *StartPosition* parameter specifies the location in the image upgrade file at which the requested block starts.

The *BlockSize* and *ChunkSize* parameters specify the size in bytes of the block to be transferred and the size of the chunks into which a block is separated. The *ChunkSize* value must be chosen in such a way that the total number of chunks can be represented by the *SeqNumber* parameter of the Image Chunk Command. At the moment this parameter is 1 byte in size so there are a maximum of 256 chunks per block. The chunk sequence number goes from 0 to 255 (0x00 to 0xFF). If this condition is not met or the requested block is not entirely into the image file bounds an error is sent to the OTAP Client when the OTAP Server receives this misconfigured Image Block Request Command.

The maximum value of the *ChunkSize* parameter depends on the maximum ATT\_MTU and L2CAP\_MTU supported by the Bluetooth Low Energy stack version and implementation.

The *TransferMethod* parameter is used to select the transfer method which can be ATT or L2CAP PSM CoC. The *L2capChannelOrPsm* parameter must contain the value 0x0004 for the ATT transfer method and another value representing the chosen PSM for the L2CAP PSM transfer method. The default PSM for the Bluetooth Low Energy OTAP demo applications is 0x004F for both the OTAP Server and the OTAP Client although the specification allows different values at the 2 ends of the L2CAP PSM connection. The PSM must be in the range reserved by the Bluetooth specification which is 0x0040 to 0x007F.

The optimal value of the *ChunkSize* parameter depends on the chosen transfer method and the Link Layer payload size. Ideally it must be chosen in such a way that full packets are sent for every chunk in the block.

The default Link Layer payload is 27 bytes from which we subtract 4 for the L2CAP layer and 3 for the ATT layer (1 for the ATT Cmd Opcode and 2 for the Handle) leaving us with a 20 byte OTAP protocol payload. From these 20 bytes we subtract 1 for the OTAP CmdId and 1 for the chunk sequence number leaving us with an optimum chunk size of 18 for the ATT transfer method – which is the default in the demo applications. For the L2CAP PSM transfer method the chosen default chunk size is 111. This was chosen so as a chunk fits exactly 5 link layer packets. The default L2CAP payload of 23 (27 - 4) multiplied by 5 gives us 115 from which we subtract 2 bytes for the SDU Length (which is only sent in the first packet), 1 byte for the OTAP CmdId and 1 byte for the chunk sequence number which leaves exactly 111 bytes for the actual payload.

If the Link layer supports Long Frames feature then the chunk size should be set according to the negotiated ATT MTU for the ATT transfer method. From the negotiated ATT MTU (*att\_mtu*) subtract 3 bytes for the ATT layer (1 for the ATT Cmd Opcode and 2 for the Handle) then subtract 2 bytes for the OTAP protocol (1 for the CmdId and 1 for the chunk sequence number) to determine the optimum chunk size (*optimum\_att\_chunk\_size = att\_mtu - 3 - 2*). For the L2CAP PSM transfer method the chunk size can be set based on the maximum L2CAP SDU size (*max\_l2cap\_sdu\_size*) from which 4 bytes should be subtracted, 2 for the SDU Length and 2 for the OTAP protocol (*optimum\_l2cap\_chunk\_size = max\_l2cap\_sdu\_size - 3 - 2*). In some particular cases reducing the L2CAP chunk size could lead to better performance. If the L2CAP chunk size needs to be reduced it should be reduced so it fits exactly a number of link layer packets. An example of how to compute an optimal reduced L2CAP chunk size is given in the previous paragraph.

### 11.3.2.5 Image chunk command

One or more Image Chunk Commands are sent from the OTAP Server to the OTAP Client after an Image Block Request is received by the former. The image chunks are sent via the ATT Write Without Response mechanism if the ATT transfer method is chosen and directly via L2CAP if the L2CAP PSM CoC transfer method is chosen.

**Table 15. Image Chunk Command Parameters**

| CmdId | Name        | Dir  | Parameters | Param Size<br>(Bytes) | Description   | Total Size<br>(CmdId+Payload) |
|-------|-------------|------|------------|-----------------------|---|-------------------------------|
| 0x05  | Image Chunk | S->C | SeqNumber  | 1                     | In the range 0 -> BlockSize/ ChunkSize - calculated by Server, checked by Client.<br><br>The command code is present even when ATT is used. | 3<br>or more                  |
|       |             |      | Data       | var.                  | Actual data.  |                               |

The *SeqNumber* parameter is the chunk sequence number and it has incremental values from 0 to 255 (0x00 to 0xFF) for a maximum of 256 chunks per block.

The *Data* parameter is an array containing the actual image part being transferred starting from the *BlockStartPosition + SeqNumber \* ChunkSize* position in the image file and containing *ChunkSize* or less bytes depending on the position in the block. Only the last chunk in a block can have less than *ChunkSize* bytes in the Image Chunk Command data payload.

#### 11.3.2.6 Image transfer complete command

This command is sent by the OTAP Client to the OTAP Server when an image file has been completely transferred and its integrity has been checked.

**Table 16. Image Transfer Complete Command Parameters**

| CmdId | Name                    | Dir  | Parameters | Param Size<br>(Bytes) | Description                                     | Total Size<br>(CmdId+Payload) |
|-------|-------------------------|------|------------|-----------------------|---|-------------------------------|
| 0x06  | Image Transfer Complete | C->S | ImageId    | 2                     | Image Id  | 4                             |
|       |                         |      | Status     | 1                     | Status of the image transfer.<br>0x00 - Success |                               |

The *ImageId* parameter contains the ID of the image file that was transferred.

The *Status* parameter is 0x00 (Success) if image integrity and possibly other checks have been successfully made after the image is transferred and another value if integrity or other kind of errors have occurred.

If the status is 0x00 the OTAP Client can trigger the Bootloader to start flashing the new image. The image flashing should take about 15 seconds for a 160 KB flash memory.

#### 11.3.2.7 Error notification command

This command can be sent by both the OTAP Server and the OTAP Client when an error of any kind occurs. When an OTAP Server Receives this command it should stop any image file chunk transfer sequences in progress.

Table 17. Error Notification Command Parameters

| CmdId | Name               | Dir   | Parameters  | Param Size (Bytes) | Description  | Total Size (CmdId+Payload) |
|-------|--------------------|-------|-------------|--------------------|--|----------------------------|
| 0x07  | Error Notification | Bidir | CmdId       | 1                  | Id of the command which generated the error.   | 3                          |
|       |                    |       | ErrorStatus | 1                  | Error Status:<br>Ex: out of image bounds, chunk too small, chunk too large, image verification failure, bad command format, image not available, unknown command |                            |

The *CmdId* parameter contains the ID of the command which caused the error (if applicable).

The *ErrorStatus* parameter contains the source of the error. All error statuses are defined in the *otapStatus\_t* enumerated type in the *otap\_interface.h* file.

### 11.3.2.8 Stop image transfer command

This command is sent from the OTAP Client to the OTAP Server whenever the former wants to stop the transfer of an image block which is currently in progress, or from OTAP Server to the OTAP Client when the image transfer is stopped from application (Test Tool).

Table 18. Stop Image Transfer Command Parameters

| CmdId | Name                | Dir  | Parameters | Param Size (Bytes) | Description | Total Size (CmdId+Payload) |
|-------|---------------------|------|------------|--------------------|-------------|----------------------------|
| 0x08  | Stop Image Transfer | C->S | ImageId    | 2                  | Image Id    | 3                          |

The *ImageId* parameter contains the ID of the image being transferred.

### 11.3.3 OTAP client-server interactions

The interactions between the OTAP Server and OTAP Client start immediately after the connection, discovery of the OTAP Service characteristics and writing of the OTAP Control Point CCC Descriptor by the OTAP Server.


The first command sent could be a New Image Notification sent by the OTAP Server to the OTAP Client or a New Image Info Request sent by the OTAP Client. The OTAP Server can respond with a New Image Info response if it has a new image for the device which sent the request (this can be determined from the *ImageVersion* parameter). The best strategy depends on application requirements.

After the OTAP Client has determined that the OTAP Server has a newer image it can start downloading the image. This is done by Sending Image Block Request commands to retrieve parts of the image file. The OATP Server answers to these requests with one

or more Image Chunk Commands via the requested transfer method or with an Error Notification if there are improper parameters in the Image Block Request. The OTAP Clients makes as many Image Block Requests as it is necessary to transfer the entire image file.

The OTAP Client decides how often Image Block Request Commands are sent and can even stop a block transfer which is in progress via the Stop Image Transfer Command. The OTAP Client is in complete control of the image download process and can stop it and restart it at any time based on its resources and application requirements.

A typical Bluetooth Low Energy OTAP Image Transfer scenario is shown in the message sequence chart below.

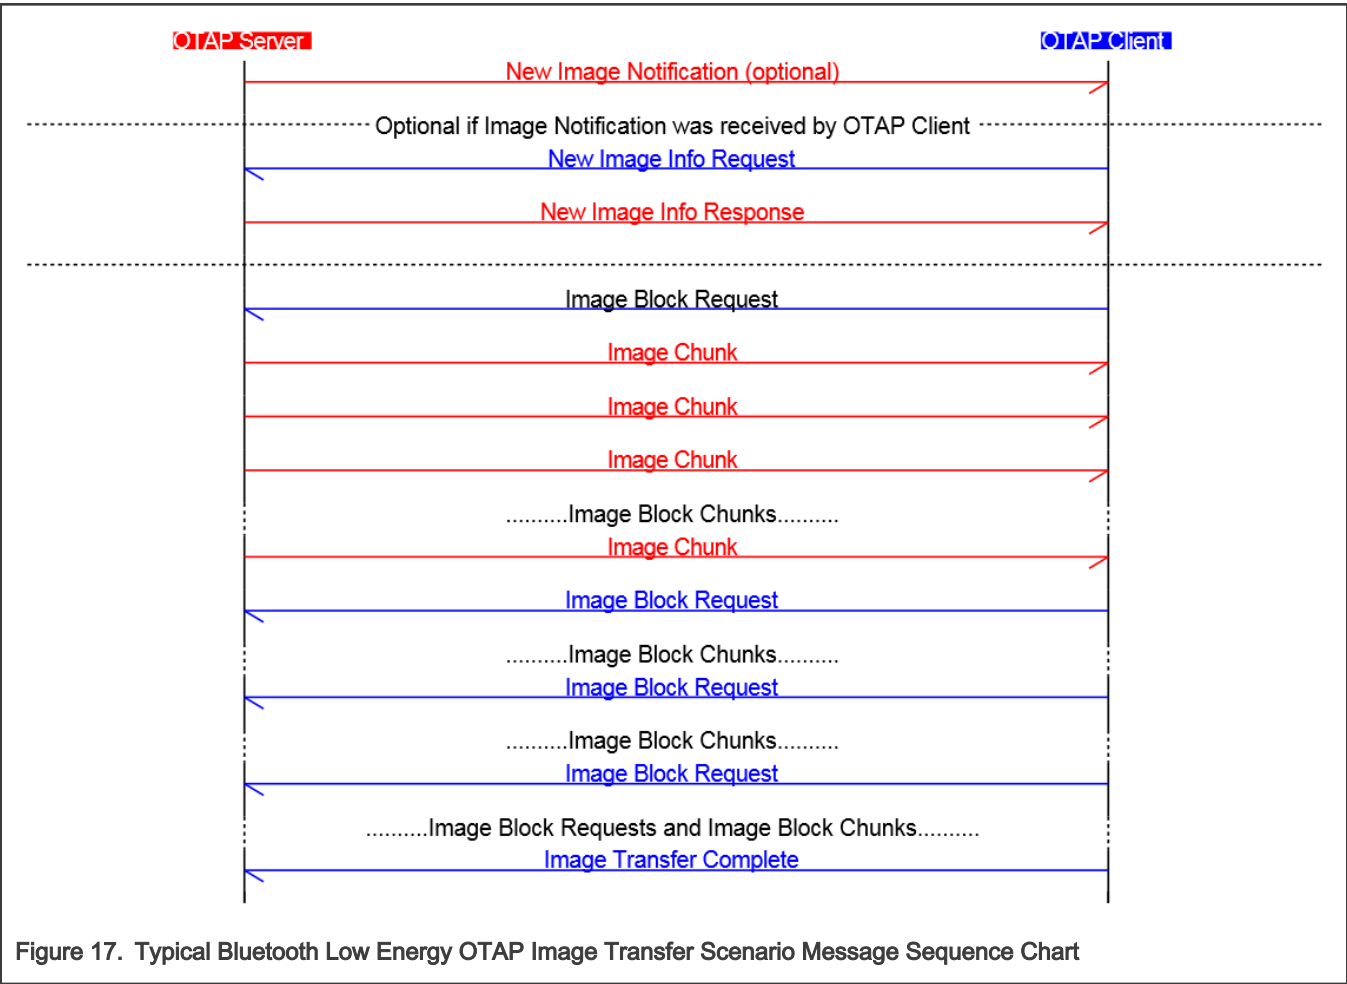

11.4 Bluetooth Low Energy OTAP image file format

The Bluetooth Low Energy OTAP Image file has a binary file format. It is composed of a header followed by a number of sub-elements. The header describes general information about the file. There are some predefined sub-elements of a file but an end manufacturer could add manufacturer-specific sub-elements. The header does not have details of the sub-elements. Each element is described by its type.

The general format of an image file is shown in the table below.

Table 19. Bluetooth Low Energy OTAP Image File General Format

| Image File Element | Value Field Length (bytes) | Description   |
|--------------------|----------------------------|---|
| Header             | Variable                   | The header contains general information about the image file. |

Table continues on the next page...

**Table 19. Bluetooth Low Energy OTAP Image File General Format (continued)**

|                            |          |   |
|----------------------------|----------|---|
| Upgrade Image Sub-element  | Variable | This sub-element contains the actual binary executable image which is copied into the flash memory of the target device. The maximum size of this sub-element depends on the target hardware.   |
| Sector Bitmap Sub-element  | 32       | <p>This sub-element contains a sector bitmap of the flash memory of the target device which tells the boot loader which sectors to overwrite and which to leave intact. The boot loader can be configured not to overwrite itself regardless of the sector bitmap settings of the flash area it resides in. The size and granularity of this sub-element are target hardware dependent.</p> <p>The format of this field is least significant byte first and least significant bit first for each byte with the least significant bytes and bits standing for the lowest memory sections of the flash.</p> |
| Image File CRC Sub-element | 2        | This is a 16 bit CCITT type CRC which is calculated over all elements of the image file with the exception of the Image File CRC sub-element itself. This must be the last sub-element in an image file.  |

Each sub-element in a Bluetooth Low Energy OTAP Image File has a Type-Length-Value (TLV) format. The type identifier provides forward and backward compatibility as new sub-elements are introduced. Existing devices that do not understand newer sub-elements may ignore the data.

The following table shows the general format of a Bluetooth Low Energy Image File sub-element.

**Table 20. Bluetooth Low Energy OTAP Image File Sub-element Format**

| Subfield | Size (Bytes) | Format  | Description   |
|----------|--------------|---------|---|
| Type     | 2            | uint16  | Type Identifier – determines the format of the data contained in the value field. |
| Length   | 4            | uint32  | Length of the <i>Value</i> field of the sub-element.                              |
| Value    | var.         | uint8[] | Data payload.   |

Some sub-element type identifiers are reserved while others are left for manufacturer-specific use. The table below shows the reserved type identifiers and the manufacturer-specific ranges.



**Table 21. Sub-element Type Identifiers Ranges**

| Type Identifiers | Description               |
|------------------|---------------------------|
| 0x0000           | Upgrade Image             |
| 0x0001 – 0xefff  | Reserved                  |
| 0xf000 – 0xffff  | Manufacturer-Specific Use |

The OTAP Demo applications use two of the manufacturer-specific sub-element type identifiers while the rest remain free to use. The two are shown in the table below along with a short description.

**Table 22. Manufacturer-Specific Sub-element Type Identifiers Used by OTAP Demo Applications**

| Manufacturer-Specific Type Identifiers | Sub-Element Name | Notes  |
|--|------------------|--|
| 0xf000                                 | Sector Bitmap    | Bitmap signaling the boot loader which sectors of the internal flash to overwrite and which not.   |
| 0xf100                                 | Image File CRC   | 16 bit CRC which is computed over the image file with the exception of the CRC sub-element itself. |

### 11.4.1 Bluetooth Low Energy OTAP header

The format and fields of the Bluetooth Low Energy OTAP Header are summarized in the table below.

**Table 23. Bluetooth Low Energy OTAP Header Fields**

| Octets | Data Types              | Field Name                                  | Mandatory/Optional |
|--------|-------------------------|---|--------------------|
| 4      | Unsigned 32-bit integer | Upgrade File Identifier                     | M                  |
| 2      | Unsigned 16-bit integer | Header Version                              | M                  |
| 2      | Unsigned 16-bit integer | Header Length                               | M                  |
| 2      | Unsigned 16-bit integer | Header Field Control                        | M                  |
| 2      | Unsigned 16-bit integer | Company Identifier                          | M                  |
| 2      | Unsigned 16-bit integer | Image ID                                    | M                  |
| 8      | 8 byte array            | Image Version                               | M                  |
| 32     | Character string        | Header String                               | M                  |
| 4      | Unsigned 32-bit integer | Total Image File Size<br>(including header) | M                  |

The fields are shown in the order they are placed in memory from the first location to the last.

The total size of the header without the optional fields (if defined by the *Header Field Control*) is 58 bytes.

All the fields in the header have a little endian format with the exception of the *Header String* field which is an ASCII character string.

A packed structure type definition for the contents of the Bluetooth Low Energy OTAP Header can be found in the *otap\_interface.h* file.

#### 11.4.1.1 Upgrade file identifier

Fixed value 4 byte field used to identify the file as being a Bluetooth Low Energy OTAP Image File. The predefined value is "0x0B1EF11E".

#### 11.4.1.2 Header version

This 2 byte field contains the major and minor version number. The high byte contains the major version and the low byte contains the minor version. The current value is "0x0100" with the major version "01" and the minor version "00". A change to the minor version means the OTA upgrade file format is still backward compatible, while a change to the major version suggests incompatibility.

#### 11.4.1.3 Header length

Length of all the fields in the header including the *Upgrade File Identifier* field, *Header Length* field and all the optional fields. The value insulates existing software against new fields that may be added to the header. If new header fields added are not compatible with current running software, the implementations should process all fields they understand and then skip over any remaining bytes in the header to process the image or CRC sub-element. The value of the *Header Length* field depends on the value of the Header Field Control field, which dictates which optional header fields are included.

#### 11.4.1.4 Header field control

This is a 2 byte bit mask which indicates which optional fields are present in the OTAP Header.

At this moment no optional fields are defined, this whole field is reserved and should be set to "0x0000".

#### 11.4.1.5 Company identifier

This is the company identifier assigned by the Bluetooth SIG. The Company Identifier used for the OTAP demo applications is "0x01FF".

#### 11.4.1.6 Image ID

This is a unique short identifier for the image file. It is used to request parts of an image file. This number should be unique for all images available on a Bluetooth Low Energy OTAP Server.

The value 0x0000 is reserved for the current running image.

The value 0xFFFF is reserved as a "no image available" code for New Image Info Response commands.

This field value must be used in the *ImageID* field in the New Image Notification and New Image Info Response commands.

#### 11.4.1.7 Image version

This is the full identifier of the image file. It should allow a Bluetooth Low Energy OTAP Client to identify the target hardware, stack version, image file build version and other parameters if necessary. The recommended format of this field (which is used by the OTAP Demo applications) is shown below but an end device manufacturer could choose different format. The subfields are shown in the order they are placed in memory from the first location to the last. Each subfield has a little endian format if applicable.

**Table 24. Suggested Image Version Field Format**

| Subfield      | Size (bytes) | Format  | Description  |
|---------------|--------------|---------|--|
| Build Version | 3            | uint8[] | Image build version.   |
| Stack Version | 1            | uint8   | 0x41 for example for Bluetooth Low Energy Stack version 4.1. |

*Table continues on the next page...*

**Table 24. Suggested Image Version Field Format (continued)**

|                     |   |         |   |
|---------------------|---|---------|---|
| Hardware ID         | 3 | uint8[] | Unique hardware identifier.                         |
| End Manufacturer Id | 1 | uint8   | ID of the hardware—specific to the end manufacturer |

This field value must be used in the *ImageVersion* field in the New Image Notification and New Image Info Response commands.

#### 11.4.1.8 Header string

This is a manufacturer-specific string that may be used to store other necessary information as seen fit by each manufacturer. The idea is to have a human readable string that can prove helpful during the development cycle. The string is defined to occupy 32 bytes of space in the OTAP Header. The default string used for the Bluetooth Low Energy OTAP demo application is “BLE OTAP Demo Image File”.

#### 11.4.1.9 Total image file size

The value represents the total image size in bytes. This is the total of data in bytes that is transferred over-the-air from the server to the client. In most cases, the total image size of an OTAP upgrade image file is the sum of the sizes of the OTAP Header and all the other sub-elements on the file. If the image contains any integrity and/or source identity verification fields then the Total Image File Size also includes the sizes of these fields.

### 11.5 Building Bluetooth Low Energy OTAP image file from SREC file

A SREC (Motorola S-record) file is an ASCII format file which contains binary information. Common extensions are: .srec, .s19, .s28, .s37 and others. Most modern compiler toolchains can output a SREC format executable.

To enable the creation of a SREC file for your embedded application in IAR Embedded Workbench®, open the target properties and go to the *Output Converter* tab. Activate the “*Generate additional output*” checkbox and choose the *Motorola* option from the “*Output format*” drop down menu. From the same pane you can also override the name of the output file. A screenshot of the described configuration is shown below.


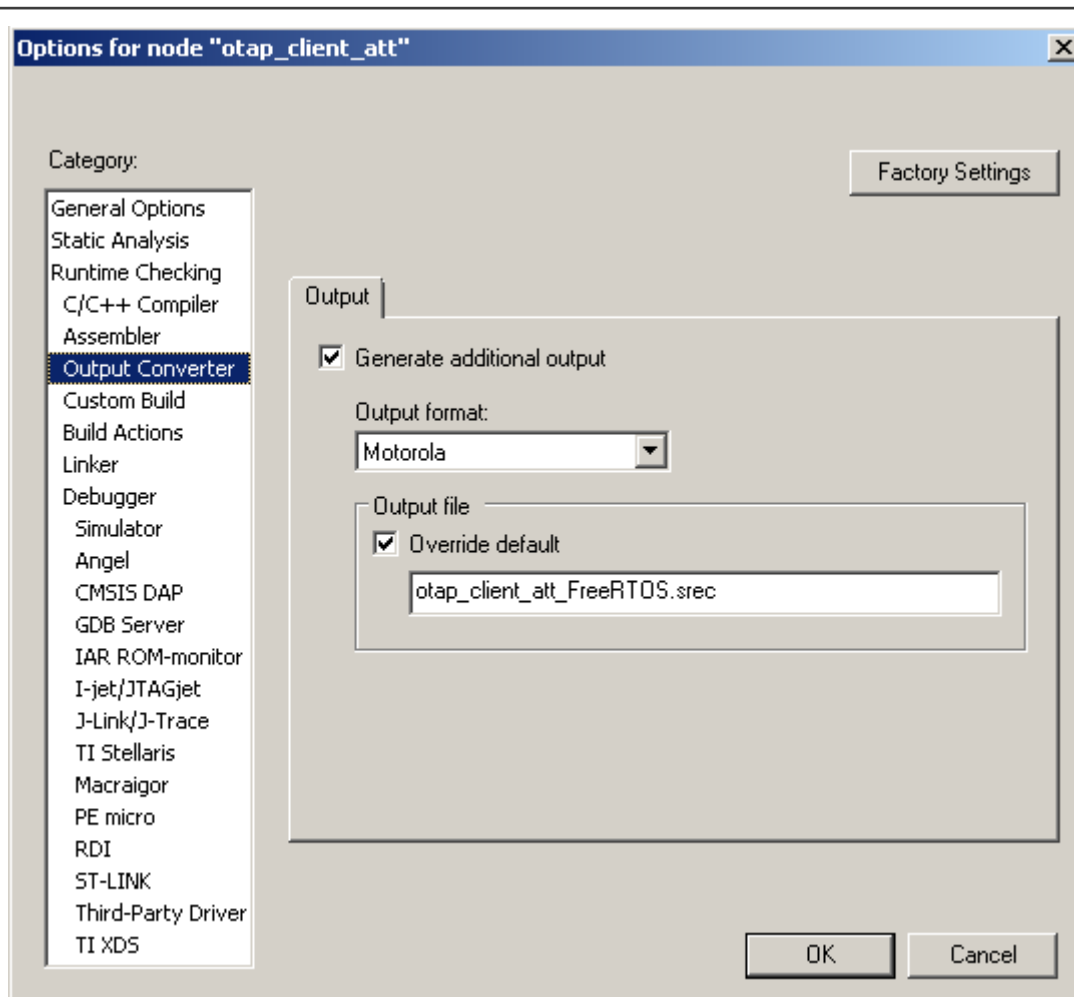


Figure 18. Enabling SREC Output in IAR Embedded Workbench

To enable the creation of a .srec file in MCUXpresso IDE go to the Project properties -> Settings -> Build steps window and press the "Edit" button for the Post-build steps. A Post-build steps window will show up in which the following command must be added or uncommented (by removing the '#' character at the beginning) if it is already there: `arm-none-eabi-objcopy -v -O srec "${BuildArtifactFileName}" "${BuildArtifactFileName}.s19"`. A screenshot of this window is shown in the figure below."

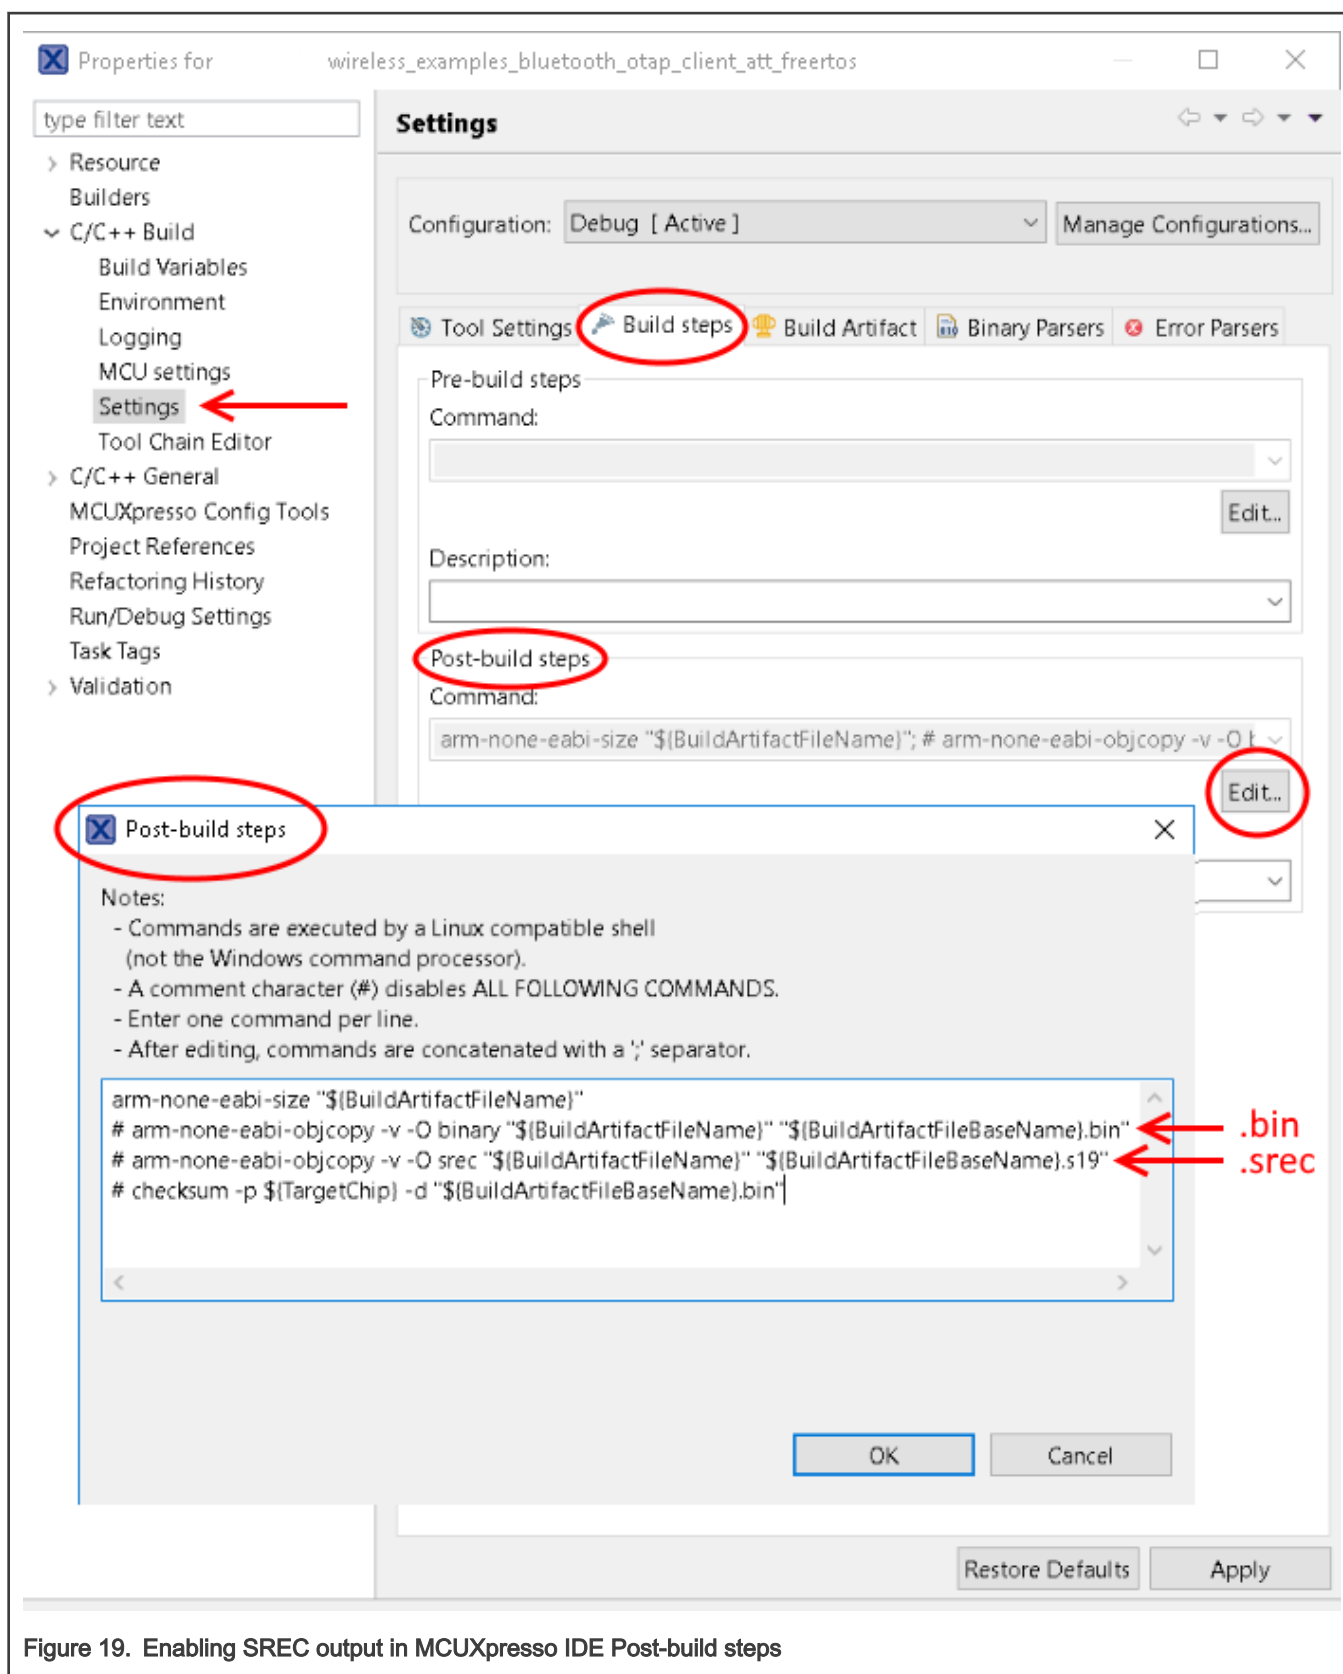

The format of the SREC file is very simple. It contains lines of text called records which have a specific format. An example of the contents of a SREC file is shown below.

```
S02000006F7461705F636C69656E745F6174745F4672656552544F532E73726563A1
S1130000F83F0020EB0500007506000075060000AF
S113001075060000750600007506000075060000F0
S113002075060000750600007506000075060000E0
S113003075060000750600007506000075060000D0
S11300400000000000000000000000000000000AC
S113005000000000000000000000000000000009C
.....
S2140117900121380004F05FF8002866D12A003100E4
S2140117A06846008804F022F8A689002E16D0002884
S2140117B014D12569278801A868A11022F7F782FCB1
S2140117C06B4601AA0121380004F045F800284CD1E7
S2140117D02A0031006846008804F008F8A68A002E20
```

All records start with the ASCII letter 'S' followed by an ASCII digit from '0' to '9'. These two characters from the record type which identifies the format of the data field of the record.

The next 2 ASCII characters are 2 hex digits which indicate the number of bytes (hex digit pairs) which follow the rest of the record (address, data and checksum).

The address follows next which can have 4, 6 or 8 ASCII hex digits depending on the record type.

The data field is placed after the address and it contains 2 \* n ASCII hex digits for n bytes of actual data.

The last element of the S record is the checksum which comprises of 2 ASCII hex digits. The checksum is computed by adding all the bytes of the byte count, address and data fields then computing the ones complement of the least significant octet of the sum.

**Table 25. Format of an S Record**

| Field                  | Record Type     | Count               | Address             | Data                                       | Checksum            | Line Terminator |
|------------------------|-----------------|---------------------|---------------------|--|---------------------|-----------------|
| Format                 | "Sn",<br>n=0..9 | ASCII<br>hex digits | ASCII<br>hex digits | ASCII<br>hex digits                        | ASCII<br>hex digits | "\r\n"          |
| Length<br>(characters) | 2               | 2                   | 4,6,8               | Count –<br>len(Address) –<br>len(Checksum) | 2                   | 2               |

More details about the SREC file format can be found at this location: [en.wikipedia.org/wiki/SREC\\_\(file\\_format\)](https://en.wikipedia.org/wiki/SREC_(file_format))

We are only interested in records which contain actual data. These are S1, S2 and S3 records. The other types of records can be ignored.

The S1, S2 and S3 records are used to build the Upgrade Image Sub-element of the image file simply by placing the record data at the location specified by the record address in the *Value* field of the Sub-element. It is recommended to fill all gaps in S record addresses with 0xFF.

To build an OTAP Image File from a SREC file follow the procedure:

- Generate the SREC file by correctly configuring your toolchain to do so
- Create the image file header
  - Set the Image ID field of the header to be unique on the OTAP Server.
  - Leave the Total Image File Size Field blank for the moment.
- Create the Upgrade Image Sub-element
  - Read the S1, S2 and S3 records from the SREC file and place the binary record data to the record addresses in the *Value* field of the sub-element. Fill all address gaps in the S records with 0xFF.

- Fill in the *Length* field of the sub-element with the length of the written *Value* field.
- Create the Sector Bitmap Sub-element
  - A default working setting would be all bytes 0xFF for the *Value* field of this sub-element
- Create the Image File CRC Sub-element
  - Compute the total image file size as the length of the header + the length of all 3 sub-elements and fill in the appropriate field in the header with this value
  - Compute and write the *Value* field of this sub-element using the header and all sub-elements except this one
  - The *OTA\_CrcCompute()* function in the *OtaSupport.c* file can be used to incrementally compute the CRC

If the Image ID is not available when the image file is created then the CRC cannot be computed. It can be computed later after the Image ID is established and written in the appropriate field in the header.

## 11.6 Building Bluetooth Low Energy OTAP image file from BIN file

A BIN file is a binary file which contains an executable image. The most common extension for this type of file is .bin. Most modern compiler toolchains can output a BIN format executable.

To enable the creation of a BIN file for your embedded application in IAR Embedded Workbench open the target properties and go to the *Output Converter* tab. Activate the “*Generate additional output*” checkbox and choose the *binary* option from the “*Output format*” drop down menu. From the same pane you can also override the name of the output file. A screenshot of the described configuration is shown below.


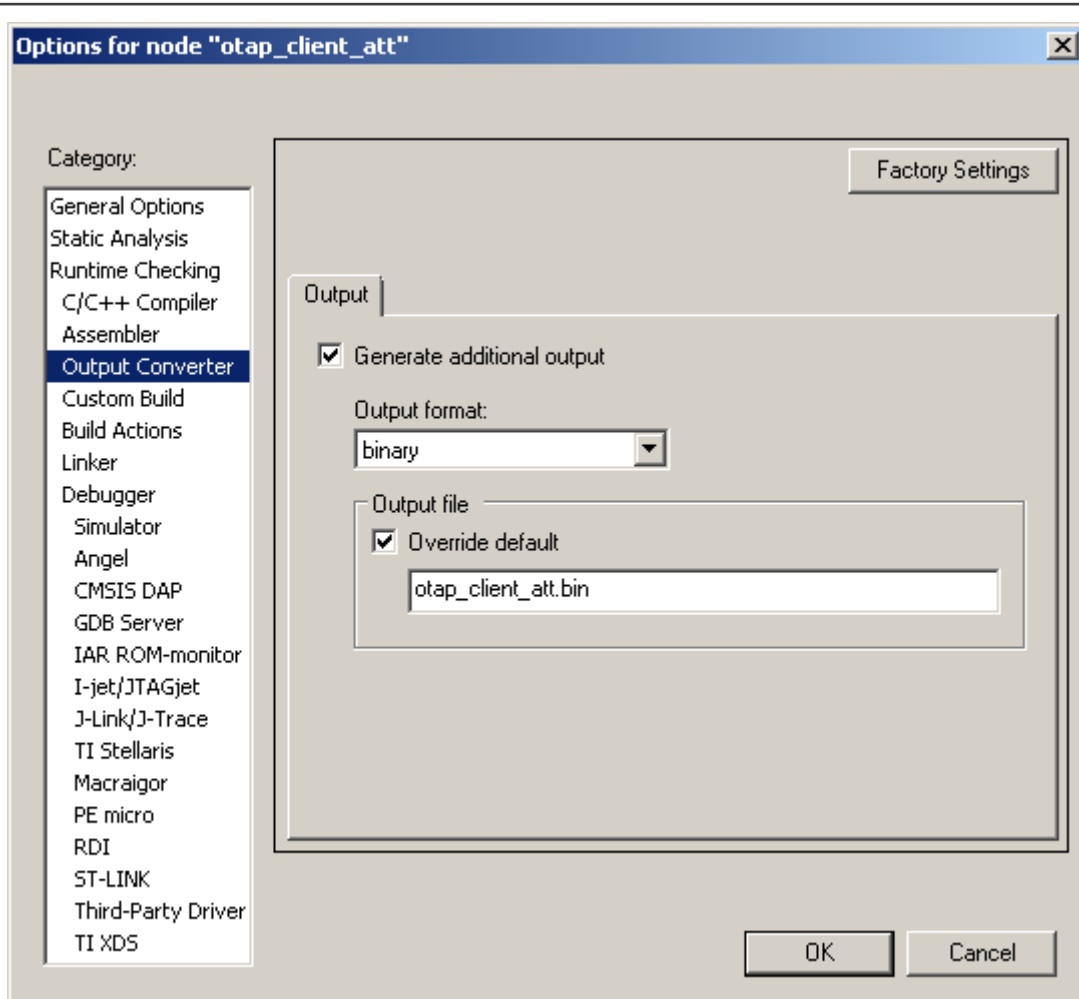


Figure 20. Enabling BIN Output in IAR Embedded Workbench

To enable the creation of a .bin file in MCUXpresso IDE go to the Project properties -> Settings -> Build steps window and press the Edit button for the Post-build steps. A Post-build steps window will show up in which the following command must be added or uncommented (by removing the '#' character at the beginning) if it is already there: `arm-none-eabi-objcopy -v -O binary "${BuildArtifactFileName}" "${BuildArtifactFileName}.bin"`. A screenshot of this window is shown in the figure below.



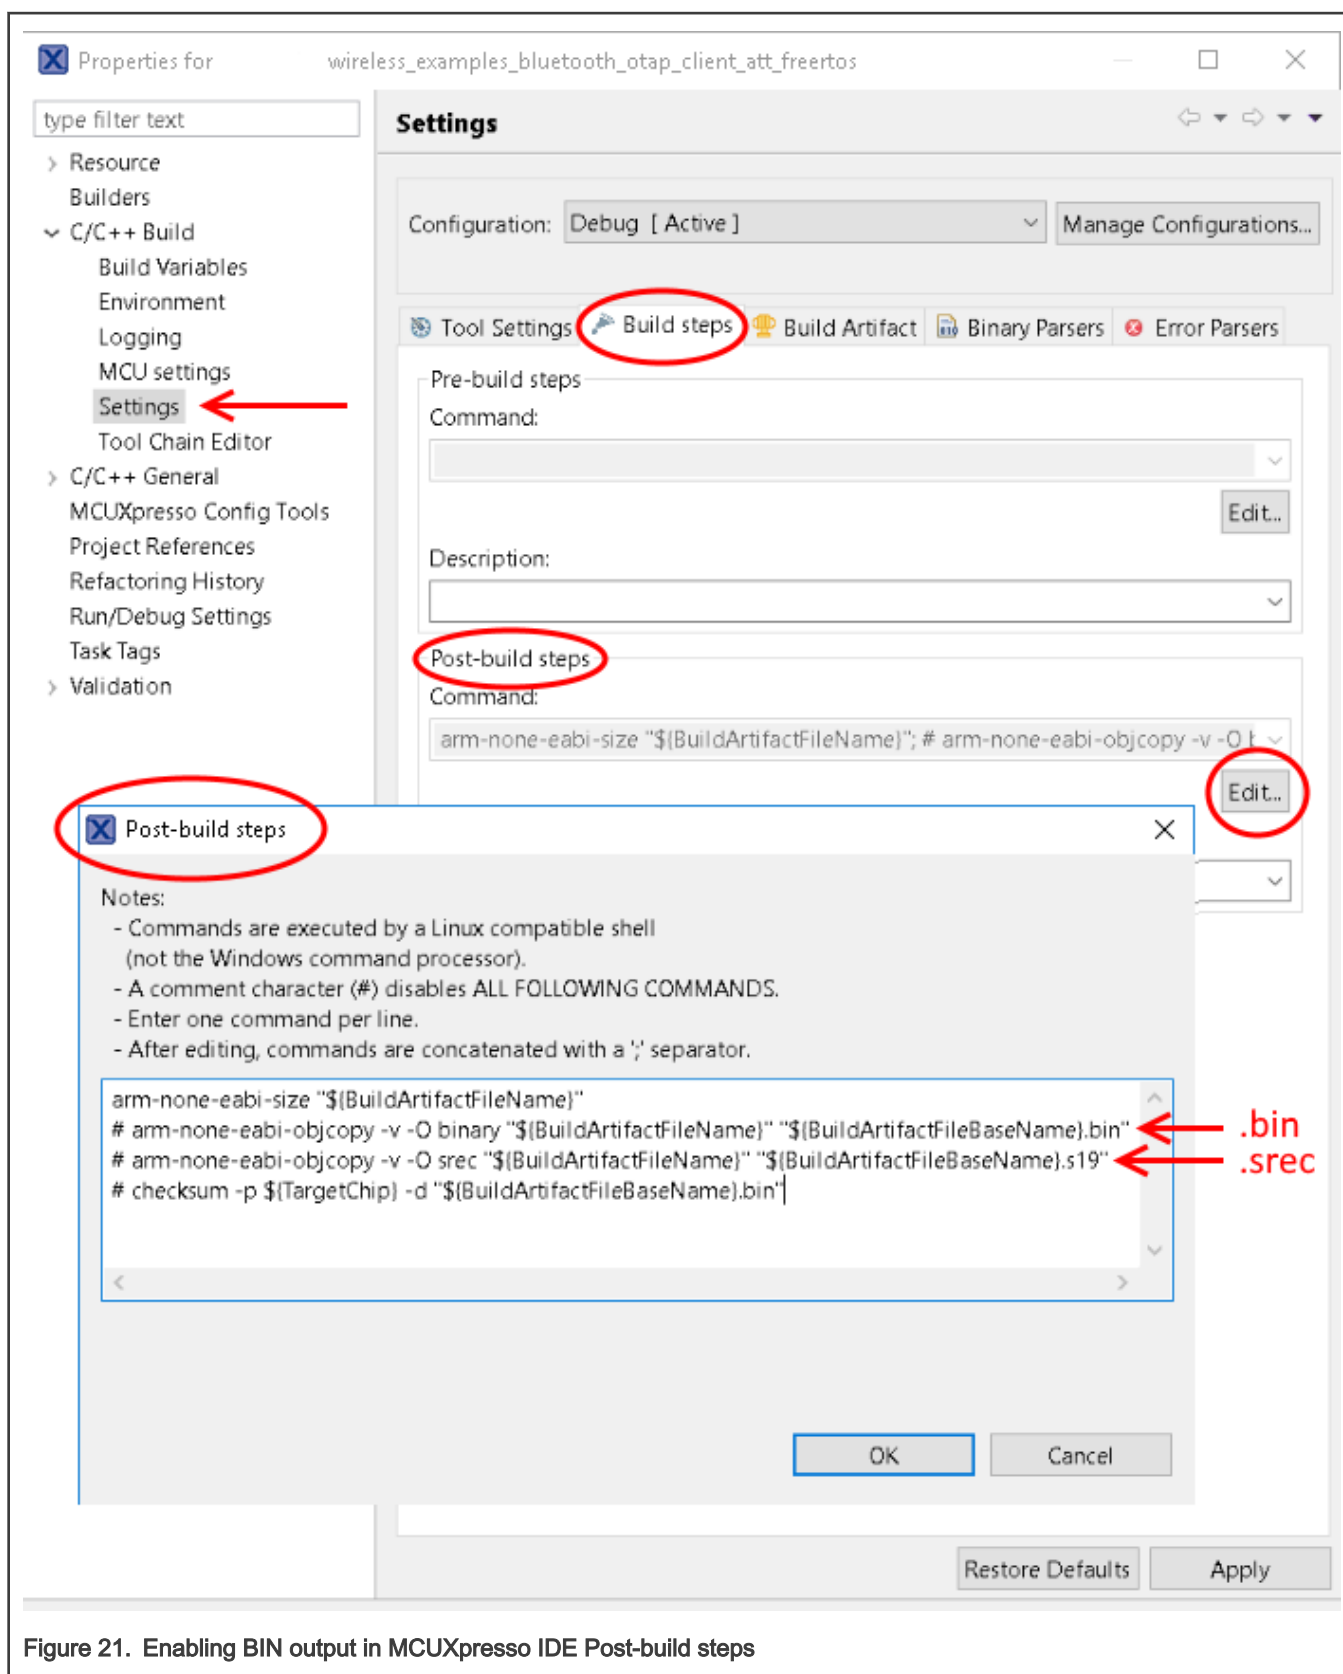

The format of the BIN file is very simple. It contains the executable image in binary format as is, starting from address 0 and up to the highest address. This type of file does not have any explicit address information.

To build an OTAP Image File from a BIN file follow the procedure:

- Generate the BIN file by correctly configuring your toolchain to do so
- Create the image file header
  - Set the Image ID field of the header to be unique on the OTAP Server.
  - Leave the Total Image File Size Field blank for the moment.
- Create the Upgrade Image Sub-element
  - Copy the entire contents of the BIN file as is into the *Value* field of the sub-element.
  - Fill in the *Length* field of the sub-element with the length of the written *Value* field.
- Create the Sector Bitmap Sub-element
  - A default working setting would be all bytes 0xFF for the *Value* field of this sub-element
- Create the Image File CRC Sub-element
  - Compute the total image file size as the length of the header + the length of all 3 sub-elements and fill in the appropriate field in the header with this value
  - Compute and write the *Value* field of this sub-element using the header and all sub-elements except this one
  - The *OTA\_CrcCompute()* function in the *OtaSupport.c* file can be used to incrementally compute the CRC

If the Image ID is not available when the image file is created then the CRC cannot be computed. It can be computed later after the Image ID is established and written in the appropriate field in the header.

## 11.7 Bluetooth Low Energy OTAP application integration

The Bluetooth Low Energy OTAP demo applications are standalone applications which only run the OTAP Server and the OTAP Client. In practice however the OTAP Server and OTAP Client are used alongside with other functionalities. The OTAP functionality is used as a tool alongside the main application on a device.


This section contains some guidelines on how to integrate OTAP functionality into other Bluetooth Low Energy applications.

### 11.7.1 OTAP server

Before any OTAP transactions can be done the application which acts as an OTAP Server must connect to a peer device and perform ATT service and characteristic discovery. Once the handles of the OTAP Service, OTAP Control Point and OTAP Data characteristics and their descriptors are found then OTAP communication can begin.

A good starting point for OTAP transactions for both the OTAP Server and The OTAP client is the moment the Server writes the OTAP Control Point CCCD to receive ATT Indications from the OTAP Client. At that point the Server can send a New Image Notification to the Client if it finds out what kind of device the client is through other means than the OTAP server. How this can be done is entirely application-specific. If the OTAP Server does not know exactly what kind of device is the OTAP Client it can wait for the Client to send a New Image Info Request. Again, the best behavior depends on application requirements.

Once OTAP communication begins then the OTAP Server just has to wait for commands from the OTAP Client and answer them. This behavior is almost completely stateless. An example state diagram for the OTAP Server application is shown below.

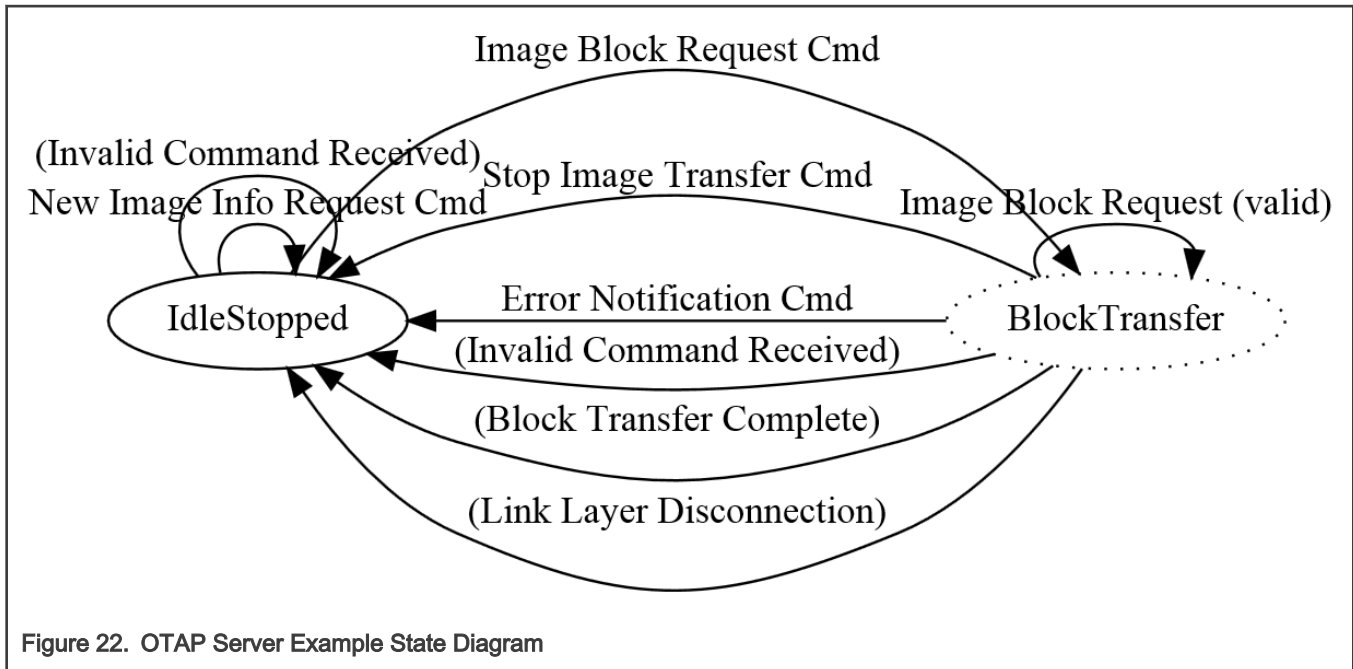

The OTAP Server waits in an idle state until a valid Image Block Request command is received and then moves to a pseudo-state and starts sending the requested block. The transfer can be interrupted by some commands (Error Notification, Stop Image Transfer, and so on) or other events (disconnection, user interruption, and so on).

The *otap\_interface.h* file contains infrastructure for sending and receiving OTAP Commands and parsing OTAP image files. Packed structure types are defined for all OTAP commands and type enumerations are defined for command parameter values and some configuration values like the data payloads for the different transfer methods.

To receive ATT Indications and ATT Write Confirmations from the OTAP Client the OTAP Server application registers a set of callbacks in the stack. This is done in the *BleApp\_Config()* function.

```

App_RegisterGattClientProcedureCallback (BleApp_GattClientCallback);
App_RegisterGattClientIndicationCallback (BleApp_GattIndicationCallback);
  
```

This *BleApp\_GattIndicationCallback()* function is called when any attribute is indicated so the handle of the indicated attribute must be checked against a list of expected handles. In our case we are looking for the OTAP Control Point handle which was obtained during the discovery procedure.

The *BleApp\_GattIndicationCallback()* function from the demo calls an application-specific function called *BleApp\_AttributeIndicated()* in which the OTAP Commands are handled.

```

static void BleApp_AttributeIndicated
(
    deviceId_t      deviceId,
    uint16_t        handle,
    uint8_t*        pValue,
    uint16_t        length
)
{
    if (handle == mPeerInformation.customInfo.otapServerConfig.hControlPoint)
    {
        /* Handle OTAP Commands here */
        otapCommand_t* pOtaCmd = (otapCommand_t*)pValue;

        App_HandleOtapCmd (pOtaCmd->cmdId,
                           (uint8_t*) (&(pOtaCmd->cmd)),
                           length);
    }
}
  
```

```

    }
    elseif (handle == otherHandle)
    {
        /* Handle other attribute indications here */
        /* ... Missing code here ... */
    }
    else
    {
        /*! A GATT Client is trying to GATT Indicate an unknown attribute value.
         * This should not happen. Disconnect the link. */
        Gap_Disconnect (deviceId);
    }
}

```

The *App\_HandleOtapCmd()* function is the one which deals with the received command, sending responses if necessary or starting an image block transfer.

To send OTAP Commands to the OTAP Client the application running the OTAP Server calls the *OtapServer\_SendCommandToOtapClient()* function which performs an ATT Write operation on the OTAP Control Point attribute.

```

static void OtapServer_SendCommandToOtapClient (deviceId_t otapClientDevId,
                                                void*      pCommand,
                                                uint16_t    cmdLength)
{
    /* GATT Characteristic to be written - OTAP Client Control Point */
    gattCharacteristic_t otapCtrlPointChar;
    bleResult_t bleResult;

    /* Only the value handle element of this structure is relevant for this operation. */
    otapCtrlPointChar.value.handle =
        mPeerInformation.customInfo.otapServerConfig.hControlPoint;

    bleResult = GattClient_SimpleCharacteristicWrite (mPeerInformation.deviceId,
                                                    &otapCtrlPointChar,
                                                    cmdLength,
                                                    pCommand);

    if (gBleSuccess_c == bleResult)
    {
        otapServerData.lastCmdSentToOtapClient =
            (otapCmdId_t) (((otapCommand_t*)pCommand)->cmdId);
    }
    else
    {
        /*! A Bluetooth Low Energy error has occurred - Disconnect */
        Gap_Disconnect (otapClientDevId);
    }
}

```

The ATT Confirmation for the ATT Write is received in the *BleApp\_GattClientCallback()* set up earlier which receives a GATT procedure success message for a *gGattProcWriteCharacteristicValue\_c* procedure type.

```

static void BleApp_GattClientCallback (deviceId_t      serverDeviceId,
                                       gattProcedureType_t procedureType,
                                       gattProcedureResult_t
procedureResult,
                                       bleResult_t      error)
{
    if (procedureResult == gGattProcError_c)
    {

```

```

    attErrorCode_t attError = (attErrorCode_t) (error & 0xFF);
    if (attError == gAttErrCodeInsufficientEncryption_c ||
        attError == gAttErrCodeInsufficientAuthorization_c ||
        attError == gAttErrCodeInsufficientAuthentication_c)
    {
        /* Start Pairing Procedure */
        Gap_Pair(serverDeviceId, &gPairingParams);
    }

    BleApp_StateMachineHandler(serverDeviceId, mAppEvt_GattProcError_c);
}

else if (procedureResult == gGattProcSuccess_c)
{
    switch(procedureType)
    {
        /* ... Missing code here... */

        case gGattProcWriteCharacteristicValue_c:
            BleApp_HandleValueWriteConfirmations (serverDeviceId);
            break;

        default:
            break;
    }

    BleApp_StateMachineHandler(serverDeviceId, mAppEvt_GattProcComplete_c);
}
}

```

The *BleApp\_HandleValueWriteConfirmations()* function deals with ATT Write Confirmations based on the requirements of the application.

There are 2 possible transfer methods for Image Chunks, the ATT transfer method and the L2CAP transfer method. The OTAP server is prepared to handle both, as requested by the OTAP Client.

To be able to use the L2CAP transfer method the OTAP Server application must register a L2CAP LE PSM and 2 callbacks: a data callback and a control callback. This is done in the *BleApp\_Config()* function.

```

/* Register OTAP L2CAP PSM */
L2ca_RegisterLePsm (gOtap_L2capLePsm_c,
                    gOtapCmdImageChunkCocLength_c); /*!< The negotiated MTU must be higher than
the biggest data chunk that will be sent fragmented */
...
App_RegisterLeCbCallbacks (BleApp_L2capPsmDataCallback, BleApp_L2capPsmControlCallback);

```

The data callback *BleApp\_L2capPsmDataCallback()* is not used by the OTAP Server.

The control callback is used to handle L2CAP LE PSM connection requests from the OTAP Client and other events: PSM disconnections, No peer credits, and so on. The OTAP Client must initiate the L2CAP PSM connection if it wants to use the L2CAP transfer method.

```

static void BleApp_L2capPsmControlCallback(l2capControlMessageType_t messageType,
                                           void* pMessage)
{
    switch (messageType)
    {
        case gL2ca_LePsmConnectRequest_c:
        {

```

```

    l2caLeCbConnectionRequest_t *pConnReq = ( l2caLeCbConnectionRequest_t *)pMessage;

    /* Respond to the peer L2CAP CB Connection request - send a connection response. */
    L2ca_ConnectLePsm (gOtap_L2capLePsm_c,
                      pConnReq-> deviceId,
                      mAppLeCbInitialCredits_c);

    break;
}
case gL2ca_LePsmConnectionComplete_c:
{
    l2caLeCbConnectionComplete_t *pConnComplete = ( l2caLeCbConnectionComplete_t *)pMessage;

    if (pConnComplete->result == gSuccessful_c)
    {
        /* Set the application L2CAP PSM Connection flag to TRUE because there is no
gL2ca_LePsmConnectionComplete_c
        * event on the responder of the PSM connection. */
        otapServerData. l2capPsmConnected = TRUE;
        otapServerData. l2capPsmChannelId = pConnComplete->cId;
    }
    break;
}
case gL2ca_LePsmDisconnectNotification_c:
{
    l2caLeCbDisconnection_t *pCbDisconnect = ( l2caLeCbDisconnection_t *)pMessage;

    /* Call App State Machine */
    BleApp_StateMachineHandler (pCbDisconnect-> deviceId, mAppEvt_CbDisconnected_c);

    otapServerData. l2capPsmConnected = FALSE;
    break;
}
case gL2ca_NoPeerCredits_c:
{
    l2caLeCbNoPeerCredits_t *pCbNoPeerCredits = ( l2caLeCbNoPeerCredits_t *)pMessage;
    L2ca_SendLeCredit (pCbNoPeerCredits-> deviceId,
                      otapServerData. l2capPsmChannelId,
                      mAppLeCbInitialCredits_c);

    break;
}
case gL2ca_LocalCreditsNotification_c:
{
    l2caLeCbLocalCreditsNotification_t *pMsg = ( l2caLeCbLocalCreditsNotification_t
*)pMessage;

    break;
}
default:
    break;
}
}

```

The ATT transfer method is supported by default but the L2CAP transfer method only works if the OTAP Client opens an L2CAP PSM credit oriented channel.

To send data chunks to the OTAP Client the OTAP Server application calls the *OtapServer\_SendCimgChunkToOtapClient()* function which delivers the chunk via the selected transfer method. For the ATT transfer method the chunk is sent via

the *GattClient\_CharacteristicWriteWithoutResponse()* function and for the L2CAP transfer method the chunk is sent via the *L2ca\_SendLeCbData()* function.

```
static void OtapServer_SendCImgChunkToOtapClient (deviceId_t otapClientDevId,
                                                void*          pChunk,
                                                uint16_t      chunkCmdLength)
{
    bleResult_t bleResult = gBleSuccess_c;

    if (otapServerData.transferMethod == gOtapTransferMethodAtt_c)
    {
        /* GATT Characteristic to be written without response - OTAP Client Data */
        gattCharacteristic_t otapDataChar;

        /* Only the value handle element of this structure is relevant for this operation. */
        otapDataChar.value.handle = mPeerInformation.customInfo.otapServerConfig.hData;

        bleResult = GattClient_CharacteristicWriteWithoutResponse
                    (mPeerInformation.deviceId,
                     &otapDataChar,
                     chunkCmdLength,
                     pChunk);
    }
    else if (otapServerData.transferMethod == gOtapTransferMethodL2capCoC_c)
    {
        bleResult = L2ca_SendLeCbData (mPeerInformation.deviceId,
                                       otapServerData.l2capPsmChannelId,
                                       pChunk,
                                       chunkCmdLength);
    }

    if (gBleSuccess_c != bleResult)
    {
        /*! A Bluetooth Low Energy error has occurred - Disconnect */
        Gap_Disconnect (otapClientDevId);
    }
}
```

The OTAP Server demo application relays all commands received from the OTAP Client to a PC through the FSCI type protocol running over a serial interface. It also directly relays all responses from the PC back to the OTAP Client.

Other implementations can bring the image to an external memory through other means of communication and directly respond to the OTAP Client requests.

## 11.7.2 OTAP client

An application running an OTAP Client, before doing any OTAP-related operations, must wait for and OTAP Server to connect and perform service and characteristic discovery. OTAP transactions can begin only after the OTAP Server writes the OTAP Control point CCC Descriptor to receive ATT Notifications. This is the point when bidirectional communication is established between the OTAP Server and Client and it is a good point to start OTAP transactions.

The OTAP Client can advertise the OTAP Service (which is done in the demo application) or the OTAP Server may already know the advertising device has an OTAP Service based on application-specific means. In both situations the OTAP Server must discover the handles of the OTAP Service and its characteristics.

Besides the OTAP Service instantiated in the GATT Database the OTAP Client needs to have some storage capabilities for the downloaded image file and a bootloader which writes the image received over-the-air to the flash memory.

How to put the OTAP Service in the GATT Database is described in [The OTAP Service and Characteristics](#).

The upgrade image storage capabilities in the demo OTAP Client applications are handled by the *OtaSupport* module from the Framework which contains support modules and drivers. The *OtaSupport* module has support for both internal storage (a part of the internal flash memory is reserved for storing the upgrade image) and external storage (a SPI flash memory chip).

The demo applications use external storage by default. The internal storage is viable only if there is enough space in the internal flash for the upgrade image – the flash in this case should be at least twice the size of the largest application. The *OtaSupport* module also needs the *Eeprom* module from the Framework to work correctly.

The *OtaSupport* module also contains the placement of the bootloader flags in a dedicated linker section (BOOT\_FLAGS). These flags must be present in any image to correctly interact with the bootloader.

A bootloader is also provided as a separate application which is available in both source code and executable form. The OTAP Bootloader executable resides in the *ltools\wireless\binaries* folder for each board, and has the following format: *bootloader\_otap\_<BOARD>.bin*.

To use the *OtaSupport* module and the OTAP Bootloader several configuration options must be set up in both the source files and the linker options of the toolchain.

First, the *OtaSupport* and *Eeprom* module files must be included in the project. To configure the type of storage used the *gEepromType\_d* preprocessor definition must be given a value.

To use external storage set the *gEepromType\_d* value to the appropriate type of EEPROM present on the board. The correct value for demo boards is *gEepromDevice\_AT45DB021E\_c* and the correct value for demo boards is *gEepromDevice\_AT45DB041E\_c*.

The valid *gEepromType\_d* options can be found in the *Eeprom.h* file:

```
/* List of the EEPROM devices used on each of the FSL development boards */
#define gEepromDevice_None_c 0
#define gEepromDevice_InternalFlash_c 1
#define gEepromDevice_AT45DB161E_c 2 /* TWR-KW2x */
#define gEepromDevice_AT26DF081A_c 3 /* TWR-MEM */
#define gEepromDevice_AT45DB021E_c 4 /* FRDM-KW40 */
#define gEepromDevice_AT45DB041E_c 5 /* FRDM-KW41, FRDM-KW36 */
#define gEepromDevice_MX25R2035F_c 6 /* QN908x-DK1.2 */
#define gEepromDevice_MX25R2035F_c 7 /* QN908x-DK1.2 */
```

The setting of the EEPROM type is done in the *app\_preinclude.h* file for the demo applications:

```
/* Specifies the type of EEPROM available on the target board */
#define gEepromType_d gEepromDevice_AT45DB041E_c
```

To use internal storage set up the *gUseInternalStorageLink\_d=1* symbol in the linker configuration window (Linker->Config tab in the IAR project properties) and set the *gEepromType\_d* value to *gEepromDevice\_InternalFlash\_c* in the *app\_preinclude.h* file:

```
/* Specifies the type of EEPROM available on the target board */
#define gEepromType_d gEepromDevice_InternalFlash_c
```

The OTAP demo applications for the IAR EW IDE have some settings in the Linker options tab which must be configured to use *OtaSupport* and the OTAP Bootloader.

In the *Project Target Options->Linker->Config* tab, 3 symbols must be correctly defined. To use NVM storage the *gUseNVMLink\_d* symbol must be set to 1. The *gUseInternalStorageLink\_d* symbol must be set to 0 when OTAP external storage is used and to 1 when internal storage is used. To enable the OTAP Bootloader linking the *gUseBootloaderLink\_d* symbol must be set to 1 to offset the application.

An example linker configuration window for IAR is shown below.



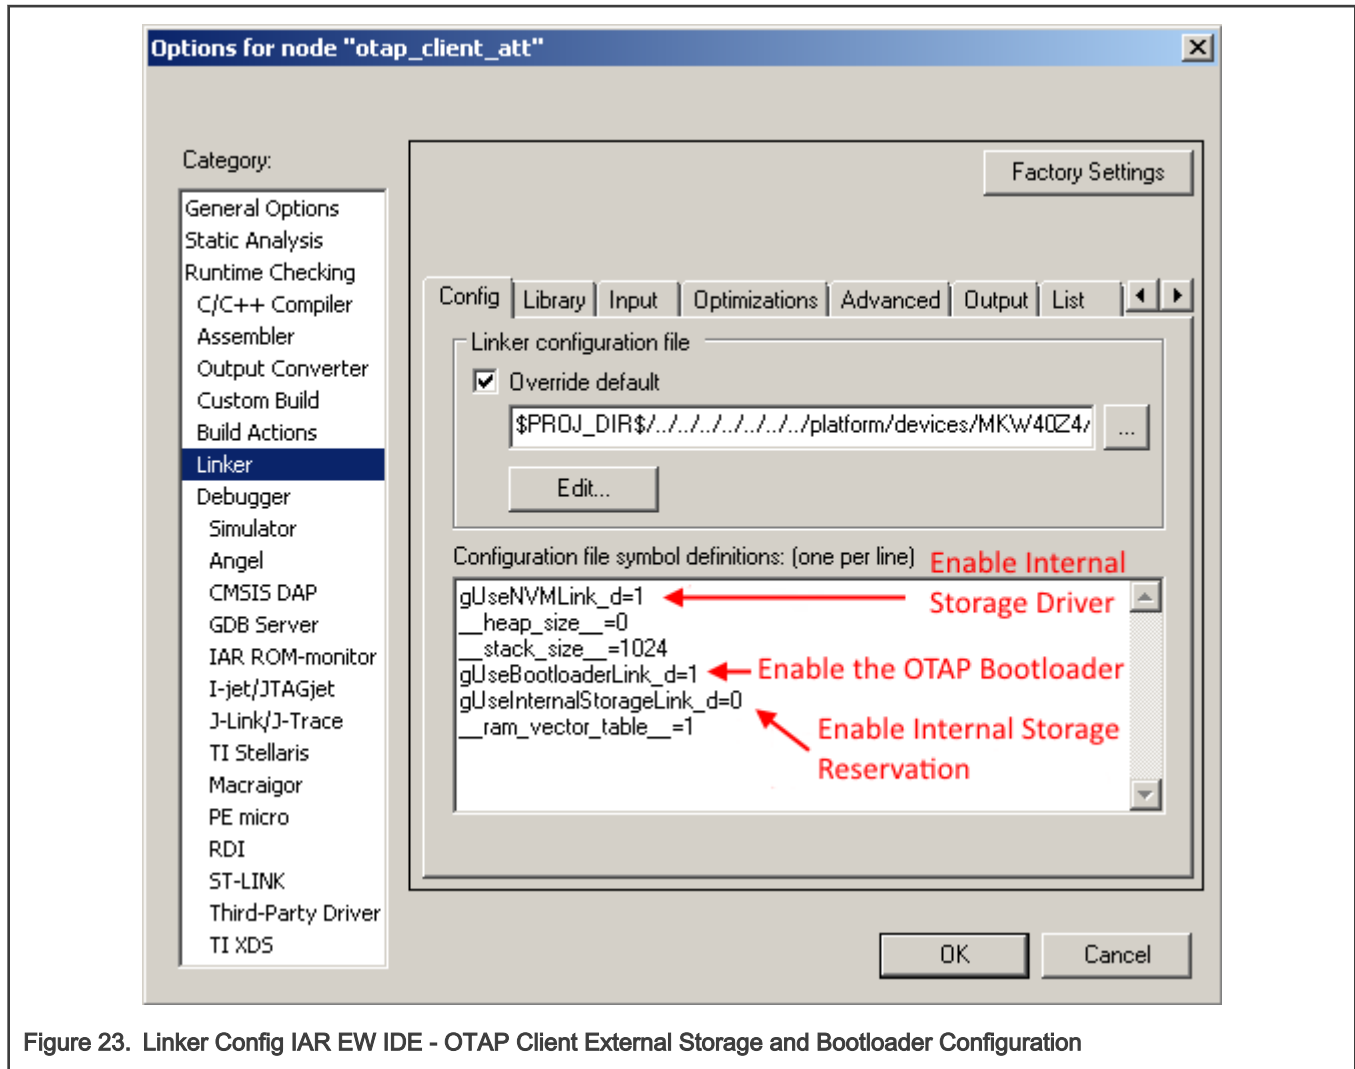


Figure 23. Linker Config IAR EW IDE - OTAP Client External Storage and Bootloader Configuration

The same linker settings for OTAP applications can be configured for Keil MDK in the Options for Target->Linker->Misc controls text box. Edit the text box to add more linker symbols as shown in the figure.

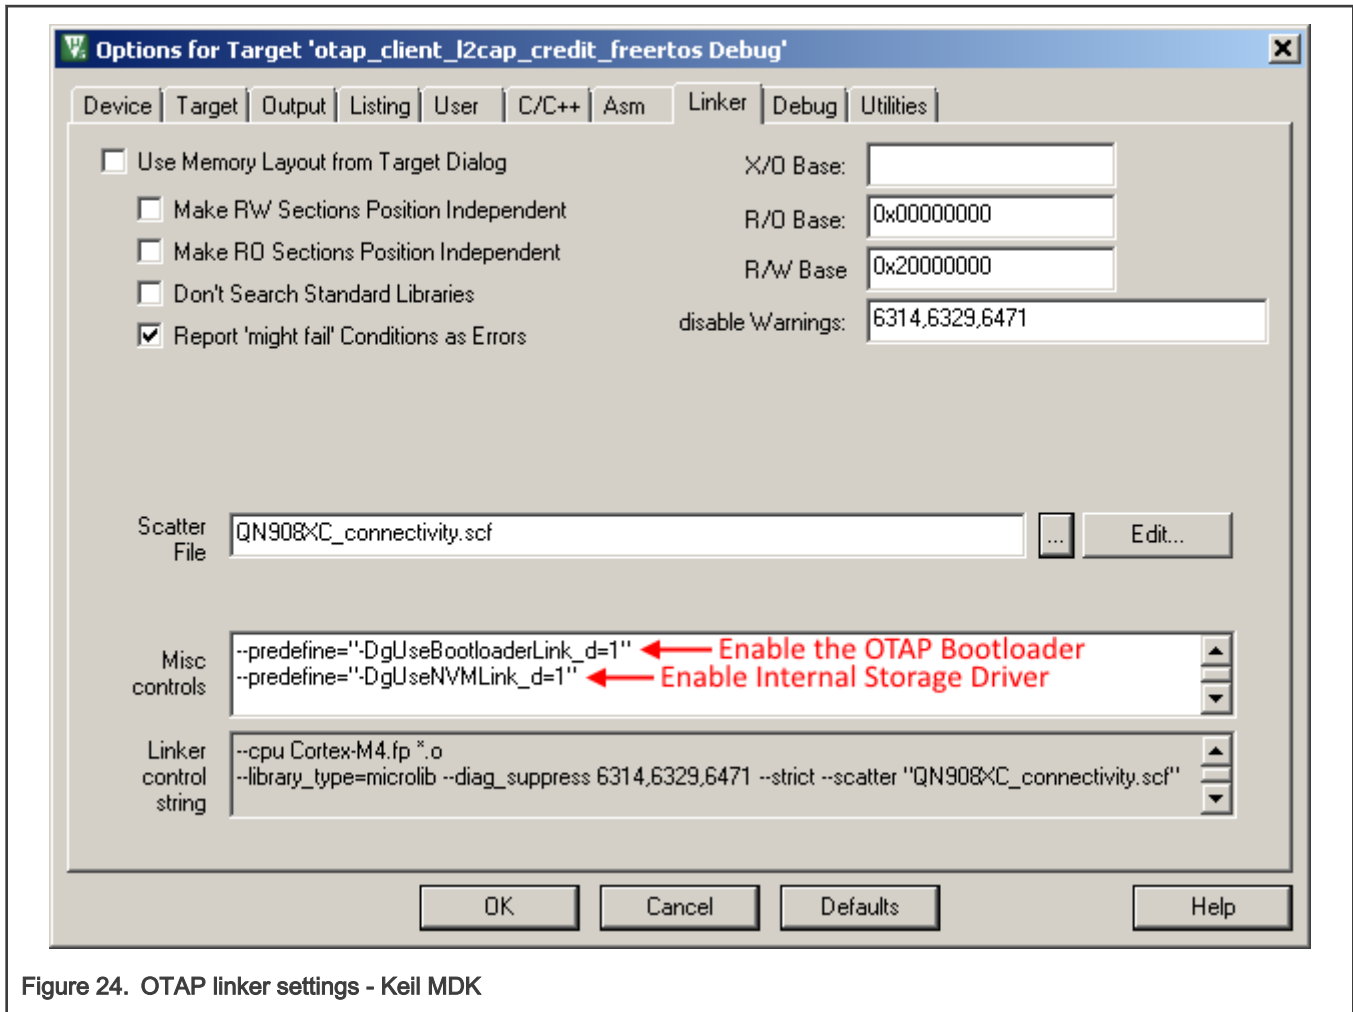


Figure 24. OTAP linker settings - Keil MDK

Once the application starts and bidirectional OTAP communication is established via the OTAP Service then the OTAP Client must determine if the connected OTAP Server has a newer image than the one currently present on the device. This can be done in two ways. Either the OTAP Server knows by some application-specific means that it has a newer image and sends a New Image Notification to the OTAP Client or the OTAP Client sends a New Image Info Request to the OTAP Server and waits for a response. The example application uses the second method. The New Image Info Request contains enough information about the currently running image to allow the OTAP Server to determine if it has a newer image for the requesting device. The New Image Info Response contains enough information for the OTAP Client to determine that the “advertised” image is newer and it wants to download it. The best method is entirely dependent on application requirements.

An example function which checks if an *ImageVersion* field from a New Image Notification or a New Image Info Response corresponds to a newer image (based on the suggested format of this field) is provided in the OTAP Client demo applications. The function is called *OtapClient\_IsRemoteImageNewer()*.

The OTAP Client application is a little more complicated than the OTAP Server application because more state information needs to be handled (current image position, current chunk sequence number, image file parsing information, and so on). An example state diagram for the OTAP Client is shown below. Note that some of the states may not be explicitly present in the demo applications, this diagram is meant to emphasize the steps of the image download process.

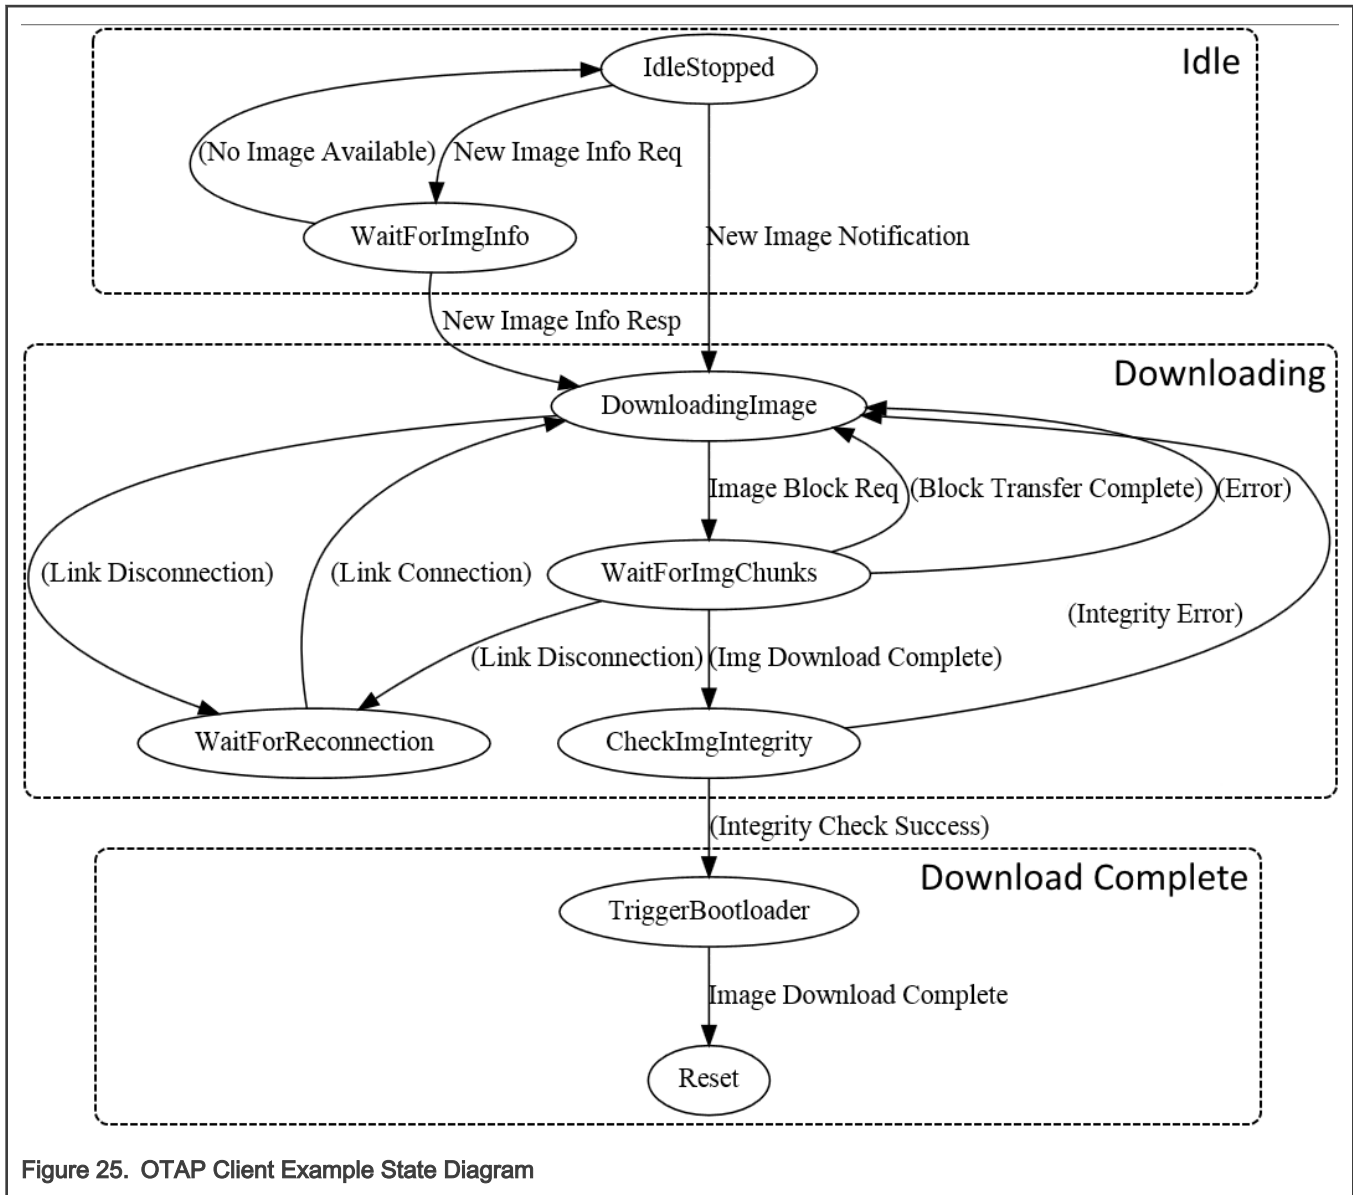


Figure 25. OTAP Client Example State Diagram

After the OTAP Client determines that the peer OTAP Server has a suitable upgrade image available it can start the download process. This is done by sending multiple Image Block Request messages and waiting for the Image Chunks via the selected transfer method.

While receiving the image file blocks the OTAP Client application parses the image file and if any parameter of an image file sub-element is invalid or the image file format is invalid it sends an Error Notification to the OTAP Server and tries to restart the download process from the beginning or a known good position.

When an Image Chunk is received its sequence number is checked and its content is parsed in the context of the image file format. If the sequence number is not as expected then the block transfer is restarted from the last known good position. When all chunks of an Image Block are received the next block is requested if there are more blocks to download. When the last Image Block in an Image File is received then the image integrity is checked (the received CRC from the Image File CRC sub-element is compared to the computed CRC). The computed image integrity initialization and intermediary value must be reset to 0 before starting the download of an image and when restarting the download of an image. If the image integrity check fails then the image download process is restarted from the beginning. If the image integrity check is successful then the Bootloader is triggered, an Image Download Complete message is sent to the OTAP Server and the MCU is restarted. After the restart the bootloader kicks in and writes the new image to the flash memory and gives CPU control to the newly installed application.

If at any time during the download process a Link Layer disconnection occurs then the image download process is restarted from the last known good position when the link is reestablished.

As noted earlier the OTAP Client application needs to handle a lot of state information. In the demo application all this information is held in the *otapClientData* structure of the *otapClientAppData\_t* type. The type is defined and the structure is initialized in the *app.c* file of the application. This structure is defined and initialized differently for the OTAP Client ATT and L2CAP example applications. Mainly the *transferMethod* member of the structure is constant and has different values for the two example applications and the L2CAP application structure has an extra member.

To receive write notifications when the OTAP Server writes the OTAP Control Point attribute and ATT Confirmations when it indicates the OTAP Control Point attribute, the OTAP Client application must register a GATT Server callback and enable write notifications for the OTAP Control Point attribute. This is done in the *BleApp\_Config()* function in the *app.c* file.

```
static uint16_t otapWriteNotifHandles[] = {value_otap_control_point,
                                           value_otap_data};

...
static void BleApp_Config()
{
    ...
    /* Register for callbacks*/
    App_RegisterGattServerCallback (BleApp_GattServerCallback);
    GattServer_RegisterHandlesForWriteNotifications (sizeof(otapWriteNotifHandles) /
    sizeof(otapWriteNotifHandles[0]),
                                           otapWriteNotifHandles);
    ..
}
```

The *BleApp\_GattServerCallback()* function handles all incoming communication from the OTAP Server.

```
static void BleApp_GattServerCallback (deviceId_t deviceId,
                                      gattServerEvent_t* pServerEvent)
{
    switch (pServerEvent->eventType)
    {
        case gEvtCharacteristicCccdWritten_c:
            BleApp_CccdWritten (...);
            break;

        case gEvtAttributeWritten_c:
            BleApp_AttributeWritten (...);
            break;

        case gEvtAttributeWrittenWithoutResponse_c:
            BleApp_AttributeWrittenWithoutResponse (...);
            break;

        case gEvtHandleValueConfirmation_c:
            BleApp_HandleValueConfirmation (...);
            break;

        default:
            break;
    }
}
```

When the OTAP Server Writes a CCCD the *BleApp\_GattServerCallback()* function calls the *BleApp\_CccdWritten()* function which sends a New Image Info Request when the OTAP Control Point CCCD is written it – this is the starting point of OTAP transactions in the demo applications.

When an ATT Write Request is made by the OTAP Server the the *BleApp\_GattServerCallback()* function calls the *BleApp\_AttributeWritten()* function which handles the data as an OTAP command. Only writes to the OTAP Control Point are handled as OTAP commands. For each command received from the OTAP Server there is a separate handler function which performs required OTAP operations. These are:

- *OtapClient\_HandleNewImageNotification()*
- *OtapClient\_HandleNewImageInfoResponse()*
- *OtapClient\_HandleErrorNotification()*

When an ATT Write Command (GATT Write Without Response) is sent by the OTAP Server the *BleApp\_GattServerCallback()* function calls the *BleApp\_AttributeWrittenWithoutResponse()* function which handles Data Chunks if the selected transfer method is ATT and returns an error if any problems are encountered. Data chunks are handled by the *OtapClient\_HandleDataChunk()* function.

```
static void BleApp_AttributeWrittenWithoutResponse (deviceId_t deviceId,
                                                    uint16_t handle,
                                                    uint16_t length,
                                                    uint8_t* pValue)
{
    /* ... Missing code here ... */
    if (handle == value_otap_data)
    {
        /* ... Missing code here ... */
        if (otapClientData.transferMethod == gOtapTransferMethodAtt_c)
        {
            if (((otapCommand_t*)pValue)->cmdId == gOtapCmdIdImageChunk_c)
            {
                OtapClient_HandleDataChunk (deviceId,
                                            length,
                                            pValue);
            }
        }
        /* ... Missing code here ... */
    }
    /* ... Missing code here ... */
}
```

Finally, when an ATT Confirmation is received for a previously sent ATT Indication the *BleApp\_GattServerCallback()* function calls the *BleApp\_HandleValueConfirmation()* function which based on the last sent command to the OTAP Server performs the necessary OTAP operations. This is done using separate confirmation handling functions for each command that is sent to the OTAP Server. These functions are:

- *OtapClient\_HandleNewImageInfoRequestConfirmation()*
- *OtapClient\_HandleImageBlockRequestConfirmation()*
- *OtapClient\_HandleImageTransferCompleteConfirmation()*
- *OtapClient\_HandleErrorNotificationConfirmation()*
- *OtapClient\_HandleStopImageTransferConfirmation()*

Outgoing communication from the OTAP Client to the OTAP Server are done using the *OtapCS\_SendCommandToOtapServer()* function. This function writes the value to be indicated to the OTAP Control Point attribute in the GATT database and then calls the *OtapCS\_SendControlPointIndication()* which checks if indications are enabled for the target device and sends the actual ATT Indication. Both functions are implemented in the *otap\_service.c* file.

```
bleResult_t OtapCS_SendCommandToOtapServer (uint16_t serviceHandle,
                                            void* pCommand,
                                            uint16_t cmdLength)
{
    /* ... Missing code here ... */
}
```

```

uint16_t handle;
bleUuid_t* pUuid = (bleUuid_t*)&uuid_char_otap_control_point;

/* Get handle of OTAP Control Point characteristic */
GattDb_FindCharValueHandleInService (pUuid, &handle, ...);

/* Write characteristic value */
GattDb_WriteAttribute (...);

/* Send Command to the OTAP Server via ATT Indication */
return OtapCS_SendControlPointIndication (handle);
}

static bleResult_t OtapCS_SendControlPointIndication (uint16_t handle)
{
    uint16_t      hCccd;
    bool_t        isIndicationActive;

    /* Get handle of CCCD */
    GattDb_FindCccdHandleForCharValueHandle (handle, &hCccd);
    Gap_CheckIndicationStatus (...);

    return GattServer_SendIndication (...);
}

```

The *otap\_interface.h* file contains all the necessary information for parsing and building OTAP commands (packed command structures type definitions, command parameters enumerations, and so on).

For the two possible image transfer methods (ATT and L2CAP) there are two separate demo applications. To be able to use the L2CAP transfer method the OATP Client application must register a L2CAP LE PSM and 2 callbacks: a data callback and a control callback. This is done in the *BleApp\_Config()* function.

```

/* Register OTAP L2CAP PSM */
L2ca_RegisterLePsm (gOtap_L2capLePsm_c,
gOtapCmdImageChunkCocLength_c); /*!< The negotiated MTU must be higher than the biggest data chunk
that will be sent fragmented */
...
App_RegisterLeCbCallbacks (BleApp_L2capPsmDataCallback, BleApp_L2capPsmControlCallback);

```

The control callback is used to handle L2CAP LE PSM-related events: PSM disconnections, PSM Connection Complete, No peer credits, and so on.

```

static void BleApp_L2capPsmControlCallback(l2capControlMessageType_t messageType,
void* pMessage)
{
    switch (messageType)
    {
        case gL2ca_LePsmConnectRequest_c:
        {
            l2caLeCbConnectionRequest_t *pConnReq =
                (l2caLeCbConnectionRequest_t *)pMessage;

            /* This message is unexpected on the OTAP Client, the OTAP Client sends L2CAP
            * PSM connection requests and expects L2CAP PSM connection responses.
            * Disconnect the peer. */
            Gap_Disconnect (pConnReq->deviceId);

            break;
        }
    }
}

```

```

    case gL2ca_LePsmConnectionComplete_c:
    {
        l2caLeCbConnectionComplete_t *pConnComplete =
            (l2caLeCbConnectionComplete_t *)pMessage;

        /* Call the application PSM connection complete handler. */
        OtapClient_HandlePsmConnectionComplete (pConnComplete);

        break;
    }
    case gL2ca_LePsmDisconnectNotification_c:
    {
        l2caLeCbDisconnection_t *pCbDisconnect = (l2caLeCbDisconnection_t *)pMessage;

        /* Call the application PSM disconnection handler. */
        OtapClient_HandlePsmDisconnection (pCbDisconnect);

        break;
    }
    case gL2ca_NoPeerCredits_c:
    {
        l2caLeCbNoPeerCredits_t *pCbNoPeerCredits =
            (l2caLeCbNoPeerCredits_t *)pMessage;
        L2ca_SendLeCredit (pCbNoPeerCredits->deviceId,
            otapClientData.l2capPsmChannelId,
            mAppLeCbInitialCredits_c);

        break;
    }
    case gL2ca_LocalCreditsNotification_c:
    {
        l2caLeCbLocalCreditsNotification_t *pMsg =
            (l2caLeCbLocalCreditsNotification_t *)pMessage;

        break;
    }
    default:
        break;
}
}

```

The OTAP Client must initiate the L2CAP PSM connection if it wants to use the L2CAP transfer method. This is done using the *L2ca\_ConnectLePsm()* function which is called by the *OtapClient\_ContinueImageDownload()* if the transfer method is L2CAP and the PSM is found to be disconnected.

```

static void OtapClient_ContinueImageDownload (deviceId_t deviceId)
{
    /* ... Missing code here ... */

    /* Check if the L2CAP OTAP PSM is connected and if not try to connect and exit immediately. */
    if ((otapClientData.l2capPsmConnected == FALSE) &&
        (otapClientData.state != mOtapClientStateImageDownloadComplete_c))
    {
        L2ca_ConnectLePsm (gOtap_L2capLePsm_c,
            deviceId,
            mAppLeCbInitialCredits_c);

        return;
    }
    /* ... Missing code here ... */
}

```

The PSM data callback *BleApp\_L2capPsmDataCallback()* is used by the OTAP Client to handle incoming image file parts from the OTAP Server.

```
static void BleApp_L2capPsmDataCallback (deviceId_t deviceId,
    uint8_t* pPacket,
    uint16_t uint16_t lePsm,
    uint16_t packetLength
{
    OtapClient_HandleDataChunk (deviceId,
                                packetLength,
                                pPacket);
}
```

All data chunks regardless of their source (ATT or L2CAP) are handled by the *OtapClient\_HandleDataChunk()* function. This function checks the validity of Image Chunk messages, parses the image file, requests the continuation or restart of the image download and triggers the bootloader when the image download is complete.

```
static void OtapClient_HandleDataChunk (deviceId_t deviceId, uint16_t length, uint8_t* pData);
```

The Image File CRC Value is computed on the fly as the image chunks are received using the *OTA\_CrcCompute()* function from the *OtaSupport* module which is called by the *OtapClient\_HandleDataChunk()* function. The *OTA\_CrcCompute()* function has a parameter for the intermediary CRC value which must be initialized to 0 every time a new image download is started.

The actual write of the received image parts to the storage medium is also done in the *OtapClient\_HandleDataChunk()* function using the *OtaSupport* module. This is achieved using the following functions:

- *OTA\_StartImage()* – called before the start of writing a new image to the storage medium.
- *OTA\_CancelImage()* – called whenever an error occurs and the image download process needs to be stopped/restarted from the beginning.
- *OTA\_PushImageChunk()* – called to write a received image chunk to the storage medium. Note that only the Upgrade Image Sub-element of the image file is actually written to the storage medium.
- *OTA\_CommitImage()* – called to set up what parts of the downloaded image are written to flash and other information for the bootloader. The Value field of the Sector Bitmap Sub-element of the Image File is given as a parameter to this function.
- *OTA\_SetNewImageFlag()* – called to set bootloader flags when a new image and the sector bitmap write to the storage medium are complete. When the MCU is restarted, the bootloader transfers the new image from the storage medium to the program flash.

To continue the image download process after a block is transferred or to restart it after an error has occurred the *OtapClient\_ContinueImageDownload()* function is called. This function is used in multiple situations during the image download process.

To summarize, an outline of the steps required to perform the image download process is shown below:

- Wait for a connection from an OTAP Server
- Wait for the OTAP Server to write the OTAP Control Point CCCD
- Ask or wait for image information from the server
- If a new image is available on the server start the download process using the *OtapClient\_ContinueImageDownload()* function.
  - If the transfer method is L2CAP CoC then initiate a PSM connection to the OTAP Server
- Repeat while image download is not complete
  - Wait for image chunks



- *Call the `OtapClient_HandleDataChunk()` function for all received image chunks regardless of the selected transfer method*
  - Check image file header integrity using the *`OtapClient_IsImageFileHeaderValid()` function.*
  - Write the Upgrade Image Sub-element to the storage medium using *`OtaSupport` module functions.*
  - When the download is complete check image integrity
    - If the integrity check is successful commit the image using the Sector Bitmap Sub-element and trigger the bootloader
    - If integrity check fails restart the image download from the beginning
  - If the download is not complete ask for a new image chunk
- *If any error occurred during the processing of the image chunk restart the download from the last known good position*
- If an image was successfully downloaded and transferred to the storage medium and the bootloader triggered then reset the MCU to start the flashing process of the new image.

## 11.8 OTAP bootloader

The OTAP Bootloader is a program which resides in a reserved area of the flash memory of the device. It starts before the application, checks some dedicated new image flags in non-volatile memory and if they are set it proceeds to replace the current running application image with a new image received over-the-air. The new image can be retrieved from external or internal storage depending on the configuration and available memory resources of the device. After the bootloader copies the new image it resets the MCU.

If the new image flags are not set then the OTAP Bootloader simply gives control of the MCU to the current application immediately.

If the image upgrade progress is interrupted before it is finished (by a power loss for example) the bootloader restarts the copy procedure on the next MCU reset. It uses some flags in non-volatile memory to do this which are set only when the image copy process has been completed successfully.

The OTAP Bootloader project and source code can be found in the `boards\<board>\wireless_examples\framework\bootloader_otap\` folder.

For each target board a different executable image is generated. For the FRDMKW41Z demo boards the `bootloader_otap_frdmkw41z.bin` is the appropriate bootloader binary image file. Usually the `bootload_ota_<board>.bin` file is the bootloader binary image file name for a specific board.

The next figure shows the memory layout of the device with the relevant sections and their size: the bootloader, the application and the reserved areas for the situation where external storage is used for the image received over-the-air.

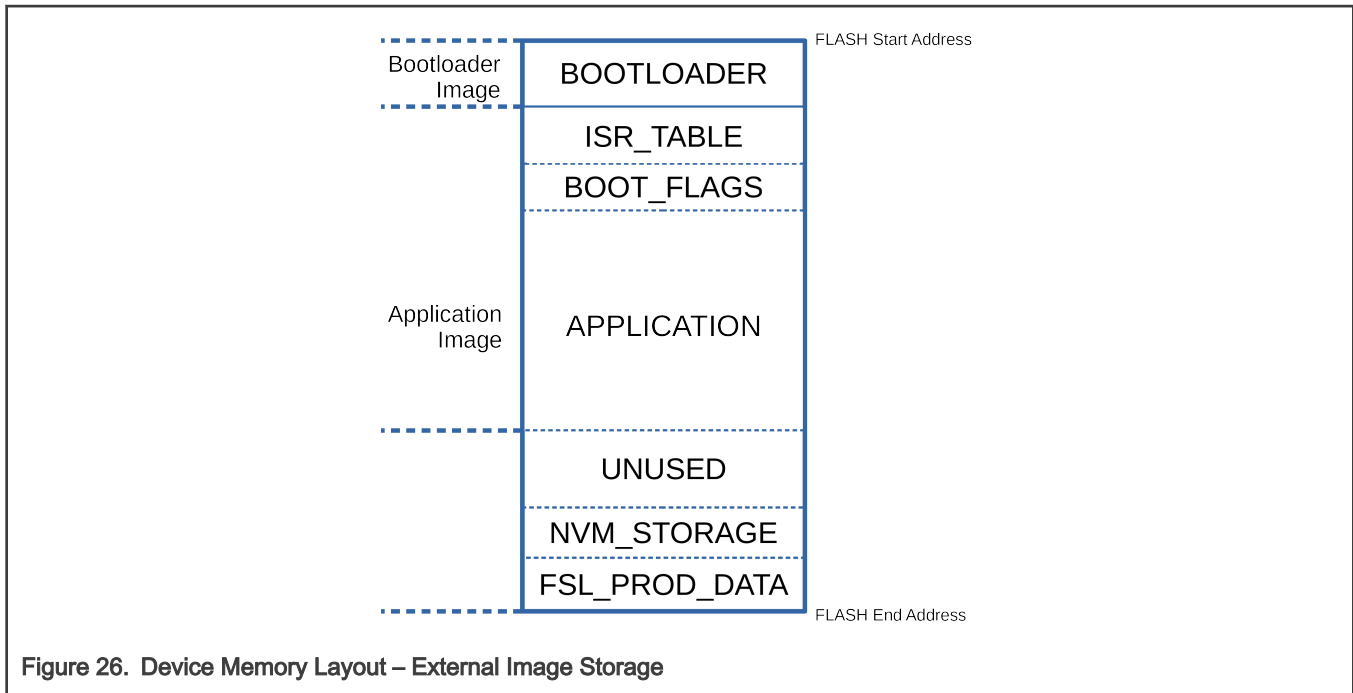


Figure 26. Device Memory Layout – External Image Storage

The OTAP Bootloader image occupies the first part of the flash memory. In the current implementation it has a reserved area of 1/32 of the flash size regardless of the actual size of the image.


The OTAP Bootloader is configured to not overwrite itself so any image sent over the air must **not** contain the Bootloader application in the reserved section. See the OTAP Client section which describes how the Bootloader application can be added to your image.

A typical application image has its memory divided into multiple sections.

- The ISR\_TABLE section contains the MCU interrupt table, it has a fixed reserved size.
- The BOOT\_FLAGS section contains bootloader flags and the target bootloader version. The OTAP Bootloader looks for this section immediately after the ISR\_TABLE section which has a fixed size.
  - New Image Flag – set by the application to tell the OTAP Bootloader that a new image is available. This flag is set by calling the *OTA\_SetNewImageFlag()* function from the *OtaSupport* module.
  - Image Upgrade Complete Flag – set by the OTAP Bootloader when the new image copy process is completed successfully.
  - Bootloader Version – bootloader version expected by the application – set at compile time.
- The APPLICATION section contains actual application code
  - The optional application non-volatile memory (NVM\_STORAGE) area is placed right before the FSL\_PROD\_DATA section if it is present.
  - The optional internal image storage area (OTAP\_INTERNAL\_IMAGE\_STORAGE) is placed before the non-volatile memory area if the non-volatile memory area is present or before the FSL\_PROD\_DATA section if the non-volatile memory area is not present.
- The NVM\_STORAGE section contains data which the application wishes to save between device power cycles.
- The OTAP\_INTERNAL\_IMAGE\_STORAGE section is a reserved space where an image received over-the-air is stored before it is copied over the APPLICATION section when the OTAP Bootloader is triggered.
- The FSL\_PROD\_DATA section contains the location of the upgrade image. The location is a 32bit number which is set at compile time. It is set to 0xFFFFFFFF if external SPI flash storage is used or to a location inside the internal flash memory (which is always smaller than 0xFFFFFFFF) if internal image storage is used. This is necessary for the OTAP Bootloader

to know the source of the upgrade image. This location in the flash memory is written with the correct value for the type of storage used (internal or external) when the *OTA\_StartImage()* function is called.

When internal storage is used for the image received over-the-air the memory layout changes as shown in the following image.

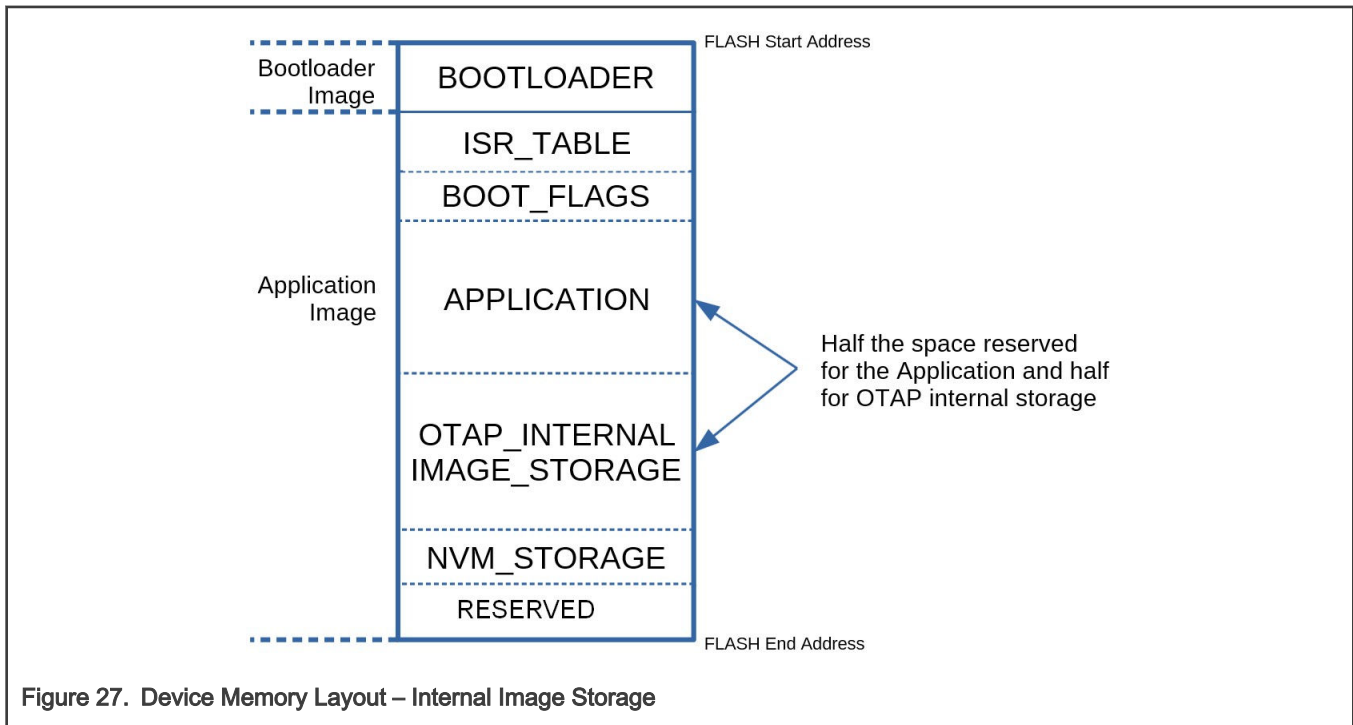

The OTAP Bootloader expects a certain image format in the image storage location which is identical regardless if the storage is internal or external.

The format of the raw image is detailed in the following table.

**Table 26. Bluetooth LE OTAP Image File General Format**

| Raw Image Field | Field Length (bytes) | Description   |
|-----------------|----------------------|---|
| Image Size      | 4                    | This is the <i>Image</i> field size. It is set by the <i>OTA_CommitImage()</i> function from the <i>OtaSupport</i> module. Its value is equal to the sum of all image parts written using the <i>OTA_PushImageChunk()</i> function.   |
| Sector Bitmap   | 32                   | This field contains a sector bitmap of the flash memory of the target device which tells the bootloader which sectors to overwrite and which to leave intact. This field is the <i>Value</i> field of the Sector Bitmap Sub-element of the image file sent over-the-air. This field is set by the <i>OTA_CommitImage()</i> function from the <i>OtaSupport</i> module. The format of this field is least significant byte first and least significant bit first for each byte with the least significant bytes and bits |

*Table continues on the next page...*

Table 26. Bluetooth LE OTAP Image File General Format (continued)

|       |          |  |
|-------|----------|--|
|       |          | <p>standing for the lowest memory sections of the flash.</p> <p>The OTAP Bootloader is configured not to overwrite itself regardless of the sector bitmap settings of the flash area it resides in. This setting can be changed in the OTAP Bootloader application.</p>                                      |
| Image | Variable | <p>This field contains the binary application which is written to the APPLICATION section of the flash. This field is the <i>Value</i> field of the Upgrade Image Sub-element of the image file sent over-the-air. This field is gradually set by each call to the <i>OTA_PushImageChunk()</i> function.</p> |

## 11.9 Secured OTAP bootloader

The security features of the FRDM-K32W042 enable it to use secured OTAP. A different bootloader is used in this case. The image that arrives over-the-air is encrypted and signed using a certificate. The bootloader uses repeated calls the KBOOT API located in ROM to authenticate and decrypt the image before performing the update.

The OTAP bootloader project and source code can be found in the  
 \boards\frdmk32w042\wireless\_examples\framework\bootloader\_otap folder.

There are a few small differences between the secured and unsecured OTAP bootloaders. The memory layout for the FRDM-K32W042 differs slightly from the other boards.

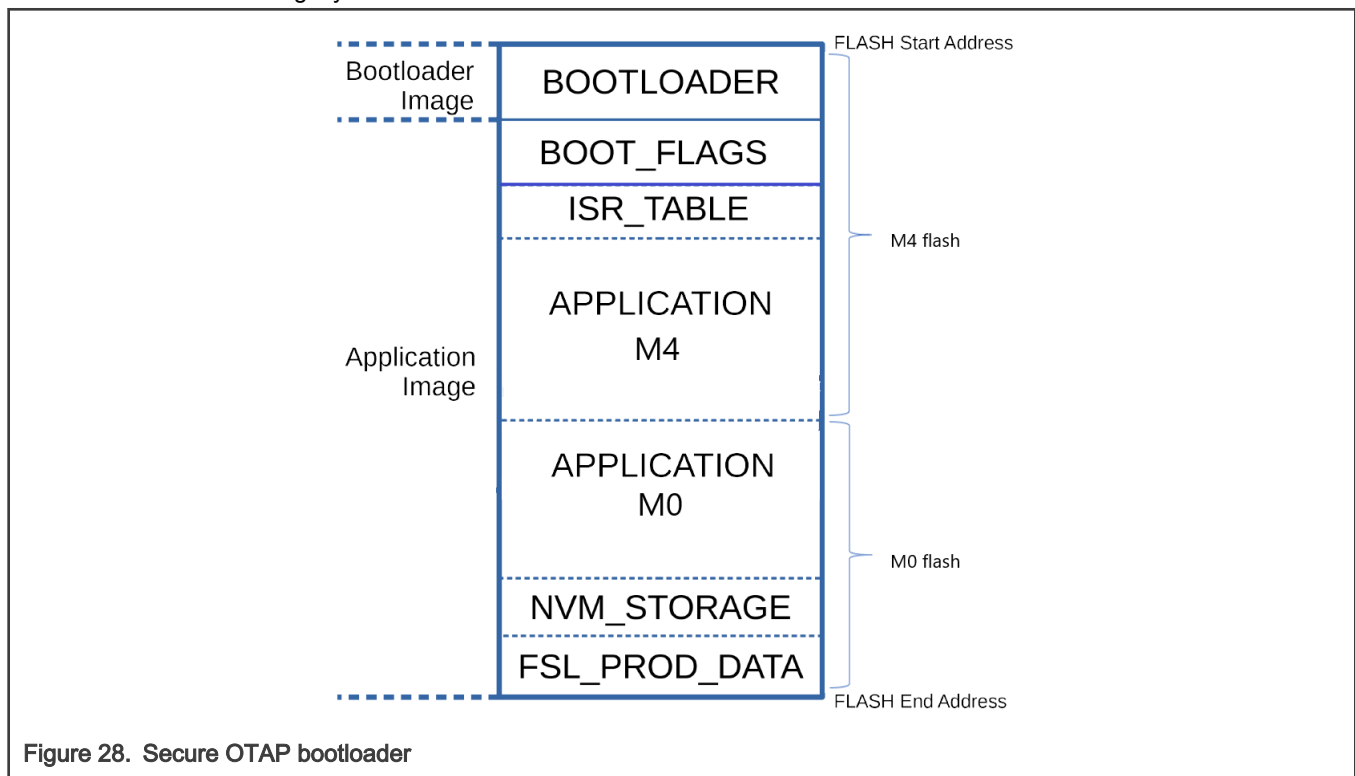


Figure 28. Secure OTAP bootloader

The OTAP Bootloader occupies the first part of the flash memory, just as in the case of unsecured OTAP. However, in this case the boot flags immediately follow and have their own allocated sector. The application residing on the Cortex-M4 core is in M4's flash and the application residing on the Cortex-M0+ core is located in M0's flash. The OTAP process allows the user to update only one of them or both.

The BOOT\_FLAGS section includes additional information for FRDM-K32W042:

- A 32-byte default Secured Boot Key Encryption Key (SBKEK) which is written by the application after the image has been received over-the-air and read by the bootloader before starting the update process. For more details see the BLEDAUG.
- A 12-byte magic word used to identify the BOOT\_FLAGS sector. This magic word is required by Test Tool since the BOOT\_FLAGS sector is trimmed from the \*.bin file before building the secured image and it must be properly identified.

# Chapter 12

## Creating a Bluetooth Low Energy Application When the Bluetooth Low Energy Host Stack is Running on Another Processor

This chapter describes how to create a Bluetooth Low Energy application (host), when the Bluetooth Low Energy Host Stack is running on another processor (blackbox) and offers code examples to explain how to achieve this.

The supported serial interfaces between the two chips(application and the Bluetooth Low Energy Host Stack) are UART, SPI and I2C.

The typical applications employing Bluetooth Low Energy Host Stack blackboxes are host systems such as a PC tool or an embedded system that has an application implementation. This chapter describes an embedded application.

See *FSCI for Bluetooth Low Energy Host Stack Reference Manual* for explicit information on exercising the Bluetooth Low Energy Host Stack functionality through a serial communication interface to a host system.

### 12.1 Serial manager and FSCI configuration

For creating an embedded application that communicates with the Bluetooth Low Energy Host Stack using the serial interface, the following steps must be done:

#### 12.1.1 Serial manager initialization

The function that must be called for Serial Manager initialization is located in *SerialManager.h*.

```
/* Init serial manager */
SerialManager_Init();
```

#### 12.1.2 FSCI configuration and initialization

By default, the FSCI module is disabled. It must be enabled by setting *gFsciIncluded\_c* to 1. Also, *gFsciLenHas2Bytes\_c* must set to 1 because Bluetooth Low Energy Host Stack interface commands and events need serial packets bigger than 255 octets.

For more information on the following configuration parameters refer to the FSCI chapter of the *Connectivity Framework Reference Manual*.

To configure the FSCI module, the following parameters can be set on both the Bluetooth Low Energy Application project and the Bluetooth Low Energy blackbox:

```
/* Mandatory, enables support for FSCI Host functionality */
#define gFsciHostSupport_c 1
/* Mandatory, enables support for FSCI functionality */
#define gFsciIncluded_c 1
/* Mandatory, enables usage of 2 bytes FSCI packet length field */
#define gFsciLenHas2Bytes_c 1
/* Recommended, enables FSCI Ack transmission for each FSCI received packet */
#define gFsciTxAck_c 1
/* Recommended, enables FSCI Ack reception after each FSCI sent packet */
#define gFsciRxAck_c 1
/* Recommended, enables FSCI reception restart if no bytes are received in due time */
#define gFsciRxTimeout_c 1
/* Optional, enables FSCI reception restart by polling, used on bare metal */
#define mFsciRxTimeoutUsePolling_c 1
```

```
/* Optional, enables FSCI Rx of Ack by polling, used on bare metal */
#define gFsciRxAckTimeoutUseTmr_c 0
```

To perform the FSCI module initialization, the following code can be used:

```
#define gSerialMgrUseUart_c          1
#define gSerialMgrUseSPI_c          0
#define gSerialMgrUseIIC_c          0

#if gSerialMgrUseUart_c
    #define gAppFSCIHostInterfaceBaud_d    gUARTBaudRate115200_c
    #define gAppFSCIHostInterfaceType_d    gSerialMgrUart_c
    #define gAppFSCIHostInterfaceId_d      1
#elif gSerialMgrUseSPI_c
    #define gAppFSCIHostInterfaceBaud_d    gSPI_BaudRate_1000000_c
    #define gAppFSCIHostInterfaceType_d    gSerialMgrSPIMaster_c
    #define gAppFSCIHostInterfaceId_d      0
#elif gSerialMgrUseIIC_c
    #define gAppFSCIHostInterfaceBaud_d    gIIC_BaudRate_100000_c
    #define gAppFSCIHostInterfaceType_d    gSerialMgrIICMaster_c
    #define gAppFSCIHostInterfaceId_d      1
#endif

/* FSCI serial configuration structure */
static const gFsciSerialConfig_t mFsciSerials[] = {
    /* Baudrate , interface type, channel No, virtual interface */
    {gAppFSCIHostInterfaceBaud_d, gAppFSCIHostInterfaceType_d, gAppFSCIHostInterfaceId_d, 0},
    { APP_SERIAL_INTERFACE_SPEED, APP_SERIAL_INTERFACE_TYPE, APP_SERIAL_INTERFACE_INSTANCE, 1},
};

/* Init FSCI */
FSCI_Init((void*) mFsciSerials);
```

### 12.1.3 FSCI handlers (GAP, GATT and GATTDB) registration

For receiving messages from all the Bluetooth Low Energy Host Stack serial interfacing layers (GAP, GATT and GATTDB), a function handler must be registered in FSCI for each layer:

```
fsciBleRegister(0);
```

## 12.2 Bluetooth Low Energy host stack initialization

The Bluetooth Low Energy Host Stack must be initialized when platform setup is complete and all RTOS tasks have been started. This initialization is done by restarting the blackbox using a FSCI CPU Reset Request command. This is performed automatically by the ***Ble\_Initialize(App\_GenericCallback)*** function.

```
/* Send FSCI CPU reset command to BlackBox */
FSCI_transmitPayload(gFSCI_ReqOpcodeGroup_c, mFsciMsgResetCPUREq_c, NULL, 0, fsciInterface);
```

The completion of the Bluetooth Low Energy Host Stack initialization is signaled by the reception of the *GAP-GenericEventInitializationComplete.Indication* event (over the serial communication interface, in FSCI). The *Bluetooth Low Energy-HostInitialize.Request* command is not required to be sent to the blackbox (the entire initialization is performed by the blackbox, when it resets).

## 12.3 GATT database configuration

The GATT Database always resides on the same processor as the entire Bluetooth Low Energy Host Stack, so the attributes must be added by the host application using the serial communication interface.

To create a GATT Database remotely, *GATTDBDynamic* commands must be used. The GATTDBDynamic API is provided to the user that performs all the required memory allocations and sends the FSCI commands to the blackbox. The result of the operation is returned, including optionally the service, characteristic and cccd handles returned by the blackbox.

Current supported API for adding services is the following:

```
bleResult_t GattDbDynamic_AddGattService (gattServiceHandles_t* pOutServiceHandles);
bleResult_t GattDbDynamic_AddGapService (gapServiceHandles_t* pOutServiceHandles);
bleResult_t GattDbDynamic_AddIpssService (ipssServiceHandles_t* pOutServiceHandles);
bleResult_t GattDbDynamic_AddHeartRateService (heartRateServiceHandles_t* pOutServiceHandles);
bleResult_t GattDbDynamic_AddBatteryService (batteryServiceHandles_t* pOutServiceHandles);
bleResult_t GattDbDynamic_AddDeviceInformationService (deviceInfoServiceHandles_t*
pOutServiceHandles);
```

The service handles are optional.

Also, a generic function is provided, so that the user can add any generic service to the database:

```
bleResult_t GattDbDynamic_AddServiceInDatabase (serviceInfo_t* pServiceInfo);
```

Usually, a Bluetooth Low Energy Application is going to be ported from a single chip solution, where the Bluetooth Low Energy App and the Bluetooth Low Energy stack reside on the same processor and the GATT database is populated statically. The user will need to remove all the attribute handles from any structure and replace them with *gGattDbInvalidHandle\_d* and then populate them after the services are added dynamically to the database with the handles returned by the previous API.

## 12.4 FSCI host layer

The Bluetooth Low Energy GAP, GATT, GATTDB and L2CAP API included in the Bluetooth Low Energy interface is implemented as a FSCI Host Layer that has to be added to the Bluetooth Low Energy Application project when it resides on a separate processor than the Bluetooth Low Energy stack.

This layer is responsible for serializing API to corresponding FSCI commands, sending them to the blackbox, receiving and deserializing FSCI statuses and events, presenting them to the Bluetooth Low Energy Application and arbitrating access from multiple tasks to the serial interface.

All the GAP, GATT, GATTDB and L2CAP API is executed asynchronously, so the user context will block waiting for the response from the blackbox, which may be the status of the request and optionally a FSCI event that includes the out parameters of a synchronous function.

There are also functions without parameters that are not executed synchronously and they will be provided asynchronously through a later FSCI event. It is the responsibility of the FSCI Host layer to keep the application allocated memory between the time of the request and the completion of the event with the actual values of the out parameters and populate them accordingly.

The Bluetooth Low Energy API execution inside the FSCI Host layer will first wait for gaining access to the serial interface through a mutex. Once the access gained, the FSCI request is sent to the serial interface to the blackbox. Then, by default, the serial interface response is received by polling until the whole FSCI packet is received. The other option available is to block the user task to wait for an OS event that will be set by the FSCI module when the status is received. For more information on this, see the Connectivity Framework document on the FSCI module.

The API can have out parameters that are to be received immediately after the status of the request. If so and the status of the request is success, the polling mechanism will continue to receive the whole FSCI packet of the Bluetooth Low Energy event and get the out parameters and fill the values in the application provided memory space. After obtaining the status and optionally the event, the execution of the request is considered completed, the mutex to the serial interface is unlocked and the execution flow is returned to the user calling context.



# Chapter 13

## Revision history

This table summarizes revisions to this document.

**Table 27. Revision history**

| Revision number | Date    | Substantive changes   |
|-----------------|---------|---|
| 0               | 06/2015 | Initial release   |
| 1               | 10/2015 | Added new applications  |
| 2               | 04/2016 | <p>Adapted the text and code extracts in OTAP chapter to match the new Bluetooth Low Energy 4.2 implementation changes.</p> <p>Added section that describes how to create an OTAP image file from a BIN type file.</p> <p>Added more detailed explanations and diagrams to the Bootloader section.</p> <p>Added LE Long Frames section.</p> <p>Updated Low Power section.</p> <p>Updated RTOS section.</p> <p>Added Enhanced Privacy section.</p> <p>Added Dynamic GATT Database section.</p> <p>Updated GAP section with LE Secure Connections references.</p> |
| 3               | 07/2016 | Updated the Application Structure section.  |
| 4               | 09/2016 | Public information  |
| 5               | 12/2017 | Adapted the text to match the QN9080 platform which supports Bluetooth Low Energy 5.0   |
| 6               | 03/2018 | Updated for KW36  |
| 7               | 06/2018 | Updated for KW35  |
| 8               | 04/2019 | Updated for KW37 EAR Release  |
| 9               | 07/2019 | Updated for KW37/38/39  |
| 10              | 12/2019 | Updated for KW37 PRC 2.0  |
| 11              | 02/2020 | Updated for KW37 PRC 3.0  |
| 12              | 04/2020 | Updated for KW37 RFP  |
| 13              | 06/2020 | Updated for KW35 Maintenance Release 4  |
| 14              | 11/2020 | <p>Updated for KW37/38/39 Maintenance Release 2:</p> <ul style="list-style-type: none"> <li>• Added a note in <a href="#">Peripheral Setup</a>.</li> <li>• Added the section <a href="#">Repeated attempts</a></li> </ul>   |

### ***How To Reach Us***

#### **Home Page:**

[nxp.com](http://nxp.com)

#### **Web Support:**

[nxp.com/support](http://nxp.com/support)

Information in this document is provided solely to enable system and software implementers to use NXP products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits based on the information in this document. NXP reserves the right to make changes without further notice to any products herein.

NXP makes no warranty, representation, or guarantee regarding the suitability of its products for any particular purpose, nor does NXP assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters that may be provided in NXP data sheets and/or specifications can and do vary in different applications, and actual performance may vary over time. All operating parameters, including "typicals," must be validated for each customer application by customer's technical experts. NXP does not convey any license under its patent rights nor the rights of others. NXP sells products pursuant to standard terms and conditions of sale, which can be found at the following address: [nxp.com/SalesTermsandConditions](http://nxp.com/SalesTermsandConditions).

While NXP has implemented advanced security features, all products may be subject to unidentified vulnerabilities. Customers are responsible for the design and operation of their applications and products to reduce the effect of these vulnerabilities on customer's applications and products, and NXP accepts no liability for any vulnerability that is discovered. Customers should implement appropriate design and operating safeguards to minimize the risks associated with their applications and products.

NXP, the NXP logo, NXP SECURE CONNECTIONS FOR A SMARTER WORLD, COOLFLUX, EMBRACE, GREENCHIP, HITAG, I2C BUS, ICODE, JCOP, LIFE VIBES, MIFARE, MIFARE CLASSIC, MIFARE DESFire, MIFARE PLUS, MIFARE FLEX, MANTIS, MIFARE ULTRALIGHT, MIFARE4MOBILE, MIGLO, NTAG, ROADLINK, SMARTLX, SMARTMX, STARPLUG, TOPFET, TRENCHMOS, UCODE, Freescale, the Freescale logo, Altivec, CodeWarrior, ColdFire, ColdFire+, the Energy Efficient Solutions logo, Kinetis, Layerscape, MagniV, mobileGT, PEG, PowerQUICC, Processor Expert, QorIQ, QorIQ Qonverge, SafeAssure, the SafeAssure logo, StarCore, Symphony, VortiQa, Vybrid, Airfast, BeeKit, BeeStack, CoreNet, Flexis, MXC, Platform in a Package, QUICC Engine, Tower, TurboLink, EdgeScale, EdgeLock, eIQ, and Immersive3D are trademarks of NXP B.V. All other product or service names are the property of their respective owners. AMBA, Arm, Arm7, Arm7TDMI, Arm9, Arm11, Artisan, big.LITTLE, Cordio, CoreLink, CoreSight, Cortex, DesignStart, DynamIQ, Jazelle, Keil, Mali, Mbed, Mbed Enabled, NEON, POP, RealView, SecurCore, Socrates, Thumb, TrustZone, ULINK, ULINK2, ULINK-ME, ULINK-PLUS, ULINKpro, µVision, Versatile are trademarks or registered trademarks of Arm Limited (or its subsidiaries) in the US and/or elsewhere. The related technology may be protected by any or all of patents, copyrights, designs and trade secrets. All rights reserved. Oracle and Java are registered trademarks of Oracle and/or its affiliates. The Power Architecture and Power.org word marks and the Power and Power.org logos and related marks are trademarks and service marks licensed by Power.org.

© NXP B.V. 2015-2020.

All rights reserved.

For more information, please visit: <http://www.nxp.com>

For sales office addresses, please send an email to: [salesaddresses@nxp.com](mailto:salesaddresses@nxp.com)

Date of release: Nov 2020

Document identifier: BLEADG

