



HydraHarp 400

Picosecond Histogram Accumulating
Real-time Processor

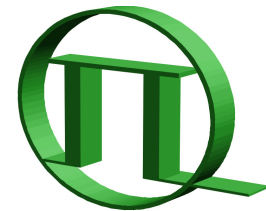

PICOQUANT
Unternehmen für optoelektronische
Forschung und Entwicklung GmbH

HHLib Programming Library for Custom Software Development under Linux

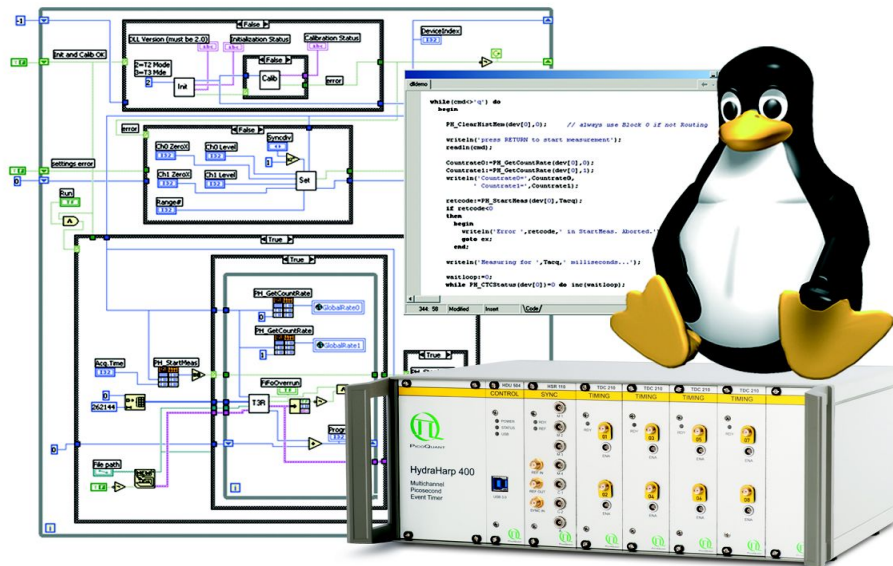

User's Manual

Version 3.0.0.2 – March 2019

Table of Contents

1. Introduction.....	3
2. General Notes.....	4
2.1. Warranty and Legal Terms.....	4
3. Firmware Update.....	5
4. Installation of the HHLib Software Package.....	6
4.1. Requirements.....	6
4.2. Libusb Access Permissions.....	6
4.2.1. Hotplug.....	6
4.2.2. Udev.....	7
4.3. Installing the Library.....	8
4.4. Installing the Demo Programs.....	8
5. The Demo Applications.....	9
5.1. Functional Overview.....	9
5.2. The Demo Applications by Programming Language.....	10
6. Advanced Techniques.....	14
6.1. Using Multiple Devices.....	14
6.2. Efficient Data Transfer.....	14
6.3. Working with Very Low Count Rates.....	15
6.4. Working with Warnings.....	15
6.5. Working in Continuous Mode.....	16
7. Problems, Tips & Tricks.....	17
7.1. PC Performance Issues.....	17
7.2. USB Interface.....	17
7.3. Troubleshooting.....	17
7.4. Version tracking.....	17
7.5. New Linux Versions.....	18
7.6. Software Updates.....	18
7.7. Bug Reports and Support.....	18
8. Appendix.....	19
8.1. Data Types.....	19
8.2. Functions Exported by hhlb.so.....	20
8.2.1. General Functions.....	20
8.2.2. Device Specific Functions.....	20
8.2.3. Functions for Use on Initialized Devices.....	21
8.2.4. Special Functions for TTTR Mode.....	27
8.2.5. Special Functions for Continuous Mode.....	28
8.3. Warnings.....	29

1. Introduction

The HydraHarp 400 is a high-end but easy-to-use TCSPC system with USB interface. Its modular design makes it scalable and very flexible. The timing circuits allow high measurement rates up to 12.5 Mcounts/s per channel and provide a time resolution of 1 ps. The input channels are programmable for a wide range of input signals. They all have programmable Constant Fraction Discriminators (CFD) and a programmable input offset replacing cumbersome cable delays. These specifications qualify the HydraHarp 400 for use with all common single photon detectors such as Single Photon Avalanche Photodiodes (SPAD), Photo Multiplier Tubes (PMT), Micro-Channel Photo Multiplier Tubes (MCP-PMT), Hybrid Photodetectors (HPD) and Superconducting Nanowire Single Photon Detectors (SNSPD). The time resolution is well matched to these detectors and the overall Instrument Response Function (IRF) will typically not be limited by the HydraHarp electronics. Similarly inexpensive and easy-to-use diode lasers such as the PDL 800-B with interchangeable laser heads can be used as an excitation source perfectly matched to the time resolution offered by the detector and the electronics. Overall IRF widths down to 50 ps can be achieved with selected diode lasers and MCP-PMT detectors. Even 30 ps can be reached with femtosecond lasers. This permits lifetime measurements down to a few picoseconds with deconvolution e.g. via the FluoFit multi-exponential Fluorescence Decay Fit Software. For more information on the HydraHarp 400 hardware and software please consult the HydraHarp 400 manual. For details on the method of Time-Correlated Single Photon Counting, please refer to our Technical Note on TCSPC.

The HydraHarp 400 standard software for Windows provides functions such as the setting of measurement parameters, display of results, loading and saving of measurement parameters and histogram curves. Important measurement characteristics such as count rate, count maximum and position, histogram width (FWHM) are displayed continuously. While these features will meet many of the routine demands, advanced users may want to include the HydraHarp's functionality in their own automated measurement systems with their own software. In particular where the measurement must be interlinked or synchronized with other processes or instruments this approach may be of interest. For this purpose a programming library is provided as a Dynamic Link Library (DLL) for Windows. As an alternative, a Linux version of the library is offered, which is subject of this manual. It is 100% API compatible with the Windows library, so that applications can be ported very easily.

The shared library 'hhlb.so' for Linux supports custom programming in all major programming languages, notably C / C++, C#, Python, FreePascal/Lazarus, LabVIEW and MATLAB. This manual describes the installation and use of the HydraHarp programming library `hhlb.so` and explains the associated demo programs. Please read both this manual and the HydraHarp manual before beginning your own software development with the library. The HydraHarp 400 is a sophisticated real-time measurement system. In order to work with the system using the library, sound knowledge in your chosen programming language is required.

2. General Notes

This version of the HydraHarp 400 programming library is suitable for Linux kernel versions 3.0. and higher, running on the x86/x64 platform. It uses Libusb so that no kernel driver is required. Note that the library is provided as a binary object only. There are separate versions for 32 bit and 64 bit.

This manual assumes that you have read the HydraHarp 400 manual and that you have experience with the chosen programming language. References to the HydraHarp manual will be made where necessary.

The library supports histogramming mode and both TTTR modes.

Users who own a license for any older version of the library will receive free updates when they are available. Please check our website for the latest version before you begin programming.

Users upgrading from earlier versions of the HydraHarp 400 library or moving over from the Windows DLL may need to adapt their programs. Some changes are usually necessary to accommodate new measurement modes and improvements. However, the required changes are mostly minimal and will be explained in the manual (especially check section 7 and any notes marked red in section 8.2).

Note that despite of our efforts to keep changes minimal, data structures, program flow and function calls may still change in future versions without advance notice. Users must maintain appropriate version checking in order to avoid incompatibilities. There is a function call that you can use to retrieve the version number (see section 8.2). Note that this call returns only the major two digits of the version (e.g. 3.0). The DLL actually has two further sub-version digits, so that the complete version number has four digits (e.g. 3.0.0.2). They are shown only in the Windows file properties. These sub-digits help to identify intermediate versions that may have been released for minor updates or bug fixes. The interface of releases with identical major version will remain the same.

Please note that the development of Linux is highly dynamic and distributions may vary considerably. This manual can therefore only try and describe a snapshot valid at the time of writing.

2.1. Warranty and Legal Terms

Disclaimer

PicoQuant GmbH disclaims all warranties with regard to the supplied software and documentation including all implied warranties of merchantability and fitness for a particular purpose. In no case shall PicoQuant GmbH be liable for any direct, indirect or consequential damages or any material or immaterial damages whatsoever resulting from loss of data, time or profits; arising from use, inability to use, or performance of this software and associated documentation. Demo code is provided 'as is' without any warranties as to fitness for any purpose.

License and Copyright

With this product you have purchased a license to use the HydraHarp 400 programming library. You have not purchased any other rights to the software itself. The software is protected by copyright and intellectual property laws. You may not distribute the software to third parties or reverse engineer, decompile or disassemble the software or part thereof. You may use and modify demo code to create your own software. Original or modified demo code may be re-distributed, provided that the original disclaimer and copyright notes are not removed from it. Copyright of this manual and online documentation belongs to PicoQuant GmbH. No parts of it may be reproduced, translated or transferred to third parties without written permission of PicoQuant GmbH.

HydraHarp is a registered trademark of PicoQuant GmbH.

Other products and corporate names appearing in this manual may or may not be registered trademarks or subject to copyrights of their respective owners. PicoQuant GmbH claims no rights to any such trademarks. They are used here only for identification or explanation and to the owner's benefit, without intent to infringe.

3. Firmware Update

This version of HHLib requires a firmware update of your HydraHarp hardware if the device was purchased before August 2012 and if it was not yet upgraded. The regular HydraHarp software for Windows can perform this update. When it is started it will check the firmware version and prompt for an upgrade if necessary.

The firmware update has important consequences that you must observe:

1. After the update you will no longer be able to use any HydraHarp software prior to version 2.0.
2. Custom software you may have written for 1.x file import will require minor adaptations.
3. You will no longer be able to use custom software based on HHLib prior to version 2.0.
4. Custom HHLib-based software you have written for 1.x will require minor adaptations.
5. After the update you may need small CFD adjustments for any known good setup.
6. In case of a power failure or computer crash during the update the device may become in-operational.
7. Reverting to old firmware or repairing a disrupted update requires a return to factory and may incur costs.

Also note: When the firmware update has been performed the device must be switched off and on again in order to become operational with the new software.

4. Installation of the HHLib Software Package

4.1. Requirements

Supported hardware is at this time the x86/x64 platform (32 or 64 bits) only. Recommended is a PC with at least a 1.5 GHz dual core CPU and 4 GB of memory. For serious use of the TTTR measurement modes a modern hard disk is required. For full throughput with the USB 3.0 version of the HydraHarp 400 a fast solid state disk is recommended.

The HydraHarp 400 library is designed to run on Linux kernel versions 3.0 or higher. It has been tested with the following Linux distributions:

openSUSE 13.2 (kernel 3.16.7)
 Ubuntu 16.04 (kernel 4.4.0)
 Ubuntu 18.04 (kernel 4.15.0)
 Linux Mint 19.0 (kernel 4.15.0)
 Linux Mint 19.1 (kernel 4.15.0)

Using the HydraHarp 400 library requires libusb (see <http://libusb.sourceforge.net/>). The required version is 0.1.12 or the combination of Libusb 1.0 and Libusb-Compat (see <https://sourceforge.net/projects/libusb/files/>). The latter are typically available in all major Linux distributions.

It is recommended to start your work with the HydraHarp 400 by using the standard interactive HydraHarp data acquisition software under Windows. This should give you a better understanding of the instrument's operation before attempting your own programming efforts. It also ensures that your optical/electrical setup is working.

4.2. Libusb Access Permissions

For device access through libusb, your kernel needs support for the USB filesystem (usbfs) and that filesystem must be mounted. This is done automatically, if `/etc/fstab` contains a line like this:

```
usbfs /proc/bus/usb usbfs defaults 0 0
```

This should routinely be the case if you installed any of the tested distributions. The permissions for the device files used by libusb must be adjusted for user access. Otherwise only root can use the device(s). The device files are located in `/proc/bus/usb/`. Any manual change would not be permanent, however. The permissions will be reset after reboot or re-plugging the device. A much more elegant way of finding the right files and setting the suitable permissions is by means of hotplugging scripts or udev. Which mechanism you can use depends on the Linux distribution you have. Most of the recent distributions use udev.

4.2.1. Hotplug

For automated setting of the device file permissions with hotplug you have to add an entry to the hotplug "usermaps". These files are located in `/etc/hotplug/`. If the entire hotplug directory does not exist, you probably don't have the hotplug package installed. This may be because your distribution is rather old (you may still be able to install hotplug) or it is fairly recent and uses udev instead of hotplug (see section below).

Every line in the hotplug usermap files is for one device, the line starts with a name that will also be used for a handler script. Since there are two HydraHarp 400 models (USB 2.0 and USB 3.0) the HydraHarp usermap file has two lines as shown below. Line wraps are due to limited page width.

```
HydraHarp400    0x0003    0x0e0d    0x0004    0x0000    0x0000
0x00          0x00          0x00          0x00          0x00          0x00
0x00000000
HydraHarp400    0x0003    0x0e0d    0x0009    0x0000    0x0000
0x00          0x00          0x00          0x00          0x00          0x00
```

```
0x00000000
```

The handler script “HydraHarp400” gets started when the device is connected or disconnected. It looks like this:

```
#!/bin/bash

if [ "${ACTION}" = "add" ] && [ -f "${DEVICE}" ]
then
    chown root "${DEVICE}"
    chgrp users "${DEVICE}"
    chmod 666 "${DEVICE}"
fi
```

When the HydraHarp gets switched on or connected, the hotplug system will recognize it and will run the script, which will then change the permissions on the device file associated with the device to 666, which means that everybody can both read and write from/to this device. Note that this may be regarded as a security gap. If you wish tighter access control you can create a dedicated group for HydraHarp users and give access only to that group.

Both a usermap file `HydraHarp400.usermap` and the handler script `HydraHarp400` are provided in the folder `Linux/hotplug` on the distribution media. Copying both of them to `/etc/hotplug/usb/` should be sufficient to set up access control via hotplugging for your HydraHarp.

4.2.2. Udev

For automated setting of the device file permissions with udev you have to add an entry to the set of rules files that are contained in `/etc/udev/rules.d`. Udev processes these files in alphabetical order. The default file is usually called `50-udev.rules`. Don't change this file as it could be overwritten when you upgrade udev. Instead, put your custom rule for the HydraHarp in a separate file. The contents of this file for the handling of the current HydraHarp 400 models should be:

```
ATTR{idVendor}=="0e0d", ATTR{idProduct}=="0004", MODE="666"
ATTR{idVendor}=="0e0d", ATTR{idProduct}=="0009", MODE="666"
```

A suitable rules file `HydraHarp.rules` is provided in the folder `udev` on the distribution media. You can simply copy it to the `/etc/udev/rules.d` folder. The install script in the same distribution media folder does just this. Note that the name of the rules file is important. Each time a device is detected by the udev system, the files are read in alphabetical order, line by line, until a match is found. Note that different distributions may use different rule file names for various categories. For instance, Kubuntu organizes the rules into further files: `20-names.rules`, `40-permissions.rules`, and `60-symlinks.rules`. In Fedora they are not separated by those categories, as you can see by studying `50-udev.rules`. Instead of editing the existing files, it is therefore usually recommended to put all of your modifications in a separate file like `10-udev.rules` or `10-local.rules`. The low number at the beginning of the file name ensures it will be processed before the default file. However, later rules that are more general (applying to a whole class of devices) may later override the desired access rights. This is the case for USB devices handled through Libusb. It is therefore important that you use a rules file for the HydraHarp that gets evaluated after the general case. The default naming `HydraHarp400.rules` most likely ensures this but if you see problems you may want to check.

Note that there are different udev implementations with different command sets. On some distributions you must reboot to activate changes, on others you can reload rule changes and restart udev with these commands:

```
# udevcontrol reload_rules
# udevstart
```

4.3. Installing the Library

The library package is distributed as a gzipped tar file. The shared library as such is provided as a binary file. By default it resides under `/usr/local/lib/hh400` (32 bit) and respectively under `/usr/local/lib64/hh400` for 64-bit platforms. This is not a strict requirement but it is where the demo programs will look for the library files and therefore it is recommended to use this location. You can create the directory `/usr/local/lib/hh400` and copy all files from the directory `library` *from* the tar archive to `/usr/local/lib/hh400` (`hhlb.so`, `hhlb.h`, `hhdefin.h` and `errorcodes.h`). The shell script `install` in the library distribution directory does the directory creation and installation in one step. As root, just issue it at the command prompt from within the `library` directory. After installing, the library is ready to use and can be tested with the demos provided. On some distributions you may need to adjust the library path and/or access permissions. If you want to install the library in a different place and/or if you want to simplify access to the library you can add the chosen path to `/etc/ld.so.conf` and/or to the path list in the environment variable `LD_LIBRARY_PATH`.

Note for SELinux: If upon linking with `hhlb.so` you get an error *“cannot restore segment prot after reloc”* you need to adjust the security settings for `hhlb.so`. As root you need to run:

```
chcon -t texrel_shlib_t /usr/local/lib/hh400/hhlb.so
```

4.4. Installing the Demo Programs

The demos can be installed by simply copying the entire directory `demos` from the tar archive to a disk location of your choice. This need not be under the root account but you need to ensure proper file permissions. While the gcc compiler for the C demos is readily installed in most linux distributions, you will need to obtain and install Mono, Python, Lazarus, Matlab or LabVIEW for Linux separately if you wish to use these programming environments.

5. The Demo Applications

5.1. Functional Overview

Please note that all demo code provided is correct to our best knowledge, however, we must disclaim all warranties as to fitness for a particular purpose of this code. It is provided 'as is' for no more than explanatory purposes and a starting point for your own work.

The demos are kept as simple as possible to maintain focus on the key issues of accessing the library. This is why most of the demos have a minimalistic user interface and / or must be run from the command line (console). For the same reason, the measurement parameters are mostly hard-coded and thereby fixed at compile time. It is therefore necessary to change the source code and re-compile the demos in order to run them in a way that is matched to your individual measurement setup. Running them unmodified may result in use-less data (or none at all) because of inappropriate sync divider, resolution, input level settings, etc.

For the same reason of simplicity, the demos will always only use the first HydraHarp device they find, although the library can support multiple devices. If you have multiple devices that you want to use simultaneously you need to change the code to match your configuration.

There are demos for C/C++, C#, Pascal/Lazarus, Python, LabVIEW and MATLAB. For each of these programming languages / systems there are different demo versions for various measurement modes:

Histogramming Mode Demos

These demos show how to use the standard measurement mode for on-board histogramming. These are the simplest demos and the best starting point for your own experiments. In case of LabVIEW the standard mode demo is already fairly sophisticated and allows interactive input of most parameters.

TTTR Mode Demos

These demos show how to use TTTR mode, i.e. recording individual photon events instead of forming histograms on board. This permits extremely sophisticated data analysis methods, such as single molecule burst detection, the combination of fluorescence lifetime measurement with FCS and picosecond coincidence correlation or even Fluorescence Lifetime Imaging (FLIM).

The HydraHarp 400 actually supports two different Time-Tagging modes, T2 and T3 mode. When referring to both modes together we use the general term TTTR here. The demos by default are set to use T2 mode. You can change this but you need to make sure other relevant settings are adjusted accordingly. For details on the two modes, please refer to your HydraHarp manual and our Technical Note on TTTR. In TTTR mode it is also possible to record external TTL signal transitions as markers in the TTTR data stream (see the HydraHarp manual) which is typically used for imaging applications.

Because TTTR mode requires real-time processing and / or real-time storing of data, the TTTR demos are fairly demanding both in programming skills and computer performance. See the section about TTTR mode in your HydraHarp manual.

Note that you must not call any of the HH_Setxxx routines while a TTTR measurement is running. The result would potentially be loss of events in the TTTR data stream. Changing settings during a measurement makes no sense anyway since it would introduce inconsistency.

Continuous Mode Demos

This measurement mode allows continuous and gapless streaming of short term histograms to the PC. Since it is an advanced real-time technique, beginners are advised better not to use it. For the same reason, demos exist only in C and Pascal (Delphi / Lazarus). For details please see the Advanced Techniques section 6.5.

5.2. The Demo Applications by Programming Language

As outlined above, there are demos for C / C++, Pascal/Lazarus, Python, LabVIEW and MATLAB. For each of these programming languages / systems there are different demo versions for the measurement modes listed in the previous section. They are not 100% identical.

This manual explains the special aspects of using the HydraHarp programming library, it does NOT teach you how to program in the chosen programming language. We strongly recommend that you do not choose a development with the HydraHarp programming library as your first attempt at programming. You will require knowledge on how to call and link shared libraries from your programming language. The ultimate reference for details about how to use the library is in any case the source code of the demos and the header files of HHLib (`hllib.h` and `hhdefin.h`).

Be warned that wrong parameters and / or variables, invalid pointers and buffer sizes, inappropriate calling sequences etc. may crash your application and / or your complete computer. The latter is quite unlikely, nevertheless, make sure to backup your data and / or perform your development work on a dedicated machine that does not contain valuable data. Note that the library is not re-entrant. This means, it cannot be accessed from multiple, concurrent processes or threads at the same time. All calls must be made sequentially in the order shown in the demos.

The C / C++ Demos

These demos are provided in the '`\C`' subfolder. The code is actually plain C to provide the smallest common denominator for C and C++. Consult `hllib.h`, `hhdefin.h` and this manual for reference on the library calls. The library functions must be declared as `extern "C"` when used from C++. This is achieved most elegantly by wrapping the entire include statements for the library headers:

```
extern "C"
{
    #include "hhdefin.h"
    #include "hllib.h"
}
```

To test any of the demos, consult the HydraHarp manual for setting up your HydraHarp 400 and establish a measurement setup that runs correctly and generates useable test data. This is best done with the regular HydraHarp software for Windows. Compare the settings (notably sync divider, binning and CFD levels) with those used in the demo and use the values that work in your setup when building and testing the demos.

The C demos are designed to run in a console (terminal window). They need no command line input parameters. They create their output files in their current working directory (`*.out`). The output files will be ASCII-readable in case of the standard histogramming demos. For this demo, the ASCII files will contain multiple columns of integer numbers representing the counts from the 65,536 histogram channels. You can use any editor or a data visualization program to inspect the ASCII histograms. For the TTTR modes the output is stored in binary format for performance reasons. The binary files must be read by dedicated programs according to the format they were written in. The file read demos provided for the HydraHarp TTTR data files can be used as a starting point. They cannot be used directly on the demo output because they expect a file header the demos do not generate. This is intentional in order to keep the HHLib demos focused on the key issues of using the library.

By default, the TTTR mode demo is configured for T2 mode. You need to change the mode input variable going into `HH_Initialize` to a value of 3 if you want T3 mode. Note that you probably also need to adjust the sync divider and the resolution in this case.

The C# Demos

The C# demos are provided in the '`Csharp`' subfolder. They have been tested with MS Visual Studio as well as with Mono under Windows and Linux. The only difference is the library name, which in principle could also be unified, e.g. by means of a symbolic link.

Calling a native DLL (unmanaged code) from C# requires the `DllImport` attribute and correct type specification of the parameters. Not all types are easily portable. Especially C strings require special handling.

With the C# demos you also need to check whether the hardcoded settings are suitable for your actual instrument setup. The demos are designed to run in a console (terminal window). They need no command line input parameters. They create their output files in their current working directory (*.out). The output files will be ASCII in case of the histogramming mode demos. In TTTR mode the output is stored in binary format for performance reasons. The ASCII files will contain single or multiple columns of integer numbers representing the counts from the 4096 histogram channels. You can use any editor or a data visualization program to inspect the ASCII histograms. The binary files must be read by dedicated programs according to the format they were written in.

The Python Demos

The Python demos are provided in the 'Python' subfolder. They have been developed with Python 3 and only this is officially supported. Python 2 works at the time of this writing but will not be actively maintained.

With the Python demos you also need to check whether the hardcoded settings are suitable for your actual instrument setup. The demos are designed to run in a console (terminal window). They need no command line input parameters. They create their output files in their current working directory (*.out). The output files will be ASCII in case of the histogramming mode demos. For TTTR mode the output is stored in binary format for performance reasons. The ASCII files will contain single or multiple columns of integer numbers representing the counts from the 4096 histogram channels. You can use any editor or a data visualization program to inspect the ASCII histograms. The binary files must be read by dedicated programs according to the format they were written in.

The Pascal / Lazarus Demos

Pascal/Lazarus users refer to the 'Pascal' directory. The source code for Delphi (under Windows) and Lazarus (Windows or Linux) is the same, differences regarding the library name are handled automatically. The main code for the Lazarus demo is in the Delphi project file for that demo (*.DPR). Lazarus users use the *.LPI files that refer to the corresponding *.DPR file.

In order to make the exports of `hllib.so` known to your application you have to declare each function in your Pascal code as 'external'. This is already prepared in the demo source code in `hllib.pas`. Please check the function parameters of your code against `hllib.h` in the demo directory whenever you update to a new library version.

Lazarus is somewhat picky as to what it accepts as a library name. It expects a name starting with `lib`. It also does not easily allow linking with a library that is not in the default path. In order to solve both problems, the install script for HHLib creates a link making it also appear under the alias `/usr/lib/libhh400.so` or `/usr/lib64/libhh400.so` respectively. This is the path the Lazarus demos use for accessing `hllib.so`. Another complication arising with Lazarus is that it does not always by default know how to link in the C runtime library needed by `hllib.so`. This is why you must explicitly enter it in the Compiler Options. Under Linking in the field Options you should enter something like `/lib/libgcc_s.so.1` (or `/lib64/libgcc_s.so.1` for x64) and tick the box "Pass options to linker...". The location of `libgcc_s.so.1` may be different in some recent Linux distribution so you may need to search for `libgcc_s.so.1` and set the path accordingly.

The Lazarus demos are also designed to run in a console (terminal window). They need no command line input parameters. They create output files in their current working directory. The output files will be ASCII in case of the histogramming demo. In TTTR mode the output is stored in binary format for performance reasons. You can use any data visualization program to inspect the ASCII histograms. The binary files must be read by dedicated programs according to the format they were written in. The file read demos provided for the HydraHarp TTTR data files can be used as a starting point. They cannot be used directly on the demo output because they expect a file header the demos do not generate. This is intentional in order to keep the HHLib demos focused on the key issues of using the library.

By default, the TTTR mode demo is configured for T2 mode. This will not allow you to work with high sync rates. You need to change the mode input variable going into `HH_Initialize` to a value of 3 if you want T3 mode. At the same time you need to modify your program for an appropriate sync divider and a suitable range (resolution).

The LabVIEW Demos

The LabVIEW demo VIs are provided in the `src` sub-folder inside the `LabVIEW20xx` folders. They can be run either with 32 bit or 64 bit LabVIEW. The correct library path is selected automatically, provided that the library is installed in the designated folders (i.e. `usr/local/lib` or `usr/local/lib64` respectively). The original code was created with LabVIEW 2017, for backward compatibility the source code was also converted to LabVIEW 2010.

The first demo (`1_SimpleDemo_HHHisto.vi`) is a very simple one demonstrating the basic usage and calling sequence of the provided SubVIs encapsulating the HHLib functionality, which are assembled inside the LabVIEW library `hllib_x86_x64_UIThread.llb` (in the folder `_lib/PQ/HydraHarp`). The demo starts by calling some of these library functions to setup the hardware in a defined state and continues with a measurement in histogramming mode by calling the corresponding library functions inside a while-loop. Histograms and count rates for all available hardware channels are displayed on the Front Panel in a Waveform Graph (you might have to select *AutoScale* for axes) and numeric indicators, respectively. The measurement is stopped if either the acquisition time has expired, if an error occurs (which is reported in the *error out* cluster), if an overflow occurs or if the user hits the *STOP* button.

The second demo for histogramming mode (`2_AdvancedDemo_HHHisto.vi`) is a more sophisticated one allowing the user to control all hardware settings “on the fly”, i.e. to change settings like acquisition time (*Acq. ms*), resolution (*Resol. ms*), offset (*Offset ns* in *Histogram* frame), number of histogram bins (*Num Bins*), etc. before, after or while running a measurement. In contrast to the first demo settings for each available channel (including the Sync channel) can be changed individually (*Settings* button) and consecutive measurements can be carried out without leaving the program (*Run* button; changes to *Stop* after pressing). Additionally, measurements can be done either as “single shot” or in a continuous manner (*Conti.* Checkbox). Various information are provided on the Front Panel like histograms and count rates for each available (and enabled) channel as Waveform Graphs (you might have to select *AutoScale* for axes), Sync rate, readout rate, total counts and status information in the status bar, etc. In case an error occurs a popup window informs the user about that error and the program is stopped.

The program structure of this demo is based upon the National Instruments recommendation for queued message and event handlers for single thread applications. Some comments inside the source code should help the user to get an overview of the program and to facilitate the development of customized extensions.

The third demo (`3_AdvancedDemo_HHT3.vi`) is the most advanced one and demonstrates the usage of T3 mode. The Front Panel resembles the second demo but in addition to the histogram display a second Waveform Graph (you might have to select *AutoScale* for axes) also displays a time chart of the incoming photons for each available (and enabled) channel with a time resolution depending on the Sync rate and the entry in the *Resol. ms* control inside the *Time Trace* frame (which can be set in multiples of two). In contrast to the second demo there is no control to set an overflow level or the number of histogram bins, the latter is fixed to 32.768 in T3 mode. Also in addition to the acquisition time (called *T3Acq. ms* in this demo; set to 360.000.000 ms = 100 h by default) a second time (*Int.Time ms* in *Histogram* frame) can be set which controls the integration time for accumulating a histogram.

The program structure of this demo extends that of the second demo by extensive use of LabVIEW type-definitions and two additional threads: a data processing thread (`HH_DataProcThread.vi`) and a visualization thread. The communication between these threads is accomplished by LabVIEW queues. Thereby the FiFo read function (case *ReadFiFo* in *UIThread*) can be called as fast as possible without any additional latencies from data processing workload.

Some comments inside the source code should help the user to get an overview of the program and to facilitate the development of customized extensions. Please note that due to performance reasons some of the SubVIs inside `HH_DataProcThread.vi` have been inlined so that no debugging is possible on these SubVIs.

Program specific SubVIs and type-definitions used by the demos are organized in corresponding sub-folders inside the demo folder (*SubVIs*, *Types*). General helper functions and type-definitions as well as encapsulating libraries (`*.llb`) can be found in the `_lib` folder (containing further sub-folders) inside the demo folder. In order to facilitate the usage of the HHLib functions additional VIs called `HH_AllDllFunctions_xxx.vi` have been included. These VIs are not meant to be executed but should only give a structured overview of all available HHLib functions and their functional context.

In addition to the LabVIEW library used by the demos (`hllib_x86_x64_UIThread.llb`) a second library is included allowing the HHLib calls to be executed in any thread of LabVIEWs threading engine

(`hhlib_x86_x64_AnyThread.llb`). This library is intended for time critical applications where user actions on the Front Panel (like e.g. resizing or moving) must not affect the execution of a data acquisition thread containing these HHLib functions (please refer to “Multitasking in LabVIEW”: http://zone.ni.com/reference/en-XX/help/371361P-01/lvconcepts/multitasking_in_labview/). When using this library you have to make sure that all HHLib functions are called in a sequential order to avoid errors or even program crashes. Also be aware that HHLib functions in `hhlib_x86_x64_AnyThread.llb` have the same names like in `hhlib_x86_x64_UIThread.llb` and opening both libraries at the same time would lead to name conflicts. Therefore only experienced users should use `hhlib_x86_x64_AnyThread.llb`.

The MATLAB Demos

The MATLAB demos are provided in the `MATLAB` directory. They are contained in `.m` files. You need to have a MATLAB version that supports the `calllib` function. We have tested with MATLAB 7.3 (32 bit) but any version from 6.5 should work. Be very careful about the header file name specified in 'loadlibrary'. This name is case sensitive and a wrong spelling will lead to an apparently successful load but later no library calls will work.

The MATLAB demos are designed to run inside the MATLAB console. They need no command line input parameters. They create output files in their current working directory. The output file will be ASCII in case of the histogramming demo. In TTTR mode the output is stored in binary format for performance reasons. You can use any data visualization program to inspect the ASCII histograms. The binary files must be read by dedicated programs according to the format they were written in. The file read demos provided for the HydraHarp TTTR data files can be used as a starting point. They cannot be used directly on the demo output because they expect a file header the demos do not generate. This is intentional in order to keep the HHLib demos focused on the key issues of using the library.

By default, the TTTR mode demo is configured for T2 mode. This will not allow you to work with high sync rates. You need to change the mode input variable going into `HH_Initialize` to a value of 3 if you want T3 mode. At the same time you need to modify your program for an appropriate sync divider and a suitable range (resolution).

6. Advanced Techniques

6.1. Using Multiple Devices

The library is designed to work with multiple HydraHarp devices (up to 8). The demos always use the first device found. If you have more than one HydraHarp and you want to use them together you need to modify the code accordingly. At the API level of HHLib the devices are distinguished by a device index (0 .. 7). The device order corresponds to the order Libusb enumerates the devices. This can be somewhat unpredictable. It may therefore be difficult to know which physical device corresponds to the given device index. In order to solve this problem, the library routine `HH_OpenDevice` provides a second argument through which you can retrieve the serial number of the physical device at the given device index. Similarly you can use the library routine `HH_GetSerialNumber` any time later on a device you have successfully opened and initialized. The serial number of a physical HydraHarp device can be found at the back of the housing. It is a 8 digit number starting with 0100. The leading zero will not be shown in the serial number strings retrieved through `HH_OpenDevice` or `HH_GetSerialNumber`.

It is important to note that the list of devices may have gaps. If you have e.g. two HydraHarps you cannot assume to always find device 0 and 1. They may as well appear e.g. at device index 2 and 4 or any other index. Such gaps can be due to other PicoQuant devices (e.g. a Sepia II laser device) occupying some of the indices, as well as due to repeated unplugging / replugging of devices. The only thing you can rely on is that a device you hold open remains at the same index until you close or unplug it.

Note that an attempt at opening a device that is currently used by another process will result in the error code `ERROR_DEVICE_BUSY` being returned from `HH_OpenDevice`.

As outlined above, if you have more than one HydraHarp and you want to use them together you need to modify the demo code accordingly. This requires briefly the following steps: Take a look at the demo code where the loop for opening the device(s) is. In most of the demos all the available devices are opened. You may want to extend this so that you

1. filter out devices with a specific serial number and
2. do not hold open devices you don't actually need.

The latter is recommended because a device you hold open cannot be used by other programs.

By means of the device indices you picked out you can then extend the rest of the program so that every action taken on the single device is also done on all devices of interest, i.e. initialization, setting of parameters, starting a measurement etc. At the end the demos close all devices. It is recommended to keep this approach. It does no harm if you close a device that you haven't opened.

6.2. Efficient Data Transfer

The TTTR modes are designed for fast real-time data acquisition. TTTR mode is most efficient in collecting data with a maximum of information. It is therefore most likely to be used in sophisticated on-line data processing scenarios, where it may be worth optimizing data throughput.

In order to achieve the highest throughput, the HydraHarp 400 uses USB bulk transfers. This is supported by the PC hardware that can transfer data to the host memory without much help of the CPU. For the HydraHarp this permits data throughput as high as 9 Mcps (USB 2.0) or even 40 Mcps (USB 3.0) and leaves time for the host to perform other useful things, such as on-line data analysis or storing data to disk.

In TTTR mode the data transfer process is exposed to the library user in a single function `HH_ReadFiFo` that accepts a buffer address where the data is to be placed, and a transfer block size. This block size is critical for efficient transfers. The larger the block size, the better the transfer efficiency. This is because setting up a transfer costs some fixed amount of time, independent of the block size. The maximum transfer block size is 131,072 (128k event records). However, it may not under all circumstances be ideal to use the maximum size, e.g. with respect to cache usage.

As noted above, the transfer is implemented efficiently without using the CPU excessively. Nevertheless, assuming large block sizes, the transfer takes some time. The operating system therefore gives the unused CPU time to other processes or threads, i.e., it waits for completion of the transfer without burning CPU time. This wait time is what can also be used for doing 'useful things' in terms of any desired data processing or storing within your own application. The best way of doing this is to use multithreading. In this case you

design your program with two threads, one for collecting data (i.e. working with `HH_ReadFiFo`) and another for processing or storing the data. Multiprocessor systems can benefit from this technique even more. Of course you need to provide an appropriate data queue between the two threads and the means of thread synchronization. Thread priorities are another issue to be considered. Finally, if your program has a graphic user interface you may need a third thread to respond to user actions reasonably fast. Again, this is an advanced technique and it cannot be demonstrated in detail here. Greatest care must be taken not to access HHLib from different threads without strict control of mutual exclusion and maintaining the right sequence of function calls. However, the technique allows throughput improvements of 50..100% and advanced programmers may want to use it. It might be interesting to note that this is how TTTR mode is implemented in the regular PicoHarp software for Windows, where sustained count rates over 9 millions of counts/sec (to disk) can be achieved with the USB 2.0 HydraHarp and even 40 Mcps with the USB 3.0 version.

When working with multiple HydraHarp devices, the overall USB throughput is limited by the host controller or any hub the devices must share. You can increase overall throughput if you connect the individual devices to separate host controllers without using hubs. If you install additional USB controller cards you should prefer PCI-express models. Traditional PCI can become a bottleneck in itself. However, modern mainboards often have multiple USB host controllers, so you may not even need extra controller cards. In case of using multiple devices it is also beneficial for overall throughput if you use multi-threading in order to fetch and store data from the individual devices in parallel. Again, re-entrance issues must be observed carefully in this case, at least for all calls accessing the same device.

6.3. Working with Very Low Count Rates

As noted above, the transfer block size is critical for efficient transfers. The larger the block size, the better the transfer efficiency. This is because setting up a transfer costs some fixed amount of time, independent of the block size. It would therefore seem reasonable to always use the largest possible size. However, it may not under all circumstances be ideal to use the maximum size. A large block size takes longer to fill. If you use an early HydraHarp model with USB 2.0 and the count rates in your experiment are very low, it may be better to use a smaller block size. This ensures that the transfer function returns more promptly. The HydraHarp model with USB 2.0 has a “watchdog” timer that terminates large transfer requests prematurely so that they do not wait forever if new data is coming in very slowly or not at all. The timeout period is approximately 10 ms. `HH_ReadFiFo` may therefore return less than requested (possibly even zero). This helps to avoid complete stalls even if the maximum transfer size is used with low or zero count rates. However, for fine tuning of your application may still be of interest to experiment with smaller block sizes.

The USB 3.0 model of the HydraHarp works slightly differently. It transfers data in chunks of 128 records and `HH_ReadFiFo` will return immediately after the number of complete chunks of 128 records that were available in the FiFo and can fit in the buffer have been transferred. Remainders smaller than the chunk size are only transferred when no complete chunks are in the FiFo. Due to this different concept of operation of the USB 3.0 model it is therefore not necessary to worry about the transfer block size and using the largest is always fine unless you care about subtle cache optimizations.

Regardless of the hardware model the requested block size must be a multiple of 128 records. The smallest is therefore 128.

6.4. Working with Warnings

The HydraHarp programming library provides routines for obtaining and interpreting warnings about critical measurement conditions. The mechanism and warning criteria are the same as those used in the regular HydraHarp software. In order to obtain and use these warnings also in your custom software you may want to use the library routine `HH_GetWarnings`. This may help inexperienced users to notice possible mistakes before stating a measurement or even during the measurement.

It is important to note that the generation of warnings is dependent on the current count rates and the current measurement settings. It was decided that `HH_GetWarnings` does not obtain the count rates on its own, because the corresponding calls take some time and might waste too much processing time. It is therefore necessary that `HH_GetSyncRate` as well as `HH_GetCountRate` (for all channels) have been called before `HH_GetWarnings` is called. Since most interactive measurement software periodically retrieves the rates anyhow, this is not a serious complication.

The routine `HH_GetWarnings` delivers the cumulated warnings in the form of a bit field. In order to translate this into readable information you can use `HH_GetWarningsText`. Before passing the bit field into `HH_GetWarningsText` you can mask out individual warnings by means of the bit masks defined in `hhdefin.h`.

6.5. Working in Continuous Mode

This measurement mode works essentially like regular histogramming mode but it allows continuous and gapless streaming of short term histograms to the PC. Since it is an advanced real-time technique, beginners are advised better not to use it. for the same reason, the corresponding demos exist only in C and Pascal.

Before using this mode, consider when it is useful to do so. Remember that TTTR mode is usually the most efficient way of retrieving the maximum information on photon dynamics. Only when the expected count rates become very high and when the individual photon timing relations are not of interest it may be advisable to switch to continuous mode.

The temporal boundaries of the individual histograms in a continuous mode stream can be controlled in two different ways. One is by the HydraHarp's internal CTC (counter timer circuit). In that case the histograms will take the duration set by the `tacq` parameter passed to `HH_StartMeas` and they will line up seamlessly in time. The other way of controlling the individual histogram boundaries (in time) is by external TTL signals fed to the connectors C1 and C2. In that case it is possible to have new histograms started and stopped when specific signals occur. It is also possible to combine external starting with stopping through the internal CTC. Details are controlled by the parameters supplied to `HH_SetMeasControl`. Dependent on the parameter `meascontrol` the following modes of operation can be obtained:

Symbolic Name	Value	Function
MEASCTRL_CONT_C1_GATED	4	Histograms are collected for each period where C1 is active. This can be the logical high or low periods dependent on the value supplied to the parameter <code>startedge</code> .
MEASCTRL_CONT_C1_START CTC_STOP	5	Histogram collection is started by a transition on C1 and stopped by expiration of the internal CTC. Which transition actually triggers the start is given by the value supplied to the parameter <code>startedge</code> . Histogram duration is set by the <code>tacq</code> parameter passed to <code>HH_StartMeas</code> . The current histogram ends if a new trigger occurs before the CTC has expired.
MEASCTRL_CONT CTC_RESTART	6	Histogram collection is started and stopped exclusively by the internal CTC. Consecutive histograms will line up without gaps. Histogram duration is set by the <code>tacq</code> parameter passed to <code>HH_StartMeas</code> .

The symbolic constants shown above are defined in `hhdefin.h`. You will find that there are more symbolic constants with values 0..3 not shown in the table above. These are reserved for use with regular histogramming mode. There are also symbolic constants for the parameters controlling the active edges (rising/falling). Regarding `HH_StartMeas` only the parameter `startedge` is meaningful in continuous mode. The parameter `stopedge` is only used in regular histogramming mode.

In continuous mode each histogram is retrieved as a structured data block via `HH_GetContModeBlock`. This data block has a small header that provides a number of the histogram, starting time and duration of that histogram in nanoseconds, First occurrence time of each marker signal, and occurrence count of each marker signal. Please see the HydraHarp manual for more information on markers (normally used in TTTR mode) and study the source code of the continuous mode demos for details on the continuous mode data block structure. After the header there is the actual histogram data and after that follows a sum of all counts in that histogram. The latter is useful in applications where mere intensity dynamics are of interest.

One complication in using these data structures is that the size of the histograms depends both on the chosen number of time bins and on the number of active input channels. The size of the data blocks is therefore not fixed. The demo code shows how to deal with this. Note that the structure of the continuous mode block header has slightly changed between HHLib versions 2.x and 3.x.

7. Problems, Tips & Tricks

7.1. PC Performance Issues

Performance issues with HHLib are the same as with the standard HydraHarp software. The HydraHarp device and its software interface are a complex real-time measurement system demanding appropriate performance both from the host PC and the operating system. This is why a fairly modern CPU and sufficient memory are required. At least a 1.5 GHz dual core processor, 4 GB of memory and a fast hard disk are recommended. However, as long as you do not use TTTR or continuous mode, these issues should not be of severe impact. If you do intend to use TTTR or continuous mode with streaming to disk you should also have a fast modern hard disk, ideally a solid state disk.

7.2. USB Interface

In order to deliver maximum throughput, the HydraHarp 400 uses state-of-the-art USB bulk transfers. This is why the HydraHarp must rely on having a USB host interface matched to the device speed (USB 2.0 or USB 3.0). USB host controllers of modern PCs are usually integrated on the mainboard. For older PCs they may be upgraded as plugin cards. Throughput is then usually limited by the host controller, not the HydraHarp. Do not run other bandwidth demanding devices on the same USB interface when working with the HydraHarp. USB cables must be qualified for the USB speed of your HydraHarp model (at least USB 2.0). Older and cheap cables often do not meet this requirement and can lead to errors and malfunction. Similarly, many PCs have poor internal USB cabling, so that USB sockets at the front of the PC are often unreliable. Obscure USB errors may also result from subtle damages to USB cables, caused e.g. by sharply bending or crushing them. Worn out and dirty cable connectors are another frequent source of trouble.

7.3. Troubleshooting

Troubleshooting should begin by testing your hardware and experiment setup. This is best accomplished by the standard HydraHarp software for Windows (supplied by PicoQuant). Only if this is working properly you should start work with the library under Linux. If there are problems even with the standard software, please consult the HydraHarp manual for detailed troubleshooting advice.

Under Linux the library will access the PicoHarp device through libusb 0.1.12 or the combination of Libusb 1.0 and Libusb-Compat (see <http://libusb.sourceforge.net/>). You need to make sure that libusb has been installed correctly. Normally this is readily provided by recent Linux distributions. You can use `lsusb` to check if the device has been detected and is accessible. Please consult the PicoHarp manual for hardware related problem solutions. Note that an attempt at opening a device that is currently used by another process will result in the error code `ERROR_DEVICE_BUSY` being returned from `PH_OpenDevice`. `PH_OpenDevice` may also fail to open the device due to insufficient access rights (permissions). This appears as if the device is not present at all. In this case look at the output of `lsusb`. The HydraHarp model with USB 2.0 interface should appear with its vendor ID `0E0D` and the device ID `0004`. The USB 3.0 model should appear with vendor ID `0E0D` and device ID `0009`. If the device is actually listed there and you still cannot open it then you probably have not set the right permissions. See section 4.2 to fix this.

As a next step, try the readily compiled demos supplied with the library. For first tests take the standard histogramming demos. If this is working, your own programs should work as well. Note that the hard coded settings may not be compatible with your experimental setup. Then the pre-compiled demo may not work as expected. Only the advanced LabVIEW demos allow to enter most of the settings interactively.

7.4. Version tracking

While PicoQuant will always try to maintain a maximum of continuity in further hardware and software development, changes for the benefit of technical progress cannot always be avoided. It may therefore happen, that data structures, calling conventions or program flow will change. In order to design programs that will recognize such changes with a minimum of trouble we strongly recommend that you make use of the functions provided for version retrieval of hardware and library. In any case your software should issue a warning if it detects versions other than those it was tested with.

7.5. New Linux Versions

The library has good chances to remain compatible with upcoming Linux versions. This is because the interface of libusb is likely to remain unchanged, even if libusb changes internally. You can even revert to an earlier version if necessary. Of course we will also try to catch up with new developments that might break compatibility, so that we will provide upgrades when necessary. However, note that this is work carried out voluntarily and implies no warranties for future support.

7.6. Software Updates

We constantly improve and update the software for our instruments. This includes updates of the configurable hardware (FPGA). Such updates are important as they may affect reliability and interoperability with other products. The software updates are free of charge, unless major new functionality is added. It is strongly recommended that you check the product website for the latest version before investing time in programming.

7.7. Bug Reports and Support

The HydraHarp 400 TCSPC system has gone through several iterations of hardware and software improvement as well as extensive testing. Nevertheless, it is a fairly challenging development and some glitches may still occur under the myriads of possible PC configurations and application circumstances. We therefore would like to offer you our support in any case of problems with the system. Do not hesitate to contact your sales representative or PicoQuant in case of difficulties with your HydraHarp or the programming library. However, please note that the Linux library is a free supplement to the Windows version and its development is work carried out voluntarily by individual Linux enthusiasts. It therefore implies no warranties for other than voluntary support.

If you should observe errors or bugs caused by the HydraHarp system please try to find a reproducible error situation. Email a detailed description of the problem and all relevant circumstances, especially other hardware installed in your PC, to support@picoquant.com. Also include a listing of your PC configuration and attach it to your error report. Your feedback will help us to improve the product and documentation.

Of course we also appreciate good news: If you have obtained exciting results with one of our instruments, please let us know, and where appropriate, please mention the instrument in your publications. The simplest way of doing this in case of the HydraHarp 400 is citing the original publication about the instrument¹. At our Website we also maintain a large bibliography of publications referring to our instruments. It may serve as a reference for you and other potential users. See <http://www.picoquant.com/scientific/references>. Please submit your publications for addition to this list.

¹ Wahl M., Rahn H.-J., Röhlicke T., Kell G., Nettels D., Hillger F., Schuler B., Erdmann R.: Scalable time-correlated photon counting system with multiple independent input channels. *Review of Scientific Instruments*, Vol.79, 123113 (2008)

8. Appendix

8.1. Data Types

The HydraHarp programming library is written in C and its data types correspond to standard C / C++ data types as follows:

<code>char</code>	8 bit, byte (or characters in ASCII)
<code>short int</code>	16 bit signed integer
<code>unsigned short int</code>	16 bit unsigned integer
<code>int</code> <code>long int</code>	32 bit signed integer
<code>unsigned int</code> <code>unsigned long int</code>	32 bit unsigned integer
<code>__int64</code> <code>long long int</code>	64 bit signed integer
<code>unsigned int64</code> <code>unsigned long long int</code>	64 bit unsigned integer
<code>float</code>	32 bit floating point number
<code>double</code>	64 bit floating point number

Note that on platforms other than Intel x86 type of machines byte swapping may occur when the HydraHarp data files are read there for further processing. We recommend using the native x86 environment consistently.

The HydraHarp software distribution pack includes a set of demo programs (source code) for various programming languages to show how access to HydraHarp data files can be implemented. These demos also show how to process TTTR records and the related code fragments can be used for real-time processing of freshly collected data as well. They will be installed in the subfolder `\Filedemo` under the chosen installation folder of the HydraHarp software (not that of the programming library).

8.2. Functions Exported by `hhlb.so`

See `hhdefin.h` for predefined constants given in capital letters here. Return values < 0 denote errors. See `errorcodes.h` for the error codes. Note, that `HHLib` can control more than one HydraHarp simultaneously. For that reason all device specific functions (i.e. the functions from section 8.2.2 on) take a device index as the first argument. Note that functions taking a channel number as an argument expect the channels enumerated 0..N-1 while the graphical HydraHarp software as well as the front panel enumerates the channels 1..N. This is due to internal data structures and consistency with earlier products.

8.2.1. General Functions

These functions work independent from any device.

```
int HH_GetErrorString (char* errstring, int errcode);
```

arguments:	errstring:	pointer to a buffer for at least 40 characters
	errcode:	error code returned from a HH_xxx function call
return value:	=0	success
	<0	error

Note: This function is provided to obtain readable error strings that explain the cause of the error better than the numerical error code. Use these in error handling message boxes, support enquiries etc.

```
int HH_GetLibraryVersion (char* vers);
```

arguments:	vers:	pointer to a buffer for at least 8 characters
return value:	=0	success
	<0	error

Note: This is the only function you may call before `HH_Initialize`. Use it to ensure compatibility of the library with your own application.

8.2.2. Device Specific Functions

All functions below are device specific and require a device index.

```
int HH_OpenDevice (int devidx, char* serial);
```

arguments:	devidx:	device index 0..7
	serial:	pointer to a buffer for at least 8 characters
return value:	=0	success
	<0	error

```
int HH_CloseDevice (int devidx);
```

arguments:	devidx:	device index 0..7
return value:	=0	success
	<0	error

Note: Closes and releases the device for use by other programs.

```
int HH_Initialize (int devidx, int mode, int refsource);
```

arguments:	devidx:	device index 0..7
	mode:	measurement mode
		0 = histogramming mode
		2 = T2 mode
		3 = T3 mode
		8 = continuous mode

```

        refsourc:      reference clock to use
                        0 = internal
                        1 = external

return value:    =0      success
                  <0     error

```

Note: This routine must be called before any of the other routines below can be used. Note that some of them depend on the measurement mode you select here. See the HydraHarp manual for more information on the measurement modes.

8.2.3. Functions for Use on Initialized Devices

All functions below can only be used after HH_Initialize was successfully called.

```
int HH_GetHardwareInfo (int devidx, char* model, char* partno, char* version);    // CHANGED IN V3.0
```

```

arguments:      devidx:      device index 0..7
                  model:      pointer to a buffer for at least 16 characters
                  partno:     pointer to a buffer for at least 8 characters
                  version:    pointer to a buffer for at least 8 characters

return value:   =0      success
                  <0     error

```

```
int HH_GetFeatures (int devidx, int* features);    // NEW SINCE V3.0
```

```

arguments:      devidx:      device index 0..7
                  features:   pointer to a buffer for an integer (actually a bit pattern)

return value:   =0      success
                  <0     error

```

Note: You do not really need this function. It is mainly for integration in PicoQuant system software such as SymPhoTime in order to figure out what capabilities the device has. If you want it anyway, use the bit masks from hhdefin.h to evaluate individual bits in the pattern.

```
int HH_GetSerialNumber (int devidx, char* serial);
```

```

arguments:      devidx:      device index 0..7
                  vers:      pointer to a buffer for at least 8 characters

return value:   =0      success
                  <0     error

```

```
int HH_GetBaseResolution (int devidx, double* resolution, int* binsteps);
```

```

arguments:      devidx:      device index 0..7
                  resolution: pointer to a double precision float (64 bit)
                        returns the base resolution in ps
                  binsteps:   pointer to an integer,
                        returns the maximum allowed binning steps

return value:   =0      success
                  <0     error

```

Note: Use the value returned in binsteps as maximum value for the HH_SetBinning function.

```
int HH_GetNumOfInputChannels (int devidx, int* nchannels);
```

```

arguments:      devidx:      device index 0..7
                  nchannels:  pointer to an integer,
                        returns the number of installed input channels

return value:   =0      success
                  <0     error

```

```
int HH_GetNumOfModules (int devidx, int* nummod);
```

arguments:	devidx:	device index 0..7
	nummod:	pointer to an integer, returns the number of installed modules
return value:	=0	success
	<0	error

Note: This routine is primarily for maintenance and service purposes. It will typically not be needed by end user applications.

```
int HH_GetModuleInfo (int devidx, int modidx, int* modelcode, int* versioncode);
```

arguments:	devidx:	device index 0..7
	modidx:	module index 0..5
	modelcode:	pointer to an integer, returns the model of the module identified by modidx
	versioncode:	pointer to an integer, returns the versioncode of the module identified by modidx
return value:	=0	success
	<0	error

Note: This routine is primarily for maintenance and service purposes. It will typically not be needed by end user applications.

```
int HH_GetModuleIndex (int devidx, int channel, int* modidx);
```

arguments:	devidx:	device index 0..7
	channel:	index of the identifying input channel 0..nchannels-1
	modidx:	pointer to an integer, returns the index of the module where the input channel given by channel resides.
return value:	=0	success
	<0	error

Note: This routine is primarily for maintenance and service purposes. It will typically not be needed by end user applications. The maximum input channel index must correspond to nchannels-1 as obtained through HH_GetNumOfInputChannels().

```
int HH_GetHardwareDebugInfo(int devidx, char *debuginfo); // NEW SINCE V3.0
```

arguments:	devidx:	device index 0..7
	debuginfo:	pointer to a buffer for at least 65536 characters
return value:	=0	success
	<0	error

Note: Use this call to obtain debug information for support enquiries if you detect FLAG_SYSERROR or HH_ERROR_STATUS_FAIL.

```
int HH_Calibrate (int devidx);
```

arguments:	devidx:	device index 0..7
return value:	=0	success
	<0	error

```
int HH_SetSyncDiv (int devidx, int div);
```

arguments:	devidx:	device index 0..7
	div:	sync rate divider (1, 2, 4, .., SYNCDIVMAX)
return value:	=0	success
	<0	error

Note: The sync divider must be used to keep the effective sync rate at values ≤ 12.5 MHz. It should only be used with sync sources of stable period. Using a larger divider than strictly necessary does not do great harm but it may result in slightly larger timing jitter. The readings obtained with HH_GetCountRate are internally corrected for the divider setting and deliver the external (undivided) rate. The sync divider should not be changed while a measurement is running.

```
int HH_SetSyncCFD (int devidx, int level, int zerox);
```

arguments:	devidx:	device index 0..7
	level:	CFD discriminator level in millivolts minimum = DISCRMIN maximum = DISCRMAX
	zerox:	CFD zero cross level in millivolts minimum = ZCMIN maximum = ZCMAX
return value:	=0	success
	<0	error

Note: The values are given as a positive numbers although the electrical signals are actually negative.
After a firmware update to version 2.0 the CFD settings may require slight adjustments.

```
int HH_SetSyncChannelOffset (int devidx, int value);
```

arguments:	devidx:	device index 0..7
	value:	sync timing offset in ps minimum = CHANOFFSMIN maximum = CHANOFFSMAX
return value:	=0	success
	<0	error

```
int HH_SetInputCFD (int devidx, int channel, int level, int zerox);
```

arguments:	devidx:	device index 0..7
	channel:	input channel index 0..7
	level:	CFD discriminator level in millivolts minimum = DISCRMIN maximum = DISCRMAX
	zerox:	CFD zero cross level in millivolts minimum = ZCMIN maximum = ZCMAX
return value:	=0	success
	<0	error

Note: The values are given as a positive numbers although the electrical signals are actually negative.
The maximum input channel index must correspond to `nchannels-1` as obtained through `HH_GetNumOfInputChannels()`.
After a firmware update to version 2.0 the CFD settings may require slight adjustments.

```
int HH_SetInputChannelOffset (int devidx, int channel, int value);
```

arguments:	devidx:	device index 0..7
	channel:	input channel index 0..nchannels-1
	value:	channel timing offset in ps minimum = CHANOFFSMIN maximum = CHANOFFSMAX
return value:	=0	success
	<0	error

Note: The maximum input channel index must correspond to `nchannels-1` as obtained through `HH_GetNumOfInputChannels()`.

```
int HH_SetInputChannelEnable (int devidx, int channel, int enable);
```

arguments:	devidx:	device index 0..7
	channel:	input channel index 0..nchannels-1
	enable:	desired enable state of the input channel 0 = disabled 1 = enabled
return value:	=0	success
	<0	error

Note: The maximum channel index must correspond to `nchannels-1` as obtained through `HH_GetNumOfInputChannels()`.

```
int HH_SetStopOverflow (int devidx, int stop_ovfl, unsigned int stopcount);
```

arguments:	devidx:	device index 0..7
	stop_ovfl:	0 = do not stop, 1 = do stop on overflow
	stopcount:	count level at which should be stopped minimum = STOPCNTMIN maximum = STOPCNTMAX
return value:	=0	success
	<0	error

Note: This setting determines if a measurement run will stop if any channel reaches the maximum set by stopcount. If stop_ovfl is 0 the measurement will continue but counts above STOPCNTMAX in any bin will be clipped.

```
int HH_SetBinning (int devidx, int binning);
```

arguments:	devidx:	device index 0..7
	binning:	measurement binning code minimum = 0 (smallest, i.e. base resolution) maximum = (MAXBINSTEPS-1) (largest)
return value:	=0	success
	<0	error

Note: the binning code corresponds to repeated doubling, i.e.

0 = 1x base resolution,
1 = 2x base resolution,
2 = 4x base resolution,
3 = 8x base resolution, and so on.

```
int HH_SetOffset (int devidx, int offset);
```

arguments:	devidx:	device index 0..7
	offset:	histogram time offset in ns minimum = OFFSETMIN maximum = OFFSETMAX
return value:	=0	success
	<0	error

Note: This offset must not be confused with the input offsets in each channel that act like a cable delay. In contrast, the offset here is subtracted from each start-stop measurement before it is used to either address the histogram channel to be incremented (in histogramming mode) or to be stored in a T3 mode record. The offset therefore has no effect in T2 mode and it has no effect on the relative timing of laser pulses and photon events. It merely shifts the region of interest where time difference data is to be collected. This can be useful e.g. in time-of-flight measurements where only a small time span at the far end of the range is of interest.

```
int HH_SetHistoLen (int devidx, int lencode, int* actuallen);
```

arguments:	devidx:	device index 0..7
	lencode:	histogram length code minimum = 0 maximum = MAXLENCODE (default)
	actuallen:	pointer to an integer, returns the current length (time bin count) of histograms calculated as $1024 * (2^{\text{lencode}})$
return value:	=0	success
	<0	error

```
int HH_ClearHistMem (int devidx);
```

arguments:	devidx:	device index 0..7
return value:	=0	success
	<0	error


```
int HH_SetMeasControl (int devidx, int meascontrol, int startedge, int stopedge);
```

arguments:	devidx:	device index 0..7
	meascontrol:	measurement control code
		0 = MEASCTRL_SINGLESOT CTC
		1 = MEASCTRL_C1_GATED
		2 = MEASCTRL_C1_START CTC_STOP
		3 = MEASCTRL_C1_START C2_STOP
		4 = MEASCTRL_CONT_C1_GATED
		5 = MEASCTRL_CONT_C1_START CTC_STOP
		6 = MEASCTRL_CONT CTC_RESTART
	startedge:	edge selection code
		0 = falling
		1 = rising
	stopedge:	edge selection code
		0 = falling
		1 = rising
return value:	=0	success
	<0	error

```
int HH_StartMeas (int devidx, int tacq);
```

arguments:	devidx:	device index 0..7
	tacq:	acquisition time in milliseconds
		minimum = ACQTMIN
		maximum = ACQTMAX
return value:	=0	success
	<0	error

```
int HH_StopMeas (int devidx);
```

arguments:	devidx:	device index 0..7
return value:	=0	success
	<0	error

Note: Can also be used before the acquisition time expires.

```
int HH_CTCStatus (int devidx, int* ctstatus);
```

arguments:	devidx:	device index 0..7
	ctstatus	pointer to an integer, returns the acquisition time state
		0 = acquisition time still running
		1 = acquisition time has ended
return value:	=0	success
	<0	error

```
int HH_GetHistogram (int devidx, unsigned int *chcount, int channel, int clear);
```

arguments:	devidx:	device index 0..7
	chcount	pointer to an array of at least actuallen double words (32bit) where the histogram data can be stored
	channel:	input channel index 0..nchannels-1
	clear	denotes the action upon completing the reading process
		0 = keeps the histogram in the acquisition buffer
		1 = clears the acquisition buffer
return value:	=0	success
	<0	error

Note: The histogram buffer size `actuallen` must correspond to the value obtained through `HH_SetHistoLen()`.
The maximum input channel index must correspond to `nchannels-1` as obtained through `HH_GetNumOfInputChannels()`.

```
int HH_GetResolution (int devidx, double* resolution);
```

arguments:	devidx:	device index 0..7
	resolution:	pointer to a double precision float (64 bit) returns the resolution at the current binning (histogram bin width) in ps,
return value:	=0	success
	<0	error

```
int HH_GetSyncRate (int devidx, int* syncrate);
```

arguments:	devidx:	device index 0..7
	syncrate:	pointer to an integer returns the current sync rate
return value:	=0	success
	<0	error

```
int HH_GetCountRate (int devidx, int channel, int* cntrate);
```

arguments:	devidx:	device index 0..7
	channel:	number of the input channel 0..nchannels-1
	cntrate:	pointer to an integer returns the current count rate of this input channel
return value:	=0	success
	<0	error

Note: Allow at least 100 ms after HH_Initialize or HH_SetSyncDivider to get a stable rate meter reading.
Similarly, wait at least 100 ms to get a new reading. This is the gate time of the counters.
The maximum input channel index must correspond to nchannels-1 as obtained through HH_GetNumOfInputChannels().

```
int HH_GetFlags (int devidx, int* flags);
```

arguments:	devidx:	device index 0..7
	flags:	pointer to an integer returns current status flags (a bit pattern)
return value:	=0	success
	<0	error

Note: Use the predefined bit mask values in hhdefin.h (e.g. FLAG_OVERFLOW) to extract individual bits through a bitwise AND.

```
int HH_GetElapsedMeasTime (int devidx, double* elapsed);
```

arguments:	devidx:	device index 0..7
	elapsed:	pointer to a double precision float (64 bit) returns the elapsed measurement time in ms
return value:	=0	success
	<0	error

Note: This can be used while a measurement is running but also after it has stopped.

```
int HH_GetWarnings (int devidx, int* warnings);
```

arguments:	devidx:	device index 0..7
	warnings	pointer to an integer returns warnings, bitwise encoded (see phdefin.h)
return value:	=0	success
	<0	error

note: You must call HH_GetCoutRate and HH_GetCoutRate for all channels prior to this call.

```
int HH_GetWarningsText (int devidx, char* text, int warnings);
```

arguments:	devidx:	device index 0..7
	text:	pointer to a buffer for at least 16384 characters
	warnings:	integer bitfield obtained from HH_GetWarnings

return value:	=0	success
	<0	error

```
int HH_GetSyncPeriod (int devidx, double* period); // NEW SINCE V3.0
```

arguments:	devidx:	device index 0..7
	period:	pointer to a double precision float (64 bit) returning the sync period in ps

return value:	=0	success
	<0	error

note: This call only gives meaningful results while a measurement is running and after two sync periods have elapsed. The return value is undefined in all other cases. Accuracy is determined by single shot jitter and crystal tolerances.

8.2.4. Special Functions for TTTR Mode

```
int HH_ReadFiFo (int devidx, unsigned int* buffer, int count, int* nactual);
```

arguments:	devidx:	device index 0..7
	buffer:	pointer to an array of count double words (32bit) where the TTTR data can be stored must provide space for at least 128 records
	count:	number of TTTR records to be fetched must be a multiple of 128, max = size of buffer, absolute max = TTREADMAX
	nactual:	pointer to an integer returns the number of TTTR records received

return value:	=0	success
	<0	error

Note: CPU time during wait for completion will be yielded to other processes / threads.
Buffer must not be accessed until the function returns.
USB 2.0 devices: Call will return after a timeout period of ~10 ms, if not all data could be fetched.
USB 3.0 devices: The transfer operates in chunks of 128 records. The call will return after the number of complete chunks of 128 records that were available in the FiFo and can fit in the buffer have been transferred. Remainders smaller than the chunk size are only transferred when no complete chunks are in the FiFo.

```
int HH_SetMarkerEdges (int devidx, int me0, int me1, int me2, int me3);
```

arguments:	devidx:	device index 0..7
	me<n>:	active edge of marker signal <n>, 0 = falling, 1 = rising

return value:	=0	success
	<0	error

```
int HH_SetMarkerEnable (int devidx, int en0, int en1, int en2, int en3);
```

arguments:	devidx:	device index 0..7
	en<n>:	desired enable state of marker signal <n>, 0 = disabled, 1 = enabled

return value:	=0	success
	<0	error

```
int HH_SetMarkerHoldoffTime (int devidx, int holdofftime); // NEW SINCE V3.0
```

arguments:	devidx:	device index 0..7
	holdofftime	hold-off time in ns (0..HOLDOFFMAX)
return value:	=0	success
	<0	error

Note: This setting is not normally required but it can be used to deal with glitches on the marker lines. Markers following a previous marker within the hold-off time will be suppressed. Note that the actual hold-off time is only approximated to about ± 8 ns.

8.2.5. Special Functions for Continuous Mode

```
int HH_GetContModeBlock (int devidx, void* buffer, int* nbytesreceived); // CHANGED SINCE V3.0
```

arguments:	devidx:	device index 0..7
	buffer:	pointer to a buffer where the data will be stored
	nbytesreceived:	pointer to an integer, returns the number of bytes received
return value:	=0	success
	<0	error

Note: Required buffer size and data structure depends on the number of active input channels and histogram bins. Allocate MAXCONTMODEBUFLen bytes to be on the safe side. The data structure changed slightly in v3.0 to provide information on the number of active input channels and histogram bins. This simplifies accessing the data. See the C demo code.

8.3. Warnings

The following is related to the warnings (possibly) generated by the library routine `HH_GetWarnings`. The mechanism and warning criteria are the same as those used in the regular HydraHarp software and depend on the current count rates and the current measurement settings.

Note that the software can detect only a subset of all possible error conditions. It is therefore not safe to assume “all is right” just by obtaining no warning. It is also necessary that `HH_GetCoutrate` has been called for all channels before `HH_GetWarnings` is called.

The warnings are to some extent dependent on the current measurement mode. Not all warnings will occur in all measurement modes. Also, count rate limits for a specific warning may be different in different modes. The following table lists the possible warnings in the three measurement modes and gives some explanation as to their possible cause and consequences.

Warning	Histo Mode	T2 Mode	T3 Mode
WARNING_SYNC_RATE_ZERO No counts are detected at the sync input. In histogramming and T3 mode this is crucial and the measurement will not work without this signal.	√		√
WARNING_SYNC_RATE_TOO_LOW this warning should not occur with current software and firmware. It is kept in this list for backward compatibility only. Note, however, that there actually is a minimum sync rate of about 0.25 Hz in histogramming and T3 mode. Due to the lower limit of the rate meters this condition cannot be detected, hence no warning is issued.			
WARNING_SYNC_RATE_TOO_HIGH In histogramming or T3 mode: The divided pulse rate at the sync input is higher than 12.5 MHz (deadtime limit). Use a larger divider if possible. In T2 mode: The pulse rate at the sync input is higher than 9 MHz (bus limit if running at USB 2.0 speed) or higher than 12.5 MHz after the divider (deadtime limit if running at USB 3.0 speed). The most common reason for this error is that a laser sync signal is still connected. T2 mode is normally intended to be used without a sync signal. There are some rare measurement scenarios where this condition is expected and the warning can be disabled. Examples are measurements where the FIFO can absorb all data of interest before it overflows.	√	√	√
WARNING_INPT_RATE_ZERO No counts are detected at any of the input channels. In histogramming and T3 mode these are the photon event channels and the measurement will yield nothing. You might sporadically see this warning if your detector has a very low dark count rate and is blocked by a shutter. In that case you may want to disable this warning.	√		√

Warning	Histo Mode	T2 Mode	T3 Mode
WARNING_INPT_RATE_TOO_HIGH You have selected T2 or T3 mode and the overall pulse rate at the input channels is higher than 9 MHz. The measurement will inevitably lead to a FiFo overrun. There are some rare measurement scenarios where this condition is expected and the warning can be disabled. Examples are measurements where the FiFo can absorb all data of interest before it overflows.		√	√
WARNING_INPT_RATE_RATIO This warning is issued in histogramming and T3 mode when the rate at any input channel is higher than 5% of the sync rate. This is the classical pile-up criterion. It will lead to noticeable dead-time artefacts. There are rare measurement scenarios where this condition is expected and the warning can be disabled. Examples are antibunching measurements.	√		√
WARNING_DIVIDER_GREATER_ONE You have selected T2 mode and the sync divider is set larger than 1. This is probably not intended. The sync divider is designed primarily for high sync rates from lasers and requires a fixed pulse rate at the sync input. In that case you should use T3 mode. If the signal at the sync input is from a photon detector (coincidence correlation etc.) a divider > 1 will lead to unexpected results. There are rare measurement scenarios where this condition is intentional and the warning can be disabled.		√	
WARNING_TIME_SPAN_TOO_SMALL This warning is issued in histogramming and T3 mode when the sync period (1/SyncRate) is longer than the start to stop time span that can be covered by the histogram or by the T3 mode records. You can calculate this time span as follows: Histogramming mode: Span = Resolution * 65536 T3 mode: Span = Resolution * 32768 Events outside this span will not be recorded. There are some measurement scenarios where this condition is intentional and the warning can be disabled.	√		√
WARNING_OFFSET_UNNECESSARY This warning is issued in histogramming and T3 mode when an offset >0 is set even though the sync period (1/SyncRate) can be covered by the measurement time span without using an offset. The offset may lead to events getting discarded. There are some measurement scenarios where this condition is intentional and the warning can be disabled.	√		√

If any of the warnings you receive indicate wrong pulse rates, the cause may be inappropriate input settings, wrong pulse polarities, poor pulse shapes or bad connections. If in doubt, check all signals with an oscilloscope of sufficient bandwidth.

All information given in this manual is reliable to our best knowledge. However, no responsibility is assumed for possible inaccuracies or omissions. Specifications and external appearance are subject to change without notice.



PicoQuant GmbH
Unternehmen für optoelektronische Forschung und Entwicklung
Rudower Chaussee 29 (IGZ), 12489 Berlin, Germany
Telephone: +49 / (0)30 / 1208820-0
Fax: +49 / (0)30 / 1208820-90
e-mail: info@picoquant.com
WWW: <http://www.picoquant.com>