

# WORKSHOP ON XILINX VITIS TOOLS


## PREFACE

We are going to start with an example for demonstration of a full 2-bit adder implementation using Xilinx Vivado IDE and demonstrating it on a ZedBoard Zynq-7000 ARM/FPGA SoC Development Board.

### A Quick overview about Full Adder

The half adder is used to add only two numbers. To overcome this problem, the full adder was developed. The full adder is used to add three 1-bit binary numbers A, B, and carry C. The full adder has three input states and two output states i.e., sum and carry.

### Full Adder

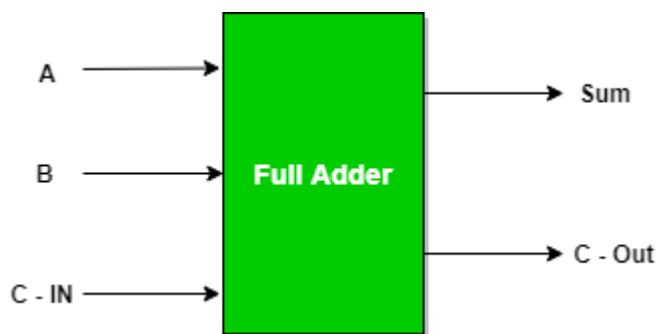


## Full Adder truth table

Inputs			Outputs	
A	B	C – IN	Sum	C – Out
0	0	0	0	0
0	0	1	1	0
0	1	0	1	0
0	1	1	0	1
1	0	0	1	0
1	0	1	0	1
1	1	0	0	1
1	1	1	1	1

Logical Expression for **SUM**:  $= (A \oplus B) \oplus C_{in}$

Logical Expression for **C-OUT**:  $= (A \oplus B) C_{in} + A \cdot B$

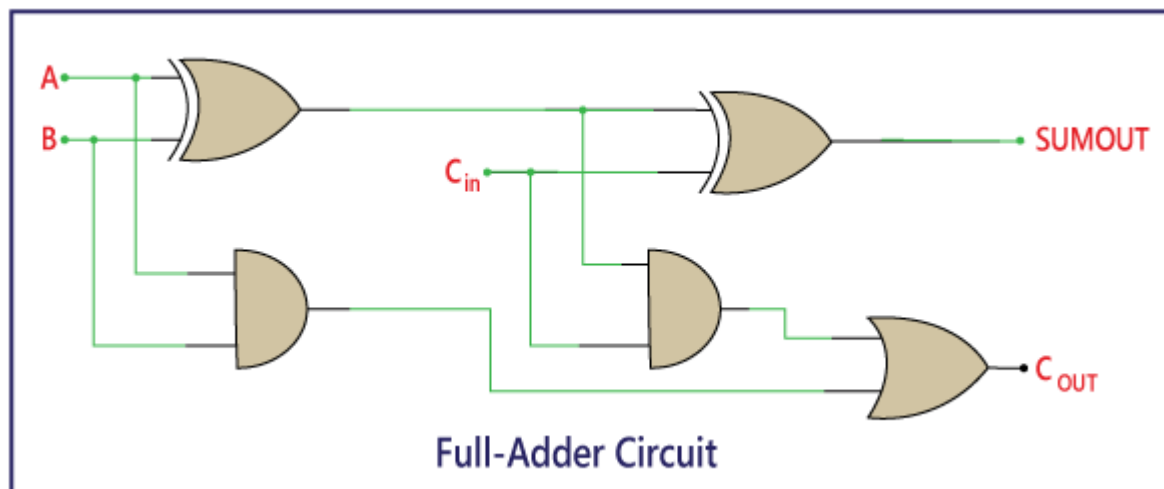

# Getting Started with Xilinx Vivado

## Introduction

The goal of this guide is to familiarize the reader with the Vivado tools by building the 2-bit full adder.

## Prerequisites

### Hardware

- **FPGA System Board**
- **Micro USB cable B**


### Software

- **Xilinx Vivado 2022.2 (Follow the Installation instructions from the prerequisite tab of the workshop registration page).**

## 1. Starting Vivado

### Windows

Open Vivado via the start menu or desktop shortcut created during the installation process.

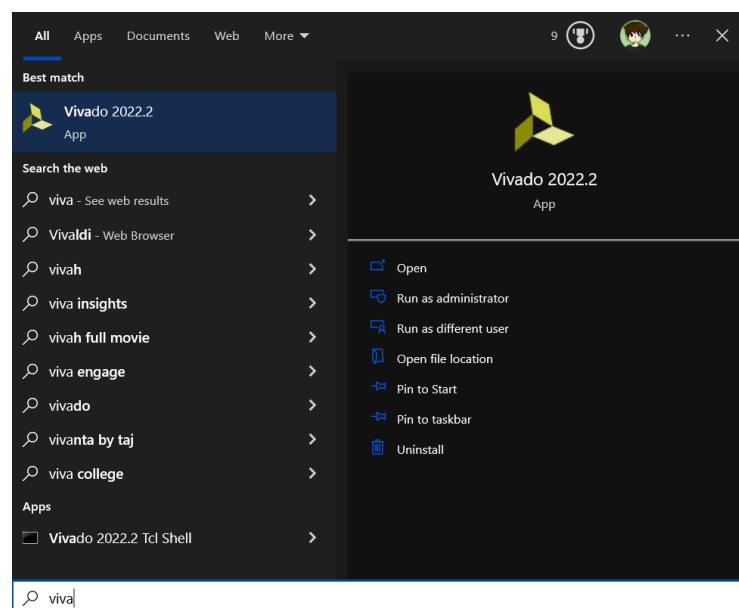


## Linux

Open a terminal, **cd** into a working directory that can be cluttered with temporary Vivado files and logs, then run the following two commands:

```
source <install_path>/Vivado/<version>/settings64.sh  
vivado
```


For a default installation of Vivado, the install path will be “C:/Xilinx/” on Windows, and “/tools/Xilinx/” on Linux.

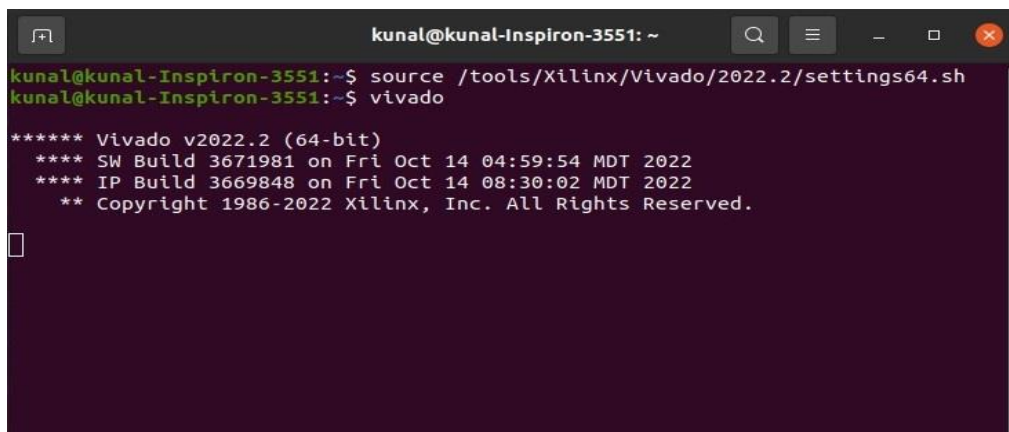

```
kunal@kunal-Inspiron-3551: ~  
kunal@kunal-Inspiron-3551:~$ source /tools/Xilinx/Vivado/2022.2/settings64.sh  
kunal@kunal-Inspiron-3551:~$ vivado  
***** Vivado v2022.2 (64-bit)  
***** SW Build 3671981 on Fri Oct 14 04:59:54 MDT 2022  
***** IP Build 3669848 on Fri Oct 14 08:30:02 MDT 2022  
***** Copyright 1986-2022 Xilinx, Inc. All Rights Reserved.
```

## 2. The Start Page

This is the screen Vivado's start-up screen. The different options available are described below using the image as a guide.

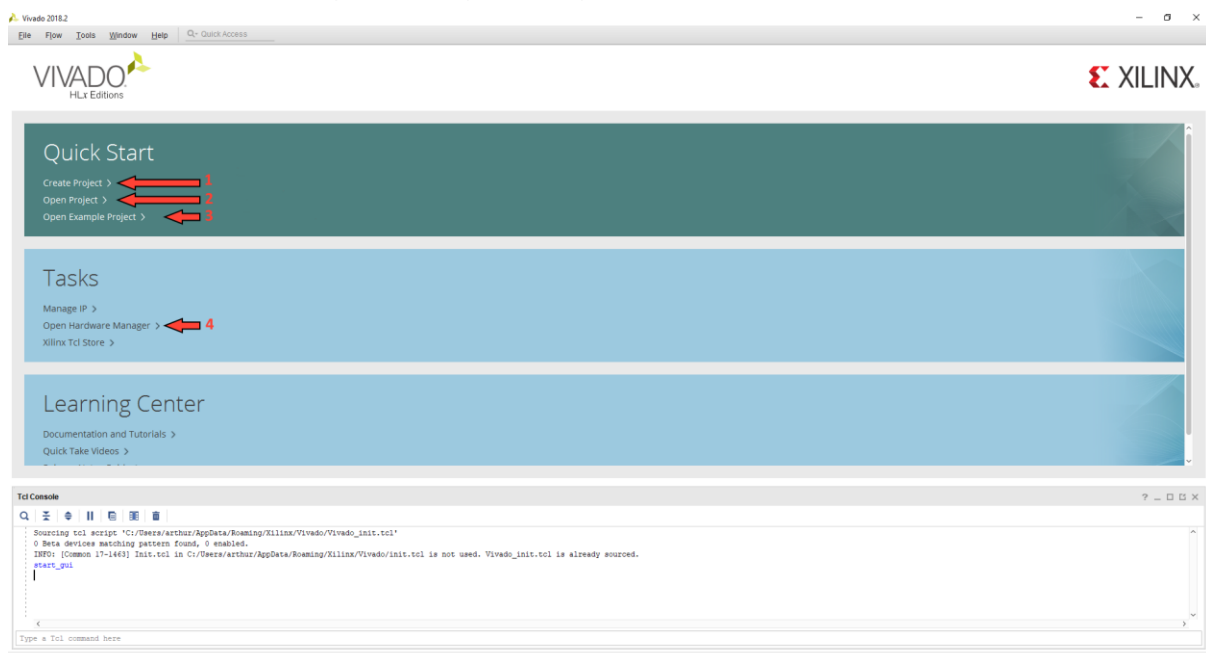


- **Create New Project:** This button will open the New Project wizard. This wizard steps the user through creating a new project. The wizard is stepped through in section 3.
- **Open Project:** This button will open a file browser. Navigate to the desired Xilinx Project (.xpr) file and click **Open** to open the project in Vivado.
- **Open Example Project:** This will guide the user through creating a new project based on an example project. These projects will not work on all devices. Many Digilent example projects are instead released on Github, and linked to through the target FPGA System Board's Resource Center, which can be found through the list of [List of Digilent FPGA System Boards](#).
- **Open Hardware Manager:** This will open the Hardware Manager without an associated project. If connecting to and programming a device is all that the user wants to do, then this is the button to use.

## 3. Creating a New Project


### 3.1

From the start page, click the **Create New Project** button to start the New Project Wizard.

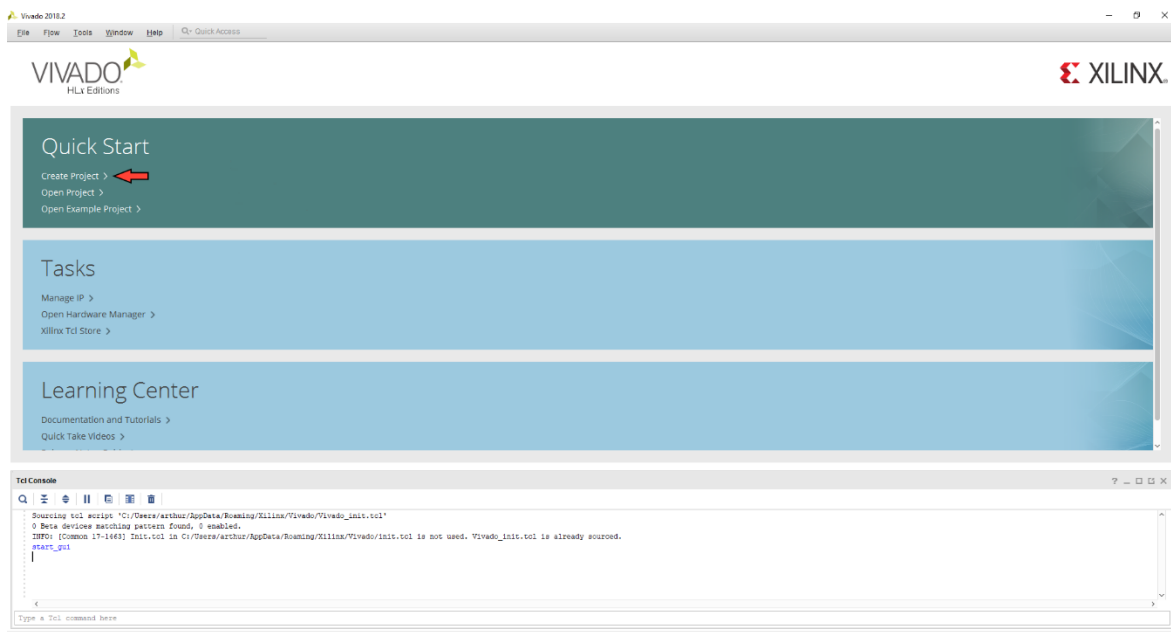

### 3.2

The text in this dialog describes the steps that will be taken to create a project. Click **Next** to continue.

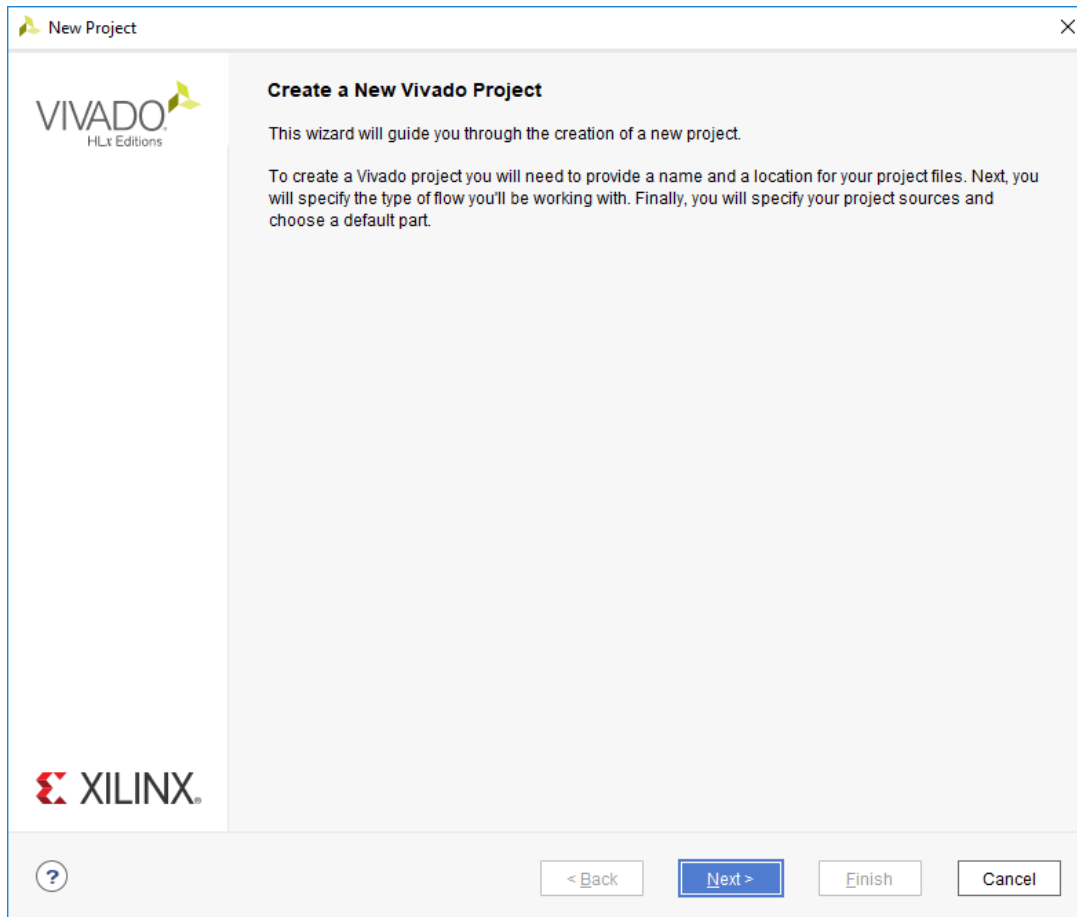

### 3.3

The first page is used to set the name of the project. Vivado will use this name when generating its folder structure.

#### **Important**

Do NOT use spaces in the project name or location path. This will cause problems with Vivado. Instead use an underscore, a dash, or [CamelCase](#).

Click **Next** to continue.

**New Project**

**Project Name**  
Enter a name for your project and specify a directory where the project data files will be stored.

Project name:

Project location:

☒ Create project subdirectory  
Project will be created at: /home/kunal/projects/adder\_example

### 3.4

Now that the project has a name and a place to save its files we need to select the type of project we will be creating. Select *RTL Project* and make sure to check the *Do not specify sources at this time* box. Source files will be added and created after the project has been created. Advanced users may use the other options on this screen, but they will not be covered in this guide.

**New Project**

**Default Part**  
Choose a default Xilinx part or board for your project.

Parts | **Boards**

[Reset All Filters](#)

Vendor:  Name:  Board Rev:

Search:  (14 matches)

Display Name	Preview	Status	Vendor	File Version	Part
PicoZed 7010 SOM + FMC Carrier V2			avnet.com	1.2	
MiniZed			avnet.com	1.2	
ZedBoard Zynq Evaluation and Development Kit Add Companion Card Connections			avnet.com	1.4	xc7
Microzed 7010			avnet.com	1.3	
Microzed 7020			avnet.com	1.2	


Catalog was last updated on 04/25/2023 3:12:32 PM

Please before selecting board please update the catalogue from repository by pressing "Refresh"

Click **Next** to continue.


### 3.5

Now it is time to choose the target device. Click the **Boards** tab at the top of the dialog, then select the target board from the list. Click **Next** to continue.

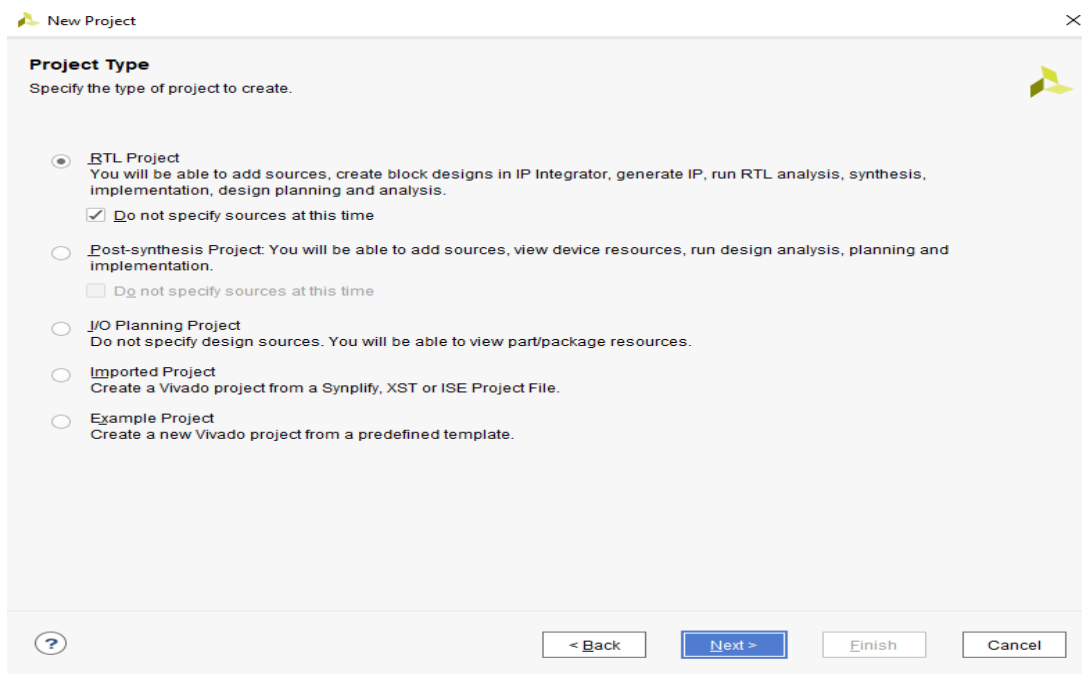

### 3.6

The next section gives a summary of the options selected throughout the wizard. Verify that the information looks correct and click **Finish**.

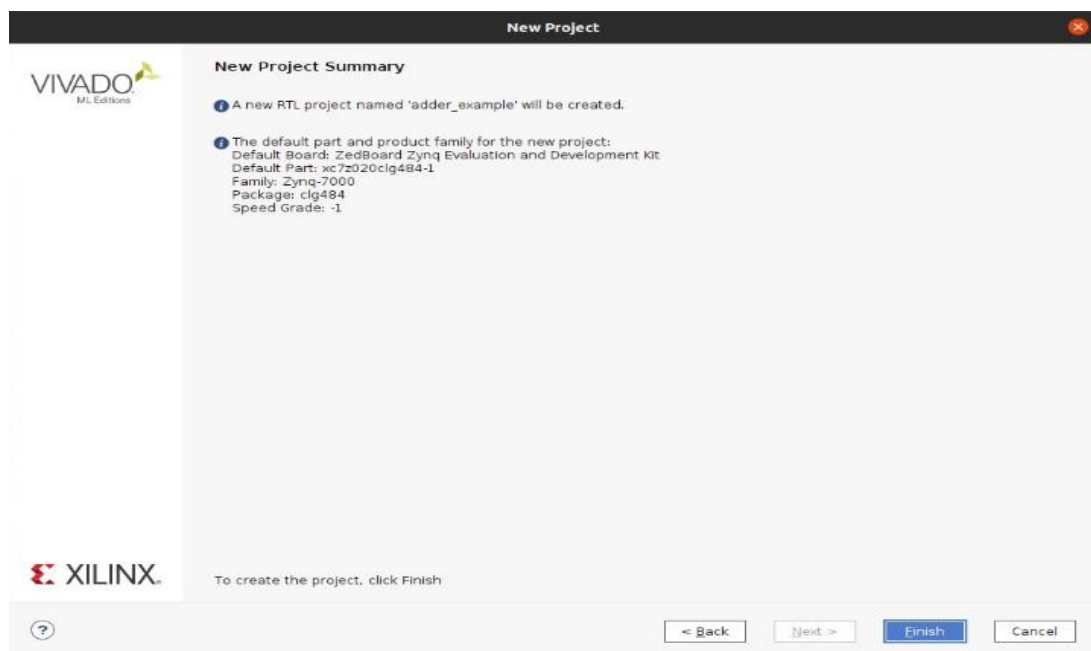




## 4. The Flow Navigator

The *Flow Navigator* is the most important pane of the main Vivado window to know. It is how a user navigates between different Vivado tools.

The Navigator is broken into seven sections:


- **Project Manager:** Allows for quick access to project settings, adding sources, language templates, and the IP catalog.
- **IP Integrator:** Tools for creating complex designs in a graphical user interface, rather than by writing large source files.
- **Simulation:** Allows a developer to verify the output of their design prior to programming the target device.
- **RTL Analysis:** Lets the developer see how the tools are interpreting their code.
- **Synthesis:** Gives access to Synthesis settings and post-synthesis reports.
- **Implementation:** Gives access to Implementation settings and post-implementation reports.
- **Program and Debug:** Gives access to settings for bitstream generation and tools to program FPGAs.

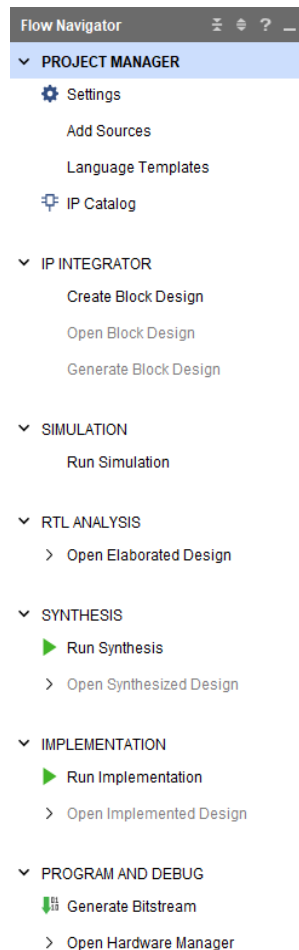


## 5. The Project Manager


This tool is where most development will occur and is the initial tool open after creating a new project.

The *Project Manager* consists of four panes, *Sources*, *Properties*, *Results*, and the *Workspace*, described below.

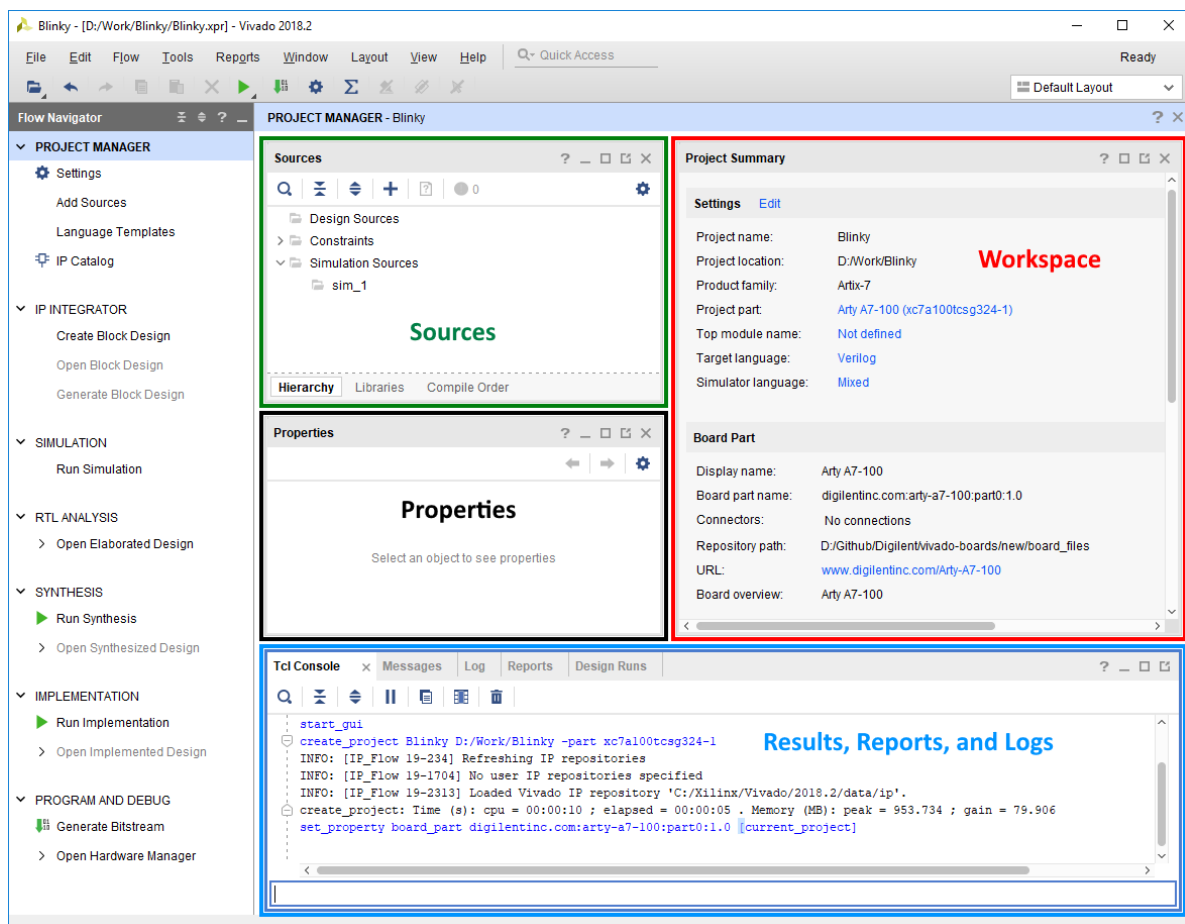


### Sources Pane

The *Sources* pane contains the project hierarchy and is used for opening up files. The folder structure is organized such that the HDL files are kept under the *Design Sources* folder, constraints are kept under the *Constraints* folder, and simulation files are kept under the *Simulation Sources* folder. Files can be opened in the Workspace by double-clicking on the corresponding entry in the Sources pane. Sources can also be added by either right clicking the folder to add the file to and selecting *Add Sources* or by clicking the *Add Sources* button (  ).

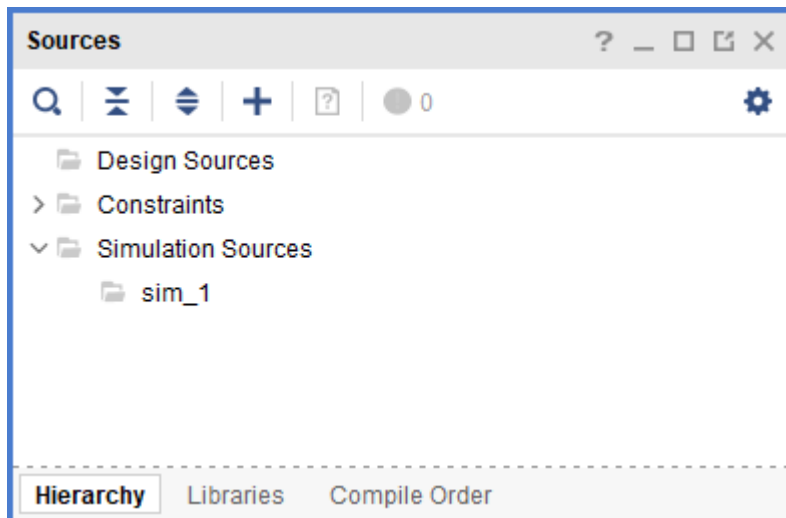

### Properties Pane


The *Properties* pane allows for viewing and editing of file properties. When a file is selected in the Sources pane its properties are shown in here. This pane can usually be ignored.

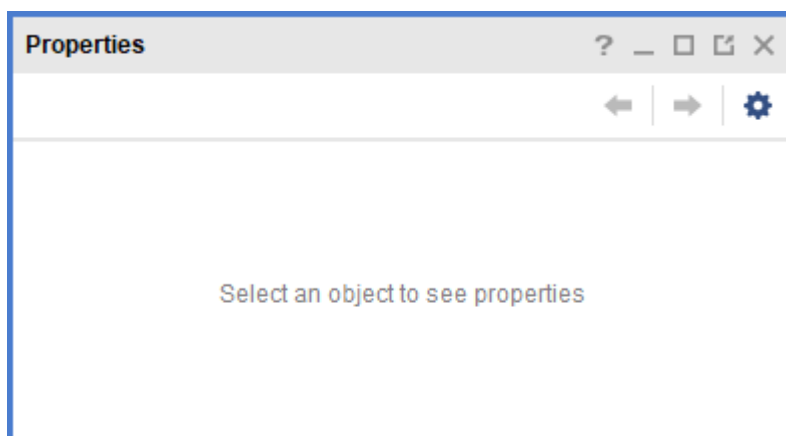

## Results, Reports, and Logs


### TCL Console Tab

The *Tcl Console* is a tool that allows running commands directly without the use of the main graphical user interface.

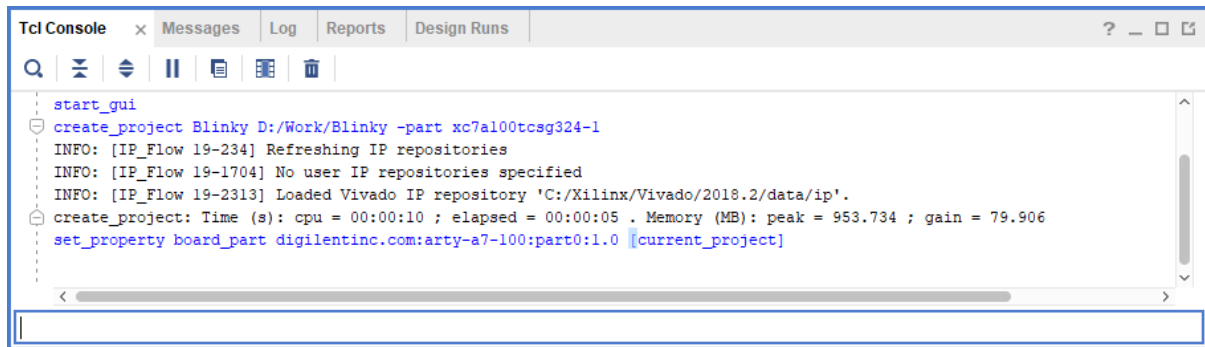


### Messages Tab

The *Messages* tab displays warnings (critical or otherwise) and errors that may occur during the process of building a project. If anything goes wrong while designing and building a project, check the Messages first. Solutions for many errors and warning can be found by right clicking on the message and selecting “Search for Answer Record”.

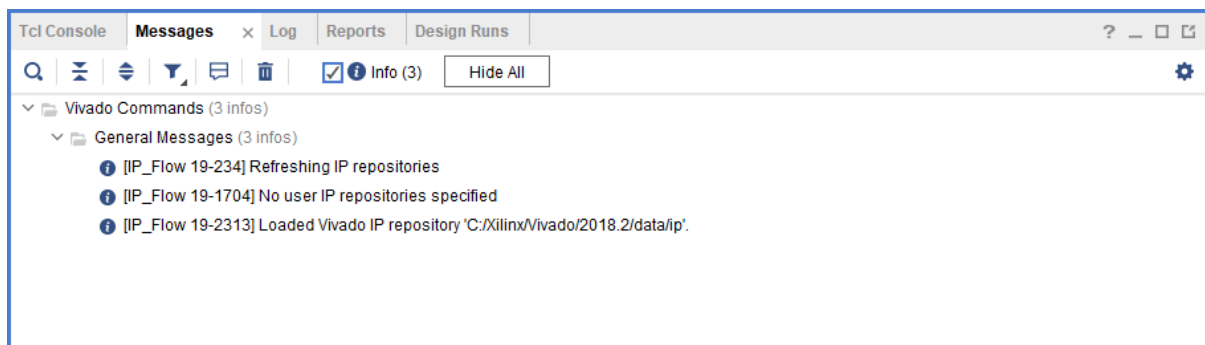


### Reports Tab

The *Reports* tool is useful for quickly jumping to any one of the many reports that Vivado generates on a design. These include power, timing, and utilization reports just to name a few.

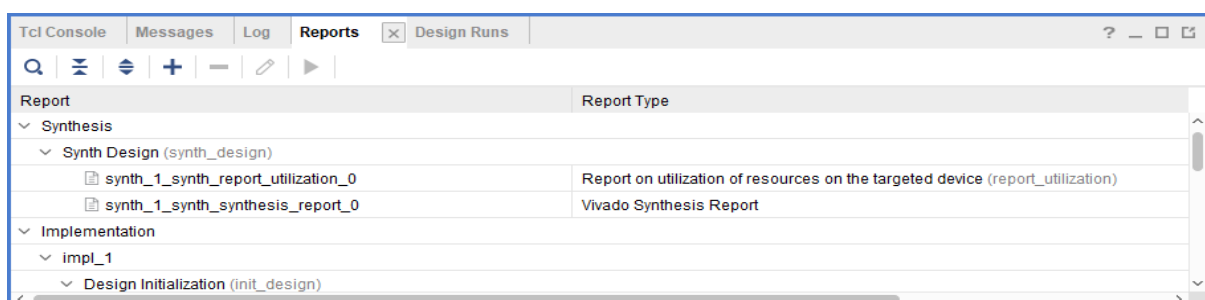


## Log Tab

The *Log* displays the output from the latest Synthesis, Implementation, and Simulation runs. Digging into this is usually not necessary as the reports and messages view store the information in the log in a more readable format.

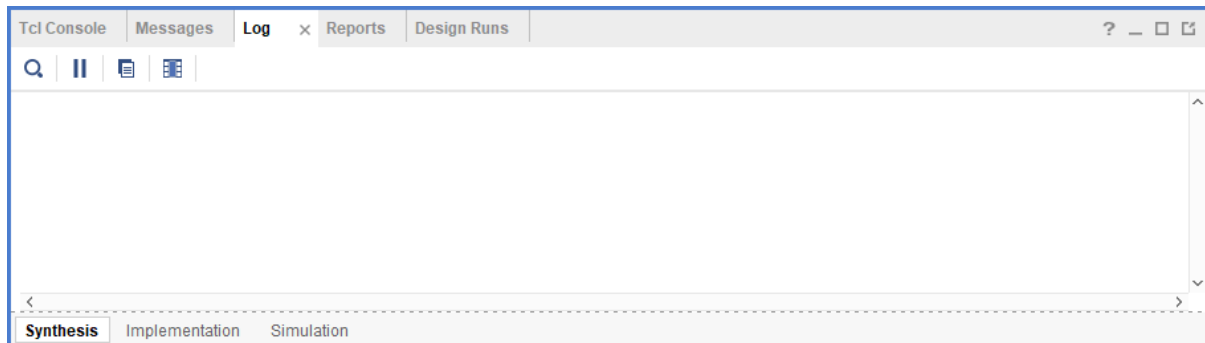


## Design Runs Tab

The last tool is the *Design Runs*. Using this tool, run settings can be edited and new runs can be created. This tool is useful when targeting multiple devices with the same design.

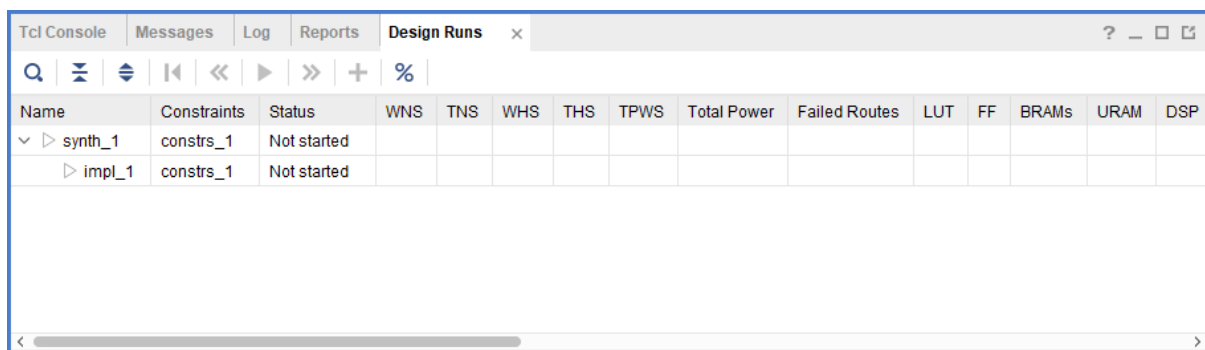

## Workspace Pane


The most important pane in the Project Manager is the *Workspace*. The *Workspace* is where reports are opened for viewing and source files are opened for editing. Initially the *Workspace* displays the *Project Summary* which show some basic information from some of the reports.

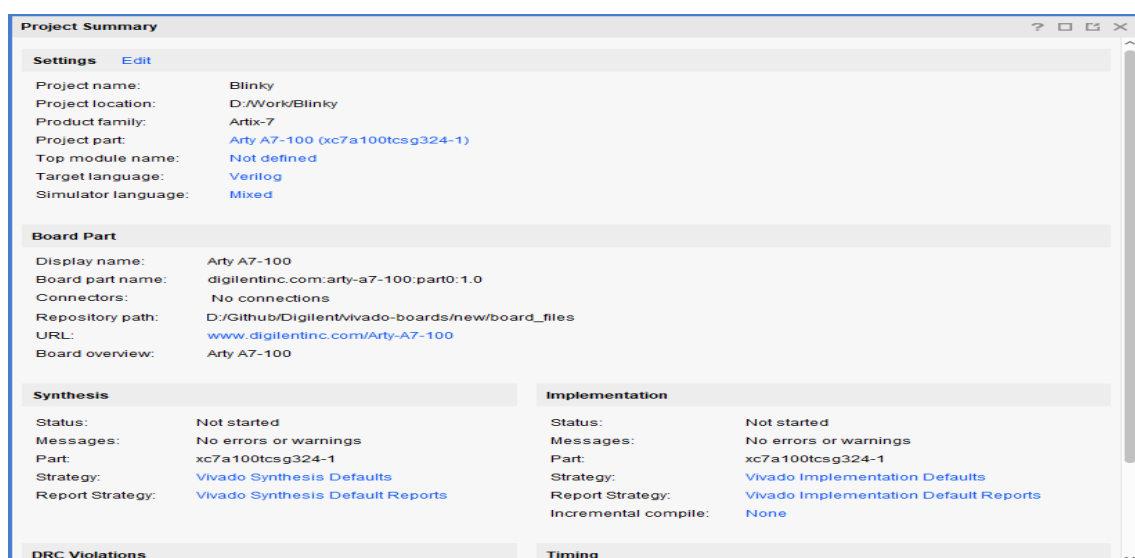


## 6. Adding a Constraint File

In order to connect the inputs and outputs of an HDL design with the physical pins of the FPGA, a constraint file needs to be added or created. Digilent has produced a Xilinx Design Constraint (XDC) file for each board. Download the [ZIP Archive](#) containing each of these master XDC files, and extract it in a memorable location.


### 6.1

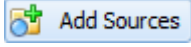In the *Project Manager* section of the *Flow Navigator*, click the  button. In the wizard that pops up, select *Add or create constraints* then click **Next**.

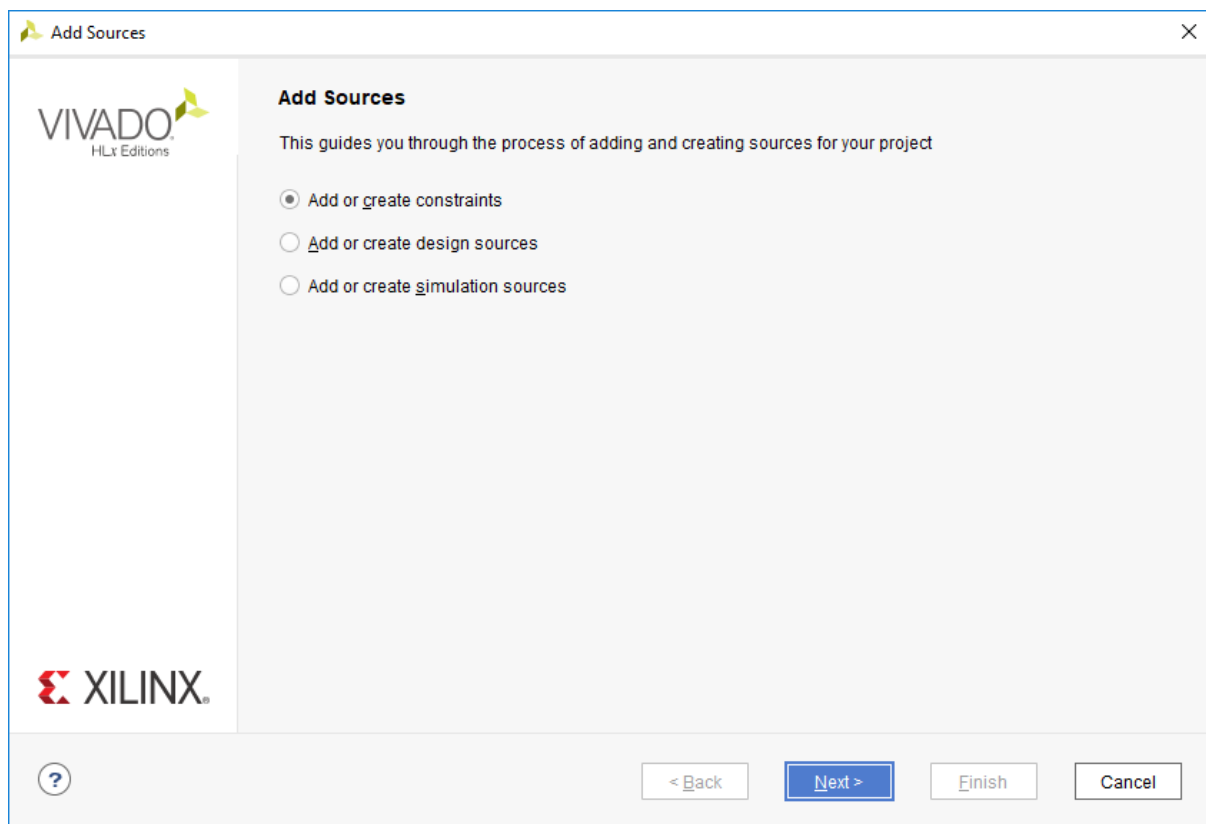

### 6.2


At this stage, Vivado provides a list of all of the constraint files that will be added or created when we click Finish. Currently this list is empty, this will change when files have been added or created. A constraint file will not be created from scratch in this guide, so click **Add Files**.

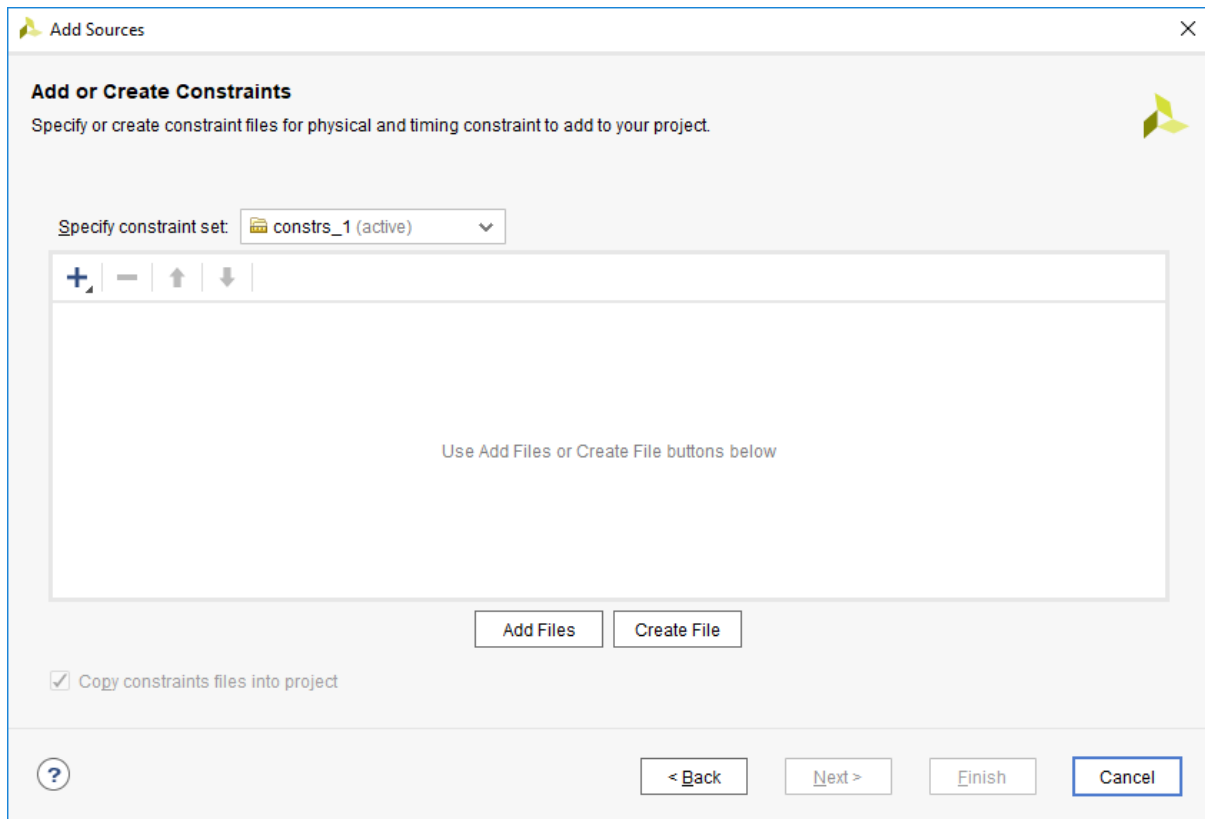

### 6.3


Find the directory the “digilent-xdc-master.zip” archive was extracted into, then click on the file for the target FPGA system board.

Click **OK** to continue.

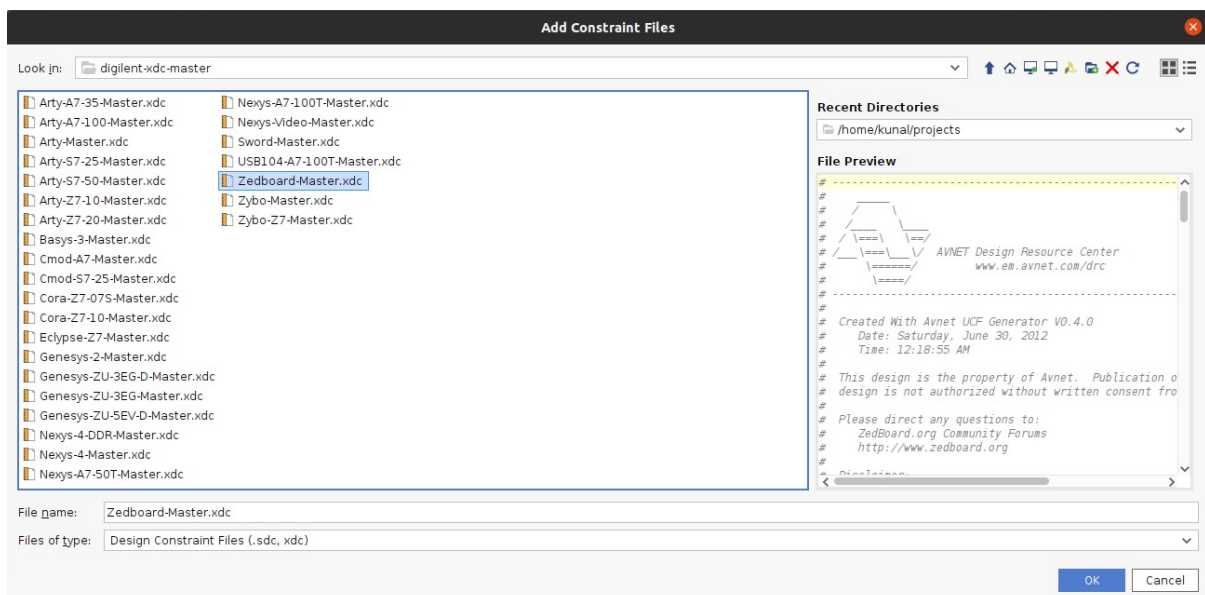

## 6.4

Make sure that the selected XDC file has been added into the list of sources. Make sure that the “Copy constraint files into project” box is checked, so that the original file will be left alone so that it can be used in other projects. Click **Finish**.

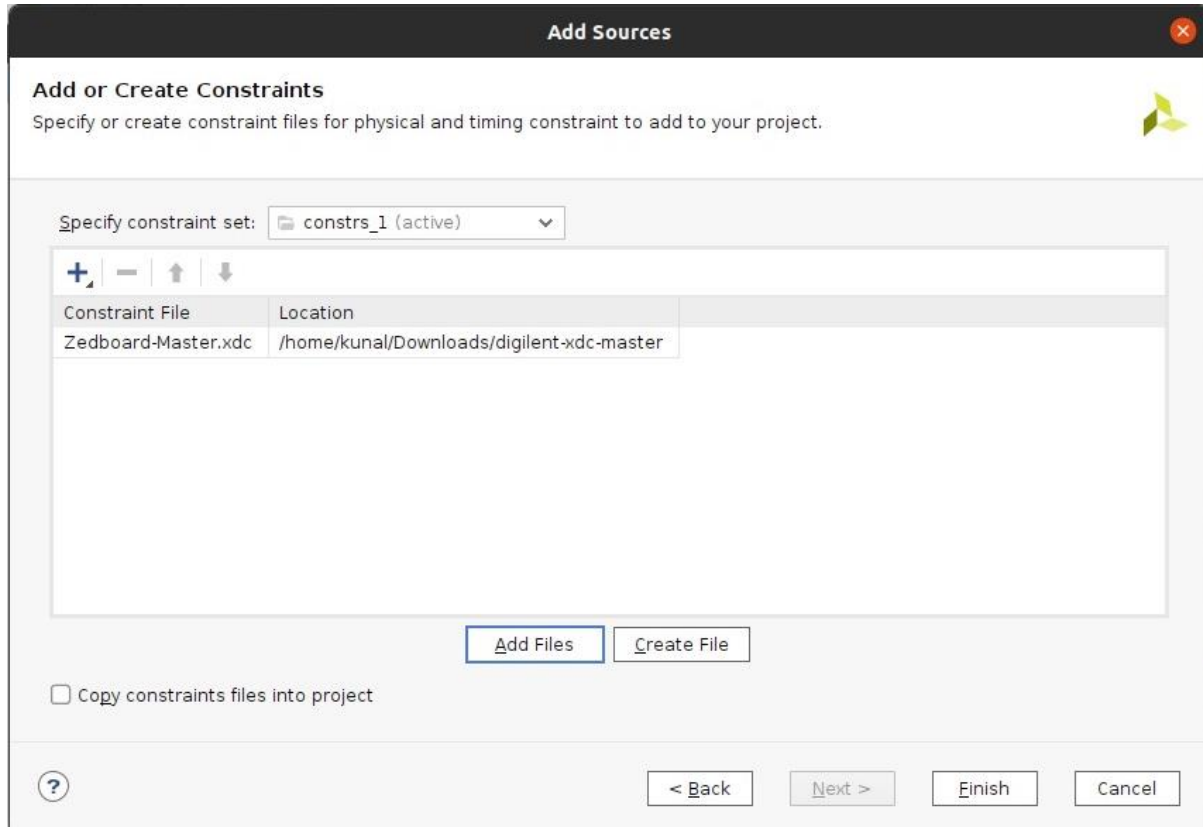



## 6.5

In the *Sources* pane of the *Project Manager*, expand the *Constraints* folder, then double click on the XDC file that was just added. Each of Digilent's XDC files contains constraints for each of the commonly used peripherals on their respective boards. For this demo, constraining the respective switches and leds is required.

Find and uncomment the lines that call *get\_ports* on the names User LEDs and User DIP Switches. Edit these lines given below in the picture

**OR** Download/Copy the lines from the following link


[https://github.com/PranavGovekar/FPGA-Workshop/blob/main/Experiment1\\_Adder\\_Verilog/adder.srscs/constrs\\_1/new/constraints.xdc](https://github.com/PranavGovekar/FPGA-Workshop/blob/main/Experiment1_Adder_Verilog/adder.srscs/constrs_1/new/constraints.xdc)

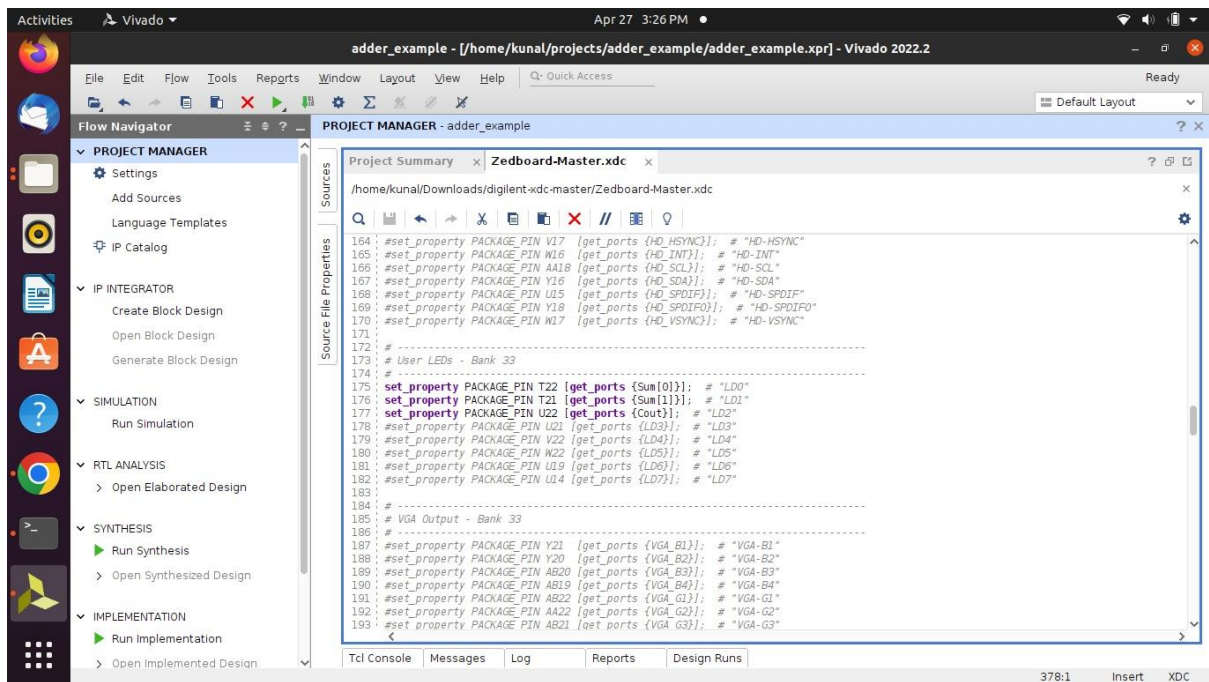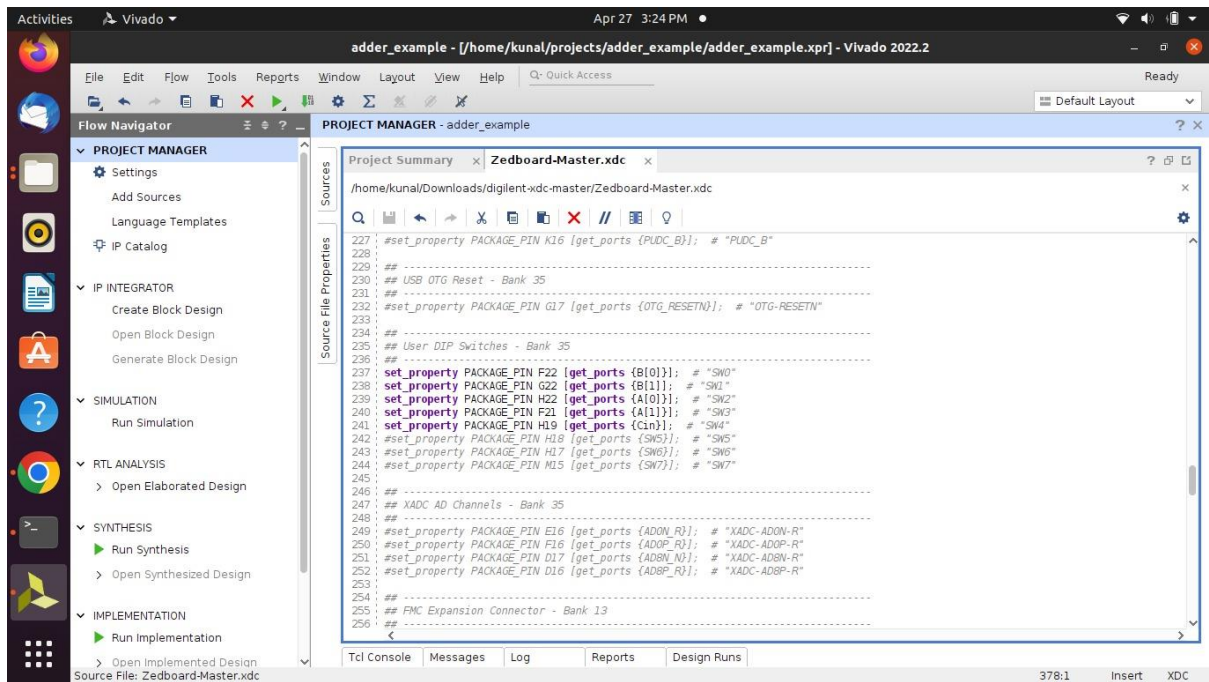




## 7. Creating a Verilog Source File

### 7.1

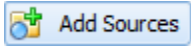In the *Project Manager* section of the *Flow Navigator*, click the  button again. Select *Add or create design sources* then click **Next**.

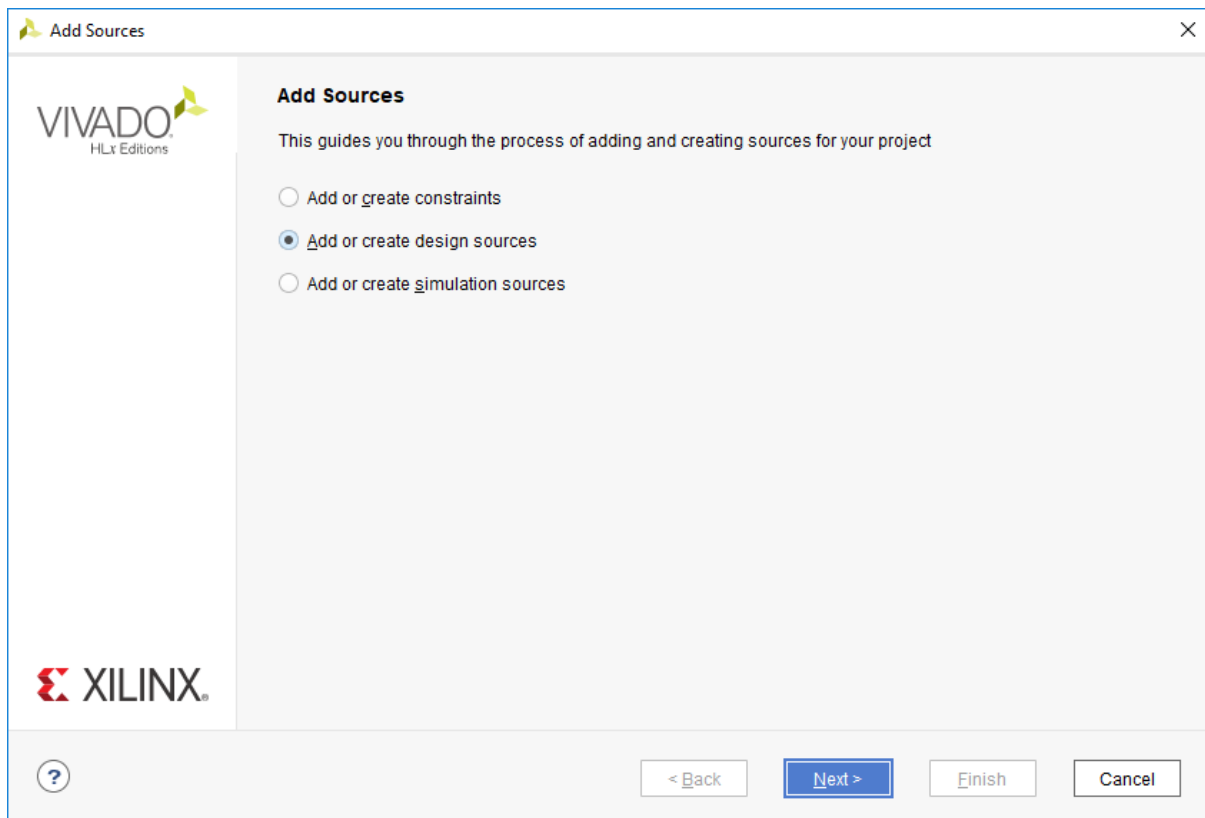


### 7.2

As before, at this stage, a list is provided of all of the source files that will be added or created when Finish is clicked. Instead of clicking Add Files, click **Create File**.

#### *Tip*

It is also possible to add existing source files in the same way as the the constraint file was added above.

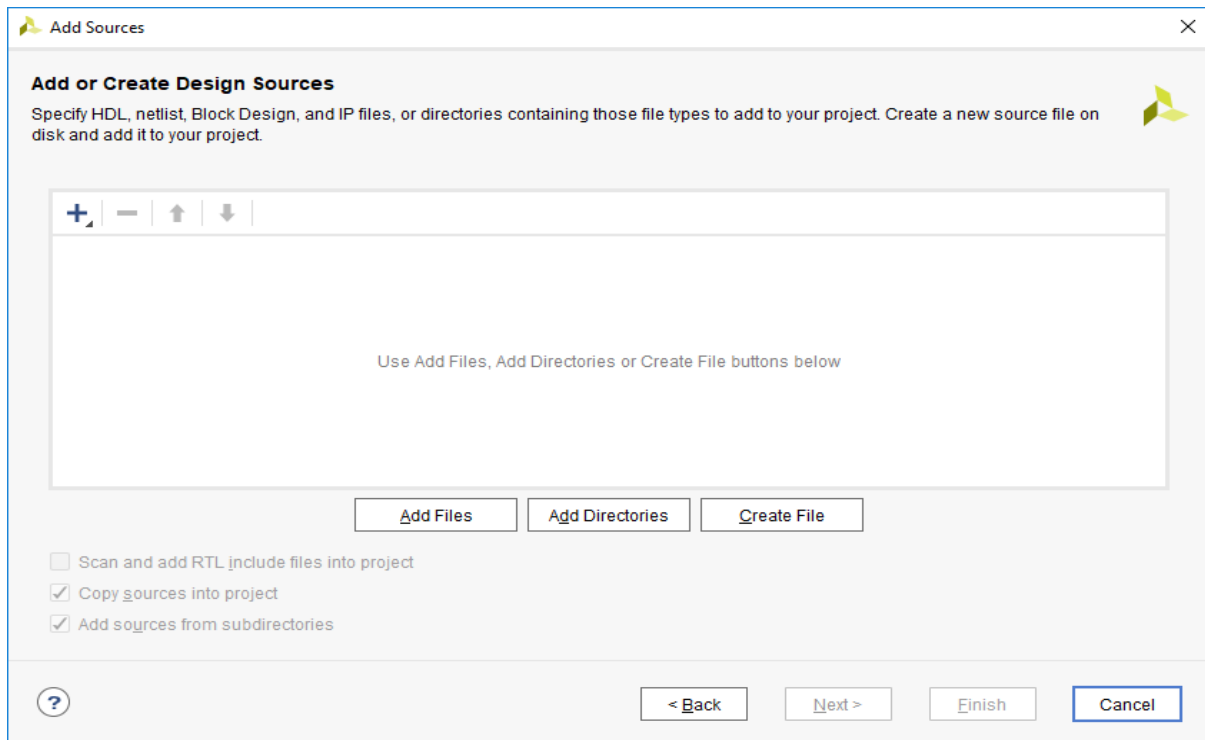


### 7.3

When prompted to select a *File type*, *File name*, and *File location*, make sure to pick *Verilog* and *<Local to project>* for the type and location. Give the file a name ending in '.v'.

#### *Important*


Do NOT use spaces in file names. This will cause problems with Vivado. Instead use an underscore, a dash, or [CamelCase](#).

Click **OK** to continue.

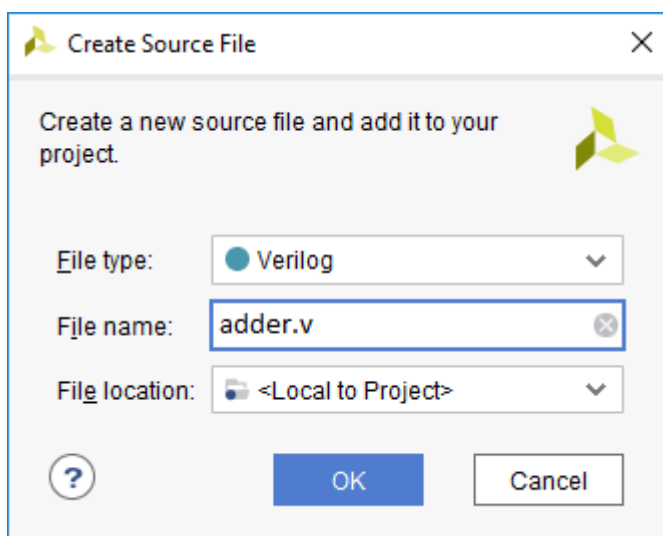


## 7.4

Make sure that the new Verilog source file has been added into the list of sources, then click **Finish**.

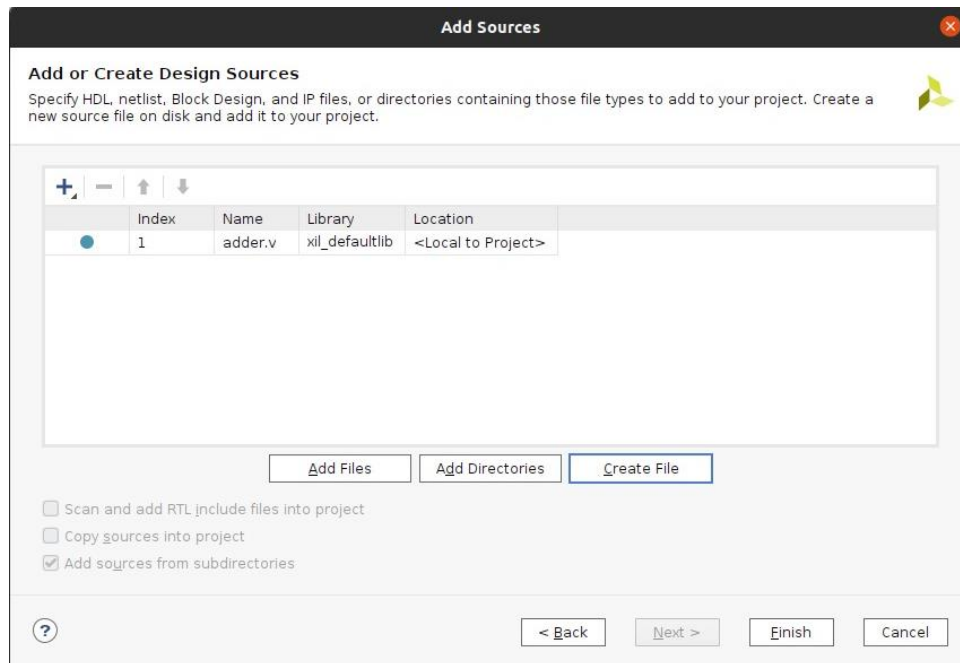

## 7.5

Unlike when the constraint file was added, at this point a *Define Module* dialog will pop up. The Verilog module can be renamed using the *Module name* field, but this is unnecessary in this instance. The Verilog module's clock and led ports need to be defined. Clicking the **Add** (+) button will add an empty slot for a port to the *I/O Port Definitions* list.

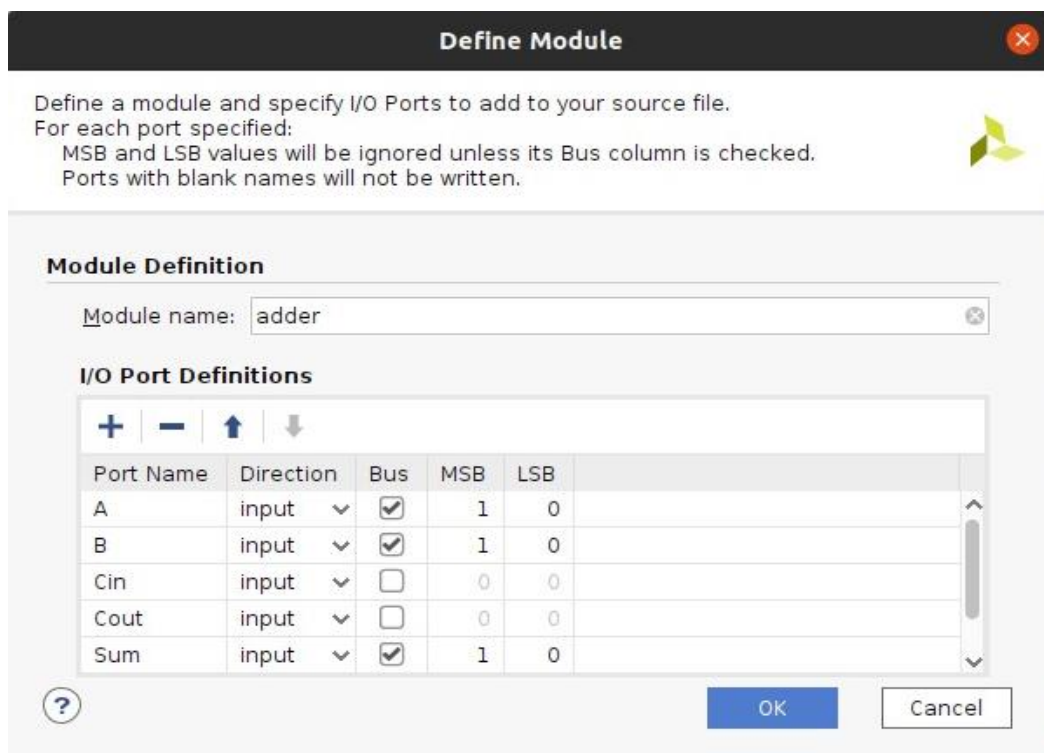

There are five fields to define for each of the module's I/O ports:

- **Port Name:** This field defines the name of the port and needs to match one of the names used in the XDC file.
- **Direction:** This drop-down menu can be set to *input*, *output*, or *inout*, defining the direction that signals propagate through the port, with respect to the Verilog module. Outputs are the signals that the module will control.
- **Bus:** This box can be checked or not; when checked, the port will consist of multiple single bit signals, grouped into a single bus.
- **MSB:** This field sets the index of the most significant bit of the port, if it is a bus. This option is grayed out for single-bit ports.
- **LSB:** This field sets the index of the least significant bit of the port, if it is a bus. This option is grayed out for single-bit ports.

### Tip


When defining a module which will be instantiated in another module, which is beyond the scope of this guide, be aware that the port names should not be declared in the XDC, this is only done for the 'top' module.

Once these two or three ports have been added, click **OK** to continue.

## 7.6

At this point, the new source file will be added to the *Design Sources* folder in the *Sources* pane of the *Project Manager*. Expand this folder and double click on the file to open it.

Next, some Verilog code needs to be written to define how the design will actually behave.

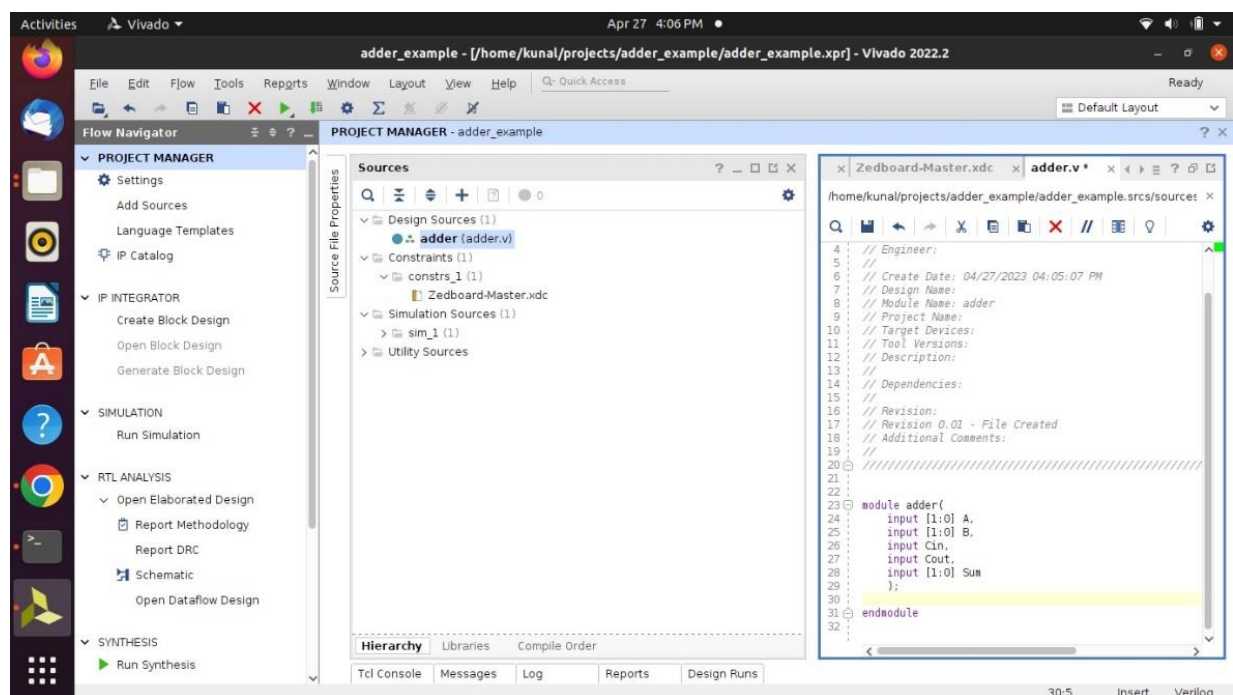
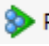



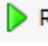
Between the ');' that comes after the module's port list and the 'endmodule' statement, add the following code:



```
assign {Cout,Sum} = A + B + Cin;
```

## 8. Synthesis, Implementation, and Bitstream Generation

In order to create a file that can be used to program the target board, each stage of the “compilation pipeline” needs to be run.

This starts with *Synthesis*. Synthesis turns HDL files into a transistor level description based on timing and I/O constraints. To run Synthesis click either  in the toolbar or  Run Synthesis in the *Flow Navigator*. The output of Synthesis is then passed to Implementation.

*Implementation* has several steps. The steps that are always run are *Opt Design* (Optimize the design to fit on the target FPGA), *Place Design* (Lay out the design in the target FPGA fabric), and *Route Design* (Route signals through the fabric). To run Implementation click either  in the toolbar or  Run Implementation in the *Flow Navigator*. This output is then passed on to the Bitstream Generator.


The *Bitstream Generator* generates the final outputs needed for programming the FPGA. To run Bitstream Generation click either  in the toolbar or  Generate Bitstream in the *Flow Navigator*. With no settings changed, the generator will create a '.bit' file, which can be used to program the design onto the target FPGA system board.

### *Bitstream Generation Completed Pop-Up*

Once the bitstream has been generated, a pop-up will appear asking what Vivado should do next. The options in this pop-up allow the user to do several different things:

- **Open Implemented Design** takes the user to a tool where they can view how the project will be programmed into the fabric of the target FPGA chip.
- **View Reports** takes the user to a list of many different reports and statistics about how the project was laid out, including information about how fast the design can potentially be run, and how much of the FPGA will be used to run the design.

- **Open Hardware Manager** takes the user to a tool that can be used to program the generated bitstream onto a connected FPGA board.
- **Generate Memory Configuration File** lets the user create a file that can be used to program a non-volatile memory part on an FPGA system board, so that the FPGA can be automatically programmed each time that the board is powered on.

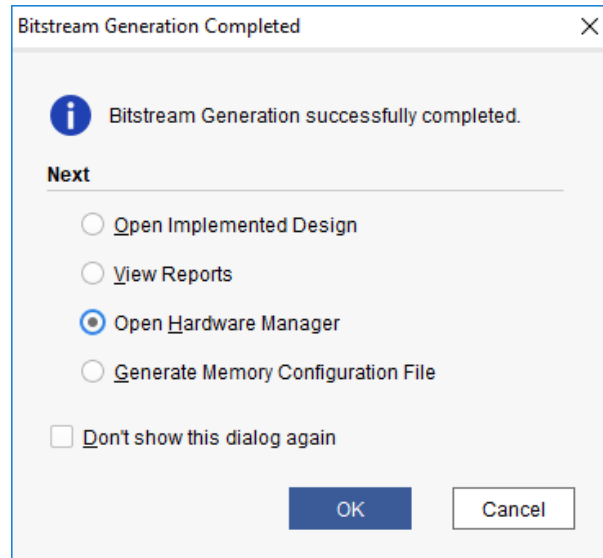

For the purposes of this guide, select *Open Hardware Manager*, then click **OK**.



## 9. The Hardware Manager

First, plug the target FPGA system board into the computer running Vivado using a MicroUSB cable capable of transferring data. With the board plugged in, it needs to be connected to the Vivado Hardware Server. There are two ways to do this through the Vivado Hardware Manager:

### 9.1(A) Open New Hardware Target


#### 9.1(A).1

The first method is to manually open the target. This is required if the hardware is connected to a computer other than the one running Vivado (outside of the scope of this guide). To get to the *Open Hardware Target* wizard either:

- Open the *Hardware Manager* and click the [Open target](#) link in the green banner at the top of the screen.
- Or click the  **Open Target** button in the *Flow Navigator* under  **Hardware Manager**.

From the drop-down that opens from either button, click  **Open New Target...**


Once the wizard opens, click **Next**.

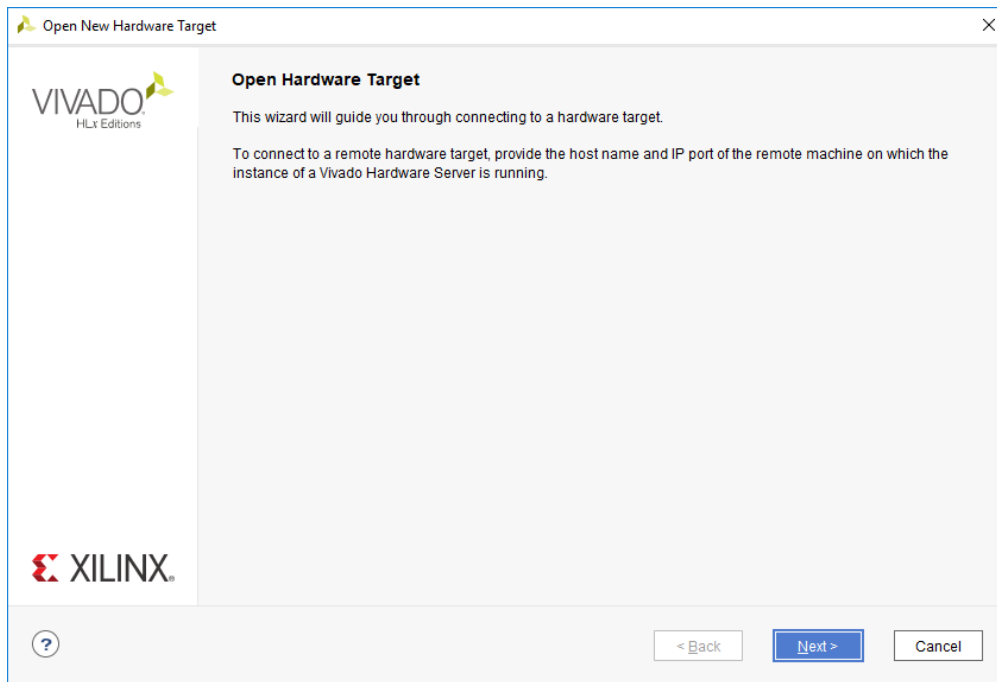

9.1(A).2

The next screen asks if the hardware server is local or remote. If the board is connected to the host computer choose local, if it is connected to another machine choose remote and fill in the *Host Name* and *Port* fields.


Click **Next** to continue.

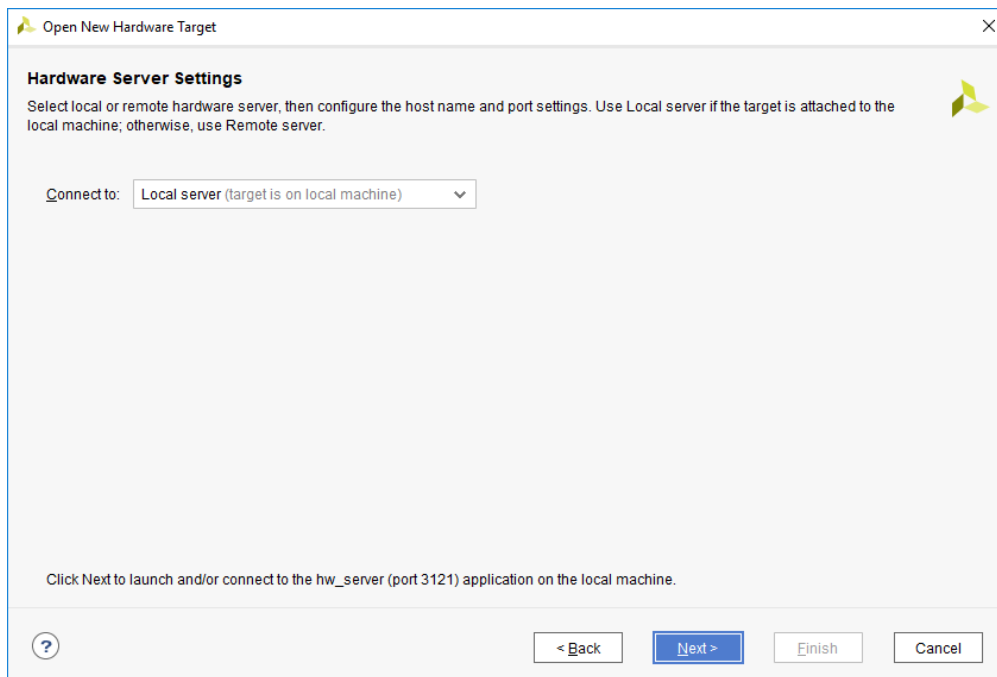

### 9.1(A).3

This screen gives a list of devices connected to the hardware server. If there is only one connected it should be the only device shown. If there are multiple connected devices, determine the serial number of the device to connect to and find it in the list.

Click **Next** to continue.

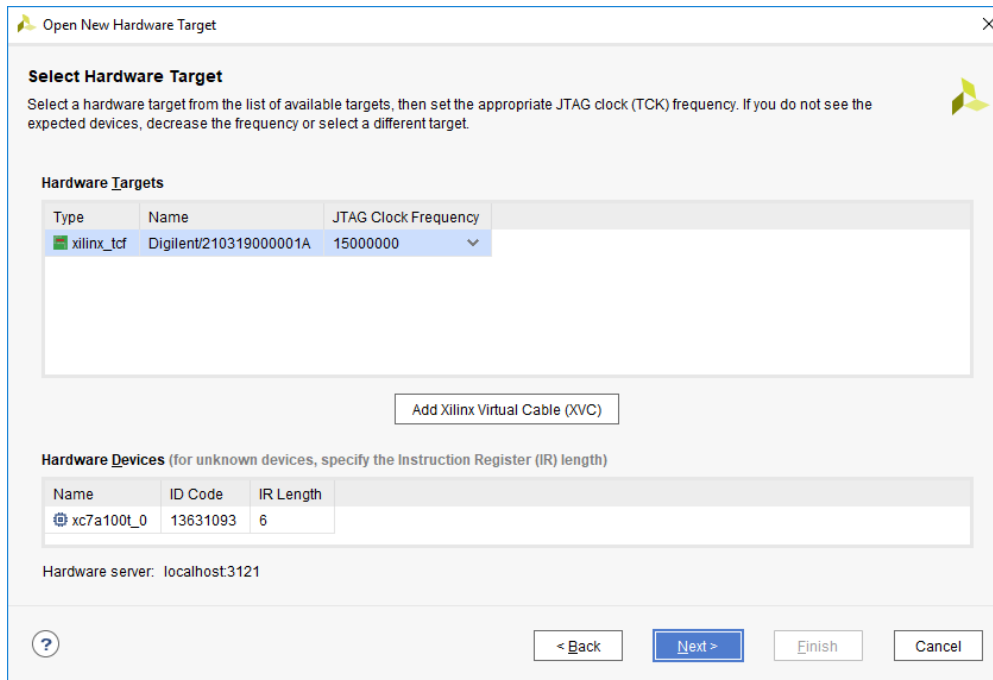


The dialog box titled "Open New Hardware Target" contains the following elements:

- Select Hardware Target**: A section with instructions to select a hardware target and set the JTAG clock frequency.
- Hardware Targets**: A table with columns "Type", "Name", and "JTAG Clock Frequency". It lists one target: "xilinx\_tcf" with name "Digilent/210319000001A" and frequency "15000000".
- Add Xilinx Virtual Cable (XVC)**: A button below the table.
- Hardware Devices**: A section with instructions to specify the Instruction Register (IR) length for unknown devices. It contains a table with columns "Name", "ID Code", and "IR Length", listing "xc7a100t\_0" with ID code "13631093" and IR length "6".
- Hardware server**: A label showing "localhost:3121".
- Navigation**: Buttons for "< Back", "Next >", "Finish", and "Cancel".

### 9.1(A).4

The final screen shows a summary of the options selected in the wizard. Verify the information and click **Finish**. The board is now connected to the hardware manager.

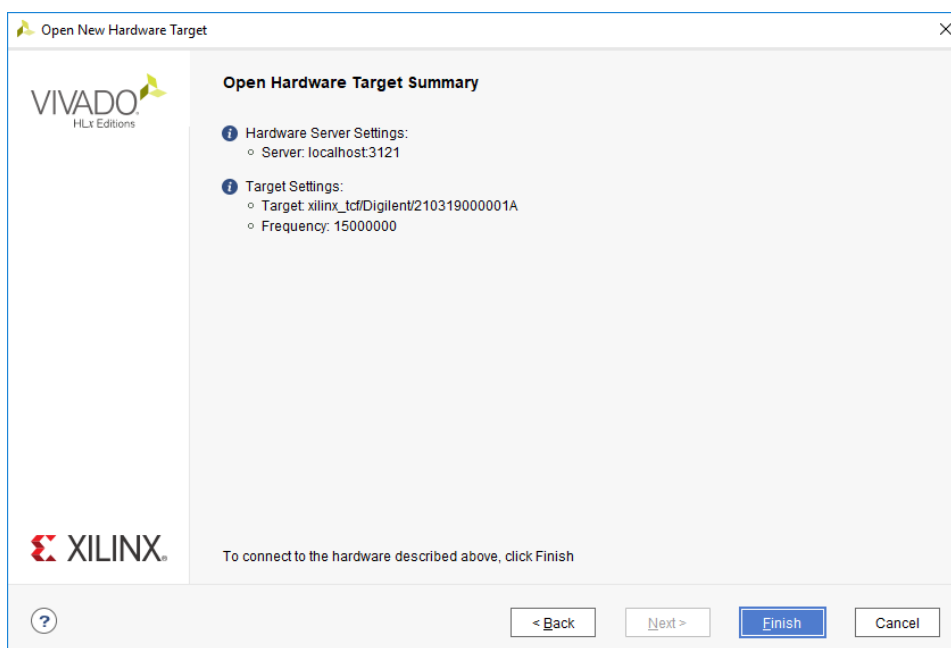




The dialog box titled "Open Hardware Target Summary" displays the following information:


- VIVADO HLx Editions** and **XILINX** logos on the left.
- Open Hardware Target Summary**: A section with two main categories:
  - Hardware Server Settings**:
    - Server: localhost:3121
  - Target Settings**:
    - Target: xilinx\_tcf/Digilent/210319000001A
    - Frequency: 15000000
- Instructions**: A message at the bottom stating "To connect to the hardware described above, click Finish".
- Navigation**: Buttons for "< Back", "Next >", "Finish", and "Cancel".



### 9.1(B) Auto-Connect

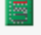


The second method is to automatically open the target. To get to the  **Auto Connect** button either:


- Open the Hardware Manager and click the **Open target** link in the *green banner* at the top of the window
- Or click the  **Open Target** button in the *Flow Navigator* under  **Hardware Manager**.



From the drop-down that opens from either button click  **Auto Connect**. Vivado will attempt to find a hardware server running on the local machine and will connect to the device from the server.

---

### 9.2 Programming

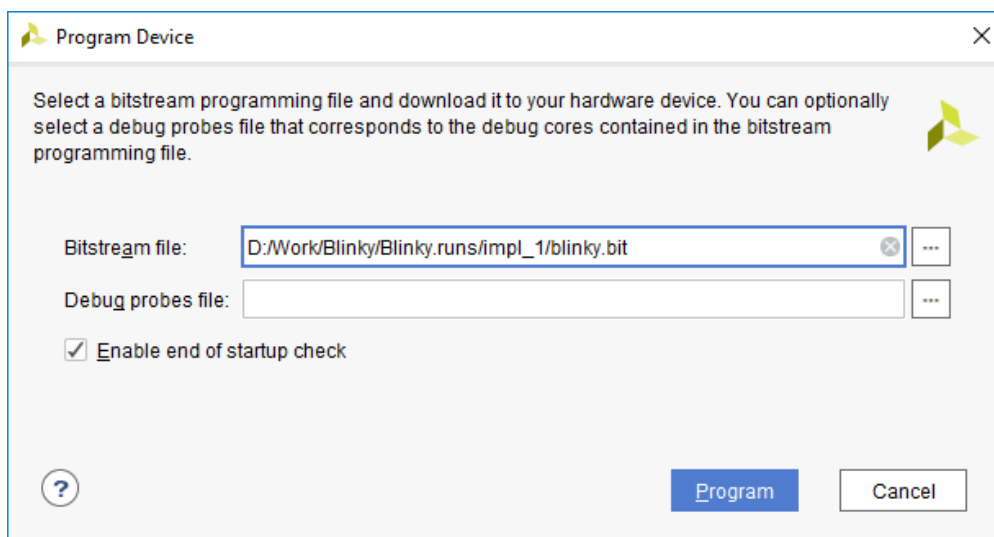To program the device with the bit file generated earlier, either click the **Program device** link in the *green banner* at the top of the window or click the  **Program Device** button in the *Flow Navigator* under  **Hardware Manager**. From the drop-down that opens, select the device to program (Example:  xc7a35t\_0 ) and the following window will open:



The *Bitstream File* field should be automatically filled in with the bit file generated earlier. If not, click the  button at the right end of the field and navigate to `<Project Directory>/<Project Name>.runs/impl_1/` and select the bit file (Example:  **top.bit**). Now click **Program**. This will connect to the board, clear the current configuration, and program using the new bit file.

## 10. Finished!

Now you can verify the design by turning on the switches and getting the corresponding output on the leds!