

# Integrating the MPC5744P and MC33907/08 for Safety Applications

by: Tomas Kulig

## 1. Introduction

This application note provides design guidelines for integrating the Freescale MPC5744P microcontroller unit (MCU) and Freescale MC33907/08 System Basis Chip in automotive electric and electronic systems that target the ISO 26262 functional safety standard. It provides an overview of the MPC5744P and the MC33907/08 feature set and covers the functional safety requirements that are satisfied to achieve ASIL D level of safety. Integrating the MPC5744P and MC33907/08 in a system provides many advantages to the customers.

Freescale's ISO 26262 solutions, that form part of the Freescale SafeAssure program, help system manufacturers to easily achieve system compliance with functional safety standards by simplifying the system architecture.

## Contents

1.	Introduction	1
2.	MPC5744P Overview	2
2.1.	Safety concept	2
2.2.	Power supply requirements	2
2.3.	Communication interfaces	3
2.4.	Fault Collection and Control Unit (FCCU)	3
3.	MC33907/08 features	3
3.1.	Voltage regulators	4
3.2.	Built-in CAN transceiver	6
3.3.	Built-in LIN transceiver	6
3.4.	Watchdog function	7
3.5.	Fail safe machine	7
3.6.	Error indication	7
3.7.	Analog multiplexer	7
3.8.	Low power OFF mode – LPOFF sleep	8
4.	MPC5744P and MC33907/08 alignment	8
4.1.	MC33907/08 power supply	9
4.2.	Ground separation	16
4.3.	Power-up sequence	17
4.4.	CAN connectivity	19
4.5.	LIN connectivity	19
4.6.	SPI connectivity	20
4.7.	Error management connectivity	20
5.	MPC5744P safety requirements	22
5.1.	Power supply and monitor	22
5.2.	External watchdog	23
5.3.	Error output monitor	27
5.4.	Functional and Destructive Reset Escalation	27
6.	Conclusion	28
7.	Reference	28

## 2. MPC5744P Overview

This section describes the MPC5744P features that are of interest when integrating the device with the MC33907/08.

### 2.1. Safety concept

The MPC5744P is built around e200z425n3 dual issue core Sphere of Replication (SoR) safety platform with a safety concept targeting ISO 26262 ASIL D integrity level. In order to minimize additional software and module level features to reach this target, on-chip redundancy is offered for the critical components of the MCU:

- CPU core
- DMA controller
- Interrupt controller
- Crossbar bus system
- Memory Protection Unit (MPU)
- Flash memory and RAM controllers
- Peripheral bridges
- System timers
- Watchdog timer
- Register protection

A Redundancy control and checker unit (RCCU) is implemented at each output of this SoR. ECC is available for on-chip RAM and flash memories. The programmable Fault Collection and Control Unit (FCCU) monitor the integrity status of the device and provide flexible safe state control.

### 2.2. Power supply requirements

The device requires nominal 3.3 V power supply for all of the modules besides Core and Reference voltage for ADC. The reference voltage for ADC range from 3.15 V to 5.5 V (MC33907/08 has two fixed voltages: 3.3 V or 5.0 V). The Core voltage supplies can be generated by on-chip voltage regulator (voltage supply are not under user control) or by external regulator. All I/Os are at same voltage as external supply (3.3 V nominal).

See [Table 1](#) for the list of MPC5744P power supplies.

Table 1. **MPC5744P supplies (3.3 V and 5 V)**

MPC5744P Supplies		Minimum	Maximum	Unit
VDD_HV_PMU	3.3 V regulator supply	3.15	3.6	V
VDD_HV_IOx	3.3 V I/O supply			
VDD_HV_FLA0	3.3 V Flash supply			
VDD_HV_OSC	3.3 V oscillator supply			
VDD_HV_ADV0/1	3.3 V ADC supply			
VDD_HV_ADx_VDDE/	ADC reference $T_j \leq 150^{\circ}\text{C}$	3.15	5.5	
VDD_HV_ADREx <sup>1</sup>	ADC reference $150^{\circ}\text{C} < T_j < 165^{\circ}\text{C}$	3.15	5.25	

1. The user may select each voltage between Minimum and Maximum as the ADC reference voltage. Full functionality cannot be guaranteed when the voltage drops below the minimum value.

## 2.3. Communication interfaces

There are three serial communication interfaces which are used together with MC33907/08: FlexCAN, LINFlexD (UART), and Deserial/Serial Peripheral Interface (DSPI).

The FlexCAN module is a communication controller implementing the CAN Protocol Specification version 2.0B.

The LINFlexD module supports LIN Master mode, LIN Slave mode and UART mode. The LIN state machine is compliant to LIN 1.3, 2.0, 2.1 and 2.2 specifications.

DSPI module provides a synchronous serial bus for communication between the MCU and external peripheral devices, for example, the MC33907/08.

## 2.4. Fault Collection and Control Unit (FCCU)

The Fault Collection and Control Unit (FCCU) offer a hardware channel to collect errors and to place the device into a safety state when a failure in the device is detected. CPU intervention is not requested for collection and control operation.

The FCCU also has configurable and graded fault control with both internal reaction (no reset reaction, IRQ, Short Reset, Long Reset or NMI) and external reaction (failure is reported to the outside world via one or more output pins). The external reaction via output pins is the aspect of interest when integrating with MC33907/08.

# 3. MC33907/08 features

The MC33907/08 devices are multi-output, power supply, integrated circuit, including HSCAN, LIN (MC33907L and MC33908L) transceivers and dedicated to the automotive market.

Multiple switching and linear voltage regulators, including low power mode are available with various wake-up capabilities. An advanced power management scheme is implemented to maintain high efficiency over wide input voltages and wide output current ranges.

The MC33907/08 devices include enhanced safety features, with multiple fail-safe outputs, becoming a full part of a safety oriented system partitioning, to reach a high integrity safety level.


The MC33907/08 devices simplify system implementation by providing the ISO 26262 system solutions and documentation to save customer cost and complexity through an optimized interfacing with an MCU. This device also reduces system complexity and increases functional robustness offering excellent EMC and ESD performances.

### 3.1. Voltage regulators

The MC33907/908 voltage regulators block diagram is shown in [Figure 1](#) and the voltage  $V_{PRE}$  is in the [Table 2](#).

Table 2.  $V_{PRE}$  voltage ranges

Mode	$V_{SUP}[V]$	$V_{PRE}[V]$
Buck	$> V_{SUP\_UV\_7}$	$6.25 \div 6.75$
	$V_{SUP\_UV\_7} \geq \dots \geq 4.6$	$V_{PRE\_UV4P3} \div (V_{SUP} - R_{DS(on)\_PRE} * I_{PRE})$
Buck-Boost	$> V_{SUP\_UV\_7}$	$6.25 \div 6.75$
	$V_{SUP\_UV\_7} \geq \dots \geq 2.7$	$6.00 \div 7.00$

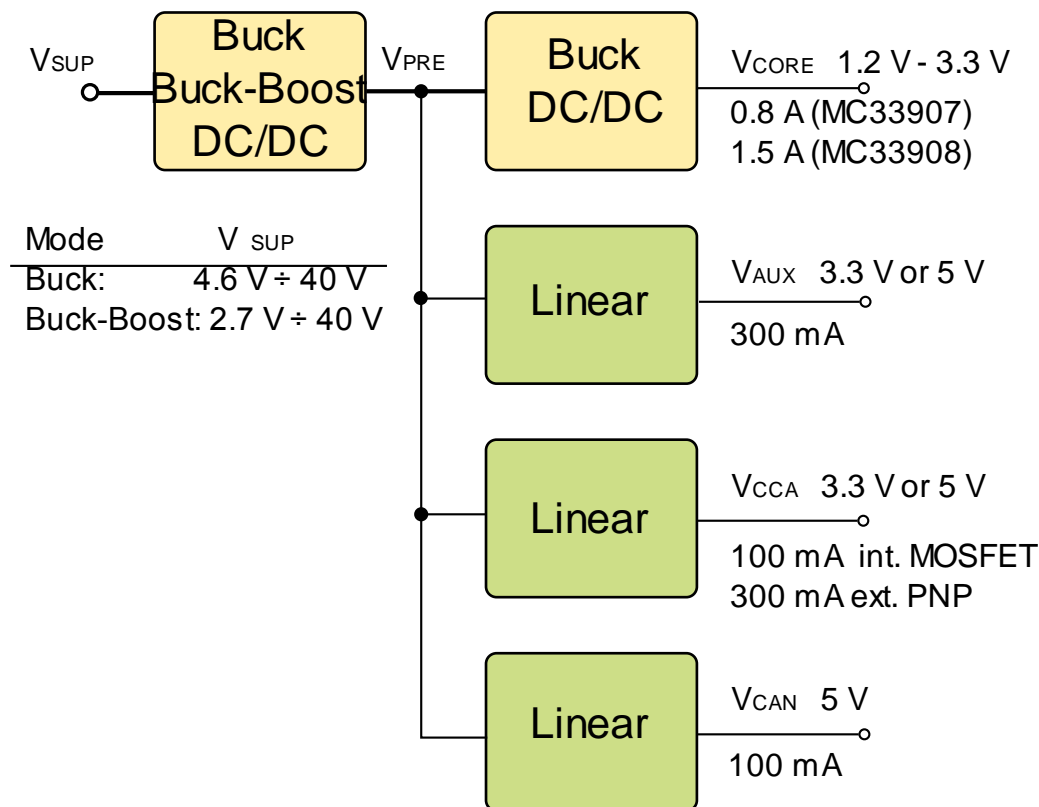

**Figure 1. Voltage regulators of MC33907/MC33908**

- V<sub>pre</sub> VOLTAGE PRE-REGULATOR**

The V<sub>pre</sub> voltage pre-regulator is a flexible switched-mode power supply (SMPS). The SMPS pre-regulator can be configured in two topologies: Non-inverting buck-boost or standard buck configuration depending on the external configuration. The configuration is detected automatically during start-up sequence – see DS for more information. The output voltage V<sub>pre</sub> is regulated in the ranges which depend on the V<sub>SUP</sub> voltage and used mode of pre-regulator, see figure 1. The output current capability is up to 2 A. The SMPS pre-regulator also keeps power dissipation down and eliminates the need for bulky heat sinks compared to linear regulators.

- V<sub>core</sub> VOLTAGE REGULATOR**

The V<sub>core</sub> voltage regulator is a step-down DC-DC converter with a PWM frequency of 2.4 MHz. The high-side MOSFET is integrated in the device. The output voltage is configurable from 1.2 V to 3.3 V range through the external resistor divider (with 1% accuracy resistors recommended) connected between V<sub>core</sub> and the feedback pin. The MPC5744P core voltage can be set either 1.2 V (MPC5744P is in external regulator mode) or 3.3 V (MPC5744P is in internal regulator mode). The accuracy is  $\pm 2\%$  without the external resistors included. The output current is up to 1.5 A for the MC33908 and up to 0.8 A for the MC33907. The stability of the overall converter is done by an external compensation network connected to the pin COMP\_CORE.

- **V<sub>cca</sub> VOLTAGE REGULATOR**

The V<sub>cca</sub> linear voltage regulator is mainly dedicated to supply the MCU I/Os, especially the ADC. The output voltage is selectable at 5 V or 3.3 V. The accuracy is  $\pm 1\%$  for 5 V and  $\pm 1.5\%$  for 3.3 V when the output current capability is 100 mA with the internal MOSFET transistor. An external PNP transistor can be used to boost the current capability to 300 mA, with reduced output voltage accuracy to  $\pm 3\%$ . The PNP connection is detected automatically during the start-up sequence of the MC33907/08.

- **V<sub>aux</sub> VOLTAGE REGULATOR**

The V<sub>aux</sub> auxiliary voltage regulator is a dedicated supply for additional devices in the ECU or for sensors outside the ECU. The V<sub>aux</sub> output voltage is selectable between 5 V and 3.3 V. The accuracy is  $\pm 3\%$  and an external PNP transistor must be used because there is not internal current capability. The output current is up to 300 mA.

- **5V-CAN VOLTAGE REGULATOR**

The V<sub>can</sub> is a linear voltage regulator fully dedicated to the embedded HSCAN interface. The output current capability is up to 100 mA.

### 3.2. Built-in CAN transceiver

The built-in enhanced high speed CAN interface fulfills the ISO11898-2 and -5 standards. Local and bus failure diagnostics, protection and fail safe operation mode are provided. The HSCAN exhibits also wakeup capability with a very low current consumption.

### 3.3. Built-in LIN transceiver

This section applies to MC33907L and MC33908L versions. The LIN interface fulfills LIN protocol specifications 1.3, 2.0, 2.1, 2.2, and SAEJ2602-2. LIN interface can be used as a wake-up source. The device has two selectable baud rates: 20 kbit/s for Normal Baud rate and 10 kbit/s for slow baud rate. An additional fast baud rate (100 kbit/s) is implemented. It can be used to flash the MCU or in the garage for diagnostic. The LIN Consortium specification does not specify electrical parameters for this baud rate. The communication only must be guaranteed. In LPOFF mode, the LIN transistor is OFF, and this pin is pulled up to VSUP3. LIN has integrated ESD protection and extremely high robustness versus external disturbance, such as EMC and electrical transients

#### NOTE

MC33907/08L has LIN driver and MC33907/08 do not have. Refer to the datasheet of the System Basis Chip device if the LIN driver is available on the part.

### 3.4. Watchdog function

A windowed watchdog is implemented in the MC33907/08 and is based on “question/answer” principle. The watchdog must be continuously triggered by the MCU in the open watchdog window, otherwise an error is generated.

### 3.5. Fail safe machine

To fulfill the safety critical applications, a dedicated Fail Safe Machine (FSM) is provided. The FSM is composed of 3 main sub-blocks:

- Voltage Supervisor (VS)
- Fail Safe State Machine (FSSM)
- Fail Safe Output driver (FSO)

The FSM is as independent as possible from the rest of the circuitry to avoid common cause failure. For this reason, the FSM has its own voltage regulators (analog and digital), dedicated bandgap and oscillator. Moreover, this block is also, physically, as much independent as possible from the rest of the circuitry by doing dedicated layout and placement. There are two fail-safe outputs: RSTB (asserted low to reset the MCU) and FS0B (asserted low to control any fail-safe circuitry).

### 3.6. Error indication

Digital inputs are available for monitoring the MCU error signals as well as for error handling of external ICs.

### 3.7. Analog multiplexer

The analog multiplexer allows multiplexing of the following voltages to be output from the MC33907/08 and input to one of the MCU's ADC channel. The MCU can use the information for monitoring purposes. The multiplexer output is selected by SPI interface as well as the range of the multiplexer (tight or wide).

- 2.5 V Internal reference voltage with a  $\pm 1$  % accuracy
- Battery sense
- Analog inputs IO\_0 and IO\_1
- Die temperature sensor

The battery sense and IO\_0 and IO1 analog pins are not connect directly to the analog multiplexer but via resistor dividers. There are 4 dividers available for each of them. The selection of used divider depends on the VDDIO voltage value and on the set up range (wide or tight). See the [Figure 2](#) for more information.

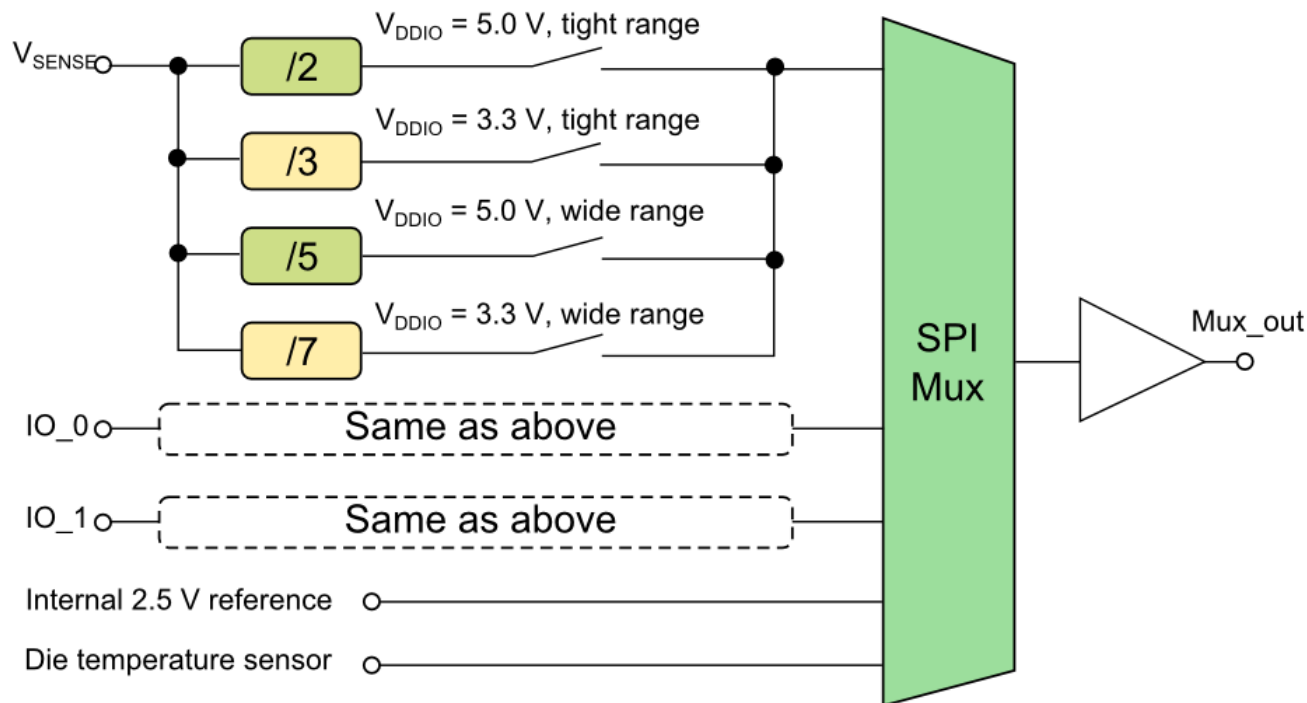


Figure 2. Simplified analog multiplexer block diagram

### 3.8. Low power OFF mode – LPOFF sleep

Entering in Low Power mode OFF - SLEEP is only available if the product is in Normal mode by sending a secured SPI command. In this mode, all the regulators are turned OFF and the MCU connected to V<sub>CORE</sub> regulator is unsupplied. Once the MC33907/08 is in LPOFF SLEEP, the device monitors external events to wake-up and leave the Low Power mode. The wake-up events can occur and depending of the device configuration from:

- CAN
- LIN
- I/Os inputs

When a wake-up event is detected, the device starts the main state machine again by detecting the V<sub>PRE</sub> configuration (BUCK or BUCK-BOOST), the wake-up source is reported to the dedicated SPI register, and the Fail-safe state machine is also restarted.

Finally, after the wake-up event, the regulators are turned ON and the MCU operation restarts and the initialization phase is accessible again.

## 4. MPC5744P and MC33907/08 alignment

A typical application that integrates the MPC5744P with the MC33907/08 is shown in Figure 3. The MC33907/08 devices provide power generation and voltage monitoring to the MCU and external watchdog supervision to detect failures of the MCU. They also monitor the error signals coming from



the MCU and provide fail-safe mechanisms to maintain the system in a safe state, in case a failure occurs. This section provides design guidelines when integrating MPC5744P with MC33907/08 to achieve ASIL D safety level.

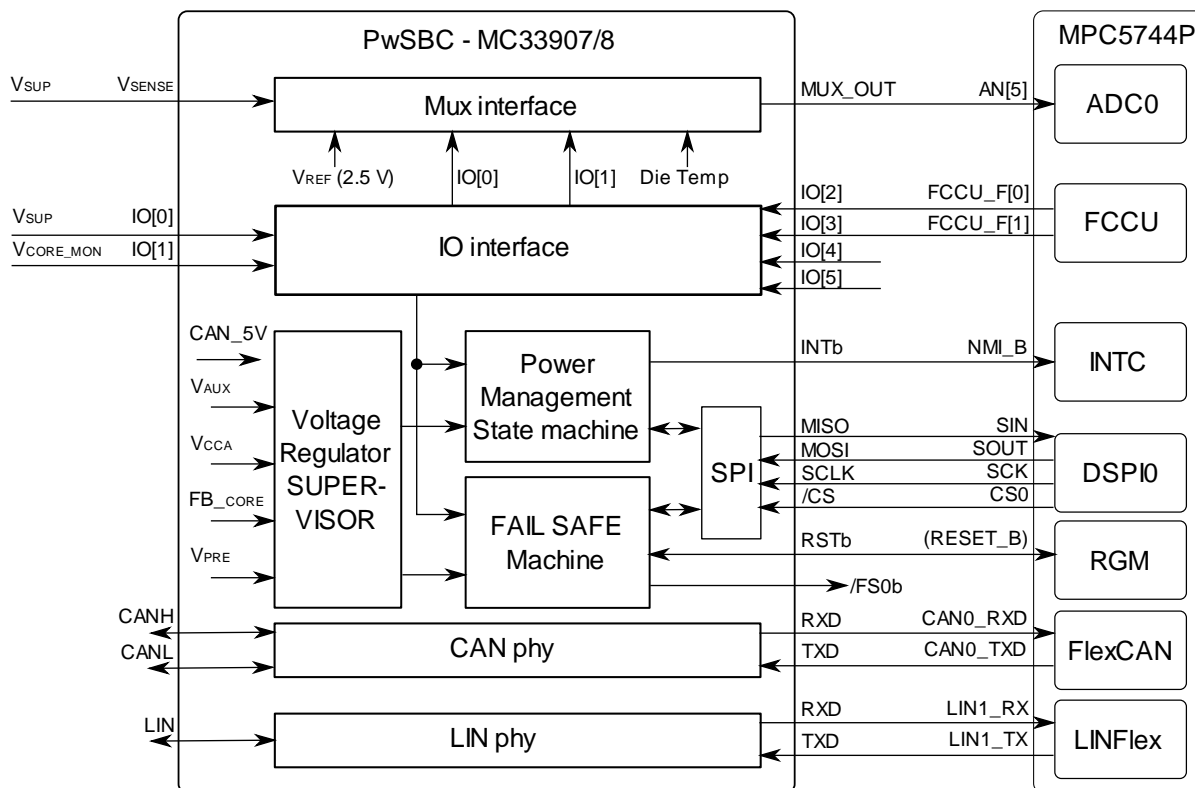


Figure 3. MPC5744P and MC33907/8 typical application

#### 4.1. MC33907/08 power supply

Power to the MC33907/08 devices is supplied via the VSUP1, VSUP2, and VSUP3 supply pins. An external reverse battery protection diode must be connected between the VBAT (JP1 on the [Figure 4](#)) external battery input and the capacitor input filter. A PI filter is implemented to avoid current switching noises coming from DC/DC converters to be propagated on VBAT and VSUP3 (clean supply where all our internal thresholds are generated). For that reason, VSUP3 must be connected before the PI filter to deliver a clean supply to the MC33907/08, de-correlated from the VSUP1 and VSUP2, which are dedicated to SMPS.

The resistor connected on the VSENSE pin limits the current at the pin, in cases of high transient. The MC33907/08 power connection is shown in [Figure 4](#).

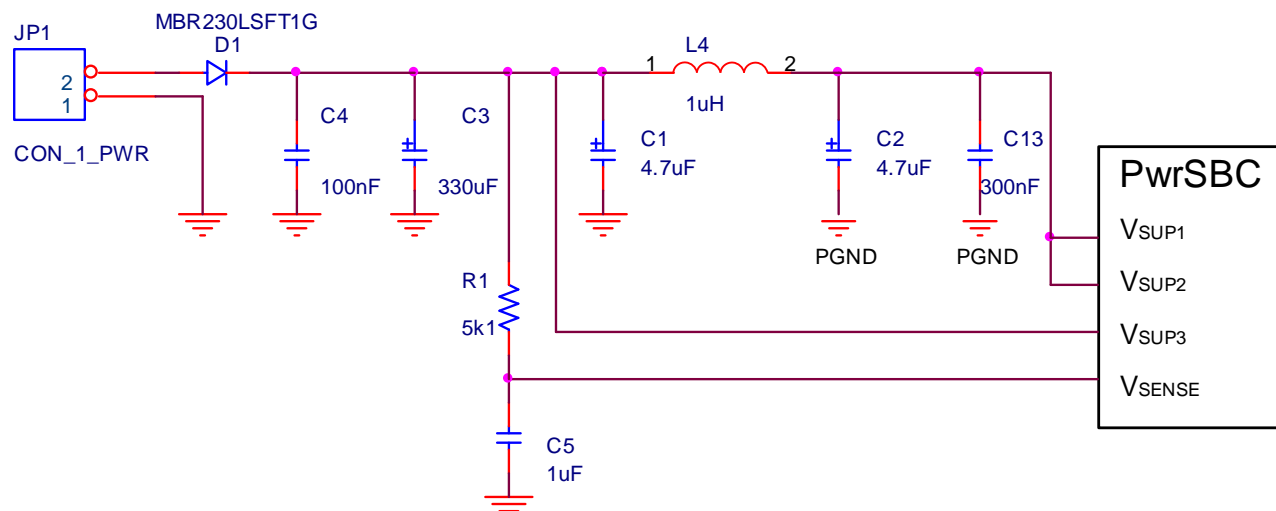


Figure 4. MC33907/08 supply connections

#### 4.1.1. MC33907/08 pre-regulator

The MC33907/08 pre-regulator output  $V_{pre}$  is between 6.0 V and 7.0 V in the non-inverting buck-boost converter configuration as shown in Figure 5. In this mode, the Gate\_LS pin drive external MOSFET transistor. A 22  $\mu$ H inductor is used. It is recommended that the capacitors C7, C8, C9 and C10 have together low equivalent series resistance (ESR) of less than 100 m $\Omega$  and C6 has low ESR of less than 10 m $\Omega$ . 100 nF capacitor must be connected to the Boot\_pre pin.

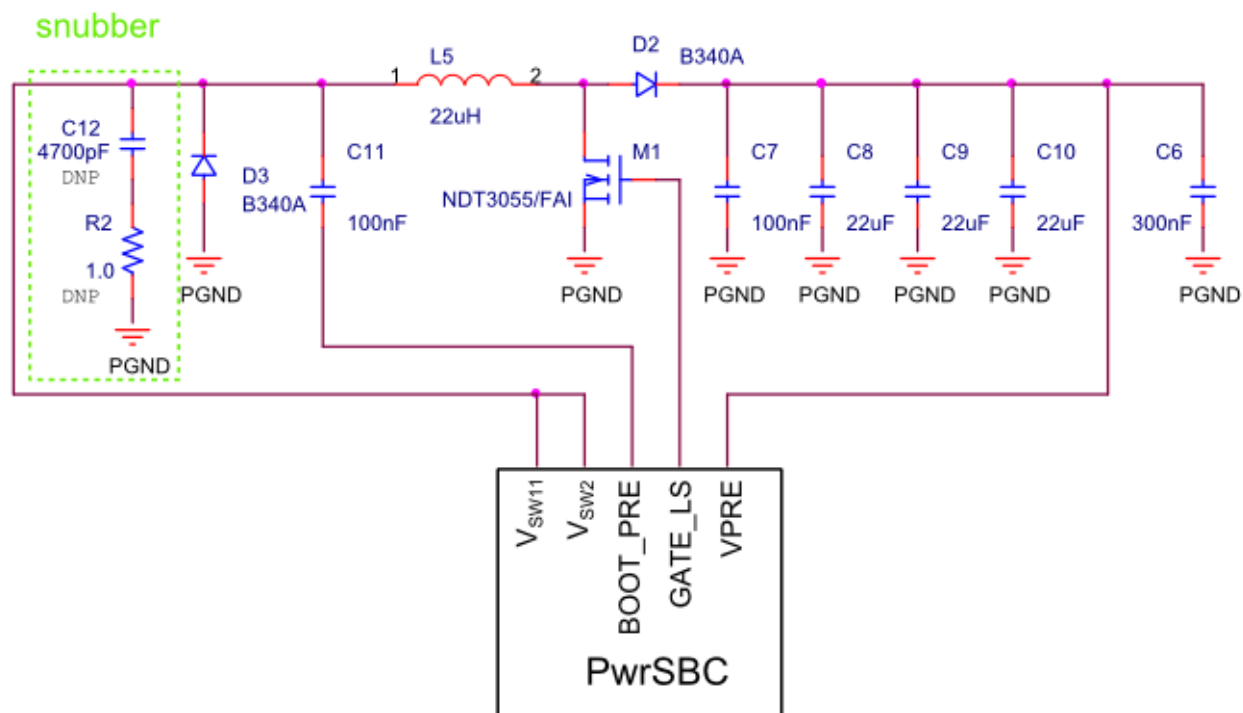


Figure 5. MC33907/08 Pre-regulator connection in buck-boost configuration

A snubber is circuit for filtering the ringing at each turn ON of the integrated SMPS switch to improve EMC performances. The values of its components must be fine tuned as linked also to board layout performance (see AN4766 in freescale.com for more details).

#### 4.1.2. MPC5744P core supply

The MPC5744P requires 3.3 V for the VDD\_HV\_PMU regulator, which can be supplied by the MC33907/08 Vcore voltage regulator. The Vcore provides a selectable output voltage around 1.2 V or 3.3 V. The MC33908 is capable of supplying 1.5 A from the Vcore regulator in normal mode, while the MC33907 can output 0.8 A from Vcore. For the MPC5744P, the MC33907 current capability is sufficient. The Vcore value is adjusted using a voltage divider connected between the regulated Vcore output and the voltage feedback pin FB\_core, which has a typical threshold voltage value of 0.8 V.

##### 4.1.2.1. Vcore voltage selection

High precision 1% resistor values should be used. There are used for 3.3 V core voltage resistors values 6.2 K $\Omega$  (R4) and 2 K $\Omega$  (R5) in a voltage divider circuit to adjust the Vcore 3.3 V. Following equation is used for calculating the resistors values.

**Equation 1:**

$$V_{CORE} = V_{CORE\_FB} * \frac{(R_4 + R_5)}{R_5}$$

The connection between the Vcore output from the MC33907/08 and the MPC5744P VDD\_HV\_PMU is shown in [Figure 5](#). The Vcore can also be used to power the MCU's Flash (VDD\_HV\_FLA0), I/Os (VDD\_HV\_IOx) and oscillator (VDD\_HV\_OSC) supplies. A power transistor must be added on the PCB to generate the supply for the MPC5744P core logic (VDD\_LV\_COR0). Note that the decoupling capacitors on the MPC5744P side are not shown in the diagram. Refer to the MPC5744P Data Sheet for details on the required bypass capacitors and the external ballast transistor.

##### 4.1.2.2. Vcore ripple voltage

Since the Vcore provides the main power source to MPC5744P, it is important that proper filtering is implemented at the Vcore output to ensure a clean voltage at the MPC5744P supply input.

The current through the inductor,  $\Delta I_{INDUCTOR}$ , can be calculated based on the known parameters:

- Input voltage  $V_{IN} = 6.5$  V
- Output voltage  $V_{OUT} = 3.3$  V
- $V_{CORE}$  regulator switching frequency  $F_{SW} = 2.4$  MHz
- Inductor  $L = 2.2$   $\mu$ H
- $I_{OUTMAX} = 1.5$  A for MC33908 (0.8 A for MC33907)

Equation 2 shows the current flow through the inductor which yields 0.308 A.

**Equation 2:**

$$\Delta I_{Inductor} = \frac{V_{OUT}}{V_{IN}} \cdot \frac{(V_{IN} - V_{OUT})}{F_{SW}} \cdot \frac{1}{L}$$

$$\Delta I_{Inductor}[A] = \frac{3.3V}{6.5V} \cdot \frac{(6.5V - 3.3V)}{2.4MHz} \cdot \frac{1}{2.2\mu H} = \underline{0.308}$$

Equation 3 yields a voltage overshoot of 24.6 mV for MC33908 (9.3 mV for MC33907) when a CO consist of two 22uF and one 100nF capacitors.

**Equation 3:**

$$\Delta V = \left( \sqrt{V_{OUT}^2 + \frac{L \cdot (I_{OUTMAX} + \Delta I_{INDUCTOR})^2}{C_O}} \right) - V_{OUT}$$

MC33908 (1.5 A):

$$\Delta V[V] = \left( \sqrt{3.3V^2 + \frac{2.2\mu H \cdot (1.5A + 0.308A)^2}{(22\mu + 22\mu + 100n)}} \right) - 3.3V = \underline{0.0246}$$

MC33907 (0.8 A):

$$\Delta V[V] = \left( \sqrt{3.3V^2 + \frac{2.2\mu H \cdot (0.8A + 0.308A)^2}{(22\mu + 22\mu + 100n)}} \right) - 3.3V = \underline{0.0093}$$

The voltage ripple across the output capacitor is the sum of the ripple voltage due to the output capacitor's ESR and the voltage due to the capacitance. The output capacitor will have a ripple voltage that is proportional to its ESR, therefore, it should have a low ESR value to minimize the ripple voltage. For example, a 22  $\mu$ F with a 20 m $\Omega$  ESR is an available capacitor from an electronic parts vendor. The ripple voltage due to the output capacitor ESR  $V_{OUTESR}$  is shown Equation 4 which yields 3.08 mV.

**Equation 4:**

$$V_{OUTESR} = \Delta I_{INDUCTOR} \cdot ESR_{CO}$$

$$V_{OUTESR}[mV] = 0.308[A] \cdot \frac{20[m\Omega] \cdot 20[m\Omega]}{2 \cdot 20[m\Omega]} = \underline{3.08}$$

The other component of the voltage ripple is the voltage due to the capacitance which is shown in Equation 5 which yields 0.74 mV.

### Equation 5:

$$V_{OUTCAP} = \frac{1}{2 \cdot C_O} \cdot \frac{V_{IN} - V_{OUT}}{L} \cdot \left( \frac{V_{OUT}}{V_{IN}} \cdot \frac{1}{F_{SW}} \right)^2$$

$$V_{OUTCAP}[mV] = \frac{1}{2 \cdot (2 \cdot 22\mu + 1 \cdot 100nF)} \cdot \frac{6.5V - 3.3V}{2.2\mu H} \cdot \left( \frac{3.3V}{6.5V} \cdot \frac{1}{2.4MHz} \right)^2 = 0.74$$

Both voltage ripple components add up to about 3.8 mV, which is less than 1% of the 3.3 V output. Note that selecting a capacitor with a higher ESR can exceed the target output voltage ripple so careful consideration must be made.

It is also critical that the MPC5744P includes proper decoupling capacitors between the VDD pins and the nearest corresponding GND pins. Refer to the MPC5744P Reference Manual for more details. Note that the MCU-side decoupling capacitors are not shown in Figure 7. Figure 6 shows the Vcore output voltage ripple as measured from the 2 x 22 μF and 1 x 100nF decoupling capacitors on the MCU side. The measured peak-to-peak voltage is approximately 4.4 mV.

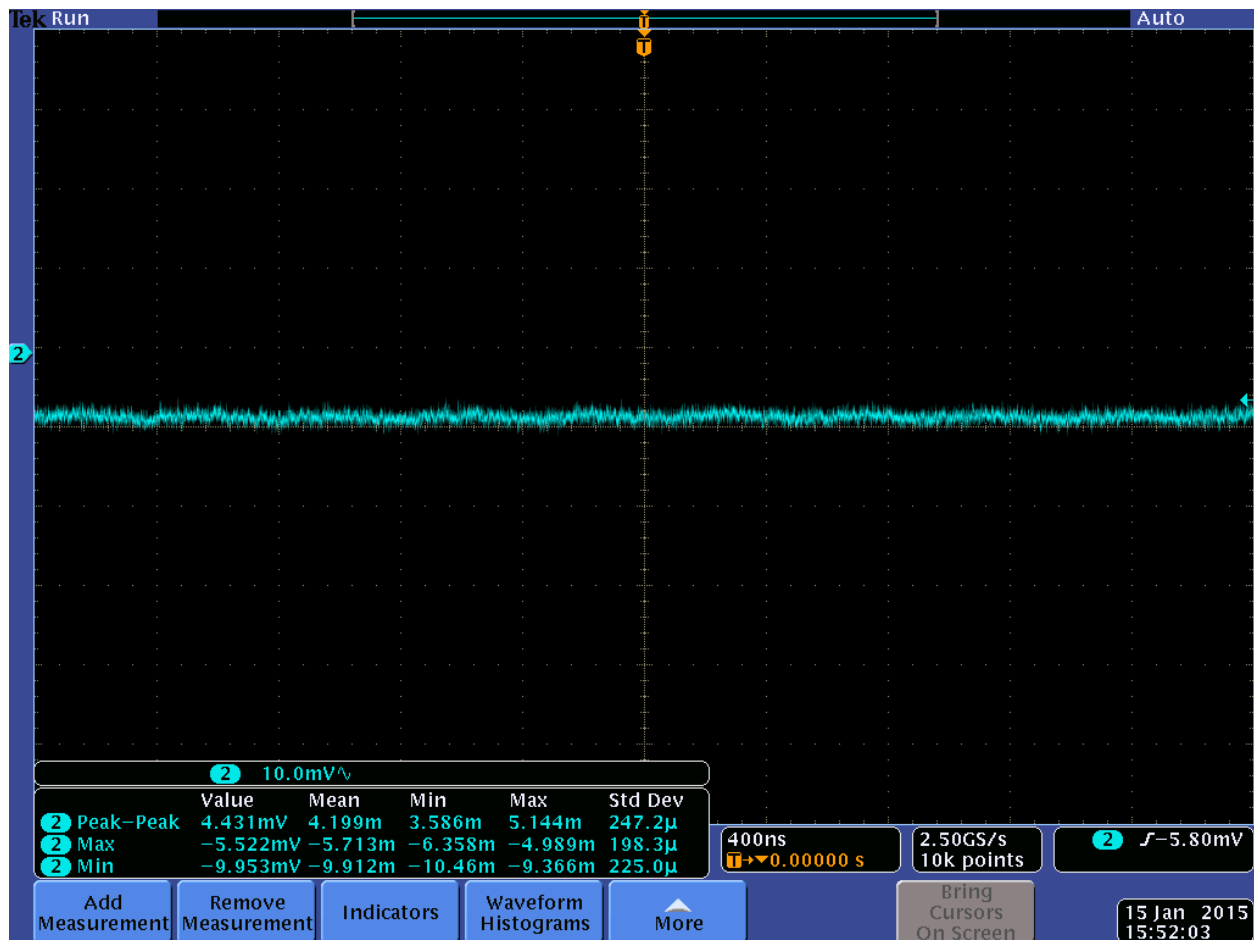


Figure 6. Voltage ripple on Vcore

A compensation network consisting of two resistors and two capacitors as shown in Figure 7 is required to ensure stability of the buck converter. The component values shown are selected based the 3.3 V Vcore (MPC5744P is in the external regulator mode) output and load capacitance.

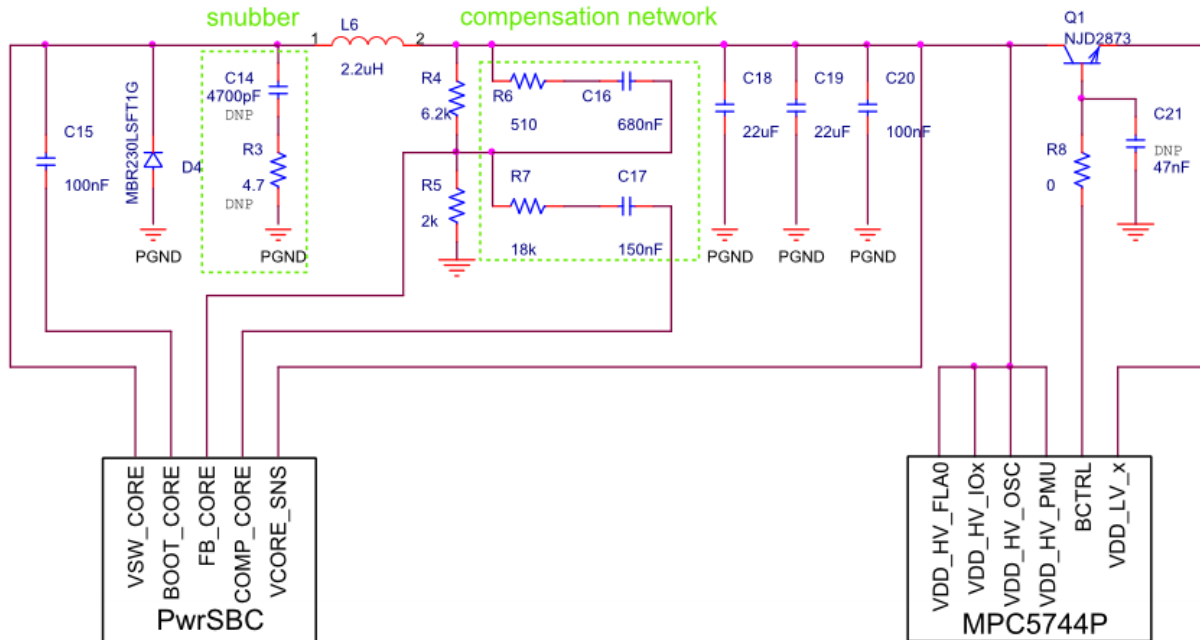


Figure 7. MC33907/08 and MPC5744P Vcore supply connection

A snubber is circuit for filtering the ringing at each turn ON of the integrated SMPS switch to improve EMC performances. The values of its components must be fine tuned as linked also to board layout performance. It is recommended that the capacitors C18 and C19 have together low equivalent series resistance (ESR) of less than 100 mΩ. Note that the decoupling capacitors on the MPC5744P side are not shown in the diagram. Refer to the data sheet of MPC5744P for details on the required bypass capacitors.

#### 4.1.3. MPC5744P ADC voltage and reference supplies

The MPC5744P ADC voltage (VDD\_HV\_ADVx) requires a 3.3 V supply. The ADC reference voltages (VDD\_HV\_ADRE0 and VDD\_HV\_ADRE1) can be 3.3 V or 5 V. Both voltages VDD\_HV\_ADRE0 and voltages VDD\_HV\_ADRE1 cannot be operated at different voltages and must be supplied by the same voltage source. With a selectable voltage of 3.3 V or 5 V, the MC33907/08 Vcca linear regulator can be used to supply the MPC574AP ADC reference voltages. If the ADC reference voltage is selected to be 3.3 V, the Vcca regulator can also be used to supply the MPC5744P ADC voltage.

Depending on the power requirements of the system, an external PNP transistor can be connected to Vcca. With the external transistor, Vcca is accurate up to  $\pm 3\%$  and can output up to 300 mA. The MC33907/08 automatically detects the external transistor during its startup sequence. If only the internal ballast is used, Vcca is accurate a  $\pm 1\%$  and can output up to 100 mA.

The value of the external resistor connected between the SELECT and GND pins determine the Vcca and Vaux voltage. Table 3 shows the required resistor value for the selected voltage

Table 3. Vcca and Vaux voltage selection

Vcca [V]	Vaux [V]	Resistor range [kΩ]	Recommended Value [kΩ]
3.3	3.3	< 7	5.1 +/- 5%
5.0	5.0	10.8 << 13.2	12 +/- 5%
3.3	5.0	21.6 << 26.4	24 +/- 5%
5.0	3.3	45.9 << 56.1	51 +/- 5%

Figure 8 shows the connection between MC33907/08 Vcca and the MPC5744P ADC voltage and reference supplies when reference supply is connected to 5.0 V and supply voltage is connected to 3.3 V (Vcore voltage generated by MC33907/08). Both of them require 3.3 V. A 12 kΩ resistor between SELECT and GND pins will configure the Vcca and Vaux pins to 5.0 V. A ferrite transformer is used to isolate the digital and analog supplies. Note that the decoupling capacitors on the MPC5744P side are not shown in the diagram. Refer to the data sheet of MPC5744P for details on the required bypass capacitors.

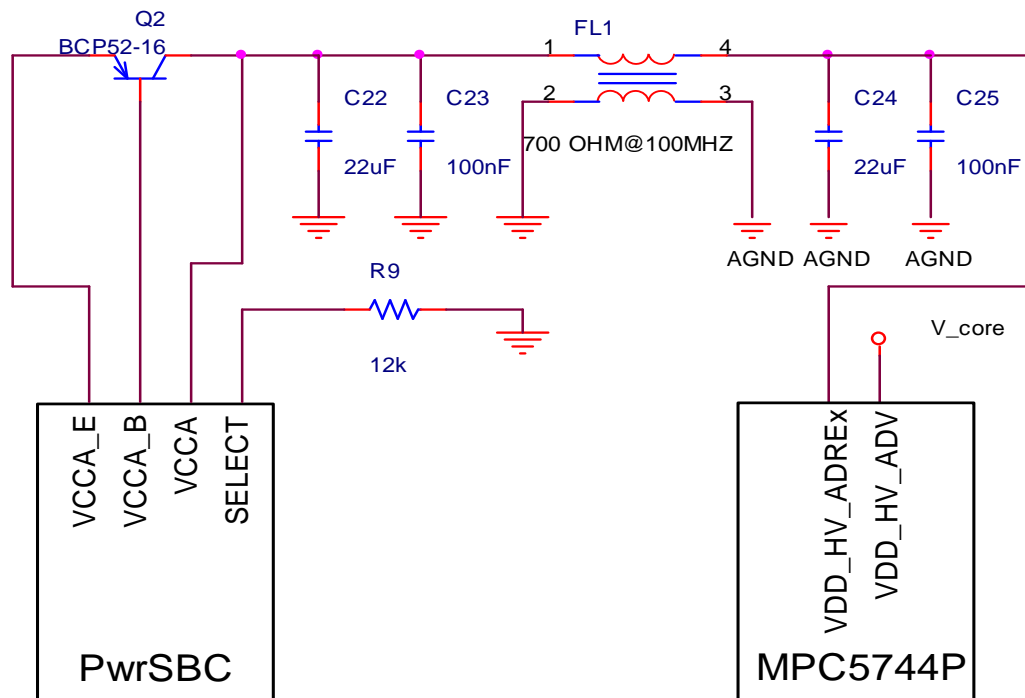


Figure 8. MC33907/08 and MPC5744P Vcca supply connection

Alternatively, if the Vcca reference supply is 3.3 V, the ADC voltage supply can use the Vcca supply voltage instead of the Vcore voltage supply.

#### 4.1.4. Auxiliary voltage supply

The MC33907/08 auxiliary Vaux voltage regulator provides a selectable output of 5 V or 3.3 V to supply power to additional devices in the ECU. It can also be used as a sensor supply outside the ECU. The Vaux is accurate up to  $\pm 3\%$  and can output up to 300 mA. Figure 9 shows the connection of the Vaux voltage.

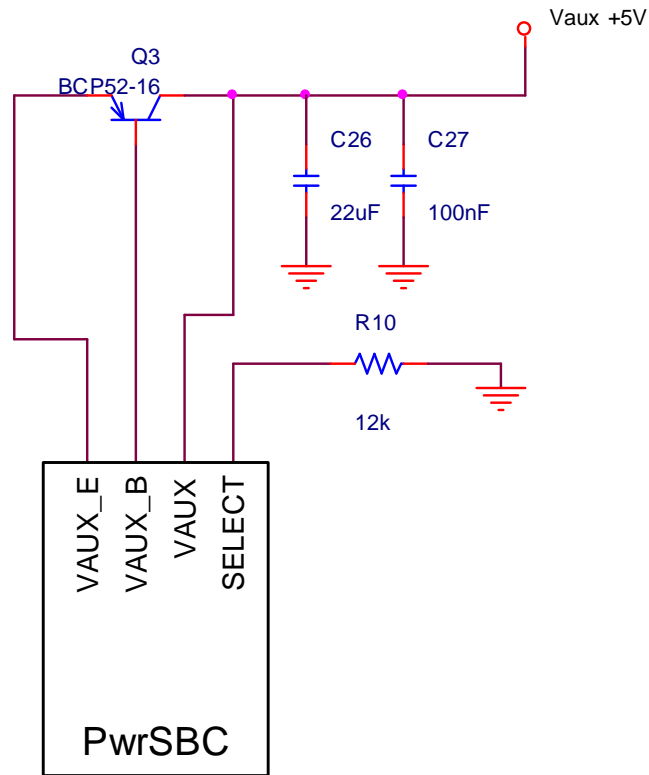


Figure 9. MC33907/08 Vaux supply connection

#### 4.2. Ground separation

Three grounds are available on MC33907/08: AGND (analog ground), GND\_COM (Physical layer ground), and DGND (digital ground). There are Power ground (PGND) and Quiet ground (QGND) on the PCB which must be clearly separated. The PGND is for SMPS components involved in the high transient current loops and also for DGND of MC33907/08 and MPC5744P GNDs.

The QGND is for AGND and GND\_COM of MC33907/908 and other component which are not connected to the PGND. Connections from MC33907/08 grounds, MPC5744P grounds and PCB grounds are shown in Figure 10. On the PCB, the connection between PGND and QGND must be done as far as possible from the local PGND ground. The best is at the Vbat connector level. This will ensure that noisy PGND does not pollute the QGND.



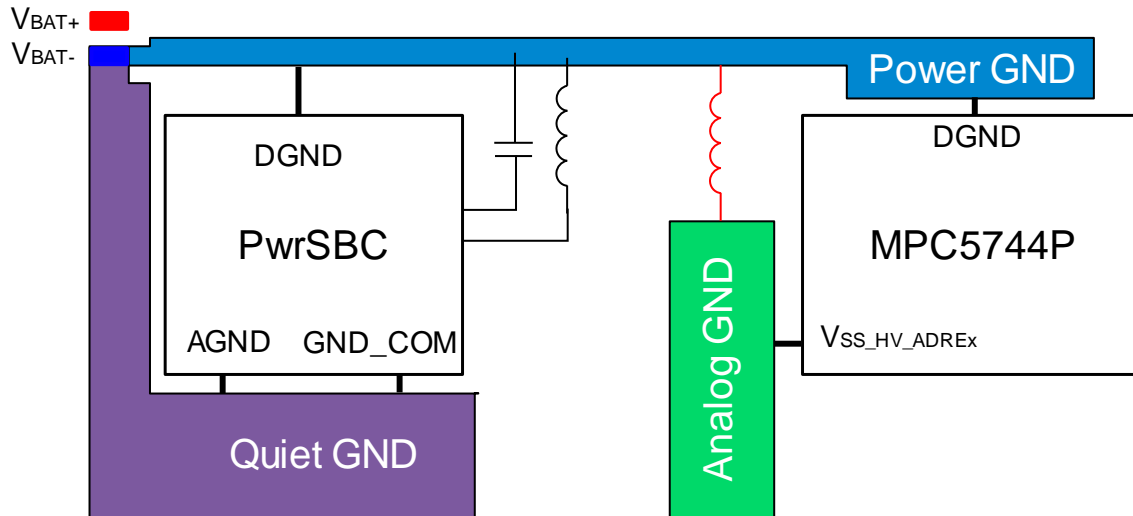


Figure 10. Ground connections between MC33907/08 and PCB ground

### 4.3. Power-up sequence

To provide a safe and well-known start-up sequence, the MC33907/08 devices include an undervoltage lock-out. The  $V_{sup}$  must be higher than  $VSUP\_UV\_5$  (5.6V) for leaving the PowerDown mode. In all the other conditions, the MC33907/08 is able to operate down to this lock-out voltage. When  $V_{sup}$  rises to 5.6 V, the preregulator voltage  $V_{pre}$  starts to activate, which then turns on the different voltage rails if configured in buck-boost. The  $V_{core}$ ,  $V_{cca}$ , and  $V_{aux}$  automatically ramp-up at the same time to provide power to the MPC5744P as shown in Figure 11 ( $VSUP$  – dark blue,  $VCORE$  – light blue,  $VCCA$  – pink,  $VAUX$  - green). With built-in self-test (BIST) disabled, MPC5744P de-asserts the  $RESET\_B$  signal approximately 3 ms after the 3.3 V supplies are active to signal the end of the power-up sequence as shown in Figure 12 ( $VSUP$  – dark blue,  $VCORE$  – light blue,  $RESET$  - pink). When MC33907/08 is in the normal mode and the  $V_{sup}$  falls under the lock-out voltage of 2.7 V (buck-boost mode) or 4.6 V (buck mode), the device is under power-on-reset condition.

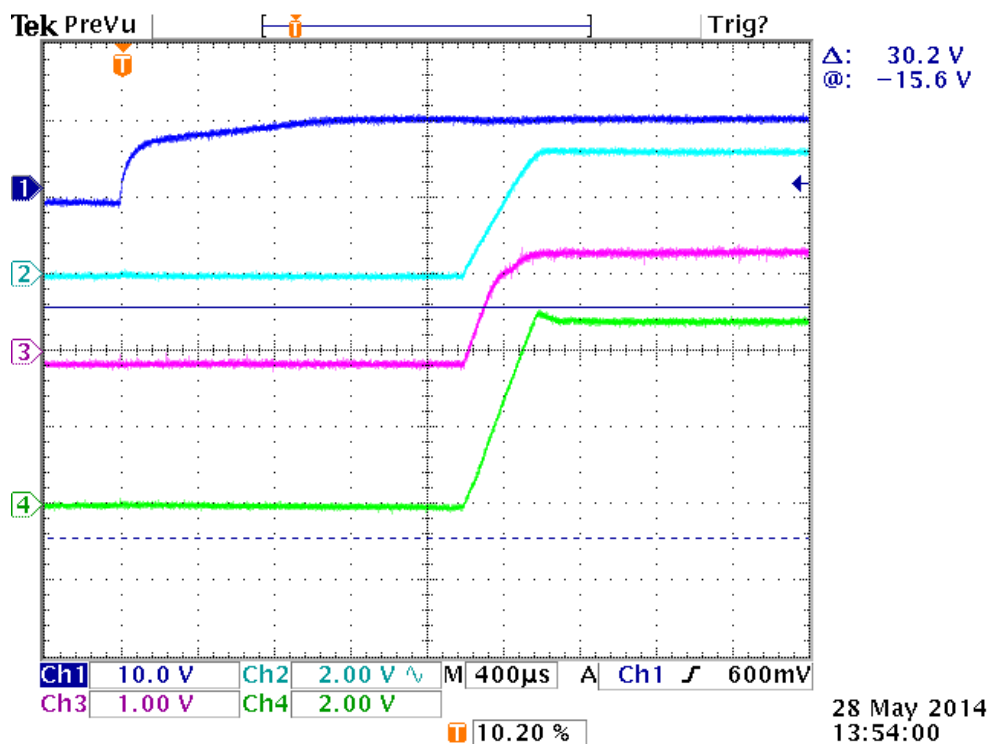


Figure 11. Power up sequence

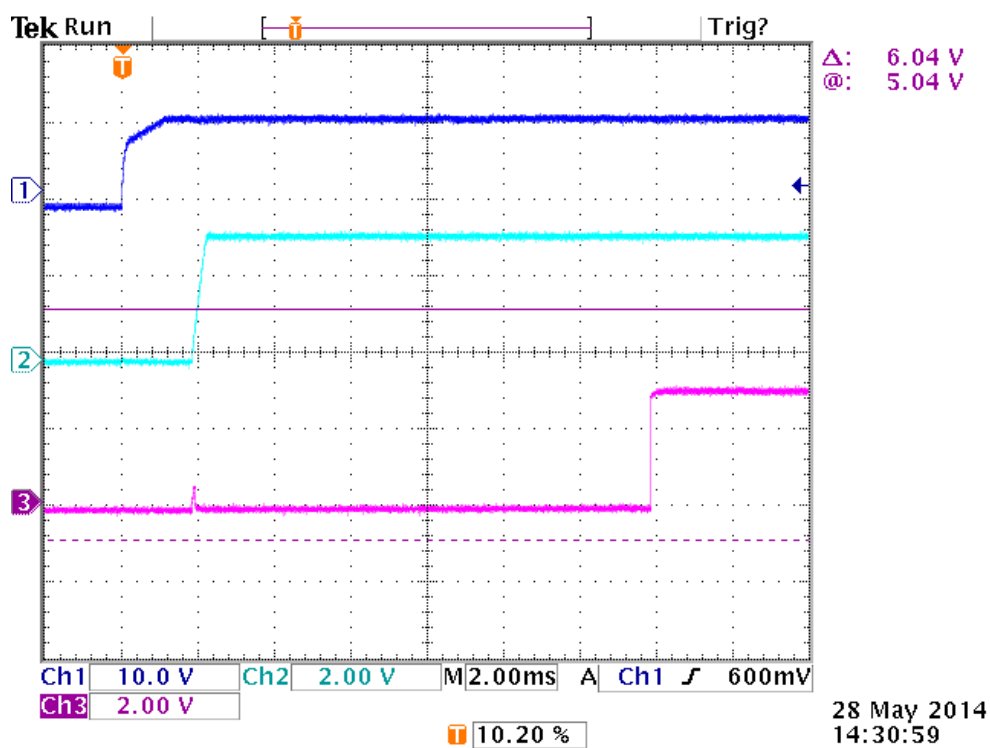


Figure 12. Reset de-assertion

## 4.4. CAN connectivity

The CAN\_5V linear regulator provides the 5 V CAN transceiver supply. A 1  $\mu$ F capacitor must be connected between CAN\_5V and GND. The MC33907/08 transmits TXD and receives RXD data pins connect with the MPC5744P FlexCAN 0 TXD and RXD pins, respectively. The physical CAN bus interface connects to the CANH and CANL pins on the MC33907/08 side. The MC33907/08 CAN interface is connected to the MPC5744P as shown in MC33907/08 + MPC5744P CAN connections.

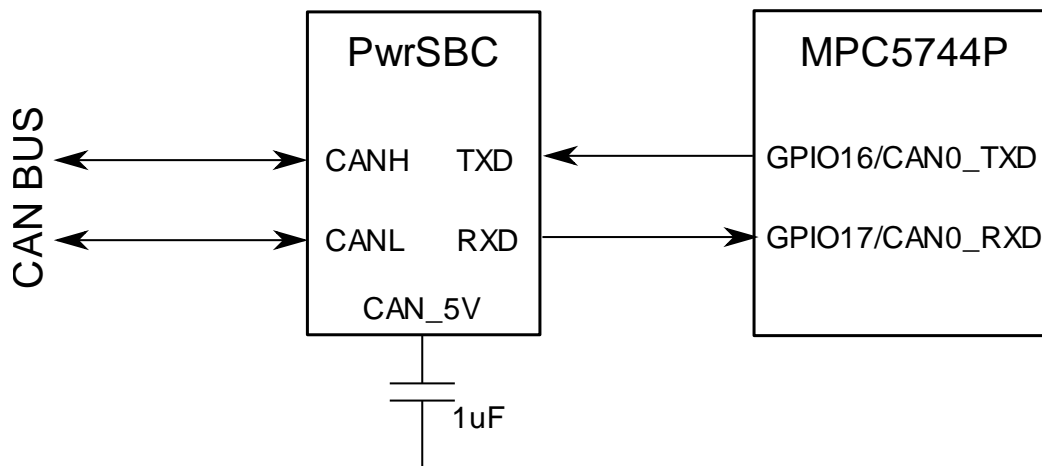


Figure 13. MC33907/08 + MPC5744P CAN connections

## 4.5. LIN connectivity

The VSUP3 voltage provides supply for the LIN physical layer. The MC33907/08 transmit TXD and receive RXD data pins connect with the MPC5744P LIN 1 TXD and RXD pins, respectively. The physical LIN bus interface connects to the LIN pins on the MC33907/08 side. The MC33907/08 LIN interface is connected to the MPC5744P as shown in [Figure 14](#)

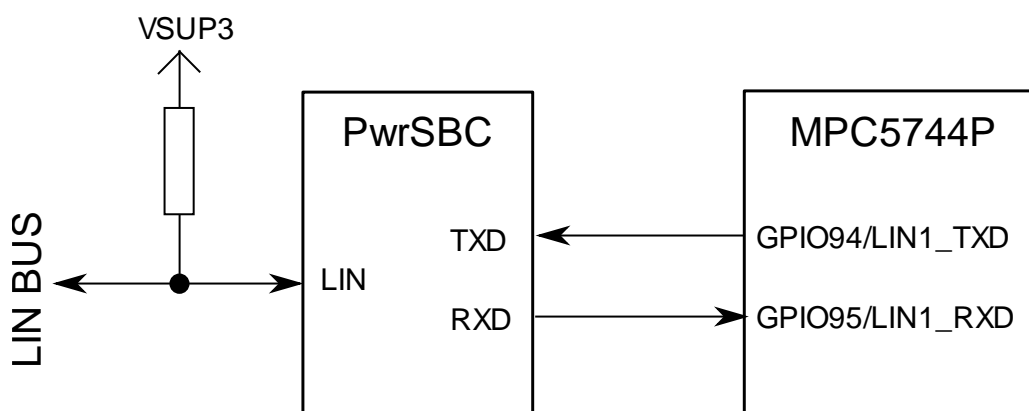


Figure 14. MC33907/08 + MPC5744P LIN connections

## 4.6. SPI connectivity

The Serial Peripheral Interface (SPI) allows bi-directional communication between MPC5744P and MC33907/08. MPC5744P, which acts as the master, accesses the MC33907/08 configuration registers through SPI registers. The watchdog refresh is also communicated via SPI. The MC33907/08 SPI interface is connected to the MPC5744P as shown in [Figure 15](#)

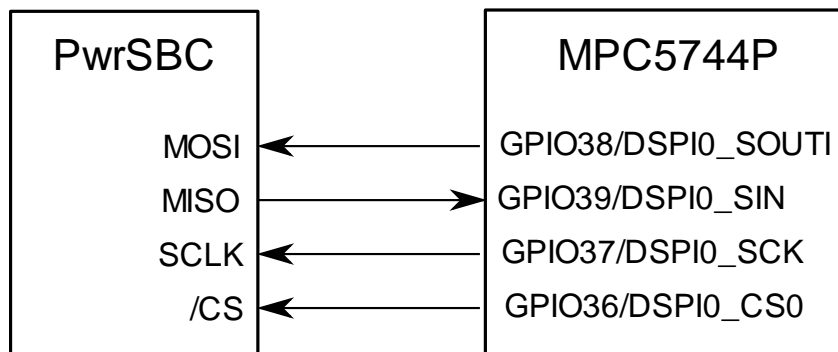


Figure 15. MPC33907/08 + MPC5744P SPI connections

## 4.7. Error management connectivity

The MC33907/08 pins can be configured as safety inputs from the MPC5744P for continuous monitoring of the MPC5744P FCCU output pins FCCU\_F[0] and FCCU\_F[1]. MC33907/08 asserts the INTb when an interrupt condition occurs. Pin connects to the Non-Maskable Interrupt (NMI) pin in MPC5744P to trigger NMI.

In case a failure occurs, MC33907/08 asserts RSTb to reset MPC5744P. This pin connects to the RESET\_B pin in MPC5744P. It is recommended that the fail-safe output FS0b is connected to an external circuit that disconnects the power to the critical circuits of the application when FS0b is asserted to indicate a fault as shown in [Figure 16](#). This mechanism ensures that power to the critical circuits of the application is cut off to prevent potential damage of the system or any injury. It is necessary to use pull up (IO\_3) and pull down (IO\_2) resistors. The resistors define default state and avoid wrong error detection during startup phase or other phase when MPC5744P does not drive these pins.

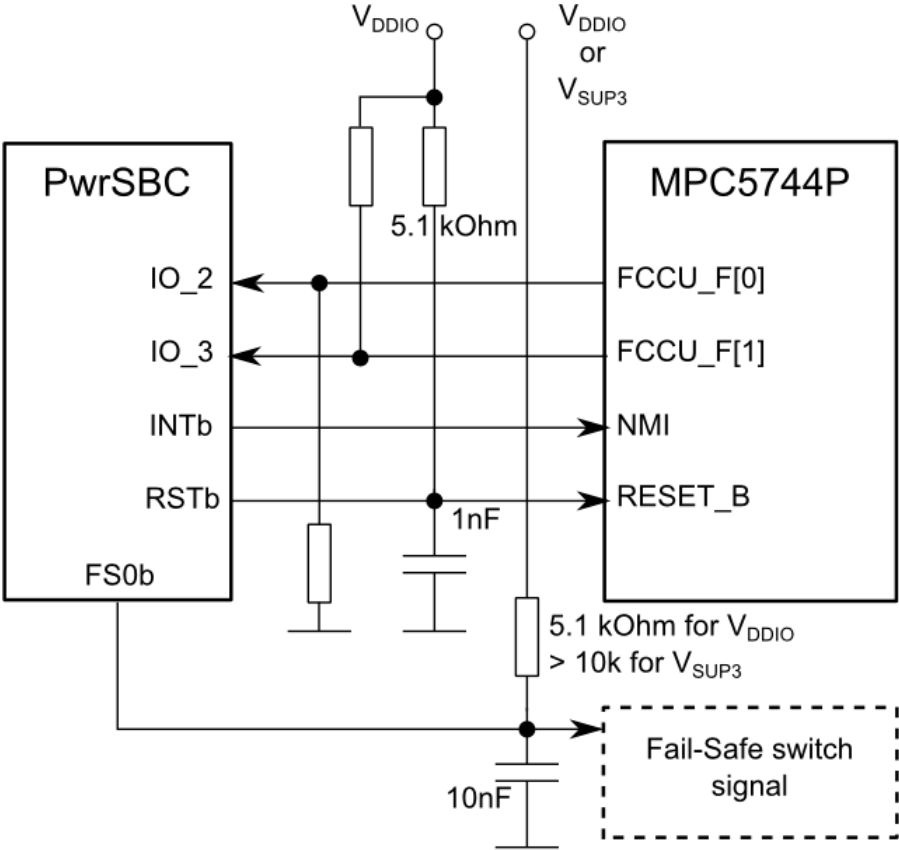


Figure 16. MC33907/08 + MPC5744P error management connections

## 5. MPC5744P safety requirements

The MPC5744P requires several external measures to allow safe operation in a system targeting ASIL D functional safety level:

- External power supply and monitor
- External watchdog timer
- Error output monitor

The MC33907/08 provides the above functions to ensure that the MPC5744P comes to a safe state in case of failure. Refer to the safety manual: *Safety Manual for MPC5744P* (document number MPC5744PSM available in [freescale.com](http://freescale.com)) for additional details about the safety requirements when using MPC5744P with external components.

### 5.1. Power supply and monitor

MPC5744P includes internal monitors which continuously check the various voltage supplies. The Low-Voltage Detector (LVD) and the High-Voltage Detector (HVD) monitor the operating voltages to ensure the device works within the correct voltage range. The operating voltages are supervised by the following voltage monitors:

- Duplicated core LVD blocks to monitor the 1.2 V core supply
- Duplicated core HVD blocks to monitor the 1.2 V core supply
- Four 3.3 V LVD blocks to monitor the 3.3 V VDDIO, VDDREG, VDDFLASH, VDDOSC and VDDADC supplies

When the core voltage drops below the LVD threshold level, a 1.2 V low-voltage detection event occurs. Similarly, when the core voltage exceeds the HVD threshold level, a 1.2 V high-voltage detection event occurs. If the voltage is not in the proper range, the system responds with a reset. When the main 3.3 V supply drops below the LVD threshold level, a low-voltage detection event occurs and the system responds with a reset. MPC5744P does not include a high-voltage monitor for the 3.3 V supplies, therefore, for ASIL D applications the overvoltage monitor for the 3.3 V supplies, in addition to the undervoltage monitor, must be provided by an external device.

**Safety Requirement [SAG\_MPC5744P\_042]** — To fully monitor all voltage supplies, an external device must provide overvoltage and undervoltage monitors for MPC5744P external 3.3 V supplies. This safety requirement is satisfied by MC33907/08 which provides voltage regulation, overvoltage and undervoltage monitors for the 3.3 V supplies. As mentioned in MPC5744P Core supply, the regulated Vcore output is adjusted to 3.3 V using resistors divider connected between Vcore and the voltage feedback pin FB\_core. MC33907/08 monitors the undervoltage and overvoltage on the FB\_core node which has a typical value of 0.8 V.

Table 4 shows the MC33907/08 undervoltage and overvoltage detection thresholds of the regulator outputs. If the FB\_core pin drifts to the minimum FB\_core overvoltage of 0.84 V, then the regulated Vcore output gets adjusted to 3.44 V and an overvoltage event is detected. As a reaction to the fault condition, the MC33907/08 can be configured to assert the RSTb pin to trigger a reset to the MPC5744P or it can assert the FS0b pin to control a fail-safe circuitry to shut off the power supply to the critical circuits of the application. When MC33907/08 is deactivated, the power to MPC5744P is also shut off to

prevent permanent damage of the device. These two error-handling mechanisms will place the MPC5744P in a safe state when an overvoltage event is detected. The MC33907/08 INIT SUPERVISOR1 register must be configured in the INIT phase to select the reaction to Vcore feedback overvoltage and undervoltage events, that is, whether the RSTb or FS0b are asserted upon overvoltage and undervoltage detection. MC33907/08 allows the user to configure how the RSTb and FS0b pins react to overvoltage conditions.

The same over and undervoltage protection is provided for the analog power supplies, I/O drivers and CAN driver (part of the MC33907/908) when the MPC5744P's analog power is supplied from the Vcca and the I/O drivers are supplied from the Vaux regulated output.

Table 4. **MC33907/08 Overvoltage and Undervoltage Detection Thresholds**

MC3390/08 Parameters/ Detection Threshold		Min [V]	Max [V]
V <sub>CAN</sub>	Overvoltage	5.200	5.550
	Undervoltage	4.250	4.800
V <sub>PRE</sub>	Overvoltage	7.200	8.000
V <sub>CORE_FB</sub>	Overvoltage	0.840	0.905
	Undervoltage	0.670	0.773
V <sub>CORE</sub> <sup>1</sup>	Overvoltage	3.444	3.711
	Undervoltage	2.747	3.169
V <sub>CCA_5V</sub>	Overvoltage (5.0 V config)	5.250	5.500
	Undervoltage (5.0 V config)	4.500	4.750
V <sub>CCA_3V3</sub>	Overvoltage (3.3 V config)	3.400	3.600
	Undervoltage (3.3 V config)	3.000	3.200
V <sub>AUX_5V</sub>	Overvoltage (5.0 V config)	5.250	5.500
	Undervoltage (5.0 V config)	4.500	4.750
V <sub>AUX_3V3</sub>	Overvoltage (3.3 V config)	3.400	3.600
	Undervoltage (3.3 V config)	3.000	3.200


1 V<sub>CORE</sub> voltage detection thresholds are transformed from the V<sub>CORE\_FB</sub> detection thresholds through external resistor divider (the equation 1 was used for it).

## 5.2. External watchdog

Some common causes of failure (CCF), such as a complete failure of the power supply are detected because the software running on MPC5744P no longer triggers the watchdog (WD). To detect critical failures that could completely disable MPC5744P, an external WD device must be connected to MPC5744P for ASIL D applications.

**Safety Requirement [SAG\_MPC5744P\_041]** - An external device, acting as the supervisor of operations, must provide a watchdog to cover CCFs of the MPC5744P for ASIL D applications. It shall be triggered periodically by the safety-relevant software running on the MPC5744P.

This MPC5744P safety requirement is satisfied by the windowed time WD feature of MC33907/08. The windowed time WD concept is shown in [Figure 17](#). This feature requires the MPC5744P to refresh the WD during each open window. The duration of the window is selectable through SPI during MC33907/08 initialization phase. The window duration is configurable to be 1 ms, 2 ms, 3 ms, 4 ms, 8 ms, 16 ms, 32 ms, 64 ms, 128 ms, 256 ms, 512 ms, or 1024 ms in the WD\_Window register. The window duty cycle is 50%. The default window duration is 3 ms, which can then be configured to a different value during configuration by MPC5744P.

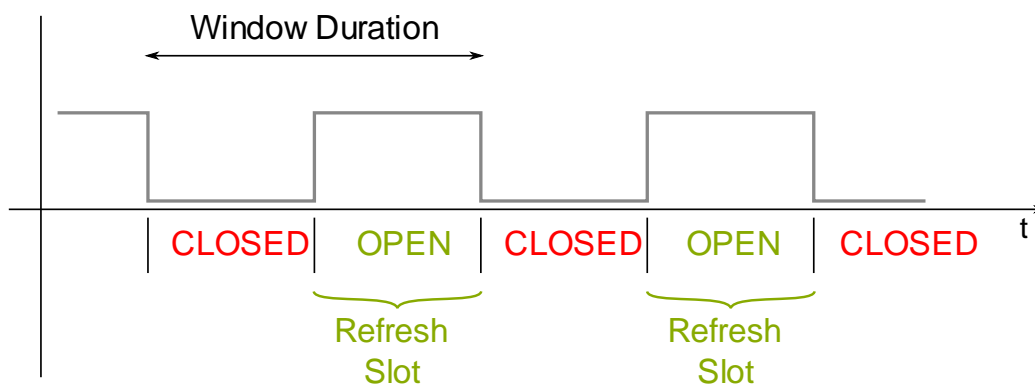

**Figure 17. MC33907/08 windowed watchdog**


The WD is based on a question and answer principle. MC33907/08 provides a default LFSR value but MPC5744P can send an 8-bit seed to MC33907/08 through the SPI during the INIT phase. This seed initializes the MC33907/08's Linear Feedback Shift Register (LFSR).

MPC5744P and MC33907/08 then runs a pre-defined calculation using the same seed. MPC5744P sends the result of the calculation to MC33907/08 during the open WD window and the result is verified by MC33907/08. If the result is correct, the LFSR is incremented to generate a new pseudo-random word, the WD refresh counter is incremented and the window is restarted. However, if the result is incorrect, the WD error counter is incremented, the WD window is restarted.

For each wrong WD refresh, the WD error counter is incremented by 2 (maximum of 6). For each correct WD refresh, the WD error counter is decremented by 1 (minimum of 0). When the WD error counter reaches 6, a reset is generated and the RST error counter is incremented by 1. The WD error and the RST error counters can be read by MPC5744P via SPI from the WD\_Counter register and the Diag\_FS2 registers respectively. See the [Figure 18](#) for the state diagram of the Error Counter.

When MPC5744P generates a Reset, the MC33907 Reset Error Counter is incremented by one. When MPC5744P recover from the reset, MC33907 will be in INIT phase with a 256 ms open window to configure again the device and send the first good WD refresh. As soon as the first good WD refresh is sent, the MC33907 Fail Safe monitoring require periodic WD refresh.




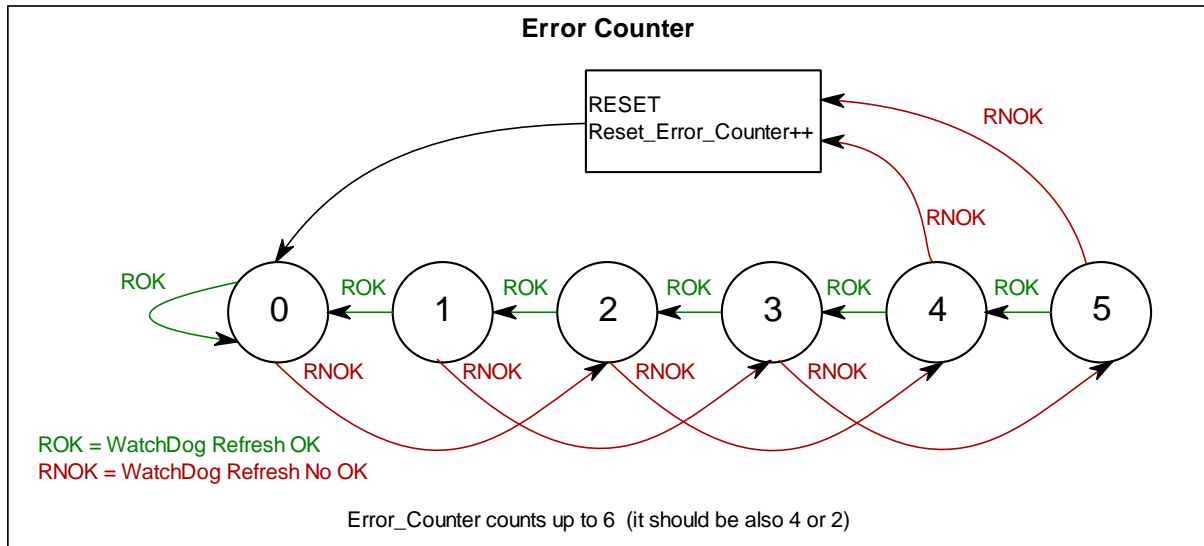


**Figure 18. MP33907/08 watchdog error counter state diagram**

The RST error counter shown in [Figure 19](#) for the state diagram of the register, can only be decremented by 1 if the WD is correctly refreshed 7 consecutive times (when the WD refresh counter is configured at 6, see [Figure 20](#) for Refresh Counter register). When the RST error counter reaches 3, MC33907/08 activates the FS pins (FS0b) and if the WD continues to be incorrectly refreshed and if the RST error counter reaches 6, then MC33907/08 turns off all the regulators and enters a deep fail state mode. At this point, a new power-up sequence or a key off/on is needed to recover (The recommendation is to connect Key signal to IO\_0 – Refer to AN4766 available in [freescall.com](http://freescall.com) for more information). Alternatively, MC33907/08 can be configured to activate the FS pins when the RST error counter reaches 1 and to enter a deep fail state mode when the RST error counter reaches 3 (Refer to the MC33907/08 datasheet available at [freescall.com](http://freescall.com) for more details).

When MPC5744P detects a falling edge on the RESET\_B signal, the external reset triggers the start of the reset sequence.

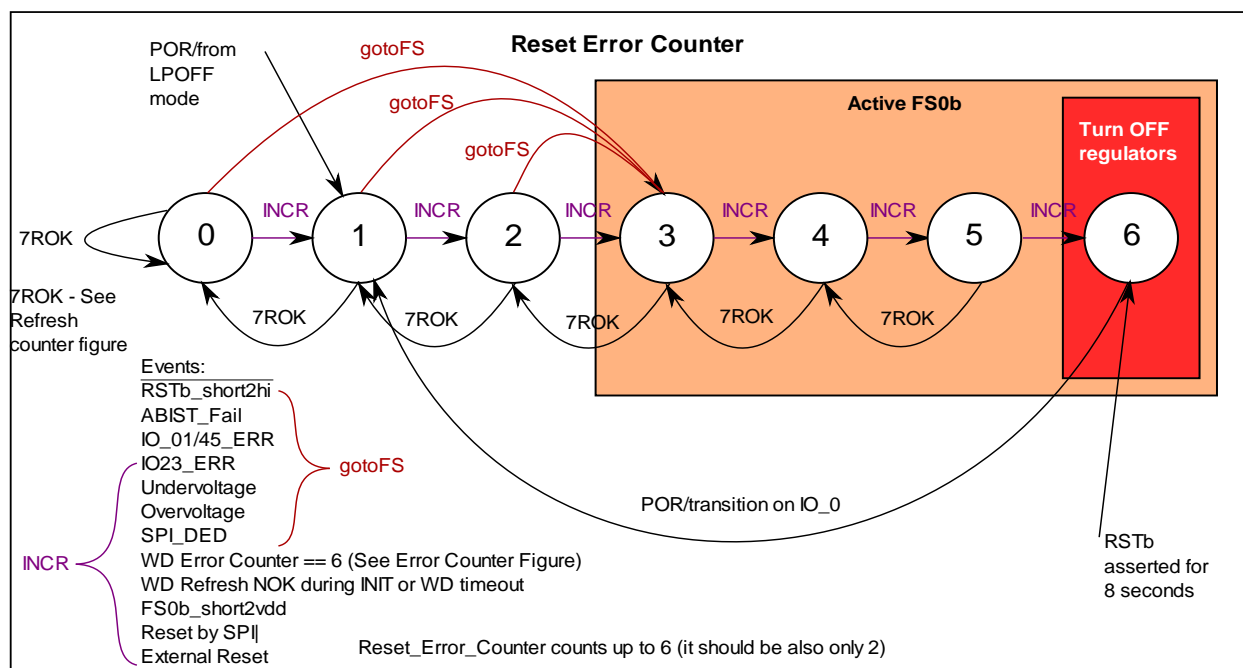

**Figure 19. MP33907/08 watchdog reset error counter state diagram**

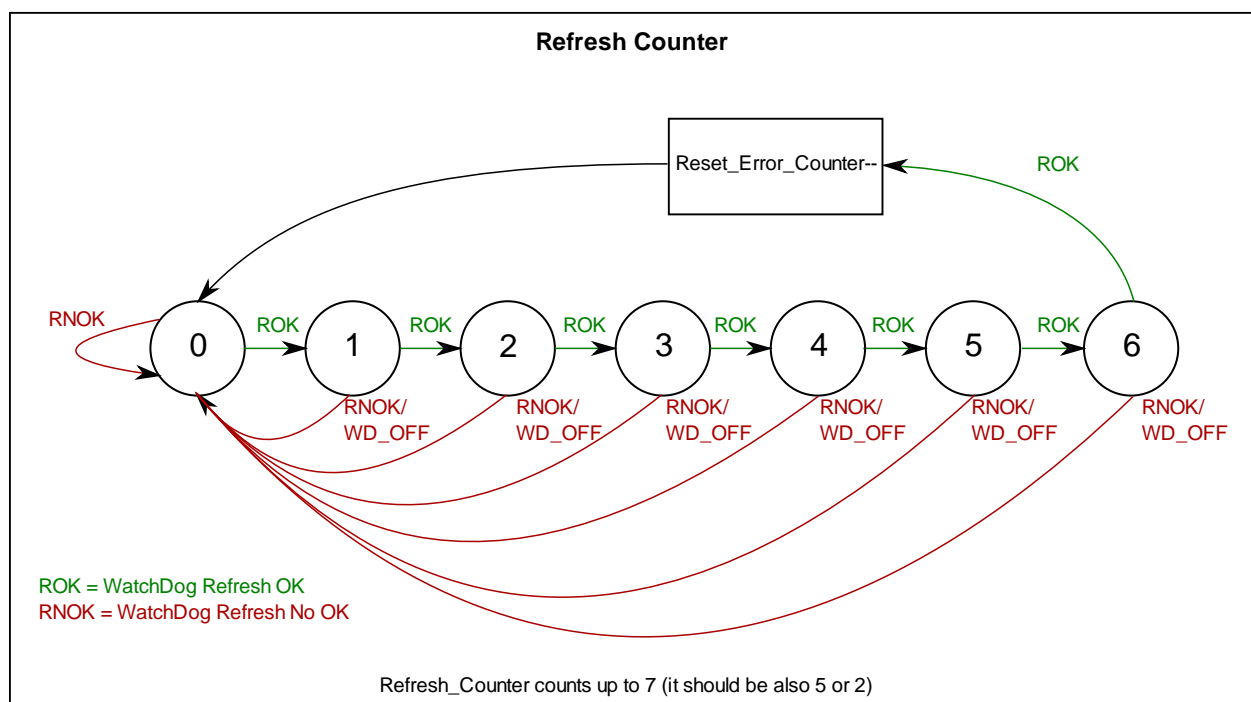

**Figure 20. MP33907/08 watchdog refresh counter state diagram**

### 5.3. Error output monitor

The MPC5744P Fault Collection and Control Unit (FCCU) supports two external pins FCCU\_F[0] and FCCU\_F[1] for error indication. When the FCCU receives a fault signal, it reports the failure to the external world via the FCCU\_F[1:0] signals. If an error is indicated, the system may disable or reset MPC5744P as a reaction to the error signal.

**Safety Requirement [SAG\_MPC5744P\_043]** — An external device must be connected to the FCCU via FCCU\_F[0] and optionally FCCU\_F[1] to continuously monitor the error output pins of the FCCU.

MC33907/08 satisfies this safety requirement by providing FCCU monitoring of the error output signals from the MPC5744P. The MC33907/08 IO\_2 and IO\_3 pins are by default configured as safety inputs for continuous monitoring of the MPC5744P FCCU outputs.

When the IO\_2 and IO\_3 pins are configured as inputs for FCCU monitoring, only the bi-stable protocol can be used. In this mode, the second output FCCU\_F[1] is the inverted signal of the first output FCCU\_F[0]. In the reset or self-test phase, the FCCU\_F[1:0] pins are set as high-impedance. In the normal state, when no FCCU faults are triggered, the FCCU\_F[1:0]=01. A fault condition is indicated by FCCU\_F[1:0]=10.

When a failure is signaled through the IO\_2 and IO\_3 pins, MC33907/08 then handles the error by one of the following ways:

- Assert RSTb (active low) to reset the MPC5744P
- Assert FS0b (active low) to power off the system

### 5.4. Functional and Destructive Reset Escalation

These features are implemented in the MPC5744P RGM module.

The Functional Reset Escalation is enabled by writing a non-zero value to the FRET field of the RGM\_FRET register. It can be used to generate a 'destructive' reset if a number (programmed in the RGM\_FRET) of 'functional' or external resets has occurred between software writes to the RGM\_FRET register. The Destructive Reset Escalation is enabled by writing a non-zero value to the DRET field of the RGM\_DRET register. It is used to keep MPC5744P in the reset state until the power-on triggers a reset sequence if a number (programmed in the RGM\_DRET) of 'destructive' resets has occurred between software writes to the RGM\_DRET register. When MPC5744P stay in reset it cases that MC33907/08 move to Deep Fail state mode where all the power regulators are turn off. There are two possibilities how to wake up MC33907/08 followed by MPC5744P. The first one is to turn off and turn on the power supply – Power on Reset for MC33907/08. And the second one is the transition on the IO\_0 pin of MC33907/08 (IO\_0 = 0 followed by IO\_0 =1). IO\_0 is normally connected to Ignition key of the car to wake up MC33907/08.

## 6. Conclusion

This application note has described the hardware aspects on integrating the Freescale MPC5744P and MC33907/08. For further information, refer to the documents mentioned in [Reference](#) section.

Freescale SafeAssure program: Functional Safety, Simplified.

For more information, visit [www.freescale.com/SafeAssure](http://www.freescale.com/SafeAssure).

## 7. Reference

For additional information, refer to the following documents available at [freescale.com](http://freescale.com):

- AN4442: *Integration the MPC5643L and MC33907/08 for Safety Application*
- AN4766: *MC33907/08 HW Design and Product Guidelines*
- MPC5744PRM: *MPC5744P Microcontroller Reference Manual*
- MPC5744P: *MPC5744P Data Sheet*
- MC33907-MC33908D2: *MC33907/08 Data Sheet*
- MPC5744PSM : *Safety Manual for MPC5744P*
- MC33907\_8SMUG : *Safety Manual for MC33907/08*





**How to Reach Us:**

**Home Page:**  
[freescale.com](http://freescale.com)

**Web Support:**  
[freescale.com/support](http://freescale.com/support)

Information in this document is provided solely to enable system and software implementers to use Freescale products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits based on the information in this document.

Freescale reserves the right to make changes without further notice to any products herein. Freescale makes no warranty, representation, or guarantee regarding the suitability of its products for any particular purpose, nor does Freescale assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. “Typical” parameters that may be provided in Freescale data sheets and/or specifications can and do vary in different applications, and actual performance may vary over time. All operating parameters, including “typicals,” must be validated for each customer application by customer’s technical experts. Freescale does not convey any license under its patent rights nor the rights of others. Freescale sells products pursuant to standard terms and conditions of sale, which can be found at the following address: [freescale.com/SalesTermsandConditions](http://freescale.com/SalesTermsandConditions).

Freescale and the Freescale logo are trademarks of Freescale Semiconductor, Inc., Reg. U.S. Pat. & Tm. Off.

SafeAssure and SafeAssure logo are trademarks of Freescale Semiconductor, Inc. All other product or service names are the property of their respective owners.

© 2015 Freescale Semiconductor, Inc.

Document Number: AN5099  
Rev. 0  
04/2015