

RV1126/RV1109 Linux SDK Quick Start

ID: RK-JC-YF-360

Release Version: V2.2.0

Release Date: 2021-05-01

Security Level: ☐Top-Secret ☐Secret ☐Internal ☒Public

DISCLAIMER

THIS DOCUMENT IS PROVIDED "AS IS". ROCKCHIP ELECTRONICS CO., LTD. ("ROCKCHIP") DOES NOT PROVIDE ANY WARRANTY OF ANY KIND, EXPRESSED, IMPLIED OR OTHERWISE, WITH RESPECT TO THE ACCURACY, RELIABILITY, COMPLETENESS, MERCHANTABILITY, FITNESS FOR ANY PARTICULAR PURPOSE OR NON-INFRINGEMENT OF ANY REPRESENTATION, INFORMATION AND CONTENT IN THIS DOCUMENT. THIS DOCUMENT IS FOR REFERENCE ONLY. THIS DOCUMENT MAY BE UPDATED OR CHANGED WITHOUT ANY NOTICE AT ANY TIME DUE TO THE UPGRADES OF THE PRODUCT OR ANY OTHER REASONS.

Trademark Statement

"Rockchip", "瑞芯微", "瑞芯" shall be Rockchip's registered trademarks and owned by Rockchip. All the other trademarks or registered trademarks mentioned in this document shall be owned by their respective owners.

All rights reserved. ©2021. Rockchip Electronics Co., Ltd.

Beyond the scope of fair use, neither any entity nor individual shall extract, copy, or distribute this document in any form in whole or in part without the written approval of Rockchip.

Rockchip Electronics Co., Ltd.

No.18 Building, A District, No.89, software Boulevard Fuzhou, Fujian, PRC

Website: www.rock-chips.com

Customer service Tel: +86-4007-700-590

Customer service Fax: +86-591-83951833

Customer service e-Mail: fae@rock-chips.com

Preface

Overview

The document presents the basic usage of Rockchip RV1126/RV1109 Linux SDK, aiming to help engineers get started with RV1126/RV1109 Linux SDK faster.

Product Version

Chipset	Kernel Version
RV1126/RV1109	Linux 4.19

Intended Audience

This document (this guide) is mainly intended for:

- Technical support engineers
- Software development engineers

Revision History

Version	Author	Date	Revision History
V0.0.1	CWW	2020-04-28	Initial version
V0.0.2	CWW	2020-05-09	Update the interface of RK IPCamera Tool
V0.0.3	CWW	2020-05-20	Add libssl-dev and expect for building environment
V1.0.0	CWW	2020-05-25	1. update chapter 3 & 4.4 & 4.5 2. add fast boot compile guide 3. add chapter 5.4
V1.1.0	CWW	2020-06-08	1. update company name 2. update document style 3. update chapter 2
V1.1.1	CWW	2020-06-16	fix company name
V1.2.0	HJC	2020-06-22	Add smart usb camera product section
V1.2.1	CWW	2020-06-29	1. update chapter 4.4 2. Add install fakeroot for building environment
V1.3.0	CWW	2020-07-09	1. Add module path and document introduction 2. Add Build different Boards
V1.3.1	CWW	2020-07-15	1. Remove unused board config introduction 2. fix same content3. fix eMMC typo
V1.4.0	CWW	2020-07-16	1. Add ISP Tool RKISP2.x_Tuner introduction 2. Add Develop Tool introduction 3. Add board config introduction
V1.4.1	CWW	2020-07-17	1. Update chapter of SDK Building Introduction 2. Update Tool's Description
V1.5.0	CWW	2020-08-07	1. Update SDK board configure and compile instruction 2. Add install cmake for development environment
V1.6.0	LJH	2020-08-22	1. Add facial gate product section 2. Update SDK compile instruction
V1.6.1	CWW	2020-09-07	1. Add new board RV1126_RV1109_IPC38_DEMO_V1.11_2020724LX
V1.7.0	CWW	2020-09-16	1. Add WiFi and Upgrade documents 2. Update compilation 3. update install bison and flex 4. Add print SDK version 5. Add two methods of compiling SDK in the chapter of "SDK Building Introduction"

Version	Author	Date	Revision History
V1.8.0	CWW	2020-09-25	<ol style="list-style-type: none"> 1. Add install liblz4-tool, keychain and libtool for development environment 2. Update documents 3. Add ADB debug via network
V1.8.1	CWW	2020-10-29	update training video link
V1.8.2	LJH	2020-11-02	update facial gate product section
V1.9.0	CWW	2020-11-14	<ol style="list-style-type: none"> 1. Update spi nand/slc nand BoardConfig and Document 2. Update requirement version for windows and Linux tool
V1.9.1	CWW	2020-11-22	Add spi nor BoardConfig
V1.9.2	CWW	2020-12-02	<ol style="list-style-type: none"> 1. Add AB system boot-up board config reference 2. introduced to U-Boot's tftp
V1.9.3	CWW	2020-12-04	<ol style="list-style-type: none"> 1. Add GPIO Precaution 2. Add introduction to starting face recognition function
V1.9.4	CWW	2020-12-17	<ol style="list-style-type: none"> 1. Add AB system for SPI NAND with 38 board config 2. Add introduction to flash SPI NOR Firmware.img
V1.9.5	CWW	2020-12-29	<ol style="list-style-type: none"> 1. Optimize typo 2. Remove some unused project
V1.9.6	CWW	2020-12-31	<ol style="list-style-type: none"> 1. Add uboot use tftp to upgrade loader partition
V1.9.7	CWW	2021-01-08	<ol style="list-style-type: none"> 1. Update the way to build UBI filesystem image
V1.9.8	XZY	2021-02-03	Add minigui_demo instruction
V2.0.0	CWW	2021-02-18	<ol style="list-style-type: none"> 1. Add Linux Tool programmer_image_tool 2. Update introduction to Rootfs configuration 3. Update the project compilation method in the app and external directory 4. Add introduction to BSP compile
V2.0.1	CWW	2021-03-02	Add the QR code address
V2.1.0	CWW	2021-04-27	<ol style="list-style-type: none"> 1. Update docs 2. Add cross-compile tool 3. Add application development suggestions
V2.2.0	CWW	2021-05-01	<ol style="list-style-type: none"> 1. Update SDK Download Address 2. Fix typo Set up an Development Environment

Contents

RV1126/RV1109 Linux SDK Quick Start

1. Set up an Development Environment
2. SDK Configuration Framework Introduction
 - 2.1 SDK Project Directory Introduction
 - 2.2 RV1109/RV1126 Modules Directory Introduction
 - 2.3 RV1109/RV1126 Develop Document
 - 2.3.1 Directory of docs index
 - 2.3.2 ISP Tuner tool and document
 - 2.3.3 SPI NAND/SLC NAND document
 - 2.3.4 Some of modules video training
 - 2.4 RV1109/RV1126 Develop Tools
 - 2.4.1 Windows Tools
 - 2.4.2 Linux Tools
 - 2.5 SDK Configuration Framework
3. SDK Building Introduction
 - 3.1 SDK Download Address
 - 3.1.1 SDK Sync and log
 - 3.1.1.1 SDK Sync
 - 3.1.1.2 Get the version of SDK
 - 3.1.1.3 Create the branch name default for every project
 - 3.2 Cross-compile tool Introduction
 - 3.3 To Select Board Configuration
 - 3.3.1 The directory of SDK board config (device/rockchip/rv1126_rv1109)
 - 3.4 To View Building Commands
 - 3.5 U-Boot Building
 - 3.5.1 Instructions to U-Boot config
 - 3.6 Kernel Building
 - 3.6.1 Instructions to kernel config
 - 3.7 Recovery Building
 - 3.7.1 Instructions to Recovery config
 - 3.8 Rootfs Building
 - 3.8.1 Instructions to Rootfs config
 - 3.8.2 The compilation of projects which under the directory of app and external
 - 3.9 Instructions to Build BSP Libraries
 - 3.10 Firmware Package
 - 3.11 Full Automatic Building
4. Application Development Suggestions
5. Upgrade Introduction
 - 5.1 TOP Surface of the EVB
 - 5.2 Bottom Surface of the EVB
 - 5.3 EVB Function Table
 - 5.4 Bottom Surface of EVB Sensor board
 - 5.5 Windows Upgrade Introduction
 - 5.6 Linux Upgrade Introduction
6. EVB Function Introduction and Precaution
 - 6.1 The precaution of GPIO power design
 - 6.2 How to Access 3 RTSP and 1 RTMP Network Stream
 - 6.2.1 Get Device IP Address by Serial Port or ADB of the EVB
 - 6.2.2 Get Device IP Address by RK IPCamera Tool
 - 6.2.3 Access Network Stream
 - 6.3 How to Access Device Information via Web
 - 6.4 How to Test Face Recognition Function
 - 6.5 How to Debug With EVB via Network
 - 6.5.1 Debug With SSH
 - 6.5.2 Debug With SCP

- 6.5.3 Debug with ADB via TCP/IP
- 6.6 SPI NAND/SLC NAND ubi filesystem introduction
 - 6.6.1 Introduction to ubi filesystem of rootfs
 - 6.6.2 Introduction to oem and userdata partition used in ubifs
- 6.7 Introduced to the usage of U-Boot's tftp
 - 6.7.1 Configure U-Boot's ethernet phy
 - 6.7.2 The usage of U-Boot's tftp download
 - 6.7.2.1 Upgrade loader with tftp for eMMC storage
 - 6.7.2.2 Upgrade loader with tftp for SPI NAND storage
- 7. Smart USB Camera Product
 - 7.1 Product Building Introduction
 - 7.1.1 Select Board Configuration for USB Camera Product
 - 7.1.2 Building
 - 7.2 Product Software Framework
 - 7.2.1 uvc_app
 - 7.2.2 mediaserver
 - 7.2.3 Other
 - 7.3 Function Introduction
 - 7.3.1 How To Preview For USB Camera
 - 7.3.2 How To Test AI Model Post-processing
 - 7.3.3 How To Test EPTZ
- 8. Facial Gate Product
 - 8.1 Product Building Introduction
 - 8.1.1 Select Board Configuration for Facial Gate Product
 - 8.1.2 Building
 - 8.2 **QFacialGate Application**
 - 8.3 **minigui_demo Application**
 - 8.3.1 Other

1. Set up an Development Environment

Ubuntu 16.04 system: Please install software packages with below commands to set up a building environment:

```
sudo apt-get install repo device-tree-compiler \
git-core u-boot-tools mtools \
parted libudev-dev libusb-1.0-0-dev \
python-linaro-image-tools linaro-image-tools \
autoconf autotools-dev libsigsegv2 m4 \
intltool libdrm-dev curl sed make binutils \
build-essential gcc g++ bash patch gzip gawk \
bzip2 perl tar cpio python unzip rsync \
file bc wget libncurses5 libqt4-dev libglib2.0-dev \
libgtk2.0-dev libglade2-dev cvs git \
mercurial openssh-client subversion asciidoc w3m \
dblatex graphviz python-matplotlib \
libc6:i386 libssl-dev expect fakeroot cmake flex \
bison liblz4-tool libtool keychain
```

Ubuntu 17.04 or later version system:

In addition to the above software packages, the following dependencies is needed:

```
sudo apt-get install lib32gcc-7-dev g++-7 libstdc++-7-dev
```

2. SDK Configuration Framework Introduction

2.1 SDK Project Directory Introduction

There are buildroot, app, kernel, u-boot, device, docs, external and other directories in the project directory. Each directory or its sub-directories will correspond to a git project, and the commit should be done in the respective directory.

- buildroot: customized root file system.
- app: store applications.
- external: related libraries, including audio and video.
- kernel: kernel code.
- device/rockchip: stores some scripts and prepared files for building and packaging firmware of each chip.
- docs: stores development guides, platform support lists, tool usage, Linux development guides, and so on.
- prebuilts: stores cross-compilation toolchain.
- rkbin: stores firmware and tools.
- rockdev: stores building output firmware.
- tools: stores some commonly used tools.
- u-boot: U-Boot code.

2.2 RV1109/RV1126 Modules Directory Introduction

some of modules directory path	modules introduction
external/recovery	recovery and Rockchip upgrade code
external/rkwifibt	Wi-Fi and BT
external/rk_pcba_test	PCBA test code
external/isp2-ipc	Image signal processing server
external/mpp	encoding and decoding
external/rkmedia	Rockchip Multimedia interface
external/camera_engine_rkaiq	Image processing algorithm module
external/rknpu	NPU driver
external/rockface	Face recognition code
external/CallFunIpc	Application interprocess communication code
external/common_algorithm	Audio and video general algorithm library
external/rknn-toolkit	Development kit for model transformation, reasoning and performance evaluation
app/libIPCProtocol	Based on dbus, provides a functional interface for inter-process communication
app/mediaserver	Main application providing multimedia services (Used for IPC application development reference or simple function demonstration)
app/ipc-daemon	System guard service
app/dbserver	Database service
app/netserver	Network services
app/storage_manager	Storage management service
app/ipcweb-backend	web backend
app/librkdb	Database interface
app/ipcweb-ng	Web front end, using Angular 8 framework
app/minigui_demo	A simple GUI demo that is implemented on MiniGUI

2.3 RV1109/RV1126 Develop Document

2.3.1 Directory of docs index

```
|— docs
|   |— Common (drivers documents of Linux kernel and
DDR/Flash/eMMC/Camera/WiFi/Bluetooth AVL)
|   |
|   |— Linux (Rockchip Linux general documents, for RV1126/RV1109 reference
only)
|       |— ApplicationNote
|       |— Camera
|       |— Graphics
|       |— Multimedia (multimedia encoding and decoding interface develop guide)
|       |— Profile
|       |— Recovery (upgrade document)
|       |   |— Rockchip_Developer_Guide_Linux_Upgrade_CN.pdf
|       |   |— Rockchip_Developer_Guide_Linux_Upgrade_EN.pdf
|       |— Security (security document, apply to RV1126/RV1109)
|       |— Wifibt (WiFi and Bluetooth, apply to RV1126/RV1109)
|           |— AP模组RF测试文档
|           |— REALTEK模组RF测试文档
|           |— WIFI性能测试PC工具
|       |
|       |— Others
|           |— Rockchip_User_Guide_Bug_System_CN.pdf
|           |— Rockchip_User_Guide_SDK_Application_And_Synchronization_CN.pdf
|       |
|       |— RV1126_RV1109
|           |— ApplicationNote (Rockchip Application Framework Develop Introduction
and Web Develop Guide)
|               |— Rockchip_Developer_Guide_Linux_Application_Framework_CN.pdf
|               |— Rockchip_Developer_Guide_Linux_Application_Framework_EN.pdf
|               |— Rockchip_Instructions_Linux_CGI_API_CN.pdf
|               |— Rockchip_Instructions_Linux_MediaServer_CN.pdf
|               |— Rockchip_Instructions_Linux_MediaServer_EN.pdf
|               |— Rockchip_Instructions_Linux_Web_Configuration_CN.pdf
|               |— Rockchip_Instructions_Linux_Web_Configuration_EN.pdf
|               |
|               |— Camera (ISP develop guide)
|                   |— Camera_External_FAQ_v1.0.pdf
|                   |— Rockchip_Color_Optimization_Guide_ISP2x_V1.1.0.pdf
|                   |— Rockchip_Development_Guide_ISP2x_CN_v1.2.0.pdf
|                   |— Rockchip_Driver_Guide_ISP2x_CN_v0.1.0.pdf
|                   |— Rockchip_Instruction_Linux_Application_ISP20_CN.pdf
|                   |— Rockchip_IQ_Tools_Guide_ISP2x_CN_v1.0.0.pdf
|                   |— Rockchip_RV1109_RV1126_Developer_Guide_Linux_Ispserver_CN.pdf
|                   |— Rockchip_Tuning_Guide_ISP2x_CN_v1.0.0.pdf
|               |
|               |— Multimedia
|                   |— Rockchip_Developer_Guide_Linux_RKMedia_CN.pdf (multimedia
interface develop guide)
```

```

|      |─ Rockchip_RV1126_RV1109_EVB_User_Guide_V1.0_CN.pdf (Hardware Develop
Guide)
|      |─ Rockchip_RV1126_RV1109_EVB_User_Guide_V1.0_EN.pdf
|      |─ Rockchip_RV1126_RV1109_Instruction_Linux_Separate_Building_EN.pdf
(Separate U-Boot/Kernel/Rootfs building from SDK)
|      |─ Rockchip_RV1126_RV1109_Linux_SDK_V1.1.1_20200711_CN.pdf (SDK Release
Note)
|      |─ Rockchip_RV1126_RV1109_Linux_SDK_V1.1.1_20200711_EN.pdf
|      |─ Rockchip_RV1126_RV1109_Quick_Start_Linux_CN.pdf (Quick Start Guide)
|      |─ Rockchip_RV1126_RV1109_Quick_Start_Linux_EN.pdf
|      |─ RV1109 Multimedia Codec Benchmark v1.2.pdf (Encoding&Decoding
Introduction)
|      |─ RV1126 Multimedia Codec Benchmark v1.1.pdf
|      |─ RV1126_RV1109_Release_Note.txt
|
└─ external
    |─ rknn-toolkit (Development kit for model transformation,
    |               reasoning and performance evaluation)
    |   └─ doc
    |       |─ Rockchip_Developer_Guide_RKNN_Toolkit_Custom_OP_V1.3.2_CN.pdf
    |       |─ Rockchip_Developer_Guide_RKNN_Toolkit_Custom_OP_V1.3.2_EN.pdf
    |       |─ Rockchip_Quick_Start_RKNN_Toolkit_V1.3.2_CN.pdf
    |       |─ Rockchip_Quick_Start_RKNN_Toolkit_V1.3.2_EN.pdf
    |       |─ Rockchip_Trouble_Shooting_RKNN_Toolkit_V1.3.2_CN.pdf
    |       |─ Rockchip_Trouble_Shooting_RKNN_Toolkit_V1.3.2_EN.pdf
    |       |─ Rockchip_User_Guide_RKNN_Toolkit_V1.3.2_CN.pdf
    |       |─ Rockchip_User_Guide_RKNN_Toolkit_V1.3.2_EN.pdf
    |       |─ Rockchip_User_Guide_RKNN_Toolkit_Visualization_V1.3.2_CN.pdf
    |       └─ Rockchip_User_Guide_RKNN_Toolkit_Visualization_V1.3.2_EN.pdf
    └─ rknpu
        └─ rknn (Rockchip NPU Develop Guide)
            └─ doc
                |─ Rockchip_User_Guide_RKNN_API_V1.3.3_CN.pdf
                └─ Rockchip_User_Guide_RKNN_API_V1.3.3_EN.pdf

```

2.3.2 ISP Tuner tool and document

Path of document:

```
external/camera_engine_rkaiq/rkisp2x_tuner/doc/Rockchip_IQ_Tools_Guide_ISP2x_v1.3.pdf
```

Path of Tool:

```
external/camera_engine_rkaiq/rkisp2x_tuner/RKISP2.x_Tuner_v0.2.1_AIQ1.2.1.exe
```

ISP develop guide documents and the support list of camera sensor can be got from the Redmine

```
https://redmine.rock-chips.com/documents/53
```

2.3.3 SPI NAND/SLC NAND document

Path of document:

```
docs/Linux/ApplicationNote/Rockchip_Developer_Guide_Linux_Nand_Flash_Open_Source_Solution_EN.pdf
```

2.3.4 Some of modules video training

- Instructions to RKMedia of RV1109 & RV1126

```
link: https://pan.baidu.com/s/1Z4o2v2KL6eCKXgI2fMEcSA
fetch code: vkh2
```

- Instructions to development kit of RK NPU and Q&A

```
link: https://pan.baidu.com/s/10w7R_q857uVEXq-88Pu-1g
fetch code: c66l
```

- Instructions to debug camera's sensor driver

```
link: https://pan.baidu.com/s/1rva6ZDj1x-T1rNcxV354KA
fetch code: z4uh
```

- RV1126&RV1109 Linux SDK Quick Start develop guide

```
link: https://pan.baidu.com/s/1iXwOdXH0jIR3iGQc0gluow
fetch code: t9o0
```

- Instructions to calibration process of RK ISP2

```
link: https://pan.baidu.com/s/1tZloen4B4jIIl2w1R2hWfg
fetch code: nrp3
```

- Instructions to calibration method of RK ISP2 base modules and tool usage

```
link: https://pan.baidu.com/s/1L0zSxInjqTyqDBesg4RL1w
fetch code: 8yc6
```

2.4 RV1109/RV1126 Develop Tools

2.4.1 Windows Tools

Release Note: tools/windows/ToolsRelease.txt


Tool's Name	Tool's Description
RKDevTool	discrete firmware upgrade and the entire update.img firmware upgrade tool
FactoryTool	factory production upgrade tool
SecureBootTool	firmware signing tool
efuseTool	efuse flash tool
RKDevInfoWriteTool	serial number burning tool
SDDiskTool	sd card firmware create tool
SpiImageTools	burner upgrade tool for eMMC (The document is in the package of FactoryTool)
DriverAssitant	rockchip pc driver for upgrade tool
RKImageMaker	firmware package tool (generate update.img)
SpeakerPCBATool	soundbox PCBA test tool
RKDevTool_Release	rockchip firmware flash tool
ParameterTool	rockchip partition modify tool
RK_IPCamera_Tool	rockchip ipc camera search tool

2.4.2 Linux Tools

Release Note: tools/linux/ToolsRelease.txt

Tool's Name	Tool's Description
Linux_Pack_Firmware	firmware package tool (generate update.img)
Linux_Upgrade_Tool	rockchip firmware flash tool
Linux_SecureBoot	firmware signing tool
Firmware_Merger	SPI NOR firmware package tool (generate firmware.img for burner)
programmer_image_tool	build manufacture programmer firmware image for SPI NOR/SPI NAND/SLC NAND/eMMC

2.5 SDK Configuration Framework

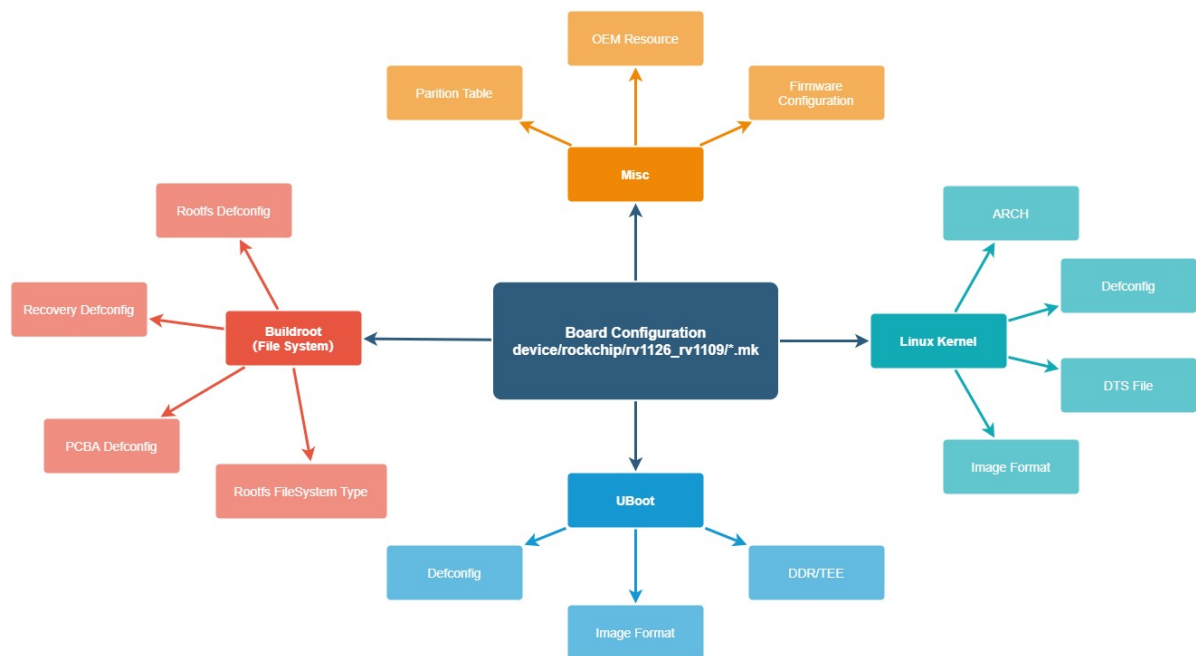

3. SDK Building Introduction

Description of two methods of compiling SDK:

- One is to rely on the entire SDK environment to compile (the method introduced in this chapter)
- The other is to compile U-Boot, Linux Kernel, Rootfs and application libraries independently from the SDK (refer to the document for specific methods:
docs/RV1126_RV1109/Rockchip_RV1126_RV1109_Instruction_Linux_Separate_Building_EN.pdf)

3.1 SDK Download Address

```

repo init --repo-url ssh://git@www.rockchip.com.cn/repo/rk/tools/repo \
-u ssh://git@www.rockchip.com.cn/linux/rockchip/platform/manifests \
-b linux -m rv1126_rv1109_linux_release.xml

.repo/repo/repo sync -c -j4
  
```

3.1.1 SDK Sync and log

3.1.1.1 SDK Sync

```
.repo/repo/repo sync -c -j4
repo: warning: Python 2 is no longer supported; Please upgrade to Python 3.6+.
repo: warning: Python 2 is no longer supported; Please upgrade to Python 3.6+.
Fetching projects: 100% (71/71), done.
info: A new version of repo is available

warning: project 'repo' branch 'stable' is not signed
warning: Skipped upgrade to unverified version
Checking out projects: 100% (71/71), done.
repo sync has finished successfully.
```

3.1.1.2 Get the version of SDK

Run this command in the root directory of SDK:

```
realpath .repo/manifests/rv1126_rv1109_linux_release.xml

# e.g. SDK version is v1.3.1
# update time is 2020-09-21
# /home/rv1109-
SDK/.repo/manifests/rv1126_rv1109_linux/rv1126_rv1109_linux_v1.3.1_20200921.xml
```

3.1.1.3 Create the branch name default for every project

```
.repo/repo/repo start default --all
repo: warning: Python 2 is no longer supported; Please upgrade to Python 3.6+.
repo: warning: Python 2 is no longer supported; Please upgrade to Python 3.6+.
Starting default: 100% (71/71), done.
```

3.2 Cross-compile tool Introduction

There are two cross-compile tools in the SDK, as follow:

Directory	Introduction
prebuilts/gcc/linux-x86/arm/gcc-arm-8.3-2019.03-x86_64-arm-linux-gnueabi	used to build rootfs and app
prebuilts/gcc/linux-x86/arm/gcc-linaro-6.3.1-2017.05-x86_64_arm-linux-gnueabi	used to build U-Boot and Linux kernel

Network disk address: Link: <https://eyun.baidu.com/s/3eTwRktG> Password: yaCM

3.3 To Select Board Configuration

3.3.1 The directory of SDK board config (device/rockchip/rv1126_rv1109)

Board Configuration	Product Use	Storage Medium	EVB Board name
BoardConfig-38x38-emmc.mk	General IPC (Discrete power supply)	eMMC	TBD
BoardConfig-38x38-spi-nand.mk	General IPC (Discrete power supply)	SPI NAND	RV1126_RV1109_38X38_SPI_DDR3P216DD6_V10_20200511LXF
BoardConfig-38x38-spi-nand.mk	General IPC (Discrete power supply)	SPI NAND	RV1126_RV1109_IPC38_DEMO_V1.11_2020724LX
BoardConfig-38x38-spi-nand-ab.mk	General IPC (Discrete power supply), Boot-up with AB system	SPI NAND	RV1126_RV1109_IPC38_DEMO_V1.11_2020724LX
BoardConfig-robot.mk	Robot Sweeper IPC	eMMC	RV1126_RV1109_EVB_DDR3P216SD6_V13_20200630LXF
BoardConfig-tb-v12.mk	Door lock or doorbell products with battery	eMMC	RV1126_RV1109_EVB_DDR3P216SD6_V12_20200515KYY
BoardConfig-tb-v13.mk	Door lock or doorbell products with battery	eMMC	RV1126_RV1109_EVB_DDR3P216SD6_V13_20200630LXF
BoardConfig-spi-nand.mk	General IPC	SPI NAND	RV1126_RV1109_EVB_DDR3P216SD6_V12_20200515KYY
BoardConfig.mk	General IPC	eMMC	RV1126_RV1109_EVB_DDR3P216SD6_V13_20200630LXF
BoardConfig-ab-v13.mk	General IPC, Boot-up with AB system	eMMC	RV1126_RV1109_EVB_DDR3P216SD6_V13_20200630LXF
BoardConfig-v12.mk	General IPC	eMMC	RV1126_RV1109_EVB_DDR3P216SD6_V12_20200515KYY
BoardConfig-slc-nand-v12.mk	General IPC	SLC NAND	RV1126_RV1109_EVB_DDR3P216SD6_V12_20200515KYY
BoardConfig-v10-v11.mk	General IPC	eMMC	RV1126_RV1109_EVB_DDR3P216SD6_V11_20200312LXF
BoardConfig-spi-nor-v12.mk	Base system and only RTSP stream to preview	SPI NOR	RV1126_RV1109_EVB_DDR3P216SD6_V12_20200515KYY
BoardConfig-facial_gate.mk	Door Control or Turnstile	eMMC	RV1126_RV1109_EVB_DDR3P216SD6_V13_20200630LXF
+++++	+++++	+++++	+++++

Command of select board configure:

Method 1 `./build.sh` "path to board config file", for example:

select **General IPC** board configuration

```
./build.sh device/rockchip/rv1126_rv1109/BoardConfig.mk
```

select **Door lock or doorbell products with battery** board configuration, apply to EVB Board
RV1126_RV1109_EVB_DDR3P216SD6_V13_20200630LXF

```
./build.sh device/rockchip/rv1126_rv1109/BoardConfig-tb-v13.mk
```

select **Door Control or Turnstile**, apply to EVB Board
RV1126_RV1109_EVB_DDR3P216SD6_V13_20200630LXF

```
./build.sh device/rockchip/rv1126_rv1109/BoardConfig-facial_gate.mk
```

Method 2

```
./build.sh lunch
processing board option: lunch
processing option: lunch

You're building on Linux
Lunch menu...pick a combo:

0. default BoardConfig.mk
1. BoardConfig-38x38-spi-nand.mk
2. BoardConfig-ab-v13.mk
3. BoardConfig-battery-ipc.mk
4. BoardConfig-facial_gate.mk
```

```

5. BoardConfig-robot.mk
6. BoardConfig-sl.mk
7. BoardConfig-slc-nand-v12.mk
8. BoardConfig-spi-nand.mk
9. BoardConfig-spi-nor-tb-v13.mk
10. BoardConfig-spi-nor-v12.mk
11. BoardConfig-tb-v12.mk
12. BoardConfig-tb-v13.mk
13. BoardConfig-v10-v11.mk
14. BoardConfig-v12.mk
15. BoardConfig.mk
Which would you like? [0]:
switching to board: /home/rv1109/device/rockchip/rv1126_rv1109/BoardConfig.mk

```

3.4 To View Building Commands

Execute the following command in the root directory: `./build.sh -h|help`

```

./build.sh help
Usage: build.sh [OPTIONS]
Available options:
BoardConfig*.mk    -switch to specified board config
lunch              -list current SDK boards and switch to specified board config
uboot              -build uboot
spl                -build spl
loader            -build loader
kernel            -build kernel
modules           -build kernel modules
toolchain         -build toolchain
rootfs            -build default rootfs, currently build buildroot as default
buildroot         -build buildroot rootfs
ramboot           -build ramboot image
multi-npu_boot    -build boot image for multi-npu board
yocto             -build yocto rootfs
debian            -build debian9 stretch rootfs
distro            -build debian10 buster rootfs
pcba              -build pcba
recovery          -build recovery
all               -build uboot, kernel, rootfs, recovery image
cleanall          -clean uboot, kernel, rootfs, recovery
firmware          -pack all the image we need to boot up system
updateimg         -pack update image
otapackage        -pack ab update otapackage image
save              -save images, patches, commands used to debug
allsave           -build all & firmware & updateimg & save

Default option is 'allsave'.

```

To view detailed building commands for some modules, for example: `./build.sh -h kernel`


```
./build.sh -h kernel
###Current SDK Default [ kernel ] Build Command###
cd kernel
make ARCH=arm rv1126_defconfig
make ARCH=arm rv1126-evb-ddr3-v10.img -j12
```

3.5 U-Boot Building

```
### to view detailed U-Boot build command
./build.sh -h uboot

### U-Boot building command
./build.sh uboot
```

3.5.1 Instructions to U-Boot config

```
### use menuconfig to configure U-Boot, select config, save and exit.
### rv1126_defconfig can be found in the directory of u-boot/configs
### command format: make "RK_UBOOT_DEFCONFIG"_defconfig
### RK_UBOOT_DEFCONFIG define in the BoardConfig*.mk file which ./build.sh select
cd u-boot
make rv1126_defconfig
make menuconfig

### save config to rv1126_defconfig
make savedefconfig
cp defconfig configs/rv1126_defconfig
```

3.6 Kernel Building

```
### to view detailed Kernel build command
./build.sh -h kernel

### use menuconfig to configure Kernel, select config, save and exit.
### e.g. EVB Board
cd kernel
make ARCH=arm rv1126_defconfig
make ARCH=arm menuconfig

### Kernel building command
./build.sh kernel
```

3.6.1 Instructions to kernel config

```
### e.g. device/rockchip/rv1126_rv1109/BoardConfig.mk
./build.sh device/rockchip/rv1126_rv1109/BoardConfig.mk
cd kernel

### command format: make ARCH=arm "RK_KERNEL_DEFCONFIG"
"RK_KERNEL_DEFCONFIG_FRAGMENT"
### RK_KERNEL_DEFCONFIG and RK_KERNEL_DEFCONFIG_FRAGMENT is define in the
BoardConfig*.mk file which ./build.sh select
### RK_KERNEL_DEFCONFIG_FRAGMENT is optional, refer to BoardConfig*.mk
make ARCH=arm rv1126_defconfig
make ARCH=arm menuconfig

make ARCH=arm savedefconfig
cp defconfig arch/arm/configs/rv1126_defconfig
```

3.7 Recovery Building

```
### to view detailed Recovery build command
./build.sh -h recovery

### Recovery building command
./build.sh recovery
```

3.7.1 Instructions to Recovery config

```
### 1. Get the recovery configure of the board config.
./build.sh -h recovery
#   ###Current SDK Default [ recovery ] Build Command###
#   source envsetup.sh rockchip_rv1126_rv1109_recovery
#   device/rockchip/common/mk-ramdisk.sh recovery.img
rockchip_rv1126_rv1109_recovery

### 2. source the defconfig of buildroot
source envsetup.sh rockchip_rv1126_rv1109_recovery

### 3. use menuconfig to configure Recovery, select config, save and exit.
### e.g. disable recovery ui config is BR2_PACKAGE_RECOVERY_NO_UI (see
buildroot/package/rockchip/recovery/Config.in)
make menuconfig # enter menuconfig, input "/" and goto search mode, input
BR2_PACKAGE_RECOVERY_NO_UI

### 4. save to recovery config file
###   ./buildroot/configs/rockchip_rv1126_rv1109_recovery_defconfig
make savedefconfig
```

NOTE: Recovery is a non-essential function, some board configuration will not be set.

3.8 Rootfs Building

```
### to view detailed Rootfs build command
./build.sh -h rootfs

### Rootfs building command
./build.sh rootfs
```

3.8.1 Instructions to Rootfs config

```
### 1. In the root directory SDK, get the rootfs configure of the board config.
./build.sh -h rootfs
#   ### Current SDK Default [ rootfs ] Build Command###
#   source envsetup.sh rockchip_rv1126_rv1109
#   make

### 2. source the defconfig of buildroot
source envsetup.sh rockchip_rv1126_rv1109

### 3. use menuconfig to configure Rootfs, select config, save and exit.
### e.g. ipc-daemon's config
###     a. find the config file for app/ipc-daemon
###     grep -lr "app/ipc-daemon" buildroot/package
###     buildroot/package/rockchip/ipc-daemon/ipc-daemon.mk
###     Corresponding configuration file: buildroot/package/rockchip/ipc-
daemon/Config.in
###
###     b. Get configuration name: BR2_PACKAGE_IPC_DAEMON
###     see: buildroot/package/rockchip/ipc-daemon/Config.in
make menuconfig # enter menuconfig, input "/" and goto search mode, input
BR2_PACKAGE_IPC_DAEMON

### 4. save to rootfs config file
###     ./buildroot/configs/rockchip_rv1126_rv1109_defconfig
make savedefconfig
```

3.8.2 The compilation of projects which under the directory of app and external

```
# Update SDK version to V1.8.0
# command format: ./build.sh app/<pkg1> app/<pkg2> external/<pkg3> ...
#               <pkg1>,<pkg2>,<pkg3> are projects in app and external
directories
# e.g. compile external/mpp and app/mediaserver
./build.sh external/mpp app/mediaserver
```

[NOTE]: /app and /external are also the package of Buildroot.

3.9 Instructions to Build BSP Libraries

The SDK BSP package only contains audio and video codec libraries, NPU libraries, and header files. Note: BSP package does not include file system.

```
source envsetup.sh rockchip_rv1126_rv1109_libs

make -j12
```

Compile the directory generated by the BSP `buildroot/output/rockchip_rv1126_rv1109_libs/BSP`

```
tree buildroot/output/rockchip_rv1126_rv1109_libs/BSP/
buildroot/output/rockchip_rv1126_rv1109_libs/BSP/
├── example
│   ├── common
│   ├── iqfiles
│   ├── librtsp
│   ├── multi_audio_test
│   ├── rknn_model
│   ├── stressTest
│   └── vqefiles
├── include
│   ├── rga
│   ├── rkaiq
│   └── rkmedia
├── lib
└── npu
    ├── include
    ├── ko
    └── lib
```

3.10 Firmware Package

Firmware packaging command: `./mkfirmware.sh`

Firmware directory: rockdev

3.11 Full Automatic Building

Enter the project root directory and execute the following command to automatically complete all buildings:

```
./build.sh all # Only build with u-Boot, kernel, Rootfs and Recovery
               # then use ./mkfirmware.sh to package firmware.


./build.sh     # build with ./build.sh all, and then do these as follow:
               # 1. package firmware to directory "rockdev"
               # 2. package update.img
               # 3. copy rockdev directory to IMAGE/***_RELEASE_TEST/IMAGES
               # 4. copy the patches of modules to IMAGE/***_RELEASE_TEST/PATCHES
               # NOTE: ./build.sh allsave is the same as ./build.sh
```

4. Application Development Suggestions


It is recommended to develop applications by reference to the `external/rkmedia/examples`
`app/mediaserver` is just realized a simple IPC function, only for demonstration.

5. Upgrade Introduction

5.1 TOP Surface of the EVB

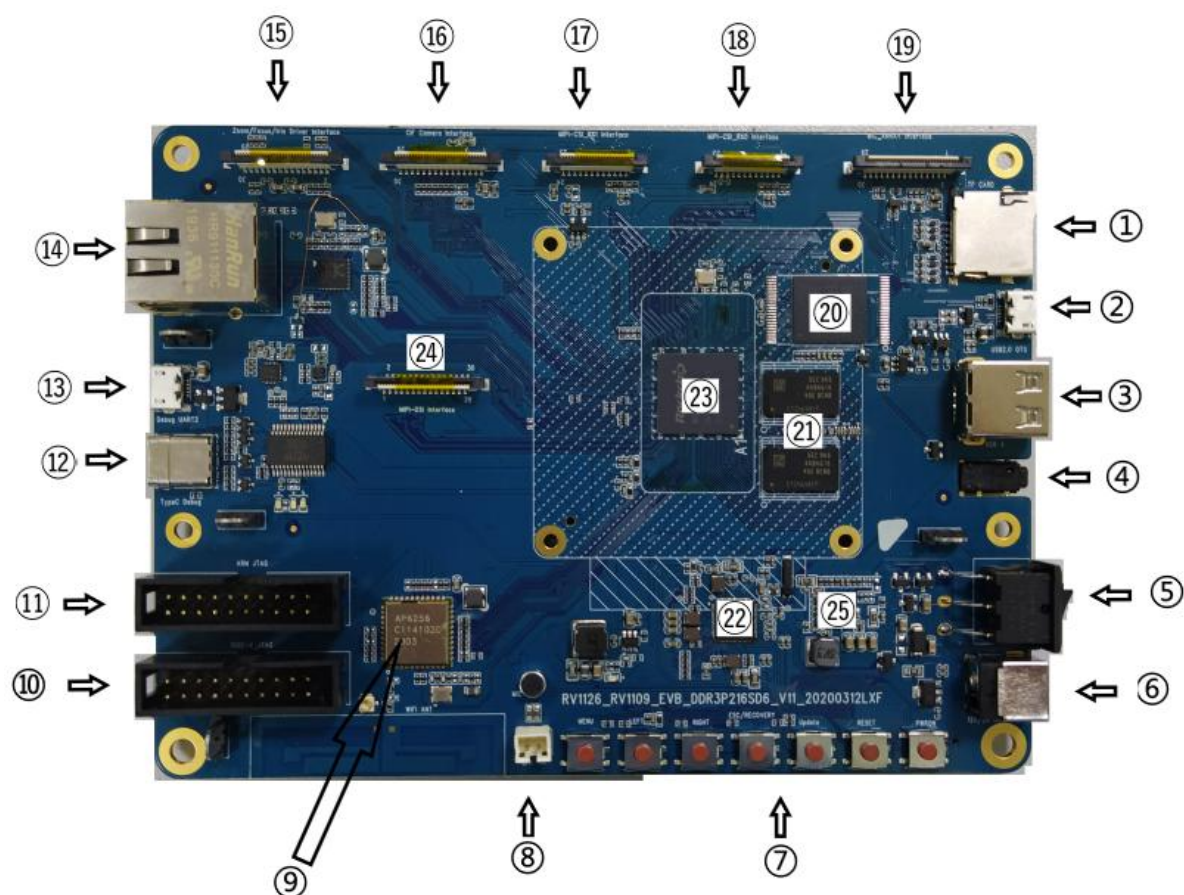

5.2 Bottom Surface of the EVB

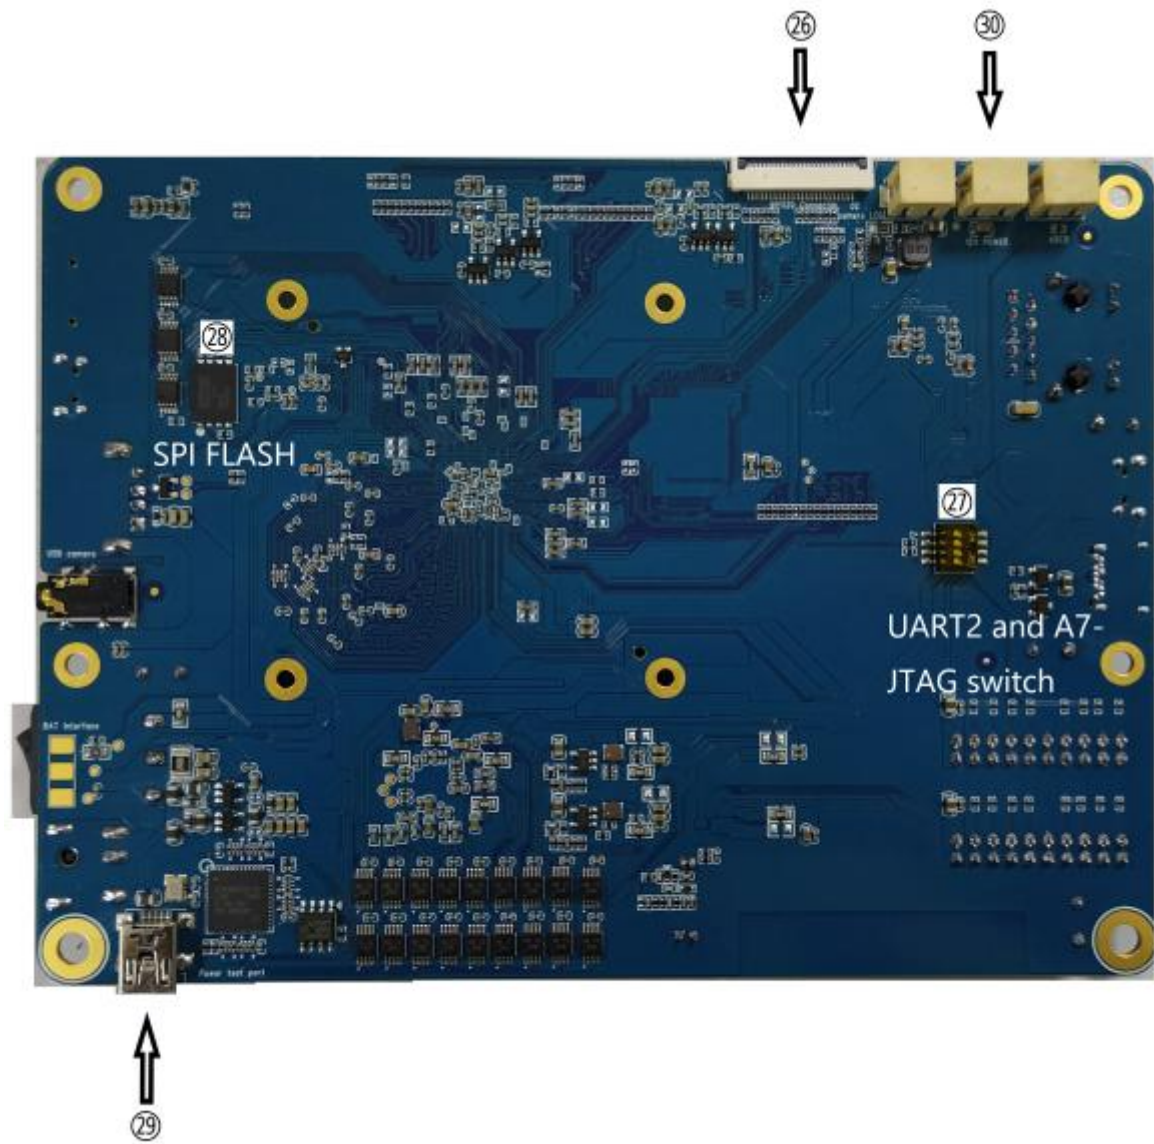

5.3 EVB Function Table

Item	Function Part	Requirement
1	TF Card	Normal recognition TF Card
2	USB Micro-B Port	Can recognize ADB device, can download images
3	USB Type-A Port	Can recognize device, and function normally
4	USB camera input	Normal recognition USB camera
5	Power switch	The 12V power supply input by the DC adapter can be controlled ON/OFF by the boat switch.
6	12V power supply input	
7	KEY BAORD	All the buttons function normally
8	CLASS D output	speakers function normal
9	WI-FI/BT	AP6256 module functions normally
10	RISC-V JTAG/ A7-JTAG	Chip verification and debugging , Tpyec is only used for chip verification
11	NC	
12	TPYEC	
13	USB Micro-B Port	Serial port input and output normally
14	Ethernet	Normal network connection
15	Zoom/ Iris Driver Interface	The EVB reserves Zoom/Focus/Iris/IRCUT connector as shown below, which is convenient for customers to debug CAMERA device.
16	CIF camera	Camera works normally, CIF camera input by default
17	MIPI Camera 1	Camera works normally, MIPI camera input by default
18	MIPI Camera 2	Camera works normally, MIPI camera input by default
19	MIC-ARRAY	Mic device input
20	eMMC Flash	Can normally recognize 16GByte
21	DDR DDR3	Can recognize total size 8Gbit
22	PMIC RK809-2	Output of each power supply is normal, accurate battery volume detection
23	CPU	RV1126_RV1109
24	MIPI panel	Screen image displays normally
25	BQ24171	2-cell battery normal charging and discharging
Bottom Surface		
26	BT1120 Camera	Camera works normally, MIPI camera input by default
27	Function switching	UART2 and a7-jtag function switching
28	SPI flash	Verify SPI flash function
29	USB Micro-B Port	For power consumption test
30	Camera_LED Drive output	Warm up lamp drive

5.4 Bottom Surface of EVB Sensor board



Scan the QR code which on sensor board or visit <https://eyun.baidu.com/s/3nw1h7iL> to get start with the EVB.

☐ 文件名

☐ 视频教程

☐ IPC-SDK-固件

☐ Docs

☐ Tools

☐ 快速启动固件


☐ NPU评估固件

5.5 Windows Upgrade Introduction


The SDK provides a windows flash tool (this tool should be V2.78 or later version) which is located in project root directory:

```
tools/
└─ windows/RKDevTool
```


As shown below, after building and generating the firmware, device needs to enter MASKROM or BootROM mode for flashing. After connecting USB cable, long press the "Update" button and press "RESET" button at the same time and then release, device will enter MASKROM mode. Then you should load the paths of the corresponding images and click "Run" to start update. You can also press the "recovery" button and press "RESET" button "RESET" then release to enter loader mode to update. Partition offset and update files of MASKROM Mode are shown as follows (Note: you have to run the tool as an administrator in Windows PC):

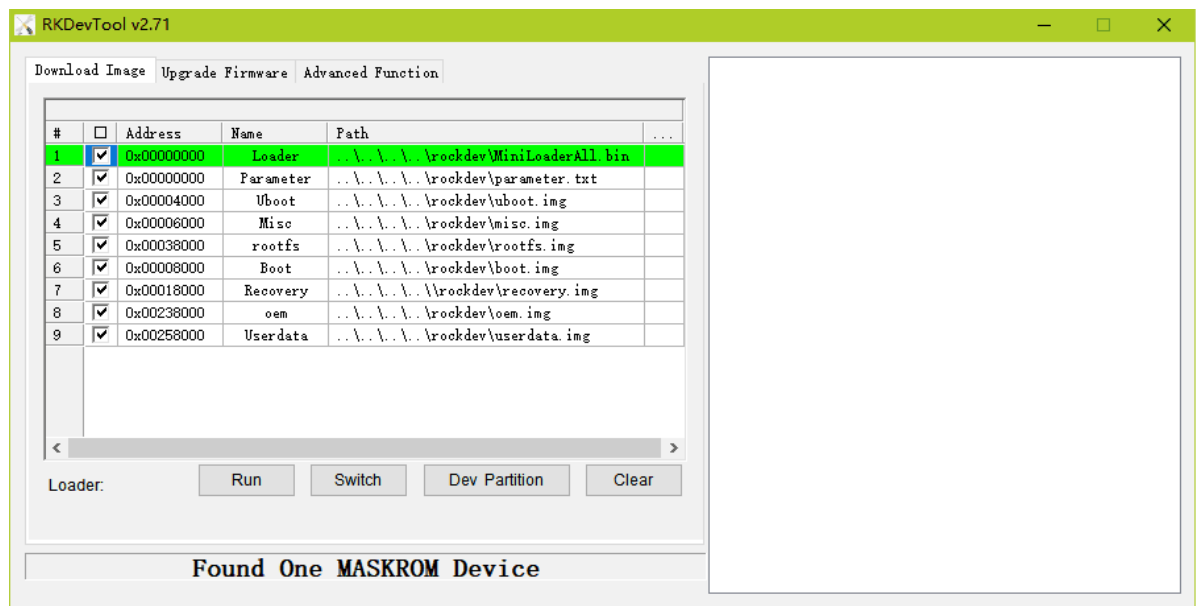

The method to flash update.img:

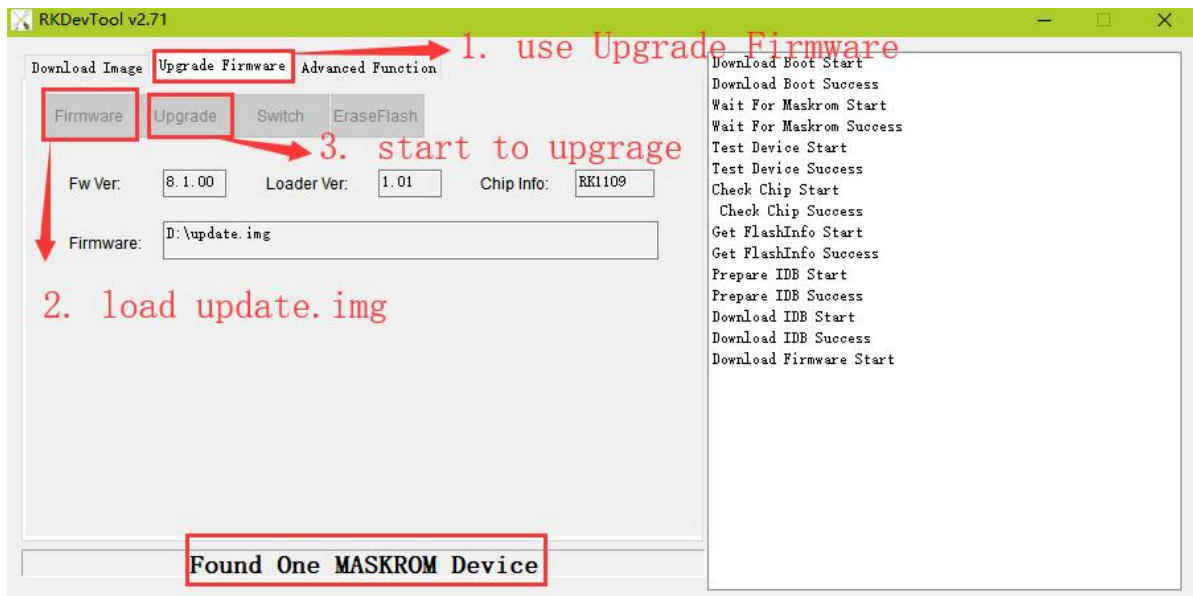

The method to flash SPI NOR Firmware.img:

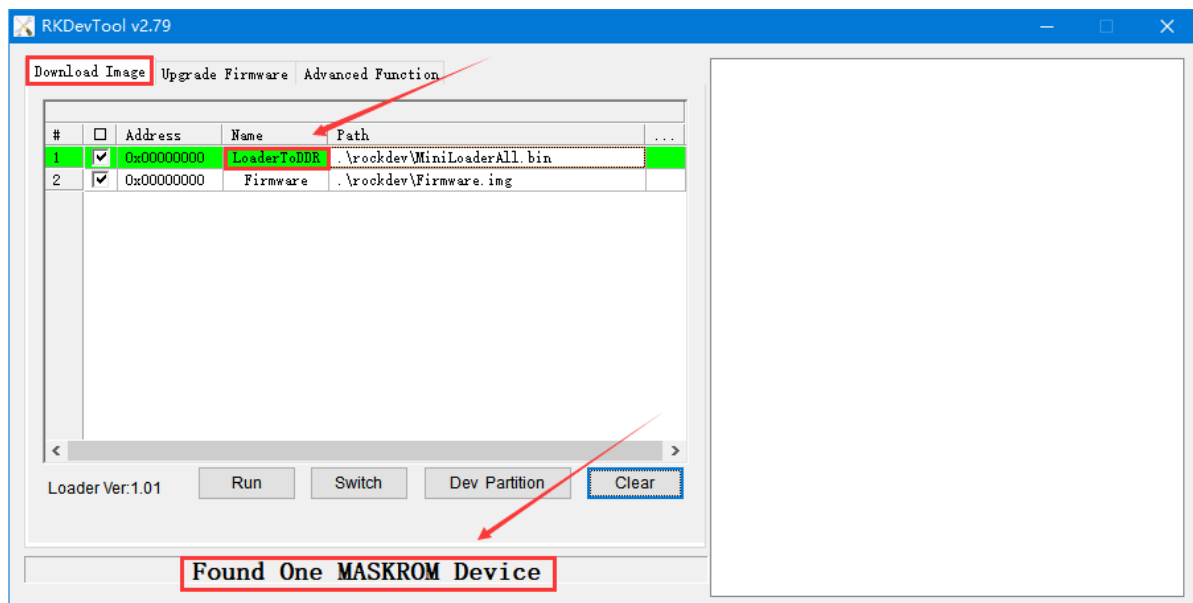

Note:

1. In addition to MiniLoader All.bin and parameter.txt, the actual partition to be burned is based on rockdev / parameter.txt configuration.
2. before upgrade, please install the latest USB driver, which is in the below directory:

<SDK>/tools/windows/DriverAssitant_v4.91.zip

5.6 Linux Upgrade Introduction

The Linux upgrade tool (Linux_Upgrade_Tool should be v1.57 or later versions) is located in "tools/linux" directory. Please make sure your board is connected to MASKROM/loader rockusb, if the generated firmware is in rockdev directory, upgrade commands are as below:

```
### In addition to MiniLoader All.bin and parameter.txt, the actual partition to
be burned is based on rockdev / parameter.txt configuration.
sudo ./upgrade_tool ul rockdev/MiniLoaderAll.bin
sudo ./upgrade_tool di -p rockdev/parameter.txt
sudo ./upgrade_tool di -u rockdev/uboot.img
sudo ./upgrade_tool di -misc rockdev/misc.img
sudo ./upgrade_tool di -b rockdev/boot.img
sudo ./upgrade_tool di -recovery rockdev/recovery.img
sudo ./upgrade_tool di -oem rockdev/oem.img
sudo ./upgrade_tool di -rootfs rockdev/rootfs.img
sudo ./upgrade_tool di -userdata rockdev/userdata.img
sudo ./upgrade_tool rd
```

Or upgrade the whole update.img firmware after packaging:

```
sudo ./upgrade_tool uf rockdev/update.img
```

Upgrade the whole Firmware.img for SPI NOR:

```
sudo ./upgrade_tool db rockdev/MiniLoaderAll.bin
sudo ./upgrade_tool wl 0x0 rockdev/Firmware.img
sudo ./upgrade_tool rd
```

Or in root directory, run the following command on your device to upgrade in MASKROM state:

```
./rkflash.sh
```

6. EVB Function Introduction and Precaution

6.1 The precaution of GPIO power design

The IO level of the controller power domain must be consistent with the IO level of the connected peripheral chip, and the voltage configuration of software must be consistent with the voltage of hardware to avoid GPIO damage.



Note:

*About matching of GPIO power domain and IO level:
PMUIO0_VDD, PMUIO1_VDD, VCCIO1_VDD, VCCIO2_VDD, VCCIO3_VDD, VCCIO4_VDD, VCCIO5_VDD, VCCIO6_VDD, VCCIO7_VDD, voltage of these GPIO power domain must be consistent with the IO level voltage of the connected peripheral to avoid GPIO damage.*

*Also need to note that the voltage configuration of software should be consistent with the voltage of hardware:
For example, if hardware IO level is connected to 1.8V, the voltage configuration of software should be configured to 1.8V accordingly; if hardware IO level should be connected to 3.3V, and the voltage configuration of software should also be configured to 3.3V to avoid GPIO damage.*

6.2 How to Access 3 RTSP and 1 RTMP Network Stream

The EVB supports the following functions:

- Support 3 RTSP and 1 RTMP network stream
- Support 1280x720 local screen display
- Support to save the main stream to the device
- Support access device from web
- Support face recognition

Connect a network cable to the network port of the EVB, power on and start. It will obtain the IP address automatically by default.

6.2.1 Get Device IP Address by Serial Port or ADB of the EVB


```
ifconfig eth0
eth0      Link encap:Ethernet  HWaddr 02:E0:F9:16:7E:E9
          inet addr:172.16.21.218  Bcast:172.16.21.255  Mask:255.255.255.0
          UP BROADCAST RUNNING MULTICAST  MTU:1500  Metric:1
          RX packets:199225 errors:0 dropped:2231 overruns:0 frame:0
          TX packets:372371 errors:0 dropped:0 overruns:0 carrier:0
          collisions:0 txqueuelen:1000
          RX bytes:20874811 (19.9 MiB)  TX bytes:522220899 (498.0 MiB)
          Interrupt:56
```

Connect to the EVB through the serial port, you have to configure as follows:

```
Baud rate: 1500000
Data bits: 8
Stop bit: 1
Parity: none
Flow control: none
```

6.2.2 Get Device IP Address by RK IPCamera Tool

Install the tool in the SDK directory `tools/windows/RK_IPCamera_Tool-V1.1.zip`. Open the tool and connect the EVB board to the computer through the network port. In the local area network, check the RK IPCamera Tool device list to obtain the device IP address.

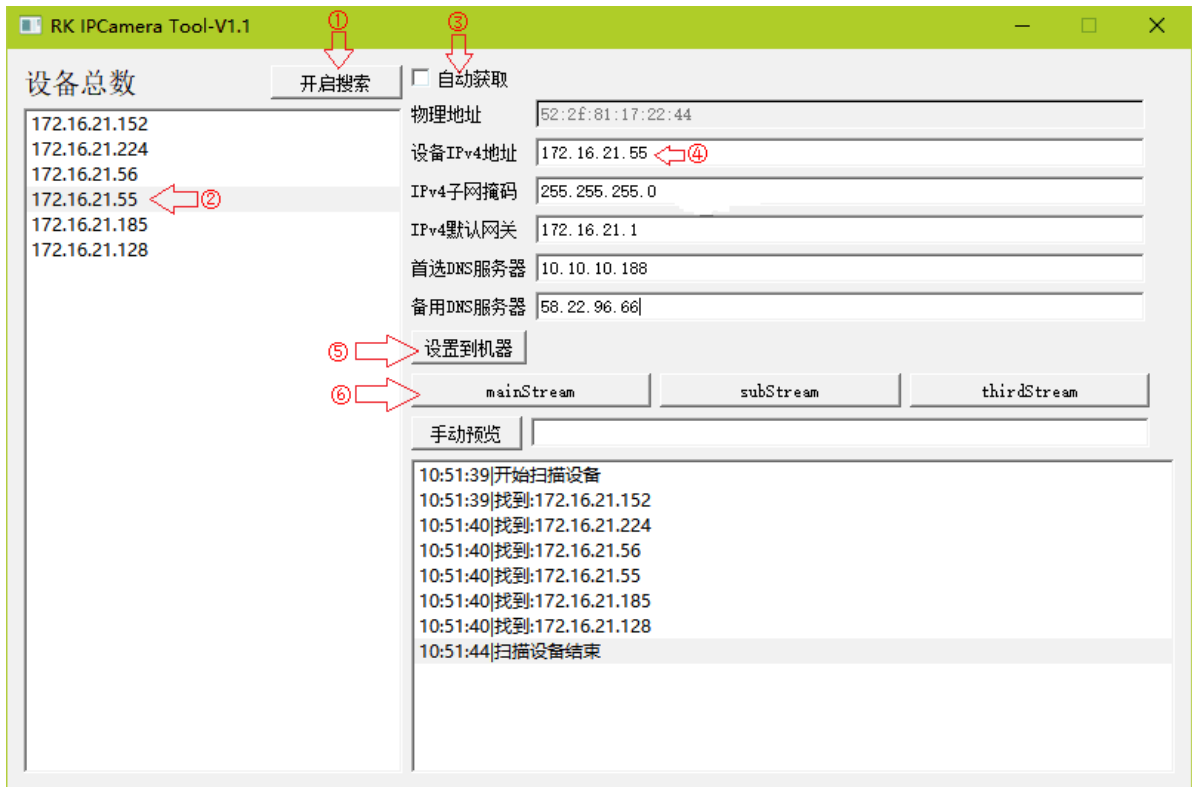

Note:

- Step 1: click "开启搜索" to search devices
- Step 2: select a device
- Step 3: cancel "自动获取" and change to static IP
- Step 4: set a static IP
- Step 5: set the IP to device
- Step 6: open to preview

6.2.3 Access Network Stream

Use a player that supports RTSP or RTMP to access, for example (VLC player).

RTSP access address:

- rtsp://**IP address of the device**/live/mainstream
- rtsp://**IP address of the device**/live/substream
- rtsp://**IP address of the device**/live/thirdstream

RTMP access address:

- rtmp://**IP address of the device**:1935/live/substream

6.3 How to Access Device Information via Web

Open a web browser (Chrome browser is recommended) to access the address:

```
http://IP address of the device
```

For detailed operation instructions on the web, please refer to the documents under the SDK docs directory which named Rockchip_Instructions_Linux_Web_Configuration_CN.pdf.

6.4 How to Test Face Recognition Function

Use a player to access RTSP main stream: `rtsp://IP address of the device/live/mainstream`.

Face Recognition is closed by default. We can visit on `http://IP address of the device` and "Config" --> "INTELLIGENCE ANALYSIS" to enable face recognition. The default authorization test time of the SDK's face recognition function is 30 ~ 60 minutes. When the authorization is invalid, the main stream preview will prompt "gace algorithm software is not authorized", and you have to restart to test again.

6.5 How to Debug With EVB via Network

6.5.1 Debug With SSH

Connect EVB with network, get EVB board's IP address with the Chapter 5.1.2 [Get Device IP Address by RK IPCamera Tool](#). Ensure that the PC can ping the EVB board.

```
### Clean last login message (EVB IP address: 192.168.1.159)
ssh-keygen -f "$HOME/.ssh/known_hosts" -R 192.168.1.159
### Command of SSH
ssh root@192.168.1.159
### input the default passwd: rockchip
```

6.5.2 Debug With SCP

```
### Upload the test-file from PC to EVB board dirctory /userdata
scp test-file root@192.168.1.159:/userdata/
root@192.168.1.159's password:
### input the default passwd: rockchip

### Download the EVB file (/userdata/test-file) to PC
scp root@192.168.1.159:/userdata/test-file test-file
root@192.168.1.159's password:
### input the default passwd: rockchip
```

6.5.3 Debug with ADB via TCP/IP

```
### e.g. EVB IP address: 192.168.1.159
adb connect 192.168.1.159

adb devices
List of devices attached
192.168.1.159:5555    device

### login on EVB via ADB
adb -s 192.168.1.159:5555 shell

### Upload the test-file from PC to EVB board dirctory /userdata
adb -s 192.168.1.159:5555 push test-file /userdata/
```

```
### Download the EVB file (/userdata/test-file) to PC
adb -s 192.168.1.159:5555 pull /userdata/test-file test-file
```

6.6 SPI NAND/SLC NAND ubi filesystem introduction

6.6.1 Introduction to ubi filesystem of rootfs

The rootfs of Nand Flash is ubifs, SDK default configure Nand Flash information is Page Size 2KB and Block Size 128KB. To modify board config: `device/rockchip/rv1126_rv1109/BoardConfig***.mk`.

```
# Set ubifs page size, 2048(2KB) or 4096(4KB)
# Option.
export RK_UBI_PAGE_SIZE=2048

# Set ubifs block size, 0x20000(128KB) or 0x40000(256KB)
# Option.
export RK_UBI_BLOCK_SIZE=0x20000

# Set userdata partition size (byte) if define RK_USERDATA_DIR
# MUST, if userdata partition is grow partition.
export RK_USERDATA_PARTITION_SIZE=0x02760000

# Set oem partition size (byte)
# Option. if not set, it will get from parameter auto.
export RK_OEM_PARTITION_SIZE=0x6400000
```

The rootfs is ubifs default, if want to use squashfs, steps are as follows:

- Configure buildroot/configs/rockchip_rv1126_rv1109_spi_nand_defconfig

```
diff --git a/configs/rockchip_rv1126_rv1109_spi_nand_defconfig
b/configs/rockchip_rv1126_rv1109_spi_nand_defconfig
index 5da9b25935..8af9226920 100644
--- a/configs/rockchip_rv1126_rv1109_spi_nand_defconfig
+++ b/configs/rockchip_rv1126_rv1109_spi_nand_defconfig
@@ -41,6 +41,8 @@ BR2_PACKAGE_RK_OEM=y
BR2_PACKAGE_RK_OEM_RESOURCE_DIR="$(TOPDIR)/../device/rockchip/oem/oem_ipc"
BR2_PACKAGE_RK_OEM_IMAGE_FILESYSTEM_TYPE="ubi"
BR2_PACKAGE_RK_OEM_IMAGE_PARTITION_SIZE=0x6400000
+BR2_PACKAGE_ROOTFS_UBI_USE_CUSTOM_FILESYSTEM=y
+BR2_PACKAGE_ROOTFS_UBI_CUSTOM_FILESYSTEM="squashfs"
BR2_PACKAGE_CAMERA_ENGINE_RKAIQ=y
BR2_PACKAGE_CAMERA_ENGINE_RKAIQ_IQFILE="os04a10_CMK-OT1607-FV1_M12-40IRC-4MP-
F16.xml"
BR2_PACKAGE_IPC_DAEMON=y
@@ -79,4 +81,5 @@ BR2_PACKAGE_NGINX=y
BR2_PACKAGE_NGINX_HTTP_SSL_MODULE=y
BR2_PACKAGE_NGINX_DEBUG=y
BR2_PACKAGE_NGINX_RTMP=y
+BR2_TARGET_ROOTFS_SQUASHFS4_XZ=y
BR2_TARGET_ROOTFS_UBIFS_MAXLEBCNT=4096
```

- Config the bootargs parameter in kernel dts as follows:

```
ubi.mtd=3 ubi.block=0,rootfs root=/dev/ubiblock0_0 rootfstype=squashfs /* mount
SquashFS on UBI block */
```

NOTICE: ubi.mtd=3 (3 is the number of rootfs in the partition and the first partition number is 0)

6.6.2 Introduction to oem and userdata partition used in ubifs

The SDK default OEM is packaged in Buildroot as a UBI image. The userdata partition default is not packaged, when system boot up userdata will format to ubifs auto.

If configure RK_OEM_DIR (RK_OEM_BUILDIN_BUILDROOT is not defined) or RK_USERDATA_DIR in the BoardConfig.mk, then use `./mkfirmware.sh` which in the root directory of SDK. RK_OEM_DIR define as the directory which in the device/rockchip/oem/. RK_USERDATA_DIR define as the directory which in the device/rockchip/userdata/.

The detailed UBI filesystem image document:

/docs/Linux/ApplicationNote/Rockchip_Developer_Guide_Linux_Nand_Flash_Open_Source_Solution_EN.pdf

6.7 Introduced to the usage of U-Boot's tftp

6.7.1 Configure U-Boot's ethernet phy

The ethernet phy which U-Boot support is RTL8211F, default. The initialization of U-Boot's ethernet will read dtb from kernel, if fail to read, U-Boot will read from U-Boot's dtb. So we will configure the node gmac of U-Boot's dtb if the phy is not RTL8211F.

The follow is the reference: Note: the quote node in the U-Boot's dts (e.g. gpio2/rmii1_pins/gmac_clk_m1_pins) MUST add "u-boot,dm-pre-reloc;"

```
diff --git a/arch/arm/dts/rv1126-pinctrl.dtsi b/arch/arm/dts/rv1126-pinctrl.dtsi
index 67f7c742b8..967598b4fb 100644
--- a/arch/arm/dts/rv1126-pinctrl.dtsi
+++ b/arch/arm/dts/rv1126-pinctrl.dtsi
@@ -1122,6 +1122,11 @@
                                /* clk_out_ethernet_m1 */
                                <2 RK_PC5 2 &pcfg_pull_none>;
                                };
+
+                                gmac_clk_m1_pins: gmac-clk-m1-pins {
+                                rockchip,pins =
+                                /* rgmii_clk_m1 */
+                                <2 RK_PB7 2 &pcfg_pull_none>;
+                                };
+
+                                };
                                sdmmc0 {
                                sdmmc0_bus4: sdmmc0-bus4 {
diff --git a/arch/arm/dts/rv1126-u-boot.dtsi b/arch/arm/dts/rv1126-u-boot.dtsi
index 01547feff6..baf8509946 100644
--- a/arch/arm/dts/rv1126-u-boot.dtsi
+++ b/arch/arm/dts/rv1126-u-boot.dtsi
@@ -166,26 +166,37 @@
                                status = "okay";
```

```

};

+&gpio2 {
+     u-boot,dm-pre-reloc;
+     status = "okay";
+};
+
+&rmii1_pins {
+     u-boot,dm-pre-reloc;
+     status = "okay";
+};
+
+&gmac_clk_m1_pins{
+     u-boot,dm-pre-reloc;
+     status = "okay";
+};
+
+&gmac {
+     u-boot,dm-pre-reloc;

-     phy-mode = "rgmii";
-     clock_in_out = "input";
+     phy-mode = "rmii";
+     clock_in_out = "output";

-     snps,reset-gpio = <&gpio3 RK_PA0 GPIO_ACTIVE_LOW>;
+     snps,reset-gpio = <&gpio2 RK_PA5 GPIO_ACTIVE_LOW>;
    snps,reset-active-low;
-     /* Reset time is 20ms, 100ms for rtl8211f */
-     snps,reset-delays-us = <0 20000 100000>;
+     snps,reset-delays-us = <0 50000 50000>;

-     assigned-clocks = <&cru CLK_GMAC_SRC>, <&cru CLK_GMAC_TX_RX>, <&cru
CLK_GMAC_ETHERNET_OUT>;
-     assigned-clock-parents = <&cru CLK_GMAC_SRC_M1>, <&cru RGMII_MODE_CLK>;
-     assigned-clock-rates = <125000000>, <0>, <250000000>;
+     assigned-clocks = <&cru CLK_GMAC_SRC>, <&cru CLK_GMAC_TX_RX>;
+     assigned-clock-rates = <500000000>;
+     assigned-clock-parents = <&cru CLK_GMAC_SRC_M1>, <&cru RMII_MODE_CLK>;

    pinctrl-names = "default";
-     pinctrl-0 = <&rgmiim1_pins &clk_out_ethernetm1_pins>;
-
-     tx_delay = <0x2a>;
-     rx_delay = <0x1a>;
+     pinctrl-0 = <&rmii1_pins &gmac_clk_m1_pins>;

    phy-handle = <&phy>;
    status = "okay";

```

6.7.2 The usage of U-Boot's tftp download

Use the command `system_search` to get a free memory address and then set IP address, finally use tftp download file.


```

Hit key to stop autoboot('CTRL+C'): 0
=> <INTERRUPT>
=> <INTERRUPT>
=>
=> systemem_search
systemem_search - Search a available systemem region

Usage:
systemem_search <size in hex>
=> systemem_search 0x6400000
System: Available region at address: 0x356f6cc0
=> setenv ipaddr 172.16.21.47
=> setenv serverip 172.16.21.199
=> tftp 0x356f6cc0 uboot.img
ethernet@fffc40000 Waiting for PHY auto negotiation to complete. done
Using ethernet@fffc40000 device
TFTP from server 172.16.21.199; our IP address is 172.16.21.47
Filename 'uboot.img'.
Load address: 0x356f6cc0
Loading: #####
          #####
          #####
          #####
          139.6 KiB/s

done
Bytes transferred = 2228224 (220000 hex)
=>

```

6.7.2.1 Upgrade loader with tftp for eMMC storage

```

Net: eth0: ethernet@fffc40000
Hit key to stop autoboot('CTRL+C'): 0
=> <INTERRUPT>
=> <INTERRUPT>
=> <INTERRUPT>
=>
=> setenv ipaddr 172.16.21.10
=> setenv serverip 172.16.21.199
=> systemem_search 0x1000000
System: Available region at address: 0x3aaf6e80
=> tftp 0x3aaf6e80 idblock.bin
ethernet@fffc40000 Waiting for PHY auto negotiation to complete. done
Using ethernet@fffc40000 device
TFTP from server 172.16.21.199; our IP address is 172.16.21.10
Filename 'idblock.bin'.
Load address: 0x3aaf6e80
Loading: #####
          10.7 KiB/s

done
Bytes transferred = 167936 (29000 hex)
=>
=> mmc dev 0
switch to partitions #0, OK
mmc0(part 0) is current device
=> mmc write 0x3aaf6e80 0x40 0x148

MMC write: dev # 0, block # 64, count 328 ... 328 blocks written: OK
=>
=>
=>

```

idblock.bin build in uboot:
`./make.sh rv1126`
`./make.sh --idblock --spl`

$0x148 = 0x29000 / 0x200$

The loader partition offset on eMMC

6.7.2.2 Upgrade loader with tftp for SPI NAND storage

```
=> <INTERRUPT>
=> <INTERRUPT>
=> setenv ipaddr 172.16.21.10
=> setenv serverip 172.16.21.199
=> system_search 0x1000000
System: Available region at address: 0x3aaf6e80
=> tftp 0x3aaf6e80 idblock.bin
ethernet@fffc40000 Waiting for PHY auto negotiation to complete. done
Using ethernet@fffc40000 device
TFTP from server 172.16.21.199; our IP address is 172.16.21.10
Filename 'idblock.bin'.
Load address: 0x3aaf6e80
Loading: #####
          10.7 KiB/s

done
Bytes transferred = 167936 (29000 hex)
=>
=> mtd list
List of MTD devices:
* spi-nand0
  - device: flash@0
  - parent: sfc@fffc90000
  - driver: spi_nand
  - type: NAND flash
  - block size: 0x20000 bytes
  - min I/O: 0x800 bytes
  - OOB size: 64 bytes
  - OOB available: 46 bytes
  - ECC strength: 8 bits
  - ECC step size: 512 bytes
  - bitflip threshold: 8 bits
  - 0x000000000000-0x000010000000 : "spi-nand0"
=>
=> mtd erase spi-nand0 0x20000 0xe0000
Erasing 0x00020000 ... 0x000fffff (7 eraseblock(s))
=> mtd write spi-nand0 0x3aaf6e80 0x20000 0x29000
Writing 167936 byte(s) (82 page(s)) at offset 0x00020000
=>
```

build in uboot:

./make.sh rv1126

./make.sh --idblock --spl

spi nand loader partition offset
= first block offset
= block size

spi nand loader partition
size = 1MB - (block size)

NOTICE: SLC NAND is not support tftp download idblock.bin to upgrade loader temporarily.

7. Smart USB Camera Product

The smart USB camera product supports the following functions:

- Support standard UVC camera function, up to 4K preview (RV1126)
- Support a variety of NN algorithms, including face detection, human posture or bone detection, face key point detection and tracking, and support third-party algorithm expansion
- Support USB composite device stable transmission (RNDIS/ UAC / ADB, etc.)
- Support NN preprocessing and data post-processing path
- Support preview of multiple terminal devices such as smart TV or PC
- Support for eptz function

7.1 Product Building Introduction

The compilation and configuration of the smart USB camera product is based on the public SDK and adopts the separate rv1126_rv1109_linux_Ai_camera_release.xml Code list management update.

7.1.1 Select Board Configuration for USB Camera Product

SDK download address :

```
repo init --repo-url ssh://git@www.rockchip.com.cn/repo/rk/tools/repo \
-u ssh://git@www.rockchip.com.cn/linux/rockchip/platform/manifests \
-b linux -m rv1126_rv1109_linux_ai_camera_release.xml
```

Board Configuration	Comment
device/rockchip/rv1126_rv1109/BoardConfig-uvcc.mk	Smart USB Camera board config

Chip Name	Board Configuration (path: device/rockchip/rv1126_rv1109)	Storage Medium	EVB Board name
RV1126/RV1109	BoardConfig-uvcc.mk	eMMC	RV1126_RV1109_EVB_DDR3P216SD6_V13_20200630LXF

Command of selecting board configure :


```
### To select Smart USB Camera board config
./build.sh device/rockchip/rv1126_rv1109/BoardConfig-uvcc.mk
```

7.1.2 Building

The building command of the intelligent USB camera product is the same as that of the SDK. Please refer to the SDK Building Introduction in Section 3.

7.2 Product Software Framework

The overall structure is as follows:

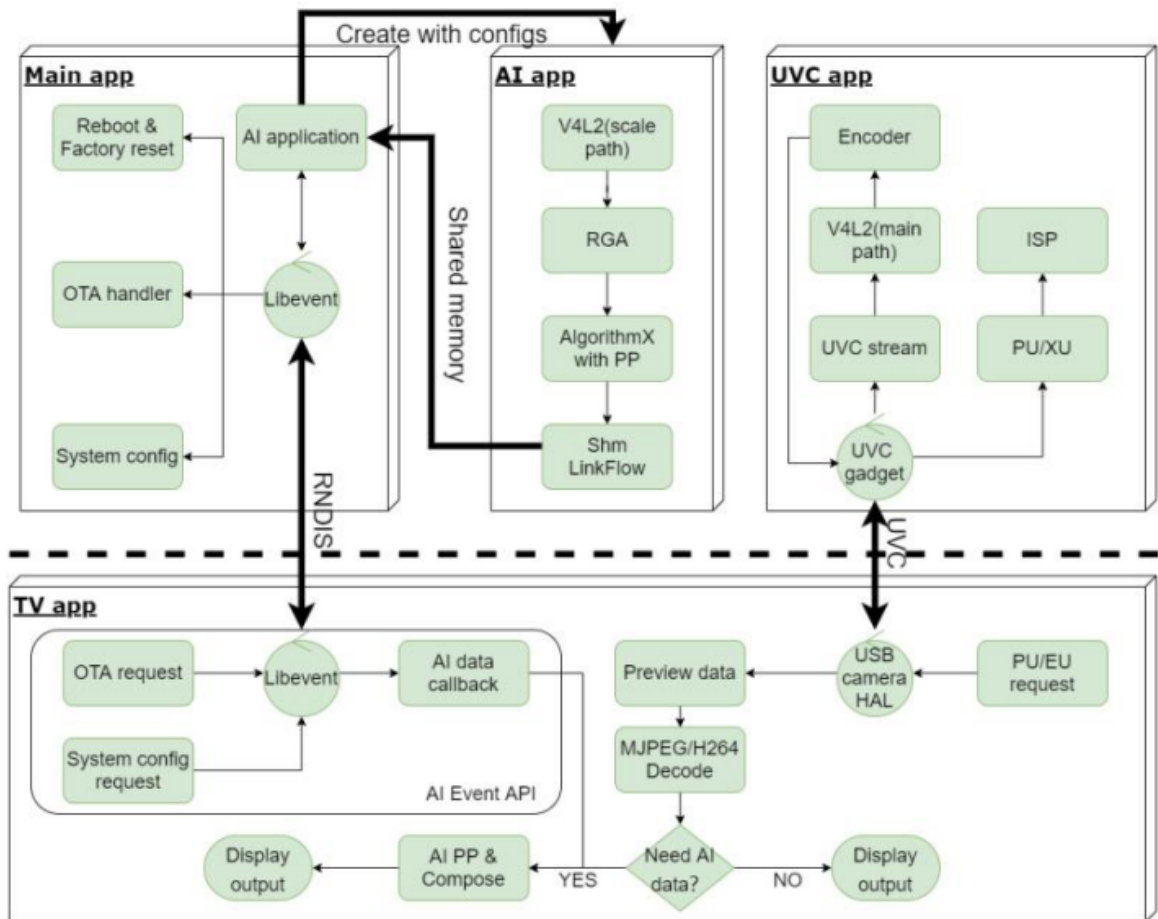

The corresponding relationship between rv1109 / rv1126 end application and source code program is as follows:

- 1.main app : source code patch:/app/smart_display_service: Responsible for RNDIS server function implementation, command processing, NN data forwarding and other operations;
- 2.AI app : source code patch: /app/mediaserver: Responsible for sending all camera data to NPU for corresponding NN algorithm processing, and passing it to main app through shared memory mechanism ;
- 3.uvc app:source code patch: /external/uvc_app: Responsible for the implementation and control of the complete functions of UVC camera.

7.2.1 uvc_app

Please refer to:

<SDK>/external/uvc_app/doc/zh-cn/uvc_app.md

7.2.2 mediaserver

Please refer to:

<SDK>/docs/RV1126_RV1109/AppcationNote/Rockchip_Instructions_Linux_MediaServer_CN.pdf

7.2.3 Other

For other Linux application framework or module materials, please refer to the corresponding documents in the following directory:

```
<SDK>/docs/RV1126_RV1109/ # Use for RV1126/RV1109 platform
<SDK>/docs/Linux/        # Use for Rockchip Linux general platform, for
RV1126/RV1109 reference only
```

7.3 Function Introduction

7.3.1 How To Preview For USB Camera

Use USB cable to connect the USB OTG port of EVB with the host computer, such as the USB host port of TV or PC, and power on. By default, the UVC camera application and rndis service will be started automatically. Use serial port to connect EVB board and run `ifconfig usb0` to obtain the pre configured IP address of rndis virtual network port.

```
RK $ ifconfig usb0
usb0      Link encap:Ethernet  HWaddr 8E:F3:7D:36:13:34
          inet addr:172.16.110.6  Bcast:172.16.255.255  Mask:255.255.0.0
          UP BROADCAST RUNNING MULTICAST  MTU:1500  Metric:1
          RX packets:4884 errors:0 dropped:16 overruns:0 frame:0
          TX packets:4843 errors:0 dropped:0 overruns:0 carrier:0
          collisions:0 txqueuelen:1000
          RX bytes:257305 (251.2 KiB)  TX bytes:787936 (769.4 KiB)
```

Use serial port to connect the PC end of EVB board as follows:


```
Baud rate: 1500000
Data bits: 8
Stop bit: 1
Parity: none
Flow control: none
```

Android smart TV uses RKAICameraTest application or other standard camera applications. PC side recommends the use of a third-party UVC camera application such as Amcap or Potplayer. When it is opened, you can see the preview, and the switching format or resolution can refer to the application switching of upper computer.



7.3.2 How To Test AI Model Post-processing


Open the RKAICameraTest application on the TV terminal, click the rndis button to connect with rndis after seeing the preview, click the settings button to select the "model algorithm switching" option after success, select the model algorithm to be used, which is the face detection algorithm by default, and then click the "Ai post-processing switch", when the face appears in front of the camera, you can see the AI processing effect:

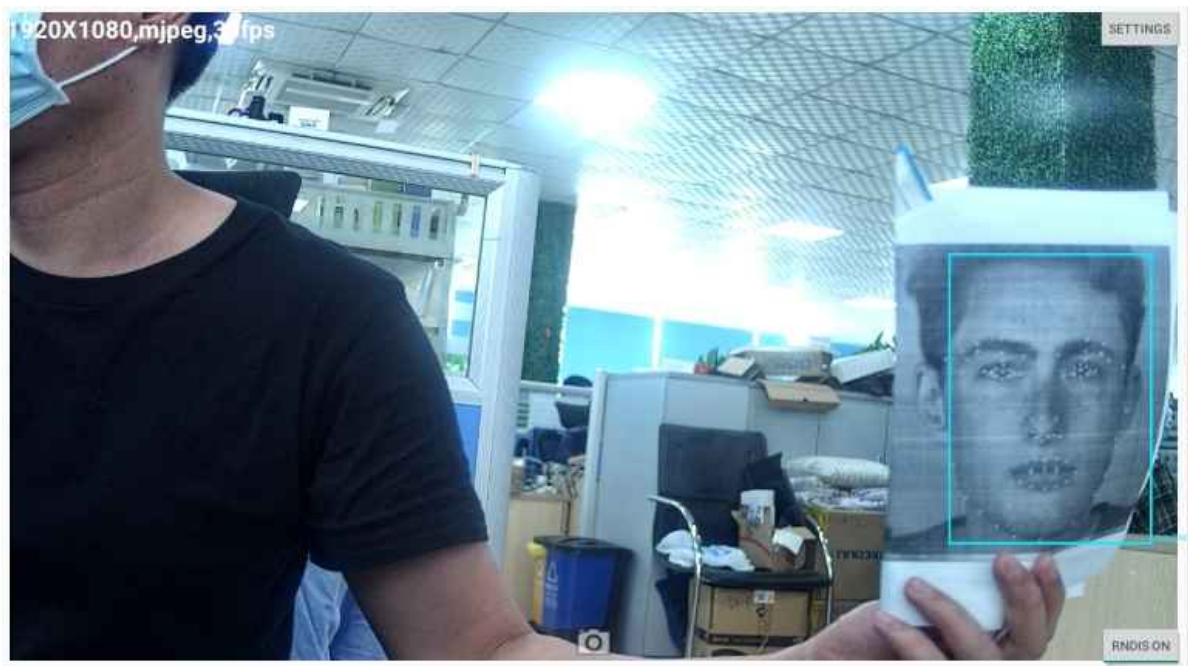



7.3.3 How To Test EPTZ

Open the RKAICameraTest application at the TV end, click the rndis button to connect to rndis after seeing the preview, click the settings button to select the "eptz mode switch" option after the countdown is completed, and then open the application, at this time, the top left corner of the interface will display whether it is the eptz model or the general intelligent preview mode:

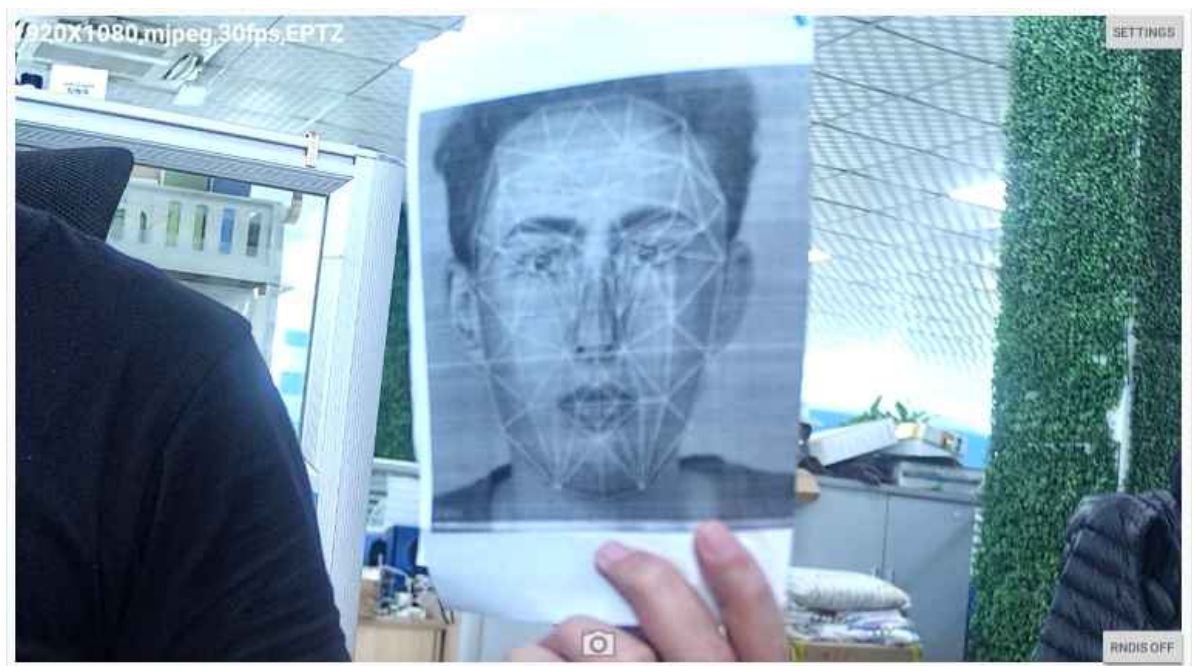

8. Facial Gate Product

The facial gate product supports the following functions:

- Support face feature extraction, face detection and recognition, liveness detection
- Support 1280x720 local screen display
- Support access device from web

8.1 Product Building Introduction

The compilation and configuration of the facial gate product is based on the public SDK, so SDK download and Environment set up please refer to the SDK.

8.1.1 Select Board Configuration for Facial Gate Product

Board Configuration	Comment
device/rockchip/rv1126_rv1109/BoardConfig-facial_gate.mk	Facial Gate board config

Note: The SDK supports the EVB with the mark of RV1126_RV1109_EVB_DDR3P216SD6_V13_20200630LXF by default,so if you get the EVB with the mark of RV1126_RV1109_EVB_DDR3P216SD6_V12_20200515KYY, please modify device/rockchip/rv1126_rv1109/BoardConfig-facial_gate.mk

```
--- a/rv1126_rv1109/BoardConfig-facial_gate.mk
+++ b/rv1126_rv1109/BoardConfig-facial_gate.mk
@@ -11,7 +11,7 @@ export RK_KERNEL_DEFCONFIG=rv1126_defconfig
 # Kernel defconfig fragment
 export RK_KERNEL_DEFCONFIG_FRAGMENT=rv1126-facial-gate.config
 # Kernel dts
-export RK_KERNEL_DTS=rv1109-evb-ddr3-v13-facial-gate
+export RK_KERNEL_DTS=rv1109-evb-ddr3-v12-facial-gate
 # boot image type
 export RK_BOOT_IMG=zboot.img
 # kernel image path
```

Command of selecting board configuration:

```
### To select Facial Gate board config
./build.sh device/rockchip/rv1126_rv1109/BoardConfig-facial_gate.mk
```

8.1.2 Building

The building command of the intelligent Facial Gate product is the same as that of the SDK. Please refer to the SDK Building Introduction in Section 3.

8.2 QFacialGate Application

QFacialGate is the main application of facial gate product, Which runs automatically by default when power on. and QT is used for UI.and RK's own algorithm Rockface is called through Rkfacial library to realize face detection, face feature point extraction, face recognition and live detection.

The following functions are included:

- RGB camera image data was obtained for face recognition, and IR camera image data was obtained for live detection

- SQLITE3 is used as a database to store face feature values and user names
- User register and delete, face tracking, user name display and other operations
- ALSA interface is used to realize the voice broadcast function of each process

8.3 minigui_demo Application

MiniGUI is a mature and proven cross-platform GUI system for embedded and smart IoT devices, and it's fit for small capacity Flash or quick boot products. The minigui_demo is implemented on MiniGUI, that show how to bring up MiniGUI features.

```
#Enable BR2_PACKAGE_MINIGUI_DEMO option on buildroot, it'll select the dependent
libraries automatically.
BR2_PACKAGE_LIBPNG12
BR2_PACKAGE_MINIGUI_ENABLE_RGA
BR2_PACKAGE_MINIGUI_ENABLE_FREETYPE
BR2_PACKAGE_MINIGUI_ENABLE_PNG
After the building, launch the minigui_demo manually.
```

The following functions are included:

- RGB camera image data was obtained for face recognition, and IR camera image data was obtained for live detection
- SQLITE3 is used as a database to store face feature values and user names
- User register and delete, face tracking, user name display and other operations
- ALSA interface is used to realize the voice broadcast function of each process

8.3.1 Other

- SDK comes with its own algorithm Rockface, it's need to authorization. How to obtain authorization please contact business and refer to sdk/external/rockface/auth/README.md the SDK has one hour test mode, time out please reboot.
- The SDK use RGB camera OV2718, IR camera gc2053
- IR LED angle of view need 90°, electric current need 120ma
- Related documents

QFacialGate introduction: app\QFacialGate\doc\Rockchip_Instruction_Linux_QFacialGate_CN.pdf

The interface of Rkfacial: external\rkfacial\doc\Rockchip_Instruction_Rkfacial_CN.pdf

Web back-end framework:

docs\RV1126_RV1109\ApplicationNote\Rockchip_Developer_Guide_Linux_Application_Framework_CN.pdf

Web configuration introduction:

docs\RV1126_RV1109\ApplicationNote\Rockchip_Instructions_Linux_Web_Configuration_CN.pdf