

密级状态： 绝密() 秘密() 内部资料() 公开(√)
Security Class: Top-Secret () Secret () Internal () Public (√)

Rockchip_Recovery 用户操作指南

Rockchip_Recovery_User_Guide

(技术部)

(Technical Department)

文件状态: Status: [] 草稿 [] Draft [] 正在修改 [] Modifying [√] 正式发布 [√] Released	文件标识: File No.:	RK-YH-YF-209
	当前版本: Current Version:	V1.08
	作 者: Author:	纪大峣、杨汉兴、黄开辉、吴良清、 Ji Dayao , Yang Hanxing, Huang Kaihui, Wu Liangqing,
	完成日期: Finish Date:	2021-05-24
	审 核: Auditor:	
	审核日期: Finish Date:	

免责声明

本文档按“现状”提供，福州瑞芯微电子股份有限公司（“本公司”，下同）不对本文档的任何陈述、信息和内容的准确性、可靠性、完整性、适销性、特定目的性和非侵权性提供任何明示或暗示的声明或保证。本文档仅作为使用指导的参考。

由于产品版本升级或其他原因，本文档将可能在未经任何通知的情况下，不定期进行更新或修改。

Disclaimer

This document is provided “as is” and Fuzhou Rockchip Electronics Co. Ltd (“the company”) makes no express or implied statement or warranty as to the accuracy, reliability, completeness, merchantability, specific purpose and non-infringement of any statement, information and contents of the document. This document is for reference only.

This document may be updated without any notification due to product version upgrades or other reasons.

商标声明

“Rockchip”、“瑞芯微”、“瑞芯”均为本公司的注册商标，归本公司所有。

本文档可能提及的其他所有注册商标或商标，由其各自所有者所有。

Brand Statement

Rockchip, Rockchip™ icon, Rockchip and other Rockchip trademarks are trademarks of Fuzhou Rockchip Electronics Co., Ltd., and are owned by Fuzhou Rockchip Electronics Co., Ltd.

All other trademarks or registered trademarks mentioned in this document are owned by their respective owners.

版权所有 © 2019 福州瑞芯微电子股份有限公司

超越合理使用范畴，非经本公司书面许可，任何单位和个人不得擅自摘抄、复制本文档内容的部分或全部，并不得以任何形式传播。

Copyright © 2019 Fuzhou Rockchip Electronics Co., Ltd.

Beyond reasonable use, without the written permission, any unit or individual shall not extract or copy part or all of the content of this document, and shall not spread in any form.

福州瑞芯微电子股份有限公司

Fuzhou Rockchip Electronics Co., Ltd.

地址：福建省福州市铜盘路软件园 A 区 18 号

网址：www.rock-chips.com

客户服务电话：+86-4007-700-590

客户服务传真：+86-591-83951833

客户服务邮箱：fae@rock-chips.com

Fuzhou Rockchip Electronics Co., Ltd.

Address: No. 18 Building, A District, No.89,software Boulevard Fuzhou,Fujian,PRC

Website: www.rock-chips.com

Customer service tel.: +86-4007-700-590

Customer service fax: +86-591-83951833

Customer service e-mail: fae@rock-chips.com

版本历史 Revision History

版本号 Version no.	作者 Author	修改日期 Revision Date	修改说明 Revision description	备注 Remark
V1.00	杨汉兴、黄开辉 Yang Hanxing, Huang Kaihui	2016/9/2	构建初始版本 Initial version release	
V1.01	吴良清 Wu Liangqing	2017/6/7	增加 android 7.1 verifying boot ota 的修改 Add the modification of Android7.1 verifying boot ota	
V1.02	黄开辉 Huang Kaihui	2017/8/30	增加 android 7.1 parameter 升级说明 Add the upgrade instruction of Android7.1 parameter	
V1.03	黄开辉 Huang Kaihui	2017/11/23	增加 Backup 功能使用说明 Add the usage instruction of Backup function	
V1.04	纪大峣 Ji Dayao	2019/4/11	1.更新第 4 节，Android 7.x 及以上平台不再支持系统直接升级 update.img Update section 4, system doesn't support directly upgrade update.img any more on Android7.x and higher platforms 2.更新 5.2 旋转配置 Update the rotation configuration in section 5.2	
V1.05	纪大峣 Ji Dayao	2019/6/19	1.更新 2.3 Update 2.3 2.删除不使用内容，包括原 2.4, 3.2, 3.3 和 3.4 等 Remove un-used contents, including previous 2.4, 3.2, 3.3, 3.4 etc.	
V1.06	纪大峣 Ji Dayao	2019/11/19	1.删除不使用的内容 Remove un-used contents 2.更新 7.6 Update 7.6	
V1.07	纪大峣 Ji Dayao	2020/12/07	1.更新 3.1 Update section 3.1 2.更新 5.1	

			Update section 5.1 6.删除升级服务器相关内容 Delete OTA server config	
V1.08	纪大峣 Ji Dayao	2021/5/24	1.更新第 2 节编译方式 Update Section 2	

目 录 Contents

ROCKCHIP_RECOVERY 用户操作指南	1
前 言 PREFACE	1
1 RECOVERY 简介 RECOVERY INTRODUCTION	1
1.1 RECOVERY 模式简介 RECOVERY MODE INTRODUCTION	1
1.2 RECOVERY 模式在框架层的位置 RECOVERY MODE LOCATION IN FRAMEWORK LAYER	1
2 编译 OTA 包 OTA PACKAGE COMPILATION	3
2.1 OTA 介绍 OTA INTRODUCTION	3
2.2 生成完整包 GENERATE COMPLETE PACKAGE	3
2.3 生成差异包 GENERATE THE INCREMENTAL OTA PACKAGE	4
2.4 注意事项 NOTICE	6
3 RK 平台分区升级说明 RK PLATFORM PARTITION UPGRADE INSTRUCTION	6
3.1 RkLoader 升级 RkLoader UPGRADE	6
3.1.1 < Android 11	6
3.1.2 >= Android 11	7
3.2 RELEASETOOL 说明 RELEASETOOL INSTRUCTION	7
3.3 BACKUP 分区使用说明 BACKUP PARTITION USAGE INSTRUCTION	8
4 UPDATE.IMG 升级方式 UPDATE.IMG UPGRADE METHOD	9
4.1 支持存储方式 SUPPORT MEMORY UPGRADE	9
4.2 打包说明 PACKING INSTRUCTION	10
5 配置说明 CONFIGURATION INSTRUCTION	11
5.1 LOG 重定向 LOG RE-DIRECT	11
5.2 屏幕旋转 SCREEN ROTATION	12
5.3 屏幕分屏 SCREEN SPLIT	12
5.4 文件保存 FILE SAVE	13
5.5 RECOVERYUI 说明 RECOVERYUI INSTRUCTION	13
5.6 支持 EXT4 文件系统 SUPPORT EXT4 FILE SYSTEM	13
5.7 UPDATE.IMG DRM 签名校验 UPDATE.IMG DRM SIGNATURE VERIFICATION	14
5.8 BOARDID 串号 BOARDID SERIAL NUMBER	14
5.9 升级 U 盘升级包 UPDATE THE UPGRADE PACKAGE OF U DISK	14
5.10 代码结构 CODE STRUCTURE	15
6 升级步骤 UPGRADING STEPS	16
6.1 OTA 包本地升级操作步骤 OTA PACKAGE LOCAL UPGRADING STEPS	16
6.2 OTA 包网络升级操作步骤 OTA PACKAGE NETWORK UPGRADING STEPS	17
7 量产指导 MP GUIDANCE	17
7.1 升级原理简介 UPGRADE PRINCIPLE BRIEF INTRODUCTION	17
7.2 量产流程分析 MP PROCESS ANALYSIS	20
7.3 编译固件注意事项 NOTICES OF IMAGE COMPILATION	21
7.4 制作 PCBA 小固件 MAKE PCBA SMALL IMAGE	22

7.5	制作带 PCBA 测试功能的完整固件 MAKE THE WHOLE IMAGE WITH PCBA TESTING FUNCTION	22
7.6	制作 SD 升级卡 MAKE SD UPGRADE CARD	23
7.7	SD 升级卡的使用 SD UPGRADE CARD USAGE.....	25
7.8	注意事项 NOTICES.....	25
8	常见问题处理 FAQ.....	25
8.1	差分升级错误处理 INCREMENTAL OTA ERROR HANDLING	25
8.2	升级包签名校验错误处理 UPGRADE PACKAGE SIGNATURE VERIFICATION ERROR HANDLING	26
8.3	NTFS 格式 U 盘升级支持 NTFS FORMAT U DISK UPGRADE SUPPORT.....	27
8.4	LOGO 未更新成功 LOGO UPDATE FAILURE	27
9	SECUREBOOT 签名工具 SECUREBOOT SIGNATURE TOOL.....	28
9.1	WIN 平台签名 WIN PLATFORM SIGNATURE	28
9.2	LINUX 平台签名 LINUX PLATFORM SIGNATURE	30

前言 Preface

概述 Overview

文档主要介绍 Rockchip Recovery 用户操作指南，旨在帮助软件开发工程师更快上手 Recovery 升级的开发及调试。

This document mainly describes Rockchip Recovery user guide, aiming to help software engineers familiar with Recovery upgrading development and debugging quickly.

产品版本 Product version

芯片名称 Chipset name	内核版本 kernel version	Android 版本 Android version
		6.0.1

读者对象 Object

本文档（本指南）主要适用于以下工程师：

This document (guide) is mainly suitable for below engineers:

技术支持工程师

Field application engineers

软件开发工程师

Software development engineers

1 Recovery 简介 Recovery introduction

1.1 Recovery 模式简介 Recovery mode introduction

Recovery 模式指的是一种可以对安卓机内部的数据或系统进行修改的模式，（类似于 windows pe 或 DOS）。在这个模式下我们可以刷入新的安卓系统，或者对已有的系统进行备份或升级，也可以在此恢复出厂设置。

Recovery mode is a mode that can modify the internal data or system of the Android device (similar to windows pe or DOS). In this mode, we can flash new Android system, or back up or upgrade the existing system, also can reset to factory default setting.

1.2 Recovery 模式在框架层的位置 Recovery mode location in framework layer

Android 启动后，会先运行 bootloader。Bootloader 会根据某些判定条件决定是否进入 recovery 模式。Recovery 模式会装载 recovery 分区，该分区包含 recovery.img。Recovery.img 包含了标准内核(和 boot.img 中的内核相同)以及 recovery 根文件系统。

After Android boots up, it will firstly run bootloader. Bootloader will decide whether to enter recovery mode according to some determination conditions. Recovery mode will load recovery image, which includes the standard kernel (same as the kernel in boot.img) and recovery root file system.

Android recovery 三个部分两个接口，recovery 的工作需要整个软件平台的配合，从架构角度看，有三个部分：

Android recovery includes three parts and two interfaces. The work of recovery needs the support of the whole software platform. There are three parts from architecture point of view:

1. Main System: 用 boot.img 启动的 Linux 系统，Android 的正常工作模式。

Main System: Linux system booted up by boot.img, the normal working mode of Android.

2. Recovery: 用 recovery.img 启动的 Linux 系统，主要是运行 recovery 程序。

Recovery: Linux system booted up by recovery.img, mainly to run recovery program.

3. Bootloader: 除了加载、启动系统，还会通过读取 flash 的 MISC 分区获得来自 Main System 和 Recovery 的消息，并以此决定做何种操作。

Bootloader: besides loading and starting the system, also can obtain the message from Main System and Recovery by reading MISC partition of flash and decide the operation based on it.

两个通信接口：

Two communication interfaces:


1. /cache/recovery/: command、log、intent

2. BCB (Bootloader Control Block) : misc 分区

BCB (Bootloader Control Block): misc partition

我们先来看以上三部分是如何通信的，先看下图：

Please refer to below picture to see how the above three parts communicate:

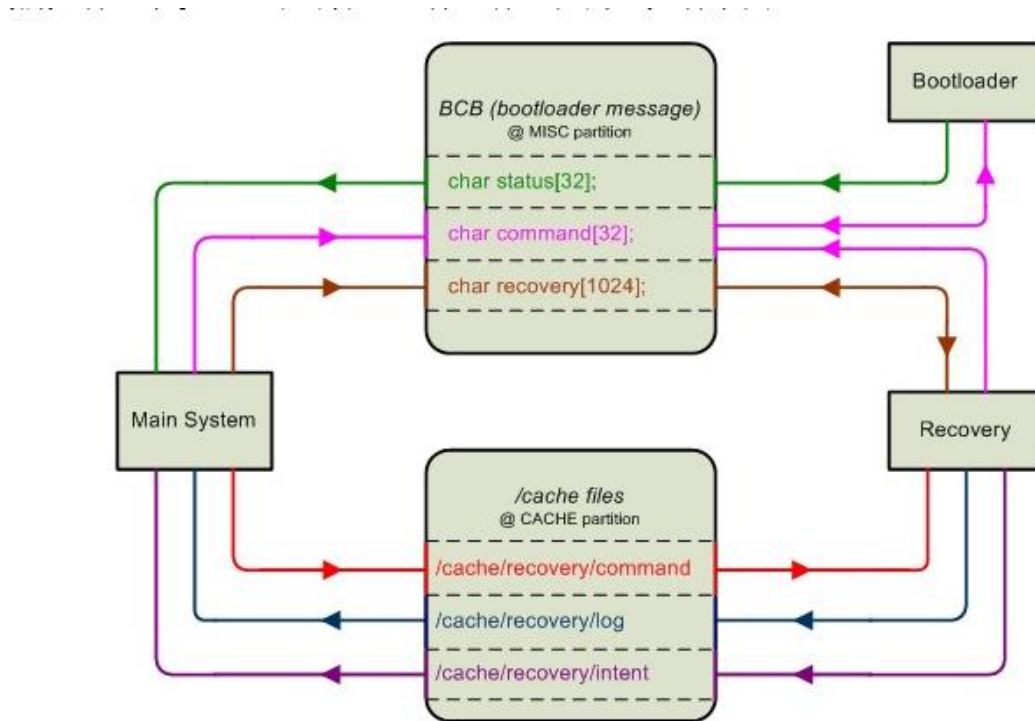


Main System 如何进入 Recovery 模式：当我们在 Main System 使用 update.zip 包进行升级时，系统会重启并进入 recovery 模式。在系统重启前，我们可以看到 Main System 定会向 command 域写入 boot-recovery（粉红色线），用来告知 bootloader 重启后进入 Recovery 模式。

How Main System enters Recovery mode: when Main System uses update.zip package to upgrade, the system will reboot and enter recovery mode. Before system reboots, we can see Main System will write boot-recovery into command field (pink line), which is used to tell bootloader to enter Recovery mode after reboot.

下图是 Main System 进入 Recovery 模式调用接口的流程图：

Below picture shows the process of Main System invoking interface after entering Recovery mode:

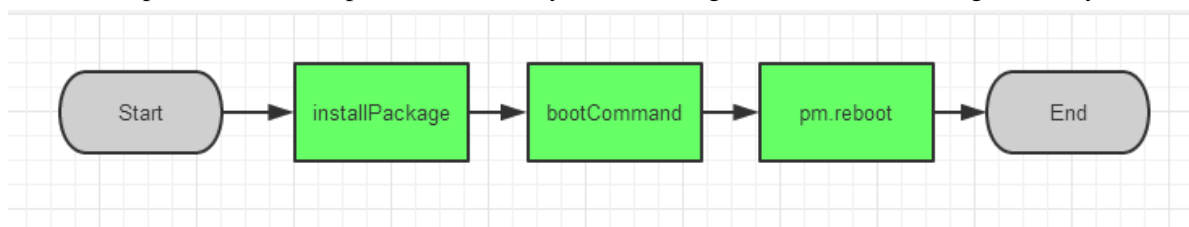

1. `installPackage`: RecoverySystem 的接口，完成升级包路径转换，并调用 `bootCommand`。

`installPackage`: the interface of RecoverySystem, complete the path conversion of upgrade package, and invoke `bootCommand`.

2. bootCommand: RecoverySystem 的接口，将命令写入/cache/recovery/command，并调用

pm.reboot。

bootCommand: the interface of RecoverySystem, write the command into /cache/recovery/command, and invoke pm.reboot.

3. Pm.reboot:PowerManager 的接口，重启并进入 Recovery 模式。

Pm.reboot: the interface of PowerManager, reboot and enter Recovery mode.

2 编译 OTA 包 OTA package compilation

2.1 OTA 介绍 OTA introduction

OTA (over the air) 升级是 Android 系统提供的标准软件升级方式。它功能强大，提供了完全升级（完整包）、增量升级模式（差异包），可以通过本地升级，也可以通过网络升级。

OTA (over the air) upgrade is the standard software upgrade method provided by Android system. It provides complete upgrading (full package) and incremental upgrading mode (difference package). You can upgrade locally or over the network.

2.2 生成完整包 Generate complete package

完整包所包含内容：system、recovery、boot.img

The complete package includes: system, recovery, boot.img

发布一个固件正确的顺序：

The correct order to release an image:

- (1) Rockchip Android < 11

make installclean && make -j16 && make otaimage -j16 && ./mkimage.sh ota

- (2) Rockchip Android ==11

对于 Android 11，如果 device/rockchip/common 包含如下提交：

For Android 11, if device/rockchip/common contains the following commit:

commit 04bc25f31d9a262a2269822d3c483c1b18bf739d

Author: Wu Liangqing <wlq@rock-chips.com>

Date: Thu May 20 08:48:16 2021 +0800

build.sh: mkimage.sh: adjust the ota compilation process

Change-Id: Id0c7146a4316c9bf65d63c3bc2863a90b6f97c4b

则使用如下命令编译：

Then use the following command to compile:

```
make installclean && make -j16 && make dist -j16 && ./mkimage.sh ota
```

如果没有包含上述提交，则与<11 平台相同，即：

If the above commit is not included, it is the same as the <11 platform, namely:

```
make installclean && make -j16 && make otapackage -j16 && ./mkimage.sh ota
```

(2) Rockchip Android > 11

```
make installclean && make -j16 && make dist -j16 && ./mkimage.sh ota
```

此外各个 Android 平台，都可以使用 build.sh 编译，当使用 build.sh 时需要带-o 选项，如 build.sh -AUCKuop.

In addition, all Android platforms can be compiled with build.sh. When using build.sh, you need to bring the -o option, such as build.sh -AUCKuop.

发布固件必须使用 ./mkimage.sh ota, 将 boot 与 kernel 打包，不需要单独烧 kernel，如果量产固件是分开的，将会影响后面差异包升级，除非你不需要用差异升级。

Must use “./mkimage.sh ota” to release image, pack boot and kernel, no need to flash kernel separately, if the MP image is separate, it will impact the incremental OTA in the future, unless you don't need to use the incremental OTA.

在 out/target/product/rkxxxx/目录下会生成 ota 完整包 rkxxxx-ota-eng.root.zip，改成 update.zip 即可拷贝到 T 卡或者内置的 flash 进行升级。

Ota complete package rkxxxx-ota-eng.root.zip will be generated in the directory of out/target/product/rkxxxx/, change it to be update.zip and then you can copy it to T card or built-in flash to do upgrading.

2.3 生成差异包 Generate the incremental OTA package

OTA 差异包只有差异内容，包大小比较小，主要用于 OTA 在线升级，也可 T 卡本地升级。OTA 差异包制作需要特殊的编译进行手动制作。

Incremental OTA package is relative small. It is mainly used for OTA on-line upgrade, and also can be used for T card local upgrade. It needs special compilation to manually make OTA difference package.

(1) 首先发布 v1 版本的固件，生成 v1 版本的完整包。编译命令见 2.2。

Firstly release v1 version image, generate v1 version complete package. See 2.2 for compilation commands

(2) 保存

out/target/product/rkxxxx/obj/PACKAGING/target_files_intermediates/rk3188-target_files-eng.root.zip

为 rkxxxx-target_files-v1.zip，作为 v1 版本的基础素材包。同时设备烧写第 1 步编译后 rockdev 下的固件。

Save

out/target/product/rkxxxx/obj/PACKAGING/target_files_intermediates/rk3188-target_files-eng.root.zip as rkxxxx-target_files-v1.zip, use it as the basic material package of v1 version. At the same time, the device burns the firmware images under rockdev after compiling in step (1).

(3) 修改 kernel 代码或者 android 代码，发布 v2 版本固件，生成 v2 版本完整包

Modify kernel code or android code, release v2 version image, generate v2 version complete package.

编译命令如下：

The compilation command is as follows:

```
make installclean && make -j16 && make otapackage -j16
```

(4) 保存

out/target/product/rkxxxx/obj/PACKAGING/target_files_intermediates/rk3188-target_files-eng.root.zip 为 rkxxxx-target_files-v2.zip，作为 v2 版本的基础素材包。

Save

out/target/product/rkxxxx/obj/PACKAGING/target_files_intermediates/rk3188-target_files-eng.root.zip as rkxxxx-target_files-v2.zip, use it as the basic material package of v2 version.

(5) 生成 v1-v2 的差异升级包：

Generate the difference package of v1-v2:

Android 7.1 及以上版本，作差异包时必须加上 block 参数。

When Android Version ≥ 7.1 , must add "--block" option when making the difference package.

```
./build/tools/releasetools/ota_from_target_files -v -i rkxxxx-target_files-v1.zip
-p out/host/linux-x86 -k build/target/product/security/testkey rkxxxx-target_files-v2.zip
out/target/product/rk3188/rkxxxx-v1-v2.zip
```

说明：生成差异包命令格式：

Note: the command format to generate the difference package:

ota_from_target_files

-v -i 用于比较的前一个 target file

-v -i The former target file used for comparison

--block 使用 block 方式进行 OTA 升级，Android 版本 ≥ 7.1 时需加上这个参数

--block Use block to do OTA upgrade, please add this option when Android version ≥ 7.1

-p host 主机编译环境

-p host The compiling environment of the host

-k 打包密钥

-k the private key for package

用于比较的后一个 target file

The latter target file used for comparison

生成的 ota 差异包

Incremental OTA package generated

2.4 注意事项 Notice

完整包和素材包是不一样的。

The OTA package and the material package are different.

从生成差异包的方法可以知道，差异包是两个版本的素材包做差异生成，所以每发布一个版本固件必须保存 obj 下的素材包以及升级的完整包和 ./mkimage.sh ota 生成的各个 image。

We can know from the way to generate incremental OTA package, the incremental OTA package is generated from two versions of material packages, so the material package in obj and the complete upgrade package and each image generated by ./mkimage.sh ota must be saved for every version release.

如果有使用在线升级，必须给每个版本固件配置唯一的 ota 版本号：

If using on-line upgrade, must configure unique ota version number for every release version:

device/rockchip/rksdk/rksdk.mk 中的

ro.product.version = 1.0.0（也可以是其他格式的版本号字符串）

ro.product.version = 1.0.0 (also can be version number string in other format) in device/rockchip/rksdk/rksdk.mk

3 RK 平台分区升级说明 RK platform partition upgrade instruction

3.1 RkLoader 升级 RkLoader upgrade

3.1.1 < Android 11

一、Loader 升级操作步骤

Loader upgrade step

- a) 将需要升级的 loader，以 RK*Loader*.bin 格式放到 device/rockchip/rkxxxx/ota/loader 目录下，OTA 打包时就会加入到升级包中。

Put the loader which should be upgraded such as RK*Loader*.bin format to the directory of device/rockchip/rkxxxx/ota/loader, and it will be added to the upgrade package during OTA packing.

二、注意事项：

Notices:

- a) android5.1 放到目录 device/rockchip/common/loader，如果没有请创建。

Put android5.1 to the directory of device/rockchip/common/loader, please create if not existing.

- b) android 4.4 放到目录 device/rockchip/rksdk/loader，如果没有请创建。

Put android4.4 to the directory of device/rockchip/rksdk/loader, please create if not existing.

c) Loader 必须保证版本号比固件中的版本号更高。

Loader version number must be higher than the version number of image in the device.

3.1.2 >= Android 11

从 Android 11 开始, rk miniloader 的升级必须单独打包和升级。

Starting from Android 11, the upgrade of rk miniloader must be packaged and upgraded separately.

1.loader OTA 包生成 Generate loader OTA package

以 OTA 方式完成固件编译后 (即 `make installcelan && make && make otapackage && ./mkimage.sh ota`), 在 rockdev 下自动生成的 **update_loader.zip** 文件就是 rk loader OTA 升级包。

After the firmware compilation in OTA mode (ie `make installcelan && make && make otapackage && ./mkimage.sh ota`), the **update_loader.zip** file automatically generated under rockdev is the rk loader OTA package.

2. 升级命令

参考 Upgrade command reference

升级客户端 apk 可参考如下命令方式实现:

Upgrade client apk can refer to the following command:

```
adb root
adb push update_loader.zip /cache/
adb shell "echo \"--fw_rkloader=/cache/ update_loader.zip\" > /cache/recovery/command"
adb reboot recovery
```

3.2 releasetool 说明 releasetool instruction

releasetool 是一个描述 RK 平台分区升级的 Python 脚本。

Releasetool is a Python script describing RK platform partition upgrade.

1. 下面是一些必须要实现的 extension 接口, 供外部调用:

Below are some extension interfaces which must be implemented for external invocation:

FullOTA_Assertions:	全量包升级脚本头部加入升级命令
FullOTA_Assertions:	Add upgrade command in the head of full package upgrade script
IncrementalOTA_Assertions:	增量包升级脚本头部加入升级命令
IncrementalOTA_Assertions:	Add upgrade command in the head of incremental package upgrade script
FullOTA_InstallEnd:	全量包尾部加入升级命令
FullOTA_InstallEnd:	Add upgrade command in the end of full package
IncrementalOTA_InstallEnd:	增量包尾部加入升级命令
IncrementalOTA_InstallEnd:	Add upgrade command in the end of incremental package

2. 下面是 RK 平台分区升级接口:

Below are RK platform partition upgrade interfaces:

InstallRKLoader:	loader 升级 loader upgrade
InstallUboot :	uboot 升级 uboot upgrade
InstallTrust :	trust 升级 trust upgrade

3.3 Backup 分区使用说明 Backup partition usage instruction

当机器出现意外无法正常启动进入 Android, 用户可以引导进入 Recovery, 在 Recovery 菜单栏中选中 Recovery System 选项, 进行操作系统恢复。

When the device cannot normally boot up to Android due to abnormality, users can boot into Recovery, select Recovery System option in Recovery menu bar, and restore the operation system.

使用该功能, 必须将 update.zip 打包成 ext4 的 image, 并烧写到 /backup 中, 操作可如下:

In order to use this function, must pack update.zip into ext4 image first, and then flash it to /backup. The steps are as below:

a) Android 5.1 6.0 可使用如下脚本将 update.zip 打包成 update_back.img 固件

For Android 5.1, 6.0, you can use below script to pack update.zip into update_back.img.

```
1 #!/bin/bash
2 ota_size= `ls -l ./update/update.zip | awk '{print $5;}'`
3 let increment_size=$ota_size/20
4 let ota_size=$ota_size+$increment_size
5
6 MAKE_EXT4FS_ARGS="-L system -S $OUT/root/file_contexts -a backup ./update_back.img ./update/"
7 make_ext4fs -l $ota_size $MAKE_EXT4FS_ARGS
```

Android 7.1 可使用如下脚本将 update.zip 打包成 update_back.img 固件

For Android 7.1, you can use below script to pack update.zip into update_back.img.

```
1 #!/bin/bash
2 croot
3 make img2sing_host
4 cd -
5 ota_size= `ls -l ./update/update.zip | awk '{print $5;}'`
6 let increment_size=$ota_size/20
7 let ota_size=$ota_size+$increment_size
8
9
10 MAKE_EXT4FS_ARGS="-L system -S $OUT/root/file_contexts -a backup ./update_back.img ./update/"
11 make_ext4fs -l $ota_size $MAKE_EXT4FS_ARGS
12 img2sing ./update_back.img ./out.img
13 mv ./out.img ./update_back.img
```

脚本使用注意事项:

The notices of script usage:

1) 脚本执行是基于编译环境, 所以必须执行以下两条命令

The script is executed based on compiling environment, so you must execute below two commands first:

source build/envsetup.sh

lunch

2) 在脚本的同级目录创建 update 目录, 并将 OTA 完整包 update.zip 复制到该目录中

Create update directory at the level of the script directory, and copy OTA full package update.zip into this directory.

- b) 对应的 recovery fstab 里面要将 backup 的文件系统类型改为 ext4.

The corresponding recovery fstab should change the file system type of backup to ext4

- c) 修改 parameter 中 backup 分区的大小, 使其足够放 update_back.img

Modify the backup partition size in parameter, to make it enough to save update_back.img.

- d) 将 update_back.img 打包到 update.img 中, 通过修改 packag-file, 如下图

Pack update_back.img into update.img by modifying packag-file, as shown below:

```

1 # NAME      Relative path
2 #
3 #HWDEF      HWDEF
4 package-file package-file
5 bootloader  Image/MiniLoaderAll.bin
6 parameter   Image/parameter.txt
7 #trust      Image/trust.img
8 uboot       Image/uboot.img
9 misc        Image/misc.img
10 resource    Image/resource.img
11 kernel     Image/kernel.img
12 boot       Image/boot.img
13 recovery    Image/recovery.img
14 system      Image/system.img
15 # 要写入backup分区的文件就是自身 (update.img)
16 # SELF 是关键字, 表示升级文件 (update.img) 自身
17 # 在生成升级文件时, 不加入SELF文件的内容, 但在头部信息中有记录
18 # 在解包升级文件时, 不解包SELF文件的内容
19 backup      Image/update_back.img
20 #update-script update-script
21 #recover-script recover-script

```

代码说明:

Code instruction:

Android 5.1 6.0 补丁放于百度云:

The patch of Android5.1, 6.0 is saved in BaiduCloud:

链接: <http://pan.baidu.com/s/1dEIGNZr> 密码: sq0j

Link: <http://pan.baidu.com/s/1dEIGNZr> Password: sq0j

4 Update.img 升级方式 Update.img upgrade method

4.1 支持存储方式 Support memory upgrade

注: Android 7.x 及以上平台不再支持这种升级方式, 请使用标准 update.zip 方式升级。

Note: Android 7.x and above platforms don't support this kind of upgrade any more, please use standard update.zip to upgrade.

可以将 update.img 存到 SD 卡根目录，USB 根目录，内部存储/data/media/0/ 下，如果系统检测到有该包，会自动检测包是否合法，如果合法会重启进入 recovery 模式，并进行升级。

You can save update.img to SD card root directory, USB root directory, internal memory /data/media/0/, if the system detects the package, it will check if the package is valid, if it is valid, it will reboot and enter recovery mode to upgrade.

4.2 打包说明 Packing instruction

1. 进入到目录 RKTools/linux/Linux_Pack_Firmware/rockdev/

Enter the directory of RKTools/linux/Linux_Pack_Firmware/rockdev/

2. 修改 package-file 文件，指向生成 img 的路径，或者将 img 拷贝进来。如图：

Modify package-file file, point to the path img generated, or copy the img, as shown below:

```

1 # NAME      Relative path
2 #
3 #HWDEF      HWDEF
4 package-file package-file
5 bootloader  Image-rk3399_box/RK3399MiniLoaderAll_V1.05.bin
6 parameter   Image-rk3399_box/parameter.txt
7 trust       Image-rk3399_box/trust.img
8 uboot       Image-rk3399_box/uboot.img
9 misc        Image-rk3399_box/misc.img
10 resource    Image-rk3399_box/resource.img
11 kernel      Image-rk3399_box/kernel.img
12 boot        Image-rk3399_box/boot.img
13 recovery    Image-rk3399_box/recovery.img
14 system      Image-rk3399_box/system.img
15 # 要写入backup分区的文件就是自身 (update.img)
16 # SELF 是关键字，表示升级文件 (update.img) 自身
17 # 在生成升级文件时，不加入SELF文件的内容，但在头部信息中有记录
18 # 在解包升级文件时，不解包SELF文件的内容。
19 backup      RESERVED
20 #update-script update-script
21 #recover-script recover-script

```


3. Parameter.txt：确认你的 parameter.txt 中 MACHINE_MODEL 的值是否正确，该值将用来校验 img 包是否合法，并且不能包含空格。如图所示，rk3399-box 前后都不能有空格。

Parameter.txt: confirm if the value of MACHINE_MODEL in your parameter.txt is correct or not. This value will be used to check if img package is valid and cannot include space. As shown in below picture, there must be no space before or after rk3399-box.

```

1 FIRMWARE_VER: 6.0.1
2 MACHINE_MODEL: rk3399-box
3 MACHINE_ID: 007
4 MANUFACTURER: RK3399

```



4. 运行 mkupdate.sh 脚本,会在该目录下生成 update.img,将拷贝到目标路径,即可进行升级。

Run mkupdate.sh script will generate update.img in the directory. Copy it to the target path can do upgrade.

5 配置说明 Configuration instruction

5.1 Log 重定向 Log re-direct

1. 功能说明: Log 可以输出到串口、SD 卡、/cache/recovery/、三个地方。

Function description: Log can be output to serial port, SD card, or /cache/recovery/.

2. 打开方式:

(1) <Android 10

bootable/recovery/Android.mk:

Enable method: modify bootable/recovery/Android.mk file:

REDIRECT_LOG_TO := UART	将日志输出到串口
REDIRECT_LOG_TO := UART	output the log to serial port
REDIRECT_LOG_TO := CACHE	将日志输出到/cache/recovery/目录下
REDIRECT_LOG_TO := CACHE	output the log to /cache/recovery/ directory
REDIRECT_LOG_TO := SDCARD	将日志输出到 SD 卡中 recovery.log
REDIRECT_LOG_TO := SDCARD	output the log to SD card recovery.log

(2) >=Android 10

bootable/recovery/Android.bp:

-DLogToSerial	将日志输出到串口
-DLogToSerial	output the log to serial port
-DLogToCache	将日志输出到/cache/recovery/目录下
-DLogToCache	output the log to /cache/recovery/ directory
-DLogToSDCard	将日志输出到 SD 卡中 recovery.log
-DLogToSDCard	output the log to SD card recovery.log

3. 支持平台: android 6.0 及以上。

Support platform: Android6.0 and higher

5.2 屏幕旋转 Screen rotation

1. 功能说明: Recovery 屏幕可以旋转 0°, 90°, 180°, 270°。

Function description: Recovery screen can be rotated 0°, 90°, 180°, 270°

2. 打开方式: 修改 device/rockchip/common/BoardConfig.mk 文件:

Enable method: modify device/rockchip/common/BoardConfig.mk file

```

ROTATE_SCREEN := rotate_0           不旋转    No rotation
ROTATE_SCREEN := rotate_90          旋转 90°   Rotate 90°
ROTATE_SCREEN := rotate_180         旋转 180°   Rotate 180°
ROTATE_SCREEN := rotate_270         旋转 270°   Rotate 270°
BOARD_HAS_FLIPPED_SCREEN := true     旋转 180°, 针对 LCD 屏幕装反情况。

```

Rotate 180° when LCD panel is assembled reversely.

3. 支持平台: android 6.0, 5.1 以补丁的形式存在。

Support platform: patch available for Android6.0, 5.1.

4. 对于 Android 8.1 及以上平台, 旋转配置方式如下:

For Android8.1 and above platforms, the rotation configurations are as below:

```

TARGET_RECOVERY_DEFAULT_ROTATION := ROTATION_NONE 不旋转
TARGET_RECOVERY_DEFAULT_ROTATION := ROTATION_NONE No rotate
TARGET_RECOVERY_DEFAULT_ROTATION := ROTATION_LEFT 旋转 270
TARGET_RECOVERY_DEFAULT_ROTATION := ROTATION_LEFT Rotate 270
TARGET_RECOVERY_DEFAULT_ROTATION := ROTATION_RIGHT 旋转 90
TARGET_RECOVERY_DEFAULT_ROTATION := ROTATION_RIGHT Rotate 90
TARGET_RECOVERY_DEFAULT_ROTATION := ROTATION_DOWN 旋转 180
TARGET_RECOVERY_DEFAULT_ROTATION := ROTATION_DOWN Rotate 180

```

5.3 屏幕分屏 Screen split

1. 功能说明: Recovery 屏幕分屏, 将屏幕分为左右两部分, 显示内容一样, 用于 VR 功能。

Function description: Recovery screen split, divide the screen into left and right parts, displaying the same content, used for VR product.

2. 打开方式: 修改 bootable/recovery/Android.m 文件:

Enable method: modify bootable/recovery/Android.m file:

```

DOUBLE_SCREEN := NO      不分屏 disable
DOUBLE_SCREEN := YES     分屏 enable

```

3. 支持平台: android 6.0, 5.1 以补丁的形式存在。

Support platform: patch available for Android6.0, 5.1.

5.4 文件保存 File save

1. 功能说明：将文件保存到/cache/recovery/Recovery_*, 格式化不会清除该文件。

Function description: save the file to /cache/recovery/Recovery_*, and formatting will not clear this file.

2. 支持平台：android 6.0, android 7.1

Support platform: Android6.0, Android7.1

5.5 RecoveryUI 说明 RecoveryUI instruction

recovery 作为一个简单的 rootfs, 提供非常有限的几个功能, 只包含了几个简单的库, UI 显示采用的是直接刷 framebuffer 的形式。首先浏览一下 recovery main 函数里面的流程

recovery as a simple rootfs provides very limited functions, only contains several simple libraries, and UI display uses the way of directly brushing framebuffer. Firstly look through the process in recovery main function:

```
Device* device = make_device();
ui = device->GetUI();
gCurrentUI = ui;

ui->SetLocale(locale);
ui->Init();
```

如上代码所示, make_device()函数返回一个 Device 设备, 所以我们只需要继承 Device 类(一些虚函数接口), 就可对 RecoveryUI 进行简单的修改。

As shown in above code, make_device() function returns a Device, so we just need to inherit Device class (some virtual function interfaces) to make simple modification to RecoveryUI.

1. 功能说明：自定义 recovery 菜单与按键实现

Function description: customize recovery menu and button implementation

2. 打开方式：修改 device/rockchip/common/BoardConfig.mk 文件：

Enable method: modify device/rockchip/common/BoardConfig.mk file:

TARGET_RECOVERY_UI_LIB ?= librecovery_ui_rk30sdk

3. 修改方式：device/rockchip/common/recovery, 里面有例子, 可修改或参照。

Modification: you can modify or refer to the example in device/rockchip/common/recovery.

5.6 支持 EXT4 文件系统 Support EXT4 file system

1. 打开方式：修改 device/rockchip/common/BoardConfig.mk 文件：

Enable method: modify device/rockchip/common/BoardConfig.mk file:

- a) TARGET_USERIMAGES_USE_EXT4 ?= true

5.7 Update.img drm 签名校验 Update.img drm signature verification

- 1.功能说明: update.img 在升级时进行 drm 签名校验, 防止第三方非法固件升级。Update.img 必须使用 secureboot 工具签名, 并勾选 sign check 复选框。

Function description: update.img performs drm signature verification during upgrade to avoid illegal third party firmware upgrade. Update.img must be signed using secureboot tool, and select sign check checkbox.

- 2.打开方式: 修改 device/rockchip/common/BoardConfig.mk 文件:

Enable method: modify device/rockchip/common/BoardConfig.mk file:

- a) RECOVERY_UPDATEIMG_RSA_CHECK ?= true

- 3.支持平台: android4.4, android5.1

Support platform: Android4.4, Android5.1

5.8 Boardid 串号 Boardid serial number

- 1.功能说明: 一种根据烧录 Boardid 串号实现一种固件支持不同硬件不同国家定制的 one image, 该方案支持谷歌 OTA 完整升级和差异升级。

Function description: a firmware implementation based on the flashed Boardid serial number supports one image customized for different hardware and different countries. This solution supports Google OTA complete upgrade and difference upgrade.

- 2.打开方式: 修改 device/rockchip/common/BoardConfig.mk 文件:

Enable method: modify device/rockchip/common/BoardConfig.mk file:

- a) RECOVERY_BOARD_ID ?= true

- 3.支持平台: android 4.4, android5.1

Support platform: Android4.4, Android5.1

5.9 升级 U 盘升级包 Update the upgrade package of U disk

- 1.功能说明: 当按键进入 recovery 时, 自动升级 U 盘中的升级包(update.img 或 update.zip)。

Function description: when press the button to enter recovery, it will automatically update the upgrade package in U disk (update.img or update.zip).

2.打开方式：修改 device/rockchip/common/BoardConfig.mk 文件：

Enable method: modify device/rockchip/common/BoardConfig.mk file:

- a) RECOVERY_AUTO_USB_UPDATE ?= false

3.支持平台：android 5.1

Support platform: Android5.1

5.10 代码结构 Code structure

本节将对 recovery 涉及的相关代码结构进行简单的说明。

This chapter will simply describe recovery related code structure.

1. Bootable/recovery/:

- a) Recovery 的主程序代码，其中 recovery.cpp 是入口，
Recovery main program code, recovery.cpp is the entry
- b) rkimage.cpp 是处理 update.img 的升级流程，
rkimage.cpp handles the upgrade process of update.img
- c) install.cpp 是处理 update.zip 的升级流程。
install.cpp handles the upgrade process of update.zip

2. Build/tools/releasetools/:

- a) OTA 升级包的 Python 脚本，控制完整包与差异包的生成。
Python script of OTA upgrade package, control the generation of full package and incremental package.

3. Build/tools/drmsigntool/:

- a) 如果开启 drm，生成 ota 包时对 boot.img 进行签名，使用
build/target/product/security/private.key,保证进行 OTA 升级后，drm 功能还能正常使用。
If drm is enabled, sign boot.img during ota package generation, use
build/target/product/security/private.key, to ensure that drm function can still work normally after
OTA upgrade.

4. Build/tools/remkloader/:

- a) 编译 OTA 时打包可升级的 loader 的工具。
The tool used to pack the upgrade loader when compiling OTA package.

5. Build/target/product/security/:

- a) 编译 OTA 包时签名使用的密钥。

The private key used for signature when compiling OTA package.

6.device/rockchip/common/recovery/:

- a) Recovery 菜单及按键定制

Recovery menu and button customization

- b) 在 android 4.4 上是 device/rockchip/rksdk/recovery 目录

It is device/rockchip/rksdk/recovery directory for Android4.4

8. Device/rockchip/common/loader:

- a) 将需要升级的 loader 放在该目录，可以打包到 ota 升级包中。

Put the upgrade loader in this directory, can be packed into ota upgrade package.

- b) 4.4 目录 device/rockchip/rksdk/loader

device/rockchip/rksdk/loader directory for Android4.4

- c) 6.0 目录 device/rockchip/rkxxxx/ota/loader

device/rockchip/rkxxxx/ota/loader directory for Android6.0

9. out/target/product/rk3188/obj/PACKAGING/target_files_intermediates:

- a) OTA 升级包编译生成的素材包，要做差异包必须保存该素材包。

The material package generated by compiling OTA upgrade package, if want to make the difference package, this material package must be saved.

10. Device/rockchip/common/releasetools.py

- a) 定义 OTA 包中包含的内容。

Define the contents in the OTA package.

6 升级步骤 Upgrading steps

6.1 OTA 包本地升级操作步骤 OTA package local upgrading steps

1. 参照第二章，生成 OTA 包，并重新命名为 update.zip

Refer to chapter 2, generate OTA package, and rename it as update.zip.

2. 将 update.zip 拷贝到 USB、SD 卡根目录，或/data/media/0/ 目录下

Copy update.zip to USB, SD card root directory, or /data/media/0/ directory.

3. 会自动检测升级包，并弹出升级对话框。

It will automatically detect the upgrading package, and pop up the upgrading dialog.

4. 自动重启升级：重启进入 Recovery 系统中自动完成 OTA 包的升级，此时不能断电，等待升级完成会自动重启到 Android 主界面。

Automatic reboot and upgrade: reboot to Recovery system and automatically upgrade the OTA package, cannot power down during the period, it will automatically reboot to Android main interface after the upgrading is completed.

6.2 OTA 包网络升级操作步骤 OTA package network upgrading steps

1. 自动检测网络 OTA 升级包，提示下载升级。

Automatically detect the network OTA upgrading package, prompt to download and upgrade.

2. 自动重启升级。


Automatically reboot and upgrade.


7 量产指导 MP Guidance

7.1 升级原理简介 Upgrade principle brief introduction

本节旨在指导开发商如何对 RK 平台 Android 终端进行量产升级，以及让开发工程师理解升级原理。在介绍升级流程之前，我们先大致了解一下 RK 平台的固件加载流程。

This chapter mainly describes for customers how to do MP upgrade for Android terminal based on RK platform, and helps development engineers understand the upgrade principle. Let us have a general understanding of image loading process based on RK platform before introducing the upgrade process.

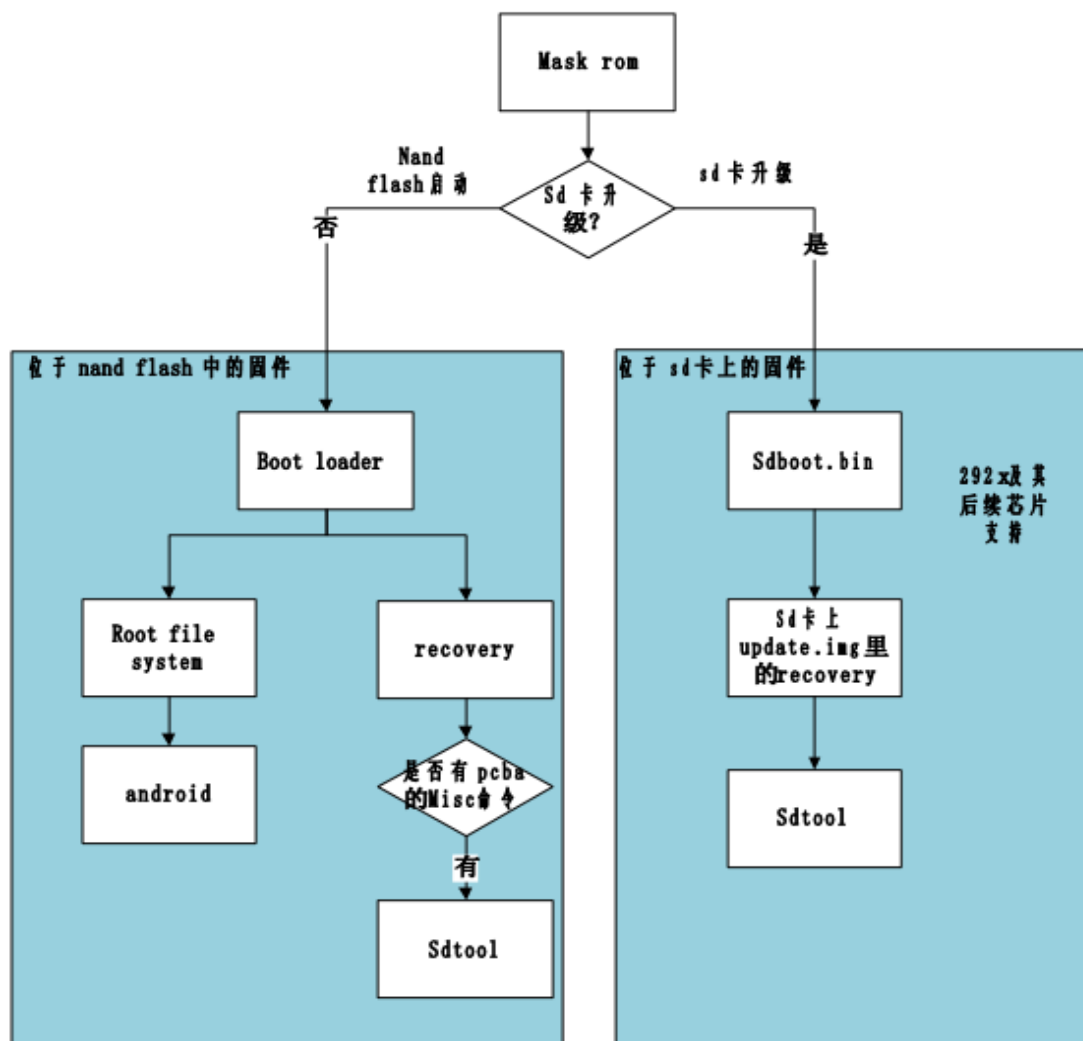

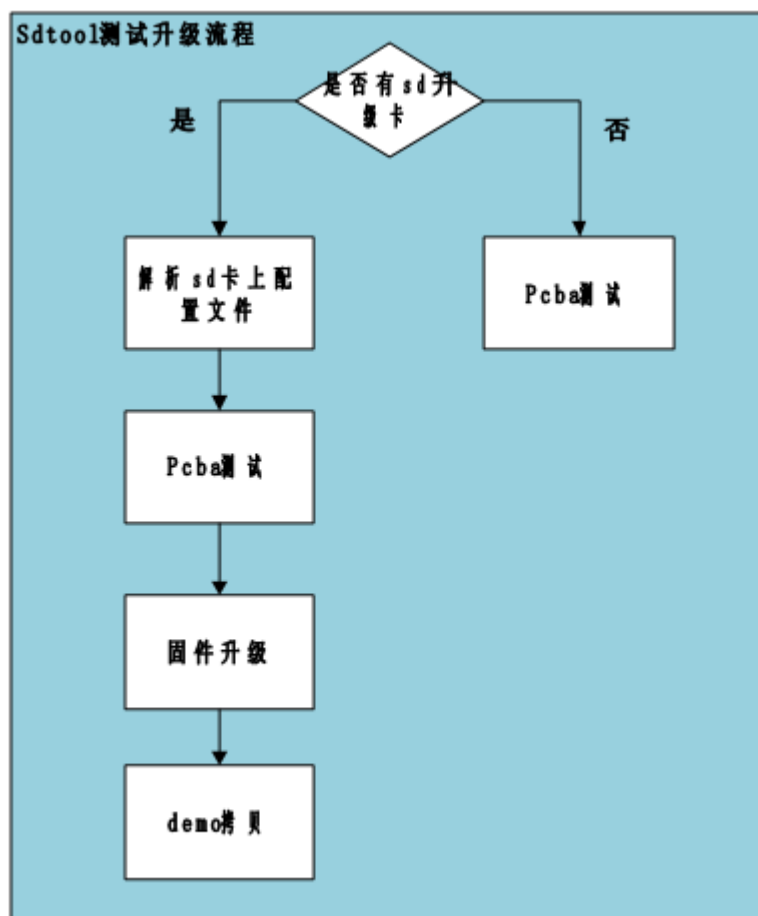

上电第一步,首先启动的是固化在芯片内部的 MaskRom: MaskRom 完成芯片基础的初始化后,将判断是否插入特殊的 SD 升级卡。这里分两种情况:

After power up, firstly it will start MaskRom solidified inside the chipset: after MaskRom finishes the basic initialization of the chipset, it will judge whether the special SD upgrade card is inserted. There are two cases:

第一种从 flash 启动,去加载位于 flash 中的 Bootloader, Bootloader 再根据 misc 分区中指令决定加载 recovery 还是 boot 的根文件系统,如果是加载根文件系统,那文件系统会把 android 的 system 挂载起来,启动各项服务。

The first one is to start from flash, load Bootloader in the flash, and then Bootloader determines to load recovery or boot root file system according to the instruction in the misc partition. If it is to load into boot, then root file system included in boot image will be loaded, and start the services.

第二种从 SD 卡启动,maskrom 引导卡上的 sdboot.bin, sdboot 会做一些文件系统初始化等操作,然后将 update.img 从 recovery 中解压出来在内存中运行,此时 recovery 会识别到命令启动工厂模式将控制权交给 sdtool, sdtool 里可以做一些工厂量产相关的处理流程,比如 pcba 测试,大固件升级, demo 文件拷贝等等。

The second one is to start from SD card, maskrom loads sdboot.bin of the card, sdboot will do file system initialization and some other operations, and then unzip update.img from recovery and run in the memory, now recovery will recognize the command to start the factory mode and give the control to sdtool, sdtool can do some factory MP related processes, such as pcba test, big image upgrade, demo file

copy and so on.

这样我们可以得到几种升级模式:

In this way we can get several upgrade modes:

1. MaskRom 模式, 系统在 Flash 中找不到 BootLoader, 系统就会停留在 MaskRom 状态, 等待 USB 连接 PC 升级。一般在贴片完成后, 第一次开机, 机器就停留在 MaskRom 状态; 也可以通过开机时短接 Flash 的数据线, 让系统扫描 Flash 出错而停留在 MaskRom 状态。该状态下可以通过 pc 端工具直接烧写固件。

MaskRom mode, if system cannot find BootLoader in Flash, it will stay in MaskRom state, waiting for USB connecting with PC to upgrade. Generally the first time power up after SMT, the device will stay in MaskRom state. Also you can make system scanning Flash error and stay in MaskRom by short connecting the data line of Flash during power up. In this state, you can directly flash the image using PC tool.

2. BootLoader 模式, BootLoader 模式生效的前提是在机器中已经有烧入可工作的 Loader.bin。进入 BootLoader 模式的方法一般是通过组合键开机, 在其他分区校验出错时, 系统也会停留在 BootLoader 状态。这种模式下也可以通过 pc 端工具进行固件烧写。

BootLoader mode, the pre-condition to make BootLoader mode valid is that there is workable Loader.bin in the device. The general way to enter BootLoader mode is to power up through the combination of buttons, when other partition verification error occurs, the system also will stay in BootLoader state. In this mode, you can also flash image through PC tool.


3. Recovery 模式, Recovery 包含两种模式, 通过不同的启动命令区分, 一种是最终用户模式, 一种是工厂模式(也就是上图中的 sd 卡升级的情况)。最终用户模式包含本地升级功能, 也是 OTA 升级的基础。工厂模式包括 pcba 测试、固件升级、音视频 demo 文件拷贝, 主要为了支持工厂生产的相关需求。

Recovery mode, Recovery includes two modes, using different boot commands to identify, one is the end user mode, and the other is factory mode (that is the sd card upgrade as above picture). End user mode includes local upgrade function, which is also the base of OTA upgrade. Factory mode includes pcba test, image upgrade, audio and video demo file copy, mainly to support factory production related requirements.

7.2 量产流程分析 MP process analysis

目前的量产流程主要分为四种:

Currently there are mainly four kinds of MP process:

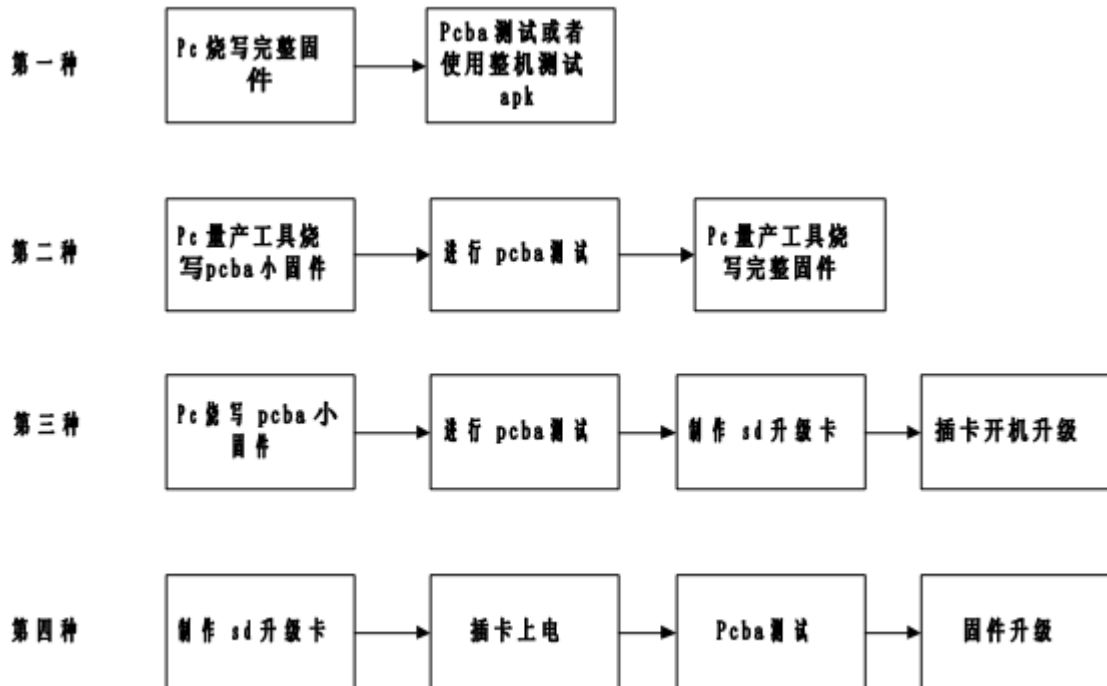

前三种升级流程全系列芯片支持，第四种流程目前只有 292x 及以后的芯片支持。使用第四种流程可以完全脱离 pc，因此生产效率高。对于 maskrom 非支持 sd 卡引导的芯片，建议使用第三种流程，贴片厂用 pc 烧一个 pcba 小固件进行测试，整机厂商使用 sd 卡升级完整固件。

The previous three upgrade processes are supported on all chipsets, and the forth process currently is only supported by 292x and later chipsets. The forth process doesn't need pc at all, so the production efficiency is high. For the chipset not supporting to use sd card to load maskrom, recommend to use the third process, SMT factory uses pc to flash a small image to do pcba test, while the device manufacturer uses sd card to upgrade the complete image.

7.3 编译固件注意事项 Notices of image compilation

这里再次强调，为了与 google 的 ota 升级统一，sd 卡升级时不会单独烧写 kernel 分区，kernel 需要跟 boot 一起打包。

Again, in order to be consistent with Google ota upgrade, sd card upgrade will not flash kernel partition separately. Kernel needs to be packed together with boot.

编译完，生成固件时使用 ./mkimage.sh ota 命令，这样生成出来的固件即是 boot 里包含 kernel 的固件。

After compilation, use “./mkimage.sh ota” to generate image. In this way the image generated is just the image with kernel included in boot.

7.4 制作 pcba 小固件 Make pcba small image

1. pcba_small_misc.img 用来定义一个 pcba 小固件，也就是说打包了该 misc 的 update.img 就具备了 pcba 测试小固件的功能。

pcba_small_misc.img is used to define a pcba small image, that means, the update.img packed with this misc has the function of pcba testing small image.

2. 将 loader、parameter、pcba_small_misc.img、recovery 打包到 update.img 里：

Pack loader, parameter, pcba_small_misc.img and recovery into update.img:

请看打包工具的 package-file 文件配置方法：

```

1 # NAME      Relative path
2 #
3 #HWDEF      HWDEF
4 package-file package-file
5 bootloader  RK292xLoader(L)_V1.18.bin
6 parameter   parameter
7 misc        Image/pcba_small_misc.img
8 #kernel     Image/kernel.img
9 #boot        Image/boot.img
10 recovery    Image/recovery.img
11 #system     Image/system.img
12 # 要写入backup分区的文件就是自身 (update.img)
13 # SELF 是关键字，表示升级文件 (update.img) 自身
14 # 在生成升级文件时，不加入SELF文件的内容，但在头部信息中有记录
15 # 在解包升级文件时，不解包SELF文件的内容。
16 # RESERVED不打包backup
17 #backup     backupimage/backup.img
18 backup      RESERVED
19 #update-script  update-script
20 #recover-script recover-script

```

3. 打包好 pcba 小固件后通过量产工具烧写到机器后，每次启动机器都能自动进入 pcba 测试。

After packing pcba small image and flashing it to the device through MP tool, it will automatically enter pcba test when the device starts up every time.

7.5 制作带 pcba 测试功能的完整固件 Make the whole image with pcba testing function

1. pcba_whole_misc.img 用来定义带 pcba 功能的完整固件，也就是说打包了该 misc 的大固件具有烧写完第一次启动进行 pcba 测试的功能。

pcba_whole_misc.img is used to define the whole image with pcba function, that means, the big

image packed with this misc has the function to do pcba testing for the first boot up after flashing.

2. 将 loader、parameter、pcba_whole_misc.img、boot、recovery、system 等都打包到 update.img 里，即是带 pcba 测试功能的完整固件。用量产工具烧入机器第一次启动会进入 pcba 测试，测试通过后下次启动会进入 android，测试不通过下次启动还是进 pcba 测试。

Pack loader, parameter, pcba_whole_misc.img, boot, recovery, system, etc. into update.img, and that is the whole image with pcba testing function. Flash it into the device using MP tool, and it will enter pcba test for the first boot up. If test passed, it will enter android for next boot up, while it will still enter pcba test for next boot up if test failed.

3. 如果不需要第一次启动进入 pcba 测试，可以不打包 pcba_whole_misc.img，而使用 普通的 misc，这样量产工具升级完第一次启动只做格式化操作然后正常启动 android。

If no need to enter pcba test for the first boot up, don't pack pcba_whole_misc.img, just use normal misc, in this way it will only do formatting and then normally boot up android for the first boot up after upgrade by MP tool.

7.6 制作 SD 升级卡 Make SD upgrade card


对于 Android \geq 9.0 版本，使用 SD 升级卡时 kernel 的 defconfig 必须打开如下选项：

For Android \geq 9.0, the kernel defconfig must have the following options when using the SD upgrade card:

```
CONFIG_ROCKCHIP_VENDOR_STORAGE_UPDATE_LOADER=y
```

使用 SD_Firmware_Tool 创建一张 sd 升级卡，具体使用方法参考工具目录下的 《SD Card BootUserGuide》文档。

Use SD_Firmware_Tool to create a sd upgrade card. For the detailed method, please refer to the document of 《SD Card BootUserGuide》 under the tool directory.

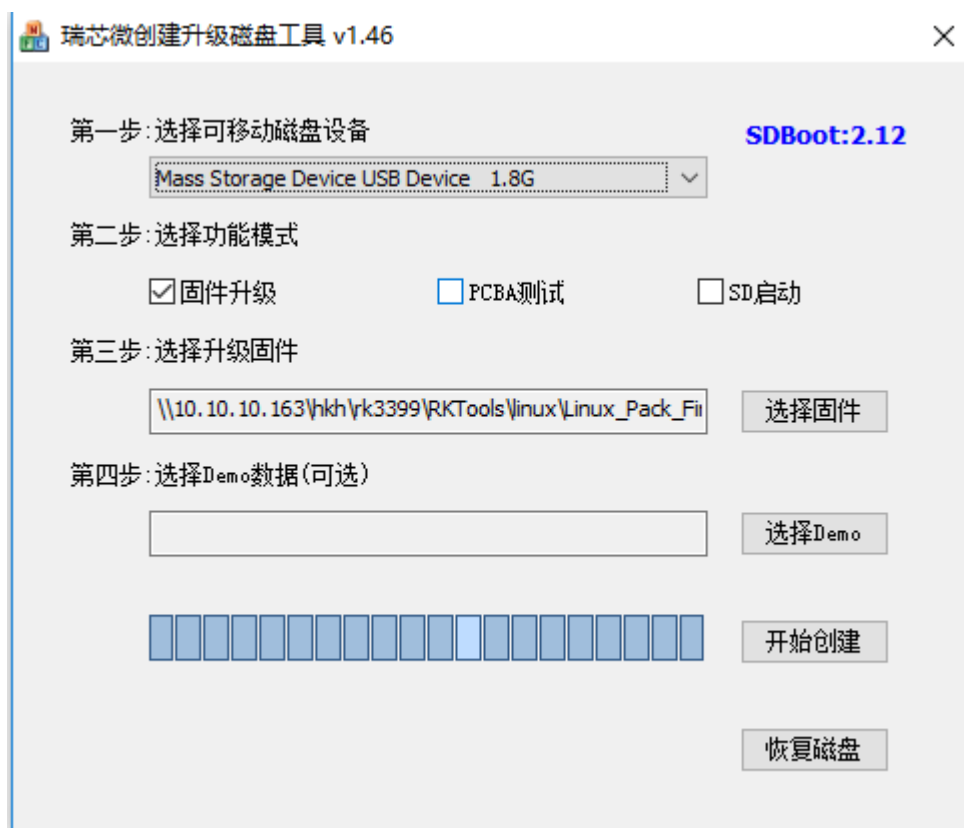

- 1) 如果贴片厂不需要升级完整固件，只需要做 PCBA 测试，有以下两种方式：

If no need to upgrade the whole image in SMT, only need to do PCBA test, there are two methods as below:

- a) 只勾选 PCBA 测试

Only select PCBA test

- b) 只勾选 SD 启动

Only select SD boot up

使用以上两种方法都可以实现：机器直接插卡进行 PCBA 测试，由于方法 a) 需要先将固件升级到 flash 中才进行测试，所需要的时间比方法 b) 大概要长 10 秒左右，所以建议使用方法 b) 进行 PCBA 测试，方法 b) 无法在 PCBA 中进行 SD 卡测试，但是由于是 SD 卡启动，可以证明 SD 卡功能是正常的，所以就不需要测试 SD 卡。

Use both methods above can realize: directly insert the card in the device to do PCBA test, because method a) needs to upgrade the image to flash before testing, it will take 10s more than method b), it is recommended to use method b) to do PCBA test. It is not able to do SD card test in PCBA for method b), but it is booted up by SD card, which indicating SD card function is normal, so there is no need to test SD card.

- 2) 整机厂商需要升级完整固件并拷贝 demo 数据文件，制作的时候应该选择完整固件，并只勾选固件升级，不勾选 pcba 测试。

The device manufacturer needs to upgrade the whole image and copy demo data file, need to select

the whole image and only select image upgrade, don't select pcba test.

7.7 SD 升级卡的使用 SD upgrade card usage

1. 创建好 sd 卡后，对于支持 sd 卡引导的芯片，只需要将卡插入机器，重新开机即可。

After sd card is created, for the chipset supporting to load through sd card, only need to insert the card into the device and then power up.

2. 对于不支持 sd 卡引导的芯片，如 3066，需要在机器烧过 pcba 小固件的情况下，插卡开机才能使用，也就是上文说的第三种量产升级流程。

For the chipset not supporting to load through sd card, such as RK3066, need to flash pcba small image to the device first, and then insert the card and power up, that is the third process of MP upgrade as described in previous chapter.

7.8 注意事项 Notices

sd 升级卡不是普通卡，是带有引导信息的卡，支持 sd 卡引导的机器插着卡开机就会从卡启动，不要当成普通卡拷入 update.img 在 android 状态下去做本地升级。如果需要用卡去本地升级需要先用 SD_Firmware_Tool 工具恢复这张卡。

Sd upgrade card is not normal card, it is the card with load information, the device supporting to load through sd card will boot up from card if it is powered up with card inserted. Do not use it as normal card to copy update.img to do local upgrade in android state. If need to use the card to do local upgrade, need to use SD_Firmware_Tool to restore the card first.

8 常见问题处理 FAQ

8.1 差分升级错误处理 Incremental OTA error handling

差分升级容易出错，原因是生成的烧到机器里的 image 固件与 make otapackage 编译出来的完整包不一致，包括人为的对 image 的修改或是对完整包的修改，以下总结了几种容易造成差异升级失败的不当操作：

Incremental OTA is easy to fail, because the image flashed to the device is different from the whole package compiled by make otapackage, including the manual modification to image or the whole package. Below summarize several incorrect operations which will cause the differential upgrade failure easily:

1. 发布固件未使用 ./mkimage.sh ota 生成，量产时单独烧写 kernel，原因是 ota 包中的 boot.img 是

有带 kernel 的，所以生成的差分补丁都是基于带 kernel 的 boot，在需要差分升级到下一个版本时，boot.img 的补丁会打不上。

Not use “./mkimage.sh ota” to generate the release image, separately flash kernel during MP, because boot.img in ota package already includes kernel, the generated differential patch is based on boot with kernel, when need differential upgrade to next version, boot.img patch cannot be applied.

2. 未通过编译系统直接修改 out 目录下的文件后再生成 ota package。

Not directly modify the file in out directory through compiling system and then generate ota package.

3. 使用固件工厂工具直接修改 update.img。

Use image factory tool to directly modify update.img.

4. build/tools/release/security/目录有 publicKey.bin 和 privateKey.bin 这两个文件，update.img 却未使用 secureboot 工具签名。原因是源码中包含 privateKey.bin 时 make otapackage 生成完整包时会对 boot.img 进行 drm 签名，但是量产 update.img 却没有对 boot.img 进行签名，造成两个固件不一致。

build/tools/release/security/ directory has publicKey.bin and privateKey.bin files, update.img is not signed by secureboot tool. The reason is that when the source code includes privateKey.bin, make otapackage to generate the whole package will perform drm signature to boot.img, but during MP update.img doesn't sign to boot.img, which makes the two images inconsistent.

5. 发布每个版本固件未保存对应的 target 素材包，差异包是用

out/target/product/rk3188/obj/PACKAGING/target_files_intermediates/目录下的素材包制作的，如果发布的每一版固件没有保存对应的素材包将无法生成可用的差异包。

The corresponding target material package is not saved for every release image, the incremental package is made from the material package in the directory of out/target/product/rk3188/obj/PACKAGING/target_files_intermediates/. The incremental package cannot be generated if the corresponding material package of each release image is not saved.

8.2 升级包签名校验错误处理 Upgrade package signature verification error handling

保证升级前后使用同一套签名密钥，即工程源码下 build/target/product/security/保持一致，比如 4.2 要升级到 4.4，要将 4.2 的该目录下的 key 覆盖到 4.4 下，再生成 ota 升级包。

Ensure to use the same set of signature private key before and after upgrade, that is, build/target/product/security/ of the project source code should keep consistent, such as upgrade from 4.2 to 4.4, need to overwrite the key in this directory from 4.2 to 4.4, and then generate ota upgrade package.

8.3 NTFS 格式 U 盘升级支持 NTFS format U disk upgrade support

内核默认不支持 NTFS 格式 U 盘的挂载，所以 recovery 中无法支持。如需支持 NTFS，需要打开 kernel 中的相应配置，recovery 默认已支持：

Kernel doesn't support NTFS format U disk load by default, so it is not able to support in recovery. If need to support NTFS, need to enable the corresponding configuration in kernel, which recovery already support by default:

```
Symbol: NTFS_FS [=n]
Type   : tristate
Prompt: NTFS file system support
Location:
    -> File systems
(3)    -> DOS/FAT/NT Filesystems
Defined at fs/ntfs/Kconfig:1
Depends on: BLOCK [=y]
Selects: NLS [=y]
```

8.4 Logo 未更新成功 Logo update failure

1. 位置：Logo 包含 uboot logo 和 kernel logo，这两个 Logo 都存储于 resource.img 里面。

Location: Logo includes uboot logo and kernel logo, both Logo are saved in resource.img.

2. 显示策略：分为两种情况

Display strategy: there are two cases

boot.img 包含/不包含 resource.img

boot.img with/without resource.img

策略一：如果 parameter 里面有声明 resource 分区

Strategy one: if there is resource partition statement in parameter

优先从 resource 分区读取 Logo

Prefer to read Logo from resource partition

策略二：如果 parameter 里面没有声明 resource 分区

Strategy two: if there is no resource partition statement in parameter

优先从 boot 里面读取 Logo

Prefer to read Logo from boot

由于 boot.img 较大，读取需要时间，为了较快的显示 Logo，我们采用策略一，所以如果出现 Logo 升级失败，应该优先检查 resource 是有升级成功。

Because boot.img is relatively large, reading takes time, in order to display Logo quickly, we use strategy one, if fail to upgrade Logo, first need to check whether resource is upgraded successfully.

3. 总结：所以 Logo 如果未更新成功，是 resource.img 升级失败，可以参考 recourse.img 升级。

Summary: if fail to upgrade Logo, it is caused by resource.img upgrade failure, and you can refer to recourse.img upgrade.


9 SecureBoot 签名工具 SecureBoot signature tool

本节只对工具的使用进行简单的介绍，更为详细的请参考工具目录下的文档说明。

This chapter only simply introduces the tool usage. For more details, please refer to the document in the tool directory.

《RockchipSecureBootApplicationNote》

9.1 win 平台签名 win platform signature

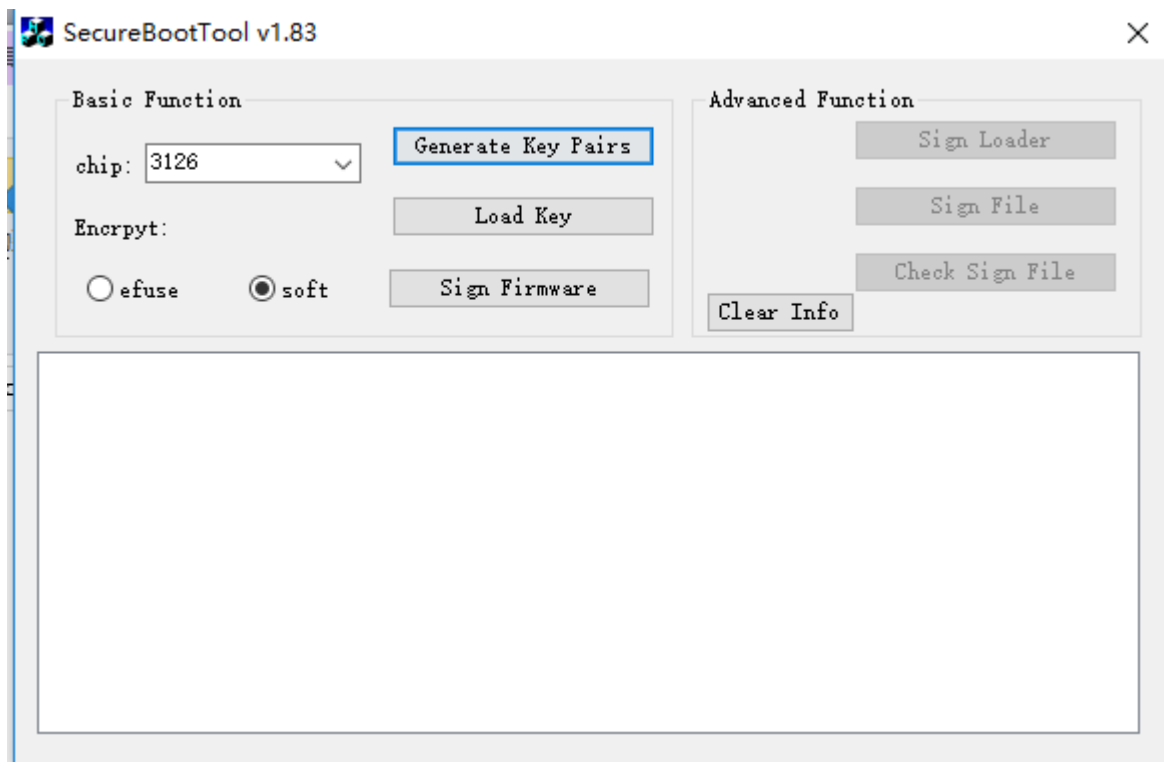


如上图是 win 平台签名工具的界面，以下对签名工具做详细的介绍。

Above is the interface of the signature tool on win platform. The detailed instruction of the signature tool is shown as below.

配置说明：

Configuration instruction:

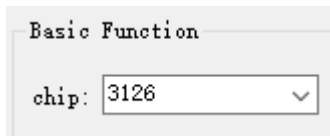


: 选择芯片型号, 3188 之前的芯片选择 others。

Select the chipset. Select others for the chipset before 3188.




: 配置加密类型是写 efuse 加密还是软件加密(注: 3128, 3288, 3228, 3368 支持 efuse 级加密, 其他的旧芯片不支持)。

Configure the encryption type as effuse or software encryption (note: 3128, 3288, 3228, 3368 support effuse encryption, while other old chipsets don't support).



: 生成 RSAKEY, 每款机器只能生成一次, 请一定备份好 KEY, 如果丢失, 那么机器将不能再更新固件。

Generate RSAKEY, each device can only generate once, please back up KEY, if it is lost, the device cannot update image any more.



: 加载之前备份的 RSAKEY(工具支持 openssl 生成的.pem 的 2048key)。

Load previously backup RSAKEY (the tool supports 2048key with .pem generated by openssl).




: 进行签名, 签名的固件必须使用 ./mkimage ota 生成。

Sign the firmware, which must be generated using ./mkimage ota.

以上步骤完成后, 签名成功会有如下弹框:

After the above steps finish, it will prompt below dialog if sign successfully:

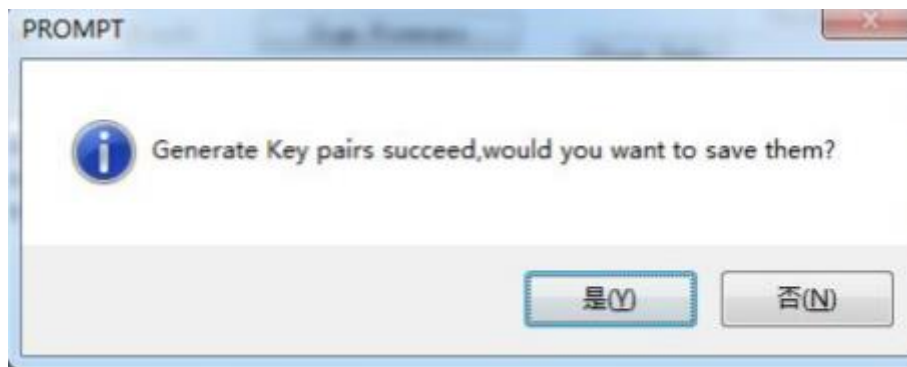

9.2 Linux 平台签名 Linux platform signature

```
projects@bogon:~/hkh_test/rk3228-4.4/SignOtaPackageRelease$ ./SecureBootConsole
SecureBootConsole v1.83
*****Usage*****
SecureBootConsole -k|-kk SaveKeyDir //generate key -k(1024) -kk(2048)
SecureBootConsole -si privatekey image//Sign Image
SecureBootConsole -sl publickey loader //Sign Loader
SecureBootConsole -slx privatekey publickey loader [LE|BE]//SignEx Loader
SecureBootConsole -sh privatekey firmware //Sign Firmware's digest
SecureBootConsole -sf privateKey file //Sign file
SecureBootConsole -gh file [160|256|256LE]//Generate hash
SecureBootConsole -sz privateKey otazipfile //Sign ota zip file
***** End *****
```

Linux 平台签名工具，如上图，运行不带参数的 SecureBootConsole 会有 Usage，这里不再做重复说明。

Linux platform signature tool is shown as above, run SecureBootConsole without parameter will show Usage, so we don't repeat here.