

CONFIDENTIAL

Ethernet AVB Software Media Clock Recovery Handler

User's Manual: Software

R-Car H3/M3/M3N/E3/D3 Series

All information contained in these materials, including products and product specifications, represents information on the product at the time of publication and is subject to change by Renesas Electronics Corp. without notice. Please review the latest information published by Renesas Electronics Corp. through various means, including the Renesas Electronics Corp. website (<http://www.renesas.com>).

Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You shall be responsible for determining what licenses are required from any third parties, and obtaining such licenses for the lawful import, export, manufacture, sales, utilization, distribution or other disposal of any products incorporating Renesas Electronics products, if required.
5. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
6. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.

"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.

"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.

Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.

7. No semiconductor product is absolutely secure. Notwithstanding any security measures or features that may be implemented in Renesas Electronics hardware or software products, Renesas Electronics shall have absolutely no liability arising out of any vulnerability or security breach, including but not limited to any unauthorized access to or use of a Renesas Electronics product or a system that uses a Renesas Electronics product. RENESAS ELECTRONICS DOES NOT WARRANT OR GUARANTEE THAT RENESAS ELECTRONICS PRODUCTS, OR ANY SYSTEMS CREATED USING RENESAS ELECTRONICS PRODUCTS WILL BE INVULNERABLE OR FREE FROM CORRUPTION, ATTACK, VIRUSES, INTERFERENCE, HACKING, DATA LOSS OR THEFT, OR OTHER SECURITY INTRUSION ("Vulnerability Issues"). RENESAS ELECTRONICS DISCLAIMS ANY AND ALL RESPONSIBILITY OR LIABILITY ARISING FROM OR RELATED TO ANY VULNERABILITY ISSUES. FURTHERMORE, TO THE EXTENT PERMITTED BY APPLICABLE LAW, RENESAS ELECTRONICS DISCLAIMS ANY AND ALL WARRANTIES, EXPRESS OR IMPLIED, WITH RESPECT TO THIS DOCUMENT AND ANY RELATED OR ACCOMPANYING SOFTWARE OR HARDWARE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE.
8. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
9. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
11. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
12. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
13. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
14. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.

(Note1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.

(Note2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.5.0-1 October 2020)

Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu,
Koto-ku, Tokyo 135-0061, Japan

www.renesas.com

Contact information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit:
www.renesas.com/contact/.

Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.

CONFIDENTIAL

Trademark

- Linux® is the registered trademark of Linus Torvalds in the U.S. and other countries.
- Arm is a registered trademark of Arm Limited (or its subsidiaries) in the US and/or elsewhere.
- Windows and Windows Media are registered trademarks of Microsoft Corporation in the United States and other countries.
- Other company names and product names mentioned herein are registered trademarks or trademarks of their respective owners.
- Registered trademark and trademark symbols (® and ™) are omitted in this document

How to Use This Manual

- **[Readers]**

This manual is intended for engineers who develop products which use the R-Car H3/M3/M3N/E3 processor.

- **[Purpose]**

This manual is intended to give users an understanding of the functions of the R-Car H3/M3/M3N/E3 processor device driver and to serve as a reference for developing hardware and software for systems that use this driver.

- **[How to Read This Manual]**

It is assumed that the readers of this manual have general knowledge in the fields of electrical

— engineering, logic circuits, microcontrollers, and Linux.

→ Read this manual in the order of the CONTENTS.

— To understand the functions of a multimedia processor for R-Car H3/M3/M3N/E3

→ See the R-Car H3/M3/M3N/E3 User's Manual.

— To know the electrical specifications of the multimedia processor for R-Car H3/M3/M3N/E3

→ See the R-Car H3/M3/M3N/E3 Data Sheet.

- **[Conventions]**

The following symbols are used in this manual.

Data significance: Higher digits on the left and lower digits on the right

Note: Footnote for item marked with Note in the text

Caution: Information requiring particular attention

Remark: Supplementary information

Numeric representation: Binary ... 0bxxxx, or xxxxB

Decimal ... xxxx

Hexadecimal ... 0xxxxx or xxxxH

Data type: Double word ... 64 bits

Word ... 32 bits

Half word ... 16 bits

Byte ... 8 bits

CONFIDENTIAL

Table of Contents

1. Overview	1
1.1 Overview	1
1.2 Reference	1
1.2.1 Standard	1
1.2.2 Related Document	1
1.3 Restrictions	2
1.4 Terminology	3
2. Operating Environment	4
2.1 Hardware Environment	4
2.2 Module Configuration	5
3. Function	6
3.1 Processing clock recovery of MCH	6
3.2 Block Diagram of MCH (when streaming talker is master device)	7
3.3 Block Diagram of MCH (when streaming listener is master device)	8
4. External Interface	9
5. Integration	10
5.1 Directory Configuration	10
5.2 Integration Procedure	11
5.2.1 Build kernel module only	11
5.2.2 Build MCH with the Linux kernel	11
5.2.3 Integration device	12
5.3 Option Setting	13
5.3.1 Module Parameters	13
5.3.2 Kernel Parameters	13
6. Example how to use the MCH	14

CONFIDENTIAL

LIST OF FIGURES

Figure 2.1	Module configuration	5
Figure 3.1	Processing clock recovery	6
Figure 3.2	Streaming talker is master device of MCH	7
Figure 3.3	Streaming listener is master device of MCH.....	8
Figure 5.1	Directory configuration.....	10

LIST OF TABLES

Table 1.1	Standards	1
Table 1.2	Related documents	1
Table 1.3	Terminology.....	3
Table 2.1	Hardware environment (R-Car H3/M3/M3N/E3/D3).....	4
Table 5.1	Module parameters	13

1. Overview

1.1 Overview

This manual explains the Media clock Recovery Handler module (MCH) that is a middleware of AVB Streaming in Ethernet AVB-IF on R-Car H3/M3/M3N/E3/D3 System Evaluation Board. The clock recovery function corrects the clock difference between devices.

1.2 Reference

1.2.1 Standard

The following table shows the document related to module.

Table 1.1 Standards

Number	Issue	Title	Edition	Date
IEEE Std 802.1BA-2011	IEEE STANDARDS ASSOCIATION	IEEE Standard for Local and metropolitan area networks - Audio Video Bridging (AVB) Systems	-	30 September 2011
IEEE Std 1722-2016	IEEE STANDARDS ASSOCIATION	IEEE Standard for a Transport Protocol Time-Sensitive Applications in Bridged Local Area Networks	-	7 December 2016

1.2.2 Related Document

The following table shows the document related to this module.

Table 1.2 Related documents

Number	Issue	Title	Edition	Date
-	Renesas Electronics	R-Car Series, 3rd Generation User's Manual: Hardware	Rev.2.30	Aug 2021
-	Renesas Electronics	R-CarH3-SiP System Evaluation Board Salvator-X Hardware Manual RTP0RC7795SIPB0011S	Rev.1.09	May. 11, 2017
-	Renesas Electronics	R-CarM3-SiP System Evaluation Board Salvator-X Hardware Manual RTP0RC7796SIPB0011S	Rev.0.04	Oct. 3, 2016
-	Renesas Electronics	R-CarH3-SiP/M3-SiP/M3N-SiP System Evaluation Board Salvator-XS Hardware Manual	Rev.2.04	Jul. 17, 2018
-	Renesas Electronics	R-CarE3 System Evaluation Board Ebisu-4D (E3 board 4xDRAM) Hardware Manual	Rev.1.01	Jul. 19, 2018
-	Renesas Electronics	R-CarD3 System Evaluation Board Draak Hardware Manual	Rev.1.20	July. 2017
-	Renesas Electronics	R-Car H3/M3/M3N/E3/D3 Series, Ethernet AVB Software Media Streaming Engine User's Manual: Software	Rev.2.30	Dec. 01, 2021

1.3 Restrictions

Nothing

1.4 Terminology

The following table shows the terminology related to this module.

Table 1.3 Terminology

Terms	Explanation
ADG	Audio Clock Generator
ALSA	Advanced Linux Sound Architecture
AVB	Audio Video Bridging
AVTP	Audio Video Transport Protocol (IEEE Std 1722)
CRF	Clock Reference Format (IEEE Std 1722)
DMAC	Direct Memory Access Controller
MSE	Media Streaming Engine
MAC	Media Access Control
PTP	Precision Time Protocol
SCU	Sampling rate Converter Unit
SSI	Serial Sound Interface
SRC	Sampling Rate Converter
VLAN	Virtual LAN (IEEE Std 802.1Q)

2. Operating Environment

2.1 Hardware Environment

The following table lists the hardware needed to use this module.

Table 2.1 Hardware environment (R-Car H3/M3/M3N/E3/D3)

Name	Version	Manufacture
R-CarH3-SiP System Evaluation Board Salvator-X	-	Renesas Electronics
R-CarM3-SiP System Evaluation Board Salvator-X	-	Renesas Electronics
R-CarH3-SiP/M3-SiP/M3N-SiP System Evaluation Board Salvator-XS	-	Renesas Electronics
R-CarE3 System Evaluation Board Ebisu-4D	-	Renesas Electronics
R-CarD3 System Evaluation Board Draak	-	Renesas Electronics

2.2 Module Configuration

The following figure shows the configuration of this module. MCH provides clock recovery function as a submodule of Media Steaming Engine (MSE).

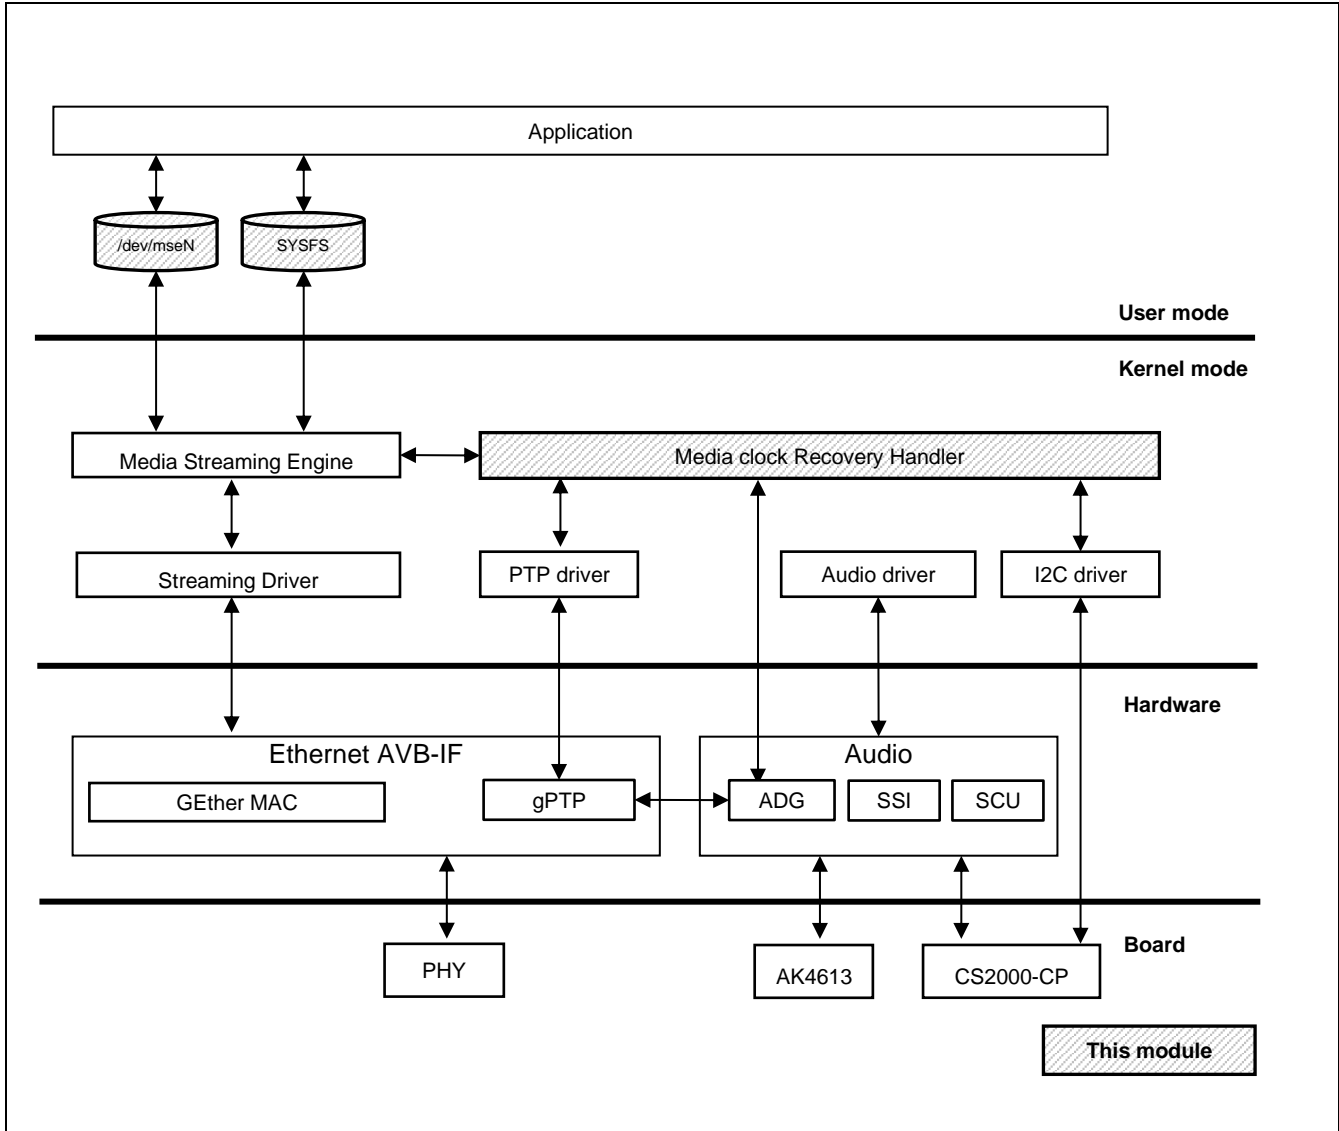


Figure 2.1 Module configuration

3. Function

This module is a sub-module of MSE, controls the Ethernet AVB-IF and clock source of Audio on the R-Car H3/M3/M3N/E3/D3.

The device that transmits the reference time information is called a "master", and the device that corrects the clock according to the time information of the "master" is called a "slave". Control of the clock source is done on the slave side.

3.1 Processing clock recovery of MCH

The function required on master side and slave side are different. This module has both functions. The functions on this module are the following list.

- Function of Master side
 - MCH is provide timestamp synchronized with audio clock to MSE. MSE generates AVTP frame or CRF frame based on this timestamp.
- Function of slave side
 - MCH is provide local gPTP time to MSE. MSE serializes received timestamp and local gPTP time.
 - MSE inputs the serialized time information to MCH. MCH is calculate the clock ratio from difference of timestamp sent by master and gPTP time of own device.
 - Control the audio clock source of its own device by clock difference ratio.

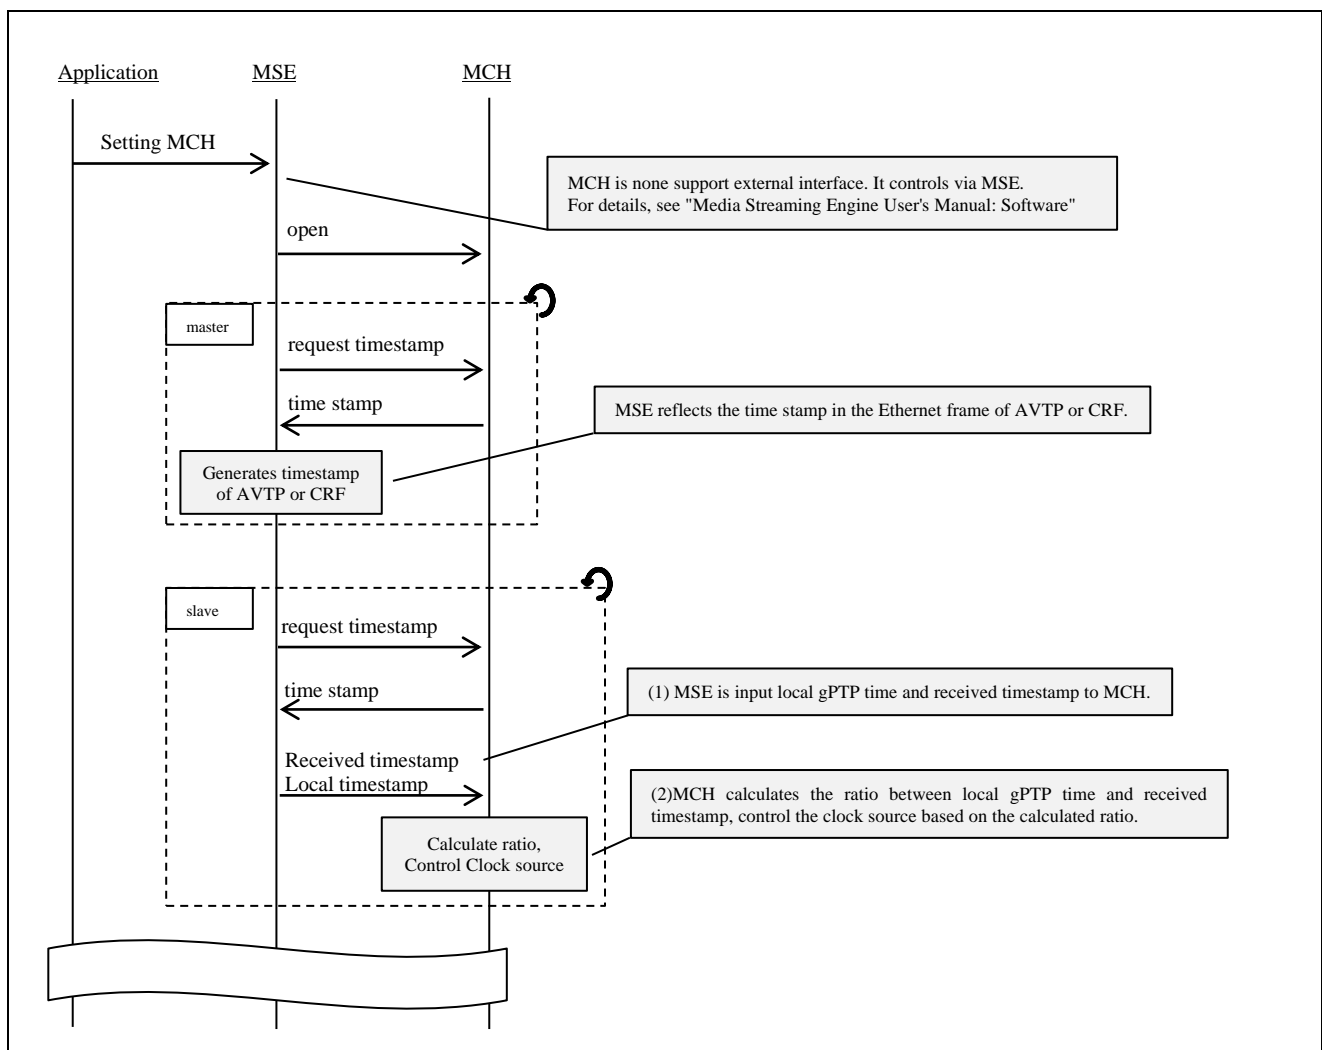


Figure 3.1 Processing clock recovery

3.2 Block Diagram of MCH (when streaming talker is master device)

Case where the talker device is master and listener device is slave is shown in Figure 3.2. Talker device send AVTP stream containing captured time stamp. Listener device corrects clock source from the comparison result between received time stamp and local time stamp. With this operation, the audio clock of slave is aligned with the audio clock of master.

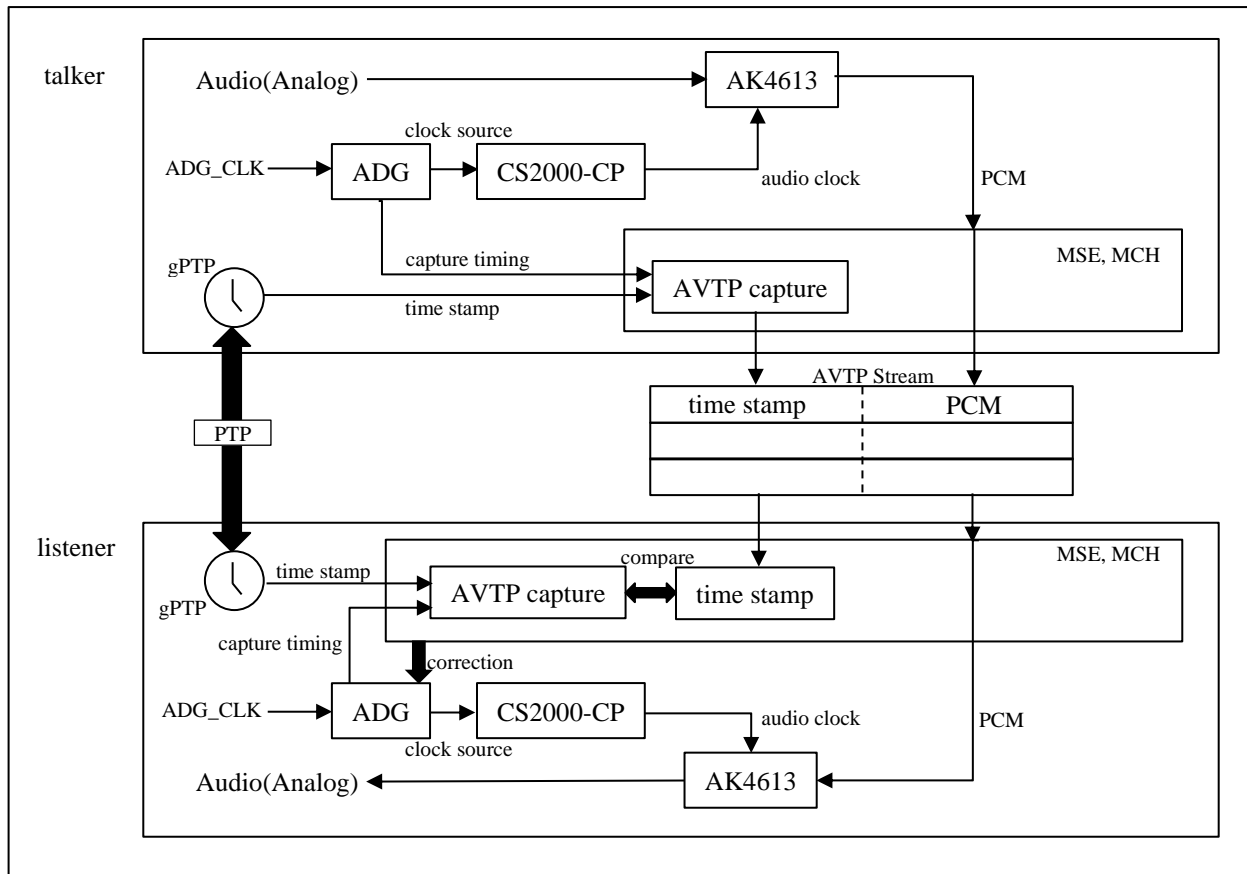


Figure 3.2 Streaming talker is master device of MCH

3.3 Block Diagram of MCH (when streaming listener is master device)

Case where the listener device is master and talker device is slave is shown in Figure 3.3. Talker device send AVTP stream. Listener device send CRF containing captured time stamp. Talker device corrects clock source from the comparison result between received time stamp and local time stamp. With this operation, the audio clock of slave is aligned with the audio clock of master.

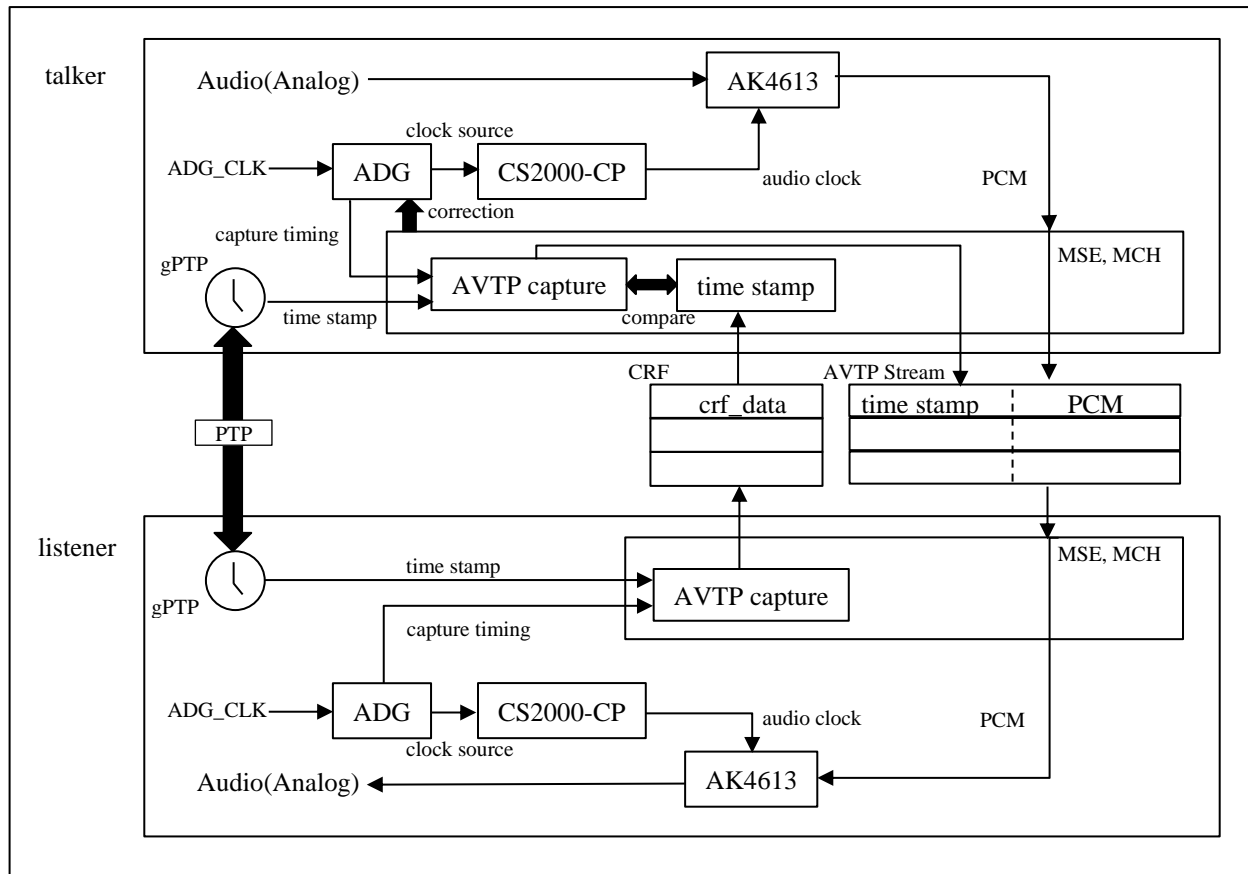


Figure 3.3 Streaming listener is master device of MCH

4. External Interface

None support the external interface of this module.

5. Integration

5.1 Directory Configuration

The directory configuration is shown below.

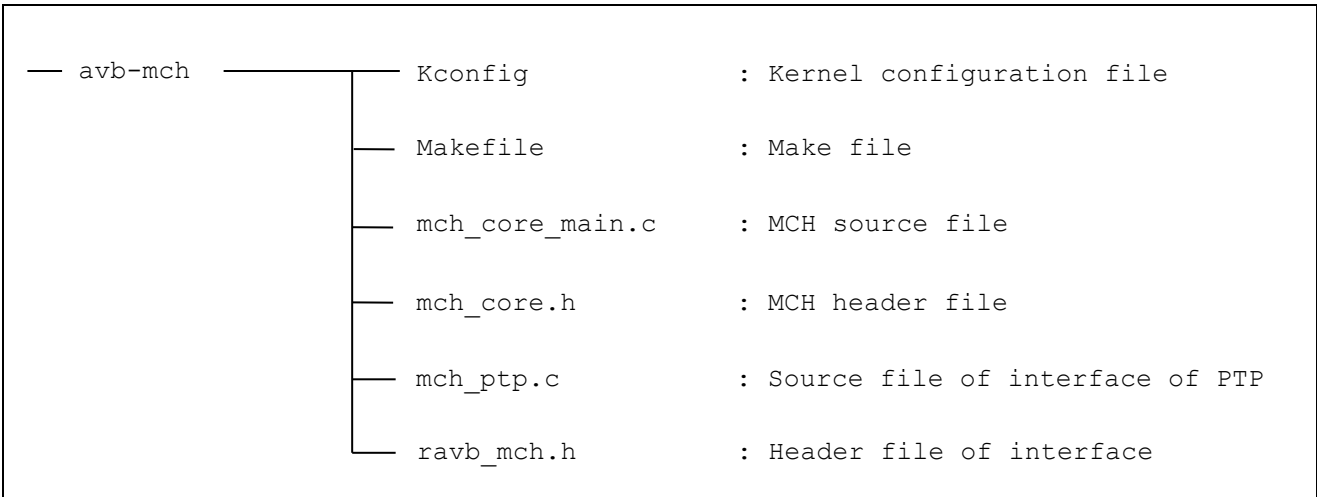


Figure 5.1 Directory configuration

5.2 Integration Procedure

5.2.1 Build kernel module only

Following operation is to build loadable modules.

step1. Build MCH as Linux loadable module.

```
# cd avb-mch
# make KERNEL_SRC=/path/to/linux
```

step2. Copy kernel modules. Next step integration, show 5.2.3

```
# cp mch_core.ko ${ROOTFS_PATH}
```

\${ROOTFS_PATH} rootfs of target

5.2.2 Build MCH with the Linux kernel

Following operation is to build MCH with Linux Kernel.

step1. Copy source file to the Linux kernel source.

```
# cp -r ${MODULE_SOURCE}/${KERNEL_SOURCE}/drivers/staging/
```

\${MODULE_SOURCE} MCH source directory

\${KERNEL_SOURCE} Linux kernel source directory

step2. Edit \${KERNEL_SOURCE}/drivers/staging/Kconfig

```
menuconfig STAGING
    bool "Staging drivers"
    default n
    ---help---
    ...
    source "drivers/staging/vc04_services/Kconfig"
    source "drivers/staging/avb-mch/Kconfig"
endif # STAGING
```

add this line

step3. Edit \${KERNEL_SOURCE}/drivers/staging/Makefile

```
# Makefile for staging directory

obj-y += media/
obj-$(CONFIG_SLICOSS) += slicoss/
...
obj-$(CONFIG_BCM2708_VCHIQ) += vc04_services/
obj-$(CONFIG_AVB_MCH) += avb-mch/
```

add this line

step4. To enable the function of this module, make the following setting with Kernel Configuration. Then, rebuild kernel.

```
Device Drivers --->
  [*] Staging drivers --->
    [*] AVB MCH --->
      <*> MCH Core module      (#1)
```

Notes: #1 This example, generate a kernel built-in object. If select the <M>, build as loadable module.

step5. If select <M> with kernel configuration, to copy kernel modules. Next step integration, show 5.2.3

```
# cd ${KERNEL_SOURCE}/drivers/staging/avb-mch/
# cp mch_core.ko ${ROOTFS_PATH}
```

\${ROOTFS_PATH} rootfs of target

5.2.3 Integration device

Following operation is to integrate MCH on target boards, and to check the integrated devices.

Integrate builded modules on target boards (both talker and listener boards).

```
# insmod mch_core.ko
```

To check devices of MCH, executes following commands.

```
# lsmod
Modules                Size  Used by
mch_core                9307   0
```

5.3 Option Setting

5.3.1 Module Parameters

The module parameter that is defined in this module is shown below.

Table 5.1 Module parameters

Module	Module parameters	Default value	Range	Explanation
mch_core.ko	interface	"eth0"	-	Ethernet interface for MCH.
	avtp_cap_cycle	300	1 - avtp_clk_freq	AVTP capture cycle [per second] This value is the interrupt cycle, and if it is set to a large value, the system will be affected.
	avtp_clk_freq	0	-	AVTP clock frequency [Hz] This value is stored the calculation result of MCH.
	avtp_clk_name	"avb_counter0"	-	Clock source name
	sample_rate	48000	-	Sampling rate of PCM [Hz] MCH supports only 48000Hz
	avb_clk	0	[0 – 3]	AVB Clock select for avb_counter8[0]. 0: AVBCKR AUDIO_CLK 1: AVBCKR AUDIO_CLK1 2: AVBCKR AUDIO_CLK2 3: AVBCKR AUDIO_CLK3 It depends on design of board for Audio and CS2000-CP to select AVB clock. For example, D3/Draak board uses with avb_clk=1 (AUDIO_CLK1), other boards use with avb_clk=0 (AUDIO_CLK).

5.3.2 Kernel Parameters

There are no kernel parameters.

6. Example how to use the MCH

MCH operation depends on the following configuration parameter of MSE.

- "mch_config"
- "ptp_config"
- "media_audio_config"

For details of configuration parameter, see below.

Case 1: MCH is disable

In this case, when "mch_config/enable" is 0. Other configuration parameter and execution procedure for this case, see MSE User's manual, chapter 7.1.1 "How to send speaker test tone using MSE".

Case 2: MCH is enable, and talker device is master.

In this case, when "mch_config/enable" is 1, and "media_audio_config/crf_type" is "not use". Other configuration parameter and execution procedure for this case, see MSE User's manual, chapter 7.1.2 "How to send PCM audio data using MSE with MCH".

Case 3: MCH is enable, and listener device is master.

In this case, when "mch_config/enable" is 1, and "media_audio_config/crf_type" is "tx" or "rx". Other configuration parameter and execution procedure for this case, see MSE User's manual, chapter 7.1.3 "How to send PCM audio and Media clock from other device"

Note

- MCH controls the media clock on the premise that each device is time synchronized by PTP.
- "ptp_config/capture_ch" should be the same value as "avtp_cap_ch" which is the module parameter of MCH.
- "ptp_config/capture_freq" should be the same value as "avtp_cap_cycle" which is the module parameter of MCH.

CONFIDENTIAL

REVISION HISTORY	Ethernet AVB Software Media Clock Recovery Handler User's Manual: Software
------------------	---

Rev.	Date	Description	
		Page	Summary
0.10	Jan. 13, 2017	-	First edition issued
0.20	Mar. 15, 2017	1	1.2.1 Standard Update of Table 1.1 - Update the version of IEEE Std 1722.
		1	1.2.2 Related Document Update of Table 1.2 - Update the version of related document.
		2	1.3 Restriction Remove restriction - Clock recovery operation is not performed.
		5	2.2 Module Configuration Update of Figure 2.1 - MCH do not use audio driver to accessing ADG. - MCH use I2C driver for accessing CS2000-CP.
		7	3.2 Block Diagram of MCH (when streaming talker is master device) Add new chapter - Add block diagram and outline.
		8	3.3 Block Diagram of MCH (when streaming listener is master device) Add new chapter - Add block diagram and outline.
		10	5.1 Directory Configuration Update of Figure 5.1 - Add new file: mch_core.h
		11	5.2.2 Build MCH with the Linux kernel Fixes copy and paste problem of example of the command below "cp -r \${MODULE_SOURCE}/ \${KERNEL_SOURCE}/drivers/staging"
		13	5.3.1 Module Parameters Add Table 5.1 - List and description of module parameters.
		14	6. Example how to use the MCH Add new chapter - Usage of MCH
1.00	Jul. 12, 2017	1	1.2.2 Related Document Update of Table 1.2 - Update the version of related document.
		8	3.3 Block Diagram of MCH (when streaming listener is master device) Update of Figure 3.3 - Add "time stamp" to AVTP Stream in the figure.
		13	5.3.1 Module Parameters Update of Table 5.1 - Delete parameter of avtp_cap_ch. - Change default value of avtp_clk_freq from 800000 to 796800. - Add support sampling rate.
1.10	Nov. 14, 2017	All	Add R-Car M3N support.
		1	1.2.2 Related Document Update of Table 1.2 - Update the version of related document.
1.20	Jan. 29, 2018	-	Update Arm trademark
		1	1.2.2 Related Document Update of Table 1.2 - Update the version of related document.
1.30	Feb. 22, 2018	All	Add R-Car E3 support.
		1	1.2.2 Related Document Update of Table 1.2 - Update the version of related document.

CONFIDENTIAL

		7	3.2 Block Diagram of MCH(when streaming talker is master device) Update of Figure 3.2 - Change the ADG clock name from S0D1 to ADG_CLK.
		8	3.3 Block Diagram of MCH(when streaming listener is master device) Update of Figure 3.3 - Change the ADG clock name from S0D1 to ADG_CLK.
		13	5.3.1 Module Parameters Update of Table 5.1 - Update module parameters of avtp_clk_freq.
1.40	Sep. 26, 2018	1	1.2.2 Related Document Update of Table 1.2 - Update the version of related document.
2.00	Dec. 25, 2018	1	1.2.2 Related Document Update of Table 1.2 - Update the version of related document.
		4	2.1 Hardware Environment Update of Table 2.1 - Add Salvator-XS Board support. - Update name of R-CarE3 evaluation board from Ebisu Board to Ebisu-4D Board.
2.10	Apr.06, 2021	-	Update AddressList
2.20	Aug. 16, 2021	1,6	Add R-Car D3 support Table 1.2 Related documents - Add R-Car D3 Hardware Manual - Update title and revision of Ethernet AVB Software Media Streaming Engine User's Manual
		4	Table 2.1 Hardware environment (R-Car H3/M3/M3N/E3) - Add R-Car D3 System Evaluation Board Draak
2.30	Dec. 01, 2021	-	- Update Notice page
		1	- Table 1.2 Related documents: update version of "R-Car Series, 3rd Generation User's Manual: Hardware" from v1.00 to v2.30
		13	- Table 5.1 Module parameters: Add description for avb_clk Modify "avtp_clk_name": only support "avb_counter0"

Ethernet AVB Software Media Clock Recovery Handler
User's Manual: Software

Publication Date: Rev.0.10 Jan. 13, 2017
Rev.2.30 Dec. 01, 2021

Published by: Renesas Electronics Corporation



SALES OFFICES

Renesas Electronics Corporation

<http://www.renesas.com>

Refer to "<http://www.renesas.com/>" for the latest and detailed information.

Renesas Electronics Corporation

TOYOSU FORESIA, 3-2-24 Toyosu, Koto-ku, Tokyo 135-0061, Japan

Renesas Electronics America Inc. Milpitas Campus

1001 Murphy Ranch Road, Milpitas, CA 95035, U.S.A.

Tel: +1-408-432-8888, Fax: +1-408-434-5351

Renesas Electronics America Inc. San Jose Campus

6024 Silver Creek Valley Road, San Jose, CA 95138, USA

Tel: +1-408-284-8200, Fax: +1-408-284-2775

Renesas Electronics Canada Limited

9251 Yonge Street, Suite 8309 Richmond Hill, Ontario Canada L4C 9T3

Tel: +1-905-237-2004

Renesas Electronics Europe GmbH

Arcadiastrasse 10, 40472 Düsseldorf, Germany

Tel: +49-211-6503-0, Fax: +49-211-6503-1327

Renesas Electronics (China) Co., Ltd.

Room 101-T01, Floor 1, Building 7, Yard No. 7, 8th Street, Shangdi, Haidian District, Beijing 100085, China

Tel: +86-10-8235-1155, Fax: +86-10-8235-7679

Renesas Electronics (Shanghai) Co., Ltd.

Unit 301, Tower A, Central Towers, 555 Langao Road, Putuo District, Shanghai 200333, China

Tel: +86-21-2226-0888, Fax: +86-21-2226-0999

Renesas Electronics Hong Kong Limited

Unit 1601-1611, 16/F., Tower 2, Grand Century Place, 193 Prince Edward Road West, Mongkok, Kowloon, Hong Kong

Tel: +852-2265-6688, Fax: +852 2886-9022

Renesas Electronics Taiwan Co., Ltd.

13F, No. 363, Fu Shing North Road, Taipei 10543, Taiwan

Tel: +886-2-8175-9600, Fax: +886 2-8175-9670

Renesas Electronics Singapore Pte. Ltd.

80 Bendemeer Road, #06-02 Singapore 339949

Tel: +65-6213-0200, Fax: +65-6213-0300

Renesas Electronics Malaysia Sdn.Bhd.

Unit No 3A-1 Level 3A Tower 8 UOA Business Park, No 1 Jalan Pengaturcara U1/51A, Seksyen U1, 40150 Shah Alam, Selangor, Malaysia

Tel: +60-3-5022-1288, Fax: +60-3-5022-1290

Renesas Electronics India Pvt. Ltd.

No.777C, 100 Feet Road, HAL 2nd Stage, Indiranagar, Bangalore 560 038, India

Tel: +91-80-67208700

Renesas Electronics Korea Co., Ltd.

17F, KAMCO Yangjae Tower, 262, Gangnam-daero, Gangnam-gu, Seoul, 06265 Korea

Tel: +82-2-558-3737, Fax: +82-2-558-5338



ルネサスエレクトロニクス株式会社

■営業お問合せ窓口

<http://www.renesas.com>

※営業お問合せ窓口の住所は変更になることがあります。最新情報につきましては、弊社ホームページをご覧ください。

ルネサス エレクトロニクス株式会社 〒135-0061 東京都江東区豊洲3-2-24（豊洲フォレシア）

■技術的なお問合せおよび資料のご請求は下記へどうぞ。
総合お問合せ窓口：<https://www.renesas.com/contact/>

Ethernet AVB Software Media Clock Recovery Handler



Renesas Electronics Corporation