



ATSAMB11

BluSDKSmart BLE API Software Development Guide

Introduction


This user guide details the functional description of the Bluetooth® Low Energy (BLE) Application Peripheral Interface (API) programming model. This also provides the example code to configure an API for Generic Access Profile (GAP), Generic Attribute (GATT) Profile, and other services using the ATSAMB11.

Table of Contents

Introduction.....	1
1. Overview.....	3
1.1. ATSAMB11 Solution Architecture	4
2. API Programming Model.....	5
2.1. General Application Flow.....	5
2.2. Request Response Flow.....	5
2.3. Event Posting and Handling.....	7
3. API Usage Examples.....	8
3.1. GAP Advertising.....	8
3.2. GAP Scanning and Creating a Connection.....	9
3.3. GATT Server – Service Definition	12
3.4. GATT Client – Service Discovery.....	16
3.5. Security Example.....	17
4. RTC XO 32.768kHz Clock Output.....	24
4.1. Internal tuning capacitor configuration.....	24
5. Revision History.....	25
The Microchip Web Site.....	26
Customer Change Notification Service.....	26
Customer Support.....	26
Product Identification System.....	27
Microchip Devices Code Protection Feature.....	27
Legal Notice.....	28
Trademarks.....	28
Quality Management System Certified by DNV.....	29
Worldwide Sales and Service.....	30

1. Overview

Figure -1. Overview of ATSAMB11

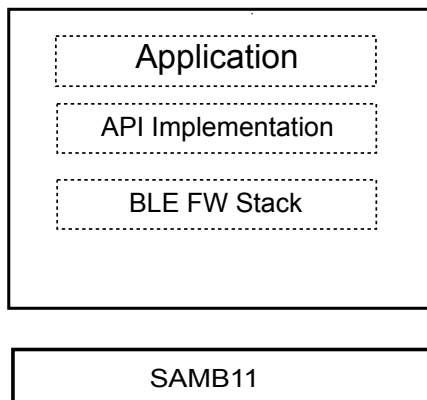

The ATSAMB11 provides Bluetooth Smart Link Controller in a single System on a Chip (SoC) that includes:


- Radio Frequency (RF)
- Link Layer
- Generic Access Profile (GAP)
- Generic Attribute (GATT) Profile
- Security Manager Protocol (SMP)

It provides the host microcontroller with methods to perform the following:

- Standard Bluetooth Smart Link
- GAP
- GATT server
- Client operations
- Security management with peer devices

The ATSAMB11 runs firmware on chip which provides BLE 4.1 functionality. On top of the Link Layer Firmware is an embedded L2CAP, GAP, SMP, and GATT layer that complies with Special Interest Group (SIG) standard 4.1.

Figure -2. External Host

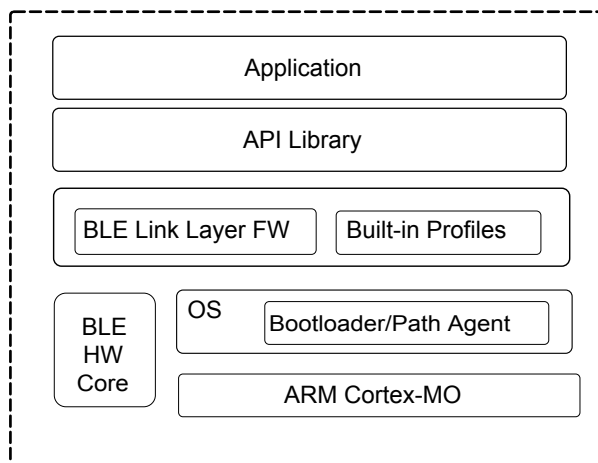

1.1 ATSAMB11 Solution Architecture

The ATSAMB11 solution is mainly composed of two sub-systems running concurrently:

- A link controller that implements up to GATT and GAP layers.
- A host controller running an adaptation API layer that maps the GAP/GATT functionalities into their respective messages that need to be fed into the link controller through the serial interface.

2. API Programming Model

This chapter describes the programming model of the app for ATSAMB11 using APIs. The app performs following operations:


- Platform initialization/link controller initialization
- Device configuration
- Event monitoring and handling

2.1 General Application Flow

The general app flow initializes the link controller and bus. The initialization is done by the `at_ble_init();` call function.

The device configuration includes setting up the device address, name and advertising data. API call functions have no event messages associated with device configuration; API call functions are called at the start of the app and return error code to validate an operation.

Figure 1-1. General Application Flow

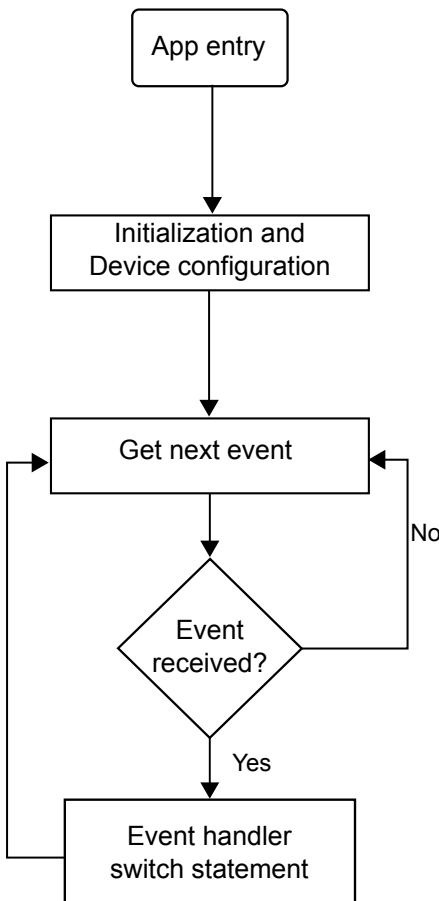

2.2 Request Response Flow

API operation relies on a request – response mechanism. The request is sent via the dedicated API. Calling an API triggers and returns one or more event message to the app. These messages are handled

by the event handler loop of the user app. For example, if the user calls `at_ble_scan_start()`, the user expects the controller must return an event with `AT_BLE_SCAN_INFO` for each device scanned by the ATSAMB11

This code snippet below shows an example of the event loop within a valid complete.

```
at_ble_addr_t addr = {AT_BLE_ADDRESS_PUBLIC,
                      {0x25, 0x75, 0x11, 0x6a, 0x7f, 0x7f} };
uint16_t handle;
// init device
at_ble_init(NULL);

at_ble_addr_set(&addr);


// start advertising
at_ble_adv_data_set(adv_data, sizeof(adv_data), scan_rsp_data, sizeof(scan_rsp_data));
at_ble_adv_start(AT_BLE_ADV_TYPE_UNDIRECTED, AT_BLE_ADV_GEN_DISCOVERABLE, NULL,
AT_BLE_ADV_FP_ANY, 100, 1000, 0);

while(at_ble_event_get(&event, params, -1) == AT_BLE_SUCCESS)
{
    switch(event)
    {
        case AT_BLE_CONNECTED:
        {
            at_ble_connected_t* conn_params = (at_ble_connected_t*)params;
            printf("Device connected\n");
            handle = conn_params->handle;
        }
        break;

        case AT_BLE_DISCONNECTED:
        {
            printf("Device disconnected\n");
            at_ble_adv_start(AT_BLE_ADV_TYPE_UNDIRECTED,
                            AT_BLE_ADV_GEN_DISCOVERABLE,
                            NULL, AT_BLE_ADV_FP_ANY, 100, 1000, 0);
        }
        break;
    }
}
```

2.3 Event Posting and Handling

Figure 1-2. Event Posting and Handling

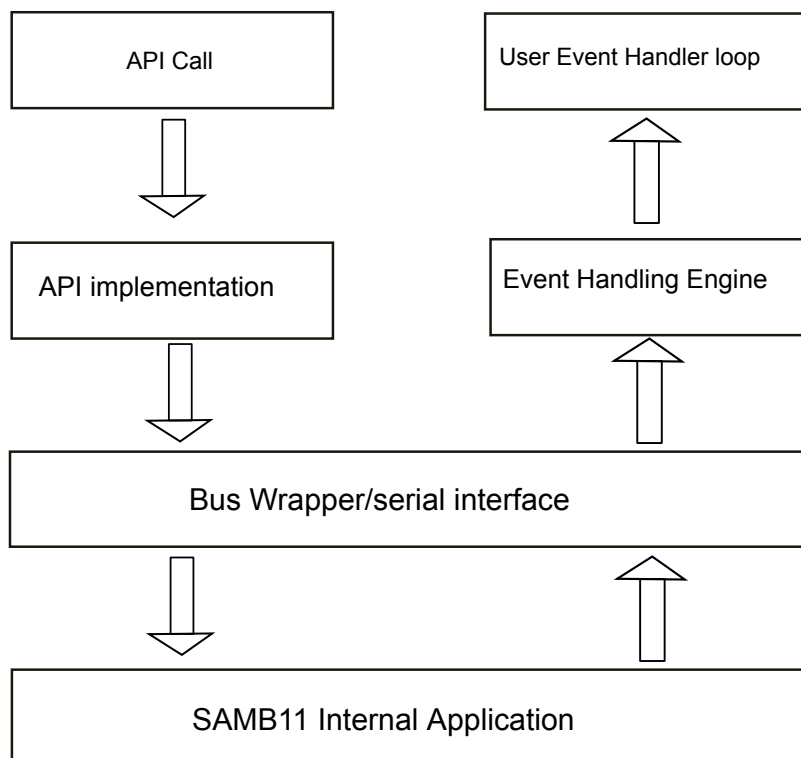

Each event message returned by the controller is retrieved by calling the API `at_ble_event_get()` function. This is a blocking call and never returns the event message unless a new event is received from the controller, or event time out is reached when the `at_ble_event_user_defined_post()` API is called. The purpose of the user-defined event posting provides the flexibility to skip an iteration of the event handling loop, by sending a user-defined event. This makes the blocking call to `at_ble_event_get` return with a user event message ID. It is used when the user wants to execute some code inside the event loop after handling a specific message from the controller, without the need to wait for a controller event that may occur at any time.

3. API Usage Examples

3.1 GAP Advertising


After initialization and setting the address, to run device in peripheral role it is required to advertise with the device called **Advertiser** or **Peripheral**.

Advertising data means that the peripheral sends unidirectional broadcast data on air to be discovered by other devices and react according to device capabilities such as advertising type, mode, and so on.

If a response to connection request from scanner devices is needed, it is required to advertise in connectable mode. In addition to advertising capabilities, the advertising data can also include any custom information to broadcast to other devices.

Before advertising, it is required to set advertising data first using `at_ble_adv_data_set()`. Also, if needed, the user can set additional user data called response data using the same function. This data is sent to the active scanning device and requests for more information.

Settings of advertising data must be done before starting advertising. If the advertising is running, it must be stopped using `at_ble_adv_stop()` to apply settings of advertising data then start advertising again.

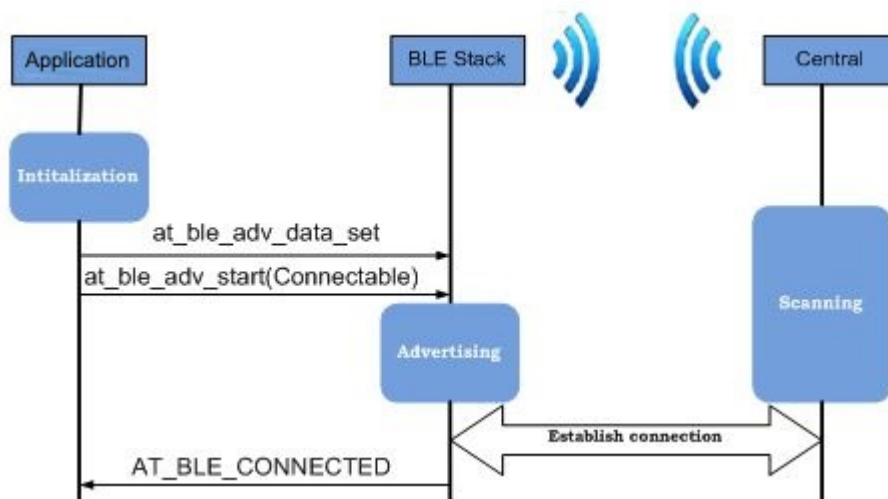

Example:

Device Address : 0x7f7f6a117525

Advertising data length : 0x11

AD type : Complete list of 128-bit UUIDs available (0x07)

Service UUID : 0x5730CD00DC2A11E3AA370002A5D5C51B

```

#define DEVICE_NAME "BLE Device"

uint8_t adv_data[] = { 0x11, 0x07, 0x1b, 0xc5, 0xd5, 0xa5, 0x02, 0x00, 0x37,
0xaa, 0xe3, 0x11, 0x2a, 0xdc, 0x00, 0xcd, 0x30, 0x57};

static at_ble_handle_t service;
static at_ble_uuid_t service_uuid = {AT_BLE_UUID_128,
{0x1b, 0xc5, 0xd5, 0xa5, 0x02, 0x00, 0x37, 0xaa,
0xe3, 0x11, 0x2a, 0xdc, 0x00, 0xcd, 0x30, 0x57}};
    
```



```

at_ble_status_t init_peripheral_role(void)
{
    at_ble_status_t status;
    at_ble_addr_t addr = {AT_BLE_ADDRESS_PUBLIC,
        {0x25, 0x75, 0x11, 0x6a, 0x7f, 0x7f}};

    do
    {
        //Initializations of device
        status = at_ble_init(NULL);
        if(AT_BLE_SUCCESS == status)
        {
            break;
        }
        //Set device address
        if(AT_BLE_SUCCESS != at_ble_addr_set(&addr))
        {
            break;
        }
        //Set device name
        if(AT_BLE_SUCCESS != at_ble_device_name_set((uint8_t
*)DEVICE_NAME,sizeof(DEVICE_NAME)))
        {
            break;
        }
        //Establish peripheral database
        if(AT_BLE_SUCCESS != at_ble_primary_service_define(&service_uuid, &service,NULL, 0,
chars, 2))
        {
            break;
        }
        //Set advertising data, instead of NULL set scan response data if needed
        if(AT_BLE_SUCCESS != at_ble_adv_data_set(adv_data, sizeof(adv_data), NULL, 0))
        {
            break;
        }
        //Start advertising
        if(AT_BLE_SUCCESS != at_ble_adv_start(AT_BLE_ADV_TYPE_UNDIRECTED,
AT_BLE_ADV_GEN_DISCOVERABLE, NULL, AT_BLE_ADV_FP_ANY, 100, 0, false))
        {
            break;
        }
    }while(1);

    return status;
}

```

3.2 GAP Scanning and Creating a Connection


A device that scans for unidirectional broadcast advertising data is called as **Scanner** or **Central** and it uses `at_ble_scan_start()` to start a scan with different configurations.

The Central device requests additional user data from the advertiser.

The application is triggered when receiving the `AT_BLE_SCAN_INFO` event with each scan result. Also, the `AT_BLE_SCAN_REPORT` event is received when using `AT_BLE_SCAN_GEN_DISCOVERY` or `AT_BLE_SCAN_LIM_DISCOVERY`.

In `AT_BLE_SCAN_OBSERVER_MODE`, it is the developer's responsibility to stop scan the operation using `at_ble_scan_stop()`. In this mode, scanning is performed without timeout. Once a peer device is identified, it stops the scanning process and initiates the connection request.

Figure 2-1. GAP Scanning and Connection Creation

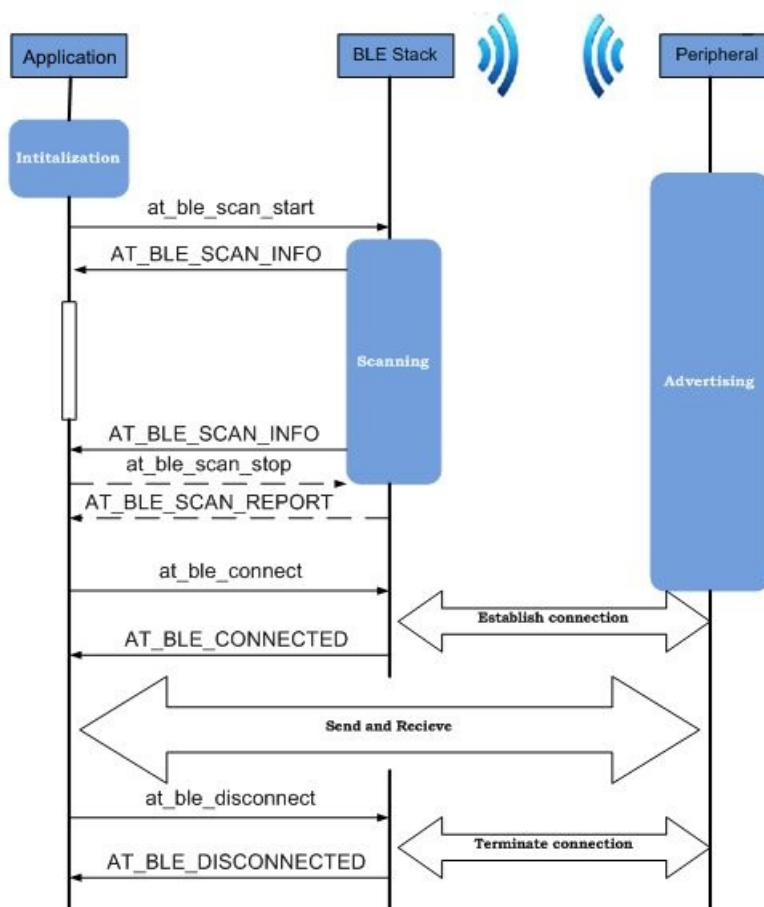

Example: Code snippet of scanning

Device Address : 0x7f7f6a117525

Peer Address : 0x001bdc060545

```

#define DEVICE_NAME "BLE Device"
at_ble_addr_t addr = {AT_BLE_ADDRESS_PUBLIC,
{0x24, 0x75, 0x11, 0x6a, 0x7f, 0x7f}};
at_ble_addr_t peer_addr = {AT_BLE_ADDRESS_PUBLIC,
{0x45, 0x05, 0x06, 0xdc, 0x1b, 0x00}};
at_ble_status_t init_central_role(void)
{
at_ble_status_t status = AT_BLE_SUCCESS;
do
{
//Initiate device
status = at_ble_init(NULL);
if(AT_BLE_SUCCESS != status)
{
break;
}
//Set device name
if(AT_BLE_SUCCESS != at_ble_device_name_set((uint8_t
*)DEVICE_NAME, sizeof(DEVICE_NAME)))
{
break;
}
}
}
ATSAMB11
© 2017 Microchip Technology Inc. Draft User Guide DS00000000A-page 10
//Set address
at_ble_addr_set(&addr);
    
```

```

if(AT_BLE_SUCCESS != status)
{
break;
}
//Start scan
if(AT_BLE_SUCCESS != at_ble_scan_start(GAP_INQ_SCAN_INTV, GAP_INQ_SCAN_WIND,
0, AT_BLE_SCAN_ACTIVE, AT_BLE_SCAN_GEN_DISCOVERY, FALSE, 1))
{
break;
} while (1);
return status;
}
void main(void)
{
at_ble_handle_t handle = -1;
at_ble_scan_info_t* scan_params;
at_ble_events_t at_event;
uint8_t params[512];
do
{
{
if(AT_BLE_SUCCESS != init_central_role())
{
printf("Unable to initialize\r\n");
break;
}
printf("Scanning ...\r\n");
while(AT_BLE_SUCCESS == at_ble_event_get(&at_event, params, -1))
{
switch(at_event)
{
case AT_BLE_SCAN_INFO:
{
scan_params = (at_ble_scan_info_t*)params;
printf("Device Found 0x%02x%02x%02x%02x%02x \n",
scan_params->dev_addr.addr[5],
scan_params->dev_addr.addr[4],
scan_params->dev_addr.addr[3],
scan_params->dev_addr.addr[2],
scan_params->dev_addr.addr[1],
scan_params->dev_addr.addr[0]
);
if((scan_params->type != AT_BLE_ADV_TYPE_SCAN_RESPONSE)&&
!memcmp(scan_params->dev_addr.addr, peer_addr.addr, AT_BLE_ADDR_LEN))
{
at_ble_connection_params_t conn_params;
/* Stop Scan operation*/
at_ble_status_t status = at_ble_scan_stop();
if(status == AT_BLE_SUCCESS)
{
conn_params.ce_len_max = 0x0140;
conn_params.ce_len_min = 0x0000;
conn_params.con_intv_max = 0x00a0;
conn_params.con_intv_min = 0x00a0;
conn_params.con_latency = 0x0000;
conn_params.superv_to = 0xC80; //0x01f4;
/* Connect to peer device */
if(AT_BLE_SUCCESS != at_ble_connect(&peer_addr, 1,
GAP_INQ_SCAN_INTV, GAP_INQ_SCAN_WIND, &conn_params))
{
printf("Unable to connect\r\n");
}
}
}
break;
case AT_BLE_CONNECTED:
{
at_ble_connected_t* conn_params =
ATSAMB11
© 2017 Microchip Technology Inc. Draft User Guide DS00000000A-page 11
(at_ble_connected_t*)params;
handle = conn_params->handle;
printf("Device connected\r\n");
at_ble_disconnect(handle, AT_BLE_TERMINATED_BY_USER);
}
break;
case AT_BLE_DISCONNECTED:

```


```
{
printf("Device disconnected \n");
}
break;
}
}
}while(1);
while(1);
}
```

3.3 GATT Server – Service Definition

3.3.1 Introduction

Generic Attribute (GATT) Profile is an upper layer of the Bluetooth stack that defines how two connected Bluetooth devices can exchange information. It is based on the Attribute (ATT) Protocol, which "allows a device1 (server) to expose a set of attributes and their associated values to a device2 (peer device or client). These attributes are exposed by the server and it is discovered, read, and written by a client and is indicated and notified by the server" as per the standard.


Figure 2-2. GATT Server Introduction

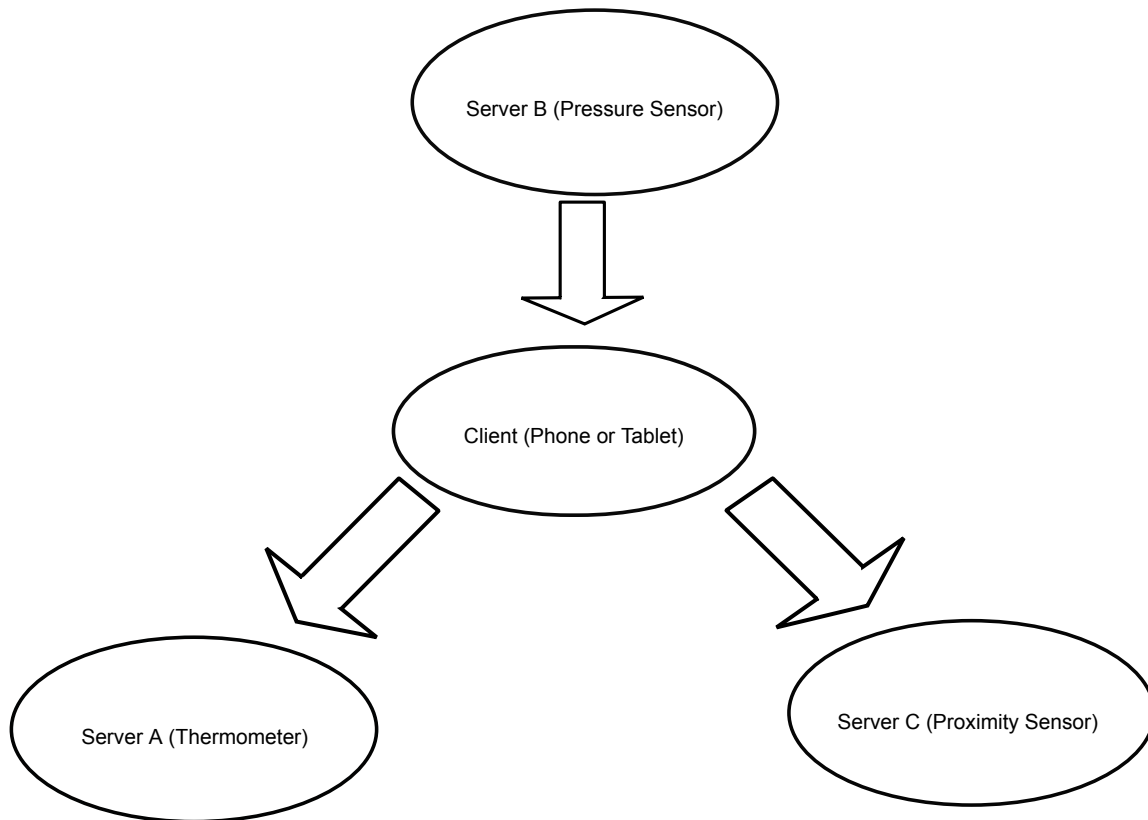

3.3.2 Services and Characteristics

The GATT profile defines a basic structure for data. Attributes are arranged in a hierarchical manner and profiles are available on top of the hierarchy. A profile is composed of a service and each service is composed of a set of characteristics. A service includes (links to) other services to encourage reusability. A characteristic has a value and contains extra descriptors that explain the characteristic format to the user.

Figure 2-3. Basic GATT hierarchy

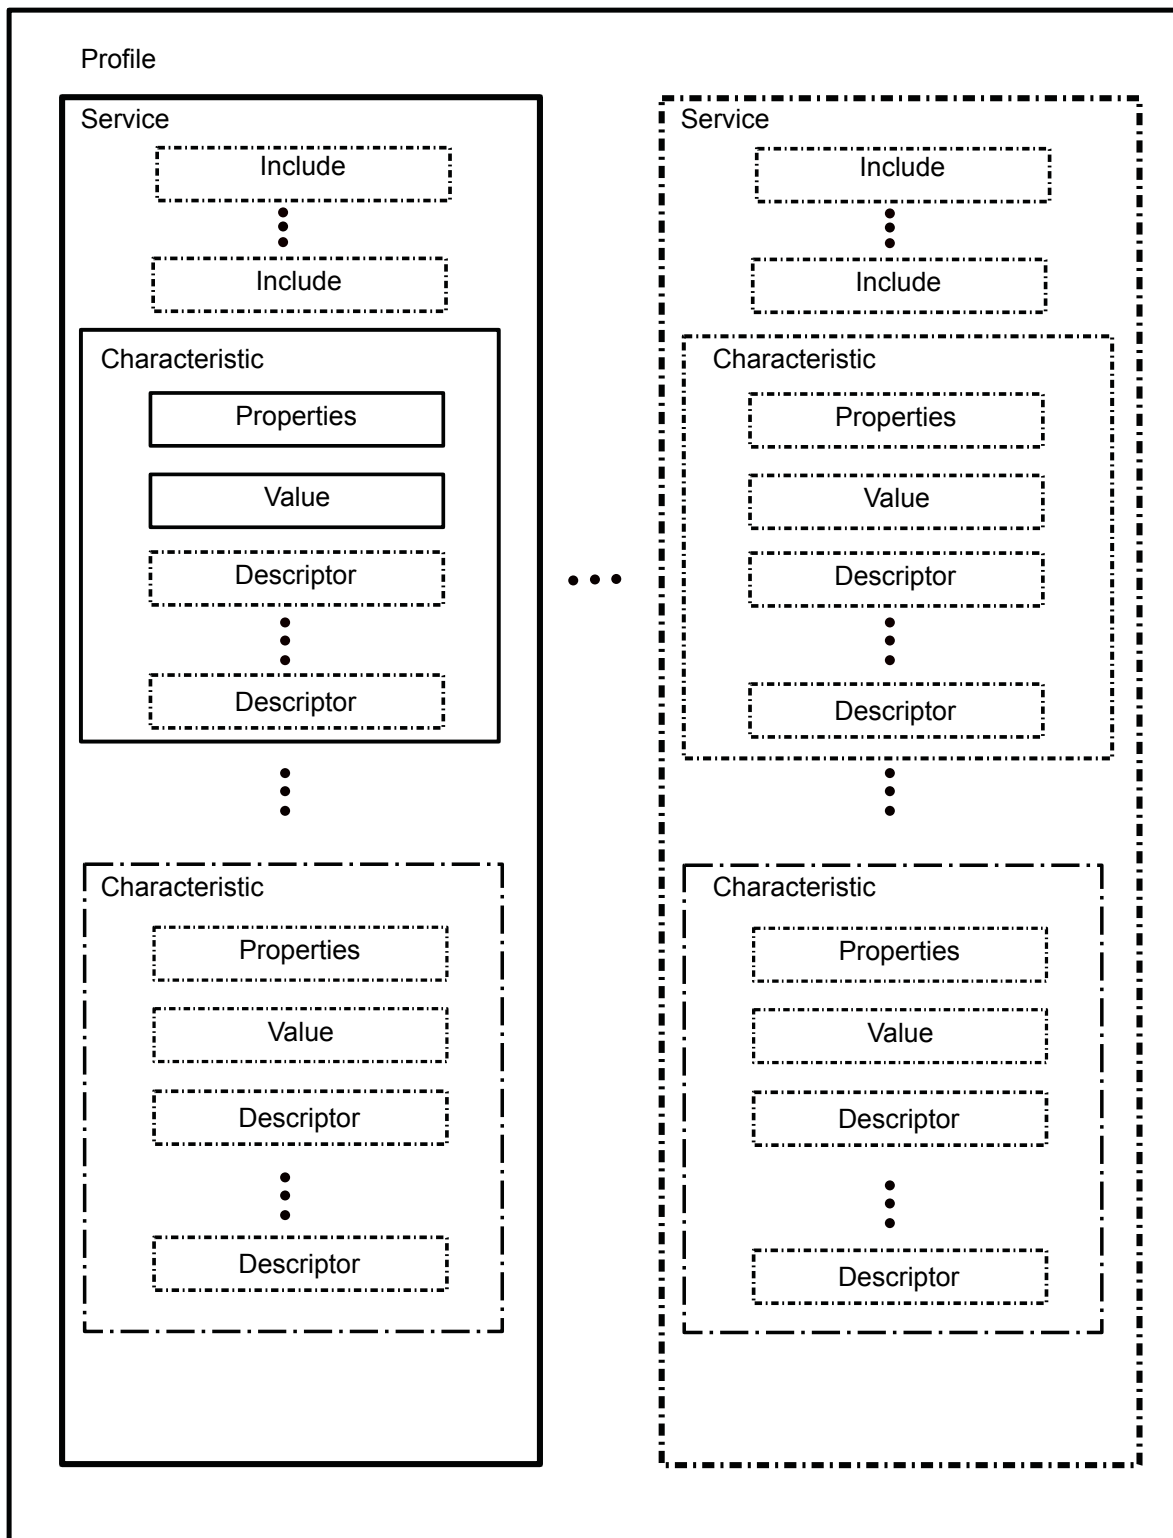

3.3.3 Defining a Service

If a peer has defined a service with a set of characteristics, it implicitly gains the server role for any peer discovering these services.

To define a service:

- Service UUID `at_ble_uuid_t* uuid` and characteristics `at_ble_characteristic_t* characteristic_list` structures are properly filled.
- `at_ble_status_t` **at_ble_primary_service_define**(`at_ble_uuid_t* uuid`, `at_ble_handle_t* service_handle`, `at_ble_included_service_t* included_service_list`, `uint16_t included_service_count`, `at_ble_characteristic_t* characteristic_list`, `uint16_t characteristic_count`) are called with proper arguments which returns a handle to the service in `service_handle` and handle of its characteristics in the first field of the `characteristic_list` structure `characteristic_list[i].char_val_handle` returns handle of the first characteristic in the service, also handles to the client configuration, user descriptor, and server configuration is returned in `characteristic_list[i].client_config_handle`, `characteristic_list[i].user_desc_handle`, `characteristic_list[i].server_config_handle`, respectively.

Example code to define a service is given below.

```
static at_ble_uuid_t service_uuid = {
    AT_BLE_UUID_128,
    { 0x1b, 0xc5, 0xd5, 0xa5, 0x02, 0x00, 0x37, 0xaa,
      0xe3, 0x11, 0x2a, 0xdc, 0x00, 0xcd, 0x30, 0x57 }
};

static at_ble_characteristic_t chars[] = {

    0, /* handle stored here */
    { AT_BLE_UUID_128, {0x1b, 0xc5, 0xd5, 0xa5, 0x02, 0x00, 0x3b, 0x8e,
      0xe3, 0x11, 0x2a, 0xdc, 0xa0, 0xd3, 0x20, 0x8e}}, /* UUID */
    AT_BLE_CHAR_READ | AT_BLE_CHAR_WRITE | AT_BLE_CHAR_NOTIFY, /* Properties */
    "char1", sizeof("char1"), 100, /* value */
    /*permissions */
    AT_BLE_ATTR_READABLE_NO_AUTHN_NO_AUTHR | AT_BLE_ATTR_WRITABLE_NO_AUTHN_NO_AUTHR,
    NULL, 0, 0, /* user friendly description */
    NULL, /*presentation format*/
    AT_BLE_ATTR_NO_PERMISSIONS, /*user description permissions*/
    AT_BLE_ATTR_READABLE_REQ_AUTHN_REQ_AUTHR, /*client config permissions*/
    AT_BLE_ATTR_NO_PERMISSIONS, /*server config permissions*/
    0,0,0 /*user desc, client config, and server config handles*/
};

static at_ble_handle_t service;
// establish peripheral database
at_ble_primary_service_define(&service_uuid, &service,
    NULL, 0, chars, 1);
```

Example code to define a service is given below.

```
static at_ble_uuid_t service_uuid = {
    AT_BLE_UUID_128,
    { 0x1b, 0xc5, 0xd5, 0xa5, 0x02, 0x00, 0x37, 0xaa,
      0xe3, 0x11, 0x2a, 0xdc, 0x00, 0xcd, 0x30, 0x57 }
};

static at_ble_characteristic_t chars[] = {

    0, /* handle stored here */
    { AT_BLE_UUID_128, {0x1b, 0xc5, 0xd5, 0xa5, 0x02, 0x00, 0x3b, 0x8e,
      0xe3, 0x11, 0x2a, 0xdc, 0xa0, 0xd3, 0x20, 0x8e}}, /* UUID */
    AT_BLE_CHAR_READ | AT_BLE_CHAR_WRITE | AT_BLE_CHAR_NOTIFY, /* Properties */
    "char1", sizeof("char1"), 100, /* value */
    /*permissions */
    AT_BLE_ATTR_READABLE_NO_AUTHN_NO_AUTHR | AT_BLE_ATTR_WRITABLE_NO_AUTHN_NO_AUTHR,
```

```

        NULL, 0, 0, /* user friendly description */
        NULL, /*presentation format*/
        AT_BLE_ATTR_NO_PERMISSIONS, /*user description permissions*/
        AT_BLE_ATTR_READABLE_REQ_AUTHN_REQ_AUTHR, /*client config permissions*/
        AT_BLE_ATTR_NO_PERMISSIONS, /*server config permissions*/
        0,0,0 /*user desc, client config, and server config handles*/
    };

    static at_ble_handle_t service;
    // establish peripheral database
    at_ble_primary_service_define(&service_uuid, &service,
        NULL, 0, chars, 1);

```

3.3.4 Writing/Reading Characteristic Value

To write the value of a characteristic from the server:

```

at_ble_status_t at_ble_characteristic_value_set(at_ble_handle_t handle, uint8_t* value,
uint16_t offset, uint16_t len);

```

To read the value of a characteristic from the server:

```

at_ble_status_t at_ble_characteristic_value_get(at_ble_handle_t handle, uint8_t* value,
uint16_t offset, uint16_t len, uint16_t actual_read_len);

```

3.3.5 Sending Notifications/Indications to Client

If a client enables notifications/indications for a server, the server receives a `AT_BLE_CHARACTERISTIC_CHANGED` event, the handle returned in the characteristic changed event is compared with the `client_config_handle` `characteristic_list[i].client_config_handle`. If it matches, the new value returned in the characteristic changed event is checked for non zero value, then the server starts notifying/indicating the client using `at_ble_status_t at_ble_notification_send(at_ble_handle_t conn_handle, at_ble_handle_t attr_handle);` or `at_ble_status_t at_ble_indication_send(at_ble_handle_t conn_handle, at_ble_handle_t attr_handle);`

Example code to send notifications/indications to client is given below.

```

case AT_BLE_CHARACTERISTIC_CHANGED:
{
    at_ble_characteristic_changed_t* change_params
        = (at_ble_characteristic_changed_t*) params;
    uint32_t i = 0;

    if (change_params->char_handle == client_config_handle)
    {
        switch (change_params->char_new_value)
        {
            case 1:
                at_ble_notification_send(handle, chars[0].char_val_handle);
                break;
            case 2:
                at_ble_indication_send(handle, chars[0].char_val_handle);
                break;
        }
    }
}
break;

```

3.4 GATT Client – Service Discovery

3.4.1 Discovering a Service

To discover services in a GATT server, any one of the following methods can be used:

- Discover all services from a start handle to an end handle with the following functions:

```
at_ble_status_t at_ble_descriptor_discover_all(at_ble_handle_t conn_handle,
at_ble_handle_t start_handle, at_ble_handle_t end_handle);
```

- Discover a specific service using its UUID with the following functions:

```
at_ble_status_t at_ble_characteristic_discover_by_uuid(at_ble_handle_t conn_handle,
at_ble_handle_t start_handle, at_ble_handle_t end_handle, at_ble_uuid_t* uuid);
```

In both cases, two events are returned and handled by the developer. `AT_BLE_DISCOVERY_COMPLETE` returns the status of the operation and `AT_BLE_PRIMARY_SERVICE_FOUND` is sent to the application whenever a service is found.

```
case AT_BLE_PRIMARY_SERVICE_FOUND:
{
    at_ble_primary_service_found_t * primary_service =
        (at_ble_primary_service_found_t *) params;

    printf("Primary Service UUID: Type:%02x Value:%04x \t Start Handle:%04x \t End
Handle:%04x\n", primary_service->service_uuid.type,
        (uint16_t)((uint16_t)primary_service->service_uuid.uuid[0]
        | ((uint16_t)primary_service->service_uuid.uuid[1]<<8)),
        primary_service->start_handle, primary_service->end_handle);
}
break;
```

Once a primary service is found, based on its start and end handle, all characteristics of such primary service are found by calling function as explained below.

```
at_ble_status_t at_ble_characteristic_discover_all(at_ble_handle_t conn_handle,
at_ble_handle_t start_handle, at_ble_handle_t end_handle);
Event AT_BLE_CHARACTERISTIC_FOUND will return the characteristics found.

case AT_BLE_CHARACTERISTIC_FOUND:
{
    at_ble_characteristic_found_t * characteristic =
        (at_ble_characteristic_found_t *) params;

    printf("Characteristic UUID: Type:%02x Value:%04x \t Char Handle:%04x \t Value
Handle:%04x, Properties:%02x\n", characteristic->char_uuid.type,
        (uint16_t)((uint16_t)characteristic->char_uuid.uuid[0]
        | ((uint16_t)characteristic->char_uuid.uuid[1]<<8)),
        characteristic->char_handle, characteristic->value_handle,
        characteristic->properties);
}
break;
```

3.4.2 Writing/Reading Characteristic Value

To write the value of a characteristic from the client:

```
at_ble_status_t at_ble_characteristic_write(at_ble_handle_t conn_handle, at_ble_handle_t
char_handle, uint16_t offset, uint16_t length, uint8_t* data, bool signed_write, bool
with_response );
```

Then an event `AT_BLE_CHARACTERISTIC_WRITE_RESPONSE` is sent to client that indicates the write status.

To read the value of a characteristic from the client:

```
at_ble_status_t at_ble_characteristic_read(at_ble_handle_t conn_handle, at_ble_handle_t
char_handle, uint16_t offset, uint16_t len);
```

The read data is sent to the client through an `AT_BLE_CHARACTERISTIC_READ_RESPONSE` event.

```
case AT_BLE_CHARACTERISTIC_READ_RESPONSE:
{
    at_ble_characteristic_read_response_t *read_resp =
        (at_ble_characteristic_read_response_t *)params;
    uint32_t i=0;

    printf("READ RESPONSE: Characteristic Handle:%04x \t Length:%04x Offset:%04x\n",
        read_resp->char_handle,
        read_resp->char_len,
        read_resp->char_offset);
    printf("DATA:\t");

    for(i=0;i<read_resp->char_len;i++)
    {
        printf("%02x ", read_resp->char_value[i]);
    }
    printf("\n");
}
break;
```

3.5 Security Example

The purpose of the bonding procedure is to create a relation between two Bluetooth devices based on a common link key (a bond). The link key is created and exchanged during the pairing procedure and is expected to be stored by both the Bluetooth devices and used during another connection to avoid repeating the pairing procedure.

Security is initiated by the device in the master role. The device in the slave role accepts the request and acts as a responding device. The slave device requests that the master device initiate pairing or other security procedures.

3.5.1 Pairing Procedure

Pairing is a three-phase process. The first two phases are used and followed by an optional transport-specific key distribution phase, to share the keys which are used to encrypt a link in future reconnections, verify signed data, and perform random address resolution.

Phase 1: Pairing Feature Exchange

The devices first exchange IO capabilities, "Out of Band " (OOB) authentication data availability, authentication requirements, key size requirements and which transport specific keys to distribute in the pairing feature exchange.

IO Capabilities

- `AT_BLE_IO_CAP_DISPLAY_ONLY` – display only
- `AT_BLE_IO_CAP_DISPLAY_YES_NO` – can display and get a Yes/No input from user
- `AT_BLE_IO_CAP_KB_ONLY` – has only a keyboard
- `AT_BLE_IO_CAP_NO_INPUT_NO_OUTPUT` – has no input and no output
- `AT_BLE_IO_CAP_KB_DISPLAY` – has both a display and a keyboard

Authentication Requirements

The authentication requirements include the type of bonding and Man-in-the-Middle (MITM) protection requirements:

- Bonding – if no key is exchanged during the pairing, the bonding flag is set to zero.
- MITM flag – according to the IO capabilities or OOB property, MITM flag is set to zero, if pairing is done using PIN code or OOB data.

Note: The link is considered authenticated by using the passkey entry pairing method (MITM) or by using the OOB pairing method.

Security Modes

Security requirement is used to force a certain level of authentication and presence of key exchange.

- LE Security mode 1 has three security levels:
 1. `AT_BLE_NO_SEC` (no authentication and no encryption).
 2. `AT_BLE_MODE1_L1_NOAUTH_PAIR_ENC` (unauthenticated pairing with encryption)
Man in the middle protection is set to zero and Long Term Key (LTK) is exchanged
 3. `AT_BLE_MODE1_L2_AUTH_PAIR_ENC` (authenticated pairing with encryption)
Man in the middle protection shall be set to 1, a LTK is exchanged
- LE Security mode 2
 1. `AT_BLE_MODE2_L1_NOAUTH_DATA_SGN` (unauthenticated pairing with data signing)
Man in the middle protection is set to zero, a CSRK is exchanged.
 2. `AT_BLE_MODE2_L2_AUTH_DATA_SGN` (authenticated pairing with data signing)
Man in the middle protection is set to 1, a CSRK is exchanged.

Key Distribution

The initiating device indicates that the specific keys are transporting into the responding device and vice versa.

- `AT_BLE_KEY_DIST_ENC` – distribute Long Term Key (LTK), Encrypted Diversifier (EDIV), and random number
- `AT_BLE_KEY_DIST_SIGN` – distribute Connection signature key (CSRK)
- `AT_BLE_KEY_DIST_ID` – distribute Identity Resolving Key (IRK) and identity address
- `AT_BLE_KEY_DIST_ALL` – distribute all keys

The IO capabilities, OOB authentication data availability, and authentication requirements are used to determine the pairing method and in Short Term Key (STK) generation in phase 2. Supported pairing methods are as follows:

- Just Works
- Passkey Entry
- Out Of Band (OOB)

All these pairing methods use and generate 2 keys:

- Temporary Key (TK) – a 128-bit temporary key is used in the pairing process. It is a key exchanged by an out of band system such as NFC, or the PIN code entered by user during Just Works pairing; this key is set to zero.
- Short Term Key (STK) – a 128-bit temporary key is used to encrypt a connection followed by pairing.

Phase 2: Short Term Key (STK) Generation

Calculated according to pairing information and provided TK, it is used to encrypt the link during pairing to exchange the following keys:


- Long Term Key (LTK) – a 128-bit key used to encrypt the Link. In order to retrieve the link key, a random number and key diversifier has to be stored with this key.
- Encrypted Diversifier (EDIV) – a 16-bit stored value used to identify the LTK. A new EDIV is generated each time a unique LTK is distributed.
- Random Number (Rand) – a 64-bit stored value used for identifying the LTK. A new Rand is generated each time a unique LTK is distributed.
- Identity Resolving Key (IRK) – a 128-bit key used to generate a random address.
- Connection signature key (CSRK) – when link is not encrypted, the CSRK is used by GAP to sign and verify the signature of an attribute write sign.

Phase 3: Transport Specific Key Distribution

Application APIs Interface

- `at_ble_authenticate` and `at_ble_send_slave_sec_request` APIs are used for initiating bonding and responding to a pairing request from a remote device.
- `AT_BLE_PAIR_KEY_REQUEST` and `AT_BLE_SLAVE_SEC_REQUEST` events are triggered to indicate that bonding is required.
- `AT_BLE_PAIR_DONE` event is triggered to indicate bonding status.

Figure 2-4. Pairing Sequence Flow

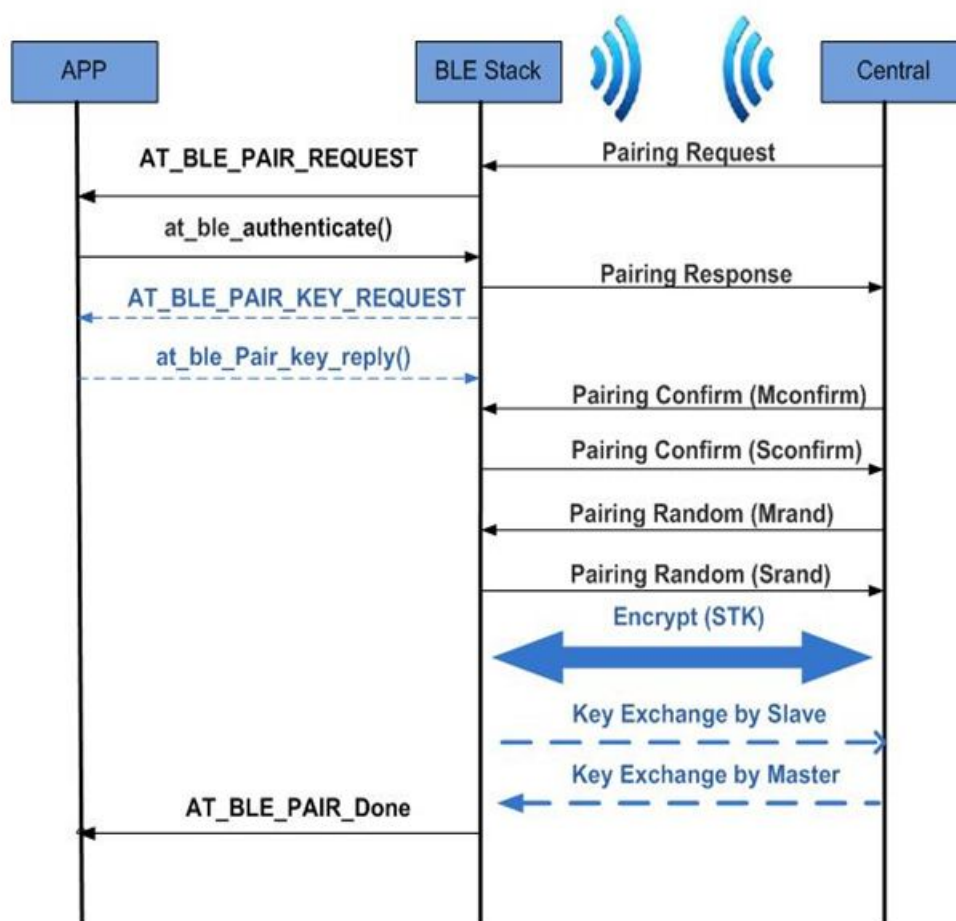

3.5.2 Encryption Procedure


The encryption procedure is used to encrypt the link using a previously bonded Long Term Key (LTK). This procedure is initiated only by the master device.

During the encryption session setup, the master device sends a 16-bit EDIV and a 64-bit Rand, distributed by the slave device during pairing, to the slave device.

The master's host provides the link layer with the LTK to use when setting up the encrypted session.

The slave's host receives the EDIV and Rand values and provides a LTK to the slave's link layer to use when setting up the encrypted link.

Figure 2-5. Encryption Sequence Flow

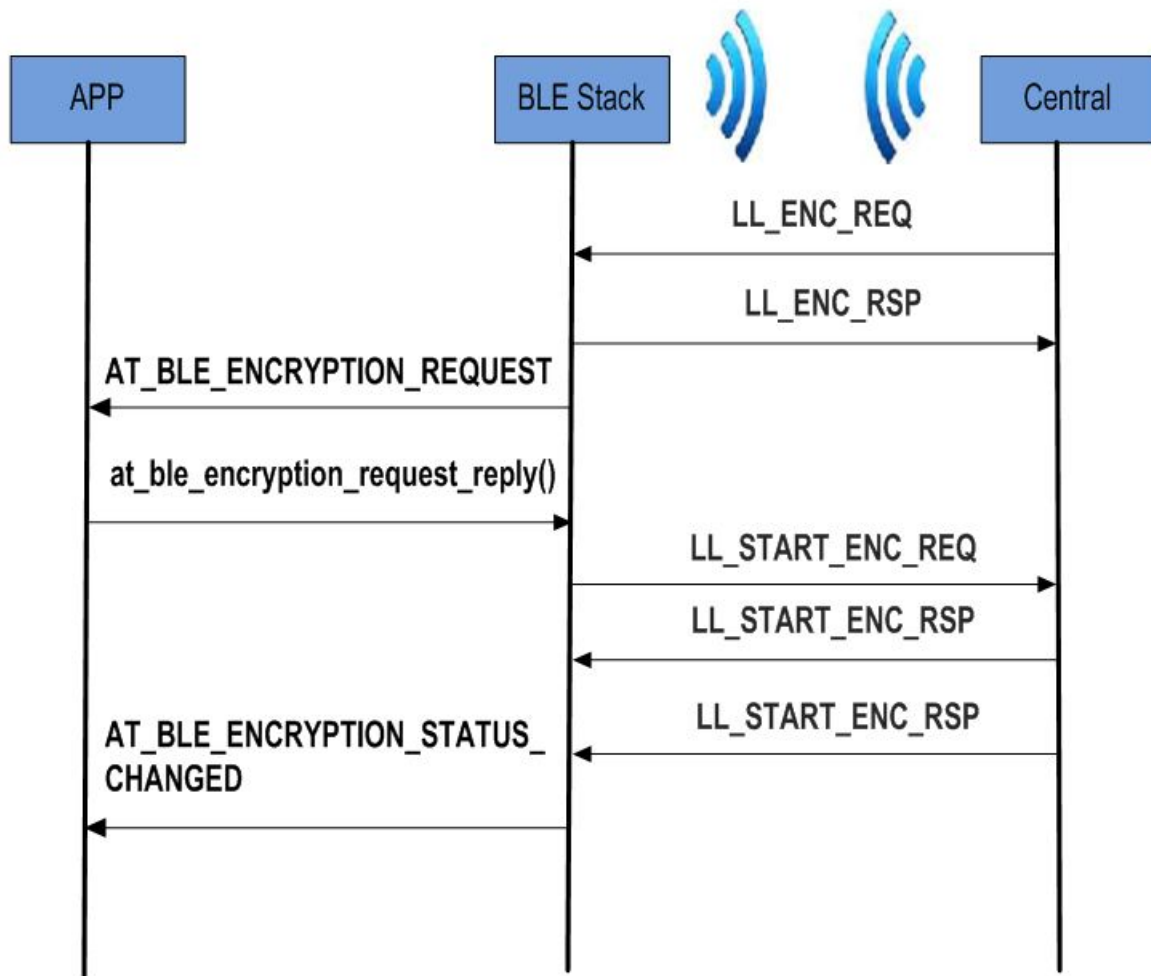

Example of the encryption procedure code is given below.

```

#define PRINT(...)      printf(__VA_ARGS__)
#define PRINT_LOG(...)  printf("[APP]"/**/_VA_ARGS__)

at_ble_LTK_t app_bond_info;
at_ble_auth_t auth_info;

void main(void)
{
    ...
    //Init
    ...

    while(at_ble_event_get(&event, params, -1) == AT_BLE_SUCCESS)
    {
        switch(event)
        {
            case AT_BLE_PAIR_REQUEST:
            {
                at_ble_pair_features_t features;
                uint8_t loopCntr;

                PRINT_LOG("Remote device request pairing \n");
                /* Authentication requirement is bond and MITM*/
                features.desired_auth = AT_BLE_MODE1_L2_AUTH_PAIR_ENC;
                features.bond = TRUE;
                features.mitm_protection = TRUE;
            }
        }
    }
}

```

```

        features.oob_available = FALSE;
        /* Device capabilities is display only , key will be generated
        and displayed */
        features.io_capabilities = AT_BLE_IO_CAP_DISPLAY_ONLY;
        /* Distribution of LTK is required */
        features.initiator_keys = AT_BLE_KEY_DIS_ALL;
        features.responder_keys = AT_BLE_KEY_DIS_ALL;
        features.max_key_size = 16;
        features.min_key_size = 16;

        /* Generate LTK */
        for(loopCntr=0; loopCntr<8; loopCntr++)
        {
            app_bond_info.key[loopCntr] = rand()&0x0f;
            app_bond_info.nb[loopCntr] = rand()&0x0f;

            for(loopCntr=8; loopCntr<16; loopCntr++)
            {
                app_bond_info.key[i] = rand()&0x0f;
            }

            app_bond_info.ediv = rand()&0xffff;
            app_bond_info.key_size = 16;
            /* Send pairing response */
            if(AT_BLE_SUCCESS != at_ble_authenticate(handle,
&features,&app_bond_info, NULL))
            {
                PRINT("Unable to authenticate\r\n");
            }
        }
    }
    break;
case AT_BLE_PAIR_KEY_REQUEST:
    {
        /* Passkey has fixed ASCII value in this example MSB */
        uint8_t passkey[6]={'0','0','0','0','0','0'};
        uint8_t passkey_ascii[6];
        uint8_t loopCntr = 0;

        at_ble_pair_key_request_t* pair_key_request
= (at_ble_pair_key_request_t*)params;

        /* Passkey is required to be generated by application and displayed to
        user */
        if(pair_key_request->passkey_type == AT_BLE_PAIR_PASSKEY_DISPLAY)
        {
            PRINT_LOG("Enter the following code on the other device: ");
            for(loopCntr=0; loopCntr<AT_BLE_PASSKEY_LEN; loopCntr++)
            {
                PRINT("%c",passkey_ascii[loopCntr]);
            }
            PRINT("\n");
            if(AT_BLE_SUCCESS != at_ble_pair_key_reply(pair_key_request->handle,
pair_key_request->type, passkey_ascii))
            {
                PRINT("Unable to pair reply\r\n");
            }
        }
        else
        {
            PRINT_LOG("AT_BLE_PAIR_PASSKEY_ENTRY\r\n");
        }
    }
    break;
case AT_BLE_PAIR_DONE:
    {
        at_ble_pair_done_t* pair_params = (at_ble_pair_done_t*) params;
        if(pair_params->status == AT_BLE_SUCCESS)
        {
            PRINT_LOG("Pairing procedure completed successfully\r\n");
            auth_info = pair_params->auth;
        }
        else
        {
            PRINT_LOG("Pairing failed\r\n");
        }
    }
    break;

```

```

        case AT_BLE_ENCRYPTION_REQUEST:
        {
            bool key_found = FALSE;
            at_ble_encryption_request_t *enc_req = (at_ble_encryption_request_t* )params;
            PRINT_LOG("Encrypting the connection...\r\n");
            /* Check if bond information is stored */
            if((enc_req-> ediv == app_bond_info.ediv)
                && !memcmp(&enc_req->nb[0],&app_bond_info.nb[0],8))
            {
                key_found = TRUE;
            }
            if(AT_BLE_SUCCESS != at_ble_encryption_request_reply(handle,
auth_info,key_found, app_bond_info))
            {
                PRINT("Unable to send Encryption request\r\n");
            }
        }
        break;
        case AT_BLE_ENCRYPTION_STATUS_CHANGED:
        {
            at_ble_encryption_status_changed_t *enc_status
=(at_ble_encryption_status_changed_t *)params;
            if(enc_status->status == AT_BLE_SUCCESS)
            {
                PRINT_LOG("Encryption completed successfully\r\n");
            }
            else
            {
                PRINT_LOG("Encryption failed\r\n");
            }
        }
        break;
    }
}
}

```

4. RTC XO 32.768kHz Clock Output

This section shows how to enable the clock output of the RTC XO 32.768 kHz.

Add the code snippet below to write and read registers of ATSAMB11. The following definition is added to the file where the clock output is intended to be enabled.

```
#define REG_PL_WRITE(addr, value)      (*(volatile uint32_t *) (addr)) = (value)
#define REG_PL_READ(addr)              (*(volatile uint32_t *) (addr))
```

After a successful initialization of ATSAMB11 through `at_ble_init()`, the following code snippet is introduced to enable the clock output to pin `LP_GPIO_10`,

```
uint32_t val;
val = REG_PL_READ(0X4000F404);
val |= (0b0<<20); // Bits 20-23 control the value of internal tuning capacitors.
// Valid value - 0b0000 to 0b1111
REG_PL_WRITE(0X4000F404, val);
//32.768kHz RTC XO clock output = 14
REG_PL_WRITE(0x40020250, 14);
val = REG_PL_READ(0x4000b048);
//MUX7(Test out 10) configured for LP_GPIO_10
val |= 0x7<<8;
REG_PL_WRITE(0x4000b048, val);
//Enable test MUX output
REG_PL_WRITE(0x400201a0, 1);
//Block SAMB11 from entering ULP
acquire_sleep_lock();
```

Based on the frequency of the clock output, either the external load capacitor value is tuned or the internal tuning capacitor is tuned to achieve the 32.768kHz clock. The internal tuning capacitor value is adjusted by writing to bits 20-23 of the register with address `0X4000F404`. The valid values that are written to these bits vary from `0b0000` to `0b1111`. The code snippet above writes `0b0000` by default and this must be changed when the user needs to write a different value to these bits.

4.1 Internal tuning capacitor configuration

The Internal tuning capacitor is tuned in the design. The value that is written to bits 20-23 of the register with address `0X4000F404` must be finalized. This finalized value is stored in NVM and this value must be loaded to ATSAMB11 during the application startup by the host MCU.

The following code snippet is reused for writing to bits 20-23 of the register with address `0X4000F404`.

```
uint32_t val;
val = REG_PL_READ(0X4000F404);
val |= (0bXXXX<<20); // Bits 20-23 control the value of internal tuning capacitors.
// Valid value - 0b0000 to 0b1111
REG_PL_WRITE(0X4000F404, val);
```


5. Revision History

Table 4-1. Revision History

Doc Rev.	Date	Comments
50002670A	9/2017	Initial release

The Microchip Web Site

Microchip provides online support via our web site at <http://www.microchip.com/>. This web site is used as a means to make files and information easily available to customers. Accessible by using your favorite Internet browser, the web site contains the following information:

- **Product Support** – Data sheets and errata, application notes and sample programs, design resources, user's guides and hardware support documents, latest software releases and archived software
- **General Technical Support** – Frequently Asked Questions (FAQ), technical support requests, online discussion groups, Microchip consultant program member listing
- **Business of Microchip** – Product selector and ordering guides, latest Microchip press releases, listing of seminars and events, listings of Microchip sales offices, distributors and factory representatives

Customer Change Notification Service

Microchip's customer notification service helps keep customers current on Microchip products. Subscribers will receive e-mail notification whenever there are changes, updates, revisions or errata related to a specified product family or development tool of interest.

To register, access the Microchip web site at <http://www.microchip.com/>. Under "Support", click on "Customer Change Notification" and follow the registration instructions.

Customer Support

Users of Microchip products can receive assistance through several channels:

- Distributor or Representative
- Local Sales Office
- Field Application Engineer (FAE)
- Technical Support

Customers should contact their distributor, representative or Field Application Engineer (FAE) for support. Local sales offices are also available to help customers. A listing of sales offices and locations is included in the back of this document.

Technical support is available through the web site at: <http://www.microchip.com/support>

Product Identification System

To order or obtain information, e.g., on pricing or delivery, refer to the factory or the listed sales office.

<u>PART NO.</u>	<u>[X]⁽¹⁾</u>	-	<u>X</u>	<u>/XX</u>	<u>XXX</u>
Device	Tape and Reel Option		Temperature Range	Package	Pattern

Device:	PIC16F18313, PIC16LF18313, PIC16F18323, PIC16LF18323	
Tape and Reel Option:	Blank	= Standard packaging (tube or tray)
	T	= Tape and Reel ⁽¹⁾
Temperature Range:	I	= -40°C to +85°C (Industrial)
	E	= -40°C to +125°C (Extended)
Package: ⁽²⁾	JQ	= UQFN
	P	= PDIP
	ST	= TSSOP
	SL	= SOIC-14
	SN	= SOIC-8
	RF	= UDFN
Pattern:	QTP, SQTP, Code or Special Requirements (blank otherwise)	

Examples:

- PIC16LF18313- I/P Industrial temperature, PDIP package
- PIC16F18313- E/SS Extended temperature, SSOP package

Note:

1. Tape and Reel identifier only appears in the catalog part number description. This identifier is used for ordering purposes and is not printed on the device package. Check with your Microchip Sales Office for package availability with the Tape and Reel option.
2. Small form-factor packaging options may be available. Please check <http://www.microchip.com/packaging> for small-form factor package availability, or contact your local Sales Office.

Microchip Devices Code Protection Feature

Note the following details of the code protection feature on Microchip devices:

- Microchip products meet the specification contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is one of the most secure families of its kind on the market today, when used in the intended manner and under normal conditions.
- There are dishonest and possibly illegal methods used to breach the code protection feature. All of these methods, to our knowledge, require using the Microchip products in a manner outside the operating specifications contained in Microchip's Data Sheets. Most likely, the person doing so is engaged in theft of intellectual property.
- Microchip is willing to work with the customer who is concerned about the integrity of their code.

- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of their code. Code protection does not mean that we are guaranteeing the product as “unbreakable.”

Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our products. Attempts to break Microchip’s code protection feature may be a violation of the Digital Millennium Copyright Act. If such acts allow unauthorized access to your software or other copyrighted work, you may have a right to sue for relief under that Act.

Legal Notice

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING BUT NOT LIMITED TO ITS CONDITION, QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR PURPOSE. Microchip disclaims all liability arising from this information and its use. Use of Microchip devices in life support and/or safety applications is entirely at the buyer’s risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights unless otherwise stated.

Trademarks

The Microchip name and logo, the Microchip logo, AnyRate, AVR, AVR logo, AVR Freaks, BeaconThings, BitCloud, CryptoMemory, CryptoRF, dsPIC, FlashFlex, flexPWR, Helder, JukeBlox, KeeLoq, KeeLoq logo, Klear, LANCheck, LINK MD, maXStylus, maXTouch, MediaLB, megaAVR, MOST, MOST logo, MPLAB, OptoLyzer, PIC, picoPower, PICSTART, PIC32 logo, Prochip Designer, QTouch, RightTouch, SAM-BA, SpyNIC, SST, SST Logo, SuperFlash, tinyAVR, UNI/O, and XMEGA are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

ClockWorks, The Embedded Control Solutions Company, EtherSynch, Hyper Speed Control, HyperLight Load, IntelliMOS, mTouch, Precision Edge, and Quiet-Wire are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Adjacent Key Suppression, AKS, Analog-for-the-Digital Age, Any Capacitor, AnyIn, AnyOut, BodyCom, chipKIT, chipKIT logo, CodeGuard, CryptoAuthentication, CryptoCompanion, CryptoController, dsPICDEM, dsPICDEM.net, Dynamic Average Matching, DAM, ECAN, EtherGREEN, In-Circuit Serial Programming, ICSP, Inter-Chip Connectivity, JitterBlocker, KlearNet, KlearNet logo, Mindi, MiWi, motorBench, MPASM, MPF, MPLAB Certified logo, MPLIB, MPLINK, MultiTRAK, NetDetach, Omniscient Code Generation, PICDEM, PICDEM.net, PICkit, PICtail, PureSilicon, QMatrix, RightTouch logo, REAL ICE, Ripple Blocker, SAM-ICE, Serial Quad I/O, SMART-I.S., SQI, SuperSwitcher, SuperSwitcher II, Total Endurance, TSHARC, USBCheck, VariSense, ViewSpan, WiperLock, Wireless DNA, and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

Silicon Storage Technology is a registered trademark of Microchip Technology Inc. in other countries.

GestIC is a registered trademark of Microchip Technology Germany II GmbH & Co. KG, a subsidiary of Microchip Technology Inc., in other countries.

All other trademarks mentioned herein are property of their respective companies.

© 2017, Microchip Technology Incorporated, Printed in the U.S.A., All Rights Reserved.

ISBN: 978-1-5224-2148-1

Quality Management System Certified by DNV

ISO/TS 16949

Microchip received ISO/TS-16949:2009 certification for its worldwide headquarters, design and wafer fabrication facilities in Chandler and Tempe, Arizona; Gresham, Oregon and design centers in California and India. The Company's quality system processes and procedures are for its PIC[®] MCUs and dsPIC[®] DSCs, KEELOQ[®] code hopping devices, Serial EEPROMs, microperipherals, nonvolatile memory and analog products. In addition, Microchip's quality system for the design and manufacture of development systems is ISO 9001:2000 certified.

Worldwide Sales and Service

AMERICAS	ASIA/PACIFIC	ASIA/PACIFIC	EUROPE
Corporate Office 2355 West Chandler Blvd. Chandler, AZ 85224-6199 Tel: 480-792-7200 Fax: 480-792-7277 Technical Support: http://www.microchip.com/support Web Address: www.microchip.com	Asia Pacific Office Suites 3707-14, 37th Floor Tower 6, The Gateway Harbour City, Kowloon Hong Kong Tel: 852-2943-5100 Fax: 852-2401-3431 Australia - Sydney Tel: 61-2-9868-6733 Fax: 61-2-9868-6755 China - Beijing Tel: 86-10-8569-7000 Fax: 86-10-8528-2104 China - Chengdu Tel: 86-28-8665-5511 Fax: 86-28-8665-7889 China - Chongqing Tel: 86-23-8980-9588 Fax: 86-23-8980-9500 China - Dongguan Tel: 86-769-8702-9880 China - Guangzhou Tel: 86-20-8755-8029 China - Hangzhou Tel: 86-571-8792-8115 Fax: 86-571-8792-8116 China - Hong Kong SAR Tel: 852-2943-5100 Fax: 852-2401-3431 China - Nanjing Tel: 86-25-8473-2460 Fax: 86-25-8473-2470 China - Qingdao Tel: 86-532-8502-7355 Fax: 86-532-8502-7205 China - Shanghai Tel: 86-21-3326-8000 Fax: 86-21-3326-8021 China - Shenyang Tel: 86-24-2334-2829 Fax: 86-24-2334-2393 China - Shenzhen Tel: 86-755-8864-2200 Fax: 86-755-8203-1760 China - Wuhan Tel: 86-27-5980-5300 Fax: 86-27-5980-5118 China - Xian Tel: 86-29-8833-7252 Fax: 86-29-8833-7256	China - Xiamen Tel: 86-592-2388138 Fax: 86-592-2388130 China - Zhuhai Tel: 86-756-3210040 Fax: 86-756-3210049 India - Bangalore Tel: 91-80-3090-4444 Fax: 91-80-3090-4123 India - New Delhi Tel: 91-11-4160-8631 Fax: 91-11-4160-8632 India - Pune Tel: 91-20-3019-1500 Japan - Osaka Tel: 81-6-6152-7160 Fax: 81-6-6152-9310 Japan - Tokyo Tel: 81-3-6880-3770 Fax: 81-3-6880-3771 Korea - Daegu Tel: 82-53-744-4301 Fax: 82-53-744-4302 Korea - Seoul Tel: 82-2-554-7200 Fax: 82-2-558-5932 or 82-2-558-5934 Malaysia - Kuala Lumpur Tel: 60-3-6201-9857 Fax: 60-3-6201-9859 Malaysia - Penang Tel: 60-4-227-8870 Fax: 60-4-227-4068 Philippines - Manila Tel: 63-2-634-9065 Fax: 63-2-634-9069 Singapore Tel: 65-6334-8870 Fax: 65-6334-8850 Taiwan - Hsin Chu Tel: 886-3-5778-366 Fax: 886-3-5770-955 Taiwan - Kaohsiung Tel: 886-7-213-7830 Taiwan - Taipei Tel: 886-2-2508-8600 Fax: 886-2-2508-0102 Thailand - Bangkok Tel: 66-2-694-1351 Fax: 66-2-694-1350	Austria - Wels Tel: 43-7242-2244-39 Fax: 43-7242-2244-393 Denmark - Copenhagen Tel: 45-4450-2828 Fax: 45-4485-2829 Finland - Espoo Tel: 358-9-4520-820 France - Paris Tel: 33-1-69-53-63-20 Fax: 33-1-69-30-90-79 France - Saint Cloud Tel: 33-1-30-60-70-00 Germany - Garching Tel: 49-8931-9700 Germany - Haan Tel: 49-2129-3766400 Germany - Heilbronn Tel: 49-7131-67-3636 Germany - Karlsruhe Tel: 49-721-625370 Germany - Munich Tel: 49-89-627-144-0 Fax: 49-89-627-144-44 Germany - Rosenheim Tel: 49-8031-354-560 Israel - Ra'anana Tel: 972-9-744-7705 Italy - Milan Tel: 39-0331-742611 Fax: 39-0331-466781 Italy - Padova Tel: 39-049-7625286 Netherlands - Drunen Tel: 31-416-690399 Fax: 31-416-690340 Norway - Trondheim Tel: 47-7289-7561 Poland - Warsaw Tel: 48-22-3325737 Romania - Bucharest Tel: 40-21-407-87-50 Spain - Madrid Tel: 34-91-708-08-90 Fax: 34-91-708-08-91 Sweden - Gothenberg Tel: 46-31-704-60-40 Sweden - Stockholm Tel: 46-8-5090-4654 UK - Wokingham Tel: 44-118-921-5800 Fax: 44-118-921-5820