

Serial port configuration WiFi instructions (ROS)

Serial port configuration WiFi instructions (ROS)


The module needs to be connected to the USB TTL module

Serial port configuration

- 1.Configure wifi instructions in STA mode (The mode of connecting to the local area network)
- 2.Configure WiFi instructions in AP mode (Module spontaneous hotspot mode)
- 3.Configure WiFi mode
- 4.Other instructions
- 5.Instructions for configuring ROS IP

The module needs to be connected to the USB TTL module

usbttl	camera
RX	TX
TX	RX
GND	GND
VCC	VCC

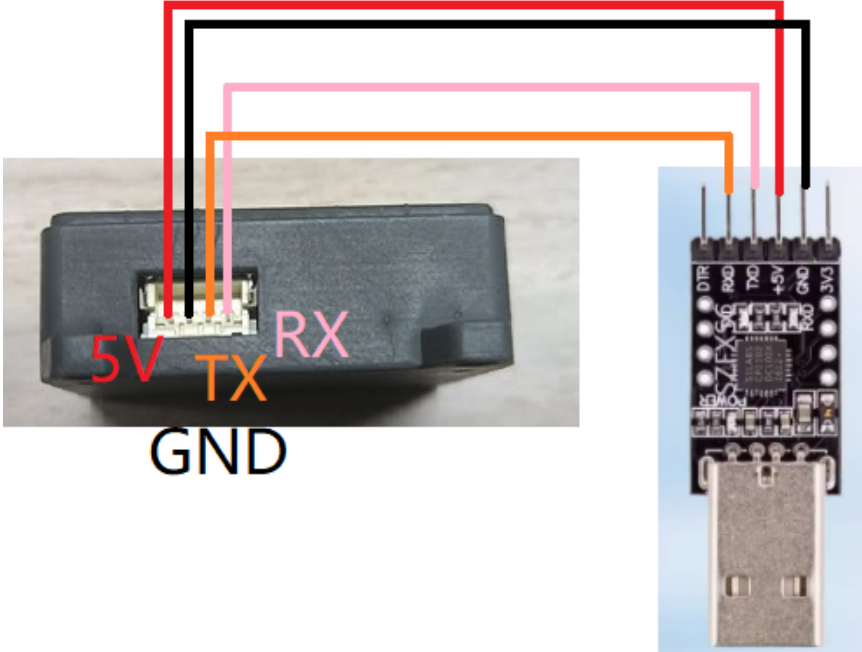

Serial port configuration

Baud rate:115200、No Parity 、 No hardware flow control、 1 stop bit

If using a serial port assistant configuration,When sending instructions, it is necessary to **Remove** automatically send new lines (Additional bit)

As shown in the figure:



1.Configure wifi instructions in STA mode (The mode of connecting to the local area network)

Command	explain	example	notes
sta_ssid:	The name of the connected WiFi	sta_ssid:yahboom	yahboom:Connected WiFi
sta_pd:	WiFi password for connection	sta_pd:12345678	12345678:WiFi password for connection

matters needing attention

1. Both sta_ssid and sta_pd must be followed by an English character punctuation mark.
2. When the wifi to be connected does not have a password, send **sta_pd:** once in this way.
3. If the above command is successful, it will return **OK** information. If there is no information, check the serial port wiring.
4. When sending the **sta_ssid:** command like this, There will be **fail, ssid is null** Characters of, indicating that the connection wifi name cannot be empty.
5. The sending of instructions can be all uppercase or all lowercase
6. The name and password of the WiFi cannot exceed 30 characters in length, otherwise the configuration will fail
7. WiFi names and passwords cannot have Chinese characters

8. The wifi password will automatically reset every time a new change occurs. If only the wifi name is changed, manual power-off reset is required.

2.Configure WiFi instructions in AP mode (Module spontaneous hotspot mode)

Command	explain	example	notes
ap_ssid:	Set WiFi name	ap_ssid:my_wifi	my_wifi:Set WiFi name
ap_pd:	Set WiFi password	sta_pd:12345678	12345678:Set WiFi password

matters needing attention

1. Both ap_ssid and ap_pd must be followed by an English character punctuation mark
2. When the wifi to be set does not have a password, simply send **ap_pd:** once.
3. If the above command is successful, it will return **OK** information. If there is no information, check the serial port wiring
4. When the **ap_ssid:** command is sent in this way, it will return **fail, AP_Name is null** The character indicates that the WiFi name cannot be empty when set
5. The sending of instructions can be all uppercase or all lowercase
6. The name and password of the WiFi cannot exceed 30 characters in length, otherwise the configuration will fail
7. WiFi names and passwords cannot have Chinese characters
8. The wifi password will automatically reset every time a new change occurs. If only the wifi name is changed, manual power-off reset is required

3.Configure WiFi mode

Command	explain	example	notes
wifi_mode:	Configure WiFi mode	wifi_mode:2	0: AP 1: STA 2: AP+STA

matters needing attention

1. wifi_mode Be sure to add an English character punctuation mark after it.
2. wifi_mode: Only 3 modes can be set in total. If a negative number is passed in, it defaults to AP mode. If a number is greater than 2, it defaults to AP+STA mode

4.Other instructions

Command	explain	example	return
sta_ip	Obtain the IP address of the sta mode	sta_ip	Return the IP address connected to the local area network(eg:sta_ip:192.168.2.199)
ap_ip	Obtain the IP address of the ap mode	ap_ip	Return the IP address of the self enabled WiFi mode(eg:ap_ip:192.168.4.1)
wifi_reset	Restore factory settings	wifi_reset	Reset_OK

Command	explain	example	return
wifi_ver	Obtain the version of WiFi firmware	wifi_ver	YAHBOOM VerSion:2.0.5

matters needing attention

1. The sending of instructions can be all uppercase or all lowercase
2. If the above command is successful, there will be corresponding information for the return value. If there is no information, check the serial port wiring
3. wifi_reset:Configure WiFi mode to AP+STA mode, The wifi name of AP is **Yahboom_ESP32_WIFI**,no password,Automatic reset.

5.Instructions for configuring ROS IP

Command	explain	example	notes
ros2_ip:	Host proxy to connect to	ros2_ip:192.168.2.105	192.168.2.105:It is the IP address of the proxy host

matters needing attention

0. A proxy host is a system with an ROS2 (humble) environment that is unbuttoned.
1. The sending of instructions can be all uppercase or all lowercase.
2. ros2_ip:It must be followed by an English character punctuation mark.
3. The connected host IP must be in the same network segment as the wifi connected to ESP32
4. The startup of ROS2 can only be achieved through STA mode or dual mode coexistence mode, and cannot only use AP hotspot mode, otherwise the ROS system will not be implemented
5. The port of the proxy is 9999 , The command to start on the host terminal is as follows:

```
docker run -it --rm -v /dev:/dev -v /dev/shm:/dev/shm --privileged --net=host microros/micro-ros-agent:humble udp4 --port 9999 -v4
```

5. domainid:20 The default domain ID of ROS2 is 0. To communicate with the host using ROS2 system, the domain ID needs to be changed to 20