

Color tracking

Color tracking

1. Program Functionality
2. Program Code Reference Path
3. Program Startup
 - 3.1. Startup Commands
 - 3.2 Dynamic Parameter Adjustment
4. Core Code
 - 4.1. colorTracker.py

1. Program Functionality

After starting the program, the default tracking color is red. Press the **r/R** key to enter color selection mode. Use the mouse to select a color, and the servo gimbal will lock onto that color. Press the **Spacebar** to enter tracking mode. The gimbal will always keep the tracked object in the center of the frame. Press the **q/Q** key to exit the program.

2. Program Code Reference Path

```
~/yahboomcar_ros2_ws/yahboomcar_ws/src/yahboomcar_astra/yahboomcar_astra/colorTracker.py
~/yahboomcar_ros2_ws/yahboomcar_ws/src/yahboomcar_astra/yahboomcar_astra/common/astra_common.py
```

- colorTracker.py

Mainly performs image processing. Based on the center coordinates of the tracked color object, it calculates the desired servo rotation angle and sends the servo control angle data to the car.

- astra_common.py
 - Color Tracking (color_follow class): Identifies and tracks objects of a specific color using the HSV color space.
 - Image Processing Tools: Includes multi-image stitching and display (ManyImgs function)
 - File Read/Write Functions: Used to save/read HSV color ranges

3. Program Startup

3.1. Startup Commands

For the Raspberry Pi 5 controller, you must first enter the Docker container. For the Orin board, this is not necessary.

Enter the Docker container (for steps, see the Docker section [3. Docker Submission and Multi-Terminal Access]).

Enter the terminal:

```
# Start the car chassis
ros2 run yahboomcar_bringup Ackman_driver_A1


# Start the color tracking program
ros2 run yahboomcar_astra ColorTracker
```

```
jetson@yahboom: ~
jetson@yahboom: ~ 132x19
[System Information]
IP_Address_1: 192.168.11.198
IP_Address_2: 172.18.0.1
-----
ROS_DOMAIN_ID: 62 | ROS: humble
my_robot_type: A1 | my_lidar: c1 | my_camera: usb
-----
jetson@yahboom:~$ ros2 run yahboomcar_bringup Ackman_driver_A1
Rosmaster Serial Opened! Baudrate=115200
A1
imu_link
1.0
1.0
1.0
False
-----create receive threading-----
jetson@yahboom: ~ 132x19
[System Information]
IP_Address_1: 192.168.11.198
IP_Address_2: 172.18.0.1
-----
ROS_DOMAIN_ID: 62 | ROS: humble
my_robot_type: A1 | my_lidar: c1 | my_camera: usb
-----
jetson@yahboom:~$ ros2 run yahboomcar_astra colorTracker
Import done
Init done
start it
```


Using red as an example, the following screen will appear after the program is launched.

(The HSV values in the parameter file


`~/yahboomcar_ros2_ws/yahboomcar_ws/src/yahboomcar_astra/yahboomcar_astra/colorHSV.txt` are loaded by default.)

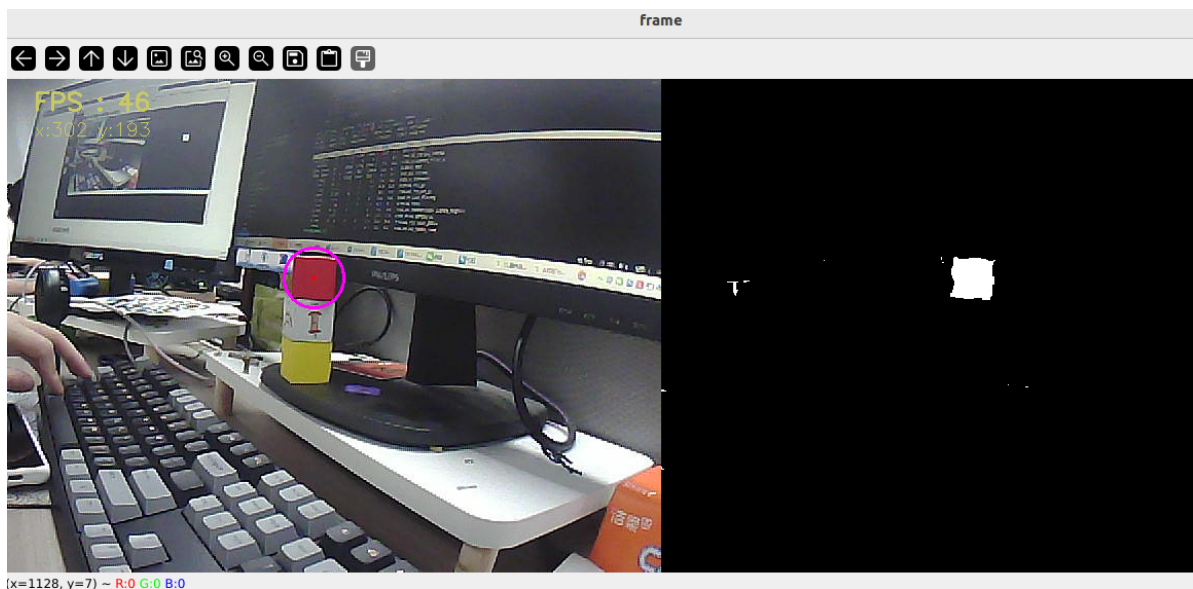

Then press the `r/R` key on your keyboard to enter color selection mode. Use your mouse to select an area (this area can only have one color).

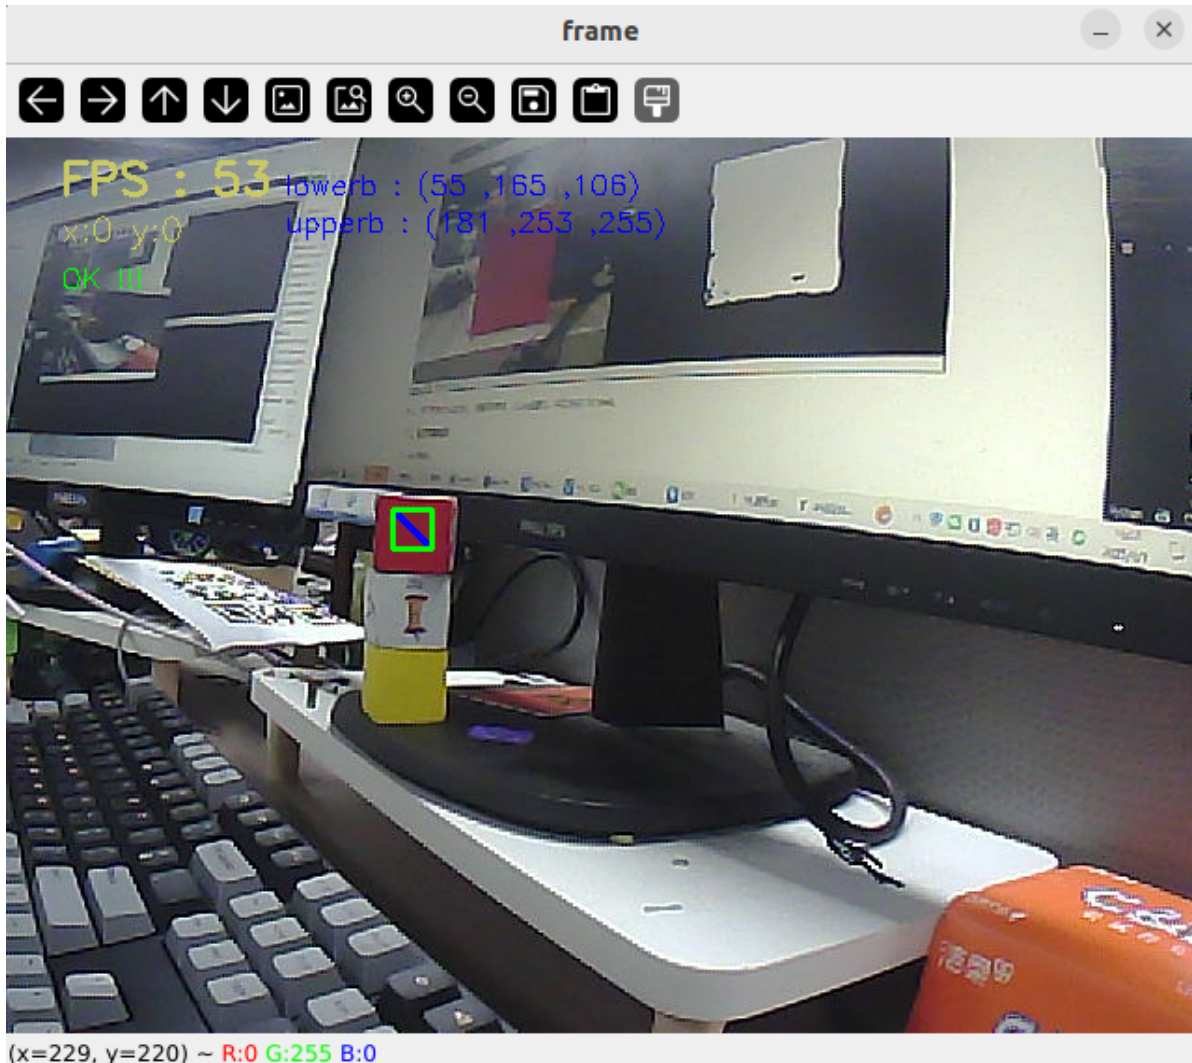

After making this selection, the effect should look like the image below.

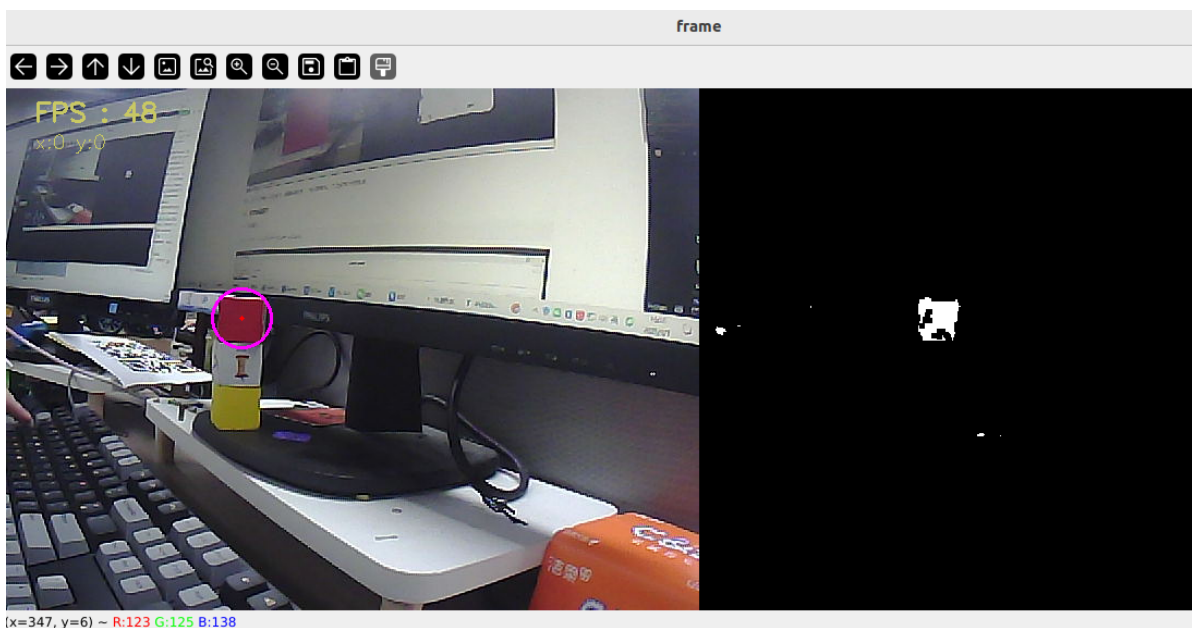

Then, press the spacebar to enter tracking mode. Slowly move the object, and the servo gimbal will follow.

Alternatively, we can enter the following command to print information about the target center coordinates:


```
ros2 topic echo /Current_point
```

```
jetson@yahboom:~$ ros2 topic echo /Current_point
angle_x: 304.0
angle_y: 225.0
distance: 27.0
---
angle_x: 304.0
angle_y: 225.0
distance: 28.0
---
```

3.2 Dynamic Parameter Adjustment

Enter in the terminal:

```
ros2 run rqt_reconfigure rqt_reconfigure
```

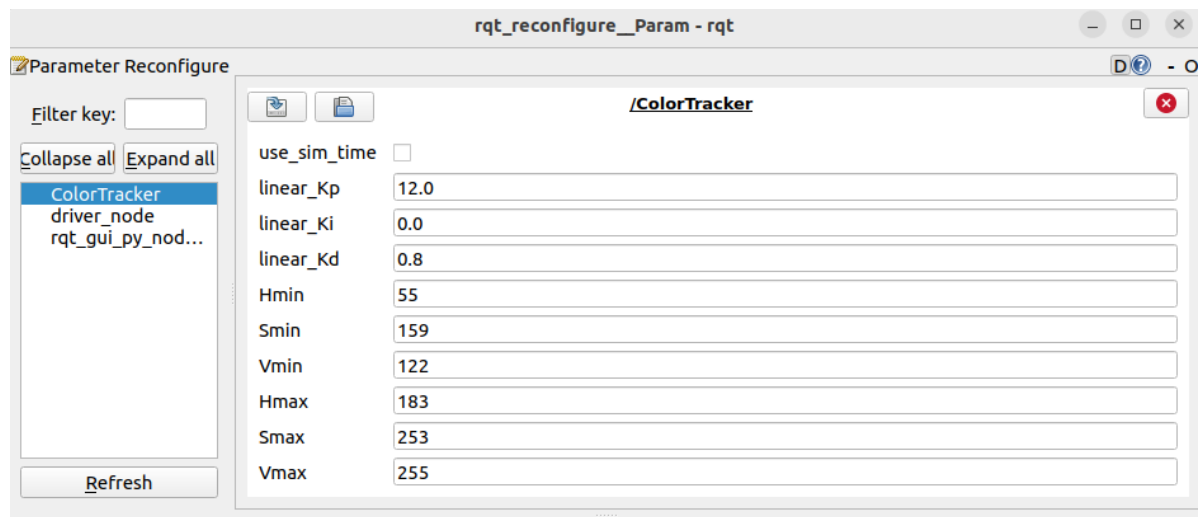

(System message might be shown here when necessary)

☒ After modifying the parameters, click a blank area in the GUI to enter the parameter value. Note that this will only take effect for the current boot. To permanently effect the parameter, modify it in the source code.

As shown in the figure above,

- colorTracker is primarily responsible for servo gimbal movement, adjusting PID-related parameters to achieve optimal gimbal motion.

✂ Parameter Analysis:

[linear_Kp], [linear_Ki], [linear_Kd]: PID control of the servo gimbal speed during tracking.

[Hmin], [Smin], [Vmin]: Indicates the lowest HSV value

[Hmax], [Smax], [Vmax]: Indicates the highest HSV value

4. Core Code

4.1. colorTracker.py

This program has the following main functions:

- Opens the camera and captures images;
- Receives keyboard and mouse events for mode switching and color selection;
- Processes the image and publishes the center coordinates of the tracked object to the /Current_point topic.
- Calculates the servo angle and publishes the angle data.

Some of the core code is as follows.

```
# Create a publisher to publish the center coordinates of the tracked object
self.pub_position = self.create_publisher(Position, "/Current_point", 10)
# Define a servo data publisher
self.pub_Servo = self.create_publisher(ServoControl, 'Servo', 10)
...
# Get keyboard and mouse events and obtain the hsv value;
if action == 32:
    self.Track_state = 'tracking'
    print("Color Tracking!!!")
elif action == ord('i') or action == ord('I'):
    self.Track_state = "identify"
elif action == ord('r') or action == ord('R'):
    self.Reset()
elif action == ord('q') or action == ord('Q'):
    self.cancel()
if self.Track_state == 'init':
    self.servo_angle.s1 = self.init_servos1
    self.servo_angle.s2 = self.init_servos2
    self.pub_Servo.publish(self.servo_angle)
    cv.namedWindow(self.windows_name, cv.WINDOW_AUTOSIZE)
    cv.setMouseCallback(self.windows_name, self.onMouse, 0)
    if self.select_flags == True:
        cv.line(rgb_img, self.cols, self.rows, (255, 0, 0), 2)
        cv.rectangle(rgb_img, self.cols, self.rows, (0, 255, 0), 2)
        if self.Roi_init[0] != self.Roi_init[2] and self.Roi_init[1] !=
self.Roi_init[3]:
            rgb_img, self.hsv_range = self.color.Roi_hsv(rgb_img, self.Roi_init)
            self.gTracker_state = True
            self.dyn_update = True
        else:
            self.Track_state = 'init'
    ...
# Calculate the center coordinates. self.circle stores the x and y values.
rgb_img, binary, self.circle = self.color.object_follow(rgb_img, self.hsv_range)
...
# Publish the center coordinates.
threading.Thread(target=self.execute, args=(self.circle[0], self.circle[1],
self.circle[2])).start()
def execute(self, x, y, z=None):
    position = Position()
    position.angle_x = x * 1.0
    position.angle_y = y * 1.0
    if z is not None:
        position.distance = z * 1.0
    self.pub_position.publish(position)
```

```

...
# Important function, obtains the x value, y value, and distance_value
def process(self, rgb_img, action):
...
# Calculates the servo angle using the PID algorithm based on the x and y values
self.execute(x,y,z)
def execute(self, x, y, z=None):
    position = Position()
    position.anglex = x * 1.0
    position.angley = y * 1.0
    if z is not None:
        position.distance = z * 1.0
    self.pub_position.publish(position)
    [x_Pid, y_Pid] = self.linear_pid.update([(x - 320), y - 240])
    # Limit PID polarity and maximum value
    x_Pid = x_Pid * (abs(x_Pid) <=self.linear_Kp/2.4)
    y_Pid = y_Pid * (abs(y_Pid) <=self.linear_Kp/2.4)
    ...
    # Publish the calculated servo angle
    self.pub_Servo.publish(self.servo_angle)

```