

500 Internal Server Error


If you are the administrator of this website, then please read this web application's log file and/or the web server's log file to find out what went wrong.

Guide Contents

Guide Contents	2
Overview	4
Assembly & Wiring	6
Assembly	6
Wiring	7
Serial UART	8
USB Serial Drivers	8
Windows Serial Driver Installation	8
Serial Usage	10
Windows	11
Mac OSX	13
Linux	14
Other Serial UART Uses	14
MPSSE Setup	16
Windows	18
libusb Driver Install	18
libftdi Install	20
Adafruit Python GPIO Library Install	22
libusb Driver Uninstall	24
Mac OSX	27
Linux	29
MPSSE Usage	31
GPIO	32
SPI	37
Driving NeoPixels With SPI	38
I2C	45
Software Usage	45
Other I2C Libraries	46
I2C Device Enumeration	46
More Info	48
Erase EEPROM For Programming With FT_PROG	48

Downloads	50
Files	50
Schematic	50
Fabrication Print	50

Overview

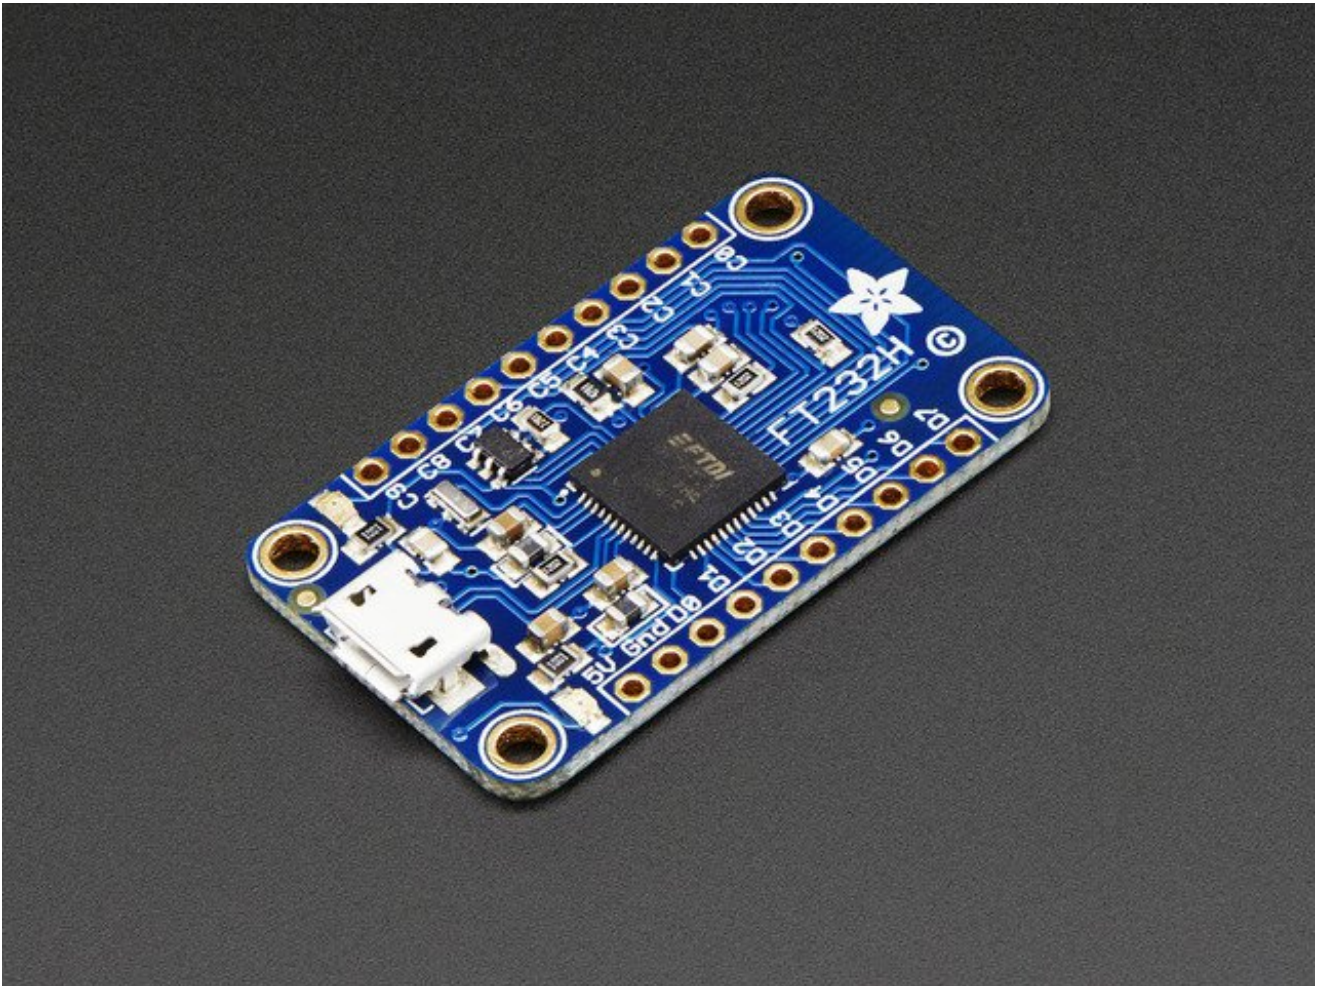


Wouldn't it be cool to drive a [tiny OLED display](http://adafru.it/eau) (<http://adafru.it/eau>), read a [color sensor](http://adafru.it/1334) (<http://adafru.it/1334>), or even just flash some LEDs directly from your computer? Sure you can program an [Arduino](http://adafru.it/50) (<http://adafru.it/50>) or [Trinket](http://adafru.it/2000) (<http://adafru.it/2000>) to talk to these devices and your computer, but why can't your computer just talk to those devices and sensors itself? Well, now your computer *can* talk to devices using the Adafruit FT232H breakout board!

What can the FT232H chip do? This chip from [FTDI](http://adafru.it/c97) (<http://adafru.it/c97>) is similar to their USB to serial converter chips but adds a 'multi-protocol synchronous serial engine' which allows it to speak many common protocols like SPI, I2C, serial UART, JTAG, and more! There's even a handful of digital GPIO pins that you can read and write to do things like flash LEDs, read switches or buttons, and more. The FT232H breakout is like adding a little swiss army knife for serial protocols to your computer!

Interested in learning more about the FT232H and its capabilities? Continue on to read about how to assemble, configure, and access the capabilities of the FT232H breakout. Also be sure to skim and read the [FT232H datasheet](http://adafru.it/eav) (<http://adafru.it/eav>) for more information about the chip.

Assembly & Wiring

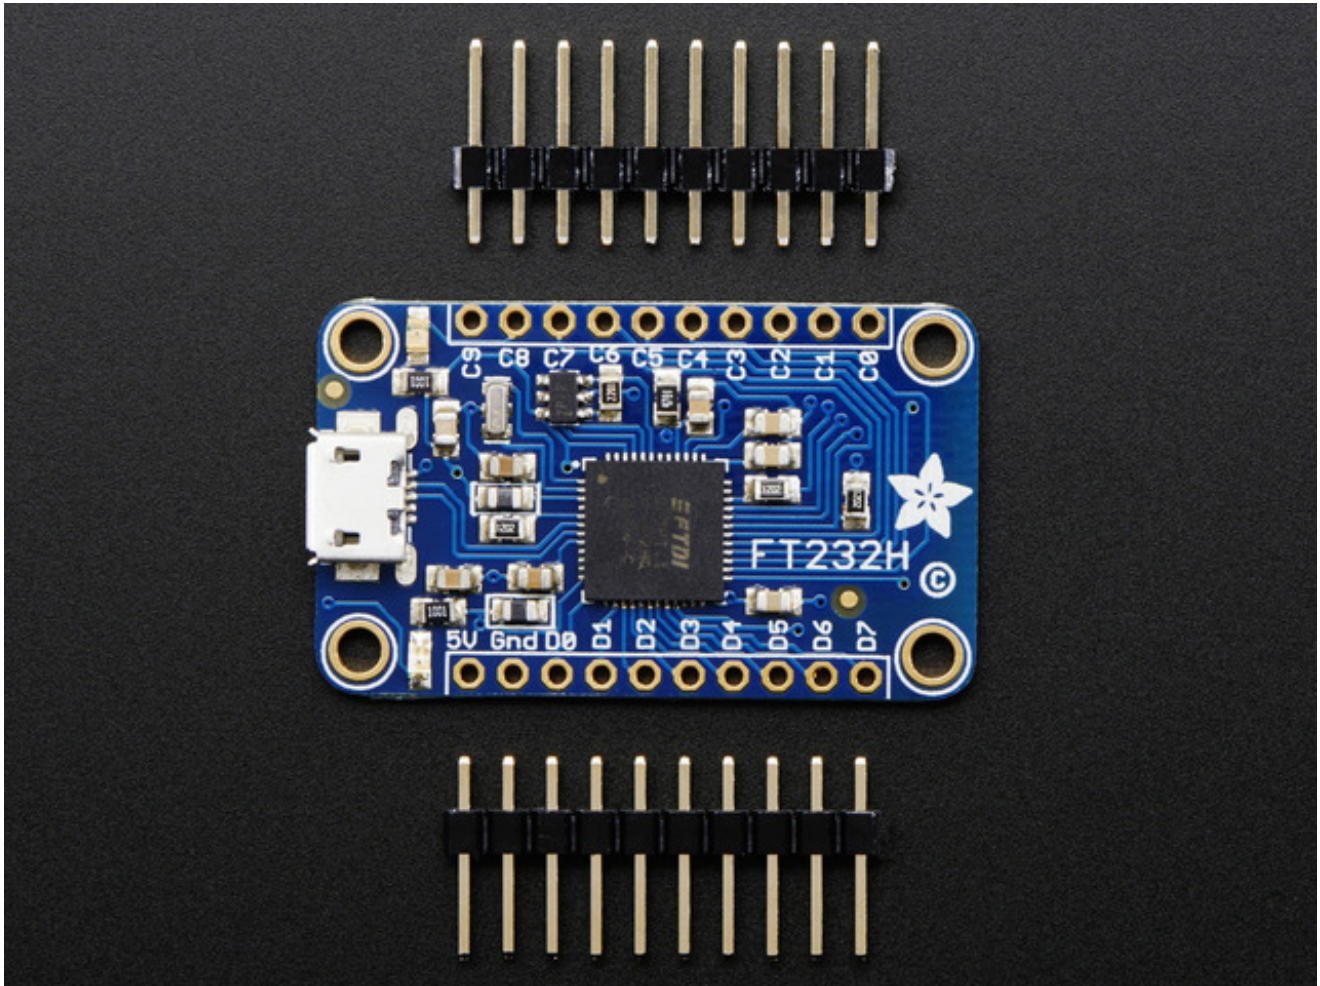

Assembly

To assemble the FT232H breakout you'll need to solder the included headers to the breakout board.

If you haven't soldered before, make sure to first read the [guide to excellent soldering](http://adafru.it/dgp) (<http://adafru.it/dgp>) and try practicing with some scrap wires and components.

Start by trimming the male headers to the length of the pin holes on the breakout board. You should have two rows of male headers with 10 pins each.

Then insert the longer pins of the headers into a breadboard so that the pin holes on the FT232H breakout slide perfectly through the header pins sticking out the top of the breadboard.

Using a soldering iron and some solder, carefully solder all the pins to the FT232H breakout board.

If you aren't clear on the steps above, check out an assembly guide for other breakout boards like the [VS1053 audio board](http://adafru.it/jFo) (<http://adafru.it/jFo>). You should follow the same steps to solder the header pins

to the FT232H breakout board.

Once the headers are soldered to the board, plug in a micro USB cable to the port on the FT232H breakout and then plug the cable into a computer or laptop. You should see a green LED next to the 5V pin on the breakout light up. Congratulations your FT232H board is assembled!

Wiring

Below is a quick description of the pins on the FT232H breakout. You'll learn about these pins in more detail in the [Serial UART \(http://adafru.it/jFp\)](http://adafru.it/jFp) and [MPSSE Setup \(http://adafru.it/jFq\)](http://adafru.it/jFq) sections of the guide.

- **5V** - This is a 5 volt power source connected directly to the USB bus. Don't pull more than about 400-500mA of current from this pin or else you might damage your computer's USB port!
- **GND** - This is the ground of the FT232H breakout.
- **D0 through D7** - These are the ADBUS pins on the FT232H chip and are used for the serial UART and other serial protocols. You can also use some of them as GPIO pins for digital inputs and outputs.
- **C0 through C9** - These are the ACBUS pins on the FT232H chip and are mainly used as GPIO pins for digital inputs and outputs. Note that pins C8 and C9 are not controlled by software and can only be assigned functionality by changing the EEPROM of the chip. You'll learn more about these two pins in the more info section.

Serial UART

Out of the box the FT232H is configured to act just like an [FTDI friend USB to serial UART converter](http://adafru.it/dQa) (<http://adafru.it/dQa>). This is great for talking to a serial device like an Arduino from your computer. It's safe to use with both 3.3 volt and 5 volt signals. This means the FT232H breakout can be used to safely talk to an Arduino's 5 volt serial ports, and a Raspberry Pi or BeagleBone Black's 3.3 volt serial ports!

When used as a serial UART the FT232H breakout pins have the following serial functions:

- **D0 - TX** or transmit pin. This pin is the serial data output by the FT232H chip and should be connected to the RX or receive pin of a serial device.
- **D1 - RX** or receive pin. This pin is the serial data input for the FT232H chip and should be connected to the TX or transmit pin of a serial device.
- **D2 - RTS** or ready to send pin. This is an optional pin for flow control of serial connections.
- **D3 - CTS** or clear to send pin. Like RTS, this is an optional pin for flow control.
- **D4 - DTR** or data terminal ready pin. Another optional pin for flow control in RS-232 serial connections.
- **D5 - DSR** or data set ready pin. Like DTR, this is another optional pin for flow control in RS-232 serial connections.
- **D6 - DCD** or data carrier detect pin. This is an optional pin that is sometimes used in RS-232 serial communication.

The most important and commonly used serial pins are **D0** and **D1** for the **TX** and **RX** pins. The other pins are only necessary if you're using a device with flow control or specific RS-232 serial needs.

USB Serial Drivers

Before you can use the FT232H as a serial UART you need to make sure the proper serial port drivers are installed. Luckily most operating systems include FTDI's serial UART driver so there typically isn't any installation necessary.

Specifically Mac OSX Mavericks or greater have the FTDI serial driver included automatically. Linux kernel versions since ~2.6 also have the FTDI serial driver included, so modern Linux distributions like Ubuntu 12.04 or 14.04 should work without any driver installation. Windows can usually search online to find the driver automatically, however if that fails see below for manual driver installation instructions.

If for some reason your operating system doesn't have FTDI serial drivers installed, you can [download and install official drivers from FTDI's site](http://adafru.it/aJv) (<http://adafru.it/aJv>). There are drivers available for Windows 7 & 8, Mac OSX, and Linux.


Windows Serial Driver Installation

Below I'll briefly walk through installation of the FTDI serial driver for Windows since it is a common platform to install the driver.

First start with your Windows 7, 8, or 8.1 machine booted and the FT232H board **disconnected** from the PC.

Download the FTDI serial driver (sometimes called VCP or virtual COM port) [here](http://adafru.it/aJv) (<http://adafru.it/aJv>), make sure to pick the **Windows setup executable** version of the driver.

Next open explorer and navigate to the folder where the driver executable was downloaded. Right click on the file and select **Run as administrator** as shown below to start the installation. It's important to run as administrator or else the driver installation will fail to copy files to Window's system directories.

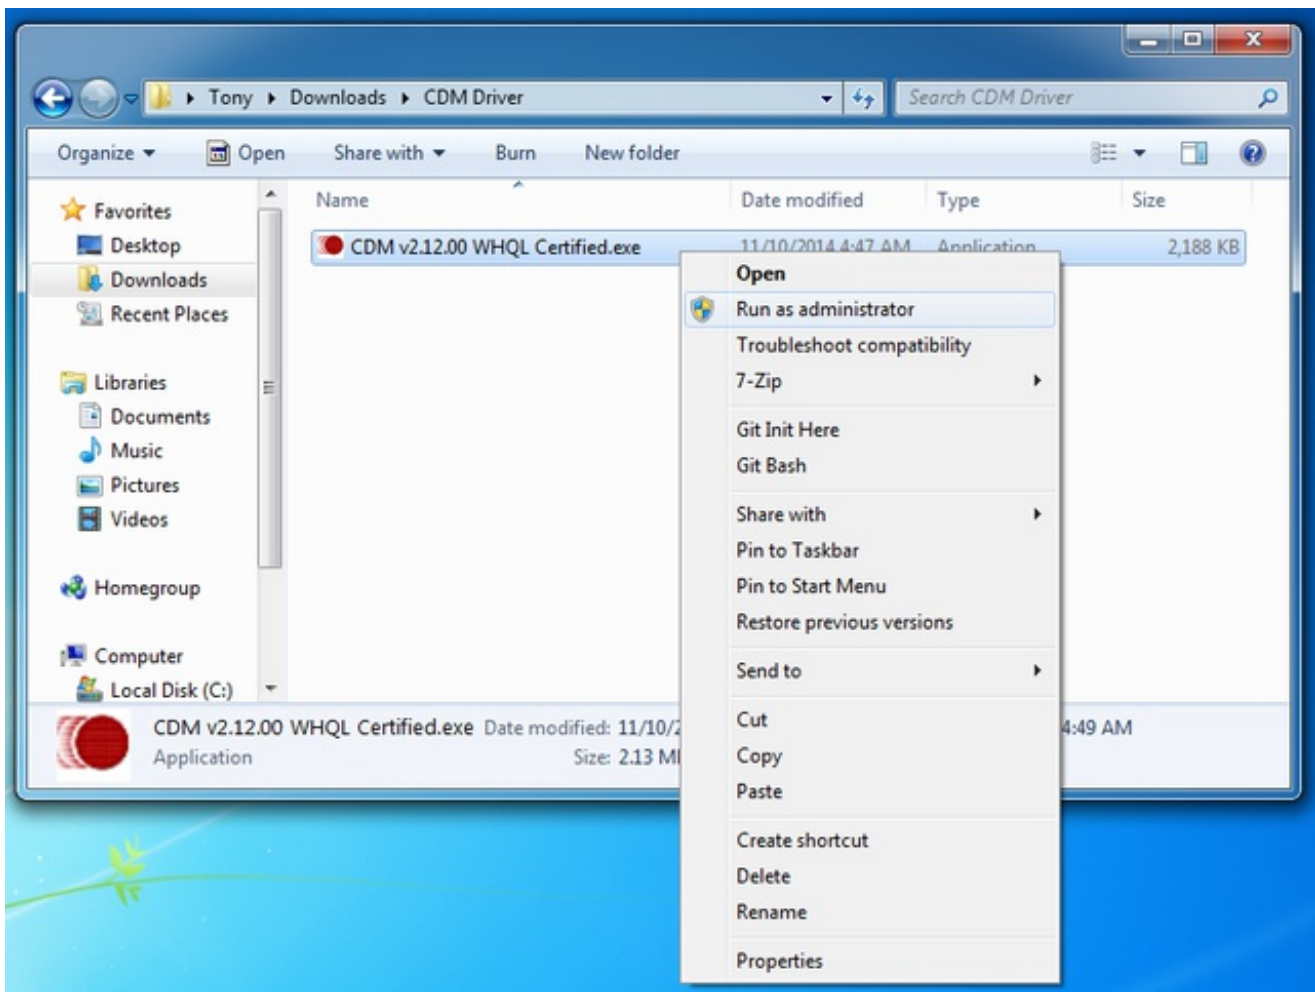

Now click through the setup pages, read and accept the license agreement, etc. to install the driver. There aren't any configuration or setup options you need to change or worry about in the installation.


Once the installation is done you might need to reboot your machine if the installation program tells you to do so.

After rebooting, plug in the FT232H breakout to your PC using a USB micro cable. You should see a message pop up that the device is recognized and a driver is being installed.

To check that the serial port installed successfully and find the COM port assigned to it, open device manager by clicking the start menu and searching for **Device Manager**.

Inside device manager look under the **Ports (COM & LPT)** node and you should see a **USB Serial Port (COMx)** device, where x is a number like 5. This COMx is the COM port assigned to the FT232H serial UART, and what you should use when connecting to the serial port in the Arduino IDE or with a serial terminal program.

However if for some reason you don't see the **USB Serial Port (COMx)** device or **Ports (COM & LPT)** node, you might need to enable the VCP mode for the FTDI device. To do this open the **Universal Serial Bus controllers** node at the bottom of Device Manager and you should see a **USB Serial Converter** node. Right click this node and click the **Properties** menu, then click the **Advanced** tab at the top. Make sure the **Load VCP** checkbox is checked and then click **OK**. See the picture below for the configuration page and device manager view you should see.

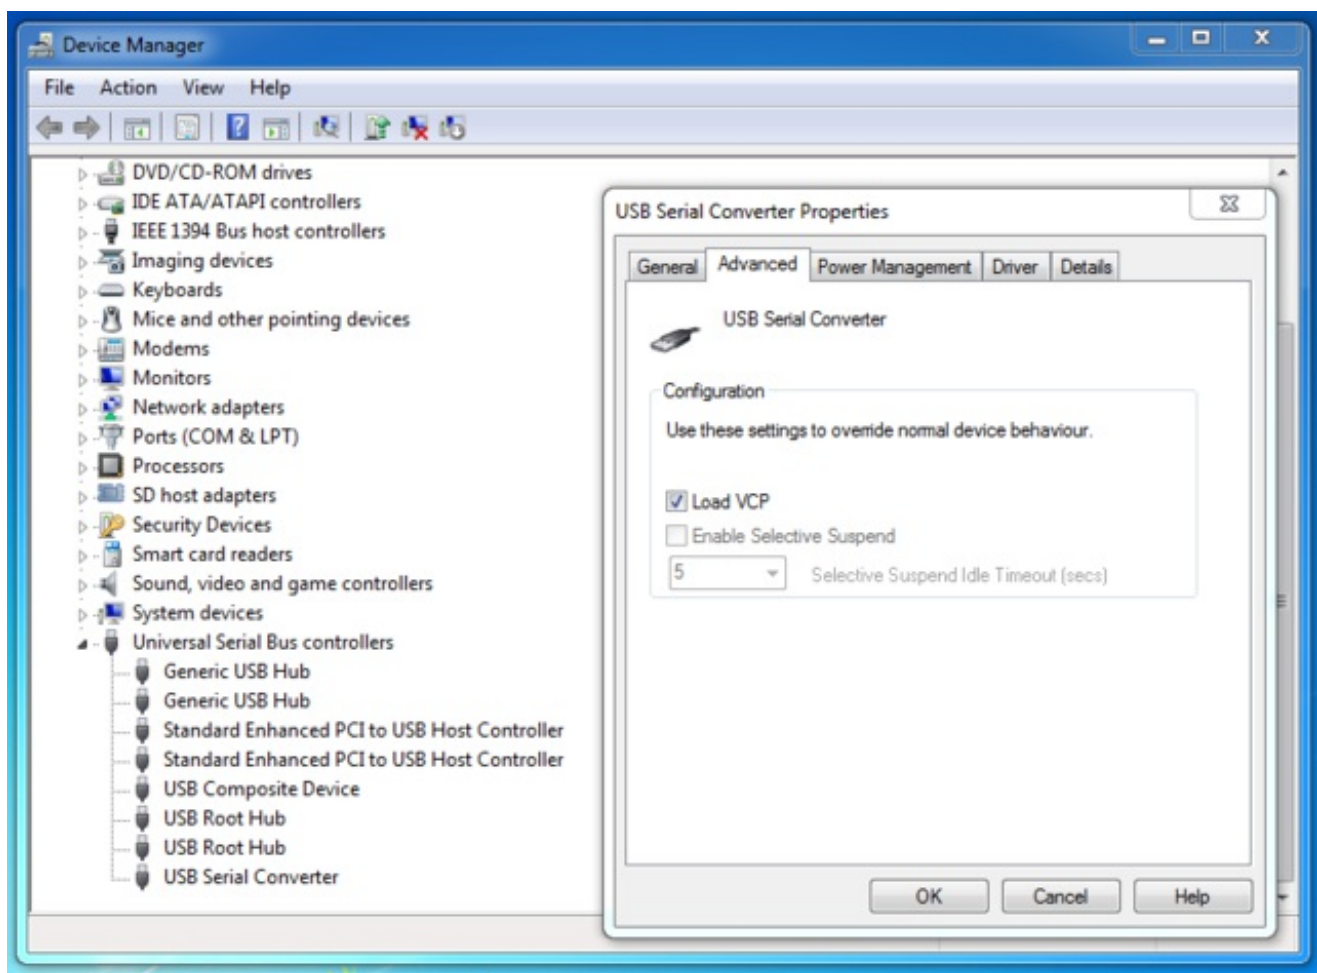


Now unplug and plug in again the FT232H board and check device manager again to find the **USB Serial Port (COMx)** node in the **Ports (COM & LPT)** node. That's it, you're all set to access the device as a serial COM port in Windows!

Serial Usage

Once any necessary serial port drivers are installed, you're ready to use the FT232H as a USB to serial UART. Let's perform a simple loopback test to confirm you can read and write data with the UART. This test will connect the TX pin to the RX pin so any data sent to serial UART will be immediately received and echoed back to you.


Using a jumper wire, connect pin **D0 (TX)** to **D1 (RX)** on the FT232H breakout as shown below.

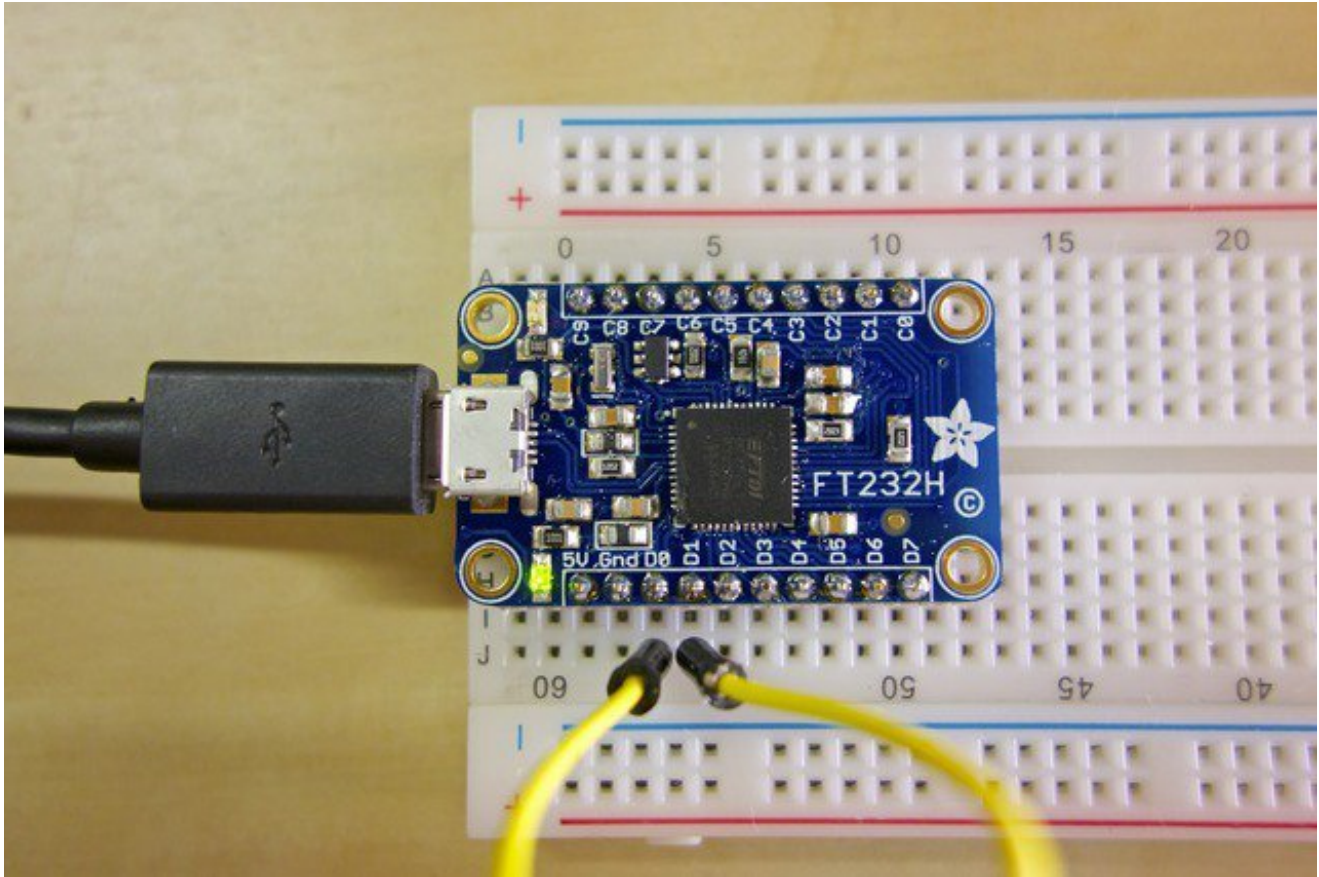


Now open a serial console for the FT232H board and check that anything you type is echoed back to you.

Windows

On Windows you can use [PuTTY](http://adafruit.it/aWh) (<http://adafruit.it/aWh>) as a serial console. Download and run PuTTY, then configure it for a **Connection type** of **Serial** as shown below on the right. The **Serial line** should be set to the **COM port you found for the USB serial converter** in device manager (shown on the left), in this case COM5. **Speed** should be set to **9600 baud**.

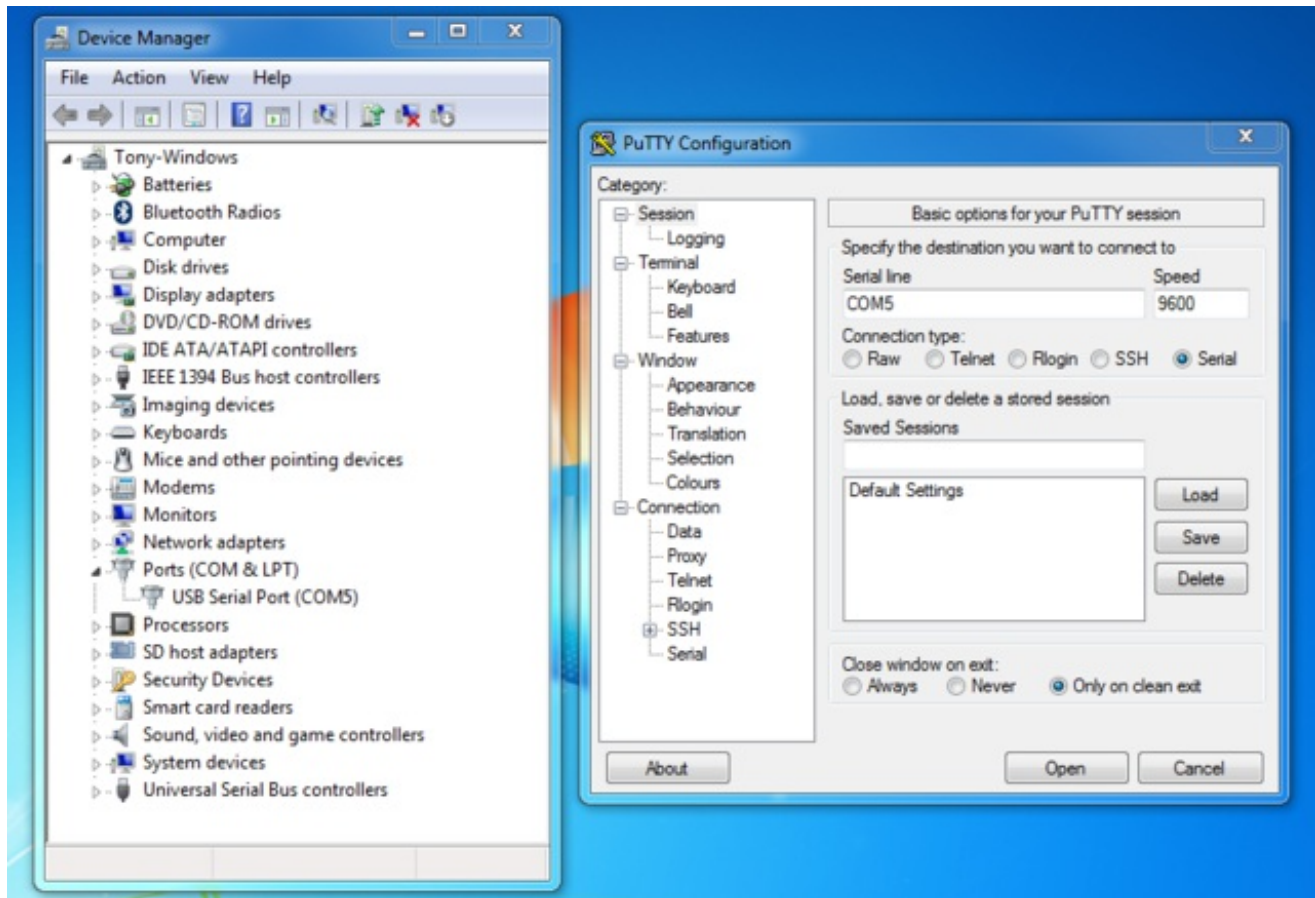

Click open and you should see an empty terminal screen appear. Try typing a message and you should see what you type echoed back to you, like below:

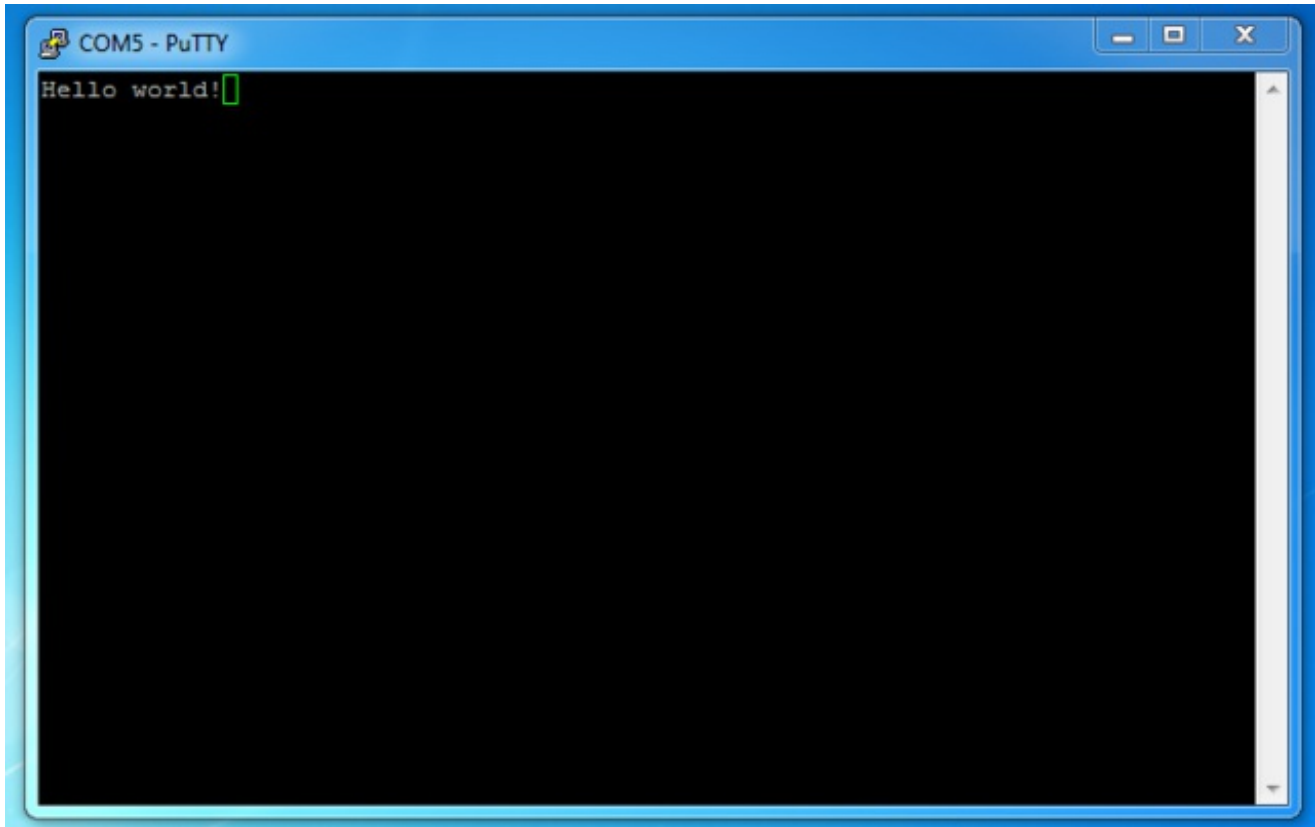

If you don't see anything, make sure you've connected the D0 pin to the D1 pin on the FT232H board.

Also make sure you're using the right COM port for the FT232H device. Try unplugging any other USB to serial converter (including development boards like Arduinos!) and only connecting the FT232H board to make sure you can find its COM port in device manager.

Mac OSX

On a Mac you can use a few included terminal commands to list serial ports and connect to a serial port to test the loopback connection.

First start with the FT232H board **disconnected** and open a terminal to run the following command to list all serial ports.

```
ls /dev/tty
```

You should see a list of devices, such as:

```
/dev/tty.Bluetooth-Incoming-Port /dev/tty.usbmodem20
/dev/tty.Bluetooth-Modem /dev/tty.usbmodem22
/dev/tty.usbmodem141.1 /dev/tty.usbmodem24
```

Now connect the FT232H breakout to the computer, wait a moment, and run the same ls command again. You should see a new device in the list, such as:

```
devfs: Elapsed Time: 0.000000000 sec: /dev/tty.usbserial-0000111D
devfs: Elapsed Time: 0.000000000 sec: /dev/tty.usbserial-0000111D
devfs: Elapsed Time: 0.000000000 sec: /dev/tty.usbserial-0000111D
devfs: Elapsed Time: 0.000000000 sec: /dev/tty.usbserial-0000111D
devfs: Elapsed Time: 0.000000000 sec: /dev/tty.usbserial-0000111D
```

The new device, `/dev/tty.usbserial-0000111D`, is the FT232H serial UART. You can use this device with a program like `screen` to open a serial connection. Run the following command in the terminal to open the serial UART:

```
screen /dev/tty.usbserial-0000111D 9600
```

Replace the `/dev/tty.usbserial` name with the name of the device you found after running the `ls` commands above. The 9600 after the name is the baud rate to open the `screen` connection.

Once `screen` opens the connection you should see a blank screen. Try typing characters and you should see them echoed back in the terminal. Congratulations, your serial loopback test is a success!

You can exit `screen` by pressing **Ctrl-a** and then **Ctrl-**.

Linux

On Linux distributions such as Ubuntu 12.04 or 14.04 you can run terminal commands that are very similar to those shown above for Mac OSX. The only difference is that you should run the following `ls` command to list serial devices:

```
ls -l /dev/ttyUSB*
```

Run the above command before and after plugging in the FT232H breakout to find the path to the new device that was added. On a distribution like Ubuntu you will typically see a path like `/dev/ttyUSB0`.


To open the serial port use the exact same `screen` command as mentioned above for Mac OSX. Replace the path parameter with the path to the FT232H device you found above.

Note you might need to press **Ctrl-a** and then `\` to quit `screen` on Ubuntu or other Linux distributions.

Other Serial UART Uses

You can use the serial UART on the FT232H just like you would any FTDI friend or similar USB to serial UART. Remember the FT232H breakout can work with 3.3 volt and 5 volt boards (that accept a 3.3 volt input as most do) so it's perfect for connecting to small embedded Linux boards like the Raspberry Pi.

For example to connect to a Raspberry Pi just connect the **FT232H ground** to **Raspberry Pi ground**, **D0 (TX)** to **Raspberry Pi RX**, and **D1 (RX)** to **Raspberry Pi TX** like below:

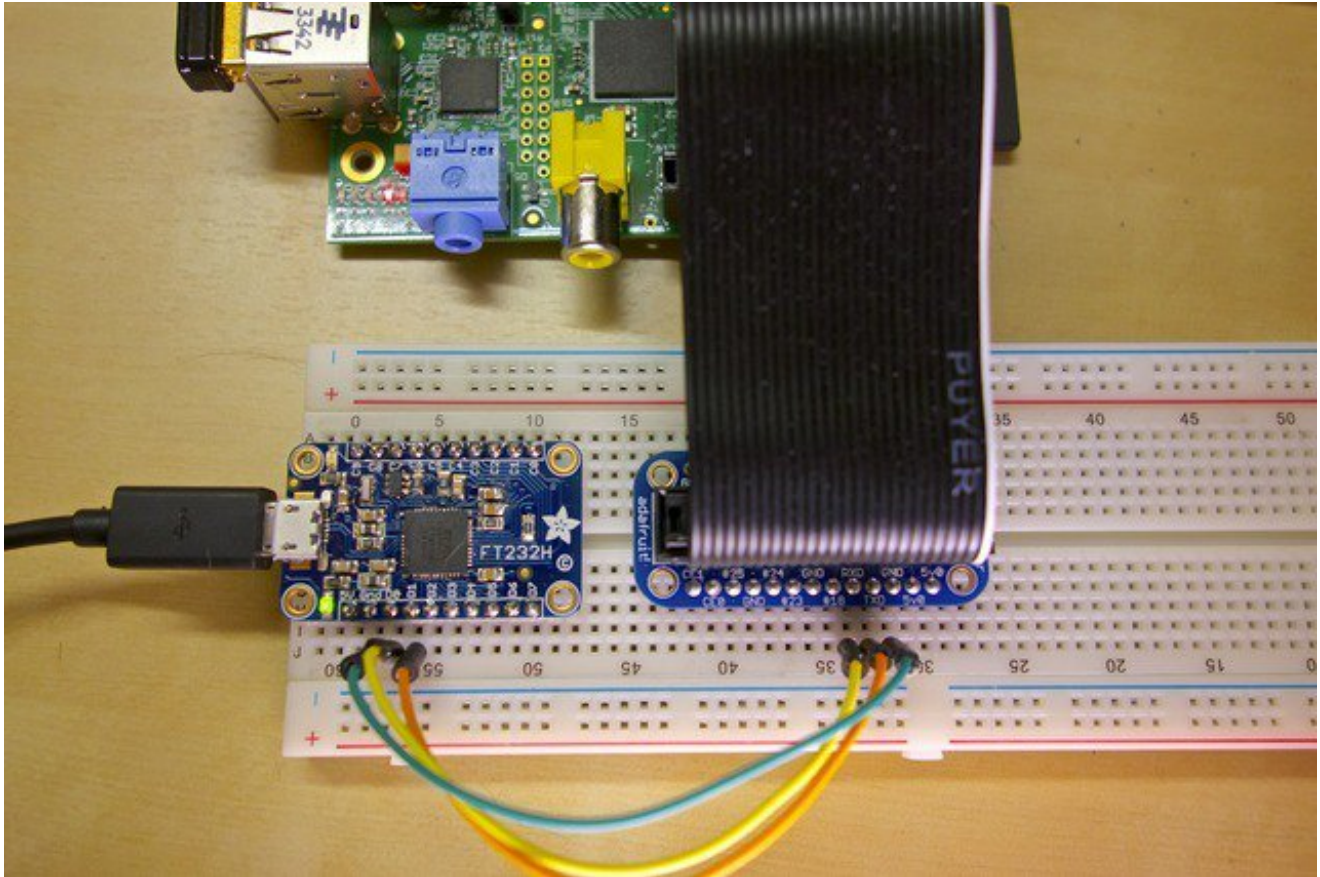

Use PuTTY or screen to open the FT232H serial port at 115200 baud and you'll be accessing the Raspberry Pi's serial port!

You can find more details on accessing a Raspberry Pi through its serial console in this [console cable guide](http://adafruit.it/jFr) (<http://adafruit.it/jFr>). The FT232H breakout can be used instead of the console cable mentioned in the guide!

MPSSE Setup

The **M**ulti-**P**rotocol **S**ynchronous **S**erial **E**ngine, or **MPSSE**, is the heart of the FT232H chip which allows it to speak many different protocols such as I2C, SPI, and more. When the chip is in MPSSE mode it changes the **D0** to **D3** pins to have special serial protocol functions:

- **D0** - Clock signal output. This line can be configured as a clock that runs at speeds between ~450Hz to 30Mhz.
- **D1** - Serial data output. This is for outputting a serial signal, like the MOSI line in a SPI connection.
- **D2** - Serial data input. This is for reading a serial signal, like the MISO line in a SPI connection.
- **D3** - Serial select signal. This is a chip select or chip enable signal to tell a connected device that the FT232H is ready to talk to it.

In addition to the serial protocol pins above, the MPSSE mode allows you to control other pins as general purpose digital inputs or outputs. These are great for controlling chip select, reset, or other lines on chips. You can even use the GPIO to read switches, blink LEDs, and more!

The pins which are controllable as GPIO in MPSSE mode are **D4** to **D7** and **C0** to **C7**, for a total of 12 GPIO pins. These pins can be configured individually as digital inputs or outputs.

Note that pins **C8** and **C9** are not controllable as GPIO pins. These two pins have a special function that can be set in the EEPROM of the chip--you'll learn more about these later.

To use the MPSSE mode of the chip you'll need to use some special software and programming libraries. There are actually a few options for software that can talk to the FT232H and its MPSSE component:

- [FTDI's official D2XX drivers and libraries \(http://adafru.it/eaB\)](http://adafru.it/eaB).
 - These drivers and libraries are produced by FTDI and provide low level access to FTDI chip functions. There are binary versions of the library available for Windows, Mac OSX, and Linux. This is a good option to consider if you run into limitations or issues with other drivers. There's a good [programming guide \(http://adafru.it/p4A\)](http://adafru.it/p4A) and [example code \(http://adafru.it/eaD\)](http://adafru.it/eaD) available too.
- FTDI's [LibMPSSE-I2C \(http://adafru.it/eaE\)](http://adafru.it/eaE) and [LibMPSSE-SPI \(http://adafru.it/eaF\)](http://adafru.it/eaF) libraries.
 - These libraries build on top of the D2XX driver above and provide a simpler interface to I2C and SPI communication with the FT232H's MPSSE component.
- [libFTDI library \(http://adafru.it/df4\)](http://adafru.it/df4)
 - This is an open source library that's similar to the D2XX library and provides a low level interface to FTDI chip functions. There's even a Python interface which makes this library a little easier to use compared to the D2XX library.
- [libmpsse library \(http://adafru.it/df5\)](http://adafru.it/df5)
 - Like the libMPSSE-I2C and libMPSSE-SPI libraries, this library builds on the libFTDI library and provides a simpler interface for I2C and SPI protocols using the MPSSE

component. One thing to note is that this library is currently only supported on Mac OSX and Linux.

- [Adafruit Python GPIO library \(http://adafru.it/eaG\)](http://adafru.it/eaG)
 - To make using the FT232H simpler, Adafruit's Python GPIO library has been updated to include a simple interface for accessing GPIO, SPI, and I2C on the FT232H with the Python programming language. Using this library you can control the GPIO pins and send or receive SPI & I2C commands much like programming those interfaces on a Raspberry Pi or BeagleBone Black. This library is built on top of the libFTDI library and supports Windows, Mac OSX, and Linux platforms.

In this guide I'll show you how to setup and use the [Adafruit Python GPIO library \(http://adafru.it/eaG\)](http://adafru.it/eaG) to access GPIO, SPI, and I2C devices using the FT232H board's MPSSE component. You can write Python programs to control GPIO pins and send/receive SPI & I2C commands directly from your computer using the FT232H breakout.

One thing to note, when you're using the MPSSE mode of the FT232H the **serial UART mode will be disabled**. This means you can't use both the serial UART and MPSSE GPIO, SPI, I2C, etc. modes of the chip at the same time.

To learn how to enable MPSSE modes and install the Adafruit Python GPIO library, continue on to the next page that's appropriate for your platform (Windows, Mac OSX, or Linux).

Windows

To access the MPSSE mode of the FT232H on Windows we need to install special drivers and software. We'll use a tool called Zadig to replace the FTDI driver for the FT232H with a libusb-based driver required by libftdi. Then we'll download a libftdi binary and install it for Python to access. Finally we'll install the Adafruit Python GPIO library. Carefully follow the steps below to setup the software.

Note: When you enable MPSSE mode the serial UART driver will be disabled. If you want to disable MPSSE mode and enable the serial UART again I'll show instructions at the end of the page.

First before you get started make sure you have Python 2.7 installed. You can [download the latest Python 2.7 installer here \(http://adafru.it/eaH\)](http://adafru.it/eaH) (at the time of writing it's version 2.7.8, but any 2.7.x version should work--unfortunately the 3.x series isn't supported yet). Download the MSI installer for your version of Windows, either 32-bit or 64-bit, and run the installer. Install Python into its standard location, typically C:\python27. Also make sure to install the option to add Python to the system path so you can easily call the Python interpreter from a command terminal.


libusb Driver Install

Download the appropriate Zadig tool for your version of Windows [at its homepage \(http://adafru.it/eal\)](http://adafru.it/eal). This tool simplifies the installation of a libusb driver for the FT232H device.

Before you run the tool unplug all FTDI devices from your computer. This includes devices like Arduinos which include an FTDI chip as a USB to serial converter. You want to unplug these devices to make sure you don't accidentally select one with the tool and replace its driver.


After all the FTDI devices are unplugged, plug in your FT232H breakout to the computer so it is the only FTDI device connected to the computer.

Now run the Zadig tool executable you just downloaded (there is no installation necessary, the executable is the program). Click the **Options** menu and select the **List All Devices** item below:

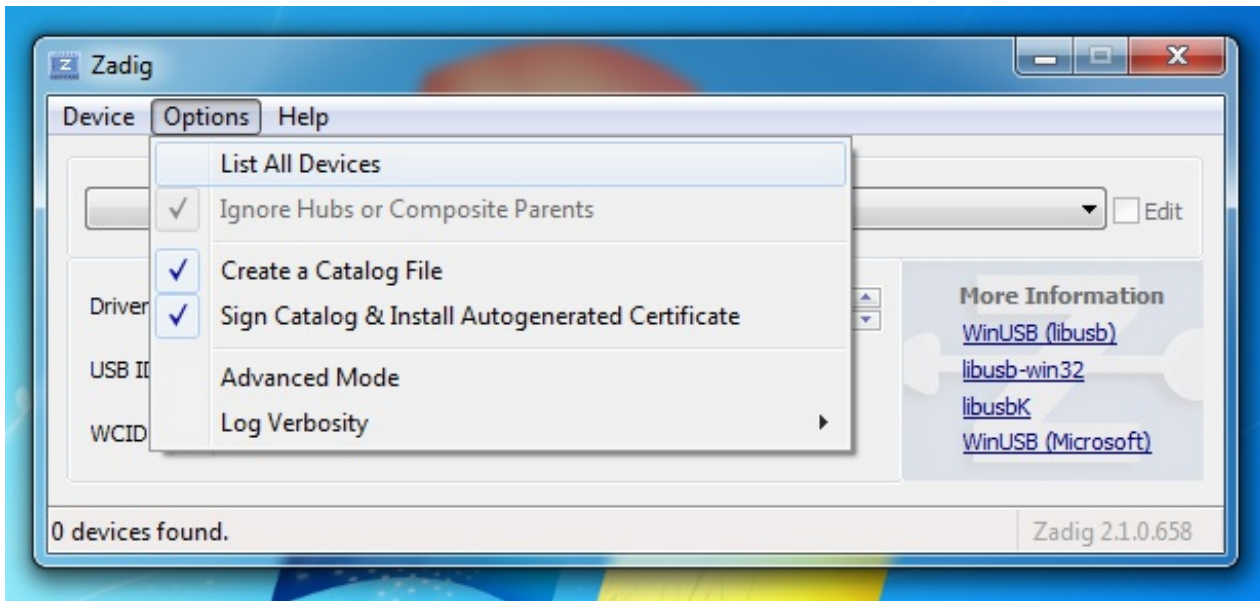

The list box of devices should populate with many devices. Select the USB Serial Converter device shown below.


Note: Make sure to select the device with Driver equal to FTDIBUS and USB ID equal to 0403 6014! If you pick the wrong device you might accidentally uninstall another device's driver and make it inoperable.

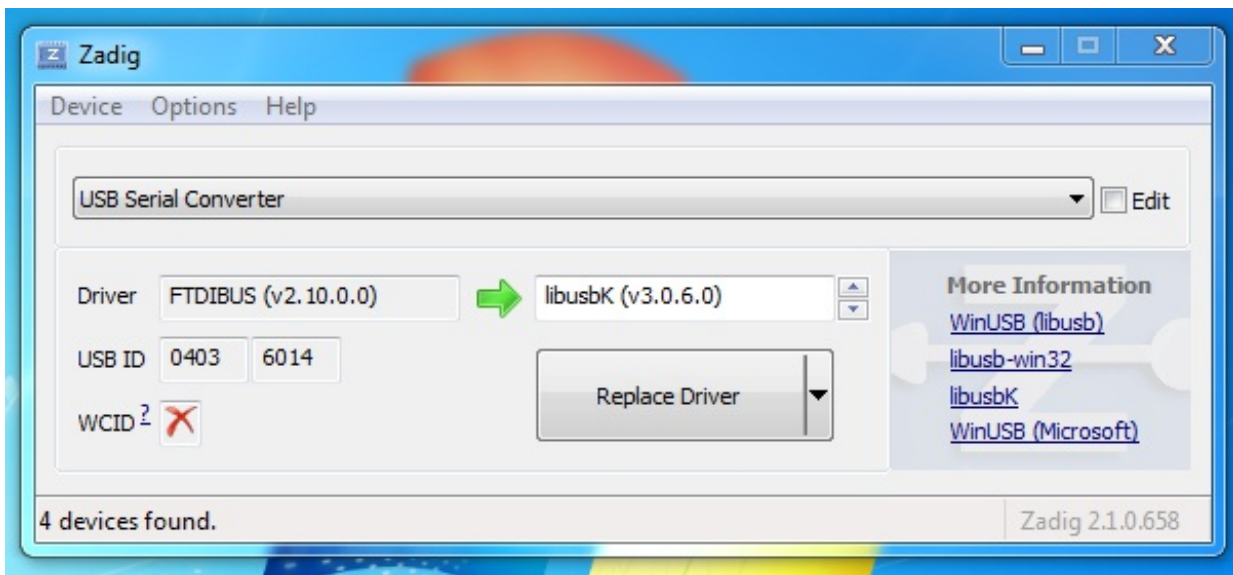

Click the up/down arrows on the driver select box to the right of the green arrow and select the **libusbK** driver as shown above.

Now click the Replace Driver button to replace the FTDI driver with the libusb-based driver. After the driver replacement finishes you can close Zadig tool.

To check that the driver was successfully replaced, open Device Manager from Control Panel or searching in the Start menu. You should see a new top level node **libusbK USB Devices** and the **USB Serial Converter** underneath it as shown below.

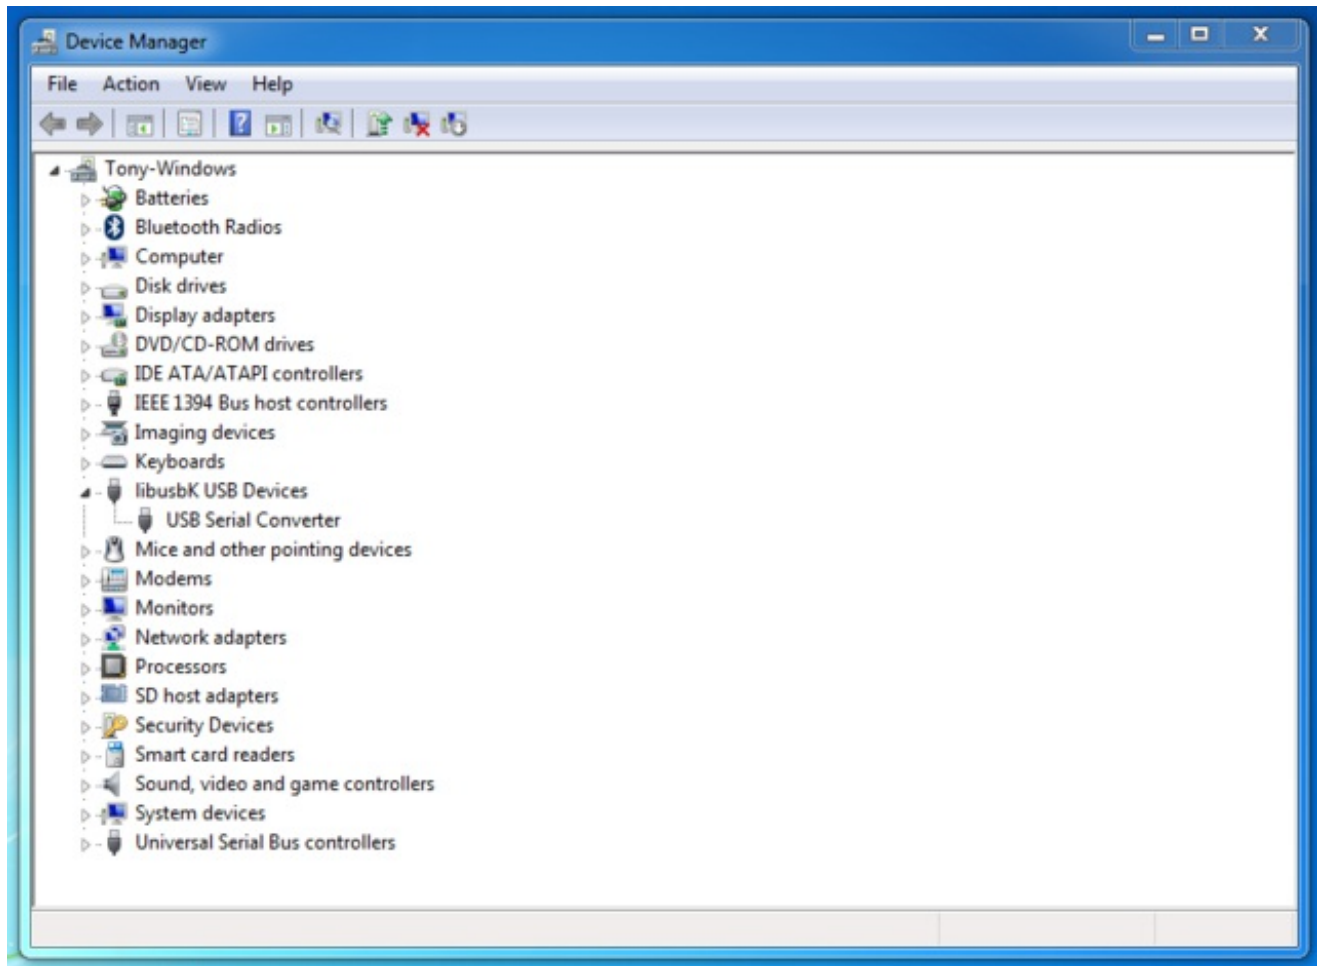

If you see the libusbK node and USB serial device, move on to the next step to install libftdi.

If you don't see the libusbK node, try unplugging and plugging back in the FT232H breakout. If you still don't see the node, run Zadig tool again and follow the steps above again to make sure you replace the FTDI driver for the device with the libusbK driver.

libftdi Install


This step will install libftdi's Python library. Carefully follow the steps below to make sure the library is installed.

Start by downloading the binary version of the libftdi library by clicking the button below. This binary is provided by the [picusb USB resources project](http://adafru.it/eaJ) (<http://adafru.it/eaJ>).

libftdi1-1.0_devkit_mingw32_17Feb2013.zip

<http://adafru.it/eaK>

Unzip the archive and you should see a series of folders like below:

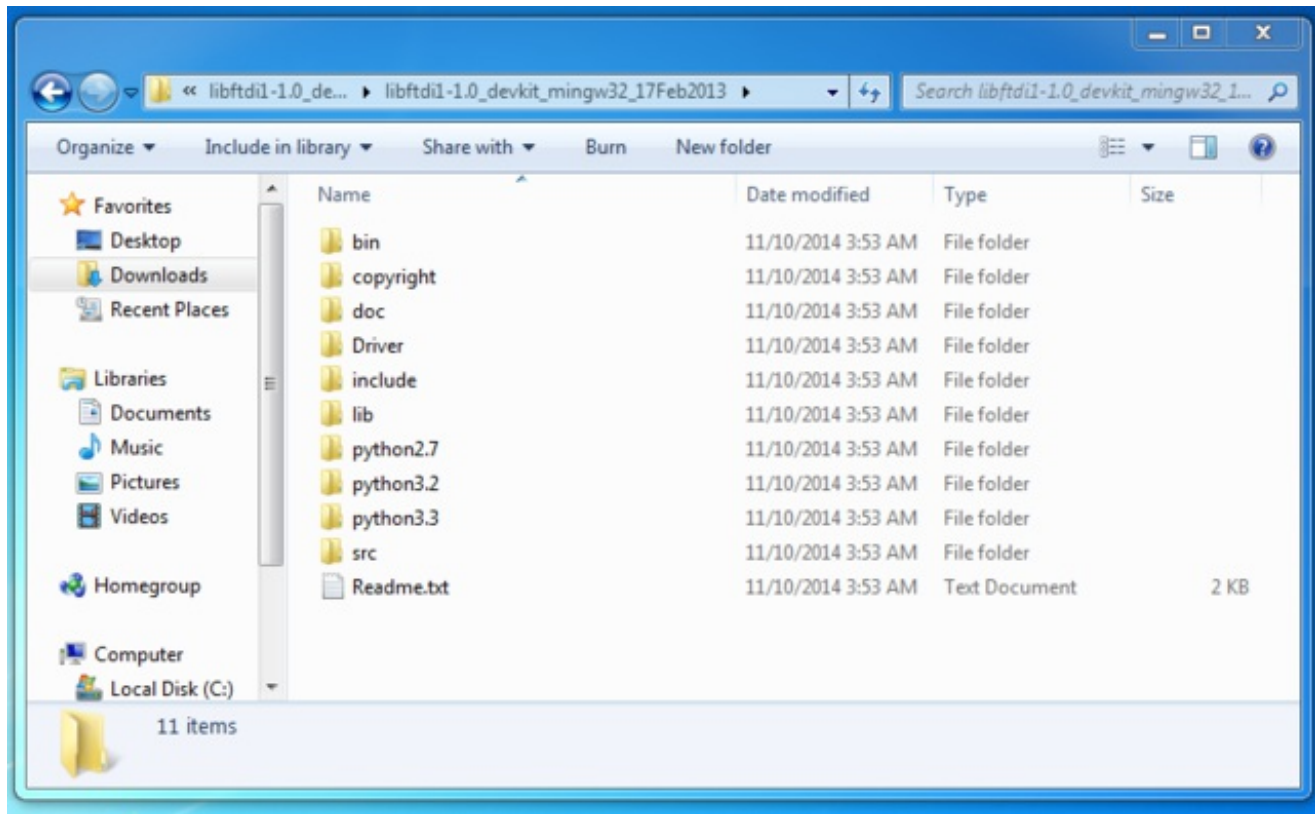

We need to copy some files from libftdi into Python's package directory. Open another Explorer window and navigate to the location you installed Python earlier, typically **C:\python27**. Inside the Python directory navigate to the **Lib > site-packages** folder. Files you copy into this folder will be available globally as packages that your Python scripts can use.


From the libftdi archive folder, copy all the .DLL files from the **bin** folder into the Python **site-packages** folder, specifically:

- **bin\libftdi1.dll**
- **bin\libftdipp1.dll**
- **bin\libgcc_s_dw2-1.dll**
- **bin\libiconv-2.dll**
- **bin\libintl-8.dll**
- **bin\libstdc++-6.dll**
- **bin\libusb-1.0.dll**

Then also copy in the files from the python2.7 folder of the libftdi archive into the Python site-packages folder:

- **python2.7_ftdi.pyd**
- **python2.7_ftdi1.py**

To double check you copied in the right files, your Python site-packages folder should have at least the files below inside it (you might see other files & directories, but don't worry they can be ignored):

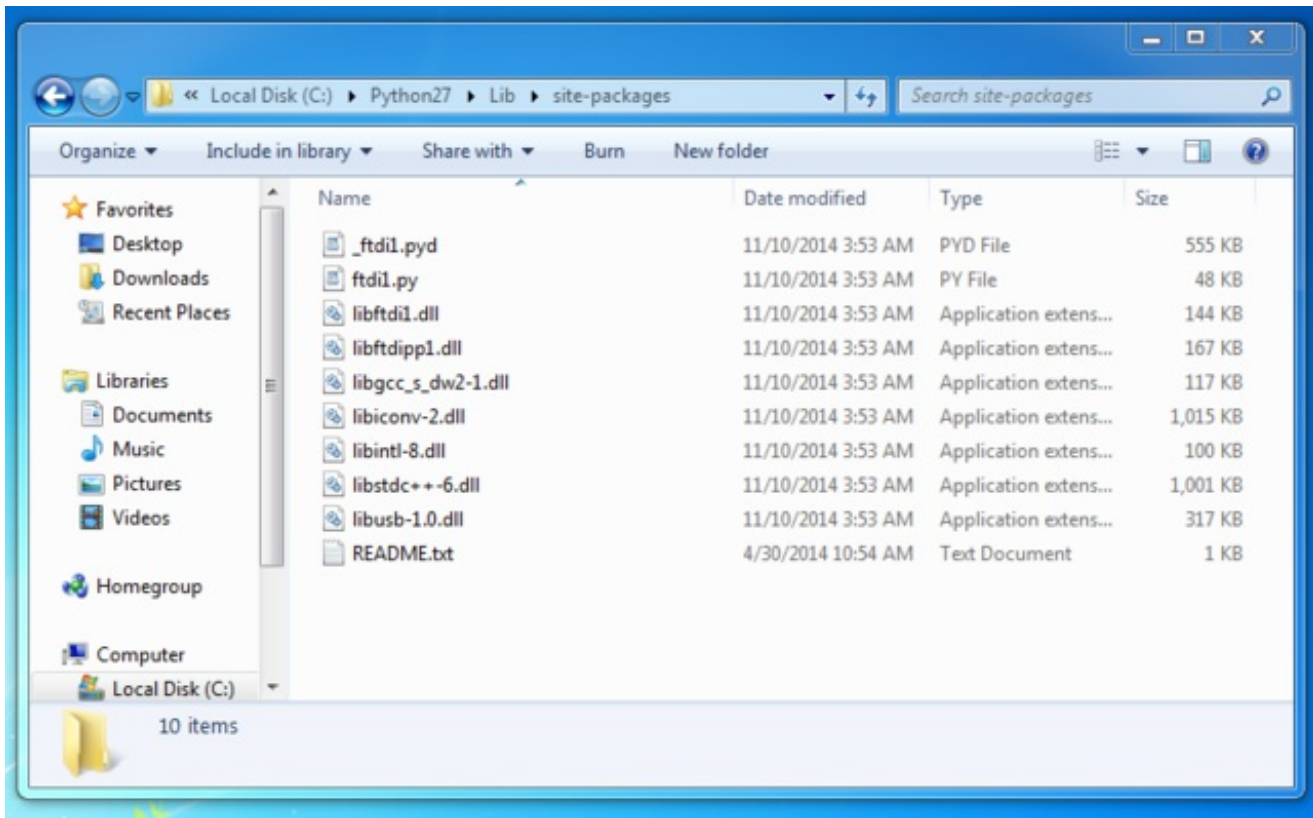

That's all you need to do to install libftdi. Let's move on to install the Adafruit Python GPIO library next.

Adafruit Python GPIO Library Install

Finally let's install the Adafruit Python GPIO library which will allow your Python scripts to access the MPSSE functionality of the FT232H breakout

First download an archive of the library by clicking the button below:

Adafruit Python GPIO Library

<http://adafru.it/eaL>

Unzip the contents and then open a command terminal and navigate to the directory where the library was unzipped. Execute the following command to install the library:

```
python setup.py install
```

Note if you see an error that Python can't be found then make sure you installed Python 2.7 as mentioned at the top of the page, and that it was added to your system path. [Here's more details on how to manually add Python to your system path \(http://adafru.it/eaM\)](http://adafru.it/eaM).

You should see the Python library install itself with text similar to the below:

```
Command Prompt
C:\Users\Tony\Desktop\Adafruit_Python_GPIO>python setup.py install
running install
running bdist_egg
running egg_info
writing Adafruit_GPIO.egg-info\PKG-INFO
writing top-level names to Adafruit_GPIO.egg-info\top_level.txt
writing dependency_links to Adafruit_GPIO.egg-info\dependency_links.txt
reading manifest file 'Adafruit_GPIO.egg-info\SOURCES.txt'
writing manifest file 'Adafruit_GPIO.egg-info\SOURCES.txt'
installing library code to build\bdist.win32\egg
running install_lib
running build_py
creating build
creating build\lib
creating build\lib\Adafruit_GPIO
copying Adafruit_GPIO\FT232H.py -> build\lib\Adafruit_GPIO
copying Adafruit_GPIO\GPIO.py -> build\lib\Adafruit_GPIO
copying Adafruit_GPIO\I2C.py -> build\lib\Adafruit_GPIO
copying Adafruit_GPIO\MCP230xx.py -> build\lib\Adafruit_GPIO
copying Adafruit_GPIO\Platform.py -> build\lib\Adafruit_GPIO
copying Adafruit_GPIO\PWM.py -> build\lib\Adafruit_GPIO
copying Adafruit_GPIO\SPI.py -> build\lib\Adafruit_GPIO
copying Adafruit_GPIO\__init__.py -> build\lib\Adafruit_GPIO
creating build\bdist.win32
creating build\bdist.win32\egg
```


Now let's test if both the libftdi and Adafruit Python GPIO libraries were correctly installed. In the command terminal run Python by executing:

```
python
```

Once the Python interpreter has loaded, type the following at the >>> prompt:

```
>>> import Adafruit_GPIO
>>> import ftdi
```

You should see no response from the Python interpreter after entering each command like below:

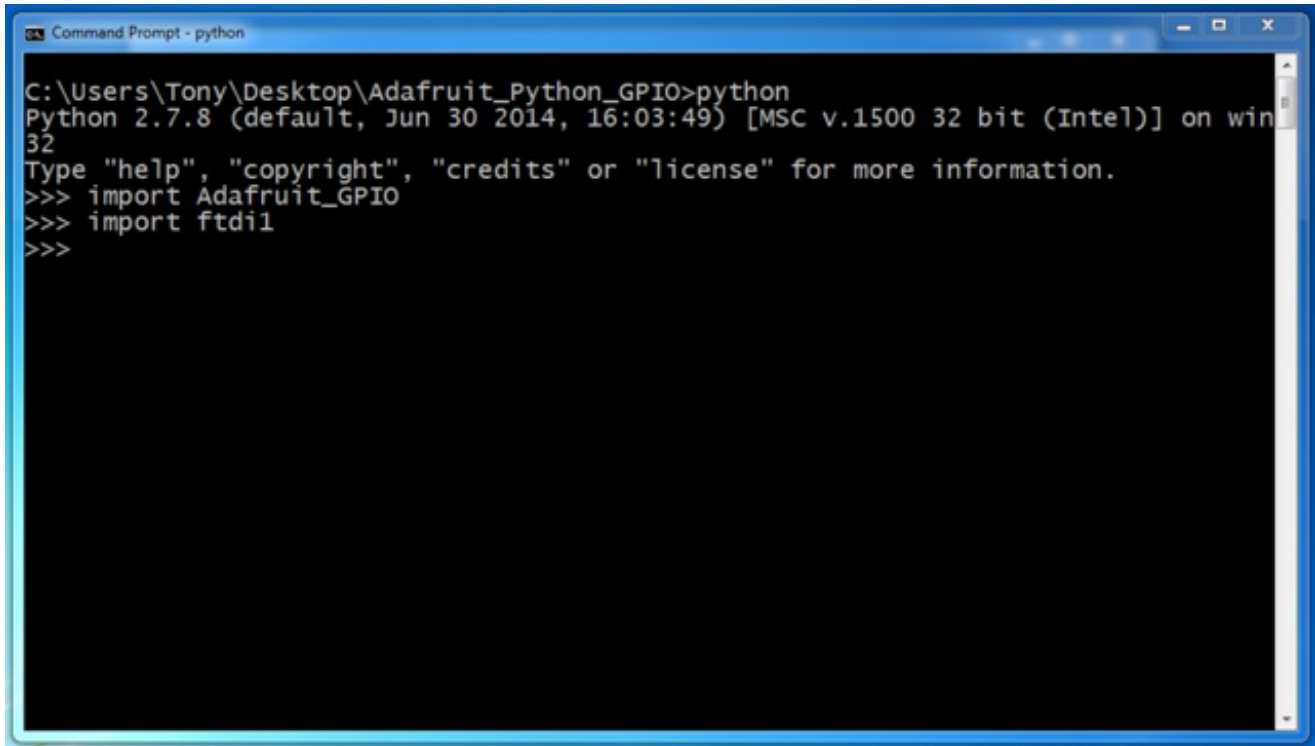

No response from the Python interpreter is a good sign because it means Python was able to successfully load the libraries.

If you see an error message or failure after entering a command, unfortunately something went wrong with the installation of the library. Go back through the steps above and carefully check that nothing was missed. You want to make sure all the libftdi files are copied into the Python site-packages folder, and that the Adafruit Python GPIO library installed itself successfully.

Once you've confirmed Python can load the libraries, exit the Python interpreter by typing:




Congratulations, the MPSSE mode drivers and Python libraries are installed and ready to use! Move on to the next section to see how to use the MPSSE mode to access GPIO, SPI, I2C, etc.


libusb Driver Uninstall

Should you ever want to disable the MPSSE mode for the FT232H and return to its serial UART mode follow the steps below.

First make sure the FT232H breakout is plugged in to the computer. Then open Device Manager and find the **libusbK USB Devices** node and the **USB Serial Converter** child of that node. Right click the device and select Uninstall as shown below:

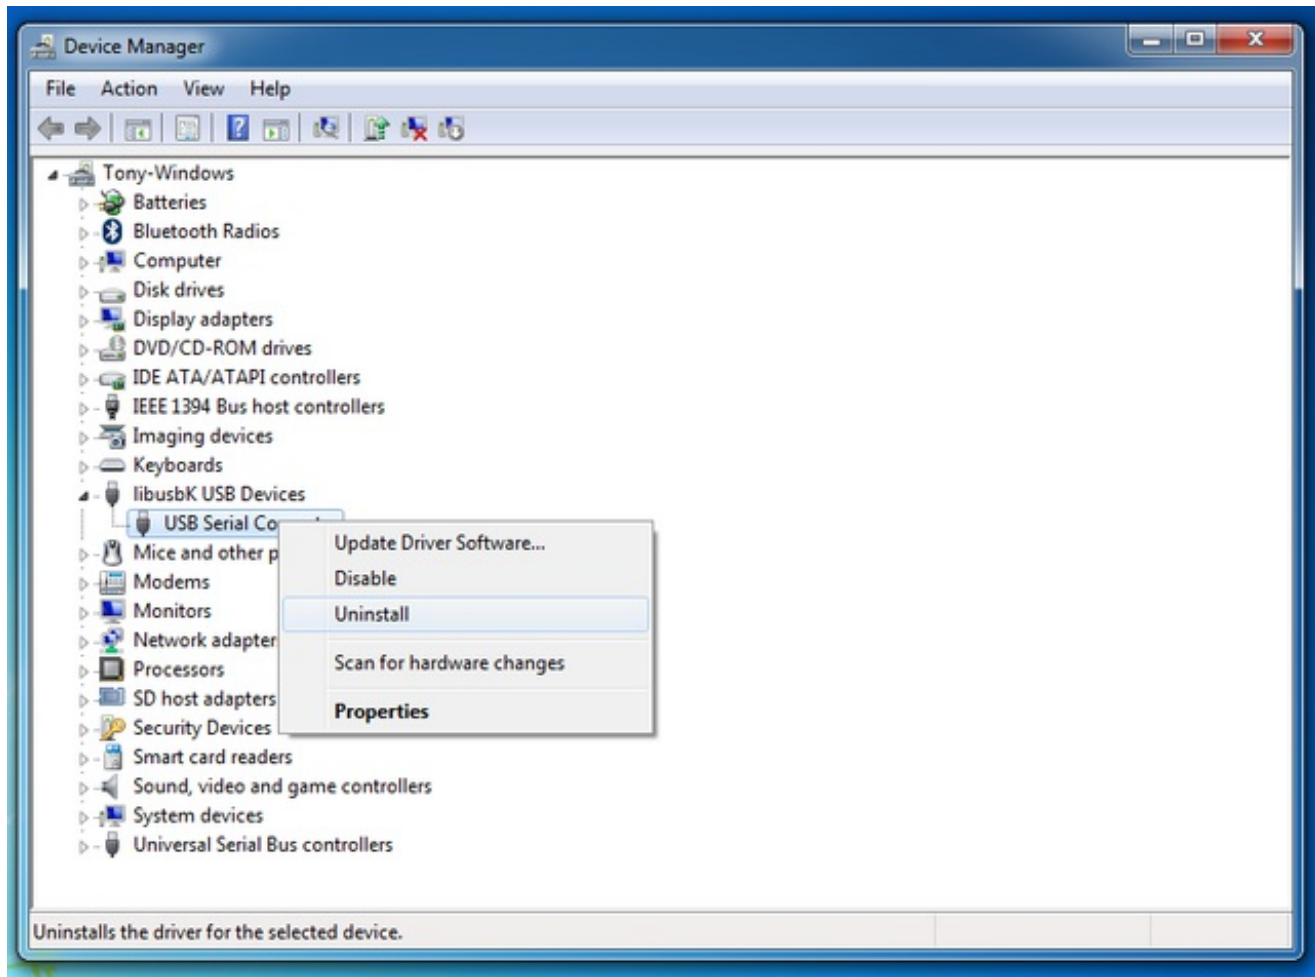

In the dialog that appears make sure the 'Delete the driver software for this device.' option is checked as shown below:

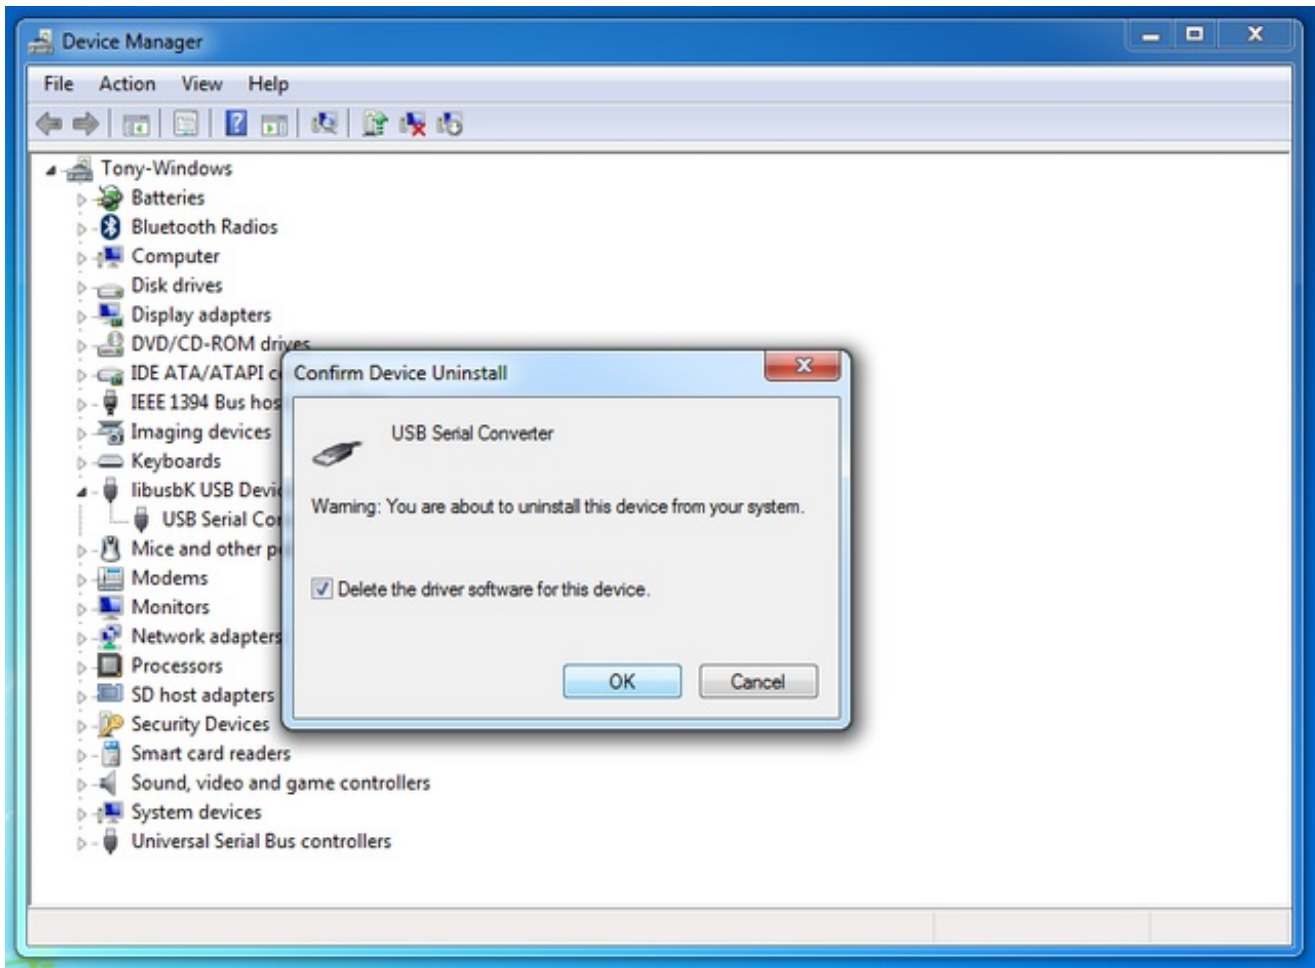

Click **OK** and the libusb driver should be completely uninstalled for the device.

Now unplug the FT232H breakout board and go back to the [Serial UART page \(http://adafruit.it/jFp\)](http://adafruit.it/jFp) to find the instructions for installing the Windows serial driver. Follow those instructions again and you should be set with the device acting as a USB serial UART again.

Mac OSX

To access the MPSSE mode on Mac OSX we need to install libftdi and the Adafruit Python GPIO library. Carefully follow the steps below to install these libraries.

Note that these steps were tested using OSX Mavericks. The steps should work for later versions like Yosemite, but you might need to search for extra help on installing Xcode command line tools below.

First before you get started you will need to make sure you have [Xcode](http://adafru.it/eaN) (<http://adafru.it/eaN>) and the Xcode command line tools installed. This is required to compile and build libraries from source.

Follow the steps in the answer to this [Stackoverflow question](http://adafru.it/df2) (<http://adafru.it/df2>) for a good walkthrough of how to install the Xcode command line tools.

Next install the [Homebrew package manager](http://adafru.it/df3) (<http://adafru.it/df3>) which will be used to install the necessary libftdi dependencies. Follow the installation instructions from the bottom of [Homebrew's homepage](http://adafru.it/df3) (<http://adafru.it/df3>) to install it.

Now run the following commands in a terminal in order to install libftdi and its dependencies:

```
brew install cmake
brew install libusb
brew install avahi
brew install --build-from-source libftdi
mkdir -p ~/Library/Frameworks/Python/site-packages
cp $(brew --prefix libftdi)/libftdi.1.dylib ~/Library/Frameworks/Python/site-packages/homebrew/bin
```

The commands above should complete without any errors. If you do see errors, make sure you have Xcode and Homebrew successfully installed and try again.

Next download the Adafruit Python GPIO library by clicking the button below:

Adafruit Python GPIO Library

<http://adafru.it/eaL>

Unzip the archive and navigate to the folder inside a terminal. Then run the following command to install the library:

```
python setup.py install
```

You should see the Python library successfully install without any errors.

To test the libraries are installed run the following command in a terminal to open the Python interpreter:

```
python
```

At the Python interpreter >>> prompt type the following commands to test loading the libraries:

```
import Adafruit_GPIO
import libftdi
```

You should see no response from the Python interpreter after entering each line. If you do see an error that a module cannot be loaded, go back to the libftdi installation steps above and carefully check they completed successfully.

If there are no errors, congratulations you've successfully installed libftdi and the Adafruit Python GPIO library! Move on to the next section to learn how to access the MPSSE mode GPIO, SPI, I2C, etc.

To quit the Python interpreter enter the following:

```
quit()
```

Linux

To access the MPSSE mode on Linux we need to install libftdi and the Adafruit Python GPIO library. Carefully follow the steps below to install these libraries.

Note that these steps are made for Ubuntu 12.04/14.04 and should work with any Debian-based distribution. If you're using a different distribution you might need to check its package manager for the appropriate commands to install the mentioned dependencies.

In a command terminal execute the following commands to install libftdi and its dependencies:

```
sudo apt-get update
sudo apt-get install build-essential libusb-1.0-0-dev wget make python-dev libcompos-dev libboost-all-dev
wget http://www.intra2net.com/en/developer/libftdi/download/libftdi-1.2.tar.gz
tar xvfz libftdi-1.2.tar.gz
cd libftdi-1.2
mkdir build
cd build
make
make -DMAKE_INSTALL_PREFIX=/usr
make
sudo make install
```

The commands above should complete without any errors. If you do see errors, make sure all the dependencies were installed with the apt-get install command.

Next download the Adafruit Python GPIO library by clicking the button below:

Adafruit Python GPIO Library

<http://adafru.it/eaL>

Unzip the archive and navigate to the folder inside a terminal. Then run the following command to install the library:

```
sudo python setup.py install
```

You should see the Python library successfully install without any errors.

To test the libraries are installed run the following command in a terminal to open the Python interpreter:

```
python
```

At the Python interpreter >>> prompt type the following commands to test loading the libraries:

```
import RPi.GPIO
```

You should see no response from the Python interpreter after entering each line. If you do see an error that a module cannot be loaded, go back to the libftdi installation steps above and carefully check they completed successfully.

If there are no errors, congratulations you've successfully installed libftdi and the Adafruit Python GPIO library! Move on to the next section to learn how to access the MPSSE mode GPIO, SPI, I2C, etc.

To quit the Python interpreter enter the following:

MPSSE Usage

The next sections will walk through examples of using the Adafruit Python GPIO library to use MPSSE functions like GPIO, SPI, and I2C.

Make sure you've first installed the libftdi library & Adafruit Python GPIO library by following the steps for your platform in the previous section!

GPIO

Using the GPIO pins on the FT232H board is easy with the Python GPIO library that was installed. To demonstrate the usage I'll show a simple example of blinking an LED and reading a digital input.


To get started you'll need the following parts:

- Assembled FT232H breakout board.
- One LED of any color.
- A small resistor between ~330-1000 Ohms to limit current through the LED.
- Jumper wires & breadboard.

Connect the parts as follows:

- **FT232H C0** to the **LED anode** (longer leg)
- **LED cathode** (shorter leg) to **one leg of the resistor**.
- **Other resistor leg** to **FT232H GND**.
- **FT232H D7** to **FT232H GND**. This jumper wire will switch between reading a low value or high value on the D7 input by moving it between FT232H GND and 5V.

You can see a photo of this setup below:

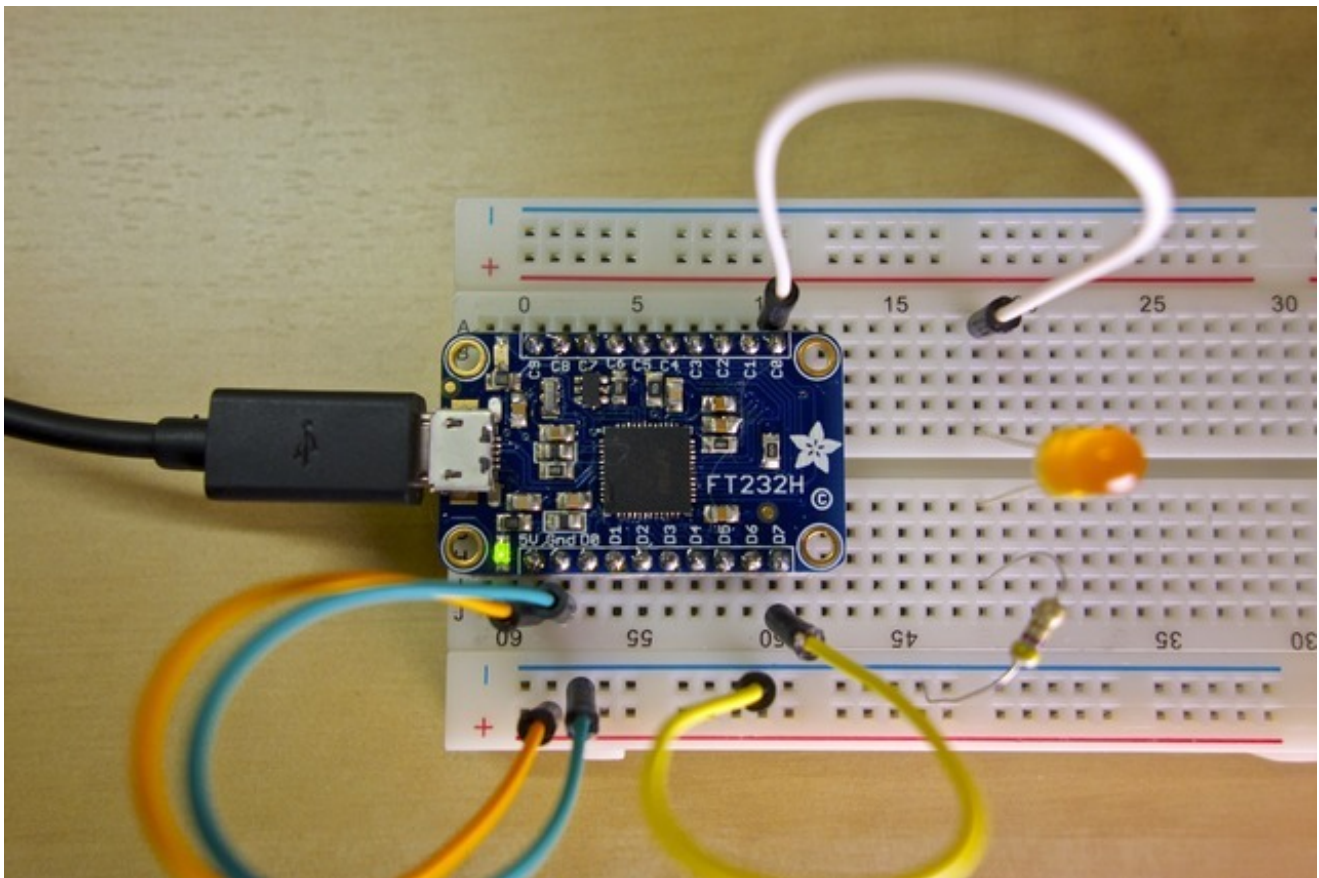

With this configuration pin **C0** will be a digital output that controls if the LED is on or off, depending on

the level of the **C0** output. Pin **D7** will be a digital input that reads if it's at a high level (3-5 volts) or low level (ground).

Now create a file named **gpio_test.py** in a text editor and fill it with the following Python code:

```
# Import standard Python time library.
import time

# Import GPIO and FT232H modules.
import Adafruit_GPIO as GPIO
import Adafruit_GPIO.FT232H as FT232H

# Temporarily disable the built-in FTDI serial driver on Mac & Linux platforms.
FT232H.use_FT232H()

# Create an FT232H object that grabs the first available FT232H device found.
ft232h = FT232H.FT232H()

# Configure digital inputs and outputs using the setup function.
# Note that pin numbers 0 to 15 map to pins D0 to D7, then C0 to C7 on the board.
ft232h.setup(7, GPIO.IN) # Make pin D7 a digital input.
ft232h.setup(8, GPIO.OUT) # Make pin C0 a digital output.

# Loop turning the LED on and off and reading the input state.
print 'Press Ctrl-C to quit.'
while True:
    # Set pin C0 to a high level so the LED turns on.
    ft232h.output(8, GPIO.HIGH)
    # Sleep for 1 second.
    time.sleep(1)
    # Set pin C0 to a low level so the LED turns off.
    ft232h.output(8, GPIO.LOW)
    # Sleep for 1 second.
    time.sleep(1)
    # Read the input on pin D7 and print out if it's high or low.
    level = ft232h.input(7)
    if level == GPIO.LOW:
        print 'Pin D7 is LOW!'
    else:
        print 'Pin D7 is HIGH!'
```

Save the file and then open a command line terminal and navigate to the folder with **gpio_test.py**.
Run the script by executing on Windows:

```
python gpio_test.py
```

Or on Mac OSX or Linux run the script as root by executing:

```
sudo python gpio_test.py
```

You should see the LED start to blink once a second, and the state of the D7 input is also printed. For example if D7 is connected to ground you'll see:

```
Press Ctrl-C to quit
Pin D7 is LOW
Pin D7 is LOW
Pin D7 is LOW
Pin D7 is LOW
```

Try moving the jumper wire for D7 from ground to 5 volts. You should see the input start to read a high value:

```
Pin D7 is HIGH
Pin D7 is HIGH
Pin D7 is HIGH
```

Swap the jumper wire between ground and 5 volts to see the input value change.

Let's look a little more closely at the code to understand how reading and writing digital GPIO works.

```
# Import standard Python time library
import time

# Import GPIO and FT232H modules
import Adafruit_GPIO as GPIO
import Adafruit_GPIO.FT232H as FT232H
```

First the required modules are loaded for this script. The time module will be used to delay for a short period of time.

The **Adafruit_GPIO** and **Adafruit_GPIO.FT232H** modules will be imported with shorter names using the 'as' keyword. These modules have all the logic for reading and writing GPIO on the FT232H.

```
# Temporarily disable FTDI serial drivers on Mac or Linux
FT232H.disable_ft232h()
```

Next the **use_FT232H()** function is called to temporarily disable any FTDI serial drivers. This command is necessary on Mac or Linux platforms because the libftdi library will interfere with the built-in FTDI serial drivers.

You don't really need to run this command on Windows because the FTDI serial driver was disabled using the Zadig tool, however it can't hurt to call the function as it will do nothing on Windows.

```
# Enable an FT232H chip that has been disabled by the use_FT232H() command
GPIO.use_FT232H(FT232H)
```

Now an FT232H object is created and assigned to the `ft232h` variable. This will detect the first available FT232H device connected to the computer and initialize its MPSSE for use with GPIO.

Make sure the **`use_FT232H()`** function was previously called or else this function will fail!

```
# Configure digital inputs and outputs using the setup function
# Note that pin numbers 0-15 map to pins D0 to D7, then C0 to C7 on the board
ft232h.setup(7, GPIO.IN) # Make pin D7 a digital input
ft232h.setup(8, GPIO.OUT) # Make pin C0 a digital output
```

Next the **`setup()`** function is called on the FT232H object. This function takes two parameters, the first is the pin number and the second is either **`GPIO.IN`** or **`GPIO.OUT`** to set the pin as a digital input or output.

Remember the pin numbers are **0 to 7** for **D0 to D7**, and **8 to 15** for **C0 to C7**.

```
# Loop turning the LED on and off and reading the input state
print('Press Ctrl-C to quit')
while True:
    # Set pin C0 to a high level so the LED turns on
    ft232h.output(8, GPIO.HIGH)
    # Sleep for 1 second
    time.sleep(1)
    # Set pin C0 to a low level so the LED turns off
    ft232h.output(8, GPIO.LOW)
    # Sleep for 1 second
    time.sleep(1)
```

Now an infinite loop is entered and the LED is turned on and off using the **`output()`** function on the FT232H object. This function takes two parameters, the first is the pin number and the second is **`GPIO.HIGH/True`** to set the pin to a high level (3.3 volts), or **`GPIO.LOW/False`** to set the pin to a low level (ground).

```
# Read the input on pin D7 and print out if it's high or low
level = ft232h.input(7)
if level == GPIO.LOW:
    print('Pin D7 is LOW')
else:
    print('Pin D7 is HIGH')
```

Finally the digital input is read using the **`input()`** function on the FT232H object. This function takes one parameter, the pin number to read. The function will return **`GPIO.LOW/False`** if the input is at a low level (below about 0.8 volts), and **`GPIO.HIGH/True`** if the input is at a high level (above about 0.8 volts, up to 5V max).

That's all there is to use GPIO on the FT232H board! You can use these GPIO pins to turn on and off devices or LEDs, or read switches or pins from other chips.

Be aware that the output pins on the FT232H are only designed to source a few milliamps of current (up to about 16mA per pin). If you need to drive devices that take a lot of current, look into using transistors to switch higher amounts of current.

SPI

The FT232H's MPSSE is great for generating signals to communicate using the [SPI protocol](http://adafru.it/cEC). The MPSSE can take care of generating a clock signal from about 450hz to 30Mhz, and read & write bytes of data at that frequency. The Python GPIO library that was installed includes a small wrapper around MPSSE functions to simplify the use of reading and writing SPI data.

When using SPI with the FT232H the following pins will have a special meaning:

- **D0 - SCK / Clock signal.** This will be the clock that tells devices when to sample and write data.
- **D1 - MOSI / Data Out.** This will output data from the FT232H to the connected device.
- **D2 - MISO / Data In.** This will read data from the connected device to the FT232H.

One thing to note is that there isn't an explicit chip select / enable pin. You should use any of the free GPIO pins as a dedicated chip select pin and specify that pin when creating the SPI object.

To use SPI with the Python library you need to create an instance of the `Adafruit_GPIO.FT232H.SPI` class. For example see the following code:

```
import Adafruit_GPIO.FT232H as FT232H

# Temporarily disable FTDI serial drivers
FT232H.disable_FTDI_serial_drivers()

# Find the first FT232H device
ft232h = FT232H.FT232H()

# Create a SPI interface from the FT232H using pin 8 (D0) as chip select
# Use a clock speed of only 500K SPI mode 0 and most significant bit first
spi = FT232H.SPI(ft232h, cs=8, max_speed_hz=500000, mode=0, bitorder=FT232H.MSBFIRST)

# Write three bytes of data to the device using the SPI protocol
spi.write(b'\x01\x02\x03')
```

Notice that the code starts by importing the FT232H part of the GPIO library and disabling the FTDI serial drivers as you saw in the GPIO example.

Next the code creates a FT232H object also like was done in the GPIO example.

The next line of code creates a FT232H.SPI object using the FT232H device that was just created. An optional chip select/slave select line is specified using **GPIO 8 / pin C0** with the `cs` parameter value.

Notice too the speed, mode, and bit order of the SPI protocol are specified as parameters of the initializer. Mode 0 and bit order of **MSBFIRST** are actually the default values and do not necessarily


need to be specified here, but it's helpful to show them for clarity.

Possible mode values are 0 through 3 and they correspond to [SPI mode values for AVR processors \(http://adafru.it/cEC\)](http://adafru.it/cEC).

Bitorder can be either **MSBFIRST** for most significant bits to be clocked out first, or **LSBFIRST** for the least significant bits to be clocked out first.

Finally the last line shows how to send 3 bytes of data out the **D1 (MOSI)** line using the **write()** function. The **D0 (SCK)** line will generate a clock signal, and the **D1 (MOSI)** line will clock out bits of data with every clock pulse.

There are also SPI functions you can use to read and transfer (read and write at the same time) data:

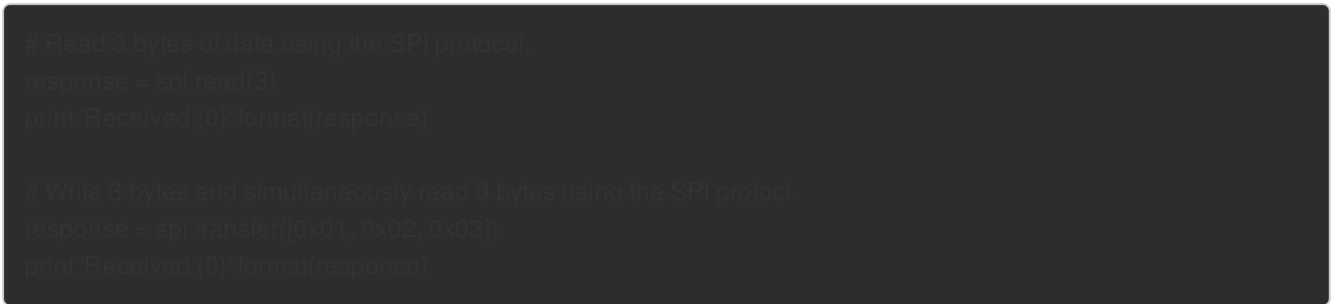

The **read()** function will read the specified number of bytes on the **D2 (MISO)** line (sending clock pulses out **D0 (SCK)** as necessary).

The **transfer()** function is like calling **write()** and **read()** at the same time. The specified array of bytes will be sent out **D1 (MOSI)** while at the same time data will be read from **D2 (MISO)**.

That's all there is to using the SPI protocol with the FT232H and the Adafruit Python GPIO library!

You might also be interested in [this tutorial which shows how to use the FT232H breakout with some Adafruit SPI devices \(http://adafru.it/jFu\)](http://adafru.it/jFu) that have been ported to use Adafruit's Python GPIO library.

Driving NeoPixels With SPI

One interesting use of the SPI protocol is driving the colors of WS2811/WS2812 NeoPixel addressable RGB LEDs. These LEDs don't actually use SPI to communicate, instead they have a [very specific self-clocked signal \(http://adafru.it/jFu\)](http://adafru.it/jFu) for sending pixel color bits. However by using a high speed 6Mhz SPI signal we can 'oversample' the NeoPixel control signal and generate a close approximation of it from the D1 (MOSI) line of the FT232H.

Note that this method of driving NeoPixels is limited to lighting about 340 pixels at a time. This limitation comes from the maximum amount of data that can be sent to the FT232H at one time over the USB bus, about 64 kilobytes of data. Because we're oversampling the NeoPixel control signal each pixel actually takes 24*8 bytes of SPI data (or one byte of SPI data for every bit of pixel data).

To demonstrate lighting NeoPixels with the FT232H breakout you'll need the following parts:

- Assembled FT232H breakout board.


- NeoPixel strip, strand, matrix, etc.
 - Remember at most you can only light about 340 pixels.
- Strong 5 volt power supply to drive the NeoPixels.
 - Each pixel can take up to 60mA, so driving more than a handful of pixels can quickly add up to a few amps or more of current. **Do not try to power more than a couple NeoPixels over the FT232H 5V line!**
- Level converter chip to convert 3.3 to 5 volts **OR** a power diode that can handle the full power of all the NeoPixels.
 - The NeoPixel control signal needs to be at least $0.7 \times V_{cc}$ (power supply voltage) which is just a little too high for the 3.3 volt output of the FT232H breakout. Just like [lighting NeoPixels with the Raspberry Pi \(http://adafru.it/jFv\)](http://adafru.it/jFv) you need to either convert the control signal to 5 volts using a chip like the [74AHCT125 \(http://adafru.it/1787\)](http://adafru.it/1787), or drop the NeoPixel power supply down slightly below 5 volts using a [power diode \(http://adafru.it/755\)](http://adafru.it/755).
- Jumper wires and breadboard.

In this example I'm lighting a 16 pixel ring so I'll use a power diode that can handle 1 amp of current. If you're using more than 16 NeoPixels you'll want a larger power diode, or a level converter chip.

Connect the hardware as follows:

- **FT232H GND** to **power supply ground**.
- **FT232H D1 (MOSI)** to **NeoPixel signal input**.
- **Power supply positive voltage** to **diode anode** (side without the stripe).
- **NeoPixel positive voltage** to **diode cathode** (side with the stripe).
- **NeoPixel ground** to **power supply ground**.

A picture of the hardware setup is below (note I've added a large capacitor to the power supply as [recommended in the NeoPixel Uberguide \(http://adafru.it/iZe\)](http://adafru.it/iZe)):

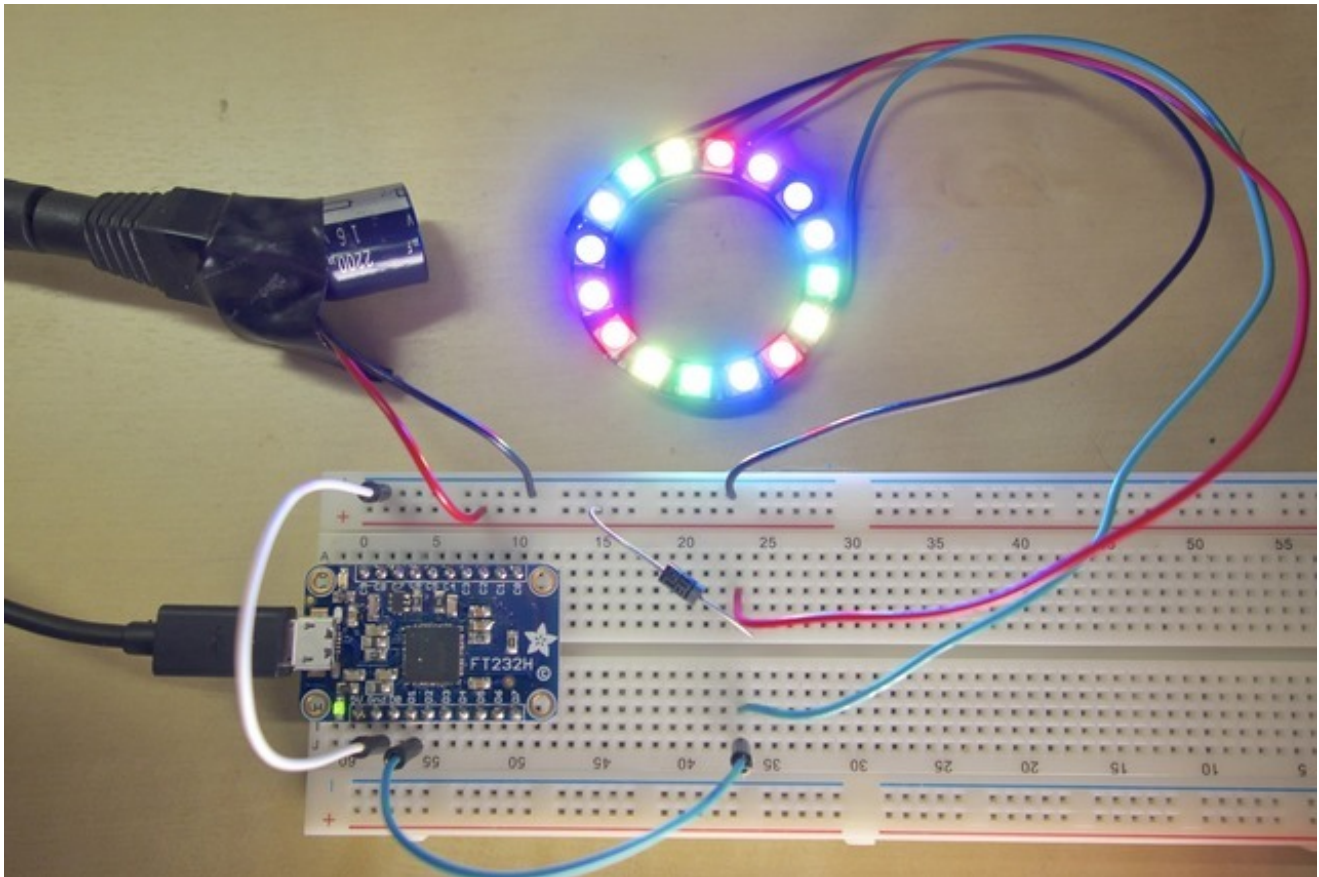

Now create a file **neopixels.py** and fill it with the following code:

```
import time

import Adafruit_GPIO as GPIO
import Adafruit_GPIO_FT232H as FT232H

class NeoPixel_FT232H(object):
    def __init__(self, n):
        # Create an FT232H object.
        self.ft232h = FT232H.FT232H()
        # Create a SPI interface for the FT232H object. Set the SPI bus to 6mhz.
        self.spi = FT232H.SPI(self.ft232h, max_speed_hz=6000000)
        # Create a pixel data buffer and lookup table.
        self.buffer = bytearray(n*24)
        self.lookup = self.build_byte_lookup()

    def build_byte_lookup(self):
        # Create a lookup table to map all byte values to 8 byte values which
        # represent the 6mhz SPI data to generate the NeoPixel signal for the
        # specified byte.
        lookup = []
        for i in range(256):
            value = bytearray()
```

```

for j in range(7, -1, -1):
    if ((i >> j) & 1) == 0:
        value.append(0b11100000)
    else:
        value.append(0b11111000)
    lookup[j] = value
return lookup

```

```

def set_pixel_color(self, n, r, g, b):
    # Set the pixel RGB color for the pixel at position n.
    # Assumes GRB NeoPixel color ordering, but it's easy to change below.
    index = n*24
    self.buffer[index : index+8] = self.lookup[int(g)]
    self.buffer[index+8 : index+16] = self.lookup[int(r)]
    self.buffer[index+16 : index+24] = self.lookup[int(b)]

```

```

def show(self):
    # Send the pixel buffer out the SPI data output pin (D1) as a NeoPixel
    # signal.
    self.spi.write(self.buffer)

```

Run this code when the script is called at the command line.

```

if __name__ == '__main__':
    # Define the number of pixels in the NeoPixel strip.
    # Only up to ~340 pixels can be written using the FT232H.
    pixel_count = 16
    # Create a NeoPixel_FT232H object.
    pixels = NeoPixel_FT232H(pixel_count)
    # Animate each pixel turning red.
    # Loop through each pixel.
    for i in range(pixel_count):
        # Set the pixel color to pure red.
        pixels.set_pixel_color(i, 255, 0, 0)
        # Show the pixel buffer by sending it to the LEDs.
        pixels.show()
        # Delay for a short period of time.
        time.sleep(0.25)
    # Animate each pixel turning pure green.
    for i in range(pixel_count):
        pixels.set_pixel_color(i, 0, 255, 0)
        pixels.show()
        time.sleep(0.25)
    # Animate each pixel turning pure blue.
    for i in range(pixel_count):
        pixels.set_pixel_color(i, 0, 0, 255)
        pixels.show()
        time.sleep(0.25)
    # Animate a pattern of colors marching around the pixels.

```

```
# Create a pattern of colors to display
colors = [(255, 0, 0), (255, 255, 0), (0, 255, 0), (0, 255, 255),
          (0, 0, 255), (255, 0, 255)]
offset = 0
print "Press Ctrl-C to quit"
while True:
    # Loop through all the pixels and set their color based on the pattern
    for i in range(pixel_count):
        color = colors[(i+offset)%len(colors)]
        pixels.set_pixel_color(i, color[0], color[1], color[2])
    pixels.show()
    # Increase the offset to make the colors change position
    offset += 1
    time.sleep(0.25)
```

Save the file and navigate to the folder with it in a terminal, then execute the following in Windows to run the program:

```
python neopixels.py
```

Or on Mac OSX or Linux execute the following to run the program as root:

```
sudo python neopixels.py
```

You should see the NeoPixels light up and animate with different colors. Note that you might need to change the `pixel_count` variable in the main part of the program to match the number of pixels in your NeoPixel strip, circle, matrix, etc.

This code does a couple things at a high level. It first defines a class called `NeoPixel_FT232H`. This class contains some methods and state which control generating the NeoPixel signal with an FT232H board. The second part of the code uses the `NeoPixel_FT232H` class to animate the NeoPixels.

You actually don't need to fully understand the `NeoPixel_FT232H` class code to use it. This code performs the 'oversampling' by using a lookup table to expand each byte of color data into 8 bytes of SPI data that approximates the NeoPixel control signal. The only important thing to know about the `NeoPixel_FT232H` class is that it exposes a **`set_pixel_color()`** function which allows you to set the red, green, and blue color value of a pixel.

Instead let's walk through a bit of the second half of the code that uses the `NeoPixel_FT232H` class:

```
# How to use it when the script is called at the command line
if __name__ == '__main__':
    # Define the number of pixels in the NeoPixel strip
    # Only up to ~340 pixels can be written using the FT232H
    pixel_count = 16
    # Create a NeoPixel_FT232H object
    pixels = NeoPixel_FT232H(pixel_count)
```


This portion of code has an if statement that checks if the program is being run from the command line before executing. This is just a standard Python idiom for defining the main entry point of a program.

Inside the if block you can see the number of pixels is defined and set in the `pixel_count` variable.

Then the `NeoPixel_FT232H` object is created by telling it that number of pixels as its only parameter.

```
# Animate each pixel turning red
# Loop through each pixel
for i in range(pixel_count):
    # Set the pixel color to pure red
    pixels.set_pixel_color(255, 0, 0)
    # Show the pixel buffer by sending it to the LEDs
    pixels.show()
    # Delay for a short period of time
    time.sleep(0.25)
# Animate each pixel turning pure green
for i in range(pixel_count):
    pixels.set_pixel_color(0, 255, 0)
    pixels.show()
    time.sleep(0.25)
# Animate each pixel turning pure blue
for i in range(pixel_count):
    pixels.set_pixel_color(0, 0, 255)
    pixels.show()
    time.sleep(0.25)
```

The next section performs a few simple animations that turn each pixel on with primary colors. You can see a loop is used to go through each pixel and the **`set_pixel_color()`** function is called to the pixel color. This function takes 4 parameters, the first is the number of the pixel (start at 0), and the last 3 parameters are the red, green, and blue color components. Each component should be a value from 0 to 255, where 0 is no color and 255 is maximum color intensity.

After changing the pixel color, the **`show()`** function is called to send the colors to the LEDs. You must call **`show()`** in order to make the NeoPixels light up with the colors you've set previously!

Finally notice the **`time.sleep()`** function is used to delay for a short period of time (a quarter of a second in this case). This sleep function is very useful for animating color changes that should go somewhat slowly.

```
# Animate a pattern of colors marching around the pixels
# Create a pattern of colors to display
colors = [(255, 0, 0), (255, 255, 0), (0, 255, 0), (255, 0, 255),
          (0, 0, 255), (255, 0, 255)]
offset = 0
print "Press Ctrl-C to quit"
while True:
    # Loop through all the pixels and set their color based on the pattern
```

```
for i in range(pixel_count):
    color = colors[(i+offset)%len(colors)]
    pixels.set_pixel_color(i, color[0], color[1], color[2])
    pixels.show()
    # Increase the offset to make the colors change position
    offset += 1
    time.sleep(0.25)
```

Finally the code enters an infinite loop where it animates a rainbow of colors marching across the pixels. This code uses the same **set_pixel_color()** function, but has a little extra logic to pick a color from a list and increase the offset of chosen colors every loop iteration. Also notice the **show()** function is again called after updating pixel colors in order to make the LEDs light up with the desired colors.

That's all there is to controlling NeoPixels with SPI from the FT232H breakout! Feel free to use the code above in your own NeoPixel projects!

I2C

The [I2C protocol \(http://adafru.it/eaR\)](http://adafru.it/eaR) is another popular protocol for communicating with sensors and devices. I2C is more complex and sometimes slower than SPI, but only requires two data lines (and a ground) which is desirable in some situations. Luckily the MPSSE component of the FT232H can implement the I2C protocol so you can speak to these devices with the FT232H breakout.

To use I2C with the Adafruit Python GPIO library and the FT232H board you'll need to setup your circuit in a special way. In particular you'll need to tie the **D1** and **D2** pins together with a jumper wire. One of the pins will be read by the FT232H as an input, and the other pin will be used as an output. When tied together both these pins form the **SDA** or data line for I2C.

The **D0** pin alone will be the **SCL** clock line for I2C.

The second thing you'll need to do with your circuit is add explicit pull-up resistors from **SDA** & **SCL** on the FT232H up to 3.3 or 5 volts. This is necessary because the FT232H does not have pull-up resistors built in to these lines as it is a very general purpose chip. I recommend using 4.7 kilo-ohm resistors as these pull-ups.

To summarize, for using I2C you need to setup your hardware as follows:

- Connect FT232H **D1** and **D2** together with a jumper wire. This combined connection is the I2C **SDA** data line.
- Add a 4.7 kilo-ohm resistor from the I2C **SDA** data line (pins **D1** and **D2** above) up to FT232H 5V.
- Add a 4.7 kilo-ohm resistor from FT232H **D0** up to FT232H 5V. This pin **D0** is the I2C **SCL** clock line.

Software Usage

To use I2C with the Adafruit Python GPIO library you'll need to create an **Adafruit_FT232I2CDevice** instance. This object takes as a parameter to its initializer the FT232H object that represents your FT232H chip, and the address of the I2C device to communicate with using the chip.

For example the code below creates an I2C device for a device with address 0x70:

```
import sys
import time
import Adafruit_FT232H as FT232H

# Create an FT232H object
ft232h = FT232H(FT232H.DEVID_DEFAULT, FT232H.SWIFT)

# Find the I2C FT232H device
i2c = FT232H.I2C(ft232h)
```

At this point the I2CDevice instance is ready for reading and writing simple 8 and 16 bit values from registers. The interface on the I2CDevice class for reading and writing is exactly the same as the [interface on the Raspberry Pi Python I2C code \(http://adafru.it/ebW\)](http://adafru.it/ebW), so you can examine code which is written for the Pi and use it with very few changes on the FT232H.

For example to read a 16 bit register value and write an 8 bit register value to the device the code might look like:

```
# Read a 16 bit unsigned little endian value from register 0x02
response = i2cdev.read(0x02, 2)

# Write a 8 bit value to register 0x02
i2cdev.write(0x02, 0x4B)
```

That's all there is to using I2C with the Adafruit Python GPIO library and the FT232H board!

You might also be interested in [this tutorial which shows how to use the FT232H breakout with some Adafruit I2C devices \(http://adafru.it/jFt\)](http://adafru.it/jFt) that have been ported to use Adafruit's Python GPIO library.

Other I2C Libraries

Note that there are other libraries you might consider using for I2C communication with the FT232H.

You can use [libmpsse \(http://adafru.it/df5\)](http://adafru.it/df5) to speak the I2C protocol from C or Python code. See [this guide on using a color sensor \(http://adafru.it/jFw\)](http://adafru.it/jFw) for more information and code to use libmpsse and an I2C device.

Another alternative is the libMPSSE-I2C library that uses the FTDI D2XX drivers. [See this application note for more details on using libMPSSE-I2C \(http://adafru.it/eaT\)](http://adafru.it/eaT).

I2C Device Enumeration

You can run the following script to enumerate all possible I2C devices, kind of like the `i2cdetect` command on Linux. The script works by enumerating each possible I2C address (ignoring a few reserved ones) and checking if any device on the bus sends an ACK for the address.

```
import Adafruit_I2C as I2C
import sys

# Temporarily disable FTDI serial drivers
FT232H.use_FT232HL()

# Find the first FT232H device
i2cdev = I2C(I2Cdev.FT232H)
```

```
print 'Scanning all I2C bus addresses...'
# Enumerate all I2C addresses
for address in range(127):
    # Skip I2C addresses which are reserved
    if address <= 7 or address >= 120:
        continue
    # Create I2C object
    i2c = FT232RL.I2CDevice(ft232h, address)
    # Check if a device responds to this address
    if i2c.ping():
        print 'Found I2C device at address 0x{0:02X}'.format(address)
print 'Done!'
```


More Info

Phew, there are a lot of features on the FT232H breakout! In fact more features than have been covered in this guide. Check out some of the resources below for information on more things you can do with the FT232H:

- [Official FT232H Datasheet \(http://adafru.it/eav\)](http://adafru.it/eav)
 - The reference for all information about the FT232H. You should consider at least skimming this document, or even reading it in depth in order to understand all of the chip's capabilities.
- [MPSSE Command Reference \(http://adafru.it/eaU\)](http://adafru.it/eaU)
 - This reference details the low-level commands that control the MPSSE component of the FT232H chip.
- [FTDI Utilities \(http://adafru.it/eaV\)](http://adafru.it/eaV)
 - Check out the FT PROG tool for a utility that allows you to write the EEPROM on the FT232H breakout and control the C8 and C9 pin functionality. These pins can be configured to drive status LEDs, generate limited waveforms, or just act as a high or low signal. Check the datasheet for more information on all of the parameters that the EEPROM can control. Note that FT PROG unfortunately is only supported on Windows.
If you're planning to use FT PROG be sure to see the note about erasing the EEPROM further below!
- [FTDI App Notes \(http://adafru.it/eaW\)](http://adafru.it/eaW)
 - Search for FT232H or MPSSE on the page in order to find many useful app notes for using the FT232H to interface with different serial protocols.
- [libftdi \(http://adafru.it/df4\)](http://adafru.it/df4)
 - libftdi is a nice open source alternative to FTDI's binary drivers. You can find more details here about interacting with the FT232H at a low level using libftdi.
- [libmpsse \(http://adafru.it/df5\)](http://adafru.it/df5)
 - This is a nice library to access the MPSSE functionality of the FT232H, and is an alternative to the Python GPIO library shown in this guide. You might check out this library if you find the Python GPIO library is too limited.
- [OpenOCD Hardware \(http://adafru.it/eaX\)](http://adafru.it/eaX)
 - If you're doing development with ARM chips the OpenOCD debugger tool is invaluable for stepping through the execution of chips using the JTAG protocol. FTDI chips with an MPSSE like the FT232H can even speak JTAG and work with OpenOCD for on-chip debugging.

Erase EEPROM For Programming With FT_PROG

To use the FT_PROG programming tool from FTDI you might need to erase the EEPROM of the

FT232H to put it into a state where FT_PROG can detect the device. To do this you can use a small eeprom command line tool from libftdi by following the steps below. Note that these steps are for Windows users (since FT_PROG is only usable on Windows).

First connect your FT232H board to the machine and [follow the Zadig tool steps here \(http://adafru.it/jFx\)](http://adafru.it/jFx) to enable the libusb-based driver for the FT232H board.

Once libusbK is enabled as the driver for the FT232H then [download the libftdi Windows binaries from here \(http://adafru.it/fcS\)](http://adafru.it/fcS) (at the time of this writing you want the **libftdi1-1.1_devkit_x86_x64_21Feb2014.zip** archive). Unzip this archive and there should be a **bin32** and **bin64** subdirectory with a **eeeprom.exe** and other command line tools. Open a command line terminal and navigate to the appropriate directory for your system (32 or 64-bit), then run the following command to erase the EEPROM on any connected FT232H board:



Once erased the libusb driver needs to be uninstalled for the device to make it available for FT_PROG again. [Follow the steps here \(http://adafru.it/jFx\)](http://adafru.it/jFx) to use device manager to uninstall and remove the driver for the FT232H board.

Once the libusb driver is uninstalled unplug the FT232H from the machine and plug it back in again. Run FT_PROG, click the scan button (magnifying glass) and the FT232H should be detected.


Downloads

Files

- EagleCAD PCB files on GitHub (<http://adafru.it/p4B>)
- Fritzing object in Adafruit Fritzing library (<http://adafru.it/aP3>)

Schematic

(Click to embiggen)

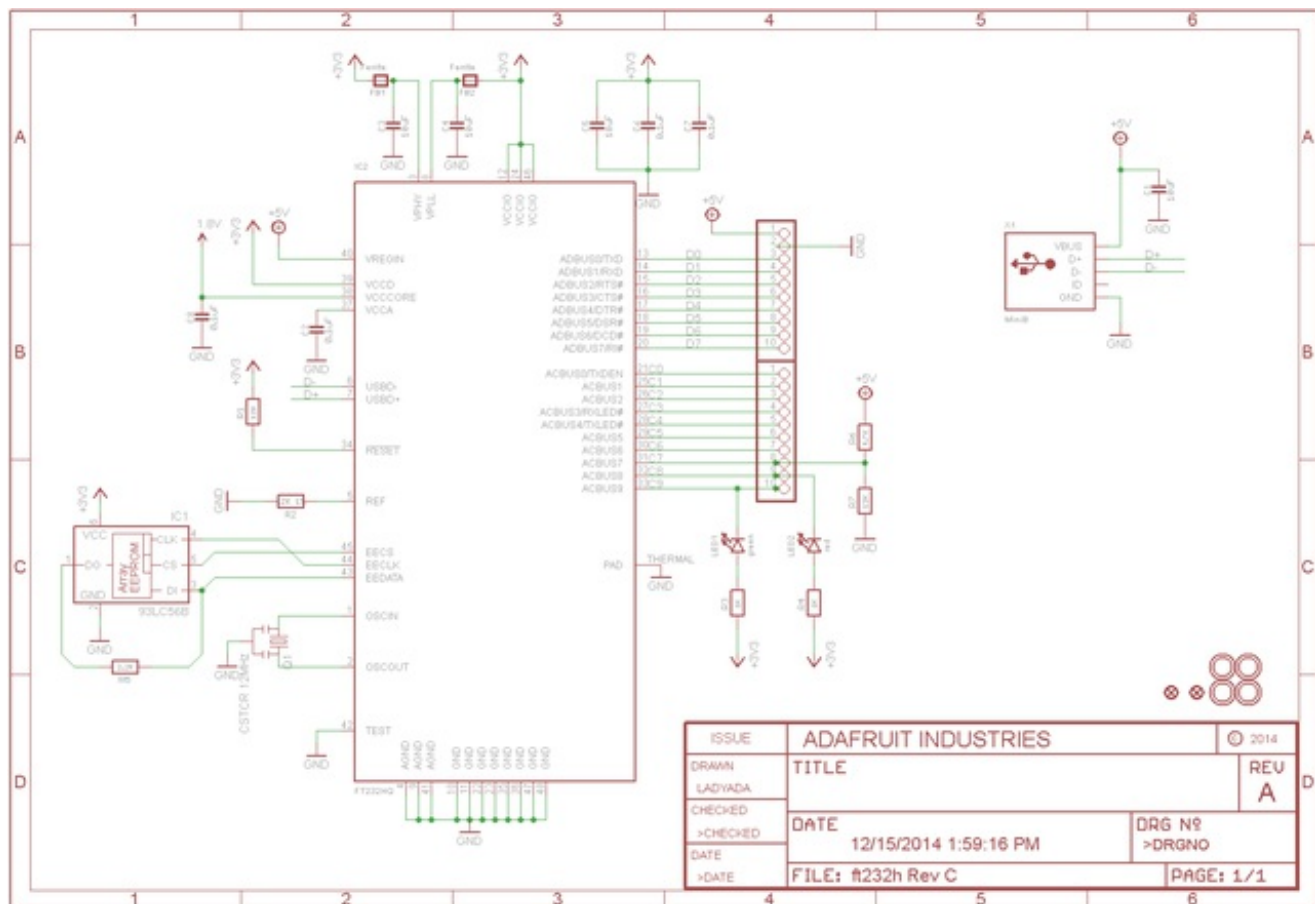

Fabrication Print

Dimensions in inches

