


Full Speed USB (USBFS)

1.30

Features

- USB Full Speed device interface driver
- Support for interrupt and control transfer types
- Runtime support for descriptor set selection
- Optional USB string descriptors
- Optional USB HID class support

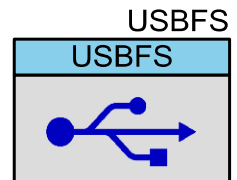

General Description

The USBFS component provides a USB full speed Chapter 9 compliant device framework. The component provides a low level driver for the control endpoint that decodes and dispatches requests from the USB host. Additionally, this component provides a USBFS customizer to enable easy descriptor construction.

You have the option of constructing an HID based device or a generic USB Device. You select HID (and switching between HID and generic) by setting the Configuration/Interface descriptors.

When to use a USBFS

Use the USBFS component when you want to provide your application with a USB 2.0 compliant device interface.

Quick Start

1. Drag a USBFS component from the Component Catalog onto your design.
2. Notice the clock errors in the Notice List window; double-click on an error to open the System Clock Editor.
3. Configure the following clocks:
 - **ILO**: Select 100 kHz.
 - **IMO**: Select Osc 24.000 MHz.
 - **PLL**: Enter Desired 33 MHz.
 - **USB**: Enable and select IMOX2 – 48.000 MHz.

PRELIMINARY

4. Select **Build** to generate APIs; refer to the Sample Firmware Source Code section for an example demonstrating the basic functionality of the USBFS component, as well as the basic set-up instructions.

Input/Output Connections

This section describes the various input and output connections for the USBFS. An asterisk (*) in the list of I/O's states that the I/O may be hidden on the symbol under the conditions listed in the description of that I/O.

sof – Output *

The Start-of-Frame output allows endpoints to identify the start of the (micro) frame and synchronize internal endpoint clocks to the host. This output is visible if the "out_sof" parameter in advanced configuration tab is set to enable.

Component Parameters

Drag a USBFS component onto your design and double-click it to open the Configure USBFS dialog.

The USBFS Component uses a form driven USBFS dialog to define the USB descriptors for the application. From the descriptors, the customizer personalizes the component.

The component is driven by information generated by the USBFS customizer. This customizer facilitates the construction of the USB descriptors and integrates the information generated into the driver firmware used for device enumeration. The USBFS component does not function without first running the wizard and selecting the appropriate attributes to describe your device. The code generator takes your device information and generates all of the needed USB Descriptors.


The Configure USBFS dialog contains the following tabs and settings:

PRELIMINARY



Device Descriptor Tab

Device Descriptor

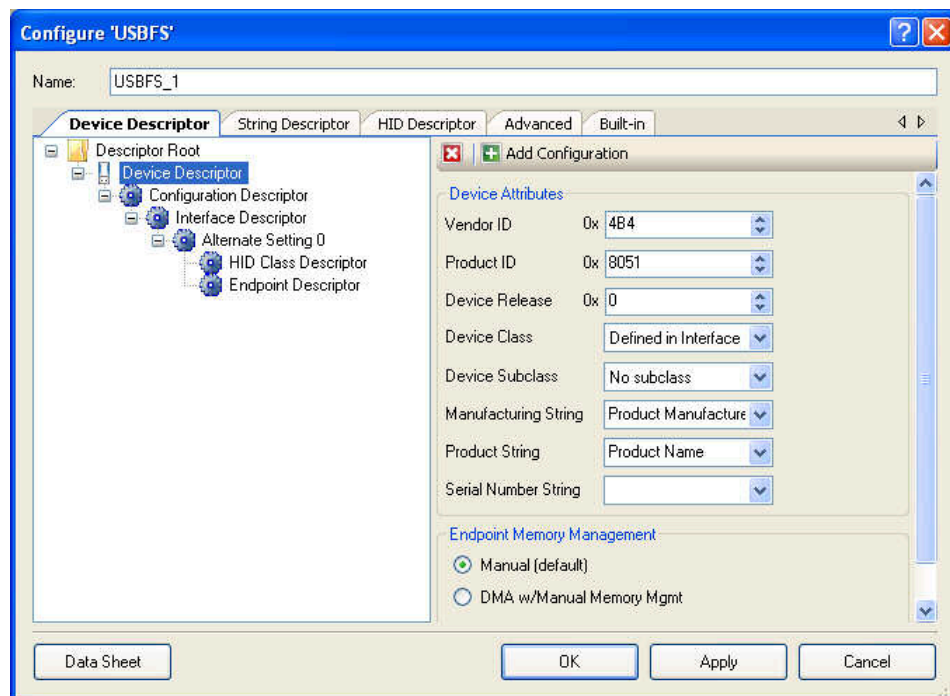

- Vendor ID – Your Company USB Vendor ID (obtained from USB-IF)
- Product ID – Your Specific Product ID
- Device Release – Your Specific Device Release (Device ID)
- Device Class – Device Class is defined in Interface Descriptor or it is Vendor Specific
- Device Subclass – Dependent upon Device Class
- Manufacturing String – Manufacturer Specific Description String to be displayed when the device is attached.
- Product String – Product specific Description String to be displayed when the device is attached.
- Serial Number String

Endpoint Memory Management

Some applications can benefit from using Direct Memory Access (DMA) to move data into and out of the endpoint memory buffers.


- Manual (default) – Select this option to use LoadInEP/ReadOutEP to load and unload the endpoint buffers.



PRELIMINARY

- DMA w/Manual Memory Management – Select this option to expose the DMA interface registers, in addition to the LoadInEP/ReadOutEP functions.

Configuration Descriptor

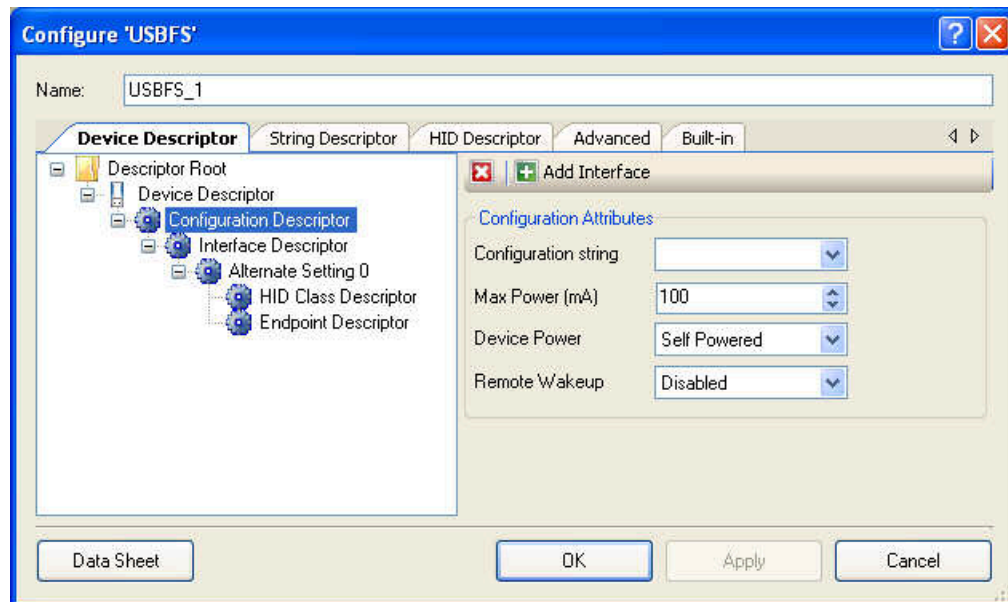

- Configuration string
- Max Power (mA) Enter the maximum power consumption of the USB device from the bus in this specific configuration when the device is fully operational.

Note A device configuration reports whether the configuration is bus-powered or self-powered. Device status reports whether the device is currently self-powered. If a device is disconnected from its external power source, it updates device status to indicate that it is no longer self-powered. A device may not increase its power draw from the bus, when it loses its external power source, beyond the amount reported by its configuration.


- Device Power – Bus Powered or Self Powered Device. The USBFS does not support both usages simultaneously.
- Remote Wakeup – Enabled or Disabled

PRELIMINARY



Interface Descriptor


This level is used to add and delete Interface Alternate Settings. The interfaces are configured in the Alternate Setting.

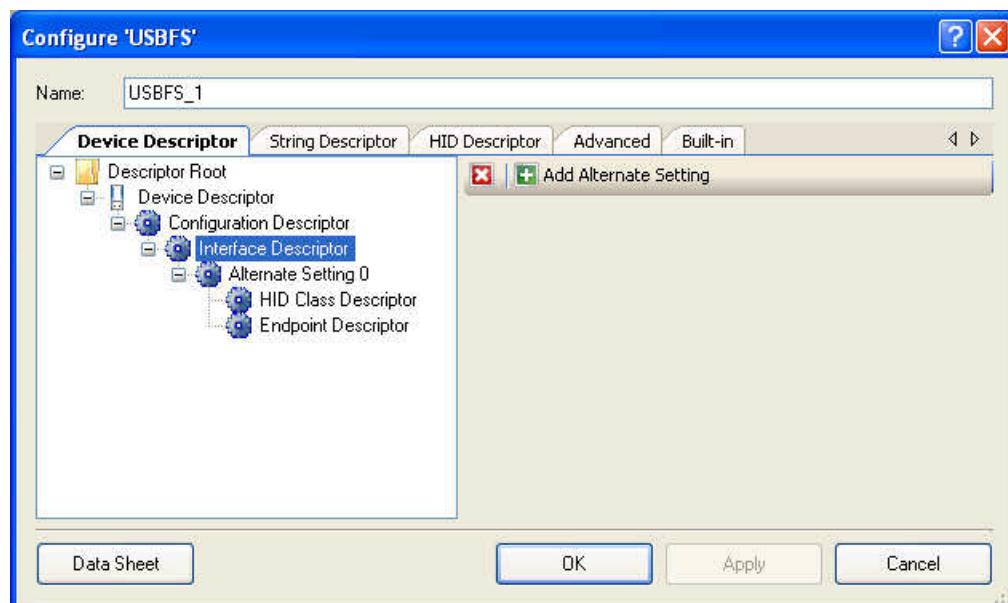

Alternate Setting 0 is automatically provided for you to configure your device. If your device will use isochronous endpoints it is important to note that the USB 2.0 specification requires that all device default interface settings must not include any isochronous endpoints with non-zero data payload sizes (specified via Max Packet Size in the endpoint descriptor).

For isochronous devices you should use an Alternate interface setting other than the default Alternate Setting 0, to specify non-zero data payload sizes for isochronous endpoints. Additionally, if your isochronous endpoints have a large data payload size, it is recommended that additional alternate configurations or interface settings be used to specify a range of data payload sizes. This increases the chance that the device can be used successfully in combination with other USB devices.

Interface Descriptor—Alternate Settings

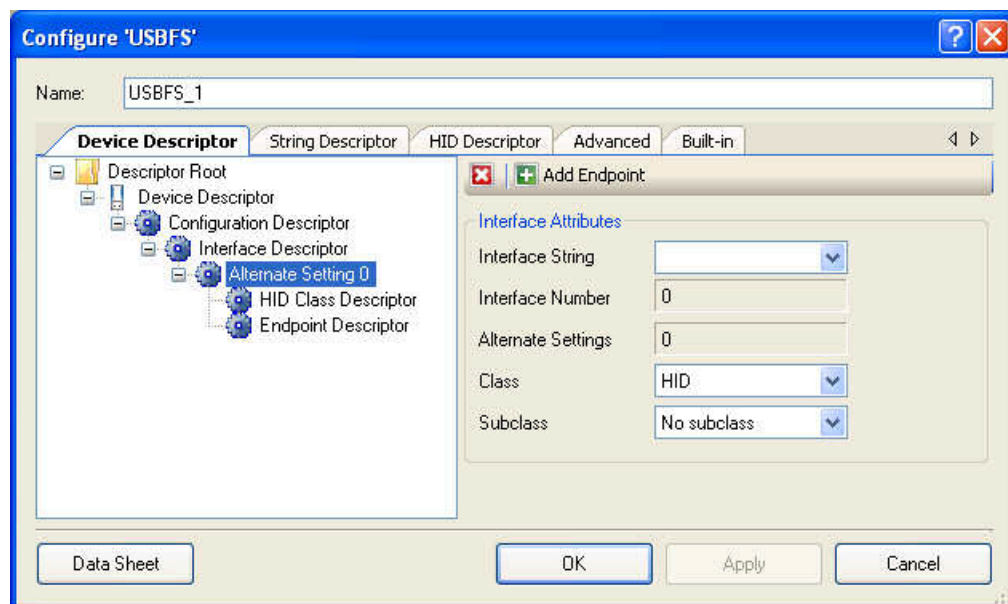


- Interface String
- Interface Number—The interface number is computed by the customizer
- Alternate Settings—The alternate setting is computed by the customizer
- Class – HID, Vendor Specific or Undefined
- Subclass – Dependent upon the selected class

Note String Descriptors are optional. If a device does not support string descriptors, all references to string descriptors within the device, configuration and interface descriptors must be set to zero.

PRELIMINARY




Endpoint Descriptor

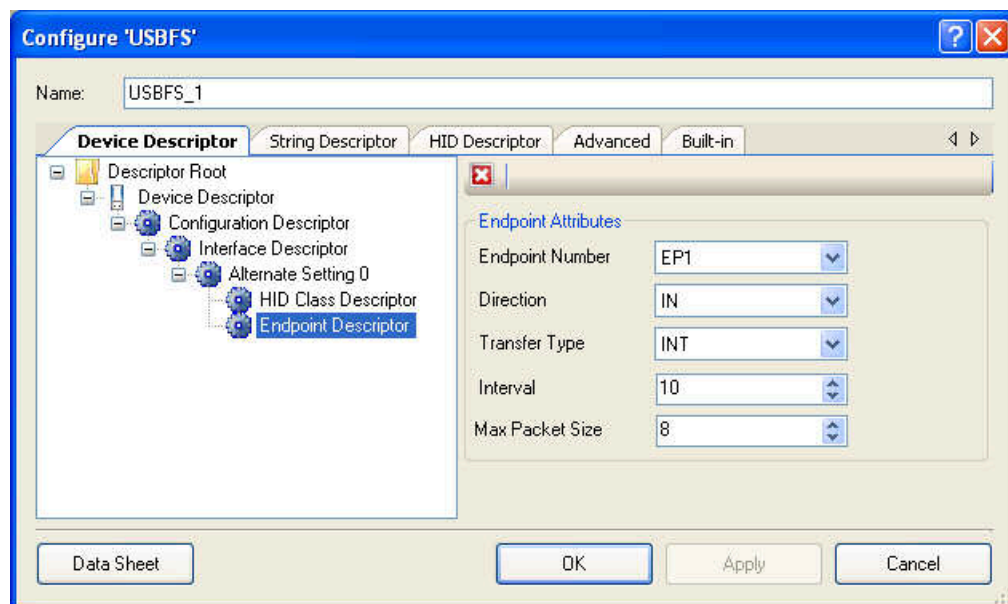

- Endpoint Number
- Direction – Input or Output. USB transfers are host centric. Therefore IN refers to transfers to the host; OUT refers to transfers from the host.
- Transfer Type – Control, Interrupt, Bulk, or Isochronous Data transfers
- Interval (ms) – Polling interval specific to this endpoint. A full-speed endpoint can specify a desired period from 1 ms to 255 ms.
- Max Packet Size (bytes) – For a full speed device the Max Packet Size is 64 bytes for Bulk endpoints and 1023 bytes for Isochronous endpoints.

String Descriptor Tab

String Descriptors

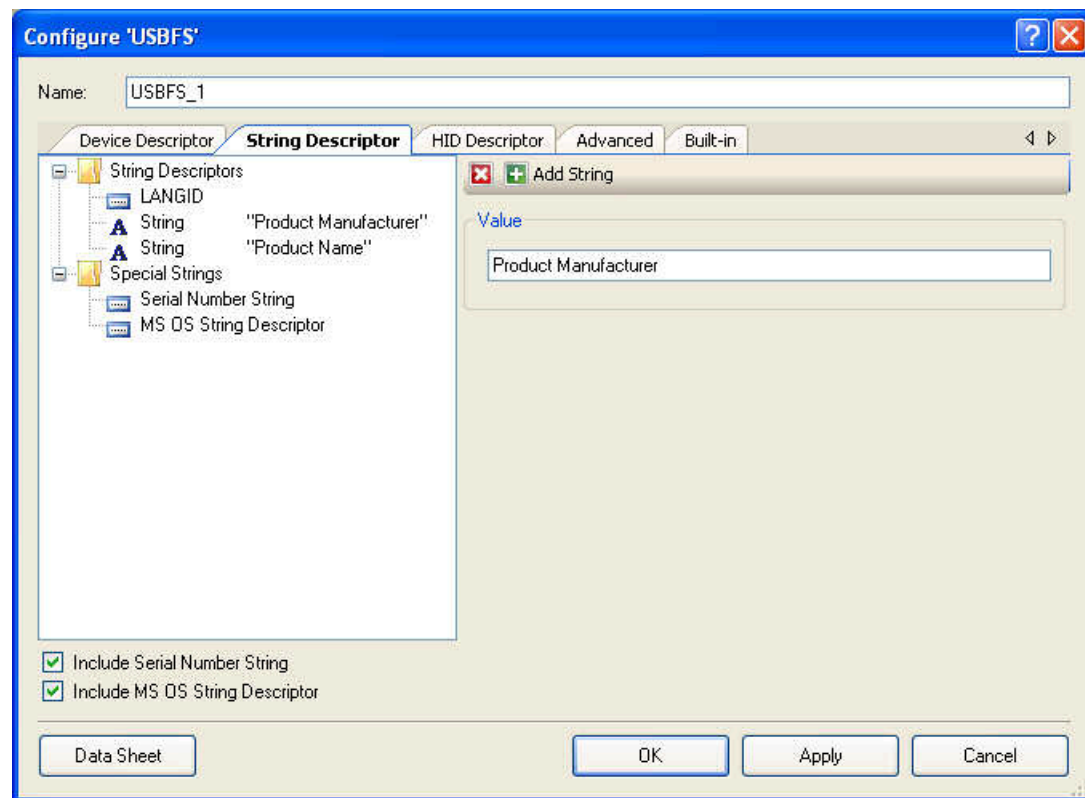


- LANGID -- Select Language
- String -- Value

PRELIMINARY




Serial Number String

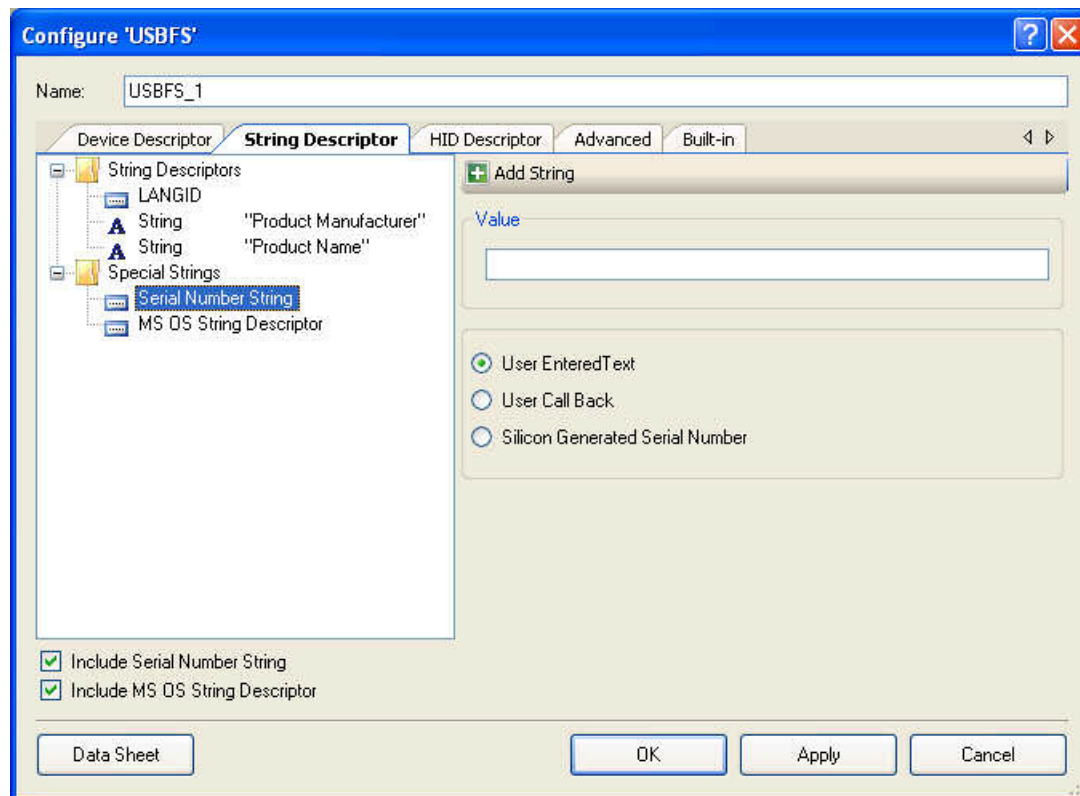

- Value – Default string
- User Call Back – USBFS_SerialNumString function sets pointer to use the user generated serial number string descriptor. The application firmware may supply the source of the USB device descriptor's serial number string during runtime.
- Silicon Generated Serial Number

MS OS String Descriptor

Microsoft OS Descriptors provide a way for USB devices to supply additional configuration information to the latest Microsoft operating systems

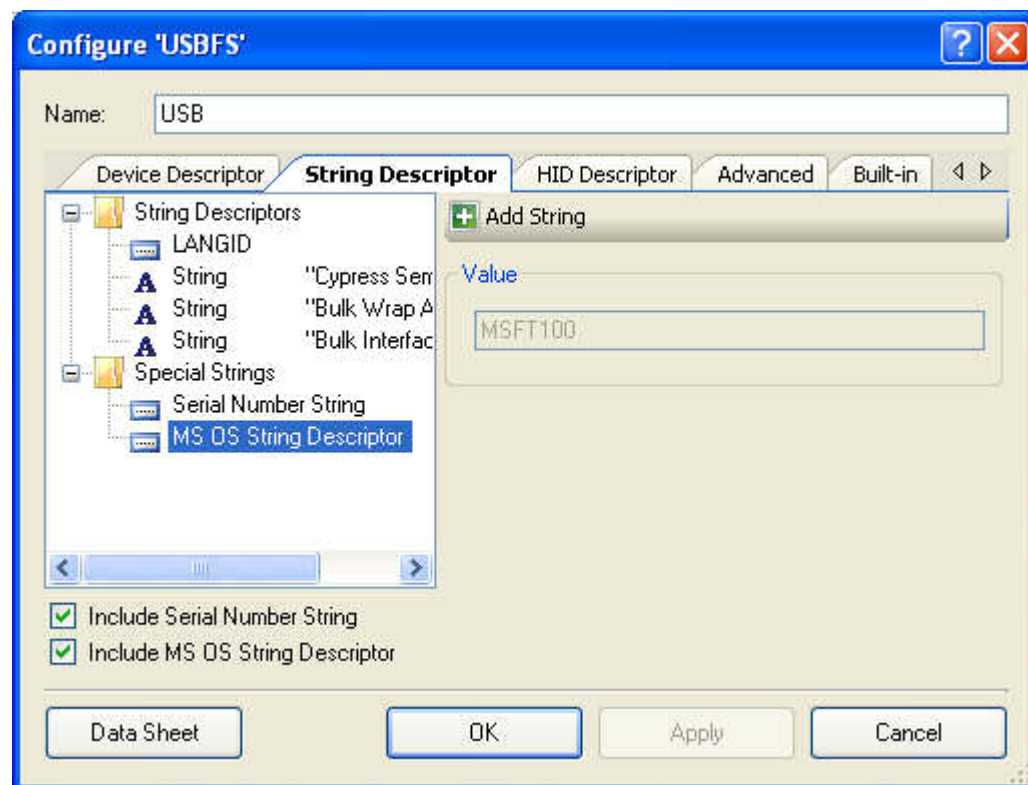

- Value – constant string “MSFT100”


PRELIMINARY



HID Descriptor Tab

The **HID Descriptor** tab allows you to quickly build HID descriptors for your device. Use the + button to add and configure HID Report Descriptors.

HID Descriptors

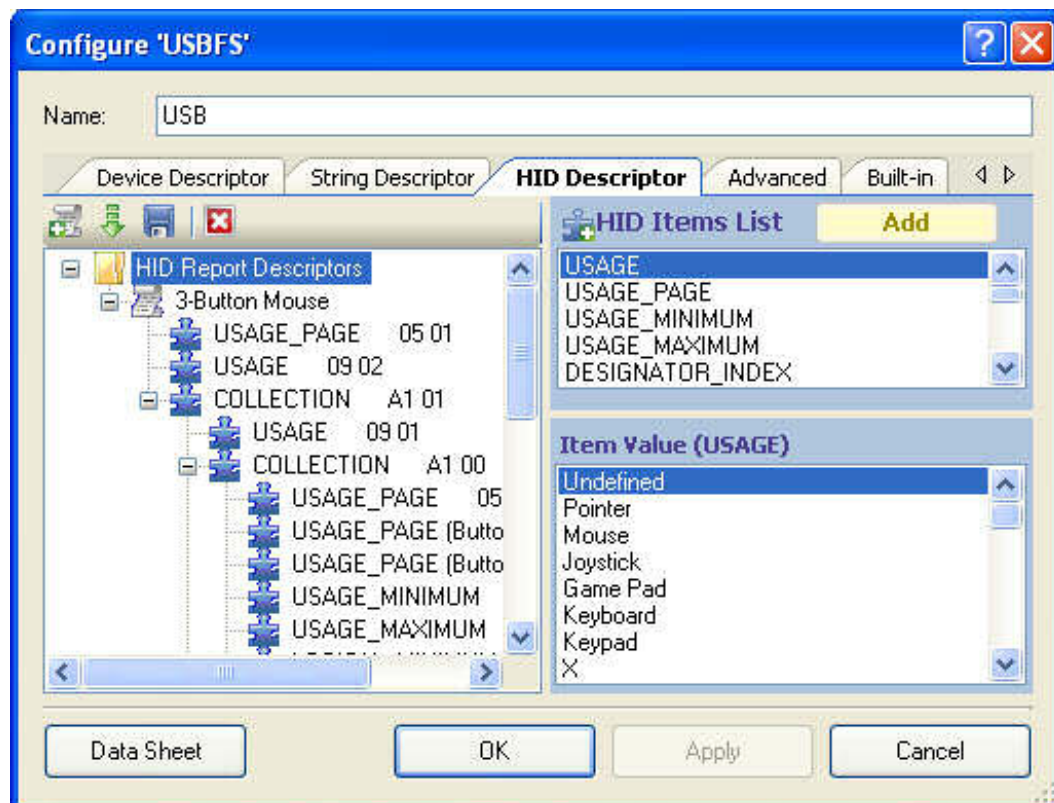


- HID Items List
- Item Value

Advanced Tab

Enable VBUS Monitoring

The USB specification requires that no device shall supply current on VBUS at its upstream facing port at any time. To meet this requirement the device must monitor for the presence or absence of VBUS and remove power from the D+/D- pull-up resistor if VBUS is absent.

For bus powered designs, power will obviously be removed when the USB cable is removed from a host; however, for self-powered designs it is imperative for proper operation and USB certification that your device complies with this requirement.

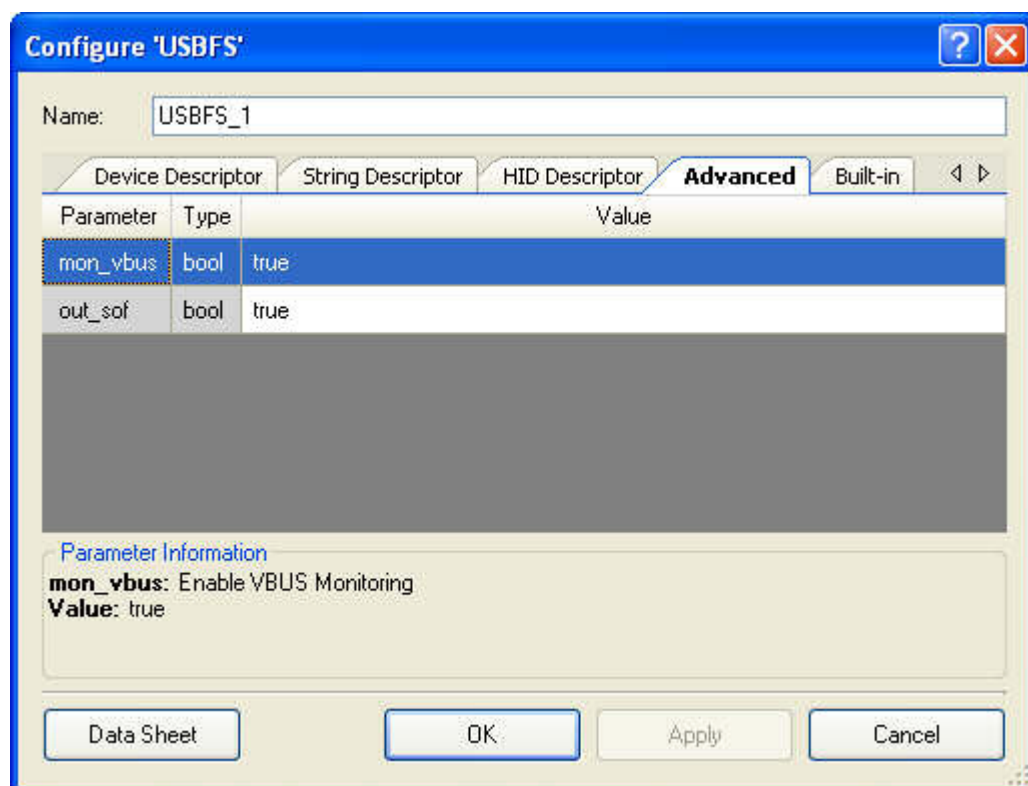

The `mon_vbus` parameter adds a single VBUS monitor pin to the design. This pin must be connected to VBUS and must be assigned in the pin editor. See the USB Compliance for Self Powered Devices section for additional information.

Enable SOF output

The `out_sof` parameter enables Start-of-Frame output.

Placement

USB is implemented as a fixed function block.

PRELIMINARY



Resources


The USBFS uses the USB fixed function block.

Clock Settings

The USB hardware block requires system clocks to be configured through the PSoC Creator Design-Wide Resources Clock Editor. Clock settings have the following requirements when using the USBFS component:

- The USB Clock must be enabled.
- The Bus Clock cannot be slower than 33 MHz.
- The ILO must be set to 100 KHz.

There are different ways to configure the system clocks to comply with these requirements. The following shows one set of options you may use. Your design may require different settings.

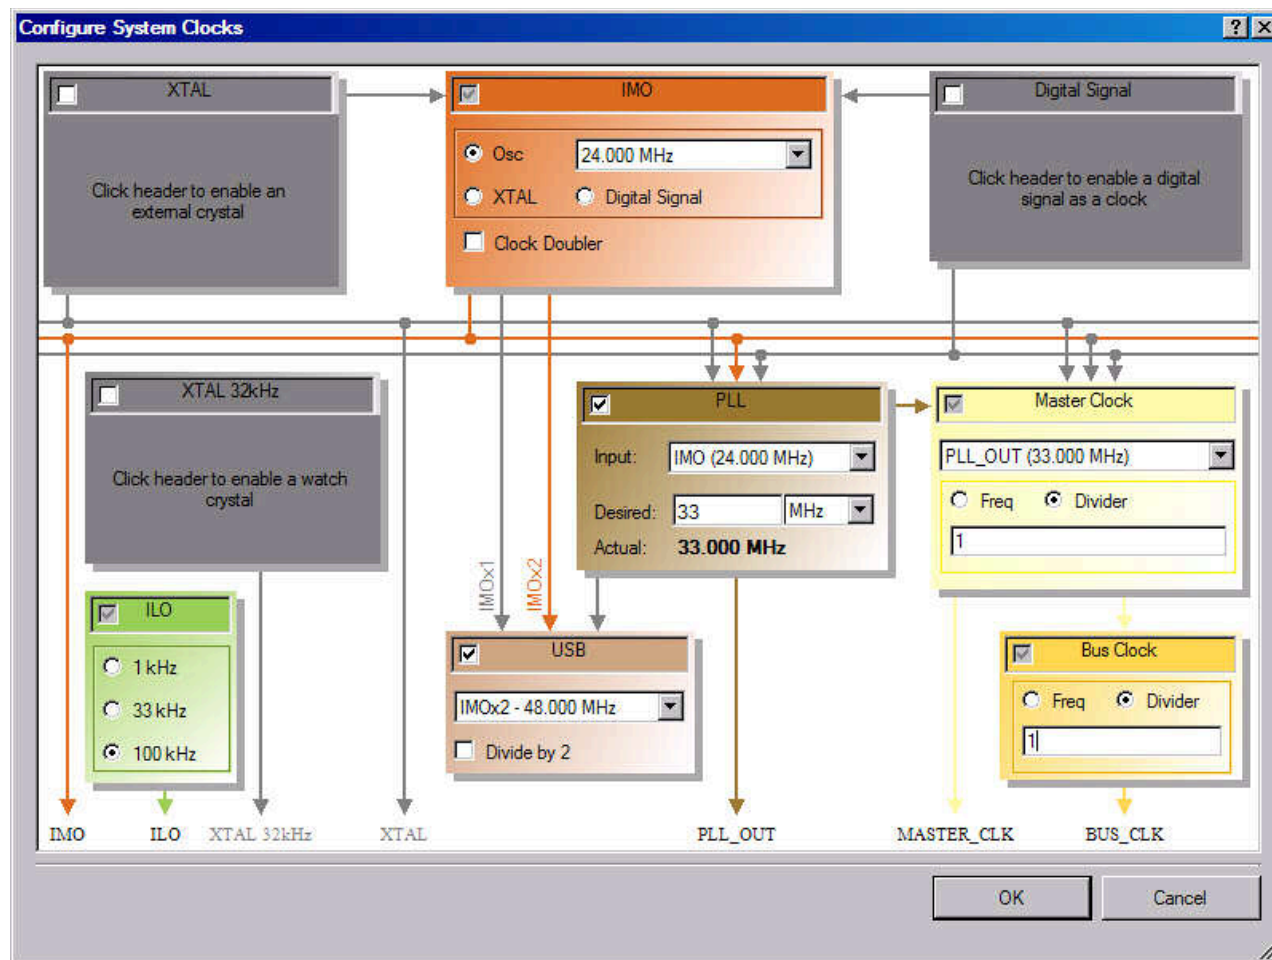

Application Programming Interface

Application Programming Interface (API) routines allow you to configure the component using software. The following table lists and describes the interface to each function. The subsequent sections cover each function in more detail.

By default, PSoC Creator assigns the instance name "USBFS_1" to the first instance of a component in a given design. You can rename it to any unique value that follows the syntactic rules for identifiers. The instance name becomes the prefix of every global function name, variable, and constant symbol. For readability, the instance name used in the following table is "USBFS".

Basic USBFS Device API

Function	Description
USBFS_Start	Activate the component for use with the device and specific voltage mode.
USBFS_Stop	Disable component.
USBFS_bCheckActivity	Checks and clears the USB bus activity flag. Returns 1 if the USB was active since the last check, otherwise returns 0.
USBFS_bGetConfiguration	Returns the currently assigned configuration. Returns 0 if the device is not configured.
USBFS_bGetInterfaceSetting	Returns the current alternate setting for the specified interface.
USBFS_bGetEPState	Returns the current state of the specified USBFS endpoint.
USBFS_bGetEPAckState	Identifies whether ACK was set by returning a non-zero value.
USBFS_wGetEPCount	Returns the current byte count from the specified USBFS endpoint.
USBFS_LoadInEP	Loads and enables the specified USBFS endpoint for an IN transfer.
USBFS_ReadOutEP	Reads the specified number of bytes from the Endpoint RAM and places it in the RAM array pointed to by pSrc. The function returns the number of bytes sent by the host.
USBFS_EnableOutEP	Enables the specified USB endpoint to accept OUT transfers
USBFS_DisableOutEP	Disables the specified USB endpoint to NAK OUT transfers
USBFS_SetPowerStatus	Sets the device to self powered or bus powered
USBFS_Force	Forces a J, K, or SE0 State on the USB D+/D- pins. Normally used for remote wakeup.

PRELIMINARY



void USBFS_Start (uint8 bDevice, uint8 bMode)

Description: Performs all required initialization for USBFS Component.

Parameters: (uint8) bDevice: Contains the device number from the desired device descriptor set entered with the USBFS customizer.

(uint8) bMode: The operating voltage. This determines whether the voltage regulator is enabled for 5V operation or if pass through mode is used for 3.3V operation. Symbolic names and their associated values are given in the following table.

Power Setting	Notes
USBFS_3V_OPERATION	Disable voltage regulator and pass-thru Vcc for pull-up
USBFS_5V_OPERATION	Enable voltage regulator and use regulator for pull-up

Return Value: None

Side Effects: None

void USBFS_Stop (void)

Description: Performs all necessary shutdown task required for the USBFS Component.

Parameters: None

Return Value: None

Side Effects: None

uint8 USBFS_bCheckActivity(void)

Description: Returns the activity status of the bus. Clears the status hardware to provide fresh activity status on the next call of this routine.

Parameters: None

Return Value: (uint8) cystatus: Standard API return values.

Return Value	Description
1	If bus activity was detected since the last call to this function
0	If bus activity not was detected since the last call to this function

Side Effects: None

**PRELIMINARY**

uint8 USBFS_bGetConfiguration(void)

Description: Gets the current configuration of the USB device.

Parameters: None

Return Value: uint8: Returns the currently assigned configuration. Returns 0 if the device is not configured.

Side Effects: None

uint8 USBFS_bGetInterfaceSetting(uint8 bInterfaceNumber)

Description: Gets the current alternate setting for the specified interface.

Parameters: uint8 bInterfaceNumber: Interface number

Return Value: uint8: Returns the current alternate setting for the specified interface.

Side Effects: None

uint8 USBFS_bGetEPState(uint8 bEPNumber)

Description: Returns the state of the requested endpoint.

Parameters: (uint8) bEPNumber: The endpoint number.

Return Value: (uint8) Returns the current state of the specified USBFS endpoint. Symbolic names provided, and their associated values are given in the following table. Use these constants whenever you write code to change the state of the endpoints such as ISR code to handle data sent or received.

Return Value	Description
USBFS_NO_EVENT_PENDING	Indicates that the endpoint is awaiting SIE action
USBFS_EVENT_PENDING	Indicates that the endpoint is awaiting CPU action
USBFS_NO_EVENT_ALLOWED	Indicates that the endpoint is locked from access
USBFS_IN_BUFFER_FULL	The IN endpoint is loaded and the mode is set to ACK IN
USBFS_IN_BUFFER_EMPTY	An IN transaction occurred and more data can be loaded
USBFS_OUT_BUFFER_EMPTY	The OUT endpoint is set to ACK OUT and is waiting for data
USBFS_OUT_BUFFER_FULL	An OUT transaction has occurred and data can be read

Side Effects: None

PRELIMINARY

uint8 USBFS_bGetEPAckState(uint8 bEPNumber)

Description: Determines whether or not an ACK transaction occurred on this endpoint by reading the ACK bit in the control register of the endpoint. This function does not clear the ACK bit.

Parameters: (uint8) bEPNumber: Contains the endpoint number.

Return Value: (uint8): If an ACKed transaction occurred then this function returns a non-zero value. Otherwise a zero is returned.

Side Effects: None

uint16 USBFS_wGetEPCount(uint8 bEPNumber)

Description: Returns the transfer count for the requested endpoint. The value from the count registers includes 2 counts for the two byte checksum of the packet. This function subtracts the two counts.

Parameters: (uint8) bEPNumber: Contains the endpoint number.

Return Value: (uint8): Returns the current byte count from the specified USBFS endpoint.

Side Effects: None

void USBFS_LoadInEP(uint8 bEPNumber, uint8 *pData, uint16 wLength)

Description: Loads and enables the specified USB endpoint for an IN interrupt or bulk transfer.

Parameters: (uint8) bEPNumber: Contains the endpoint number.

(uint8) *pData: A pointer to a data array from which the data for the endpoint space is loaded.

(uint16) wLength: The number of bytes to transfer from the array and then send as a result of an IN request. Valid values are between 0 and 256.

Return Value: None

Side Effects: None

**PRELIMINARY**

uint16 USBFS_ReadOutEP(uint8 bEPNumber, uint8 *pData, uint16 wLength)

Description:	Moves the specified number of bytes from endpoint RAM to data RAM. The number of bytes actually transferred from endpoint RAM to data RAM is the lesser of the actual number of bytes sent by the host or the number of bytes requested by the wCount parameter.
Parameters:	(uint8) bEPNumber: Contains the endpoint number. (uint8) *pData: A pointer to a data array from which the data for the endpoint space is loaded. (uint16) wLength: The number of bytes to transfer from the array and then send as a result of an IN request. Valid values are between 0 and 256. The function moves fewer than the requested number of bytes if the host sends fewer bytes than requested.
Return Value:	Number of bytes received
Side Effects:	None

void USBFS_EnableOutEP(uint8 bEPNumber)

Description:	Enables the specified endpoint for OUT bulk or interrupt transfers. Do not call this function for IN endpoints.
Parameters:	(uint8) bEPNumber: Contains the endpoint number.
Return Value:	None
Side Effects:	None

void USBFS_DisableOutEP(uint8 bEPNumber)

Description:	Disables the specified USBFS OUT endpoint. Do not call this function for IN endpoints.
Parameters:	(uint8) bEPNumber: Contains the endpoint number.
Return Value:	None
Side Effects:	None

PRELIMINARY

void USBFS_SetPowerStatus(uint8 bPowerStaus)

Description: Sets the current power status. The device will reply to USB GET_STATUS requests based on this value. This allows the device to properly report its status for USB Chapter 9 compliance. Devices may change their power source from self powered to bus powered at any time and report their current power source as part of the device status. You should call this function any time your device changes from self powered to bus powered or vice versa, and set the status appropriately.

Parameters: (uint8) bPowerStaus: Contains the desired power status, one for self powered or zero for bus powered. Symbolic names are provided and their associated values are given here:

Power Status	Description
USBFS_DEVICE_STATUS_BUS_POWERED	Set the device to bus powered.
USBFS_DEVICE_STATUS_SELF_POWERED	Set the device to self powered.

Return Value: None

Side Effects: None

void USBFS_Force(uint8 bState)

Description: Forces a USB J, K, or SE0 state on the D+/D- lines. This function provides the necessary mechanism for a USB device application to perform a USB Remote Wakeup. For more information, refer to the USB 2.0 Specification for details on Suspend and Resume.

Parameters: (uint8) bState: A byte indicating which of the four bus states to enable. Symbolic names provided, and their associated values are listed here:

State	Description
USBFS_FORCE_SE0	Force a Single Ended 0 onto the D+/D- lines
USBFS_FORCE_J	Force a J State onto the D+/D- lines
USBFS_FORCE_K	Force a K State onto the D+/D- lines
USBFS_FORCE_NONE	Return bus to SIE control

Return Value: None

Side Effects: None

Human Interface Device (HID) Class Support

Function	Description
USBFS_UpdateHIDTimer	Updates the HID Report timer for the specified interface and returns 1 if the timer

**PRELIMINARY**

Function	Description
	expired and 0 if not. If the timer expired, it reloads the timer.
USBFS_bGetProtocol	Returns the protocol for the specified interface

uint8 USBFS_UpdateHIDTimer(uint8 bInterface)

Description: Updates the HID Report idle timer and returns the status. Reloads the timer if it expires.

Parameters: (uint8) bInterface: Contains the interface number.

Return Value: (uint8): Returns the state of the HID timer. Symbolic names are provided and their associated values are given here:

Return Value	Notes
USBFS_IDLE_TIMER_EXPIRED	The timer expired.
USBFS_IDLE_TIMER_RUNNING	The timer is running.
USBFS_IDLE_TIMER_IDEFINITE	Returned if the report is sent when data or state changes.

Side Effects: None

uint8 USBFS_bGetProtocol(uint8 bInterface)

Description: Returns the hid protocol value for the selected interface.

Parameters: (uint8) bInterface: Contains the interface number.

Return Value: (uint8): Returns the protocol value.

Side Effects: None

void USBFS_SerialNumString(uint8 *SNstring)

Description: This function available only when “User Call Back” option in “Serial Number String” descriptor properties selected. Application firmware may supply the source of the USB device descriptor serial number string during runtime. Default string will be used if application firmware do not use this function or sets wrong string descriptor.

Parameters: (uint8) *SNstring: pointer to user defined string descriptor. String descriptor should meet to Universal Serial Bus Specification revision 2.0 chapter 9.6.7

Return Value: None

Side Effects: None

PRELIMINARY



Sample Firmware Source Code

The following is a C language example demonstrating the basic functionality of the USBFS component. This example assumes the component has been placed in a design with the default name "USBFS_1."

Note If you rename your component you must also edit the example code as appropriate to match the component name you specify.

The following C code shows you how to use the USBFS component in a simple HID application. Once connected to a PC host, the device enumerates as a 3-button mouse. When the code is run, the mouse cursor zigzags from right to left. This code illustrates the how the USBFS customizer configures the component.

```
#include <device.h>

uint8 abMouseData[3] = {0,0,0};
uint8 bSNstring[16]={0x0E,0x03,'F',0,'W',0,'S',0,'N',0,'0',0,'1',0};

uint8 i = 0;
void main()
{
    CYGlobalIntEnable;                /*Enable Global Interrupts*/
    /* Set user defined Serial Number string */
    USBFS_1_SerialNumString(&bSNstring[0]);
    USBFS_1_Start(0, USBFS_1_3V_OPERATION); /*Start USBFS Operation/device 0*/
                                           /*and with 3V operation*/
    while(!USBFS_1_bGetConfiguration()); /*Wait for Device to enumerate*/

    /*Enumeration is completed load endpoint 1. Do not toggle the first time*/
    USBFS_1_LoadInEP(1, abMouseData, 3);

    while(1)
    {
        while(!USBFS_1_bGetEPAckState(1)); /*Wait for ACK before loading data*/

        /*ACK has occurred, load the endpoint and toggle the data bit*/
        USBFS_1_LoadInEP(1, abMouseData, 3);

        if(i==128)                        /*When our count hits 128*/
        {
            abMouseData[1] = 0x05;        /*Start moving the mouse to the right*/
        }
        else if(i==255)                  /*When our counts hits 255*/
        {
            abMouseData[1] = 0xFB;        /*Start moving the mouse to the left*/
        }
        i++;
    }
}
```



PRELIMINARY

USBFS Setup Corresponding to the Example Code

The following are the basic walk-through steps of configuring the USBFS component to correspond with the example code.

- Click Import Report in Hid Descriptor Tab and select the 3-button mouse template from USB component template directory.
- Select the Add String operation to add Manufacturer and Product strings.
- Select the User Call Back value for Serial Number String.
- Edit the device attributes: Vendor ID, Product ID, and select strings.
- Edit the interface attributes: select HID for the Class field.
- Edit the HID class descriptor: select the 3 button mouse for the HID Report field.
- Edit the Endpoint descriptor: select Direction - IN, Transfer Type - INT.
- Click OK to save the USB descriptor information.

Descriptor	Data
USB component descriptor root	Device name
Device descriptor	Device
Device attributes	
Vendor ID	Use company VID
Product ID	Use product PID
Device release (bcdDevice)	0000
Device class	Defined in interface descriptor
Subclass	No subclass
Manufacturer string	My company
Product string	My mouse
Serial number string	No string
Configuration descriptor	Configuration
Configuration attributes	
Configuration string	No string
Max power	100
Device power	Bus powered
Remote wakeup	Disabled
Interface descriptor	Interface
Interface attributes	
Interface string	No string

PRELIMINARY




Descriptor	Data
Class	HID
Subclass	No subclass
HID class descriptor	
Descriptor type	Report
Country code	Not supported
HID report	3-button mouse
Endpoint descriptor	ENDPOINT_NAME
Endpoint attributes	
Endpoint number	1
Direction	IN
Transfer type	INT
Interval	10
Max packet size	8
String/LANGID	
String descriptors	USBFS
LANGID	
String	My company
String	My mouse
Special Strings	
Serial Number String	User Call Back
MS OS String Descriptor	MSFT100
Descriptor	
HID report descriptor root	USBFS
HID report descriptor	3-button Mouse
USAGE_PAGE	Generic Desktop Controls (05 01)
USAGE	Mouse (09 02)
COLLECTION	Application (A1 01)
USAGE	Pointer (09 01)
COLLECTION	Physical (A1 00)
USAGE_PAGE	Button (05 09)
USAGE_MINIMUM	1 (19 01)
USAGE_MAXIMUM	3 (29 03)
LOGICAL_MINIMUM	0 (15 00)

**PRELIMINARY**

Descriptor	Data
LOGICAL_MAXIMUM	1 (25 01)
REPORT_COUNT	3 (95 03)
REPORT_SIZE	1 (75 01)
INPUT	Variable (81 02)
REPORT_COUNT	1 (95 01)
REPORT_SIZE	5 (75 05)
INPUT	Constant (81 02)
USAGE_PAGE	Generic Desktop Controls (05 01)
USAGE	X (09 30)
USAGE	Y (09 31)
LOGICAL_MINIMUM	129 (15 81)
LOGICAL_MAXIMUM	127 (25 7F)
REPORT_SIZE	8 (75 08)
REPORT_COUNT	2 (95 02)
INPUT	Variable, Relative (81 06)
END_COLLECTION	(C0 00)
END_COLLECTION	(C0 00)

Functional Description

The following diagram shows a simple USB application with the D+ and D- pins from the PSoC device.

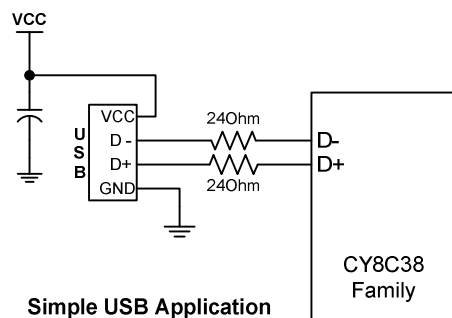

PRELIMINARY



USB Compliance

USB drivers may present various bus conditions to the device, including Bus Resets, and different timing requirements. Not all of these can be correctly illustrated in the examples provided. It is your responsibility to design applications that conform to the USB spec.

USB Compliance for Self Powered Devices

If the device that you are creating will be self-powered, you must connect a GPIO pin to VBUS through a resistive network and write firmware to monitor the status of the GPIO. You can use the USBFS_Start() and USBFS_Stop() API routines to control the D+ and D- pin pull-ups. The pull-up resistor does not supply power to the data line until you call USBFS_Start(). USBFS_Stop() disconnects the pull-up resistor from the data pin.

The device responds to GET_STATUS requests based on the status set with the USBFS_SetPowerStatus() function. To set the correct status, USBFS_SetPowerStatus() should be called at least once if your device is configured as self-powered. You should also call the USBFS_SetPowerStatus() function any time your device changes status.

USB Standard Device Requests

This section describes the requests supported by the USBFS component. If a request is not supported the USBFS component normally responds with a STALL, indicating a request error.

Standard Device Request	USB Component Support Description	USB 2.0 Spec Section
CLEAR_FEATURE	Device:	9.4.1
	Interface: not supported.	
	Endpoint	
GET_CONFIGURATION	Returns the current device configuration value.	9.4.2
GET_DESCRIPTOR	Returns the specified descriptor.	9.4.3
GET_INTERFACE	Returns the selected alternate interface setting for the specified interface.	9.4.4
GET_STATUS	Device:	9.4.5
	Interface:	
	Endpoint:	
SET_ADDRESS	Sets the device address for all future device accesses.	9.4.6
SET_CONFIGURATION	Sets the device configuration.	9.4.7
SET_DESCRIPTOR	This optional request is not supported.	9.4.8
SET_FEATURE	Device:	9.4.9



PRELIMINARY

Standard Device Request	USB Component Support Description	USB 2.0 Spec Section
	DEVICE_REMOTE_WAKEUP support is selected by the bRemoteWakeUp Component Parameter. TEST_MODE is not supported.	
	Interface: Not supported.	
	Endpoint: The specified Endpoint is halted.	
SET_INTERFACE	Not supported.	9.4.10
SYNCH_FRAME	Not supported. Future implementations of the Component will add support to this request to enable Isochronous transfers with repeating frame patterns.	9.4.11

HID Class Request

Class Request	USBFS Component Support Description	Device Class Definition for HID - Section
GET_REPORT	Allows the host to receive a report by way of the Control pipe.	7.2.1
GET_IDLE	Reads the current idle rate for a particular Input report.	7.2.3
GET_PROTOCOL	Reads which protocol is currently active (either the boot or the report protocol).	7.2.5
SET_REPORT	Allows the host to send a report to the device, possibly setting the state of input, output, or feature controls.	7.2.2
SET_IDLE	Silences a particular report on the Interrupt In pipe until a new event occurs or the specified amount of time passes.	7.2.4
SET_PROTOCOL	Switches between the boot protocol and the report protocol (or vice versa).	7.2.6

DC and AC Electrical Characteristics

The following values are indicative of expected performance and based on initial characterization data.

Parameter	Description	Conditions	Min.	Typ.	Max.	Units
	Operating current	USB enabled bus idle	-	0.68	-	mA

PRELIMINARY



Component Changes

This section lists the major changes in the component from the previous version.

Version	Description of Changes	Reason for Changes / Impact
1.30.b	Added information to the component that advertizes its compatibility with silicon revisions.	The tool reports an error/warning if the component is used on incompatible silicon. If this happens, update to a revision that supports your target device.
1.30.a	Moved local parameters to formal parameter list.	To address a defect that existed in PSoC Creator v1.0 Beta 4.1 and earlier, the component was updated so that it could continue to be used in newer versions of the tool. This component used local parameters, which are not exposed to the user, to do background calculations on user input. These parameters have been changed to formal parameters which are visible, but un-editable. There are no functional changes to the component but the affected parameters are now visible in the "expression view" of the customizer dialog.
1.30	Updated the Configure dialog and data sheet.	Added the Enable SOF Output parameter to the Advanced tab of the Configure dialog. Updated the USBFS_ReadOutEP function in the data sheet to reflect the correct return value.
1.20.b	Added information to the component that advertizes its compatibility with silicon revisions.	The tool reports an error/warning if the component is used on incompatible silicon. If this happens, update to a revision that supports your target device.
1.20.a	Moved local parameters to formal parameter list.	To address a defect that existed in PSoC Creator v1.0 Beta 4.1 and earlier, the component was updated so that it could continue to be used in newer versions of the tool. This component used local parameters, which are not exposed to the user, to do background calculations on user input. These parameters have been changed to formal parameters which are visible, but un-editable. There are no functional changes to the component but the affected parameters are now visible in the "expression view" of the customizer dialog.
1.10.b	Added information to the component that advertizes its compatibility with silicon revisions.	The tool reports an error/warning if the component is used on incompatible silicon. If this happens, update to a revision that supports your target device.
1.10.a	Moved local parameters to formal parameter list.	To address a defect that existed in PSoC Creator v1.0 Beta 4.1 and earlier, the component was updated so that it could continue to be used in newer versions of the tool. This component used local parameters, which are not exposed to the user, to do background calculations on user input. These parameters have been changed to formal parameters which are visible, but un-editable. There are no functional changes to the component but the affected parameters are now visible in the "expression view" of the customizer dialog.



PRELIMINARY

© Cypress Semiconductor Corporation, 2009-2010. The information contained herein is subject to change without notice. Cypress Semiconductor Corporation assumes no responsibility for the use of any circuitry other than circuitry embodied in a Cypress product. Nor does it convey or imply any license under patent or other rights. Cypress products are not warranted nor intended to be used for medical, life support, life saving, critical control or safety applications, unless pursuant to an express written agreement with Cypress. Furthermore, Cypress does not authorize its products for use as critical components in life-support systems where a malfunction or failure may reasonably be expected to result in significant injury to the user. The inclusion of Cypress products in life-support systems application implies that the manufacturer assumes all risk of such use and in doing so indemnifies Cypress against all charges.

PSoC® is a registered trademark, and PSoC Creator™ and Programmable System-on-Chip™ are trademarks of Cypress Semiconductor Corp. All other trademarks or registered trademarks referenced herein are property of the respective corporations.

Any Source Code (software and/or firmware) is owned by Cypress Semiconductor Corporation (Cypress) and is protected by and subject to worldwide patent protection (United States and foreign), United States copyright laws and international treaty provisions. Cypress hereby grants to licensee a personal, non-exclusive, non-transferable license to copy, use, modify, create derivative works of, and compile the Cypress Source Code and derivative works for the sole purpose of creating custom software and or firmware in support of licensee product to be used only in conjunction with a Cypress integrated circuit as specified in the applicable agreement. Any reproduction, modification, translation, compilation, or representation of this Source Code except as specified above is prohibited without the express written permission of Cypress.

Disclaimer: CYPRESS MAKES NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Cypress reserves the right to make changes without further notice to the materials described herein. Cypress does not assume any liability arising out of the application or use of any product or circuit described herein. Cypress does not authorize its products for use as critical components in life-support systems where a malfunction or failure may reasonably be expected to result in significant injury to the user. The inclusion of Cypress' product in a life-support systems application implies that the manufacturer assumes all risk of such use and in doing so indemnifies Cypress against all charges.

Use may be limited by and subject to the applicable Cypress software license agreement.

PRELIMINARY

