

Dialog SDK 5.0.3 Training Materials – Custom profile

2016 February

A large, abstract graphic consisting of multiple overlapping, semi-transparent, wavy bands of color. The colors transition from blue on the left, through purple and magenta in the center, to green and yellow on the right. The bands have a pixelated or digital texture.

...personal
...portable
...connected

BLE Custom profile



BLE profile overview

Custom profile service Source code discussion

What would you see as output

BLE Custom profile

Let's build a demo together ...



- **Before we start, we recommend you to ...**
 - Take a look at Training material 1 bare bone application

- **What are you going to learn from this training ...**
 - Basic understanding of Generic ATT profile
 - What is a server? What is a client in GATT protocol?
 - Profile, Custom Profile, Custom Service and Custom Characteristic definition
 - GATT custom profile application message flow
 - Basic understanding of custom database creation process
 - Small assignment to add a characteristic in the custom service database

- **What's next ...**
 - Training material 3 custom profile service LED state in action ... coming soon
 - See **Reference** section of this training slide

BLE Custom profile

BLE profile overview




- Bluetooth Low Power (BLE) profile is a formal definition of the behaviour of a Bluetooth application which is based on Generic Attribute Profile (GATT).
- BLE profile follows a **structured approach** to help a device (**server/peripheral**) to expose information to other devices (**client/central**) about its capabilities and how to access its information.
- **The server** is the owner of the data and in most cases is the peripheral device.
- **The client** is the consumer of the data and is typically the central device (Smart phone/tab).
- <https://developer.bluetooth.org/gatt/services/Pages/ServicesHome.aspx>

Customer services Contents

GATT Protocol

- Client Server Architecture
 - servers have data, this is known as the **peripheral** in GAP Protocol
 - clients request data to/from servers, this is known as **central** in GAP
- Servers expose data using Attributes

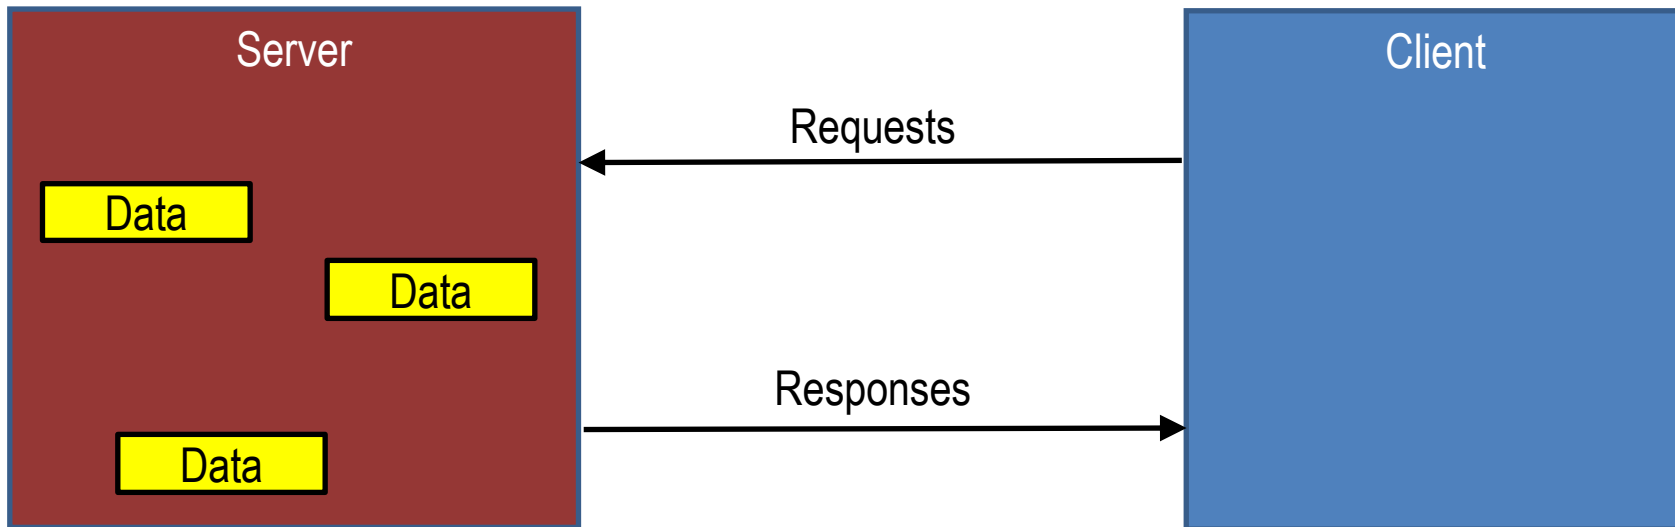

BLE Custom profile

BLE profile overview

- A BLE **Profile** can have one or more **services**.
- **Services** are used to break data into logic entities and contain specific chunks of data called **characteristics**.
- A service can have one or more **characteristics**, and each service distinguishes itself from other services by means of a unique numeric ID called a **UUID**, which can be either 16-bit (for officially adopted BLE Services) or **128-bit (for custom services)**.
- A **characteristic** is the lowest level concept in GATT transactions, which contains a single data point.
- Similarly to services, each characteristic **distinguishes** itself via a pre-defined **16-bit or 128-bit UUID**, and you're free to use the SIG standard characteristics (which ensures interoperability across and BLE-enabled HW/SW) or define your own custom characteristics which only your peripheral and SW understands.



BLE Custom profile



Custom profile service and source code discussion

What would you see as output

Customer services Contents



Custom service profile example

- This example demonstrates
 - Bare bone application (out of scope, please see bare bone application training)
 - **Plus 128 bit UUID custom service implementation**
 - **How to access custom profile database**
 - **This training covers a step by step procedure of creating a characteristic and advertise the new characteristic.**
- **IDE used KEIL 5**
- **Dialog semiconductor SDK used 5.0.3**
- **Project location: 5.0.3\projects\target_apps\ble_examples\ble_app_profile**

Customer services Contents

target_apps\ble_examples\ble_app_profile project covers

- Check **custom profile database** access.
- Check the **advertising device name**.
- Use the device information service (**DISS**).
- Inspect the Custom service user defined characteristic.

Customer services Contents

Custom service profile basic message flow


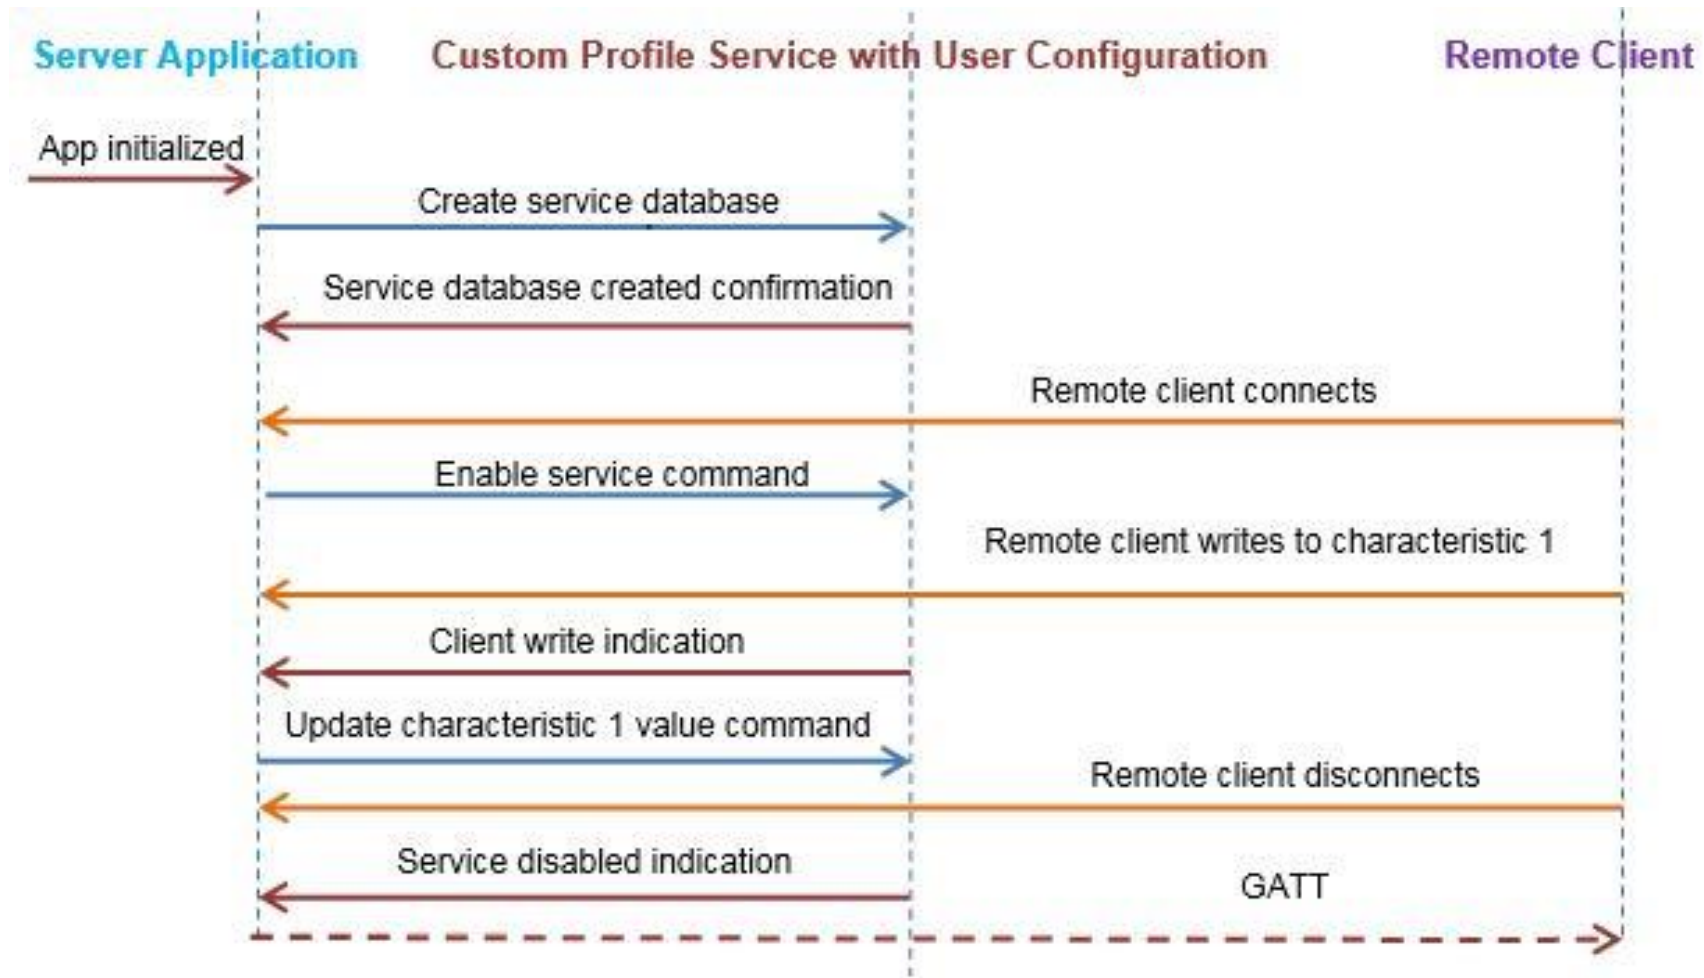


Figure: Message flow diagram

Customer services Contents

Keil 5 IDE ble_app_profile.uvprojx project layout

- Group ***user_config***, ***user_platform*** and ***user_app***.
- These groups contain the user configuration files.

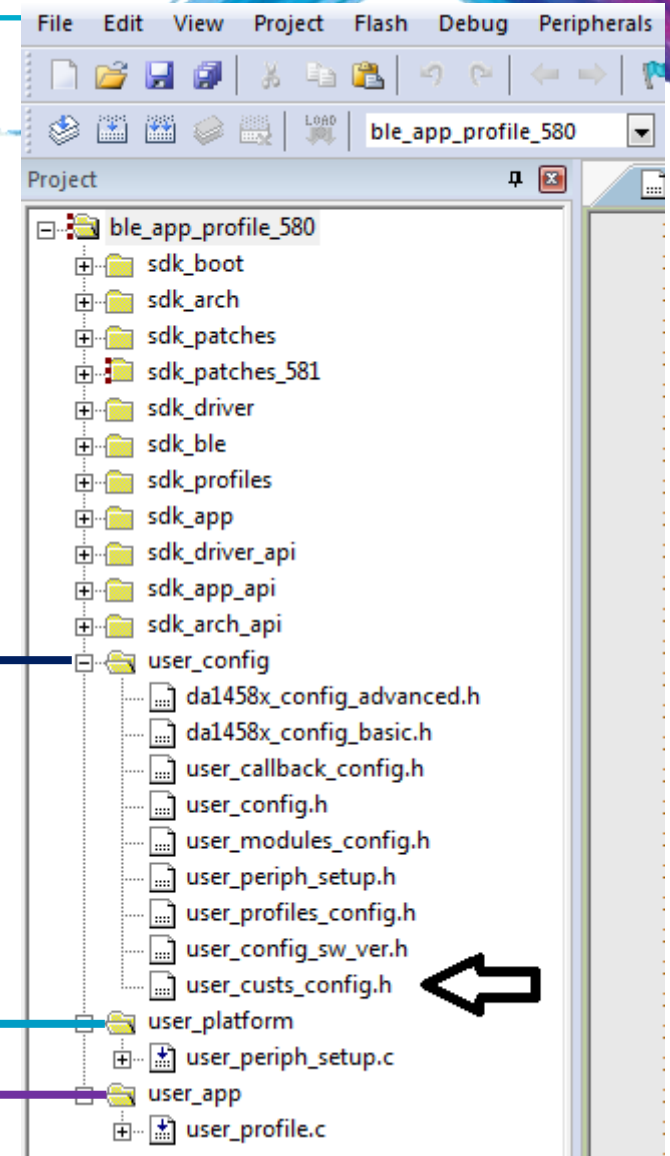

Customer services Contents

Description of some important files

```
/* Holds DA14580/581/583 basic configuration settings. */
dal458x_config_basic.h

/* Holds DA14580/581/583 advanced configuration settings. */
dal458x_config_advanced.h

/* Holds user specific information about software version. */
user_config_sw_ver.h

/* Defines which application modules are included or excluded from the user's application. */
user_modules_config.h

    /* The Device information application profile is excluded. */
    #define EXCLUDE_DLG_PROXR          (1)
    /* The Device information application profile is included. */
    #define EXCLUDE_DLG_CUSTS1        (0)

    /* Note: */
    /*      This setting has no effect if the respective module is a BLE Profile */
    /*      that is not used in the user's application. */

/* Callback functions that handle various events or operations. */
user_callback_config.h

/* Holds advertising parameters, connection parameters, etc. */
user_config.h
```

Customer services Contents

Description of some important files

/* Defines which BLE profiles (Bluetooth SIG adopted or custom ones) will be included in user's application.
each header file denotes the respective BLE profile*/

user_profiles_config.h

```
#inlucde "diss.h"          // Includes Device Information Service.  
#include "custsl.h"        // Includes Custom service.
```

/* Defines the structure of the **Custom profile database structure** and
cust_prf_funcs[] array, which contains the Custom profile API functions calls.*/

user_custs_config.h

/* Holds hardware related settings relative to the used Development Kit. */

user_periph_setup.h

/* Source code file that handles peripheral (GPIO, UART, SPI, etc.)
configuration and initialization relative to the Development Kit.*/

user_periph_setup.c

Customer services Contents

Adding a characteristic step by step

TODO 1 - Change the default **BD_ADDRESS**, this address has to be unique in a BLE network.

```
/* @file da1458x_config_advanced.h */
```

```
/* copy and paste in code step 1 change the BLE device address */  
#define CFG_NVDS_TAG_BD_ADDRESS          {0x19, 0x00, 0x00, 0x00, 0x00, 0x19}
```

TODO 2 - Check and define **DLG_CUST1** module in your application code

```
/* @file user_modules_config.h */
```

```
#define EXCLUDE_DLG_SPOTAR                (1)          /* excluded */  
/* copy and paste in code step 2 define DLG_CUST1 module in your application code */  
#define EXCLUDE_DLG_CUSTS1                (0)          /* included */
```

TODO 3 - Check and include **cust1.h** in your application code to activate custom profile

```
/* @file user_profiles_config.h */
```

```
#include "diss.h"  
/* copy and paste in code step 3 add custs1.h */  
#include "custs1.h"
```

Customer services Contents

Adding a characteristic step by step

TODO 4 - Information and change your advertising device name

```
/* @file user_config.h */

/* default sleep mode. Possible values ARCH_SLEEP_OFF, ARCH_EXT_SLEEP_ON, ARCH_DEEP_SLEEP_ON
   ARCH_EXT_SLEEP_ON, ARCH_DEEP_SLEEP_ON - You cannot debug in these modes
*/
const static sleep_state_t app_default_sleep_mode = ARCH_SLEEP_OFF;

//-----NON-CONNECTABLE & UNDIRECTED ADVERTISE RELATED COMMON -- //
/// Advertising service data
/// dev step 5 explanation of the following 3 items

#define USER_ADVERTISE_DATA ("x03" \
    ADV_TYPE_COMPLETE_LIST_16BIT_SERVICE_IDS \
    ADV_UUID_DEVICE_INFORMATION_SERVICE \
    "x11" \
    ADV_TYPE_COMPLETE_LIST_128BIT_SERVICE_IDS \
    "x2F\x2A\x93\xA6\xBD\xD8\x41\x52\xAC\x0B\x10\x99\x2E\xC6\xFE\xED")

/// Note- Custom service UUID is shown from right to left <-- EDFEC6...2F in the client LightBlue iOS app GUI
/* copy and paste in code step 4 change your advertising device name */
#define USER_DEVICE_NAME ("A-CUST1")
```



Adding a characteristic step by step

TODO 5 - Overview of existing BLE Profile custom service characteristic values and properties

NAME	PROPERTIES	LENGTH	DESCRIPTION
Control Point	WRITE	1	Accept commands from peer
LED State	WRITE NO RESPONSE	1	Toggles a LED connected to a GPIO
ADC Value 1	READ, NOTIFY	2	Reads sample from an ADC channel
ADC Value 2	READ	2	Reads sample from an ADC channel
Button State	READ, NOTIFY	1	Reads the current state of a push button connected a GPIO
Indicate able	READ, INDICATE	20	Demonstrate indications
Long Value	READ, WRITE. NOTIFY	50	Demonstrate writes to long characteristic value

BLE Custom profile

Adding a characteristic step by step



- Characteristics have **names**
 - Name that will be displayed on the client scanner application.
- Characteristics have **values**
 - Array of up to 512 octets, fixed or variable length data mostly in hexadecimal format.
- Characteristics have **handlers**
 - Used to address an individual attribute by a client, this will be discussed more in Training 3.
- Characteristics have **description**
 - <<UUID>>, determines what does the value mean
 - Defined by GAP, GATT, or “User defined Custom Characteristic Specifications”
 - Example “Accept commands from peer” is a description for Control point characteristic
- Characteristics have **properties**
 - Read, Write, Notify etc.

Customer services Contents

Adding a characteristic step by step

TODO 6 - Information

```
/* @file user_custs_config.h */
```

```
/* step 5 and step 6 info:: 128 bit Service UUID this is displayed from Right to Left in the client scanner device */  
#define DEF_CUST1_SVC_UUID_128 {0x2F, 0x2A, 0x93, 0xA6, 0xBD, 0xD8, 0x41, 0x52, 0xAC, 0x0B, 0x10, 0x99, 0x2E, 0xC6,  
0xFE, 0xED} /* Displayed as EDFEC62E99100BAC5241D8BDA6932A2F */
```

TODO 7 - Add your control point

```
/* @file user_custs_config.h */
```

```
#define DEF_CUST1_LONG_VALUE_UUID_128 {0x8C, 0x09, 0xE0, 0xD1, 0x81, 0x54, 0x42, 0x40, 0x8E, 0x4F, 0xD2, 0xB3,  
0x77, 0xE3, 0x2A, 0x77}  
/* copy and paste in code step 7 define your control point */  
#define DEF_CUST1_YOUR_CTRL_POINT_UUID_128 {0x34, 0x33, 0x32, 0x31, 0x30, 0x29, 0x28, 0x27, 0x26, 0x25, 0x24, 0x23,  
0x22, 0x21, 0x20, 0x19}
```

Customer services Contents



Adding a characteristic step by step

TODO 8 - Add your control point data length

```
/* @file user_custs_config.h */
```

```
#define DEF_CUST1_LONG_VALUE_CHAR_LEN      50
/* copy and paste in code step 8 define your control point data length */
#define DEF_CUST1_YOUR_CTRL_POINT_CHAR_LEN  1
```

TODO 9 - Add your characteristic description name as string

```
/* @file user_custs_config.h */
```

```
#define CUST1_LONG_VALUE_CHAR_USER_DESC    "Long Value"
/* copy and paste in code step 9 define your characteristic description name */
#define CUST1_YOUR_CONTROL_POINT_USER_DESC "Your Ctrl Point"
```

Customer services Contents



Adding a characteristic step by step

TODO 10 - Add your custom1 service database control point characteristic enumeration

```
/* @file user_custs_config.h */
```

```
enum
{
    ...
    CUST1_IDX_LONG_VALUE_CHAR,
    CUST1_IDX_LONG_VALUE_VAL,
    CUST1_IDX_LONG_VALUE_NTF_CFG,
    CUST1_IDX_LONG_VALUE_USER_DESC,

    /* copy and paste in code step 10 add your characteristic */
    CUST1_IDX_YOUR_CONTROL_POINT_CHAR,
    CUST1_IDX_YOUR_CONTROL_POINT_VAL,
    CUST1_IDX_YOUR_CONTROL_POINT_USER_DESC,
    CUST1_IDX_NB
};
```

Customer services Contents

Adding a characteristic step by step

TODO 11 - Declare and assign custom server attribute value

```
/* @file user_custs_config.h */  
  
static uint8_t CUST1_LONG_VALUE_UUID_128[ATT_UUID_128_LEN] = DEF_CUST1_LONG_VALUE_UUID_128;  
/* copy and paste in code step 11 declare and assign custom server attribute value */  
static uint8_t CUST1_YOUR_CTRL_POINT_UUID_128[ATT_UUID_128_LEN] = DEF_CUST1_YOUR_CTRL_POINT_UUID_128;
```

TODO 12 - Add your characteristic description with permission properties, handler and UUID

```
/* @file user_custs_config.h */  
  
static const struct att_char128_desc custs1_long_value_char = {ATT_CHAR_PROP_RD | ATT_CHAR_PROP_WR |  
ATT_CHAR_PROP_NTF,  
{0, 0},  
DEF_CUST1_LONG_VALUE_UUID_128};  
  
/* copy and paste in code step 12 */  
/* Add your characteristic description with permission properties, handler and UUID */  
  
static const struct att_char128_desc custs1_your_ctrl_point_char = {ATT_CHAR_PROP_WR,  
{0, 0},  
DEF_CUST1_YOUR_CTRL_POINT_UUID_128};
```

BLE Custom profile

Adding a characteristic step by step

Profile

Code can be found in: `user_custs_config.h`

Service UUID

Characteristic

Properties

Handler

UUID

```
static const struct att_char128_desc custs1_ctrl_point_char = {  
  
    ATT_CHAR_PROP_WR,  
    {0, 0},  
    DEF_CUST1_CTRL_POINT_UUID_128  
  
};
```

Customer services Contents

Adding a characteristic step by step

TODO 13 - Add your your characteristic declaration, value and description in custom server database attributes, please go to next slide to copy the code, to large code to fit in one slide

```
/* @file user_custs_config.h */
```

```
/// Full CUSTOM1 Database Description - Used to add attributes into the database
static const struct attm_desc_128 custs1_att_db[CUST1_IDX_NB] =
{
    ...
    // Long Value Characteristic Declaration
    [CUST1_IDX_LONG_VALUE_CHAR]      = {(uint8_t*)&att_decl_char, ATT_UUID_16_LEN, PERM(RD, ENABLE),
                                         sizeof(custs1_long_value_char), sizeof(custs1_long_value_char),
                                         (uint8_t*)&custs1_long_value_char},

    // Long Value Characteristic Value
    [CUST1_IDX_LONG_VALUE_VAL]       = {CUST1_LONG_VALUE_UUID_128, ATT_UUID_128_LEN, PERM(RD, ENABLE) | PERM(WR,
ENABLE) | PERM(NTF, ENABLE),
                                         DEF_CUST1_LONG_VALUE_CHAR_LEN, 0, NULL},

    // Long Value Client Characteristic Configuration Descriptor
    [CUST1_IDX_LONG_VALUE_NTF_CFG]   = {(uint8_t*)&att_decl_cfg, ATT_UUID_16_LEN, PERM(RD, ENABLE) | PERM(WR,
ENABLE),
                                         sizeof(uint16_t), 0, NULL},

    // Long Value Characteristic User Description
    [CUST1_IDX_LONG_VALUE_USER_DESC] = { (uint8_t*)&att_decl_user_desc, ATT_UUID_16_LEN, PERM(RD, ENABLE),
                                         sizeof(CUST1_LONG_VALUE_CHAR_USER_DESC) - 1,
sizeof(CUST1_LONG_VALUE_CHAR_USER_DESC) - 1, CUST1_LONG_VALUE_CHAR_USER_DESC},
```

Customer services Contents

Adding a characteristic step by step

TODO 13 - Add your your characteristic declaration, value and description in custom server database attributes

```
/* @file user_custs_config.h */
```

```
/* copy and paste in code step 13 add your characteristic declaration, value and description in database attributes
*/

// Your Control Point Characteristic Declaration
[CUST1_IDX_YOUR_CONTROL_POINT_CHAR] = {(uint8_t*)&att_decl_char, ATT_UUID_16_LEN, PERM(RD, ENABLE),
                                       sizeof(custs1_your_ctrl_point_char),
sizeof(custs1_your_ctrl_point_char), (uint8_t*)&custs1_your_ctrl_point_char},
// Your Control Point Characteristic Value
[CUST1_IDX_YOUR_CONTROL_POINT_VAL]   = {CUST1_YOUR_CTRL_POINT_UUID_128, ATT_UUID_128_LEN, PERM(WR, ENABLE),
                                       DEF_CUST1_YOUR_CTRL_POINT_CHAR_LEN, 0, NULL},
// Your Control Point Characteristic User Description
[CUST1_IDX_YOUR_CONTROL_POINT_USER_DESC] = {(uint8_t*)&att_decl_user_desc, ATT_UUID_16_LEN, PERM(RD, ENABLE),
                                       sizeof(CUST1_YOUR_CONTROL_POINT_USER_DESC) - 1,
sizeof(CUST1_YOUR_CONTROL_POINT_USER_DESC) - 1, CUST1_YOUR_CONTROL_POINT_USER_DESC},
};
```



Customer services Contents

How is it working?

- Several events can occur during the lifetime of the BLE application and these events need to be handled in a specific manner.
- The SDK is flexible enough to either call a default handler or call the user's defined event or operation handler to handle specific events.
- The SDK mechanism, which is provided to the user in order to take care of the above, is the registration of callback functions for every event or operation.
- The C header file *user_callback_config.h*, which resides in user space, contains the registration of the callback functions.

Customer services Contents

Abstract code flow

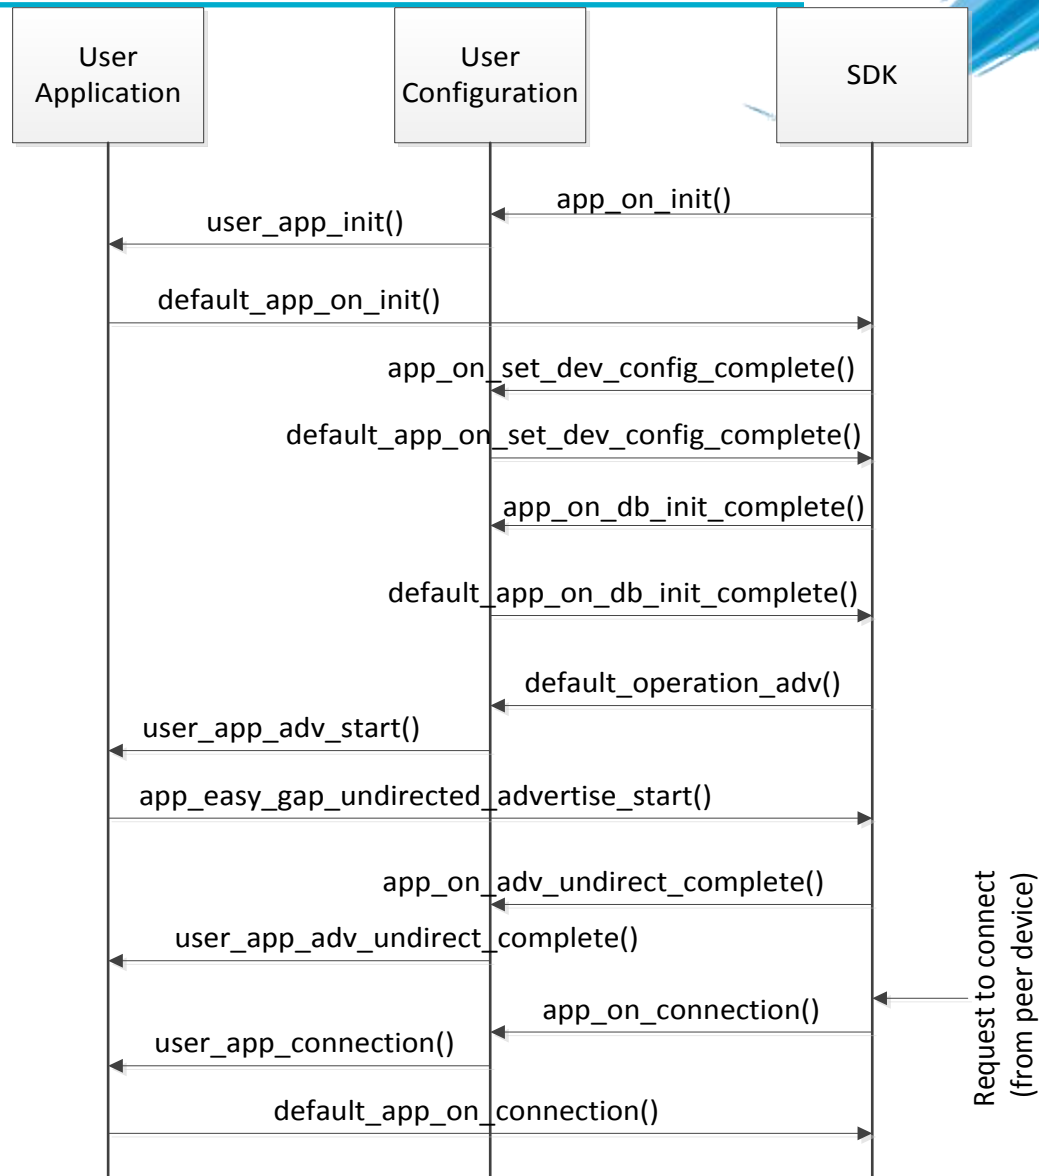

Customer services Contents

user_callback_config.h important function discussion

```
static const struct arch_main_loop_callbacks user_app_main_loop_callbacks = {
    .app_on_init          = user_app_init,
    .app_on_ble_powered   = NULL,
    .app_on_sytem_powered = NULL,
    .app_before_sleep     = NULL,
    .app_validate_sleep   = NULL,
    .app_going_to_sleep   = NULL,
    .app_resume_from_sleep = NULL,
};
```

→

```
void user_app_init(void)
{
    // Initialize Manufacturer Specific Data
    mnf_data_init();
    // Initialize default services and set sleep mode
    default_app_on_init();
}
```

Customer services Contents

Overview *user_callback_config.h*

```
static const struct app_callbacks user_app_callbacks = {  
    // Handle connection request indication, if no connection has been established restart advertising  
    .app_on_connection          = user_app_connection,  
    .app_on_disconnect          = user_app_disconnect, // Restart Advertising  
    /* Add the first required service in the database  
       if database initialized then  
       No service to add in the DB -> Start Advertising */  
    .app_on_set_dev_config_complete = default_app_on_set_dev_config_complete,  
    /* If advertising was canceled for any reason other than connection establishment  
       then update advertising data and start advertising again */  
    .app_on_adv_undirect_complete  = user_app_adv_undirect_complete,  
    // database initialization is completed, then set the initial values of service characteristics programmatically  
    .app_on_db_init_complete       = default_app_on_db_init_complete,  
    .app_on_scanning_completed     = NULL, // NULL indicated this indication will not be handled by Dialog SDK;  
    .app_on_adv_report_ind         = NULL, // either implement it or use the existing code based on your requirement  
};  
  
// Handles the messages that are not handled by the SDK internal mechanisms.  
static const catch_rest_event_func_t app_process_catch_rest_cb = (catch_rest_event_func_t)user_catch_rest_hdl;
```

Customer services Contents

user_custs_config.h

Add custom1 server function callback table.

```
/// Custom1/2 server function callback table this is linking point of your database and DA1458x SDK5.0.3
static const struct cust_prf_func_callbacks cust_prf_funcs[] =
{
    #if (BLE_CUSTOM1_SERVER)
    { TASK_CUSTS1,
      custs1_att_db,
      CUST1_IDX_NB,
      #if (BLE_APP_PRESENT)
      app_custs1_create_db, app_custs1_enable,
      #else
      NULL, NULL,
      #endif
      custs1_init, NULL
    },
    #endif
    #if (BLE_CUSTOM2_SERVER)
    { TASK_CUSTS2,
      NULL,
      0,
      #if (BLE_APP_PRESENT)
      app_custs2_create_db, app_custs2_enable,
      #else
      NULL, NULL,
      #endif
      custs2_init, NULL
    },
    #endif
    {TASK_NONE, NULL, 0, NULL, NULL, NULL, NULL}, // DO NOT MOVE. Must always be last
};

/// Structure of custom profile call back function table.
struct cust_prf_func_callbacks
{
    /// Profile Task ID.
    enum KE_TASK_TYPE task_id;
    /// pointer to the custom database table defined by user
    const struct attm_desc_128 *att_db;
    /// max number of attributes in custom database
    const uint8_t max_nb_att;
    /// Pointer to the custom database create function defined by user
    prf_func_void_t db_create_func;
    /// Pointer to the custom profile enable function defined by user
    prf_func_uint16_t enable_func;
    /// Pointer to the custom profile initialization function
    prf_func_void_t init_func;
    /// Pointer to the validation function defined by user
    prf_func_validate_t value_wr_validation_func;
};
```

BLE Contents



What would you see as output

- The LightBlue iOS application can be used to connect an iPad/iPod/iPhone device to the application. In such a case the iPad/iPod/iPhone acts as a BLE Central and the application as a BLE Peripheral. It should be listed by the name given in the USER_DEVICE_NAME definition.
- One service should be listed – the Device Information Service. On some scanners, this will be listed either as a named service, or as a set of hex numbers (0A 18) as part of a list of 16-bit Service class UUIDs.
- On connecting to the device, the Characteristics should be retrieved.

BLE Contents

What would you see as output

iPad 5:57 p.m. 86%
< LightBlue Peripheral Clone

DIALOG-PRFL
UUID: AF4CFEBA-7473-2DC2-5C63-1468E64873E6

Connected

ADVERTISEMENT DATA Show

Device Information

Manufacturer Name String
Dialog Semi >

Model Number String
DA1458x >

Firmware Revision String
v_5.0.1.141 >

Software Revision String
x.y.z >

System ID
<123456ff fe9abcde> >

PnP ID
<01d20080 050001> >

UUID: EDFEC62E-9910-0BAC-5241-D8BDA6932A2F

Control Point
Properties: Write
UUID: 2D86686A-53DC-25B3-0C4A-F0E10C8DEE20

LED State
Properties: Write Without Response
UUID: 5A87B4EF-3BFA-76A8-E642-92933C31434F

ADC Value 1
Properties: Read Notify
UUID: 15005991-B131-3396-014C-664C9867B917

ADC Value 2
Properties: Read
UUID: 6EB675AB-8BD1-1B9A-7444-621E52EC6823

Button State

Log

DEF_CUST1_SVC_UUID_128

ATT_CHAR_PROP_WR

DEF_CUST1_CTRL_POINT_UUID_128

Find out yourself – Your Ctrl Point GOOD LUCK \(^_^)/



BLE Contents



What would you see as output


- **Note:** The devices will be connectable in this and future examples. Connecting to a device will mean that other scanners won't be able to locate the device – it is recommended that you only connect to your own device.
- **Note:** Some scanners (notably Apple devices) may not update the name of device if it is changed – to correct this, it is necessary to disable then re-enable Bluetooth.

BLE Contents

Reference

- <https://developer.bluetooth.org/gatt/Pages/default.aspx>
- <https://www.bluetooth.com/specifications/adopted-specifications>
- <http://support.dialog-semiconductor.com/connectivity>
- https://www.wikiwand.com/en/Universally_unique_identifier
- **Register with Dialog semiconductor to get enormous development support**
 - <http://support.dialog-semiconductor.com/user/register>

The Power To Be...

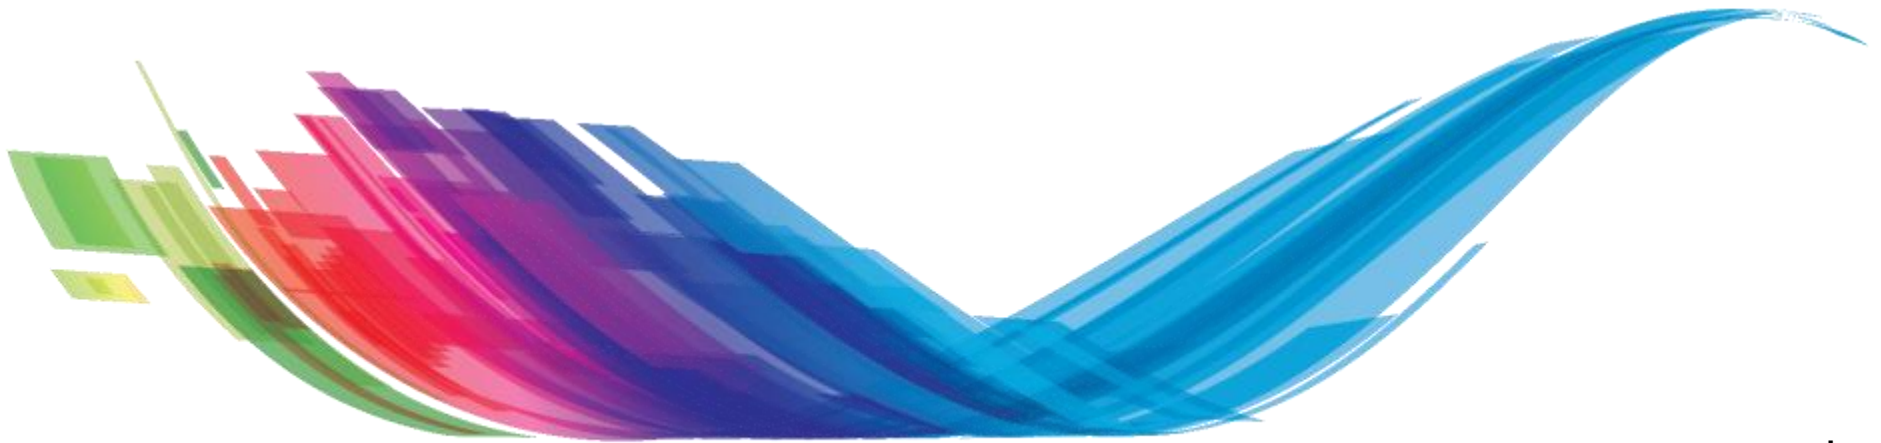

...personal
...portable
...connected