



NORTEK QUICK GUIDE

# Aquadopp Profiler



Oct. 2017

## Please check that all expected items are included in the shipment:

- The instrument
- External power/signal cable
- NORTEK equipment storage box/toolkit
- USB to serial converter
- AC/DC voltage transformer
- Power cable (European or American)
- Battery harness for 2x batteries
- Software on USB memory stick
- Final test check list
- Packing list

## Install the Nortek software

The instrument's software is located on the attached memory stick.

Please check the web regularly for updates on both software and firmware.

This Quick Guide provides you with the basic information you need to get the instrument up and running as quickly as possible. If you are familiar with the Nortek instruments, this guide may be all you need. If you are new to our instruments and software, you should check out the Nortek Comprehensive Manual (available on the web), which includes principles of operation, mounting guidelines, troubleshooting, service manual and simple system integration. You will also find much useful information in the FAQ site at the Nortek web: [www.nortekgroup.com](http://www.nortekgroup.com)

## Preparation

- Connect the battery/power cable.
- Install the software located on the USB memory stick. Once the installation is complete, launch the application related to your instrument.
- Run a Functional Test, described in the **Service Manual** chapter in the comprehensive manual.
- Set the Pressure Offset: **On-line > Set Pressure Offset**.
- If there are magnetic materials in proximity to the instrument when mounted, a calibration of the compass is necessary: **On-line > Compass Calibration**.
- Erase the recorder in advance of every deployment.

## Deployment Planning

- Select **Deployment Planning**.
- The activated dialog contains all parameters required to specify the operation of the instrument. The Deployment Planning frame on the right-hand side of the dialog displays performance parameters that are automatically updated as you change the settings. Use the Standard configuration to plan your deployment unless you have a very good reason to move to *Advanced*. The latter increases the flexibility but so does the risk of making mistakes. Note that the **Use Advanced Settings** box (in the Standard tab) must be checked for the advanced settings to be effective. A description of each parameter can be found in the application help, accessible from the dialog box.
- When finished, press **OK** to accept the changes. By using the Open/Save commands in the File menu (or the corresponding toolbar buttons) the deployment parameters can be saved to file at any given time and re-loaded when it is time to deploy the instrument.

## Start Recorder Deployment

- Establish communication with the instrument.
- Select **Start Recorder Deployment**, either from the pull-down menu or from the toolbar.
- Specify the date and time to start the data recording.
- In the Name field, enter up to six characters of text to identify the data file stored in the recorder.
- In the File Comment box, enter up to 180 characters of text that will be included in the data file for documenting the data set.
- After pressing **OK**, the Set Clock dialog box is displayed. We recommend setting the clock to PC time. The time reference is especially important to ensure proper synchronization between the instrument and other data sets collected independently. Time spent on setting the time properly before a deployment can save a lot of time in post processing and analysis.
- Press **Yes** to continue. A confirmation dialog will display the deployment parameters and allow you to verify that the set-up is what you intended.
- Press **Confirm** to send the configuration to the instrument. The instrument will verify that the deployment has started. The configuration information from the deployment sequence is saved in a log file that has the same name as the deployment.

## Stop Recorder Deployment

- Select **Stop Recorder Deployment**. When data acquisition has stopped, a dialog box will display the current AWAC and PC clock time.

## Data Retrieval

- Select **Recorder Data Retrieval**.
- The recorder overview dialog will show a list of all files currently stored in the recorder, including the time of the first measurement and the size for each file.
- Select a file in the list by clicking on the filename. Press **Retrieve** to specify the name and disk location of the file.

## Data Conversion

- To convert binary data files retrieved from the recorder to a readable ASCII format, select **Data Conversion**.
- Add files to the Files to convert list by using the **Add file...** file selection dialog. Select the file to convert in the list and press the blue arrow. Specify the location for the converted files in the Save in folder field. An optional pre- or postfix that will be added to the recorder filename may be specified. Select from the View files drop-down list to open the converted (ASCII) files in Notepad.

## On-line Data Collection

- Select **Start Data Collection** from the On-line menu (or press the toolbar button) to start data acquisition. The real time display shows velocity data and sensor data as it is collected.
- To capture the data that comes in over the serial port to disk select **Disk Recording...** from the On-line menu and define the name of a file (without extension). Once this disk file is defined, the Start Disk Recording and Stop Disk Recording menu items and toolbar buttons will be enabled.

Tip! Check the retrieved data before deploying the instrument for the second time. If something is wrong with the instrument, the configuration or the deployment, this will be detected and the possibility of making the same mistake twice is avoided.

## Mounting

Proper mounting of the instrument is crucial for successful collection of data. Please mount the instrument in accordance with the **Mounting Guidelines**.

## Basic principles

The instrument measures current speed and direction by transmitting sound waves that are reflected by particles drifting with the currents in the water. The Doppler shift of the return signal is proportional to the velocity component along the beams. By combining the Doppler shifts from the beams, 2D (2 beams) or 3D (3 beams) velocity is calculated.

## Measuring waves

Both the Aquadopp Current Meter and Aquadopp Current Profiler can measure waves using the PUV method. The pressure measurement provides a means of estimating all the non-directional wave parameters, while the combined P, U, and V measurements allow for estimating the directional wave parameters. These data need to be post processed.

## Data analyses

The software supplied has been designed to provide you with the ability to set the instrument up for deployment, upgrade the firmware, download acquired data and do a quality assurance of them. The data can be converted to ASCII files that can be imported into various post-processing programs. In addition, Nortek has developed a series of real time and post-processing software packages that simplifies your analyzing work. These can be downloaded from our website. Contact Nortek for valid license key.

## Cables

Our instruments are mostly shipped with RS232 communication. RS422 is used for cables longer than 50 m. The wiring is shown in the tables to the right. The output can either be in ASCII, in fixed NMEA format, or binary format.

Communication baud rate: 300-115200 (user setting).  
Recorder download baud rate: 600/1200 kBaud.

Ensure that the connectors and dummy plugs are lubricated with dielectric silicone. We recommend 3M silicone spray. Note that the silicone grease included in the shipment should be used on the O-rings only.

## Analog Input (default for most instruments)

The instrument can read two analog inputs at the same time. The input range is 0-5V, corresponding to 0-65535 counts in the data file.

## Power

- DC Input: 9-16 VDC
- Battery DC-input: Nominal voltage: 13.5-18V
- Absolute maximum DC input voltage: 18.6 V

## System Integrator Manual

For more information on how to control a Nortek product with a non-PC controller, a System Integrator Manual is available on the website.


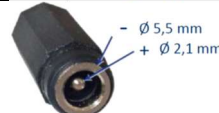
## Troubleshooting


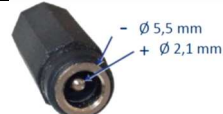
As most problems are caused by simple mistakes, please initially check if



- you have forgotten to power the system
- the connector has fallen out of the computer
- you are using the wrong serial port

When all obvious mistakes are ruled out, please turn to our **Troubleshooting Guide**. The FAQ site may also be helpful.

**If the problem is still present contact Nortek support at [support@nortekgroup.com](mailto:support@nortekgroup.com)**

Underwater Connector			Termination		
Pin. No	Wire Color	Purpose		Pins	Description
3	black	RS232 Tx	Twisted Pair	2	
4	white	RS232 Rx		3	
5	black	RS232 Gnd	Twisted Pair	5	
6	white/purple	Power Output			
7	black	Analogue Ch. 2	Twisted Pair		
8	white/orange	Analogue Ch. 1			
1	black	Power Gnd	Twisted Pair		
2	white	Power +			
Screen terminated at pin 1 in underwater connector, unterminated at PC side.					
Ref: N2100-002A					

Underwater Connector			Termination		
Pin. No	Wire Color	Purpose		Pins	Description
3	black	RS422 Tx +	Twisted Pair	7	
4	white	RS422 Tx -		2	
7	black	RS422 RX -	Twisted Pair	8	
8	white/orange	RS422 RX+		3	
5	black	Sync. Out	Twisted Pair		
6	white/purple	Sync. In			
1	black	Power Gnd	Twisted Pair		
2	white	Power +			
Screen terminated at pin 1 in underwater connector, unterminated at PC side.					
					Ref: N2100-108

Underwater Connector				Termination	
Pin. No	Wire Color	Purpose		Pins	Description
3	black	RS232 Tx	Twisted Pair	2	
4	white	RS232 Rx		3	
5	Black	Ground	Twisted Pair	5	
6	white/purple	Analogue Z*			
7	Black	Analogue X	Twisted Pair	Green wire	
8	white/orange	Analogue Y		Yellow wire	
1	black	Power Gnd	Twisted Pair	Black wire	
2	white	Power +		White wire	
Screen	Bare	Ground	3 bare wires for grounds, connected internally to power ground.		
Ref: N2100-004					

Wiring of RS232 with option for analogue outputs.  
\*Optional version outputs pressure instead of Z-velocity

