



Set up NAS path failover (ONTAP 9.8 and later)

ONTAP 9

NetApp
May 13, 2021

This PDF was generated from https://docs.netapp.com/us-en/ontap/networking/workflow__nas_path_failover_overview_auto.html on May 13, 2021. Always check docs.netapp.com for the latest.

Table of Contents

- Set up NAS path failover (ONTAP 9.8 and later CLI)..... 1
 - Workflow NAS path failover 2
 - Get more information 22

Set up NAS path failover (ONTAP 9.8 and later CLI)

This workflow guides you through the networking configuration steps to set up NAS path failover for ONTAP 9.8 and later. This workflow assumes the following:

- You want to use NAS path failover best practices in a workflow that simplifies network configuration.
- You want to use the CLI, not ONTAP System Manager.
- You are configuring networking on a new system running ONTAP 9.8 or later.

If you are running an ONTAP release earlier than 9.8, you should use the following NAS path failover procedure for ONTAP 9.0 to 9.7:

- [ONTAP 9.0 - 9.7 NAS Path Failover Workflow](#)

If you want network management details, you should use the following ONTAP 9 Network Management Reference:

- [ONTAP 9 Network Management Reference](#)

If you want to use ONTAP System Manager to configure the network for ONTAP 9.7 and later, you should choose the following documentation:

- [ONTAP System Manager docs](#)

If you want to use OnCommand System Manager to configure the network for ONTAP 9.7 and earlier, you should choose the following documentation:

- [Cluster management using System Manager](#)

If you require additional configuration or conceptual information, you should choose among the following documentation:

- Conceptual background for network configuration
 - [ONTAP concepts](#)
- NAS file access
 - [NFS management](#)
 - [SMB/CIFS management](#)
- SAN host provisioning
 - [SAN administration](#)
- Command reference
 - [ONTAP 9 commands](#)
- Technical Reports (TRs), which include additional information about ONTAP technology and interaction with external services
 - [NetApp Technical Report 4182: Ethernet Storage Design Considerations and Best Practices for Clustered Data ONTAP Configurations](#)

Workflow NAS path failover

Overview

If you are already familiar with basic networking concepts, you might be able to save time setting up your network by reviewing this "hands on" workflow for NAS path failover configuration.

A NAS LIF automatically migrates to a surviving network port after a link failure on its current port. You can rely on the ONTAP defaults to manage path failover.



A SAN LIF does not migrate (unless you move it manually after the link failure). Instead, multipathing technology on the host diverts traffic to a different LIF. For more information, see [SAN administration](#).

Worksheet for NAS path failover configuration for ONTAP 9.8 and later

You should complete all sections of the worksheet before configuring NAS path failover.

IPspace configuration

You can use an IPspace to create a distinct IP address space for each SVM in a cluster. Doing so enables clients in administratively separate network domains to access cluster data while using overlapping IP addresses from the same IP address subnet range.

Information	Required?	Your values
IPspace name The unique identifier of the IPspace.	Yes	

Broadcast domain configuration

A broadcast domain groups ports that belong in the same Layer 2 network and sets the MTU for the broadcast domain ports.

Broadcast domains are assigned to an IPspace. An IPspace can contain one or more broadcast domains.



The port to which a LIF fails over must be a member of the failover group for the LIF. For each broadcast domain created by ONTAP, a failover group with the same name is also created that contains all the ports in the broadcast domain.

Information	Required?	Your values
<p>IPspace name</p> <p>The IPspace to which the broadcast domain is assigned.</p> <p>This IPspace must exist.</p>	Yes	
<p>Broadcast domain name</p> <p>The name of the broadcast domain.</p> <p>This name must be unique in the IPspace.</p>	Yes	
<p>MTU</p> <p>The maximum transmission unit value for the broadcast domain, either 1500 or 9000.</p> <p>The MTU value is applied to all ports in the broadcast domain and to any ports that are later added to the broadcast domain.</p> <p>The MTU value must match all the devices connected to that network except for e0M port handling management traffic.</p>	Yes	
<p>Ports</p> <p>Ports are assigned to broadcast domains based on reachability. After port assignment is complete, check reachability by running the <code>network port reachability show</code> command.</p> <p>These ports can be physical ports, VLANs, or interface groups.</p>	Yes	

Subnet configuration

A subnet contains pools of IP addresses and a default gateway that can be assigned to LIFs used by SVMs residing in the IPspace.

- When creating a LIF on an SVM, you can specify the name of the subnet instead of supplying an IP address and a subnet.
- Since a subnet can be configured with a default gateway, you do not have to create the default gateway in a separate step when creating an SVM.
- A broadcast domain can contain one or more subnets.

- You can configure SVM LIFs that are on different subnets by associating more than one subnet with the IPspace's broadcast domain.
- Each subnet must contain IP addresses that do not overlap with IP addresses assigned to other subnets in the same IPspace.
- You can assign specific IP addresses to SVM data LIFs and create a default gateway for the SVM instead of using a subnet.

Information	Required?	Your values
<p>IPspace name The IPspace to which the subnet will be assigned.</p> <p>This IPspace must exist.</p>	Yes	
<p>Subnet name The name of the subnet.</p> <p>This name must be unique in the IPspace.</p>	Yes	
<p>Broadcast domain name The broadcast domain to which the subnet will be assigned.</p> <p>This broadcast domain must reside in the specified IPspace.</p>	Yes	
<p>Subnet name and mask The subnet and mask in which the IP addresses reside.</p>	Yes	
<p>Gateway You can specify a default gateway for the subnet.</p> <p>If you do not assign a gateway when you create the subnet, you can assign one later.</p>	No	

Information	Required?	Your values
<p>IP address ranges</p> <p>You can specify a range of IP addresses or specific IP addresses.</p> <p>For example, you can specify a range such as:</p> <p>192.168.1.1-192.168.1.100, 192.168.1.112, 192.168.1.145</p> <p>If you do not specify an IP address range, the entire range of IP addresses in the specified subnet are available to assign to LIFs.</p>	No	
<p>Force update of LIF associations</p> <p>Specifies whether to force the update of existing LIF associations.</p> <p>By default, subnet creation fails if any service processor interfaces or network interfaces are using the IP addresses in the ranges provided.</p> <p>Using this parameter associates any manually addressed interfaces with the subnet and allows the command to succeed.</p>	No	

SVM configuration

You use SVMs to serve data to clients and hosts.

The values you record are for creating a default data SVM. If you are creating a MetroCluster source SVM, see the [Fabric-attached MetroCluster Installation and Configuration Guide](#) or the [Stretch MetroCluster Installation and Configuration Guide](#).

Information	Required?	Your values
<p>SVM name</p> <p>The fully qualified domain name (FQDN) of the SVM.</p> <p>This name must be unique across cluster leagues.</p>	Yes	
<p>Root volume name</p> <p>The name of the SVM root volume.</p>	Yes	

Information	Required?	Your values
<p>Aggregate name The name of the aggregate that holds the SVM root volume.</p> <p>This aggregate must exist.</p>	Yes	
<p>Security style The security style for the SVM root volume.</p> <p>Possible values are ntfs, unix, and mixed.</p>	Yes	
<p>IPspace name The IPspace to which the SVM is assigned.</p> <p>This IPspace must exist.</p>	No	
<p>SVM language setting The default language to use for the SVM and its volumes.</p> <p>If you do not specify a default language, the default SVM language is set to C.UTF-8.</p> <p>The SVM language setting determines the character set used to display file names and data for all NAS volumes in the SVM.</p> <p>You can modify The language after the SVM is created.</p>	No	

LIF configuration

An SVM serves data to clients and hosts through one or more network logical interfaces (LIFs).

Information	Required?	Your values
<p>SVM name The name of the SVM for the LIF.</p>	Yes	

Information	Required?	Your values
<p>LIF name The name of the LIF.</p> <p>You can assign multiple data LIFs per node, and you can assign LIFs to any node in the cluster, provided that the node has available data ports.</p> <p>To provide redundancy, you should create at least two data LIFs for each data subnet, and the LIFs assigned to a particular subnet should be assigned home ports on different nodes.</p> <p>Important: If you are configuring a SMB server to host Hyper-V or SQL Server over SMB for nondisruptive operation solutions, the SVM must have at least one data LIF on every node in the cluster.</p>	Yes	
<p>Service policy Service policy for the LIF.</p> <p>The service policy defines which network services can use the LIF. Built-in services and service policies are available for managing data and management traffic on both data and system SVMs.</p>	Yes	
<p>Allowed protocols IP-based LIFs do not require allowed protocols, use the service policy row instead.</p> <p>Specify allowed protocols for SAN LIFs on FibreChannel ports. These are the protocols that can use that LIF. The protocols that use the LIF cannot be modified after the LIF is created. You should specify all protocols when you configure the LIF.</p>	No	

Information	Required?	Your values
<p>Home node The node to which the LIF returns when the LIF is reverted to its home port.</p> <p>You should record a home node for each data LIF.</p>	Yes	
<p>Home port or broadcast domain Chose one of the following:</p> <p>Port: Specify the port to which the logical interface returns when the LIF is reverted to its home port. This is only done for the first LIF in the subnet of an IPspace, otherwise it is not required.</p> <p>Broadcast Domain: Specify the broadcast domain, and the system will select the appropriate port to which the logical interface returns when the LIF is reverted to its home port.</p>	Yes	
<p>Subnet name The subnet to assign to the SVM.</p> <p>All data LIFs used to create continuously available SMB connections to application servers must be on the same subnet.</p>	Yes (if using a subnet)	

DNS configuration

You must configure DNS on the SVM before creating an NFS or SMB server.

Information	Required?	Your values
<p>SVM name The name of the SVM on which you want to create an NFS or SMB server.</p>	Yes	
<p>DNS domain name A list of domain names to append to a host name when performing host- to-IP name resolution.</p> <p>List the local domain first, followed by the domain names for which DNS queries are most often made.</p>	Yes	

Information	Required?	Your values
<p>IP addresses of the DNS servers List of IP addresses for the DNS servers that will provide name resolution for the NFS or SMB server.</p> <p>The listed DNS servers must contain the service location records (SRV) needed to locate the Active Directory LDAP servers and domain controllers for the domain that the SMB server will join.</p> <p>The SRV record is used to map the name of a service to the DNS computer name of a server that offers that service. SMB server creation fails if ONTAP cannot obtain the service location records through local DNS queries.</p> <p>The simplest way to ensure that ONTAP can locate the Active Directory SRV records is to configure Active Directory-integrated DNS servers as the SVM DNS servers.</p> <p>You can use non-Active Directory-integrated DNS servers provided that the DNS administrator has manually added the SRV records to the DNS zone that contains information about the Active Directory domain controllers.</p> <p>For information about the Active Directory-integrated SRV records, see the topic How DNS Support for Active Directory Works on Microsoft TechNet.</p>	Yes	

Dynamic DNS configuration

Before you can use dynamic DNS to automatically add DNS entries to your Active Directory- integrated DNS servers, you must configure dynamic DNS (DDNS) on the SVM.

DNS records are created for every data LIF on the SVM. By creating multiple data LIFS on the SVM, you can load-balance client connections to the assigned data IP addresses. DNS load balances connections that are made using the host name to the assigned IP addresses in a round- robin fashion.

Information	Required?	Your values
SVM name The SVM on which you want to create an NFS or SMB server.	Yes	
Whether to use DDNS Specifies whether to use DDNS. The DNS servers configured on the SVM must support DDNS. By default, DDNS is disabled.	Yes	
Whether to use secure DDNS Secure DDNS is supported only with Active Directory-integrated DNS. If your Active Directory-integrated DNS allows only secure DDNS updates, the value for this parameter must be true. By default, secure DDNS is disabled. Secure DDNS can be enabled only after a SMB server or an Active Directory account has been created for the SVM.	No	
FQDN of the DNS domain The FQDN of the DNS domain. You must use the same domain name configured for DNS name services on the SVM.	No	

Create IPspaces

You can use an IPspace to create a distinct IP address space for each SVM in a cluster. Doing so enables clients in administratively separate network domains to access cluster data while using overlapping IP addresses from the same IP address subnet range.

Before you begin

You must be a cluster administrator to perform this task.

Step

Create an IPspace.

```
network ipspace create -ipspace ipspace1
```

```
network ipspace show
```

IPspace	Vserver List	Broadcast Domains
Cluster	Cluster	Cluster
Default	Cluster1	Default
ipspace1	ipspace1	-

The IPspace is created, along with the system SVM for the IPspace. The system SVM carries management traffic.

Move broadcast domains into IPspaces

Move the broadcast domains that the system created based on layer 2 reachability into the IPspaces you created.

Before you move the broadcast domain, you must verify the reachability of the ports in your broadcast domains.

The automatic scanning of ports can determine which ports can reach each other and place them in the same broadcast domain, but this scanning is unable to determine the appropriate IPspace. If the broadcast domain belongs in a non-default IPspace, then you must move it manually using the steps in this section.

Before you begin

Broadcast domains are automatically configured as part of cluster create and join operations. ONTAP defines the "Default" broadcast domain to be the set of ports that have layer 2 connectivity to the home port of the management interface on the first node created in the cluster. Other broadcast domains are created, if necessary, and are named **Default-1**, **Default-2**, and so forth.

When a node joins an existing cluster, their network ports automatically join existing broadcast domains based on their layer 2 reachability. If they do not have reachability to an existing broadcast domain, the ports are placed into one or more new broadcast domains.

About this task

- Ports with cluster LIFs are automatically placed into the "Cluster" IPspace.
- Ports with reachability to the home port of the node-management LIF are placed into the "Default" broadcast domain.
- Other broadcast domains are created by ONTAP automatically as part of the cluster create or join operation.
- As you add VLANs and interface groups, they are automatically placed into the appropriate broadcast domain about a minute after they are created.

Steps

1. Verify the reachability of the ports in your broadcast domains. ONTAP automatically monitors layer 2 reachability. Use the following command to verify each port has been added to a broadcast domain and has "ok" reachability.

```
network port reachability show -detail
```

2. If necessary, move broadcast domains into other IPspaces:

```
network port broadcast-domain move
```

For example, if you want to move a broadcast domain from "Default" to "ips1":

```
network port broadcast-domain move -ipspace Default -broadcast-domain Default  
-to-ipspace ips1
```

Repair port reachability

Broadcast domains are automatically created. However, if a port is recabled, or the switch configuration changes, a port might need to be repaired into a different broadcast domain (new or existing).

Before you begin

You must be a cluster administrator to perform this task.

About this task

A command is available to automatically repair the broadcast domain configuration for a port based on the layer 2 reachability detected by ONTAP.


Steps

1. Check your switch configuration and cabling.
2. Check the reachability of the port:

```
network port reachability show -detail -node -port
```

The command output contains reachability results.

3. Use the following decision tree and table to understand the reachability results and determine what, if anything, to do next.

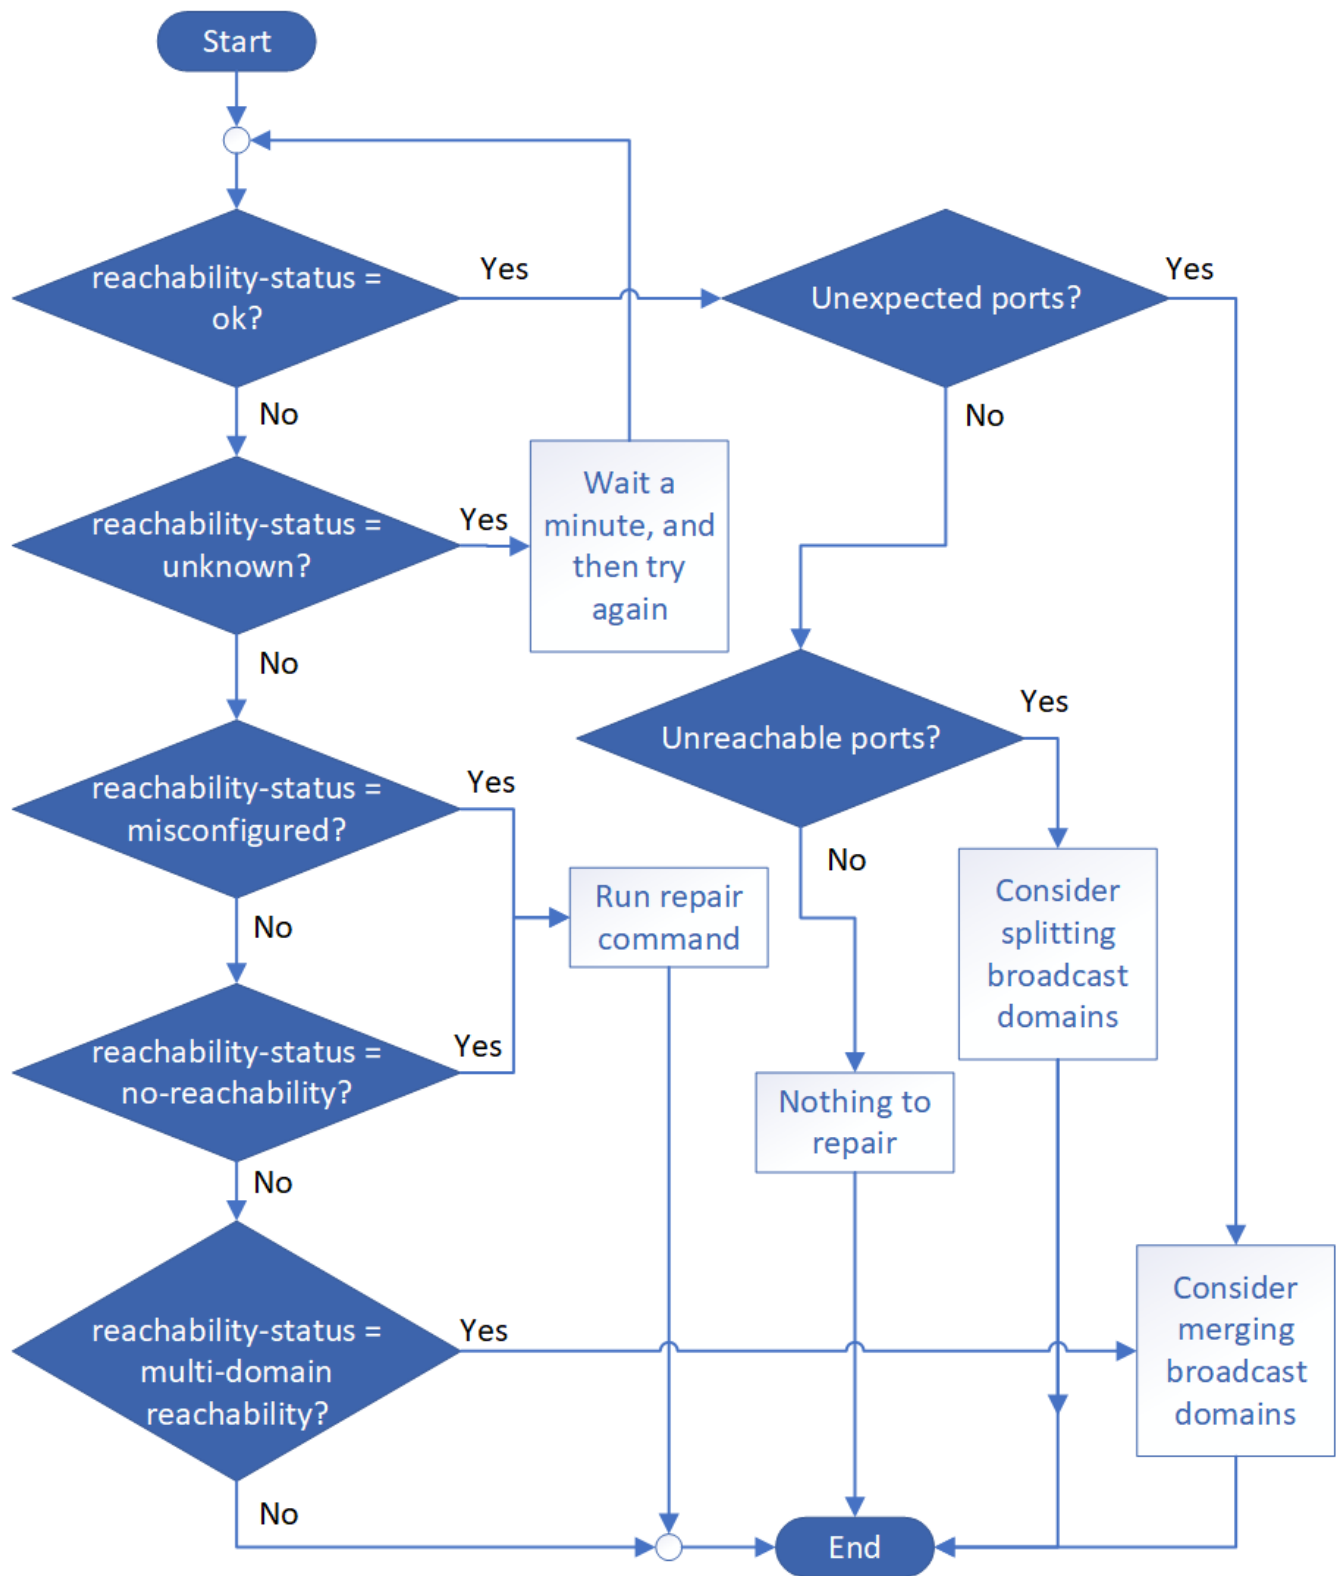

Reachability-status	Description
ok	<p>The port has layer 2 reachability to its assigned broadcast domain.</p> <p>If the reachability-status is "ok", but there are "unexpected ports", consider merging one or more broadcast domains. For more information, see the following <i>Unexpected ports</i> row.</p> <p>If the reachability-status is "ok", but there are "unreachable ports", consider splitting one or more broadcast domains. For more information, see the following <i>Unreachable ports</i> row.</p> <p>If the reachability-status is "ok", and there are no unexpected or unreachable ports, your configuration is correct.</p>
Unexpected ports	<p>The port has layer 2 reachability to its assigned broadcast domain; however, it also has layer 2 reachability to at least one other broadcast domain.</p> <p>Examine the physical connectivity and switch configuration to determine if it is incorrect or if the port's assigned broadcast domain needs to be merged with one or more broadcast domains.</p> <p>For more information, see Merge broadcast domains.</p>
Unreachable ports	<p>If a single broadcast domain has become partitioned into two different reachability sets, you can split a broadcast domain to synchronize the ONTAP configuration with the physical network topology.</p> <p>Typically, the list of unreachable ports defines the set of ports that should be split into another broadcast domain after you have verified that the physical and switch configuration is accurate.</p> <p>For more information, see Split broadcast domains.</p>
misconfigured-reachability	<p>The port does not have layer 2 reachability to its assigned broadcast domain; however, the port does have layer 2 reachability to a different broadcast domain.</p> <p>You can repair the port reachability. When you run the following command, the system will assign the port to the broadcast domain to which it has reachability:</p> <pre>network port reachability repair -node -port</pre>

Reachability-status	Description
no-reachability	<p>The port does not have layer 2 reachability to any existing broadcast domain.</p> <p>You can repair the port reachability. When you run the following command, the system will assign the port to a new automatically created broadcast domain in the Default IPspace:</p> <pre>network port reachability repair -node -port</pre>
multi-domain-reachability	<p>The port has layer 2 reachability to its assigned broadcast domain; however, it also has layer 2 reachability to at least one other broadcast domain.</p> <p>Examine the physical connectivity and switch configuration to determine if it is incorrect or if the port's assigned broadcast domain needs to be merged with one or more broadcast domains.</p> <p>For more information, see Merge broadcast domains.</p>
unknown	<p>If the reachability-status is "unknown", then wait a few minutes and try the command again.</p>

After you repair a port, check for displaced LIFs and VLANs. If the port was part of an interface group, you also need to understand what happened to that interface group.

LIFs

When a port is repaired and moved into a different broadcast domain, any LIFs that were configured on the repaired port will be automatically assigned a new home port. That home port is selected from the same broadcast domain on the same node, if possible. Alternatively, a home port from another node is selected, or, if no suitable home ports exist, the home port will be cleared.

If a LIF's home port is moved to another node, or is cleared, then the LIF is considered to have been "displaced". You can view these displaced LIFs with the following command:

```
displaced-interface show
```

If there are any displaced LIFs, you must either:

- Restore the home of the displaced LIF:

```
displaced-interface restore
```

- Set the home of the LIF manually:

```
network interface modify -home-port -home-node
```

- Remove the entry from the "displaced-interface" table if you are satisfied with the LIF's currently configured

home:

```
displaced-interface delete
```

VLANs

If the repaired port had VLANs, those VLANs are automatically deleted but are also recorded as having been "displaced". You can view these displaced VLANs:

```
displaced-vlans show
```

If there are any displaced VLANs, you must either:

- Restore the VLANs to another port:

```
displaced-vlans restore
```

- Remove the entry from the "displaced-vlans" table:

```
displaced-vlans delete
```

Interface groups

If the repaired port was part of an interface group, it is removed from that interface group. If it was the only member port assigned to the interface group, the interface group itself is removed.

Related topics

[Verify your network configuration after upgrading](#)

[Monitor the reachability of network ports](#)

Create SVMs

You must create an SVM to serve data to clients.

Before you begin

- You must be a cluster administrator to perform this task.
- You must know which security style the SVM root volume will have.

If you plan to implement a Hyper-V or SQL Server over SMB solution on this SVM, you should use NTFS security style for the root volume. Volumes that contain Hyper-V files or SQL database files must be set to NTFS security at the time they are created. By setting the root volume security style to NTFS, you ensure that you do not inadvertently create UNIX or mixed security-style data volumes.

Steps

1. Determine which aggregates are candidates for containing the SVM root volume.

```
storage aggregate show -has-mroot false
```

You must choose an aggregate that has at least 1 GB of free space to contain the root volume. If you

intend to configure NAS auditing on the SVM, you must have a minimum of 3 GB of extra free space on the root aggregate, with the extra space being used to create the auditing staging volume when auditing is enabled.



If NAS auditing is already enabled on an existing SVM, the aggregate's staging volume is created immediately after aggregate creation is successfully completed.

2. Record the name of the aggregate on which you want to create the SVM root volume.
3. If you plan on specifying a language when you create the SVM and do not know the value to use, identify and record the value of the language you want to specify:

```
vserver create -language ?
```

4. If you plan on specifying a Snapshot policy when you create the SVM and do not know the name of the policy, list the available policies and identify and record the name of the Snapshot policy you want to use:

```
volume snapshot policy show -vserver <vserver_name>
```

5. If you plan on specifying a quota policy when you create the SVM and do not know the name of the policy, list the available policies and identify and record the name of the quota policy you want to use:

```
volume quota policy show -vserver <vserver_name>
```

6. Create an SVM:

```
vserver create -vserver <vserver_name> -aggregate <aggregate_name> -rootvolume  
<root_volume_name> -rootvolume-security-style {unix|ntfs|mixed} [-ipspace  
<IPspace_name>] [-language <language>] [-snapshot-policy  
<snapshot_policy_name>] [-quota-policy <quota_policy_name>] [-comment  
<comment>]
```

```
vserver create -vserver vs1 -aggregate aggr3 -rootvolume vs1_root -rootvolume-  
security-style ntfs -ipspace ipspace1 -language en_US.UTF-8
```

```
[Job 72] Job succeeded: Vserver creation completed
```

7. Verify that the SVM configuration is correct.

```
vserver show -vserver vs1
```

```
Vserver: vs1
Vserver Type: data
Vserver Subtype: default
Vserver UUID: 11111111-1111-1111-1111-111111111111
Root Volume: vs1_root
Aggregate: aggr3
NIS Domain: -
Root Volume Security Style: ntfs
LDAP Client: -
Default Volume Language Code: en_US.UTF-8
Snapshot Policy: default
Comment:
Quota Policy: default
List of Aggregates Assigned: -
Limit on Maximum Number of Volumes allowed: unlimited
Vserver Admin State: running
Vserver Operational State: running
Vserver Operational State Stopped Reason: -
Allowed Protocols: nfs, cifs, ndmp
Disallowed Protocols: fcp, iscsi
QoS Policy Group: -
Config Lock: false
IPspace Name: ipspace1
Is Vserver Protected: false
```

In this example, the command creates the SVM named "vs1" in IPspace "ipspace1". The root volume is named "vs1_root" and is created on aggr3 with NTFS security style.

Create LIFs

An SVM serves data to clients through one or more network logical interfaces (LIFs). You must create LIFs on the ports you want to use to access data.

Before you begin

You must be a cluster administrator to perform this task.

About this task

Starting with ONTAP 9.7, ONTAP automatically chooses the home port of a LIF, as long as at least one LIF already exists in the same subnet in that IPspace. ONTAP chooses a home-port in the same broadcast domain as other LIFs in that subnet. You can still specify a home port, but it is no longer required (unless no LIFs yet exist in that subnet in the specified IPspace).

You should not configure LIFs that carry CIFS traffic to automatically revert to their home nodes. This recommendation is mandatory if the CIFS server is to host a solution for nondisruptive operations with Hyper-V or SQL Server over SMB.

Steps

1. Determine which broadcast domain ports you want to use for the LIF.

```
network port broadcast-domain show -ipspace ipspace1
```

IPspace	Broadcast			Update
Name	Domain name	MTU	Port List	Status Details
ipspace1	default	1500		
			node1:e0d	complete
			node1:e0e	complete
			node2:e0d	complete
			node2:e0e	complete

2. Verify that the subnet you want to use for the LIFs contains sufficient unused IP addresses.

```
network subnet show -ipspace ipspace1
```

3. Create one or more LIFs on the ports you want to use to access data.

```
network interface create -vserver vs1 -lif lif1 -home-node node1 -home-port e0d -service-policy default-data-files -subnet-name ipspace1
```

4. Verify that the LIF interface configuration is correct.

```
network interface show -vserver vs1
```

Vserver	Logical Interface	Status Admin/Oper	Network Address/Mask	Current Node	Current Port	Is Home
vs1	lif1	up/up	10.0.0.128/24	node1	e0d	true

5. Verify that the failover group configuration is as desired.

```
network interface show -failover -vserver vs1
```

Vserver	Logical interface	Home Node:Port	Failover Policy	Failover Group
vs1	lif1	node1:e0d	system-defined	ipspace1
Failover Targets: node1:e0d, node1:e0e, node2:e0d, node2:e0e				

Configure DNS services

You must configure DNS services for the SVM before creating an NFS or SMB server. Generally, the DNS name servers are the Active Directory-integrated DNS servers for the domain that the NFS or SMB server will join.

About this task

Active Directory-integrated DNS servers contain the service location records (SRV) for the domain LDAP and domain controller servers. If the SVM cannot find the Active Directory LDAP servers and domain controllers, NFS or SMB server setup fails.

SVMs use the hosts name services ns-switch database to determine which name services to use and in which order when looking up information about hosts. The two supported name services for the hosts database are files and dns.

You must ensure that dns is one of the sources before you create the SMB server.



To view the statistics for DNS name services for the mgwd process and SecD process, use the Statistics UI.

Steps

1. Determine what the current configuration is for the hosts name services database. In this example, the hosts name service database uses the default settings.

```
vserver services name-service ns-switch show -vserver vs1 -database hosts
```

```
Vserver: vs1
Name Service Switch Database: hosts
Vserver: vs1 Name Service Switch Database: hosts
Name Service Source Order: files, dns
```

2. Perform the following actions, if required.
 - a. Add the DNS name service to the hosts name service database in the desired order, or reorder the sources.

In this example, the hosts database is configured to use DNS and local files in that order.

```
vserver services name-service ns-switch modify -vserver vs1 -database hosts
-sources dns,files
```

- b. Verify that the name services configuration is correct.

```
vserver services name-service ns-switch show -vserver vs1 -database hosts
```

```
Vserver: vs1
Name Service Switch Database: hosts
Name Service Source Order: dns, files
```

3. Configure DNS services.

```
vserver services name-service dns create -vserver vs1 -domains  
example.com,example2.com -name-servers 10.0.0.50,10.0.0.51
```



The `vserver services name-service dns create` command performs an automatic configuration validation and reports an error message if ONTAP is unable to contact the name server.

4. Verify that the DNS configuration is correct and that the service is enabled.

```
Vserver: vs1  
Domains: example.com, example2.com Name Servers: 10.0.0.50, 10.0.0.51  
Enable/Disable DNS: enabled Timeout (secs): 2  
Maximum Attempts: 1
```

5. Validate the status of the name servers.

```
vserver services name-service dns check -vserver vs1
```

Vserver	Name Server	Status	Status Details
vs1	10.0.0.50	up	Response time (msec): 2
vs1	10.0.0.51	up	Response time (msec): 2

Configure dynamic DNS on the SVM

If you want the Active Directory-integrated DNS server to dynamically register the DNS records of an NFS or SMB server in DNS, you must configure dynamic DNS (DDNS) on the SVM.

Before you begin

DNS name services must be configured on the SVM. If you are using secure DDNS, you must use Active Directory-integrated DNS name servers and you must have created either an NFS or SMB server or an Active Directory account for the SVM.

About this task

The specified fully qualified domain name (FQDN) must be unique:

The specified fully qualified domain name (FQDN) must be unique:

- For NFS, the value specified in `-vserver-fqdn` as part of the `vserver services name-service dns dynamic-update` command becomes the registered FQDN for the LIFs.
- For SMB/CIFS, the values specified as the CIFS server NetBIOS name and the CIFS server fully qualified domain name become the registered FQDN for the LIFs. This is not configurable in ONTAP. In the following scenario, the LIF FQDN is "CIFS_VS1.EXAMPLE.COM":

```
cluster1::> cifs server show -vserver vs1
```

```

Vserver: vs1
CIFS Server NetBIOS Name: CIFS_VS1
NetBIOS Domain/Workgroup Name: EXAMPLE
Fully Qualified Domain Name: EXAMPLE.COM
Organizational Unit: CN=Computers
Default Site Used by LIFs Without Site Membership:
Workgroup Name: -
Kerberos Realm: -
Authentication Style: domain
CIFS Server Administrative Status: up
CIFS Server Description:
List of NetBIOS Aliases: -
```



To avoid a configuration failure of an SVM FQDN that is not compliant to RFC rules for DDNS updates, use an FQDN name that is RFC compliant. For more information, see [RFC 1123](#).

Steps

1. Configure DDNS on the SVM:

```
vserver services name-service dns dynamic-update modify -vserver vserver_name
-is-enabled true [-use-secure {true|false} -vserver-fqdn
FQDN_used_for_DNS_updates
```

```
vserver services name-service dns dynamic-update modify -vserver vs1 -is
-enabled true - use-secure true -vserver-fqdn vs1.example.com
```

Asterisks cannot be used as part of the customized FQDN. For example, `*.netapp.com` is not valid.

2. Verify that the DDNS configuration is correct:

```
vserver services name-service dns dynamic-update show
```

Vserver	Is-Enabled	Use-Secure	Vserver FQDN	TTL
vs1	true	true	vs1.example.com	24h

Get more information

You can get help and find more information through various resources, documentation, and forums.

- [Documentation](#) – Release Notes and Guides for this release and previous releases.

- [NetApp TechCommTV](#) – NetApp videos.
- [NetApp resources](#) – Technical Reports and Knowledgebase Articles.
- [NetApp Community](#) – NetApp product and solutions forums.

Copyright Information

Copyright © 2021 NetApp, Inc. All rights reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means-graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system-without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

RESTRICTED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.277-7103 (October 1988) and FAR 52-227-19 (June 1987).

Trademark Information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.