

**CHAPTER**

**49**

**Auxiliary Power System**

CHAPTER 49  
AUXILIARY POWER SYSTEM

Subject/Page	Date	COC	Subject/Page	Date	COC
49-EFFECTIVE PAGES			49-00-00 (cont.)		
1 thru 5	Jun 15/2016		13	Feb 15/2015	
6	BLANK		R 14	Jun 15/2016	
49-CONTENTS			15	Feb 15/2015	
1	Feb 15/2015		16	Feb 15/2015	
2	Feb 15/2015		17	Feb 15/2015	
3	Feb 15/2015		R 18	Jun 15/2016	
O 4	Jun 15/2016		19	Feb 15/2015	
5	Feb 15/2015		20	Feb 15/2015	
6	BLANK		21	Feb 15/2015	
49-00-00			22	Feb 15/2015	
1	Feb 15/2015		23	Feb 15/2015	
2	Feb 15/2015		24	Feb 15/2015	
3	Feb 15/2015		25	Feb 15/2015	
4	Feb 15/2015		26	BLANK	
R 5	Jun 15/2016		49-10-00		
R 6	Jun 15/2016		1	Feb 15/2015	
7	Feb 15/2015		2	Feb 15/2015	
8	Feb 15/2015		3	Feb 15/2015	
9	Feb 15/2015		4	Feb 15/2015	
10	Feb 15/2015		5	Feb 15/2015	
11	Feb 15/2015		6	Feb 15/2015	
R 12	Jun 15/2016		7	Feb 15/2015	
			8	Feb 15/2015	

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

**49-EFFECTIVE PAGES**

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

CHAPTER 49  
AUXILIARY POWER SYSTEM

Subject/Page	Date	COC	Subject/Page	Date	COC
49-10-00 (cont.)			49-20-00 (cont.)		
9	Feb 15/2015		5	Feb 15/2015	
10	Feb 15/2015		6	BLANK	
11	Feb 15/2015		49-30-00		
12	Feb 15/2015		1	Feb 15/2015	
13	Feb 15/2015		2	Feb 15/2015	
14	Feb 15/2015		3	Feb 15/2015	
15	Feb 15/2015		R 4	Jun 15/2016	
16	Feb 15/2015		5	Feb 15/2015	
17	Feb 15/2015		6	Feb 15/2015	
18	Feb 15/2015		7	Feb 15/2015	
19	Feb 15/2015		8	Feb 15/2015	
20	Feb 15/2015		R 9	Jun 15/2016	
21	Feb 15/2015		O 10	Jun 15/2016	
22	Feb 15/2015		11	Feb 15/2015	
23	Feb 15/2015		12	Feb 15/2015	
24	Feb 15/2015		13	Feb 15/2015	
25	Feb 15/2015		14	Feb 15/2015	
26	BLANK		15	Feb 15/2015	
49-20-00			16	Feb 15/2015	
1	Feb 15/2015		17	Feb 15/2015	
2	Feb 15/2015		18	Feb 15/2015	
3	Feb 15/2015		O 19	Jun 15/2016	
R 4	Jun 15/2016		R 20	Jun 15/2016	

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

**49-EFFECTIVE PAGES**

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

# CHAPTER 49 AUXILIARY POWER SYSTEM

Subject/Page	Date	COC	Subject/Page	Date	COC
49-30-00 (cont.)			49-50-00 (cont.)		
21	Feb 15/2015		7	Feb 15/2015	
22	BLANK		R 8	Jun 15/2016	
49-40-00			9	Feb 15/2015	
1	Feb 15/2015		10	Feb 15/2015	
R 2	Jun 15/2016		11	Feb 15/2015	
3	Feb 15/2015		12	Feb 15/2015	
R 4	Jun 15/2016		13	Feb 15/2015	
5	Feb 15/2015		14	Feb 15/2015	
R 6	Jun 15/2016		15	Feb 15/2015	
7	Feb 15/2015		16	Feb 15/2015	
R 8	Jun 15/2016		17	Feb 15/2015	
9	Feb 15/2015		18	Feb 15/2015	
R 10	Jun 15/2016		19	Feb 15/2015	
11	Feb 15/2015		20	BLANK	
12	BLANK		49-60-00		
49-50-00			1	Feb 15/2015	
1	Feb 15/2015		2	Feb 15/2015	
2	Feb 15/2015		3	Feb 15/2015	
3	Feb 15/2015		4	Feb 15/2015	
4	Feb 15/2015		5	Feb 15/2015	
5	Feb 15/2015		6	Feb 15/2015	
6	Feb 15/2015		7	Feb 15/2015	
			8	Feb 15/2015	

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

## 49-EFFECTIVE PAGES

CHAPTER 49  
AUXILIARY POWER SYSTEM

Subject/Page	Date	COC	Subject/Page	Date	COC
49-60-00 (cont.)			49-60-00 (cont.)		
9	Feb 15/2015		R 32	Jun 15/2016	
10	Feb 15/2015		O 33	Jun 15/2016	
11	Feb 15/2015		O 34	Jun 15/2016	
R 12	Jun 15/2016		O 35	Jun 15/2016	
R 13	Jun 15/2016		O 36	Jun 15/2016	
O 14	Jun 15/2016		O 37	Jun 15/2016	
15	Feb 15/2015		O 38	Jun 15/2016	
16	Feb 15/2015		O 39	Jun 15/2016	
17	Feb 15/2015		O 40	BLANK	
18	Feb 15/2015		D 41	Jun 15/2015	
O 19	Jun 15/2016		D 42	BLANK	
O 20	Jun 15/2016		49-70-00		
21	Feb 15/2015		1	Feb 15/2015	
22	Feb 15/2015		2	Feb 15/2015	
23	Feb 15/2015		3	Feb 15/2015	
24	Feb 15/2015		4	Feb 15/2015	
R 25	Jun 15/2016		5	Feb 15/2015	
O 26	Jun 15/2016		6	BLANK	
27	Feb 15/2015		49-80-00		
28	Feb 15/2015		1	Feb 15/2015	
29	Feb 15/2015		2	Feb 15/2015	
O 30	Jun 15/2016		3	Feb 15/2015	
O 31	Jun 15/2016		4	Feb 15/2015	

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

## 49-EFFECTIVE PAGES

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

CHAPTER 49  
AUXILIARY POWER SYSTEM

Subject/Page	Date	COC	Subject/Page	Date	COC
49-80-00 (cont.)					
5	Feb 15/2015				
6	BLANK				
49-90-00					
1	Feb 15/2015				
2	Feb 15/2015				
3	Feb 15/2015				
4	Feb 15/2015				
5	Feb 15/2015				
R 6	Jun 15/2016				
7	Feb 15/2015				
8	Feb 15/2015				
9	Feb 15/2015				
10	Feb 15/2015				
11	Feb 15/2015				
12	Feb 15/2015				
13	Feb 15/2015				
14	Feb 15/2015				
O 15	Jun 15/2016				
O 16	Jun 15/2016				
17	Feb 15/2015				
18	Feb 15/2015				
19	Feb 15/2015				
20	BLANK				

A = Added, R = Revised, D = Deleted, O = Overflow, C = Customer Originated Change

**49-EFFECTIVE PAGES**

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details



**CHAPTER 49**  
**AUXILIARY POWER SYSTEM**

<u>CH-SC-SU</u>	<u>SUBJECT</u>	<u>PAGE</u>	<u>EFFECT</u>
49-00-00	AIRBORNE AUXILIARY POWER - INTRODUCTION	2	AKS ALL
49-00-00	AIRBORNE AUXILIARY POWER - GENERAL DESCRIPTION	5	AKS ALL
49-00-00	AIRBORNE AUXILIARY POWER - COMPONENT LOCATION	8	AKS ALL
49-00-00	AIRBORNE AUXILIARY POWER - CONTROLS	10	AKS ALL
49-00-00	AIRBORNE AUXILIARY POWER - OPERATION - START	12	AKS ALL
49-00-00	AIRBORNE AUXILIARY POWER - OPERATION - SHUTDOWN	14	AKS ALL
49-00-00	AIRBORNE AUXILIARY POWER - PROTECTIVE SHUTDOWN	16	AKS ALL
49-00-00	AIRBORNE AUXILIARY POWER - INDICATIONS	18	AKS ALL
49-00-00	AIRBORNE AUXILIARY POWER - APU ACCESS AND SERVICING	20	AKS ALL
49-00-00	AIRBORNE AUXILIARY POWER - INTERFACE	22	AKS ALL
49-00-00	AIRBORNE AUXILIARY POWER - APU COOLING	24	AKS ALL
49-10-00	APU POWER PLANT - INTRODUCTION	2	AKS ALL
49-10-00	APU POWER PLANT - AUXILIARY POWER UNIT - INTRODUCTION	4	AKS ALL
49-10-00	APU POWER PLANT - WIRING HARNESS	6	AKS ALL
49-10-00	APU POWER PLANT - APU MOUNTS	8	AKS ALL
49-10-00	APU POWER PLANT - APU AIR INLET - INTRODUCTION	10	AKS ALL
49-10-00	APU POWER PLANT - AIR INLET DOOR COMPONENTS	12	AKS ALL
49-10-00	APU POWER PLANT - APU AIR INLET FUNCTIONAL DESCRIPTION	14	AKS ALL
49-10-00	APU POWER PLANT - APU DRAINS - INTRODUCTION	16	AKS ALL
49-10-00	APU POWER PLANT - APU DRAINS - FUNCTIONAL DESCRIPTION	18	AKS ALL

## 49-CONTENTS





**CHAPTER 49**  
**AUXILIARY POWER SYSTEM**

<b><u>CH-SC-SU</u></b>	<b><u>SUBJECT</u></b>	<b><u>PAGE</u></b>	<b><u>EFFECT</u></b>
49-10-00	APU POWER PLANT - APU INSULATION PANELS	20	AKS ALL
49-10-00	APU POWER PLANT - APU INSULATION PANELS INSTALLATION	22	AKS ALL
49-10-00	APU POWER PLANT - INSTALLATION	24	AKS ALL
49-20-00	APU ENGINE - INTRODUCTION	2	AKS ALL
49-20-00	APU ENGINE - TRAINING INFORMATION POINT - APU BORESCOPE	4	AKS ALL
49-30-00	APU FUEL SYSTEM - INTRODUCTION	2	AKS ALL
49-30-00	APU FUEL SYSTEM - GENERAL DESCRIPTION	4	AKS ALL
49-30-00	APU FUEL SYSTEM - FUEL CONTROL UNIT	6	AKS ALL
49-30-00	APU FUEL SYSTEM - FUEL CONTROL UNIT - FUNCTIONAL DESCRIPTION	9	AKS ALL
49-30-00	APU FUEL SYSTEM - FUEL FLOW DIVIDER AND FLOW DIVIDER SOLENOID	12	AKS ALL
49-30-00	APU FUEL SYSTEM - MANIFOLDS AND NOZZLES	14	AKS ALL
49-30-00	APU FUEL SYSTEM - APU COMBUSTOR DRAIN ORIFICE	16	AKS ALL
49-30-00	APU FUEL SYSTEM - FUNCTIONAL DESCRIPTION	19	AKS ALL
49-40-00	APU IGNITION AND START SYSTEM - INTRODUCTION	2	AKS ALL
49-40-00	APU IGNITION AND START SYSTEM - SPU AND SCU GENERAL DESCRIPTION	4	AKS ALL
49-40-00	APU IGNITION AND START SYSTEM - APU STARTER-GENERATOR	6	AKS ALL
49-40-00	APU IGNITION AND START SYSTEM - IGNITION SYSTEM - GENERAL DESCRIPTION	8	AKS ALL
49-40-00	APU IGNITION AND START SYSTEM - FUNCTIONAL DESCRIPTION	10	AKS ALL

## 49-CONTENTS

**CHAPTER 49**  
**AUXILIARY POWER SYSTEM**

<u>CH-SC-SU</u>	<u>SUBJECT</u>	<u>PAGE</u>	<u>EFFECT</u>
49-50-00	APU BLEED AIR SYSTEM - INTRODUCTION	2	AKS ALL
49-50-00	APU BLEED AIR SYSTEM - APU BLEED AIR VALVE	4	AKS ALL
49-50-00	APU BLEED AIR SYSTEM - APU BLEED AIR VALVE - FUNCTIONAL DESCRIPTION	6	AKS ALL
49-50-00	APU BLEED AIR SYSTEM - INLET GUIDE VANES AND ACTUATOR	8	AKS ALL
49-50-00	APU BLEED AIR SYSTEM - INLET GUIDE VANES - FUNCTIONAL DESCRIPTION	10	AKS ALL
49-50-00	APU BLEED AIR SYSTEM - P2, PT, AND DP PRESSURE SENSORS	12	AKS ALL
49-50-00	APU BLEED AIR SYSTEM - SURGE CONTROL VALVE	14	AKS ALL
49-50-00	APU BLEED AIR SYSTEM - SURGE BLEED - FUNCTIONAL DESCRIPTION	16	AKS ALL
49-50-00	APU BLEED AIR SYSTEM - FUNCTIONAL DESCRIPTION	18	AKS ALL
49-60-00	APU CONTROLS - INTRODUCTION	2	AKS ALL
49-60-00	APU CONTROLS - ELECTRONIC CONTROL UNIT - INTRODUCTION	4	AKS ALL
49-60-00	APU CONTROLS - ELECTRONIC CONTROL UNIT - INPUTS	6	AKS ALL
49-60-00	APU CONTROLS - ELECTRONIC CONTROL UNIT - OUTPUTS	8	AKS ALL
49-60-00	APU CONTROLS - ELECTRONIC CONTROL UNIT - FAULT MONITORING	10	AKS ALL
49-60-00	APU CONTROLS - ELECTRONIC CONTROL UNIT - PROTECTION SYSTEM	12	AKS ALL
49-60-00	APU CONTROLS - ELECTRONIC CONTROL UNIT - TRAINING INFORMATION POINTS - MAIN MENU	16	AKS ALL
49-60-00	APU CONTROLS - ELECTRONIC CONTROL UNIT - TRAINING INFORMATION POINTS - CURRENT STATUS	19	AKS ALL

## 49-CONTENTS

**CHAPTER 49**  
**AUXILIARY POWER SYSTEM**

<b><u>CH-SC-SU</u></b>	<b><u>SUBJECT</u></b>	<b><u>PAGE</u></b>	<b><u>EFFECT</u></b>
49-60-00	APU CONTROLS - ELECTRONIC CONTROL UNIT - TRAINING INFORMATION POINTS - FAULT HISTORY	22	AKS ALL
49-60-00	APU CONTROLS - ELECTRONIC CONTROL UNIT - TRAINING INFORMATION POINTS - MAINTENANCE HISTORY	25	AKS ALL
49-60-00	APU CONTROLS - ELECTRONIC CONTROL UNIT - TRAINING INFORMATION POINTS - IDENT CONFIG	28	AKS ALL
49-60-00	APU CONTROLS - ELECTRONIC CONTROL UNIT - TRAINING INFORMATION POINTS - INPUT MONITORING	30	AKS ALL
49-60-00	APU CONTROLS - ELECTRONIC CONTROL UNIT - TRAINING INFORMATION POINTS - OIL QUANTITY	32	AKS ALL
49-60-00	APU CONTROLS - ELECTRONIC CONTROL UNIT - TRAINING INFORMATION POINT - ICE LOGIC	34	AKS ALL
49-60-00	APU CONTROLS - SPEED SENSOR	36	AKS ALL
49-60-00	APU CONTROLS - INLET TEMPERATURE SENSOR T2	38	AKS ALL
49-70-00	APU INDICATING SYSTEM - EGT INDICATION	2	AKS ALL
49-70-00	APU INDICATING SYSTEM - DATA MEMORY MODULE (DMM)	4	AKS ALL
49-80-00	APU EXHAUST SYSTEM - EXHAUST DUCT	2	AKS ALL
49-80-00	APU EXHAUST SYSTEM - AFT FAIRING	4	AKS ALL
49-90-00	APU LUBRICATION SYSTEM - INTRODUCTION	2	AKS ALL
49-90-00	APU LUBRICATION SYSTEM - LUBE MODULE	4	AKS ALL
49-90-00	APU LUBRICATION SYSTEM - LUBE MODULE - FUNCTIONAL DESCRIPTION	6	AKS ALL
49-90-00	APU LUBRICATION SYSTEM - OIL COOLER AND TEMPERATURE CONTROL VALVE	8	AKS ALL

**49-CONTENTS**



CHAPTER 49  
AUXILIARY POWER SYSTEM

<u>CH-SC-SU</u>	<u>SUBJECT</u>	<u>PAGE</u>	<u>EFFECT</u>
49-90-00	APU LUBRICATION SYSTEM - MAGNETIC DRAIN PLUG	10	AKS ALL
49-90-00	APU LUBRICATION SYSTEM - FUNCTIONAL DESCRIPTION	12	AKS ALL
49-90-00	APU LUBRICATION SYSTEM - OIL INDICATING - GENERAL DESCRIPTION	15	AKS ALL
49-90-00	APU LUBRICATION SYSTEM - OIL INDICATING - COMPONENTS	18	AKS ALL

## 49-CONTENTS

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details





THIS PAGE IS INTENTIONALLY LEFT BLANK

**49-00-00**

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details



## AIRBORNE AUXILIARY POWER - INTRODUCTION

**Purpose**

The AlliedSignal 131-9(B) auxiliary power unit (APU) supplies electrical and pneumatic power to other airplane systems. This permits these airplane systems to operate without the use of ground power sources or the engines. The APU can also supply electrical and pneumatic power in the air.

**Altitude Operational Limits**

The APU generator can supply 90 KVA electrical power up to 32,000 feet (9,754 meters) and 66 KVA to 41,000 feet (12,500 meters). Electrical and pneumatic power is available at the same time up to 15,000 feet (4,572 meters). Pneumatic power alone is available up to 17,000 feet (5,183 meters). The APU can be started at 41,000 feet or below.

**Abbreviations and Acronyms**


- APB - auxiliary power breaker
- APU - auxiliary power unit
- ACS - air conditioning system
- BAT - battery
- BAV - bleed air valve
- BPCU - bus power control unit
- CDU - control display unit
- DP - differential pressure
- DMM - data memory module
- DEU - display electronic unit
- DFDAU - digital flight data acquisition unit
- DU - display unit
- ECU - electronic control unit
- EGT - exhaust gas temperature
- FCU - fuel control unit
- FMV - fuel metering valve
- AGCU - APU generator control unit
- HOT - high oil temperature

- IGV - inlet guide vane
- KVA - kilovolt-ampere
- LOP - low oil pressure
- LVDT - linear variable differential transformer
- LRU - line replaceable unit
- MES - main engine start
- OLS - oil level sensor
- P2 - inlet pressure
- PPH - pounds per hour
- PPM - pounds per minute
- PSI - pounds per square inch
- PSIA - pounds per square inch absolute
- PSID - pounds per square inch differential
- PSIG - pounds per square inch gage
- PT - total pressure
- PWR - power
- RPM - revolutions per minute
- RTL - ready to load
- RVDT - rotary variable differential transformer
- SCU - starter converter unit
- SCV - surge control valve
- SHP - shaft horsepower
- SPU - start power unit
- sta - station
- T2 - inlet temperature
- T/M - torque motor

**49-00-00**EFFECTIVITY  
AKS ALL

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

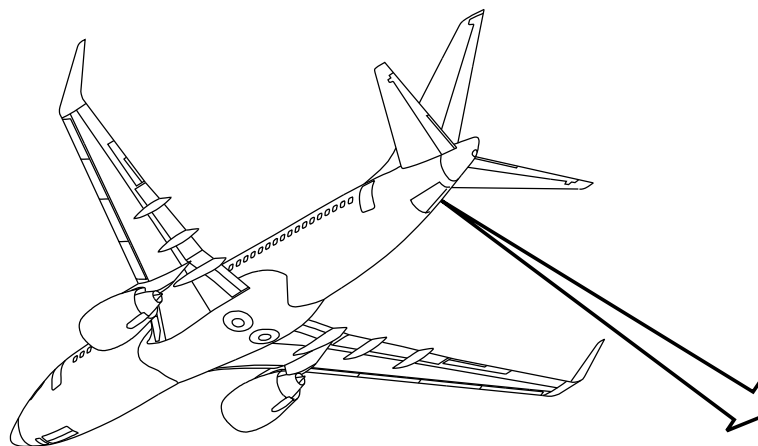

PNEUMATIC POWER  
(<17,000 FT)

ELECTRICAL POWER  
(90 KVA <32,000 FT)  
(66 KVA <41,000 FT)

#### DIMENSIONS

- LENGTH 56.76 IN (144 CM)
- WIDTH 34.33 IN (87 CM)
- HEIGHT 29.55 IN (75 CM)


DRY WEIGHT APPROX 390 LBS (177 KG)  
(DOES NOT INCLUDE APU FLUIDS)

#### OPERATING LIMITS

- BLEED LOAD (SEA LEVEL, 60F) 160 PPM AT 60 PSIA
- ELECTRICAL LOAD (SEA LEVEL, 60F) 90 KVA

#### ENGINE SPEED

- NORMAL RATED SPEED 48,800 RPM = 100%
- OVERSPEED 51,728 RPM = 106%

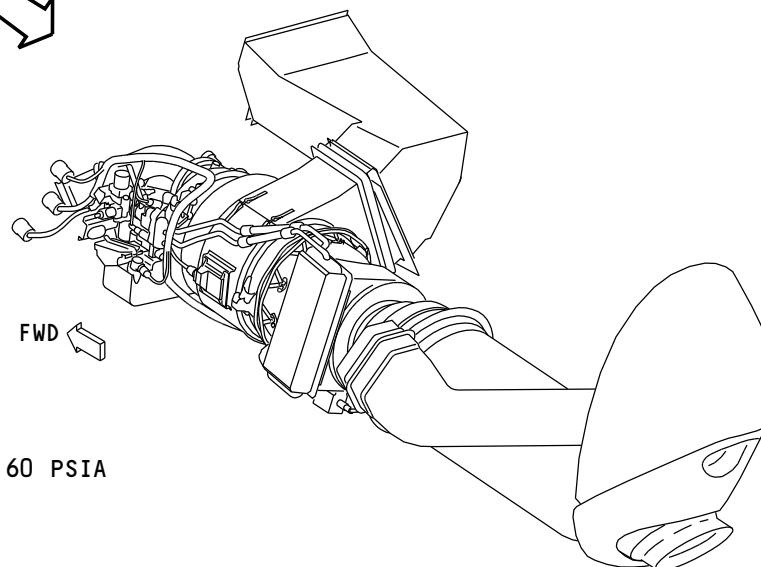

M87494 S0004631401\_V1

### AIRBORNE AUXILIARY POWER - INTRODUCTION

**49-00-00**

AKS ALL

EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details





THIS PAGE IS INTENTIONALLY LEFT BLANK

**49-00-00**

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

**AIRBORNE AUXILIARY POWER - GENERAL DESCRIPTION****General**

The APU system contains these subsystems:

- APU power plant (49-10)
- APU engine (49-20)
- APU fuel system (49-30)
- APU ignition and start system (49-40)
- APU bleed air system (49-50)
- APU controls (49-60)
- APU indicating system (49-70)
- APU exhaust system (49-80)
- APU lubrication system (49-90).

**APU Power Plant**

The APU is a gas turbine engine. It has a single shaft and operates at a constant speed. It drives an electric generator, pneumatic load compressor, and a reduction gearbox.

**APU Engine**

These are the primary APU engine components:

- The power section
- The load compressor
- The accessory gearbox.

The power section has a single stage centrifugal compressor. It has a reverse flow annular combustor with a two-stage axial turbine.

The load compressor turns on the same shaft with the power section compressor. The load compressor also uses the same air inlet as the power section compressor.

The gearbox provides gear reduction for the high speed torque of the power section to the accessories on the gearbox.

**APU Fuel System**

The APU fuel system supplies pressurized and metered fuel to the combustion chamber. It also supplies fuel to operate the inlet guide vane actuator and the surge control valve.

**APU Ignition and Start System**

The APU ignition and start system begins the rotation and acceleration of the APU. The starter-generator is used as a starter during APU starting. The start power unit (SPU) and start converter unit (SCU) change AC or dc power so it can be used for starting.

**APU Bleed Air System**

The APU bleed air system supplies pressurized air to the airplane pneumatic system. Inlet guide vanes control the quantity of air that goes to the load compressor. A surge control valve vents unnecessary bleed air overboard through the exhaust. A bleed air valve (BAV) isolates the APU air system from the airplane ducts.

**APU Controls**

An electronic control unit (ECU) controls the APU functions. The ECU interfaces with other airplane systems.

The ECU monitors APU functions using built in test equipment (BITE). THE ECU shows unsatisfactory conditions found by BITE and the cause for protective shutdowns on the control display unit (CDU). The unsatisfactory conditions are called maintenance messages. Some of the maintenance messages and all the protective shutdowns cause one of these lights in the flight compartment to come on:

- Maintenance light (blue)
- Low oil pressure light (amber)
- Fault light (amber)
- Overspeed light (amber).

**49-00-00**

EFFECTIVITY

AKS ALL

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details



## AIRBORNE AUXILIARY POWER - GENERAL DESCRIPTION

### APU Indicating System

The APU indicating system consist of these components:

- EGT gauge
- Data Memory Module
- Control display unit (CDU).


The APU indications are on the P5-4 panel and the P9 panel.

### APU Exhaust System

The APU exhaust system sends the APU exhaust gases through the APU muffler. The muffler sends the APU exhaust out the tail cone.

### APU Lubrication system

The APU lubrication system lubricates and cools the APU bearings, the gearbox, and the starter generator. An eductor moves air through the oil cooler to control oil temperature. It also takes in the ambient air to cool the APU compartment.

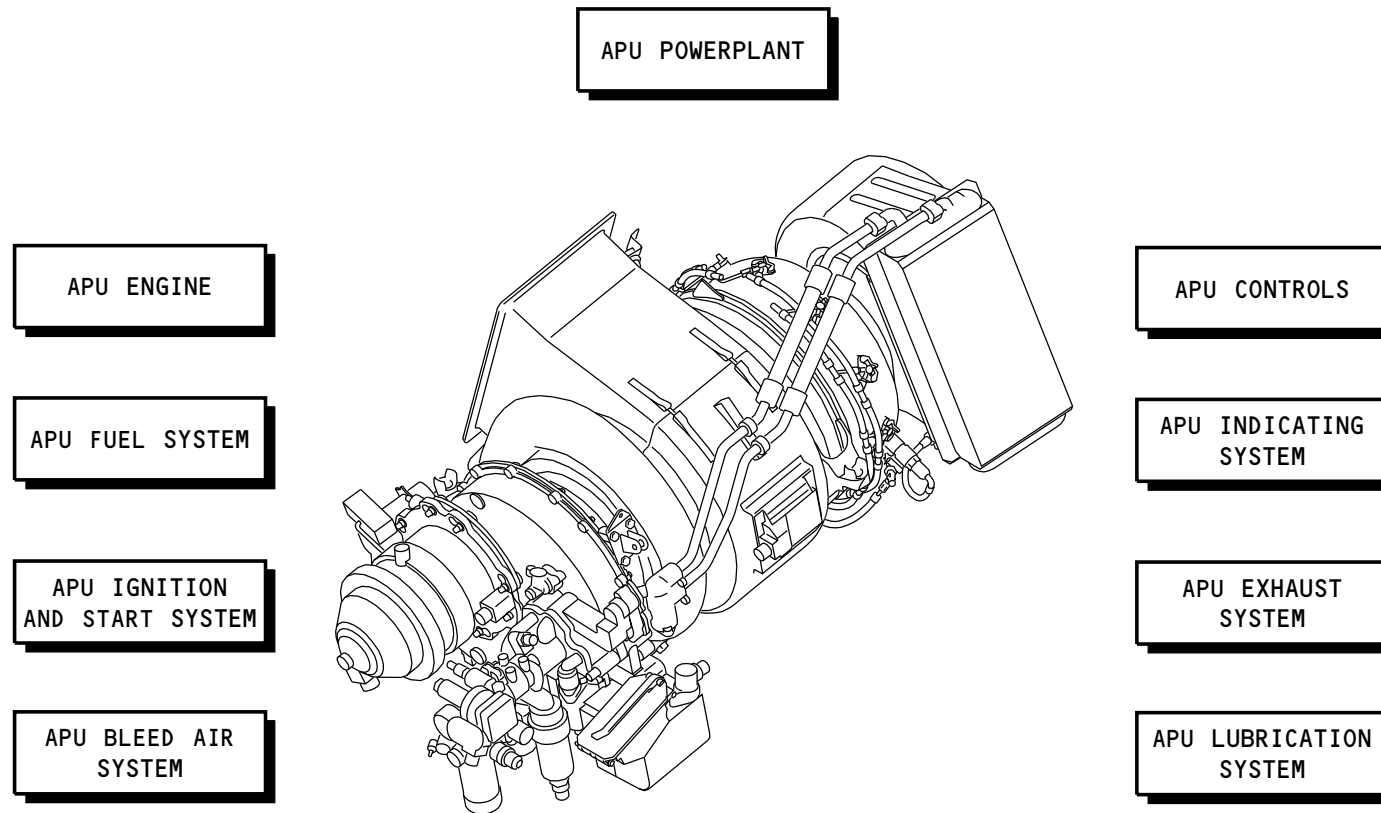

M87496 S0004631403\_V1

## AIRBORNE AUXILIARY POWER - GENERAL DESCRIPTION

**49-00-00**

AKS ALL	EFFECTIVITY
	D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

**AIRBORNE AUXILIARY POWER - COMPONENT LOCATION****General**

The APU is in the aft fuselage of the airplane. A firewall isolates the APU compartment from the airplane fuselage and horizontal stabilizer assembly.

**Air Inlet**

The APU air inlet is on the right side of the aft fuselage. It is forward and below the horizontal stabilizer.

**Doors**

The APU access door at the bottom of the APU compartment is for servicing and maintenance.

**Electronic Control Unit (ECU)**

The APU electronic control unit (ECU) is in the aft cargo compartment. It is on the right side of the compartment, aft of the cargo door.

**Electronic Equipment Compartment**

These APU components are in the EE compartment:

- APU generator control unit (AGCU)
- Start power unit (SPU)
- Start converter unit (SCU).

**Right Wheel Well**

The APU ground control panel (P28) and fire alarm horn are in the right main wheel well, on the aft bulkhead.

**Flight Compartment**

These APU components are in the flight compartment:



- APU switch - (APU/engine start panel) (P5)
- APU bleed air switch - (air conditioning panel) (P5)
- APU generator switches - (AC system generator/APU control panel) (P5)

- APU EGT indicator and APU indication lights - (AC system generator/APU control panel) (P5)
- APU light (system annunciator lights) (P7)
- APU fire warning switch (Engine and APU fire protection panel) (P8).


**49-00-00****AKS ALL EFFECTIVITY**

D633A101-AKS


BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

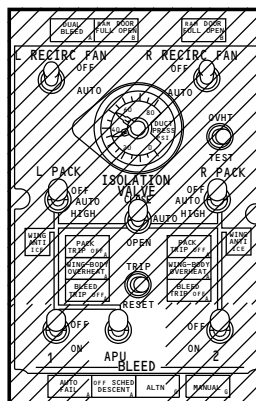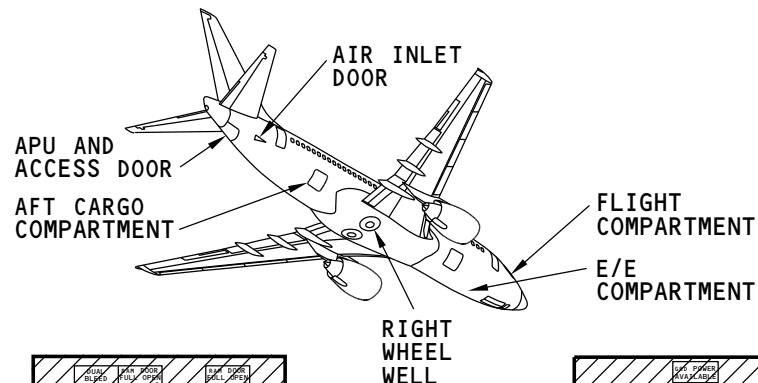


AIR CONDITIONING PANEL (P5)

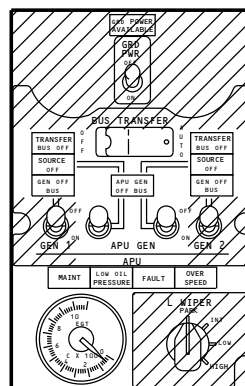


AC SYSTEM GENERATOR/APU CONTROL PANEL (P5)

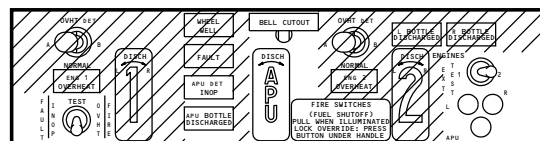


ENGINE AND APU FIRE CONTROL PANEL (P8)

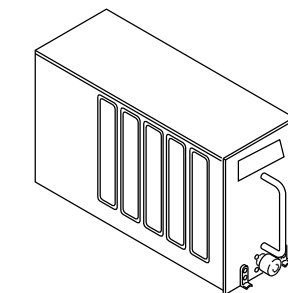


ELECTRONIC CONTROL UNIT (AFT CARGO)

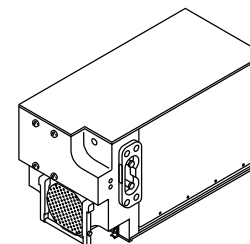


START POWER UNIT (E2-2)

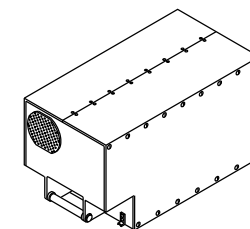

START CONVERTER UNIT (E2-2)

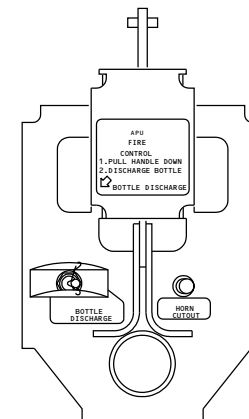

APU GROUND CONTROL PANEL (P28 RIGHT WHEEL WELL)

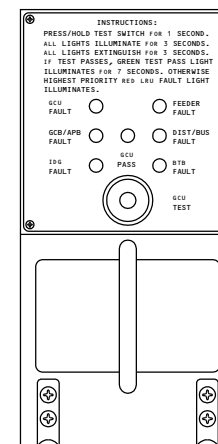

APU GCU (E3-1)

### AIRBORNE AUXILIARY POWER - COMPONENT LOCATION

M87497 S0004631410\_V1

49-00-00

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

**AIRBORNE AUXILIARY POWER - CONTROLS****APU Flight Compartment Controls**

You use these switches to control the APU from the flight compartment:


- APU switch (P5)
- APU fire warning switch (P8)
- Battery switch (P5).

The APU switch starts and stops the APU.

You can stop the APU with the APU fire warning switch on the engine and APU fire control module (P8) and the battery switch on the electric meters and galley power panel (P5).

**APU Ground Control Panel (P28)**

You can stop the APU from outside the airplane. You use the remote fire switch handle (P28) in the right wheel well aft bulkhead.

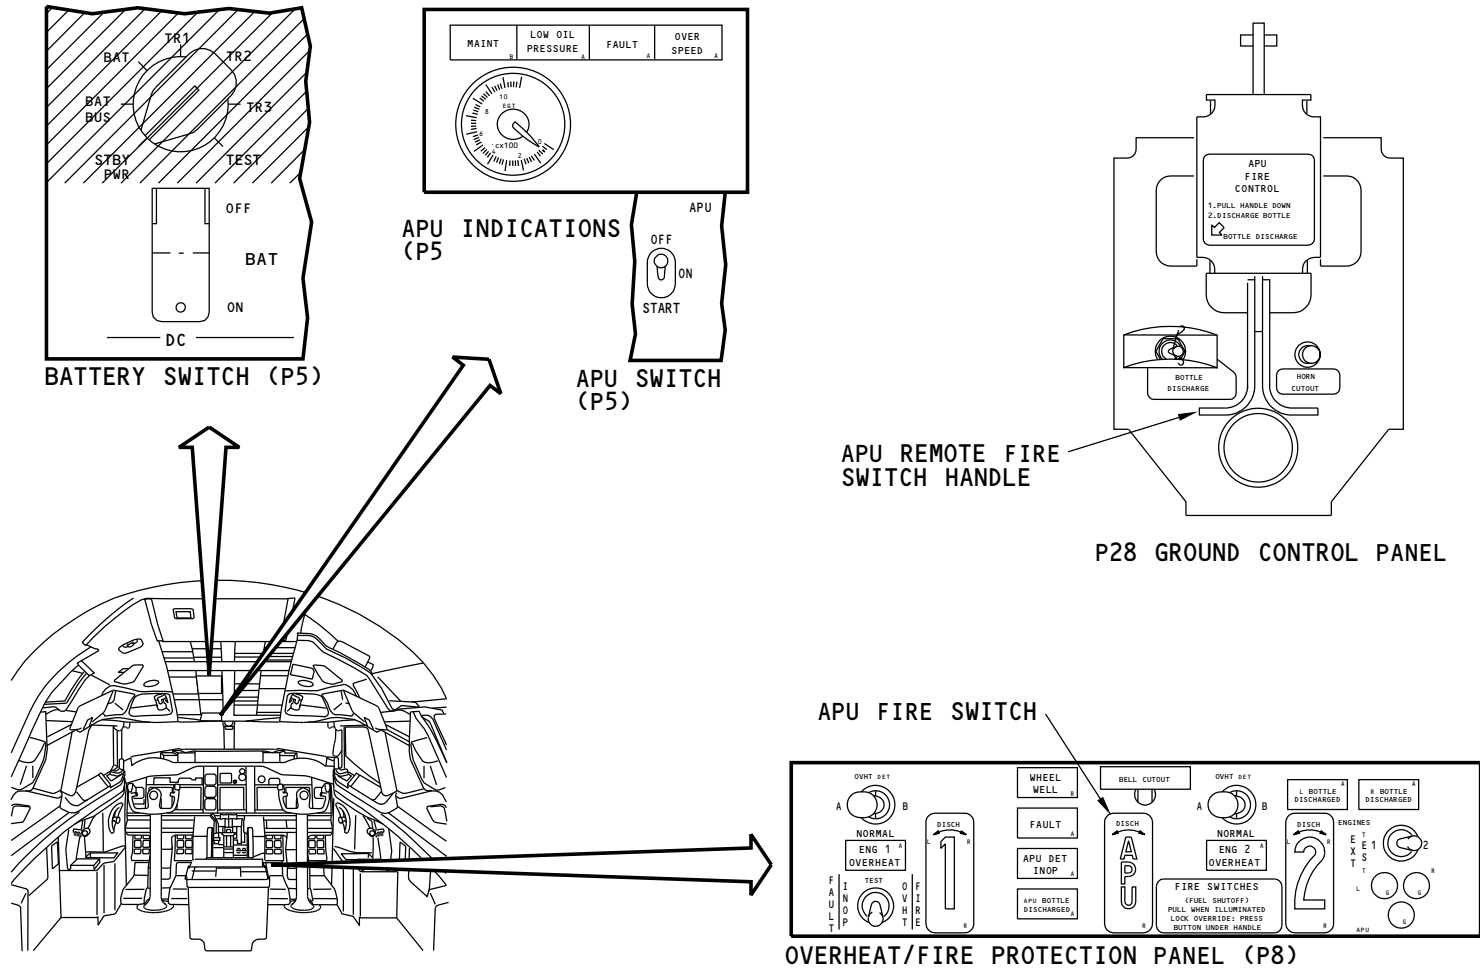

**AIRBORNE AUXILIARY POWER - CONTROLS**

M87503 S0004631412\_V1

**49-00-00**

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details



**AIRBORNE AUXILIARY POWER - OPERATION - START****General**

You can start the APU up to an altitude of 41,000 feet (12,500 meters).

The APU electronic control unit (ECU) controls these components during start:

- APU inlet door
- APU fuel shutoff valve
- APU fuel
- Ignition system
- APU start system.

**Prestart**

The battery switch must be ON before you can start and operate the APU.

If AC power is available, turn the aft number 1 fuel boost pump on. This gives pressurized fuel to the APU. Pressurized fuel makes the APU start better.

**Starting the APU**

When you move the APU switch to the START position and release it, the switch moves back to the ON position. This sends a signal to the electronic control unit (ECU). The ECU then opens the APU fuel shut-off valve and the APU air inlet door. The ECU also causes the low oil pressure light to come on. When the air inlet door is fully open, the door switch closes. The door switch sends a door fully open signal to the ECU.

**APU Start Sequence**

The ECU controls the APU start sequence. This is the start sequence:

- At 0 percent speed and before the start system is energized, the ECU energizes the ignition unit
- At 0 percent speed for start or 7 percent speed for restart, the ECU energizes the starter-generator
- At 7 percent speed, the fuel solenoid valve opens

- At approximately 30 percent speed, the Low oil pressure light (P5) goes out
- At 60 percent speed the ignition unit de-energizes
- At 70 percent speed, the starter-generator de-energizes
- At 95 percent speed, the APU can supply electrical power up to 41,000 feet (12,500 meters). The APU can also supply air up to 17,000 feet (5183 meters)
- The APU accelerates to 100 percent speed.

**NOTE:** The inlet guide vanes (IGV) close to 20-24 degrees when the APU bleed air valve is closed. This will keep the load compressor cool when it does not have a load.

**Training Information Point**


The BAT DISCHARGE light on the electrical meters, battery, and galley power module comes on when the APU start uses DC power. The BAT DISCHARGE light does not come on when the APU uses AC power to start.

**49-00-00**

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

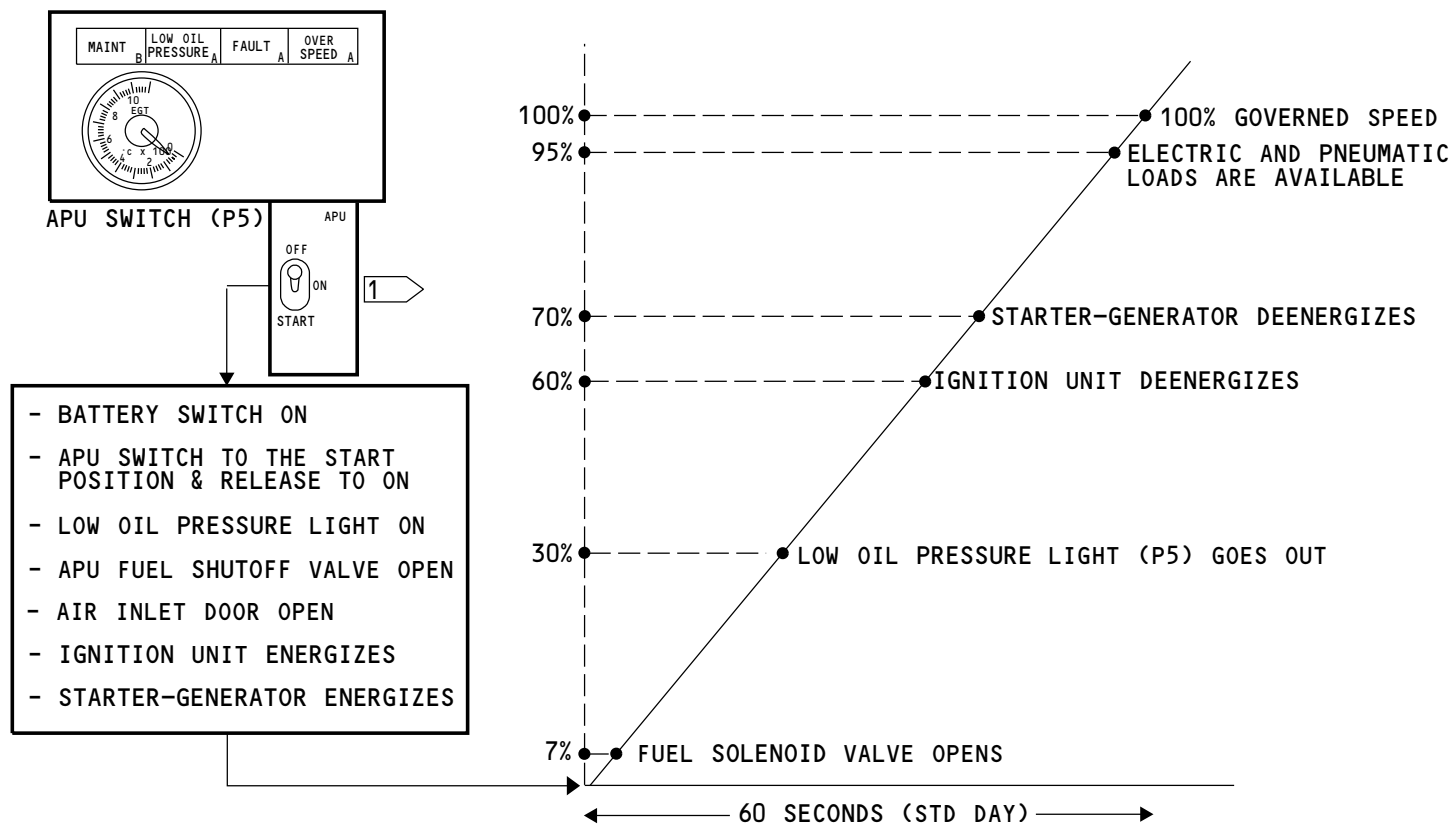

1 WHEN YOU PUT THE APU SWITCH TO ON OR START, THE APU FUEL SHUTOFF VALVE AND AIR INLET DOOR OPEN.

### AIRBORNE AUXILIARY POWER - OPERATION - START

M87505 S0004631414\_V1

49-00-00

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

**AIRBORNE AUXILIARY POWER - OPERATION - SHUTDOWN****General**

The ECU controls the APU shutdown. The APU has two types of shutdowns, normal shutdown and protective shutdown.

**APU Switch to OFF**

When you put the APU switch to OFF, it removes the 28v dc ON signal to the ECU and gives a 28v dc OFF signal to the ECU.

**APU Cool Down**

An APU shutdown causes a cool down cycle. The cool down cycle time is 60 seconds. The time starts when the APU switch is put to the OFF position.

The ECU does these steps for a cool down:

- Removes the ready-to-load signal
- Closes the bleed air valve
- Closes the inlet guide vanes (15 degrees)
- Opens the surge control valve
- De-energizes the starter-generator
- Starts the 60 second timer.

**Completion of the Shutdown**

During shutdown of the APU, these steps occur:

- At 30 percent speed, the APU air inlet door starts to close (closes immediately for APU fire).
- At less than 7 percent speed, an APU restart can be initiated.

**Training Information Point**

The APU fuel shutoff valve and air inlet door will close for a normal or protective shutdown. Wait 40 seconds after the EGT goes below 300 C for the inlet door and fuel shutoff valve to close before you move the battery switch to the OFF position.

Do not use the battery switch or fire switches to begin a normal APU shutdown. The 60 second cool down is required to prevent coke in the turbine bearing and fuel nozzles.

If the fuel shutoff valve does not close in the required time, the APU FAULT light will come on and stay on until the APU is started again or the battery switch is put in the off position.

See the APU engine controls section for more information on APU faults. (SECTION 49-60)


**49-00-00**

EFFECTIVITY

AKS ALL

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

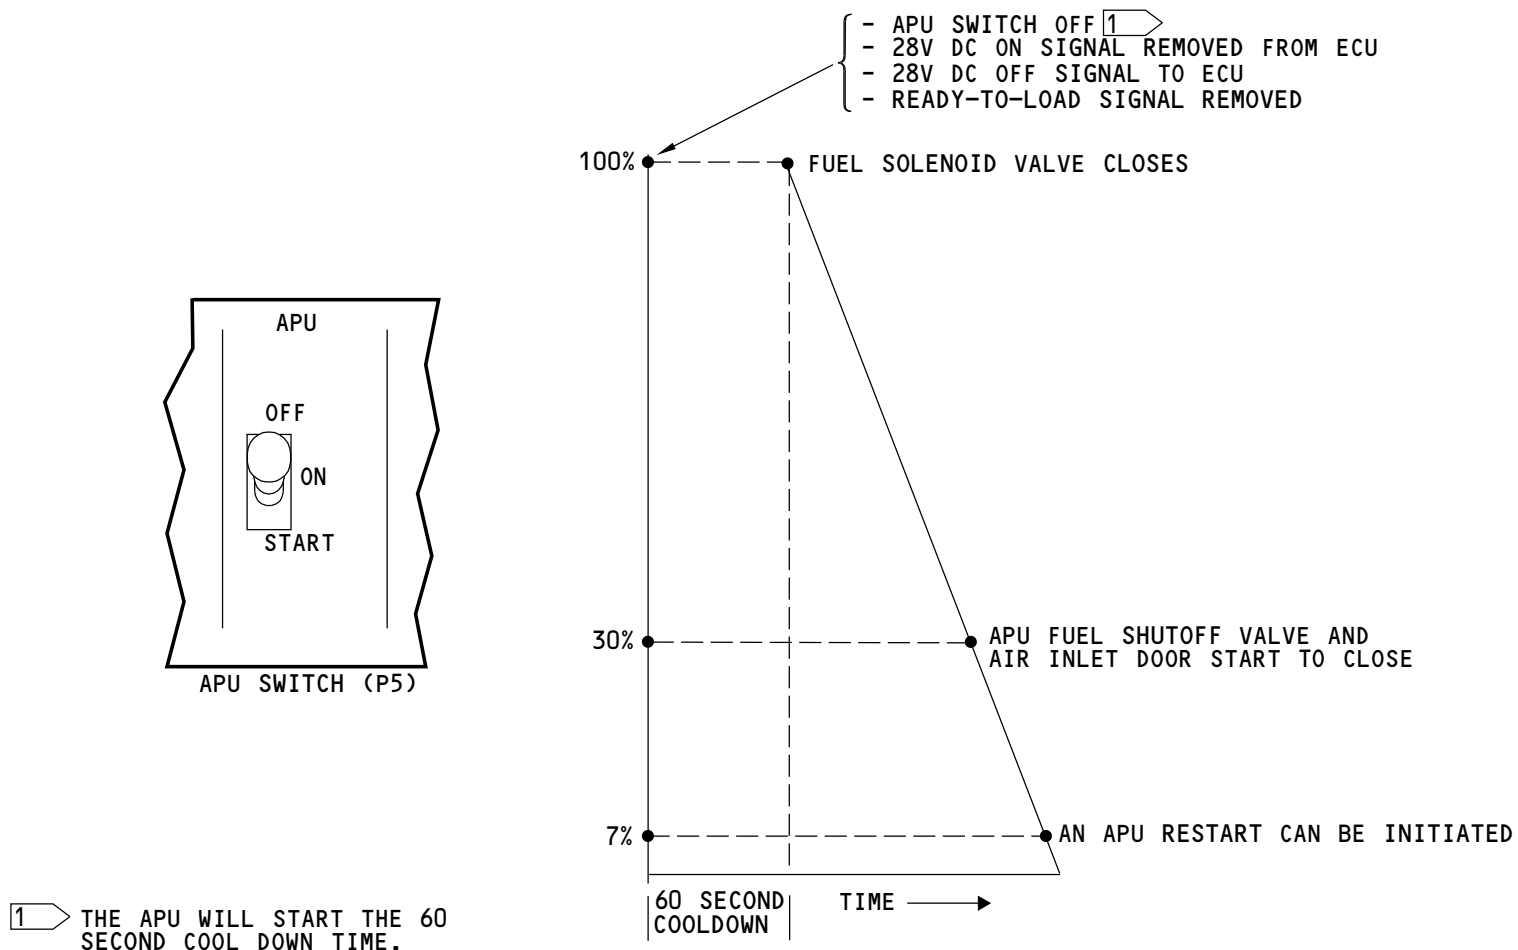

M87506 S0004631416\_V1

### AIRBORNE AUXILIARY POWER - OPERATION - SHUTDOWN

49-00-00

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details



## AIRBORNE AUXILIARY POWER - PROTECTIVE SHUTDOWN

General

A protective shutdown prevents damage to the APU or the airplane.

The ECU controls an automatic protective shutdown of the APU. If the ECU finds a fault, it does a protective shutdown.

There are three different protective shutdown indications in the flight deck. These are the flight compartment protective shutdown indications:

- Fault light
- Overspeed light
- Low oil pressure light.

The cause for the shutdown shows on the control display unit (CDU) on the P9 panel.

Protective Shutdown

These are the conditions that cause a protective shutdown and a fault light:

- Fuel shutoff valve not in commanded position
- Loss of dc power
- ECU failure
- APU fire
- Inlet door not in command position
- APU inlet overheat
- Loss of both EGT signals
- No speed signal
- No acceleration
- No APU rotation
- No flame
- Generator filter clogged.
- High oil temperature
- Overtemperature
- Reverse flow (load compressor)

- Oil temperature or inlet air temperature sensor failure
- Underspeed.

These are the conditions that cause a protective shutdown and an overspeed light:

- Fuel control unit solenoid failure
- Loss of overspeed protection
- Overspeed.

Low oil pressure for 20 seconds causes a protective shutdown and a Low oil pressure light.

When a protective shutdown occurs, the ECU removes electrical power from these components:

- Fuel solenoid
- Ignitor
- SCU Start signal
- Bleed air valve (BAV)
- Fuel control unit (FCU) signal
- Surge control valve (SCV) signal.


**49-00-00**

EFFECTIVITY

AKS ALL

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

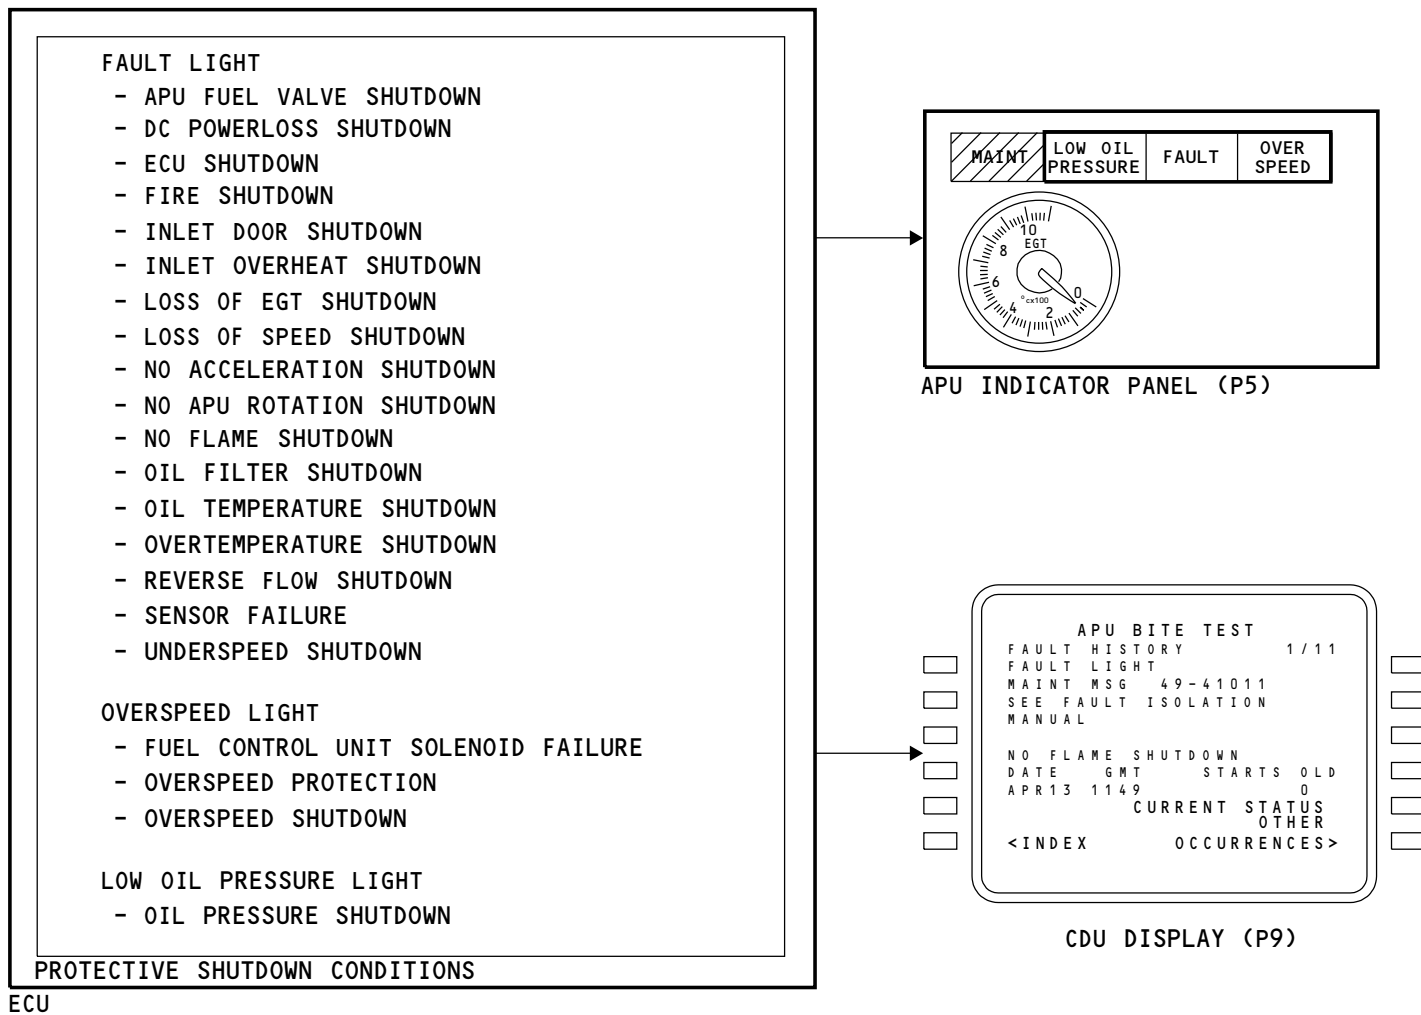

M87507 S0004631418\_V1

### AIRBORNE AUXILIARY POWER - PROTECTIVE SHUTDOWN

## 49-00-00

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

**AIRBORNE AUXILIARY POWER - INDICATIONS****General**

The APU has four indication lights and an EGT indicator on the APU indicator panel. These are the four lights:



- MAINTENANCE - no automatic shutdown (blue)
- LOW OIL PRESSURE - automatic shutdown (amber)
- FAULT - automatic shutdown (amber)
- OVERSPEED - automatic shutdown (amber).

The control display unit (CDU) shows this APU system data:


- Current status
- Fault history
- Maintenance history
- Ident/config
- Input monitoring (real time data)
- Oil quantity.

**Training Information Point**


You must have 115v AC power from the transfer bus to operate the CDU.  
The APU indication lights operate on 28v DC power.

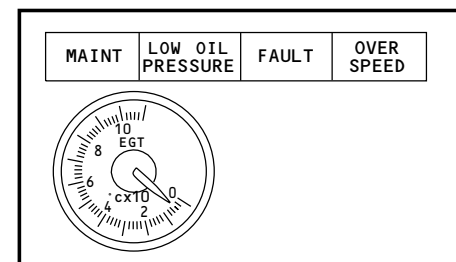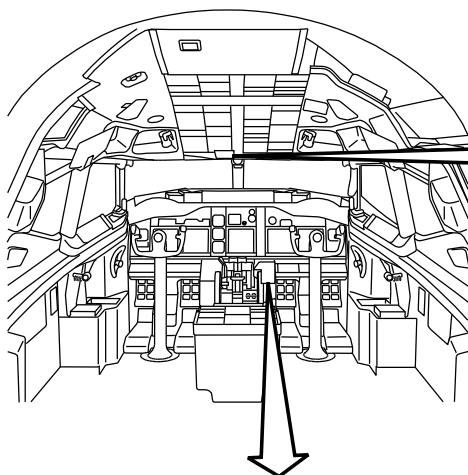

APU INDICATOR PANEL (P5)

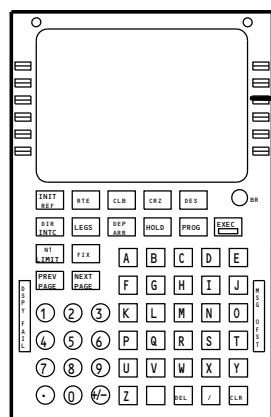

CDU (P9)

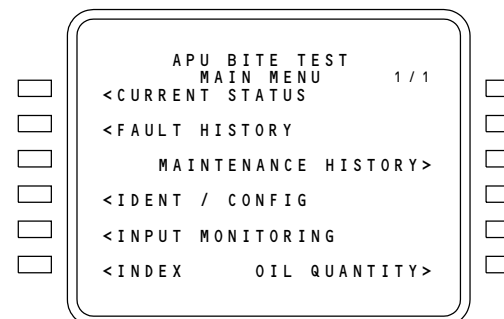

APU PAGE

**AIRBORNE AUXILIARY POWER - INDICATIONS**

M87508 S0004631420\_V1

**49-00-00**

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details



**AIRBORNE AUXILIARY POWER - APU ACCESS AND SERVICING****APU Access**

Open the APU cowl door on the bottom of the aft fuselage to get access to the APU compartment.

Release three latches on the left side to open the APU cowl door. The APU access door opens to the right on two hinges. Connect the hold open rods to keep the door open safely.


**APU Oil Servicing**

Add oil to the APU fill port on the left side of the accessory gear case. There are two FULL and ADD marks on the oil sight gage. The left side of the oil sight gage shows the oil level during APU operation. The right side of the oil sight gage shows the oil level for no APU operation (APU shutdown).

The CDU shows the APU oil quantity with a FULL, ADD, or LOW indication.

**Training Information Point**

Servicing of the APU should only be done with the APU shutdown.

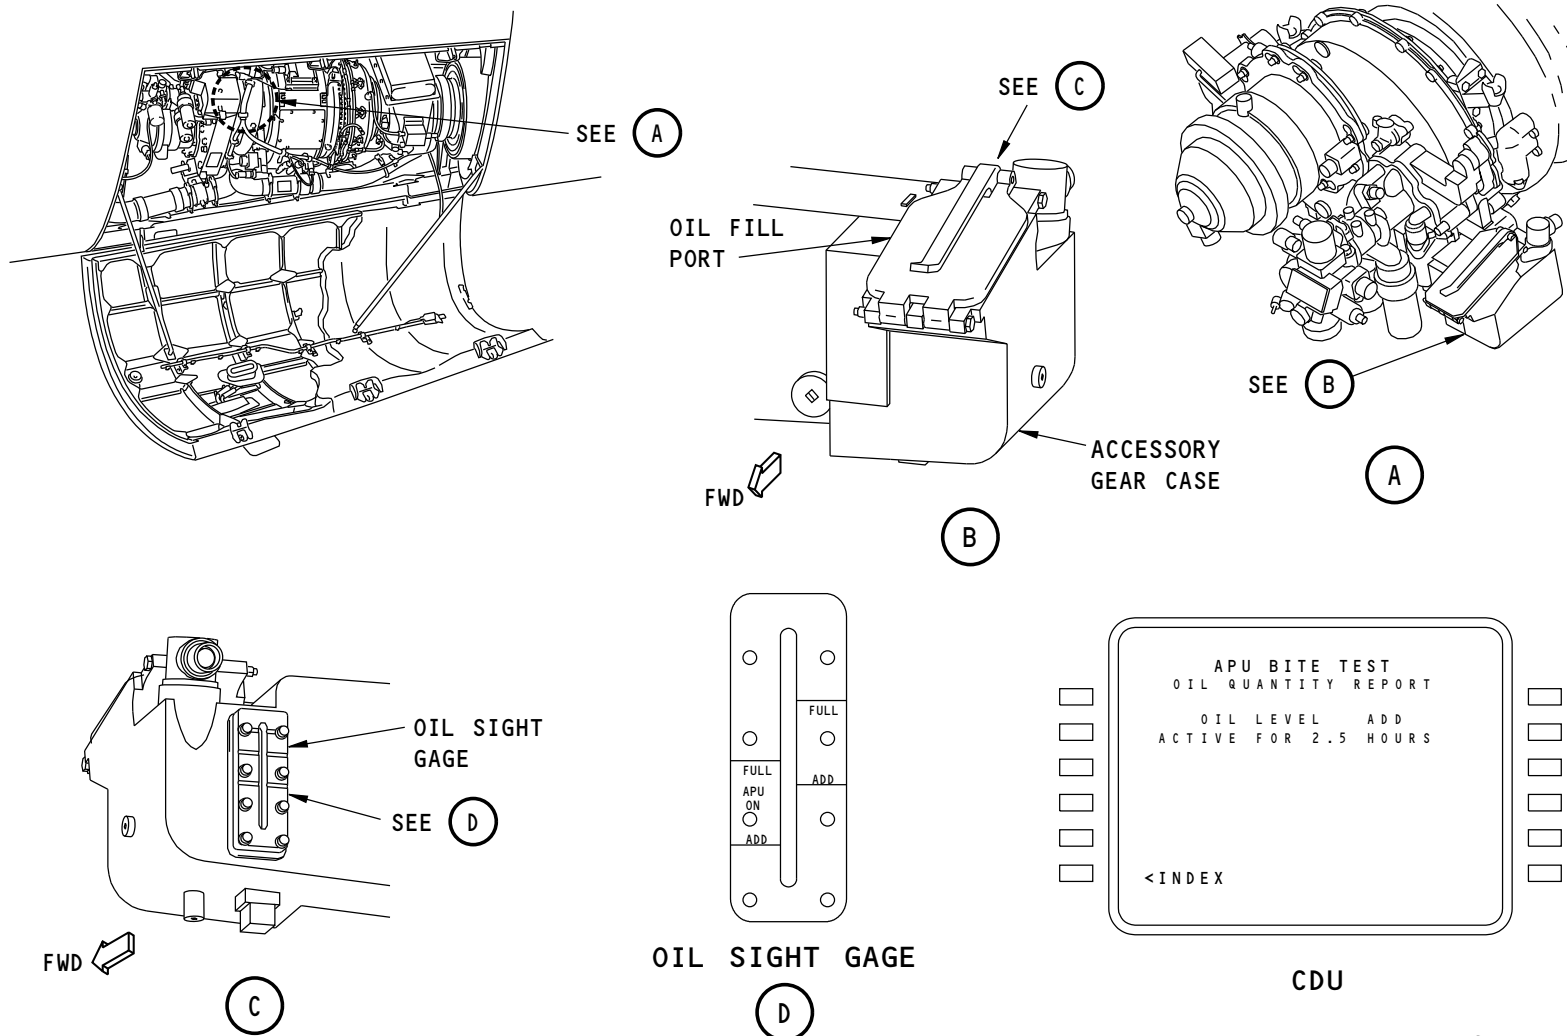

M87509 S0004631422\_V2

**AIRBORNE AUXILIARY POWER - APU ACCESS AND SERVICING**

**49-00-00**

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

**AIRBORNE AUXILIARY POWER - INTERFACE****General**

The ECU sends and receives data with airplane systems. The data is digital and analog. The ARINC 429 data bus transmits the digital data.

**ARINC 429 Interfaces**

Display electronic unit (DEU) 1 transmits ARINC 429 data to the ECU.

These components receive ARINC 429 data from the ECU:

- Display electronic unit (DEU) 1
- Display electronic unit (DEU) 2
- Digital flight data acquisition unit (DFDAU).

**Other interfaces**


The ECU also has analog interfaces with these systems and components:

- APU switch
- APU bleed switch
- Remote fire switch
- Engine and APU fire control
- Bus power control unit
- Engine and APU fire detection module
- APU generator control unit
- APU fuel shutoff valve
- APU air inlet door actuator
- Air inlet door position switch
- Start converter unit
- Landing gear logic
- Airplane battery
- Air conditioning system (ACS) flow control valves
- Main engine start switches 1 and 2.

**49-00-00****EFFECTIVITY**  
**AKS ALL**

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

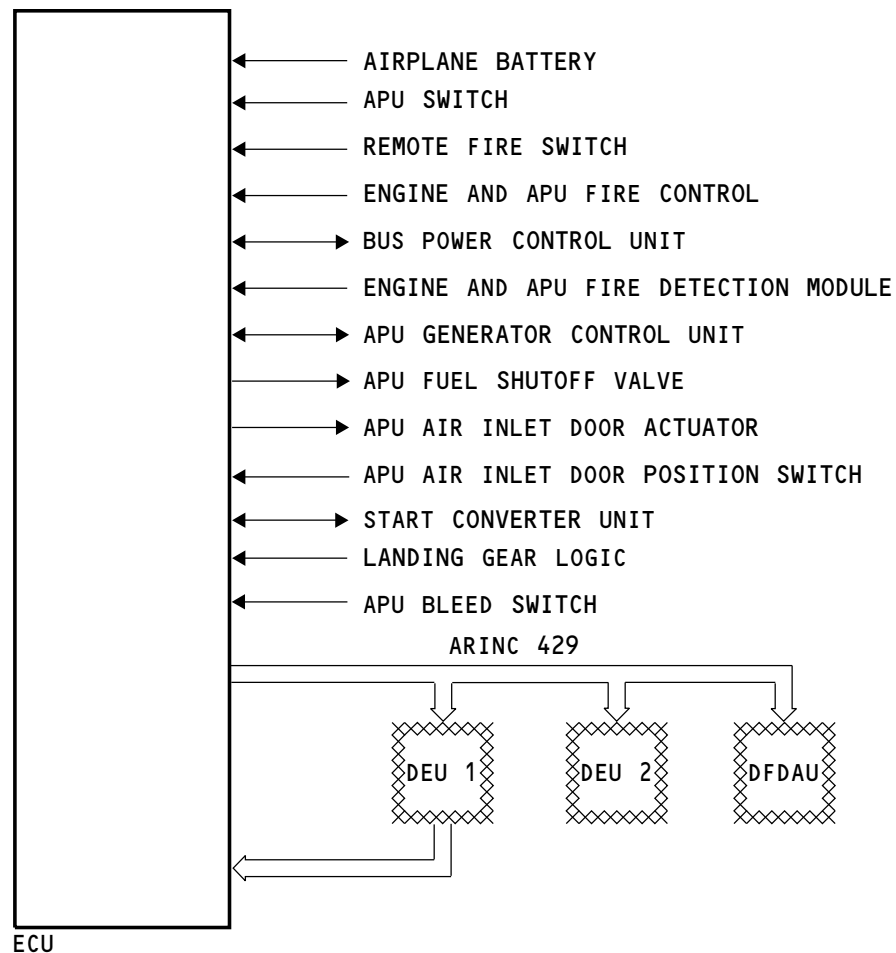

AIRBORNE AUXILIARY POWER - INTERFACE

M87510 S0004631424\_V1

**49-00-00**

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details


**AIRBORNE AUXILIARY POWER - APU COOLING****General**

The APU cooling air system cools the APU compartment and the APU engine oil.

**Compartment Cooling**

APU compartment cooling uses an eductor to pull outside air through the APU compartment. The high speed flow of the APU exhaust forms a low pressure area. This low pressure pulls outside air through the eductor inlet duct to the APU compartment. The cooling air then goes through the oil cooler and out the APU exhaust duct.

See the APU oil section for more information on the oil cooler.  
(SECTION 49-90)

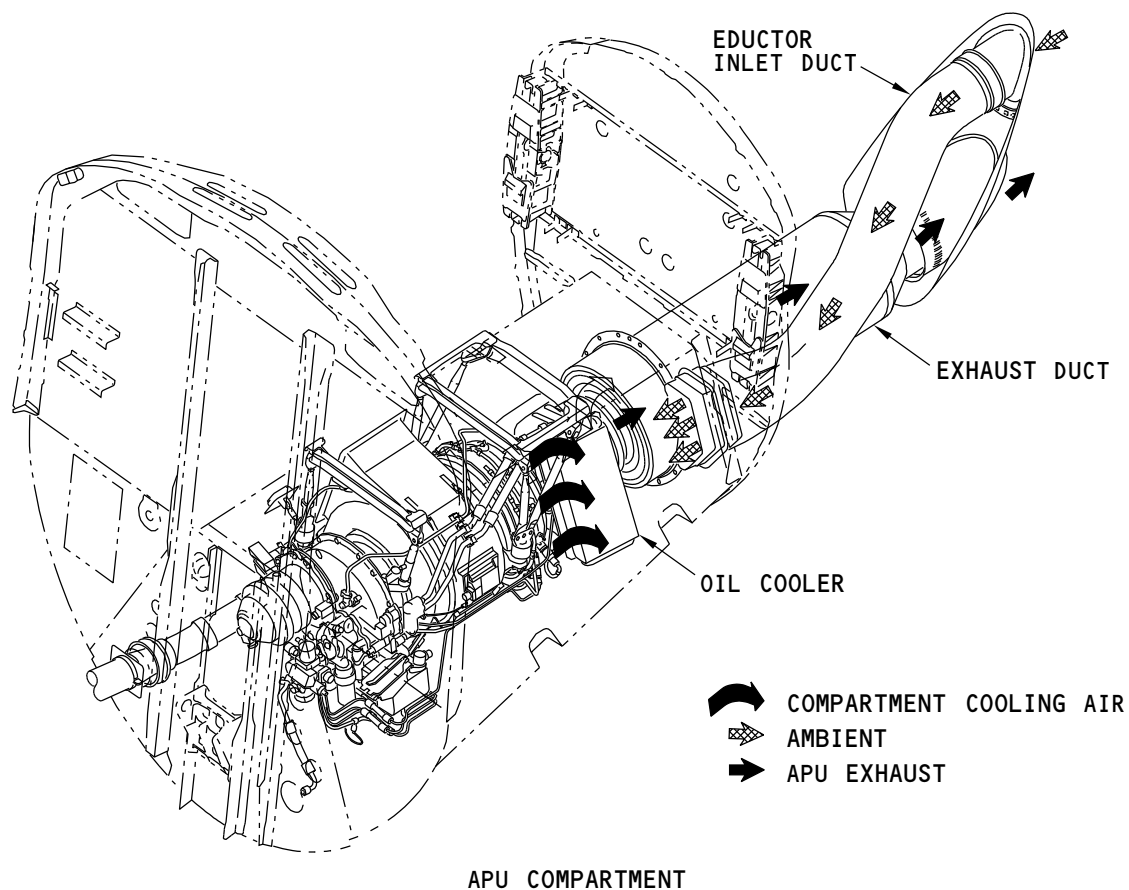

**AIRBORNE AUXILIARY POWER - APU COOLING**

M87490 S0004631426\_V1

49-00-00-012

AKS ALL EFFECTIVITY

**49-00-00**

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details





THIS PAGE IS INTENTIONALLY LEFT BLANK

**49-10-00**

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details





## APU POWER PLANT - INTRODUCTION

### Purpose


The APU power plant supplies electrical and pneumatic power to the airplane systems. This permits the airplane systems to operate without engine or ground power when necessary.

### General

These are the APU power plant systems and components:

- Auxiliary Power Unit
- APU wire harness
- APU mounts
- APU air inlet
- APU drains
- Insulation panels.

See the APU engine section for more information. (SECTION 49-20)

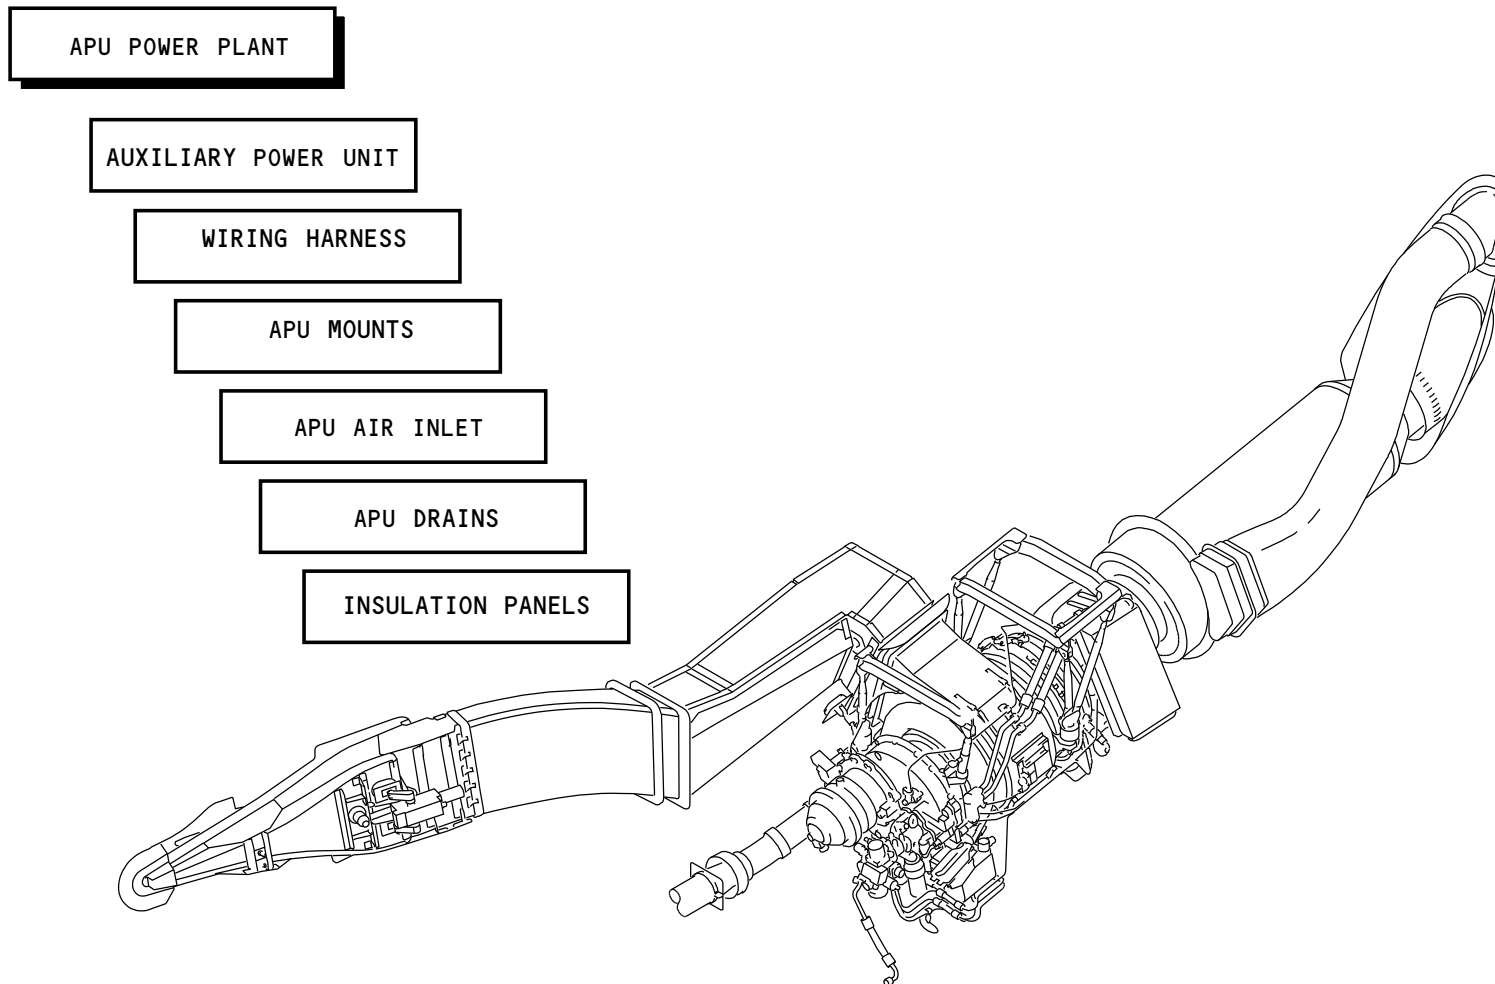

M87512 S0004631430\_V1

### APU POWER PLANT - INTRODUCTION

**49-10-00**

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details




## APU POWER PLANT - AUXILIARY POWER UNIT - INTRODUCTION

### General

These are the major components for the auxiliary power unit:

- Fuel manifolds
- Fuel nozzles
- Oil cooler
- Starter-generator
- Bleed air valve (BAV)
- Inlet guide vane actuator (IGVA)
- Pressure sensors
- Ignition unit
- Surge control valve (SCV)
- Data memory module (DMM)
- Lube module
- Fuel control unit (FCU)
- APU engine.

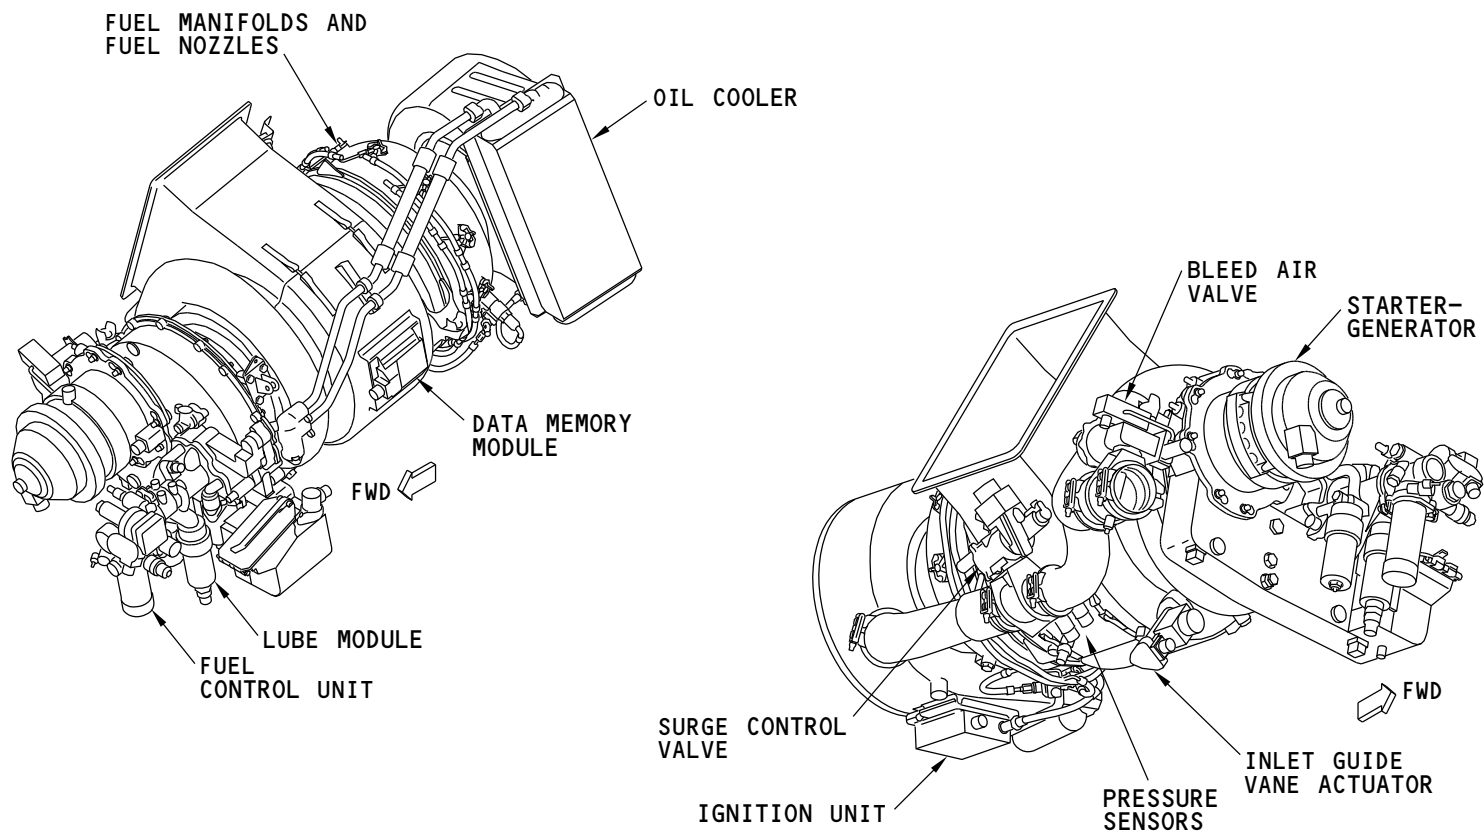

M87513 S0004631432\_V1

### APU POWER PLANT - AUXILIARY POWER UNIT - INTRODUCTION

**49-10-00**

49-10-00-002

AKS ALL

EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details



## APU POWER PLANT - WIRING HARNESS

### Purpose

The APU wiring harness holds all the electrical wires in one assembly.

### Location

The APU wiring harness goes from the firewall connector to the front of the APU. From the front of the APU it goes in different directions to connect all electrical components.


### Physical Description

The wires have shields with twisted pair conductors to keep electromagnetic interference to a minimum. The harness connectors are stainless steel and have a self-lock connection.

### Training information point

The harness connectors have an index to prevent improper connections.

EFFECTIVITY	
AKS ALL	

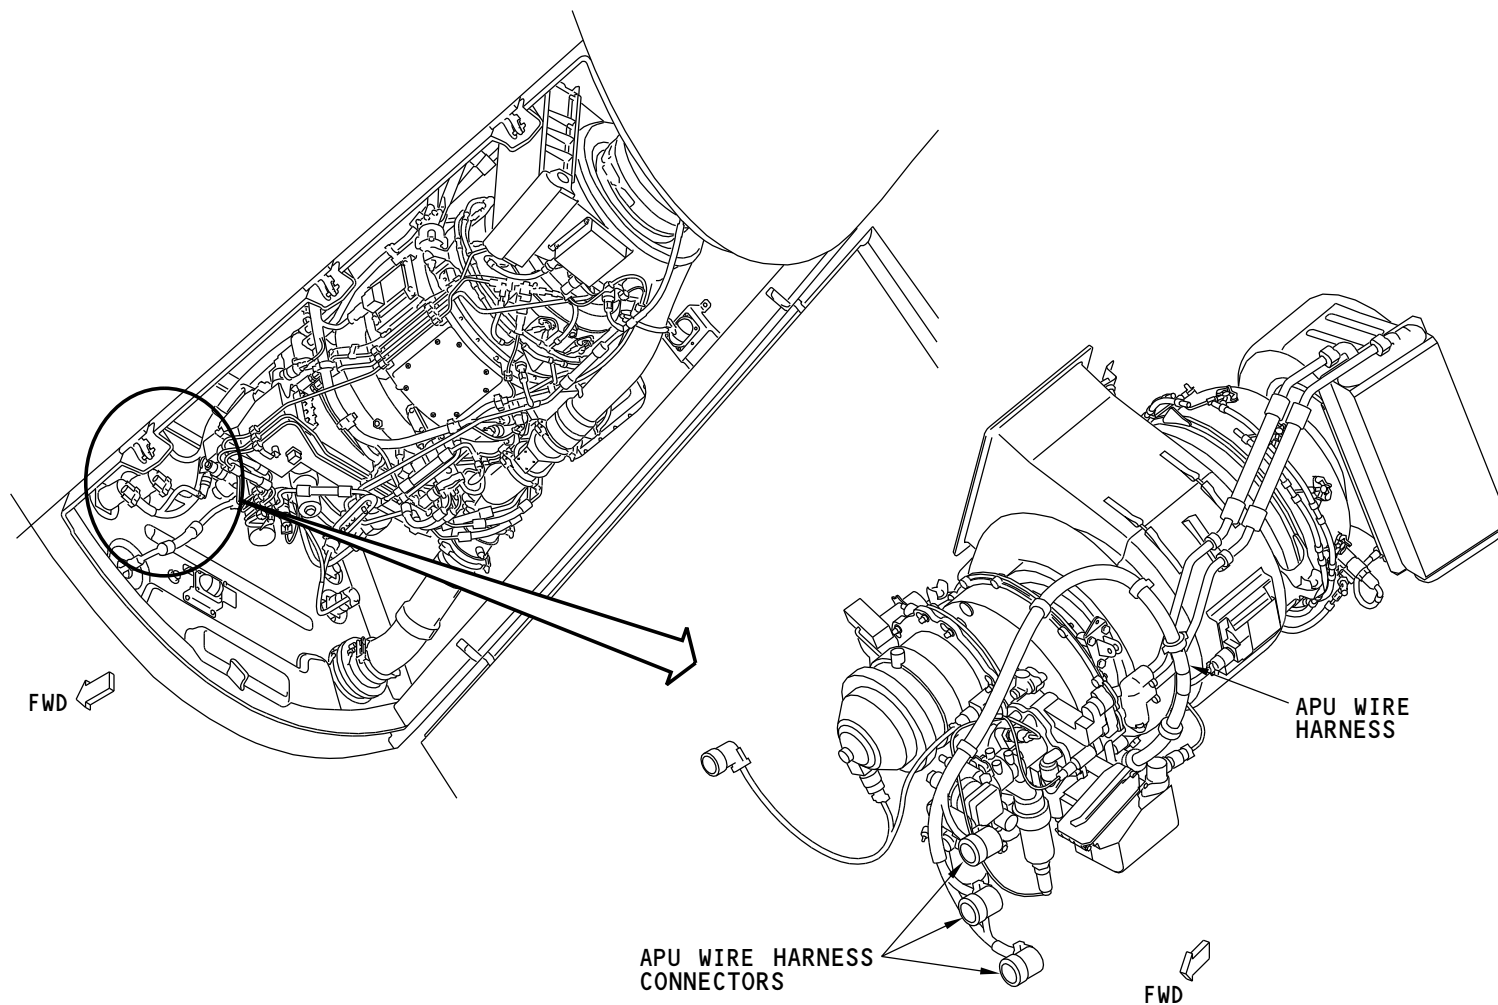

**APU POWER PLANT - WIRING HARNESS**

M87515 S0004631434\_V1

49-10-00-004

AKS ALL

EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

**49-10-00**

**APU POWER PLANT - APU MOUNTS****Purpose**

Three primary APU engine mounts hold the APU in its compartment. The mounts isolate the airplane structure from APU vibration. The primary APU engine mounts use a cone bolt type interface.

The forward left mount is a redundant vertical strut. This mount is not vibration isolated. The forward right side strut is also redundant. If there is a mount failure, these redundant struts, with the remaining primary mounts, hold the APU.

**Location**

The two forward mounts attach to a single crossbeam. The crossbeam attaches to the upper structure of the APU compartment.

The two aft mounts attach to a double crossbeam. These crossbeams attach to the upper structure of the APU compartment.

The right forward and right aft mounts attach to the side wall of the APU compartment.


**Training Information Point**

All of the vertical primary mount struts are adjustable at the top. However, adjustments to the primary mount struts are not required unless a strut is repaired or replaced. The redundant vertical strut (forward left) and the redundant side strut (forward right) may require adjustment during APU replacement. To gain access to the upper jam nut on the mount strut it is necessary to remove the firewall cover. Care must be taken not to damage the firewall cover.

**49-10-00**

AKS ALL	EFFECTIVITY
---------	-------------

D633A101-AKS

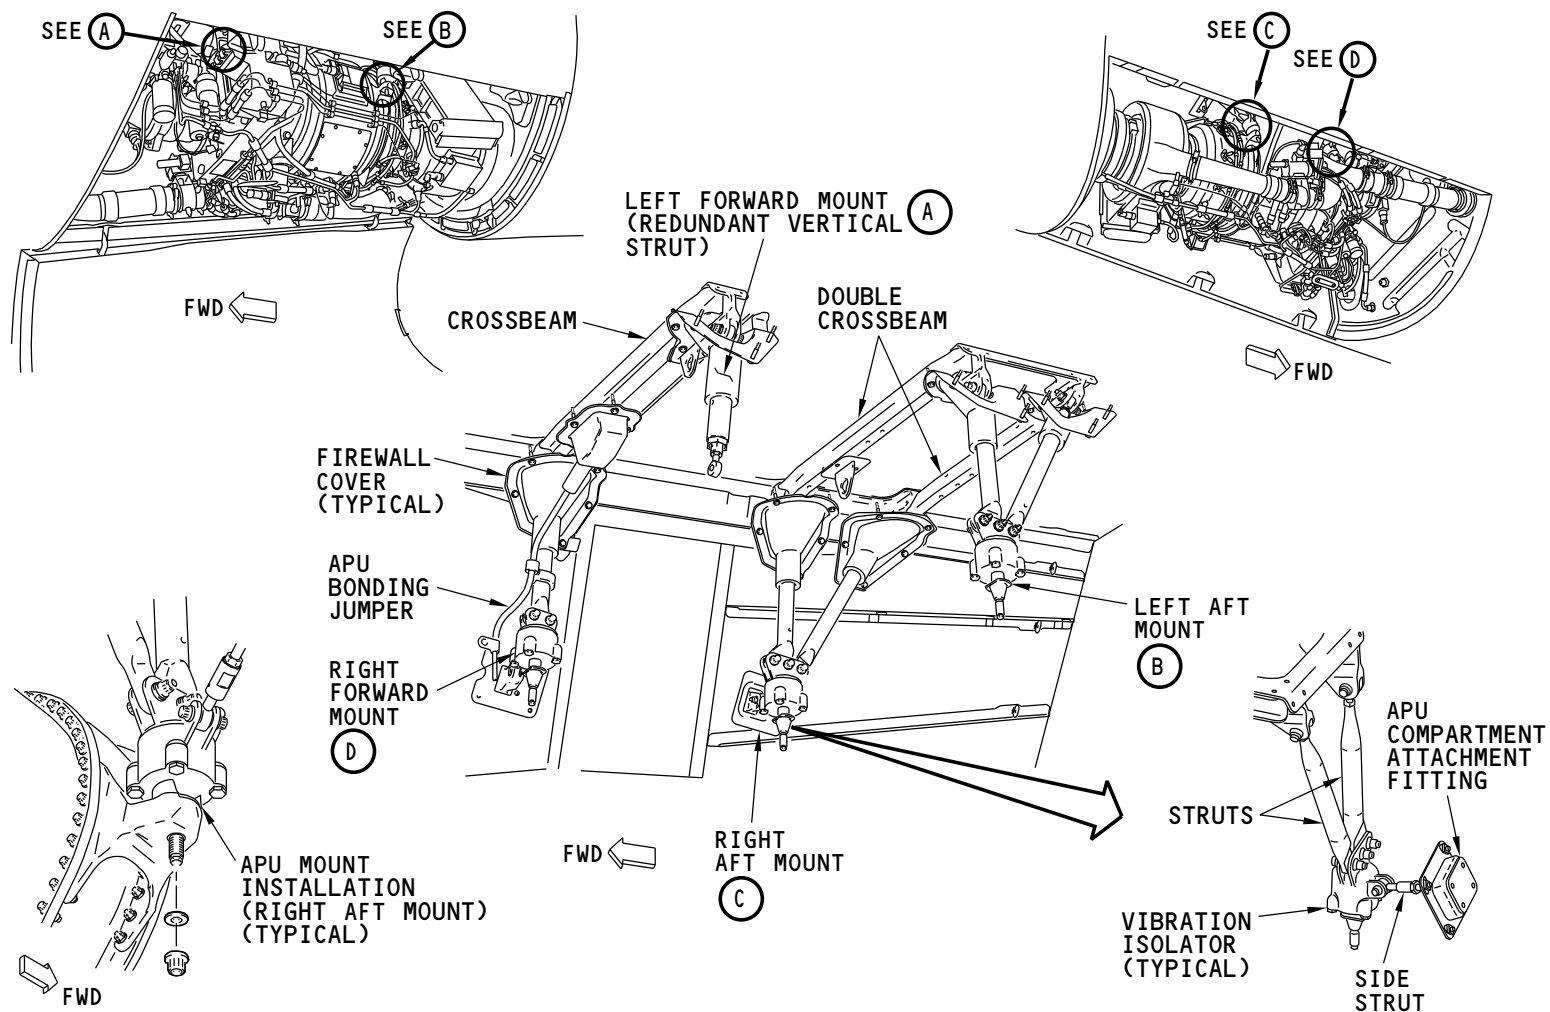

M87514 S0004631436\_V1

**APU POWER PLANT - APU MOUNTS**

49-10-00-003

AKS ALL

EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

**49-10-00**





## APU POWER PLANT - APU AIR INLET - INTRODUCTION

### Purpose

The APU air inlet supplies air to the APU for APU engine and load compressor operation.

### Location

These are the air inlet components on the lower right side of the tail section:


- Inlet door housing
- Air inlet door
- Air inlet door vortex generator and flap
- Air inlet door actuator and actuator rods
- Air inlet door switch
- Diffuser ducts
- Elevator cable housing
- Inlet liner plenum
- Inlet adapter.

### Interface

The APU switch and the APU electronic control unit (ECU) control the air inlet door operation.

### Training Information Point

The air inlet door actuator for the 737-600/700/800 is different than the inlet door actuator for the 737-100/200/300/400/500. These actuators are not inter-changeable.

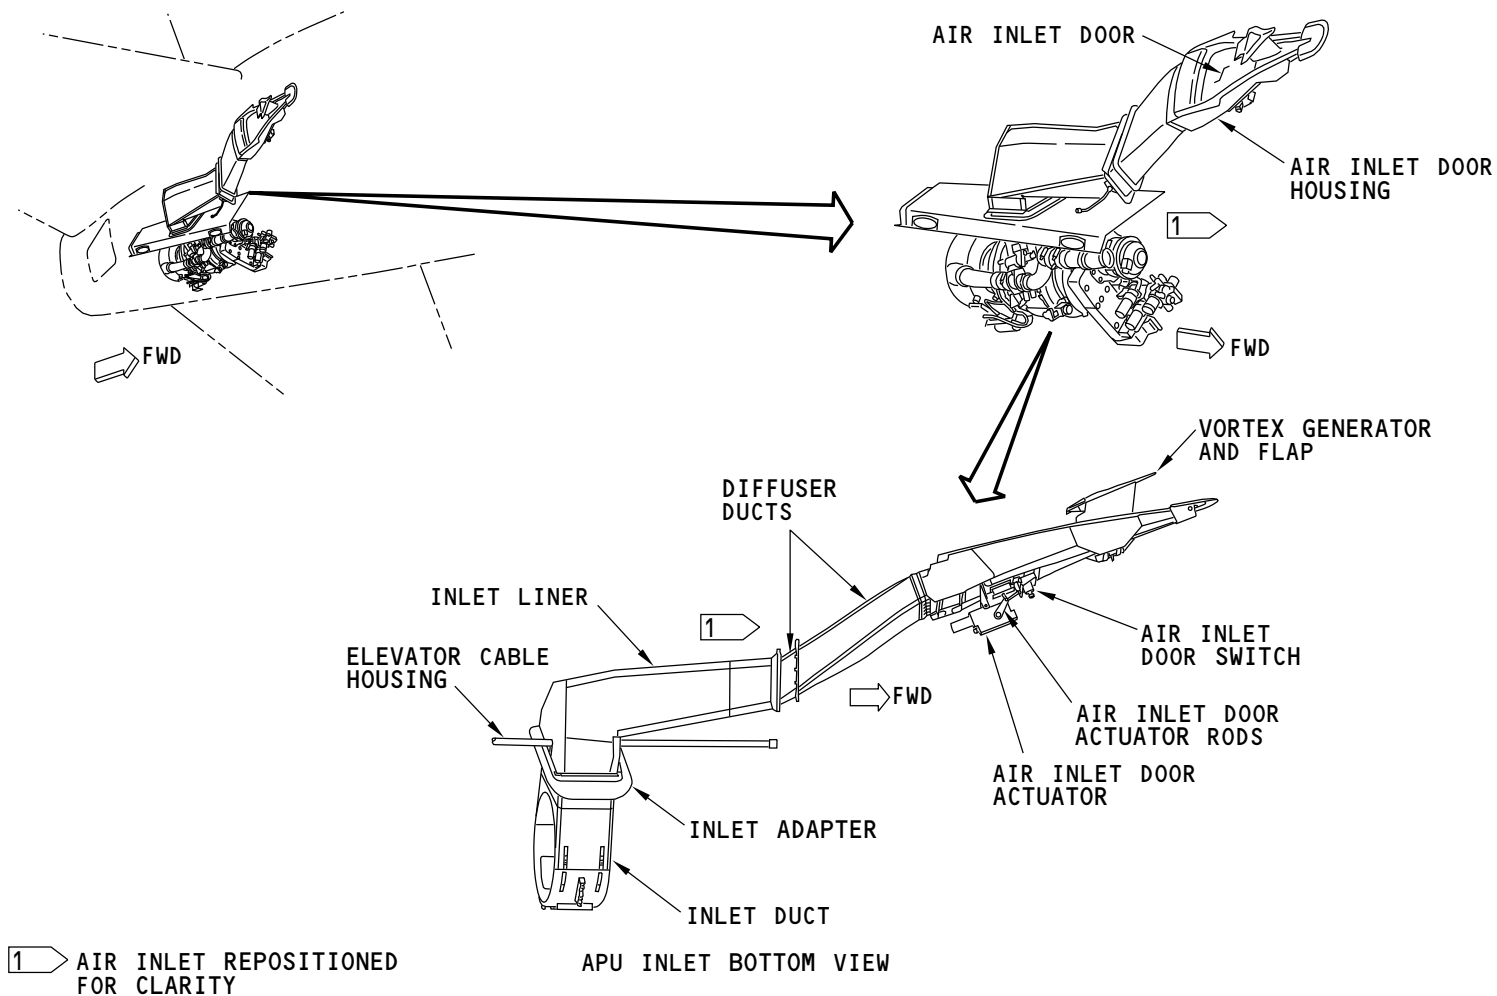

**APU POWER PLANT - APU AIR INLET - INTRODUCTION**

M87516 S0004631438\_V1

**49-10-00**

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

**APU POWER PLANT - AIR INLET DOOR COMPONENTS****Purpose**

The air inlet door opens to let air into the engine and load compressor. The air inlet door closes at shutdown.

The air inlet door is on the right forward side of the aft fuselage.

**Air Inlet Door Actuator**

The air inlet door actuator is a rotary electric actuator that opens and closes the air inlet door. The air inlet door actuator is on the inboard side of the inlet door housing forward of the APU compartment.

**Air Inlet Door Switch**

The air inlet door switch supplies a door open and door not open signal to the ECU. The switch is on the inboard side of the inlet door housing.


**Training Information Point**

You can open the air inlet door without a start cycle on the APU. To open the door, put the APU switch to the ON position.

The air inlet door does not fully close. This prevents APU rotation during flight when the APU air inlet door is in the closed position.

**NOTE:** If there is a pressure differential from the inlet of the APU, and the outlet of the APU, then air will flow. If air flows in sufficient quantities, the APU will rotate or 'windmill' during flight. Therefore, there is a need to neutralize that pressure differential. When the door is closed, the pressure on the back side of the APU is higher than on the inlet side causing the differential to be in the opposite direction. So, the APU inlet door is left slightly open to neutralize the pressure differential across the APU during flight to prevent 'windmilling'.

The air inlet door and actuator are adjustable.

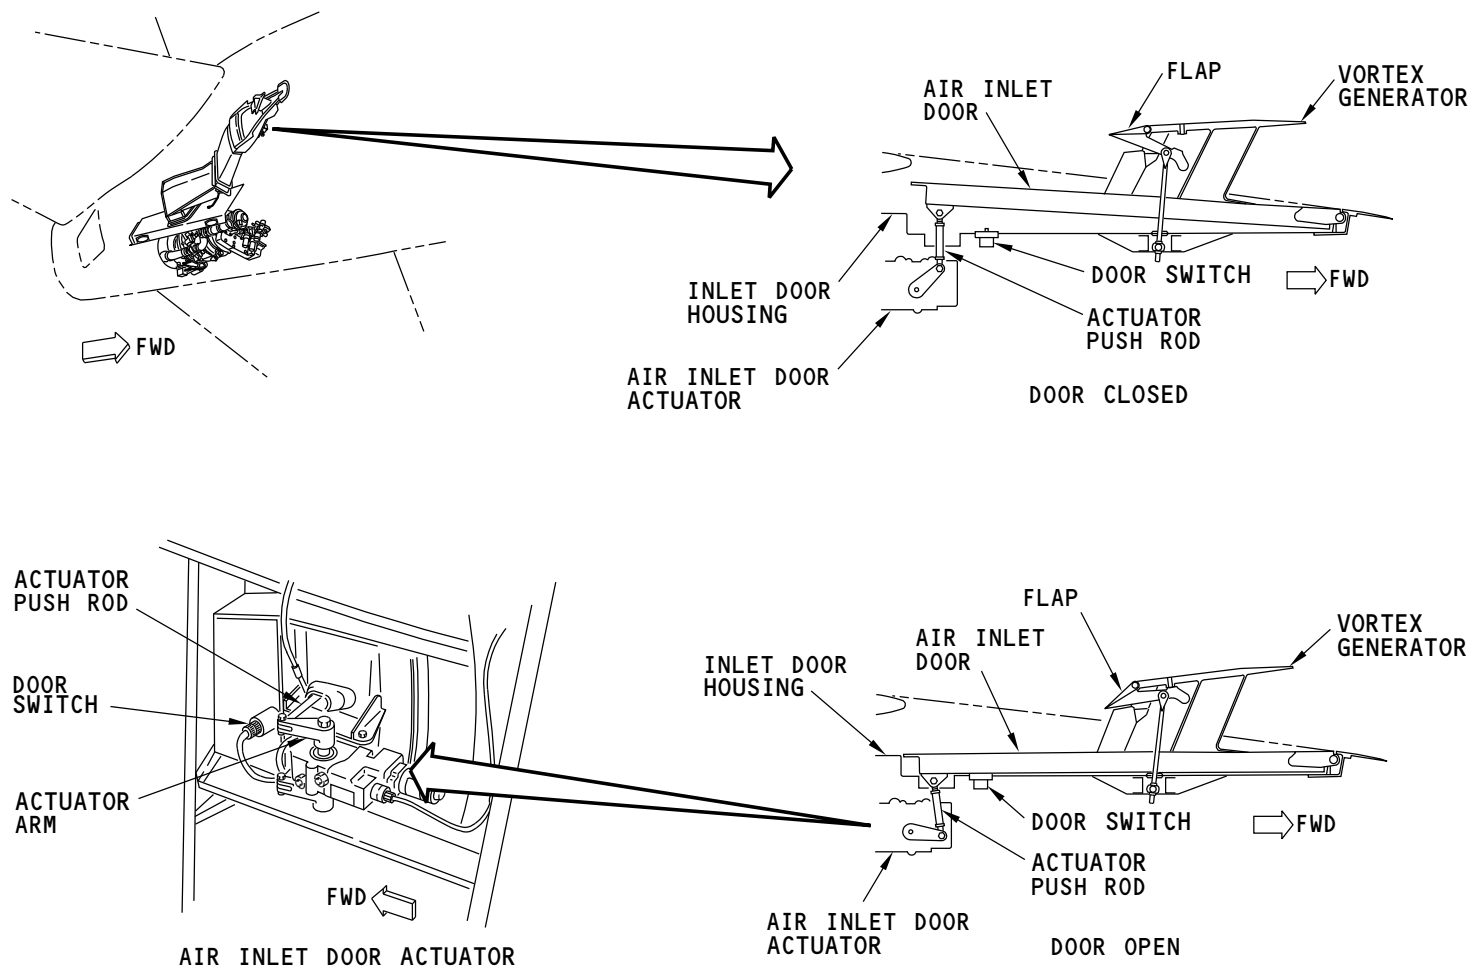

M87517 S0004631440\_V1

### APU POWER PLANT - AIR INLET DOOR COMPONENTS

49-10-00

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

**APU POWER PLANT - APU AIR INLET FUNCTIONAL DESCRIPTION****General**

The APU air inlet door opens for APU operations. It is in the closed position when the APU is not in operation. The ECU and APU switch control the APU air inlet door.

**APU Start**

When you put the APU switch in the ON or START position, this sequence occurs:

- ECU sends an open signal to the fuel shutoff valve
- When the fuel shutoff valve opens, the fuel shutoff valve open limit switch changes position
- Open signal goes to the ECU
- ECU sends the open signal to the air inlet door actuator
- Air inlet door actuator opens the air inlet door
- When the air inlet door is fully open, the air inlet door switch sends a signal to the ECU.

**Normal Operation**

During normal operation, the air inlet door and fuel shutoff valve stay open until they get a signal to go to the closed position.

**APU Shutdown**

When you put the APU switch to the OFF position, it causes these conditions:

- APU shuts down
- APU fuel shutoff valve closes
- APU air inlet door closes.

These signals shutdown the APU and close the air inlet door and the fuel shutoff valve:


- APU switch to the OFF position (P5)
- APU fire switch in close position (P8)

- APU remote fire switch in close position (P28)
- Engine/APU fire detection module detects a fire
- Automatic protective shutdown (ECU logic).

**49-10-00****AKS ALL** **EFFECTIVITY**

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

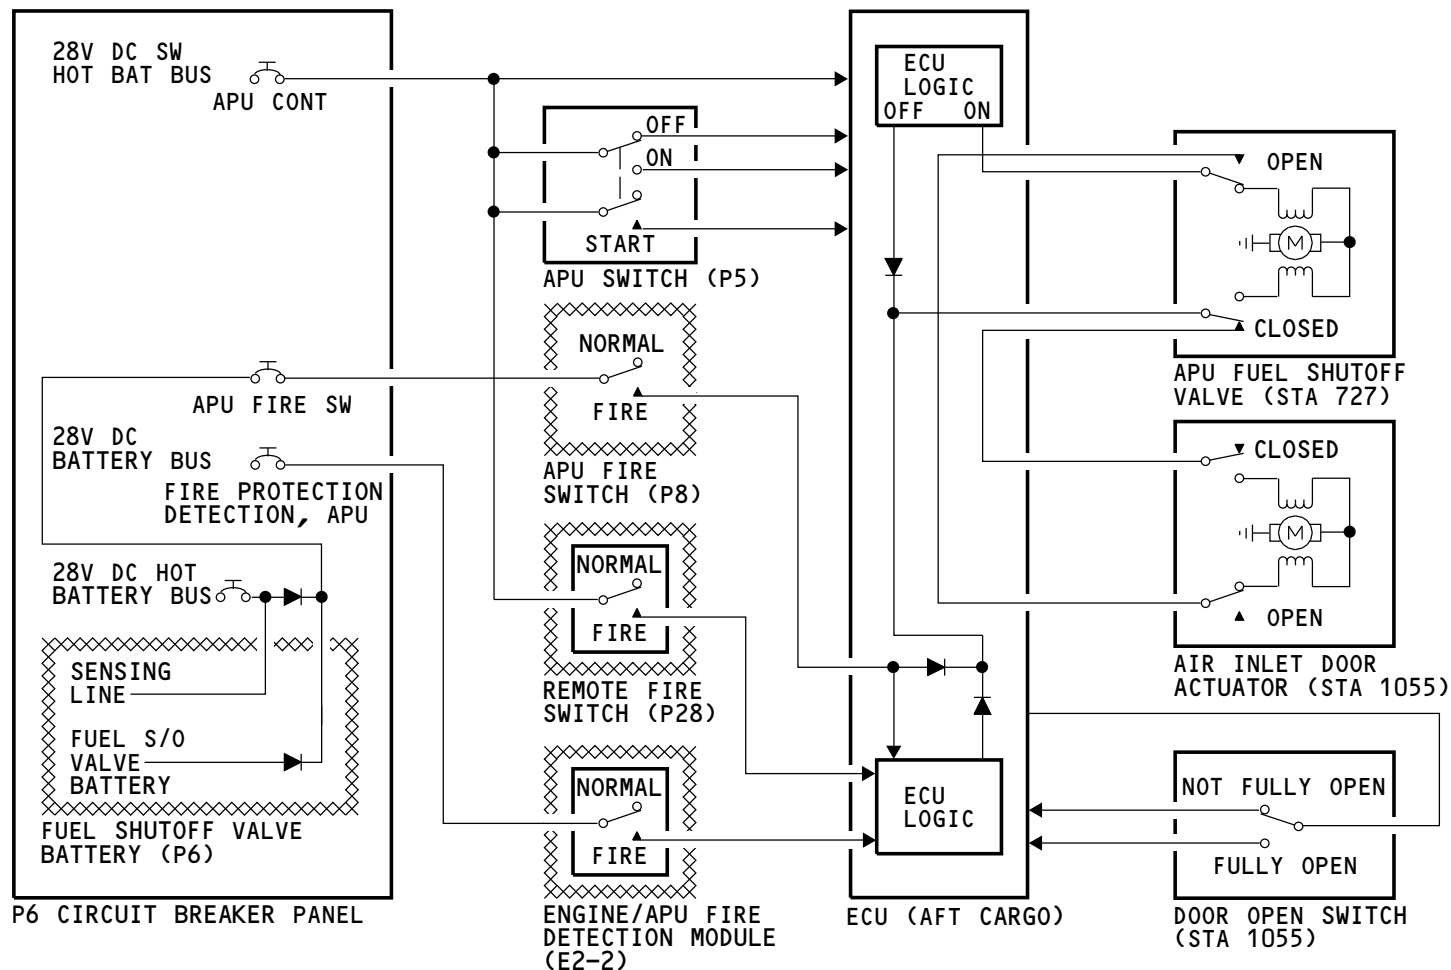

M87518 S0004631442\_V1

### APU POWER PLANT - APU AIR INLET FUNCTIONAL DESCRIPTION

49-10-00

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

**APU POWER PLANT - APU DRAINS - INTRODUCTION****Purpose**

The APU engine drain system drains flammable fluid overboard through a drain mast.

The APU compartment drain system drains flammable and nonflammable fluids overboard through a drain hole on the APU cowl door.

**APU Engine Drain System**

These drains come together at the forward drain collector tube:

- Fuel control unit (FCU) seal
- Surge control valve (SCV) seal
- Inlet guide vane actuator (IGVA) seal.

The APU load compressor seal connects to the middle drain collector tube.

These drains come together at the aft drain collector tube:

- Combustor case
- Eductor
- Muffler.

The drain collector contacts the drain cup when the APU cowl door is closed.

**Compartment Drain System**

The compartment drain system collects external APU engine leakage and fluids that enter the APU compartment through the eductor inlet. This fluid drains through the APU cowl door. The drain extends past the cowl door to keep fluid off the airplane skin.

**Training Information Point**

Fluid drainage from the drain mast must be investigated to determine the source of the leak. Fuel or oil leakage from the FCU, SCV, or IGVA is an indication of an APU failure.


Fluid leakage from the door drains through the door drain. The door drain connects to the drain mast. Oil or fuel leakage from the compartment drain shows a loose connection on the APU. You should correct the cause of the leakage. Water leakage from the drain mast is usual.

**49-10-00**

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

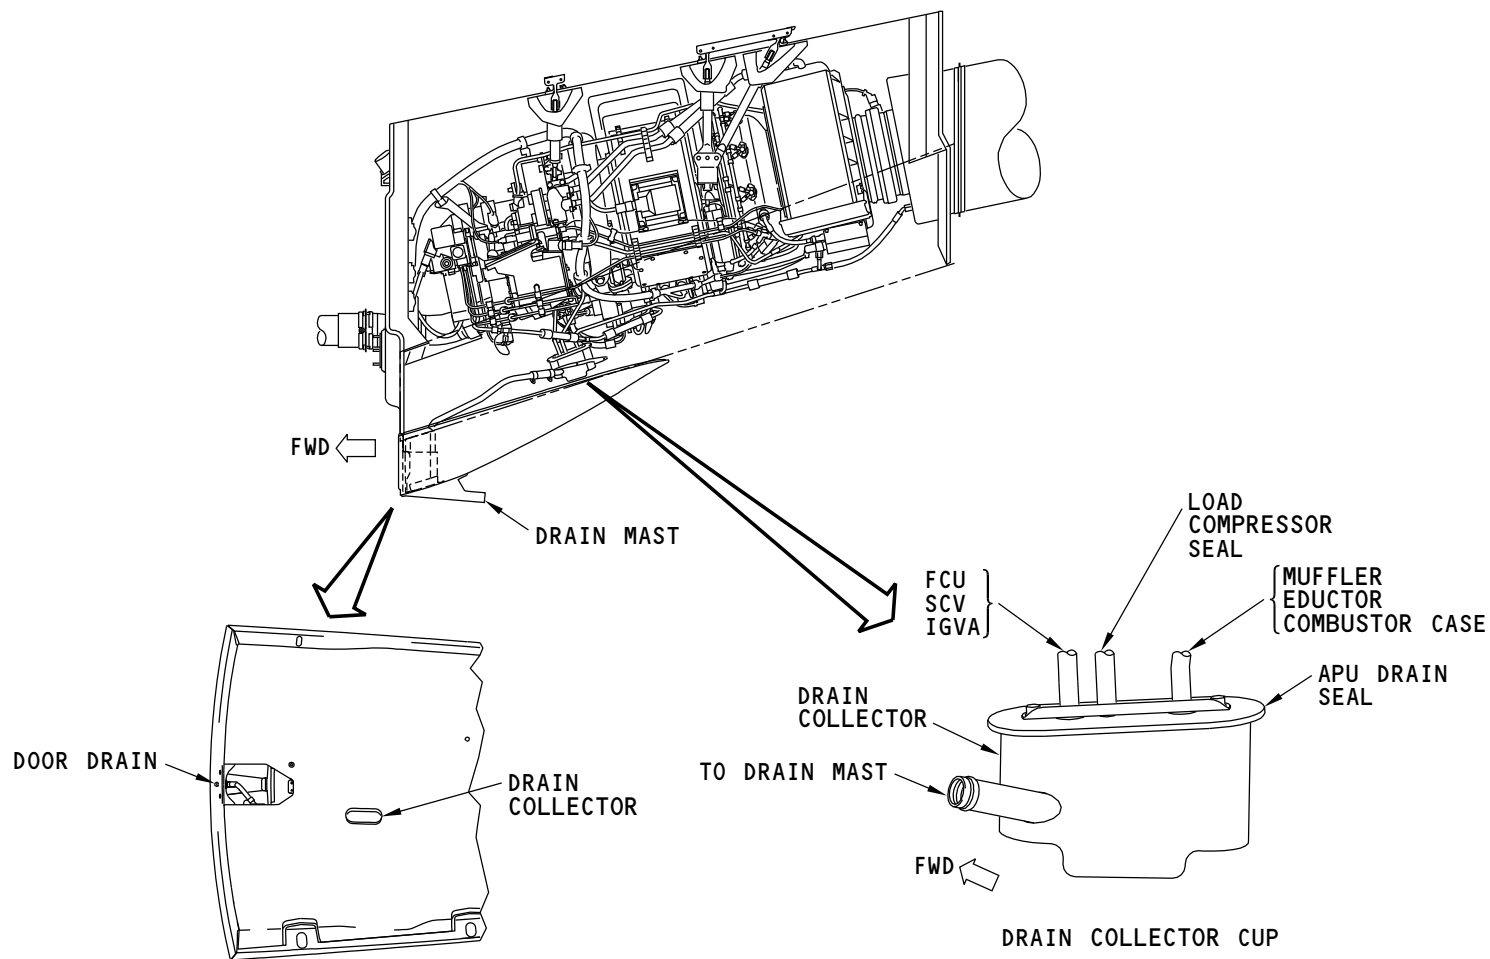

M87520 S0004631445\_V1

**APU POWER PLANT - APU DRAINS - INTRODUCTION**

**49-10-00**

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details






## APU POWER PLANT - APU DRAINS - FUNCTIONAL DESCRIPTION

### General

These APU components send fuel and oil to the drain mast on the APU access door:

- Combustion chamber fuel
- Eductor/muffler
- Load compressor seal
- Surge control valve (SCV) actuator seal
- Inlet guide vane (IGV) actuator seal
- Fuel control unit seal.

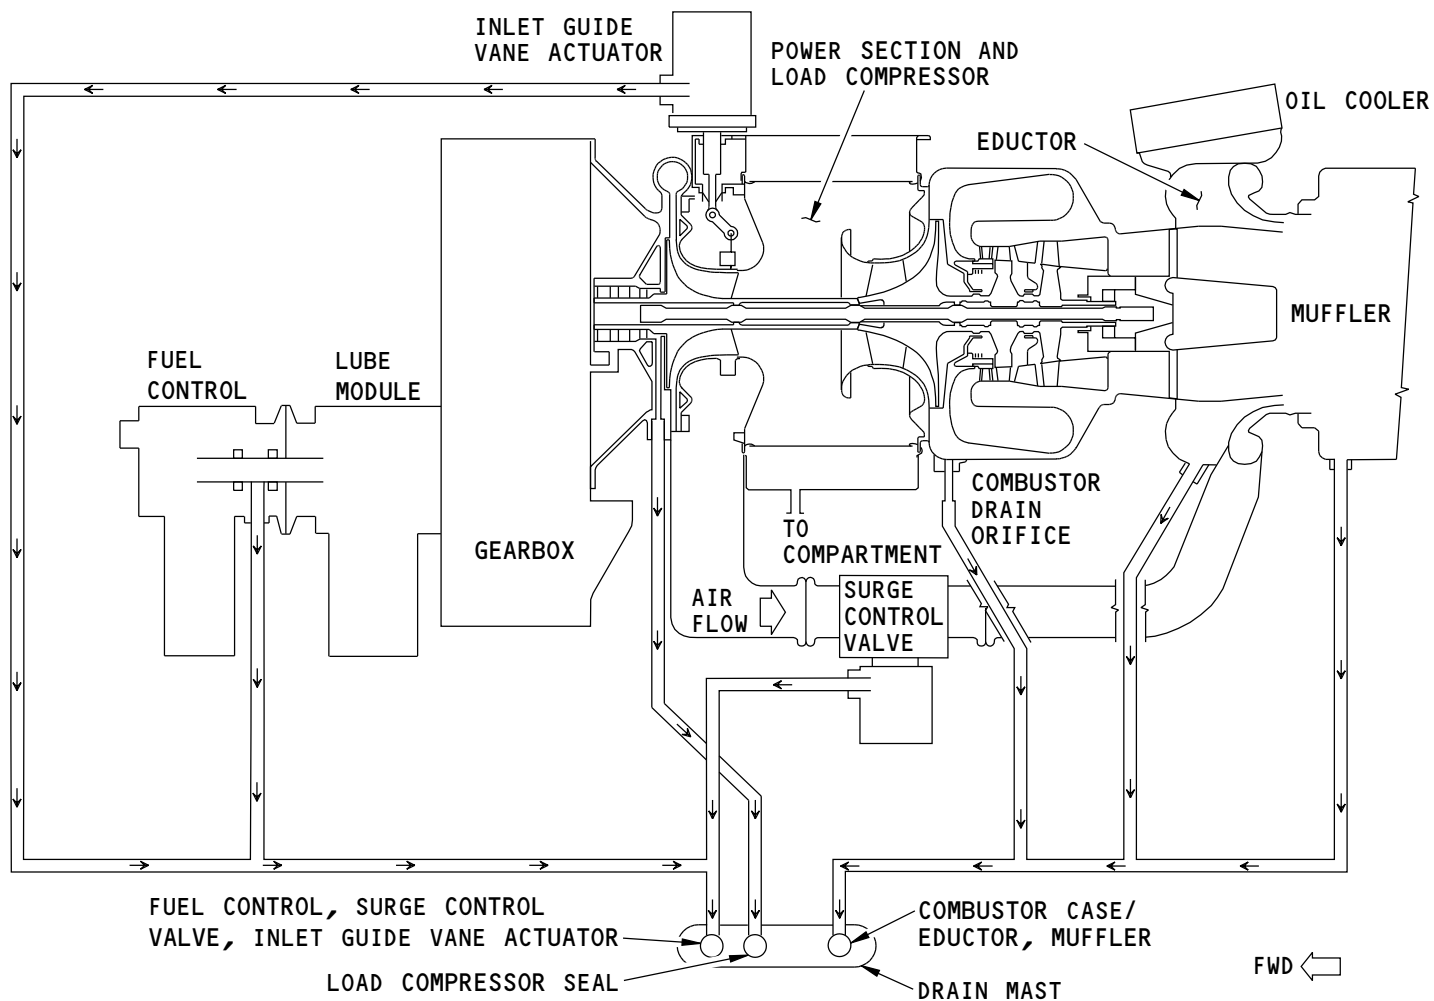

LEGEND:

→ → DRAIN LINE

2067716 S0000429419\_V1

### APU POWER PLANT - APU DRAINS - FUNCTIONAL DESCRIPTION

49-10-00

AKS ALL

EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

**APU POWER PLANT - APU INSULATION PANELS****Purpose**

The APU insulation panels provide thermal and fire insulation between the APU and APU compartment structure.

**Physical Description**

There are seven different insulation panels. Each panel fits in a particular area of the APU compartment.

The panels are made of stainless steel face sheets with insulation between the face sheets.

**Training Information Point**

The APU insulation panels are not easily damaged, however, if the panels are punctured, you should repair the damaged panel as soon as possible. If you do not repair a puncture immediately, the panel can store fluids in the insulation. If fluids get into the insulation material, you must replace the panel. The air inlet scoop replaces the foam and support insulation (egg crate) that were installed between the APU insulation panels and the bulkhead. During an airplane operation, the air inlet scoop supplies forced outside air through the empty space between the APU insulation panels and the bulkhead for ventilation and for the removal of flammable or unwanted fluids. The location of the air inlet scoop is behind the forward insulation panel and adjacent to the forward right side of the APU cowl door.

See Part II of the Airplane Maintenance Manual for the repair procedure.

**Location**

The insulation panels are around the inside of the APU compartment. The name of the panel is also the location of the panel in the compartment.

These are the seven insulation panels:

- Forward
- Forward right
- Aft right
- Aft

- Left
- Top
- Door.

**Training Information Point**

The insulation panels in the APU compartment are installed in a specified order because of the insulation panel over laps. The APU cowl door insulation panel is installed independently.


See Part II of the maintenance manual for APU insulation panel removal/installation procedures.

**49-10-00**

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

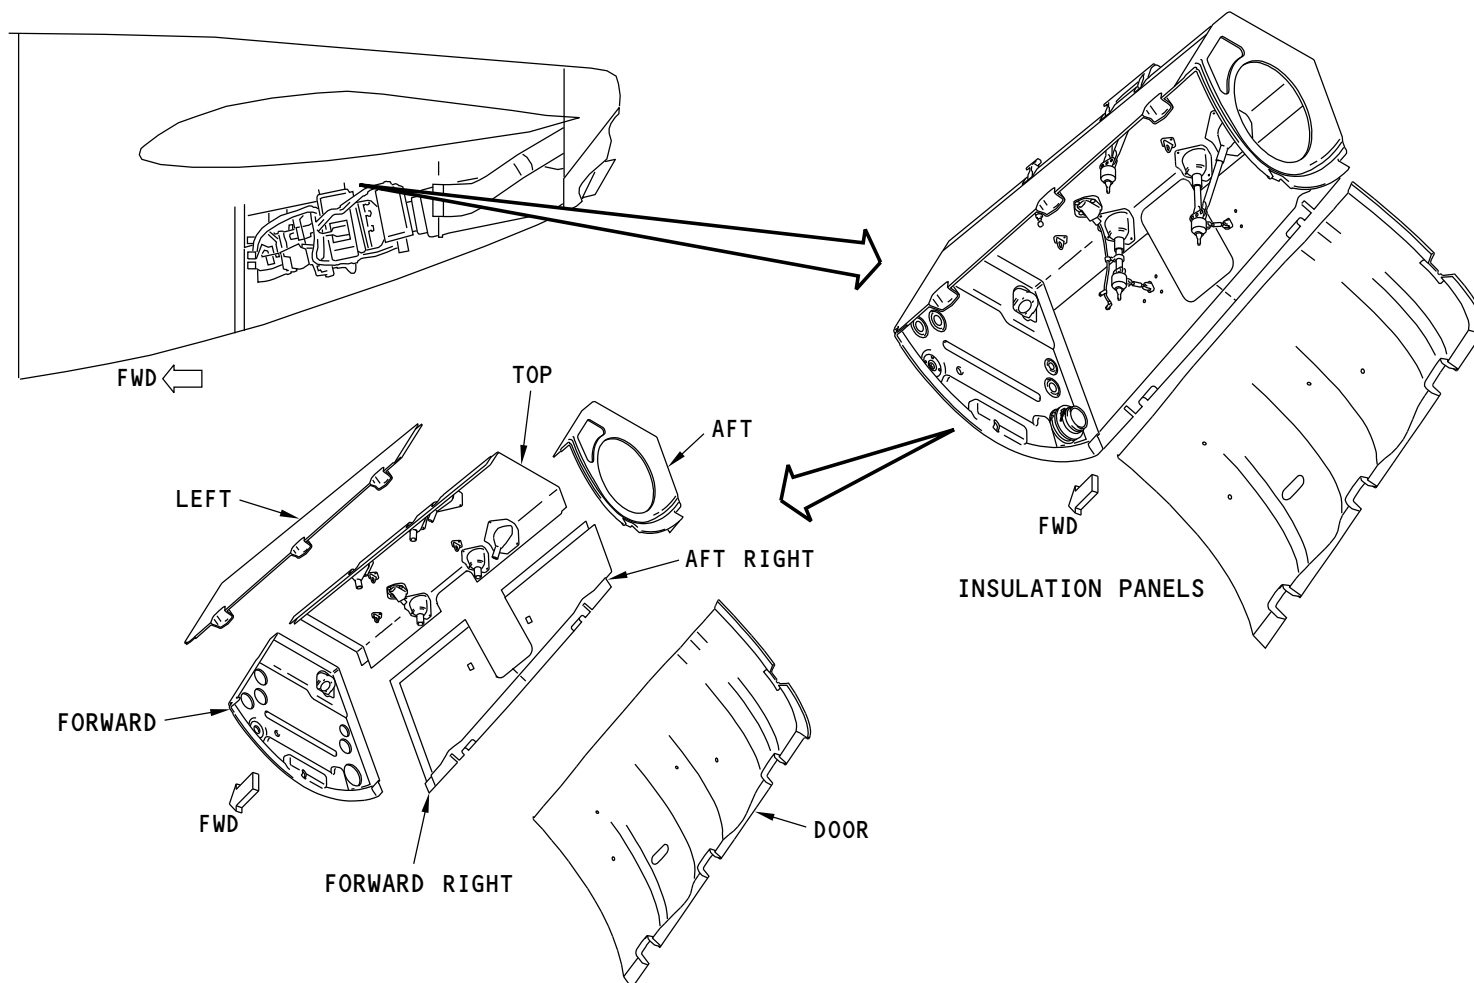

**APU POWER PLANT - APU INSULATION PANELS**

M87522 S0004631449\_V1

**49-10-00**

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details



## APU POWER PLANT - APU INSULATION PANELS INSTALLATION

### Purpose

Six of the seven insulation panels have holes for APU systems interface connections with the airplane.

These are the six insulation panels with holes:

- Forward
- Forward right
- Aft right
- Aft
- Top
- Door.

### Forward Insulation Panel

These are the holes in the forward insulation panel:

- Starter-generator wiring
- Fire detector and compartment light connector
- Generator control connector
- ECS duct
- Fire extinguisher nozzle
- Fuel line
- Three electrical connectors for APU harness.

### Forward Right Insulation Panel

The forward right insulation panel has a hole for the APU forward right mount.

### AFT Right Insulation Panel

The aft right insulation panel has a hole for the APU aft mount.

### Aft Insulation Panel

Two holes are in the aft insulation panel. One is for the eductor duct and the other is for the APU exhaust duct.


### Top Insulation Panel

These are the holes in the top insulation panel:

- Right forward mount strut and boot assembly
- Two right aft mount struts and boot assemblies
- Two left aft mount struts and boot assemblies
- Left forward mount strut and boot assembly
- APU starter-generator lift fitting
- Two APU lift fittings
- APU electrical ground bracket.

### Door Insulation Panel

The door insulation panel has one hole for the APU drains.

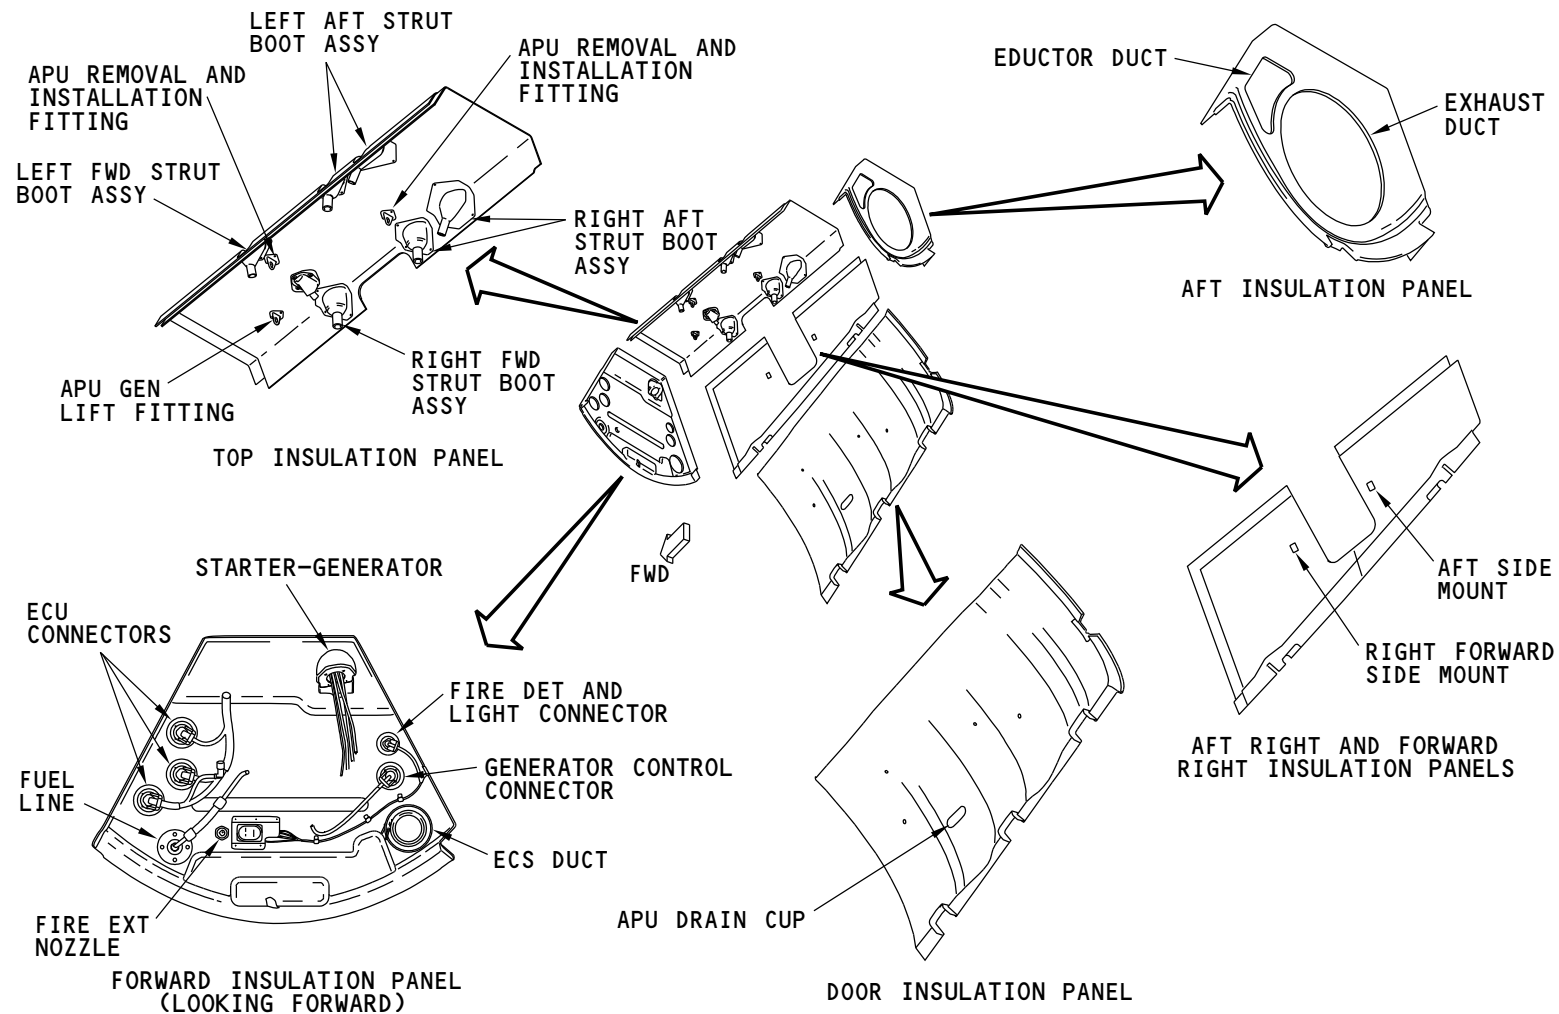

**APU POWER PLANT - APU INSULATION PANELS INSTALLATION**

M87523 S0004631451\_V1

**49-10-00**

AKS ALL

EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details



## APU POWER PLANT - INSTALLATION

**General**

The auxiliary power unit is removed or installed from the airplane by one of these two methods:

- Fishpole hoist
- Hydraulic jack.

The fishpole hoist method uses two fishpole hoists and APU hoist equipment to lift and lower the APU. The APU hoist equipment has three parts:

- Forward arm assembly
- Center beam assembly
- Aft arm assembly.

The APU hoist equipment attaches to the two APU lift fittings in the APU compartment. The two fishpole hoists attach to the APU hoist equipment and the APU. The two fishpole hoists are used to move the APU up and down in the APU compartment.



The hydraulic jack method uses a hydraulic jack assembly, an adapter, and a maintenance stand to lift and lower the APU. The adapter attaches to the hydraulic jack assembly. The maintenance stand is used to lift the APU, adapter and hydraulic jack assembly to the APU compartment. The hydraulic jack assembly then moves the APU up and down in the APU compartment.

**WARNING:** MAKE SURE THE TWO FISHPOLE HOISTS ARE IN SERVICEABLE CONDITION. THE TWO CABLES OF THE TWO FISHPOLE HOISTS MUST SHOW NO SIGNS OF DAMAGE. YOU CAN CAUSE INJURY TO PERSONS OR DAMAGE TO EQUIPMENT.

**CAUTION:** MAKE SURE THE TWO CABLES OF THE TWO FISHPOLE HOISTS ARE EQUALLY WOUND AROUND THE DRUMS BEFORE YOU USE THE TWO FISHPOLE HOISTS TO HOLD THE APU. A CABLE THAT IS NOT EQUALLY WOUND CAN CAUSE THE APU TO FALL SUDDENLY. THIS CAN CAUSE DAMAGE TO THE APU.

**CAUTION:** BE CAREFUL WHEN YOU MOVE THE APU IN THE APU COMPARTMENT. YOU MUST TILT THE APU APPROXIMATELY 10-15 DEGREES IN THE FORWARD-END-DOWN POSITION WHILE THE APU IS IN THE APU COMPARTMENT. DAMAGE TO THE FUEL SUPPLY LINE, STARTER-GENERATOR WIRE HARNESS AND ENGINE WIRE HARNESS CAN OCCUR.

**CAUTION:** CAREFULLY LIFT THE APU SO THAT YOU DO NOT DAMAGE THE CONED SURFACES OF THE APU MOUNTS.

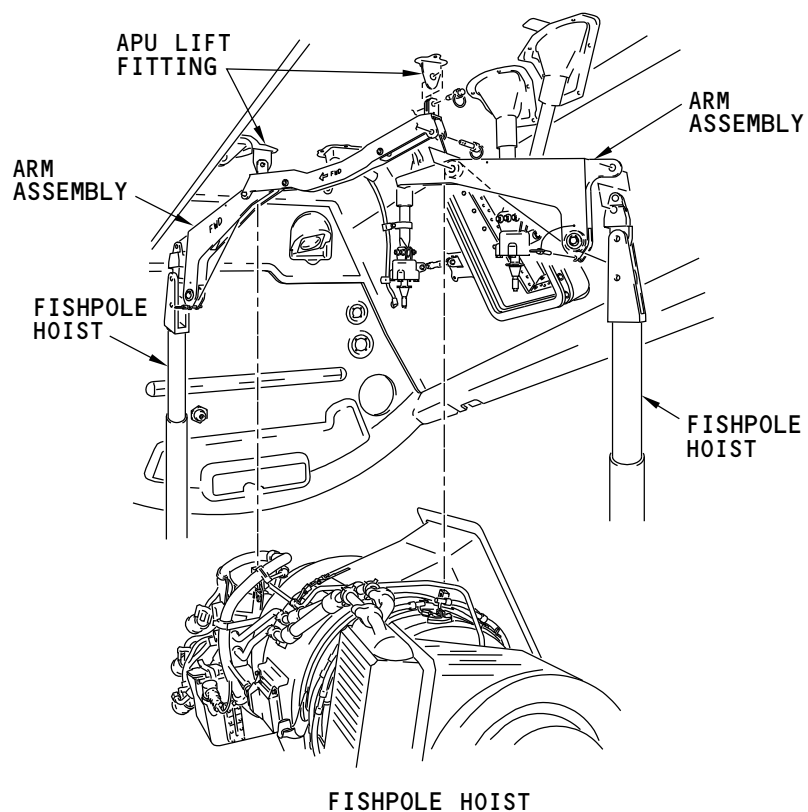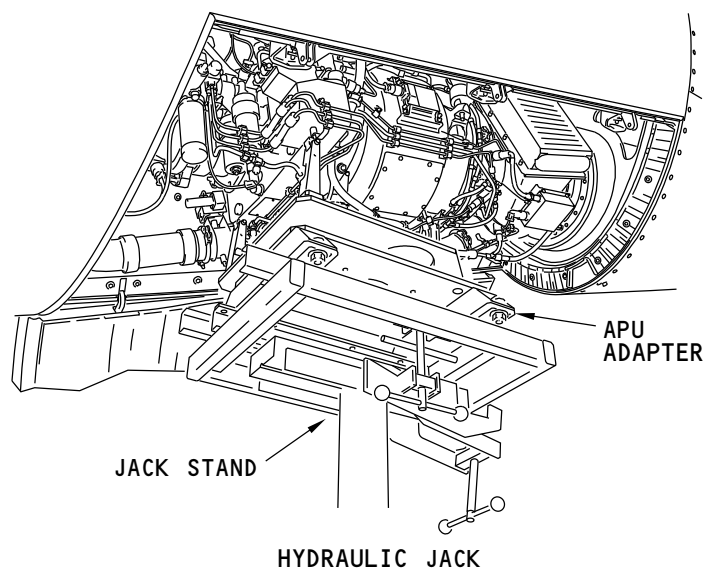

### APU POWER PLANT - INSTALLATION

M87524 S0004631453\_V1

**49-10-00**

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details







THIS PAGE IS INTENTIONALLY LEFT BLANK

**49-20-00**

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details



## APU ENGINE - INTRODUCTION

### Purpose

The APU engine supplies power to operate the load compressor and the APU starter-generator.

### General Description

The APU engine has these main sections:

- Accessory gear box
- Single stage load compressor
- Single stage engine compressor
- Combustor chamber
- Two stage axial flow turbine.

All the components in the engine that turn are on a common shaft.

The shaft turns the accessory gearbox and the load compressor. The accessory gear box turns the APU generator and other components.

The engine operates at a constant speed to provide 400 Hz generator output. The APU engine also supplies air for airplane systems.


An inlet screen prevents foreign object damage (FOD) to the APU compressors.

**49-20-00**

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

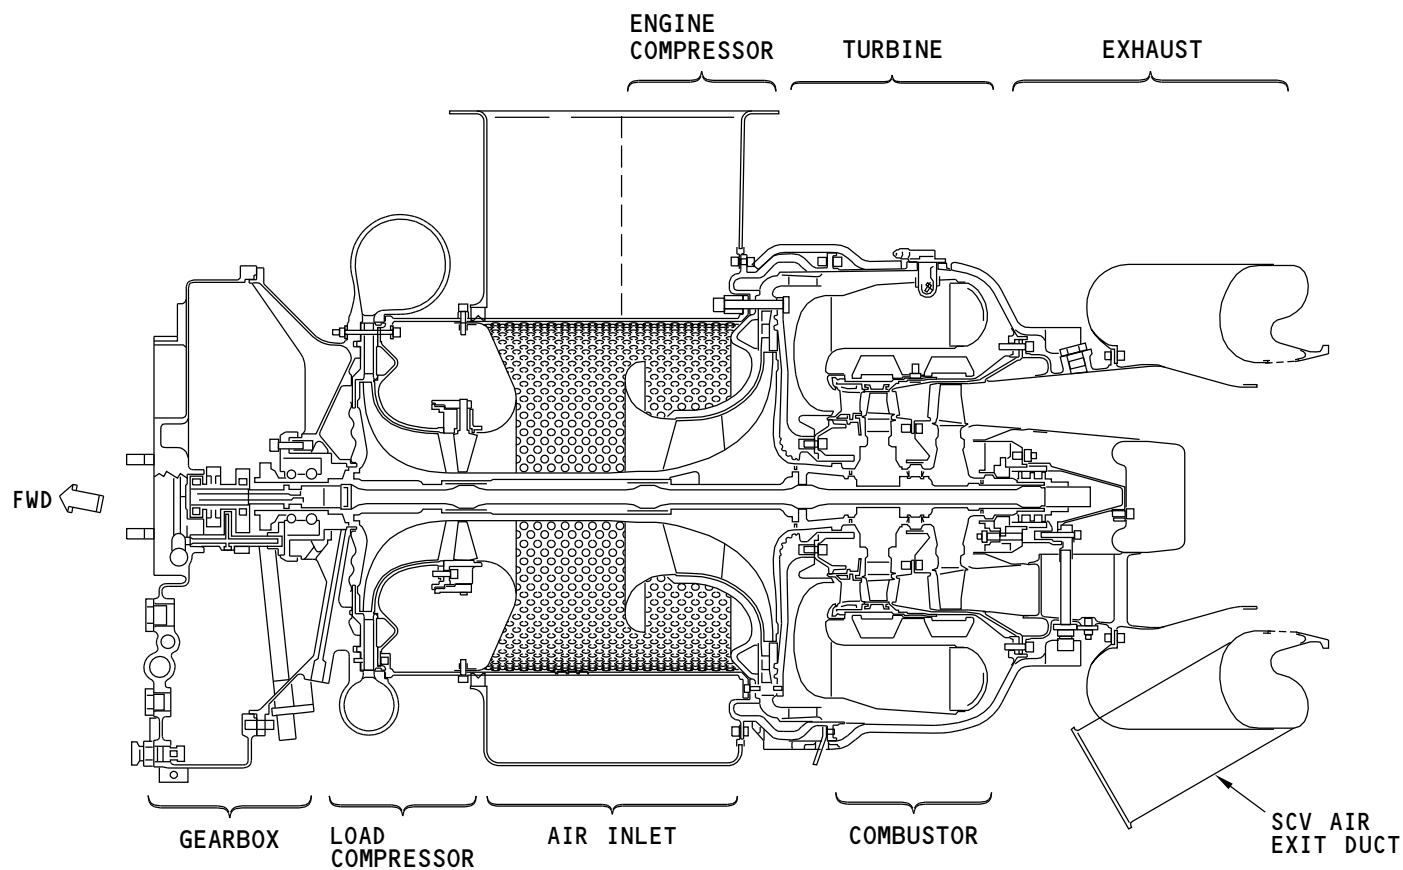

M87525 S0004631457\_V1

### APU ENGINE - INTRODUCTION

**49-20-00**

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details



## APU ENGINE - TRAINING INFORMATION POINT - APU BORESCOPE


### Borescope Inspection Ports

These components have borescope inspection access:

- Load compressor
- Engine compressor
- Combustor chamber
- Turbine section.

### Engine Manual Rotation

To borescope the compressor and turbine, you turn the APU engine main shaft. To do this, remove the access plug in the air-oil separator housing on the front of the gearbox and insert a 1/4-inch hex drive with a 6-inch extension.

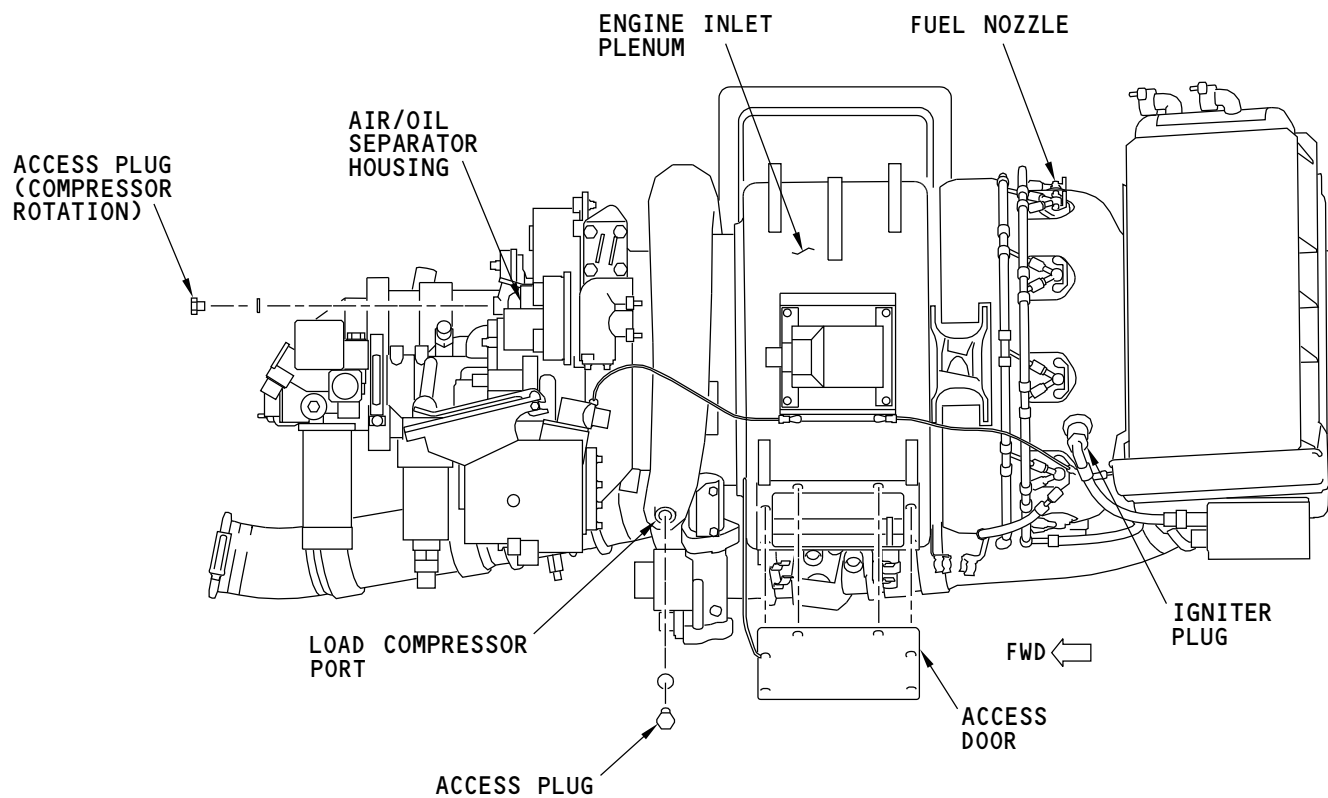

M87526 S0004631459\_V1

**APU ENGINE - TRAINING INFORMATION POINT - APU BORESCOPE**

**49-20-00**

**AKS ALL EFFECTIVITY**

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details





THIS PAGE IS INTENTIONALLY LEFT BLANK

**49-30-00**

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details






## APU FUEL SYSTEM - INTRODUCTION

### Purpose

The APU fuel system pressurizes and supplies metered fuel to the APU combustion chamber. It also supplies pressurized fuel to the APU inlet guide vane and surge control valve actuators.

These are the APU fuel system components:

- Fuel control unit (FCU)
- Flow divider solenoid
- Flow divider
- Primary fuel manifold
- Secondary fuel manifold
- Fuel nozzles.

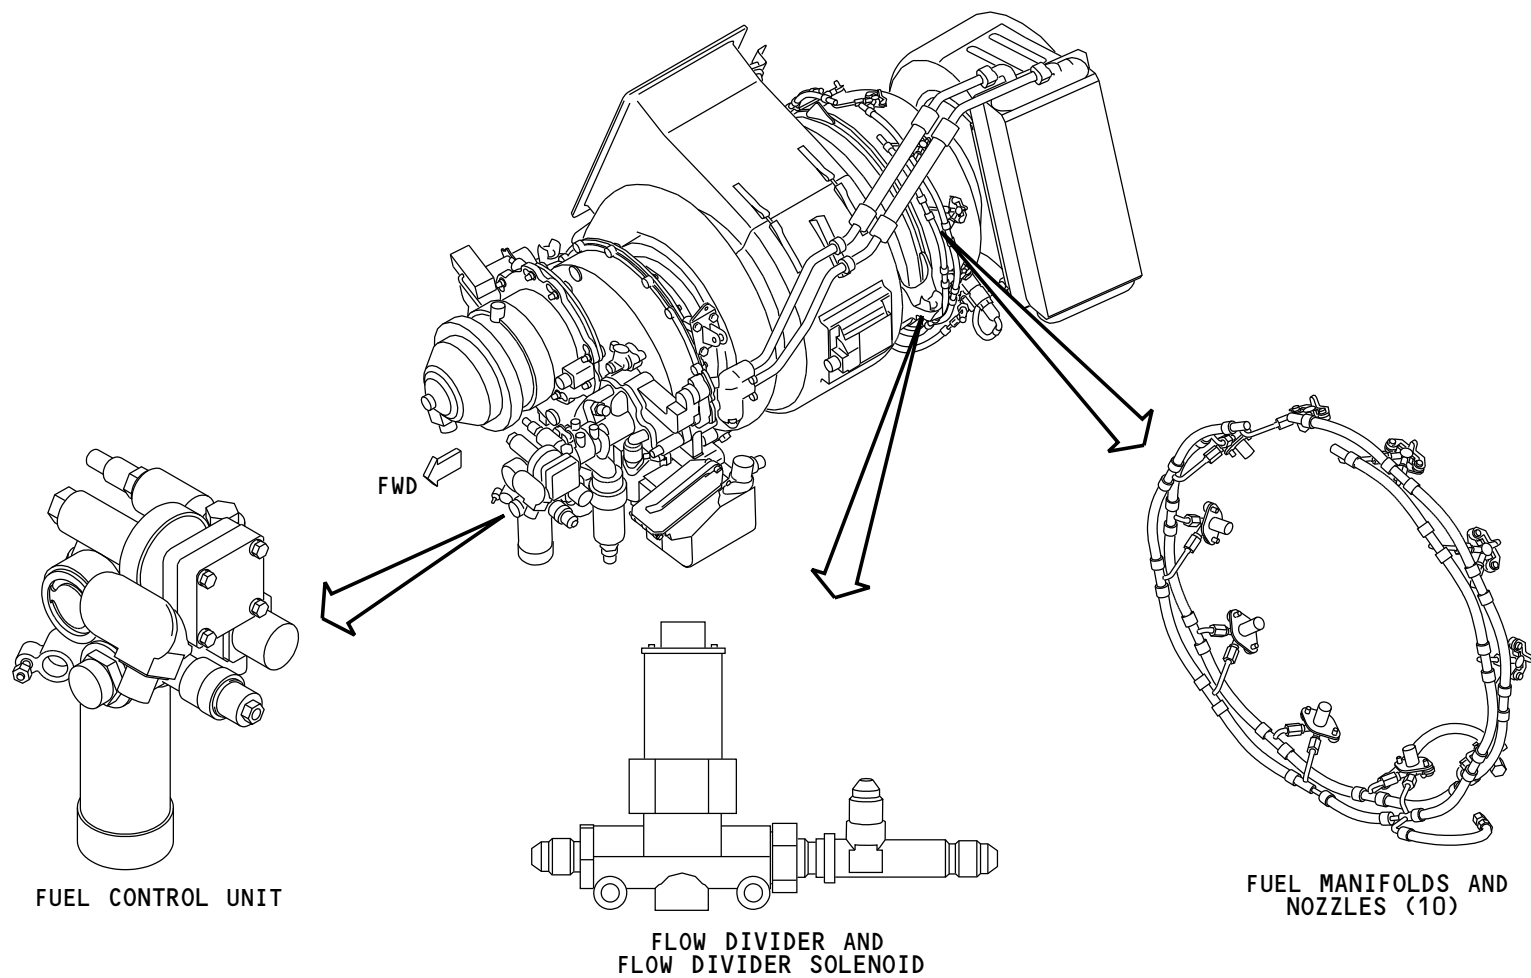

M87527 S0004631463\_V1

**APU FUEL SYSTEM - INTRODUCTION**

**49-30-00**

**AKS ALL** **EFFECTIVITY**

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

**APU FUEL SYSTEM - GENERAL DESCRIPTION****General Description**

The airplane fuel system AC boost pumps or the APU dc boost pump supply fuel for APU operation. The fuel goes through the APU fuel shutoff valve on the left wing aft spar.

If AC boost pumps do not supply fuel, the APU DC boost pump supplies fuel from the left main tank. If the AC and DC boost pumps do not supply fuel, the APU suction feeds from the left main tank.

See the APU fuel fed system for more information. (SECTION 28-25)

The ECU calculates the correct fuel flow for APU start and run. The ECU uses these values to calculate the correct fuel flow:

- APU speed
- APU exhaust gas temperature (EGT)
- Inlet temperature (T2)
- Inlet pressure (P2)
- Fuel temperature.

The ECU sends the fuel flow command signal to the fuel control unit (FCU) on the APU. The FCU sends the correct fuel flow to the flow divider and flow divider solenoid.

The flow divider solenoid gets a signal from the ECU to inhibit fuel flow to the secondary fuel manifold. The flow divider and flow divider solenoid send the metered fuel from the FCU to the primary and secondary fuel manifolds.

The fuel manifolds give primary and secondary fuel to ten dual tipped fuel nozzles. The nozzles give the metered fuel to the APU combustor.

**Component Location**

Most fuel system components are part of the fuel control unit. The fuel control unit attaches to the lube module.

These are the APU fuel system components not in the fuel control unit


- Flow divider
- Flow divider solenoid

- Primary fuel manifold
- Secondary fuel manifold
- Fuel nozzles.

**49-30-00****EFFECTIVITY**  
**AKS ALL**

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

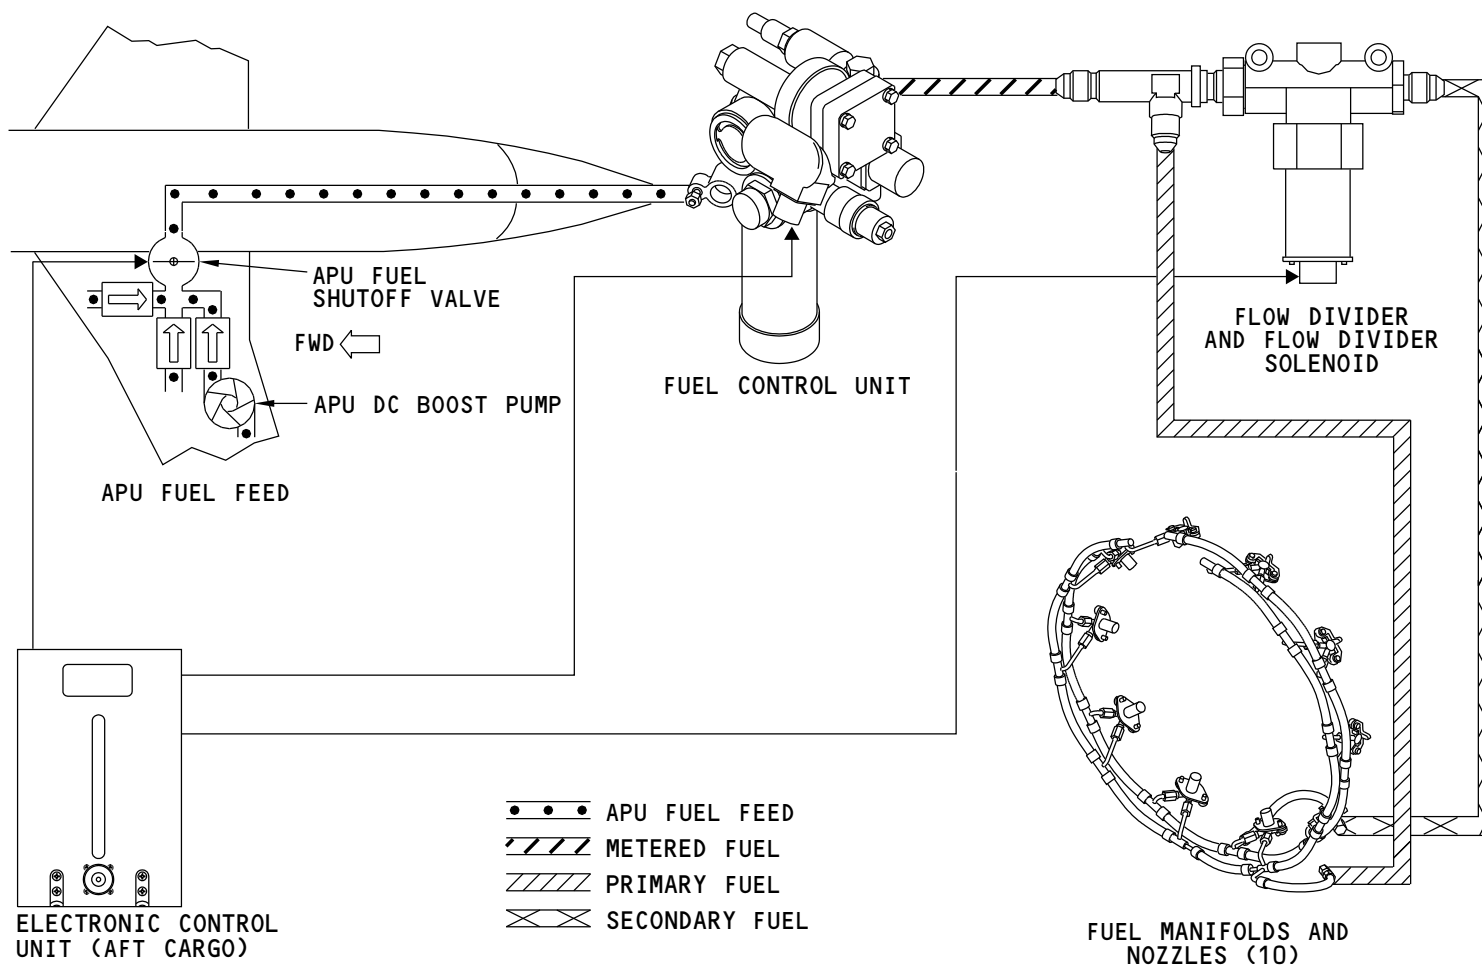

M87529 S0004631466\_V1

### APU FUEL SYSTEM - GENERAL DESCRIPTION

**49-30-00**

49-30-00-001

AKS ALL	EFFECTIVITY
	D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details



## APU FUEL SYSTEM - FUEL CONTROL UNIT

### Purpose

The APU fuel control unit (FCU) supplies the correct metered fuel for these APU operations:


- Start
- Acceleration
- On speed.

### General

The FCU mounts to the front of the lube module by a V band clamp. The lube module drives the FCU.

### Training Information Point

The FCU and the inlet fuel filter are line replaceable units (LRU).

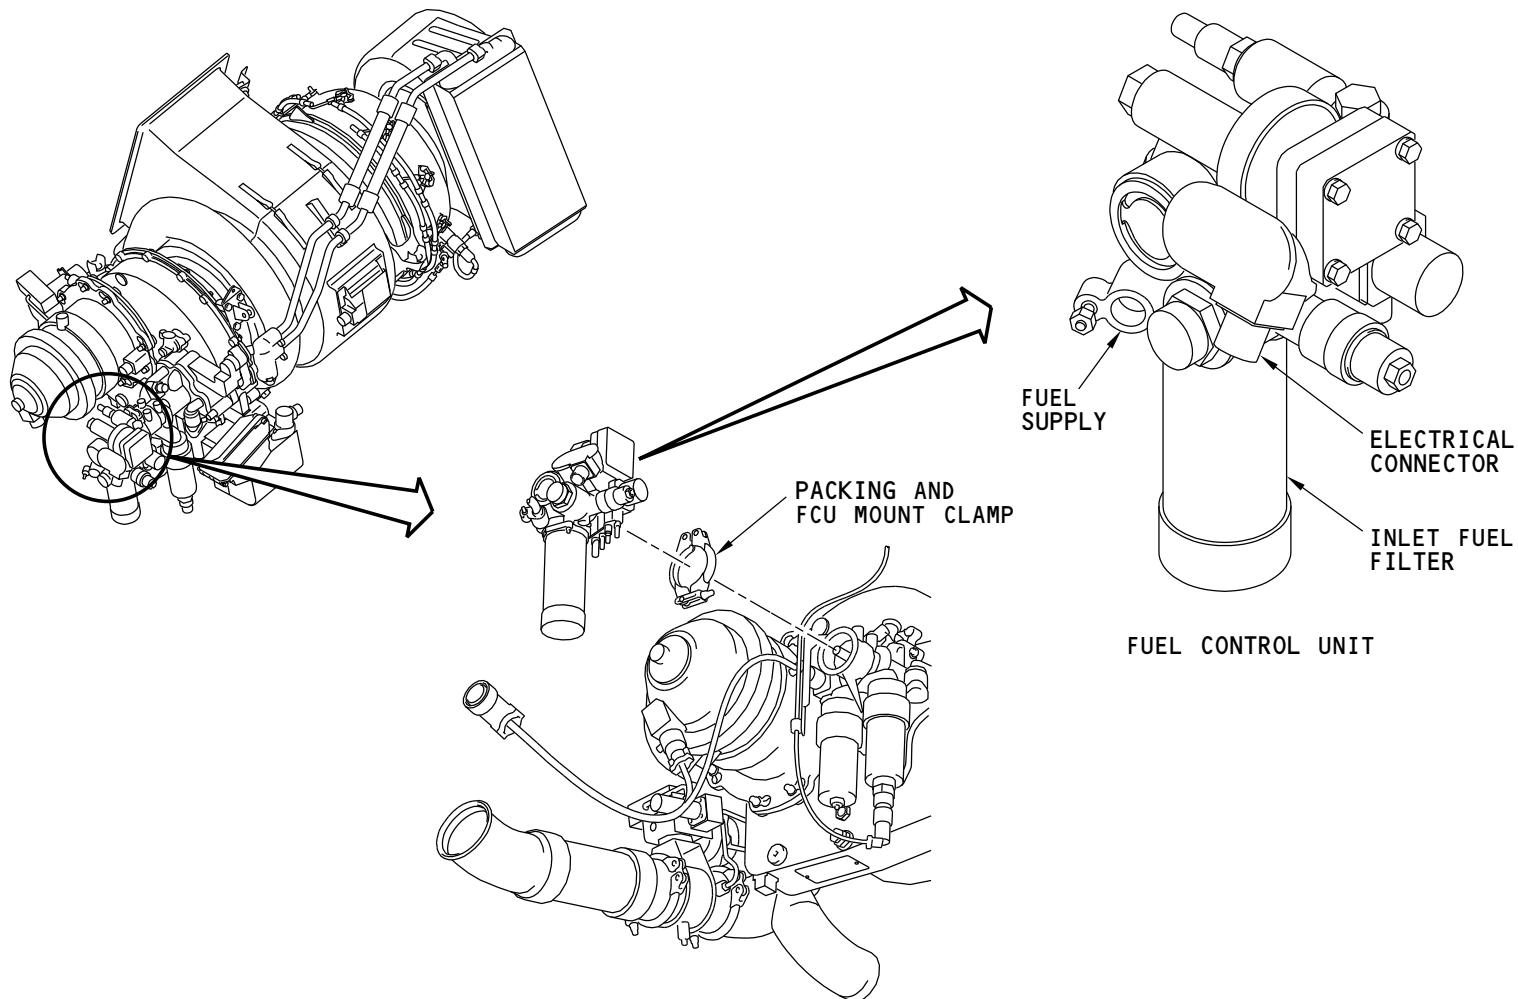

**APU FUEL SYSTEM - FUEL CONTROL UNIT**

M87530 S0004631468\_V1



THIS PAGE IS INTENTIONALLY LEFT BLANK

**49-30-00**

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

**APU FUEL SYSTEM - FUEL CONTROL UNIT - FUNCTIONAL DESCRIPTION****General**

Fuel for the APU fuel control unit (FCU) comes from the airplane fuel system. The APU FCU supplies fuel for combustion and servo fuel to operate the inlet guide vane actuator (IGVA) and the surge control valve (SCV).

The FCU includes these components:

- Inlet filter
- High pressure fuel pump
- Pump relief valve
- High pressure filter
- Differential pressure regulator
- Bypass bleed orifice
- Torque motor metering valve
- Pressurizing valve and flow meter
- Actuator pressure regulator
- Fuel solenoid valve
- Fuel temperature sensor.

**Inlet Filter**

The inlet filter removes contamination before the fuel goes into the high pressure gear pump.

**High Pressure Fuel Pump and Pump Relief Valve**

A shaft from the lube module turns the high pressure fuel pump. The pump gives high pressure fuel for use in the FCU. The pump relief valve keeps fuel pressure below 950 psi.

**High Pressure Filter**

The high pressure filter removes contamination caused by the gear pump.

**Actuator Pressure Regulator**

The actuator pressure regulator keeps actuator fuel pressure at 250 psid. The FCU uses actuator fuel pressure to operate the inlet guide vane actuator and surge control valve.

**Differential Pressure Regulator**

The differential pressure regulator holds a constant differential pressure of 50 psid across the metering valve.

**Bypass Bleed Orifice**

The bypass bleed orifice is installed between the torque motor metering valve and the input shaft of the high pressure fuel pump. Metered valve discharged fuel from the torque motor flows to the delta-P regulator and bypassed fuel goes through the bypass bleed orifice and into the input shaft of the high pressure fuel pump.

**Fuel Metering Valve**

The torque motor metering valve is an electrohydraulic servo valve. It controls the amount of fuel to the combustion chamber.

**Flow Meter Pressurizing Valve And Flow Meter**

The flow meter pressurizing valve keeps a 50 psi decrease in fuel pressure from the fuel metering valve to the fuel shutoff solenoid. A resolver attaches to the valve to measure valve position. The ECU uses this signal to find the fuel flow to the APU combustor.

**Fuel Solenoid Valve**

The fuel solenoid valve controls the fuel flow from the fuel control unit. The fuel solenoid valve is spring loaded closed.

During APU start, the ECU energizes the solenoid at 7 percent speed. This opens the fuel solenoid valve.

During shutdown, the ECU de-energizes the solenoid. The fuel solenoid valve closes. This shutdown sequence is the same for normal or protective shutdown.

**49-30-00**

EFFECTIVITY

AKS ALL

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details






APU FUEL SYSTEM - FUEL CONTROL UNIT - FUNCTIONAL DESCRIPTION

Fuel Temperature Sensor

The fuel temperature sensor is a resistive temperature device (RTD). The fuel temperature sensor gives a fuel temperature signal to the ECU.

AKS ALL	EFFECTIVITY
	D633A101-AKS

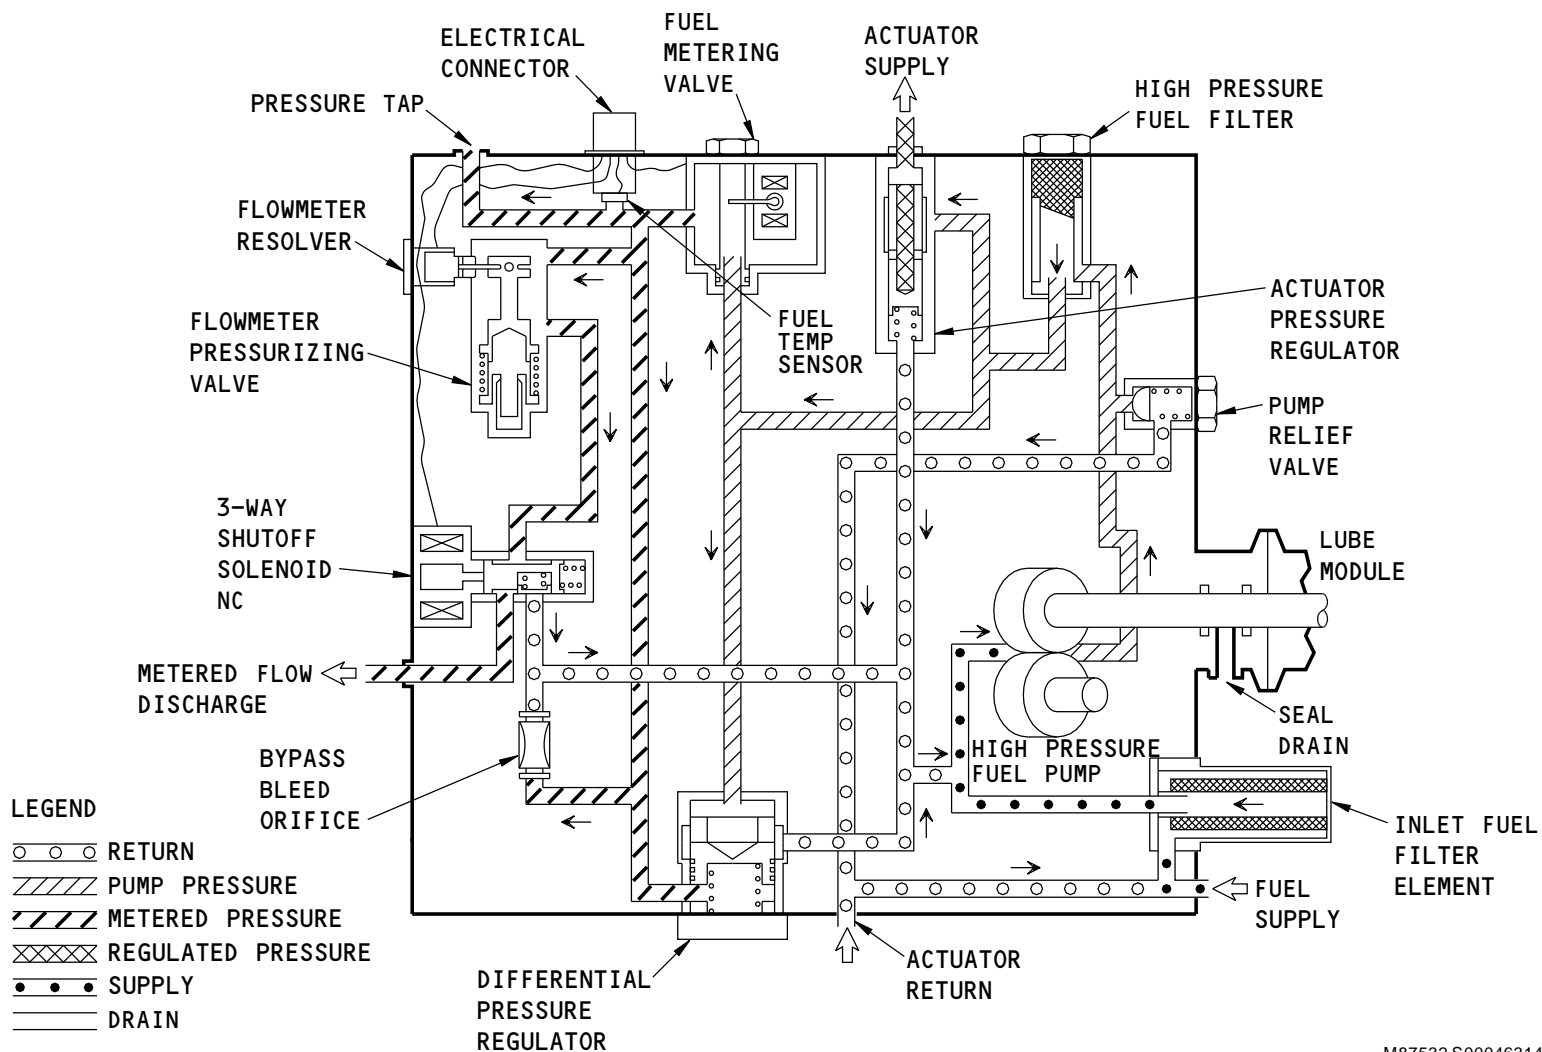

M87532 S0004631470\_V2

APU FUEL SYSTEM - FUEL CONTROL UNIT - FUNCTIONAL DESCRIPTION

49-30-00

49-30-00-003

AKS ALL

EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

**APU FUEL SYSTEM - FUEL FLOW DIVIDER AND FLOW DIVIDER SOLENOID****Purpose**

The fuel flow divider directs fuel to the primary and secondary manifolds.

**Location**

The fuel flow divider is on the lower left side of the APU engine near the combustion chamber.

**Fuel Flow Divider and Flow Divider Solenoid Components**

These are the main fuel flow divider components:

- Ball check valve
- Inlet filter
- Flow divider solenoid.

**Functional Description**

When the fuel solenoid valve opens, fuel flows to the fuel flow divider through the inlet filter in the flow divider.

The fuel flow divider directs fuel to the primary fuel manifold for initial start and acceleration.

The flow divider solenoid makes sure fuel does not go to the secondary manifold at the incorrect time. When the flow divider first sends fuel to the secondary manifold, the fuel pressure in the primary manifold momentarily decreases while the secondary manifold fills with fuel. If the primary fuel pressure decreases at the incorrect time, the APU flames out or goes under speed.

A spring holds the flow divider solenoid in the open position. The flow divider solenoid closes when the ECU energizes the solenoid.

The ECU energizes the flow divider solenoid closed from 7 percent to 30 percent speed. This prevents APU flame out and shutdown during a start.

At 25-40 percent speed (approximately 120 psi), the check valve inside the flow divider T fitting opens and supplies fuel to the secondary manifold unless the fuel flow divider valve is in the closed position.

The ECU again energizes the flow divider solenoid at higher altitudes. This prevents an APU under speed and shutdown with the addition of electrical load above 25,000 feet.

The ECU uses these values to find when the flow divider solenoid should be energized:

- Inlet pressure (P2)
- Inlet temperature (T2)
- APU speed.


**49-30-00**

EFFECTIVITY

AKS ALL

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

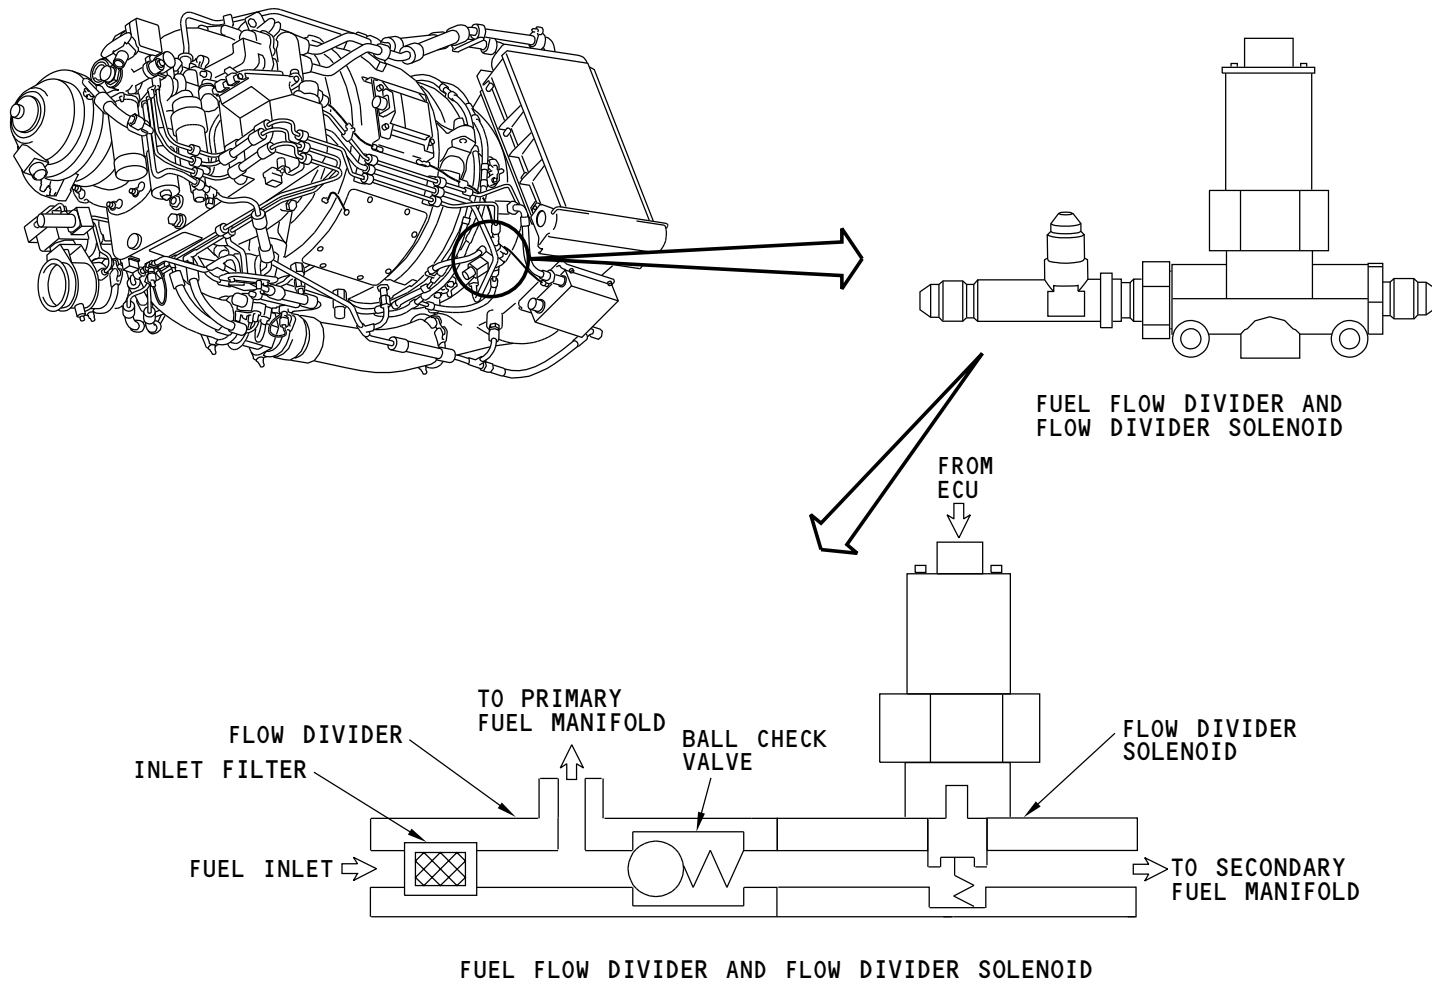

M87533 S0004631472\_V1

APU FUEL SYSTEM - FUEL FLOW DIVIDER AND FLOW DIVIDER SOLENOID

49-30-00

49-30-00-004

AKS ALL

EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

**APU FUEL SYSTEM - MANIFOLDS AND NOZZLES****Fuel Manifolds**

A primary fuel manifold and a secondary fuel manifold supply fuel from the fuel control unit to the fuel nozzles.

The manifolds are around the APU combustion chamber.

Both manifolds supply fuel when the APU is on speed below 25,000 feet. Only the primary manifold supplies fuel up to 30 percent speed during APU start and above 25,000 feet for all APU operation.

**Fuel Nozzles**

Ten fuel nozzles atomize and inject fuel into the combustion chamber. The fuel nozzles are installed around the combustion section.

The 10 fuel nozzles have these components:

- Primary and secondary screen
- locating pin
- Air shroud
- Nozzle tip.

**Training Information Point**

**NOTE:** Do not remove all fuel nozzles at the same time. The fuel nozzles put the combustor in position. If you remove all nozzles at the same time the combustor can move out of position. If the combustor moves out of position, you can not install the replacement fuel nozzles.


You can remove and install both the fuel manifolds and fuel nozzles without removal of the APU.

The fuel nozzles have a locator pin to make sure installation is correct.

**49-30-00****AKS ALL** **EFFECTIVITY**

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

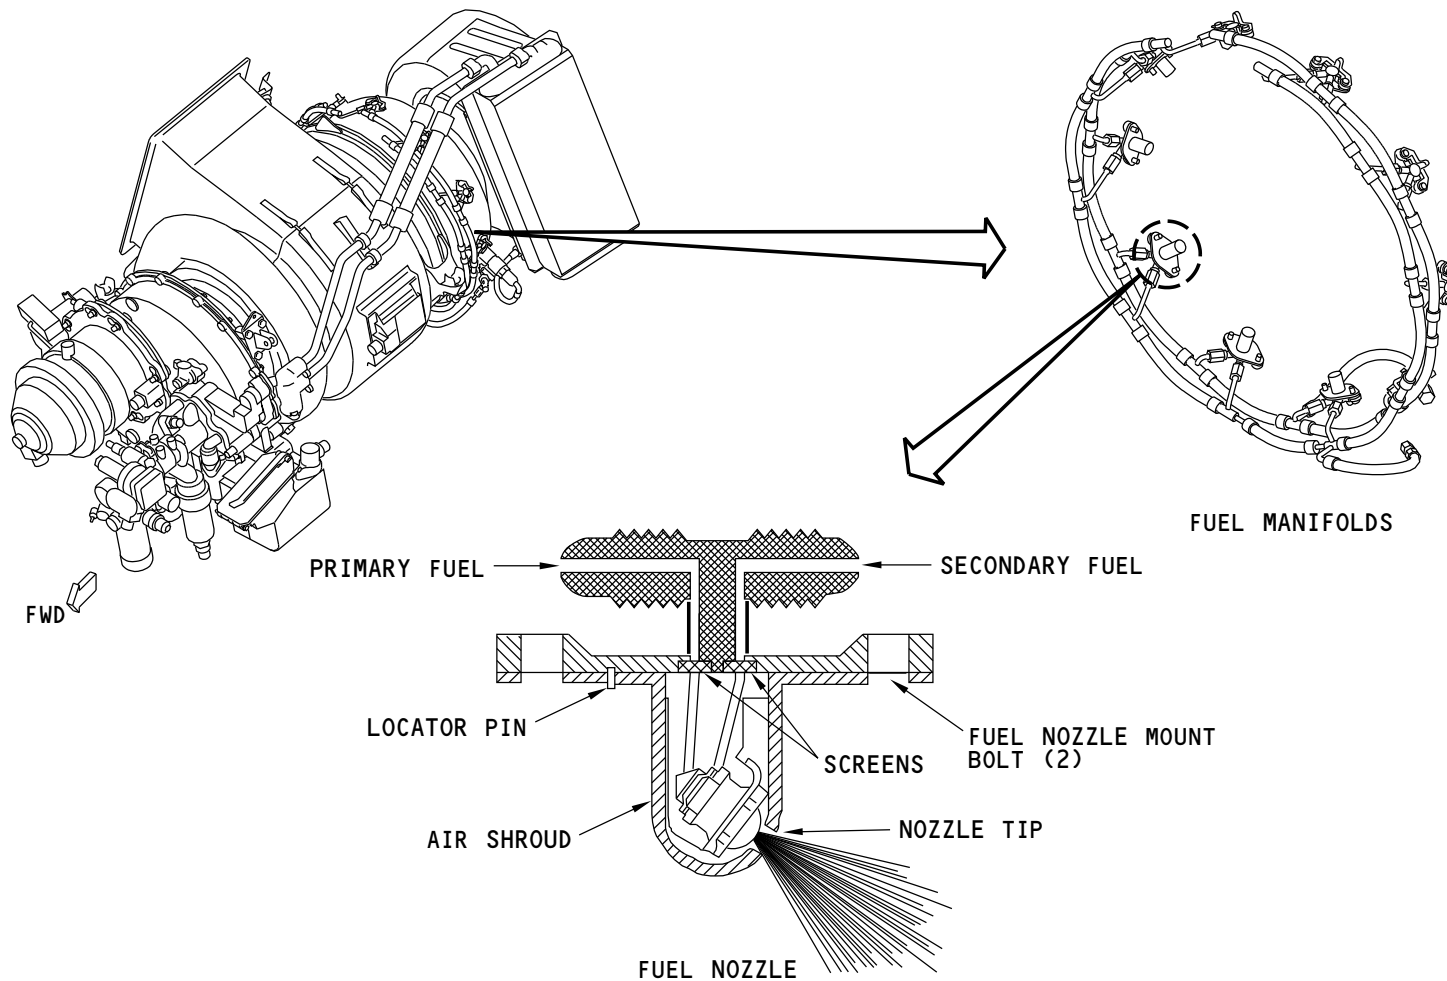

APU FUEL SYSTEM - MANIFOLDS AND NOZZLES

M87491 S0004631474\_V1

49-30-00-005

AKS ALL EFFECTIVITY

**49-30-00**

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

**APU FUEL SYSTEM - APU COMBUSTOR DRAIN ORIFICE****Purpose**

The APU combustor drain provides a drain for fuel that may accumulate in the combustor after an unsuccessful start. This prevents a possible hot start on the next start.


**Location**

The combustor drain is at the lowest point of the combustor case.

**Functional Description**

The combustor drain is a 0.060 inch diameter orifice that drains fluid. During APU operation, the orifice lets a small quantity of air go out from the combustor.

EFFECTIVITY	
AKS ALL	

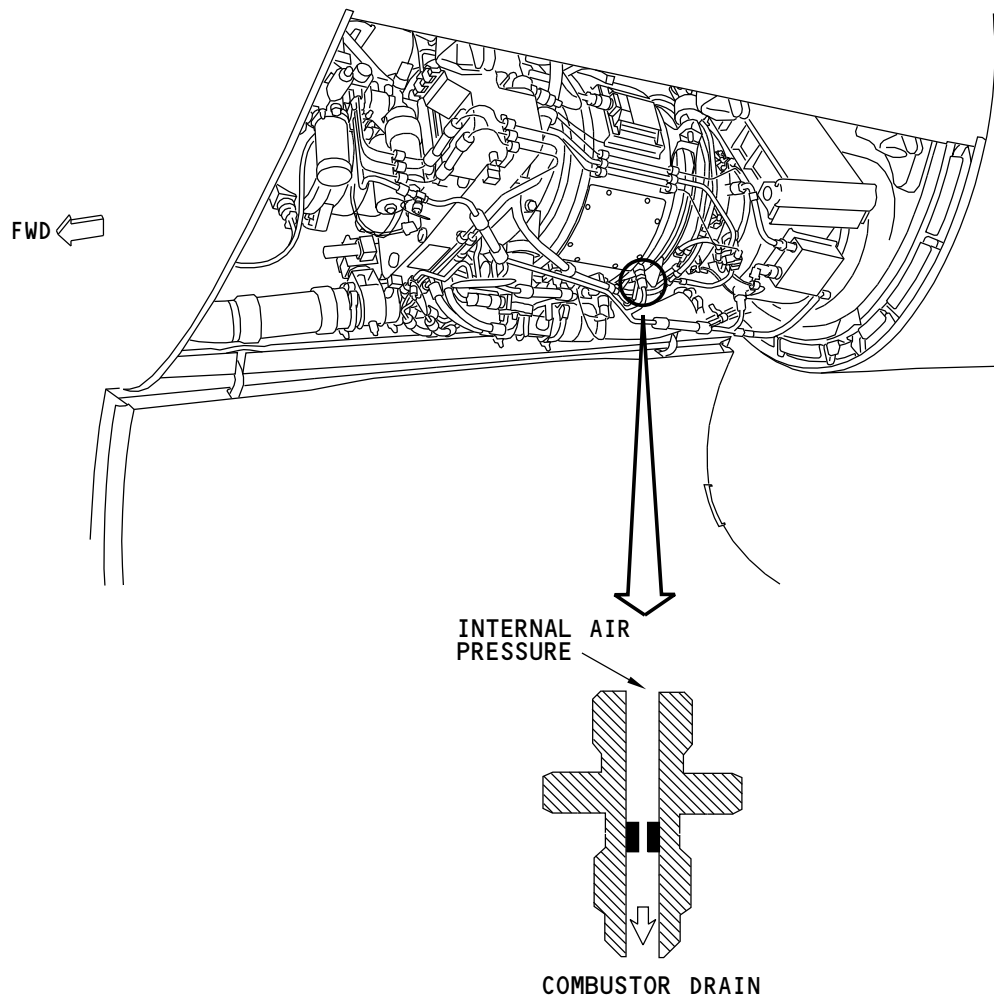

**APU FUEL SYSTEM - APU COMBUSTOR DRAIN ORIFICE**

M87534 S0004631476\_V1

49-30-00-006

AKS ALL

EFFECTIVITY

**49-30-00**

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details





THIS PAGE IS INTENTIONALLY LEFT BLANK

**49-30-00**

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

## APU FUEL SYSTEM - FUNCTIONAL DESCRIPTION

### General

The APU fuel system supplies fuel for combustion. The fuel control unit also provides regulated fuel pressure for the inlet guide vane actuator(IGVA) and the surge control valve (SCV) operation. The APU electronic control unit (ECU) controls the APU fuel system.

### Fuel Supply

The fuel system AC boost pumps or the DC APU boost pump supplies fuel through the fuel shutoff valve to the APU. The shutoff valve opens when the APU switch is put in the ON or the START position.

### Fuel Control Unit

The fuel control unit (FCU) has these functions:

- Pressurizes the fuel
- Cleans the fuel
- Controls the fuel pressure
- Controls fuel flow.

### ECU Control

The ECU logic controls the following fuel feed components:

- Fuel shutoff valve
- Fuel solenoid valve
- Fuel metering valve
- Flow divider solenoid.

The fuel shutoff valve opens when the APU switch is in the ON or START position. During the APU start, the ECU sends a signal to the fuel solenoid valve to open when the APU RPM is more than 7 percent. The ECU controls the fuel metering valve when the APU speed is more than 7 percent. The ECU also controls the flow divider solenoid valve on the fuel flow divider.

The ECU uses start-up control logic to control the fuel metering valve when the speed is less than 95 percent. This logic schedules fuel flow to start the APU quickly and to keep the EGT low. Start-up fuel flow logic uses these inputs:

- APU speed (N)
- Inlet pressure (P2)
- Inlet temperature (T2)
- Exhaust gas temperature (EGT).

The ECU uses the same inputs for the on-speed logic above 95 percent speed.

The flow meter in the FCU sends a fuel-flow feedback signal to the ECU. The ECU uses this signal to make sure the APU gets the necessary fuel.

### Fuel Flow Divider

The fuel flow divider gives fuel to the primary manifold during start of the APU. At 25-40 percent speed or approximately 120 psi, the fuel flow divider gives fuel to both the primary and secondary fuel manifolds for APU operation.

The fuel flow divider has a normally open flow divider solenoid. The ECU signals the flow divider solenoid closed above approximately 25,000 feet (7,620 meters) altitude to make sure the internal check valve for secondary fuel does not open and cause the APU speed to decrease.

The flow divider solenoid also improves start capability in cold weather.

The ECU uses P2, T2, and speed signals to control the fuel flow divider solenoid valve.

### Actuator Pressure Regulator


The FCU also supplies pressurized fuel to operate the IGVA and the SCV. The pressure is regulated at 225 to 275 psi. Return fuel from these valves goes back to the pump inlet.



## APU FUEL SYSTEM - FUNCTIONAL DESCRIPTION

DC APU Boost Pump

The DC boost pump operates when the APU switch is in the ON or START position and the fuel pressure from the AC pumps that could provide fuel to the APU are low. When the AC boost pump pressure goes high, the dc boost pump goes off.

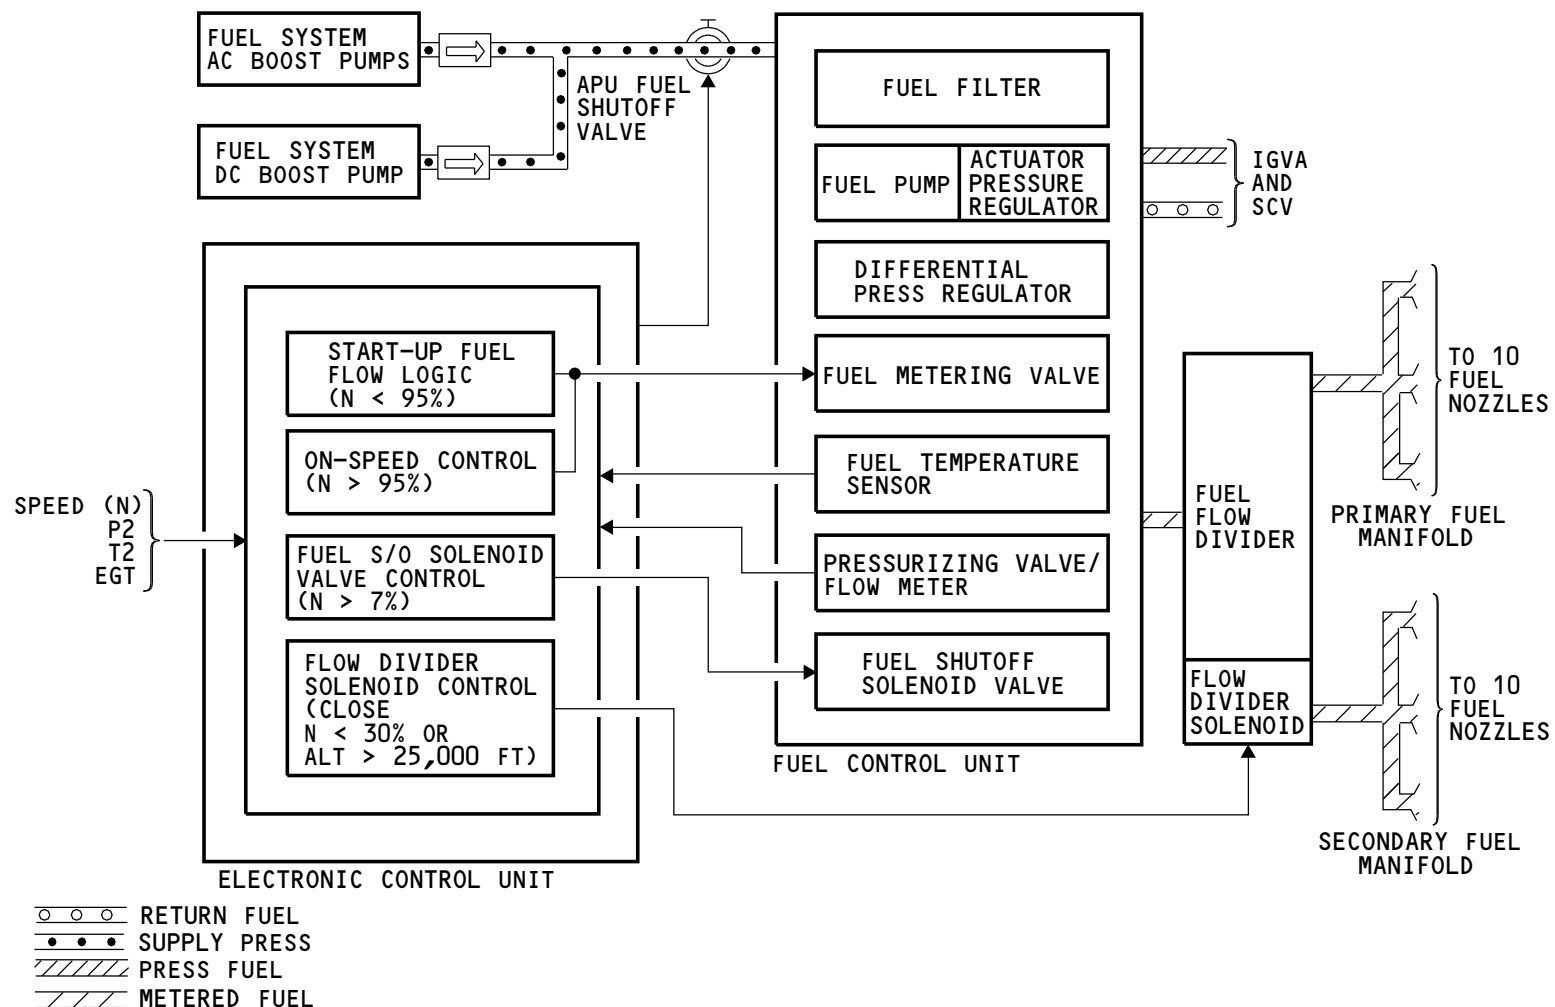

M87536 S0004631479\_V1

### APU FUEL SYSTEM - FUNCTIONAL DESCRIPTION

49-30-00

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details





THIS PAGE IS INTENTIONALLY LEFT BLANK

**49-40-00**

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

**APU IGNITION AND START SYSTEM - INTRODUCTION****Purpose**

The APU ignition and start system gives the initial rotation of the engine and ignition.

**General**

The APU ignition and start system consists of these components:

- Ignition unit
- Igniter plug lead
- Igniter plug
- Start power unit (SPU)
- Start converter unit (SCU)
- Starter-generator.

The APU electronic control unit (ECU) controls the APU start sequence.


See the APU engine controls section for more information on the ECU.  
(SECTION 49-60)

**Ignition System**

The ignition system supplies sparks to start APU combustion during the APU start. The ECU energizes the ignition unit at 0 percent speed and de-energizes the ignition unit at 60 percent speed.

**Start System**

The starter-generator, SPU, and SCU together supply initial rotation of the APU. The start power sources are 28v DC from the battery or 115v AC transfer bus number 1.

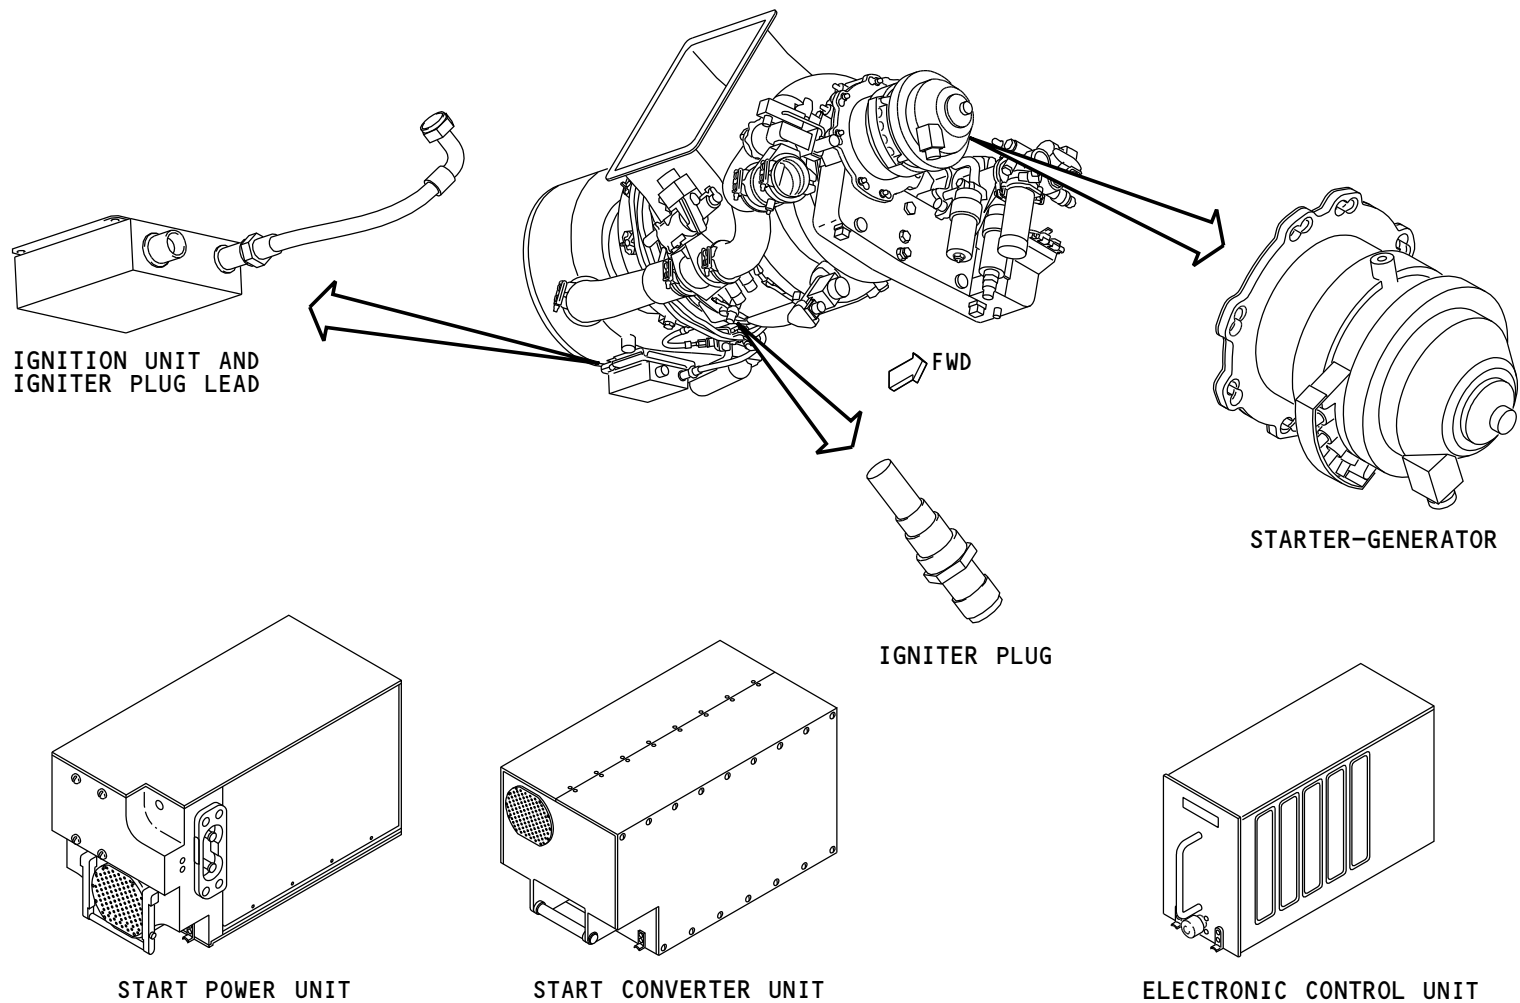

M87537 S0004631484\_V1

**APU IGNITION AND START SYSTEM - INTRODUCTION**

**49-40-00**

49-40-00-001

AKS ALL

EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details



**APU IGNITION AND START SYSTEM - SPU AND SCU GENERAL DESCRIPTION****Start Power Unit**

The start power unit changes 115v AC or 28v DC electrical power to 270v DC power. Transfer bus 1 or the battery supplies power to the start power unit (SPU).

The SPU gives fault data to the ECU through the SCU for display on the CDU.

The (SPU) is in the EE compartment on the E2-2 shelf.

**Start Converter Unit**

The start converter unit (SCU) changes the 270v DC power to AC and sends it to the starter-generator.

The SCU gives fault data to the ECU for display on the CDU.

The SCU is in the EE compartment on the E2-2 shelf.

See the electrical chapter for more information about the APU starter-generator generate function. (CHAPTER 24)

**Start Control**

The electronic control unit sends a signal to the start converter unit when the air inlet door is fully open. The start converter unit tells the start power unit to supply the 270v DC. The start converter unit changes the 270v DC to AC power for the operation of the starter-generator. At 70 percent speed, the electronic control unit removes the start signal from the start converter unit. With the start signal off, the SCU and the SPU removes power from the starter-generator.

**Training Information Point**


The maximum duty cycle for the SPU and SCU is three starts, one after the other, followed by a 15-minute cool down period. If you do too many starts one after the other, the SCU and SPU will get too hot and stop the APU start. More starts are possible after the SCU and SPU cool.

You get access to the SCU terminal block for the AC power feeder wires from the back of the SCU. Remove the panel behind the E2 rack from the forward cargo compartment to get access to the back of the SCU.

**49-40-00****EFFECTIVITY**  
**AKS ALL**

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

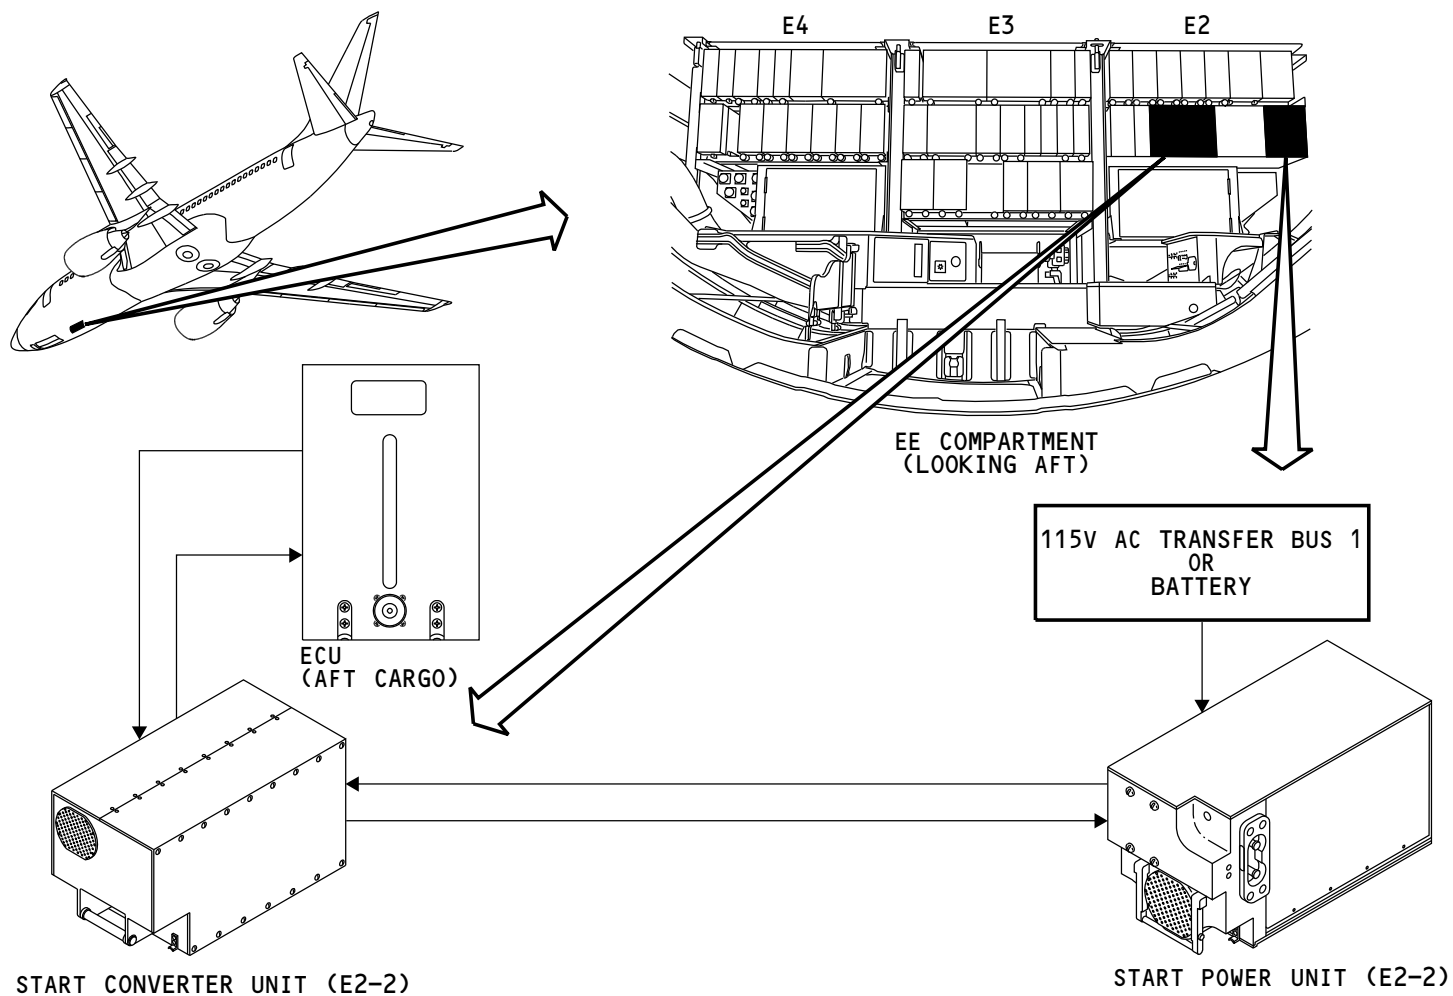

M87539 S0004631487\_V1

**APU IGNITION AND START SYSTEM - SPU AND SCU GENERAL DESCRIPTION**

**49-40-00**

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

**APU IGNITION AND START SYSTEM - APU STARTER-GENERATOR****Purpose**

The starter-generator supplies the initial rotation of the APU for the start cycle.

The starter-generator is also a source of electrical power for the airplane systems. It supplies 90 kVA of AC electrical power on ground and in flight.

See the electrical chapter for more information about the generate function of the starter-generator. (CHAPTER 24)

**Location**

The starter-generator is on the upper right side of the APU gearbox. Eight bolts hold the starter-generator to the gearbox.

**General Description**

The APU starter-generator has a terminal block and a electrical connector.

The starter-generator has three rotors mounted on the same shaft. For each rotor there is a stator winding installed in the starter-generator case. These are the rotor-stator pairs:

- Permanent magnet generator (PMG)
- Exciter
- Main generator.

The starter-generator also has 6 rotating diodes attached to the shaft.

A resolver mounted on the starter-generator shaft sends rotor position to the SCU. The SCU uses the rotor position signal to synchronize the AC power to the rotor position.

The APU oil system cools the starter-generator.

The weight of the starter-generator is 54.5 pounds (24.7kg).

**Training Information Point**

A ground support lift fitting on the top of the APU compartment and the starter-generator helps remove and replace the starter-generator.


**49-40-00**

EFFECTIVITY

AKS ALL

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

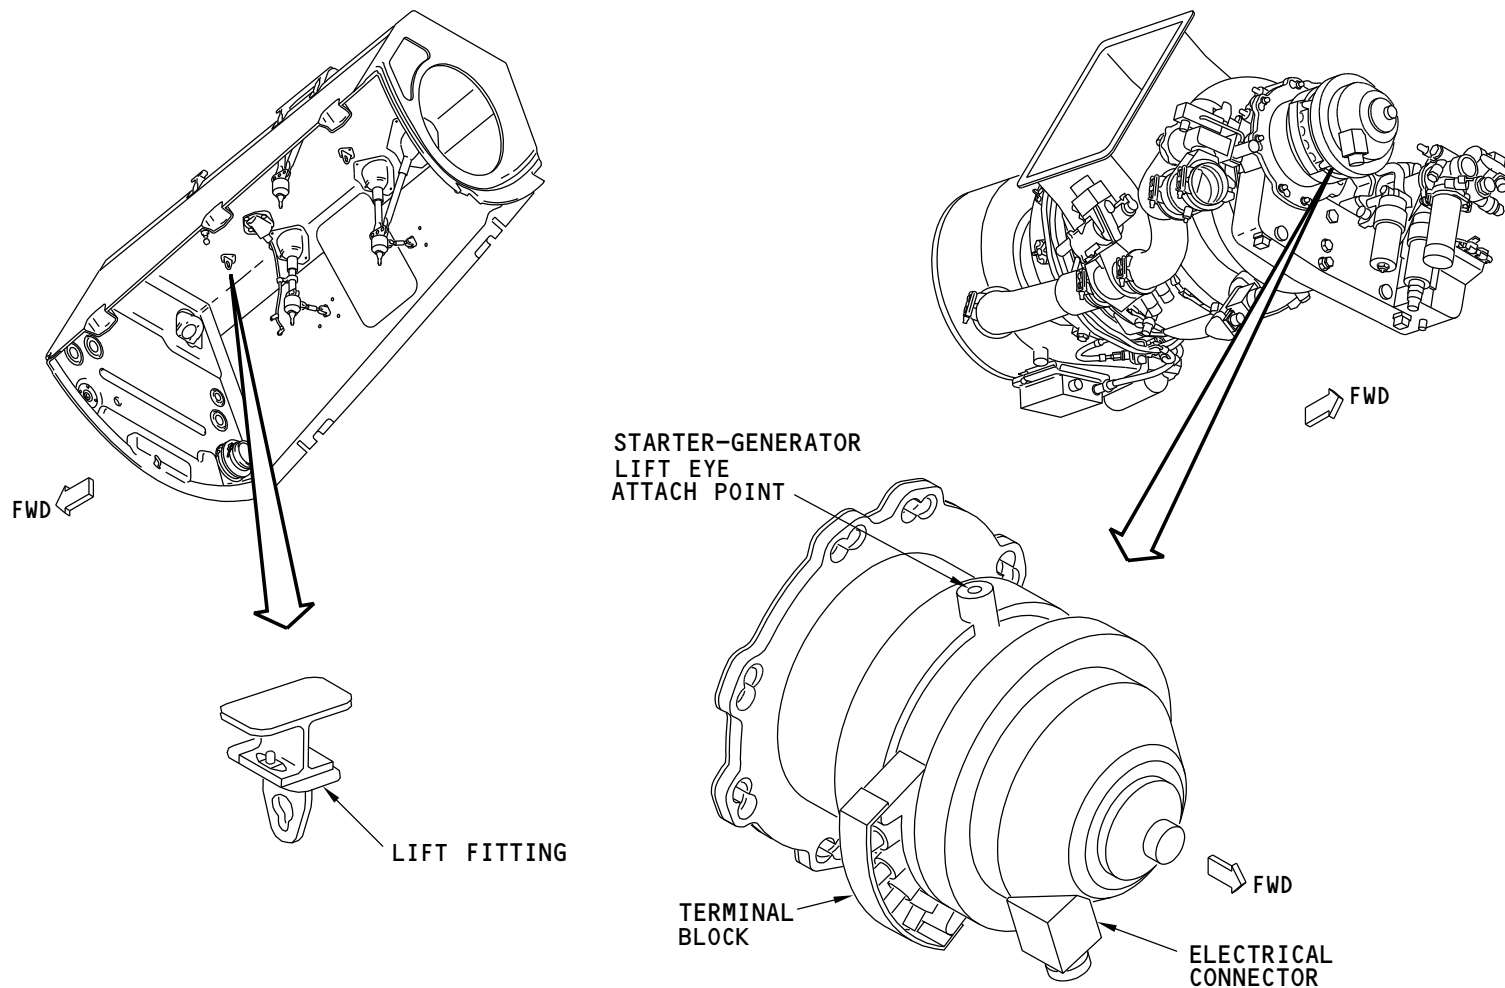

M87540 S0004631489\_V1

APU IGNITION AND START SYSTEM - APU STARTER-GENERATOR

49-40-00

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details



## APU IGNITION AND START SYSTEM - IGNITION SYSTEM - GENERAL DESCRIPTION

**General**

The ignition system starts the combustion of the fuel-air mixture during engine start. The APU electronic control unit controls the ignition system.

The ignition system components are on the bottom of the engine.

**Ignition Unit**

The ignition unit changes 28v DC power to a high voltage pulsed current that goes to the igniter plug. The ignition unit has one channel for one igniter plug lead and igniter plug. The ignition unit supplies one spark per second to the igniter plug.

**WARNING:** MAKE SURE THAT THE IGNITION SYSTEM IS OFF FOR FIVE MINUTES BEFORE YOU TOUCH THE COMPONENT. IGNITION VOLTAGE IS HIGH WHICH MAKES IT DANGEROUS. IGNITION VOLTAGE CAN CAUSE INJURIES TO PERSONNEL

**Igniter Plug Lead**

The igniter plug lead connects the ignition unit to the igniter plug. The igniter plug lead insulation prevents radio interference.

**Igniter Plug**


There is one igniter plug. It supplies the high energy spark for fuel-air ignition.

**Functional Description**

The ECU energizes the ignition system at 0 percent speed during APU start.

The ECU de-energizes the ignition system at 60 percent speed.

The ECU energizes the ignition system if the APU engine speed goes below 95 percent speed during APU operation (speed droop).

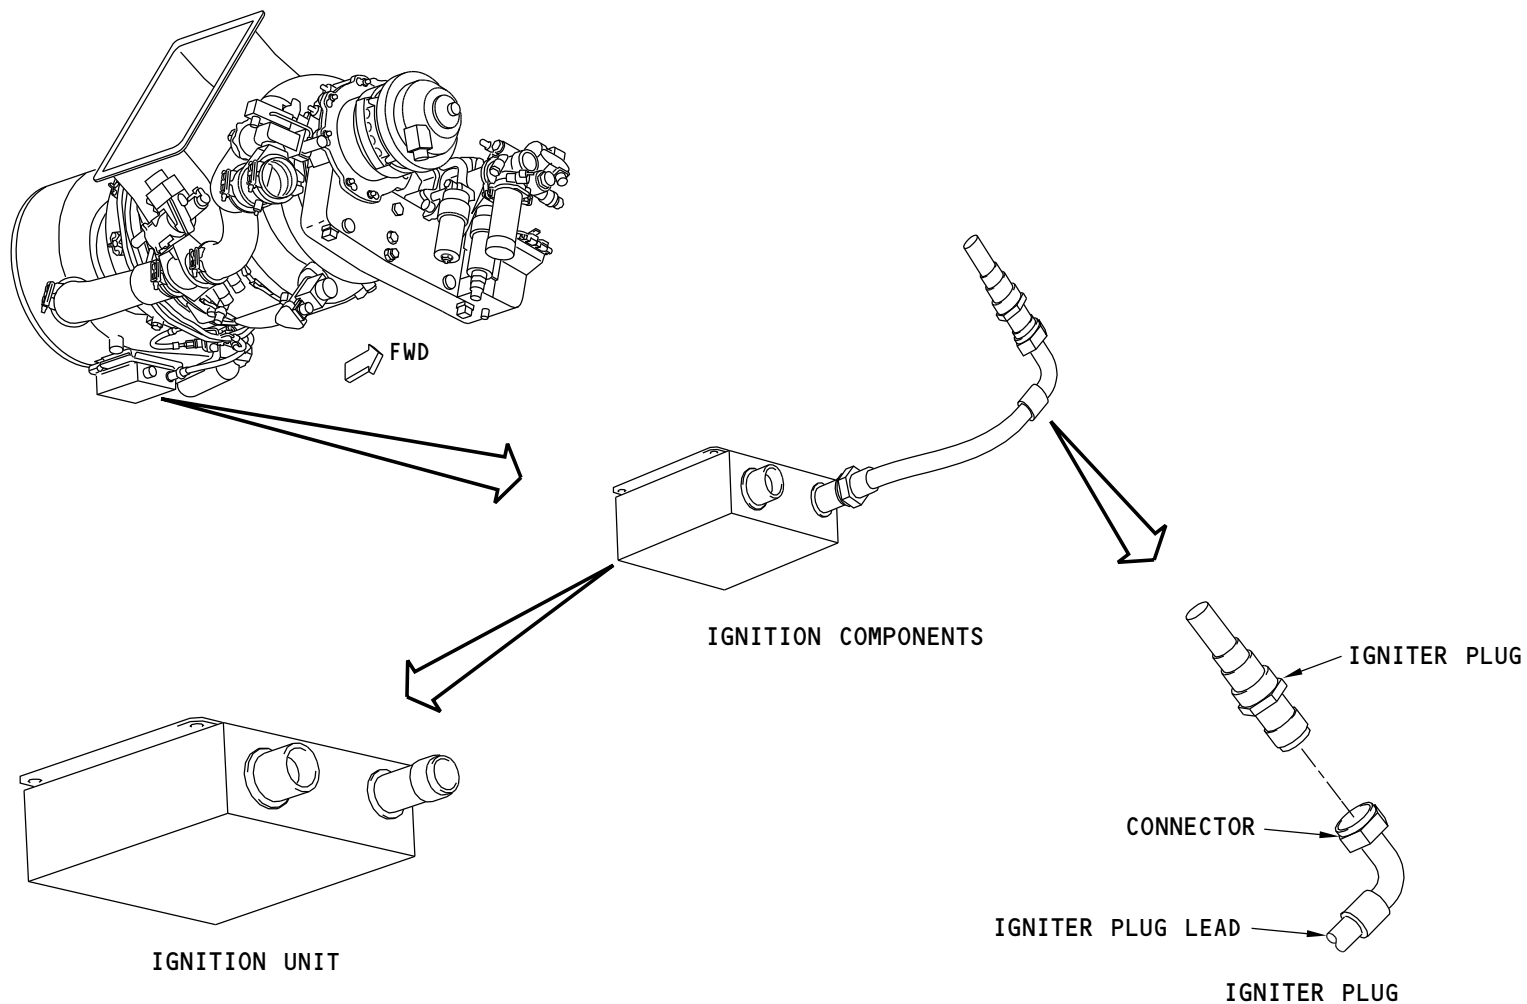

M87541 S0004631491\_V1

### APU IGNITION AND START SYSTEM - IGNITION SYSTEM - GENERAL DESCRIPTION

49-40-00-004

AKS ALL

EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

**49-40-00**

## APU IGNITION AND START SYSTEM - FUNCTIONAL DESCRIPTION

**General**

To start the APU, put the APU switch to the START position and release the switch to the ON position. This signals the ECU to begin the start cycle.

**Electrical Power**

These are the electrical power sources for the ignition and start system function:

- 24/28v DC battery
- 24/28v DC switched hot battery bus
- 115v AC standby bus
- 115v AC transfer bus 1.

**Ignition/Starting Function Sequence**

This is the APU start sequence:


- The start sequence starts when the APU switch is put to the START position and released to the ON position.
- The ECU turns on the oil pressure light on the P5 panel when the ECU receives the start signal. The low oil pressure light goes out at 30-40 psi oil pressure.
- The ECU opens the APU fuel shutoff valve and air inlet door. The inlet door switch sends a door open signal to the ECU when the air inlet door is open.
- At 0 percent speed and before the start system is energized, the ECU energizes the ignition unit.
- If the air inlet door is open and the APU speed is less than 7 percent, the ECU sends a start signal to the SCU. If the APU speed is more than 7 percent, the ECU waits until the speed is less than 7 percent.
- If 115v AC is available on transfer bus 1, the SCU sends a start signal to the AC to DC converter in the SPU. The AC to DC converter gives 270v DC power to the SCU.

- If 115v AC is not available on transfer bus 1, the SCU sends a start signal to the DC to DC converter in the SPU. The DC to DC converter gives 270v DC to the SCU. The SCU also has a control function to prevent the DC to DC converter from depleting the battery below limits (18v DC on ground, 20v DC in air) during a DC start attempt. The proximity switch electronics unit (PSEU) provides the air/ground input.
- The DC to AC converter in the SCU changes the 270v DC power from the SPU into three-phase start power. This power goes to the starter-generator. The starter-generator turns the APU turbine shaft. The SCU receives starter-generator rotor position from the starter-generator resolver. The SCU uses this signal to synchronize the three-phase start power to the starter-generator rotor position.
- At 7 percent speed, the ECU energizes the fuel solenoid which supplies fuel for combustion.
- At approximately 30 percent speed, oil pressure goes above 30-40 psi. The oil pressure switch removes the low oil pressure signal. The ECU turns off the low oil pressure light.
- At 60 percent speed, the ECU de-energizes the ignition unit.
- At 70 percent speed, the ECU removes the start signal from the SCU. The SCU removes the start signal from the SPU AC to DC and DC to DC converters. This de-energizes the starter-generator.
- At 95 percent speed, plus two seconds, the ECU gives the ready to load (RTL) signal to other airplane systems. This signals the airplane systems that the APU is ready to accept pneumatic and electrical loads.

**49-40-00**EFFECTIVITY  
AKS ALL

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

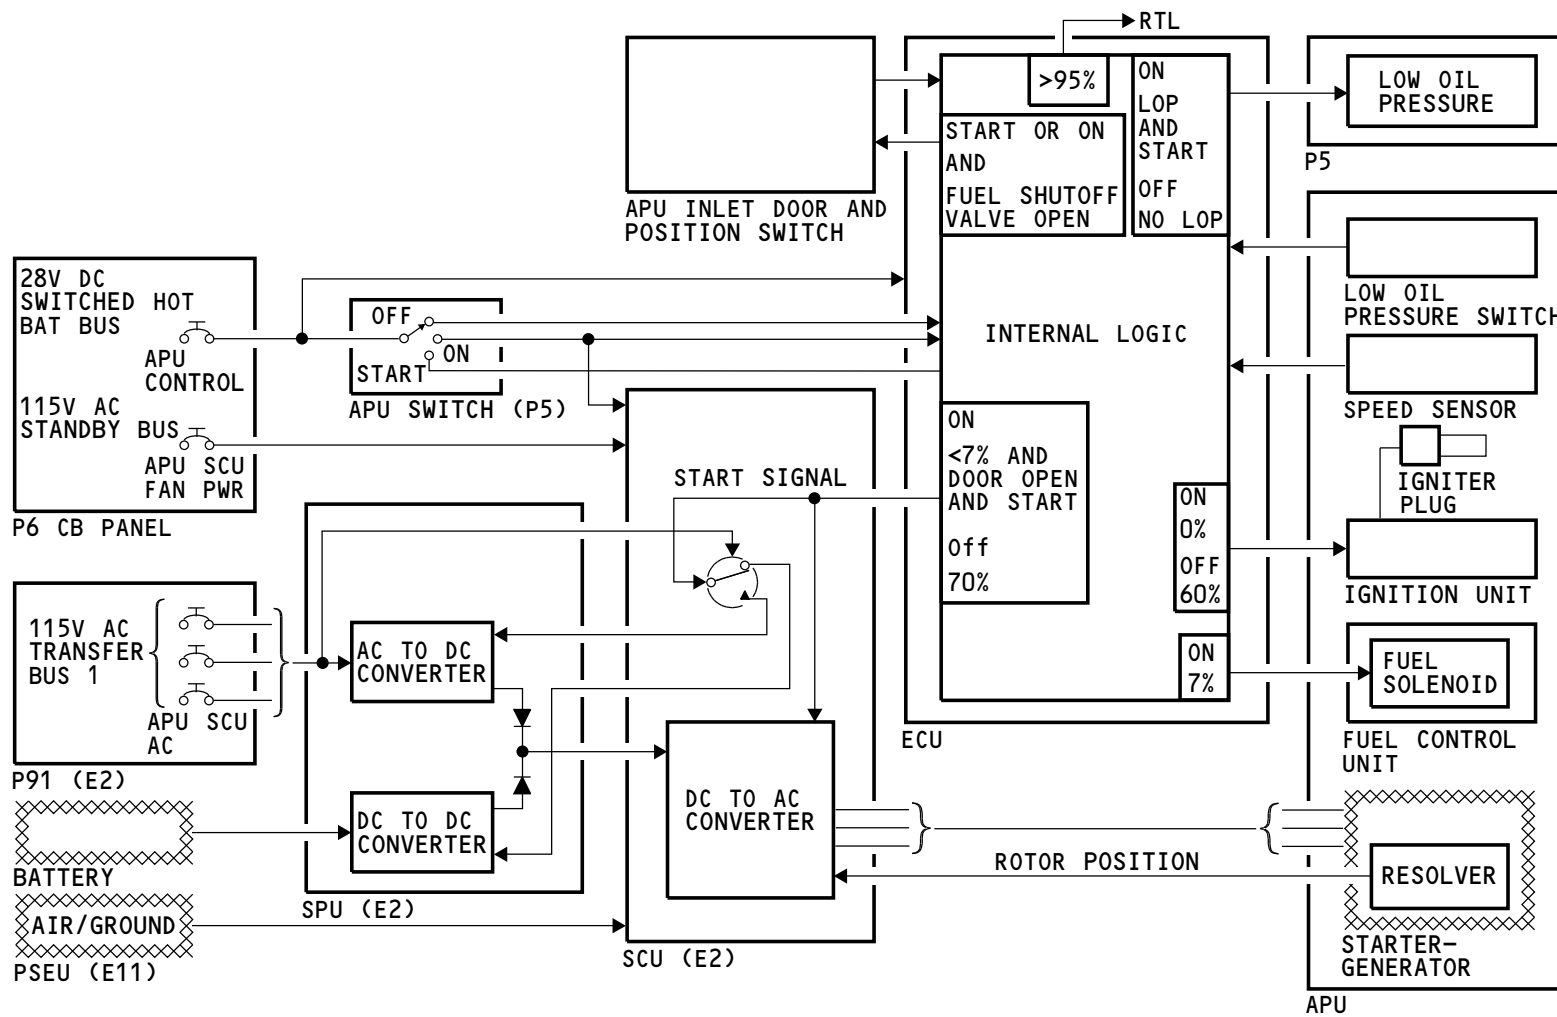

M87542 S0004631493\_V1

### APU IGNITION AND START SYSTEM - FUNCTIONAL DESCRIPTION

49-40-00

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details







THIS PAGE IS INTENTIONALLY LEFT BLANK

**49-50-00**

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details



## APU BLEED AIR SYSTEM - INTRODUCTION

### Purpose

The APU bleed air system supplies pressurized air for these airplane pneumatic operations:

- Main engine start
- Air conditioning
- Pressurization.

- Pressure sensors.

### Components

These are the APU bleed air system components:

- Load compressor
- Inlet guide vanes (IGV)
- Inlet guide vane actuator (IGVA)
- Bleed air valve (BAV)
- Pressure sensors (PT, DP, P2)
- Surge control valve (SCV).

All bleed air system components, except the load compressor and inlet guide vanes, are line replaceable.

### Controls

The ECU sends signals to the IGV actuator to control the IGV position. With the APU bleed switch in the ON position and APU speed above 95 percent, the ECU sends a signal to open the BAV. The ECU sends signals to the SCV to make sure sufficient air flows through the load compressor to prevent a surge.

### Training Information Point

ECU BITE checks these bleed air system components:


- BAV
- IGVA
- SCV

**49-50-00**

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

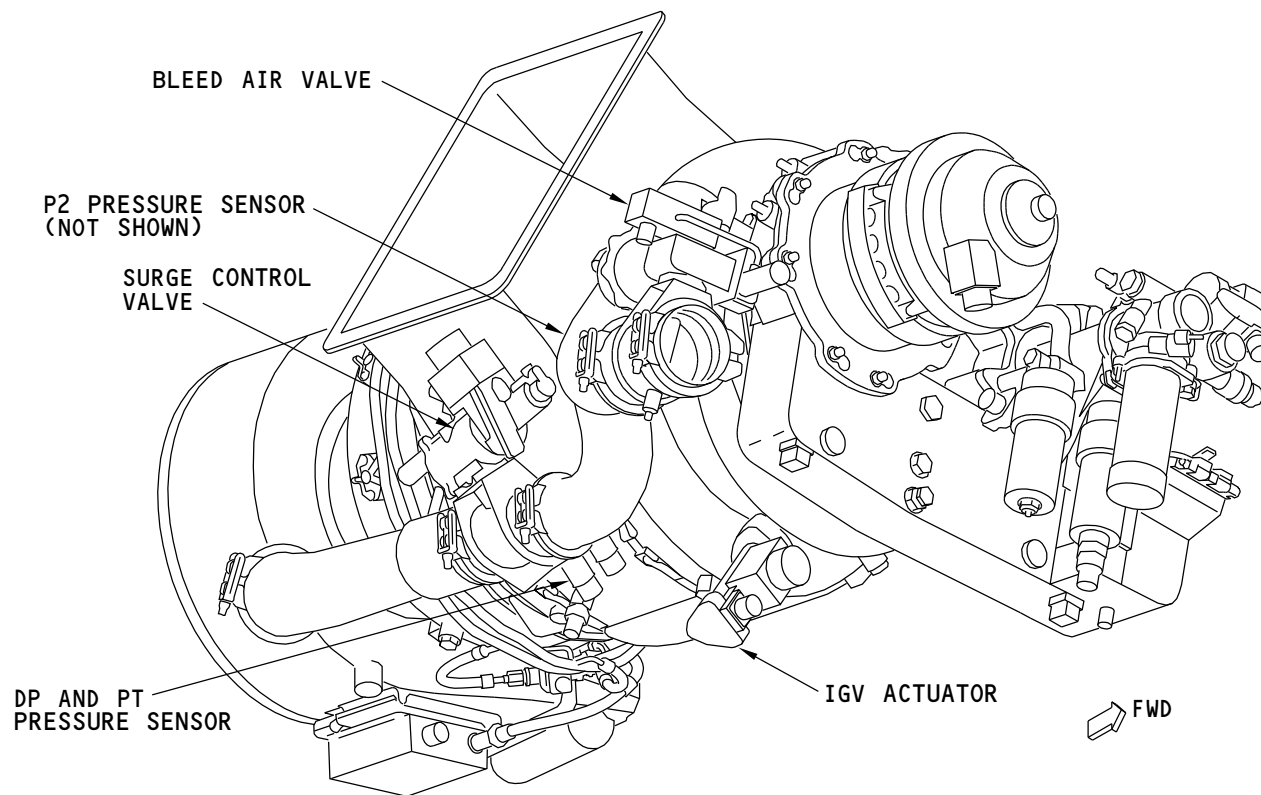

M87543 S0004631497\_V1

### APU BLEED AIR SYSTEM - INTRODUCTION

49-50-00-001

AKS ALL EFFECTIVITY

**49-50-00**

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

**APU BLEED AIR SYSTEM - APU BLEED AIR VALVE****Purpose**

The APU bleed air valve (BAV) isolates the APU bleed air system from the airplane pneumatic manifold.

**Physical Description**

The APU bleed air valve has these components:

- Valve flow body with butterfly plate
- Spring-loaded pneumatic actuator
- Control solenoid and electrical connector
- Position indicator (visual)
- Limit switch assembly.


**Location**

The APU bleed air valve is in the forward right side of the APU. Access is through the APU cowl door.

**Mechanical Valve Position Indication**

The APU bleed air valve has a visual position indicator on the bottom of the BAV flow body. The APU BAV also has a visual position indicator on the top of the limit switch assembly.

AKS ALL	EFFECTIVITY
---------	-------------

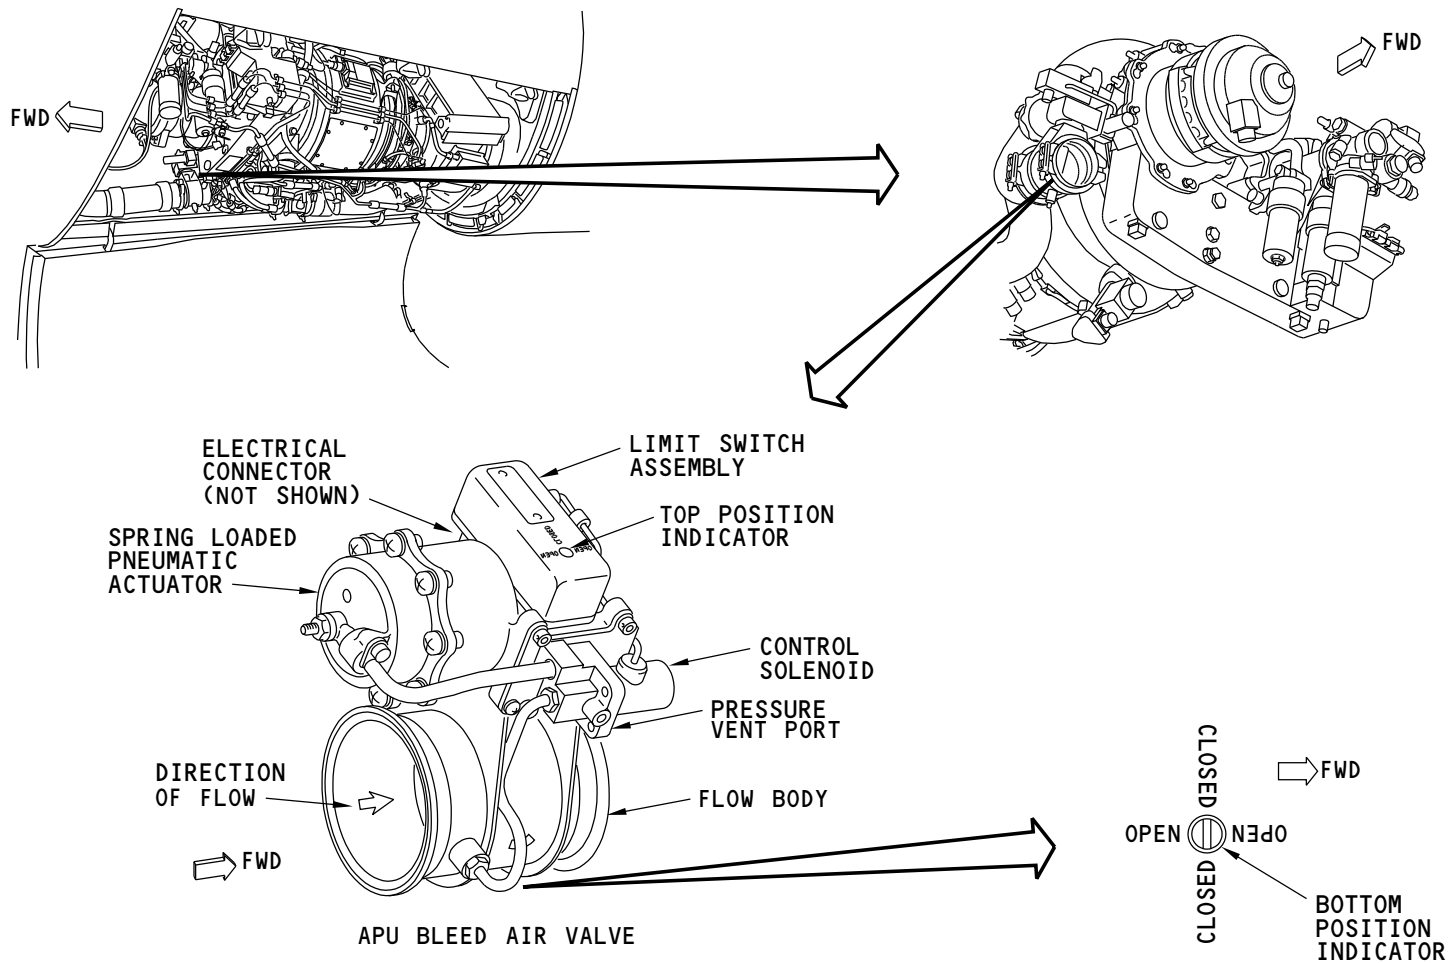

M87544 S0004631499\_V1

**APU BLEED AIR SYSTEM - APU BLEED AIR VALVE**

**49-50-00**

49-50-00-002

AKS ALL

EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

**APU BLEED AIR SYSTEM - APU BLEED AIR VALVE - FUNCTIONAL DESCRIPTION****General**

The bleed air valve (BAV) is a butterfly type valve that isolates the APU load compressor from the airplane bleed air system.

**Operational Indications**

These are the indications in the flight compartment:

- EGT indicator
- Duct pressure gage
- Dual bleed light.

Exhaust gas temperature (EGT) increases when the BAV opens. As the inlet guide vanes (IGV) open, more air goes to the load compressor (L/C). As more air enters the L/C duct, the pressure increases. The EGT increase is less than for APUs on previous 737s because air is from the L/C and not from the engine compressor.

The duct pressure gage gives the left and right bleed manifold pressures. You know if the BAV is open if the duct pressure is more than 0 when the APU is the only source of bleed air.

See the pneumatic system for more information on duct pressure indication. (SECTION 36-20)

The dual bleed light comes on when these conditions occur:

- APU bleed air valve is open
- Engine 1 or 2 bleed switch is ON and the isolation valve is open.

See the pneumatic system for more information on the dual bleed light. (SECTION 36-20)

**Control**

The APU bleed air switch sends a signal to the ECU. The APU bleed air switch is on the air conditioning/bleed air controls panel. The switch positions are OFF and ON.

The APU ECU controls the ON and OFF signal to the APU bleed valve solenoid. The BAV opens when the solenoid is energized from the ECU and pneumatic power is available from the load compressor.

The APU ECU energizes the solenoid when these conditions occur:

- APU bleed air switch is in the ON position
- APU is not in cool down cycle
- APU speed is more than 95 percent
- Altitude is less than 18,000 ft (5486 m), if altitude comes from the ADIRU
- Altitude is less than 21,000 ft (6,401 meters), if increasing altitude and altitude comes from inlet pressure sensor (P2)
- Altitude is less than 19,000 ft (5,791 meters), if descending and altitude comes from inlet pressure sensor (P2).

The bleed air valve has a spring to hold it in the closed position. Air from the APU load compressor moves the valve open when the ECU energizes the solenoid.

**NOTE:** Bleed duct pressure will be 0-6 psig when the APU bleed air switch is in the OFF position.


**49-50-00**

EFFECTIVITY

AKS ALL

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

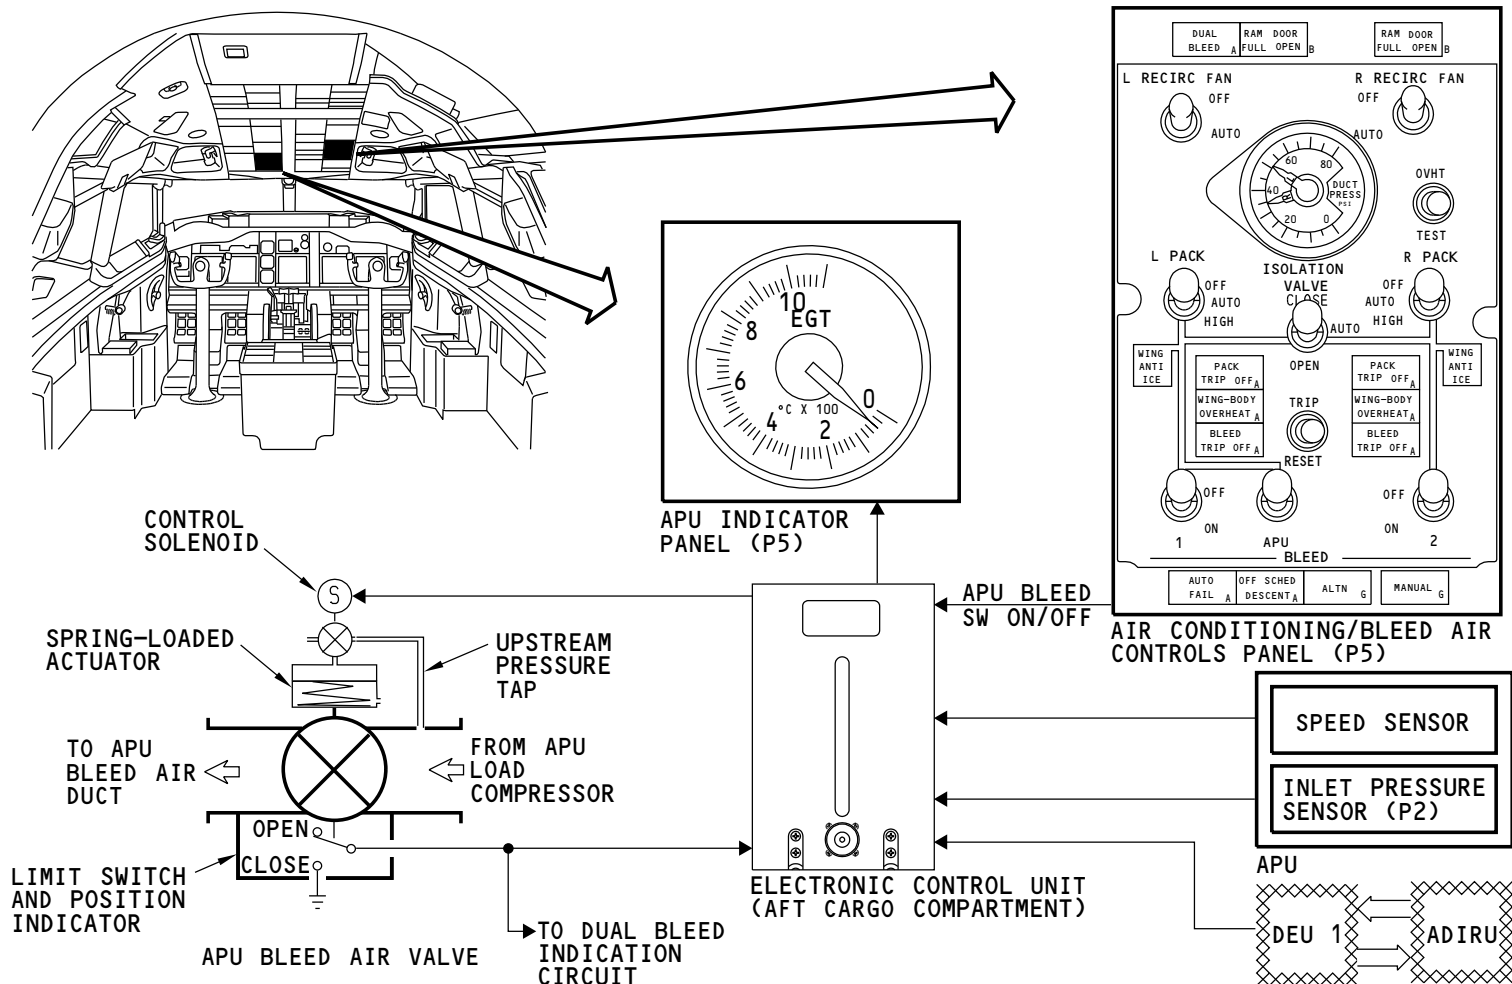

M87547 S0004631503\_V1

**APU BLEED AIR SYSTEM - APU BLEED AIR VALVE - FUNCTIONAL DESCRIPTION**

**49-50-00**

49-50-00-003

AKS ALL

EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details



**APU BLEED AIR SYSTEM - INLET GUIDE VANES AND ACTUATOR****Purpose**

The inlet guide vanes control the air flow to the load compressor. The IGV actuator controls the IGV position.

**Physical Description**

Sixteen inlet guide vanes (IGVs) are inside the APU around the load compressor inlet. These are the parts in the inlet guide vane assembly:

- Inlet guide vanes (16)
- Ring gear
- Support assembly
- Segment gears (16).

The inlet guide vane actuator (IGVA) is on the right side of the compressor. These are the actuator components:

- Electrical connector
- Linear variable differential transformer (LVDT)
- Actuator rod
- Fuel inlet line
- Fuel return line
- Drain line.

**Functional Description**

The inlet guide vanes turn between 15 degrees (fully closed) to 115 degrees (fully open). The vanes do not fully close. The vanes are set to stop at the 15 degrees position to cool the load compressor.

The actuator receives signals from the ECU and uses fuel pressure from the FCU to move the vanes. The ECU controls the inlet guide vanes to the correct angle by the air demand from the airplane.


**Training Information Point**

The IGV position shows on the CDU in the flight compartment.

**49-50-00****EFFECTIVITY**  
**AKS ALL**

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

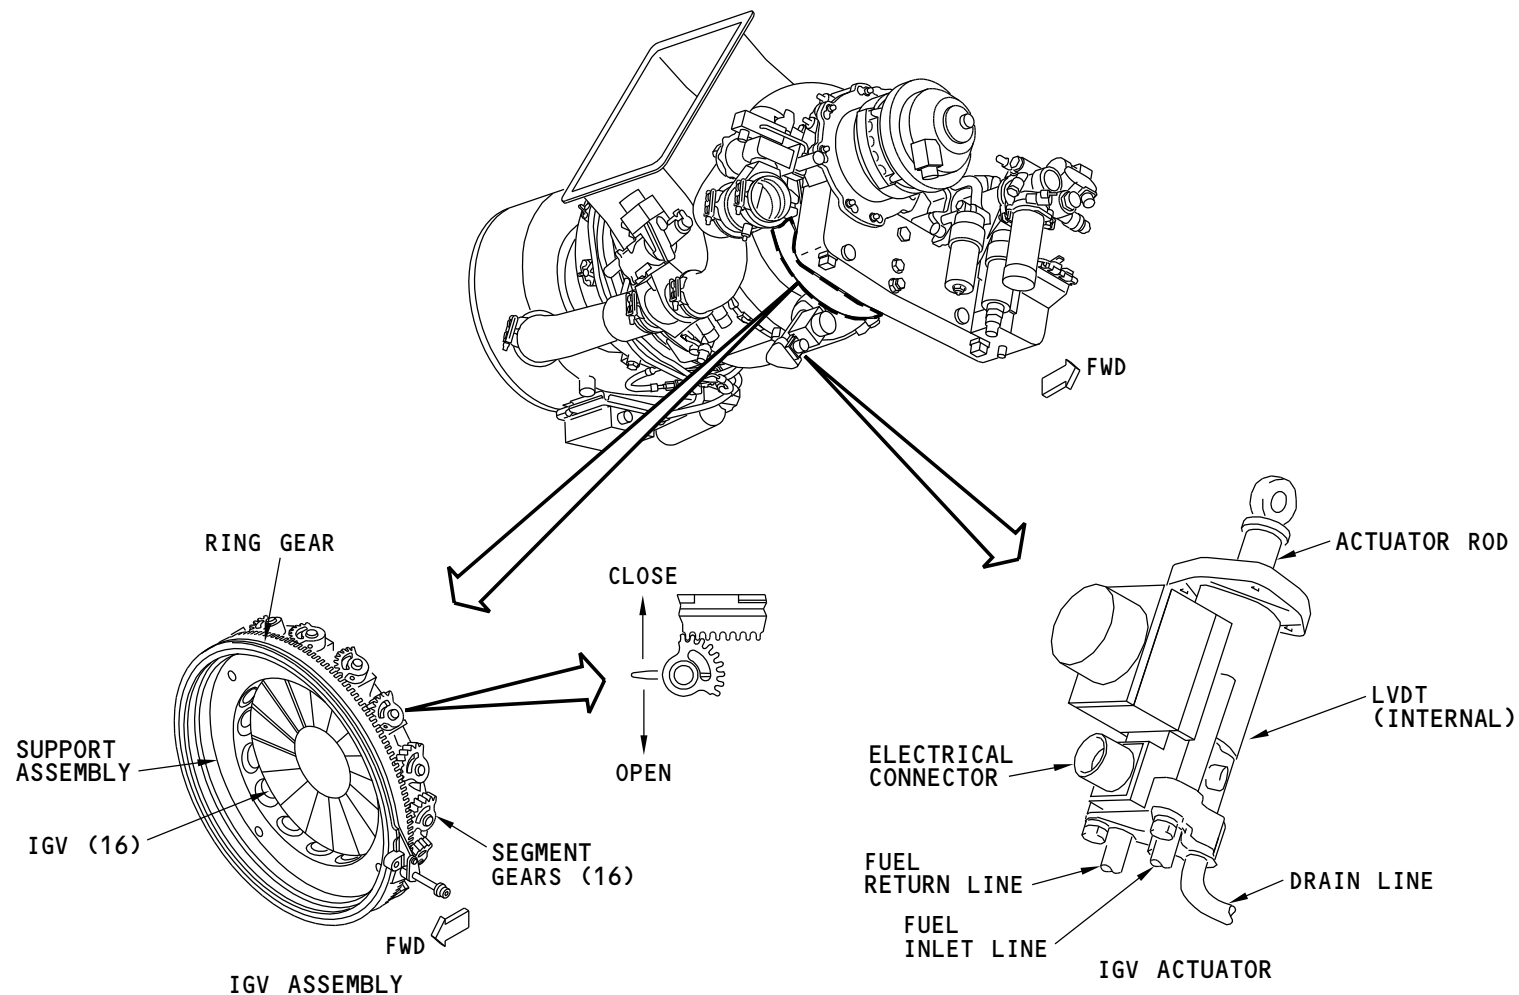

M87548 S0004631505\_V1

### APU BLEED AIR SYSTEM - INLET GUIDE VANES AND ACTUATOR

## 49-50-00

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

**APU BLEED AIR SYSTEM - INLET GUIDE VANES - FUNCTIONAL DESCRIPTION****General**

The ECU receives airplane systems inputs and selects from four bleed air modes. These are the bleed air modes:

- No bleed
- Duct pressurization
- Main engine start
- Air conditioning system (ACS).

The ECU sends a signal to the IGV actuator to change the angle of the IGVs. The angle of the IGVs changes to control the air supply.

The ECU puts the IGVs at 15 degrees when the APU bleed air valve closes.

**No Bleed Mode**

The no bleed mode occurs when the ECU closes the IGVs to 15 degrees, the APU bleed valve closes, and there is no pneumatic system demand.

**Duct Pressurization Mode**

The ECU selects the duct pressurization mode when the APU bleed air valve opens and there is no air system demand. The IGVs open to let the load compressor pressurize the air ducts.

**Main Engine Start Mode**

In main engine start mode, the ECU opens the IGVs to meet the increased airflow requirements. This mode has priority over all other modes.

**ACS Mode**

In each ACS mode, the ECU opens the IGVs as necessary to supply air to the air conditioning system. These are the four ACS modes:

- One pack inflight
- One pack ground
- Two pack, normal
- Two pack, high.

The IGV positions in the ACS modes are different for each airplane model. The ECU finds the airplane model from two signature pins on the airplane ECU connector.

It is recommended that you operate the APU with the two air conditioning packs when maximum cabin cooling is necessary. Use the two air conditioning packs as an alternative to the one air conditioning pack operation. The results of the operation of two air conditioning packs will be cooler cabin temperatures, lower APU fuel burn, better APU hot section life and lower APU noise. Refer to Service Letter 737-SL-49-060 for more data on these results.

**Control**

After the mode selection, the ECU uses inlet temperature, inlet pressure, and airplane specific data (flight or ground conditions) to find the commanded IGV angle.


The ECU sends control signals to the servo valve on the IGV actuator to open or close the guide vanes. The LVDT in the IGV actuator supplies vane position feedback to the ECU.

**49-50-00**

EFFECTIVITY  
AKS ALL

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

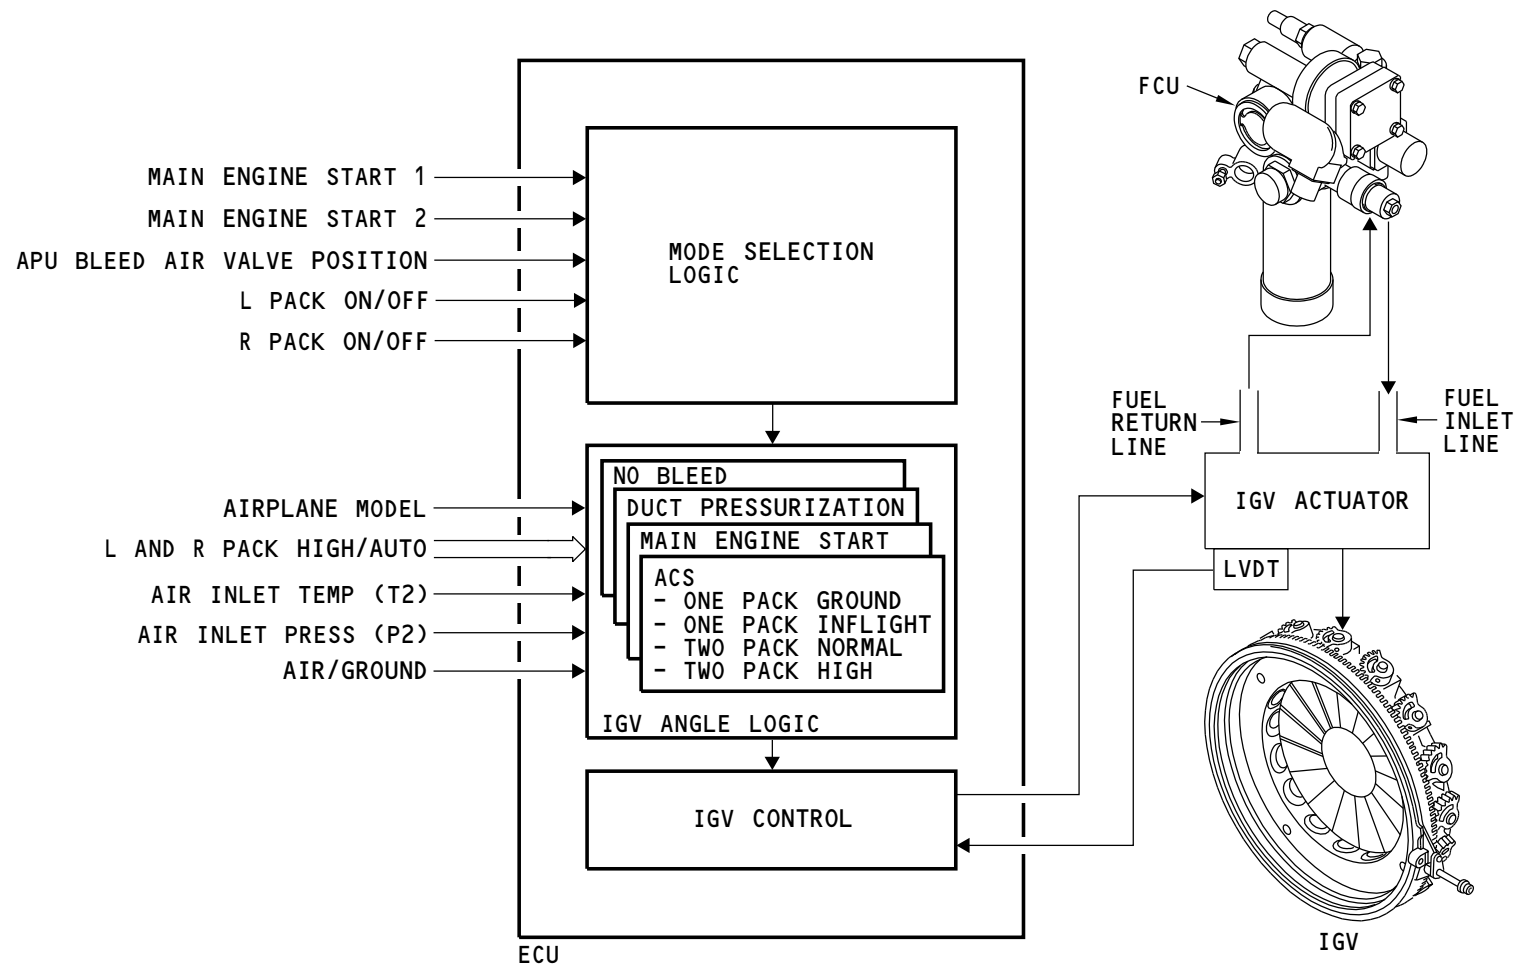

M87549 S0004631507\_V1

### APU BLEED AIR SYSTEM - INLET GUIDE VANES - FUNCTIONAL DESCRIPTION

49-50-00-005

AKS ALL

EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

49-50-00

**APU BLEED AIR SYSTEM - P2, PT, AND DP PRESSURE SENSORS****Purpose**

The three pressure sensors measure load compressor pressures and convert these pressures into a electric signals. The electric signals are sent to the ECU.

These are the three pressure sensors:

- Inlet pressure (P2) sensor
- Total pressure (PT) sensor
- Differential pressure (DP) sensor.

**Location**

The P2 sensor is attached to the APU inlet. The PT and DP sensors are above the surge control valve (SCV) on the APU inlet.


**Functional Description**

The P2 sensor measures the APU inlet pressure of the load compressor. The ECU uses this data to control APU functions.

The PT sensor measures load compressor total discharge pressure.

A DP sensor measures the difference between the total discharge pressure and the static pressure in the diffuser. Differential pressure equals total pressure minus static pressure.

The ECU uses PT and DP to calculate load compressor airflow. The ECU uses load compressor airflow, inlet temperature, and IGV position to operate the surge control valve.

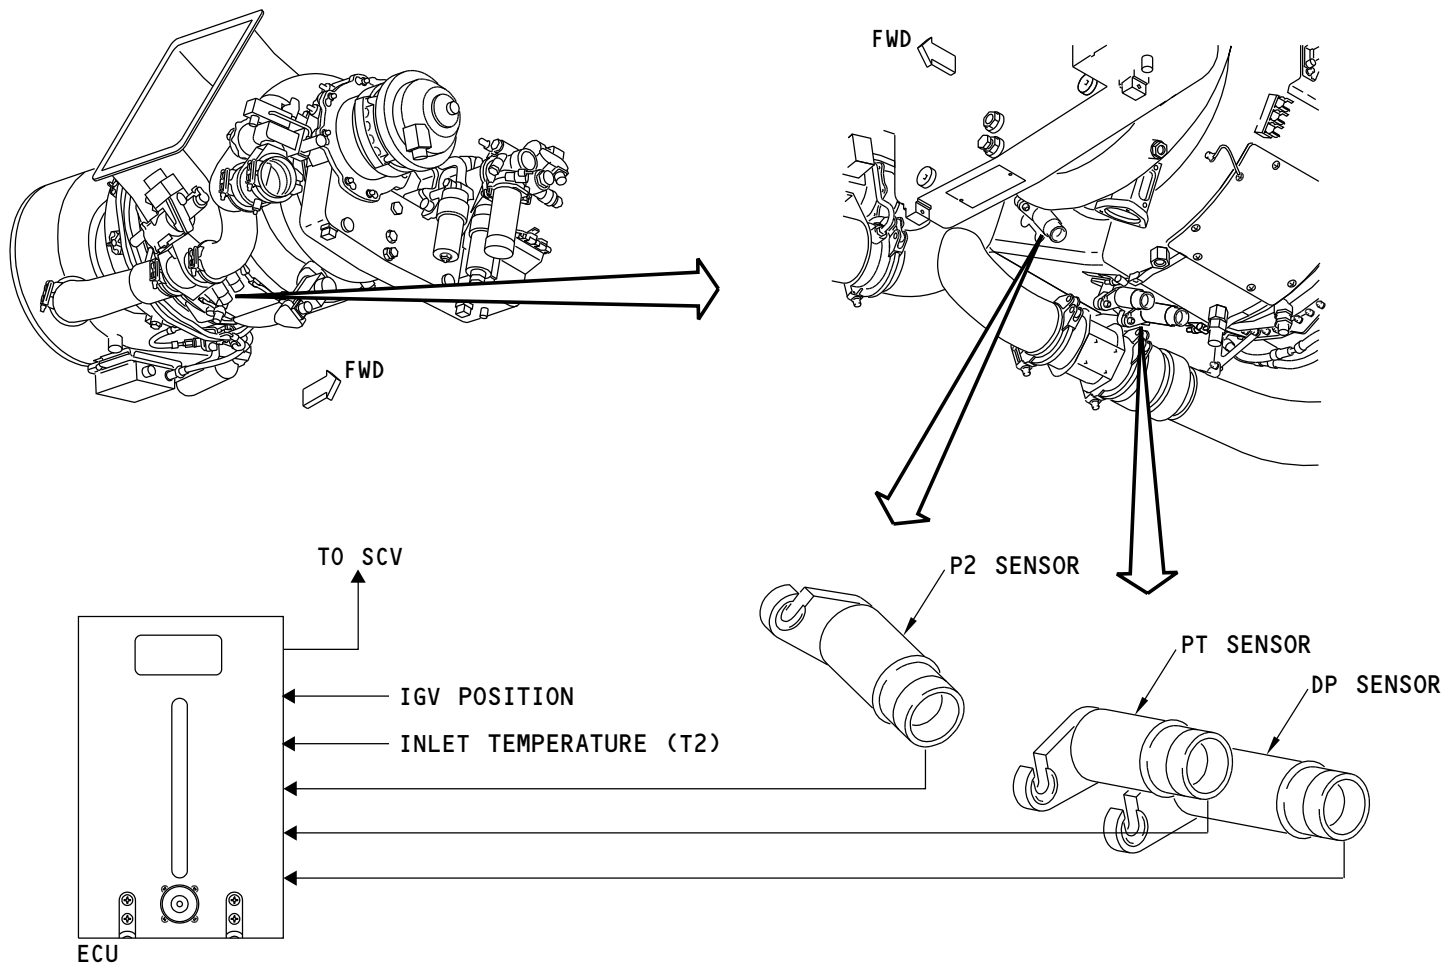

M87550 S0004631509\_V1

APU BLEED AIR SYSTEM - P2, PT, AND DP PRESSURE SENSORS

49-50-00

49-50-00-007

AKS ALL

EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

**APU BLEED AIR SYSTEM - SURGE CONTROL VALVE****Purpose**

The surge control valve (SCV) releases air from the load compressor. The SCV makes sure there is a minimum flow of air through the load compressor. This prevents a surge. If a surge does occur, the SCV opens to help the load compressor recover.

**Physical Description**

The SCV is a butterfly type valve. The surge control valve actuator is on the top of the valve. A two-stage servo valve controls the actuator. A visual indicator on the valve gives the position of the valve.

**Location**

The valve is in the surge bleed duct on the right side of the APU.

**Functional Description**


The ECU controls a torque motor on the servo valve. This motor sends high pressure fuel from the APU fuel system to open or close the surge control valve. The valve moves between 10 degrees (open) and 90 degrees (closed). A linear variable differential transformer (LVDT) supplies valve position feedback to the ECU.

Air that flows through the surge control valve goes overboard through the exhaust duct.

**Training Information Point**

The SCV has a visual position indicator. This indicator is on the bottom of the SCV flow body.

EFFECTIVITY	
AKS ALL	

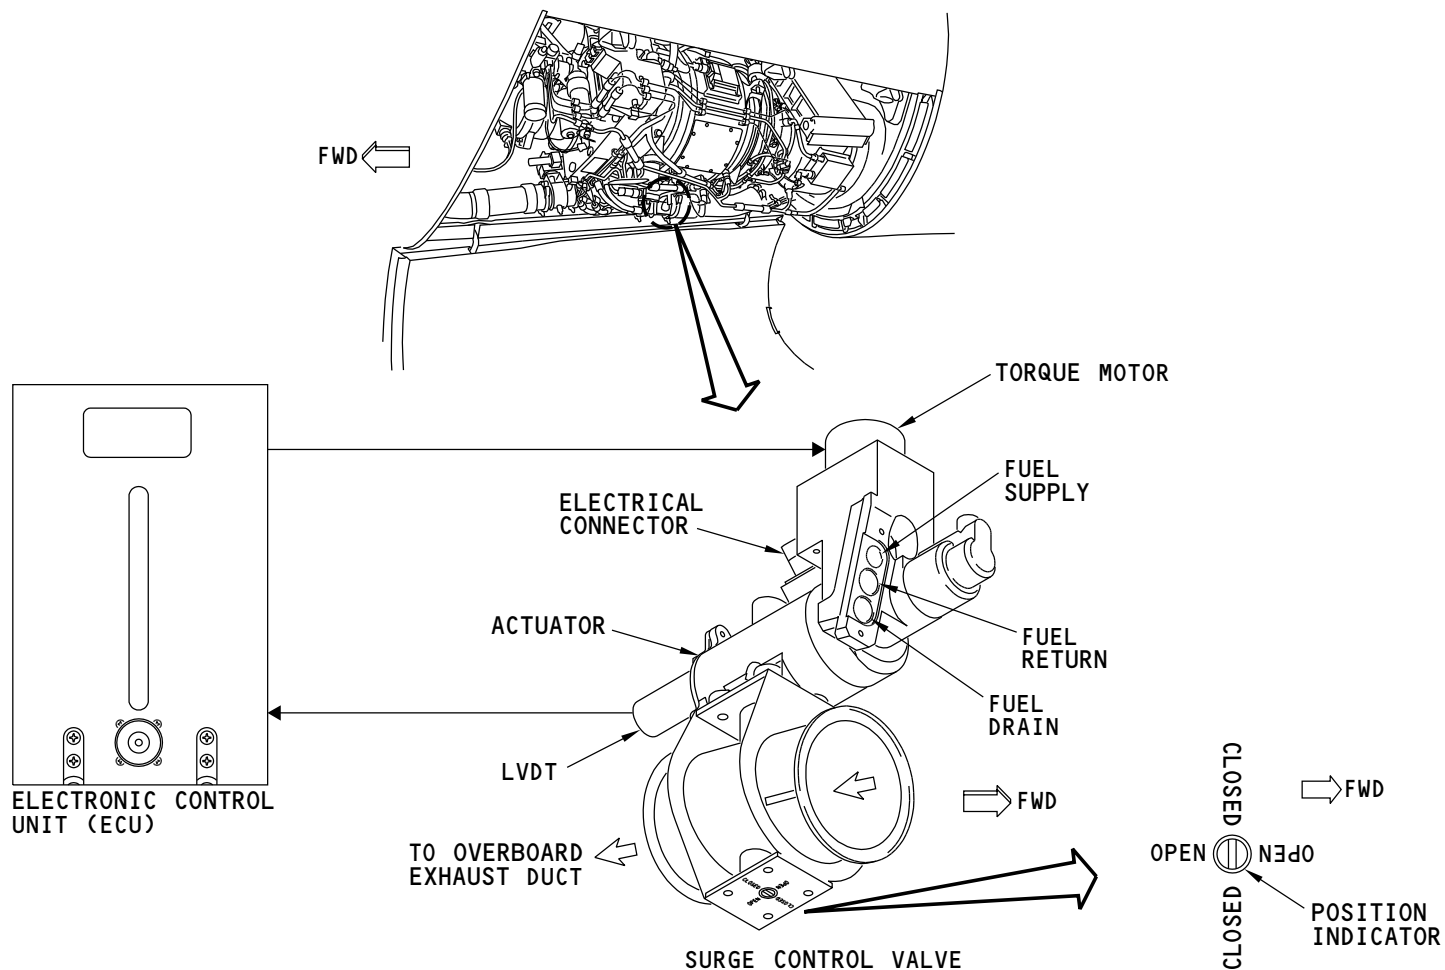

APU BLEED AIR SYSTEM - SURGE CONTROL VALVE

M87551 S0004631511\_V1

49-50-00-008

AKS ALL EFFECTIVITY

49-50-00

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details



**APU BLEED AIR SYSTEM - SURGE BLEED - FUNCTIONAL DESCRIPTION****General**

The APU uses surge bleed to prevent load compressor surges. If there is not sufficient flow through the load compressor, the surge control valve (SCV) releases bleed air into the APU exhaust. The bleed air flow into the exhaust is the surge bleed.

**Corrected Air Flow and Surge Margin Setpoint**

The ECU calculates the corrected airflow and the surge margin setpoint.

The corrected airflow is the quantity of air that flows through the load compressor. The ECU uses total pressure (PT) and differential pressure (DP) to calculate the corrected airflow.

The surge margin setpoint is the minimum quantity of corrected air that should flow through the load compressor to prevent load compressor surge.

The ECU uses these inputs to calculate the surge margin set point:

- Inlet temperature (T2)
- IGV position
- Bleed mode
- Air/ground.

If the corrected air flow is less than the surge margin set point, the ECU opens the surge control valve. When the SCV is open, the SCV releases air into the APU exhaust. This surge bleed keeps the airflow through the load compressor at or more than the minimum level.

**SCV Actuator Control**

The ECU sends control signals to the servo valve on the SCV actuator to open or close the valve. The LVDT in the surge control valve supplies valve position feedback to the ECU.

**APU Start and Shutdown**

When you start the APU, the surge control valve stays in the full open position. The valve butterfly closes when the APU speed is more than 95 percent speed and the APU bleed switch is in the ON position. This helps prevent stall conditions during a start.

The surge control valve opens when the APU shuts down.


**49-50-00**

EFFECTIVITY

AKS ALL

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

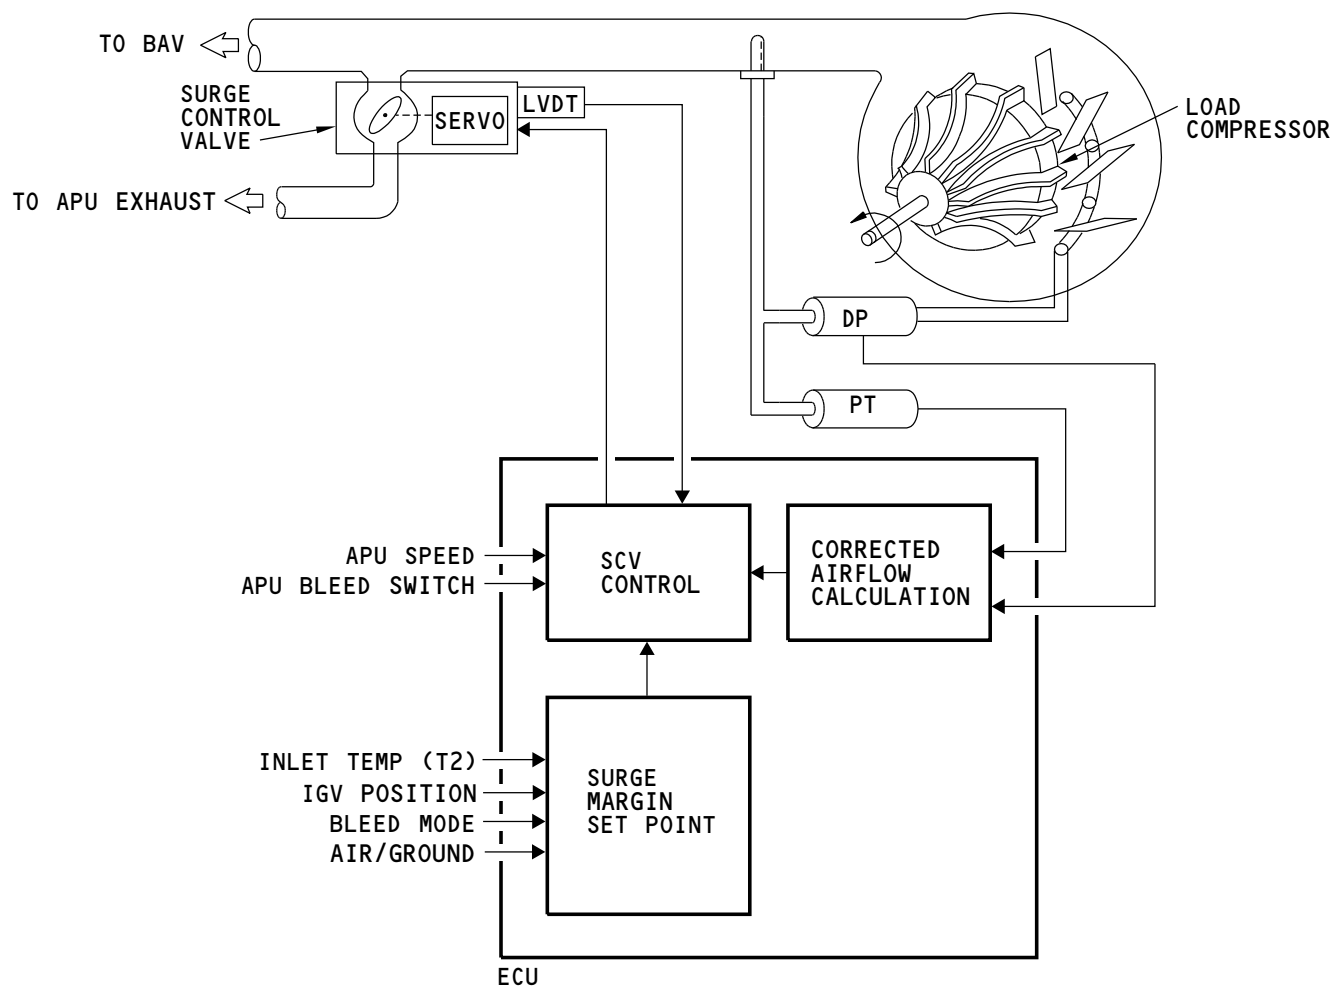

M87552 S0004631513\_V1

### APU BLEED AIR SYSTEM - SURGE BLEED - FUNCTIONAL DESCRIPTION

## 49-50-00

AKS ALL

EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

**APU BLEED AIR SYSTEM - FUNCTIONAL DESCRIPTION****Purpose**

The APU bleed air system supplies air to the airplane pneumatic system. The APU uses surge bleed to prevent load compressor surges.

**APU Bleed Air System**

The ECU controls the APU bleed air system.

These are the components of the bleed air system:

- Load compressor
- Inlet guide vanes
- Inlet guide vane actuator
- Bleed air valve
- Pressure sensors
- Surge control valve.

The load compressor supplies airflow to the airplane pneumatic system. The inlet guide vanes control the amount of air to the load compressor. The inlet guide vane actuator operates the inlet guide vanes.

The inlet guide vane actuator receives commands from the ECU and uses fuel pressure for operation.

The ECU sends an open signal to the APU bleed air valve when the APU is at 95 percent speed and the APU bleed switch is in the ON position.

Electric power controls the bleed air valve and air pressure operates it.

**APU Surge Bleed**

Load compressor surge protection is on during all APU operations. The surge control valve gives this protection.


The ECU controls the surge control valve by a torque motor. The ECU calculates the correct position of the surge control valve with APU and airplane operating parameters.

**49-50-00**

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

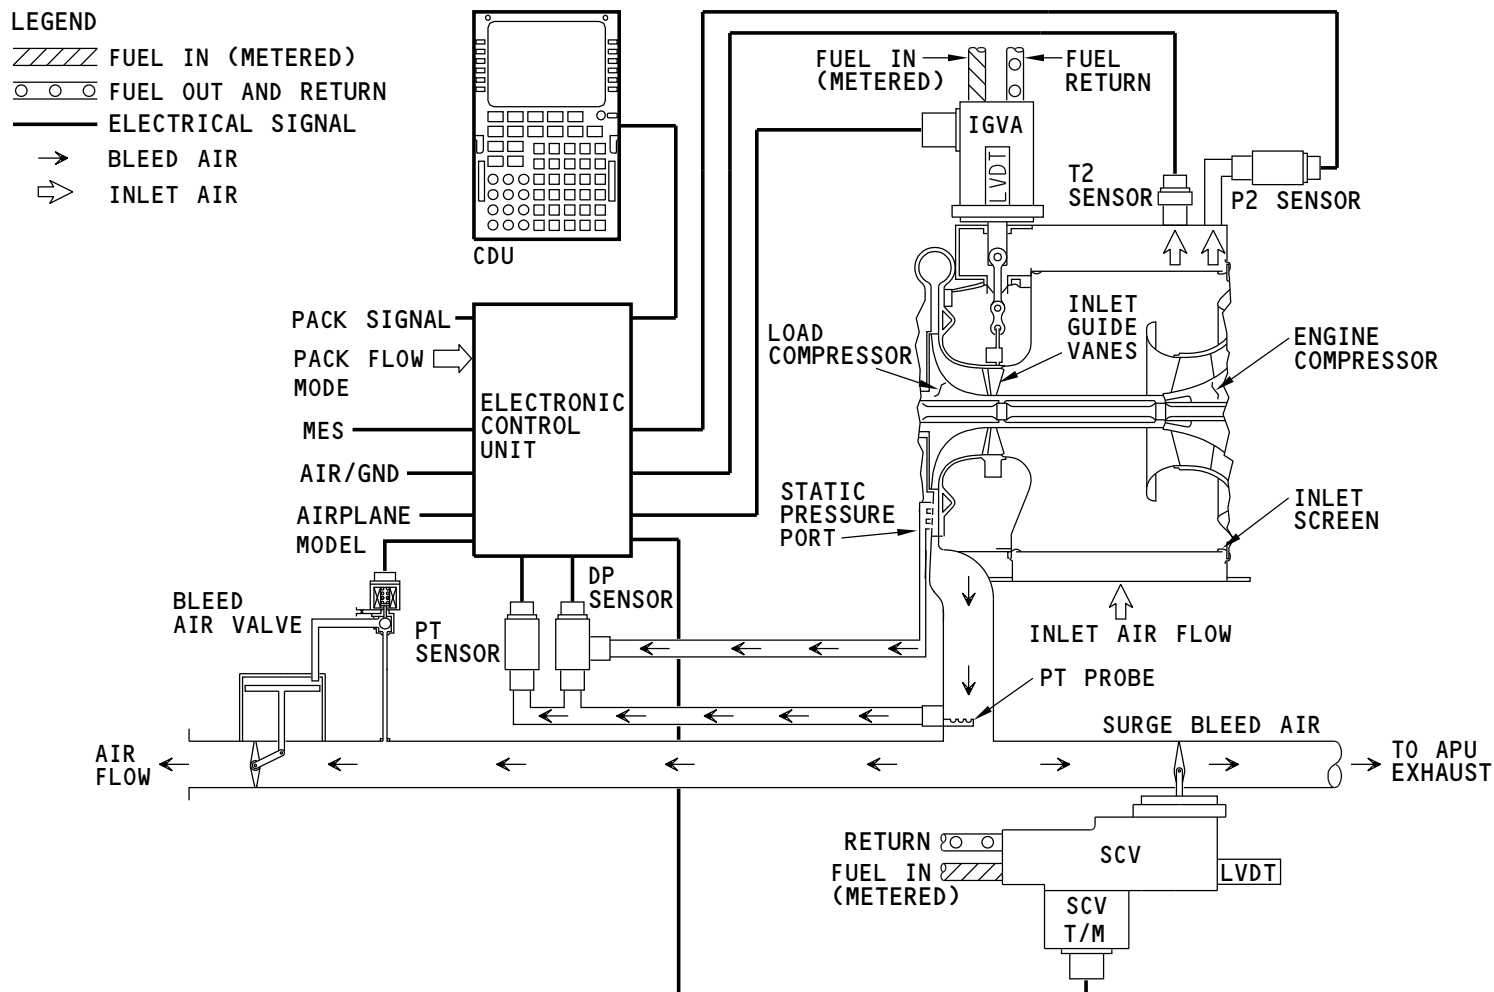

M87553 S0004631515\_V1

### APU BLEED AIR SYSTEM - FUNCTIONAL DESCRIPTION

**49-50-00**

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details





THIS PAGE IS INTENTIONALLY LEFT BLANK

**49-60-00**

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details



## APU CONTROLS - INTRODUCTION

### Purpose

The APU controls provide control for the APU for all operating conditions.

### Flight Compartment Controls and Panels

These are the APU controls and panels in the flight compartment:


- APU switch (P5)
- APU bleed air switch (P5)
- APU generator switch (P5)
- APU fire warning switch (P8).

### Other Control Components

The P28 APU remote control panel is on the right wheel well aft bulkhead.

The electronic control unit (ECU) controls the APU operation when the ECU receives a signal from the controls in the flight compartment. The ECU is in the aft cargo compartment right side.

The ECU also uses signals from certain APU and airplane systems for correct operation of the APU.

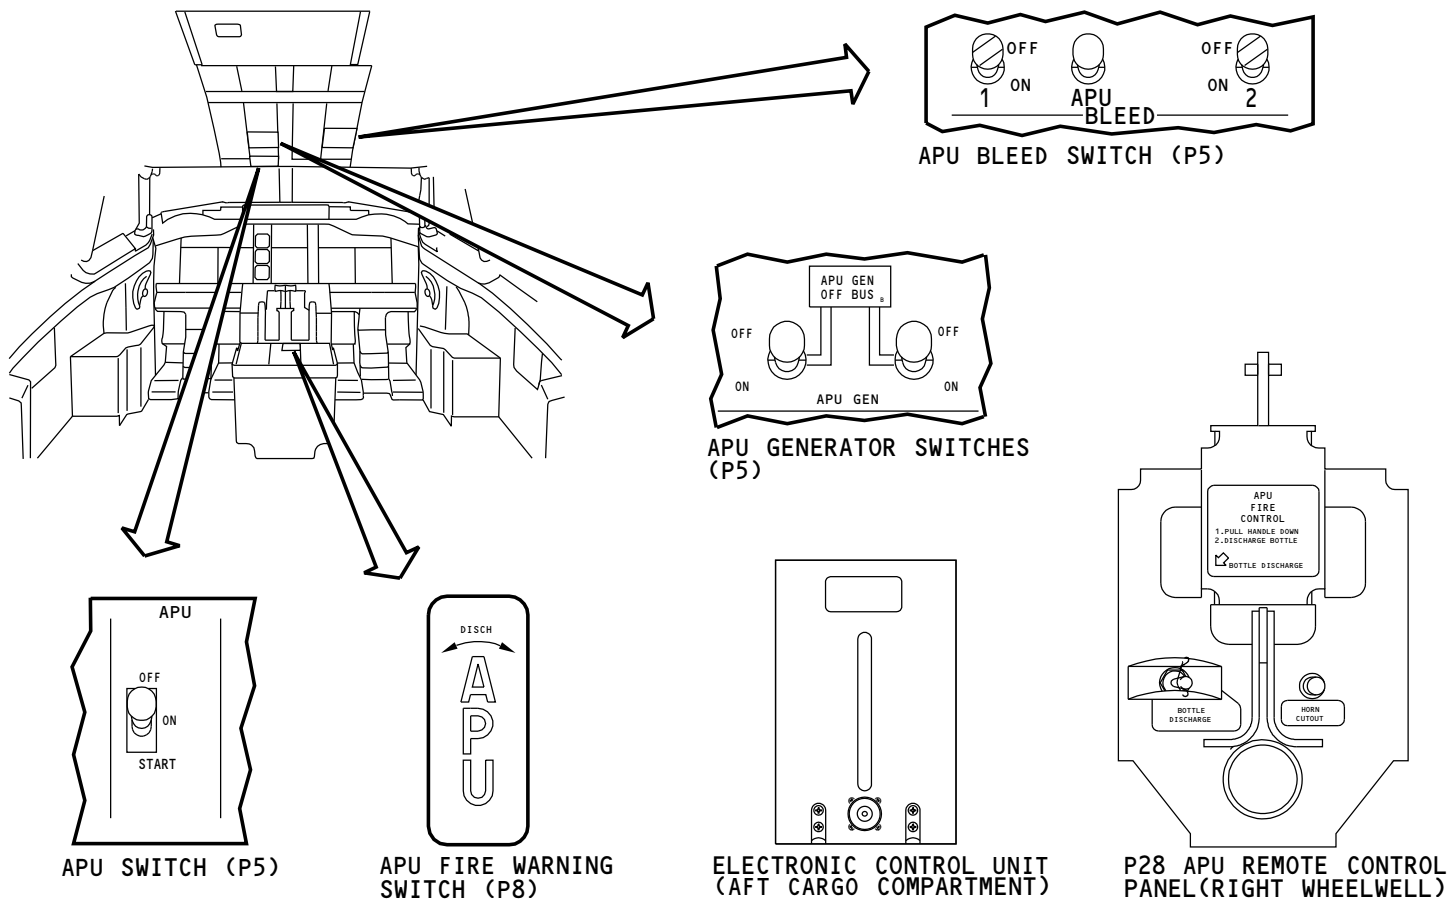

M87554 S0004631519\_V1

### APU CONTROLS - INTRODUCTION

49-60-00-001

AKS ALL

EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

49-60-00





## APU CONTROLS - ELECTRONIC CONTROL UNIT - INTRODUCTION

### Purpose

The ECU controls APU functions. The ECU also contains circuits for fault detection and isolation.

### Location

The ECU is on a shelf in the aft cargo compartment near the aft cargo door.

### Training Information Point


The ECU is a line replaceable unit (LRU). The circuit cards in the ECU are not LRUs.

To get access to the ECU, you must open the aft cargo door and remove the panel that protects the ECU front face.

### Training Information Point

If you remove the ECU for maintenance, do not remove the data memory module from the APU at the same time. Lose of APU memory data will result.

EFFECTIVITY	
AKS ALL	

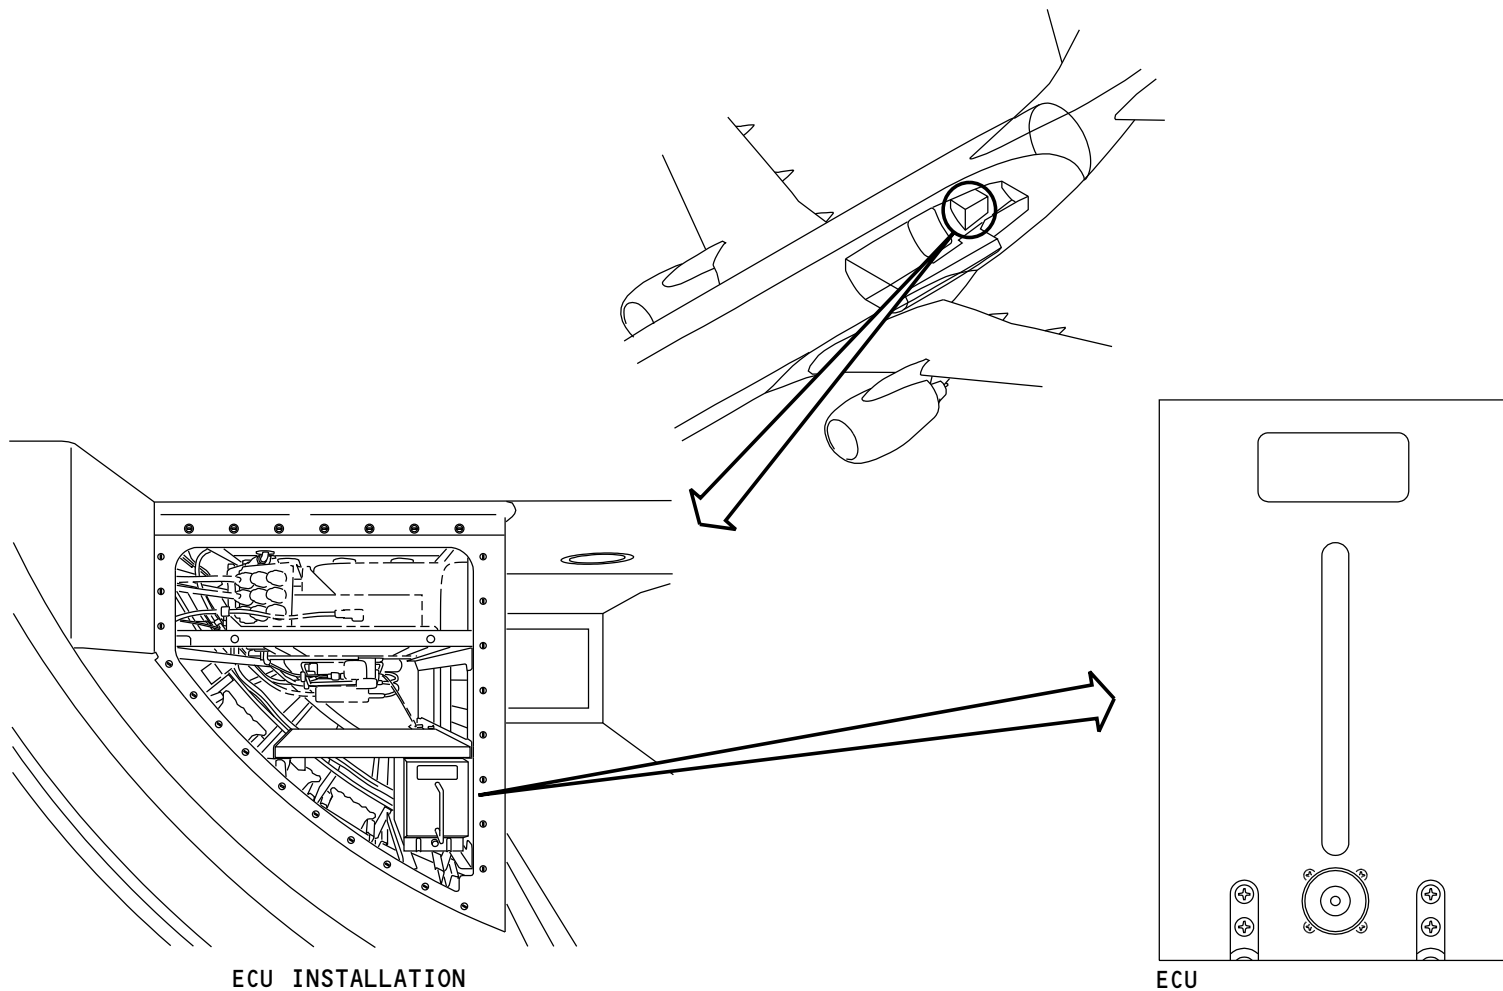

M87556 S0004631522\_V1

**APU CONTROLS - ELECTRONIC CONTROL UNIT - INTRODUCTION**

**49-60-00**

49-60-00-002

AKS ALL

EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

**APU CONTROLS - ELECTRONIC CONTROL UNIT - INPUTS****General**

The ECU gets inputs from airplane systems and from the APU.

The ECU receives 28v dc power from the 28v dc switched hot battery bus.

**Airplane System ARINC 429 Data Bus**

The ECU receives airplane data from the display electronic unit (DEU). The ARINC 429 bus transmits this information. You use the CDU to get APU BITE data from the ECU.

**Operational Software Loading**

Maintenance personnel can install operation software in the ECU with the data loader. See the data loader section for more information on the data loader. (SECTION 34-61)

**Airplane Systems Discrete Inputs**

The ECU receives these airplane system inputs:


- ACS pack ON/OFF
- Air/ground indication
- Airplane model
- APU automatic fire shutdown
- APU BITE power up
- APU bleed command
- APU fire warning switch
- APU fuel shutoff valve position
- Air inlet door position
- APU OFF signal
- APU ON signal
- APU remote fire switch
- APU START signal
- Generator load
- Main engine start/run

- Start converter BITE data.

**APU Inputs**

These inputs are from the APU to the ECU:

- Air inlet temperature
- APU bleed air valve position
- APU fault data
- Data memory module (DMM)
- Delta pressure (DP)
- EGT (2)
- Filter pressure switch
- Fuel flow
- Fuel temperature
- IGV position
- Inlet air pressure (P2)
- Low oil pressure switch
- Oil level
- Oil pressure
- Oil temperature
- SCV position
- Speed sensor with 2 signals
- Total air pressure (PT).

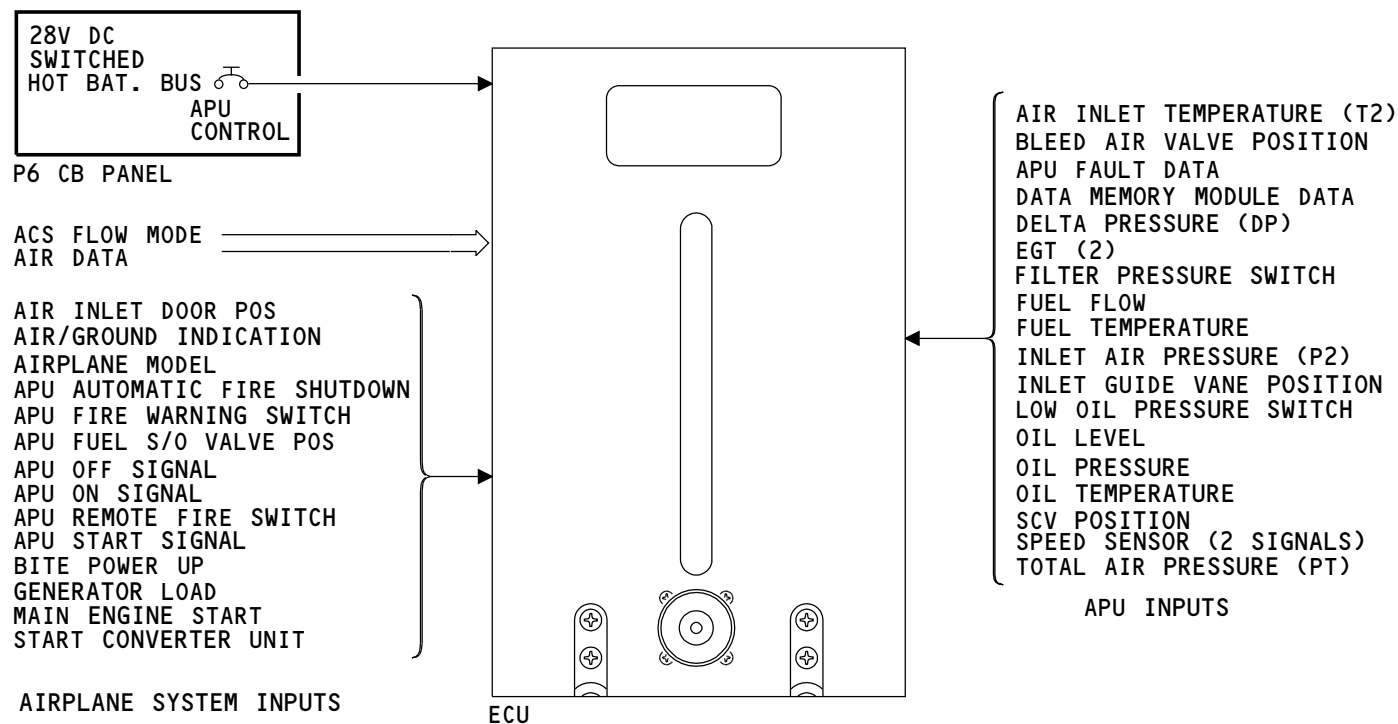

### APU CONTROLS - ELECTRONIC CONTROL UNIT - INPUTS

M87557 S0004631524\_V2

# 49-60-00

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

Page 7  
Feb 15/2015

**APU CONTROLS - ELECTRONIC CONTROL UNIT - OUTPUTS****General**

The ECU supplies APU data to airplane systems and it controls APU functions.

**ECU ARINC 429 Outputs**

The ECU supplies this APU data to the flight management computer (FMC) through the ARINC 429 bus. The FMC system shows this information on the control display unit (CDU):

- APU and ECU part numbers and serial numbers
- APU fault data
- APU maintenance data
- APU running status (over 40 indications, 4 pages of status when you select Input Monitoring on the CDU)
- Oil quantity.

**ECU Outputs to the APU**

The ECU sends signals to control these APU components:


- Bleed air valve (BAV)
- Fuel metering valve
- Fuel solenoid valve
- Flow divider solenoid
- Ignition unit
- Inlet guide vane actuator (IGVA)
- Surge control valve (SCV).

**ECU Outputs to Other Airplane Systems**

The ECU also sends these analog signals:

- APU EGT indicator
- APU electrical load shed command
- APU fault light (amber)

- APU fuel shutoff valve
- APU air inlet door
- APU low oil pressure light (amber)
- APU maintenance light (blue)
- APU overspeed light (amber)
- Ready to load APU GEN OFF BUS light on at 95 percent speed (blue)
- Start command.

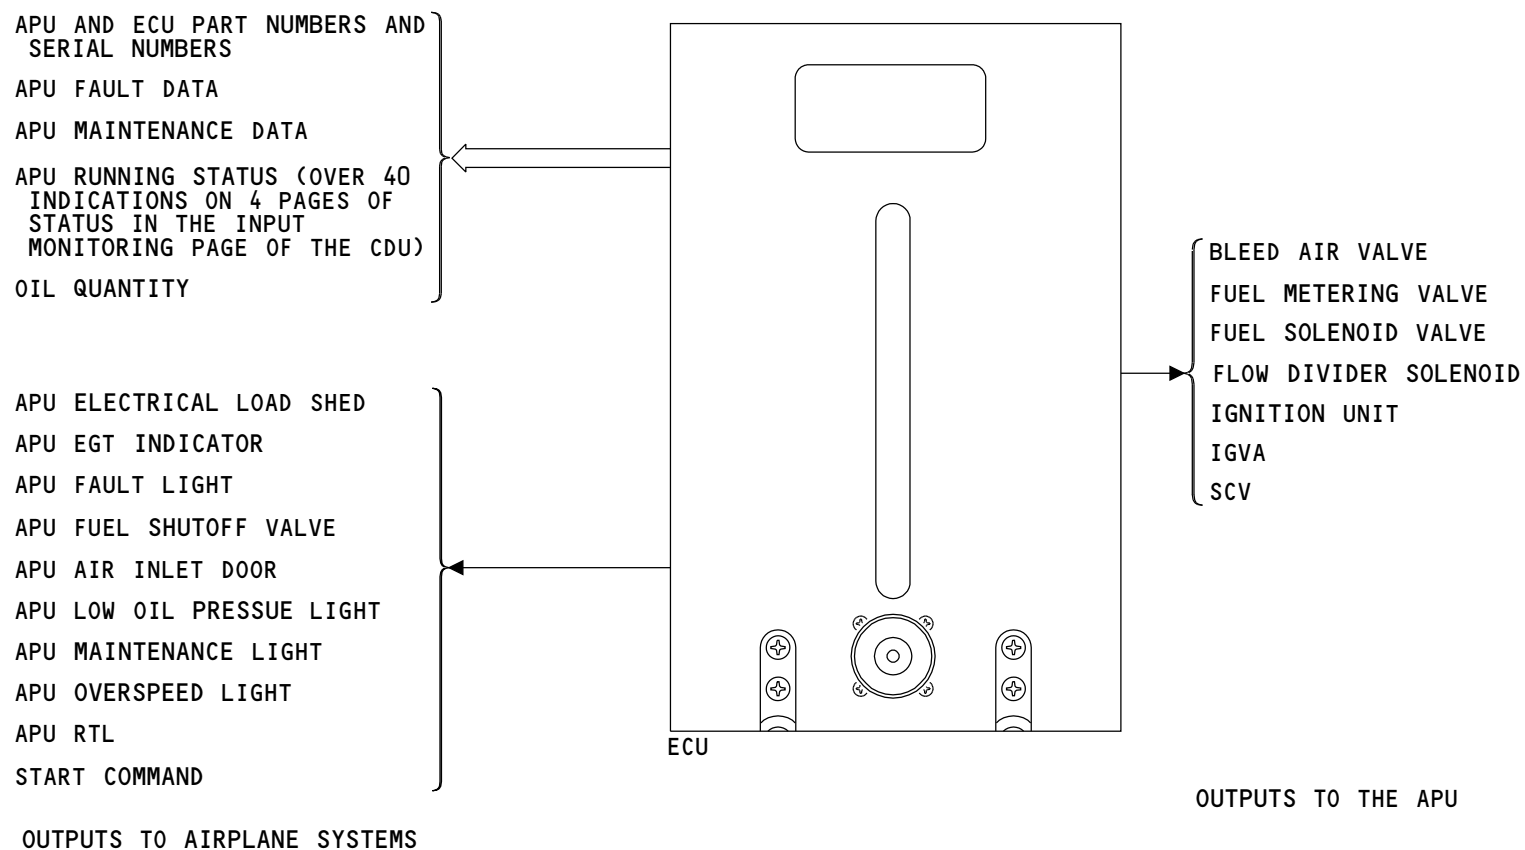

M87558 S0004631526\_V2

### APU CONTROLS - ELECTRONIC CONTROL UNIT - OUTPUTS

# 49-60-00

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

**APU CONTROLS - ELECTRONIC CONTROL UNIT - FAULT MONITORING****General**

The ECU does tests of the APU components and its internal functions. The ECU does some component tests continuously and others only when the APU is in a specific mode.

The ECU memory holds up to 99 faults. When the memory is full, new faults record over the oldest faults.

**Monitored Components**

The ECU monitors these components:


- Air inlet temperature (T2) sensor
- APU air inlet door
- APU fuel shutoff valve
- Bleed air valve (BAV)
- Data memory module (DMM)
- Delta pressure (DP) sensor
- ECU (internal monitors)
- EGT thermocouple (2)
- Flow divider solenoid
- Fuel metering valve
- Fuel solenoid valve
- Fuel temperature sensor
- IGVA
- Ignition unit
- Inlet air pressure (P2) sensor
- Low oil pressure switch
- Oil level sensor
- Oil pressure sensor
- Oil temperature sensor
- Filter pressure switch for starter-generator filter
- Speed sensor

- Start converter unit (SCU)
- Start power unit (SPU)
- Starter-generator
- Surge control valve (SCV)
- Total air pressure (PT) sensor.

**49-60-00****EFFECTIVITY**  
**AKS ALL**

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

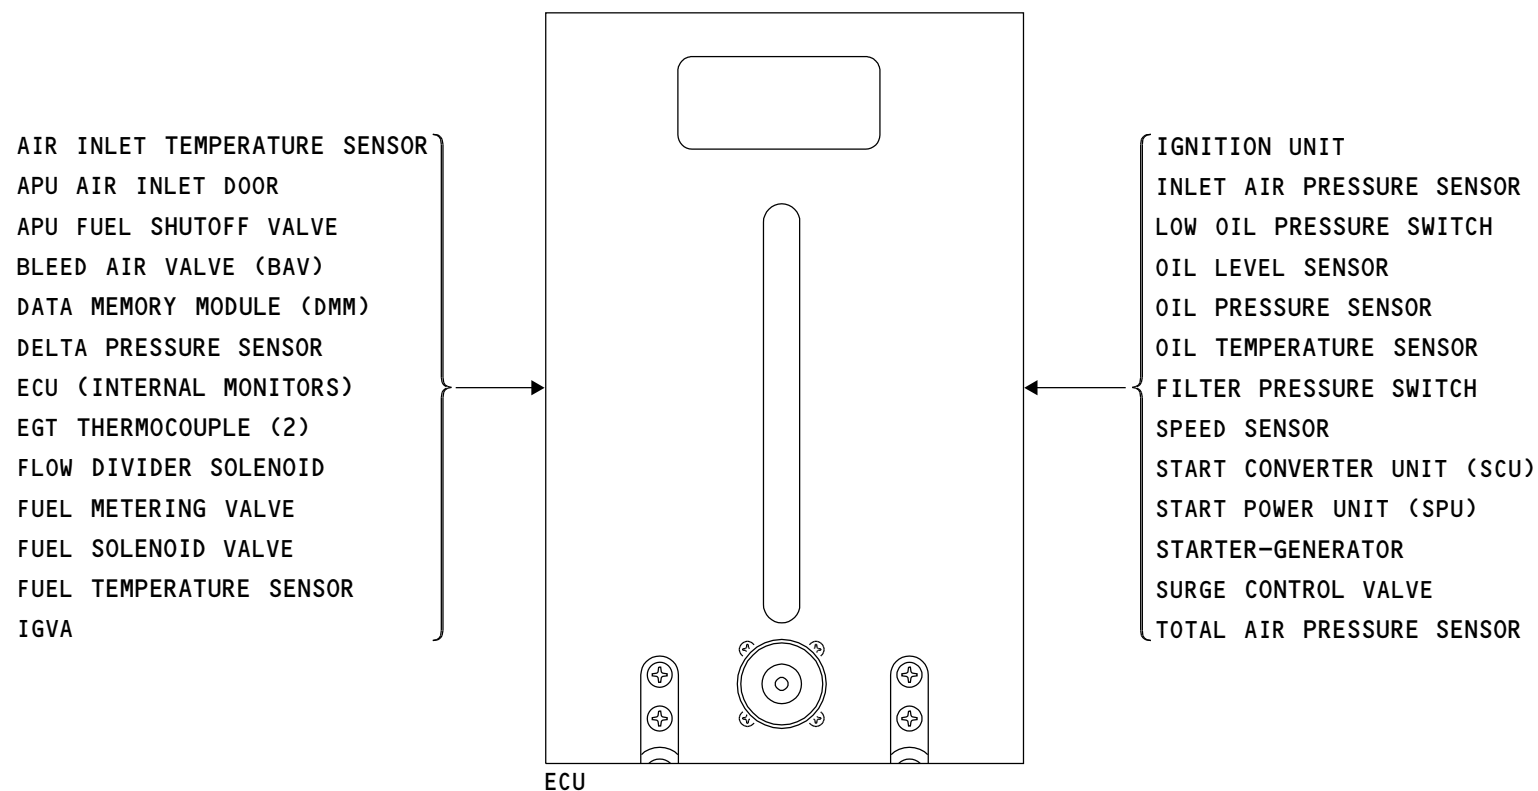

M87559 S0004631528\_V1

### APU CONTROLS - ELECTRONIC CONTROL UNIT - FAULT MONITORING

## 49-60-00

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details





## APU CONTROLS - ELECTRONIC CONTROL UNIT - PROTECTION SYSTEM

**General**

The ECU makes sure the APU operates correctly. If the ECU senses APU operation that could cause damage, the ECU shuts down the APU. This is a protective shutdown. A protective shutdown can occur anytime during APU start and operation. The ECU keeps protective shutdown data in memory. You use the CDU to get this data.

The ECU makes the maintenance light on the AC systems, generator and APU module come on if the APU requires servicing or maintenance. You can use the APU with the maintenance light on.

**Protective Shutdown**

The ECU uses protective shutdown logic to automatically shutdown the APU. You know the ECU did a protective shutdown if the fault or overspeed lights come on. The ECU also does a protective shutdown and the low oil pressure (LOP) light comes on if oil pressure is too low when the APU speed is more than 95%. These lights are on the AC systems, generator, and APU module. When the ECU does a protective shutdown, the master caution and APU annunciator light on the P7 panel also come on.

The APU protective shutdown lights go off when you move the APU switch to OFF and back to ON with APU speed less than 7 percent or when the ECU de-energizes. The ECU de-energizes five minutes after these condition occur:

- APU switch in OFF position
- APU CDU BITE is off
- APU fuel shutoff valve is closed.

If the fuel shutoff valve fails in the open position, the ECU will not de-energize. This causes the FAULT light to be on until you move the battery switch to the off position.

These are the protective shutdowns that cause a fault light:

- APU fuel valve shutdown
- DC powerloss shutdown
- ECU shutdown

- Fire shutdown
- Inlet door shutdown
- Inlet overheat shutdown
- Loss of EGT shutdown
- Loss of speed shutdown
- No acceleration shutdown
- No APU rotation shutdown
- No flame shutdown
- Oil filter shutdown
- Oil temperature shutdown
- Overtemperature shutdown
- Reverse flow shutdown
- Sensor failure
- Underspeed shutdown
- Shorted rotating diode

These are the protective shutdowns that cause an overspeed light:

- Overspeed shutdown
- Overspeed protection.

A low oil pressure protective shutdown causes the low oil pressure light to come on.

During a protective shutdown, these APU and airplane system changes occur:

- Fuel solenoid valve closes
- Fuel control unit metering valve closes
- APU light comes on
- Remove ready to load signal (RTL)
- Igniter de-energizes, if energized
- IGVs close
- SCV opens

**49-60-00**

EFFECTIVITY

AKS ALL

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

## APU CONTROLS - ELECTRONIC CONTROL UNIT - PROTECTION SYSTEM

- APU fuel shutoff valve closes
- APU inlet door closes.

The fuel shutoff valve and inlet door start to close when the APU speed decreases to 30 percent on all shutdowns except FIRE and OVERSPEED. The fuel shutoff valve and inlet door begin to close as soon as a FIRE or OVERSPEED shutdown begins.

### Protective Shutdown Logic

An APU fuel valve shutdown occurs if the ECU commands the fuel shutoff valve closed and the ECU does not get a closed signal 29 seconds after the command. This fault makes the FAULT light come on and stay on until the fuel valve closes or you put the battery switch to the OFF position.

A DC powerloss shutdown occurs if ECU power is lost for more than 50 milliseconds and APU speed is more than 7 percent.

An ECU shutdown occurs when a failure of any ECU component that does not let the ECU detect or control APU operations. An example of this is a failure of the fuel torque motor driver.

A fire shutdown occurs if you pull one of the APU fire handles or if the fire detection system detects a fire.

An inlet door shutdown occurs if the ECU commands inlet door open and the ECU does not get an open signal from the inlet door position switch in 30 seconds. An inlet door shutdown also occurs if the door open signal is lost for 1 second after APU speed is more than 7 percent.

An inlet overheat shutdown occurs if the compressor inlet temperature is more than 350F (180C) for 3 seconds.

A loss of EGT shutdown occurs if both EGT thermocouples fail. Loss of one EGT thermocouple does not shutdown the APU.

A loss of speed shutdown occurs if both speed sensing circuits fail. Loss of one speed circuit does not shutdown the APU. A speed circuit includes the speed sensor, aircraft wiring and the ECU.

A no acceleration shutdown occurs if, after ignition and before 95 percent, acceleration is less than 0.2 percent per second for 12.5 seconds.

A no APU rotation shutdown occurs if speed is less than 7 percent 20 seconds after the ECU gives the start command to the SCU.

A no flame shutdown occurs if EGT change is less than 100F (38C) 23 seconds after the ECU commands the fuel solenoid valve open.

An oil filter shutdown occurs if these conditions occur:

- Oil temperature is more than 100F (38C)
- Both main engines are off for more than 90 seconds
- Airplane is on ground
- Starter-Generator Oil filter is clogged for more than 5 seconds.

A oil temperature shutdown occurs if the oil temperature is more than 300°F (149°C) for 10 seconds and the sensor is good.

An overtemperature shutdown occurs if the turbine inlet temperature or exhaust gas temperature goes too high. When APU speed is above 95 percent, the maximum turbine inlet temperature is 2200F (1204C). The ECU uses exhaust gas temperature to calculate turbine inlet temperature. When APU speed is less than 95 percent, the EEC uses these values to find the maximum exhaust gas temperature:

- APU speed
- Inlet temperature (T2)
- Inlet pressure (P2).

A reverse flow shutdown occurs if load compressor air flow decreases to approximately zero for 6 seconds. The ECU commands the BAV closed when the air flow decreases to approximately zero for one second. With the BAV closed, bleed air can not reverse flow from the airplane to the APU load compressor. This prevents most reverse flow shutdowns.

A sensor failure shutdown occurs if the inlet temperature (T2) or the oil temperature sensor fails and the airplane is on the ground.

An underspeed shutdown occurs if these conditions occur for 10 seconds:

- APU acceleration is less than 0.5 percent per second
- APU speed is less than 85 percent

# 49-60-00

EFFECTIVITY

AKS ALL

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

**APU CONTROLS - ELECTRONIC CONTROL UNIT - PROTECTION SYSTEM**

- APU is not starting.
- The starter has a shorted rotating diode.

An overspeed protection shutdown occurs if the APU fails the overspeed circuit test. The ECU does the overspeed circuit test during APU shutdown.

An overspeed protection shutdown also occurs if the fuel solenoid valve fails in the open position. The fuel solenoid valve fails in the open position if these conditions occur:

- Power is removed from fuel solenoid valve for 10 seconds
- APU speed is more than 90 percent.

An overspeed shutdown occurs if the APU speed is more than 106 percent.

An oil pressure shutdown occurs if the APU is on speed and oil pressure is low for 20 seconds.

**MAINT Light**

The ECU uses the MAINT light to tell you when the starter-generator has a shorted rotating diode. Repair the starter-generator as soon as possible. You will not be able to start the APU until you enter STARTOK on the current status page scratch pad.

The ECU also uses the MAINT light to tell you the APU oil level is at low oil quantity (LOQ). When the oil level is at LOQ, there is enough oil in the APU for 30 - 50 hours of operation at the maximum oil consumption rate before the APU will shutdown because of low oil pressure. However, if there is an oil leak, the APU will not operate the 30 - 50 hours before a low oil pressure shutdown occurs. Add oil to the APU as soon as possible.

You can also use the ECU to deactivate the MAINT light because of incorrect low oil quantity (LOQ) indication. It is possible to deactivate the MAINT light.


**49-60-00**

EFFECTIVITY

AKS ALL

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

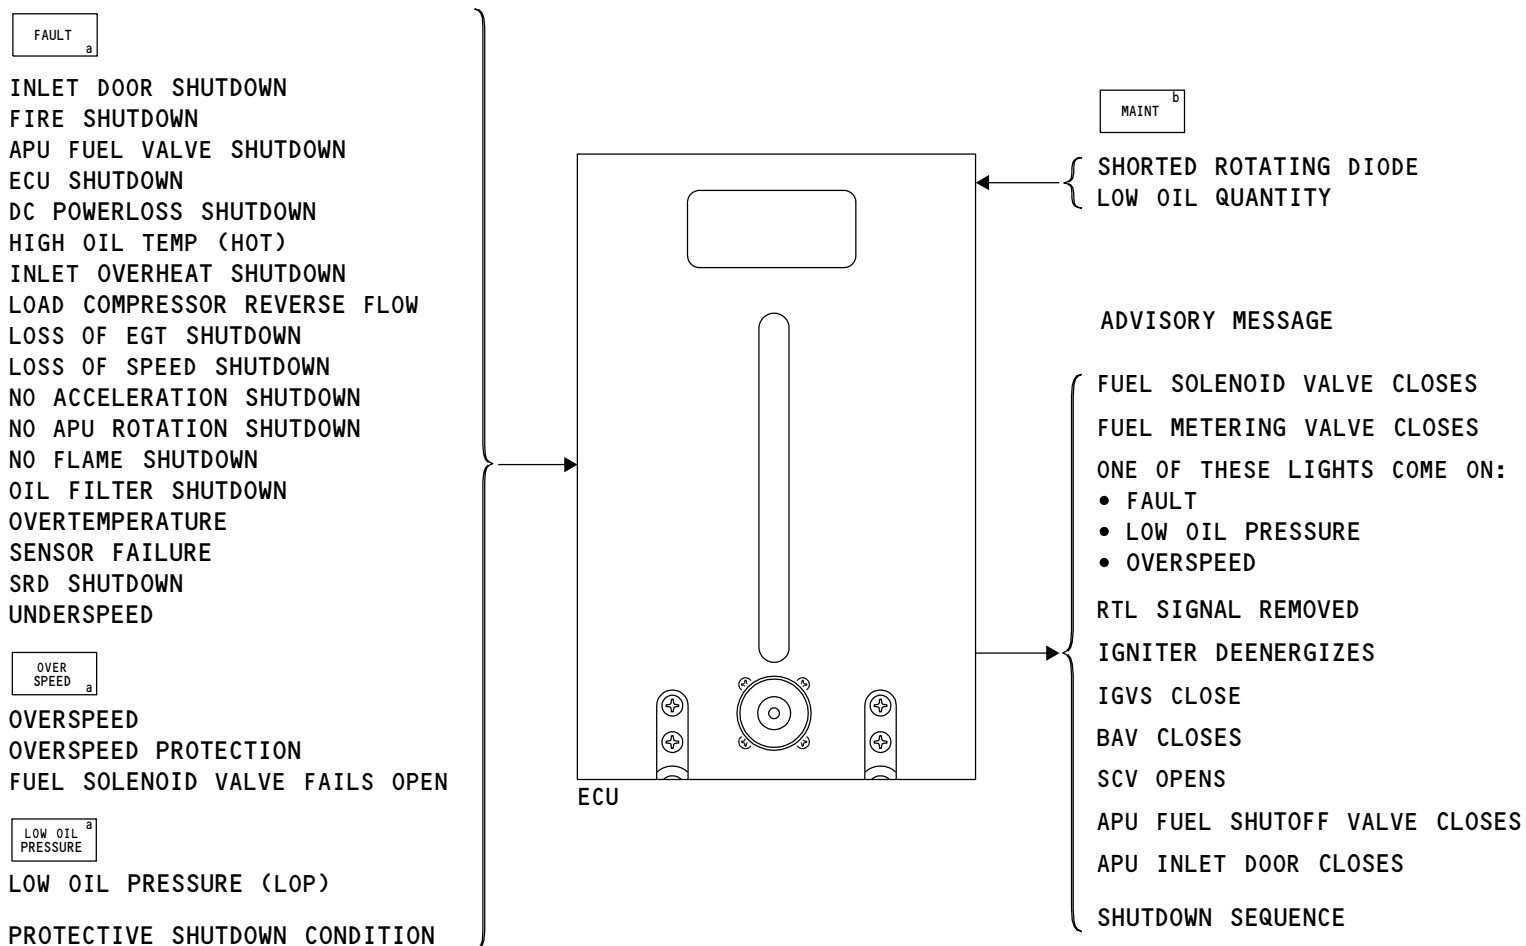

1551468 S0000285323\_V1

### APU CONTROLS - ELECTRONIC CONTROL UNIT - PROTECTION SYSTEM

## 49-60-00

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

**APU CONTROLS - ELECTRONIC CONTROL UNIT - TRAINING INFORMATION POINTS - MAIN MENU****General**

The APU built in test equipment (BITE) data shows on the control display unit (CDU).

To see the APU BITE TEST page you select the line select key next to APU on the MAINT BITE INDEX. To return to the MAINT BITE INDEX, you select the line select key next to INDEX. You also can select the INIT/REF key from any screen in APU CDU BITE to return to the MAINT BITE INDEX.

It can take up to 10 seconds for the first APU screen to show on the CDU. This delay occurs because the ECU does a power-up test each time it is energized.

**APU Display on the CDU**


APU data shows on one of these six pages:

- Current status
- Fault history
- Maintenance history
- Ident / config
- Input monitoring
- Oil quantity.

You see the MAIN MENU when you select APU from the MAINT BITE INDEX if the last APU shutdown was normal and the APU MAINT light is off.

You see the FAULT HISTORY page in place of the MAIN MENU if the last APU shutdown was a protective shutdown. FAULT HISTORY page gives the cause for the protective shutdown.

You see the CURRENT STATUS page in place of the MAIN MENU if the APU MAINT light is on and the last APU shutdown was normal. The CURRENT STATUS page gives the cause of the MAINT light.

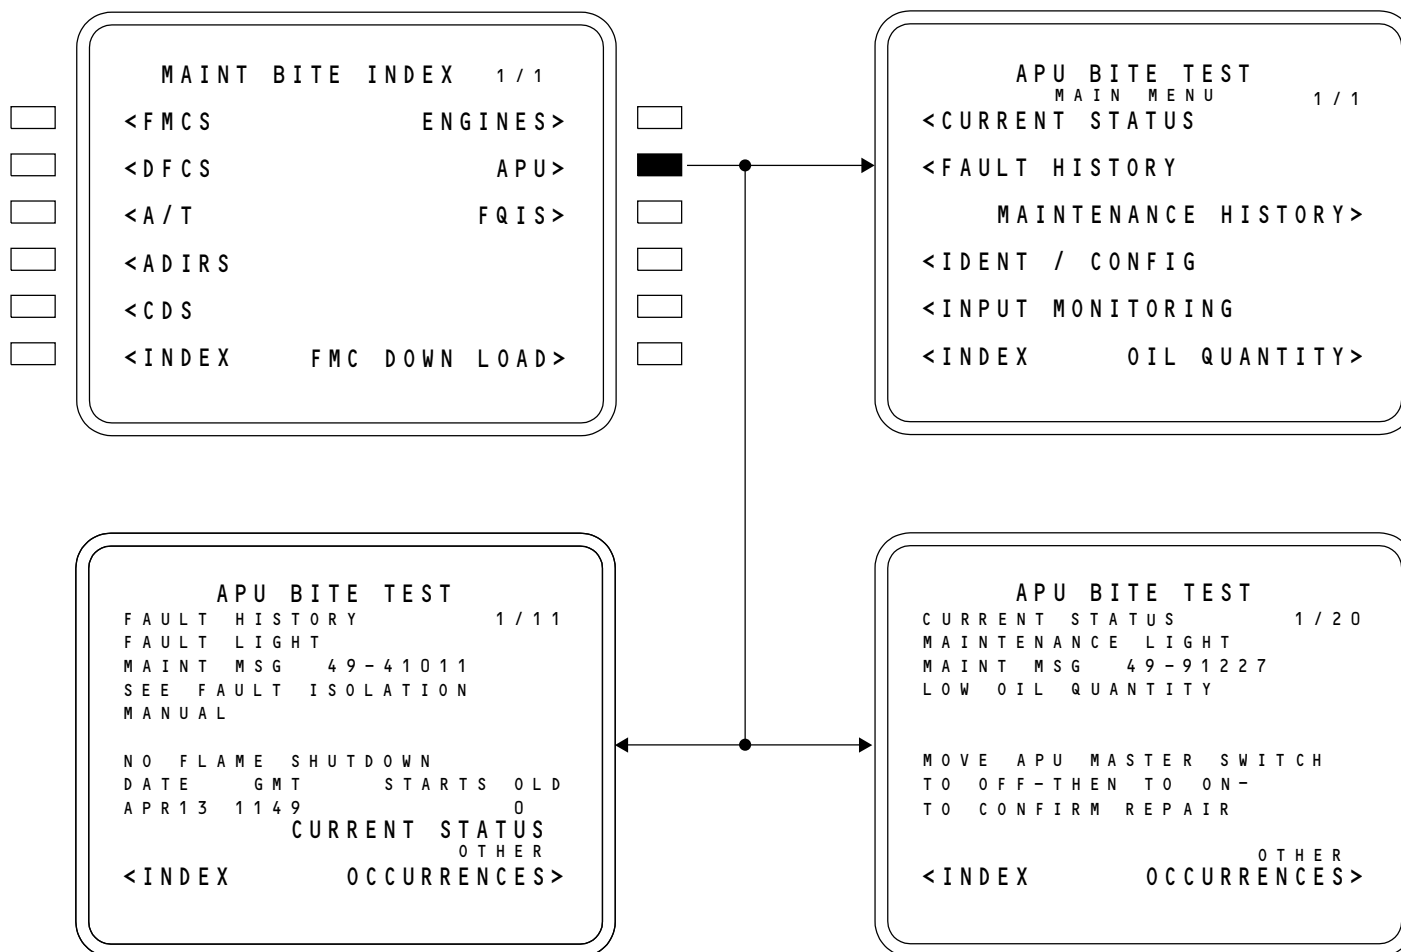

M87563 S0004631532\_V1

### APU CONTROLS - ELECTRONIC CONTROL UNIT - TRAINING INFORMATION POINTS - MAIN MENU

## 49-60-00

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details



THIS PAGE IS INTENTIONALLY LEFT BLANK

**49-60-00**

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

**APU CONTROLS - ELECTRONIC CONTROL UNIT - TRAINING INFORMATION POINTS - CURRENT STATUS****General**

The CURRENT STATUS page of APU CDU BITE shows the maintenance message the ECU finds for the last APU cycle. The maintenance message stays in the current status until the ECU tests the condition again and finds that it is satisfactory. There are over 200 possible maintenance messages.

The scratch pad is used to enter STARTOK to allow an APU start after any fault that inhibits the next APU start. The faults that inhibit the next APU start are:

- Shorted rotating diode
- Fuel control unit shows solenoid failed on
- ECU internal failure

One maintenance message shows on each page. The CDU shows the page number of the maintenance message in the upper right corner of the display followed by the total number of pages in CURRENT STATUS.

Select the line select key next to OTHER OCCURRENCES to see a list of other APU start attempts with the same maintenance message. If there are no other APU start attempts with the same maintenance message, the ECU shows NO OTHER OCCURRENCES when you select the OTHER OCCURRENCES line select key.

Select the line select key next to INDEX to go to the APU MAIN MENU.

The CURRENT STATUS page gives the following information about the maintenance message:

- Flight deck effect
- Maintenance message number
- Description of the maintenance message
- Instructions for how to verify the repair if the ECU can not test the condition in the current mode.

These are the possible flight deck effects:

- APU GEN OFF BUS LIGHT
- FAULT LIGHT

- LOW OIL PRESSURE LIGHT
- MAINT LIGHT
- NO BLEED
- NO FLIGHT DECK EFFECT
- OVERSPEED LIGHT
- UNKNOWN FLT DECK EFFECT

**APU GEN OFF BUS LIGHT**

The flight deck effect shows APU GEN OFF BUS LIGHT if the maintenance message causes the GEN OFF BUS light to come on.

**FAULT LIGHT**

The flight deck effect shows FAULT LIGHT if the maintenance message causes the FAULT light to come on.

**LOW OIL PRESSURE LIGHT**

The flight deck effect shows LOW OIL PRESSURE LIGHT if the maintenance message causes the LOW OIL PRESSURE light to come on. During start the LOW OIL PRESSURE LIGHT is on.

**MAINT LIGHT**

The flight deck effect shows MAINT LIGHT if the maintenance message causes the MAINT LIGHT to come on.

**NO BLEED**

The flight deck effect shows NO BLEED if the ECU disables APU bleed.

**NO FLIGHT DECK EFFECT**

The flight deck effect shows NO FLIGHT DECK EFFECT if the maintenance message does not cause a flight deck effect.

**49-60-00**

EFFECTIVITY  
AKS ALL

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details





APU CONTROLS - ELECTRONIC CONTROL UNIT - TRAINING INFORMATION POINTS - CURRENT STATUS


OVERSPEED LIGHT

The flight deck effect shows OVERSPEED LIGHT if the maintenance message causes the OVERSPEED light to come on.

UNKNOWN FLT DECK EFFECT

The flight deck effect shows UNKNOWN FLT DECK EFFECT if the maintenance message does not always cause a flight deck effect.

EFFECTIVITY	
AKS ALL	

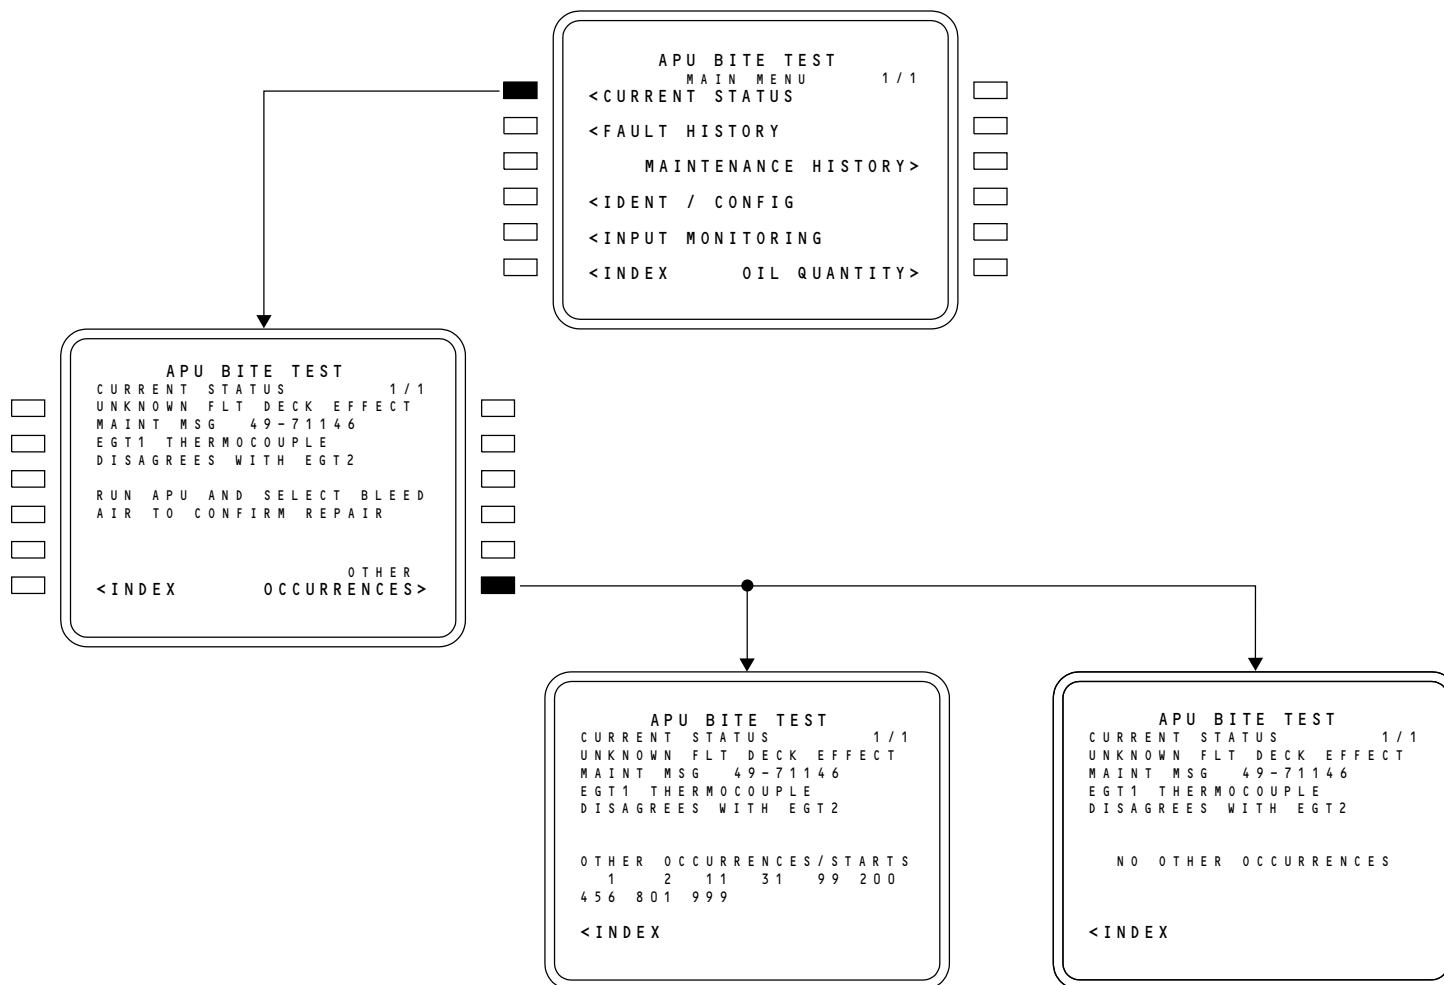

M87564 S0004631534\_V1

## APU CONTROLS - ELECTRONIC CONTROL UNIT - TRAINING INFORMATION POINTS - CURRENT STATUS

49-60-00

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details



## APU CONTROLS - ELECTRONIC CONTROL UNIT - TRAINING INFORMATION POINTS - FAULT HISTORY

**General**

The FAULT HISTORY page of APU CDU BITE shows the cause for an APU protective shutdown. THE ECU stores up to 30 protective shutdowns that are up to 999 starts old.

Each occurrence of a protective shutdown shows on a page. The CDU shows the page number of the protective shutdown in the upper right corner of the display followed by the total number of pages in FAULT HISTORY.

Select the NEXT PAGE button on the CDU key pad to go to the next page. Select the PREV PAGE on the CDU key pad to go to the previous page.

If you see > next to CURRENT STATUS the ECU found the maintenance message that causes this shutdown on a CURRENT STATUS page. To see the current status page select CURRENT STATUS.

Select OTHER OCCURRENCES to see a list of other APU start attempts with the same protective shutdown. If there are no other APU start attempts with the same protective shutdown, the ECU shows NO OTHER OCCURRENCES when you select the OTHER OCCURRENCES line select key.

Select INDEX to go to the MAIN MENU.

The FAULT HISTORY page gives the following information about the protective shutdown:

- Flight deck effect
- Maintenance message number(s)
- Description of up to two maintenance messages that the ECU found causes the protective shutdown
- Protective shutdown name
- Date of the shutdown
- Time of the shutdown in Greenwich mean time
- Start attempts old.

These are the possible flight deck effects:

- FAULT LIGHT

- LOW OIL PRESSURE LIGHT
- OVERSPEED LIGHT.

**FAULT LIGHT**

The flight deck effect shows FAULT LIGHT if the maintenance message causes the FAULT light to come on.

**LOW OIL PRESSURE LIGHT**

The flight deck effect shows LOW OIL PRESSURE LIGHT if the maintenance message causes the LOW OIL PRESSURE light to come on.

**OVERSPEED LIGHT**


The flight deck effect shows OVERSPEED LIGHT if the maintenance message causes the OVERSPEED light to come on.

**49-60-00**

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

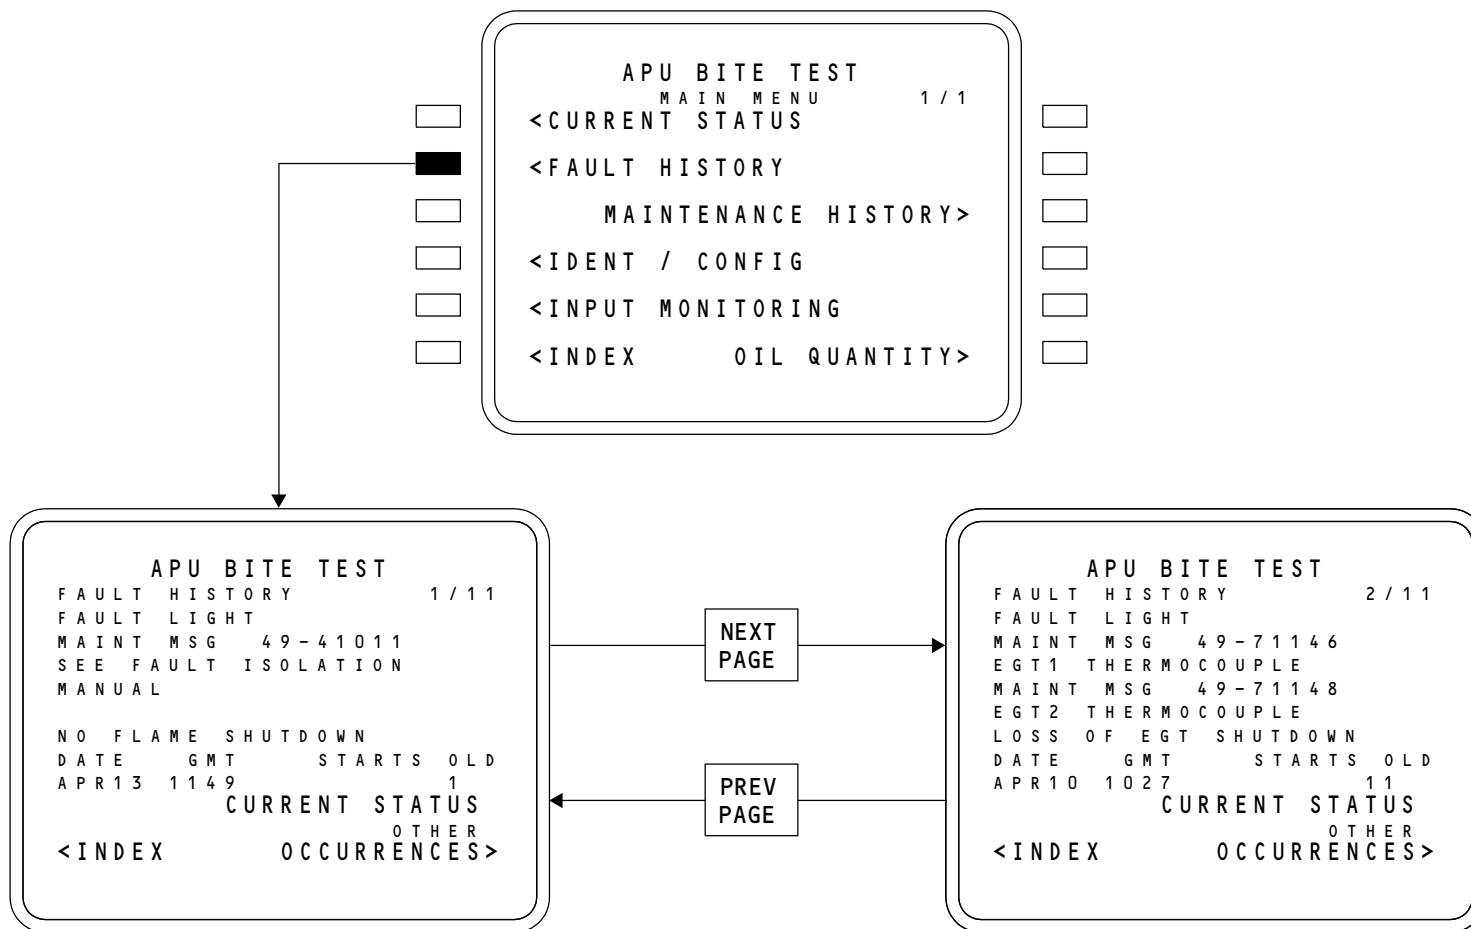

M87565 S0004631536\_V1

## APU CONTROLS - ELECTRONIC CONTROL UNIT - TRAINING INFORMATION POINTS - FAULT HISTORY

49-60-00

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details



THIS PAGE IS INTENTIONALLY LEFT BLANK

**49-60-00**

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details



## APU CONTROLS - ELECTRONIC CONTROL UNIT - TRAINING INFORMATION POINTS - MAINTENANCE HISTORY

**General**

The MAINTENANCE HISTORY page of APU BITE TEST shows maintenance messages that are current or have occurred in the past. The ECU stores up to 99 maintenance messages that are up to 999 start attempts old.

Each occurrence of a maintenance message shows on a page. The CDU shows the current page number in the upper right corner of the display. After this number you see the total number of pages in MAINTENANCE HISTORY.

If you see > next to CURRENT STATUS the ECU found the maintenance message on a CURRENT STATUS page. To see the current status page select the line select key next to CURRENT STATUS.

The MAINTENANCE HISTORY page gives the following information about the maintenance messages:

- Flight deck effect
- Maintenance message number
- Description of the maintenance message
- Date maintenance message occurred
- Time maintenance message occurred in Greenwich Mean Time
- Start attempts old.

These are the possible flight deck effects:

- APU GEN OFF BUS LIGHT
- FAULT LIGHT
- LOW OIL PRESSURE LIGHT
- MAINT LIGHT
- NO BLEED
- NO FLIGHT DECK EFFECT
- OVERSPEED LIGHT
- UNKNOWN FLT DECK EFFECT.

Select the line select key next to OTHER OCCURRENCES to see a list of other APU start attempts with the same maintenance message. If there are no other APU start attempts with the same condition, the ECU shows NO OTHER OCCURRENCES when you select the OTHER OCCURRENCES line select key.

**APU GEN OFF BUS LIGHT**

The flight deck effect shows APU GEN OFF BUS LIGHT if the maintenance message causes the APU GEN OFF BUS light to come on.

**FAULT LIGHT**

The flight deck effect shows FAULT light if the maintenance message causes the FAULT light to come on.

**LOW OIL PRESSURE LIGHT**

The flight deck effect shows LOW OIL PRESSURE light if the maintenance message causes the LOW OIL PRESSURE light to come on.

**MAINT LIGHT**

The flight deck effect shows MAINT LIGHT if the maintenance message causes the MAINT LIGHT to come on.

**NO BLEED**

The flight deck effect shows NO BLEED if APU bleed is not available because of a failure sensed by the ECU.

**NO FLIGHT DECK EFFECT**

The flight deck effect shows NO FLIGHT DECK EFFECT if the maintenance message does not cause a flight deck effect.

**OVERSPEED LIGHT**

The flight deck effect shows OVERSPEED LIGHT if the maintenance message causes the OVERSPEED light to come on.

**49-60-00**

EFFECTIVITY

AKS ALL

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details



APU CONTROLS - ELECTRONIC CONTROL UNIT - TRAINING INFORMATION POINTS - MAINTENANCE HISTORY

UNKNOWN FLT DECK EFFECT

The flight deck effect shows UNKNOWN FLT DECK EFFECT if the maintenance message does not always cause a flight deck effect.


49-60-00-012

EFFECTIVITY	
AKS ALL	

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

49-60-00

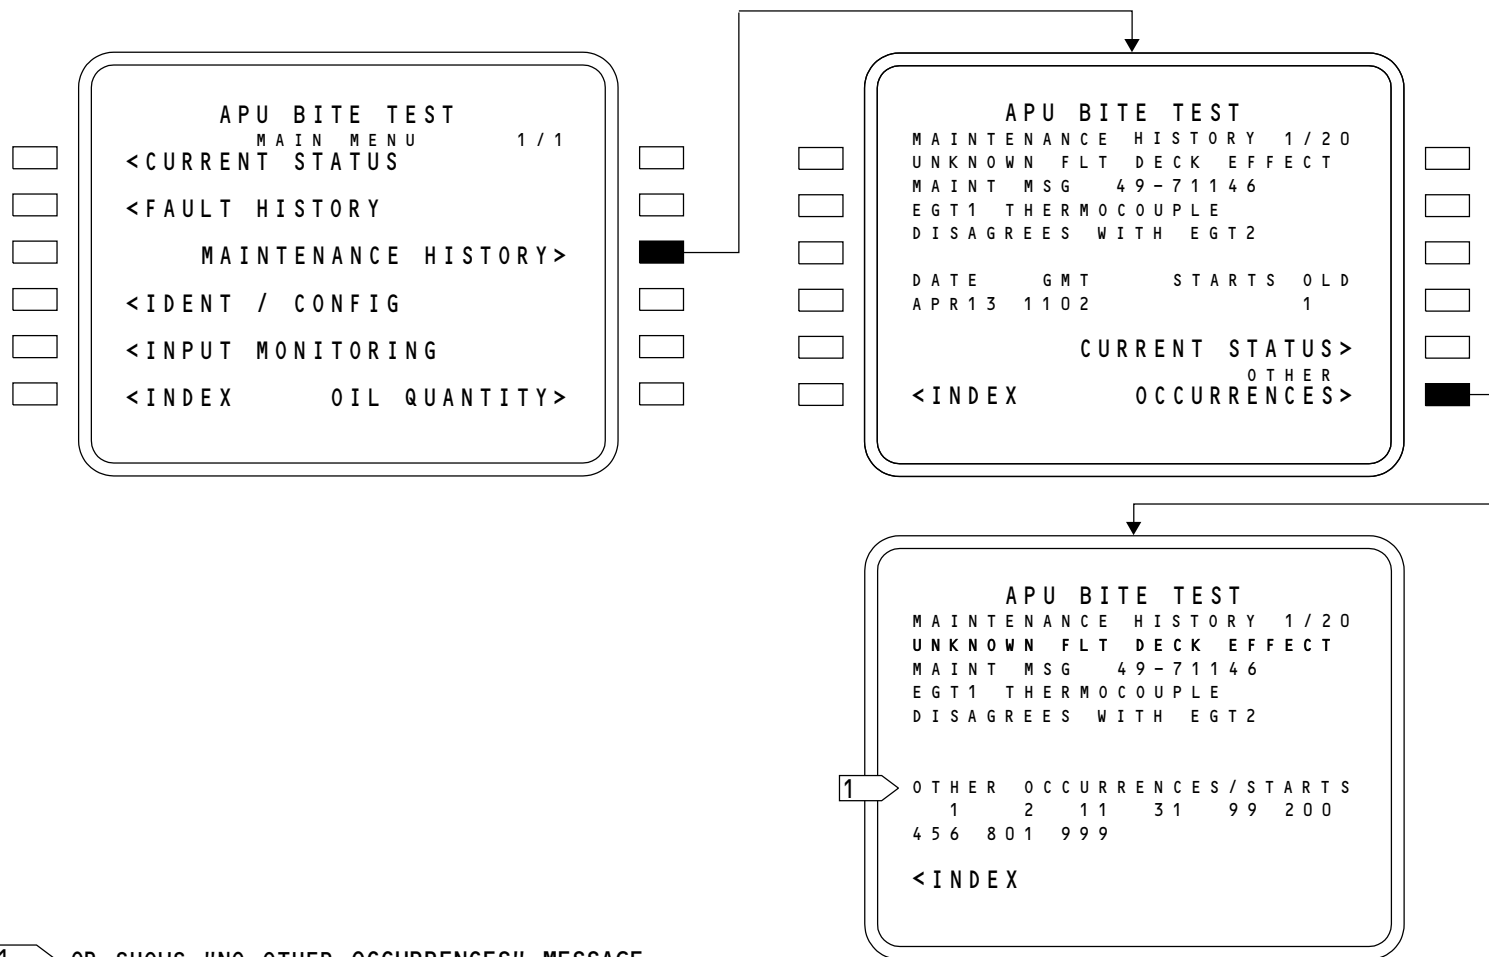

M87566 S0004631538\_V1

APU CONTROLS - ELECTRONIC CONTROL UNIT - TRAINING INFORMATION POINTS - MAINTENANCE HISTORY

49-60-00

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details



**APU CONTROLS - ELECTRONIC CONTROL UNIT - TRAINING INFORMATION POINTS - IDENT CONFIG****General**

The IDENT/CONFIG page of APU BITE TEST shows APU and ECU configuration and identification data. There are two pages of this data. Page one shows the APU data. Page two shows ECU data.

The CDU shows the page number in the upper right corner of the display. Next to this number you see the total number of pages in IDENT/CONFIG.

**IDENT/CONFIG Page 1**

The IDENT/CONFIG page 1 gives this APU identification and configuration data:

- APU serial number
- APU hours
- APU cycles
- APU hours since installation on airplane.

You reset the APU hours since installation on the airplane when you select the line select key next to RESET HOURS SINCE INSTALLATION. You should reset the hours since installation when you replace the APU.

**IDENT /CONFIG Page 2**

The IDENT/CONFIG page 2 gives this data about the ECU:


- ECU part number
- ECU serial number
- ECU operational software part number
- Maintenance light for low oil quantity on/off
- Ice logic on/off

You select the line select key next to DATA MEMORY MODULE to see the data stored in the data memory module (DMM). There are 12 pages of DMM data. The DMM records data about the health of the APU. This data is used during overhaul and is not needed for line maintenance. The DMM data is not shown here.

**49-60-00****EFFECTIVITY**  
**AKS ALL**

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

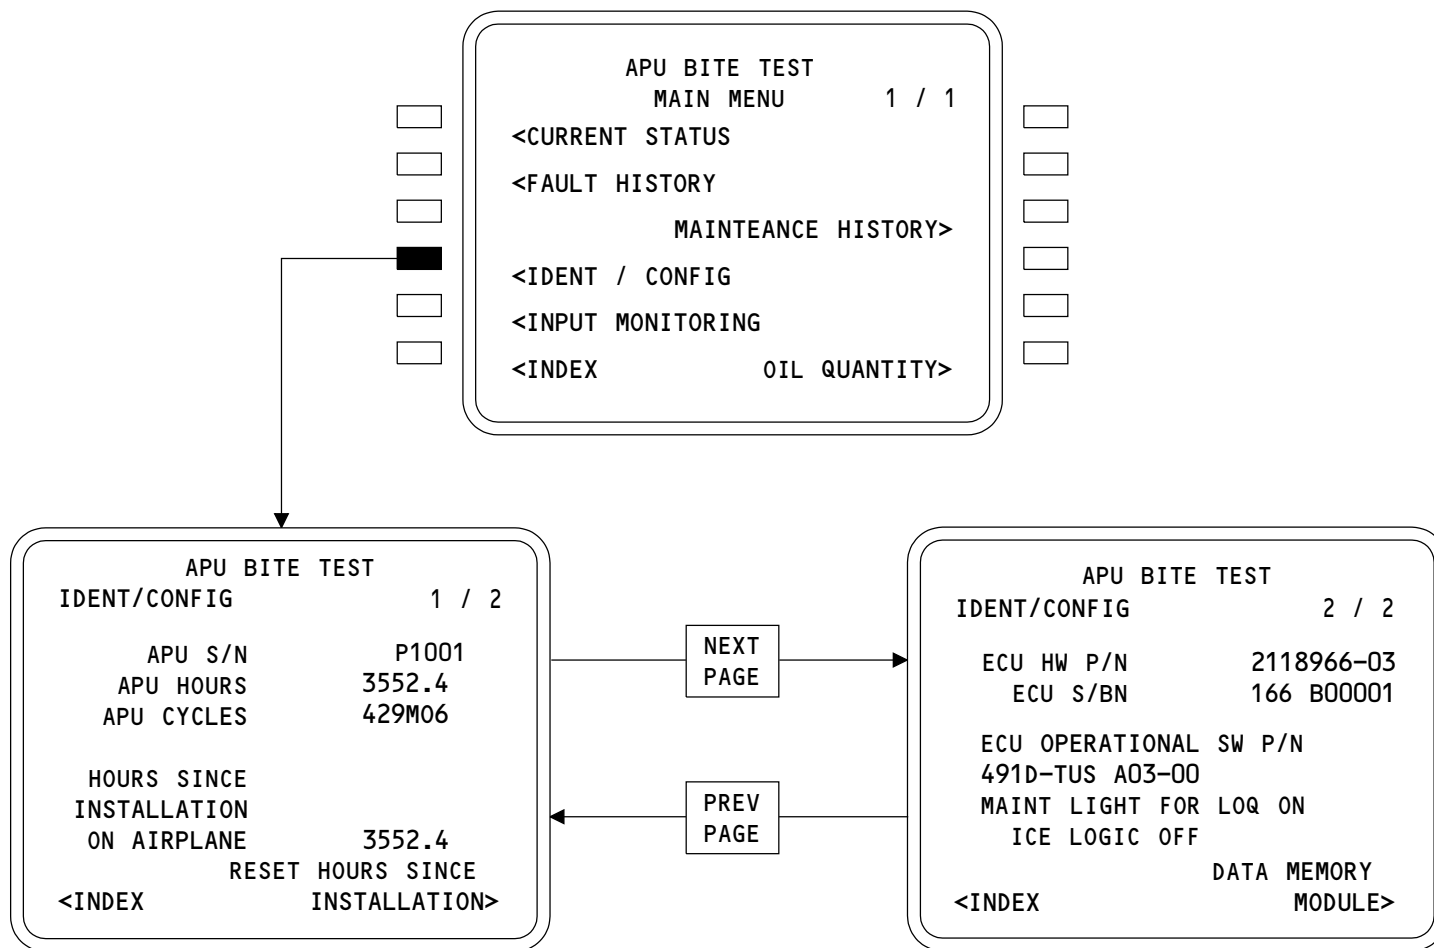

1551469 S0000285325\_V1

APU CONTROLS - ELECTRONIC CONTROL UNIT - TRAINING INFORMATION POINTS - IDENT CONFIG

49-60-00

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

**APU CONTROLS - ELECTRONIC CONTROL UNIT - TRAINING INFORMATION POINTS - INPUT MONITORING****General**

The INPUT MONITORING page of APU BITE TEST shows APU and airplane interface data. You use this data for troubleshooting of the APU and APU interfaces.

The CDU shows the page number in the upper right corner of the display. The second number is the total number of pages in INPUT MONITORING.

**INPUT MONITORING Page 1**

INPUT MONITORING page 1 shows this APU data:

- SPEED (the speed the APU turns)
- EGT (exhaust gas temperature)
- IGV POSITION (inlet guide vane position with 90 degrees as open)
- SCV POSITION (surge control valve position with 90 degrees as full closed)
- DELTA PRESS (differential pressure in bleed duct)
- TOTAL PRESS (total pressure in bleed duct)
- INLET PRESS (APU air inlet pressure)
- INLET TEMP (APU air inlet temperature)
- FUEL TMC (fuel control unit metering valve torque motor current)
- FUEL FLOW.

**INPUT MONITORING Page 2**

INPUT MONITORING page 2 shows this APU data:

- APU Oil temperature
- FUEL TEMP (APU fuel temperature)
- GENERATOR LOAD (starter-generator load)
- START SWITCH (APU switch in START position, YES/NO)
- APU ON SWITCH (APU switch in ON position, YES/NO)
- APU OFF SWITCH (APU switch in OFF position, YES/NO)
- MES SWITCH(S) (main engine start switch positions, OFF/1/2/BOTH)

- AIR/GROUND (airplane in air or on ground, AIR/GRD)
- LEFT PACK (left pack mode, OFF/LOW/HIGH)
- RIGHT PACK (right pack mode, OFF/LOW/HIGH).

**INPUT MONITORING Page 3**

INPUT MONITORING page 3 shows this APU data:

- BLEED COMMAND SWITCH position
- APU Bleed switch position, ON/OFF)
- INLET DOOR OPEN (APU air inlet door open, YES/NO)
- DOOR NOT FULL OPEN (APU air inlet door not full open, YES/NO)
- FIRE COCKPIT (flight compartment fire handle pulled, YES/NO)
- FIRE REMOTE HANDLE (remote fire handle pulled, YES/NO)
- FIRE DETECTION (fire detected by fire detection system, YES/NO)
- AIRPLANE MODEL (600/700/800)
- BLEED AIR VALVE (bleed air valve position, OPEN/CLOSE)
- FUEL VALVE CLOSED (fuel shutoff valve in closed position, YES/NO)
- FUEL VALVE OPEN (fuel shutoff valve in open position, YES/NO).

**INPUT MONITORING Page 4**

INPUT MONITORING page 4 shows this APU data:

- READY TO LOAD (APU ready to load, YES/NO)
- START COMMAND (start command to SCU on, YES/NO)
- LOAD SHED COMMAND (load shed command on, YES/NO)
- IGNITION COMMAND (ignition command on, YES/NO)
- FUEL SOL COMMAND (fuel solenoid valve command on, YES/NO)
- BLEED SOL COMMAND (bleed air valve command on, YES/NO)
- OVERSPD INDICATOR (OVERSPEED light on, YES/NO)
- FAULT INDICATOR (FAULT light on, YES/NO)
- LOP INDICATOR (LOW OIL PRESSURE light on, YES/NO)
- MAINT INDICATOR (MAINT light on, YES/NO).


**49-60-00**

EFFECTIVITY

AKS ALL

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

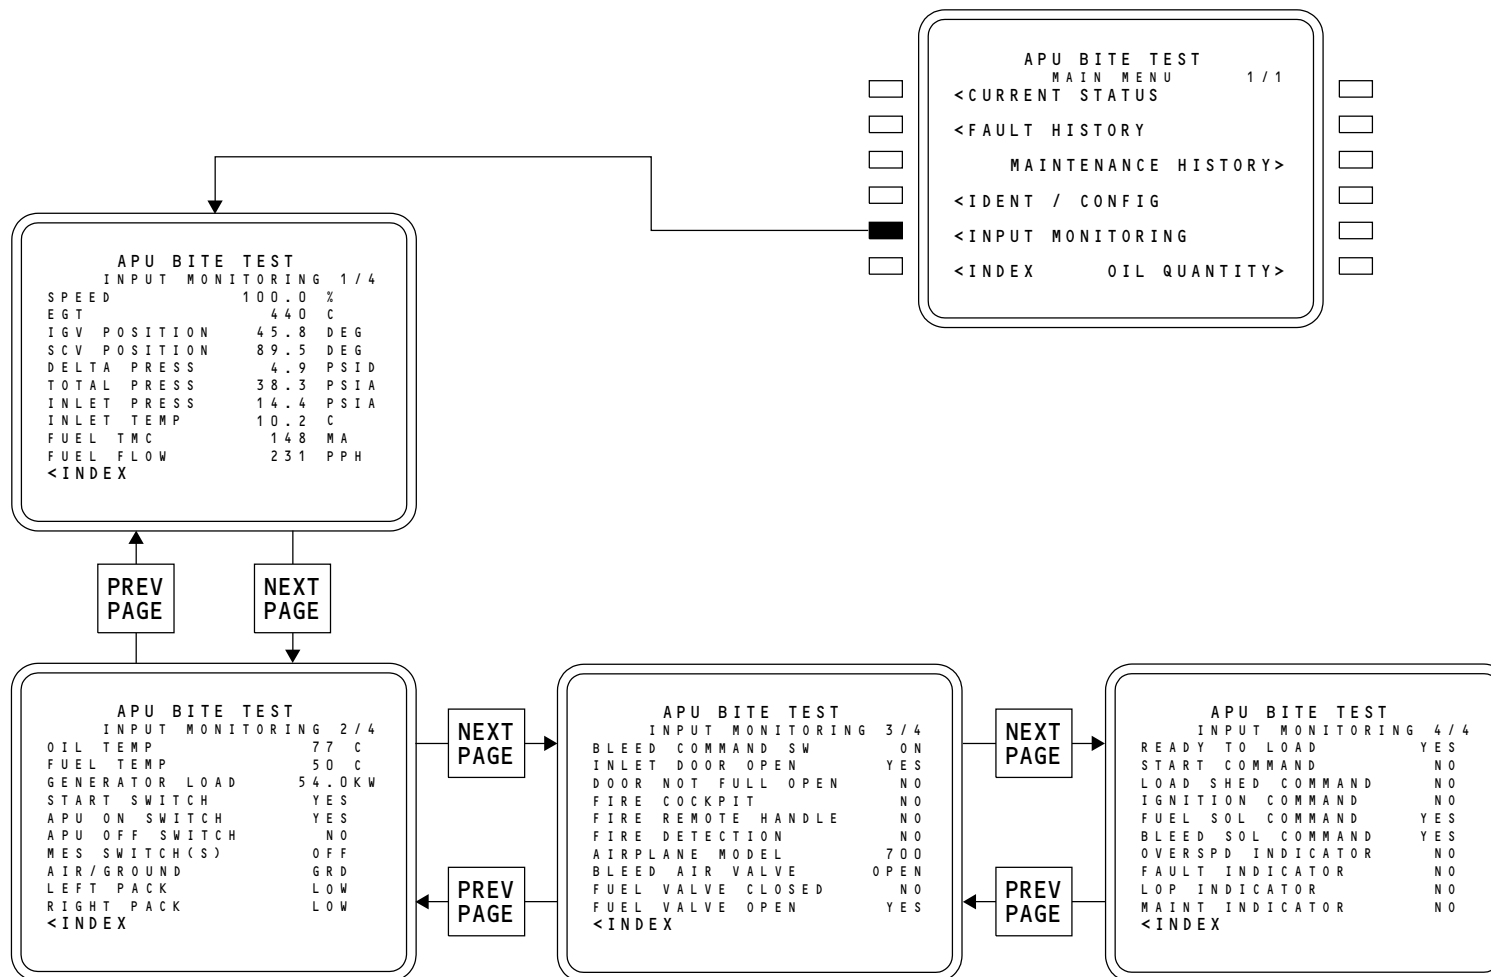

M87568 S0004631542\_V1

APU CONTROLS - ELECTRONIC CONTROL UNIT - TRAINING INFORMATION POINTS - INPUT MONITORING

49-60-00

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details



## APU CONTROLS - ELECTRONIC CONTROL UNIT - TRAINING INFORMATION POINTS - OIL QUANTITY

**General**

The OIL QUANTITY page of APU BITE TEST shows the APU oil quantity. The oil quantity page shows three APU oil levels. These levels are:

- FULL
- ADD
- LOW.

The OIL QUANTITY page of APU BITE TEST shows two status messages for the APU oil quantity. These levels are:

- WAIT
- UNKNOWN

There is approximately 171 APU hours at normal oil use rate from full on the oil level sight glass until ADD is displayed on the CDU. There is approximately 9 hours of APU operation at the maximum oil consumption rate from full on the oil level sight glass until ADD is displayed on the CDU.

ADD level first shows when the APU has approximately 60 hours of APU operation at normal oil use rate until the APU MAINT light comes on. At the maximum oil consumption rate, there is approximately 3 hours of APU operation from ADD until the APU MAINT light comes on.

LOW level first shows when there is approximately 365 hours of APU operation at normal oil use rate until the APU does a protective shutdown caused by low oil pressure. At the maximum oil consumption rate, there is approximately 19 hours of APU operation from when LOW first shows until the APU does a low oil pressure protective shutdown.

**NOTE:** The low oil quantity (LOQ) maintenance light will come on when there is enough oil in the APU for 30-50 hours of operation at the maximum oil consumption rate before the APU will shutdown because of low oil pressure.

The CDU gives the APU operation hours that the ADD or LOW message is ACTIVE.


**NOTE:** The maximum oil consumption rate is calculated with the APU oil quantity from full on the oil level sight glass to ADD on the CDU, and the longest flight possible.

The ECU checks the APU oil level when the ECU is energized or when a you begin a start and when the airplane is on the ground. The oil quantity check is done before the APU begins to rotate.

WAIT will show with a countdown from 120 seconds after the APU is shutdown. When the countdown is over or the oil quantity becomes measurable, the oil quantity will be displayed.

UNKNOWN will show when the oil quantity can't be determined. These conditions are:

- After the APU has operated for one hour.
- When in flight.
- When the APU is started in flight.
- During a sensor failure.
- When main engines and APU are operating on the ground.

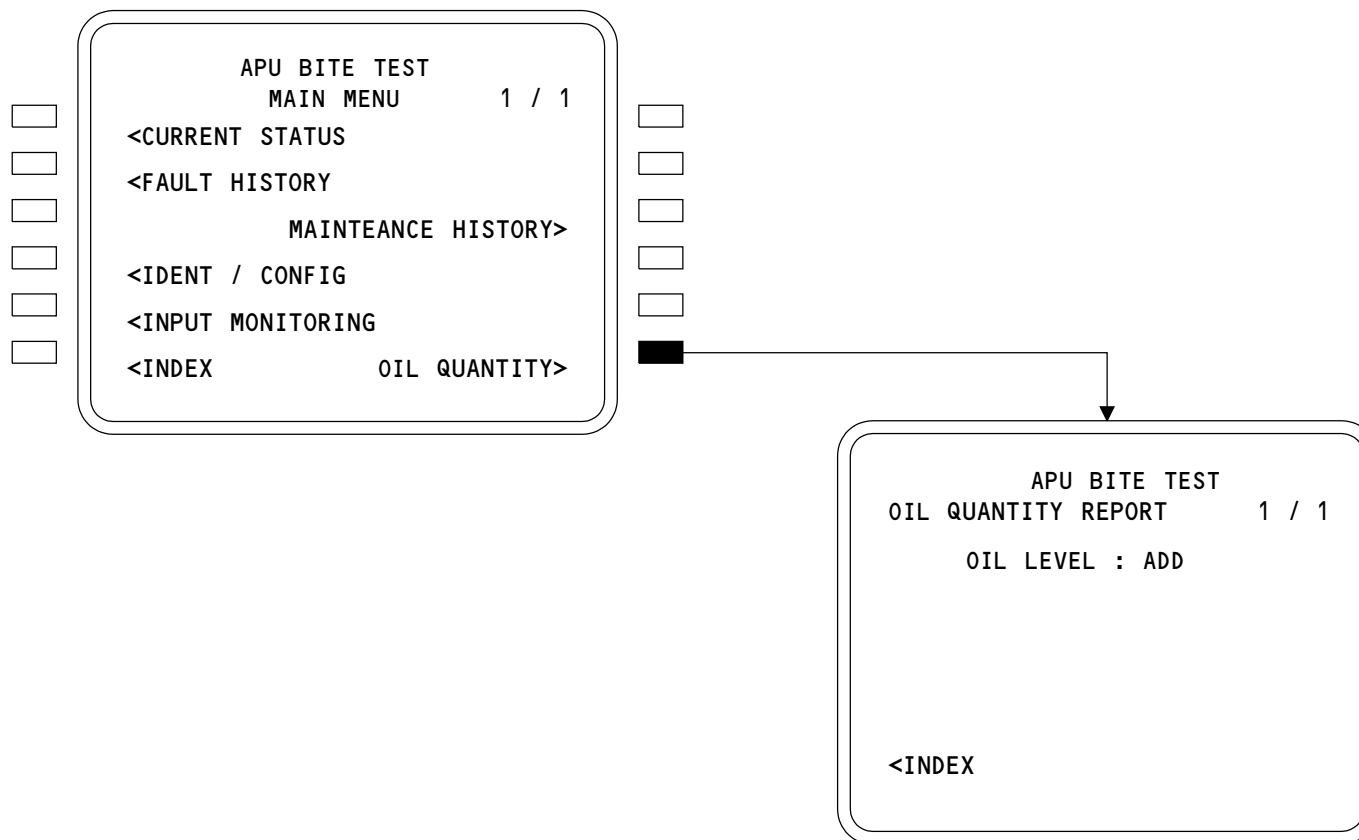

1551466 S0000285328\_V1

APU CONTROLS - ELECTRONIC CONTROL UNIT - TRAINING INFORMATION POINTS - OIL QUANTITY

**49-60-00**

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details




APU CONTROLS - ELECTRONIC CONTROL UNIT - TRAINING INFORMATION POINT - ICE LOGIC

General

The IDENT CONFIG page 2 shows the status of the ICE LOGIC for the ECU. The status messages are:

- ICE LOGIC ON
- ICE LOGIC OFF

When the ice logic is selected on, the inlet guide vanes are swept at a regular interval when the temperature is near freezing to prevent ice from forming and freezing the vanes in place. During the sweep of the inlet guide vanes, it is normal to hear a change in the APU sound.

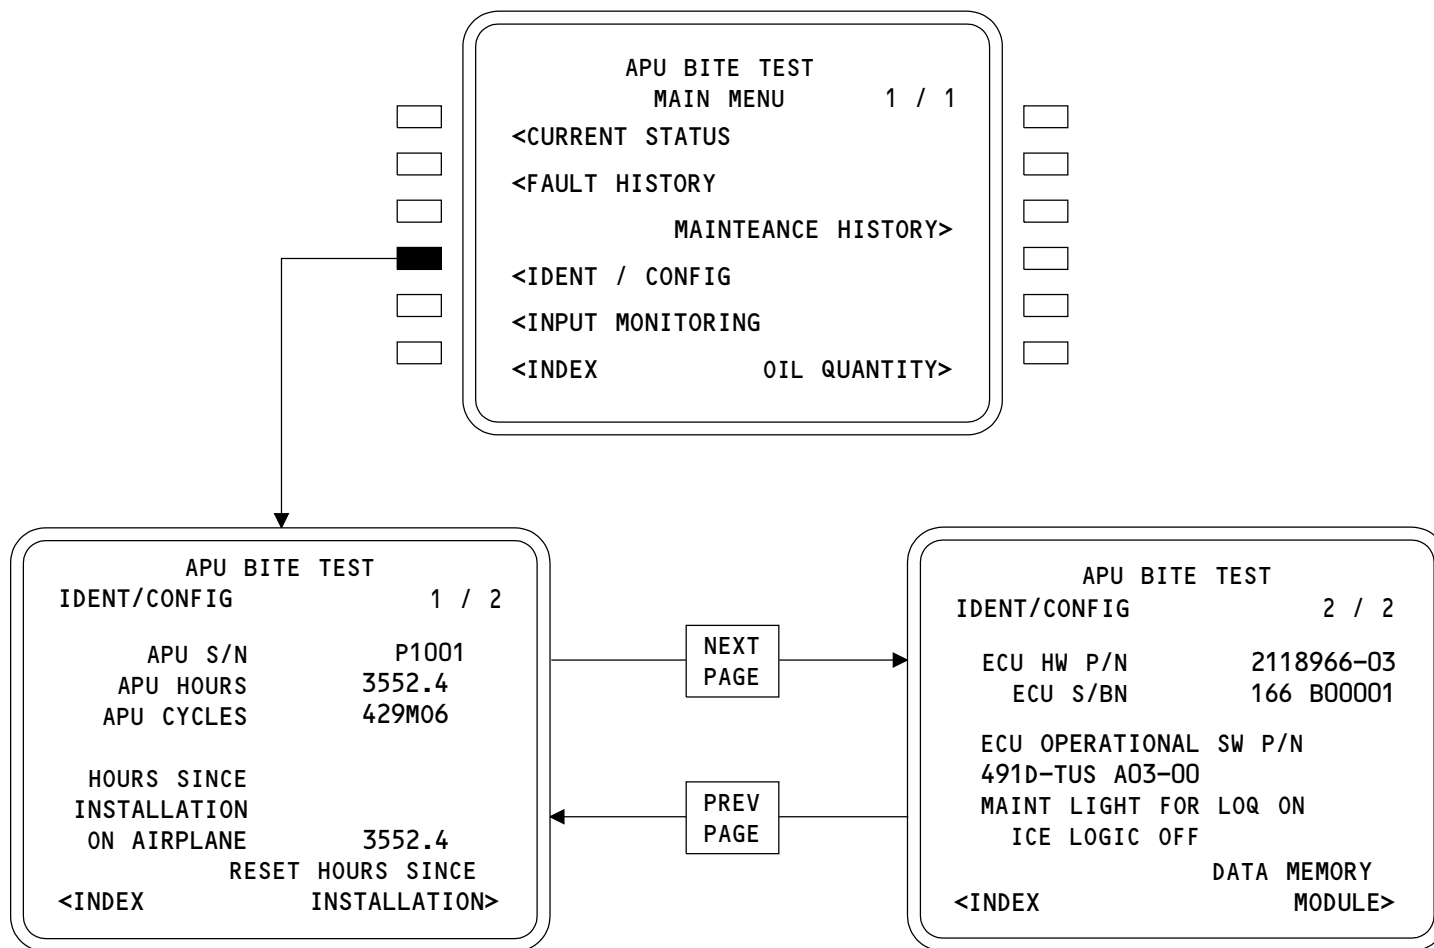

1551469 S0000285325\_V1

### APU CONTROLS - ELECTRONIC CONTROL UNIT - TRAINING INFORMATION POINTS - ICE LOGIC

# 49-60-00

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details



**APU CONTROLS - SPEED SENSOR****Purpose**

A dual-coil speed sensor measures APU shaft speed and supplies two independent speed signals to the ECU.

**Location**

The speed sensor is on the right side of the compressor case.

**Functional Description**

The speed sensor is a variable reluctance motion sensor. The sensor sends a signal with a frequency proportional to engine speed. The ECU selects the higher of the two signals for control and display functions.


**Control**

The ECU uses engine speed to control these functions:

- Ignition system control
- Starter system control
- Fuel system control
- APU speed control
- Overspeed automatic shutdown protection
- No-acceleration automatic shutdown protection.
- APU ready-to-load (RTL).

**Indications**

APU engine speed shows on the control display unit (CDU) input monitoring.

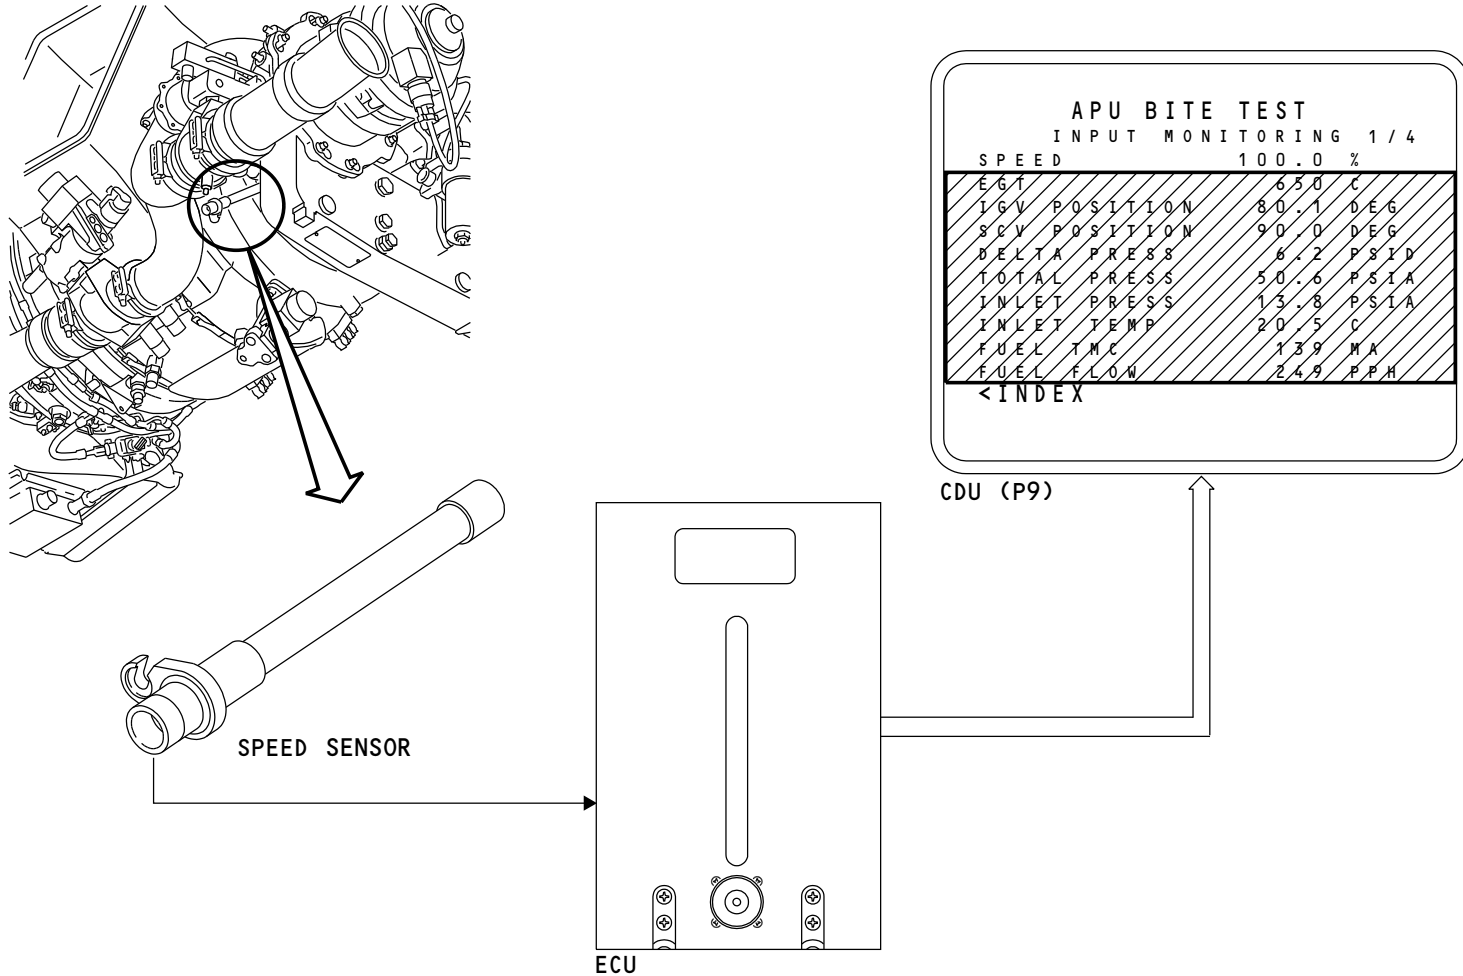

**APU CONTROLS - SPEED SENSOR**

M87561 S0004631546\_V1

**APU CONTROLS - INLET TEMPERATURE SENSOR T2****Inlet Temperature Sensor**

The inlet temperature sensor supplies inlet air temperature data (T2). The ECU uses this data for these functions:

- Fuel control
- IGV control
- SCV control
- EGT trim schedule (ECS and MES modes)
- Inlet overheat.


**Location**

The inlet temperature sensor is on the bottom of the APU compressor plenum.

**Functional Description**

The inlet temperature sensor is a resistive temperature device (RTD). When the air temperature into the inlet of the compressor changes, the resistance changes in the sensor. The ECU senses this change in resistance. The ECU adjusts the APU operation due to that temperature change.

The ECU also sends the temperature to the control display unit (CDU) in the flight compartment.

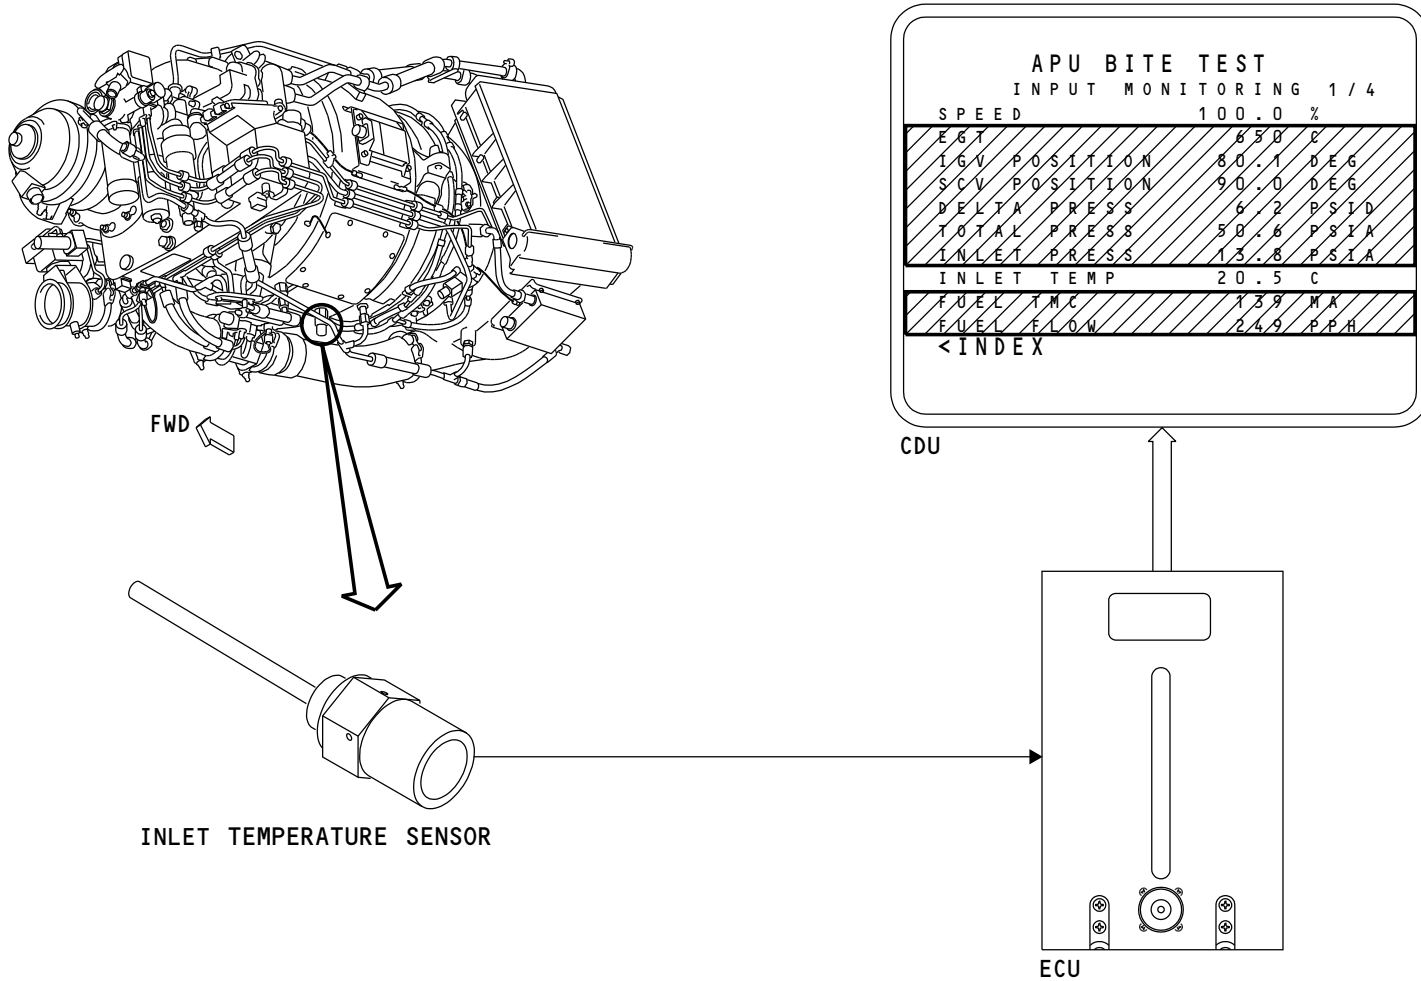

APU CONTROLS - INLET TEMPERATURE SENSOR T2

M87562 S0004631548\_V1





THIS PAGE IS INTENTIONALLY LEFT BLANK

**49-70-00**

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

**APU INDICATING SYSTEM - EGT INDICATION****Purpose**

The APU exhaust gas temperature indicating system supplies APU exhaust gas temperature data for flight compartment indication and APU control.

**Location**

Two chromel/alumel thermocouples are on the bottom of the exhaust section. Each thermocouple has two temperature sensing junctions. The thermocouples are close together, but the tips in the exhaust stream are 60 degrees apart.

**Functional Description**

The ECU receives temperature inputs from the two thermocouples. The ECU uses the highest temperature for indication and control.


**Indication**

The APU EGT is on the EGT indicator on the P5 panel and on the CDU.

**Training Information Point**

Loss of input from one thermocouple does not cause the loss of EGT indication. Loss of EGT input from both thermocouples causes loss of indication. EGT overtemperature or loss of EGT from both thermocouples cause an APU protective shutdown.

EFFECTIVITY	
AKS ALL	

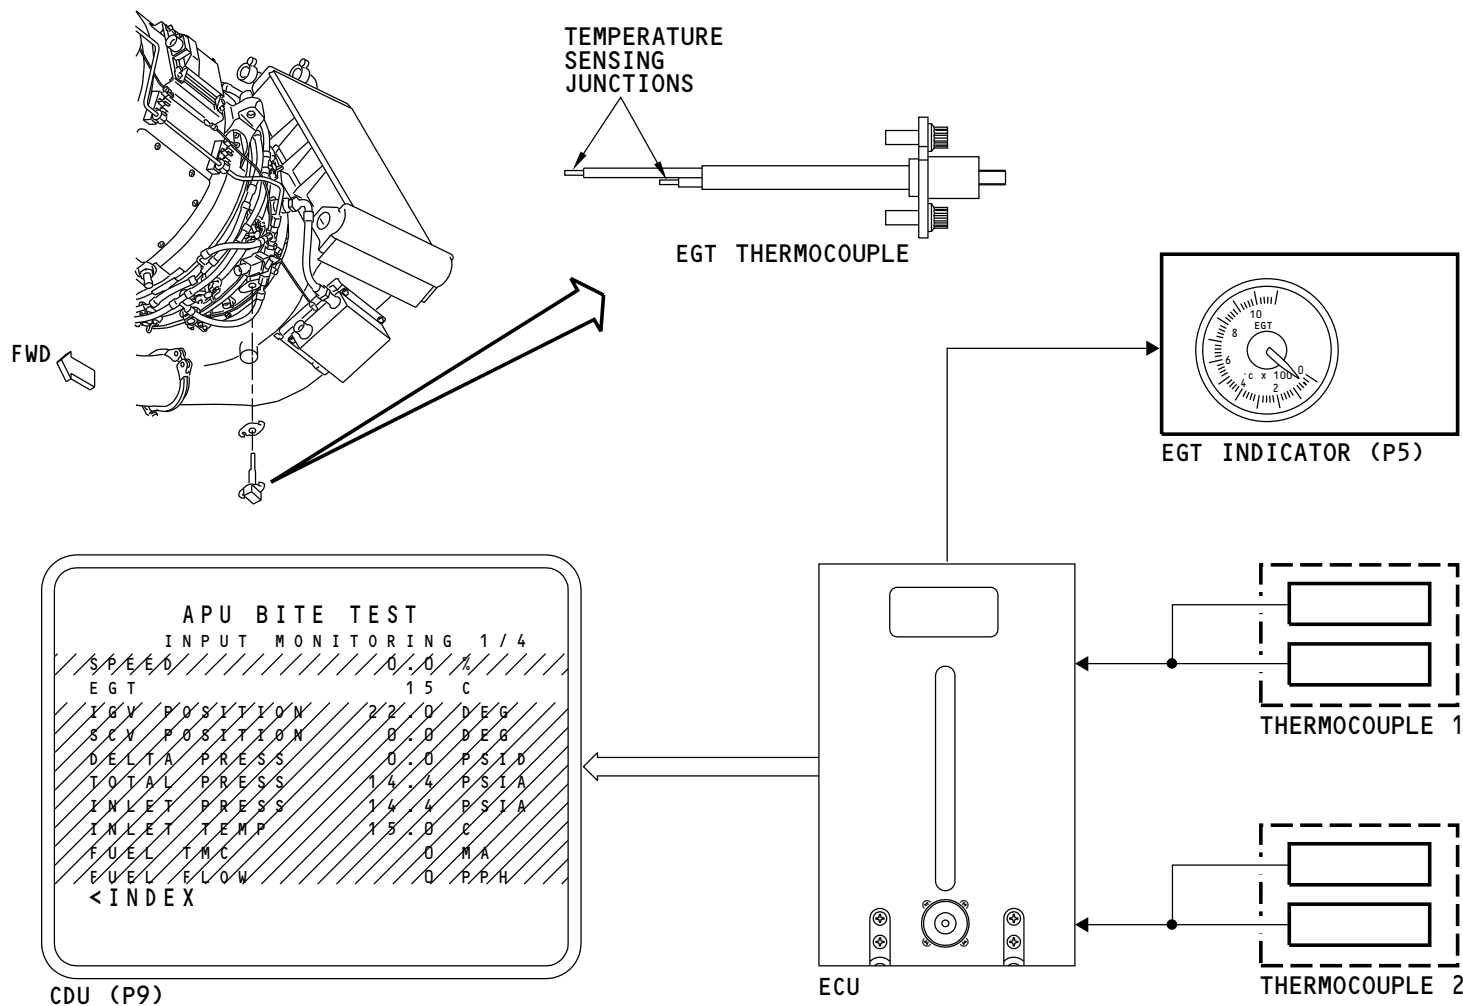

M87570 S0004631552\_V1

### APU INDICATING SYSTEM - EGT INDICATION

49-70-00



**APU INDICATING SYSTEM - DATA MEMORY MODULE (DMM)****Purpose**

The data memory module (DMM) keeps this APU data in non-volatile memory:

- APU health data
- APU operating hours
- APU serial number
- APU turbine life used
- Number of APU starts
- Shutdown data
- Start data

The DMM keeps this APU data so that APU engine data stays with the APU engine.

**General Description**

The ECU controls the data that goes in the DMM. The ECU reads the DMM memory during the APU start sequence and gives updated information to the DMM during APU shutdown. The control display unit (CDU) shows APU parameters that are in the DMM.

**Location**

The DMM is on the left side of the APU.

**Training Information Point**

You read DMM data with special test equipment or with the CDU.

Replacement of the ECU does not cause loss of the data that is in the DMM.


Do not remove the data memory module at the same time you remove the ECU. Loss of data will result.

If you replace the data memory module, you must replace it with a blank module (a module with no data in memory). If you replace it with one that has data, loss of data and incorrect data can occur.

**49-70-00****EFFECTIVITY**  
**AKS ALL**

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

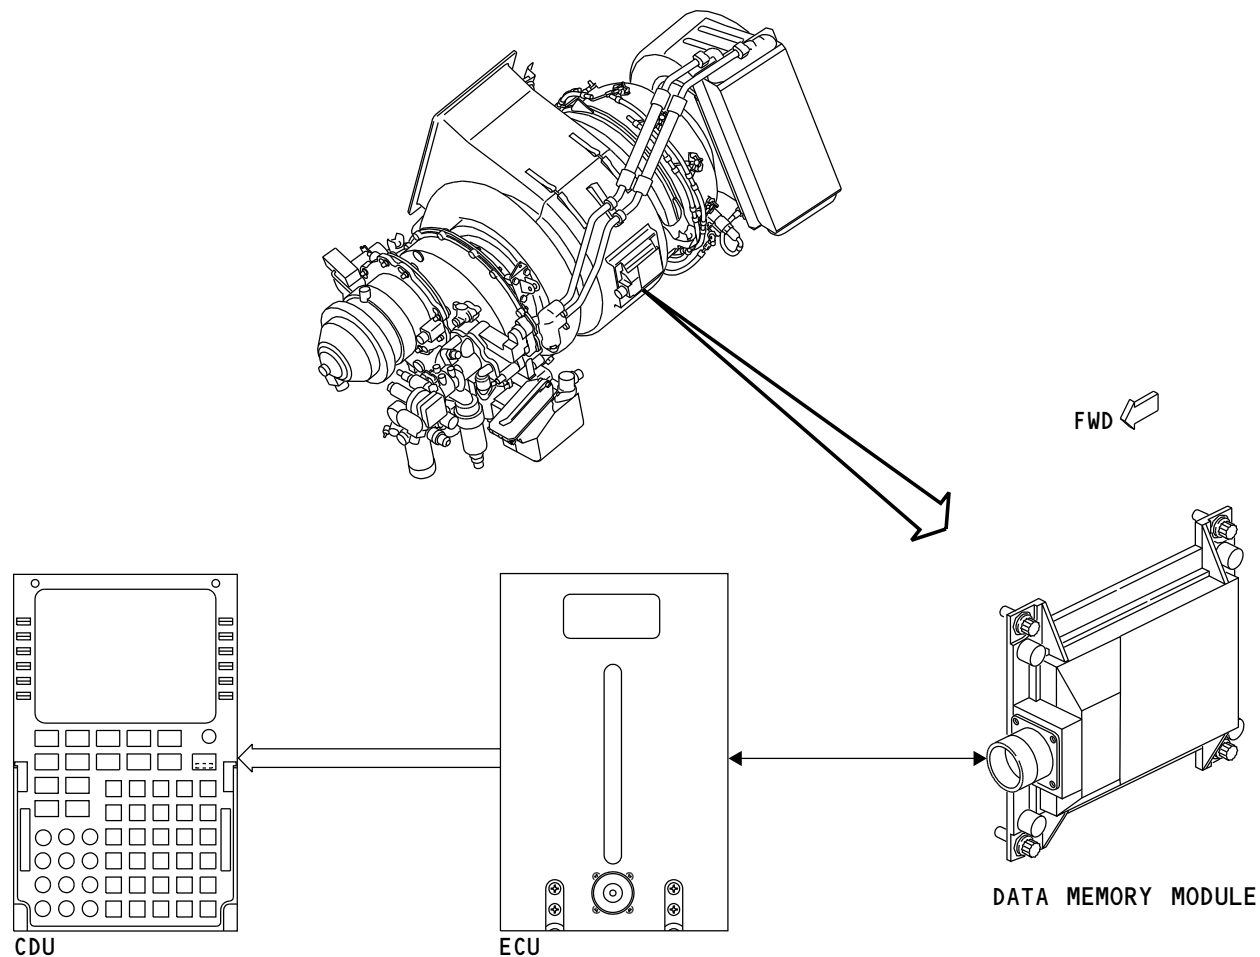

M87571 S0004631554\_V1

**APU INDICATING SYSTEM - DATA MEMORY MODULE (DMM)**

**49-70-00**

**AKS ALL EFFECTIVITY**

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details





THIS PAGE IS INTENTIONALLY LEFT BLANK

**49-80-00**

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

**APU EXHAUST SYSTEM - EXHAUST DUCT****Purpose**

The APU exhaust system sends the APU exhaust overboard through the exhaust duct. The exhaust system prevents APU compartment damage from high exhaust gas temperatures and decreases exhaust noise levels.

**Components**


The APU exhaust duct attaches to the APU turbine section with a V-band clamp.

These are the major components of the exhaust duct:

- Drain fitting
- V-band clamp flange
- Bellows assembly
- Fluid drip ring
- Baffle
- Acoustic liner
- Outer skin
- Insulation blanket
- Aft support leaf spring.

**Training Information Point**

You remove the exhaust duct from the tail section to do maintenance on the duct.

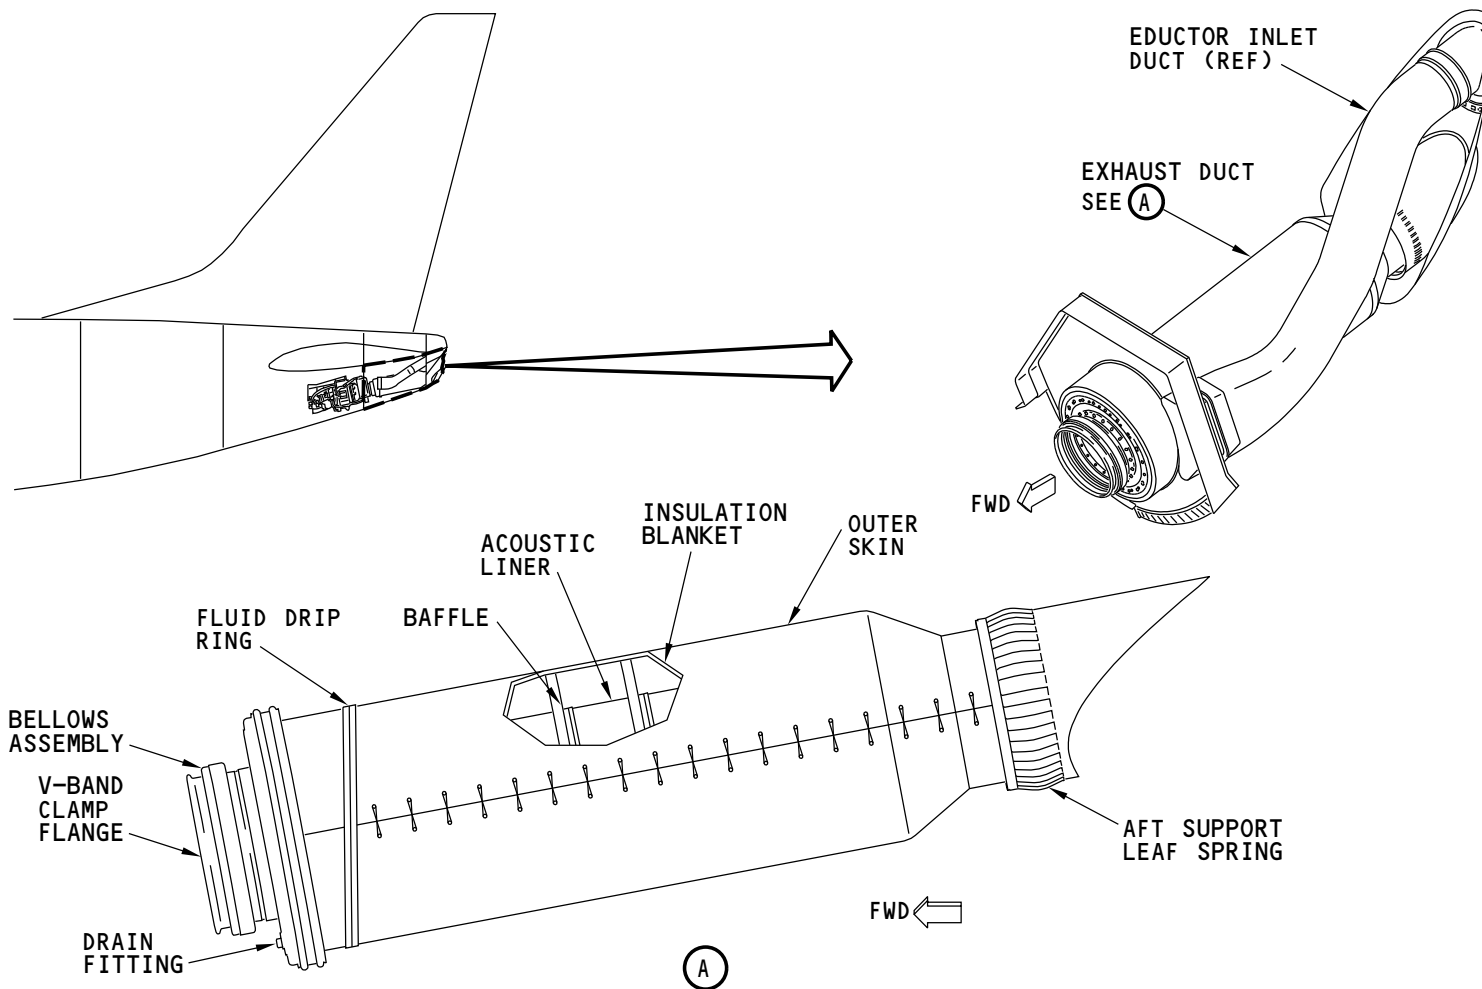

APU EXHAUST SYSTEM - EXHAUST DUCT

M87572 S0004631558\_V1

49-80-00-001

AKS ALL	EFFECTIVITY
	D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

**49-80-00**

**APU EXHAUST SYSTEM - AFT FAIRING****Purpose**

The aft fairing supports the aft end of the exhaust duct and eductor inlet duct.

**Location**

The aft fairing is at the aft end of the fuselage.

**Functional Description**

The aft fairing is superplastic formed titanium that aligns with the airplane tail cone. The aft fairing has two openings. One opening is for the APU compartment and eductor inlet. The other opening is for the APU turbine exhaust.


These are the components of the aft fairing:

- Upper aft fairing
- Lower aft fairing.

**Training Information Point**

For ease of removal and installation, the aft fairing has an upper and lower section. To remove the muffler, you remove only the lower aft fairing.

EFFECTIVITY	
AKS ALL	

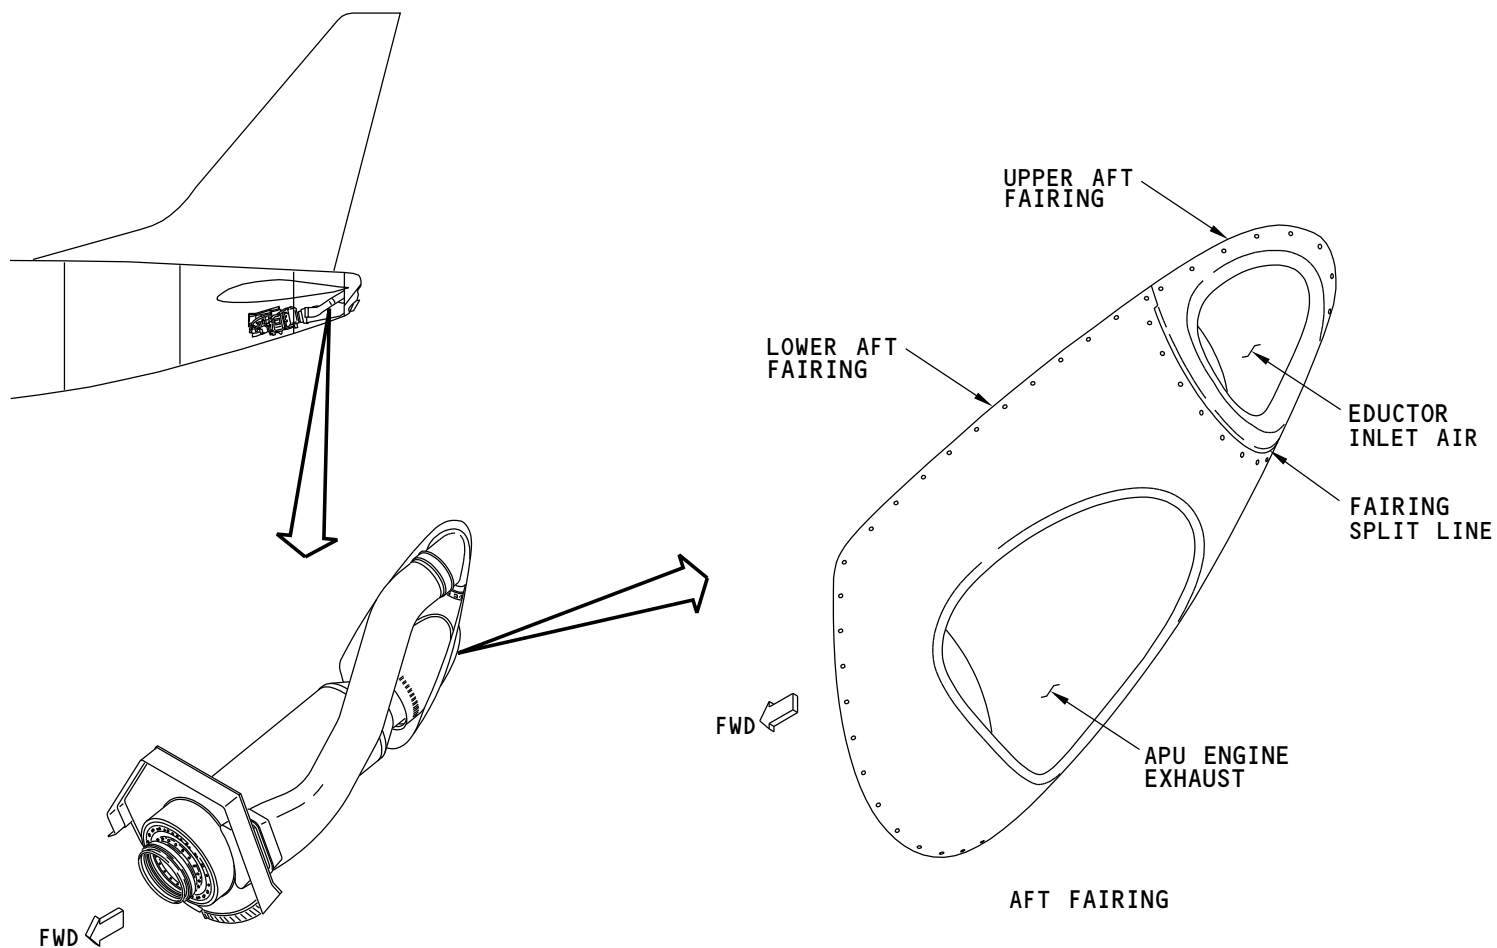

**APU EXHAUST SYSTEM - AFT FAIRING**

M87573 S0004631560\_V1

49-80-00-002

**AKS ALL** **EFFECTIVITY**

**49-80-00**

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details







THIS PAGE IS INTENTIONALLY LEFT BLANK

**49-90-00**

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details



## APU LUBRICATION SYSTEM - INTRODUCTION

### Purpose

The APU lubrication system lubricates, cleans, and cools these components:


- APU starter-generator
- APU bearings
- APU gearbox.

### Components

Some lubrication system components are on a common lube module on the front of the APU. These lubrication system components are not on the lube module:

- Magnetic drain plug
- Low oil pressure switch
- Oil level sensor
- Oil cooler
- Temperature control valve
- Oil-level sight glass and an oil fill port.

A 5.7 quart (5.4 liter) oil sump is inside the gearbox. The APU oil cooler and oil lines hold approximately 3 quarts (2.9 liters) of oil. The total oil quantity of oil in an APU at full is 8.7 quarts (8.3 liters). An oil-level sight glass shows the oil level. An oil fill port is adjacent to the oil-level sight glass.

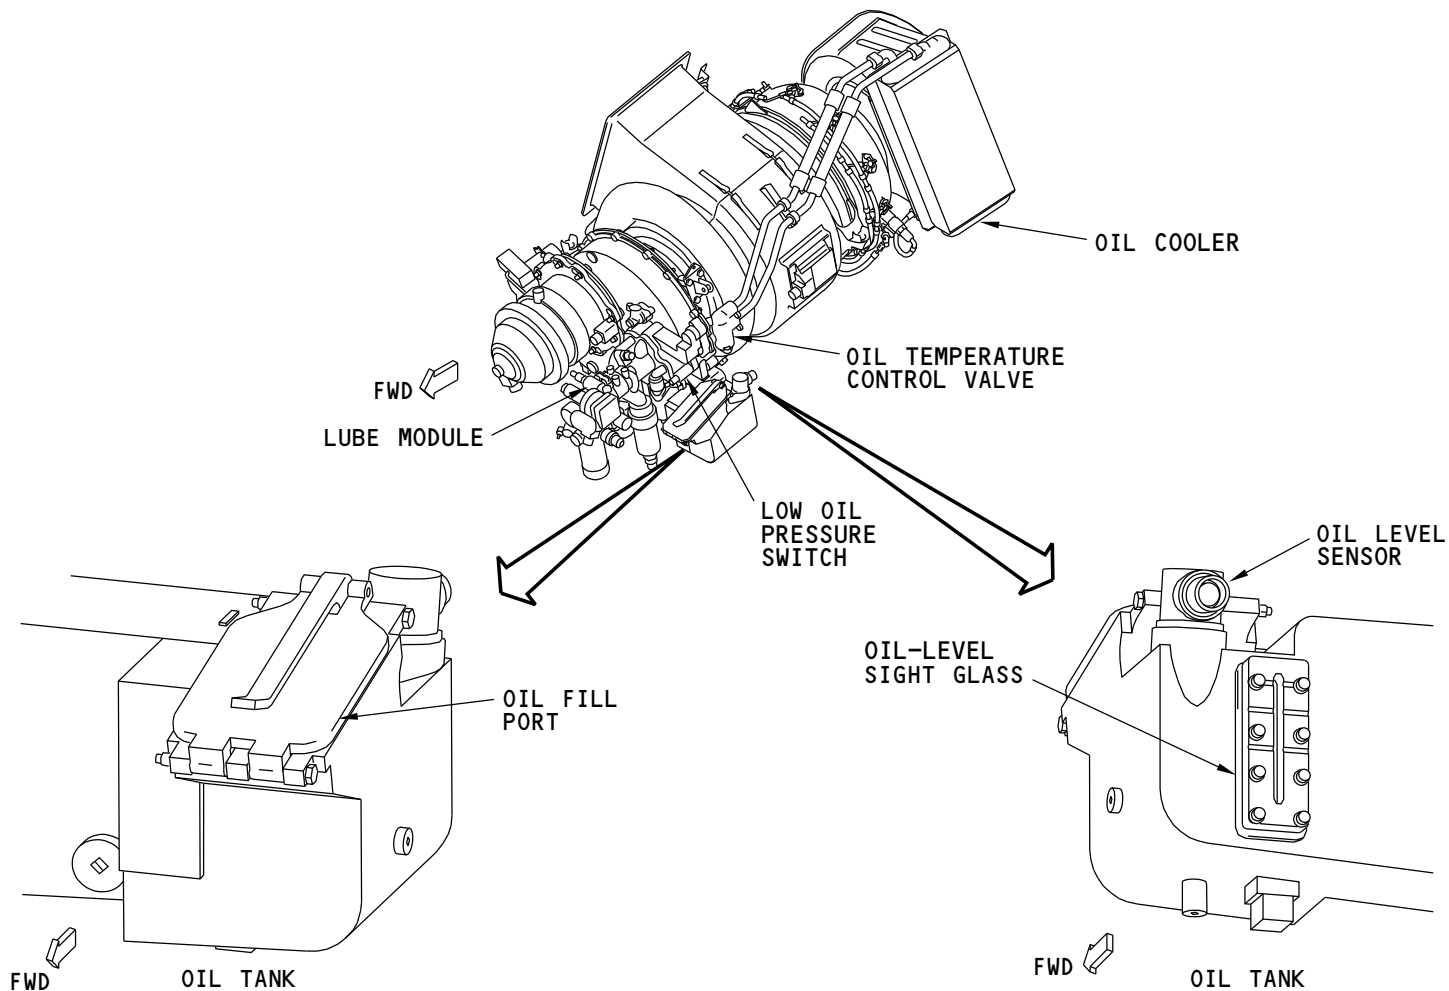

M87574 S0004631564\_V1

**APU LUBRICATION SYSTEM - INTRODUCTION**

49-90-00-001

AKS ALL

EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

**49-90-00**

**APU LUBRICATION SYSTEM - LUBE MODULE****General**

The lube module contains many of the lubrication system components. The lube module is on the front of the APU gearbox.

**Components**

The lube module contains lube and scavenge pump elements. A shaft from the gearbox turns the pump elements. A pressure regulating/relief valve is also internal to the lube module.

These components are on the outside of the lube module and are LRUs:


- Filter indicator
- Filter bypass switch
- Oil filter element
- Generator filter element
- Oil temperature sensor.

**Training Information Point**

The fuel control unit (FCU) attaches to the lube module. You must first remove the FCU to remove the lube module.

You must remove the FCU and the lube module to replace the lube module seal plate.

Replace the seal plate only if you believe there is a leak due to a failed seal plate or when you replace the lube module.

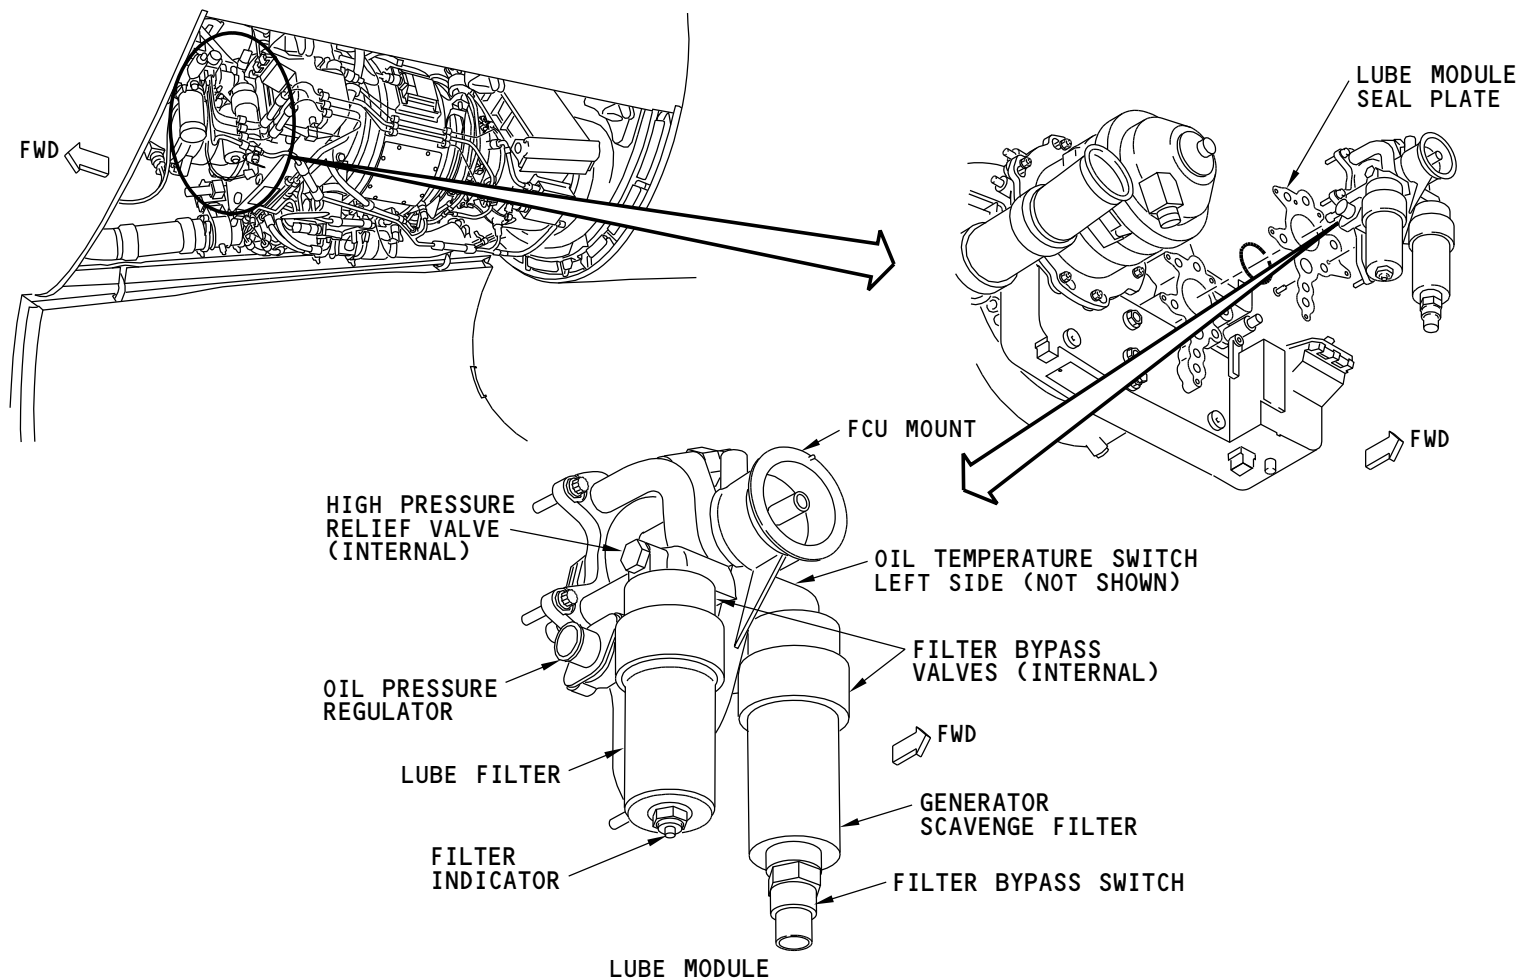

**APU LUBRICATION SYSTEM - LUBE MODULE**

M87575 S0004631566\_V1

49-90-00-002

AKS ALL	EFFECTIVITY
	D633A101-AKS

**49-90-00**

**APU LUBRICATION SYSTEM - LUBE MODULE - FUNCTIONAL DESCRIPTION****Lube and Scavenge Pumps**

The lube and scavenge pumps are on a common shaft. Three of the pumps are lube pumps. Three elements are starter-generator scavenge pumps and one is a turbine bearing scavenge pump.

**Pressure Regulating/Relief Valve**

The pressure regulating/relief valve keeps the oil pressure at 60 to 74 psi. If the pressure is more than this, the valve returns the oil to the oil pump inlet. The relief valve is set at 200 to 280 psi.

**Temperature Control Valve**

The temperature control valve controls the oil flow to the oil cooler to control oil temperature and to bypass the oil cooler when the oil is cold.

When the oil temperature is 140F (60C) or less, the valve is fully open and the oil does not go to the oil cooler. When the oil temperature is 170F (78C) or more, the valve is fully closed and the oil goes to the oil cooler. Between temperatures of 140F (60C) and 170F (78C), the valve is not fully open.

A pressure difference of 50 psid also opens the valve to permit the oil to continue to flow if the oil cooler clogs.

**Oil Filter Elements**

There are two interchangeable oil filters. The oil from the APU generator goes through the generator filter element. Pressurized oil goes through the oil filter element after it goes through the oil cooler. The filters are throw-away type elements. They both have a 10 micron rating.

**Oil Filter Bypass Valve and Indicator Button**

The oil filter has an indicator button to monitor for filter clogs. When there is a pressure difference of more than 26 to 40 psid across the filter and the oil temperature is more than 90F (32C), the indicator button extends.

The oil filter also has a bypass valve that allows the oil to flow if there is a clog or the oil is cold. The filter bypasses oil at 50 to 70 psid.

**Generator Filter Bypass Valve and Filter Switch**


The generator filter element has a filter pressure switch to monitor for filter clogs. When there is a pressure difference of more than 30 to 40 psid across the filter, for 5 seconds, the switch sends a signal to the ECU. The ECU shuts down the APU if these occur:

- High filter delta pressure
- Oil temperature is more than 100F (38C)
- Main engines not running for 90 seconds
- Airplane on ground.

The generator filter element also has a bypass valve to let the oil flow if there is a clog or the oil is cold. The bypass valve bypasses oil at 50 to 70 psid.

**Oil Temperature Sensor**

The oil temperature sensor sends lube oil temperature data to the ECU. The ECU shuts down the APU if the APU speed is more than 95 percent and the oil temperature is 300°F (149°C) or more for 10 seconds.

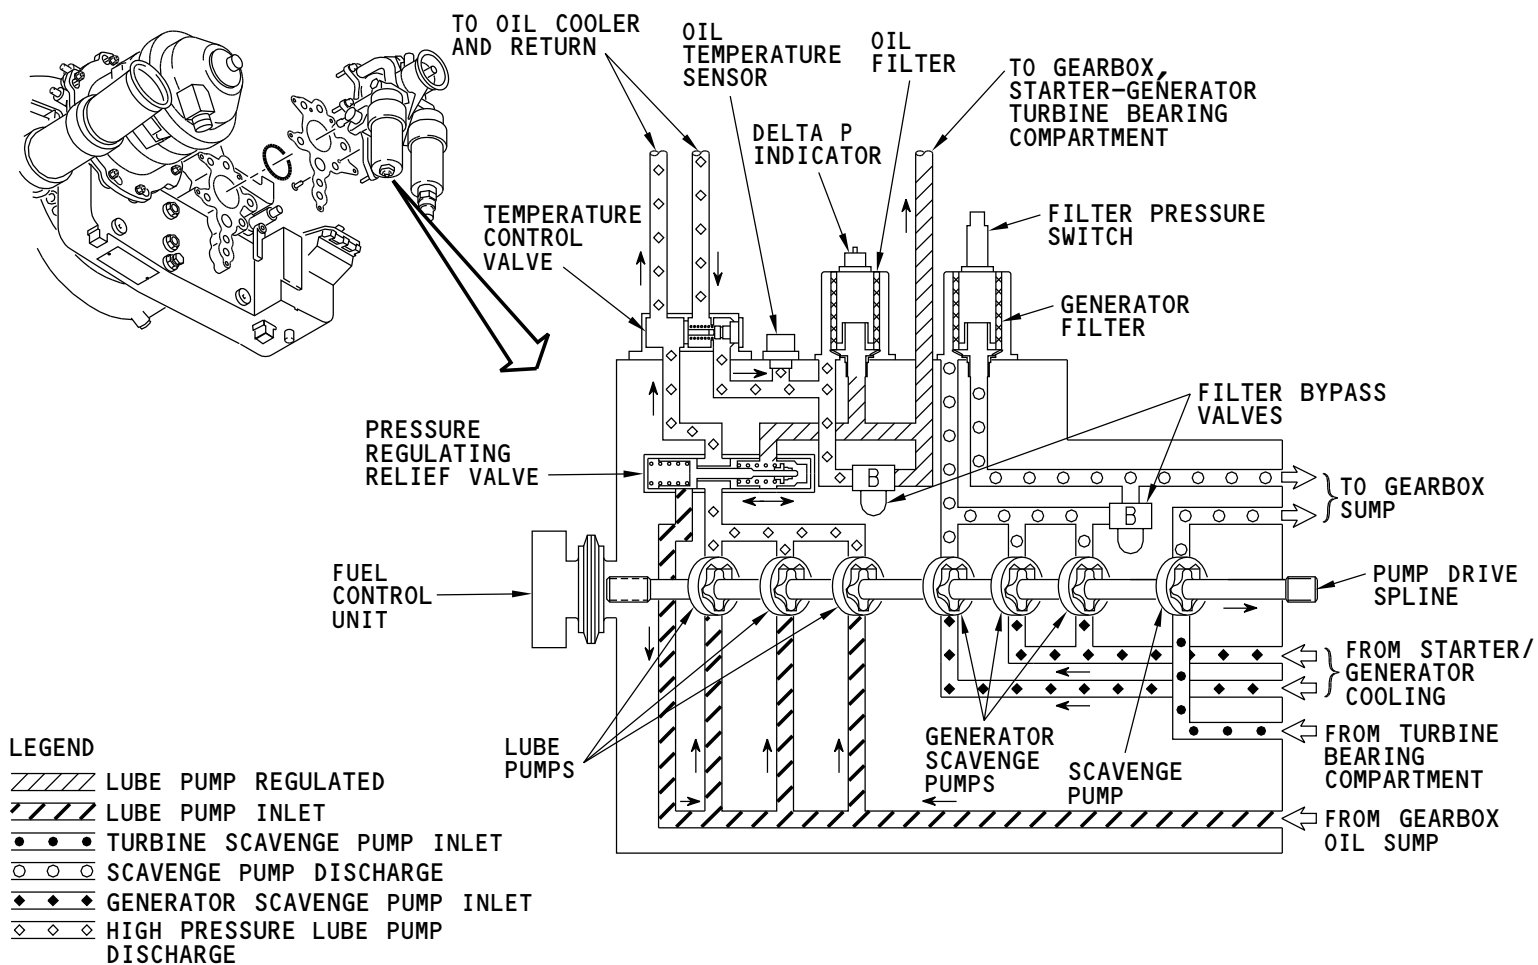

M87576 S0004631568\_V1

APU LUBRICATION SYSTEM - LUBE MODULE - FUNCTIONAL DESCRIPTION

49-90-00

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details



**APU LUBRICATION SYSTEM - OIL COOLER AND TEMPERATURE CONTROL VALVE****General**

The oil cooler is an air/oil heat exchanger. Compartment and outside air cool the pressurized oil after it leaves the oil pump.

The oil cooler is on the upper left side of the APU turbine case. It is part of the eductor cooling system.

The temperature control valve is on the APU gearbox behind the lube module. The valve controls the oil flow to and from the oil cooler.

**Functional Description**


The APU exhaust causes a suction of air from outside through the eductor inlet duct. This causes the APU compartment and outside air to move through the oil cooler to cool the APU oil. The cooling air then flows overboard through the exhaust duct.

The temperature control valve allows oil to bypass the oil cooler if the oil temperature is less than 140F (60C). The valve lets oil flow through the cooler if the oil temperature is more than 170F (78C). If the oil pressure is more than 50 psid across the bypass valve, the oil bypasses the cooler.

The temperature control valve uses a seal plate for attachment to the gearbox.

**Training Information Point**

Replace the seal plate only if you believe there is a leak due to a seal plate failure.

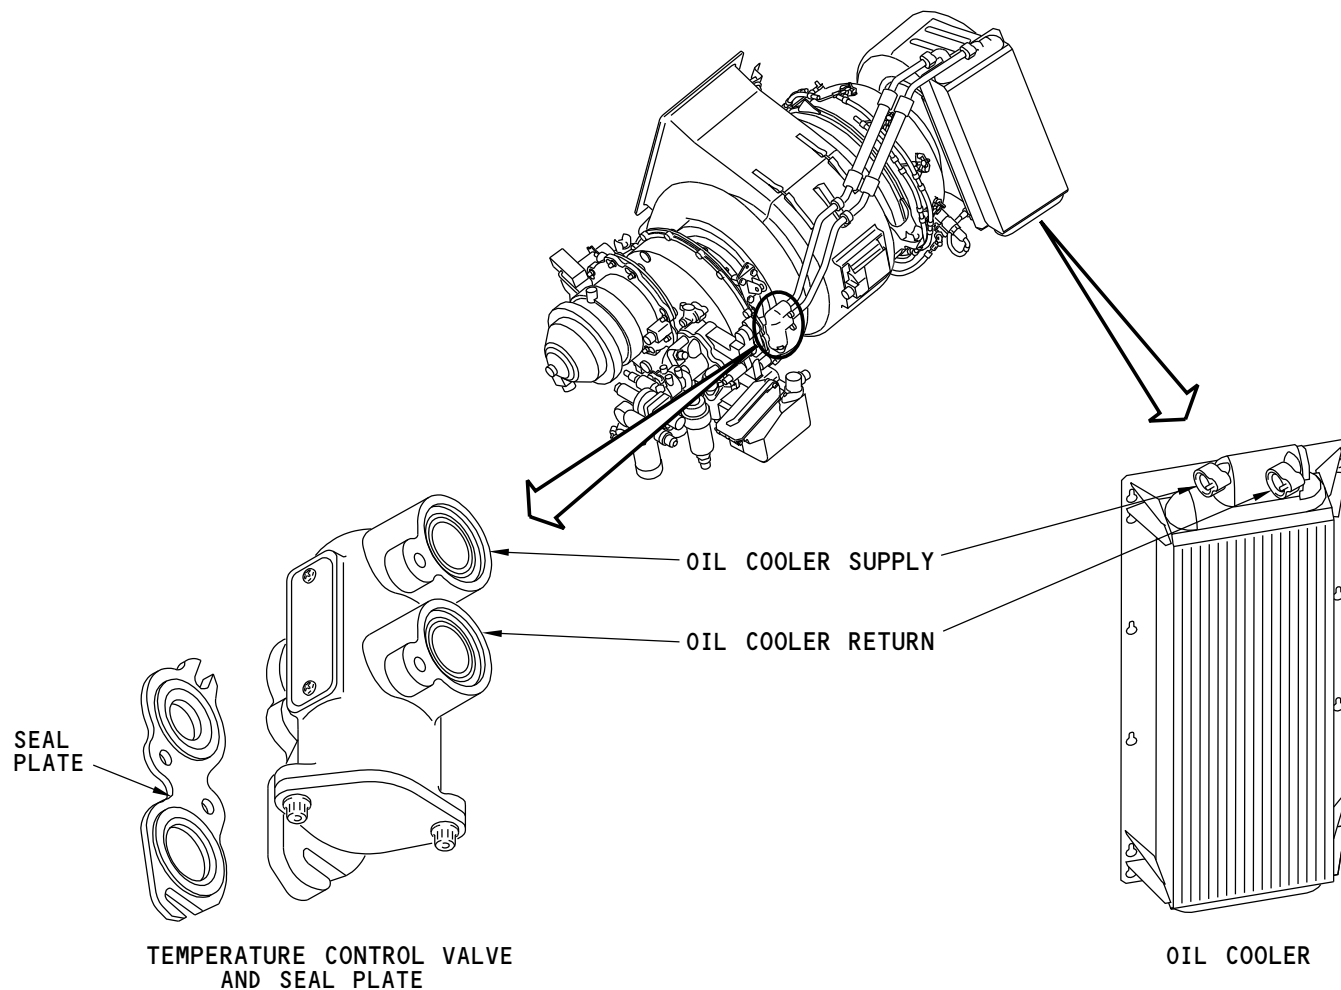

M87577 S0004631570\_V1

**APU LUBRICATION SYSTEM - OIL COOLER AND TEMPERATURE CONTROL VALVE**

49-90-00-004

**AKS ALL** **EFFECTIVITY**

**49-90-00**

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

**APU LUBRICATION SYSTEM - MAGNETIC DRAIN PLUG****Purpose**

The magnetic drain plug collects metallic particles that are in the engine oil. It has two parts, the magnetic chip collector and the drain plug. You remove the drain plug to drain the oil out of the gearbox.

**Location**


There is one magnetic drain plug. It is on the bottom front of the gearbox.

**Components**

These are the components of the magnetic drain plug:

- Magnet plug
- Drain plug
- Magnet
- Packing
- Check valve
- Spring.

The check valve closes to prevent oil loss when you remove the magnetic chip detector from the magnetic drain plug.

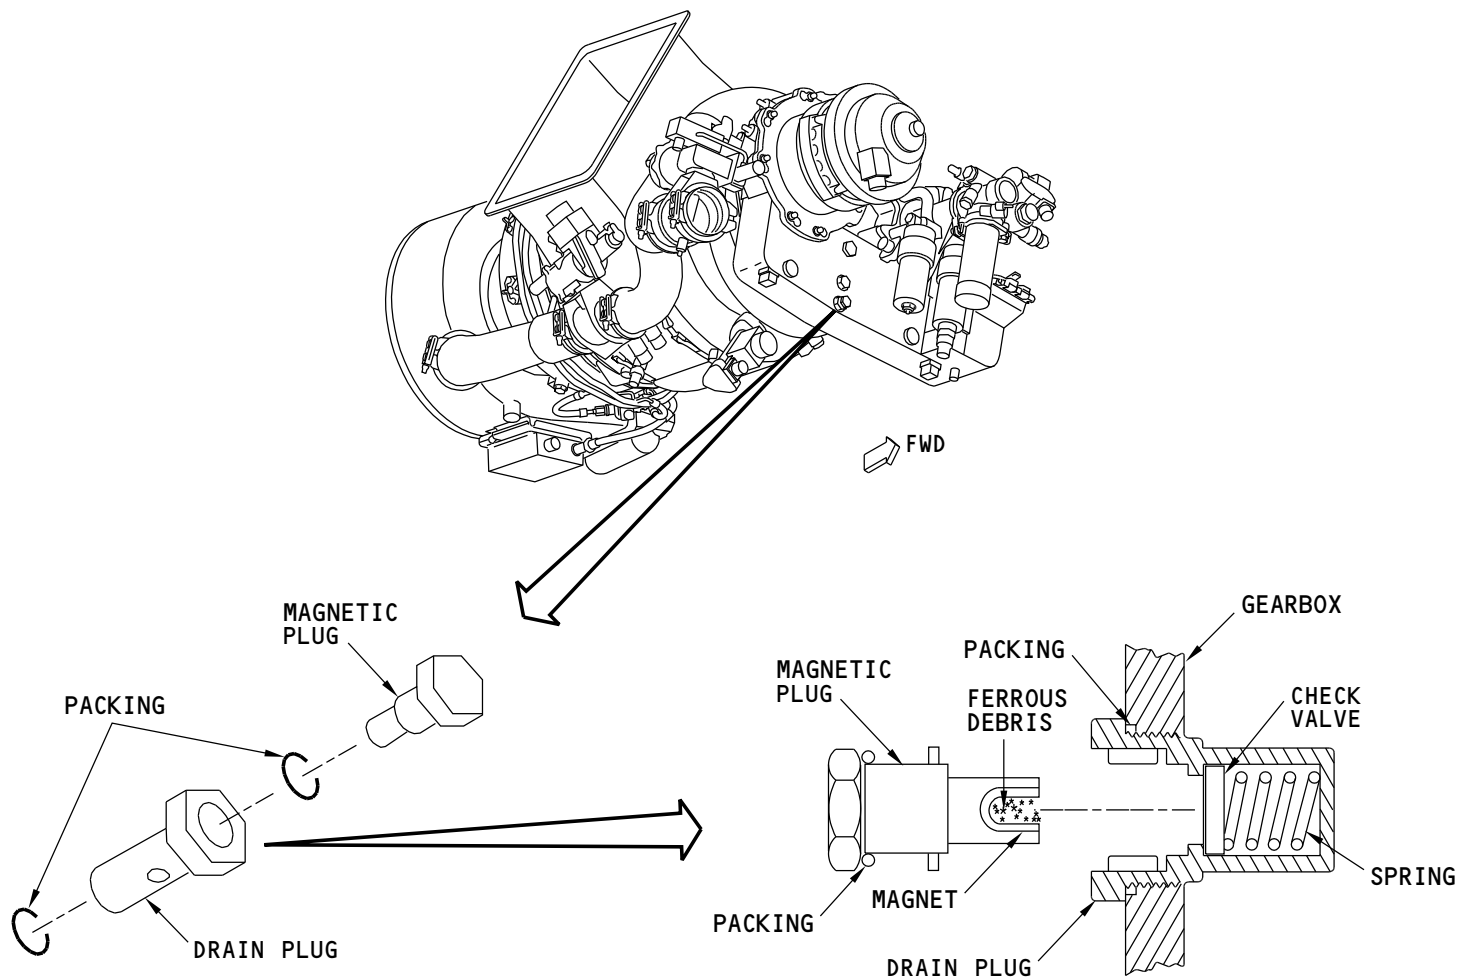

M87578 S0004631572\_V1

**APU LUBRICATION SYSTEM - MAGNETIC DRAIN PLUG**

**49-90-00**

49-90-00-005

AKS ALL

EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

**APU LUBRICATION SYSTEM - FUNCTIONAL DESCRIPTION****General**

The APU lubrication system supplies pressurized oil to cool, clean, and lubricate APU components and the APU generator. A scavenge system returns the oil to the reservoir in the gearbox.

**Supply**

Oil pumps in the lube module, pump oil from the reservoir in the gearbox. Pressurized oil from the lube module goes to the oil cooler and then returns to the lube module.

The lube module cleans the oil and controls the oil pressure. These components supply data to the ECU:

- Oil pressure switch
- Oil level sensor
- Oil temperature sensor
- Generator filter pressure switch.

The oil goes to these areas:

- APU starter-generator
- Gearbox bearings and gears
- Turbine bearing compartment.

**Scavenge**

Scavenge pumps in the lube module send the oil from the turbine bearing compartment back to the gear box reservoir. Other scavenge pump elements send the scavenge oil from the APU starter-generator through the scavenge filter and back to the gearbox reservoir.

**Vent**

An air-oil separator separates the air that mixes with the oil in the scavenge system. The air-oil separator is on the right side of the lube module on the gearbox.

Air that goes by the bearing cavities and mixes with the scavenge oil goes through the air-oil separator. Through centrifugal action, the air-oil separator returns the oil to the sump in the gearbox and the air vents overboard. The air vents overboard through the APU exhaust duct.

**Training Information Point**

The air-oil separator is not a line replaceable component.


**49-90-00**

EFFECTIVITY

AKS ALL

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

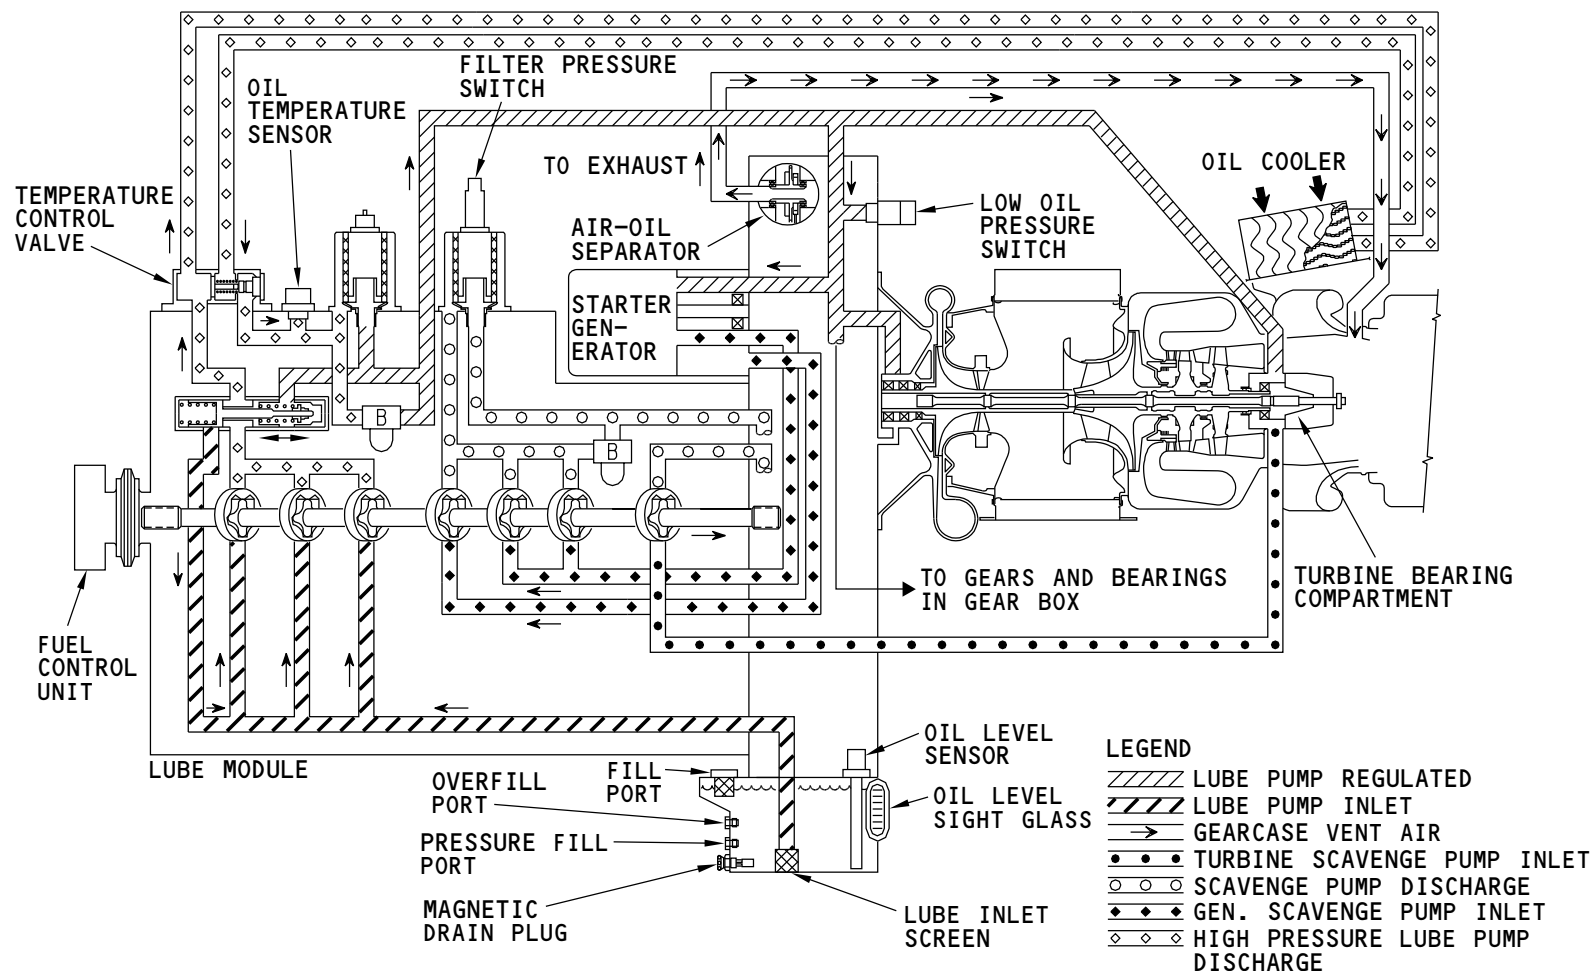

M87579 S0004631574\_V1

APU LUBRICATION SYSTEM - FUNCTIONAL DESCRIPTION

49-90-00

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details



THIS PAGE IS INTENTIONALLY LEFT BLANK

**49-90-00**

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

**APU LUBRICATION SYSTEM - OIL INDICATING - GENERAL DESCRIPTION****Purpose**

The APU oil indicating system supplies this data for the flight compartment:

- Oil temperature (P5 panel amber FAULT light only)
- Oil pressure (P5 panel amber LOW OIL PRESSURE light only)
- Oil level (P5 panel blue MAINT light and CDU display)
- Starter-generator scavenge filter clogged (P5 panel amber APU FAULT light only).

**General Description**

The ECU receives APU oil indicating system inputs and supplies this data to the airplane flight compartment.

The oil level indication only shows on the control display unit (CDU). The blue MAINT light comes on at a specified oil quantity.

**Components**

These are the APU oil indicating system components:

- Low oil pressure switch
- Oil temperature sensor
- Oil level sensor
- Filter pressure switch.

**Low Oil Pressure Switch**

The low oil pressure switch sends a signal to the ECU when the oil pressure is less than 30-40 psi. If the APU speed is more than 95 percent, the ECU shuts down the APU after 20 seconds. These amber lights come on for a low oil pressure indication:

- LOW OIL PRESSURE (P5)
- MASTER CAUTION (P7)
- APU annunciator (P7).

**Oil Temperature Sensor**

The oil temperature sensor sends lube oil temperature data to the ECU. The ECU shuts down the APU if the APU speed is more than 95 percent and oil temperature is 300°F (149°C) or more for 10 seconds. The CDU shows the oil temperature.

These amber lights come on for a high oil temperature indication:

- FAULT (P5)
- MASTER CAUTION (P7)
- APU annunciator (P7).

**Oil Level Sensor**

The oil level sensor sends the oil level data in the gearbox sump to the ECU. The ECU sends this data to the CDU for display.

The ADD message shows on the APU oil quantity page of the CDU when approximately 4.3 quarts (4.1 liters) of oil remains in the APU sump.

The blue MAINT light on the P5 panel comes on and the LOW message shows on the APU oil quantity page of the CDU when approximately 3.8 quarts (3.6 liters) of oil remains in the APU sump.

The APU sump holds 5.7 quarts (5.4 liters) of oil when full.

**Filter Pressure Switch**

The filter pressure switch monitors the differential pressure between the inlet and outlet of the starter-generator scavenge filter. If the pressure is greater than 30-40 psid, the filter switch sends a signal to the ECU.

**Protective Shutdowns**

Low oil pressure, high oil temperature or starter-generator filter clogged causes the ECU to do a protective shutdown when the APU is above 95 percent speed.

The low oil pressure switch causes the amber LOW OIL PRESSURE light on the P5 panel to come on.

**49-90-00**

EFFECTIVITY

AKS ALL

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details






APU LUBRICATION SYSTEM - OIL INDICATING - GENERAL DESCRIPTION

High oil temperature and filter clogged causes the amber FAULT light on the P5 panel to come on.

49-90-00-007

AKS ALL	EFFECTIVITY
D633A101-AKS	

49-90-00

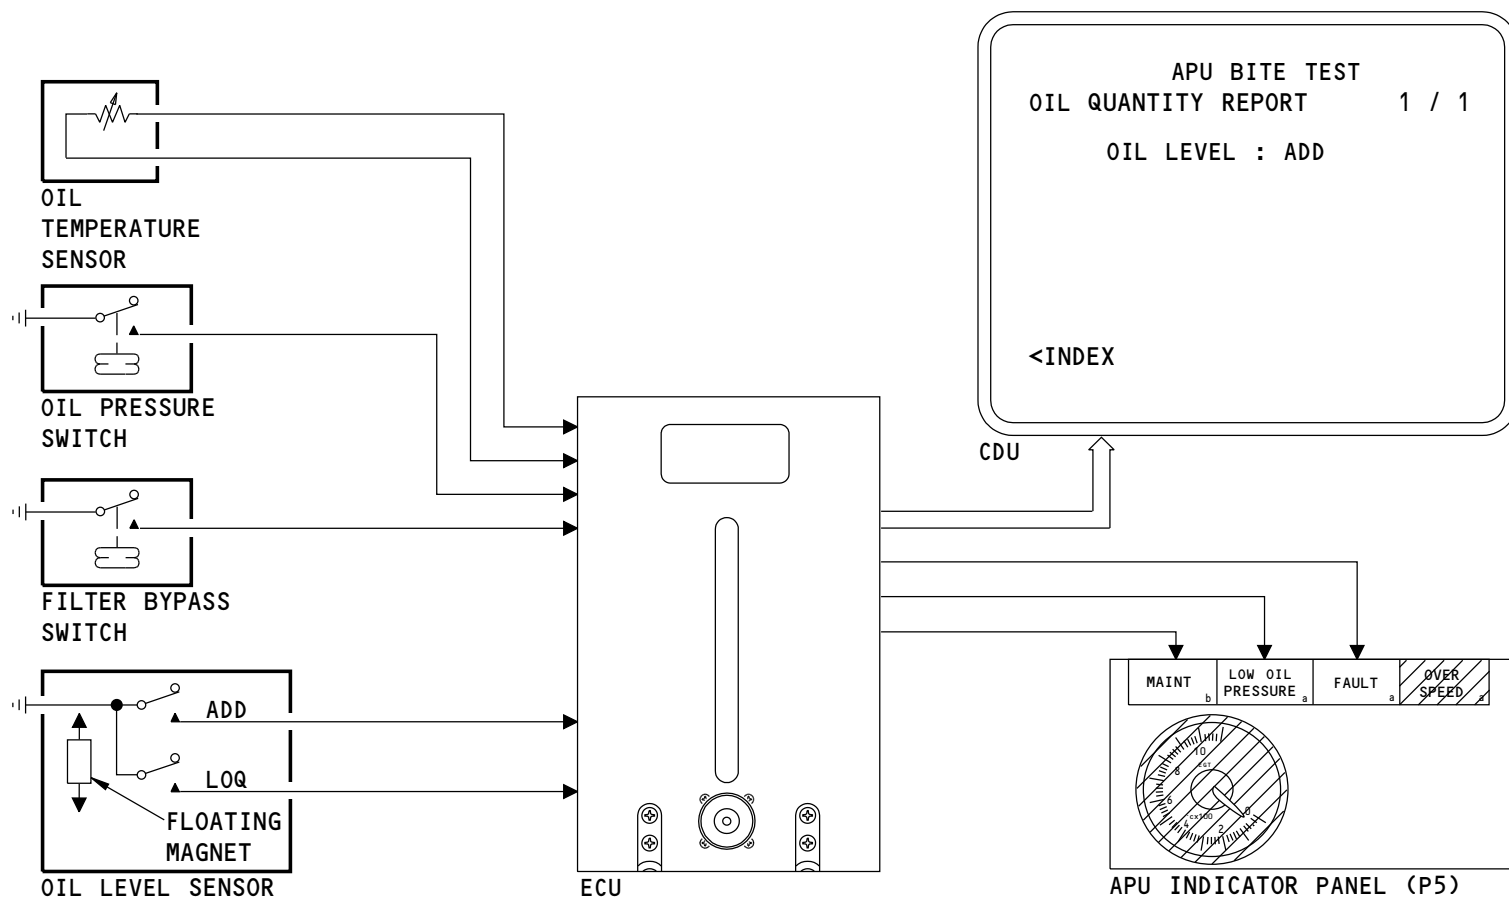

1551460 S0000285330\_V1

### APU LUBRICATION SYSTEM - OIL INDICATING - GENERAL DESCRIPTION

## 49-90-00

AKS ALL EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details



APU LUBRICATION SYSTEM - OIL INDICATING - COMPONENTS

Location


The low oil pressure switch is on the upper left side of the gearbox. The oil temperature sensor and filter bypass switch are on the lube module. The oil level sensor is on the gearbox.

49-90-00-008

EFFECTIVITY	
AKS ALL	

D633A101-AKS

49-90-00

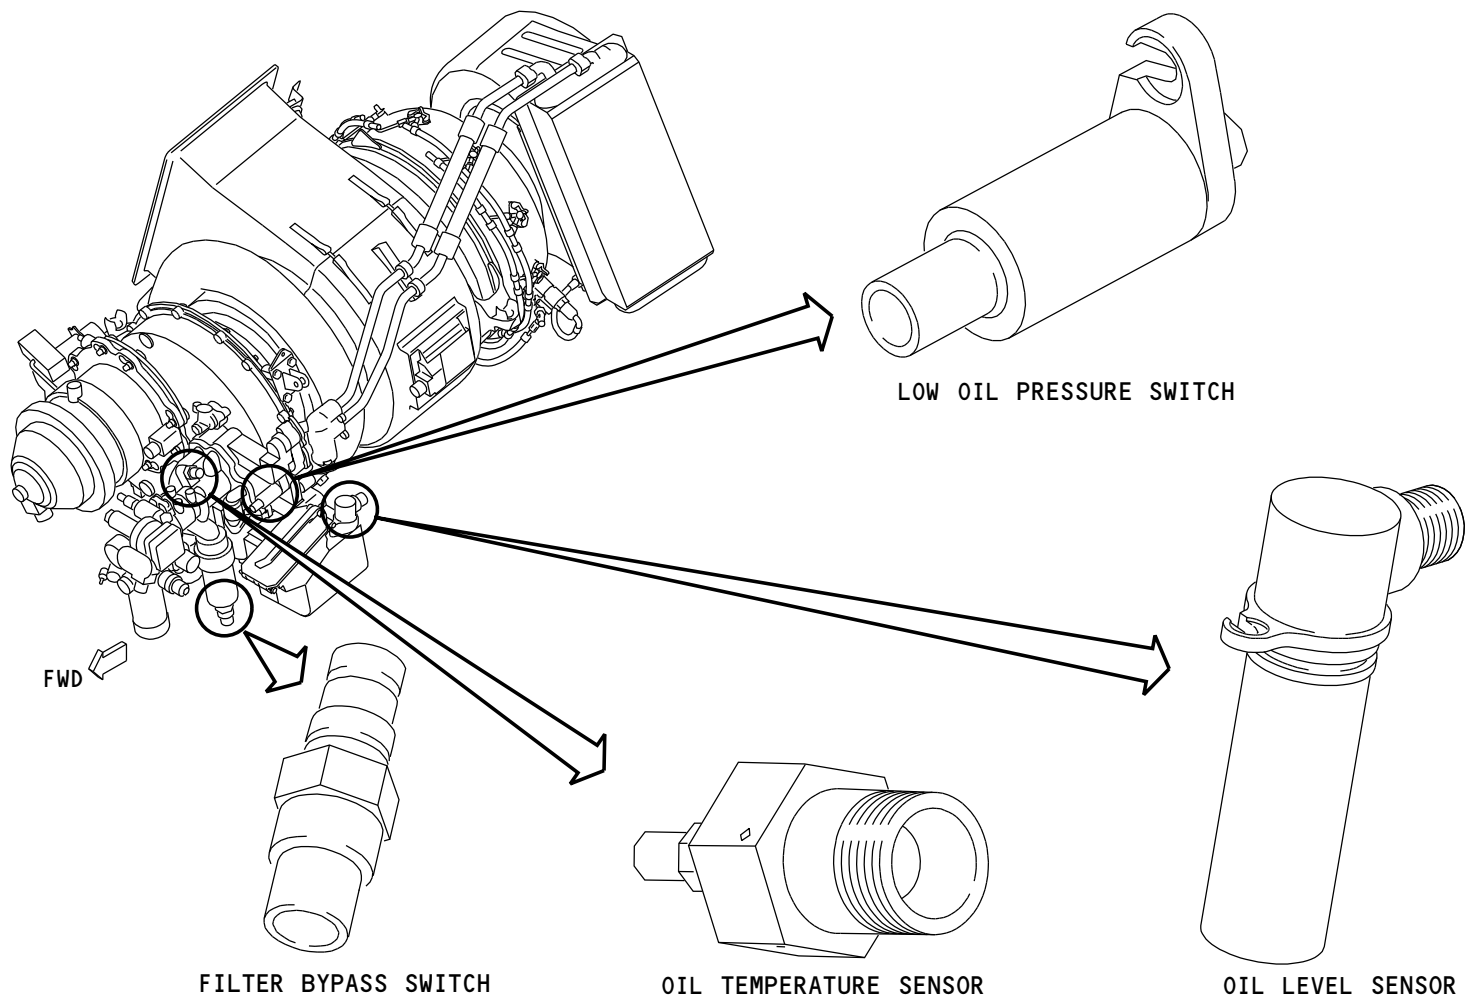

M87581 S0004631578\_V1

**APU LUBRICATION SYSTEM - OIL INDICATING - COMPONENTS**

**49-90-00**

49-90-00-008

AKS ALL

EFFECTIVITY

D633A101-AKS

BOEING PROPRIETARY - Copyright © Unpublished Work - See title page for details

