

Document Title	Specification of CAN State Manager
Document Owner	AUTOSAR
Document Responsibility	AUTOSAR
Document Identification No	253
Document Classification	Standard
Document Status	Final
Part of AUTOSAR Standard	Classic Platform
Part of Standard Release	4.3.0

Document Change History			
Date	Release	Changed by	Change Description
2016-11-30	4.3.0	AUTOSAR Release Management	<ul style="list-style-type: none"> • Provide DelInit-API • ECU passive mode clarified and fixed • Editorial changes
2015-07-31	4.2.2	AUTOSAR Release Management	<ul style="list-style-type: none"> • Development Error Tracer replaced with Default Error Tracer • Bus-off recovery time dependencies specified more precisely • Optional interface to check and to change baudrate removed
2014-10-31	4.2.1	AUTOSAR Release Management	<ul style="list-style-type: none"> • API for ECU passive mode activation • Baudrate change without reinitialisation, if possible • Interface handling to CanIf module improved • Interface handling to ComM module improved
2014-03-31	4.1.3	AUTOSAR Release Management	<ul style="list-style-type: none"> • Introduction of random delays • Re-Request of ComMode • Add WakeupValidation to avoid race conditions • Adapt Bus Off Recovery and NM state synchronization

Document Change History			
Date	Release	Changed by	Change Description
2013-10-31	4.1.2	AUTOSAR Release Management	<ul style="list-style-type: none"> • Dependency to DCM module removed • Mileading timing row removed in CanSM_MainFunction • Editorial changes • Removed chapter(s) on change documentation
2013-03-15	4.1.1	AUTOSAR Administration	<ul style="list-style-type: none"> • Support Pretended Networking mode handling • Changed concept to setup baudrate • Initialization Sequence between ComM and CanSM • Do not send WUF as First Message on the Bus after BusOff • CanSm_TxTimeoutExeption in case of BusOff
2011-12-22	4.0.3	AUTOSAR Administration	<ul style="list-style-type: none"> • Added new handling to support partial networking • Changed handling for bus deinitialisation according to AR3.x behaviour • New API and handling to change the baudrate of a CAN network • Changed handling for bus-off recovery and related production error report • Comprehensive revision of all state machine diagrams and SWS-ID-items • Changed classification of production errors and development errors • Solve conflicts of SWS-ID items with the conformance test specification
2009-12-18	4.0.1	AUTOSAR Administration	<ul style="list-style-type: none"> • Configurable Bus-Off recovery with CAN TX confirmation instead of time based recovery • Control of PDU channel modes completely shifted from CanIf to CanSM module

Document Change History			
Date	Release	Changed by	Change Description
2010-02-02	3.1.4	AUTOSAR Administration	<ul style="list-style-type: none">• VMM/AMM Concept related changes (PDU group control shifted to BswM)• Asynchronous handling of CAN network mode transitions (consideration of CAN Transceiver and CAN controller mode notifications)• Solution of Document Improvement issues reported by TO (e. g. split up of non atomic software requirements, textual requirements instead of only a state diagram)• Legal disclaimer revised
2008-08-13	3.1.1	AUTOSAR Administration	<ul style="list-style-type: none">• Legal disclaimer revised
2007-12-21	3.0.1	AUTOSAR Administration	<ul style="list-style-type: none">• Initial Release

Disclaimer

This specification and the material contained in it, as released by AUTOSAR, is for the purpose of information only. AUTOSAR and the companies that have contributed to it shall not be liable for any use of the specification.

The material contained in this specification is protected by copyright and other types of Intellectual Property Rights. The commercial exploitation of the material contained in this specification requires a license to such Intellectual Property Rights.

This specification may be utilized or reproduced without any modification, in any form or by any means, for informational purposes only. For any other purpose, no part of the specification may be utilized or reproduced, in any form or by any means, without permission in writing from the publisher.

The AUTOSAR specifications have been developed for automotive applications only. They have neither been developed, nor tested for non-automotive applications.

The word AUTOSAR and the AUTOSAR logo are registered trademarks.

Advice for users

AUTOSAR specifications may contain exemplary items (exemplary reference models, "use cases", and/or references to exemplary technical solutions, devices, processes or software).

Any such exemplary items are contained in the specifications for illustration purposes only, and they themselves are not part of the AUTOSAR Standard. Neither their presence in such specifications, nor any later documentation of AUTOSAR conformance of products actually implementing such exemplary items, imply that intellectual property rights covering such exemplary items are licensed under the same rules as applicable to the AUTOSAR Standard.

Table of Contents

1	Introduction and functional overview	8
2	Acronyms and abbreviations	9
3	Related documentation.....	10
3.1	Input documents.....	10
3.2	Related standards and norms	11
3.3	Related specification	11
4	Constraints and assumptions	13
4.1	Limitations	13
4.2	Applicability to car domains.....	13
5	Dependencies to other modules.....	14
5.1	ECU State Manager (EcuM).....	14
5.2	BSW Scheduler (SchM)	14
5.3	Communication Manager (ComM)	15
5.4	CAN Interface (CanIf).....	15
5.5	Diagnostic Event Manager (DEM).....	15
5.6	Basic Software Mode Manager (BswM)	15
5.7	CAN Network Management (CanNm)	15
5.8	Default Error Tracer (DET)	15
5.9	File structure	15
5.9.1	Code file structure.....	15
5.9.2	Header file structure.....	16
5.9.3	Version check.....	17
6	Requirements traceability	18
7	Functional specification	24
7.1	General requirements.....	24
7.2	State machine for each CAN network	30
7.2.1	Trigger: PowerOn.....	31
7.2.2	Trigger: CanSM_Init.....	32
7.2.3	Trigger: CanSM_DeInit	33
7.2.4	Trigger: T_START_WAKEUP_SOURCE	33
7.2.5	Trigger: T_STOP_WAKEUP_SOURCE	35
7.2.6	Trigger: T_FULL_COM_MODE_REQUEST	36
7.2.7	Trigger: T_NO_COM_MODE_REQUEST	36
7.2.8	Trigger: T_BUS_OFF	36
7.2.9	Trigger: T_REPEAT_MAX	38
7.2.10	Guarding condition: G_FULL_COM_MODE_REQUESTED	39
7.2.11	Guarding condition: G_SILENT_COM_MODE_REQUESTED	41
7.2.12	Effect: E_PRE_NOCOM	42
7.2.13	Effect: E_NOCOM.....	44
7.2.14	Effect: E_FULL_COM	47
7.2.15	Effect: E_FULL_TO_SILENT_COM	51
7.2.16	Effect: E_BR_END_FULL_COM.....	55
7.2.17	Effect: E_BR_END_SILENT_COM	56

7.2.18	Effect: E_SILENT_TO_FULL_COM	57
7.2.19	Sub state machine CANSM_BSM_WUVALIDATION.....	58
7.2.20	Sub state machine: CANSM_BSM_S_PRE_NOCOM	61
7.2.21	Sub state machine: CANSM_BSM_S_SILENTCOM_BOR.....	72
7.2.22	Sub state machine: CANSM_BSM_S_PRE_FULLCOM	74
7.2.23	Sub state machine CANSM_BSM_S_FULLCOM	77
7.2.24	Sub state machine: CANSM_BSM_S_CHANGE_BAUDRATE	86
7.3	Error classification	89
7.3.1	Development Errors	90
7.3.2	Runtime Errors	90
7.3.3	Transient Faults	90
7.3.4	Production Errors	90
7.3.5	CANSM_E_BUS_OFF	90
7.4	Pretended Networking function	91
7.4.1	Activation	91
7.4.2	Deactivation	91
7.5	ECU online active / passive mode.....	91
7.6	Error detection.....	92
7.7	Error notification	92
7.8	Interface for AUTOSAR debug and trace	92
7.9	Non-functional design rules.....	92
8	API specification	93
8.1	Imported types.....	93
8.2	Type definitions	94
8.2.1	CanSM_StateType	94
8.2.2	CanSM_ConfigType	94
8.2.3	CanSM_BswMCurrentStateType	94
8.3	Function definitions	95
8.3.1	CanSM_Init	95
8.3.2	CanSM_DeInit.....	95
8.3.3	CanSM_RequestComMode	96
8.3.4	CanSM_GetCurrentComMode	97
8.3.5	CanSM_StartWakeupSource	98
8.3.6	CanSM_StopWakeupSource	99
8.3.7	Optional.....	101
8.3.8	Call-back notifications	104
8.3.9	CanSM_ControllerBusOff.....	104
8.3.10	CanSM_ControllerModeIndication	105
8.3.11	CanSM_TransceiverModeIndication	105
8.3.12	CanSM_TxTimeoutException.....	106
8.3.13	CanSM_ClearTrcvWufFlagIndication	106
8.3.14	CanSM_CheckTransceiverWakeFlagIndication	107
8.3.15	CanSM_ConfirmPnAvailability	108
8.3.16	CanSM_CurrentIcomConfiguration	108
8.4	Scheduled functions	109
8.4.1	CanSM_MainFunction.....	109
8.5	Expected Interfaces.....	109
8.5.1	Mandatory Interfaces	109
8.5.2	Optional Interfaces	110

8.5.3	Configurable Interfaces	110
9	Sequence diagrams	112
9.1	Sequence diagram CanSm_StartCanController	113
9.2	Sequence diagram CanSm_StopCanController	114
10	Configuration specification	115
10.1	How to read this chapter	115
10.2	Containers and configuration parameters	115
10.2.1	CanSM	115
10.2.2	CanSMConfiguration	115
10.2.3	CanSMGeneral	116
10.2.4	CanSMManagerNetwork	119
10.2.5	CanSMController	122
10.2.6	CanSMDemEventParameterRefs	122
10.3	Published Information	123
11	CanSM unspecific / not applicable requirements	124

1 Introduction and functional overview

This specification describes the functionality, API and the configuration for the AUTOSAR Basic Software module CAN State Manager.

The AUTOSAR BSW stack specifies for each communication bus a bus specific state manager. This module shall implement the control flow for the respective bus. Like shown in the figure below, the CAN State Manager (CanSM) is a member of the Communication Service Layer. It interacts with the Communication Hardware Abstraction Layer and the System Service Layer.

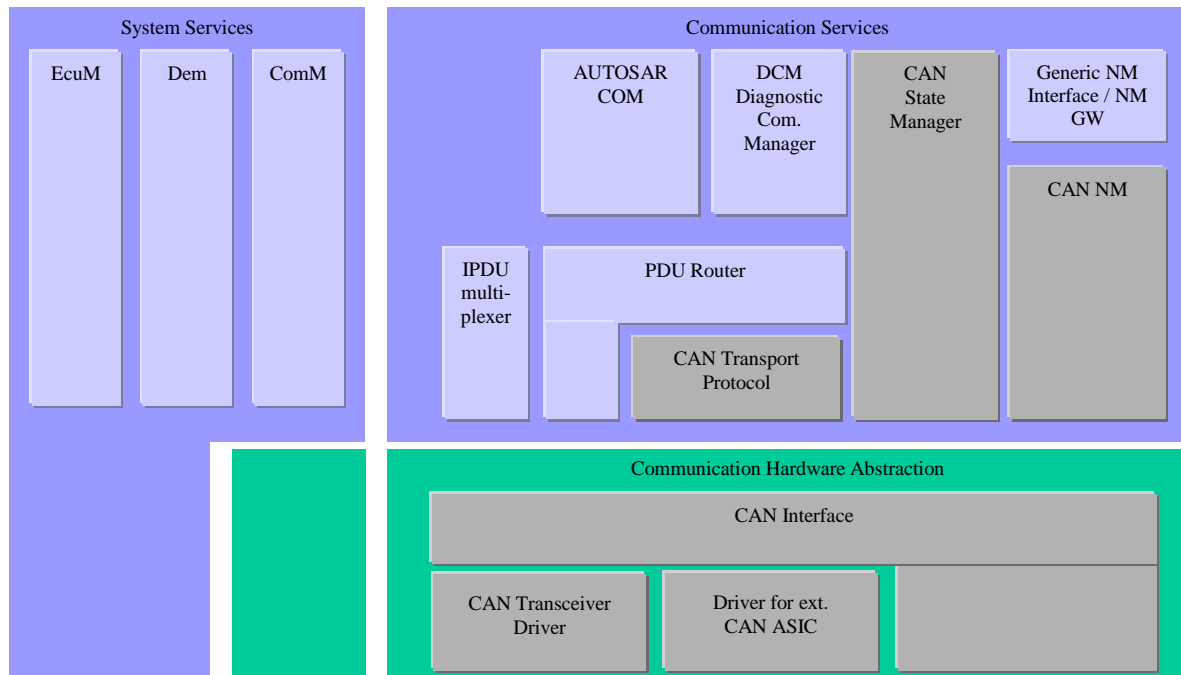


Figure 1-1: Layered Software Architecture from CanSM point of view

2 Acronyms and abbreviations

Abbreviation / Acronym:	Description:
API	Application Program Interface
BSW	Basic Software
CAN	Controller Area Network
CanIf	CAN Interface
CanSM	CAN State Manager
ComM	Communication Manager
DEM	Diagnostic Event Manager
DET	Default Error Tracer
EcuM	ECU State Manager
PDU	Protocol Data Unit
RX	Receive
TX	Transmit
SchM	BSW Scheduler
SWC	Software Component
BswM	Basic Software Mode Manager

3 Related documentation

3.1 Input documents

[1] List of Basic Software Modules

AUTOSAR_TR_BSWModuleList.pdf

[2] Layered Software Architecture

AUTOSAR_EXP_LayeredSoftwareArchitecture.pdf

[3] General Requirements on Basic Software Modules

AUTOSAR_SRS_BSWGeneral.pdf

[4] Specification of ECU Configuration

AUTOSAR_TPS_ECUConfiguration.pdf

[5] Specification of Standard Types

AUTOSAR_SWS_StandardTypes.pdf

[6] Specification of Communication Stack Types

AUTOSAR_SWS_CommunicationStackTypes.pdf

[7] Requirements on CAN

AUTOSAR_SRS_CAN.pdf

[8] Requirements on Mode Management

AUTOSAR_SRS_ModeManagement.pdf

[9] Specification of CAN Transceiver Driver

AUTOSAR_SWS_CANTransceiverDriver.pdf

[10] Specification of Communication Manager

AUTOSAR_SWS_COMManager.pdf

[11] Specification of ECU State Manager

AUTOSAR_SWS_ECUStateManager.pdf

[12] Specification of Diagnostics Event Manager

AUTOSAR_SWS_DiagnosticEventManager.pdf

[13] Specification of CAN Interface

AUTOSAR_SWS_CANInterface.pdf

[14] Specification of BSW Scheduler

AUTOSAR_SWS_BSW_Scheduler.pdf

[15] Specification of Default Error Tracer

AUTOSAR_SWS_DevelopmentErrorTracer.pdf

[16] Debugging Concept (internal)

[17] Vehicle and Application Mode Management Concept (internal)

[18] Specification of Basic Software Mode Manager

AUTOSAR_SWS_BSWModeManager.pdf

[19] Specification of CAN Network Management, AUTOSAR_SWS_Can_NM.pdf

[20] Specification of Diagnostic Communication Manager

AUTOSAR_SWS_DiagnosticCommunicationManager.pdf

[21] General Specification of Basic Software Modules

AUTOSAR_SWS_BSWGeneral.pdf

3.2 Related standards and norms

None

3.3 Related specification

AUTOSAR provides a General Specification on Basic Software modules [21] (SWS BSW General), which is also valid for CAN State Manager.

Thus, the specification SWS BSW General shall be considered as additional and required specification for CAN State Manager.

4 Constraints and assumptions

4.1 Limitations

The CanSM module can be used for CAN communication only. Its task is to operate with the CanIf module to control one or multiple underlying CAN Controllers and CAN Transceiver Drivers. Other protocols than CAN (i.e. LIN or FlexRay) are not supported.

4.2 Applicability to car domains

The CAN State Manager module can be used for all domain applications whenever the CAN protocol is used.

5 Dependencies to other modules

The next sections give a brief description of configuration information and services the CanSM module requires from other modules.

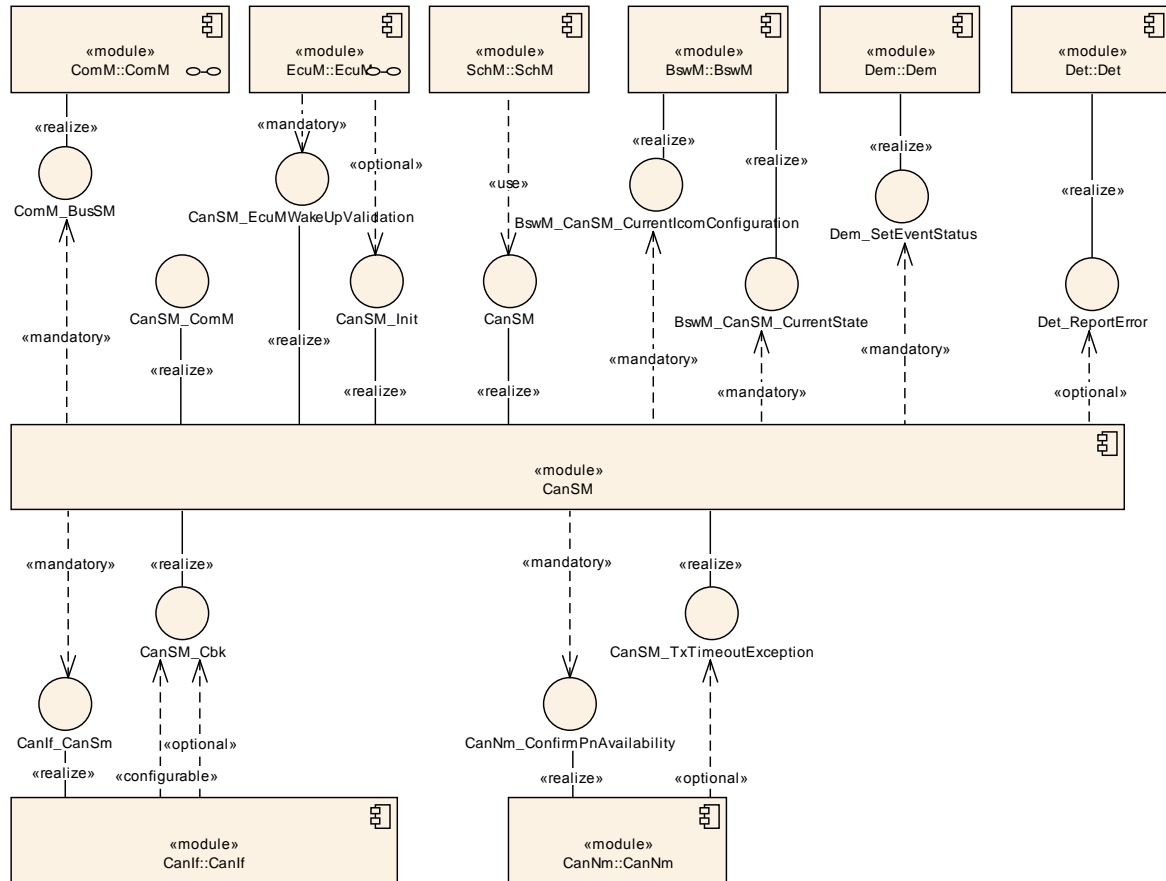


Figure 5-1: Module dependencies of the CanSM module

5.1 ECU State Manager (EcuM)

The EcuM module initializes the CanSM module and interacts with the CanSM module for the CAN wakeup validation (refer to [11] for a detailed specification of this module).

5.2 BSW Scheduler (SchM)

The BSW Scheduler module calls the main function of the CanSM module, which is necessary for the cyclic processes of the CanSM module (refer to [14] for a detailed specification of this module).

5.3 Communication Manager (ComM)

The ComM module uses the API of the CanSM module to request communication modes of CAN networks, which are identified with unique network handles (refer to [10] for a detailed specification of this module).

The CanSM module notifies the current communication mode of its CAN networks to the ComM module.

5.4 CAN Interface (CanIf)

The CanSM module uses the API of the CanIf module to control the operating modes of the CAN controllers and CAN transceivers assigned to the CAN networks (refer to [13] for a detailed specification of this module).

The CanIf module notifies the CanSM module about peripheral events.

5.5 Diagnostic Event Manager (DEM)

The CanSM module reports bus specific production errors to the DEM module (refer to [12] for a detailed specification of this module).

5.6 Basic Software Mode Manager (BswM)

The CanSM need to notify bus specific mode changes to the BswM module (refer to [18] for a detailed specification of this module).

5.7 CAN Network Management (CanNm)

The CanSM module needs to notify the partial network availability to the CanNm module and shall handle notified CanNm timeout exceptions in case of partial networking (ref. to [19] for a detailed specification of this module).

5.8 Default Error Tracer (DET)

The CanSM module reports development errors to the DET module, if development error handling is switched on by configuration (refer to [15] for a detailed specification of this module).

5.9 File structure

5.9.1 Code file structure

For details refer to the chapter 5.1.6 “Code file structure” in *SWS_BSWGeneral*

5.9.2 Header file structure

[SWS_CanSM_00008] [The header file `CanSM.h` shall export `CanSM` module specific types and the APIs `CanSM_GetVersionInfo`, `CanSM_MainFunction` and `CanSM_Init`.] (SRS_BSW_00447)

[SWS_CanSM_00238] [The header file `CanSM.h` shall include the header file `ComStack_Types.h`.] (SRS_Can_01142)

Remark: The header file `ComStack_Types.h` includes the header file `Std_Types.h`

[SWS_CanSM_00174] [The header file `CanSM.h` shall include the header file `ComM.h`.] (SRS_Can_01142)

Rationale: Some APIs of the `CanSM` use type definitions of the `ComM` module.

[SWS_CanSM_00009] [The header file `CanSM_ComM.h` shall export the interfaces and the corresponding types, which are dedicated to the `ComM` module.] (SRS_Can_01142)

[SWS_CanSM_00010] [The header file `CanSM_Cfg.h` shall contain references to the parameters of the c-source files `CanSM_Lcfg.c` and `CanSM_PBcfg.c` (see section 5.9.1 above) and shall contain pre-compile parameters, which are not declared as “const” parameter, but as defines.] (SRS_BSW_00344, SRS_BSW_00404, SRS_BSW_00345, SRS_BSW_00381, SRS_BSW_00412)

[SWS_CanSM_00015] [The `CanSM` module (`CanSM.c`) shall include the header file `Det.h`.] (SRS_BSW_00171)

Rationale: The functions declared in `Det.h` are used to report development errors.

[SWS_CanSM_00017] [The `CanSM` module (`CanSM.c`) shall include the header file `CanIf.h`.] (SRS_Can_01145)

Rationale: The API of the `CanIf` module is needed for peripheral control.

[SWS_CanSM_00191] [The `CanSM` module (`CanSM.c`) shall include the header file `ComM_BusSM.h`.] (SRS_Can_01142)

Rationale: The file `ComM_BusSM.h` provides the API of the `ComM` module, which is exclusively intended for the bus state managers.

[SWS_CanSM_00347] [The header file `CanSM_BswM.h` shall export the interfaces and the corresponding types, which are dedicated to the `BswM` module.] (SRS_Can_01142)

[SWS_CanSM_00348] [The `CanSM` module (`CanSM.c`) shall include the header file `CanSM_BswM.h`.] (SRS_Can_01142)

[SWS_CanSM_00548] [The `CanSM` module (`CanSM.c`) shall include the header file `CanNm_Cbk.h`, if Partial Networking is enabled (ref. to [ECUC_CanSM_00344](#)).] (SRS_Can_01142)

[SWS_CanSM_00549] [The header file `CanSM_TxTimeoutException.h` shall provide the callback function `CanSM_TxTimeoutException` as optional interface to the `CanNm` module.] (SRS_Can_01142)

5.9.3 Version check

For details refer to the chapter 5.1.8 “Version Check” in *SWS_BSWGeneral*.

6 Requirements traceability

Requirement	Description	Satisfied by
SRS_BSW_00003	All software modules shall provide version and identification information	SWS_CanSM_00024, SWS_CanSM_00374
SRS_BSW_00101	The Basic Software Module shall be able to initialize variables and hardware in a separate initialization function	SWS_CanSM_00023, SWS_CanSM_00596
SRS_BSW_00171	Optional functionality of a Basic-SW component that is not required in the ECU shall be configurable at pre-compile-time	SWS_CanSM_00015
SRS_BSW_00333	For each callback function it shall be specified if it is called from interrupt context or not	SWS_CanSM_00064, SWS_CanSM_00189, SWS_CanSM_00190, SWS_CanSM_00235
SRS_BSW_00336	Basic SW module shall be able to shutdown	SWS_CanSM_91001
SRS_BSW_00337	Classification of development errors	SWS_CanSM_00654
SRS_BSW_00344	BSW Modules shall support link-time configuration	SWS_CanSM_00010
SRS_BSW_00345	BSW Modules shall support pre-compile configuration	SWS_CanSM_00010
SRS_BSW_00358	The return type of init() functions implemented by AUTOSAR Basic Software Modules shall be void	SWS_CanSM_00023, SWS_CanSM_00596
SRS_BSW_00359	All AUTOSAR Basic Software Modules callback functions shall avoid return types other than void if possible	SWS_CanSM_00064, SWS_CanSM_00189, SWS_CanSM_00190, SWS_CanSM_00235
SRS_BSW_00369	All AUTOSAR Basic Software Modules shall not return specific development error codes via the API	SWS_CanSM_00660
SRS_BSW_00381	The pre-compile time parameters shall be placed into a separate configuration header file	SWS_CanSM_00010

SRS_BSW_00400	Parameter shall be selected from multiple sets of parameters after code has been loaded and started	SWS_CanSM_00023, SWS_CanSM_00597
SRS_BSW_00404	BSW Modules shall support post-build configuration	SWS_CanSM_00010, SWS_CanSM_00023, SWS_CanSM_00596
SRS_BSW_00405	BSW Modules shall support multiple configuration sets	SWS_CanSM_00023, SWS_CanSM_00596
SRS_BSW_00406	A static status variable denoting if a BSW module is initialized shall be initialized with value 0 before any APIs of the BSW module is called	SWS_CanSM_00023, SWS_CanSM_00184, SWS_CanSM_00596
SRS_BSW_00407	Each BSW module shall provide a function to read out the version information of a dedicated module implementation	SWS_CanSM_00024, SWS_CanSM_00374
SRS_BSW_00412	References to c-configuration parameters shall be placed into a separate h-file	SWS_CanSM_00010
SRS_BSW_00414	Init functions shall have a pointer to a configuration structure as single parameter	SWS_CanSM_00023, SWS_CanSM_00596
SRS_BSW_00422	Pre-de-bouncing of error status information is done within the DEM	SWS_CanSM_00498, SWS_CanSM_00522, SWS_CanSM_00605
SRS_BSW_00424	BSW module main processing functions shall not be allowed to enter a wait state	SWS_CanSM_00065, SWS_CanSM_00167
SRS_BSW_00425	The BSW module description template shall provide means to model the defined trigger conditions of schedulable objects	SWS_CanSM_00065, SWS_CanSM_00167
SRS_BSW_00438	Configuration data shall be defined in a structure	SWS_CanSM_00023, SWS_CanSM_00597
SRS_BSW_00447	Standardizing Include file structure of BSW Modules Implementing Autosar Service	SWS_CanSM_00008
SRS_Can_01142	The CAN State Manager shall offer a network abstract API to upper	SWS_CanSM_00009, SWS_CanSM_00062, SWS_CanSM_00065, SWS_CanSM_00167, SWS_CanSM_00174, SWS_CanSM_00182,

	layer	SWS_CanSM_00183, SWS_CanSM_00186, SWS_CanSM_00187, SWS_CanSM_00188, SWS_CanSM_00191, SWS_CanSM_00238, SWS_CanSM_00266, SWS_CanSM_00278, SWS_CanSM_00282, SWS_CanSM_00284, SWS_CanSM_00347, SWS_CanSM_00348, SWS_CanSM_00360, SWS_CanSM_00369, SWS_CanSM_00370, SWS_CanSM_00371, SWS_CanSM_00372, SWS_CanSM_00385, SWS_CanSM_00399, SWS_CanSM_00410, SWS_CanSM_00422, SWS_CanSM_00423, SWS_CanSM_00425, SWS_CanSM_00426, SWS_CanSM_00427, SWS_CanSM_00428, SWS_CanSM_00429, SWS_CanSM_00430, SWS_CanSM_00431, SWS_CanSM_00432, SWS_CanSM_00433, SWS_CanSM_00434, SWS_CanSM_00436, SWS_CanSM_00437, SWS_CanSM_00438, SWS_CanSM_00439, SWS_CanSM_00440, SWS_CanSM_00441, SWS_CanSM_00442, SWS_CanSM_00443, SWS_CanSM_00444, SWS_CanSM_00445, SWS_CanSM_00446, SWS_CanSM_00447, SWS_CanSM_00448, SWS_CanSM_00449, SWS_CanSM_00450, SWS_CanSM_00451, SWS_CanSM_00452, SWS_CanSM_00453, SWS_CanSM_00454, SWS_CanSM_00455, SWS_CanSM_00456, SWS_CanSM_00457, SWS_CanSM_00458, SWS_CanSM_00459, SWS_CanSM_00460, SWS_CanSM_00461, SWS_CanSM_00462, SWS_CanSM_00463, SWS_CanSM_00464, SWS_CanSM_00465, SWS_CanSM_00466, SWS_CanSM_00467, SWS_CanSM_00468, SWS_CanSM_00469, SWS_CanSM_00470, SWS_CanSM_00471, SWS_CanSM_00472, SWS_CanSM_00473, SWS_CanSM_00474, SWS_CanSM_00475, SWS_CanSM_00476, SWS_CanSM_00477, SWS_CanSM_00478, SWS_CanSM_00479, SWS_CanSM_00480, SWS_CanSM_00483, SWS_CanSM_00484, SWS_CanSM_00485, SWS_CanSM_00486, SWS_CanSM_00487, SWS_CanSM_00488, SWS_CanSM_00489, SWS_CanSM_00490, SWS_CanSM_00491, SWS_CanSM_00492, SWS_CanSM_00493, SWS_CanSM_00494, SWS_CanSM_00495, SWS_CanSM_00496, SWS_CanSM_00497, SWS_CanSM_00499, SWS_CanSM_00500, SWS_CanSM_00502, SWS_CanSM_00503, SWS_CanSM_00504, SWS_CanSM_00505, SWS_CanSM_00506, SWS_CanSM_00507, SWS_CanSM_00508, SWS_CanSM_00509, SWS_CanSM_00510, SWS_CanSM_00511, SWS_CanSM_00512, SWS_CanSM_00514, SWS_CanSM_00515, SWS_CanSM_00517, SWS_CanSM_00518, SWS_CanSM_00521, SWS_CanSM_00523, SWS_CanSM_00524, SWS_CanSM_00525, SWS_CanSM_00526, SWS_CanSM_00527, SWS_CanSM_00528, SWS_CanSM_00529, SWS_CanSM_00530, SWS_CanSM_00531, SWS_CanSM_00532,
--	-------	--

		SWS_CanSM_00533, SWS_CanSM_00534, SWS_CanSM_00535, SWS_CanSM_00536, SWS_CanSM_00538, SWS_CanSM_00540, SWS_CanSM_00541, SWS_CanSM_00542, SWS_CanSM_00543, SWS_CanSM_00548, SWS_CanSM_00549, SWS_CanSM_00550, SWS_CanSM_00554, SWS_CanSM_00555, SWS_CanSM_00556, SWS_CanSM_00557, SWS_CanSM_00558, SWS_CanSM_00561, SWS_CanSM_00569, SWS_CanSM_00575, SWS_CanSM_00576, SWS_CanSM_00577, SWS_CanSM_00578, SWS_CanSM_00579, SWS_CanSM_00580, SWS_CanSM_00581, SWS_CanSM_00582, SWS_CanSM_00584, SWS_CanSM_00586, SWS_CanSM_00587, SWS_CanSM_00588, SWS_CanSM_00589, SWS_CanSM_00590, SWS_CanSM_00591, SWS_CanSM_00593, SWS_CanSM_00594, SWS_CanSM_00595, SWS_CanSM_00599, SWS_CanSM_00600, SWS_CanSM_00602, SWS_CanSM_00603, SWS_CanSM_00604, SWS_CanSM_00607, SWS_CanSM_00608, SWS_CanSM_00623, SWS_CanSM_00624, SWS_CanSM_00625, SWS_CanSM_00626, SWS_CanSM_00627, SWS_CanSM_00628, SWS_CanSM_00629, SWS_CanSM_00630, SWS_CanSM_00631, SWS_CanSM_00632, SWS_CanSM_00633, SWS_CanSM_00634, SWS_CanSM_00635, SWS_CanSM_00636, SWS_CanSM_00639, SWS_CanSM_00641, SWS_CanSM_00642, SWS_CanSM_00651, SWS_CanSM_00653
SRS_Can_01144	The CAN State Manager shall support a configurable BusOff recovery time	SWS_CanSM_00600, SWS_CanSM_00602, SWS_CanSM_00603, SWS_CanSM_00604, SWS_CanSM_00606, SWS_CanSM_00637
SRS_Can_01145	The CAN State Manager shall control the assigned CAN Devices	SWS_CanSM_00017, SWS_CanSM_00062, SWS_CanSM_00065, SWS_CanSM_00167, SWS_CanSM_00182, SWS_CanSM_00183, SWS_CanSM_00369, SWS_CanSM_00370, SWS_CanSM_00395, SWS_CanSM_00396, SWS_CanSM_00397, SWS_CanSM_00398, SWS_CanSM_00399, SWS_CanSM_00400, SWS_CanSM_00401, SWS_CanSM_00410, SWS_CanSM_00411, SWS_CanSM_00412, SWS_CanSM_00413, SWS_CanSM_00414, SWS_CanSM_00415, SWS_CanSM_00416, SWS_CanSM_00417, SWS_CanSM_00418, SWS_CanSM_00419, SWS_CanSM_00420, SWS_CanSM_00421, SWS_CanSM_00423, SWS_CanSM_00425, SWS_CanSM_00426, SWS_CanSM_00427, SWS_CanSM_00428, SWS_CanSM_00429, SWS_CanSM_00430, SWS_CanSM_00431, SWS_CanSM_00432, SWS_CanSM_00433, SWS_CanSM_00434, SWS_CanSM_00436, SWS_CanSM_00437, SWS_CanSM_00438, SWS_CanSM_00439, SWS_CanSM_00440, SWS_CanSM_00441, SWS_CanSM_00442, SWS_CanSM_00443,

		SWS_CanSM_00444, SWS_CanSM_00445, SWS_CanSM_00446, SWS_CanSM_00447, SWS_CanSM_00448, SWS_CanSM_00449, SWS_CanSM_00450, SWS_CanSM_00451, SWS_CanSM_00452, SWS_CanSM_00453, SWS_CanSM_00454, SWS_CanSM_00455, SWS_CanSM_00456, SWS_CanSM_00457, SWS_CanSM_00458, SWS_CanSM_00459, SWS_CanSM_00460, SWS_CanSM_00461, SWS_CanSM_00462, SWS_CanSM_00463, SWS_CanSM_00464, SWS_CanSM_00465, SWS_CanSM_00466, SWS_CanSM_00467, SWS_CanSM_00468, SWS_CanSM_00469, SWS_CanSM_00470, SWS_CanSM_00471, SWS_CanSM_00472, SWS_CanSM_00473, SWS_CanSM_00474, SWS_CanSM_00475, SWS_CanSM_00476, SWS_CanSM_00477, SWS_CanSM_00478, SWS_CanSM_00479, SWS_CanSM_00480, SWS_CanSM_00483, SWS_CanSM_00484, SWS_CanSM_00485, SWS_CanSM_00486, SWS_CanSM_00487, SWS_CanSM_00488, SWS_CanSM_00489, SWS_CanSM_00490, SWS_CanSM_00491, SWS_CanSM_00492, SWS_CanSM_00493, SWS_CanSM_00494, SWS_CanSM_00495, SWS_CanSM_00496, SWS_CanSM_00497, SWS_CanSM_00499, SWS_CanSM_00500, SWS_CanSM_00507, SWS_CanSM_00508, SWS_CanSM_00509, SWS_CanSM_00510, SWS_CanSM_00511, SWS_CanSM_00512, SWS_CanSM_00514, SWS_CanSM_00515, SWS_CanSM_00517, SWS_CanSM_00518, SWS_CanSM_00521, SWS_CanSM_00523, SWS_CanSM_00524, SWS_CanSM_00525, SWS_CanSM_00526, SWS_CanSM_00527, SWS_CanSM_00528, SWS_CanSM_00529, SWS_CanSM_00531, SWS_CanSM_00532, SWS_CanSM_00533, SWS_CanSM_00534, SWS_CanSM_00535, SWS_CanSM_00536, SWS_CanSM_00538, SWS_CanSM_00540, SWS_CanSM_00541, SWS_CanSM_00542, SWS_CanSM_00543, SWS_CanSM_00546, SWS_CanSM_00550, SWS_CanSM_00554, SWS_CanSM_00555, SWS_CanSM_00556, SWS_CanSM_00557, SWS_CanSM_00558, SWS_CanSM_00560, SWS_CanSM_00575, SWS_CanSM_00576, SWS_CanSM_00577, SWS_CanSM_00578, SWS_CanSM_00579, SWS_CanSM_00580, SWS_CanSM_00581, SWS_CanSM_00582, SWS_CanSM_00584, SWS_CanSM_00588, SWS_CanSM_00589, SWS_CanSM_00590, SWS_CanSM_00591, SWS_CanSM_00600, SWS_CanSM_00602, SWS_CanSM_00603, SWS_CanSM_00604, SWS_CanSM_00607, SWS_CanSM_00608, SWS_CanSM_00609, SWS_CanSM_00610, SWS_CanSM_00611, SWS_CanSM_00612, SWS_CanSM_00613, SWS_CanSM_00616, SWS_CanSM_00617, SWS_CanSM_00618, SWS_CanSM_00619, SWS_CanSM_00620,
--	--	--

		SWS_CanSM_00621, SWS_CanSM_00622, SWS_CanSM_00623, SWS_CanSM_00624, SWS_CanSM_00625, SWS_CanSM_00626, SWS_CanSM_00627, SWS_CanSM_00628, SWS_CanSM_00629, SWS_CanSM_00630, SWS_CanSM_00631, SWS_CanSM_00632, SWS_CanSM_00633, SWS_CanSM_00634, SWS_CanSM_00636, SWS_CanSM_00638, SWS_CanSM_00639, SWS_CanSM_00641, SWS_CanSM_00642, SWS_CanSM_00651, SWS_CanSM_00653
SRS_Can_01146	The CAN State Manager shall contain a CAN BusOff recovery algorithm for each used CAN Controller	SWS_CanSM_00600, SWS_CanSM_00602, SWS_CanSM_00603, SWS_CanSM_00604, SWS_CanSM_00606, SWS_CanSM_00637
SRS_Can_01158	The CAN stack shall provide a TX offline active mode for ECU passive mode	SWS_CanSM_00435, SWS_CanSM_00516, SWS_CanSM_00539, SWS_CanSM_00644, SWS_CanSM_00645, SWS_CanSM_00646, SWS_CanSM_00647, SWS_CanSM_00649, SWS_CanSM_00650, SWS_CanSM_00656
SRS_Can_01164	-	SWS_CanSM_00658, SWS_CanSM_91001
SRS_ModeMgm_09084	The Communication Manager shall provide an API which allows application to query the current communication mode	SWS_CanSM_00063
SRS_ModeMgm_09251	PNC communication state shall be forwarded to the BswM	SWS_CanSM_00598

7 Functional specification

This chapter specifies the different functions of the CanSM module in the AUTOSAR BSW architecture.

An ECU can have different communication networks. Each network has to be identified with an unique network handle. The ComM module requests communication modes from the networks. It knows by its configuration, which handle is assigned to what kind of network. In case of CAN, it uses the CanSM module.

The CanSM module is responsible for the control flow abstraction of CAN networks:

It changes the communication modes of the configured CAN networks depending on the mode requests from the ComM module.

Therefore the CanSM module uses the API of the CanIf module. The CanIf module is responsible for the control flow abstraction of the configured CAN Controllers and CAN Transceivers (the data flow abstraction of the CanIf module is not relevant for the CanSM module). Any change of the CAN Controller modes and CAN Transceiver modes will be notified by the CanIf module to the CanSM module. Depending on this notifications and state of the CAN network state machine, which the CanSM module shall implement for each configured CAN network, the CanSM module notifies the ComM and the BswM (ref. to chapter 7.2 for details).

7.1 General requirements

[SWS_CanSM_00266] [The CanSM module shall store the current network mode for each configured CAN network internally (ref. to to [ECUC_CanSM_00126](#)).] (SRS_Can_01142)

[SWS_CanSM_00284] [The internally stored network modes of the CanSM module can have the values `COMM_NO_COMMUNICATION`, `COMM_SILENT_COMMUNICATION`, `COMM_FULL_COMMUNICATION`.] (SRS_Can_01142)

[SWS_CanSM_00428] | All effects of the CanSM state machine CANSM_BSM (ref. to

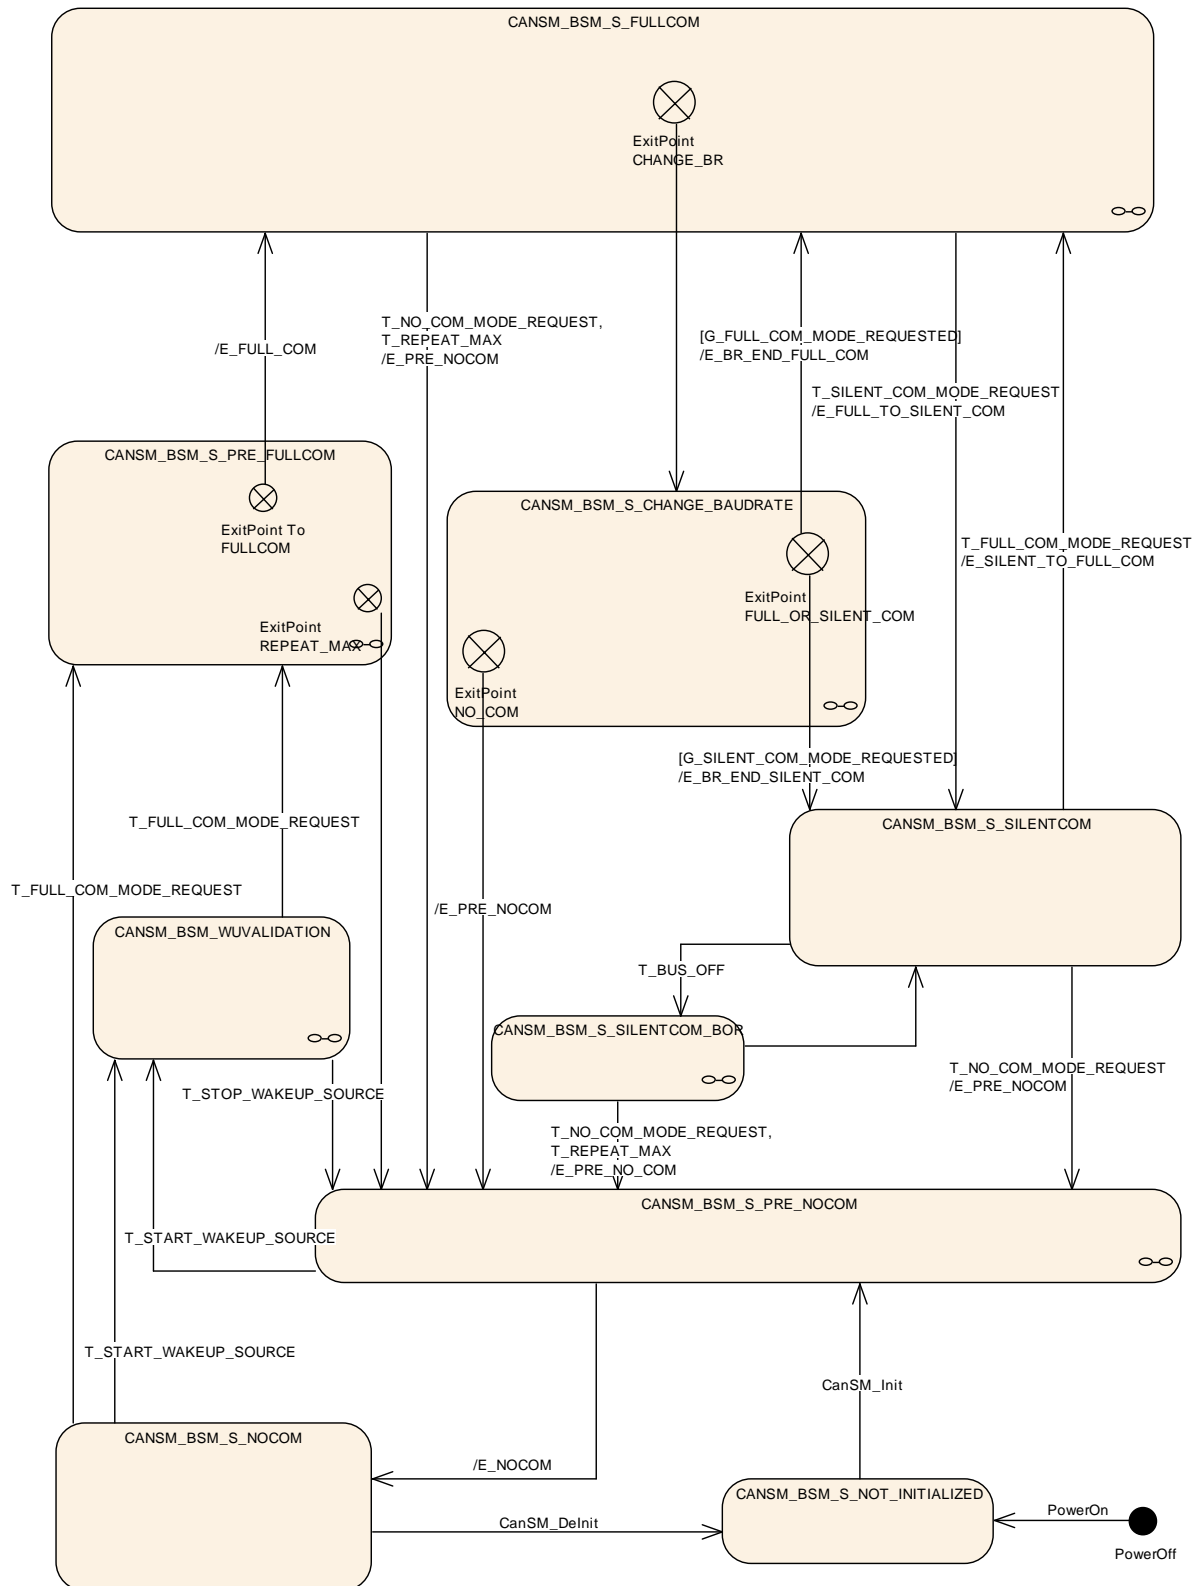


Figure 7-1), shall be operated in the context of the CanSM main function (ref. to [SWS CanSM_00065](#)).] (SRS_Can_01142, SRS_Can_01145)

[SWS_CanSM_00278] | If the CanSM state machine CANSM_BSM (ref. to

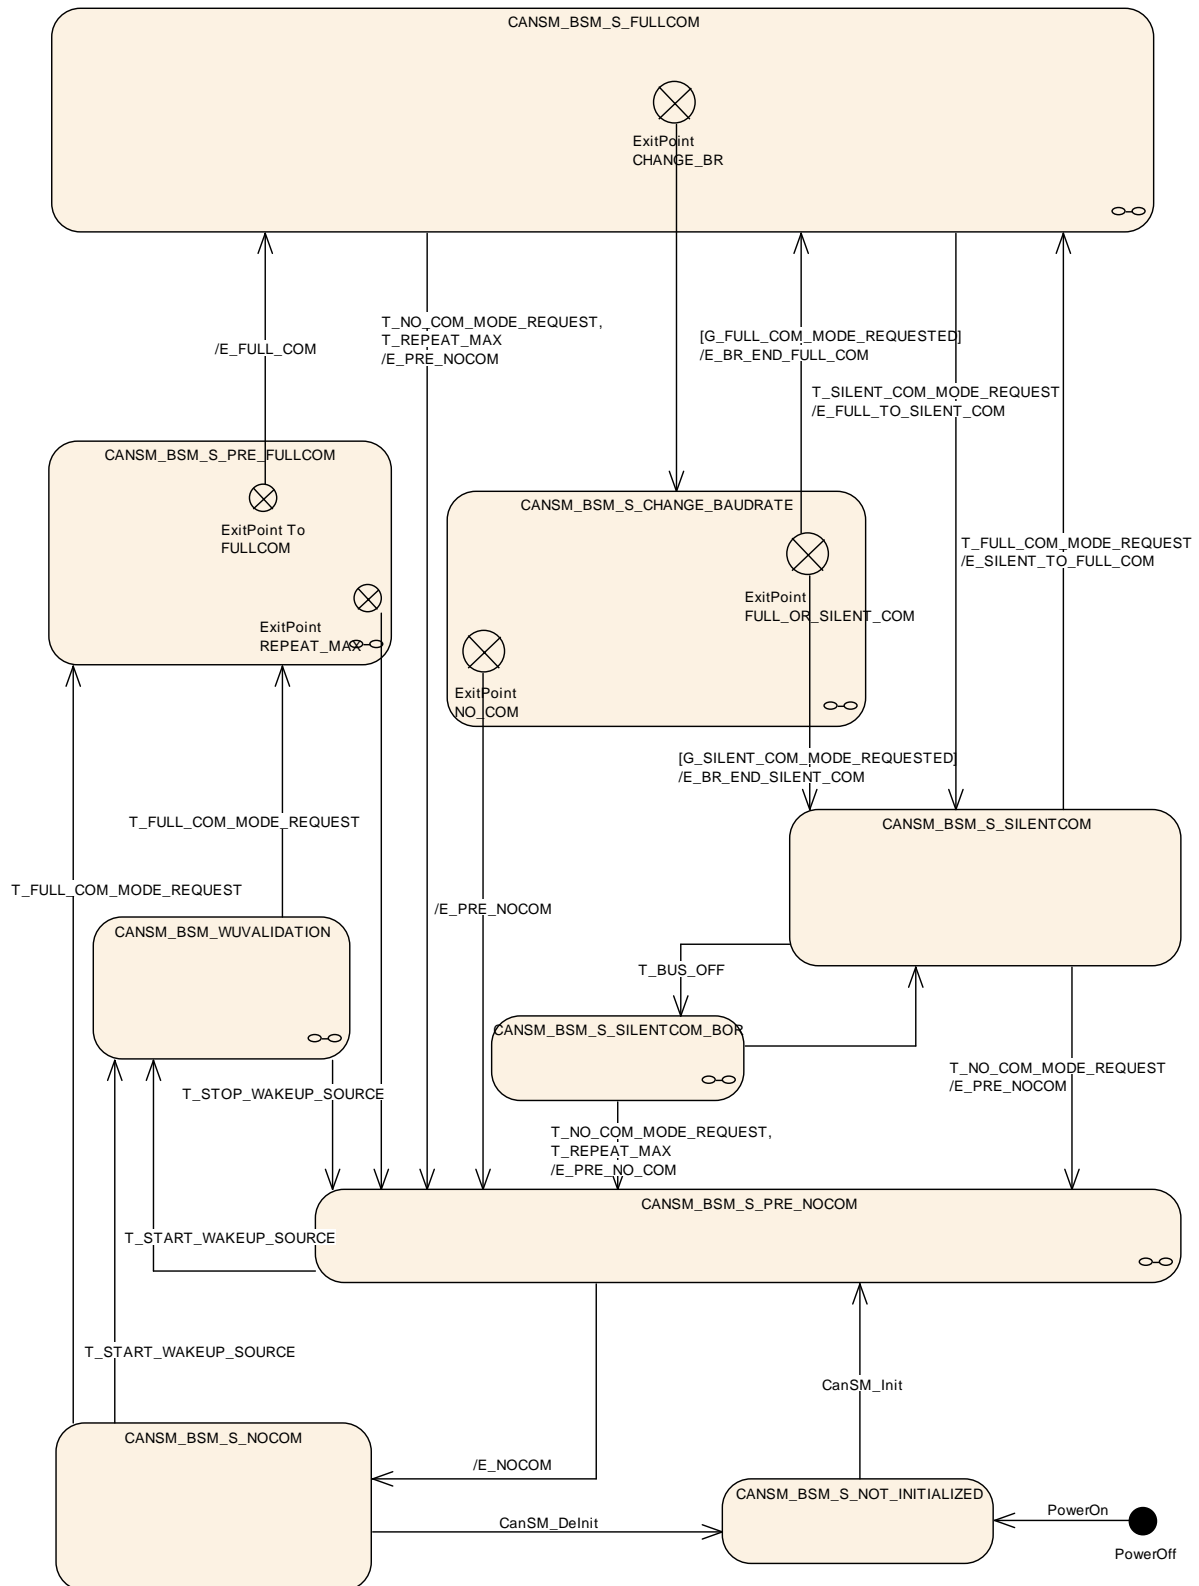


Figure 7-1) is in the state `CANSM_BSM_S_NOT_INITIALIZED`, it shall deny network mode requests from the ComM module (ref. to [SWS_CanSM_00062](#)).| (SRS_Can_01142)

[SWS_CanSM_00385] [If the CanSM module state machine was triggered with `T_REPEAT_MAX` (ref. to [SWS_CanSM_00463](#), [SWS_CanSM_00480](#), [SWS_CanSM_00495](#), [SWS_CanSM_00523](#), [SWS_CanSM_00536](#)), the CanSM module shall call the function `Det_ReportError` with the `ErrorId` parameter `CANSM_E_MODE_REQUEST_TIMEOUT` (ref. to chapter 7.3).] (SRS_Can_01142)

[SWS_CanSM_00422] [If the CanIf module notifies PN availability for a configured CAN Transceiver to the CanSM module with the callback function `CanSM_ConfirmPnAvailability` (ref. to [SWS_CanSM_00419](#)), then the CanSM module shall call the API `CanNm_ConfirmPnAvailability` (ref. to chapter 8.5.1) with the related CAN network as `channel` to confirm the PN availability to the CanNm module.] (SRS_Can_01142)

[SWS_CanSM_00560] [If no `CanSMTransceiverId` (ref. to [ECUC_CanSM_00137](#)) is configured for a CAN Network, then the CanSM module shall bypass all specified `CanIf_SetTrcvMode` (e. g. [SWS_CanSM_00446](#)) calls for the CAN Network and proceed in the different state transitions as if it has got the supposed `CanSM_TransceiverModeIndication` already (e. g. [SWS_CanSM_00448](#)).] (SRS_Can_01145)

[SWS_CanSM_00635] [The CanSM module shall store for each configured CAN network (ref. to [ECUC_CanSM_00126](#)) the latest communication mode request, which has been accepted by returning `E_OK` in the API request `CanSM_RequestComMode` (ref. to [SWS_CANSM_00062](#), [SWS_CANSM_00182](#)) and use it as trigger for the state machine of the related CAN network (ref. to

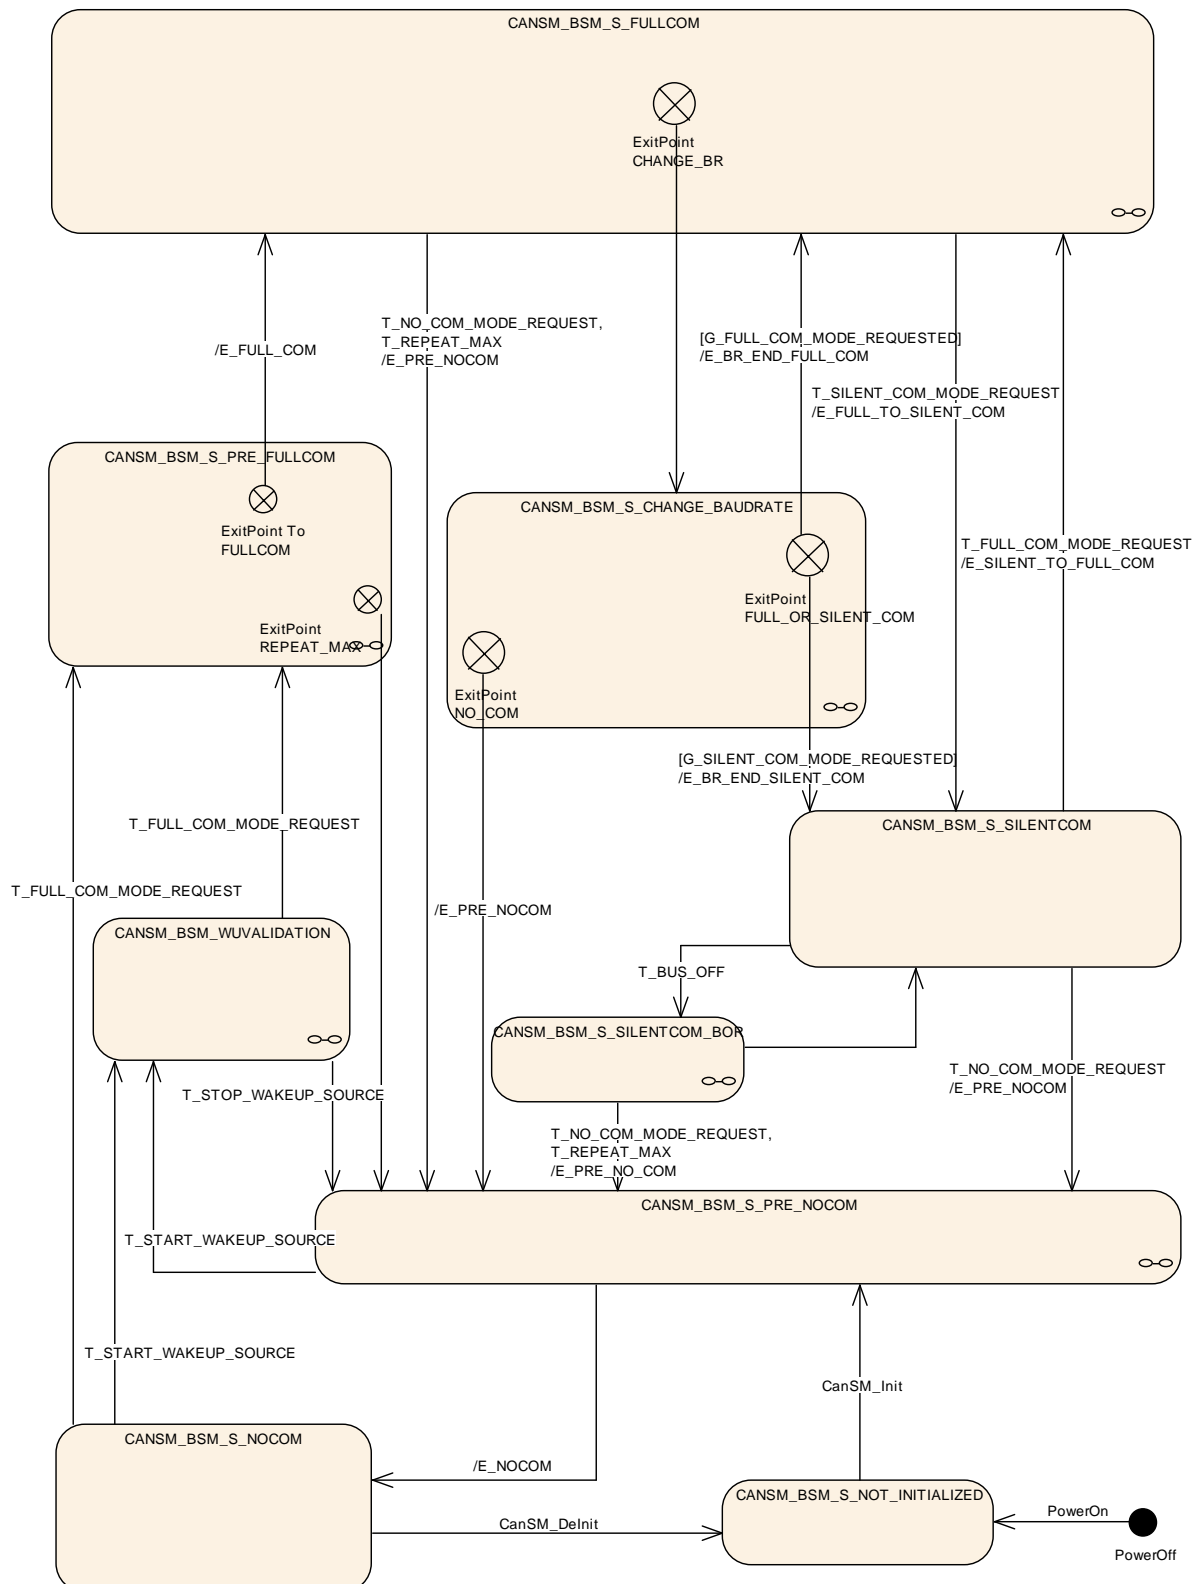


Figure 7-1, [SWS CanSM 00427](#), [SWS CanSM 00429](#), [SWS CanSM 00499](#), [SWS CanSM 00542](#), [SWS CanSM 00543](#), [SWS CANSM 00425](#), [SWS CANSM 00426](#), [SWS CANSM 00554](#)).| (SRS_Can_01142)

[SWS_CanSM_00638] The CanSM module shall store after every successful CAN controller mode change (ref. to [SWS_CANSW_00396](#)) or bus-off conditioned change

to CAN_CS_STOPPED (ref. to [SWS_CANSM_00064](#)), the changed mode internally for each CAN controller.] (SRS_Can_01145)

7.2 State machine for each CAN network

The following diagram specifies the behavioral state machine of the CanSM module, which shall be implemented for each configured CAN network (ref. to [ECUC CanSM_00126](#)).

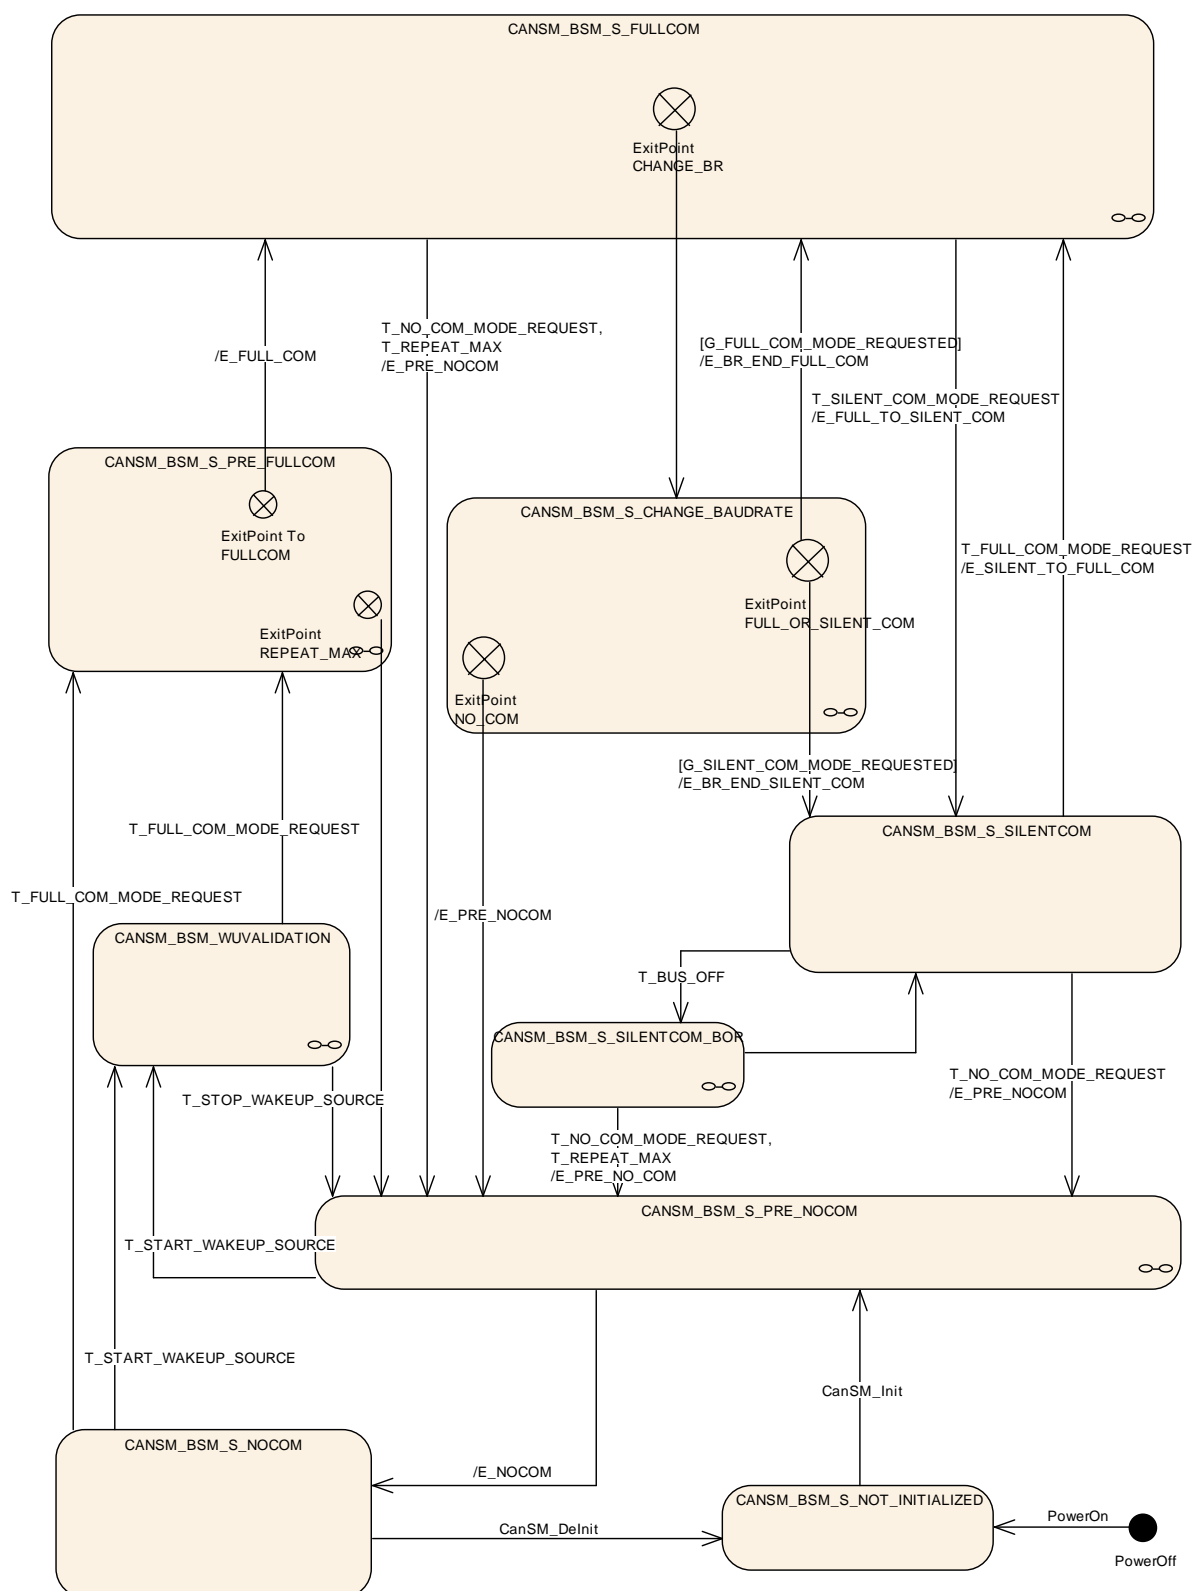


Figure 7-1: CANSIM_BSM, state machine diagram for one CAN network

7.2.1 Trigger: PowerOn

[SWS_CanSM_00424] [After PowerOn the CanSM state machines (ref. to

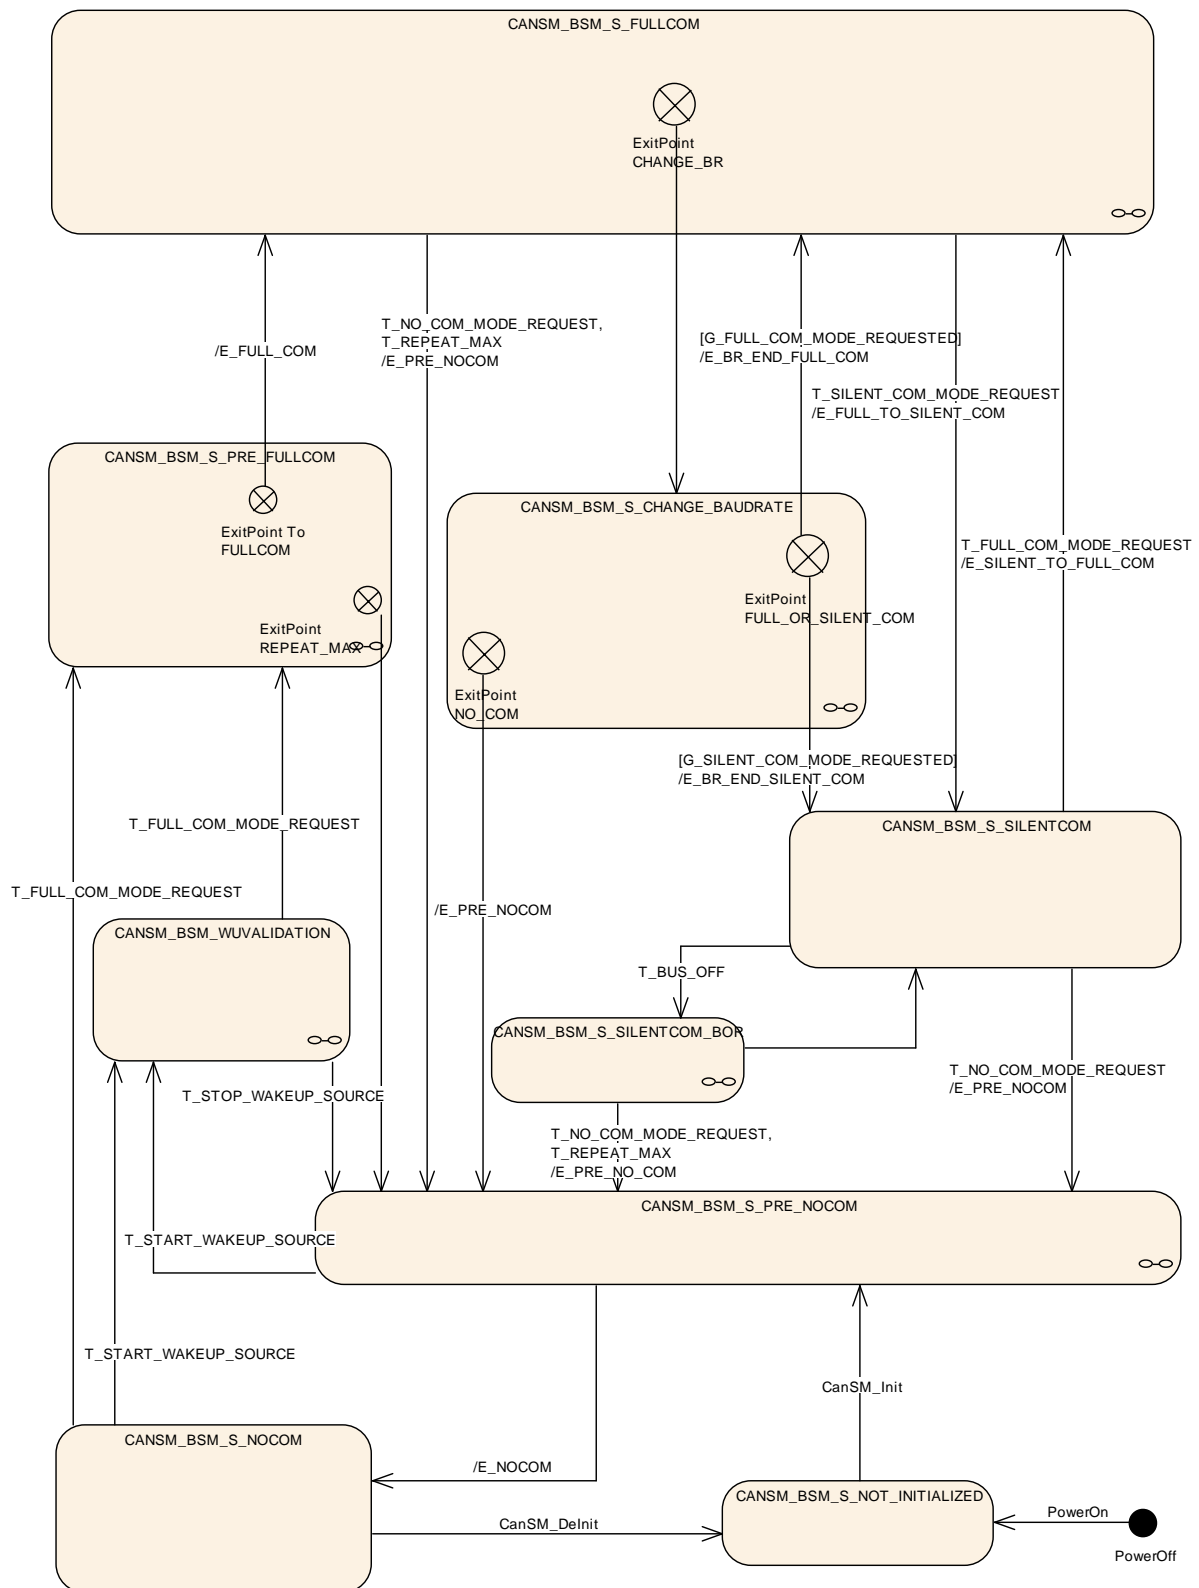


Figure 7-1) shall be in the state **CANSM_BSM_NOT_INITIALIZED**.]

7.2.2 Trigger: CanSM_Init

[SWS_CanSM_00423] If the CanSM module is requested with the function CanSM_Init (ref. to chapter 8.3.1), this shall trigger the CanSM state machines (ref. to

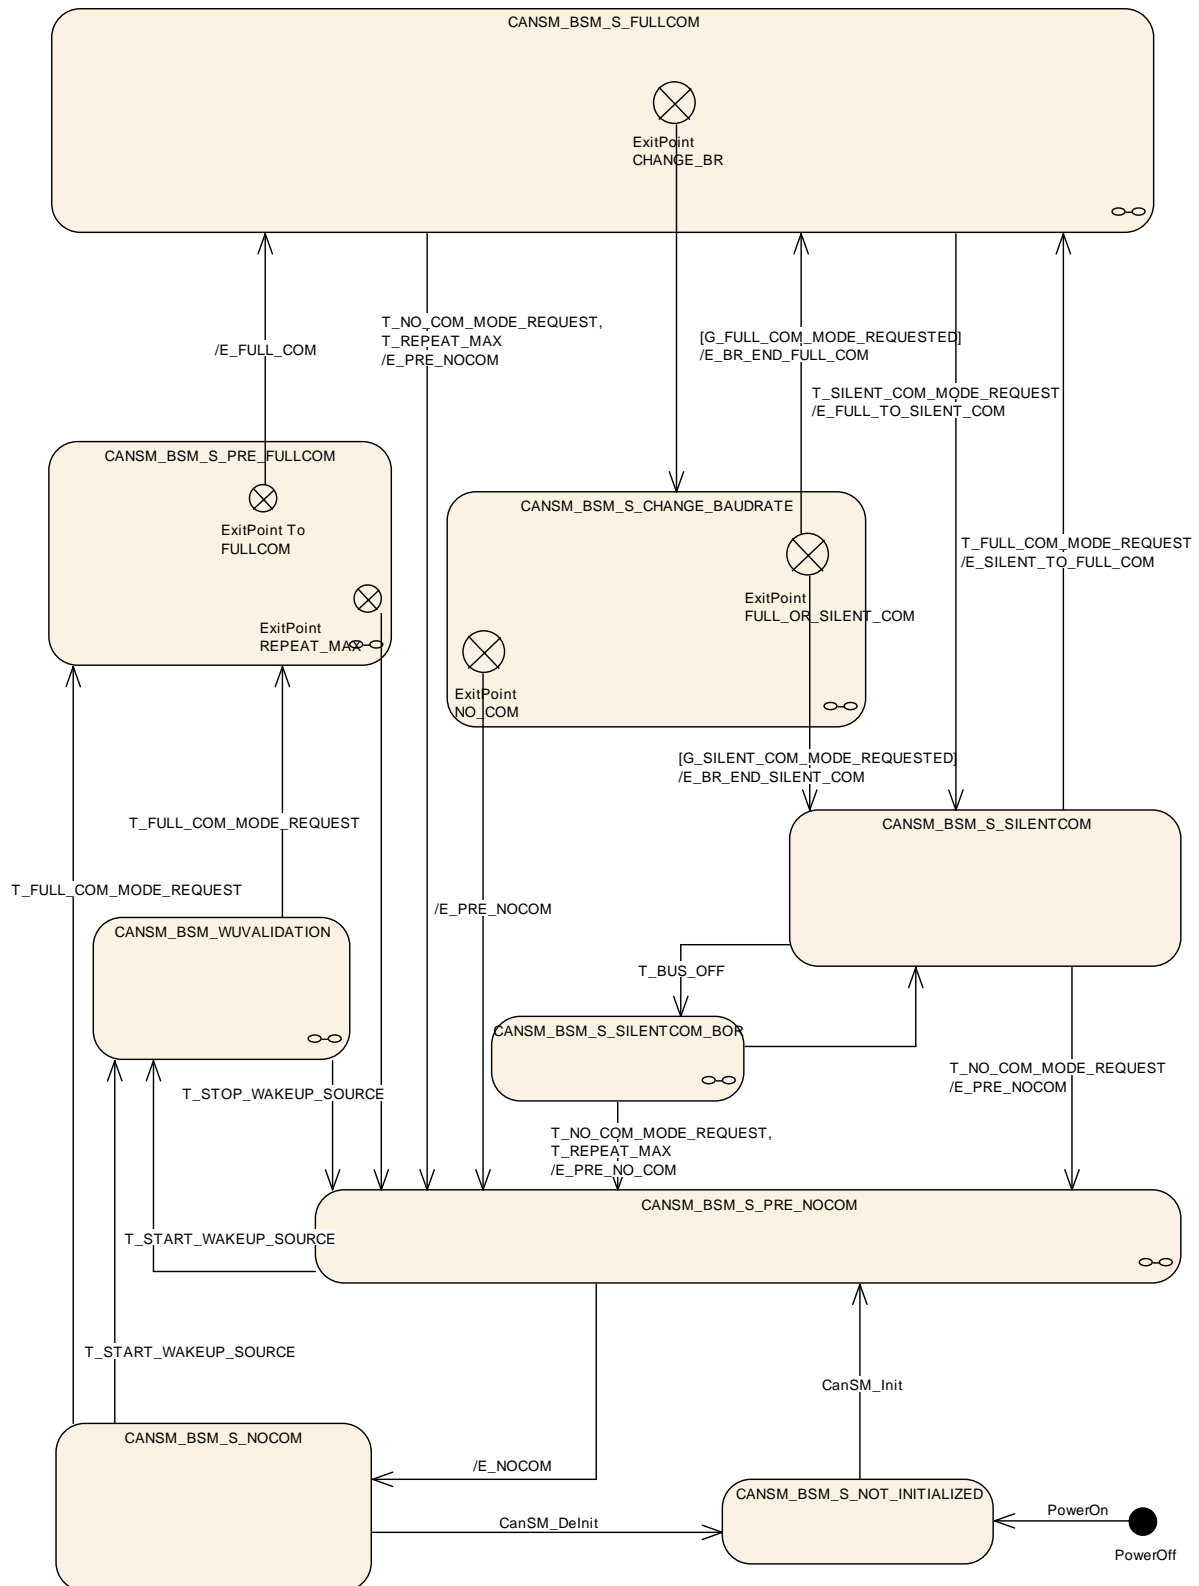


Figure 7-1) for all configured CAN Networks (ref. to [ECUC_CanSM_00126](#)) with the trigger `CanSM_Init.`] (SRS_Can_01142, SRS_Can_01145)

7.2.3 Trigger: `CanSM_Delnit`

[SWS_CanSM_00658] If the CanSM module is requested with the function `CanSM_Delnit`, this shall trigger the CanSM state machines (ref. to Figure 7-1) for all configured CAN Networks (ref. to [ECUC_CanSM_00126](#)) with the trigger `CanSM_Delnit.`] (SRS_Can_01164)

Note: Caller of the `CanSM_Delnit` function has to ensure all CAN networks are in the state `CANSM_NO_COMMUNICATION`

7.2.4 Trigger: `T_START_WAKEUP_SOURCE`

[SWS_CanSM_00607] If the API request `CanSM_StartWakeUpSource` (ref. to [SWS_CanSM_00609](#)) returns `E_OK` (ref. to [SWS_CanSM_00616](#)), it shall trigger the state machine (ref. to

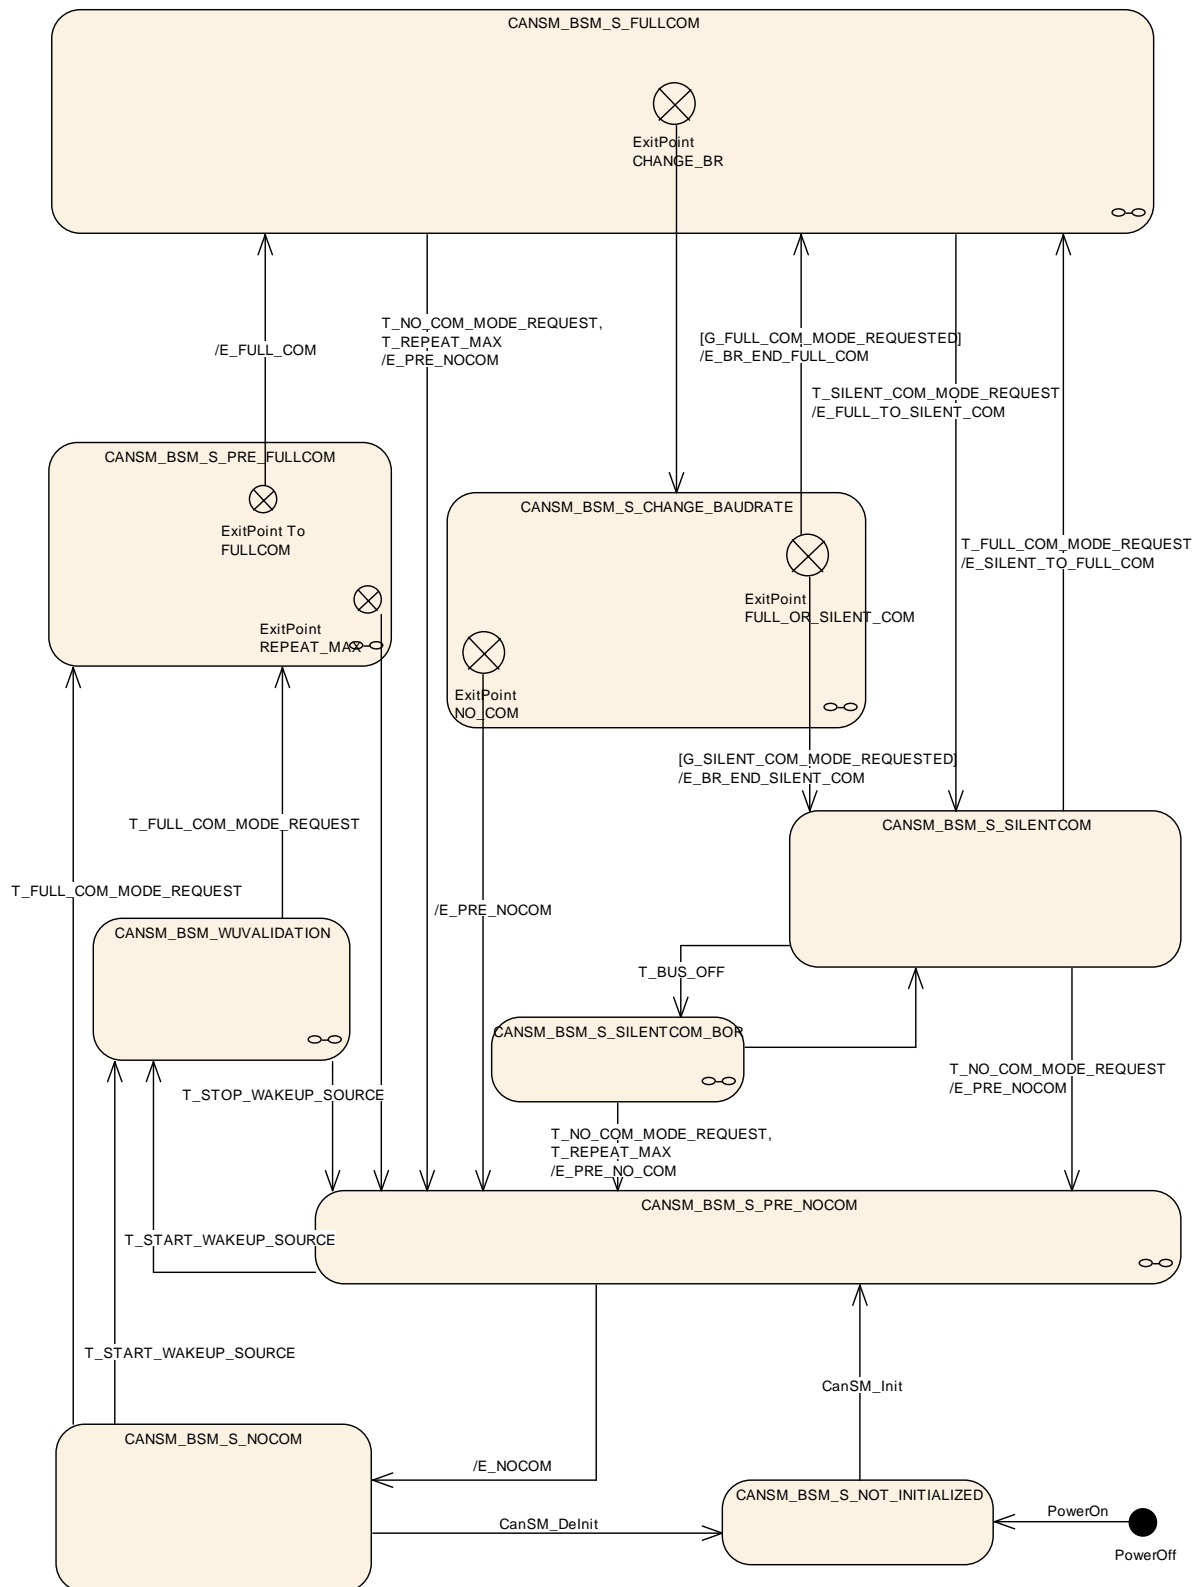


Figure 7-1) with T_START_WAKEUP_SOURCE.] (SRS_Can_01142, SRS_Can_01145)

7.2.5 Trigger: T_STOP_WAKEUP_SOURCE

[**SWS_CanSM_00608**] If the API request CanSM_StopWakeUpSource (ref. to [SWS_CanSM_00610](#)) returns E_OK (ref. to [SWS_CanSM_00622](#)), it shall trigger the state machine (ref. to

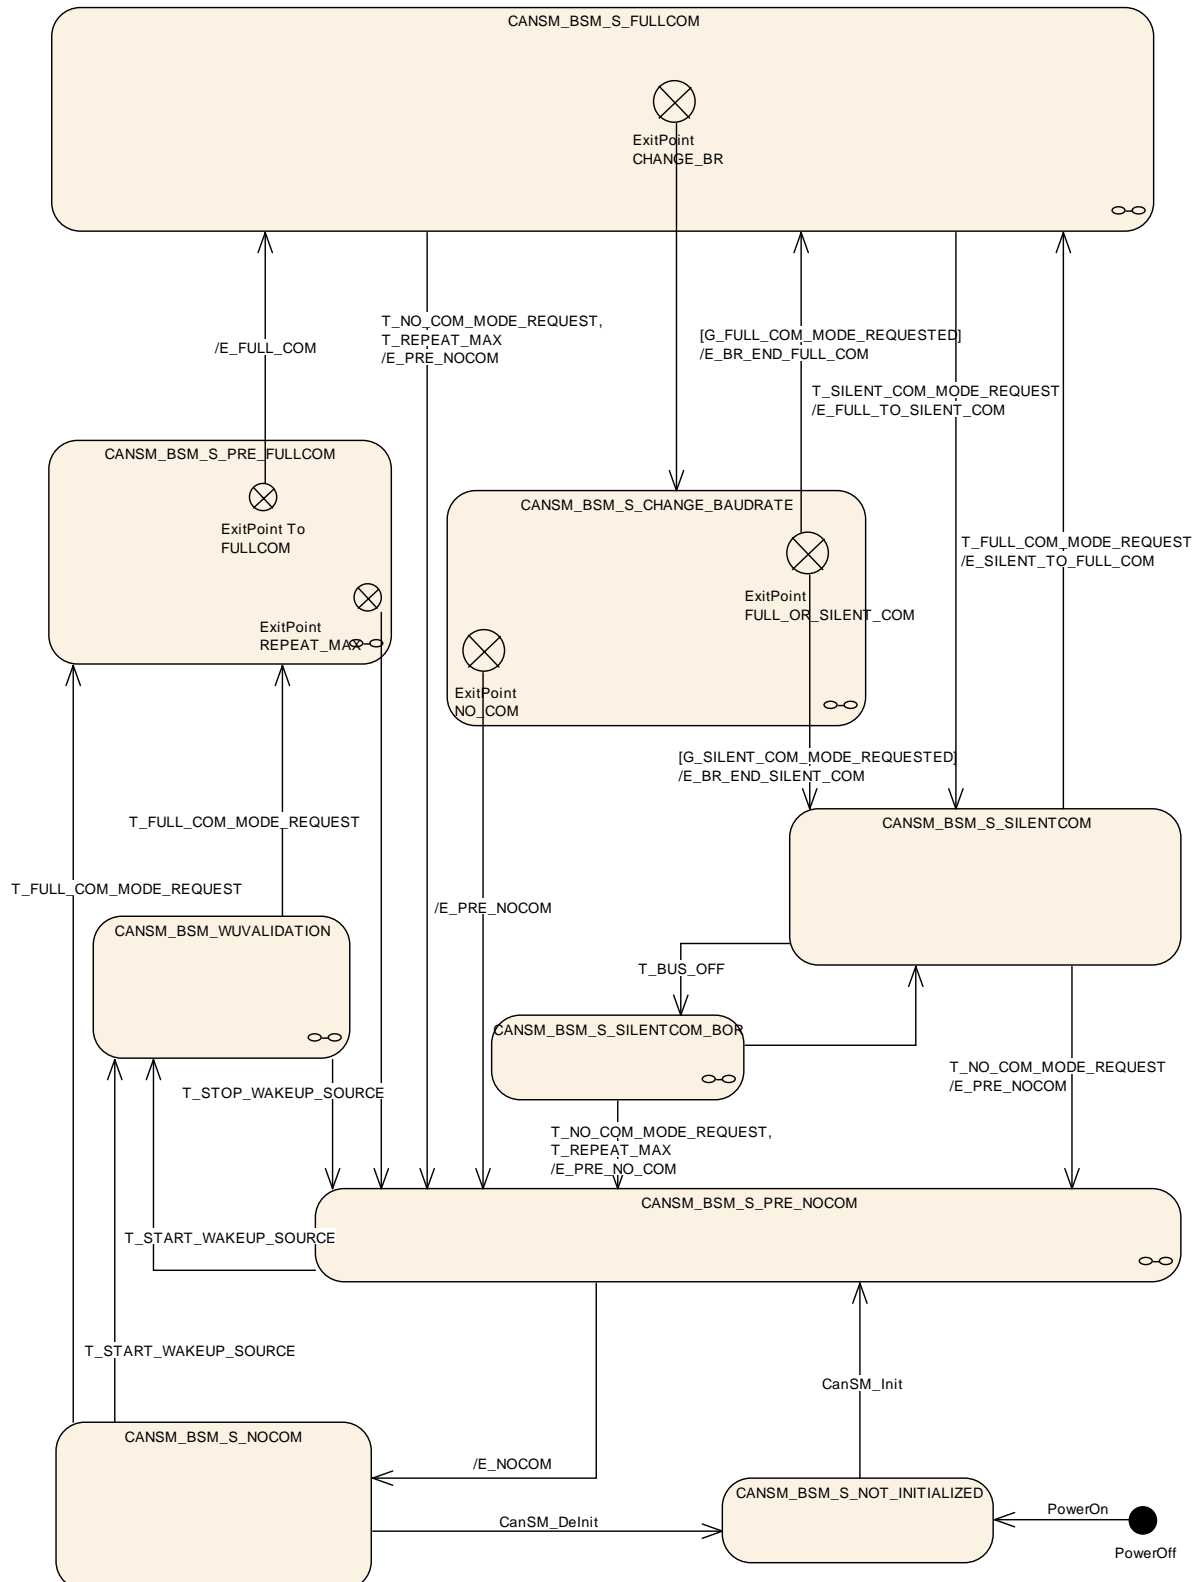


Figure 7-1) with T_STOP_WAKEUP_SOURCE.] (SRS_Can_01142, SRS_Can_01145)

7.2.6 Trigger: T_FULL_COM_MODE_REQUEST

[SWS_CanSM_00425] [The API request `CanSM_RequestComMode` (ref. to [SWS_CanSM_00635](#)) with the parameter `ComM_Mode` equal to `COMM_FULL_COMMUNICATION` shall trigger the state machine with `T_FULL_COM_MODE_REQUEST`, if the function parameter `network` matches the configuration parameter `CANSM_NETWORK_HANDLE` (ref. to [ECUC_CanSM_00161](#)).] (SRS_Can_01142, SRS_Can_01145)

7.2.7 Trigger: T_NO_COM_MODE_REQUEST

[SWS_CanSM_00426] [The API request `CanSM_RequestComMode` (ref. to [SWS_CanSM_00635](#)) with the parameter `ComM_Mode` equal to `COMM_NO_COMMUNICATION` shall trigger the state machine with `T_NO_COM_MODE_REQUEST`, if the function parameter `network` matches the configuration parameter `CANSM_NETWORK_HANDLE` (ref. to [ECUC_CanSM_00161](#)).] (SRS_Can_01142, SRS_Can_01145)

7.2.8 Trigger: T_BUS_OFF

[SWS_CanSM_00606] [The callback function `CanSM_ControllerBusOff` (ref. to [SWS_CanSM_00064](#)) shall trigger the state machine `CANSM_BSM` (ref. to

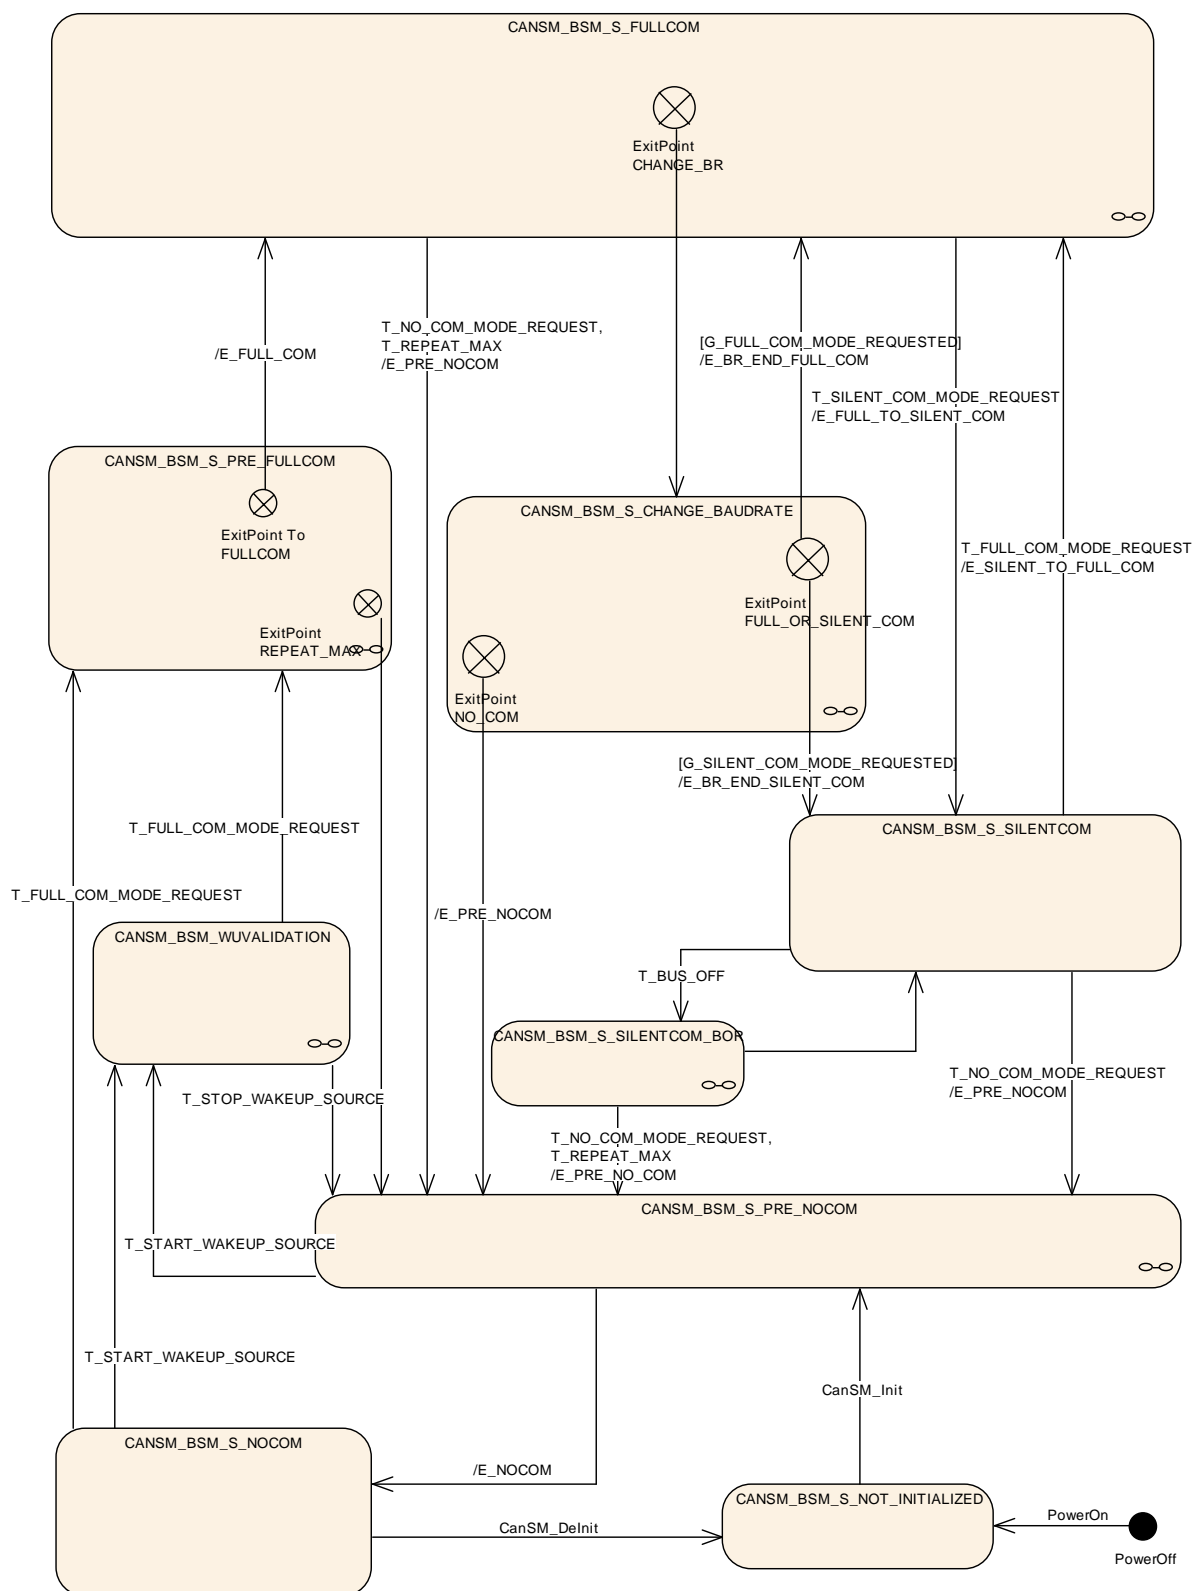


Figure 7-1) for the CAN network with T_BUS_OFF, if one of its configured CAN controllers matches to the function parameter ControllerId of the callback function CanSM_ControllerBusOff. (SRS_Can_01144, SRS_Can_01146)

7.2.9 Trigger: T_REPEAT_MAX

[SWS_CanSM_00523] | If the state machine CANSM_BSM (ref. to

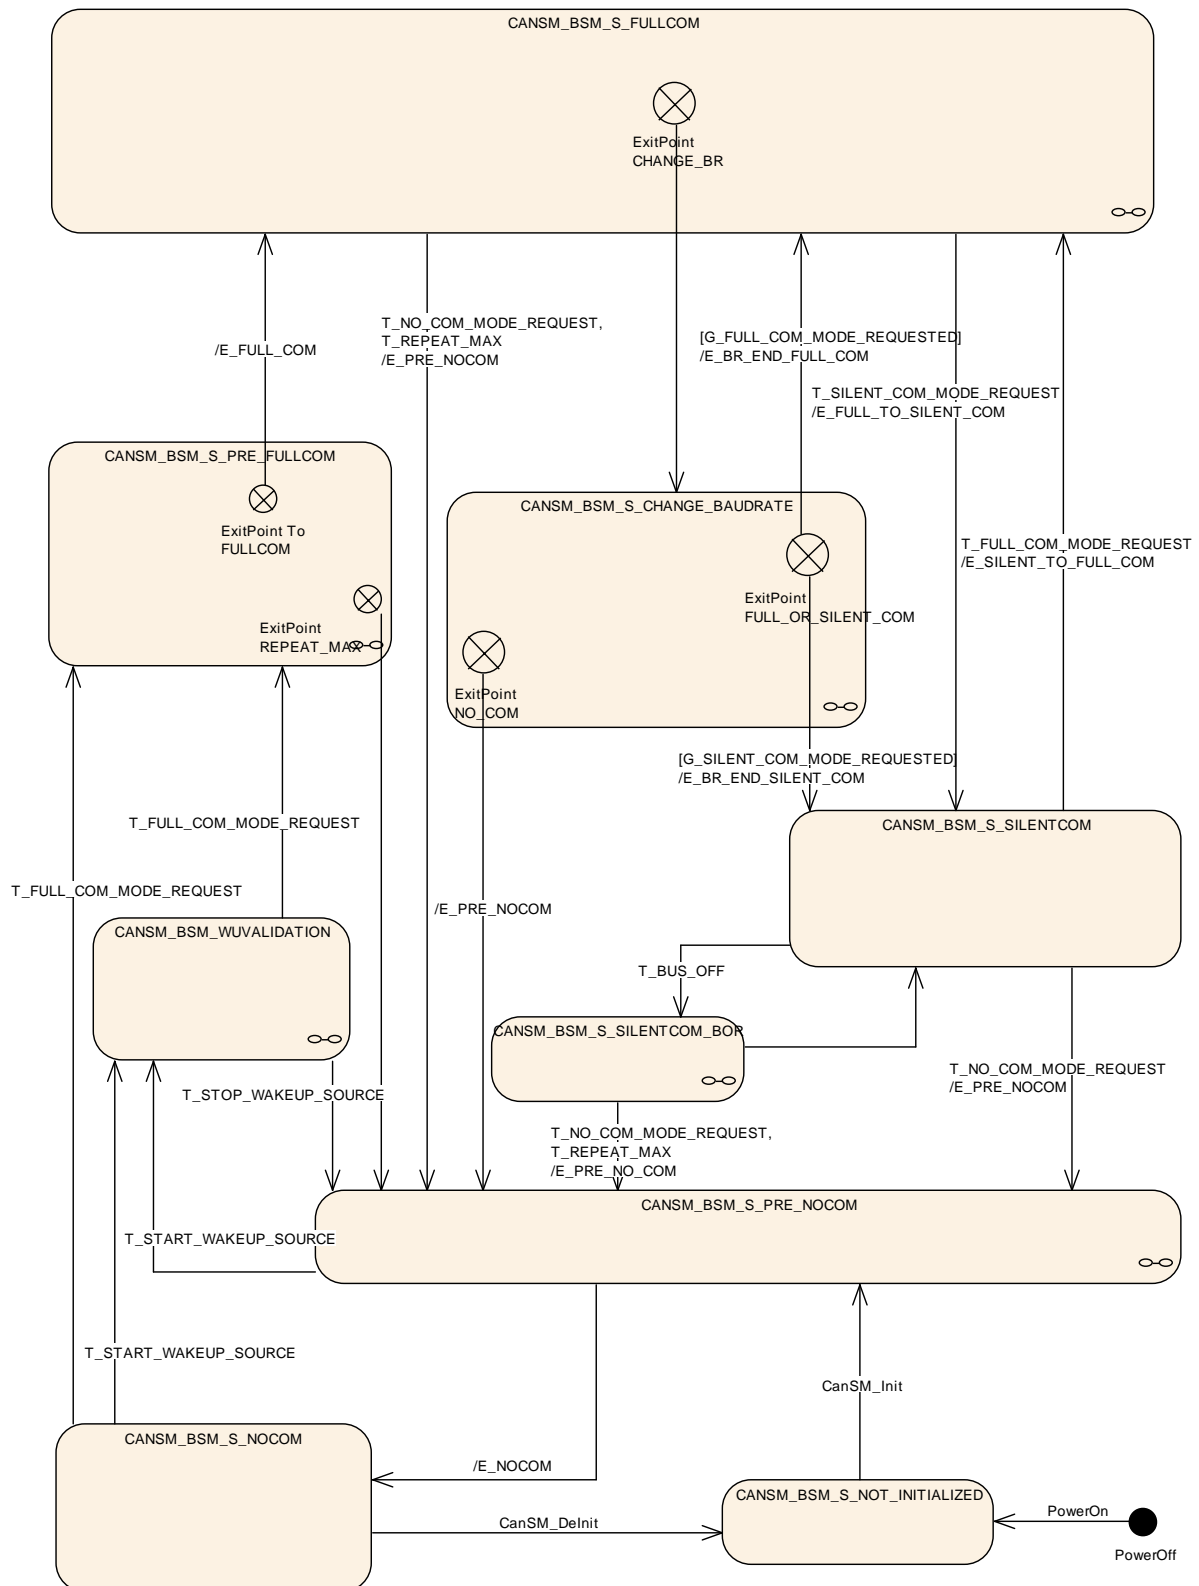


Figure 7-1) has repeated in one of it's sub state machines the CanIf API to start the CAN controller(s) of the CAN network (e. g. : ref. to [SWS_CanSM_00509](#)) more often than configured (ref. to [ECUC_CanSM_00335](#)) without getting the return value E_OK

and without getting the supposed mode indication (e. g. : ref. to [SWS_CanSM_00511](#)), this shall trigger the state machine `CANSM_BSM` with `T_REPEAT_MAX.`] (SRS_Can_01142, SRS_Can_01145)

7.2.10 Guarding condition: `G_FULL_COM_MODE_REQUESTED`

[SWS_CanSM_00427] [The guarding condition `G_FULL_COM_MODE_REQUESTED` of the `CanSM_BSM` state machine (ref. to

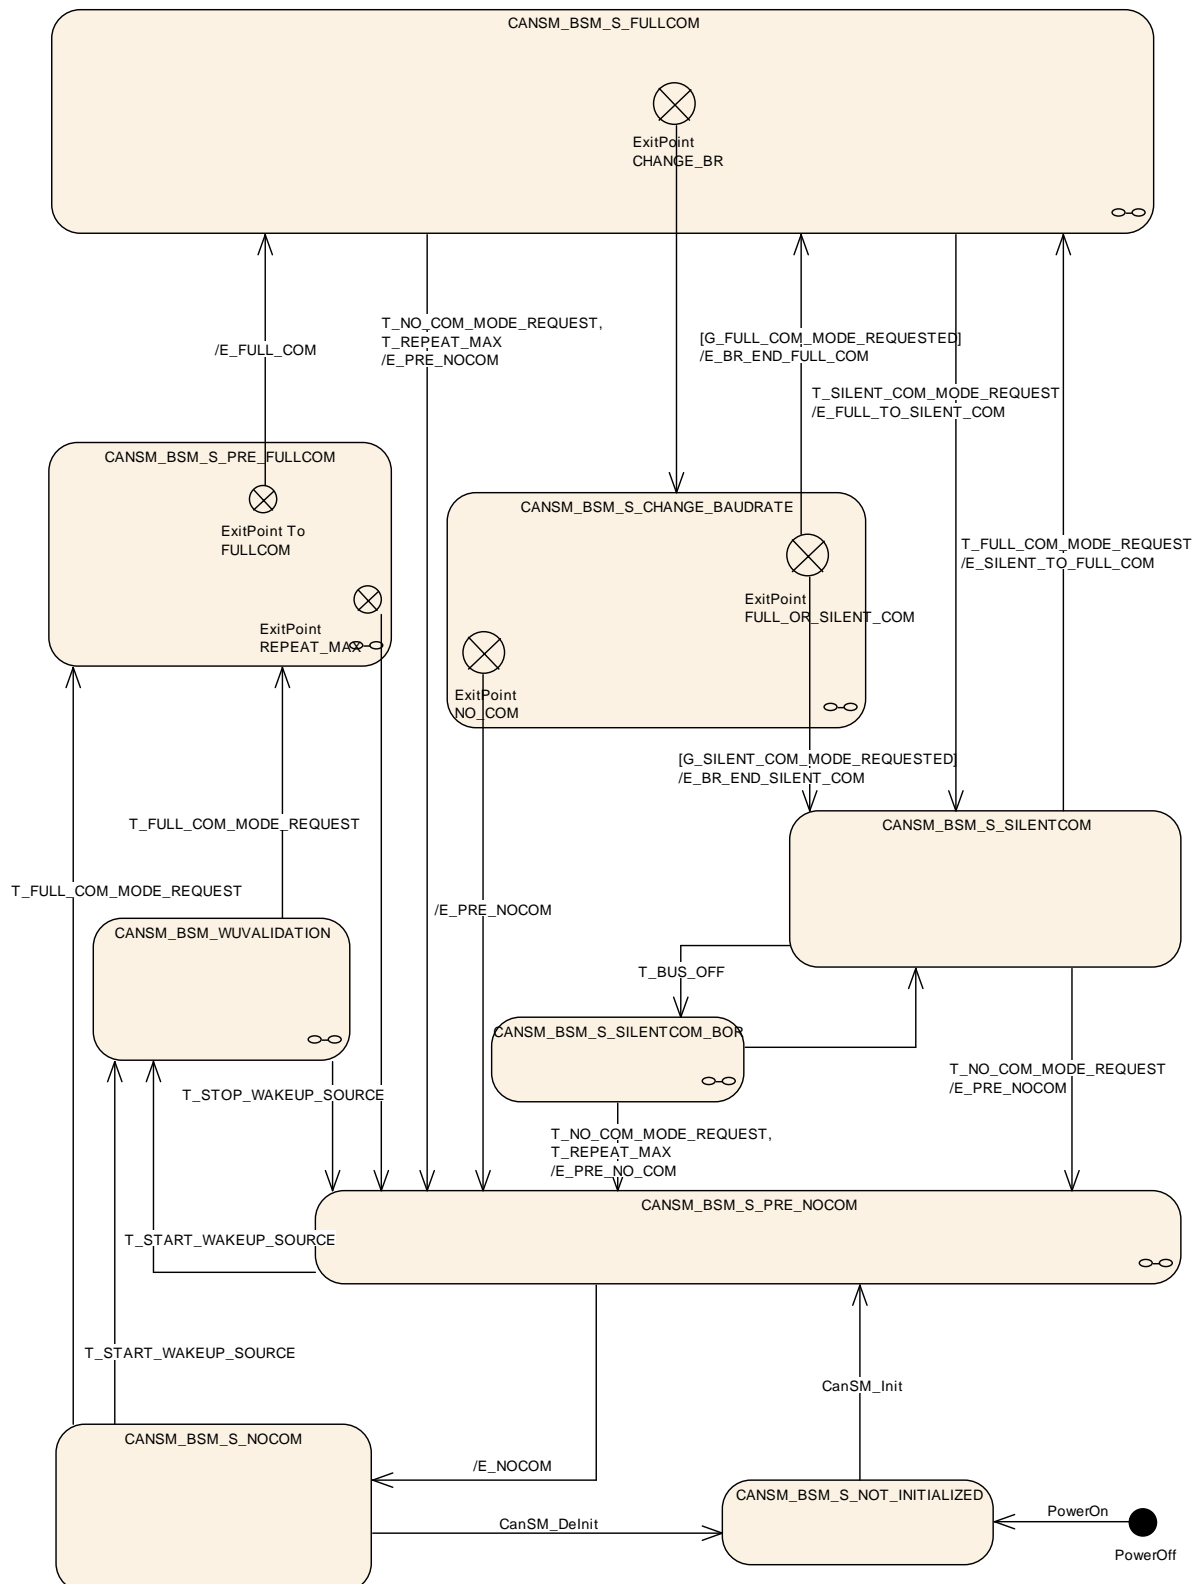


Figure 7-1) shall evaluate, if the latest accepted communication mode request with CanSM_RequestComMode (ref. to [SWS_CanSM_00635](#)) for the respective network handle of the state machine has been with the parameter ComM_Mode equal to COMM_FULL_COMMUNICATION.] (SRS_Can_01142, SRS_Can_01145)

7.2.11 Guarding condition: G_SILENT_COM_MODE_REQUESTED

[SWS_CanSM_00429] [The guarding condition
G_SILENT_COM MODE_REQUESTED of the CanSM_BSM state machine (ref. to

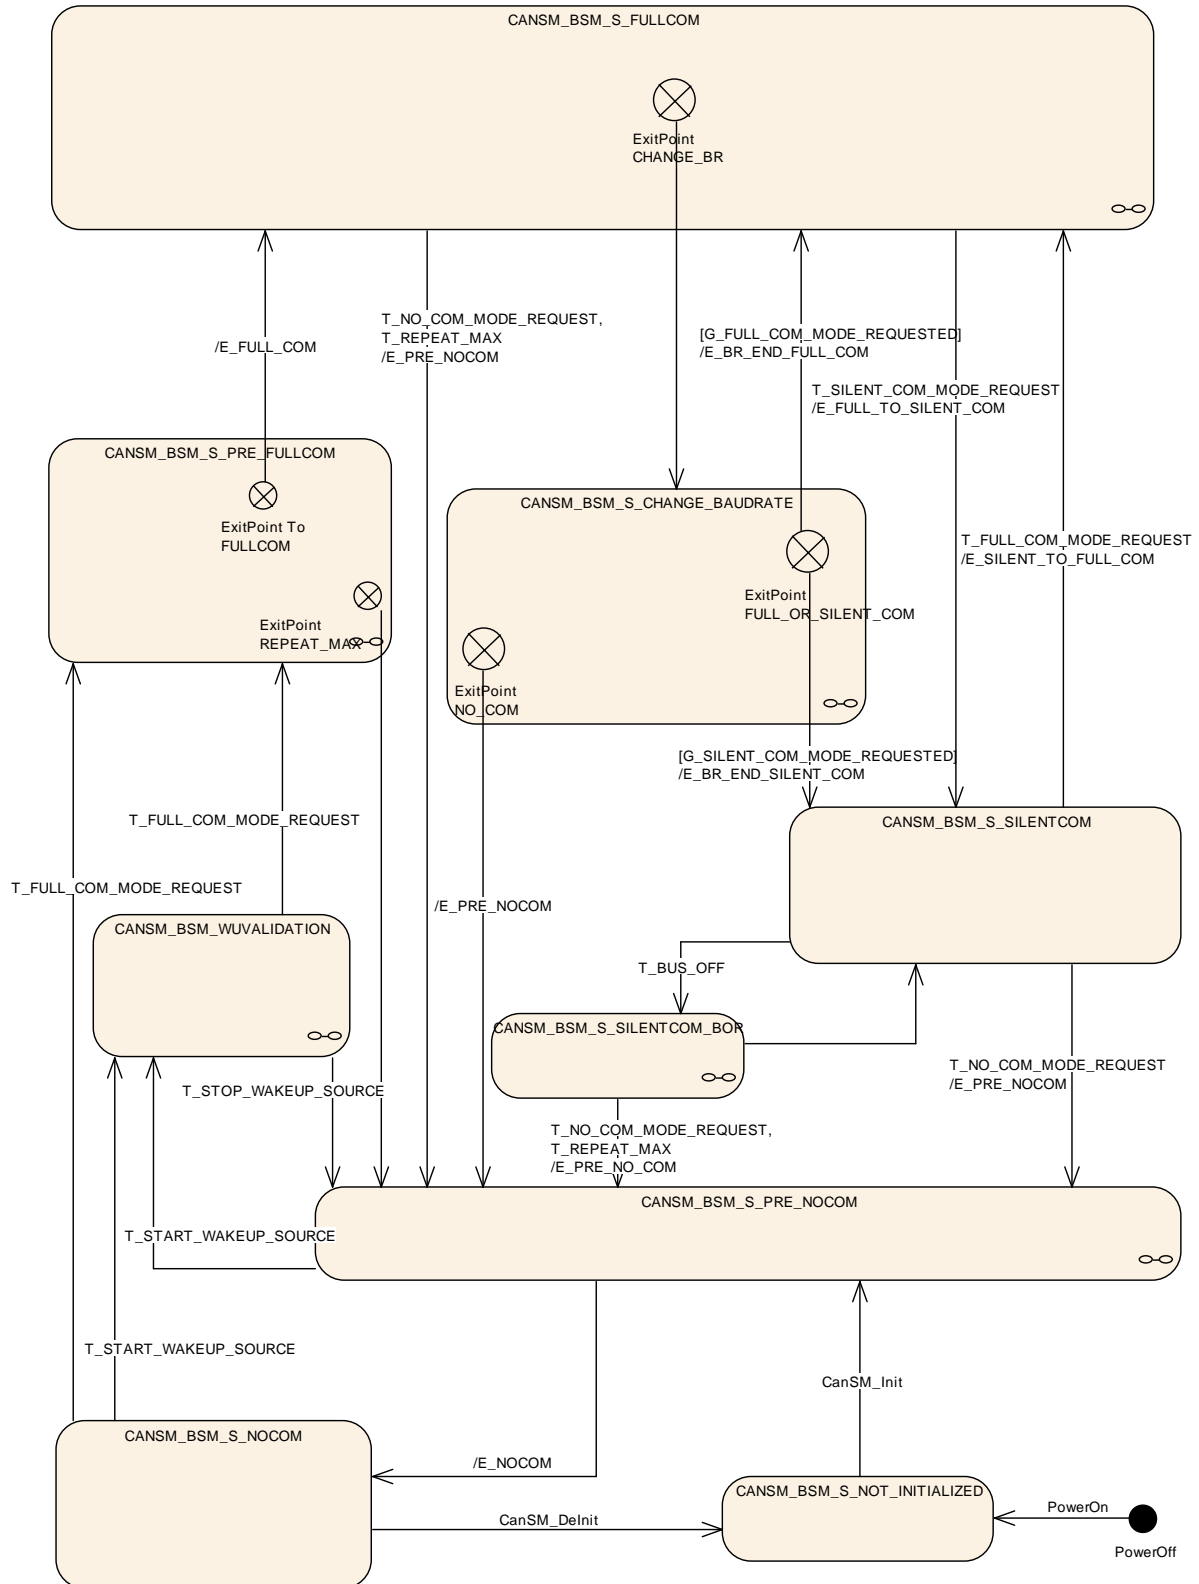


Figure 7-1) shall evaluate, if the latest accepted communication mode request with CanSM RequestComMode (ref. to [SWS CanSM 00635](#)) for the respective network

handle of the state machine has been with the parameter `ComM_Mode` equal to `COMM_SILENT_COMMUNICATION`.] (SRS_Can_01142, SRS_Can_01145)

7.2.12 Effect: E_PRE_NOCOM

[SWS_CanSM_00431] | The effect `E_PRE_NOCOM` of the `CanSM_BSM` state machine (ref. to

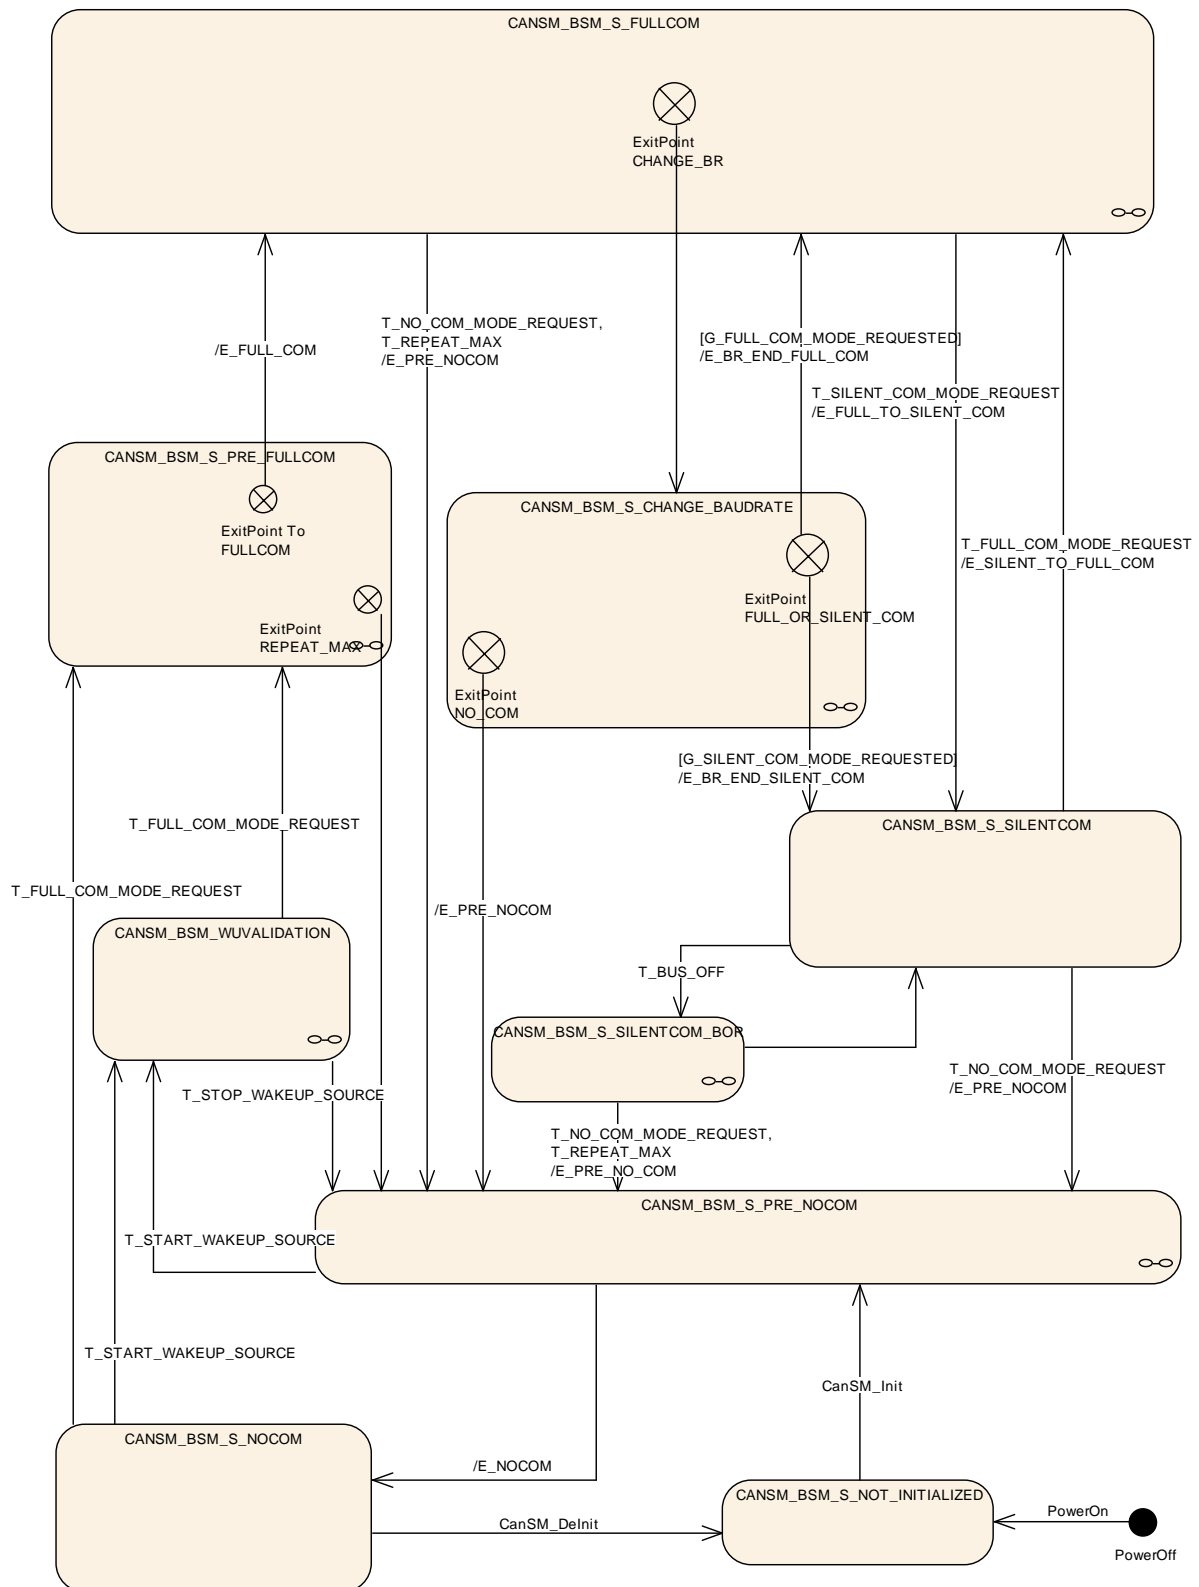


Figure 7-1) shall call for the corresponding CAN network the API
BswM_CanSM_CurrentState with the parameters Network :=
CanSMComMNetworkHandleRef and CurrentState :=
CANSM_BSWM_NO_COMMUNICATION.] (SRS_Can_01142, SRS_Can_01145)

7.2.13 Effect: E_NOCOM

[SWS_CanSM_00430] [The effect E_NOCOM of the CanSM_BSM state machine
(ref. to

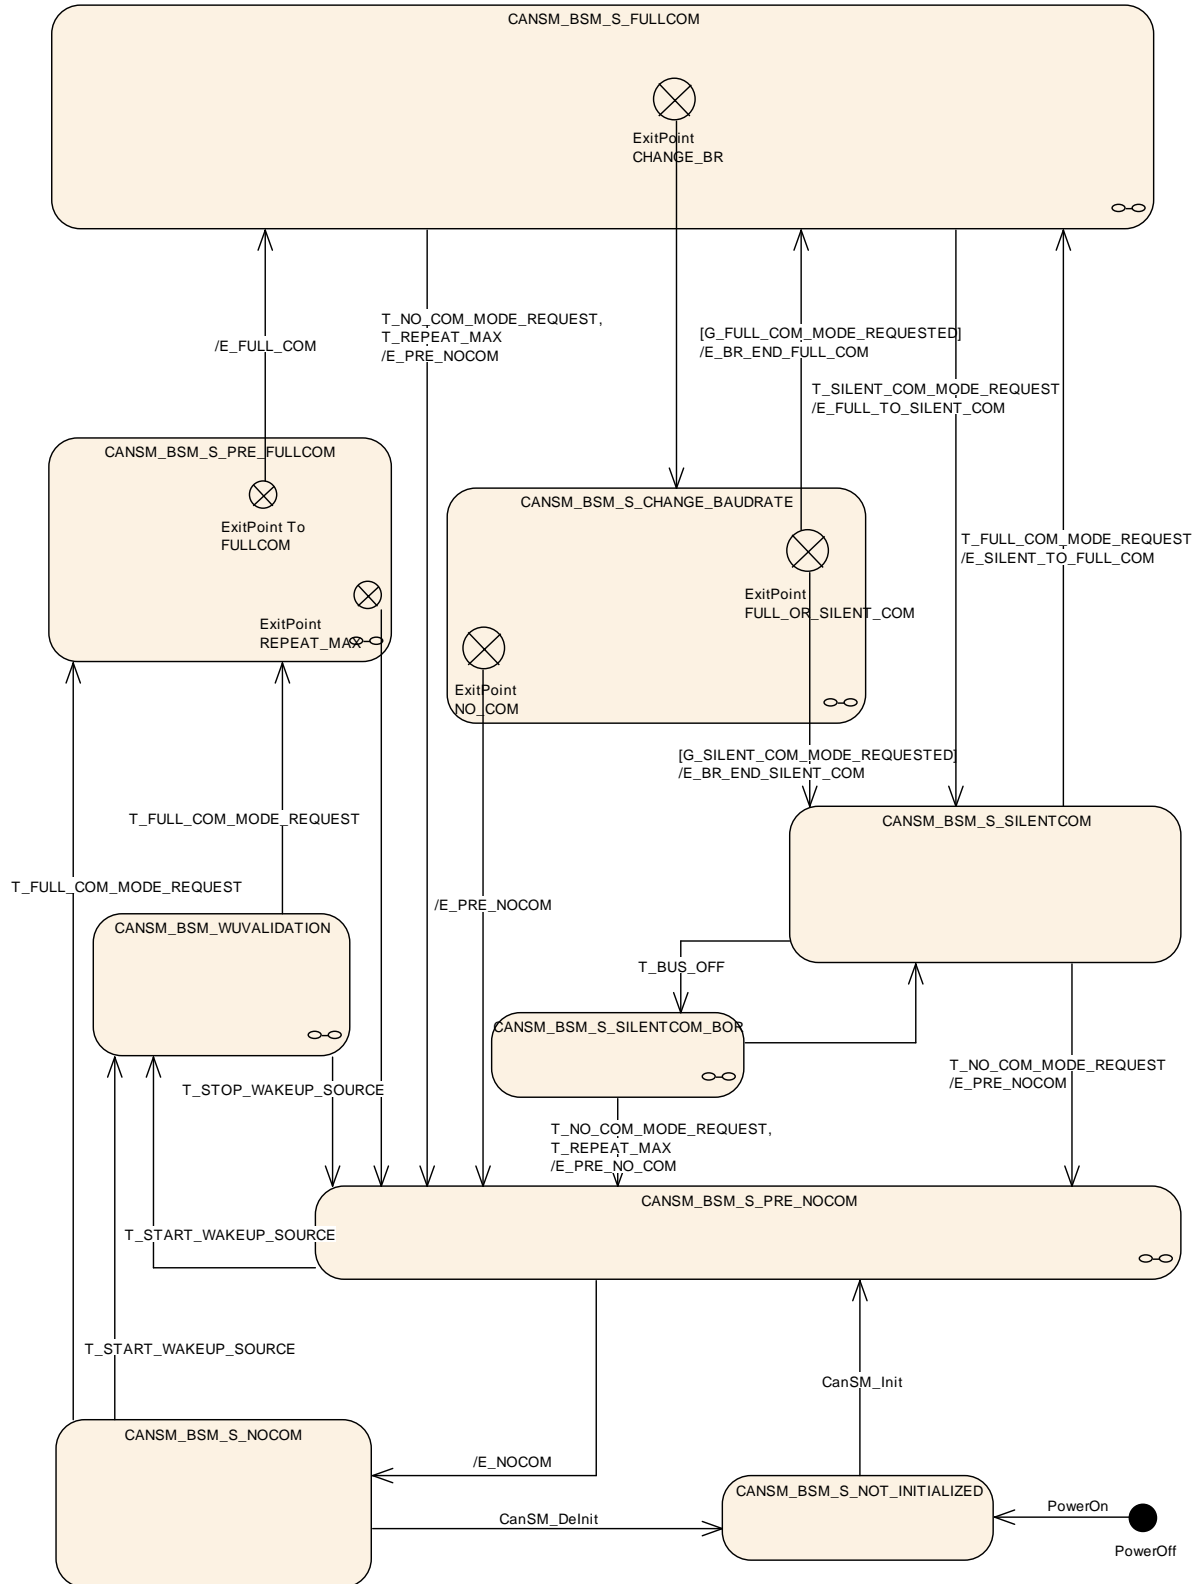


Figure 7-1) shall change the internally stored network mode (ref. to

[SWS_CanSM_00266](#)) of the addressed CAN network to
COMM_NO_COMMUNICATION.] (SRS_Can_01142, SRS_Can_01145)

[**SWS_CanSM_00651**][If a communication mode request for the network is present already (ref. to [SWS_CanSM_00635](#)) and the stored communication mode request is COMM_NO_COMMUNICATION, then the effect E_NOCOM of the CanSM_BSM state machine (ref. to

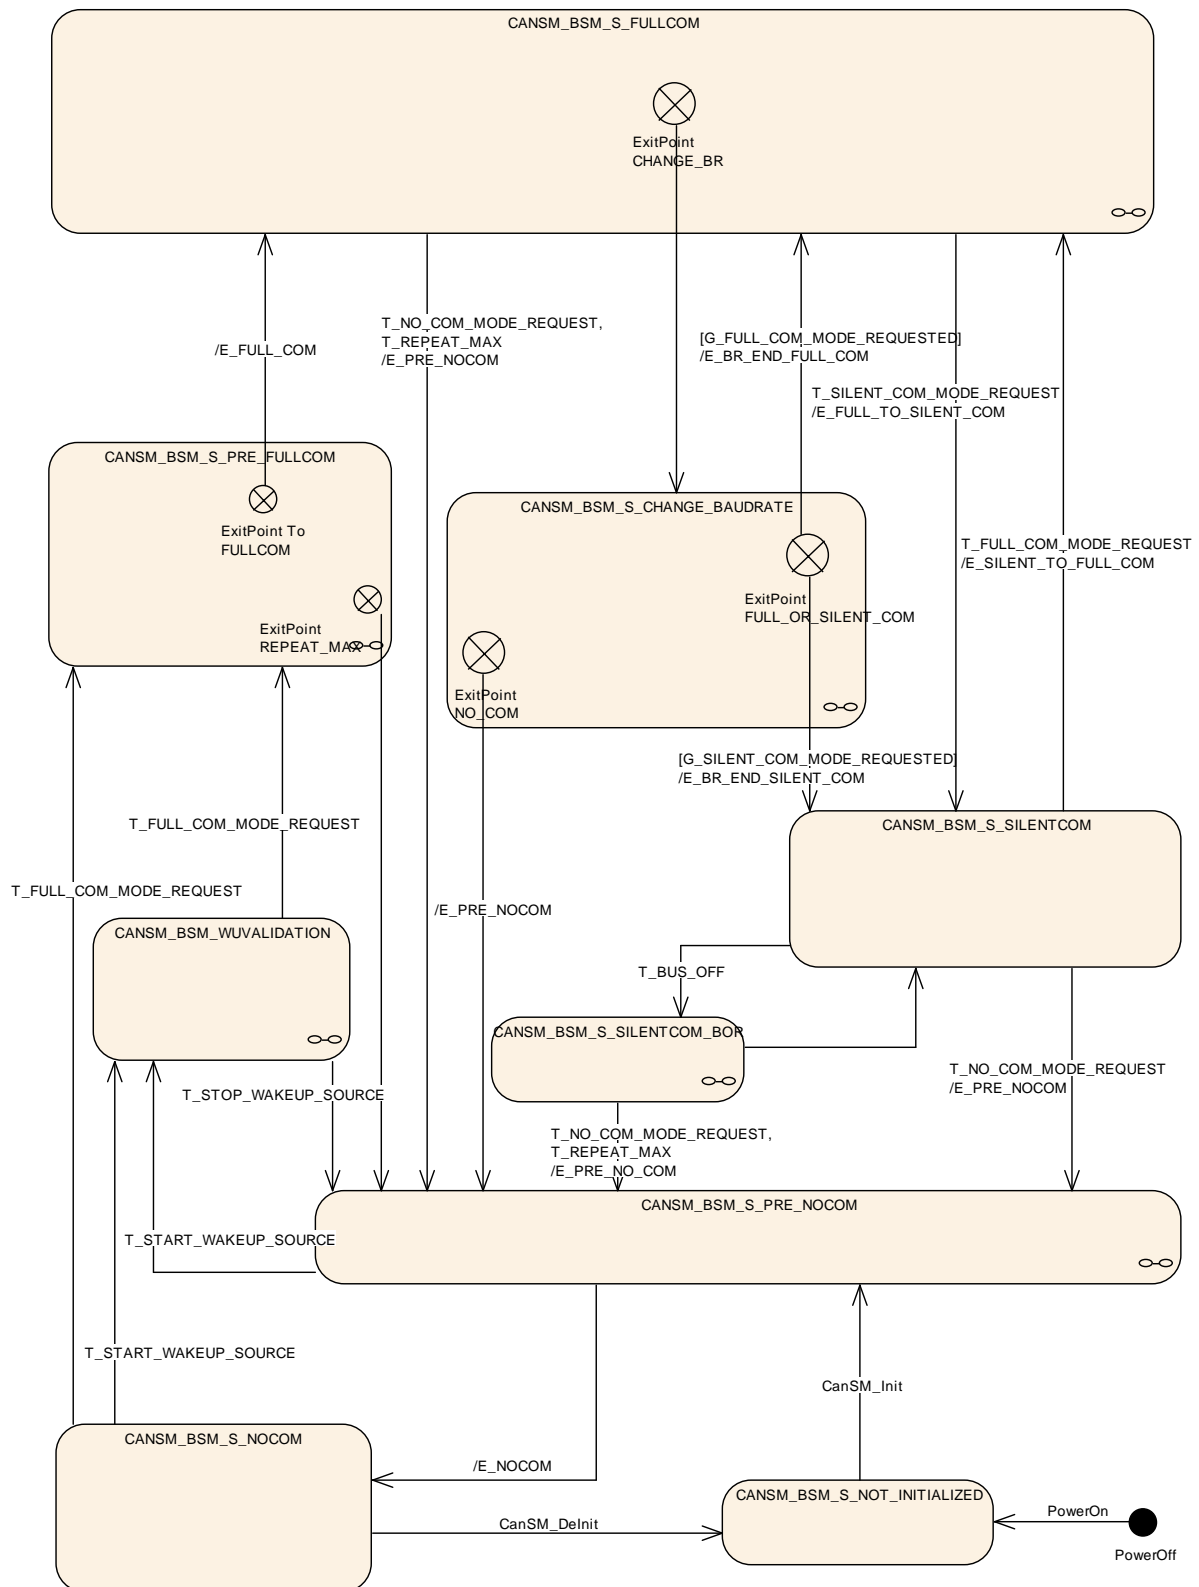


Figure 7-1) shall call the API ComM_BusSM_ModelIndication with the parameters
Channel := CanSMComMNetworkHandleRef (ref. to [ECUC CanSM_00161](#)) and
ComMode := COMM_NO_COMMUNICATION. | (SRS_Can_01142, SRS_Can_01145)

7.2.14 Effect: E_FULL_COM

[SWS_CanSM_00539] [If ECU passive is FALSE (ref. to [SWS_CanSM_00646](#)), then the effect E_FULL_COM of the CanSM_BSM state machine (ref. to

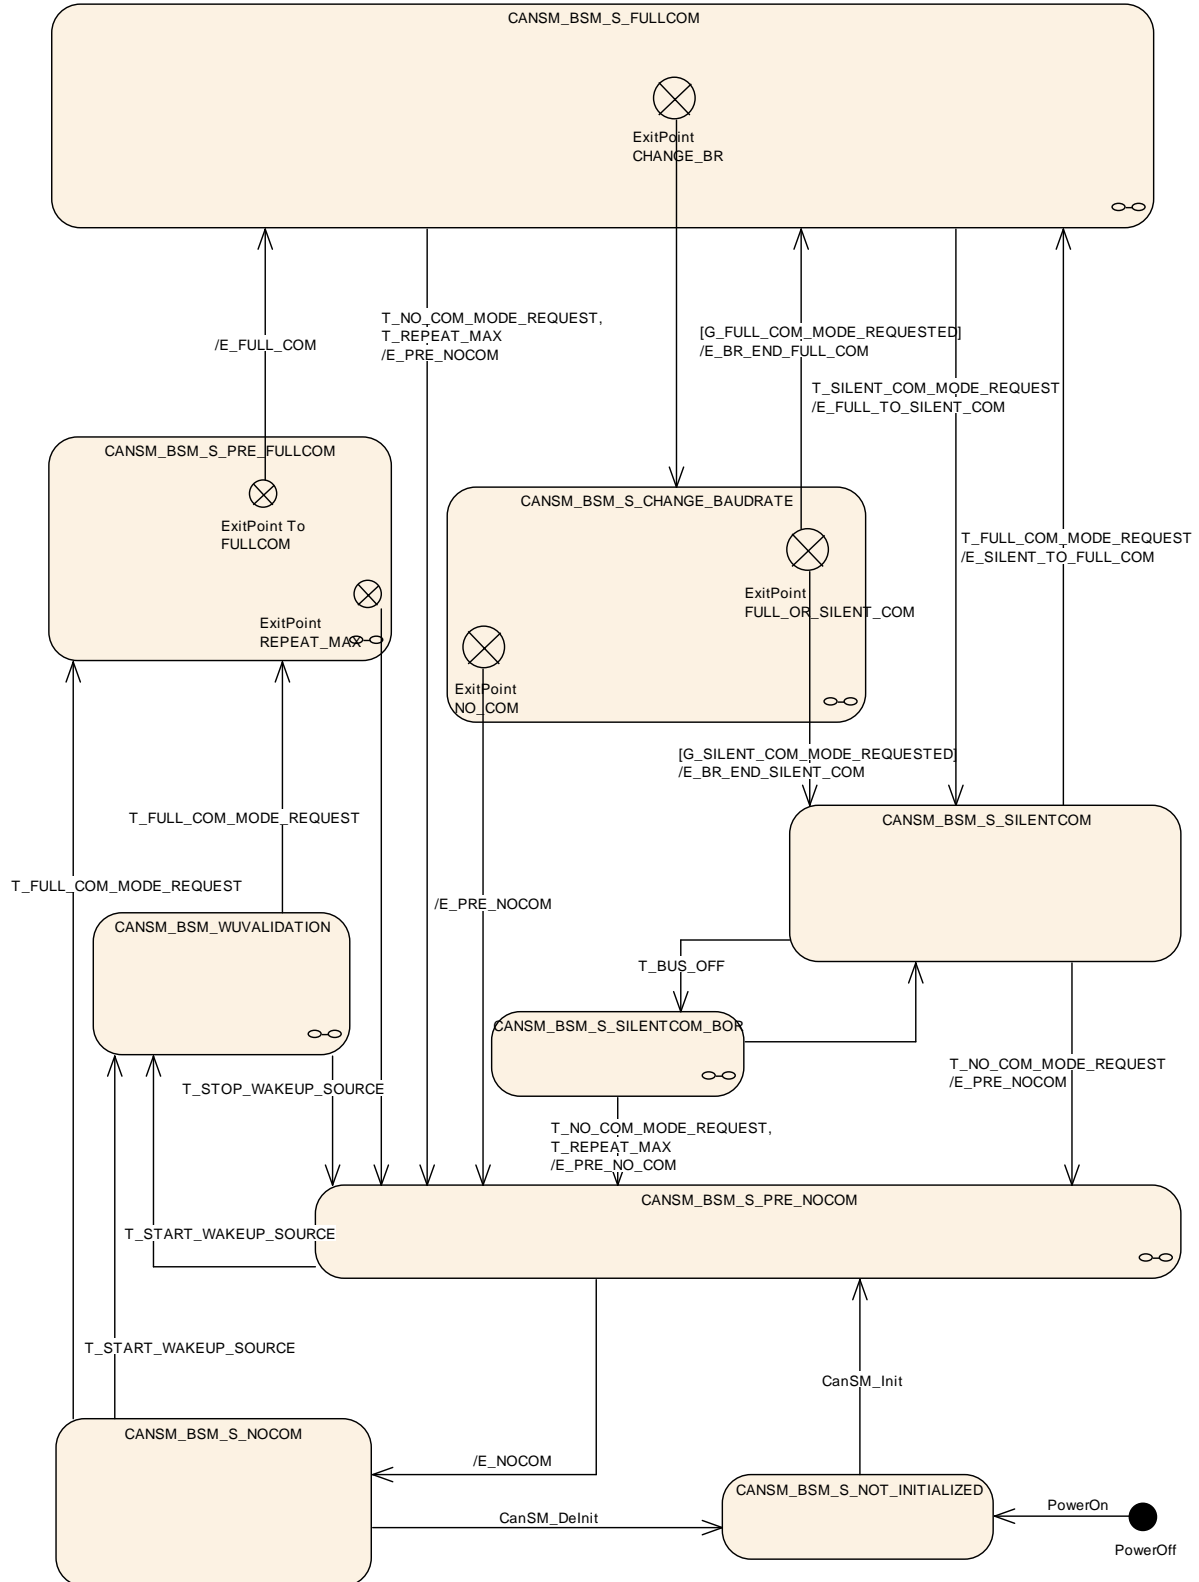


Figure 7-1) shall call at 1st place for each configured CAN controller of the CAN network the API `CanIf_SetPduMode` with the parameters `ControllerId :=`

CanSMControllerId (ref. to [ECUC CanSM 00141](#)) and PduModeRequest := CANIF_ONLINE.] (SRS_Can_01158)

[SWS_CanSM_00647] [If ECU passive is TRUE (ref. to [SWS CanSM 00646](#)), then the effect E_FULL_COM of the CanSM_BSM state machine (ref. to

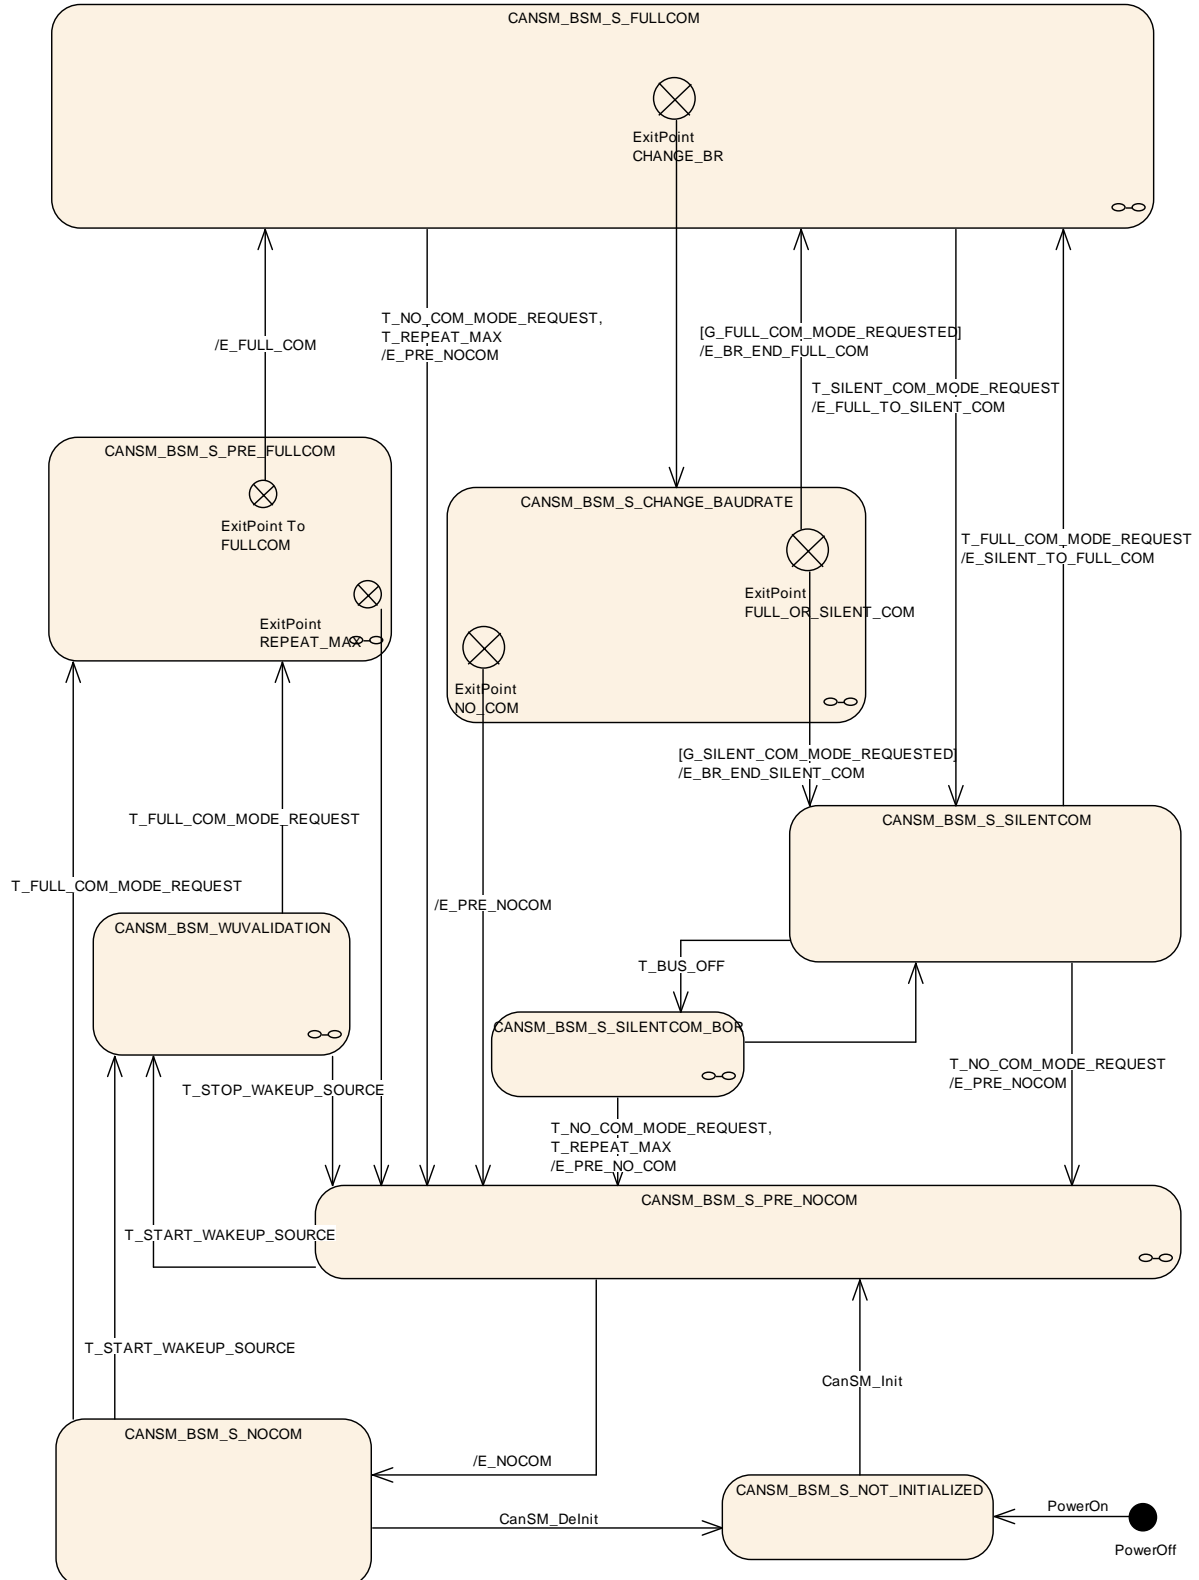


Figure 7-1) shall call at 1st place for each configured CAN controller of the CAN

network the API `CanIf_SetPduMode` with the parameters `ControllerId := CanSMControllerId` (ref. to [ECUC_CanSM_00141](#)) and `PduModeRequest := CANIF_TX_OFFLINE_ACTIVE.`] (SRS_Can_01158)

[SWS_CanSM_00435] [After considering [SWS_CANSM_00539](#) and [SWS_CanSM_00647](#) in context of the effect `E_FULL_COM` of the `CanSM_BSM` state machine (ref. to to

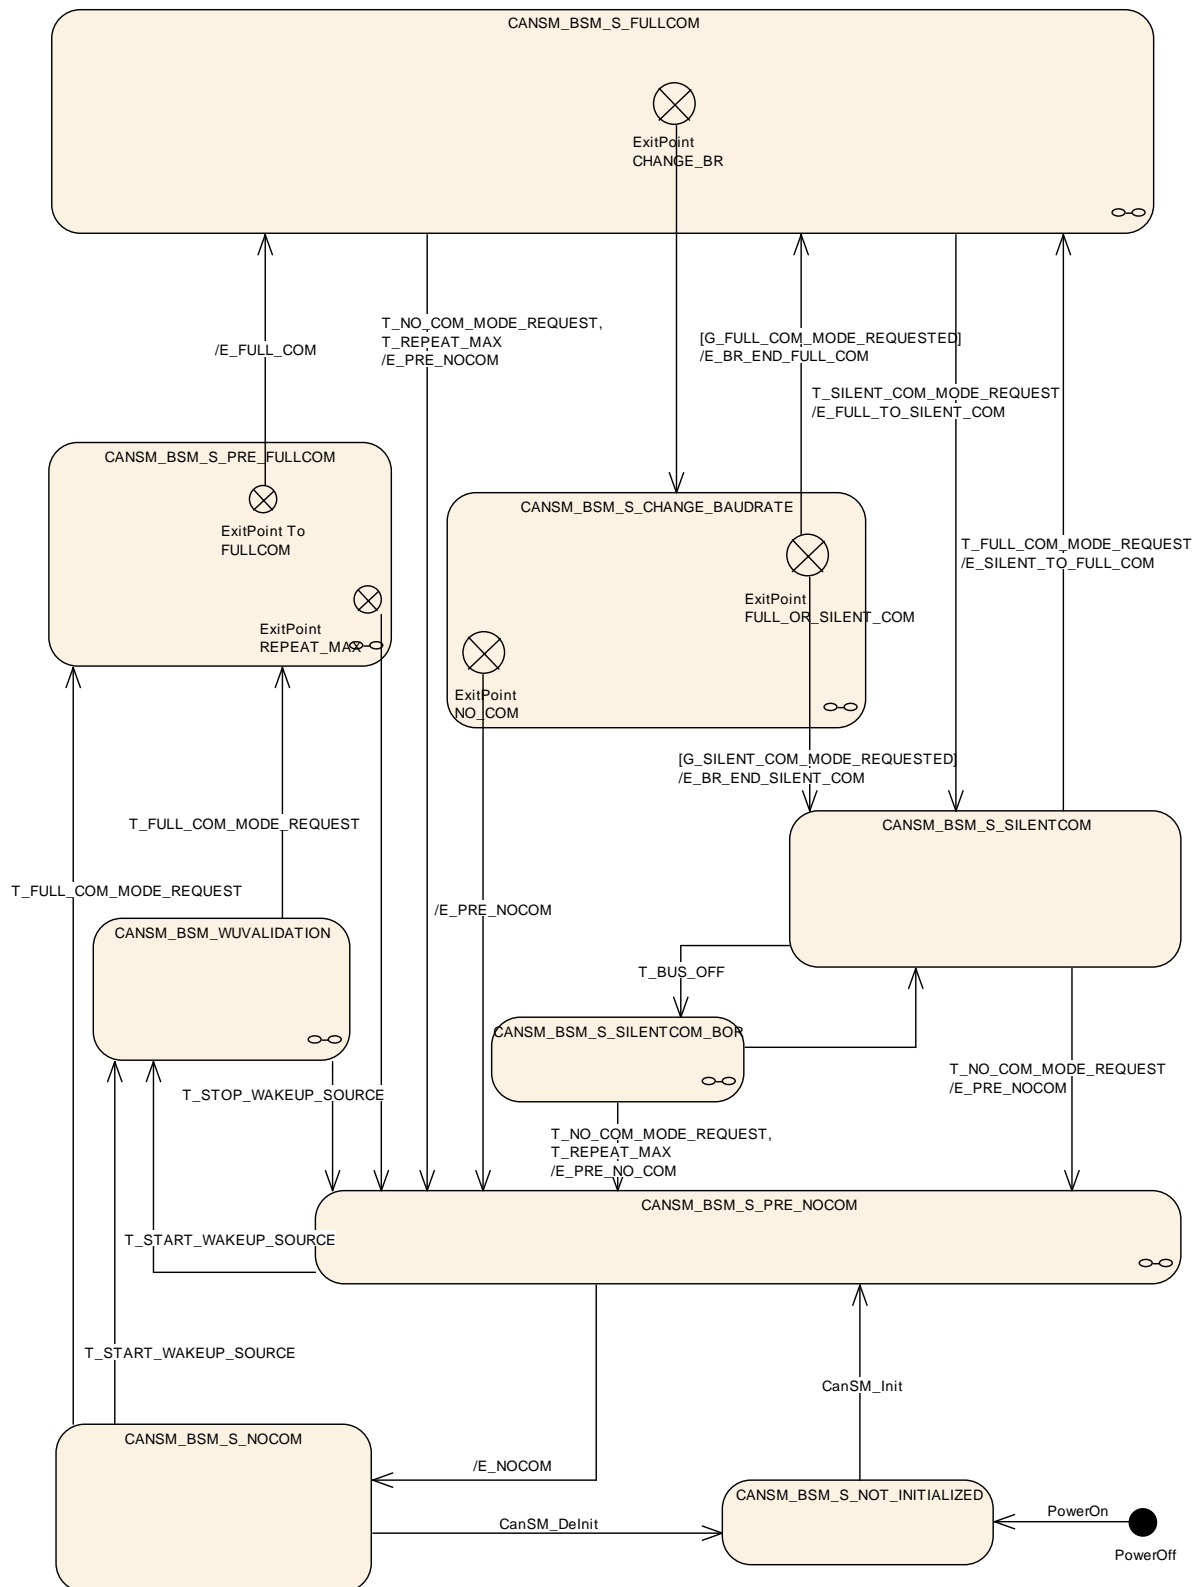


Figure 7-1), the CanSM module shall call the API `ComM_BusSM_ModeIndication` for the corresponding CAN network with the parameters `Channel := CanSMComMNetworkHandleRef` (ref. to [ECUC CanSM 00161](#)) and `ComMode := COMM_FULL_COMMUNICATION`.

┘ (SRS_Can_01158)

[SWS_CanSM_00540] [After considering [SWS_CANSM_00435](#) in context of the effect `E_FULL_COM` of the `CanSM_BSM` state machine (ref. to Figure 7 1), the `CanSM` module shall call the API `BswM_CanSM_CurrentState` for the corresponding CAN network with the parameters `Network := CanSMComMNetworkHandleRef` and `CurrentState := CANSM_BSWM_FULL_COMMUNICATION.`] (SRS_Can_01142, SRS_Can_01145)

7.2.15 Effect: `E_FULL_TO_SILENT_COM`

[SWS_CanSM_00434] [The effect `E_FULL_TO_SILENT_COM` of the `CanSM_BSM` state machine (ref. to

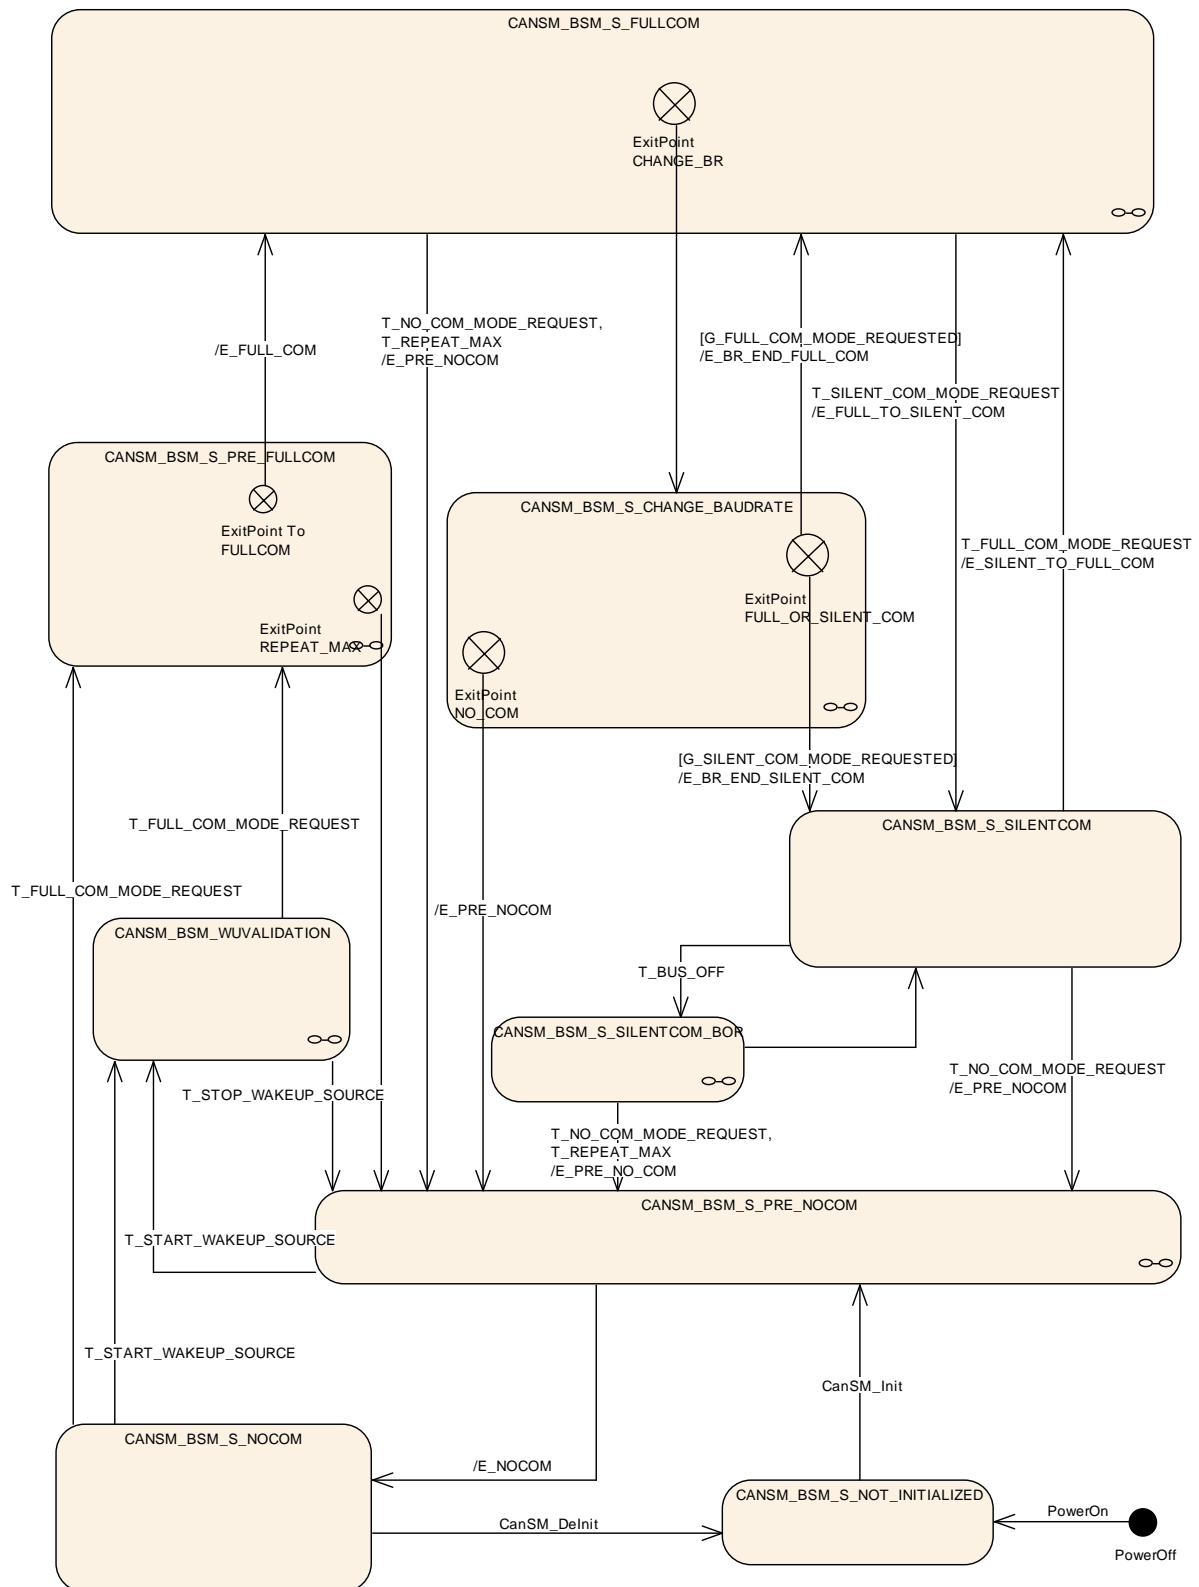


Figure 7-1) shall call at 1st place for the corresponding CAN network the API BswM_CanSM_CurrentState with the parameters Network := CanSMComMNetworkHandleRef and CurrentState := CANSM_BSWM_SILENT_COMMUNICATION. (SRS_Can_01142, SRS_Can_01145)

[SWS_CanSM_00541] [The effect E_FULL_TO_SILENT_COM of the CanSM_BSM state machine (ref. to

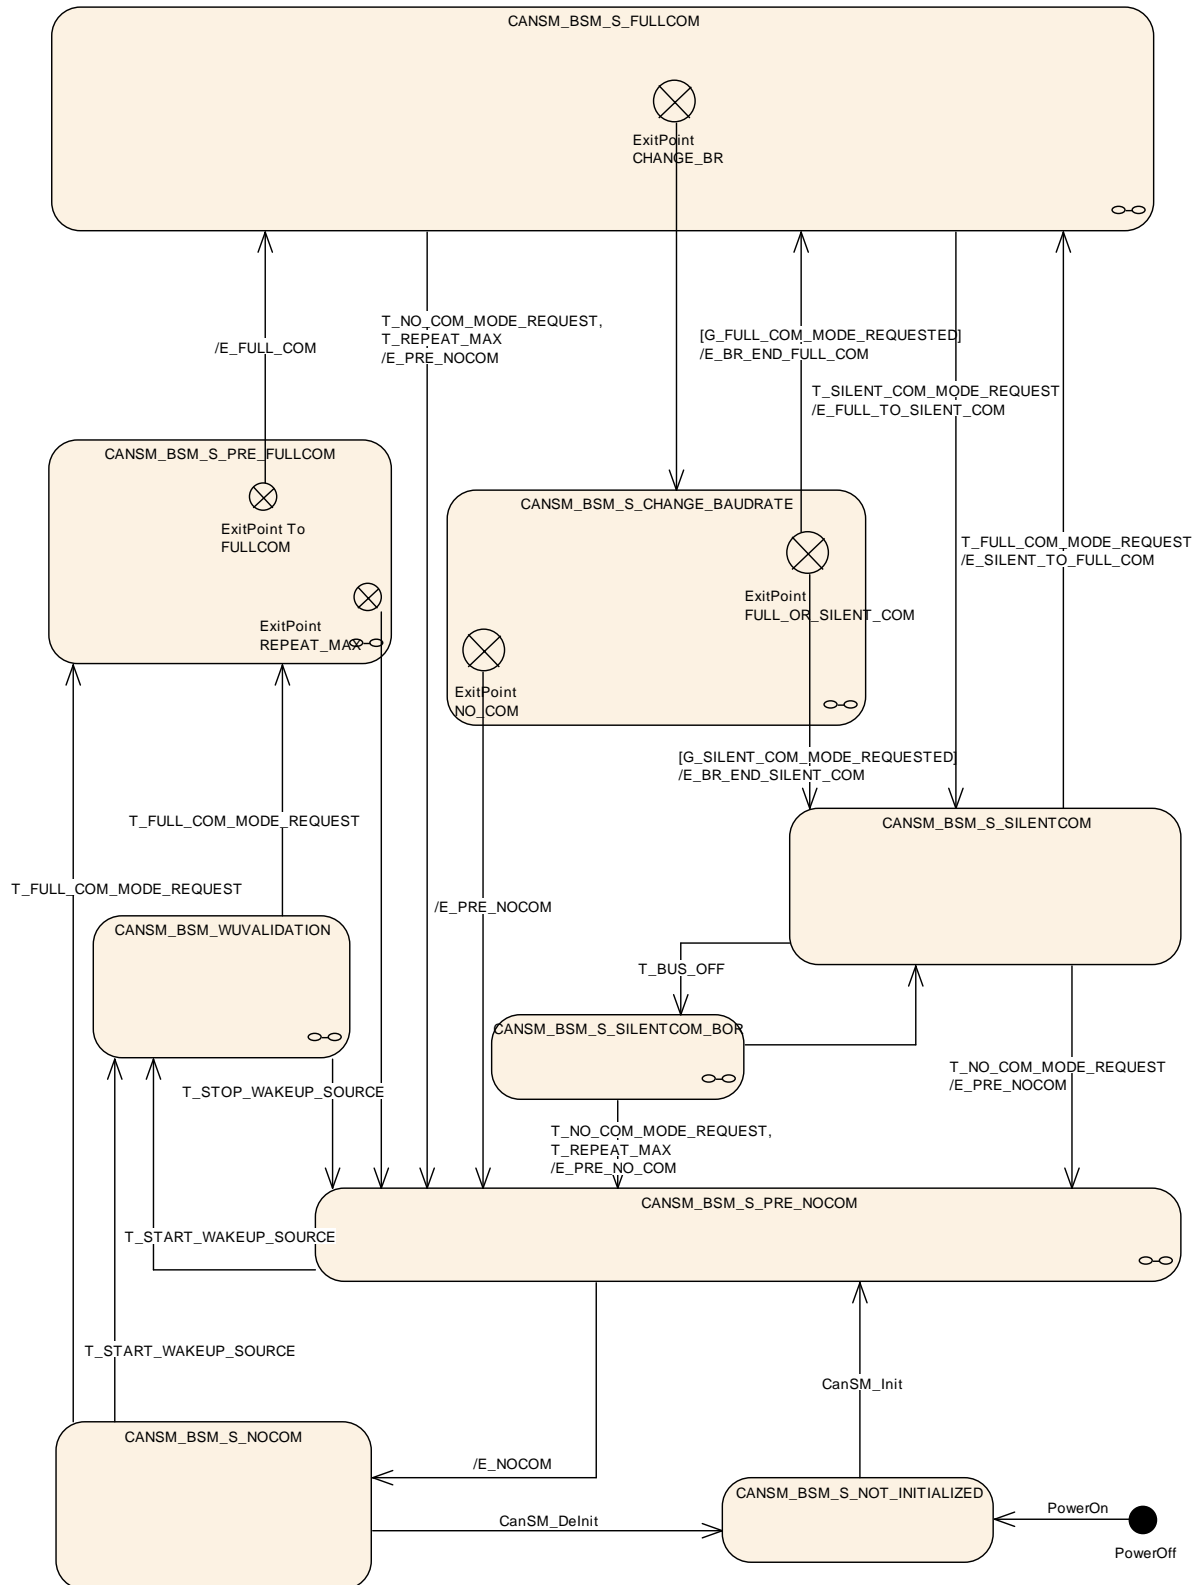


Figure 7-1) shall call at 2nd place for each configured CAN controller of the CAN network the API `CanIf_SetPduMode` with the parameters `ControllerId := CanSMControllerId` (ref. to [ECUC CanSM_00141](#)) and `PduModeRequest := CANIF_TX_OFFLINE` (SRS_Can_01142, SRS_Can_01145)

[SWS_CanSM_00538] [The effect E_FULL_TO_SILENT_COM of the CanSM_BSM state machine (ref. to

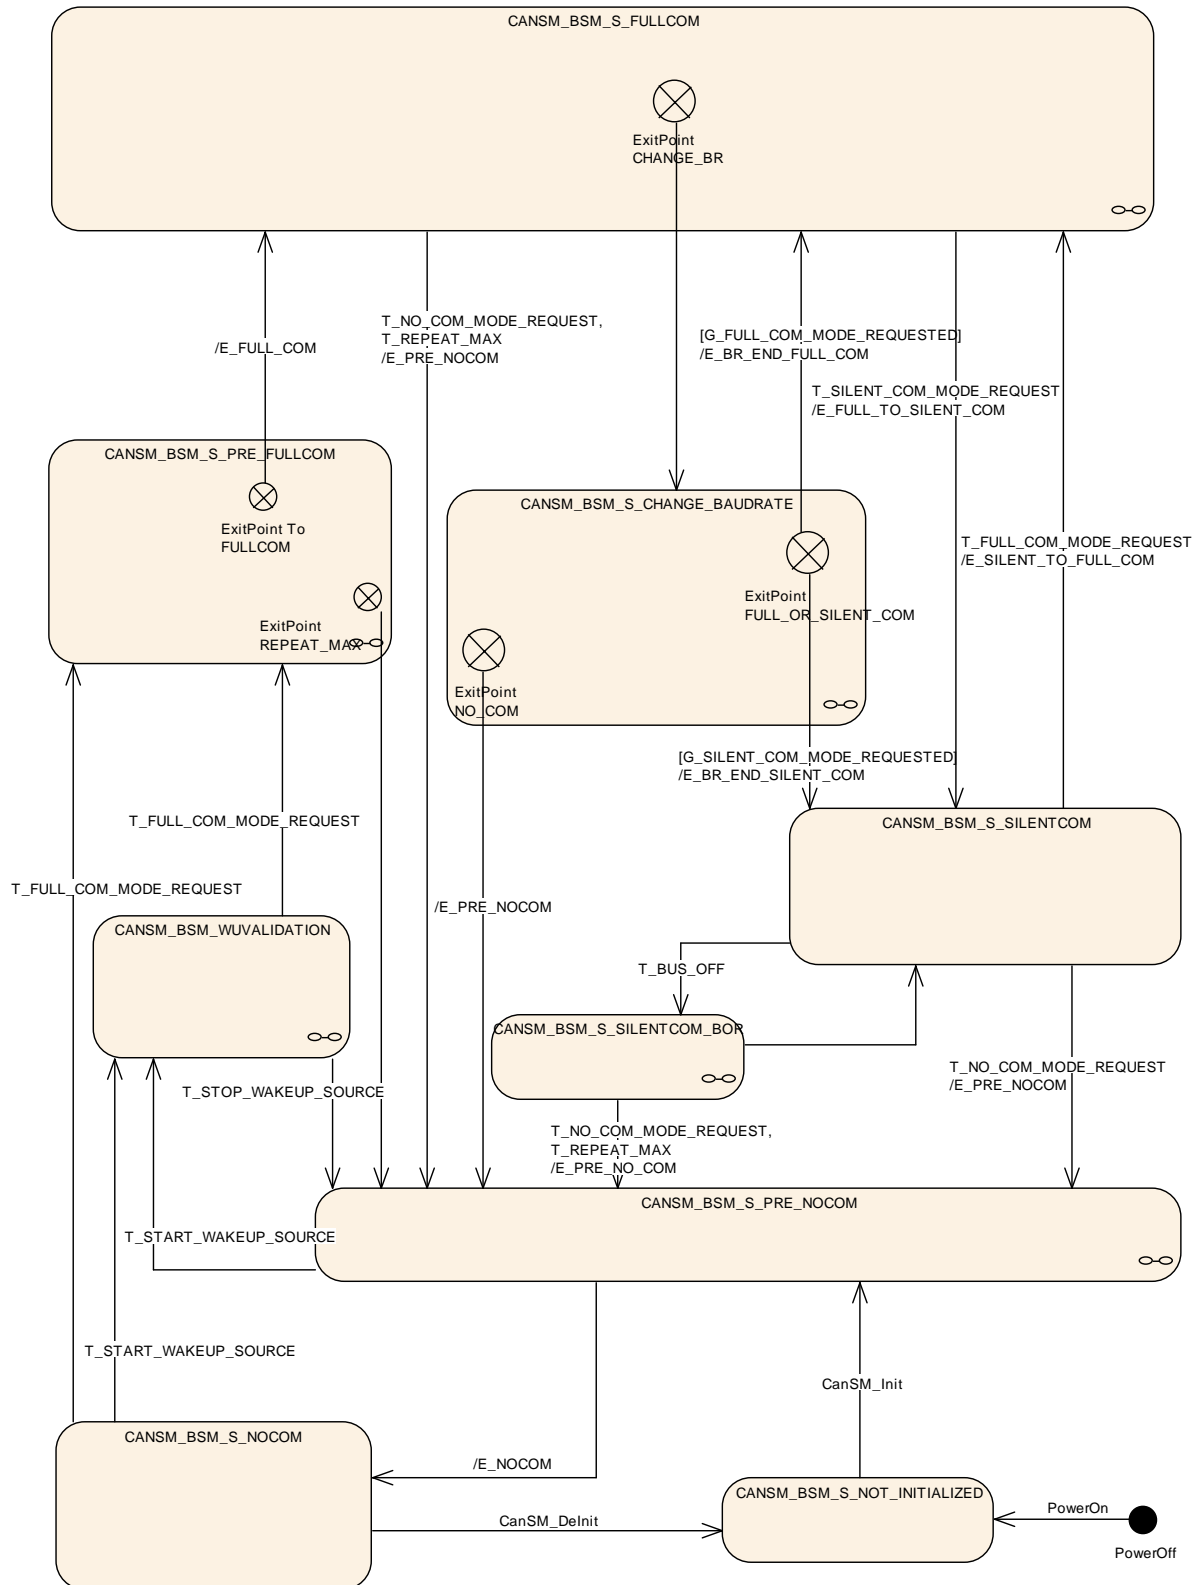


Figure 7-1) shall call at 4th place for the corresponding CAN network the API ComM_BusSM_ModeIndication with the parameters Channel := CanSMComMNetworkHandleRef (ref. to [ECUC CanSM 00161](#)) and ComMode := COMM_SILENT_COMMUNICATION.] (SRS_Can_01142, SRS_Can_01145)

7.2.16 Effect: E_BR_END_FULL_COM

[SWS_CanSM_00432] | The effect E_BR_END_FULL_COM of the CanSM_BSM state machine (ref. to

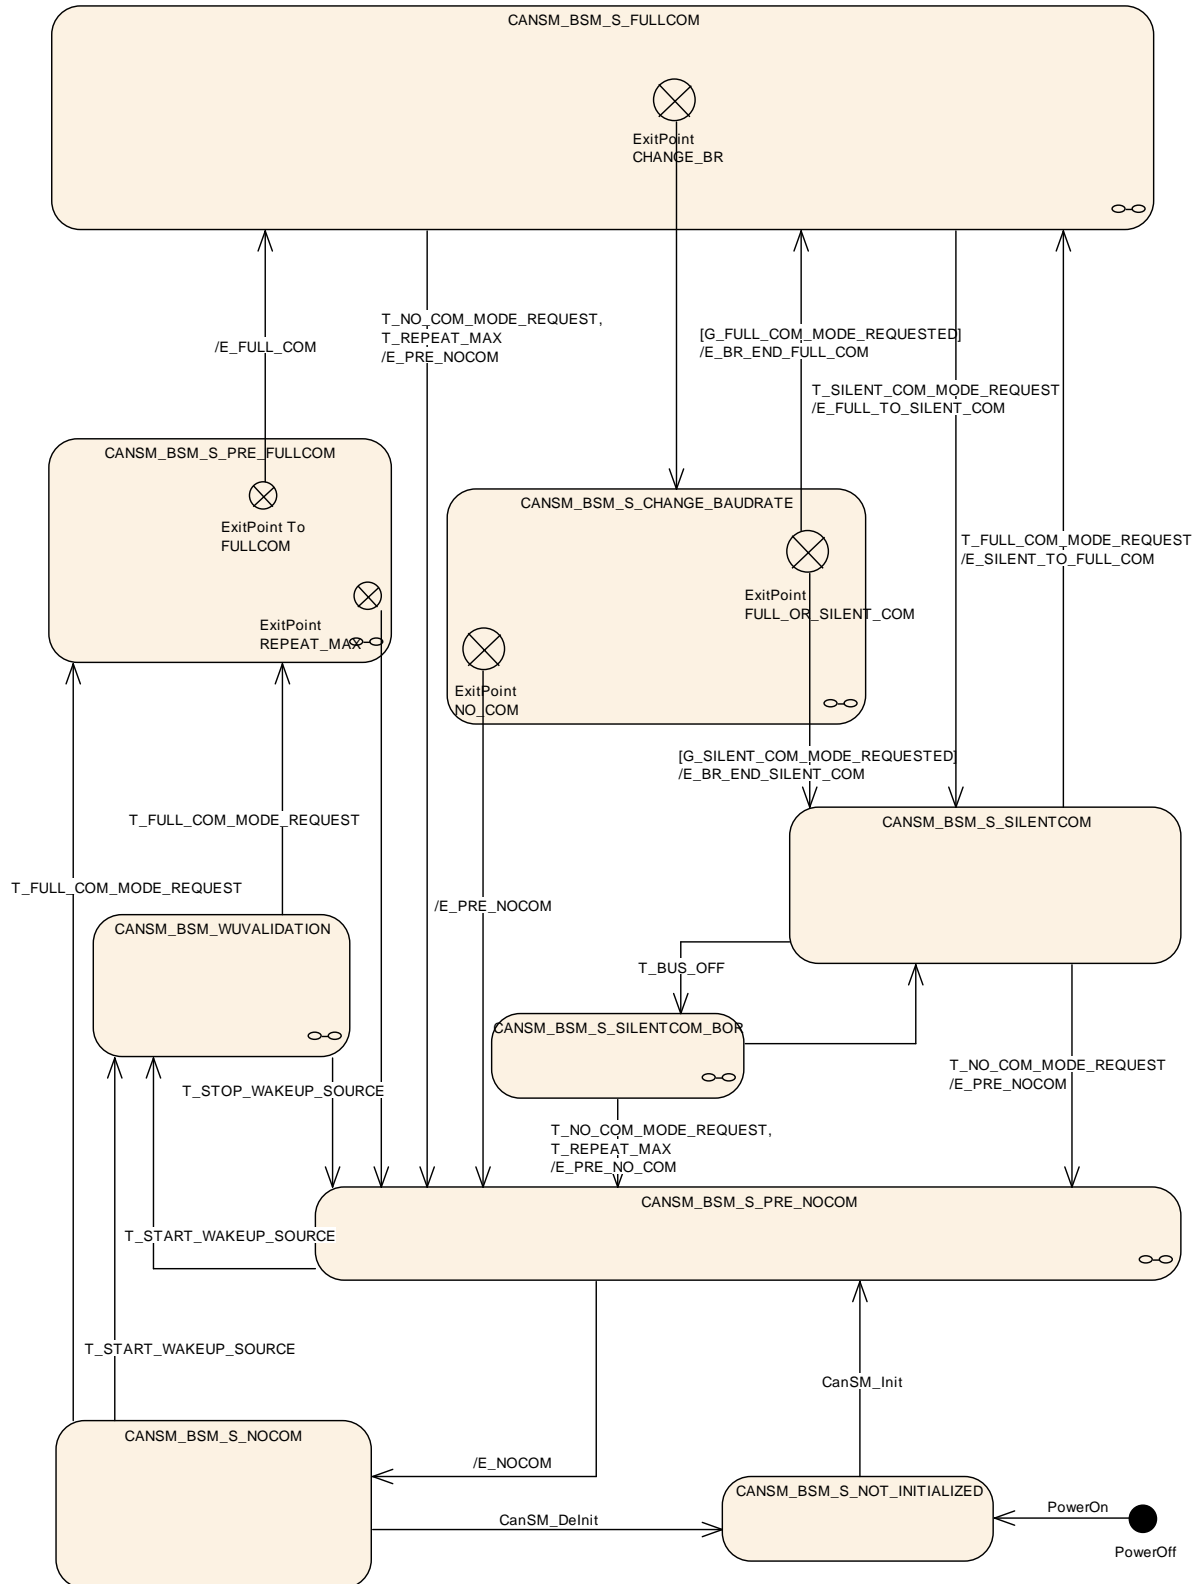


Figure 7-1) shall be the same as E_FULL_COM (ref. to chapter 7.2.14). | (SRS_Can_01142, SRS_Can_01145)

7.2.17 Effect: E_BR_END_SILENT_COM

[SWS_CanSM_00433] [The effect E_BR_END_SILENT_COM of the CanSM_BSM state machine (ref. to

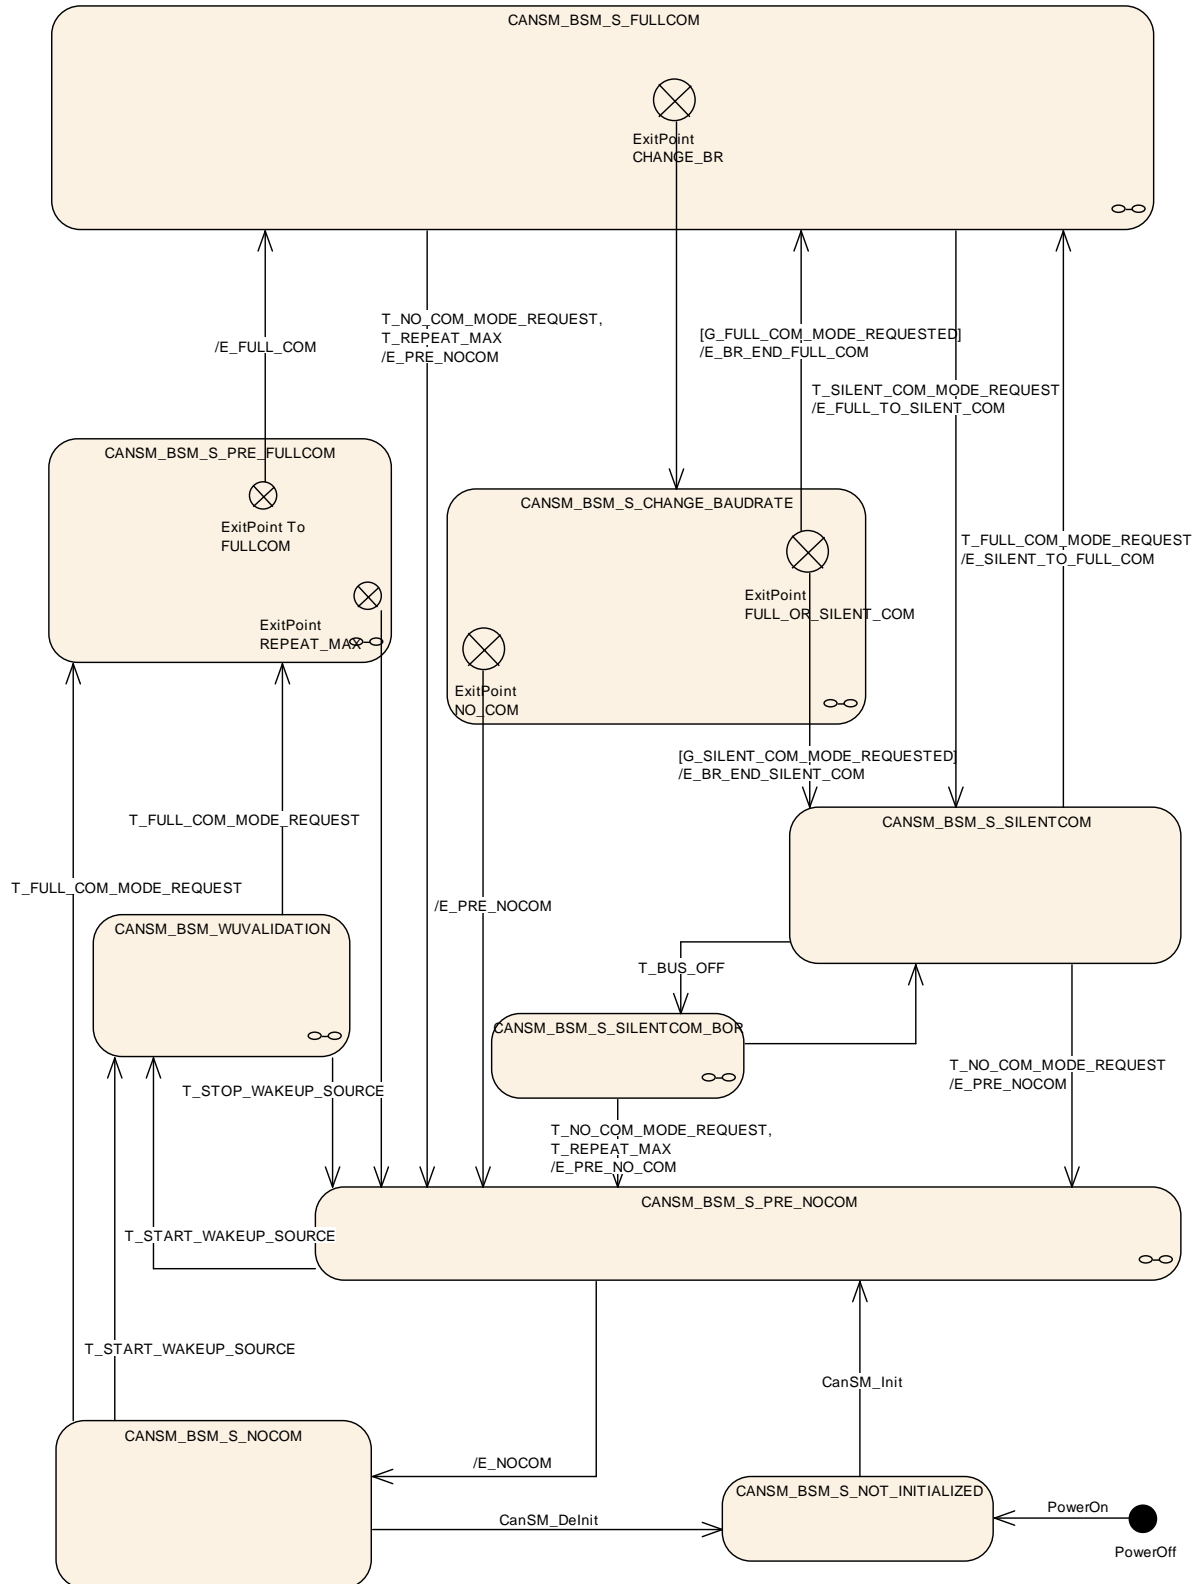


Figure 7-1) shall be the same as E_FULL_TO_SILENT_COM (ref. to chapter 7.2.15).| (SRS_Can_01142, SRS_Can_01145)

7.2.18 Effect: E_SILENT_TO_FULL_COM

[SWS_CanSM_00550] | The effect E_SILENT_TO_FULL_COM of the CanSM_BSM state machine (ref. to

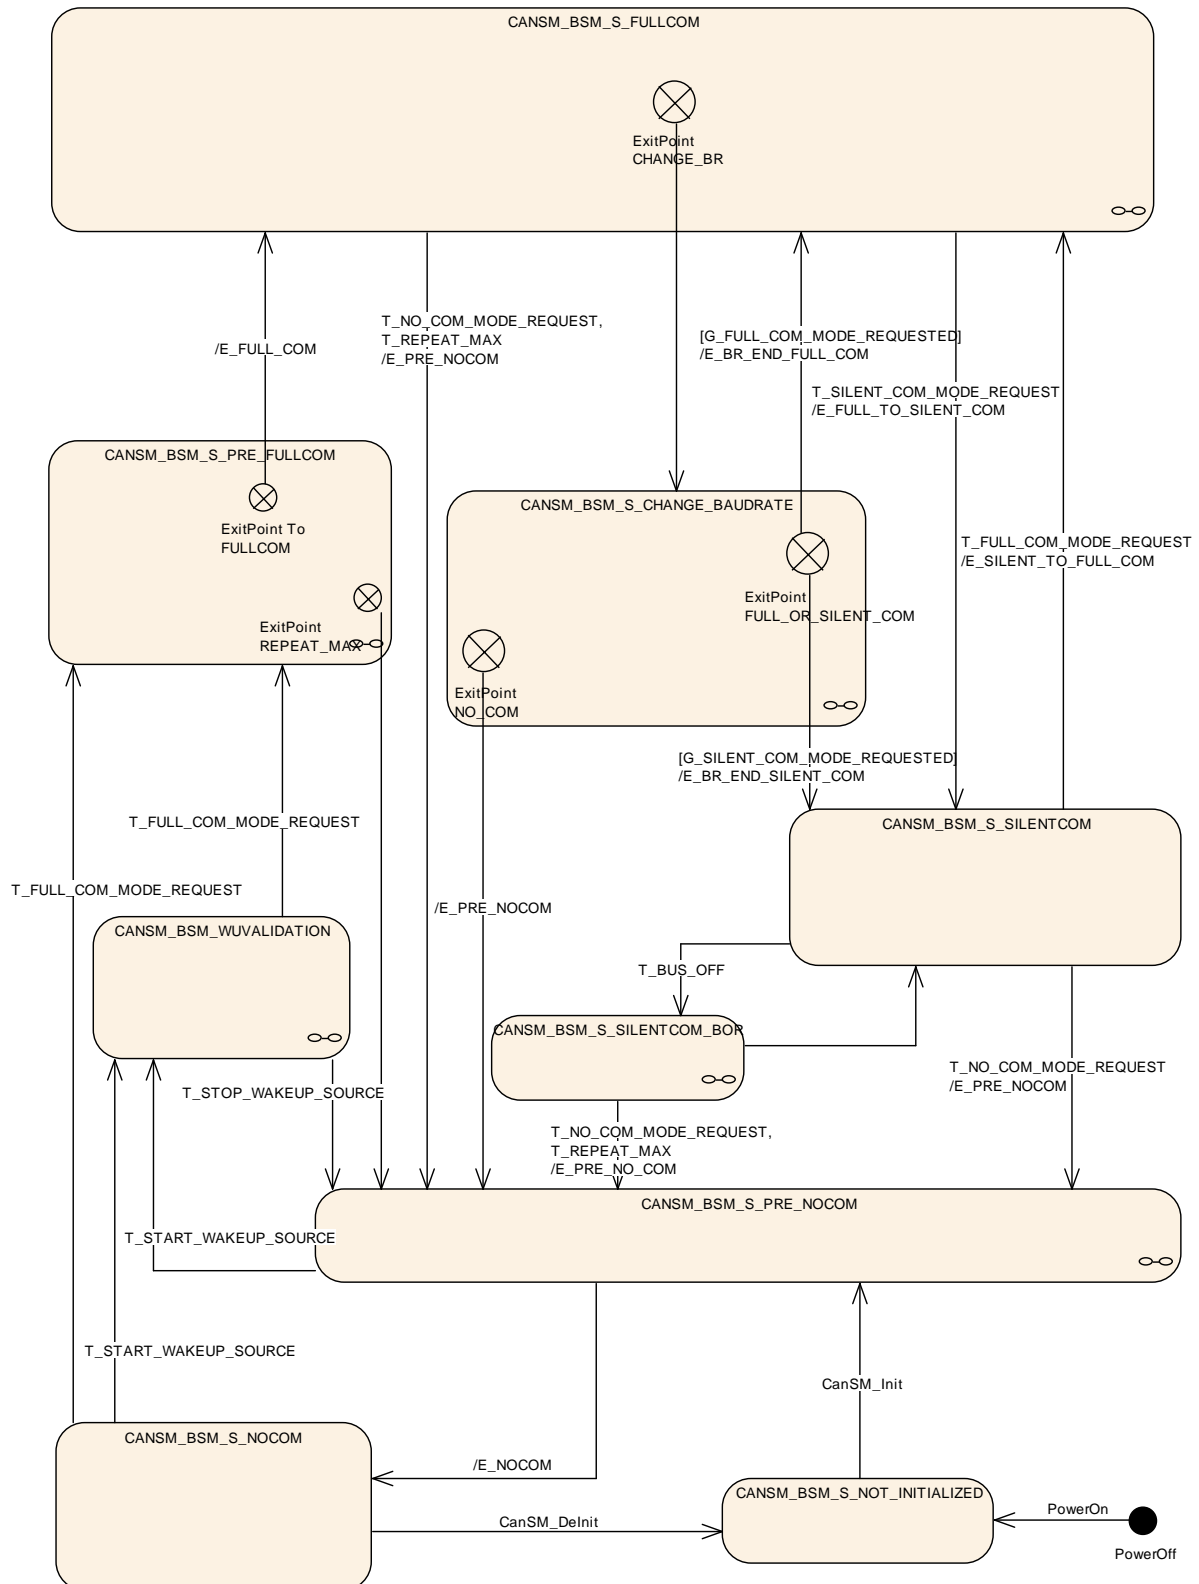


Figure 7-1) shall be the same as E_FULL_COM (ref. to chapter 7.2.14). | (SRS_Can_01142, SRS_Can_01145)

7.2.19 Sub state machine CANSM_BSM_WUVALIDATION

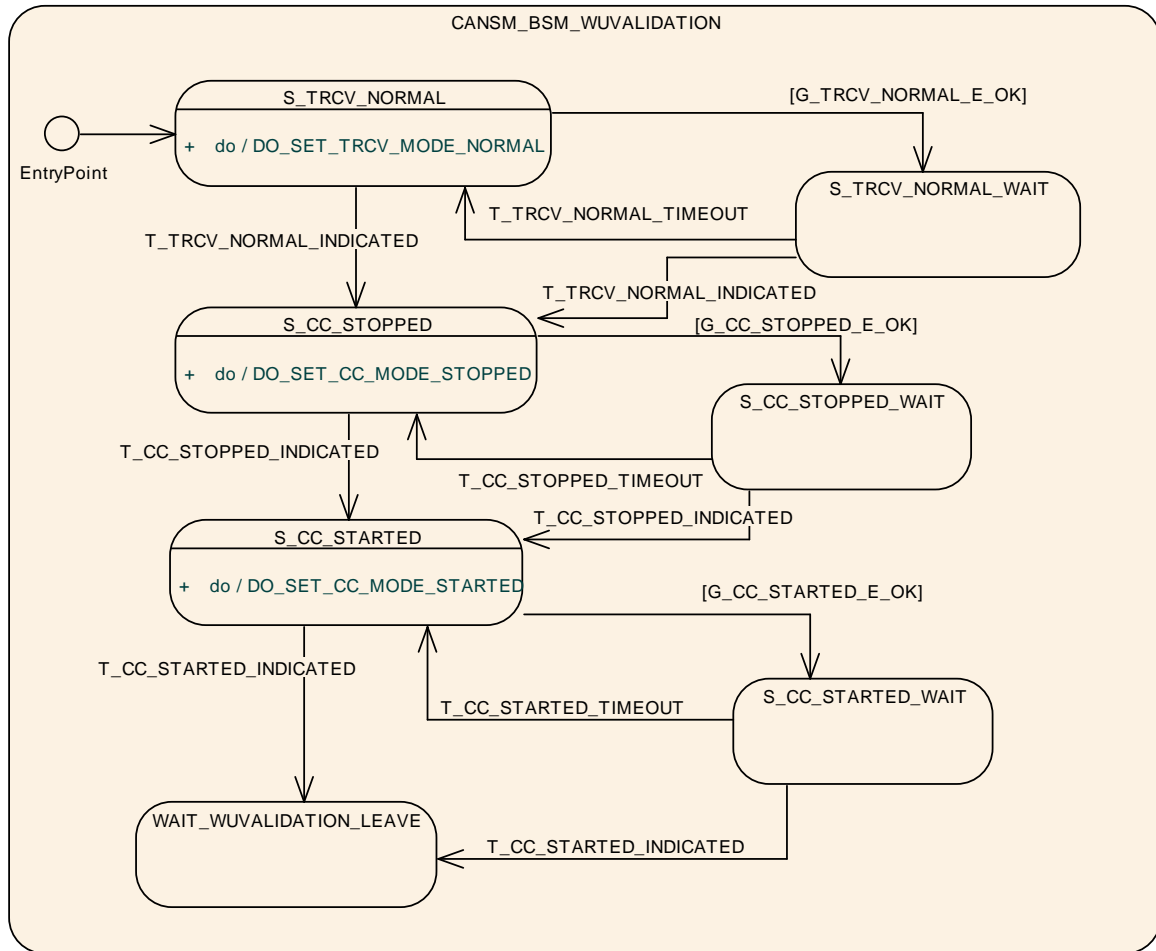


Figure 7-2: CANSM_BSM_WUVALIDATION, sub state machine of CANSM_BSM

7.2.19.1 State operation to do in: S_TRCV_NORMAL

[SWS_CanSM_00623] If for the CAN network a CAN Transceiver is configured (ref. to [ECUC CanSM 00137](#)), then as long the sub state machine CANSM_BSM_WUVALIDATION (ref. to Figure 7-2) is in the state S_TRCV_NORMAL, the CanSM module shall operate the do action DO_SET_TRCV_MODE_NORMAL and therefore repeat for the configured CAN Transceiver of the CAN network (ref. to [ECUC CanSM 00137](#)) the API request CanIf_SetTrcvMode (ref. to chapter 8.5.1) with TransceiverMode equal to CANTRCV_TRCVMODE_NORMAL.] (SRS_Can_01142, SRS_Can_01145)

7.2.19.2 Guarding condition G_TRCV_NORMAL_E_OK

[SWS_CanSM_00624] The guarding condition G_TRCV_NORMAL_E_OK of the sub state machine CANSM_BSM_WUVALIDATION (ref. to Figure 7-2) shall be passed, if the API call of [SWS CanSM 00483](#) has returned E_OK.] (SRS_Can_01142, SRS_Can_01145)

7.2.19.3 Trigger: T_TRCV_NORMAL_INDICATED

[SWS_CanSM_00625] If CanSM module has got the CANTRCV_TRCVMODE_NORMAL mode indication (ref. to [SWS_CanSM_00399](#)) for the configured CAN Transceiver of the CAN network (ref. to [ECUC_CanSM_00137](#)) after the respective request (ref. to [SWS_CanSM_00623](#)), this shall trigger the sub state machine machine CANSM_BSM_WUVALIDATION (ref. to Figure 7-2) of the CAN network with T_TRCV_NORMAL_INDICATED.] (SRS_Can_01142, SRS_Can_01145)

7.2.19.4 Trigger: T_TRCV_NORMAL_TIMEOUT

[SWS_CanSM_00626] After a timeout of CANSM_MODEREQ_REPEAT_TIME (ref. to [ECUC_CanSM_00336](#)) for the supposed transceiver normal indication (ref. to [SWS_CanSM_00625](#)), this condition shall trigger the sub state machine CANSM_BSM_WUVALIDATION (ref. to Figure 7-2) of the respective network with T_TRCV_NORMAL_TIMEOUT.] (SRS_Can_01142, SRS_Can_01145)

7.2.19.5 State operation to do in: S_CC_STOPPED

[SWS_CanSM_00627] As long the sub state machine CANSM_BSM_WUVALIDATION (ref. to Figure 7-2) is in the state S_CC_STOPPED, the CanSM module shall operate the do action DO_SET_CC_MODE_STOPPED and therefore repeat for all configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) the API request CanIf_SetControllerMode (ref. to chapter 8.5.1) with ControllerMode equal to CAN_CS_STOPPED, if the current CAN controller mode (ref. to [SWS_CanSM_00638](#)) is different.] (SRS_Can_01142, SRS_Can_01145)

7.2.19.6 Guarding condition: G_CC_STOPPED_OK

[SWS_CanSM_00628] The guarding condition G_CC_STOPPED_OK of the sub state machine CANSM_BSM_WUVALIDATION (ref. to Figure 7-2) shall be passed, if all API calls of [SWS_CanSM_00627](#) have returned E_OK.] (SRS_Can_01142, SRS_Can_01145)

7.2.19.7 Trigger: T_CC_STOPPED_INDICATED

[SWS_CanSM_00629] If the CanSM module has got all mode indications (ref. to [SWS_CanSM_00396](#)) for the configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) after the respective requests to stop the CAN controllers of the CAN network (ref. to [SWS_CanSM_00627](#)), this shall trigger the sub state machine CANSM_BSM_WUVALIDATION (ref. to Figure 7-2) of the CAN network with T_CC_STOPPED_INDICATED.] (SRS_Can_01142, SRS_Can_01145)

7.2.19.8 Trigger: T_CC_STOPPED_TIMEOUT

[SWS_CanSM_00630] After a timeout of CANSM_MODEREQ_REPEAT_TIME (ref. to [ECUC_CanSM_00336](#)) for all supposed controller stopped mode indications (ref. to [SWS_CanSM_00629](#)), this condition shall trigger the sub state machine CANSM_BSM_WUVALIDATION (ref. to Figure 7-2) of the respective network with T_CC_STOPPED_TIMEOUT.] (SRS_Can_01142, SRS_Can_01145)

7.2.19.9 State operation to do in: S_CC_STARTED

[SWS_CanSM_00631] As long the sub state machine CANSM_BSM_WUVALIDATION (ref. to Figure 7-2) is in the state S_CC_STARTED, the CanSM module shall operate the do action DO_SET_CC_MODE_STARTED and therefore repeat for all configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) the API request CanIf_SetControllerMode (ref. to chapter 8.5.1) with ControllerMode equal to CAN_CS_STARTED, if the current CAN controller mode (ref. to [SWS_CanSM_00638](#)) is different.] (SRS_Can_01142, SRS_Can_01145)

7.2.19.10 Guarding condition: G_CC_STARTED_E_OK

[SWS_CanSM_00632] The guarding condition G_CC_STARTED_OK of the sub state machine CANSM_BSM_WUVALIDATION (ref. to Figure 7-2) shall be passed, if all API calls of [SWS_CanSM_00631](#) have returned E_OK.] (SRS_Can_01142, SRS_Can_01145)

7.2.19.11 Trigger: T_CC_STARTED_INDICATED

[SWS_CanSM_00633] If CanSM module has got all mode indications (ref. to [SWS_CanSM_00396](#)) for the configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) after the respective requests to start the CAN controllers of the CAN network (ref. to [SWS_CanSM_00631](#)), this shall trigger the sub state machine CANSM_BSM_WUVALIDATION (ref. to Figure 7-2) of the CAN network with T_CC_STARTED_INDICATED.] (SRS_Can_01142, SRS_Can_01145)

7.2.19.12 Trigger: T_CC_STARTED_TIMEOUT

[SWS_CanSM_00634] After a timeout of CANSM_MODEREQ_REPEAT_TIME (ref. to [ECUC_CanSM_00336](#)) for all supposed controller started mode indications (ref. to [SWS_CanSM_00633](#)), this condition shall trigger the sub state machine CANSM_BSM_WUVALIDATION (ref. to Figure 7-2) of the respective network with T_CC_STARTED_TIMEOUT.] (SRS_Can_01142, SRS_Can_01145)

7.2.20 Sub state machine: CANSM_BSM_S_PRE_NOCOM

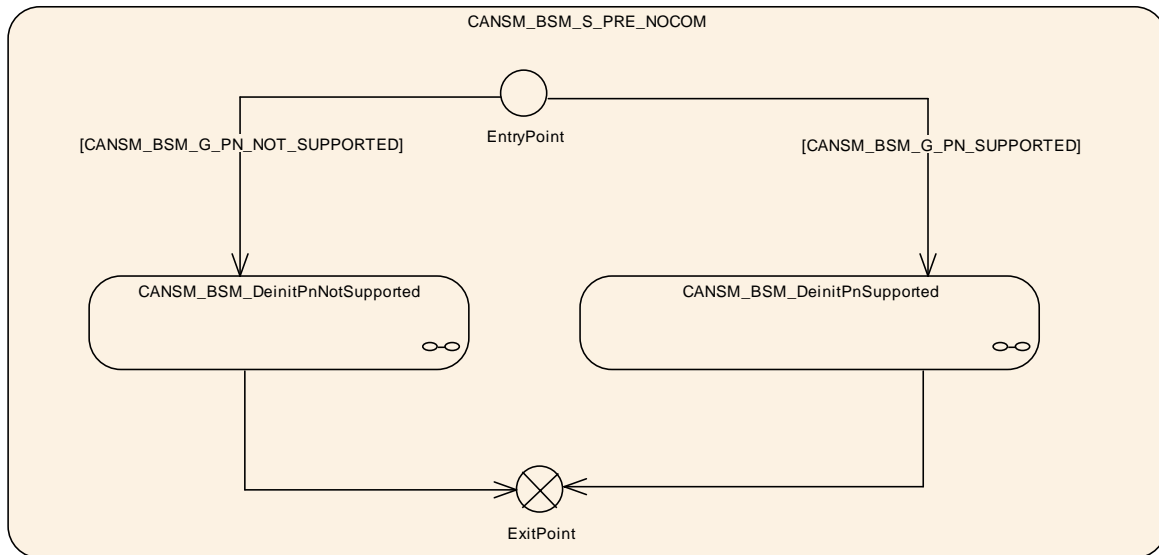


Figure 7-3: CANSM_BSM_S_PRE_NOCOM, sub state machine of CANSM_BSM

7.2.20.1 Guarding condition: CANSM_BSM_G_PN_NOT_SUPPORTED

[SWS_CanSM_00436] [The guarding condition CANSM_BSM_G_PN_NOT_SUPPORTED of the sub state machine CANSM_BSM_S_PRE_NO_COM (ref. to Figure 7-3) shall evaluate, if the configuration parameter CanTrcvPnEnabled (ref. to [9], ECUC_CanTrcv_00172) is FALSE, which is available via the reference CanSMTransceiverId (ref. to [ECUC_CanSM_00137](#)) or if no CanSMTransceiverId is configured at all.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.2 Guarding condition: CANSM_BSM_G_PN_SUPPORTED

[SWS_CanSM_00437] [The guarding condition CANSM_BSM_G_PN_SUPPORTED of the sub state machine CANSM_BSM_S_PRE_NO_COM (ref. to Figure 7-3) shall evaluate, if a CanSMTransceiverId (ref. to [ECUC_CanSM_00137](#)) is configured and if the configuration parameter CanTrcvPnEnabled (ref. to [9], ECUC_CanTrcv_00172) is TRUE, which is available via the reference CanSMTransceiverId (ref. to [ECUC_CanSM_00137](#)).] (SRS_Can_01142, SRS_Can_01145)

7.2.20.3 Sub state machine: CANSM_BSM_DeInitPnSupported

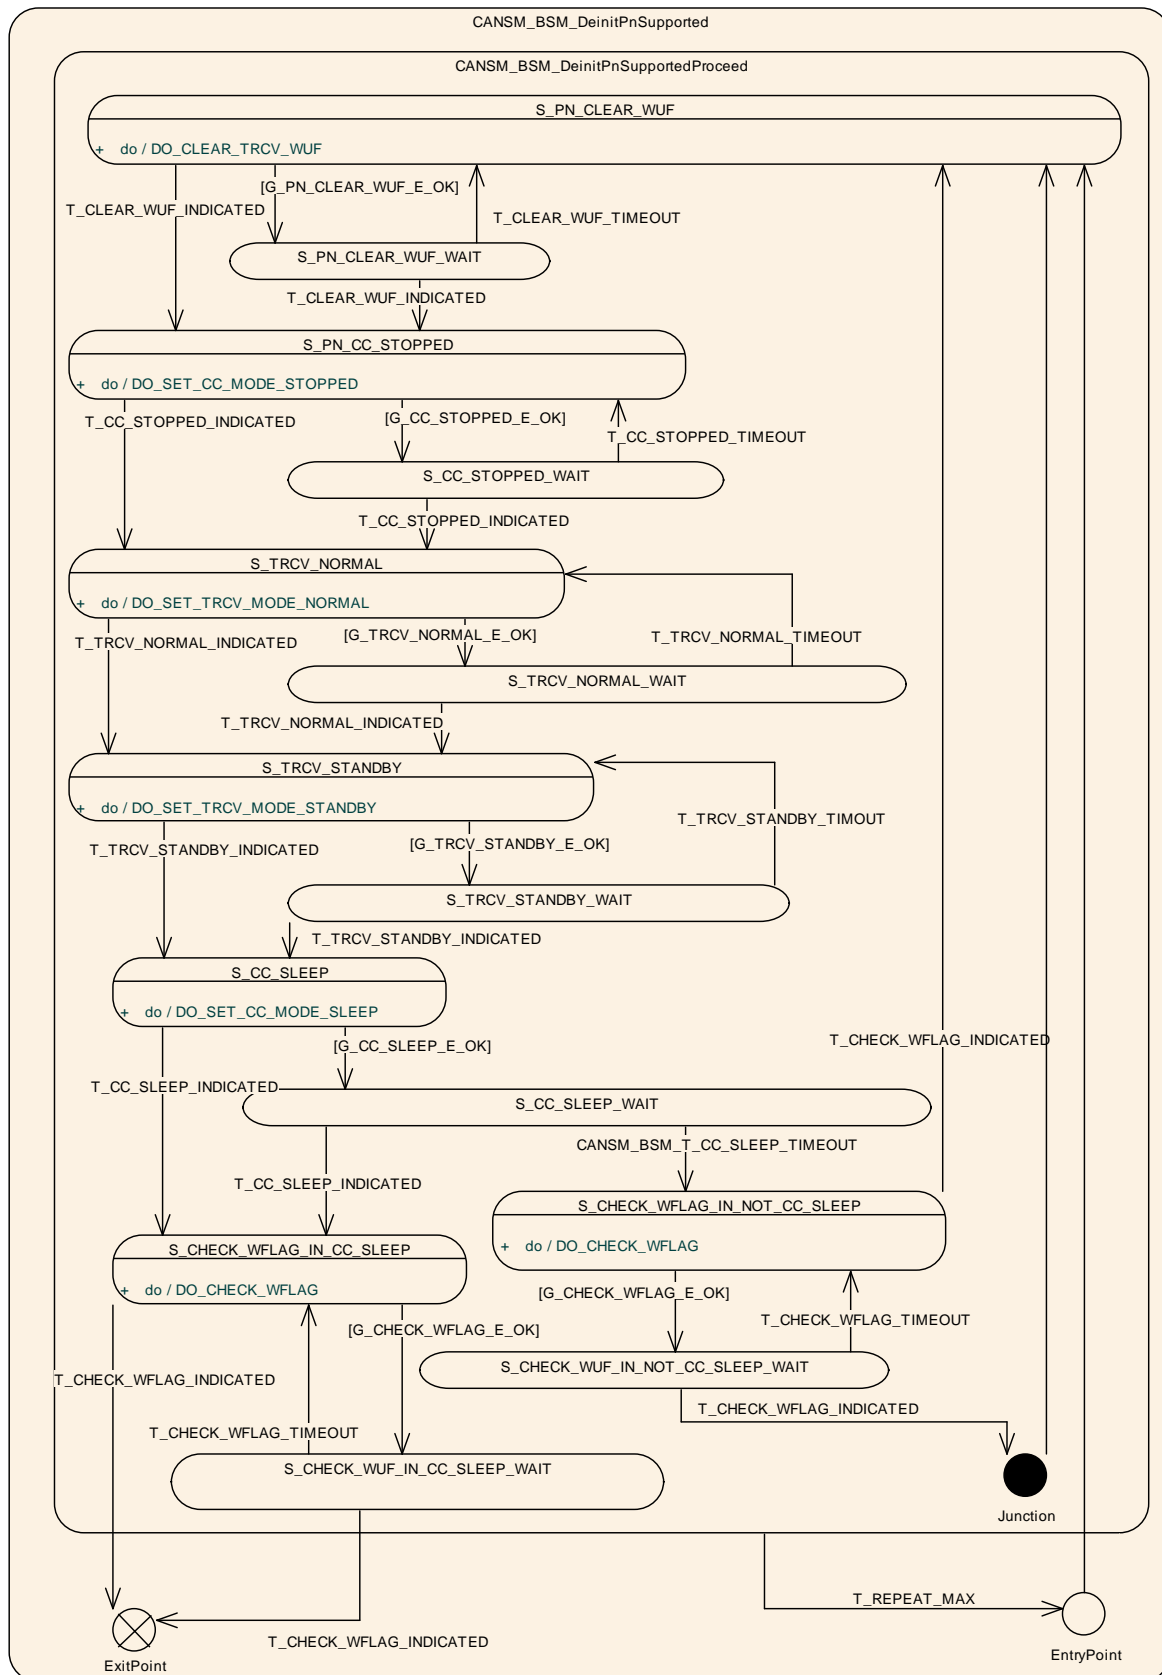


Figure 7-4: CANSM_BSM_DeinitPnSupported, sub state machine of CANSM_BSM_S_PRE_NOCOM

7.2.20.3.1 State operation to do in: S_PN_CLEAR_WUF

[SWS_CanSM_00438] [As long the sub state machine CANSM_BSM_DeinitPnSupported (ref. to Figure 7-4) is in the state S_PN_CLEAR_WUF, the CanSM module operate the do action DO_CLEAR_TRCV_WUF and therefore repeat the API request CanIf_ClrTrcvWufFlag (ref. to chapter 8.5.1) and use the configured Transceiver (ref. to [ECUC_CanSM_00137](#)) as API function parameter.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.3.2 Guarding condition: G_PN_CLEAR_WUF_E_OK

[SWS_CanSM_00439] [The guarding condition G_PN_CLEAR_WUF_E_OK of the sub state machine CANSM_BSM_DeinitPnSupported (ref. to Figure 7-4) shall be passed, if the API call of [SWS_CanSM_00438](#) has returned E_OK.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.3.3 Trigger: T_CLEAR_WUF_INDICATED

[SWS_CanSM_00440] [The callback function CanSM_ClearTrcvWufFlagIndication (ref. to [SWS_CanSM_00413](#)) shall trigger the sub state machine CANSM_BSM_DeinitPnSupported (ref. to Figure 7-4) of the CAN network with T_CLEAR_WUF_INDICATED, if the function parameter Transceiver of CanSM_ClearTrcvWufFlagIndication matches to the configured CAN Transceiver (ref. to [ECUC_CanSM_00137](#)) of the CAN network.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.3.4 Trigger: T_CLEAR_WUF_TIMEOUT

[SWS_CanSM_00443] [After a timeout of CANSM_MODEREQ_REPEAT_TIME (ref. to [ECUC_CanSM_00336](#)) for the callback function CanSM_ClearTrcvWufFlagIndication (ref. to [SWS_CanSM_00440](#)), this condition shall trigger the sub state machine CANSM_BSM_DeinitPnSupported (ref. to Figure 7-4) of the respective network with T_CLEAR_WUF_TIMEOUT.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.3.5 State operation to do in: S_PN_CC_STOPPED

[SWS_CanSM_00441] [As long the sub state machine CANSM_BSM_DeinitPnSupported (ref. to Figure 7-4) is in the state S_PN_CC_STOPPED, the CanSM module shall operate the do action DO_SET_CC_MODE_STOPPED and therefore repeat for all configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) the API request CanIf_SetControllerMode (ref. to chapter 8.5.1) with ControllerMode equal to CAN_CS_STOPPED, if the current CAN controller mode (ref. to [SWS_CanSM_00638](#)) is different.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.3.6 Guarding condition: G_CC_STOPPED_E_OK

[SWS_CanSM_00442] [The guarding condition G_CC_STOPPED_E_OK of the sub state machine CANSM_BSM_DeinitPnSupported (ref. to Figure 7-4) shall be passed, if all API calls of [SWS_CanSM_00441](#) have returned E_OK.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.3.7 Trigger: T_CC_STOPPED_INDICATED

[SWS_CanSM_00444] [If CanSM module has got all mode indications (ref. to [SWS_CanSM_00396](#)) for the configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) after the respective requests to stop the CAN controllers of the CAN network (ref. to [SWS_CanSM_00442](#)), this shall trigger the sub state machine CANSM_BSM_DeinitPnSupported (ref. to Figure 7-4) of the CAN network with T_CC_STOPPED_INDICATED.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.3.8 Trigger: T_CC_STOPPED_TIMEOUT

[SWS_CanSM_00445] [After a timeout of CANSM_MODEREQ_REPEAT_TIME (ref. to [ECUC_CanSM_00336](#)) for all supposed controller stopped mode indications (ref. to [SWS_CanSM_00444](#)), this condition shall trigger the sub state machine CANSM_BSM_DeinitPnSupported (ref. to Figure 7-4) of the respective network with T_CC_STOPPED_TIMEOUT.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.3.9 State operation to do in: S_TRCV_NORMAL

[SWS_CanSM_00446] [As long the sub state machine CANSM_BSM_DeinitPnSupported (ref. to Figure 7-4) is in the state S_TRCV_NORMAL, the CanSM module shall operate the do action DO_SET_TRCV_MODE_NORMAL and therefore repeat for the configured CAN Transceiver of the CAN network (ref. to [ECUC_CanSM_00137](#)) the API request CanIf_SetTrcvMode (ref. to chapter 8.5.1) with TransceiverMode equal to CANTRCV_TRCVMODE_NORMAL.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.3.10 Guarding condition: G_TRCV_NORMAL_E_OK

[SWS_CanSM_00447] [The guarding condition G_TRCV_NORMAL_E_OK of the sub state machine CANSM_BSM_DeinitPnSupported (ref. to Figure 7-4) shall be passed, if the API call of [SWS_CanSM_00446](#) has returned E_OK.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.3.11 Trigger: T_TRCV_NORMAL_INDICATED

[SWS_CanSM_00448] [If CanSM module has got the CANTRCV_TRCVMODE_NORMAL mode indication (ref. to [SWS_CanSM_00399](#)) for the configured CAN Transceiver of the CAN network (ref. to [ECUC_CanSM_00137](#)) after the respective request (ref. to [SWS_CanSM_00446](#)), this shall trigger the sub state machine CANSM_BSM_DeinitPnSupported (ref. to Figure 7-4) of the CAN network with T_TRCV_NORMAL_INDICATED.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.3.12 Trigger: T_TRCV_NORMAL_TIMEOUT

[SWS_CanSM_00449] [After a timeout of `CANSM_MODEREQ_REPEAT_TIME` (ref. to [ECUC_CanSM_00336](#)) for the supposed transceiver normal indication (ref. to [SWS_CanSM_00448](#)), this condition shall trigger the sub state machine `CANSM_BSM_DeinitPnSupported` (ref. to Figure 7-4) of the respective network with `T_TRCV_NORMAL_TIMEOUT`.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.3.13 State operation to do in: S_TRCV_STANDBY

[SWS_CanSM_00450] [As long the sub state machine `CANSM_BSM_DeinitPnSupported` (ref. to Figure 7-4) is in the state `S_TRCV_STANDBY`, the CanSM module shall operate the do action `DO_SET_TRCV_STANDBY` and therefore repeat for the configured CAN Transceiver of the CAN network (ref. to [ECUC_CanSM_00137](#)) the API request `CanIf_SetTrcvMode` (ref. to chapter 8.5.1) with `TransceiverMode` equal to `CANTRCV_TRCVMODE_STANDBY`.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.3.14 Guarding condition: G_TRCV_STANDBY_E_OK

[SWS_CanSM_00451] [The guarding condition `G_TRCV_STANDBY_E_OK` of the sub state machine `CANSM_BSM_DeinitPnSupported` (ref. to Figure 7-4) shall be passed, if the API call of [SWS_CanSM_00450](#) has returned `E_OK`.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.3.15 Trigger: T_TRCV_STANDBY_INDICATED

[SWS_CanSM_00452] [If the CanSM module has got the `CANTRCV_TRCVMODE_STANDBY` mode indication (ref. to [SWS_CanSM_00399](#)) for the configured CAN Transceiver of the CAN network (ref. to [ECUC_CanSM_00137](#)) after the respective request (ref. to [SWS_CanSM_00450](#)), this shall trigger the sub state machine `CANSM_BSM_DeinitPnSupported` (ref. to Figure 7-4) of the CAN network with `T_TRCV_STANDBY_INDICATED`.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.3.16 Trigger: T_TRCV_STANDBY_TIMEOUT

[SWS_CanSM_00454] [After a timeout of `CANSM_MODEREQ_REPEAT_TIME` (ref. to [ECUC_CanSM_00336](#)) for the supposed transceiver standby indication (ref. to [SWS_CanSM_00452](#)), this condition shall trigger the sub state machine `CANSM_BSM_DeinitPnSupported` (ref. to Figure 7-4) of the respective network with `T_TRCV_STANDBY_TIMEOUT`.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.3.17 State operation to do in: S_CC_SLEEP

[SWS_CanSM_00453] [As long the sub state machine `CANSM_BSM_DeinitPnSupported` (ref. to Figure 7-4) is in the state `S_CC_SLEEP`, the CanSM module shall operate the do action `DO_SET_CC_MODE_SLEEP` and therefore repeat for all configured CAN controllers of the CAN network (ref. to

[ECUC CanSM 00141](#)) the API request `CanIf_SetControllerMode` (ref. to chapter 8.5.1) with `ControllerMode` equal to `CAN_CS_SLEEP`, if the current CAN controller mode (ref. to [SWS CanSM 00638](#)) is different.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.3.18 Guarding condition: `G_CC_SLEEP_E_OK`

[SWS_CanSM_00455] [The guarding condition `G_CC_SLEEP_E_OK` of the sub state machine `CANSM_BSM_DeinitPnSupported` (ref. to Figure 7-4) shall be passed, if all API calls of [SWS CanSM 00453](#) have returned `E_OK`.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.3.19 Trigger: `T_CC_SLEEP_INDICATED`

[SWS_CanSM_00456] [If CanSM module has got all mode indications (ref. to [SWS CanSM 00396](#)) for the configured CAN controllers of the CAN network (ref. to [ECUC CanSM 00141](#)) after the respective requests to set the CAN controllers of the CAN network to sleep mode (ref. to [SWS CanSM 00453](#)), this shall trigger the sub state machine `CANSM_BSM_DeinitPnSupported` (ref. to Figure 7-4) of the CAN network with `T_CC_SLEEP_INDICATED`.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.3.20 Trigger: `CANSM_BSM_T_CC_SLEEP_TIMEOUT`

[SWS_CanSM_00457] [After a timeout of `CANSM_MODEREQ_REPEAT_TIME` (ref. to [ECUC CanSM 00336](#)) for all supposed controller sleep mode indications (ref. to [SWS CanSM 00456](#)), this condition shall trigger the sub state machine `CANSM_BSM_DeinitPnSupported` (ref. to Figure 7-4) of the respective network with `CANSM_BSM_T_CC_SLEEP_TIMEOUT`.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.3.21 State operation to do in: `S_CHECK_WFLAG_IN_CC_SLEEP`

[SWS_CanSM_00458] [As long the sub state machine `CANSM_BSM_DeinitPnSupported` (ref. to Figure 7-4) is in the state `S_CHECK_WFLAG_IN_CC_SLEEP`, the CanSM module operate the do action `DO_CHECK_WFLAG` and therefore repeat the API request `CanIf_CheckTrcvWakeFlag` (ref. to chapter 8.5.1) and use the configured CAN Transceiver of the related Network (ref. to [ECUC CanSM 00137](#)) as Transceiver parameter.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.3.22 Guarding condition: `G_CHECK_WFLAG_E_OK`

[SWS_CanSM_00459] [The guarding condition `G_CHECK_WFLAG_E_OK` of the sub state machine `CANSM_BSM_DeinitPnSupported` (ref. to Figure 7-4) shall be passed, if the API call of [SWS CanSM 00458](#) or [SWS CanSM 00462](#) has returned `E_OK`.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.3.23 Trigger: T_CHECK_WFLAG_INDICATED

[SWS_CanSM_00460] [The callback function

CanSM_CheckTransceiverWakeFlagIndication (ref. to [SWS_CanSM_00416](#)) shall trigger the sub state machine CANSM_BSM_DeinitPnSupported (ref. to Figure 7-4) of the CAN network with T_CHECK_WFLAG_INDICATED, if the function parameter Transceiver of CanSM_CheckTransceiverWakeFlagIndication matches to the configured CAN Transceiver (ref. to [ECUC_CanSM_00137](#)) of the CAN network.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.3.24 Trigger: T_CHECK_WFLAG_TIMEOUT

[SWS_CanSM_00461] [After a timeout of CANSM_MODEREQ_REPEAT_TIME (ref. to [ECUC_CanSM_00336](#)) for the callback function CanSM_CheckTransceiverWakeFlagIndication (ref. to [SWS_CanSM_00460](#)), this condition shall trigger the sub state machine CANSM_BSM_DeinitPnSupported (ref. to Figure 7-4) of the respective network with T_CHECK_WFLAG_TIMEOUT.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.3.25 State operation to do in: S_CHECK_WFLAG_IN_NOT_CC_SLEEP

[SWS_CanSM_00462] [As long the sub state machine CANSM_BSM_DeinitPnSupported (ref. to Figure 7-4) is in the state S_CHECK_WFLAG_IN_NOT_CC_SLEEP, the CanSM module operate the do action DO_CHECK_WFLAG and therefore repeat the API request CanIf_CheckTrcvWakeFlag (ref. to chapter 8.5.1) and use the configured CAN Transceiver of the related Network (ref. to [ECUC_CanSM_00137](#)) as Transceiver parameter.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.3.26 Trigger: T_REPEAT_MAX

[SWS_CanSM_00463] [If the sub state machine CANSM_BSM_DeinitPnSupported (ref. to Figure 7-4) has repeated any of the CanIf API calls (ref. to [SWS_CanSM_00438](#), [SWS_CanSM_00441](#), [SWS_CanSM_00446](#), [SWS_CanSM_00450](#), [SWS_CanSM_00453](#), [SWS_CanSM_00458](#), [SWS_CanSM_00462](#)) more often than configured (ref. to [ECUC_CanSM_00335](#)) without getting the return value E_OK and without getting the supposed mode indication callbacks (ref. to [SWS_CanSM_00444](#), [SWS_CanSM_00448](#), [SWS_CanSM_00452](#), [SWS_CanSM_00456](#), [SWS_CanSM_00460](#)), this shall trigger the sub state machine CANSM_BSM_DeinitPnSupported with T_REPEAT_MAX.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.4 Sub state machine: **CANSM_BSM_DeinitPnNotSupported**

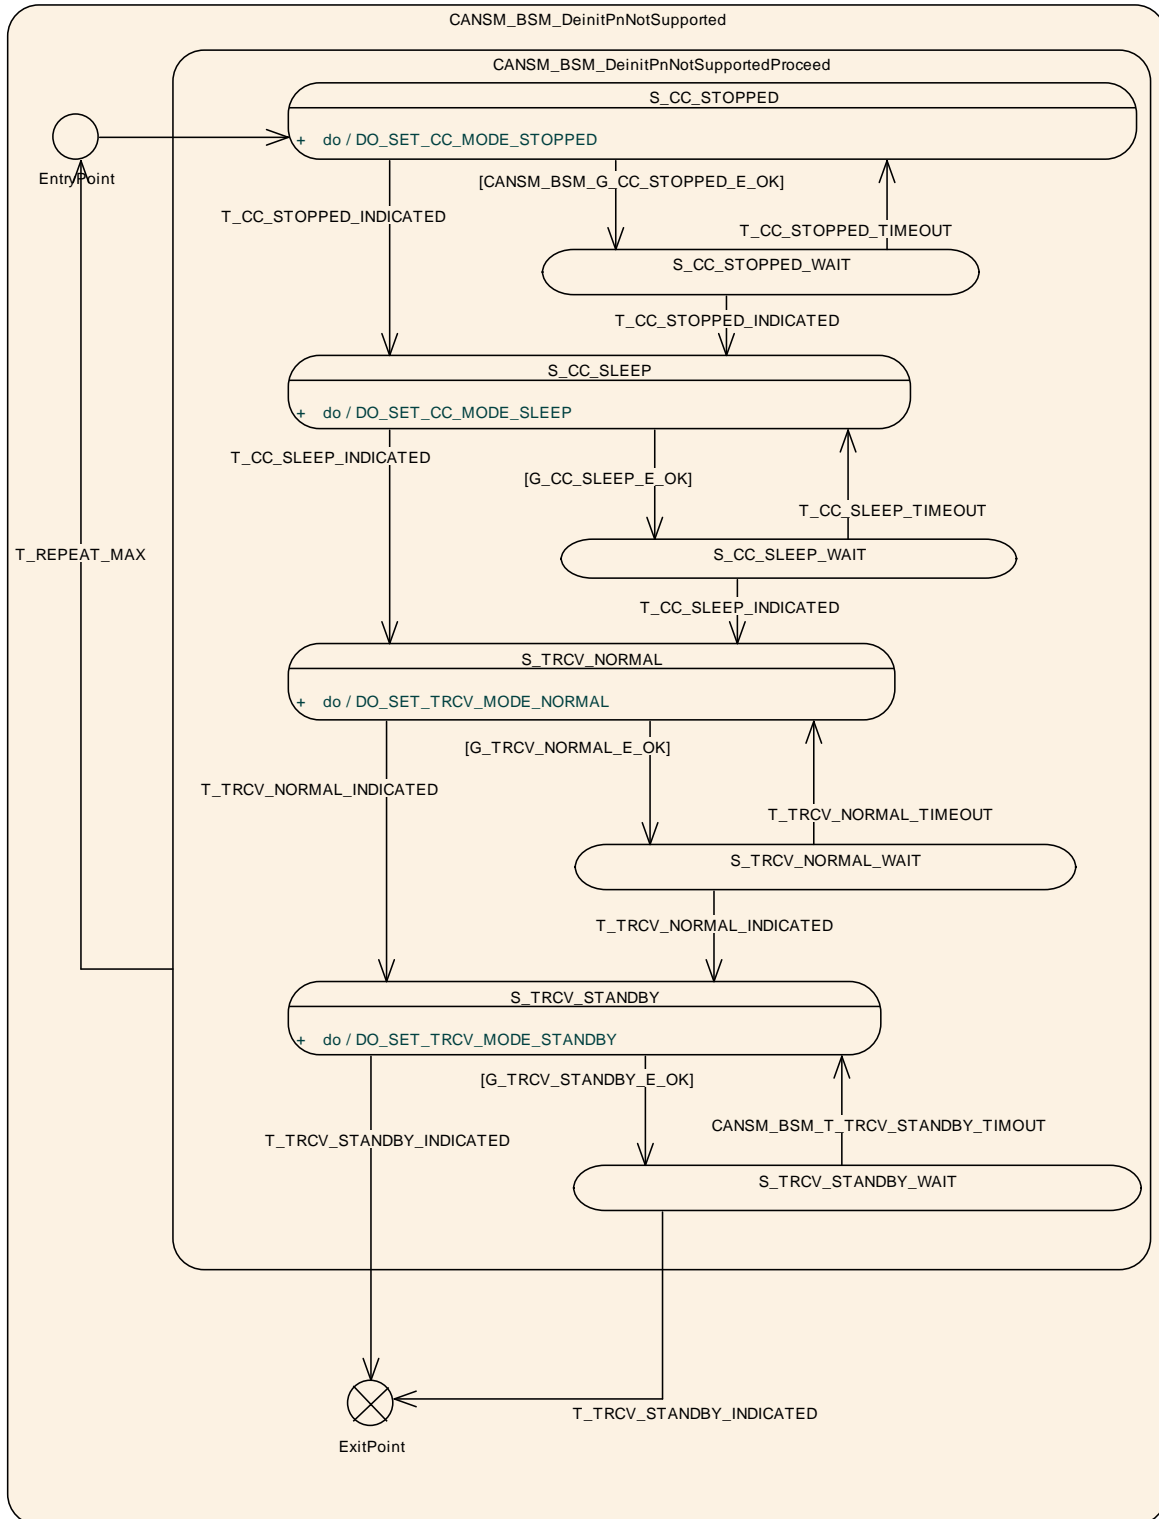


Figure 7-5: CANSM_BSM_DeinitPnNotSupported, sub state machine of CANSM_BSM_S_PRE_NOCOM

7.2.20.4.1 State operation to do in: **S_CC_STOPPED**

[SWS_CanSM_00464] [As long the sub state machine
CANSM_BSM_DeinitPnNotSupported (ref. to Figure 7-5) is in the state

S_CC_STOPPED, the CanSM module shall operate the do action DO_SET_CC_MODE_STOPPED and therefore repeat for all configured CAN controllers of the CAN network (ref. to [ECUC CanSM 00141](#)) the API request CanIf_SetControllerMode (ref. to chapter 8.5.1) with ControllerMode equal to CAN_CS_STOPPED, if the current CAN controller mode (ref. to [SWS CanSM 00638](#)) is different.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.4.2 Guarding condition: CANSM_BSM_G_CC_STOPPED_OK

[SWS_CanSM_00465] [The guarding condition CANSM_BSM_G_CC_STOPPED_OK of the sub state machine CANSM_BSM_DeinitPnNotSupported (ref. to Figure 7-5) shall be passed, if all API calls of [SWS CanSM 00464](#) have returned E_OK.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.4.3 Trigger: T_CC_STOPPED_INDICATED

[SWS_CanSM_00466] [If CanSM module has got all mode indications (ref. to [SWS CanSM 00396](#)) for the configured CAN controllers of the CAN network (ref. to [ECUC CanSM 00141](#)) after the respective requests to stop the CAN controllers of the CAN network (ref. to [SWS CanSM 00464](#)), this shall trigger the sub state machine CANSM_BSM_DeinitPnNotSupported (ref. to Figure 7-5) of the CAN network with T_CC_STOPPED_INDICATED.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.4.4 Trigger: T_CC_STOPPED_TIMEOUT

[SWS_CanSM_00467] [After a timeout of CANSM_MODEREQ_REPEAT_TIME (ref. to [ECUC CanSM 00336](#)) for all supposed controller stopped mode indications (ref. to [SWS CanSM 00466](#)), this condition shall trigger the sub state machine CANSM_BSM_DeinitPnNotSupported (ref. to Figure 7-5) of the respective network with T_CC_STOPPED_TIMEOUT.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.4.5 State operation to do in: S_CC_SLEEP

[SWS_CanSM_00468] [As long the sub state machine CANSM_BSM_DeinitPnNotSupported (ref. to Figure 7-5) is in the state S_CC_SLEEP, the CanSM module shall operate the do action DO_SET_CC_MODE_SLEEP and therefore repeat for all configured CAN controllers of the CAN network (ref. to [ECUC CanSM 00141](#)) the API request CanIf_SetControllerMode (ref. to chapter 8.5.1) with ControllerMode equal to CAN_CS_SLEEP, if the current CAN controller mode (ref. to [SWS CanSM 00638](#)) is different.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.4.6 Guarding condition: G_CC_SLEEP_E_OK

[SWS_CanSM_00469] [The guarding condition G_CC_SLEEP_E_OK of the sub state machine CANSM_BSM_DeinitPnNotSupported (ref. to Figure 7-5) shall be passed, if all API calls of [SWS CanSM 00468](#) have returned E_OK.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.4.7 Trigger: T_CC_SLEEP_INDICATED

[SWS_CanSM_00470] [If CanSM module has got all mode indications (ref. to [SWS_CanSM_00396](#)) for the configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) after the respective requests to set the CAN controllers of the CAN network to sleep mode (ref. to [SWS_CanSM_00468](#)), this shall trigger the sub state machine `CANSM_BSM_DeinitPnNotSupported` (ref. to Figure 7-5) of the CAN network with `T_CC_SLEEP_INDICATED`.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.4.8 Trigger: T_CC_SLEEP_TIMEOUT

[SWS_CanSM_00471] [After a timeout of `CANSM_MODEREQ_REPEAT_TIME` (ref. to [ECUC_CanSM_00336](#)) for all supposed controller sleep mode indications (ref. to [SWS_CanSM_00470](#)), this condition shall trigger the sub state machine `CANSM_BSM_DeinitPnNotSupported` (ref. to Figure 7-5) of the respective network with `T_CC_SLEEP_TIMEOUT`.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.4.9 State operation to do in: S_TRCV_NORMAL

[SWS_CanSM_00472] [If for the CAN network a CAN Transceiver is configured (ref. to [ECUC_CanSM_00137](#)), then as long the sub state machine `CANSM_BSM_DeinitPnNotSupported` (ref. to Figure 7-5) is in the state `S_TRCV_NORMAL`, the CanSM module shall operate the do action `DO_SET_TRCV_MODE_NORMAL` and therefore repeat for the configured CAN Transceiver of the CAN network (ref. to [ECUC_CanSM_00137](#)) the API request `CanIf_SetTrcvMode` (ref. to chapter 8.5.1) with `TransceiverMode` equal to `CANTRCV_TRCVMODE_NORMAL`.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.4.10 Guarding condition: G_TRCV_NORMAL_E_OK

[SWS_CanSM_00473] [The guarding condition `G_TRCV_NORMAL_E_OK` of the sub state machine `CANSM_BSM_DeinitPnNotSupported` (ref. to Figure 7-5) shall be passed, if the API call of [SWS_CanSM_00472](#) has returned `E_OK`.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.4.11 Trigger: T_TRCV_NORMAL_INDICATED

[SWS_CanSM_00474] [If CanSM module has got the `CANTRCV_TRCVMODE_NORMAL` mode indication (ref. to [SWS_CanSM_00399](#)) for the configured CAN Transceiver of the CAN network (ref. to [ECUC_CanSM_00137](#)) after the respective request (ref. to [SWS_CanSM_00472](#)), this shall trigger the sub state machine `CANSM_BSM_DeinitPnNotSupported` (ref. to Figure 7-5) of the CAN network with `T_TRCV_NORMAL_INDICATED`.] (SRS_Can_01142, SRS_Can_01145)

[SWS_CanSM_00556] [If no CAN Transceiver is configured for the CAN network, then this shall trigger the sub state machine `CANSM_BSM_DeinitPnNotSupported` (ref. to Figure 7-5) of the CAN network in the state `S_TRCV_NORMAL` with `T_TRCV_NORMAL_INDICATED`.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.4.12 Trigger: T_TRCV_NORMAL_TIMEOUT

[SWS_CanSM_00475] [After a timeout of `CANSM_MODEREQ_REPEAT_TIME` (ref. to [ECUC_CanSM_00336](#)) for the supposed transceiver normal indication (ref. to [SWS_CanSM_00474](#)), this condition shall trigger the sub state machine `CANSM_BSM_DeinitPnNotSupported` (ref. to Figure 7-5) of the respective network with `T_TRCV_NORMAL_TIMEOUT`.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.4.13 State operation to do in: S_TRCV_STANDBY

[SWS_CanSM_00476] [If for the CAN network a CAN Transceiver is configured (ref. to [ECUC_CanSM_00137](#)), then as long the sub state machine `CANSM_BSM_DeinitPnNotSupported` (ref. to Figure 7-5) is in the state `S_TRCV_STANDBY`, the CanSM module shall operate the do action `DO_SET_TRCV_MODE_STANDBY` and therefore repeat for the configured CAN Transceiver of the CAN network (ref. to [ECUC_CanSM_00137](#)) the API request `CanIf_SetTrcvMode` (ref. to chapter 8.5.1) with `TransceiverMode` equal to `CANTRCV_TRCVMODE_STANDBY`.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.4.14 Guarding condition: G_TRCV_STANDBY_E_OK

[SWS_CanSM_00477] [The guarding condition `G_TRCV_STANDBY_E_OK` of the sub state machine `CANSM_BSM_DeinitPnNotSupported` (ref. to Figure 7-5) shall be passed, if the API call of [SWS_CanSM_00476](#) has returned `E_OK`.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.4.15 Trigger: T_TRCV_STANDBY_INDICATED

[SWS_CanSM_00478] [If CanSM module has got the `CANTRCV_TRCVMODE_STANDBY` mode indication (ref. to [SWS_CanSM_00399](#)) for the configured CAN Transceiver of the CAN network (ref. to [ECUC_CanSM_00137](#)) after the respective request (ref. to [SWS_CanSM_00476](#)), this shall trigger the sub state machine `CANSM_BSM_DeinitPnNotSupported` (ref. to Figure 7-5) of the CAN network with `T_TRCV_STANDBY_INDICATED`.] (SRS_Can_01142, SRS_Can_01145)

[SWS_CanSM_00557] [If no CAN Transceiver is configured for the CAN network (ref. to [ECUC_CanSM_00137](#)), then this shall trigger the sub state machine `CANSM_BSM_DeinitPnNotSupported` (ref. to Figure 7-5) of the CAN network in the state `S_TRCV_STANDBY` with `T_TRCV_STANDBY_INDICATED`.] (SRS_Can_01142, SRS_Can_01145)

7.2.20.4.16 Trigger: CANSM_BSM_T_TRCV_STANDBY_TIMEOUT

[SWS_CanSM_00479] [After a timeout of `CANSM_MODEREQ_REPEAT_TIME` (ref. to [ECUC_CanSM_00336](#)) for the supposed transceiver standby indication (ref. to [SWS_CanSM_00478](#)), this condition shall trigger the sub state machine `CANSM_BSM_DeinitPnNotSupported` (ref. to Figure 7-5) of the respective

network with `CANSM_BSM_T_TRCV_STANDBY_TIMEOUT.`] (SRS_Can_01142, SRS_Can_01145)

7.2.20.4.17 Trigger: T_REPEAT_MAX

[SWS_CanSM_00480] [If the sub state machine `CANSM_BSM_DeinitPnNotSupported` (ref. to Figure 7-5) has repeated any of the `CanIf` API calls (ref. to [SWS_CanSM_00464](#), [SWS_CanSM_00468](#), [SWS_CanSM_00472](#), [SWS_CanSM_00476](#)) more often than configured (ref. to [ECUC_CanSM_00335](#)) without getting the return value `E_OK` and without getting the supposed mode indication callbacks (ref. to [SWS_CanSM_00466](#), [SWS_CanSM_00470](#), [SWS_CanSM_00474](#), [SWS_CanSM_00478](#)), this shall trigger the sub state machine `CANSM_BSM_DeinitPnNotSupported` with `T_REPEAT_MAX.`] (SRS_Can_01142, SRS_Can_01145)

7.2.21 Sub state machine: CANSM_BSM_S_SILENCOM_BOR

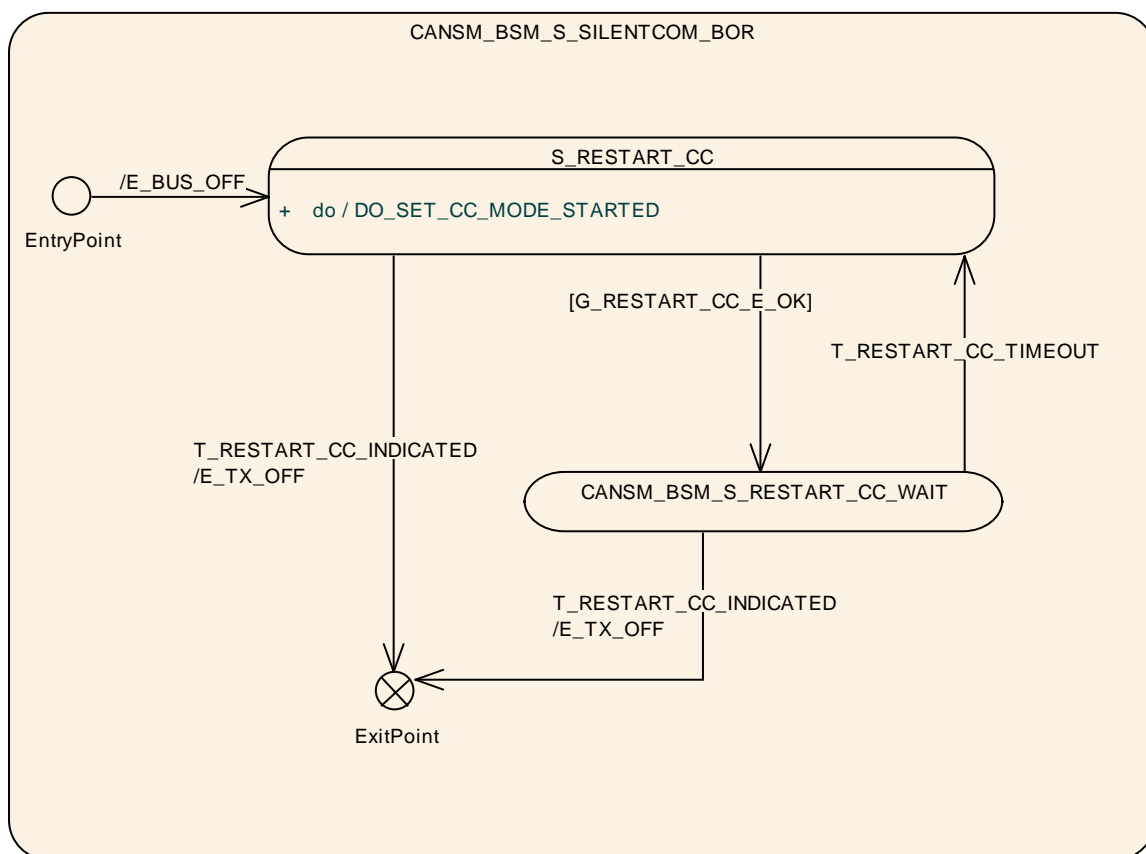


Figure 7-6: `CANSM_BSM_S_SILENCOM_BOR`, sub state machine of `CANSM_BSM`

7.2.21.1 Effect: E_BUS_OFF

[SWS_CanSM_00605] [The effect `E_BUS_OFF` of the sub state machine `CANSM_BSM_S_FULLCOM` `CANSM_BSM_S_SILENCOM_BOR` (ref. to Figure 7-6) shall invoke `Dem_SetEventStatus` (ref. to chapter 8.5.1) with the parameters

EventId := CANS_M_E_BUS_OFF (ref. to [ECUC CanSM 00070](#)) and
EventStatus := DEM_EVENT_STATUS_PRE_FAILED.] (SRS_BSW_00422)

7.2.21.2 State operation: S_RESTART_CC

[SWS_CanSM_00604] As long the sub state machine CANS_M_BSM_S_SILENCOM_BOR (ref. to Figure 7-6) is in the state S_RESTART_CC, the CanSM module shall operate the do action DO_SET_CC_MODE_STARTED and therefore repeat for all configured CAN controllers of the CAN network (ref. to [ECUC CanSM 00141](#)) the API request CanIf_SetControllerMode (ref. to chapter 8.5.1) with ControllerMode equal to CAN_CS_STARTED, if the current CAN controller mode (ref. to [SWS CanSM 00638](#)) is different.] (SRS_Can_01142, SRS_Can_01145, SRS_Can_01144, SRS_Can_01146)

7.2.21.3 G_RESTART_CC_E_OK

[SWS_CanSM_00603] The guarding condition G_RESTART_CC_OK of the sub state machine CANS_M_BSM_S_SILENCOM_BOR (ref. to Figure 7-6) shall be passed, if all API calls of [SWS CanSM 00604](#) have returned E_OK.] (SRS_Can_01142, SRS_Can_01145, SRS_Can_01144, SRS_Can_01146)

7.2.21.4 Trigger: T_RESTART_CC_INDICATED

[SWS_CanSM_00600] If CanSM module has got all mode indications (ref. to [SWS CanSM 00396](#)) for the configured CAN controllers of the CAN network (ref. to [ECUC CanSM 00141](#)) after the respective requests to start the CAN controllers of the CAN network (ref. to [SWS CanSM 00604](#)), this shall trigger the sub state CANS_M_BSM_S_SILENCOM_BOR (ref. to Figure 7-6) of the CAN network with T_RESTART_CC_INDICATED.] (SRS_Can_01142, SRS_Can_01145, SRS_Can_01144, SRS_Can_01146)

7.2.21.5 T_RESTART_CC_TIMEOUT

[SWS_CanSM_00602] After a timeout of CANS_M_MODEREQ_REPEAT_TIME (ref. to [ECUC CanSM 00336](#)) for all supposed controller started mode indications (ref. to [SWS CanSM 00600](#)), this condition shall trigger the sub state machine CANS_M_BSM_S_SILENCOM_BOR (ref. to Figure 7-6) of the respective network with T_RESTART_CC_TIMEOUT.] (SRS_Can_01142, SRS_Can_01145, SRS_Can_01144, SRS_Can_01146)

7.2.21.6 Effect: E_TX_OFF

The effect E_TX_OFF shall do nothing (default PDU mode after restart of CAN controller is already TX OFF, ref. to CanIf SWS).

7.2.22 Sub state machine: CANSMBSM_S_PRE_FULLCOM

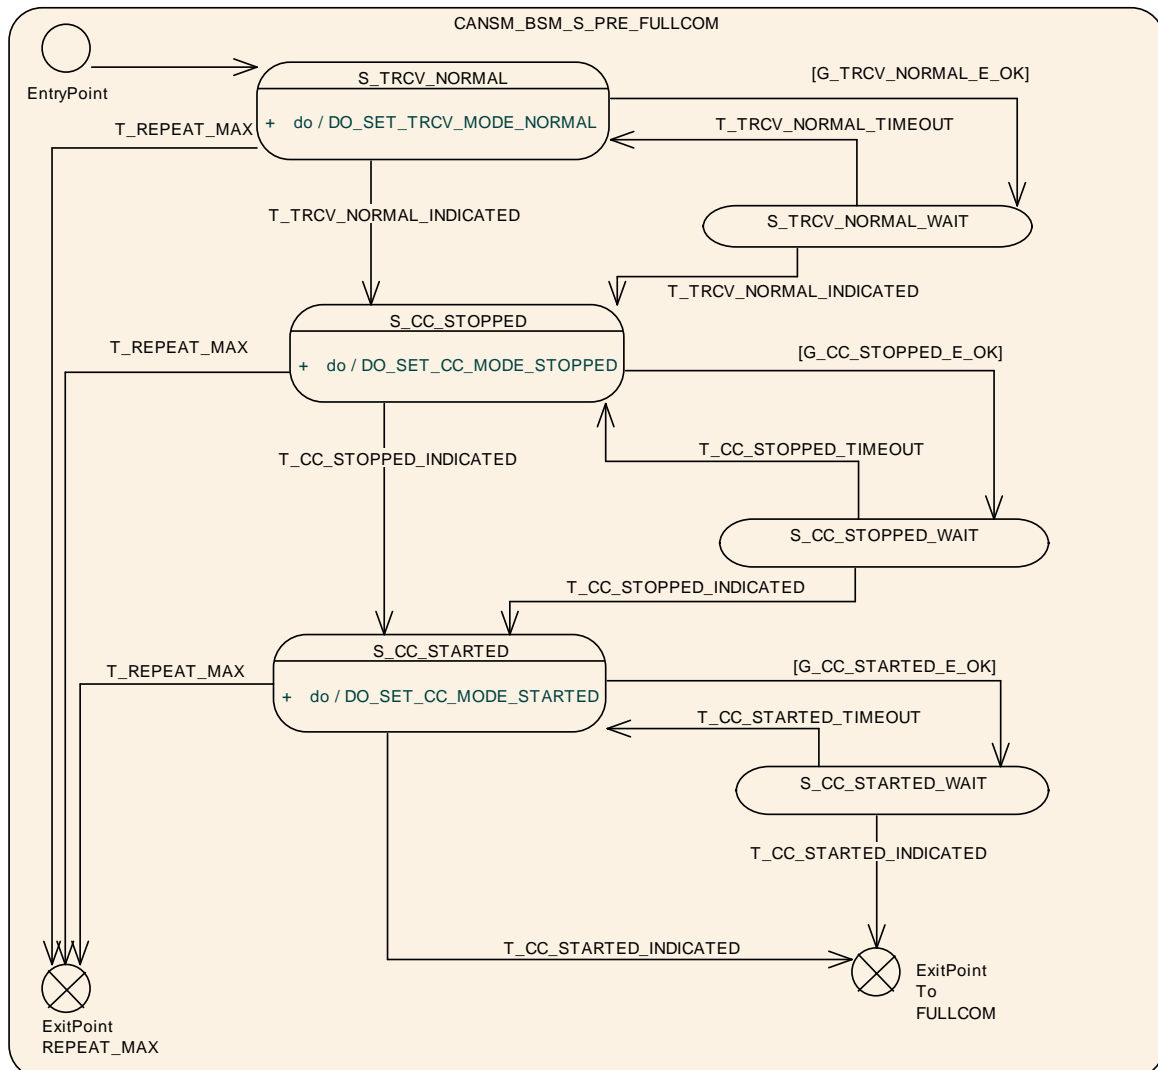


Figure 7-7: CANSMBSM_S_PRE_FULLCOM, sub state machine of CANSMBSM

7.2.22.1 State operation to do in: S_TRCV_NORMAL

[SWS_CanSM_00483] [If for the CAN network a CAN Transceiver is configured (ref. to [ECUC_CanSM_00137](#)), then as long the sub state machine CANSMBSM_S_PRE_FULLCOM (ref. to Figure 7-7) is in the state S_TRCV_NORMAL, the CanSM module shall operate the do action DO_SET_TRCV_MODE_NORMAL and therefore repeat for the configured CAN Transceiver of the CAN network (ref. to [ECUC_CanSM_00137](#)) the API request CanIf_SetTrcvMode (ref. to chapter 8.5.1) with TransceiverMode equal to CANTRCV_TRCVMODE_NORMAL.] (SRS_Can_01145, SRS_Can_01142)

7.2.22.2 Guarding condition: G_TRCV_NORMAL_E_OK

[SWS_CanSM_00484] [The guarding condition G_TRCV_NORMAL_E_OK of the sub state machine CANSMBSM_S_PRE_FULLCOM (ref. to Figure 7-7) shall be passed, if

the API call of [SWS_CanSM_00483](#) has returned E_OK.] (SRS_Can_01145, SRS_Can_01142)

7.2.22.3 Trigger: T_TRCV_NORMAL_INDICATED

[SWS_CanSM_00485] [If CanSM module has got the CANTRCV_TRCVMODE_NORMAL mode indication (ref. to [SWS_CanSM_00399](#)) for the configured CAN Transceiver of the CAN network (ref. to [ECUC_CanSM_00137](#)) after the respective request (ref. to [SWS_CanSM_00483](#)), this shall trigger the sub state machine CANSM_BSM_S_PRE_FULLCOM (ref. to Figure 7-7) of the CAN network with T_TRCV_NORMAL_INDICATED.] (SRS_Can_01145, SRS_Can_01142)

[SWS_CanSM_00558] [If no CAN Transceiver is configured for the CAN network (ref. to [ECUC_CanSM_00137](#)), then this shall trigger the sub state machine CANSM_BSM_S_PRE_FULLCOM (ref. to Figure 7-7) of the CAN network in the state S_TRCV_NORMAL with T_TRCV_NORMAL_INDICATED.] (SRS_Can_01145, SRS_Can_01142)

7.2.22.4 Trigger: T_TRCV_NORMAL_TIMEOUT

[SWS_CanSM_00486] [After a timeout of CANSM_MODEREQ_REPEAT_TIME (ref. to [ECUC_CanSM_00336](#)) for the supposed transceiver normal indication (ref. to [SWS_CanSM_00485](#)), this condition shall trigger the sub state machine CANSM_BSM_S_PRE_FULLCOM (ref. to Figure 7-7) of the respective network with T_TRCV_NORMAL_TIMEOUT.] (SRS_Can_01145, SRS_Can_01142)

7.2.22.5 State operation to do in: S_CC_STOPPED

[SWS_CanSM_00487] [As long the sub state machine CANSM_BSM_S_PRE_FULLCOM (ref. to Figure 7-7) is in the state S_CC_STOPPED, the CanSM module shall operate the do action DO_SET_CC_MODE_STOPPED and therefore repeat for all configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) the API request CanIf_SetControllerMode (ref. to chapter 8.5.1) with ControllerMode equal to CAN_CS_STOPPED, if the current CAN controller mode (ref. to [SWS_CanSM_00638](#)) is different.] (SRS_Can_01145, SRS_Can_01142)

7.2.22.6 Guarding condition: G_CC_STOPPED_OK

[SWS_CanSM_00488] [The guarding condition G_CC_STOPPED_OK of the sub state machine CANSM_BSM_S_PRE_FULLCOM (ref. to Figure 7-7) shall be passed, if all API calls of [SWS_CanSM_00487](#) have returned E_OK.] (SRS_Can_01145, SRS_Can_01142)

7.2.22.7 Trigger: T_CC_STOPPED_INDICATED

[SWS_CanSM_00489] [If CanSM module has got all mode indications (ref. to [SWS_CanSM_00396](#)) for the configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) after the respective requests to stop the CAN controllers of

the CAN network (ref. to [SWS_CanSM_00487](#)), this shall trigger the sub state machine `CANSM_BSM_S_PRE_FULLCOM` (ref. to Figure 7-7) of the CAN network with `T_CC_STOPPED_INDICATED.`] (SRS_Can_01145, SRS_Can_01142)

7.2.22.8 Trigger: `T_CC_STOPPED_TIMEOUT`

[SWS_CanSM_00490] [After a timeout of `CANSM_MODEREQ_REPEAT_TIME` (ref. to [ECUC_CanSM_00336](#)) for all supposed controller stopped mode indications (ref. to [SWS_CanSM_00489](#)), this condition shall trigger the sub state machine `CANSM_BSM_S_PRE_FULLCOM` (ref. to Figure 7-7) of the respective network with `T_CC_STOPPED_TIMEOUT.`] (SRS_Can_01145, SRS_Can_01142)

7.2.22.9 State operation to do in: `S_CC_STARTED`

[SWS_CanSM_00491] [As long the sub state machine `CANSM_BSM_S_PRE_FULLCOM` (ref. to Figure 7-7) is in the state `S_CC_STARTED`, the CanSM module shall operate the do action `DO_SET_CC_MODE_STARTED` and therefore repeat for all configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) the API request `CanIf_SetControllerMode` (ref. to chapter 8.5.1) with `ControllerMode` equal to `CAN_CS_STARTED`, if the current CAN controller mode (ref. to [SWS_CanSM_00638](#)) is different.] (SRS_Can_01145, SRS_Can_01142)

7.2.22.10 Guarding condition: `G_CC_STARTED_OK`

[SWS_CanSM_00492] [The guarding condition `G_CC_STARTED_OK` of the sub state machine `CANSM_BSM_S_PRE_FULLCOM` (ref. to Figure 7-7) shall be passed, if all API calls of [SWS_CanSM_00491](#) have returned `E_OK.`] (SRS_Can_01145, SRS_Can_01142)

7.2.22.11 Trigger: `T_CC_STARTED_INDICATED`

[SWS_CanSM_00493] [If CanSM module has got all mode indications (ref. to [SWS_CanSM_00396](#)) for the configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) after the respective requests to start the CAN controllers of the CAN network (ref. to [SWS_CanSM_00491](#)), this shall trigger the sub state machine `CANSM_BSM_S_PRE_FULLCOM` (ref. to Figure 7-7) of the CAN network with `T_CC_STARTED_INDICATED.`] (SRS_Can_01145, SRS_Can_01142)

7.2.22.12 Trigger: `T_CC_STARTED_TIMEOUT`

[SWS_CanSM_00494] [After a timeout of `CANSM_MODEREQ_REPEAT_TIME` (ref. to [ECUC_CanSM_00336](#)) for all supposed controller started mode indications (ref. to [SWS_CanSM_00493](#)), this condition shall trigger the sub state machine `CANSM_BSM_S_PRE_FULLCOM` (ref. to Figure 7-7) of the respective network with `T_CC_STARTED_TIMEOUT.`] (SRS_Can_01145, SRS_Can_01142)

7.2.22.13 Trigger: T_REPEAT_MAX

[SWS_CanSM_00495] [If the sub state machine `CANSM_BSM_S_PRE_FULLCOM` (ref. to Figure 7-7) has repeated any of the `CanIf` API calls (ref. to [SWS_CanSM_00483](#), [SWS_CanSM_00487](#), [SWS_CanSM_00491](#)) more often than configured (ref. to [ECUC_CanSM_00335](#)) without getting the return value `E_OK` and without getting the supposed mode indication callbacks (ref. to [SWS_CanSM_00485](#), [SWS_CanSM_00489](#), [SWS_CanSM_00493](#)), this shall trigger the sub state machine `CANSM_BSM_S_PRE_FULLCOM` with `T_REPEAT_MAX`.] (SRS_Can_01145, SRS_Can_01142)

7.2.23 Sub state machine `CANSM_BSM_S_FULLCOM`

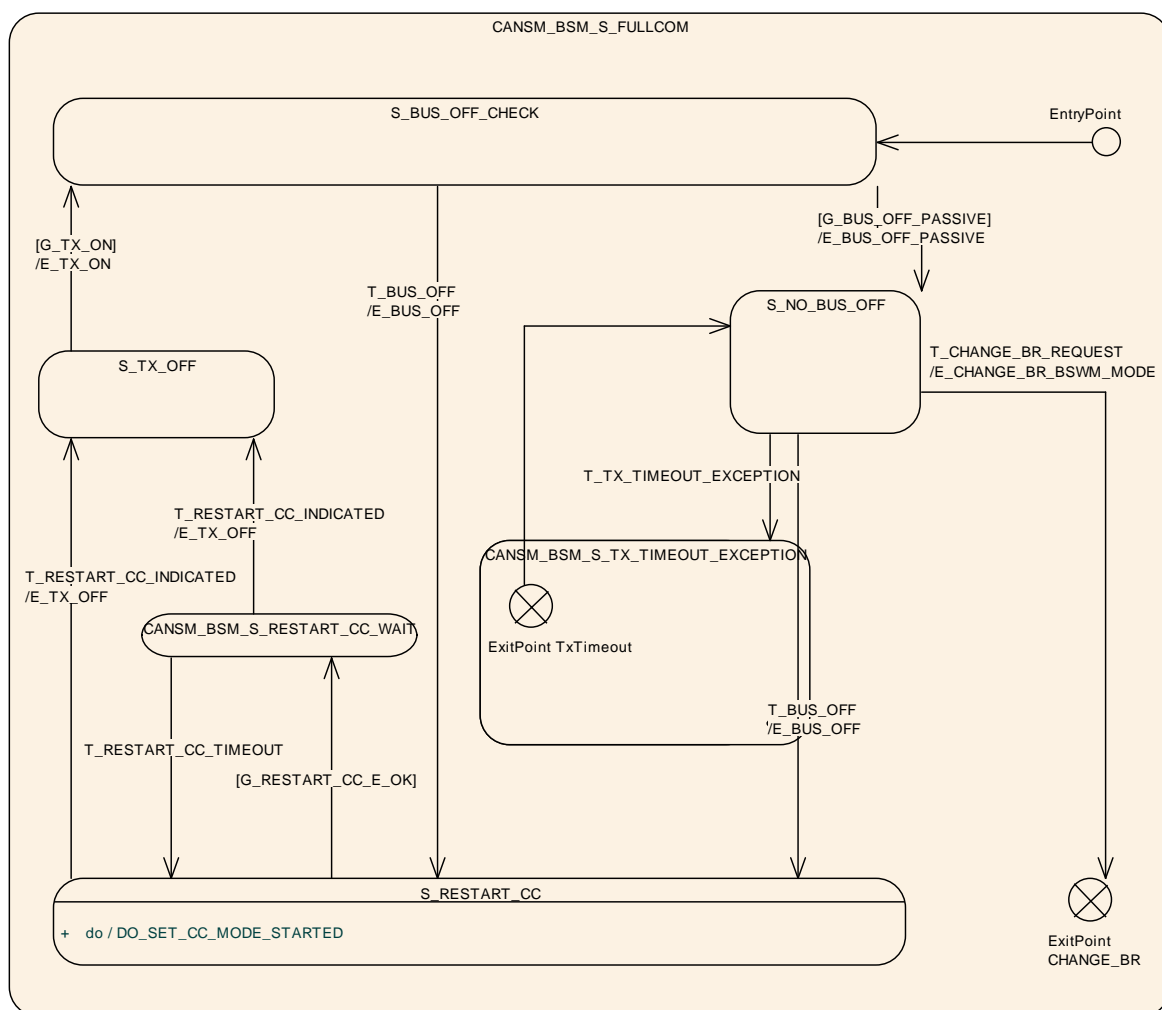


Figure 7-8: `CANSM_BSM_S_FULLCOM`, sub state machine of `CANSM_BSM`

7.2.23.1 Guarding condition: `G_BUS_OFF_PASSIVE`

[SWS_CanSM_00496] [The guarding condition `G_BUS_OFF_PASSIVE` of the sub state machine `CANSM_BSM_S_FULLCOM` (ref. to Figure 7-8) shall be passed, if `CANSM_BOR_TX_CONFIRMATION_POLLING` is disabled (ref. to [ECUC_CanSM_00339](#)) and the time duration since the effect `E_TX_ON` is greater or

equal the configuration parameter `CANSM_BOR_TIME_TX_ENSURED` (ref. to [ECUC_CanSM_00130](#)).] (SRS_Can_01145, SRS_Can_01142)

[SWS_CanSM_00497] [The guarding condition `G_BUS_OFF_PASSIVE` of the sub state machine `CANSM_BSM_S_FULLCOM` (ref. to Figure 7-8) shall be passed, if `CANSM_BOR_TX_CONFIRMATION_POLLING` is enabled (ref. to [ECUC_CanSM_00339](#)) and the API `CanIf_GetTxConfirmationState` (ref. to chapter 8.5.1) returns `CANIF_TX_RX_NOTIFICATION` for all configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)).] (SRS_Can_01145, SRS_Can_01142)

7.2.23.2 Effect: `E_BUS_OFF_PASSIVE`

[SWS_CanSM_00498] [The effect `E_BUS_OFF_PASSIVE` of the sub state machine `CANSM_BSM_S_FULLCOM` (ref. to Figure 7-8) shall invoke `Dem_SetEventStatus` (ref. to chapter 8.5.1) with the parameters `EventId := CANSM_E_BUS_OFF` (ref. to [ECUC_CanSM_00070](#)) and `EventStatus := DEM_EVENT_STATUS_PASSED`.] (SRS_BSW_00422)

7.2.23.3 Trigger: `T_SILENT_COM_MODE_REQUEST`

[SWS_CanSM_00499] [The API request `CanSM_RequestComMode` (ref. to [SWS_CanSM_00635](#)) with the parameter `ComM_Mode` equal to `COMM_SILENT_COMMUNICATION` shall trigger the sub state machine `CANSM_BSM_S_FULLCOM` (ref. to Figure 7-8) with `T_SILENT_COM_MODE_REQUEST`, which corresponds to the function parameter `network` and the configuration parameter `CANSM_NETWORK_HANDLE` (ref. to [ECUC_CanSM_00161](#)).] (SRS_Can_01145, SRS_Can_01142)

Rationale: Regular use case for the transition of the CanNm Network mode to the CanNm Prepare Bus-Sleep mode .

[SWS_CanSM_00554] [The API request `CanSM_RequestComMode` (ref. to [SWS_CanSM_00635](#)) with the parameter `ComM_Mode` equal to `COMM_NO_COMMUNICATION` shall trigger the sub state machine `CANSM_BSM_S_FULLCOM` (ref. to Figure 7-8) with `T_SILENT_COM_MODE_REQUEST`, which corresponds to the function parameter `network` and the configuration parameter `CANSM_NETWORK_HANDLE` (ref. to [ECUC_CanSM_00161](#)).] (SRS_Can_01145, SRS_Can_01142)

Remark: Depending on the ComM configuration, the ComM module will request `COMM_SILENT_COMMUNICATION` first and then `COMM_NO_COMMUNICATION` or `COMM_NO_COMMUNICATION` directly (`ComMNmVariant=LIGHT`)”.

7.2.23.4 Trigger: `T_CHANGE_BR_REQUEST`

[SWS_CanSM_00507] [If no condition is present to deny the `CanSM_SetBaudrate` request (ref. to [SWS_CanSM_00503](#)), this shall trigger the

state machine `CANSM_BSM_S_FULLCOM` (ref. to Figure 7-8) and respectively the parent state machine `CANSM_BSM` (ref. to

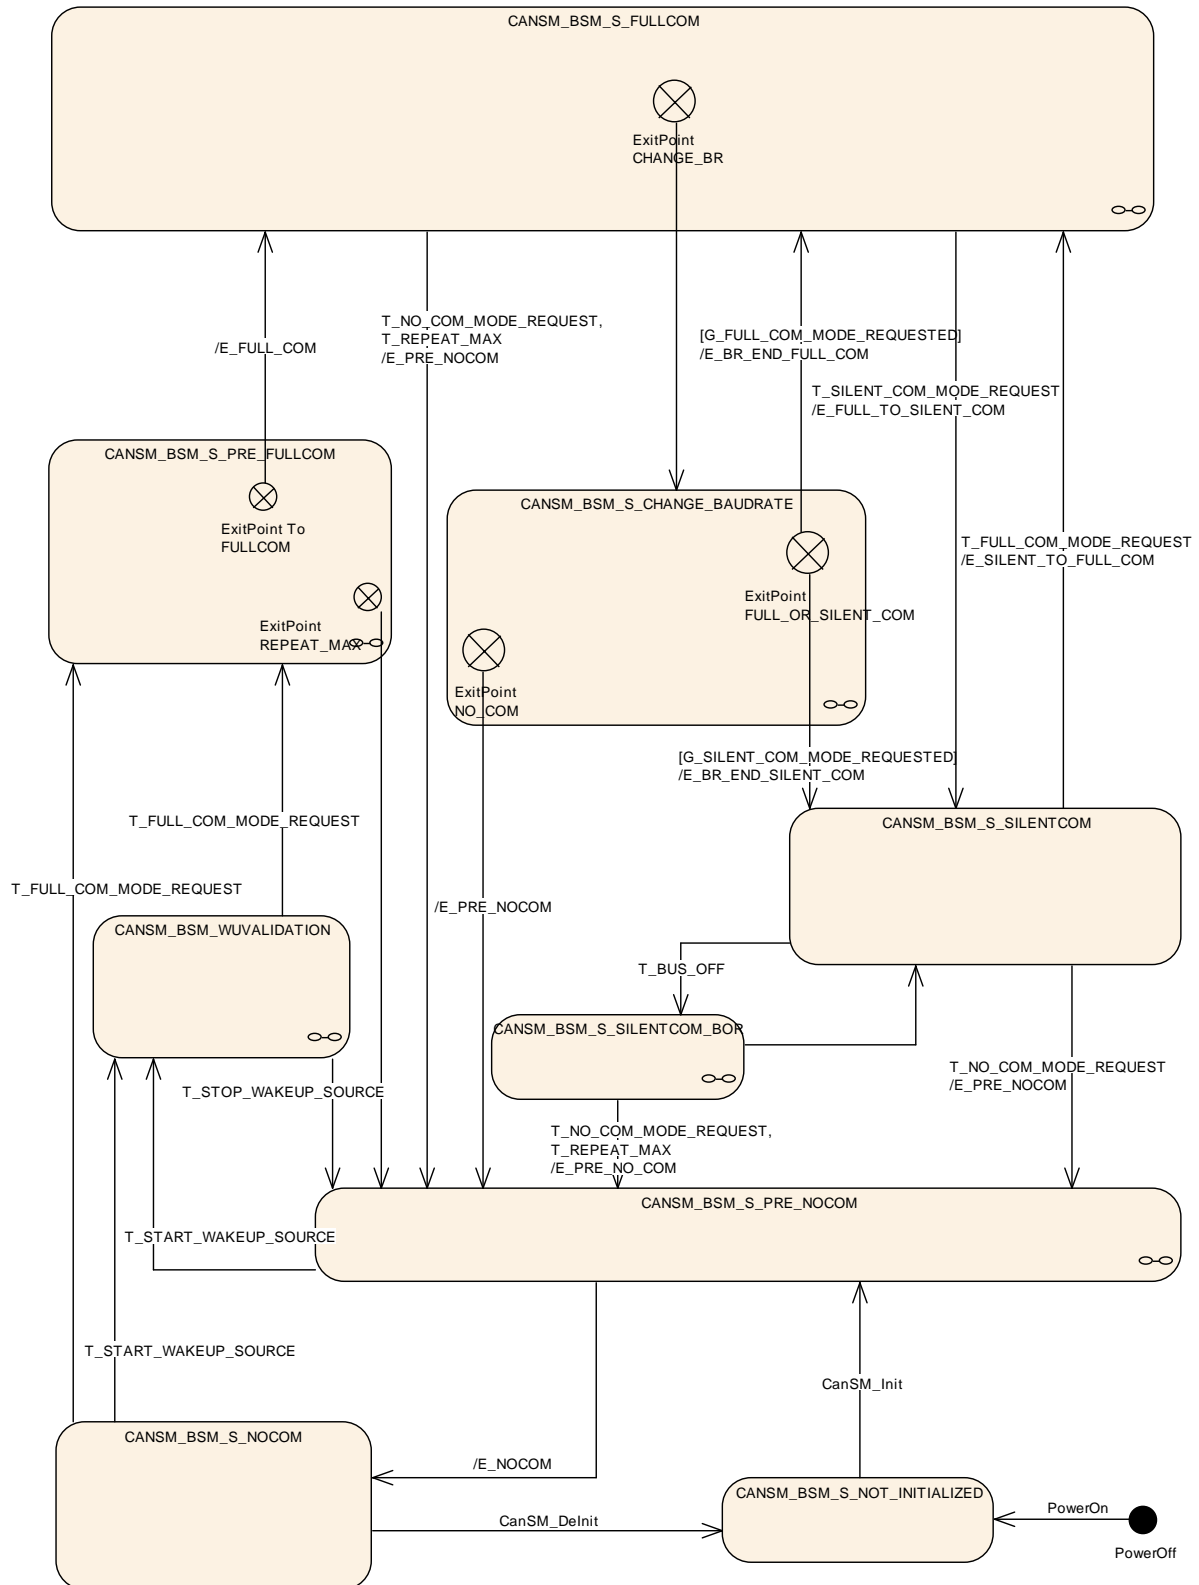


Figure 7-1) with `T_CHANGE_BR_REQUEST` (causes either a direct baud rate change if possible via `CanIf_SetBaudrate` or the start of the required asynchronous process to do that) (SRS_Can_01145, SRS_Can_01142)

7.2.23.5 Effect: E_CHANGE_BR_BSWM_MODE

[SWS_CanSM_00528] [The effect E_CHANGE_BR_BSWM_MODE of the sub state machine CANSM_BSM_S_FULLCOM (ref. to Figure 7-8) shall call for the corresponding CAN network the API BswM_CanSM_CurrentState with the parameters Network := CanSMComMNetworkHandleRef and CurrentState := CANSM_BSWM_CHANGE_BAUDRATE.] (SRS_Can_01145, SRS_Can_01142)

7.2.23.6 Trigger: T_BUS_OFF

[SWS_CanSM_00500] [The callback function CanSM_ControllerBusOff (ref. to [SWS_CanSM_00064](#)) shall trigger the sub state machine CANSM_BSM_S_FULLCOM (ref. to Figure 7-8) for the CAN network with T_BUS_OFF, if one of its configured CAN controllers matches to the function parameter ControllerId of the callback function CanSM_ControllerBusOff.] (SRS_Can_01145, SRS_Can_01142)

[SWS_CanSM_00653] [If more than one CAN controller belongs to one CAN network and for one of its controllers a bus-off is indicated with CanSM_ControllerBusOff, then the CanSM shall stop in context of the effect E_BUS_OFF the other CAN controller(s) of the CAN network, too.] (SRS_Can_01145, SRS_Can_01142)

7.2.23.7 Effect: E_BUS_OFF

[SWS_CanSM_00508] [The effect E_BUS_OFF of the sub state machine CANSM_BSM_S_FULLCOM (ref. to Figure 7-8) shall call at 1st place for the corresponding CAN network the API BswM_CanSM_CurrentState with the parameters Network := CanSMComMNetworkHandleRef and CurrentState := CANSM_BSWM_BUS_OFF.] (SRS_Can_01145, SRS_Can_01142)

[SWS_CanSM_00521] [The effect E_BUS_OFF of the sub state machine CANSM_BSM_S_FULLCOM (ref. to Figure 7-8) shall call at 2nd place for the corresponding CAN network the API ComM_BusSM_ModeIndication with the parameters Channel := CanSMComMNetworkHandleRef (ref. to [ECUC_CanSM_00161](#)) and ComMode := COMM_SILENT_COMMUNICATION.] (SRS_Can_01145, SRS_Can_01142)

[SWS_CanSM_00522] [The effect E_BUS_OFF of the sub state machine CANSM_BSM_S_FULLCOM (ref. to Figure 7-8) shall invoke Dem_SetEventStatus (ref. to chapter 8.5.1) with the parameters EventId := CANSM_E_BUS_OFF (ref. to [ECUC_CanSM_00070](#)) and EventStatus := DEM_EVENT_STATUS_PRE_FAILED.] (SRS_BSW_00422)

7.2.23.8 State operation to do in: S_RESTART_CC

[SWS_CanSM_00509] [As long the sub state machine CANSM_BSM_S_FULLCOM (ref. to Figure 7-8) is in the state S_RESTART_CC, the CanSM module shall operate

the do action `DO_SET_CC_MODE_STARTED` and therefore repeat for all configured CAN controllers of the CAN network (ref. to [ECUC CanSM_00141](#)) the API request `CanIf_SetControllerMode` (ref. to chapter 8.5.1) with `ControllerMode` equal to `CAN_CS_STARTED`, if the current CAN controller mode (ref. to [SWS CanSM_00638](#)) is different.] (SRS_Can_01145, SRS_Can_01142)

7.2.23.9 Guarding condition: `G_RESTART_CC_OK`

[SWS_CanSM_00510] [The guarding condition `G_RESTART_CC_OK` of the sub state machine `CANSM_BSM_S_FULLCOM` (ref. to Figure 7-8) shall be passed, if all API calls of [SWS CanSM_00509](#) have returned `E_OK`.] (SRS_Can_01145, SRS_Can_01142)

7.2.23.10 Trigger: `T_RESTART_CC_INDICATED`

[SWS_CanSM_00511] [If CanSM module has got all mode indications (ref. to [SWS CanSM_00396](#)) for the configured CAN controllers of the CAN network (ref. to [ECUC CanSM_00141](#)) after the respective requests to start the CAN controllers of the CAN network (ref. to [SWS CanSM_00509](#)), this shall trigger the sub state machine `CANSM_BSM_S_FULLCOM` (ref. to Figure 7-8) of the CAN network with `T_RESTART_CC_INDICATED`.] (SRS_Can_01145, SRS_Can_01142)

7.2.23.11 Trigger: `T_RESTART_CC_TIMEOUT`

[SWS_CanSM_00512] [After a timeout of `CANSM_MODEREQ_REPEAT_TIME` (ref. to [ECUC CanSM_00336](#)) for all supposed controller started mode indications (ref. to [SWS CanSM_00511](#)), this condition shall trigger the sub state machine `CANSM_BSM_S_FULLCOM` (ref. to Figure 7-8) of the respective network with `T_RESTART_CC_TIMEOUT`.] (SRS_Can_01145, SRS_Can_01142)

7.2.23.12 Effect: `E_TX_OFF`

The effect `E_TX_OFF` shall do nothing.

7.2.23.13 Guarding condition: `G_TX_ON`

[SWS_CanSM_00514] [If `CanSMEnableBusOffDelay` is `FALSE`, then guarding condition `G_TX_ON` of the sub state machine `CANSM_BSM_S_FULLCOM` (ref. to Figure 7-8) shall be passed after a time duration of `CanSMBorTimeL1` (ref. to [ECUC CanSM_00128](#)) related to the last `T_BUS_OFF`, if the count of bus-off recovery retries with `E_BUS_OFF` without passing the guarding condition `G_BUS_OFF_PASSIVE` is lower than `CanSMBorCounterL1ToL2` (ref. to [ECUC CanSM_00131](#)).] (SRS_Can_01145, SRS_Can_01142)

[SWS_CanSM_00515] [If `CanSMEnableBusOffDelay` is `FALSE`, then the guarding condition `G_TX_ON` of the sub state machine `CANSM_BSM_S_FULLCOM` (ref. to Figure 7-8) shall be passed after a time duration of `CanSMBorTimeL2` (ref. to

[ECUC_CanSM_00129](#)) related to the last T_BUS_OFF, if the count of bus-off recovery retries with E_BUS_OFF without passing the guarding condition G_BUS_OFF_PASSIVE is greater than or equal to CanSMBorCounterL1ToL2 (ref. to [ECUC_CanSM_00131](#)).] (SRS_Can_01145, SRS_Can_01142)

[SWS_CanSM_00636] [If CanSMEnableBusOffDelay is TRUE, then the guarding conditions of [SWS_CANSM_00514](#) and [SWS_CANSM_00515](#) shall be passed after the specified time duration in each case plus the additional random delay value, which shall be requested after the bus-off event with the configured call back function <User_GetBusOffDelay>.] (SRS_Can_01145, SRS_Can_01142)

7.2.23.14 Effect: E_TX_ON

[SWS_CanSM_00516] [If ECU passive is FALSE (ref. to [SWS_CanSM_00646](#)), then the effect E_TX_ON of the sub state machine CANSM_BSM_S_FULLCOM (ref. to Figure 7-8) shall call at 1st place for the configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) the API function CanIf_SetPduMode (ref. to chapter 8.5.1) with the parameters ControllerId := CanSMControllerId (ref. to [ECUC_CanSM_00141](#)) and PduModeRequest := CANIF_ONLINE.] (SRS_Can_01158)

[SWS_CanSM_00648] If ECU passive is TRUE (ref. to [SWS_CanSM_00646](#)), then the effect E_TX_ON of the sub state machine CANSM_BSM_S_FULLCOM (ref. to Figure 7-8) shall call at 1st place for the configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) the API function CanIf_SetPduMode (ref. to chapter 8.5.1) with the parameters ControllerId := CanSMControllerId (ref. to [ECUC_CanSM_00141](#)) and PduModeRequest := CANIF_TX_OFFLINE_ACTIVE.] (SRS_Can_01158)

[SWS_CanSM_00517] [The effect E_TX_ON of the sub state machine CANSM_BSM_S_FULLCOM (ref. to Figure 7-8) shall call at 2nd place for the corresponding CAN network the API BswM_CanSM_CurrentState with the parameters Network := CanSMComMNetworkHandleRef and CurrentState := CANSM_BSWM_FULL_COMMUNICATION.] (SRS_Can_01145, SRS_Can_01142)

[SWS_CanSM_00518] [The effect E_TX_ON of the sub state machine CANSM_BSM_S_FULLCOM (ref. to Figure 7-8) shall call at 3rd place the API ComM_BusSM_ModeIndication with the parameters Channel := CanSMComMNetworkHandleRef (ref. to [ECUC_CanSM_00161](#)) and ComMode := COMM_FULL_COMMUNICATION.] (SRS_Can_01145, SRS_Can_01142)

7.2.23.15 Trigger: T_TX_TIMEOUT_EXCEPTION

[SWS_CanSM_00584] [The callback function CanSM_TxTimeoutException (ref. to [SWS_CANSM_00410](#)) shall trigger the sub state machine

CANSM_BSM_S_FULLCOM (ref. to Figure 7-8) with T_TX_TIMEOUT_EXCEPTION.]
(SRS_Can_01145, SRS_Can_01142)

7.2.23.16 Notes

In the state S_NO_BUS_OFF no state operation is required for the CanSM module.

7.2.23.17 Sub state machine: CANSM_BSM_S_TX_TIMEOUT_EXCEPTION

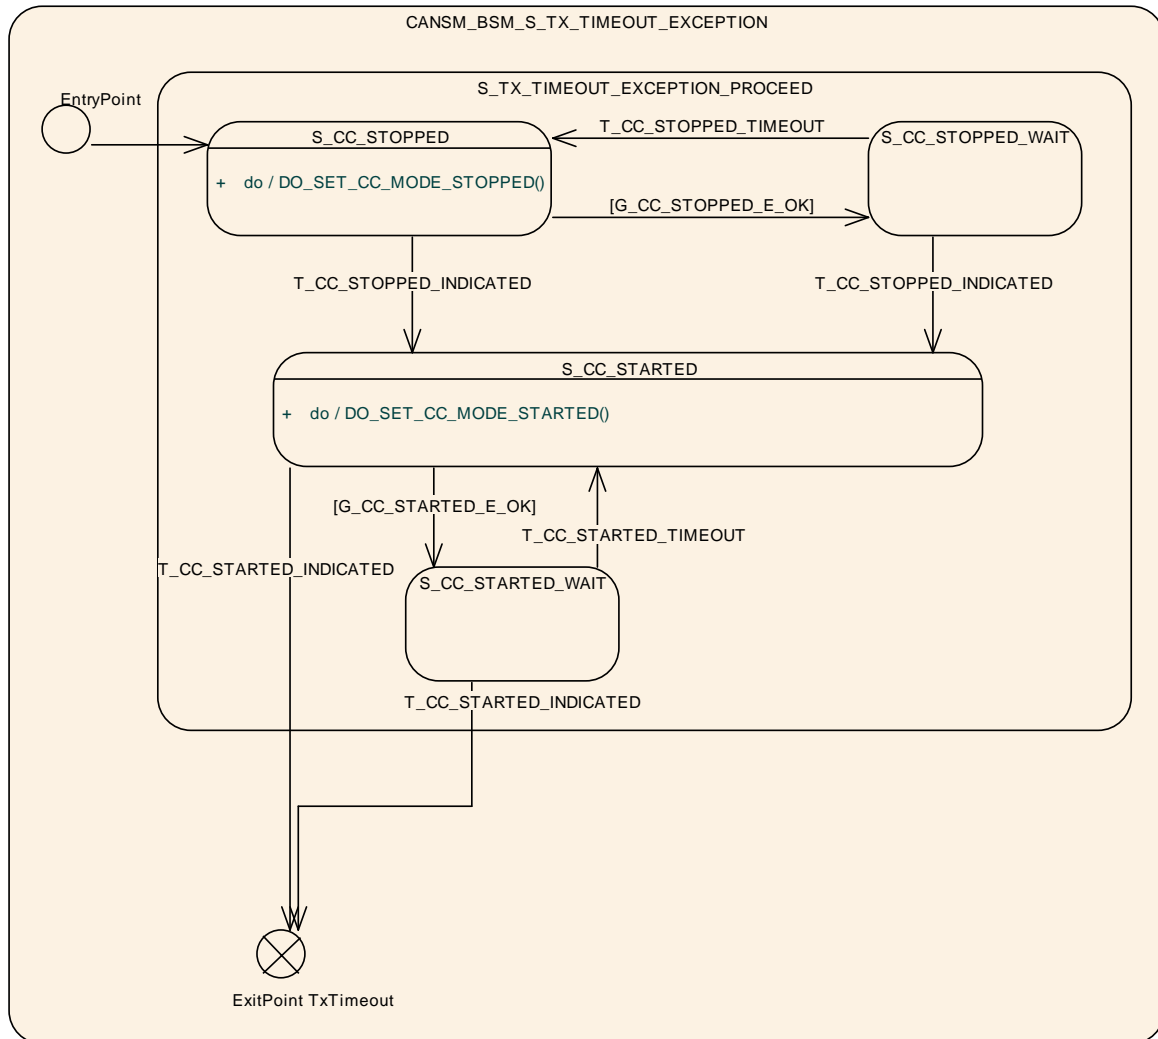


Figure 7-9: CANSM_BSM_S_TX_TIMEOUT_EXCEPTION, sub state machine of
CANSM_BSM_S_FULLCOM

7.2.23.17.1 Trigger: T_CC_STOPPED_TIMEOUT

[SWS_CanSM_00576] After a timeout of CANSM_MODEREQ_REPEAT_TIME (ref. to [ECUC_CanSM_00336](#)) for all supposed controller stopped mode indications (ref. to [SWS_CanSM_00579](#)), this condition shall trigger the sub state machine CANSM_BSM_S_TX_TIMEOUT_EXCEPTION (ref. to Figure 7-9) of the respective network with T_CC_STOPPED_TIMEOUT.] (SRS_Can_01145, SRS_Can_01142)

7.2.23.17.2 Guarding condition: G_CC_STOPPED_E_OK

[SWS_CanSM_00577] [The guarding condition G_CC_STOPPED_E_OK of the sub state machine CANSM_BSM_S_TX_TIMEOUT_EXCEPTION (ref. to Figure 7-9) shall be passed, if all API calls of [SWS_CanSM_00578](#) have returned E_OK.] (SRS_Can_01145, SRS_Can_01142)

7.2.23.17.3 State operation: DO_SET_CC_MODE_STOPPED()

[SWS_CanSM_00578] [As long the sub state machine CANSM_BSM_S_TX_TIMEOUT_EXCEPTION (ref. to Figure 7-9) is in the state S_CC_STOPPED, the CanSM module shall operate the do action DO_SET_CC_MODE_STOPPED and therefore repeat for all configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) the API request CanIf_SetControllerMode (ref. to chapter 8.5.1) with ControllerMode equal to CAN_CS_STOPPED, if the current CAN controller mode (ref. to [SWS_CanSM_00638](#)) is different.] (SRS_Can_01145, SRS_Can_01142)

7.2.23.17.4 Trigger: T_CC_STOPPED_INDICATED

[SWS_CanSM_00579] [If CanSM module has got all mode indications (ref. to [SWS_CanSM_00396](#)) for the configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) after the respective requests to stop the CAN controllers of the CAN network (ref. to [SWS_CanSM_00524](#)), this shall trigger the sub state machine CANSM_BSM_S_TX_TIMEOUT_EXCEPTION (ref. to Figure 7-9) of the CAN network with T_CC_STOPPED_INDICATED.] (SRS_Can_01145, SRS_Can_01142)

7.2.23.17.5 Trigger: T_CC_STARTED_INDICATED

[SWS_CanSM_00580] [If CanSM module has got all mode indications (ref. to [SWS_CanSM_00396](#)) for the configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) after the respective requests to start the CAN controllers of the CAN network (ref. to [SWS_CanSM_00582](#)), this shall trigger the sub state machine CANSM_BSM_S_TX_TIMEOUT_EXCEPTION (ref. to Figure 7-9) of the CAN network with T_CC_STARTED_INDICATED.] (SRS_Can_01145, SRS_Can_01142)

7.2.23.17.6 Guarding condition: G_CC_STARTED_E_OK

[SWS_CanSM_00581] [The guarding condition G_CC_STARTED_E_OK of the sub state machine CANSM_BSM_S_TX_TIMEOUT_EXCEPTION (ref. to Figure 7-9) shall be passed, if all API calls of [SWS_CanSM_00582](#) have returned E_OK.] (SRS_Can_01145, SRS_Can_01142)

7.2.23.17.7 State operation: DO_SET_CC_MODE_STARTED

[SWS_CanSM_00582] [As long the sub state machine CANSM_BSM_S_TX_TIMEOUT_EXCEPTION (ref. to Figure 7-9) is in the state S_CC_STARTED, the CanSM module shall operate the do action

DO_SET_CC_MODE_STARTED and therefore repeat for all configured CAN controllers of the CAN network (ref. to [ECUC CanSM 00141](#)) the API request CanIf_SetControllerMode (ref. to chapter 8.5.1) with ControllerMode equal to CAN_CS_STARTED, if the current CAN controller mode (ref. to [SWS CanSM 00638](#)) is different.] (SRS_Can_01145, SRS_Can_01142)

7.2.23.17.8 Trigger: T_REPEAT_MAX

[SWS_CANSM_00575] [If the sub state machine CANSM_BSM_S_TX_TIMEOUT_EXCEPTION (ref. to Figure 7-9) has repeated the CanIf API to restart the CAN controllers(s) of the CAN network more often than configured (ref. to [ECUC CanSM 00335](#)) without getting the supposed mode indication, this shall trigger the sub state machine CANSM_BSM_S_TX_TIMEOUT_EXCEPTION with T_REPEAT_MAX.] (SRS_Can_01145, SRS_Can_01142)

7.2.23.17.9 ExitPoint: TxTimeout

[SWS_CanSM_00655] [If the sub state machine CANSM_BSM_S_TX_TIMEOUT_EXCEPTION (ref. to Figure 7-9) is triggered with T_CC_STARTED_INDICATED, the API CanIf_SetPduMode() shall be called with CANIF_ONLINE unless T_REPEAT_MAX occurred.] ()

7.2.24 Sub state machine: CANSMBSM_S_CHANGE_BAUDRATE

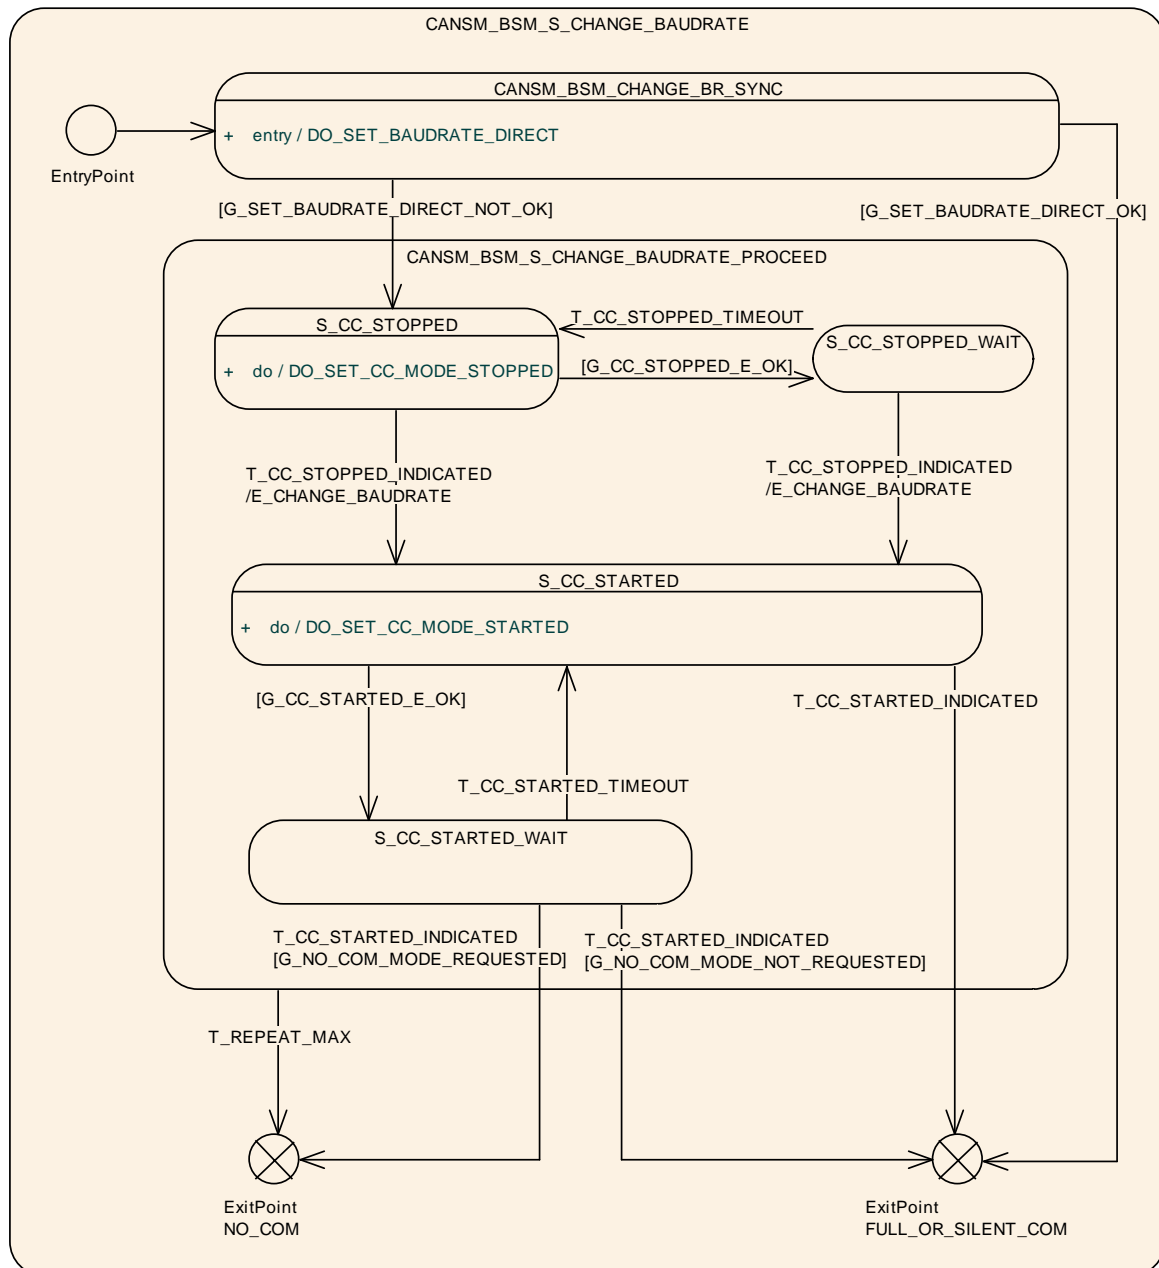


Figure 7-10: CANSMBSM_S_CHANGE_BAUDRATE, sub state machine of CANSMBSM

7.2.24.1 State operation to do on entry: DO_SET_BAUDRATE_DIRECT

[SWS_CanSM_00639] The state operation DO_SET_BAUDRATE_DIRECT (ref. to Figure 7-10) shall call the API request CanIf_SetBaudrate (ref. to chapter 8.5.2) for all configured CAN controllers of the CAN network (ref. to [ECUC CanSM 00141](#)) with the respective ControllerId parameter. It shall use as BaudRateConfigID parameter the respective function parameter BaudRateConfigID from the call CanSM_SetBaudrate ().] (SRS_Can_01145, SRS_Can_01142)

7.2.24.2 Guarding condition: G_SET_BAUDRATE_DIRECT_OK

[SWS_CanSM_00641] If all CanIf_SetBaudrate (ref. to [SWS_CanSM_00639](#)) requests returned with E_OK, the guarding condition G_SET_BAUDRATE_DIRECT_OK shall be passed.] (SRS_Can_01145, SRS_Can_01142)

7.2.24.3 Guarding conditions: G_SET_BAUDRATE_DIRECT_NOT_OK

[SWS_CanSM_00642] If any of the CanIf_SetBaudrate (ref. to [SWS_CanSM_00639](#)) requests did return with E_NOT_OK, the guarding condition G_SET_BAUDRATE_NOT_OK of the state CANSM_BSM_CHANGE_BR_SYNC (ref. to Figure 7-10) shall be passed.] (SRS_Can_01145, SRS_Can_01142)

7.2.24.4 State operation to do in: S_CC_STOPPED

[SWS_CanSM_00524] As long the sub state machine CANSM_BSM_S_CHANGE_BAUDRATE (ref. to Figure 7-10) is in the state S_CC_STOPPED, the CanSM module shall operate the do action DO_SET_CC_MODE_STOPPED and therefore repeat for all configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) the API request CanIf_SetControllerMode (ref. to chapter 8.5.1) with ControllerMode equal to CAN_CS_STOPPED, if the current CAN controller mode (ref. to [SWS_CanSM_00638](#)) is different.] (SRS_Can_01145, SRS_Can_01142)

7.2.24.5 Guarding condition: G_CC_STOPPED_OK

[SWS_CanSM_00525] The guarding condition G_CC_STOPPED_OK of the sub state machine CANSM_BSM_S_CHANGE_BAUDRATE (ref. to Figure 7-10) shall be passed, if all API calls of [SWS_CanSM_00524](#) have returned E_OK.] (SRS_Can_01145, SRS_Can_01142)

7.2.24.6 Trigger: T_CC_STOPPED_INDICATED

[SWS_CanSM_00526] If CanSM module has got all mode indications (ref. to [SWS_CanSM_00396](#)) for the configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) after the respective requests to stop the CAN controllers of the CAN network (ref. to [SWS_CanSM_00524](#)), this shall trigger the sub state machine CANSM_BSM_S_CHANGE_BAUDRATE (ref. to Figure 7-10) of the CAN network with T_CC_STOPPED_INDICATED.] (SRS_Can_01145, SRS_Can_01142)

7.2.24.7 Trigger: T_CC_STOPPED_TIMEOUT

[SWS_CanSM_00527] After a timeout of CANSM_MODEREQ_REPEAT_TIME (ref. to [ECUC_CanSM_00336](#)) for all supposed controller stopped mode indications (ref. to [SWS_CanSM_00526](#)), this condition shall trigger the sub state machine CANSM_BSM_S_CHANGE_BAUDRATE (ref. to Figure 7-10) of the respective network with T_CC_STOPPED_TIMEOUT.] (SRS_Can_01145, SRS_Can_01142)

7.2.24.8 Effect: E_CHANGE_BAUDRATE

[SWS_CanSM_00529] [The effect `E_CHANGE_BAUDRATE` of the sub state machine `CANSM_BSM_S_CHANGE_BAUDRATE` (ref. to Figure 7-10) shall call at 1st place for the corresponding CAN network the API `ComM_BusSM_ModeIndication` with the parameters `Channel := CanSMComMNetworkHandleRef` (ref. to [ECUC_CanSM_00161](#)) and `ComMode := COMM_NO_COMMUNICATION.`] (SRS_Can_01145, SRS_Can_01142)

[SWS_CanSM_00531] [The effect `E_CHANGE_BAUDRATE` of the sub state machine `CANSM_BSM_S_CHANGE_BAUDRATE` (ref. to Figure 7-10) shall call at 2nd place for all configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) the API request `CanIf_SetBaudrate` (ref. to chapter 8.5.2) with the respective `ControllerId` parameter and shall use as `BaudRateConfigID` parameter the remembered `BaudRateConfigID` from the call `CanSM_SetBaudrate()` (SRS_Can_01145, SRS_Can_01142)

7.2.24.9 State operation to do in: S_CC_STARTED

[SWS_CanSM_00532] [As long the sub state machine `CANSM_BSM_S_CHANGE_BAUDRATE` (ref. to Figure 7-10) is in the state `S_CC_STARTED`, the CanSM module shall operate the do action `DO_SET_CC_MODE_STARTED` and therefore repeat for all configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) the API request `CanIf_SetControllerMode` (ref. to chapter 8.5.1) with `ControllerMode` equal to `CAN_CS_STARTED`, if the current CAN controller mode (ref. to [SWS_CanSM_00638](#)) is different.] (SRS_Can_01145, SRS_Can_01142)

7.2.24.10 Guarding condition: G_CC_STARTED_OK

[SWS_CanSM_00533] [The guarding condition `G_CC_STARTED_OK` of the sub state machine `CANSM_BSM_S_CHANGE_BAUDRATE` (ref. to Figure 7-10) shall be passed, if all API calls of [SWS_CanSM_00532](#) have returned `E_OK.`] (SRS_Can_01145, SRS_Can_01142)

7.2.24.11 Trigger: T_CC_STARTED_INDICATED

[SWS_CanSM_00534] [If CanSM module has got all mode indications (ref. to [SWS_CanSM_00396](#)) for the configured CAN controllers of the CAN network (ref. to [ECUC_CanSM_00141](#)) after the respective requests to start the CAN controllers of the CAN network (ref. to [SWS_CanSM_00532](#)), this shall trigger the sub state machine `CANSM_BSM_S_CHANGE_BAUDRATE` (ref. to Figure 7-10) of the CAN network with `T_CC_STARTED_INDICATED.`] (SRS_Can_01145, SRS_Can_01142)

7.2.24.12 Trigger: T_CC_STARTED_TIMEOUT

[SWS_CanSM_00535] [After a timeout of `CANSM_MODEREQ_REPEAT_TIME` (ref. to [ECUC_CanSM_00336](#)) for all supposed controller started mode indications (ref.

to [SWS_CanSM_00534](#)), this condition shall trigger the sub state machine `CANSM_BSM_S_CHANGE_BAUDRATE` (ref. to Figure 7-10) of the respective network with `T_CC_STARTED_TIMEOUT.`] (SRS_Can_01145, SRS_Can_01142)

7.2.24.13 Trigger: `T_REPEAT_MAX`

[SWS_CanSM_00536] [If the sub state machine `CANSM_BSM_S_CHANGE_BAUDRATE` (ref. to Figure 7-10) has repeated the referenced CanIf APIs (ref. to [SWS_CanSM_00524](#), [SWS_CanSM_00532](#)) for the CAN controllers of the corresponding CAN network more often than configured (ref. to [ECUC_CanSM_00335](#)) without getting the return value `E_OK` and without getting the supposed mode indications (ref. to [SWS_CanSM_00526](#), [SWS_CanSM_00534](#)), this shall trigger the sub state machine `CANSM_BSM_S_CHANGE_BAUDRATE` with `T_REPEAT_MAX.`] (SRS_Can_01145, SRS_Can_01142)

7.2.24.14 Guarding condition: `G_NO_COM_MODE_REQUESTED`

[SWS_CanSM_00542] [The sub state machine `CANSM_BSM_S_CHANGE_BAUDRATE` (ref. to Figure 7-10) shall pass the guarding condition `G_NO_COM_MODE_REQUESTED`, if the latest accepted communication mode request with `CanSM_RequestComMode` (ref. to [SWS_CanSM_00635](#)) for the respective network handle of the state machine has been with the parameter `ComM_Mode` equal to `COMM_NO_COMMUNICATION.`] (SRS_Can_01145, SRS_Can_01142)

7.2.24.15 Guarding condition: `G_NO_COM_MODE_NOT_REQUESTED`

[SWS_CanSM_00543] [The sub state machine `CANSM_BSM_S_CHANGE_BAUDRATE` (ref. to Figure 7-10) shall pass the guarding condition `G_NO_COM_MODE_NOT_REQUESTED`, if the latest accepted communication mode request with `CanSM_RequestComMode` (ref. to [SWS_CanSM_00635](#)) for the respective network handle of the state machine has been with the parameter `ComM_Mode` equal to `COMM_SILENT_COMMUNICATION` or `COMM_FULL_COMMUNICATION.`] (SRS_Can_01145, SRS_Can_01142)

7.3 Error classification

Section 7.x "Error Handling" of the document "General Specification of Basic Software Modules" describes the error handling of the Basic Software in detail. Above all, it constitutes a classification scheme consisting of five error types, which may occur in BSW modules.

Based on this foundation, the following section specifies particular errors arranged in the respective subsections below.

7.3.1 Development Errors

This chapter shall list all Development Errors that can be detected within this software module. For each error, a value shall be defined.

[SWS_CanSM_00654][

Type or error	Relevance	Related error code	Value [hex]
API service used without module initialization	Development	CANSM_E_UNINIT	0x01
API service called with wrong pointer	Development	CANSM_E_PARAM_POINTER	0x02
API service called with wrong parameter	Development	CANSM_E_INVALID_NETWORK_HANDLE	0x03
API service called with wrong parameter	Development	CANSM_E_PARAM_CONTROLLER	0x04
API service called with wrong parameter	Development	CANSM_E_PARAM_TRANSCEIVER	0x05
Network mode request during pending indication	Development	CANSM_E_WAIT_MODE_INDICATION	0x07
Mode request for a network failed more often as allowed by configuration	Development	CANSM_E_MODE_REQUEST_TIMEOUT	0x0A
Delnit API service called when not all CAN networks are in state CANSM_NO_COMMUNICATION	Development	CANSM_E_NOT_IN_NO_COM	0x0B

] (SRS_BSW_00337)

7.3.2 Runtime Errors

There are no runtime errors.

7.3.3 Transient Faults

There are no transient faults

7.3.4 Production Errors

7.3.5 CANSM_E_BUS_OFF

Error Name:	CANSM_E_BUS_OFF (ref. to ECUC CanSM 00070)	
Short Description:	Bus-off detection	
Long Description:	The bus-off recovery state machine of a CAN network has detected a certain amount of sequential bus-offs without successful recovery	
Recommended DTC:	Assigned by DEM	
Detection Criteria:	Fail	PRE_FAILED when CanSM_ControllerBusOff is called (T_BUS_OFF/E_BUS_OFF), debouncing to be defined by OEM in DEM

	Pass	After successful transmission of a CAN frame (G_BUS_OFF_PASSIVE/E_BUS_OFF_PASSIVE)
Secondary Parameters:	None	
Time Required:	PRE_FAILED immediately (in error interrupt context), FAILED depending on debounce configuration of DEM	
Monitor Frequency	Continuous	
MIL illumination:	Assigned by DEM	

7.4 Pretended Networking function

7.4.1 Activation

[SWS_CanSM_00588] To activate Pretended Networking the CanSM module shall request an ICOM configuration by calling CanIf_SetIcomConfiguration.] (SRS_Can_01145, SRS_Can_01142)

[SWS_CanSM_00589] The CanSM shall inform the BswM about the activation status by calling BswM_CanSM_CurrentIcomConfiguration.] (SRS_Can_01145, SRS_Can_01142)

7.4.2 Deactivation

[SWS_CanSM_00590] The CanSM shall call the provided API CanIf_SetIcomConfiguration to deactivate the Pretended Networking and to set back the ICOM configuration to 0.] (SRS_Can_01145, SRS_Can_01142)

[SWS_CanSM_00591] The CanSM shall inform BswM about the deactivation status by calling BswM_CanSM_CurrentIcomConfiguration.] (SRS_Can_01145, SRS_Can_01142)

7.5 ECU online active / passive mode

[SWS_CanSM_00646] The CanSM state manager shall store the state of the requested ECU passive mode (ref. to chapter 8: [SWS_CanSM_00644](#)).] (SRS_Can_01158)

[SWS_CanSM_00649] If CanSM_SetEcuPassive called with CanSM_Passive=true; (ref. to chapter 8: [SWS_CanSM_00644](#)), then the CanSM shall change all PDU modes of the configured CAN controllers, which are CANIF_ONLINE at the moment to CANIF_TX_OFFLINE_ACTIVE by calling the API CanIf_SetPduMode (ref. to chapter 8.5.1) with the parameters ControllerId := CanSMControllerId (ref. to [ECUC_CanSM_00141](#)) and PduModeRequest := CANIF_TX_OFFLINE_ACTIVE.] (SRS_Can_01158)

[SWS_CanSM_00650] If CanSM_SetEcuPassive called with CanSM_Passive=false; (ref. to chapter 8: [SWS_CanSM_00644](#)), then the CanSM shall change all PDU modes of the configured CAN controllers, which are

CANIF_TX_OFFLINE_ACTIVE at the moment to CANIF_ONLINE by calling the API CanIf_SetPduMode (ref. to chapter 8.5.1) with the parameters ControllerId := CanSMControllerId (ref. to [ECUC CanSM 00141](#)) and PduModeRequest := CANIF_ONLINE.] (SRS_Can_01158)

[SWS_CanSM_00656] If the CanSM needs informations about the actual PduMode, the CanSM shall call the API CanIf_GetPduMode to get the current Pdu Mode of the CanIf.] (SRS_Can_01158)

7.6 Error detection

For details refer to the chapter 7.3 “Error Detection” in *SWS_BSWGeneral*.

7.7 Error notification

For details refer to the chapter 7.4 “Error notification” in *SWS_BSWGeneral*.

7.8 Interface for AUTOSAR debug and trace

For details refer to the chapter 7.1.17 “Debugging support” in *SWS_BSWGeneral*.

7.9 Non-functional design rules

The CanSM shall cover the software module design requirements of the SRS General [3].

8 API specification

8.1 Imported types

In this chapter all types included from the following files are listed:

[SWS_CanSM_00243] [

<i>Module</i>	<i>Imported Type</i>
CanIf	CanIf_NotifStatusType
	CanIf_PduModeType
Can_GeneralTypes	CanTrcv_TrcvModeType
	Can_ControllerStateType
ComM	ComM_ModeType
ComStack_Types	IcomConfigIdType
	IcomSwitch_ErrorType
	NetworkHandleType
Dem	Dem_EventIdType
	Dem_EventStatusType
Std_Types	Std_ReturnType
	Std_VersionInfoType

] ()

8.2 Type definitions

The following tables contain the type definitions of the CanSM module.

8.2.1 CanSM_StateType

[SWS_CanSM_00596] [

Name:	CanSM_StateType		
Type:	Enumeration		
Range:	CANSM_INITED	--	--
	CANSM_UNINITED	--	--
Description:	Defines the values of the internal states of the CanSM module		

] (SRS_BSW_00405, SRS_BSW_00101, SRS_BSW_00406, SRS_BSW_00358, SRS_BSW_00414, SRS_BSW_00404)

8.2.2 CanSM_ConfigType

[SWS_CanSM_00597] [

Name:	CanSM_ConfigType		
Type:	Structure		
Range:	--	--	--
Description:	This type defines a data structure for the post build parameters of the CanSM. At initialization the CanSM gets a pointer to a structure of this type to get access to its configuration data, which is necessary for initialization.		

] (SRS_BSW_00400, SRS_BSW_00438)

8.2.3 CanSM_BswMCurrentStateType

[SWS_CanSM_00598] [

Name:	CanSM_BswMCurrentStateType		
Type:	Enumeration		
Range:	CANSM_BSWM_NO_COMMUNICATION	--	--
	CANSM_BSWM_SILENT_COMMUNICATION	--	--
	CANSM_BSWM_FULL_COMMUNICATION	--	--
	CANSM_BSWM_BUS_OFF	--	--
	CANSM_BSWM_CHANGE_BAUDRATE	--	--
Description:	Can specific communication modes / states notified to the BswM module		

] (SRS_ModeMgm_09251)

8.3 Function definitions

The following sections specify the provided API functions of the CanSM module.

8.3.1 CanSM_Init

[SWS_CanSM_00023] [

Service name:	CanSM_Init
Syntax:	<pre>void CanSM_Init(const CanSM_ConfigType* ConfigPtr)</pre>
Service ID[hex]:	0x00
Sync/Async:	Synchronous
Reentrancy:	Non Reentrant
Parameters (in):	ConfigPtr Pointer to init structure for the post build parameters of the CanSM
Parameters (inout):	None
Parameters (out):	None
Return value:	None
Description:	This service initializes the CanSM module

] (SRS_BSW_00405, SRS_BSW_00101, SRS_BSW_00406, SRS_BSW_00358, SRS_BSW_00414, SRS_BSW_00404, SRS_BSW_00400, SRS_BSW_00438)

8.3.2 CanSM_DeInit

[SWS_CanSM_91001] [

Service name:	CanSM_DeInit
Syntax:	<pre>void CanSM_DeInit(void)</pre>
Service ID[hex]:	0x14
Sync/Async:	Synchronous
Reentrancy:	Non Reentrant
Parameters (in):	None
Parameters (inout):	None
Parameters (out):	None
Return value:	None
Description:	This service de-initializes the CanSM module.

] (SRS_Can_01164, SRS_BSW_00336)

Note: General behavior and constraints on de-initialization functions are specified by [SWS_BSW_00152], [SWS_BSW_00072], [SWS_BSW_00232], [SWS_BSW_00233].

Caveat: Caller of the CanSM_DeInit function has to ensure all CAN networks are in the state CANSM_NO_COMMUNICATION.

[SWS_CanSM_00660][If development error detection for the CanSM module is enabled: The function CanSM_Delnit shall raise the error CANSM_E_NOT_IN_NO_COM if not all CAN networks are in state CANSM_NO_COMMUNICATION.] (SRS_BSW_00369)

8.3.3 CanSM_RequestComMode

[SWS_CanSM_00062] [

Service name:	CanSM_RequestComMode	
Syntax:	<pre>Std_ReturnType CanSM_RequestComMode(NetworkHandleType network, ComM_ModeType ComM_Mode)</pre>	
Service ID[hex]:	0x02	
Sync/Async:	Asynchronous	
Reentrancy:	Reentrant (only for different network handles)	
Parameters (in):	network	Handle of destined communication network for request
	ComM_Mode	Requested communication mode
Parameters (inout):	None	
Parameters (out):	None	
Return value:	Std_ReturnType	E_OK: Service accepted E_NOT_OK: Service denied
Description:	This service shall change the communication mode of a CAN network to the requested one.	

] (SRS_Can_01145, SRS_Can_01142)

Remark: Please refer to [10] for a detailed description of the communication modes.

[SWS_CanSM_00369] [The function CanSM_RequestComMode shall accept its request, if the NetworkHandle parameter of the request is a handle contained in the configuration of the CanSM module (ref. to [ECUC_CanSM_00161](#)).] (SRS_Can_01145, SRS_Can_01142)

[SWS_CanSM_00370] [The function CanSM_RequestComMode shall deny its request, if the NetworkHandle parameter of the request is not a handle contained in the configuration of the CanSM module (ref. to [ECUC_CanSM_00161](#)).] (SRS_Can_01145, SRS_Can_01142)

[SWS_CanSM_00555] [The CanSM module shall deny the API request CanSM_RequestComMode, if the initial transition for the requested CAN network is not finished yet after the CanSM_Init request (ref. to [SWS_CanSM_00423](#), [SWS_CanSM_00430](#)).] (SRS_Can_01145, SRS_Can_01142)

[SWS_CanSM_00183] [The function CanSM_RequestComMode shall call the function Det_ReportError with ErrorId parameter CANSM_E_INVALID_NETWORK_HANDLE, if it does not accept the network handle of the request.] (SRS_Can_01145, SRS_Can_01142)

[SWS_CanSM_00182] [If the function `CanSM_RequestComMode` accepts the request, the request shall be considered by the CanSM state machine (ref. to [SWS_CanSM_00635](#)).] (SRS_Can_01145, SRS_Can_01142)

[SWS_CanSM_00184] [If the CanSM module is not initialized, when the function `CanSM_RequestComMode` is called, then this function shall call the function `Det_ReportError` with `ErrorId` parameter `CANSM_E_UNINIT.`] (SRS_BSW_00406)

[SWS_CanSM_00395] [If the CanSM module has to deny the request `CanSM_RequestComMode`, because of a pending mode indication (ref. to [CANSM388](#)), then this function shall call the function `Det_ReportError` with the `ErrorId` parameter `CANSM_E_WAIT_MODE_INDICATION` (ref. to chapter 7.3).] (SRS_Can_01145)

8.3.4 CanSM_GetCurrentComMode

[SWS_CanSM_00063] [

Service name:	CanSM_GetCurrentComMode	
Syntax:	<pre>Std_ReturnType CanSM_GetCurrentComMode(NetworkHandleType network, ComM_ModeType* ComM_ModePtr)</pre>	
Service ID[hex]:	0x03	
Sync/Async:	Synchronous	
Reentrancy:	Reentrant	
Parameters (in):	network	Network handle, whose current communication mode shall be put out
Parameters (inout):	None	
Parameters (out):	ComM_ModePtr	Pointer, where to put out the current communication mode
Return value:	Std_ReturnType	E_OK: Service accepted E_NOT_OK: Service denied
Description:	This service shall put out the current communication mode of a CAN network.	

] (SRS_ModeMgm_09084)

[SWS_CanSM_00282] [The CanSM module shall return `E_NOT_OK` for the API request `CanSM_GetCurrentComMode` until the call of the provided API `CanSM_Init` (ref. to [SWS_CANSM_00023](#)).] (SRS_Can_01142)

[SWS_CanSM_00371] [The function `CanSM_GetCurrentComMode` shall accept its request, if the `NetworkHandle` parameter of the request is a handle contained in the configuration of the CanSM module (ref. to [ECUC_CanSM_00161](#)).] (SRS_Can_01142)

[SWS_CanSM_00372] [The function `CanSM_GetCurrentComMode` shall deny its request, if the `NetworkHandle` parameter of the request is not a handle contained in the configuration of the CanSM module (ref. to [ECUC_CanSM_00161](#)).] (SRS_Can_01142)

[SWS_CanSM_00187] [The function `CanSM_GetCurrentComMode` shall call the function `Det_ReportError` with `ErrorId` parameter `CANSM_E_INVALID_NETWORK_HANDLE`, if it does not accept the network handle of the request.] (SRS_Can_01142)

[SWS_CanSM_00186] [The function `CanSM_GetCurrentComMode` shall put out the current communication mode for the network handle (ref. to [SWS_CanSM_00266](#)) to the designated pointer of type `ComM_ModeType`, if it accepts the request.] (SRS_Can_01142)

[SWS_CanSM_00188] [If the CanSM module is not initialized (ref. to [SWS_CANSM_00282](#)), when the function `CanSM_GetCurrentComMode` is called, then this function shall call the function `Det_ReportError` with `ErrorId` parameter `CANSM_E_UNINIT`.] (SRS_Can_01142)

[SWS_CanSM_00360] [The function `CanSM_GetCurrentComMode` shall report the development error `CANSM_E_PARAM_POINTER` to the DET, if the user of this function hands over a NULL-pointer as `ComM_ModePtr`.] (SRS_Can_01142)

8.3.5 CanSM_StartWakeupSource

[SWS_CanSM_00609] [

Service name:	CanSM_StartWakeupSource	
Syntax:	<pre>Std_ReturnType CanSM_StartWakeupSource(NetworkHandleType network)</pre>	
Service ID[hex]:	0x11	
Sync/Async:	Synchronous	
Reentrancy:	Non Reentrant	
Parameters (in):	network	Affected CAN network
Parameters (inout):	None	
Parameters (out):	None	
Return value:	Std_ReturnType	E_OK: Request accepted E_NOT_OK: Request denied
Description:	This function shall be called by EcuM when a wakeup source shall be started.	

] (SRS_Can_01145)

[SWS_CanSM_00611] [The API function `CanSM_StartWakeupSource` shall return `E_NOT_OK`, if the CanSM module is not initialized yet with `CanSM_Init` (ref. to [SWS_CANSM_00023](#)).] (SRS_Can_01145)

[SWS_CanSM_00617] The function `CanSM_StartWakeupSource` shall call the function `Det_ReportError` with `ErrorId` parameter `CANSM_E_UNINIT`, if the CanSM module is not initialized yet with `CanSM_Init` (ref. to [SWS_CANSM_00023](#)).
] (SRS_Can_01145)

[SWS_CanSM_00612] The function `CanSM_StartWakeupSource` shall return `E_NOT_OK`, if the CanSM module is initialized and the `network` parameter of the request is not a handle contained in the configuration of the CanSM module (ref. to [ECUC_CanSM_00161](#)).] (SRS_Can_01145)

[SWS_CanSM_00613] The function `CanSM_StartWakeupSource` shall call the function `Det_ReportError` with `ErrorId` parameter `CANSM_E_INVALID_NETWORK_HANDLE`, if the CanSM module is initialized and the requested handle is invalid concerning the CanSM configuration (ref. to [ECUC_CanSM_00161](#)).] (SRS_Can_01145)

[SWS_CanSM_00616] The function `CanSM_StartWakeupSource` shall return `E_OK` and it shall be considered as trigger (ref. to [SWS_CanSM_00607](#)) for the state machine of the related network, if the CanSM module is initialized and the requested handle is valid concerning the CanSM configuration (ref. to [ECUC_CanSM_00161](#)).
] (SRS_Can_01145)

8.3.6 CanSM_StopWakeupSource

[SWS_CanSM_00610] [

Service name:	CanSM_StopWakeupSource	
Syntax:	Std_ReturnType CanSM_StopWakeupSource(NetworkHandleType network)	
Service ID[hex]:	0x12	
Sync/Async:	Synchronous	
Reentrancy:	Non Reentrant	
Parameters (in):	network	Affected CAN network
Parameters (inout):	None	
Parameters (out):	None	
Return value:	Std_ReturnType	E_OK: Request accepted E_NOT_OK: Request denied
Description:	This function shall be called by EcuM when a wakeup source shall be stopped.	

] (SRS_Can_01145)

[SWS_CanSM_00618] The API function `CanSM_StopWakeupSource` shall return `E_NOT_OK`, if the CanSM module is not initialized yet with `CanSM_Init` (ref. to [SWS_CANSM_00023](#)).] (SRS_Can_01145)

[SWS_CanSM_00619] The function `CanSM_StopWakeupSource` shall call the function `Det_ReportError` with `ErrorId` parameter `CANSM_E_UNINIT`, if the CanSM module is not initialized yet with `CanSM_Init` (ref. to [SWS_CANSM_00023](#)).
] (SRS_Can_01145)

[SWS_CanSM_00620] The function `CanSM_StopWakeupSource` shall return `E_NOT_OK`, if the CanSM module is initialized and the `network` parameter of the request is not a handle contained in the configuration of the CanSM module (ref. to [ECUC_CanSM_00161](#)).] (SRS_Can_01145)

[SWS_CanSM_00621] The function `CanSM_StopWakeupSource` shall call the function `Det_ReportError` with `ErrorId` parameter `CANSM_E_INVALID_NETWORK_HANDLE`, if the CanSM module is initialized and the requested handle is invalid concerning the CanSM configuration (ref. to [ECUC_CanSM_00161](#)).] (SRS_Can_01145)

[SWS_CanSM_00622] The function `CanSM_StopWakeupSource` shall return `E_OK` and it shall be considered as trigger (ref. to [SWS_CanSM_00608](#)) for the state machine of the related network, if the CanSM module is initialized and the requested handle is valid concerning the CanSM configuration (ref. to [ECUC_CanSM_00161](#)).] (SRS_Can_01145)

8.3.7 Optional

8.3.7.1 CanSM_GetVersionInfo

[SWS_CanSM_00024] [

Service name:	CanSM_GetVersionInfo
Syntax:	void CanSM_GetVersionInfo(Std_VersionInfoType* VersionInfo)
Service ID[hex]:	0x01
Sync/Async:	Synchronous
Reentrancy:	Reentrant
Parameters (in):	None
Parameters (inout):	None
Parameters (out):	VersionInfo Pointer to where to store the version information of this module.
Return value:	None
Description:	This service puts out the version information of this module (module ID, vendor ID, vendor specific version numbers related to BSW00407)

] (SRS_BSW_00407, SRS_BSW_00003)

[SWS_CanSM_00374] [The function `CanSM_GetVersionInfo` shall report the development error `CANSM_E_PARAM_POINTER` to the DET, if the user of this function hands over a NULL-pointer as `VersionInfo`.] (SRS_BSW_00407, SRS_BSW_00003)

8.3.7.2 CanSM_SetBaudrate

[SWS_CanSM_00561] [

Service name:	CanSM_SetBaudrate
Syntax:	Std_ReturnType CanSM_SetBaudrate(NetworkHandleType Network, uint16 BaudRateConfigID)
Service ID[hex]:	0x0d
Sync/Async:	Synchronous
Reentrancy:	Reentrant for different Networks. Non reentrant for the same Network.
Parameters (in):	Network Handle of the addressed CAN network for the baud rate change
	BaudRateConfigID references a baud rate configuration by ID (see <code>CanControllerBaudRateConfigID</code>)
Parameters (inout):	None
Parameters (out):	None
Return value:	Std_ReturnType E_OK: Service request accepted, setting of (new) baud rate started
	E_NOT_OK: Service request not accepted
Description:	This service shall start an asynchronous process to change the baud rate for the configured CAN controllers of a certain CAN network. Depending on necessary baud rate modifications the controllers might have to reset.

] (SRS_Can_01142)

[SWS_CanSM_00569] [The CanSM module shall provide the API function `CanSM_SetBaudrate`, if the `CANSM_SET_BAUDRATE_API` parameter (ref. to [ECUC_CanSM_00343](#)) is configured with the value `TRUE`.] (SRS_Can_01142)

[SWS_CanSM_00570] The CanSM module shall not provide the API function `CanSM_SetBaudrate`, if the `CANSM_SET_BAUDRATE_API` parameter (ref. to [ECUC_CanSM_00343](#)) is configured with the value `FALSE`.] (SRS_Can_01142)

[SWS_CanSM_00502] [The CanSM module shall deny the `CanSM_SetBaudrate` API request, if the `NetworkHandle` parameter does not match to the configured Network handles of the CanSM module (ref. to [ECUC_CanSM_00161](#)).] (SRS_Can_01142)

[SWS_CanSM_00504] [The function `CanSM_SetBaudrate` shall call the function `Det_ReportError` with `ErrorId` parameter `CANSM_E_INVALID_NETWORK_HANDLE` (ref. to chapter 7.3), if it does not accept the network handle of the request.] (SRS_Can_01142)

[SWS_CanSM_00505] [The function `CanSM_SetBaudrate` shall deny its request, if the requested CAN network is not in the communication mode `COMM_FULL_COMMUNICATION`.] (SRS_Can_01142)

[SWS_CanSM_00530] [The CanSM module shall deny the `CanSM_SetBaudrate` API request, if the CanSM module is not initialized.] (SRS_Can_01142)

[SWS_CanSM_00506] [If the function `CanSM_SetBaudrate` is called and the CanSM module is not initialized, then this function shall call the function `Det_ReportError` with `ErrorId` parameter `CANSM_E_UNINIT` (ref. to chapter 7.3).] (SRS_Can_01142)

[SWS_CanSM_00503] [If no condition is present to deny the `CanSM_SetBaudrate` request according to [SWS_CANSM_00502](#) and [SWS_CANSM_00505](#), [SWS_CANSM_00530](#), then the CanSM module shall return `E_OK` and operate the process for the requested baud rate change as specified with [SWS_CANSM_00507](#).] (SRS_Can_01142)

8.3.7.3 CanSM_SetIcomConfiguration

[SWS_CanSM_00586] [

Service name:	CanSM_SetIcomConfiguration	
Syntax:	<pre>Std_ReturnType CanSM_SetIcomConfiguration(NetworkHandleType Network, IcomConfigIdType ConfigurationId)</pre>	
Service ID[hex]:	0x0f	
Sync/Async:	Asynchronous	
Reentrancy:	Reentrant only for different network handles	
Parameters (in):	Network	Handle of destined communication network for request
	ConfigurationId	Requested Configuration
Parameters	None	

(inout):	
Parameters (out):	None
Return value:	Std_ReturnType E_OK: Request accepted E_NOT_OK: Request denied
Description:	This service shall change the Icom Configuration of a CAN network to the requested one.

] (SRS_Can_01142)

[SWS_CanSM_00599] The CanSM module shall provide the API function `CanSM_SetIcomConfiguration`, if the `CANSM_ICOM_SUPPORT` parameter (ref. to [ECUC_CanSM_00345](#)) is configured with the value `TRUE`.] (SRS_Can_01142)

[SWS_CanSM_00593] If the requested Network is configured for the CanSM module, the API `CanSM_SetIcomConfiguration` shall request an ICOM configuration for a given channel in order to activate or deactivate Pretended Networking (ref. to chapter 7.4) and return `E_OK` or `E_NOT_OK` depending on the return value of the requested CanIf API.] (SRS_Can_01142)

[SWS_CanSM_00594] If the requested Network is not configured for the CanSM module, the API `CanSM_SetIcomConfiguration` shall return `E_NOT_OK` and notify the DET error `CANSM_E_INVALID_NETWORK_HANDLE`.] (SRS_Can_01142)

8.3.7.4 CanSM_SetEcuPassive

[SWS_CanSM_00644] [

Service name:	CanSM_SetEcuPassive	
Syntax:	Std_ReturnType CanSM_SetEcuPassive(boolean CanSM_Passive)	
Service ID[hex]:	0x13	
Sync/Async:	Synchronous	
Reentrancy:	Non Reentrant	
Parameters (in):	CanSM_Passive	TRUE: set all CanSM channels to passive, i.e. receive only FALSE: set all CanSM channels back to non-passive
Parameters (inout):	None	
Parameters (out):	None	
Return value:	Std_ReturnType	E_OK: Request accepted E_NOT_OK: Request not accepted
Description:	This function can be used to set all CanSM channels of the ECU to a receive only mode. This mode will be kept either until it is set back, or the ECU is reset.	

] (SRS_Can_01158)

[SWS_CanSM_00645] The CanSM module shall provide the API function `CanSM_SetEcuPassive`, if the `CanSMTxOfflineActiveSupport` parameter (ref. to [ECUC_CanSM_00349](#)) is configured with the value `TRUE`.] (SRS_Can_01158)

8.3.8 Call-back notifications

This is a list of functions provided for other modules. The function prototypes of the callback functions shall be provided in the file `CanSM_Cbk.h`

8.3.9 CanSM_ControllerBusOff

[SWS_CanSM_00064] [

Service name:	CanSM_ControllerBusOff
Syntax:	void CanSM_ControllerBusOff(uint8 ControllerId)
Service ID[hex]:	0x04
Sync/Async:	Synchronous
Reentrancy:	Reentrant (only for different CanControllers)
Parameters (in):	ControllerId CAN controller, which detected a bus-off event
Parameters (inout):	None
Parameters (out):	None
Return value:	None
Description:	This callback function notifies the CanSM about a bus-off event on a certain CAN controller, which needs to be considered with the specified bus-off recovery handling for the impacted CAN network.

] (SRS_BSW_00359, SRS_BSW_00333)

[SWS_CanSM_00189] [If the function `CanSM_ControllerBusOff` gets a Controller, which is not configured as `CanSMControllerId` in the configuration of the CanSM module, it shall call the function `Det_ReportError` with `ErrorId` parameter `CANSM_E_PARAM_CONTROLLER`.] (SRS_BSW_00359, SRS_BSW_00333)

[SWS_CanSM_00190] [If the CanSM module is not initialized, when the function `CanSM_ControllerBusOff` is called, then the function `CanSM_ControllerBusOff` shall call the function `Det_ReportError` with `ErrorId` parameter `CANSM_E_UNINIT`.] (SRS_BSW_00359, SRS_BSW_00333)

[SWS_CanSM_00235] [If the CanSM module is initialized and the input parameter `Controller` is one of the CAN controllers configured with the parameter `CanSMControllerId`, this bus-off event shall be considered by the CAN Network state machine (ref. to [SWS_CanSM_00500](#)).] (SRS_BSW_00359, SRS_BSW_00333)

Additional remarks:

- 1.) The call context is either on interrupt level (interrupt mode) or on task level (polling mode).
- 2.) Reentrancy is necessary for multiple CAN controller usage.

8.3.10 CanSM_ControllerModeIndication

[SWS_CanSM_00396] [

Service name:	CanSM_ControllerModeIndication	
Syntax:	<pre>void CanSM_ControllerModeIndication(uint8 ControllerId, Can_ControllerStateType ControllerMode)</pre>	
Service ID[hex]:	0x07	
Sync/Async:	Synchronous	
Reentrancy:	Reentrant (only for different CAN controllers)	
Parameters (in):	ControllerId	CAN controller, whose mode has changed
	ControllerMode	Notified CAN controller mode
Parameters (inout):	None	
Parameters (out):	None	
Return value:	None	
Description:	This callback shall notify the CanSM module about a CAN controller mode change.	

] (SRS_Can_01145)

[SWS_CanSM_00397] [If the function `CanSM_ControllerModeIndication` gets a `ControllerId`, which is not configured as `CanSMControllerId` in the configuration of the CanSM module, it shall call the function `Det_ReportError` with `ErrorId` parameter `CANSM_E_PARAM_CONTROLLER`.] (SRS_Can_01145)

[SWS_CanSM_00398] [If the CanSM module is not initialized, when the function `CanSM_ControllerModeIndication` is called, then the function `CanSM_ControllerModeIndication` shall call the function `Det_ReportError` with `ErrorId` parameter `CANSM_E_UNINIT`.] (SRS_Can_01145)

8.3.11 CanSM_TransceiverModeIndication

[SWS_CanSM_00399] [

Service name:	CanSM_TransceiverModeIndication	
Syntax:	<pre>void CanSM_TransceiverModeIndication(uint8 TransceiverId, CanTrcv_TrcevModeType TransceiverMode)</pre>	
Service ID[hex]:	0x09	
Sync/Async:	Synchronous	
Reentrancy:	Reentrant for different CAN Transceivers	
Parameters (in):	TransceiverId	CAN transceiver, whose mode has changed
	TransceiverMode	Notified CAN transceiver mode
Parameters (inout):	None	
Parameters (out):	None	
Return value:	None	
Description:	This callback shall notify the CanSM module about a CAN transceiver mode change.	

] (SRS_Can_01145, SRS_Can_01142)

[SWS_CanSM_00400] [If the function `CanSM_TransceiverModeIndication` gets a `TransceiverId`, which is not configured as `CanSMTransceiverId` in the

configuration of the CanSM module, it shall call the function `Det_ReportError` with `ErrorId` parameter `CANSM_E_PARAM_TRANSCEIVER.`] (SRS_Can_01145)

[SWS_CanSM_00401] [If the CanSM module is not initialized, when the function `CanSM_TransceiverModeIndication` is called, then the function `CanSM_TransceiverModeIndication` shall call the function `Det_ReportError` with `ErrorId` parameter `CANSM_E_UNINIT.`] (SRS_Can_01145)

8.3.12 CanSM_TxTimeoutException

[SWS_CanSM_00410] [

Service name:	CanSM_TxTimeoutException	
Syntax:	<pre>void CanSM_TxTimeoutException(NetworkHandleType Channel)</pre>	
Service ID[hex]:	0x0b	
Sync/Async:	Synchronous	
Reentrancy:	Reentrant	
Parameters (in):	Channel	Affected CAN network
Parameters (inout):	None	
Parameters (out):	None	
Return value:	None	
Description:	This function shall notify the CanSM module, that the CanNm has detected for the affected partial CAN network a tx timeout exception, which shall be recovered within the respective network state machine of the CanSM module.	

] (SRS_Can_01142, SRS_Can_01145)

[SWS_CanSM_00411] [The function `CanSM_TxTimeoutException` shall report `CANSM_E_UNINIT` to the DET, if the CanSM is not initialized yet.] (SRS_Can_01145)

[SWS_CanSM_00412] [If the function `CanSM_TxTimeoutException` is referenced with a `Channel`, which is not configured as `CanSMNetworkHandle` in the CanSM configuration, it shall report `CANSM_E_INVALID_NETWORK_HANDLE` to the DET.] (SRS_Can_01145)

Remarks: Reentrancy is necessary for different Channels.

8.3.13 CanSM_ClearTrcvWufFlagIndication

[SWS_CanSM_00413] [

Service name:	CanSM_ClearTrcvWufFlagIndication	
Syntax:	<pre>void CanSM_ClearTrcvWufFlagIndication(uint8 Transceiver)</pre>	
Service ID[hex]:	0x08	
Sync/Async:	Synchronous	
Reentrancy:	Reentrant for different CAN Transceivers	
Parameters (in):	Transceiver	Requested Transceiver
Parameters	None	

(inout):	
Parameters (out):	None
Return value:	None
Description:	This callback function shall indicate the CanIf_ClearTrcvWufFlag API process end for the notified CAN Transceiver.

] (SRS_Can_01145)

[SWS_CanSM_00414] [The function `CanSM_ClearTrcvWufFlagIndication` shall report `CANSM_E_UNINIT` to the DET, if the CanSM is not initialized yet.] (SRS_Can_01145)

[SWS_CanSM_00415] [If the function `CanSM_ClearTrcvWufFlagIndication` gets a `TransceiverId`, which is not configured (ref. to [ECUC_CanSM_00137](#)) in the configuration of the CanSM module, it shall call the function `Det_ReportError` with `ErrorId` parameter `CANSM_E_PARAM_TRANSCEIVER`.] (SRS_Can_01145)

8.3.14 CanSM_CheckTransceiverWakeFlagIndication

[SWS_CanSM_00416] [

Service name:	<code>CanSM_CheckTransceiverWakeFlagIndication</code>	
Syntax:	<pre>void CanSM_CheckTransceiverWakeFlagIndication(uint8 Transceiver)</pre>	
Service ID[hex]:	0x0a	
Sync/Async:	Synchronous	
Reentrancy:	Reentrant for different CAN Transceivers	
Parameters (in):	Transceiver	Requested Transceiver
Parameters (inout):	None	
Parameters (out):	None	
Return value:	None	
Description:	This callback function indicates the CanIf_CheckTrcvWakeFlag API process end for the notified CAN Transceiver.	

] (SRS_Can_01145)

[SWS_CanSM_00417] [The function `CanSM_CheckTransceiverWakeFlagIndication` shall report `CANSM_E_UNINIT` to the DET, if the CanSM module is not initialized yet.] (SRS_Can_01145)

[SWS_CanSM_00418] [If the function `CanSM_CheckTransceiverWakeFlagIndication` gets a `TransceiverId`, which is not configured (ref. to [ECUC_CanSM_00137](#)) in the configuration of the CanSM module, it shall call the function `Det_ReportError` with `ErrorId` parameter `CANSM_E_PARAM_TRANSCEIVER`.] (SRS_Can_01145)

8.3.15 CanSM_ConfirmPnAvailability

[SWS_CanSM_00419] [

Service name:	CanSM_ConfirmPnAvailability
Syntax:	void CanSM_ConfirmPnAvailability(uint8 TransceiverId)
Service ID[hex]:	0x06
Sync/Async:	Synchronous
Reentrancy:	Reentrant
Parameters (in):	TransceiverId CAN transceiver, which was checked for PN availability
Parameters (inout):	None
Parameters (out):	None
Return value:	None
Description:	This callback function indicates that the transceiver is running in PN communication mode.

] (SRS_Can_01145)

[SWS_CanSM_00546] [The function CanSM_ConfirmPnAvailability shall notify the CanNm module (ref. to [SWS_CanSM_00422](#)), if it is called with a configured Transceiver as input parameter (ref. to [ECUC_CanSM_00137](#)).] (SRS_Can_01145)

[SWS_CanSM_00420] [

The function CanSM_ConfirmPnAvailability shall report CANSM_E_UNINIT to the DET, if the CanSM module is not initialized yet.] (SRS_Can_01145)

[SWS_CanSM_00421] [

If the function CanSM_ConfirmPnAvailability gets a TransceiverId, which is not configured (ref. to [ECUC_CanSM_00137](#)) in the configuration of the CanSM module, it shall call the function Det_ReportError with ErrorId parameter CANSM_E_PARAM_TRANSCEIVER.] (SRS_Can_01145)

8.3.16 CanSM_CurrentIcomConfiguration

[SWS_CanSM_00587] [

Service name:	CanSM_CurrentIcomConfiguration
Syntax:	void CanSM_CurrentIcomConfiguration(uint8 ControllerId, IcomConfigIdType ConfigurationId, IcomSwitch_ErrorType Error)
Service ID[hex]:	0x10
Sync/Async:	Synchronous
Reentrancy:	Reentrant only for different network handles
Parameters (in):	ControllerId CAN Controller Id, whose configuration has changed.
	ConfigurationId Changed Configuration Id
	Error ICOM_SWITCH_E_OK: No Error ICOM_SWITCH_E_FAILED: Switch to requested Configuration failed. Severe Error.
Parameters	None

(inout):	
Parameters (out):	None
Return value:	None
Description:	This service shall inform about the change of the Icom Configuration of a CAN network.

] (SRS_Can_01142)

[SWS_CanSM_00595] If the `CANSM_ICOM_SUPPORT` parameter (ref. to [ECUC_CanSM_00345](#)) is configured with the value `TRUE`, then the callback function `BSWM_CanSM_CurrentIcomConfiguration` shall notify the BswM about the status of activation or deactivation of Pretended Networking (ref. to chapter 7.4) for the CAN Network, which contains the notified ControllerId in its configuration. It shall transfer the `ConfigurationId` and `Error` parameter to the BswM therefore.] (SRS_Can_01142)

8.4 Scheduled functions

For details refer to the chapter 8.5 “Scheduled functions” in *SWS_BSWGeneral*.

8.4.1 CanSM_MainFunction

[SWS_CanSM_00065] [

Service name:	CanSM_MainFunction
Syntax:	void CanSM_MainFunction(void)
Service ID[hex]:	0x05
Description:	Scheduled function of the CanSM

] (SRS_BSW_00424, SRS_BSW_00425, SRS_Can_01145, SRS_Can_01142)

[SWS_CanSM_00167] [The main function of the CanSM module shall operate the effects of the CanSM state machine (ref. to chapter 7.2), which the CanSM module shall implement for each configured CAN Network.] (SRS_BSW_00424, SRS_BSW_00425, SRS_Can_01145, SRS_Can_01142)

8.5 Expected Interfaces

In this chapter all interfaces required from other modules are listed.

8.5.1 Mandatory Interfaces

This chapter defines all interfaces, which are required to fulfill the core functionality of the module.

API function	Description
BswM_CanSM_CurrentIcomConfiguration	Function to inform BswM about the switch of Icom Configuration.
BswM_CanSM_CurrentState	Function called by CanSM to indicate its current state.
CanIf_CheckTrcvWakeFlag	Requests the CanIf module to check the Wake flag of the designated CAN transceiver.

CanIf_ClearTrcvWufFlag	Requests the CanIf module to clear the WUF flag of the designated CAN transceiver.
CanIf_GetTxConfirmationState	This service reports, if any TX confirmation has been done for the whole CAN controller since the last CAN controller start.
CanIf_SetControllerMode	This service calls the corresponding CAN Driver service for changing of the CAN controller mode.
CanIf_SetPduMode	This service sets the requested mode at the L-PDUs of a predefined logical PDU channel.
CanIf_SetTrcvMode	This service changes the operation mode of the transceiver TransceiverId, via calling the corresponding CAN Transceiver Driver service.
CanNm_ConfirmPnAvailability	Enables the PN filter functionality on the indicated NM channel. Availability: The API is only available if CanNmGlobalPnSupport is TRUE.
ComM_BusSM_ModeIndication	Indication of the actual bus mode by the corresponding Bus State Manager. ComM shall propagate the indicated state to the users with means of the RTE and BswM.
Dem_SetEventStatus	Called by SW-Cs or BSW modules to report monitor status information to the Dem. BSW modules calling Dem_SetEventStatus can safely ignore the return value.

8.5.1.1 Remark: Usage of CanIf_SetPduMode

Although the CanIf module provides more requestable PDU modes, the CanSM module only uses the parameters CANIF_ONLINE, CANIF_TX_OFFLINE_ACTIVE and CANIF_TX_OFFLINE for the call of the API CanIf_SetPduMode.

The CANIF_OFFLINE mode is assumed automatically by CanIf and needs not to be set by CanSM.

8.5.2 Optional Interfaces

This chapter defines all interfaces, which are required to fulfill an optional functionality of the module.

API function	Description
CanIf_SetBaudrate	This service shall set the baud rate configuration of the CAN controller. Depending on necessary baud rate modifications the controller might have to reset.
CanIf_SetIcomConfiguration	This service shall change the Icom Configuration of a CAN controller to the requested one.
Det_ReportError	Service to report development errors.

8.5.3 Configurable Interfaces

In this chapter all interfaces are listed where the target functions could be configured. The target function is usually a callback function. The names of these kind of interfaces is not fixed because they are configurable.

8.5.3.1 <User_GetBusOffDelay>

[SWS_CanSM_00637] [

Service name:	<User_GetBusOffDelay>	
Syntax:	<pre>void <User_GetBusOffDelay>(NetworkHandleType network, uint8* delayCyclesPtr)</pre>	
Sync/Async:	Synchronous	
Reentrancy:	Reentrant for different networks	
Parameters (in):	network	CAN network where a BusOff occurred.
Parameters (inout):	None	
Parameters (out):	delayCyclesPtr	Number of CanSM base cycles to wait additionally to L1/L2 after a BusOff occurred.
Return value:	None	
Description:	This callout function returns the number of CanSM base cycles to wait additionally to L1/L2 after a BusOff occurred.	

] (SRS_Can_01144, SRS_Can_01146)

sequences for the use case to start and to stop the CAN controller(s) of a CAN network.

Remark: For the special use case of CAN network deinitialization with partial network support please refer to chapter 9 of [9] (Specification of CAN Transceiver Driver).

9.1 Sequence diagram CanSm_StartCanController

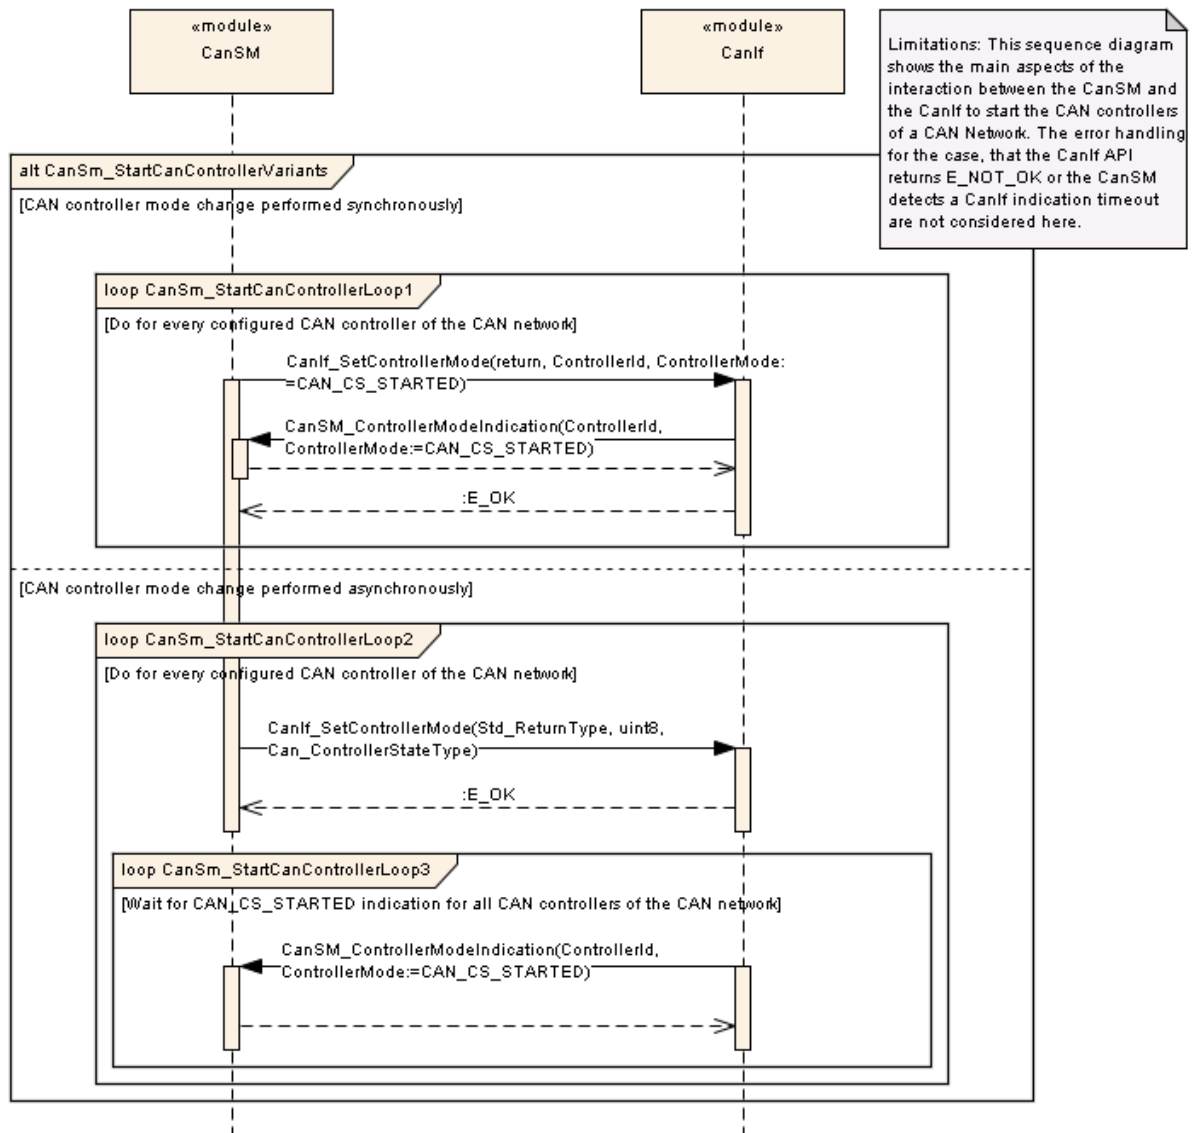


Figure 9-1: Sequence diagram CanSm_StartCanController

9.2 Sequence diagram CanSm_StopCanController

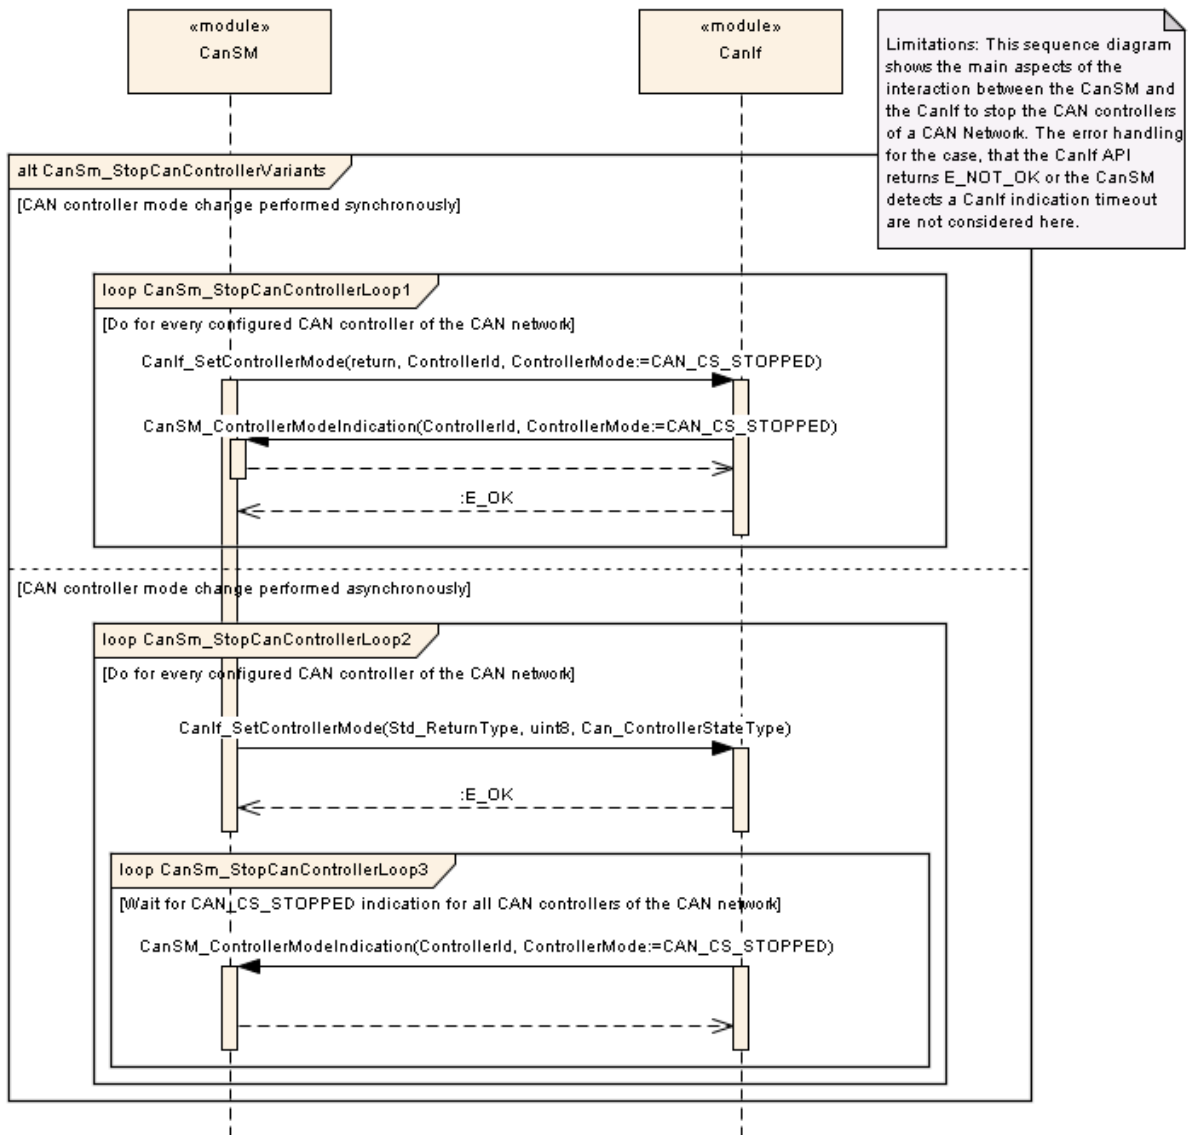


Figure 9-2: Sequence diagram CanSm_StopCanController

10 Configuration specification

In general, this chapter defines configuration parameters and their clustering into containers. In order to support the specification Chapter 10.1 describes fundamentals. It also specifies a template (table) you shall use for the parameter specification. We intend to leave Chapter 10.1 in the specification to guarantee comprehension.

Chapter 10.2 specifies the structure (containers) and the parameters of the module CanSM.

Chapter 10.3 specifies published information of the module CanSM.

10.1 How to read this chapter

For details refer to the chapter 10.1 “Introduction to configuration specification” in *SWS_BSWGeneral*.

10.2 Containers and configuration parameters

The following chapters summarize all configuration parameters of the CanSM module. The detailed meanings of the parameters describe chapter 7 and chapter 8.

10.2.1 CanSM

SWS Item	ECUC_CanSM_00351 :
Module Name	<i>CanSM</i>
Module Description	Configuration of the CanSM module
Post-Build Variant Support	true
Supported Config Variants	VARIANT-LINK-TIME, VARIANT-POST-BUILD, VARIANT-PRE-COMPILE

Included Containers		
Container Name	Multiplicity	Scope / Dependency
CanSMConfiguration	1	This container contains the global parameters of the CanSM and sub containers, which are for the CAN network specific configuration.
CanSMGeneral	1	Container for general pre-compile parameters of the CanSM module

10.2.2 CanSMConfiguration

SWS Item	ECUC_CanSM_00123 :
Container Name	CanSMConfiguration
Description	This container contains the global parameters of the CanSM and sub containers, which are for the CAN network specific configuration.
Configuration Parameters	

SWS Item	ECUC_CanSM_00335 :
-----------------	---------------------------

Name	CanSMModeRequestRepetitionMax		
Description	Specifies the maximal amount of mode request repetitions without a respective mode indication from the CanIf module until the CanSM module reports a Default Error to the Det and tries to go back to no communication.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	--		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

SWS Item	ECUC_CanSM_00336 :		
Name	CanSMModeRequestRepetitionTime		
Description	Specifies in which time duration the CanSM module shall repeat mode change requests by using the API of the CanIf module.		
Multiplicity	1		
Type	EcucFloatParamDef		
Range	[0 .. 65.535]		
Default value	--		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

Included Containers		
Container Name	Multiplicity	Scope / Dependency
CanSMManagerNetwork	1..*	This container contains the CAN network specific parameters of each CAN network

10.2.3 CanSMGeneral

SWS Item	ECUC_CanSM_00314 :
Container Name	CanSMGeneral
Description	Container for general pre-compile parameters of the CanSM module
Configuration Parameters	

SWS Item	ECUC_CanSM_00133 :		
Name	CanSMDevErrorDetect		
Description	Switches the development error detection and notification on or off. <ul style="list-style-type: none"> true: detection and notification is enabled. false: detection and notification is disabled. 		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Value	false		

Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_CanSM_00347 :		
Name	CanSMGetBusOffDelayFunction		
Description	This parameter configures the name of the <User_GetBusOffDelay> callout function, which is used by CanSM to acquire an additional L1/L2 delay time. This function is only called for channels where CanSMEnableBusOffDelay is enabled.		
Multiplicity	0..1		
Type	EcucFunctionNameDef		
Default value	--		
maxLength	--		
minLength	--		
regularExpression	--		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_CanSM_00348 :		
Name	CanSMGetBusOffDelayHeader		
Description	This parameter configures the header file containing the prototype of the <User_GetBusOffDelay> callout function.		
Multiplicity	0..1		
Type	EcucStringParamDef		
Default value	--		
maxLength	--		
minLength	--		
regularExpression	--		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency			

SWS Item	ECUC_CanSM_00345 :		
Name	CanSMIcomSupport		
Description	Selects support of Pretended Network features in CanSM. True: Enabled False: Disabled		
Multiplicity	1		
Type	EcucBooleanParamDef		

Default value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: ECU		

SWS Item	ECUC_CanSM_00312 :		
Name	CanSMMMainFunctionTimePeriod		
Description	This parameter defines the cycle time of the function CanSM_MainFunction in seconds		
Multiplicity	1		
Type	EcucFloatParamDef		
Range]0 .. INF[
Default value	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_CanSM_00344 :		
Name	CanSMPncSupport		
Description	Enables or disables support of partial networking. False: Partial Networking is disabled True: Partial Networking is enabled		
Multiplicity	0..1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local dependency: This parameter shall be available only if ComMPncSupport is enabled in ComM		

SWS Item	ECUC_CanSM_00343 :		
Name	CanSMSetBaudrateApi		
Description	The support of the Can_SetBaudrate API is optional. If this parameter is set to true the Can_SetBaudrate API shall be supported. Otherwise the API is not supported.		
Multiplicity	0..1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	

Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: ECU		

SWS Item	ECUC_CanSM_00349 :		
Name	CanSMTxOfflineActiveSupport		
Description	Determines whether the ECU passive feature is supported by CanSM. True: Enabled False: Disabled		
Multiplicity	0..1		
Type	EcucBooleanParamDef		
Default value	--		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local dependency: CanIfTxOfflineActiveSupport		

SWS Item	ECUC_CanSM_00311 :		
Name	CanSMVersionInfoApi		
Description	Activate/Deactivate the version information API (CanSM_GetVersionInfo). true: version information API activated false: version information API deactivated		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

No Included Containers

10.2.4 CanSMMManagerNetwork

SWS Item	ECUC_CanSM_00126 :
Container Name	CanSMMManagerNetwork
Description	This container contains the CAN network specific parameters of each CAN network
Configuration Parameters	

SWS Item	ECUC_CanSM_00131 :		
Name	CanSMBorCounterL1ToL2		
Description	This threshold defines the count of bus-offs until the bus-off recovery switches from level 1 (short recovery time) to level 2 (long recovery time).		

Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	--		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

SWS Item	ECUC_CanSM_00128 :		
Name	CanSMBorTimeL1		
Description	This time parameter defines in seconds the duration of the bus-off recovery time in level 1 (short recovery time).		
Multiplicity	1		
Type	EcucFloatParamDef		
Range	[0 .. 65.535]		
Default value	--		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

SWS Item	ECUC_CanSM_00129 :		
Name	CanSMBorTimeL2		
Description	This time parameter defines in seconds the duration of the bus-off recovery time in level 2 (long recovery time).		
Multiplicity	1		
Type	EcucFloatParamDef		
Range	[0 .. 65.535]		
Default value	--		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

SWS Item	ECUC_CanSM_00130 :		
Name	CanSMBorTimeTxEnsured		
Description	This parameter defines in seconds the duration of the bus-off event check. This check assesses, if the recovery has been successful after the recovery reenables the transmit path. If a new bus-off occurs during this time period, the CanSM assesses this bus-off as sequential bus-off without successful recovery. Because a bus-off only can be detected, when PDUs are transmitted, the time has to be great enough to ensure that PDUs are transmitted again (e. g. time period of the fastest cyclic transmitted PDU of the COM module / ComTxModeTimePeriodFactor).		
Multiplicity	1		
Type	EcucFloatParamDef		
Range	[0 .. 65.535]		
Default value	--		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD

Scope / Dependency	scope: local dependency: CANSM_BOR_TX_CONFIRMATION_POLLING disabled
---------------------------	--

SWS Item	ECUC_CanSM_00339 :		
Name	CanSMBorTxConfirmationPolling		
Description	This parameter shall configure, if the CanSM polls the CanIf_GetTxConfirmationState API to decide the bus-off state to be recovered instead of using the CanSMBorTimeTxEnsured parameter for this decision.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_CanSM_00346 :		
Name	CanSMEnableBusOffDelay		
Description	This parameter defines if the <User_GetBusOffDelay> shall be called for this network.		
Multiplicity	0..1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_CanSM_00161 :		
Name	CanSMComMNetworkHandleRef		
Description	Unique handle to identify one certain CAN network. Reference to one of the network handles configured for the ComM.		
Multiplicity	1		
Type	Symbolic name reference to [ComMChannel]		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local dependency: ComM		

SWS Item	ECUC_CanSM_00137 :		
Name	CanSMTransceiverId		
Description	ID of the CAN transceiver assigned to the configured network handle. Reference to one of the transceivers managed by the CanIf module.		
Multiplicity	0..1		
Type	Symbolic name reference to [CanIfTrcvCfg]		
Post-Build Variant	true		

Multiplicity			
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local dependency: CanIf		

Included Containers		
Container Name	Multiplicity	Scope / Dependency
CanSMController	1..*	This container contains the controller IDs assigned to a CAN network.
CanSMDemEventParameterRefs	0..1	Container for the references to DemEventParameter elements which shall be invoked using the API Dem_SetEventStatus in case the corresponding error occurs. The EventId is taken from the referenced DemEventParameter's DemEventId symbolic value. The standardized errors are provided in this container and can be extended by vendor-specific error references.

10.2.5 CanSMController

SWS Item	ECUC_CanSM_00338 :
Container Name	CanSMController
Description	This container contains the controller IDs assigned to a CAN network.
Configuration Parameters	

SWS Item	ECUC_CanSM_00141 :		
Name	CanSMControllerId		
Description	Unique handle to identify one certain CAN controller. Reference to one of the CAN controllers managed by the CanIf module.		
Multiplicity	1		
Type	Symbolic name reference to [CanIfCtrlCfg]		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local dependency: CanIf		

No Included Containers

10.2.6 CanSMDemEventParameterRefs

SWS Item	ECUC_CanSM_00127 :
Container Name	CanSMDemEventParameterRefs
Description	Container for the references to DemEventParameter elements which shall be invoked using the API Dem_SetEventStatus in case the corresponding

	error occurs. The EventId is taken from the referenced DemEventParameter's DemEventId symbolic value. The standardized errors are provided in this container and can be extended by vendor-specific error references.		
Configuration Parameters			
SWS Item	ECUC_CanSM_00070 :		
Name	CANSM_E_BUS_OFF		
Description	Reference to configured DEM event to report bus off errors for this CAN network.		
Multiplicity	0..1		
Type	Symbolic name reference to [DemEventParameter]		
Post-Build Variant Multiplicity	true		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local dependency: Dem		
No Included Containers			

10.3 Published Information

For details refer to the chapter 10.3 “Published Information” in *SWS_BSWGeneral*

11 CanSM unspecific / not applicable requirements

[SWS_CanSM_00652] [The following requirements are not applicable to this specification, because they are either general BSW requirements, which apply to all BSW modules and not only especially to the CanSM module or they are not applicable at all.] (SRS_BSW_00170, SRS_BSW_00375, SRS_BSW_00395, SRS_BSW_00416, SRS_BSW_00437, SRS_BSW_00168, SRS_BSW_00423, SRS_BSW_00426, SRS_BSW_00427, SRS_BSW_00428, SRS_BSW_00429, SRS_BSW_00432, SRS_BSW_00433, SRS_BSW_00336, SRS_BSW_00417, SRS_BSW_00161, SRS_BSW_00162, SRS_BSW_00005, SRS_BSW_00347, SRS_BSW_00314, SRS_BSW_00353, SRS_BSW_00361, SRS_BSW_00377, SRS_BSW_00308, SRS_BSW_00309, SRS_BSW_00360, SRS_BSW_00341, SRS_BSW_00439, SRS_BSW_00440, SRS_BSW_00004, SRS_BSW_00006, SRS_BSW_00007, SRS_BSW_00009, SRS_BSW_00010, SRS_BSW_00158, SRS_BSW_00159, SRS_BSW_00160, SRS_BSW_00164, SRS_BSW_00167, SRS_BSW_00172, SRS_BSW_00300, SRS_BSW_00301, SRS_BSW_00302, SRS_BSW_00305, SRS_BSW_00306, SRS_BSW_00307, SRS_BSW_00310, SRS_BSW_00312, SRS_BSW_00318, SRS_BSW_00321, SRS_BSW_00323, SRS_BSW_00325, SRS_BSW_00327, SRS_BSW_00328,, SRS_BSW_00330, SRS_BSW_00331, SRS_BSW_00334, SRS_BSW_00335, SRS_BSW_00339, SRS_BSW_00342, SRS_BSW_00343, SRS_BSW_00346, SRS_BSW_00348, SRS_BSW_00350, SRS_BSW_00357, SRS_BSW_00360, SRS_BSW_00369, SRS_BSW_00371, SRS_BSW_00373, SRS_BSW_00374, SRS_BSW_00378, SRS_BSW_00379, SRS_BSW_00380, SRS_BSW_00383, SRS_BSW_00384, SRS_BSW_00385, SRS_BSW_00386, SRS_BSW_00388, SRS_BSW_00389, SRS_BSW_00390, SRS_BSW_00392, SRS_BSW_00393, SRS_BSW_00394, SRS_BSW_00396, SRS_BSW_00397, SRS_BSW_00398, SRS_BSW_00399, SRS_BSW_00400, SRS_BSW_00401, SRS_BSW_00402, SRS_BSW_00408, SRS_BSW_00409, SRS_BSW_00410, SRS_BSW_00411, SRS_BSW_00413, SRS_BSW_00415, SRS_BSW_00419, SRS_BSW_00422, SRS_BSW_00438, SRS_BSW_00441, SRS_BSW_00442, SRS_BSW_00448, SRS_BSW_00449, SRS_BSW_00450, SRS_BSW_00451, SRS_BSW_00452, SRS_BSW_00453, , SRS_BSW_00454, SRS_BSW_00456, SRS_BSW_00457, SRS_BSW_00458, SRS_BSW_00459, SRS_BSW_00460, SRS_BSW_00461, SRS_BSW_00462, SRS_BSW_00463, SRS_BSW_00465, SRS_BSW_00466, SRS_BSW_00467, SRS_BSW_00469, SRS_BSW_00470, SRS_BSW_00471, SRS_BSW_00472, SRS_Can_01001, SRS_Can_01002, SRS_Can_01003, SRS_Can_01004, SRS_Can_01005, SRS_Can_01006, SRS_Can_01007, SRS_Can_01008, SRS_Can_01009, SRS_Can_01011, SRS_Can_01013, SRS_Can_01014, SRS_Can_01015, SRS_Can_01016, SRS_Can_01018, SRS_Can_01020, SRS_Can_01021, SRS_Can_01022, SRS_Can_01023, SRS_Can_01027, SRS_Can_01028, SRS_Can_01029, SRS_Can_01032, SRS_Can_01033, SRS_Can_01034, SRS_Can_01035, SRS_Can_01036, SRS_Can_01037, SRS_Can_01038, SRS_Can_01039, SRS_Can_01041, SRS_Can_01042, SRS_Can_01043, SRS_Can_01045, SRS_Can_01049, SRS_Can_01051, SRS_Can_01053, SRS_Can_01054, SRS_Can_01055, SRS_Can_01058, SRS_Can_01059, SRS_Can_01060, SRS_Can_01061, SRS_Can_01062, SRS_Can_01065, SRS_Can_01066, SRS_Can_01068, SRS_Can_01069, SRS_Can_01071, SRS_Can_01073, SRS_Can_01074, SRS_Can_01075, SRS_Can_01076, SRS_Can_01078, SRS_Can_01079, SRS_Can_01081,

SRS_Can_01082, SRS_Can_01086, SRS_Can_01090, SRS_Can_01091,
SRS_Can_01092, SRS_Can_01095, SRS_Can_01096, SRS_Can_01097,
SRS_Can_01098, SRS_Can_01099, SRS_Can_01100, SRS_Can_01101,
SRS_Can_01103, SRS_Can_01107, SRS_Can_01108, SRS_Can_01109,
SRS_Can_01110, SRS_Can_01111, SRS_Can_01112, SRS_Can_01114,
SRS_Can_01115, SRS_Can_01116, SRS_Can_01117, SRS_Can_01121,
SRS_Can_01122, SRS_Can_01125, SRS_Can_01126, SRS_Can_01129,
SRS_Can_01130, SRS_Can_01131, SRS_Can_01132, SRS_Can_01134,
SRS_Can_01135, SRS_Can_01136, SRS_Can_01138, SRS_Can_01139,
SRS_Can_01140, SRS_Can_01141, SRS_Can_01143, SRS_Can_01147,
SRS_Can_01148, SRS_Can_01149, SRS_Can_01150, SRS_Can_01151,
SRS_Can_01153, SRS_Can_01154, SRS_Can_01155, SRS_Can_01156,
SRS_Can_01157, SRS_Can_01159, SRS_Can_01160, SRS_Can_01161,
SRS_Can_01162, SRS_Can_01163, SRS_ModeMgm_00049,
SRS_ModeMgm_09001, SRS_ModeMgm_09009, SRS_ModeMgm_09017,
SRS_ModeMgm_09028, SRS_ModeMgm_09071, SRS_ModeMgm_09072,
SRS_ModeMgm_09078, SRS_ModeMgm_09080, SRS_ModeMgm_09081,
SRS_ModeMgm_09083, SRS_ModeMgm_09084, SRS_ModeMgm_09085,
SRS_ModeMgm_09087, SRS_ModeMgm_09089, SRS_ModeMgm_09090,
SRS_ModeMgm_09097, SRS_ModeMgm_09098, SRS_ModeMgm_09100,
SRS_ModeMgm_09101, SRS_ModeMgm_09102, SRS_ModeMgm_09104,
SRS_ModeMgm_09106, SRS_ModeMgm_09107, SRS_ModeMgm_09109,
SRS_ModeMgm_09110, SRS_ModeMgm_09112, SRS_ModeMgm_09113,
SRS_ModeMgm_09114, SRS_ModeMgm_09115, SRS_ModeMgm_09116,
SRS_ModeMgm_09118, SRS_ModeMgm_09119, SRS_ModeMgm_09120,
SRS_ModeMgm_09122, SRS_ModeMgm_09125, SRS_ModeMgm_09126,
SRS_ModeMgm_09127, SRS_ModeMgm_09128, SRS_ModeMgm_09132,
SRS_ModeMgm_09133, SRS_ModeMgm_09136, SRS_ModeMgm_09141,
SRS_ModeMgm_09143, SRS_ModeMgm_09145, SRS_ModeMgm_09146,
SRS_ModeMgm_09147, SRS_ModeMgm_09149, SRS_ModeMgm_09155,
SRS_ModeMgm_09156, SRS_ModeMgm_09157, SRS_ModeMgm_09158,
SRS_ModeMgm_09159, SRS_ModeMgm_09160, SRS_ModeMgm_09161,
SRS_ModeMgm_09162, SRS_ModeMgm_09163, SRS_ModeMgm_09164,
SRS_ModeMgm_09165, SRS_ModeMgm_09166, SRS_ModeMgm_09168,
SRS_ModeMgm_09169, SRS_ModeMgm_09172, SRS_ModeMgm_09173,
SRS_ModeMgm_09174, SRS_ModeMgm_09175, SRS_ModeMgm_09176,
SRS_ModeMgm_09177, SRS_ModeMgm_09178, SRS_ModeMgm_09179,
SRS_ModeMgm_09180, SRS_ModeMgm_09182, SRS_ModeMgm_09183,
SRS_ModeMgm_09184, SRS_ModeMgm_09185, SRS_ModeMgm_09186,
SRS_ModeMgm_09187, SRS_ModeMgm_09188, SRS_ModeMgm_09189,
SRS_ModeMgm_09190, SRS_ModeMgm_09194, SRS_ModeMgm_09199,
SRS_ModeMgm_09207, SRS_ModeMgm_09220, SRS_ModeMgm_09221,
SRS_ModeMgm_09222, SRS_ModeMgm_09223, SRS_ModeMgm_09225,
SRS_ModeMgm_09226, SRS_ModeMgm_09228, SRS_ModeMgm_09229,
SRS_ModeMgm_09230, SRS_ModeMgm_09231, SRS_ModeMgm_09232,
SRS_ModeMgm_09233, SRS_ModeMgm_09234, SRS_ModeMgm_09235,
SRS_ModeMgm_09236, SRS_ModeMgm_09237, SRS_ModeMgm_09238,
SRS_ModeMgm_09239, SRS_ModeMgm_09240, SRS_ModeMgm_09241,
SRS_ModeMgm_09242, SRS_ModeMgm_09243, SRS_ModeMgm_09244,
SRS_ModeMgm_09245, SRS_ModeMgm_09246, SRS_ModeMgm_09247,

SRS_ModeMgm_09248, SRS_ModeMgm_09249, SRS_ModeMgm_09250,
SRS_ModeMgm_09251, SRS_ModeMgm_09252, SRS_ModeMgm_09253,
SRS_ModeMgm_09254, SRS_ModeMgm_09255, SRS_ModeMgm_09256,
SRS_ModeMgm_09270, SRS_ModeMgm_09271, SRS_ModeMgm_09272,
SRS_ModeMgm_09274, SRS_ModeMgm_09275, SRS_ModeMgm_09276,
SRS_ModeMgm_09277)