


PiEyeR – Enhanced Thermal Camera for Raspberry Pi

v. 2017-11-26 r.grokkett

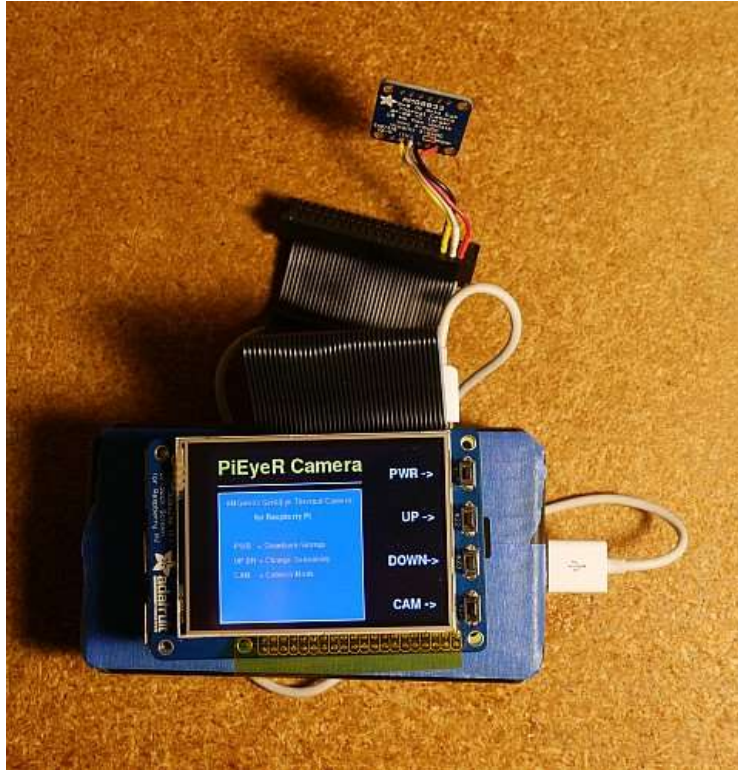

Overview

The Adafruit AMG8833 IR Thermal Camera board can provide a “FLIR™”-like imaging camera at about 1/10th the price of previous IR Thermal imaging units. Of course, the resolution and sensitivity are not as high as more advanced cameras, but hey, for \$39 it’s a great deal.

Note that IR Thermal Cameras are NOT the same as NOIR cameras. The former uses only the heat given off by the object being imaged, while the latter requires an infrared light source such as IR LEDs to illuminate the object.

With this project, I took the excellent Adafruit tutorial “Raspberry Pi Thermal Camera” by Dean Miller and added extra functionality to the software and hardware.

The PiTFT display uses Adafruit's custom Linux Kernel. (*See below*) This project only needs the Jessie Lite-based PiTFT Resitive Image, as it does not use the GUI.

New Features:

- Safely shutdown/power up Raspberry
- Automatically runs software at powerup

- Battery Powered for portability
- Uses PiTFT GPIO buttons
- Sensitivity controls
- Potential for future additions

Hardware

- Raspberry Pi 3 (best) or Raspberry Pi W.
- Adafruit AMG8833 IR Thermal Camera Breakout
<https://www.adafruit.com/product/3538>
- PiTFT Plus Assembled 320x240 2.8" TFT + Resistive Touchscreen
<https://www.adafruit.com/product/2298>
- Faceplate and case for piTFT and RaspberryPi 3
<https://www.adafruit.com/product/2807>
<https://www.adafruit.com/product/2253>
- Adafruit 40 Pin GPIO Cable
<https://www.adafruit.com/product/1988>
- Adafruit 2X20 Pin IDC Box Header
<https://www.adafruit.com/product/1993>
- 5V USB Battery (such as external cellphone rechargeable) 3000mah or larger
- 4GB or larger micro SD card for Raspberry
- Wire, connectors, etc. to match your connections
-

Software

- Custom Raspbian Jessie Lite for PiTFT (*described below*)
- Adafruit Libraries for PiTFT and AMG8833 (*described below*)
- SSH & Putty for Windows
- RaspiThermalCam from Github
<https://github.com/rgrokkett/RaspiThermalCam>

I. Preliminary Setup

If you already have set up a Raspberry Pi with an Adafruit PiTFT Plus 320x240 screen and AMG8833 Thermal Camera module, then you can skip to the RaspiThermalCam Software in section II. below.

Install PiTFT Display

Because the PiTFT Resistive Touch screen requires modifications to the Raspbian kernel, it is STRONGLY suggested to start fresh with the pre-built Raspbian Jessie image from Adafruit. This already contains all the necessary drivers for the PiTFT screen.

Note that this is going to be a “headless” installation, thus will not be using the Raspbian GUI. You will be using the linux command-line to configure and program the Raspberry. The easiest way to access is to set up SSH and WiFi or Ethernet connectivity and use a remote terminal program like Putty.

The below instructions are taken from Adafruit PiTFT tutorial at the URL below. NOTE that if you have difficulties or want to see the full instructions please visit this site:

<https://learn.adafruit.com/adafruit-pitft-28-inch-resistive-touchscreen-display-raspberry-pi/easy-install>

PiTFT Installation Steps


- 1) Download the piTFT Raspian Jessie Lite from Adafruit to a PC:
<https://s3.amazonaws.com/adafruit-raspberry-pi/2016-10-18-pitft-28r-lite.zip>
- 2) Install this image on a 4GB or larger SD card. If you need help here, check out instructions at <https://www.raspberrypi.org/documentation/installation/installing-images/>
- 3) Insert the micro SD card into the Pi.
- 4) Before installing the piTFT onto the Pi, plug the 40 pin GPIO Cable into the back of the piTFT. BE SURE to position the GRAY line mark on the cable on PIN 1 of the piTFT male connector.
Note that there are two connectors on the PiTFT module; a female connector that plugs into the Raspberry Pi, and a male connector that this cable connects to.



This will be used to connect the Thermal Camera module later.

(Actually, you only need 4 wires to connect the camera, but due to dimensions, it's easiest to just use this ready-made cable as is.)

- 5) Now plug in the PiTFT onto the Raspberry Pi itself. Again, look at the photos to see which way it should go. (gray to pin 1)
- 6) Verify that the GRAY line mark on the GPIO cable is positioned as shown.

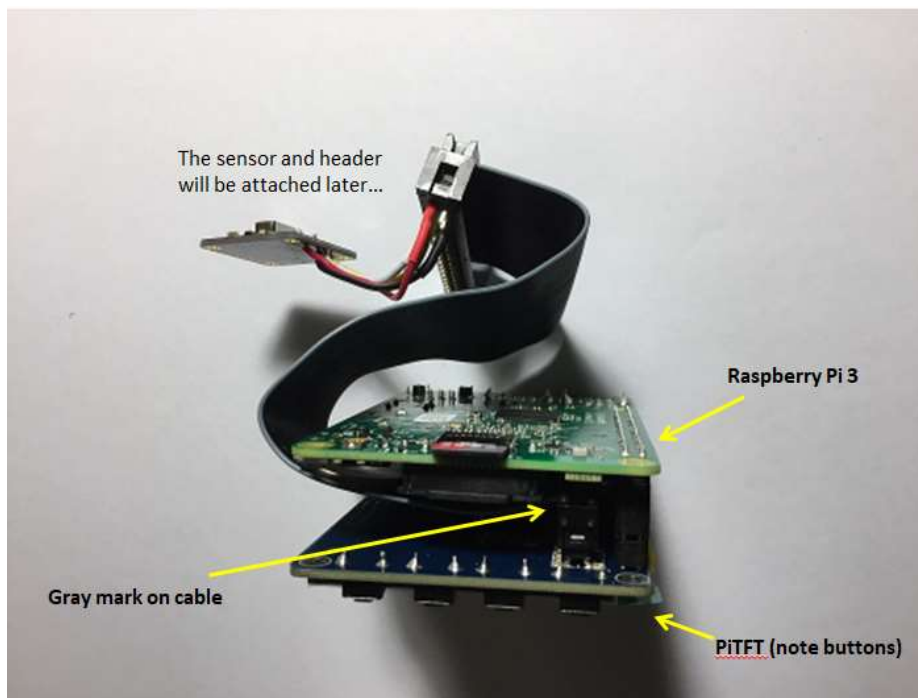

Now you are ready to test the PiTFT and Raspberry Pi. (The IR Image Sensor will be installed later).

- 7) Connect a USB keyboard into one of the Raspi ports. (No mouse is needed). This will make it easier to initially log in and find the IP address that is assigned. Otherwise, you'll need to check your router for the IP assignment.
- 8) For network connectivity, the easiest is just plug in an Ethernet cable, though you can set up WiFi manually via `wpa_supplicant.conf` if you prefer.

Note that once the IR camera is completed, you won't need networking, so wifi isn't needed.

- 9) Connect 5V power and let your pi boot. If all goes well, after a few seconds, the PiTFT screen should show boot messages and then a login prompt.





```
cd Adafruit_Python_GPIO
sudo python setup.py install
sudo apt-get install -y python-scipy python-pygame
sudo pip install colour Adafruit_AMG88xx
```

This installs all the packages and libraries needed to drive the IR Image Sensor.

2) Enable the I2C Interface for the IP camera:

```
sudo raspi-config
```

Navigate to **9 Advanced Options** and select **A7 I2C** then select **Finish**

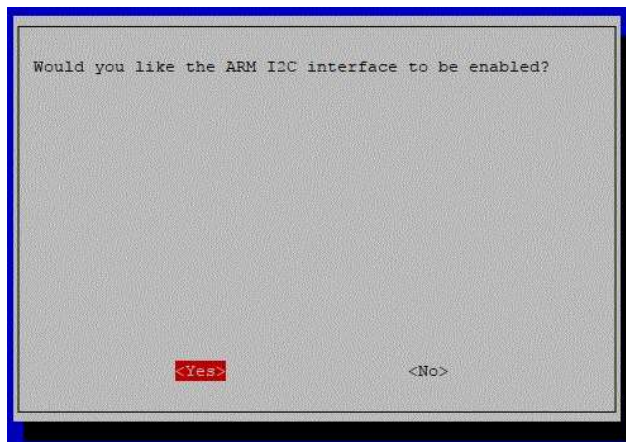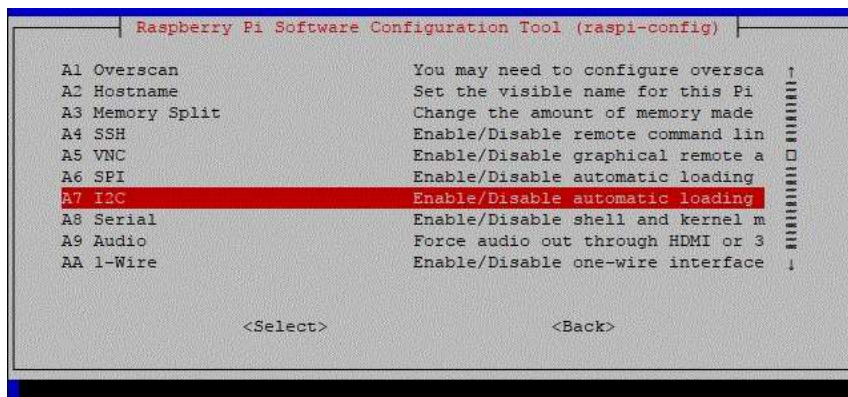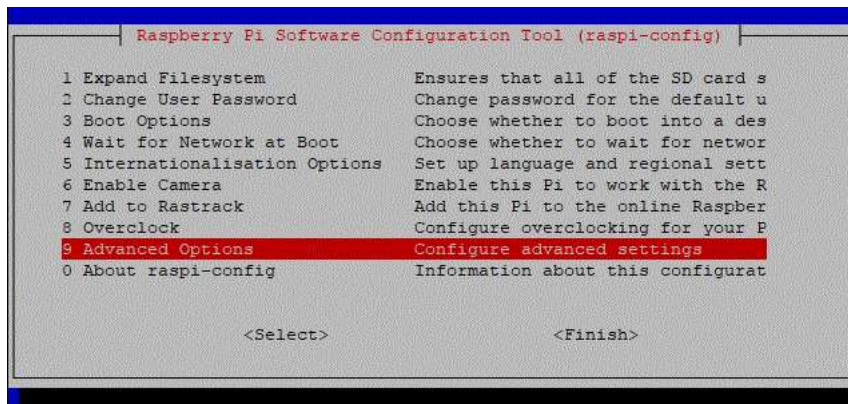

- 3) Shutdown Raspi and unplug the power cable (and Ethernet cable, if connected):

```
sudo shutdown -h now
```

Wiring the IR Module



You will be connecting only 4 pins of the AMG8833 IP to the 2x20 IDC Box Header and plugging this into the 40 wire GPIO cable.



For the most reliable wiring connectivity, I suggest soldering 4 short wires to the pins on the IR module and to the 2x20 Header. Use a needle point soldering iron and magnifier for best results. Use heat shrink tubing to protect the connections.

Be sure to note the direction positioning of the Header. **There is a cutout key and a tiny arrow marking pin 1.** (This is inverted from GPIO diagrams due to the cable/header arrangement)

Also note the direction that the IR camera should be pointing away from the Raspi.

IR MODULE	RASPBERRY PI (2x20 Box Header)	DESC
VIN	Pin 1	3.3V
GND	Pin 6	Ground
SDA	Pin 3	SDA
SCL	Pin 5	SCL

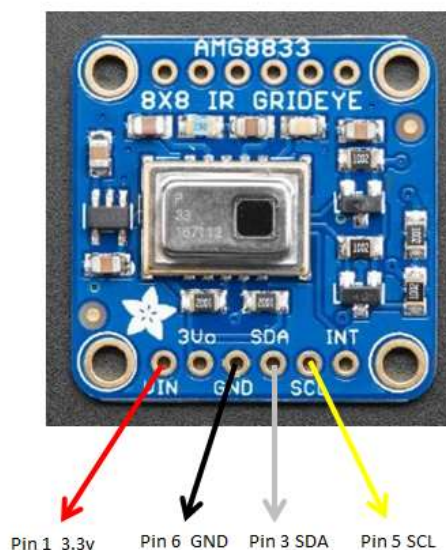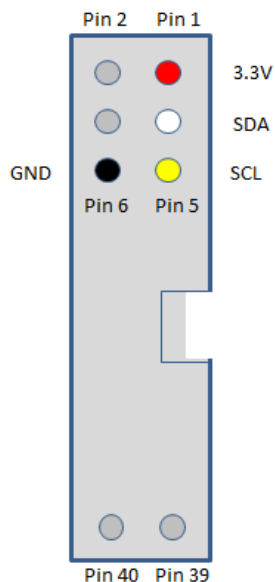

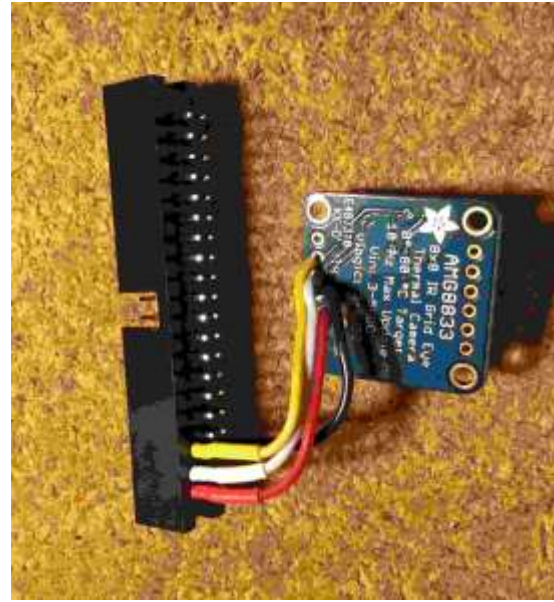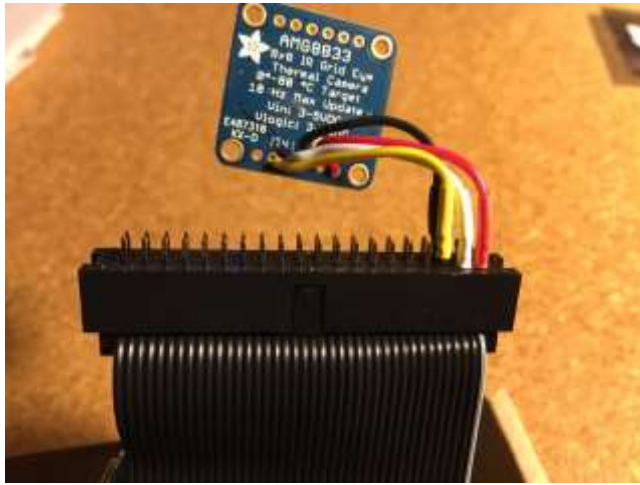

- 4) Plug in the Box Header onto the GPIO cable, noting that pin 1 of the header should match the gray marked wire on the cable.

Smoke Test Time (Please no smoking here!)

- 5) Plug in the 5V power and Ethernet cable again.
- 6) Log into the Raspberry via SSH (or using the PiTFT screen and keyboard)
- 7) Run `$ sudo i2cdetect -y 1`

```
pi@raspberrypi:~ $ sudo i2cdetect -y 1
    0  1  2  3  4  5  6  7  8  9  a  b  c  d  e  f
00:  --  --  --  --  --  --  --  --  --  --  --  --  --  --  --
10:  --  --  --  --  --  --  --  --  --  --  --  --  --  --  --
20:  --  --  --  --  --  --  --  --  --  --  --  --  --  --  --
30:  --  --  --  --  --  --  --  --  --  --  --  --  --  --  --
40:  --  --  --  --  --  --  --  --  --  --  --  --  --  --  --
50:  --  --  --  --  --  --  --  --  --  --  --  --  --  --  --
60:  --  --  --  --  --  --  --  --  69  --  --  --  --  --  --
70:  --  --  --  --  --  --  --  --  --  --  --  --  --  --  --
pi@raspberrypi:~ $
```

You should see the “69” entry. If not, did you enable the I2C interface via raspi-config? Also verify wiring!

- 8) Run the Example code!

```
cd ~/
git clone https://github.com/adafruit/Adafruit_AMG88xx_python.git
cd Adafruit_AMG88xx_python/examples
sudo python thermal_cam.py
```


If all is well, you should see a heat map image when you wave your hand or stand in front of the camera!



Once completed, the camera should be facing forward, like a digital camera:
The LCD screen towards you and camera towards (hot) object.

II. RaspiThermalCam Software

Now that you have a working Raspberry Pi Thermal Camera, the next step is to add extra software functionality and package everything into a more portable unit.

- 1) Install GIT, if needed:

```
$ sudo apt-install git
```

- 2) Download the RaspiThermalCam software

```
$ cd ~/
```

```
$ git clone https://github.com/rgrogett/RaspiThermalCam.git
```


- 3) Run the Installation script

```
$ cd RaspiThermalCam
```

```
$ ./install.sh
```

```
$ sudo reboot
```

Once rebooted, you should see the new PiEyeR screen.

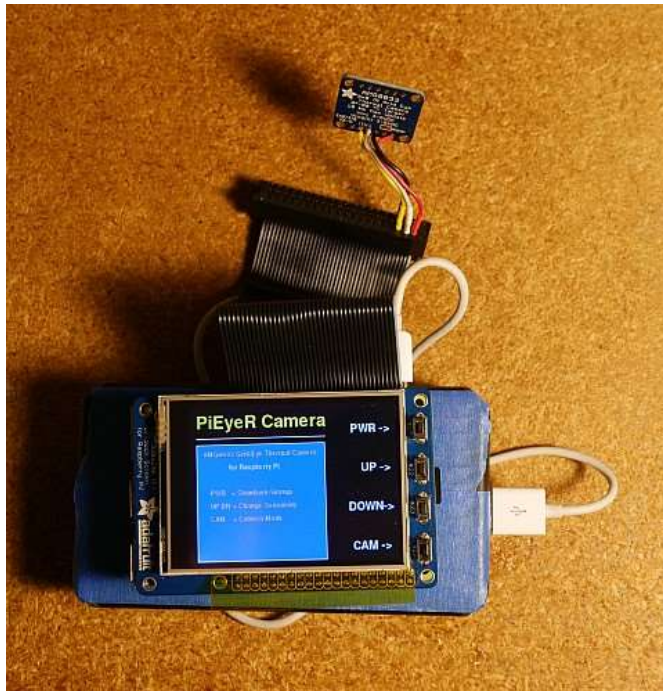

See Troubleshooting if needed.

The 4 buttons on the TFT screen have been re-mapped to GPIO functions as shown:

Button	GPIO	Desc
1	17	Safely Shutdown/Start up Raspberry (Does not remove 5V power, must be done usually via the 5V USB battery on/off switch)
2	22	Increase Sensitivity (while in Camera Mode)
3	23	Decrease Sensitivity (while in Camera Mode)
4	27	Start/Stop Camera Mode

(If needed, you can remap the buttons to your TFT screen's GPIO pins by editing the "raspitherm.py" program.)

Future Features

- 3D Printed front case parts for the camera
- Switch to using Raspberry Pi Zero W for lower cost & power/smaller size
- Add new mode button features for middle buttons
- Get pygame Touch Screen working for PiTFT
- Add Camera Screen Snapshot feature

Packaging Construction (future)

If you are going to use this outside, you should ruggedize it by soldering all wiring (or verify strong connections) and building a case. I used a simple 3D printed case I designed.

This also will use the Adafruit front faceplate, buttons and case for the Raspberry.

3D Printed Case (future)

This document and GitHub will be updated with the .stl parts and instructions, once completed.

It's not fancy and you may need to modify it, if your components are larger than what I used.

Troubleshooting

****I don't see any new screen, only the boot messages and login.****

Did you run the ./install.sh script?

Try running `$ crontab -l` and see if you see a @reboot line:

```
@reboot sudo python /home/pi/RaspiThermalCam/raspitherm.py >/dev/null 2>&1
```

You did set up your Pi Thermal Camera as detailed in the Adafruit tutorial?

(<https://learn.adafruit.com/adafruit-amg8833-8x8-thermal-camera-sensor/raspberry-pi-thermal-camera>)

****I get a python error message****

Most likely there is a missing python package. The last line of the Python error should say what is missing. Try Googling that message.

Else, leave an Issue at Github.

****My screen is mangled up, but the buttons seem to work****

Are you using the PiTFT Plus 2.8" 320x240 screen?

****My buttons don't work or are on the bottom not side of the PiTFT****

You have a different screen. If you have GPIO buttons on bottom of TFT, you can try remapping them in the raspitherm.py program.

****The Touchscreen doesn't work****

Bugs in the SDL software used by pygame make for inconsistent operation of the touch screen. We have to wait for a better solution. This program doesn't use the touch, just buttons.

****My Camera screen is all BLUE or all RED****

Press the Sensitivity buttons (middle two) to increase/decrease sensitivity

****My Camera doesn't work****

Try manually running tools/thermal_cam.py program. This is the same program from Adafruit with no modifications.

You may need to kill the raspitherm.py program first by editing the crontab:

```
crontab -e
```

comment out the @reboot line

```
#@reboot ...
```

****What can I see with it?****

Find a cat. They glow hot!
So do water heaters!

