

# **M66** Hardware Design

**GSM/GPRS Module Series**

Rev. M66\_Hardware\_Design\_V1.1

Date: 2014-11-24



**Our aim is to provide customers with timely and comprehensive service. For any assistance, please contact our company headquarters:**

**Quectel Wireless Solutions Co., Ltd.**

Office 501, Building 13, No.99, Tianzhou Road, Shanghai, China, 200233

Tel: +86 21 5108 6236

Mail: [info@quectel.com](mailto:info@quectel.com)

**Or our local office, for more information, please visit:**

<http://www.quectel.com/support/salesupport.aspx>

**For technical support, to report documentation errors, please visit:**

<http://www.quectel.com/support/techsupport.aspx>

**GENERAL NOTES**

QUECTEL OFFERS THIS INFORMATION AS A SERVICE TO ITS CUSTOMERS. THE INFORMATION PROVIDED IS BASED UPON CUSTOMERS' REQUIREMENTS. QUECTEL MAKES EVERY EFFORT TO ENSURE THE QUALITY OF THE INFORMATION IT MAKES AVAILABLE. QUECTEL DOES NOT MAKE ANY WARRANTY AS TO THE INFORMATION CONTAINED HEREIN, AND DOES NOT ACCEPT ANY LIABILITY FOR ANY INJURY, LOSS OR DAMAGE OF ANY KIND INCURRED BY USE OF OR RELIANCE UPON THE INFORMATION. ALL INFORMATION SUPPLIED HEREIN IS SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

**COPYRIGHT**

THIS INFORMATION CONTAINED HERE IS PROPRIETARY TECHNICAL INFORMATION OF QUECTEL CO., LTD. TRANSMITTABLE, REPRODUCTION, DISSEMINATION AND EDITING OF THIS DOCUMENT AS WELL AS UTILIZATION OF THIS CONTENTS ARE FORBIDDEN WITHOUT PERMISSION. OFFENDERS WILL BE HELD LIABLE FOR PAYMENT OF DAMAGES. ALL RIGHTS ARE RESERVED IN THE EVENT OF A PATENT GRANT OR REGISTRATION OF A UTILITY MODEL OR DESIGN.

***Copyright © Quectel Wireless Solutions Co., Ltd. 2014. All rights reserved.***

# About the Document

## History

| Revision | Date       | Author    | Description  |
|----------|------------|-----------|--|
| 1.0      | 2014-08-07 | Felix YIN | Initial  |
| 1.1      | 2014-11-24 | Felix YIN | <ol style="list-style-type: none"><li>1. Modified output power of Bluetooth</li><li>2. Modified the timing of the RFTXMON signal</li><li>3. Updated Figure 5: Reference circuit for power supply</li><li>4. Modified description of RTC and SIM card interface</li><li>5. Modified description of UART Application</li><li>6. Deleted the over-voltage automatic shutdown function</li><li>7. Modified the antenna gain in the Table 24</li><li>8. Modified the current consumption information in Section 5.3 &amp; 5.4</li></ol> |

## Contents

|   |           |
|---|-----------|
| About the Document .....                              | 2         |
| Contents .....  | 3         |
| Table Index .....                                     | 6         |
| Figure Index .....                                    | 7         |
| <b>1 Introduction .....</b>                           | <b>9</b>  |
| 1.1. Safety Information .....                         | 10        |
| <b>2 Product Concept .....</b>                        | <b>11</b> |
| 2.1. General Description .....                        | 11        |
| 2.2. Key Features .....                               | 12        |
| 2.3. Functional Diagram .....                         | 14        |
| 2.4. Evaluation Board .....                           | 14        |
| <b>3 Application Interface .....</b>                  | <b>15</b> |
| 3.1. Pin of Module .....                              | 16        |
| 3.1.1. Pin Assignment .....                           | 16        |
| 3.1.2. Pin Description .....                          | 17        |
| 3.2. Operating Modes .....                            | 21        |
| 3.3. Power Supply .....                               | 22        |
| 3.3.1. Power Features of Module .....                 | 22        |
| 3.3.2. Decrease Supply Voltage Drop .....             | 23        |
| 3.3.3. Reference Design For Power Supply .....        | 23        |
| 3.3.4. Monitor Power Supply .....                     | 24        |
| 3.4. Power On and Down Scenarios .....                | 24        |
| 3.4.1. Power On .....                                 | 24        |
| 3.4.2. Power Down .....                               | 26        |
| 3.4.2.1. Power Down Module Using the PWRKEY Pin ..... | 26        |
| 3.4.2.2. Power Down Module Using AT Command .....     | 27        |
| 3.4.2.3. Under-voltage Automatic Shutdown .....       | 28        |
| 3.4.3. Restart .....                                  | 28        |
| 3.5. Power Saving .....                               | 29        |
| 3.5.1. Minimum Functionality Mode .....               | 29        |
| 3.5.2. SLEEP Mode .....                               | 29        |
| 3.5.3. Wake Up Module From SLEEP Mode .....           | 30        |
| 3.5.4. Summary of State Transition .....              | 30        |
| 3.6. RTC Backup .....                                 | 30        |
| 3.7. Serial Interfaces .....                          | 32        |
| 3.7.1. UART Port .....                                | 34        |
| 3.7.1.1. The Feature of UART Port .....               | 34        |
| 3.7.1.2. The Connection of UART .....                 | 35        |
| 3.7.1.3. Firmware Upgrade .....                       | 36        |
| 3.7.2. Debug Port .....                               | 37        |

|          |  |           |
|----------|--|-----------|
| 3.7.3.   | Auxiliary UART Port .....                                      | 38        |
| 3.7.4.   | UART Application .....   | 38        |
| 3.8.     | Audio Interfaces .....   | 40        |
| 3.8.1.   | Decrease TDD Noise and other Noise .....                       | 41        |
| 3.8.2.   | Microphone Interfaces Design .....                             | 41        |
| 3.8.3.   | Receiver and Speaker Interface Design .....                    | 42        |
| 3.8.4.   | Earphone Interface Design .....                                | 44        |
| 3.8.5.   | Audio Characteristics .....                                    | 44        |
| 3.9.     | PCM Interface .....  | 45        |
| 3.9.1.   | Configuration .....  | 45        |
| 3.9.2.   | Timing .....   | 46        |
| 3.9.3.   | Reference Design .....   | 48        |
| 3.9.4.   | AT Command .....   | 48        |
| 3.10.    | SIM Card Interface .....                                       | 49        |
| 3.11.    | ADC .....  | 51        |
| 3.12.    | Behaviors of The RI .....                                      | 51        |
| 3.13.    | Network Status Indication .....                                | 53        |
| 3.14.    | RF Transmitting Signal Indication .....                        | 54        |
| <b>4</b> | <b>Antenna Interface .....</b>                                 | <b>56</b> |
| 4.1.     | GSM Antenna Interface .....                                    | 56        |
| 4.1.1.   | Reference Design .....   | 56        |
| 4.1.2.   | RF Output Power .....  | 57        |
| 4.1.3.   | RF Receiving Sensitivity .....                                 | 58        |
| 4.1.4.   | Operating Frequencies .....                                    | 58        |
| 4.1.5.   | RF Cable Soldering .....                                       | 59        |
| 4.2.     | Bluetooth Antenna Interface .....                              | 59        |
| <b>5</b> | <b>Electrical, Reliability and Radio Characteristics .....</b> | <b>61</b> |
| 5.1.     | Absolute Maximum Ratings .....                                 | 61        |
| 5.2.     | Operating Temperature .....                                    | 61        |
| 5.3.     | Power Supply Ratings .....                                     | 62        |
| 5.4.     | Current Consumption .....                                      | 63        |
| 5.5.     | Electro-static Discharge .....                                 | 65        |
| <b>6</b> | <b>Mechanical Dimensions .....</b>                             | <b>66</b> |
| 6.1.     | Mechanical Dimensions of Module .....                          | 66        |
| 6.2.     | Recommended Footprint .....                                    | 68        |
| 6.3.     | Top View of the Module .....                                   | 69        |
| 6.4.     | Bottom View of the Module .....                                | 69        |
| <b>7</b> | <b>Storage and Manufacturing .....</b>                         | <b>70</b> |
| 7.1.     | Storage .....  | 70        |
| 7.2.     | Soldering .....  | 71        |
| 7.3.     | Packaging .....  | 71        |
| 7.3.1.   | Tape and Reel Packaging .....                                  | 72        |

---

|    |  |    |
|----|--|----|
| 8  | Appendix A Reference.....              | 73 |
| 9  | Appendix B GPRS Coding Scheme .....    | 78 |
| 10 | Appendix C GPRS Multi-slot Class ..... | 80 |

Quectel  
Confidential

## Table Index

|   |    |
|---|----|
| TABLE 1: MODULE KEY FEATURES .....  | 12 |
| TABLE 2: CODING SCHEMES AND MAXIMUM NET DATA RATES OVER AIR INTERFACE ..... | 13 |
| TABLE 3: IO PARAMETERS DEFINITION .....                                     | 17 |
| TABLE 4: PIN DESCRIPTION .....  | 17 |
| TABLE 5: OVERVIEW OF OPERATING MODES .....                                  | 21 |
| TABLE 6: SUMMARY OF STATE TRANSITION .....                                  | 30 |
| TABLE 7: LOGIC LEVELS OF THE UART INTERFACE .....                           | 33 |
| TABLE 8: PIN DEFINITION OF THE UART INTERFACES .....                        | 33 |
| TABLE 9: PIN DEFINITION OF AUDIO INTERFACE .....                            | 40 |
| TABLE 10: TYPICAL ELECTRET MICROPHONE CHARACTERISTICS .....                 | 44 |
| TABLE 11: TYPICAL SPEAKER CHARACTERISTICS .....                             | 44 |
| TABLE 12: PIN DEFINITION OF PCM INTERFACE .....                             | 45 |
| TABLE 13: CONFIGURATION .....   | 45 |
| TABLE 14: QPCMON COMMAND DESCRIPTION .....                                  | 48 |
| TABLE 15: QPCMVOL COMMAND DESCRIPTION .....                                 | 49 |
| TABLE 16: PIN DEFINITION OF THE SIM INTERFACE .....                         | 49 |
| TABLE 17: PIN DEFINITION OF THE ADC .....                                   | 51 |
| TABLE 18: CHARACTERISTICS OF THE ADC .....                                  | 51 |
| TABLE 19: BEHAVIORS OF THE RI .....   | 51 |
| TABLE 20: WORKING STATE OF THE NETLIGHT .....                               | 53 |
| TABLE 21: PIN DEFINITION OF THE RFTXMON .....                               | 54 |
| TABLE 22: PIN DEFINITION OF THE RF_ANT .....                                | 56 |
| TABLE 23: ANTENNA CABLE REQUIREMENTS .....                                  | 57 |
| TABLE 24: ANTENNA REQUIREMENTS .....  | 57 |
| TABLE 25: THE MODULE CONDUCTED RF OUTPUT POWER .....                        | 57 |
| TABLE 26: THE MODULE CONDUCTED RF RECEIVING SENSITIVITY .....               | 58 |
| TABLE 27: THE MODULE OPERATING FREQUENCIES .....                            | 58 |
| TABLE 28: PIN DEFINITION OF THE BT_ANT .....                                | 59 |
| TABLE 29: ABSOLUTE MAXIMUM RATINGS .....                                    | 61 |
| TABLE 30: OPERATING TEMPERATURE .....                                       | 61 |
| TABLE 31: THE MODULE POWER SUPPLY RATINGS .....                             | 62 |
| TABLE 32: THE MODULE CURRENT CONSUMPTION .....                              | 63 |
| TABLE 33: THE ESD ENDURANCE (TEMPERATURE: 25°C, HUMIDITY: 45%) .....        | 65 |
| TABLE 34: RELATED DOCUMENTS .....   | 73 |
| TABLE 35: TERMS AND ABBREVIATIONS .....                                     | 74 |
| TABLE 36: DESCRIPTION OF DIFFERENT CODING SCHEMES .....                     | 78 |
| TABLE 37: GPRS MULTI-SLOT CLASSES .....                                     | 80 |

## Figure Index

|   |    |
|---|----|
| FIGURE 1: MODULE FUNCTIONAL DIAGRAM.....  | 14 |
| FIGURE 2: PIN ASSIGNMENT .....  | 16 |
| FIGURE 3: VOLTAGE RIPPLE DURING TRANSMITTING .....                                  | 22 |
| FIGURE 4: REFERENCE CIRCUIT FOR THE VBAT INPUT .....                                | 23 |
| FIGURE 5: REFERENCE CIRCUIT FOR POWER SUPPLY .....                                  | 24 |
| FIGURE 6: TURN ON THE MODULE WITH AN OPEN-COLLECTOR DRIVER.....                     | 25 |
| FIGURE 7: TURN ON THE MODULE WITH A BUTTON .....                                    | 25 |
| FIGURE 8: TURN-ON TIMING .....  | 26 |
| FIGURE 9: TURN-OFF TIMING .....   | 27 |
| FIGURE 10: TIMING OF RESTARTING SYSTEM.....   | 28 |
| FIGURE 11: VRTC IS SUPPLIED BY A NON-CHARGEABLE BATTERY .....                       | 31 |
| FIGURE 12: VRTC IS SUPPLIED BY A RECHARGEABLE BATTERY .....                         | 31 |
| FIGURE 13: VRTC IS SUPPLIED BY A CAPACITOR .....                                    | 32 |
| FIGURE 14: REFERENCE DESIGN FOR FULL-FUNCTION UART.....                             | 35 |
| FIGURE 15: REFERENCE DESIGN FOR UART PORT.....                                      | 36 |
| FIGURE 16: REFERENCE DESIGN FOR UART PORT WITH HARDWARE FLOW CONTROL .....          | 36 |
| FIGURE 17: REFERENCE DESIGN FOR FIRMWARE UPGRADE.....                               | 37 |
| FIGURE 18: REFERENCE DESIGN FOR DEBUG PORT .....                                    | 37 |
| FIGURE 19: REFERENCE DESIGN FOR AUXILIARY UART PORT .....                           | 38 |
| FIGURE 20: LEVEL MATCH DESIGN FOR 3.3V SYSTEM.....                                  | 38 |
| FIGURE 21: SKETCH MAP FOR RS-232 INTERFACE MATCH.....                               | 39 |
| FIGURE 22: REFERENCE DESIGN FOR AIN .....   | 41 |
| FIGURE 23: HANDSET INTERFACE DESIGN FOR AOUT1 .....                                 | 42 |
| FIGURE 24: SPEAKER INTERFACE DESIGN WITH AN AMPLIFIER FOR AOUT1 .....               | 42 |
| FIGURE 25: HANDSET INTERFACE DESIGN FOR AOUT2 .....                                 | 43 |
| FIGURE 26: SPEAKER INTERFACE DESIGN WITH AN AMPLIFIER FOR AOUT2 .....               | 43 |
| FIGURE 27: EARPHONE INTERFACE DESIGN.....   | 44 |
| FIGURE 28: LONG SYNCHRONIZATION & SIGN EXTENSION DIAGRAM .....                      | 46 |
| FIGURE 29: LONG SYNCHRONIZATION & ZERO PADDING DIAGRAM.....                         | 47 |
| FIGURE 30: SHORT SYNCHRONIZATION & SIGN EXTENSION DIAGRAM.....                      | 47 |
| FIGURE 31: SHORT SYNCHRONIZATION & ZERO PADDING DIAGRAM .....                       | 47 |
| FIGURE 32: REFERENCE DESIGN FOR PCM .....   | 48 |
| FIGURE 33: REFERENCE CIRCUIT FOR SIM INTERFACE WITH THE 6-PIN SIM CARD HOLDER ..... | 50 |
| FIGURE 34: RI BEHAVIOR OF VOICE CALLING AS A RECEIVER .....                         | 52 |
| FIGURE 35: RI BEHAVIOR AS A CALLER .....  | 52 |
| FIGURE 36: RI BEHAVIOR OF URC OR SMS RECEIVED .....                                 | 52 |
| FIGURE 37: REFERENCE DESIGN FOR NETLIGHT .....                                      | 53 |
| FIGURE 38: RFTXMON SIGNAL DURING BURST TRANSMISSION .....                           | 54 |
| FIGURE 39: RFTXMON SIGNAL DURING CALL.....  | 55 |
| FIGURE 40: REFERENCE DESIGN FOR GSM ANTENNA .....                                   | 56 |
| FIGURE 41: RF SOLDERING SAMPLE .....  | 59 |



|  |    |
|--|----|
| FIGURE 42: REFERENCE DESIGN FOR BLUETOOTH ANTENNA .....        | 60 |
| FIGURE 43: M66 MODULE TOP AND SIDE DIMENSIONS (UNIT: MM) ..... | 66 |
| FIGURE 44: M66 MODULE BOTTOM DIMENSIONS (UNIT: MM).....        | 67 |
| FIGURE 45: RECOMMENDED FOOTPRINT (UNIT: MM).....               | 68 |
| FIGURE 46: TOP VIEW OF THE MODULE .....                        | 69 |
| FIGURE 47: BOTTOM VIEW OF THE MODULE .....                     | 69 |
| FIGURE 48: RAMP-SOAK-SPIKE REFLOW PROFILE.....                 | 71 |
| FIGURE 49: TAPE AND REEL SPECIFICATION.....                    | 72 |
| FIGURE 50: DIMENSIONS OF REEL.....                             | 72 |
| FIGURE 51: RADIO BLOCK STRUCTURE OF CS-1, CS-2 AND CS-3.....   | 78 |
| FIGURE 52: RADIO BLOCK STRUCTURE OF CS-4.....                  | 79 |

Quectel  
Confidential

# 1 Introduction

This document defines the M66 module and describes its hardware interface which are connected with the customer application and the air interface.

This document can help you quickly understand module interface specifications, electrical and mechanical details. Associated with application note and user guide, you can use M66 module to design and set up mobile applications easily.

Quectel  
Confidential

## 1.1. Safety Information

The following safety precautions must be observed during all phases of the operation, such as usage, service or repair of any cellular terminal or mobile incorporating M66 module. Manufacturers of the cellular terminal should send the following safety information to users and operating personnel and to incorporate these guidelines into all manuals supplied with the product. If not so, Quectel does not take on any liability for customer failure to comply with these precautions.



Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a mobile while driving (even with a handsfree kit) cause distraction and can lead to an accident. You must comply with laws and regulations restricting the use of wireless devices while driving.



Switch off the cellular terminal or mobile before boarding an aircraft. Make sure it switched off. The operation of wireless appliances in an aircraft is forbidden to prevent interference with communication systems. Consult the airline staff about the use of wireless devices on boarding the aircraft, if your device offers a Airplane Mode which must be enabled prior to boarding an aircraft.



Switch off your wireless device when in hospitals or clinics or other health care facilities. These requests are desinged to prevent possible interference with sentitive medical equipment.



Cellular terminals or mobiles operate over radio frequency signal and cellular network and cannot be guaranteed to connect in all conditions, for example no mobile fee or an invalid SIM card. While you are in this condition and need emergent help, please remember using emergency call. In order to make or receive call, the cellular terminal or mobile must be switched on and in a service area with adequate cellular signal strength.



Your cellular terminal or mobile contains a transmitter and receiver. When it is ON , it receives and transmits radio frequency energy. RF interference can occur if it is used close to TV set, radio, computer or other electric equipment.



In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other cellular terminals. Areas with potentially expositive atmospheres including fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles such as grain, dust or metal powders.

## 2 Product Concept

### 2.1. General Description

M66 is a Quad-band GSM/GPRS engine that works at frequencies of GSM850MHz, EGSM900MHz, DCS1800MHz and PCS1900MHz. The M66 features GPRS multi-slot class 12 and supports the GPRS coding schemes CS-1, CS-2, CS-3 and CS-4. For more details about GPRS multi-slot classes and coding schemes, please refer to the **Appendix B & C**.

With a tiny profile of 15.8mm × 17.7mm × 2.3mm, the module can meet almost all the requirements for M2M applications, including Vehicles and Personal Tracking, Security System, Wireless POS, Industrial PDA, Smart Metering, and Remote Maintenance& Control, etc.

M66 is an SMD type module with LCC package, which can be easily embedded into applications. It provides abundant hardware interfaces like PCM Interface.

Designed with power saving technique, the current consumption of M66 is as low as 1.3 mA in SLEEP mode when DRX is 5.

M66 is integrated with Internet service protocols, such as TCP/UDP, FTP and PPP. Extended AT commands have been developed for you to use these Internet service protocols easily.

M66 supports Bluetooth interface, it is fully compliant with Bluetooth specification 3.0.

The module fully complies with the RoHS directive of the European Union.

## 2.2. Key Features

The following table describes the detailed features of M66 module.

**Table 1: Module Key Features**

| Feature            | Implementation   |
|--------------------|--|
| Power Supply       | Single supply voltage: 3.3V ~ 4.6V<br>Typical supply voltage: 4V   |
| Power Saving       | Typical power consumption in SLEEP mode: 1.3 mA @DRX=5<br>1.2 mA @DRX=9  |
| Frequency Bands    | <ul style="list-style-type: none"> <li>● Quad-band: GSM850, EGSM900, DCS1800, PCS1900.</li> <li>● The module can search these frequency bands automatically</li> <li>● The frequency bands can be set by AT command</li> <li>● Compliant to GSM Phase 2/2+</li> </ul>  |
| GSM Class          | Small MS   |
| Transmitting Power | <ul style="list-style-type: none"> <li>● Class 4 (2W) at GSM850 and EGSM900</li> <li>● Class 1 (1W) at DCS1800 and PCS1900</li> </ul>  |
| GPRS Connectivity  | <ul style="list-style-type: none"> <li>● GPRS multi-slot class 12 (default)</li> <li>● GPRS multi-slot class 1~12 (configurable)</li> <li>● GPRS mobile station class B</li> </ul>   |
| DATA GPRS          | <ul style="list-style-type: none"> <li>● GPRS data downlink transfer: max. 85.6kbps</li> <li>● GPRS data uplink transfer: max. 85.6kbps</li> <li>● Coding scheme: CS-1, CS-2, CS-3 and CS-4</li> <li>● Support the protocols PAP (Password Authentication Protocol) usually used for PPP connections</li> <li>● Internet service protocols TCP/UDP, FTP, PPP, HTTP, NTP, PING</li> <li>● Support Packet Broadcast Control Channel (PBCCH)</li> <li>● Support Unstructured Supplementary Service Data (USSD)</li> </ul> |
| Temperature Range  | <ul style="list-style-type: none"> <li>● Normal operation: -35°C ~ +80°C</li> <li>● Restricted operation: -40°C ~ -35°C and +80°C ~ +85°C <sup>1)</sup></li> <li>● Storage temperature: -45°C ~ +90°C</li> </ul>   |
| Bluetooth          | <ul style="list-style-type: none"> <li>● Support Bluetooth specification 3.0</li> <li>● Output Power: Class 1 (Typical 7.5dBm)</li> </ul>  |
| SMS                | <ul style="list-style-type: none"> <li>● Text and PDU mode</li> <li>● SMS storage: SIM card</li> </ul>   |
| SIM Interface      | Support SIM card: 1.8V, 3.0V   |
| Audio Features     | Speech codec modes: <ul style="list-style-type: none"> <li>● Half Rate (ETS 06.20)</li> <li>● Full Rate (ETS 06.10)</li> </ul>   |

|                          |   |
|--------------------------|---|
|                          | <ul style="list-style-type: none"> <li>● Enhanced Full Rate (ETS 06.50/06.60/06.80)</li> <li>● Adaptive Multi-Rate (AMR)</li> <li>● Echo Suppression</li> <li>● Noise Reduction</li> </ul>  |
| UART Interfaces          | <p>UART Port:</p> <ul style="list-style-type: none"> <li>● Seven lines on UART port interface</li> <li>● Used for AT command, GPRS data</li> <li>● Multiplexing function</li> <li>● Support autobauding from 4800bps to 115200bps</li> </ul> <p>Debug Port:</p> <ul style="list-style-type: none"> <li>● Two lines on debug port interface DBG_TXD and DBG_RXD</li> <li>● Debug Port only used for firmware debugging</li> </ul> <p>Auxiliary Port:</p> <ul style="list-style-type: none"> <li>● Used for AT command</li> </ul> |
| Phonebook Management     | Support phonebook types: SM, ME, ON, MC, RC, DC, LD, LA   |
| SIM Application Toolkit  | Support SAT class 3, GSM 11.14 Release 99   |
| Real Time Clock          | Supported   |
| Physical Characteristics | <p>Size: 15.8±0.15 × 17.7±0.15 × 2.3±0.2mm</p> <p>Weight: Approx. 1.3g</p>  |
| Firmware Upgrade         | Firmware upgrade via UART Port  |
| Antenna Interface        | Connected to antenna pad with 50 Ohm impedance control  |

**NOTE**

<sup>1)</sup> When the module works within this temperature range, the deviations from the GSM specification may occur. For example, the frequency error or the phase error will be increased.


**Table 2: Coding Schemes and Maximum Net Data Rates over Air Interface**

| Coding Scheme | 1 Timeslot | 2 Timeslot | 4 Timeslot |
|---------------|------------|------------|------------|
| CS-1          | 9.05kbps   | 18.1kbps   | 36.2kbps   |
| CS-2          | 13.4kbps   | 26.8kbps   | 53.6kbps   |
| CS-3          | 15.6kbps   | 31.2kbps   | 62.4kbps   |
| CS-4          | 21.4kbps   | 42.8kbps   | 85.6kbps   |

## 2.3. Functional Diagram

The following figure shows a block diagram of M66 and illustrates the major functional parts.

- Radio frequency part
- Power management
- The peripheral interface
  - Power supply
  - Turn-on/off interface
  - UART interface
  - Audio interface
  - PCM interface
  - SIM interface
  - ADC interface
  - RF interface
  - BT interface

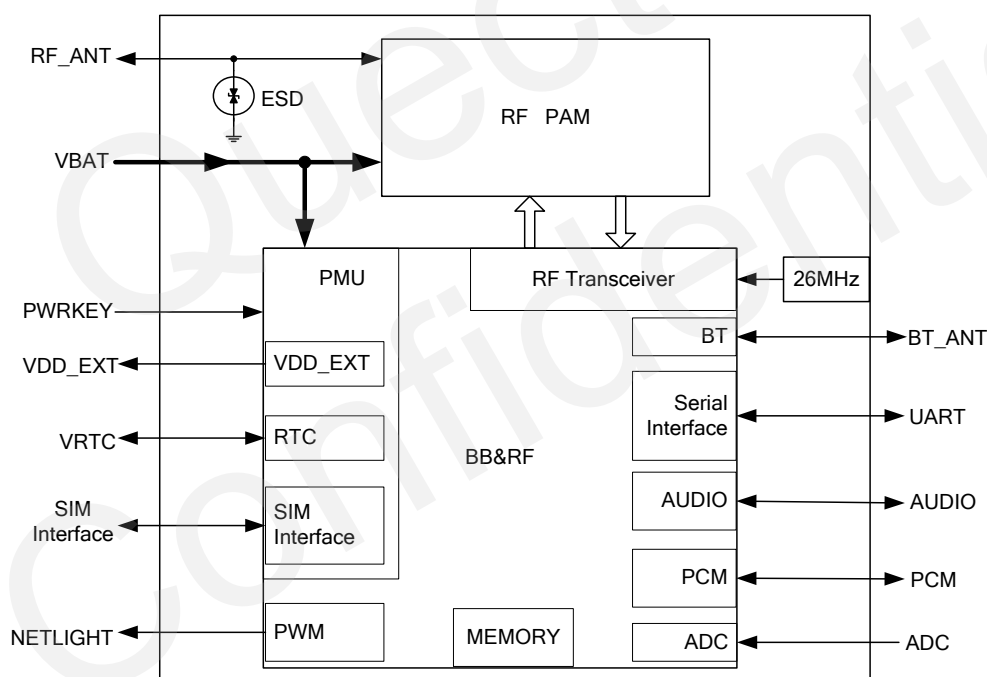

**Figure 1: Module Functional Diagram**

## 2.4. Evaluation Board

In order to help you to develop applications with M66, Quectel supplies an evaluation board (EVB), RS-232 to USB cable, power adapter, earphone, antenna and other peripherals to control or test the module. For details, please refer to the **document [11]**.

# 3 Application Interface

The module adopts LCC package and has 44 pins. The following chapters provide detailed descriptions about these pins.

- Pin of module
- Operating modes
- Power supply
- Power on/down
- Power saving
- RTC
- Serial interfaces
- Audio interfaces
- PCM interface
- SIM card interface
- ADC
- Behaviors of the RI
- Network status indication
- RF transmitting signal indication



## 3.1. Pin of Module

### 3.1.1. Pin Assignment

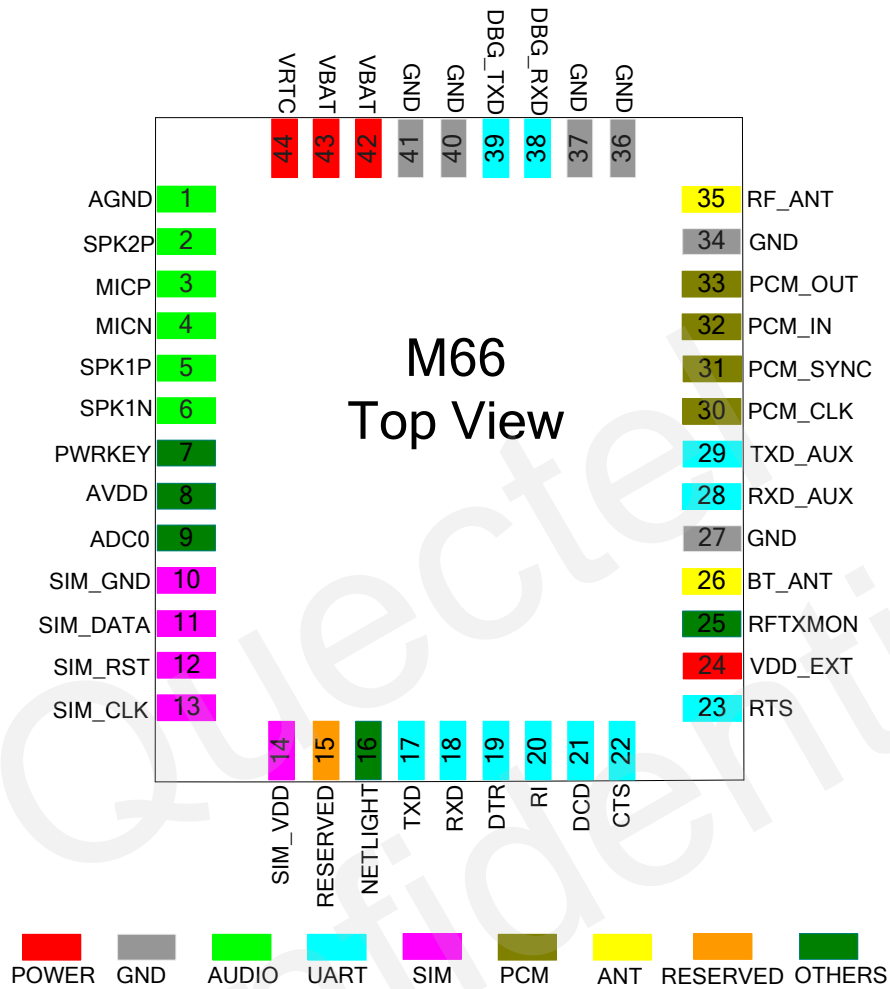


Figure 2: Pin Assignment

#### NOTE

Keep all reserved pins open.

### 3.1.2. Pin Description

**Table 3: IO Parameters Definition**

| Type | Description                |
|------|----------------------------|
| IO   | Bidirectional input/output |
| DI   | Digital input              |
| DO   | Digital output             |
| PI   | Power input                |
| PO   | Power output               |
| AI   | Analog input               |
| AO   | Analog output              |

**Table 4: Pin Description**

| Power Supply |         |     |   |   |   |
|--------------|---------|-----|---|---|---|
| PIN Name     | PIN No. | I/O | Description   | DC Characteristics  | Comment   |
| VBAT         | 42,43   | PI  | Main power supply of module:<br>VBAT=3.3V~4.6V  | V <sub>I</sub> max=4.6V<br>V <sub>I</sub> min=3.3V<br>V <sub>I</sub> norm=4.0V  | Make sure that supply sufficient current in a transmitting burst typically rises to 1.6A. |
| VRTC         | 44      | IO  | Power supply for RTC when VBAT is not supplied for the system.<br>Charging for backup battery or golden capacitor when the VBAT is applied. | V <sub>I</sub> max=3.3V<br>V <sub>I</sub> min=1.5V<br>V <sub>I</sub> norm=2.8V<br>V <sub>O</sub> max=3V<br>V <sub>O</sub> min=2V<br>V <sub>O</sub> norm=2.8V<br>I <sub>O</sub> max=2mA<br>I <sub>in</sub> ≈10uA | If unused, keep this pin open.  |
| VDD_EXT      | 24      | PO  | Supply 2.8V voltage for external circuit.   | V <sub>O</sub> max=2.9V<br>V <sub>O</sub> min=2.7V<br>V <sub>O</sub> norm=2.8V<br>I <sub>O</sub> max=20mA   | 1. If unused, keep this pin open.<br>2. Recommend to add a                                |

2.2~4.7uF  
bypass  
capacitor,  
when using  
this pin for  
power supply.

|     |                         |        |
|-----|-------------------------|--------|
| GND | 27,34<br>36,37<br>40,41 | Ground |
|-----|-------------------------|--------|

#### Turn on/off

| PIN Name | PIN No. | I/O | Description  | DC Characteristics   | Comment |
|----------|---------|-----|--|--|---------|
| PWRKEY   | 7       | DI  | Power on/off key. PWRKEY should be pulled down for a moment to turn on or turn off the system. | $V_{ILmax}=0.1 \times V_{BAT}$<br>$V_{IHmin}=0.6 \times V_{BAT}$<br>$V_{IHmax}=3.1V$ |         |

#### Audio Interface

| PIN Name       | PIN No. | I/O | Description  | DC Characteristics   | Comment                                 |
|----------------|---------|-----|--|----------------------|---|
| MICP<br>MICN   | 3,<br>4 | AI  | Positive and negative voice input                                      |                      | If unused, keep these pins open.        |
| SPK1P<br>SPK1N | 5,<br>6 | AO  | Channel 1 positive and negative voice output                           |                      | If unused, keep these pins open.        |
| SPK2P          | 2       | AO  | Channel 2 voice output   | Refer to Section 3.8 | Support both voice and ringtone output. |
| AGND           | 1       |     | Analog ground. Separate ground connection for external audio circuits. |                      | If unused, keep this pin open.          |

#### Network Status Indicator

| PIN Name | PIN No. | I/O | Description               | DC Characteristics   | Comment                        |
|----------|---------|-----|---------------------------|--|--------------------------------|
| NETLIGHT | 16      | DO  | Network status indication | $V_{OHmin}=0.85 \times V_{DD\_EXT}$<br>$V_{OLmax}=0.15 \times V_{DD\_EXT}$ | If unused, keep this pin open. |

#### UART Port

| PIN Name | PIN No. | I/O | Description | DC Characteristics | Comment |
|----------|---------|-----|-------------|--------------------|---------|
|----------|---------|-----|-------------|--------------------|---------|

|     |    |    |                        |                                  |   |
|-----|----|----|------------------------|----------------------------------|---|
| TXD | 17 | DO | Transmit data          | $V_{ILmin}=0V$                   | If only use TXD, RXD and GND to communicate, recommended to keep other pins open. |
| RXD | 18 | DI | Receive data           | $V_{ILmax}=0.25 \times VDD\_EXT$ |   |
| DTR | 19 | DI | Data terminal ready    | $V_{IHmin}=0.75 \times VDD\_EXT$ |   |
| RI  | 20 | DO | Ring indication        | $V_{IHmax}=VDD\_EXT+0.2$         |   |
| DCD | 21 | DO | Data carrier detection | $V_{OHmin}=0.85 \times VDD\_EXT$ |   |
| CTS | 22 | DO | Clear to send          | $V_{OLmax}=0.15 \times VDD\_EXT$ |   |
| RTS | 23 | DI | Request to send        |                                  |   |

#### Debug Port

| PIN Name | PIN No. | I/O | Description   | DC Characteristics | Comment                          |
|----------|---------|-----|---------------|--------------------|----------------------------------|
| DBG_TXD  | 39      | DO  | Transmit data | Same as above      | If unused, keep these pins open. |
| DBG_RXD  | 38      | DI  | Receive data  |                    |                                  |

#### Auxiliary Port

| PIN Name | PIN No. | I/O | Description   | DC Characteristics | Comment                          |
|----------|---------|-----|---------------|--------------------|----------------------------------|
| TXD_AUX  | 29      | DO  | Transmit data | Same as above      | If unused, keep these pins open. |
| RXD_AUX  | 28      | DI  | Receive data  |                    |                                  |

#### SIM Interface

| PIN Name | PIN No. | I/O | Description               | DC Characteristics   | Comment  |
|----------|---------|-----|---------------------------|--|--|
| SIM_VDD  | 14      | PO  | Power supply for SIM card | The voltage can be selected by software automatically. Either 1.8V or 3.0V.  | All signals of SIM interface should be protected against ESD with a TVS diode array. Maximum trace length is 200mm from the module pad to SIM card holder. |
| SIM_CLK  | 13      | DO  | SIM clock                 | $V_{OLmax}=0.15 \times SIM\_VDD$<br>$V_{OHmin}=0.85 \times SIM\_VDD$   |  |
| SIM_DATA | 11      | IO  | SIM data                  | $V_{ILmax}=0.25 \times SIM\_VDD$<br>$V_{IHmin}=0.75 \times SIM\_VDD$<br>$V_{OLmax}=0.15 \times SIM\_VDD$<br>$V_{OHmin}=0.85 \times SIM\_VDD$ |  |

|                                       |                |            |  |  |                                |
|---------------------------------------|----------------|------------|--|--|--------------------------------|
| SIM_RST                               | 12             | DO         | SIM reset                                    | $V_{OLmax} = 0.15 \times SIM\_VDD$<br>$V_{OHmin} = 0.85 \times SIM\_VDD$ |                                |
| SIM_GND                               | 10             |            | SIM ground                                   |  |                                |
| <b>ADC</b>                            |                |            |  |  |                                |
| <b>PIN Name</b>                       | <b>PIN No.</b> | <b>I/O</b> | <b>Description</b>                           | <b>DC Characteristics</b>  | <b>Comment</b>                 |
| AVDD                                  | 8              | PO         | Reference voltage of ADC circuit             | $V_{Omax} = 2.9V$<br>$V_{Omin} = 2.7V$<br>$V_{Onorm} = 2.8V$             | If unused, keep this pin open. |
| ADC0                                  | 9              | AI         | General purpose analog to digital converter. | Voltage range: 0V to 2.8V  | If unused, keep this pin open. |
| <b>PCM</b>                            |                |            |  |  |                                |
| <b>PIN Name</b>                       | <b>PIN No.</b> | <b>I/O</b> | <b>Description</b>                           | <b>DC Characteristics</b>  | <b>Comment</b>                 |
| PCM_CLK                               | 30             | DO         | PCM clock                                    | $V_{ILmin} = 0V$   |                                |
| PCM_SYNC                              | 31             | DO         | PCM frame synchronization                    | $V_{ILmax} = 0.25 \times VDD\_EXT$<br>$V_{IHmin} = 0.75 \times VDD\_EXT$ |                                |
| PCM_IN                                | 32             | DI         | PCM data input                               | $V_{IHmax} = VDD\_EXT + 0.2$<br>$V_{OHmin} = 0.85 \times VDD\_EXT$       | If unused, keep this pin open. |
| PCM_OUT                               | 33             | DO         | PCM data output                              | $V_{OLmax} = 0.15 \times VDD\_EXT$                                       |                                |
| <b>Antenna Interface</b>              |                |            |  |  |                                |
| <b>PIN Name</b>                       | <b>PIN No.</b> | <b>I/O</b> | <b>Description</b>                           | <b>DC Characteristics</b>  | <b>Comment</b>                 |
| RF_ANT                                | 35             | IO         | GSM antenna pad                              | Impedance of 50Ω   |                                |
| BT_ANT                                | 26             | IO         | BT antenna pad                               | Impedance of 50Ω   | If unused, keep this pin open. |
| <b>Transmitting Signal Indication</b> |                |            |  |  |                                |
| <b>PIN Name</b>                       | <b>PIN No.</b> | <b>I/O</b> | <b>Description</b>                           | <b>DC Characteristics</b>  | <b>Comment</b>                 |
| RFTXMON                               | 25             | DO         | Transmission signal indication               | $V_{OHmin} = 0.85 \times VDD\_EXT$<br>$V_{OLmax} =$                      | If unused, keep this pin open. |

0.15×VDD\_EXT

#### Other Interface

| PIN Name | PIN No. | I/O | Description | DC Characteristics | Comment               |
|----------|---------|-----|-------------|--------------------|-----------------------|
| RESERVED | 15      |     |             |                    | Keep these pins open. |

## 3.2. Operating Modes

The table below briefly summarizes the various operating modes in the following chapters.

**Table 5: Overview of Operating Modes**

| Mode             | Function   |
|------------------|--|
| Normal Operation | <p><b>GSM/GPRS Sleep</b></p> <p>After enabling sleep mode by <b>AT+QSCLK=1</b>, the module will automatically enter into Sleep Mode if DTR is set to high level and there is no interrupt (such as GPIO interrupt or data on UART port). In this case, the current consumption of module will reduce to the minimal level.</p> <p>During Sleep Mode, the module can still receive paging message and SMS from the system normally.</p> |
|                  | <p><b>GSM IDLE</b></p> <p>Software is active. The module has registered to the GSM network, and the module is ready to send and receive GSM data.</p>  |
|                  | <p><b>GSM TALK</b></p> <p>GSM connection is ongoing. In this mode, the power consumption is decided by the configuration of Power Control Level (PCL), dynamic DTX control and the working RF band.</p>  |
|                  | <p><b>GPRS IDLE</b></p> <p>The module is not registered to GPRS network. The module is not reachable through GPRS channel.</p>   |
|                  | <p><b>GPRS STANDBY</b></p> <p>The module is registered to GPRS network, but no GPRS PDP context is active. The SGSN knows the Routing Area where the module is located at.</p>   |
|                  | <p><b>GPRS READY</b></p> <p>The PDP context is active, but no data transfer is ongoing. The module is ready to receive or send GPRS data. The SGSN knows the cell where the module is located at.</p>  |
|                  | <p><b>GPRS DATA</b></p> <p>There is GPRS data in transfer. In this mode, power consumption is decided by the PCL, working RF band and GPRS multi-slot configuration.</p>   |


|  |   |
|--|---|
| POWER DOWN   | Normal shutdown by sending the <b>AT+QPOWD=1</b> command or using the PWRKEY pin. The power management ASIC disconnects the power supply from the base band part of the module, and only the power supply for the RTC is remained. Software is not active. The UART interfaces are not accessible. Operating voltage (connected to VBAT) remains applied. |
| Minimum Functionality Mode (without removing power supply) | <b>AT+CFUN</b> command can set the module to a minimum functionality mode without removing the power supply. In this case, the RF part of the module will not work or the SIM card will not be accessible, or both RF part and SIM card will be disabled, but the UART port is still accessible. The power consumption in this case is very low.          |

### 3.3. Power Supply

#### 3.3.1. Power Features of Module

The power supply is one of the key issues in designing GSM terminals. Because of the 577us radio burst in GSM every 4.615ms, power supply must be able to deliver high current peaks in a burst period. During these peaks, drops on the supply voltage must not exceed minimum working voltage of module.

For the M66 module, the max current consumption could reach to 1.6A during a burst transmission. It will cause a large voltage drop on the VBAT. In order to ensure stable operation of the module, it is recommended that the max voltage drop during the burst transmission does not exceed 400mV.

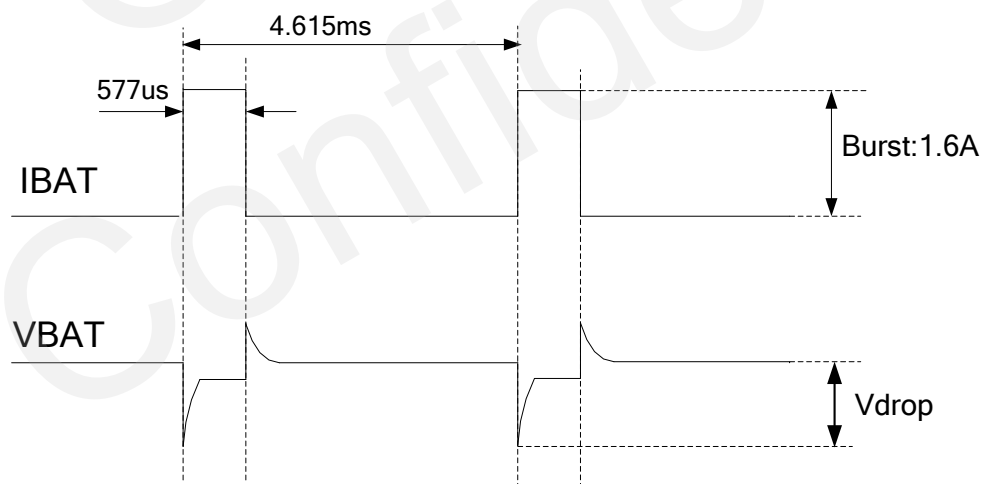


**Figure 3: Voltage Ripple during Transmitting**

### 3.3.2. Decrease Supply Voltage Drop

The power supply range of the module is 3.3V to 4.6V. Make sure that the input voltage will never drop below 3.3V even in a burst transmission. If the power voltage drops below 3.3V, the module could turn off automatically. For better power performance, it is recommended to place a 100uF tantalum capacitor with low ESR ( $ESR=0.7\Omega$ ) and ceramic capacitor 100nF, 33pF and 10pF near the VBAT pin. The reference circuit is illustrated in Figure 4.

The VBAT route should be wide enough to ensure that there is not too much voltage drop during burst transmission. The width of trace should be no less than 2mm and the principle of the VBAT route is the longer route, the wider trace.

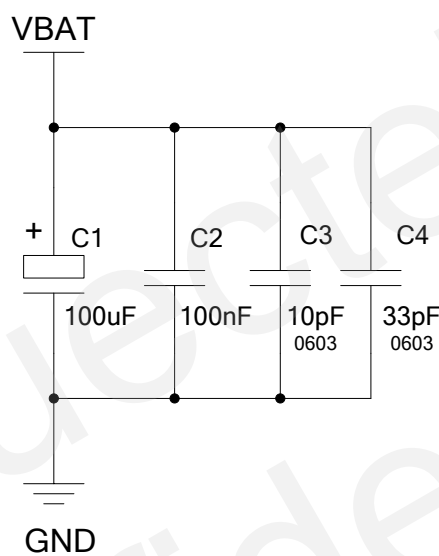


**Figure 4: Reference Circuit for the VBAT Input**

### 3.3.3. Reference Design For Power Supply

The power design for the module is very important, since the performance of power supply for the module largely depends on the power source. The power supply is capable of providing the sufficient current up to 2A at least. If the voltage drop between the input and output is not too high, it is suggested to use a LDO as module's power supply. If there is a big voltage difference between the input source and the desired output (VBAT), a switcher power converter is recommended to use as a power supply.

The following figure shows a reference design for +5V input power source. The designed output for the power supply is 4.0V and the maximum load current is 3A. In addition, in order to get a stable output voltage, a zener diode is placed close to the pins of VBAT. As to the zener diode, it is suggested to use a zener diode whose reverse zener voltage is 5.1V and dissipation power is more than 1 Watt.



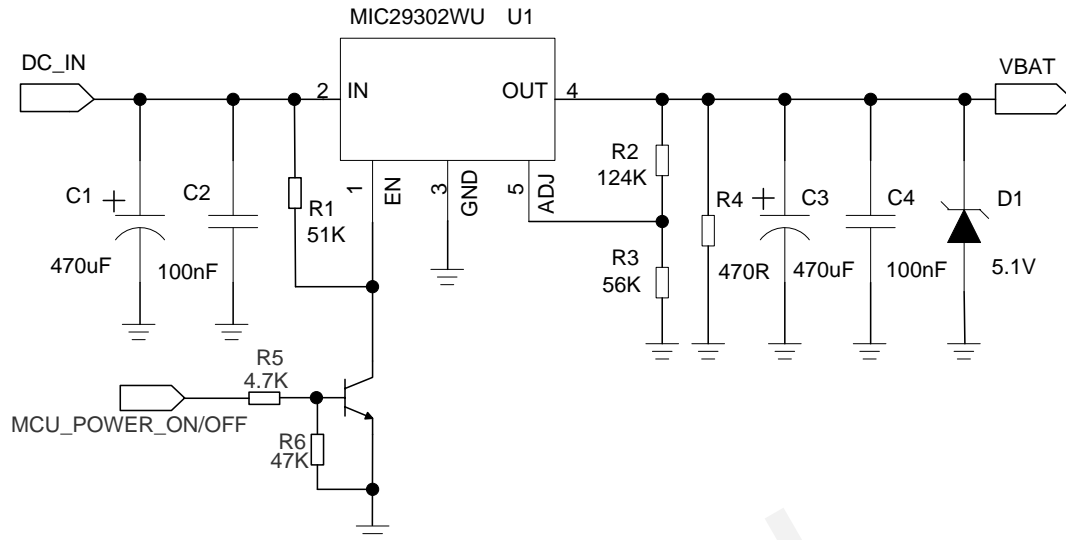

**Figure 5: Reference Circuit for Power Supply**

**NOTE**

It is suggested to control the module's main power supply (VBAT) via LDO enable pin to restart the module when the module has become abnormal. Power switch circuit like P-channel MOSFET switch circuit can also be used to control VBAT.

### 3.3.4. Monitor Power Supply

The command “**AT+CBC**” can be used to monitor the supply voltage of the module. The unit of the displayed voltage is mV.

For details, please refer to the **document [1]**.

## 3.4. Power On and Down Scenarios

### 3.4.1. Power On

The module can be turned on by driving the pin PWRKEY to a low level voltage. An open collector driver circuit is suggested to control the PWRKEY. A simple reference circuit is illustrated as below.

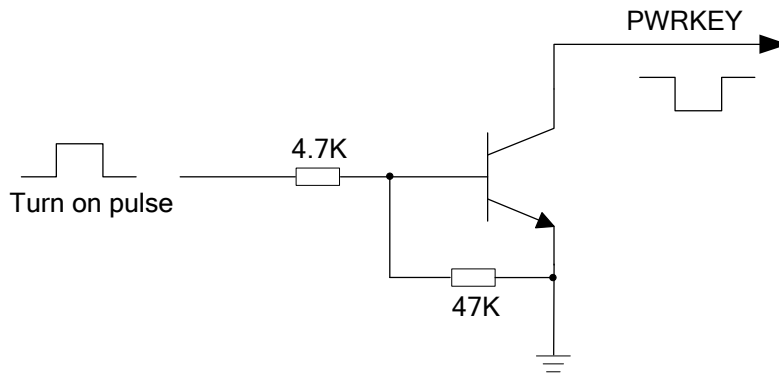


Figure 6: Turn on the Module with an Open-collector Driver

**NOTE**

1. M66 module is set to autobauding mode (AT+IPR=0) by default. In the autobauding mode, URC "RDY" is not reported to the host controller after module is powered on. When the module is powered on after a delay of 4 or 5 seconds, it can receive AT command. Host controller should first send an **AT** string in order that the module can detect baud rate of host controller, and it should continue to send the next **AT** string until receiving **OK** string from the module. Then enter **AT+IPR=x;&W** to set a fixed baud rate for the module and save the configuration to flash memory of the module. After these configurations, the URC **RDY** would be received from the UART Port of the module every time when the module is powered on. For more details, refer to the section **AT+IPR** in **document [1]**.
2. When AT command is responded, indicates module is turned on successfully, or else the module fails to be turned on.

The other way to control the PWRKEY is through a button directly. A TVS component is indispensable to be placed nearby the button for ESD protection. For the best performance, the TVS component must be placed nearby the button. When pressing the key, electrostatic strike may generate from finger. A reference circuit is shown in the following figure.

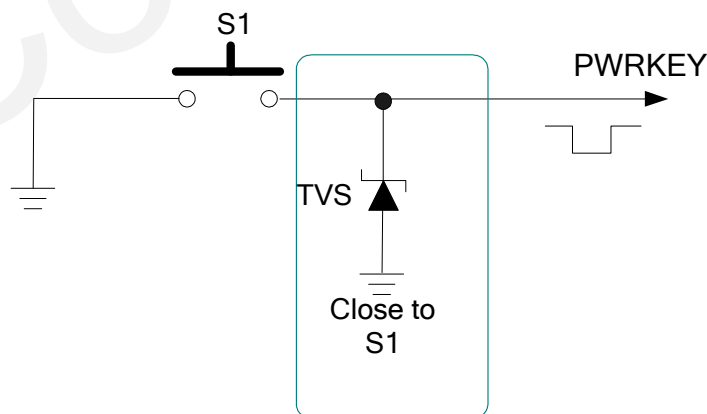


Figure 7: Turn on the Module with a Button

The turn-on timing is illustrated as the following figure.

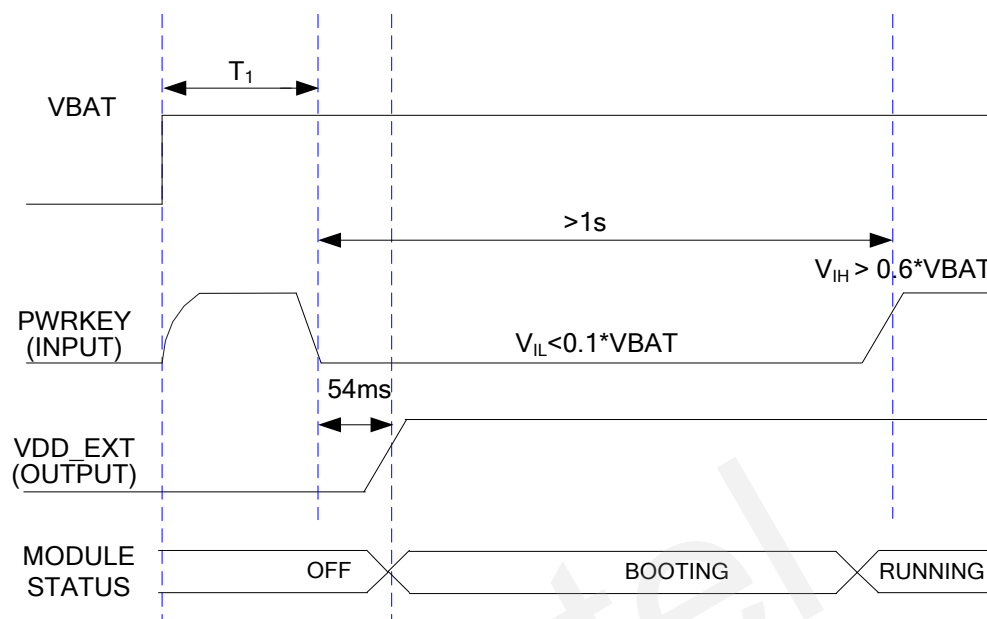


Figure 8: Turn-on Timing

**NOTE**

Make sure that VBAT is stable before pulling down PWRKEY pin. The time of  $T_1$  is recommended to be 100ms.


### 3.4.2. Power Down

The following procedures can be used to turn off the module:

- Normal power down procedure: Turn off module using the PWRKEY pin
- Normal power down procedure: Turn off module using command **AT+QPOWD**
- Under-voltage automatic shutdown: Take effect when under-voltage is detected.

#### 3.4.2.1. Power Down Module Using the PWRKEY Pin

It is a safe way to turn off the module by driving the PWRKEY to a low level voltage for a certain time. The power down scenario is illustrated below.

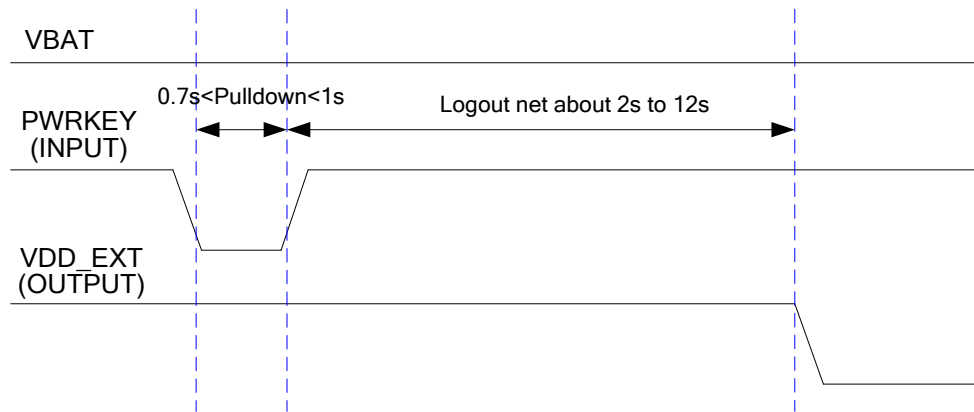

**Figure 9: Turn-off Timing**

The power down procedure causes the module to log off from the network and allows the firmware to save important data before completely disconnecting the power supply.

Before the completion of the power down procedure, the module sends out the result code shown below:

#### ***NORMAL POWER DOWN***

After that moment, no further AT commands can be executed. Then the module enters the power down mode, the RTC is still active.

#### **NOTE**

1. This unsolicited result codes do not appear when autobauding is active and DTE and DCE are not correctly synchronized after start-up. The module is recommended to set to a fixed baud rate.
2. As logout network time is related to the local mobile network, it is recommended to delay about 12 seconds before disconnecting the power supply or restarting the module.

#### **3.4.2.2. Power Down Module Using AT Command**

It is also a safe way to turn off the module via AT command **AT+QPOWD=1**. This command will let the module log off from the network and allow the firmware to save important data before completely disconnecting the power supply.

Before the completion of the power down procedure the module sends out the result code shown below:

#### ***NORMAL POWER DOWN***

After that moment, no further AT commands can be executed. And then the module enters the power down mode, only the RTC is still active.

Please refer to the **document [1]** for details about the AT command **AT+QPOWD**.

### 3.4.2.3. Under-voltage Automatic Shutdown

The module will constantly monitor the voltage applied on the VBAT, if the voltage is  $\leq 3.5V$ , the following URC will be presented:

#### **UNDER\_VOLTAGE WARNING**

The normal input voltage range is from 3.3V to 4.6V. If the voltage is  $< 3.3V$ , the module would automatically shut down itself.

If the voltage is  $< 3.3V$ , the following URC will be presented:

#### **UNDER\_VOLTAGE POWER DOWN**


After that moment, no further AT commands can be executed. The module logs off from network and enters power down mode, and only RTC is still active.

#### **NOTES**

These unsolicited result codes do not appear when autobauding is active and DTE and DCE are not correctly synchronized after start-up. The module is recommended to set to a fixed baud rate.

### 3.4.3. Restart

You can restart the module by driving the PWRKEY to a low level voltage for a certain time, which is similar to the way of turning on module. In order to make the internal LDOs discharge completely after turning off the module, it is recommended to delay about 500ms before restarting the module. The restart timing is illustrated as the following figure.

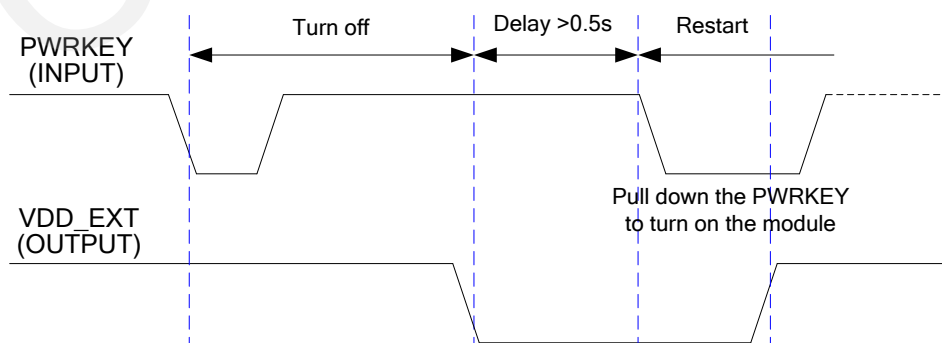

**Figure 10: Timing of Restarting System**

## 3.5. Power Saving

Based on system requirements, there are several actions to drive the module to enter low current consumption status. For example, **AT+CFUN** can be used to set module into minimum functionality mode and DTR hardware interface signal can be used to lead system to SLEEP mode.

### 3.5.1. Minimum Functionality Mode

Minimum functionality mode reduces the functionality of the module to a minimum level. The consumption of the current can be minimized when the slow clocking mode is activated at the same time. The mode is set with the **AT+CFUN** command which provides the choice of the functionality levels <fun>=0, 1, 4.

- 0: minimum functionality
- 1: full functionality (default)
- 4: disable both transmitting and receiving of RF part

If the module is set to minimum functionality by **AT+CFUN=0**, the RF function and SIM card function would be disabled. In this case, the UART port is still accessible, but all AT commands related with RF function or SIM card function will be not available.

If the module has been set by the command with **AT+CFUN=4**, the RF function will be disabled, but the UART port is still active. In this case, all AT commands related with RF function will be not available.

After the module is set by **AT+CFUN=0** or **AT+CFUN=4**, it can return to full functionality by **AT+CFUN=1**.

For detailed information about **AT+CFUN**, please refer to the *document [1]*.

### 3.5.2. SLEEP Mode

The SLEEP mode is disabled by default. You can enable it by **AT+QSCLK=1**. On the other hand, the default setting is **AT+QSCLK=0** and in this mode, the module cannot enter SLEEP mode.

When the module is set by the command with **AT+QSCLK=1**, you can control the module to enter or exit from the SLEEP mode through pin DTR. When DTR is set to high level, and there is no on-air or hardware interrupt such as GPIO interrupt or data on UART port, the module will enter SLEEP mode automatically. In this mode, the module can still receive voice, SMS or GPRS paging from network, but the UART port does not work.

### 3.5.3. Wake Up Module From SLEEP Mode

When the module is in the SLEEP mode, the following methods can wake up the module.

- If the DTR Pin is set low, it would wake up the module from the SLEEP mode. The UART port will be active within 20ms after DTR is changed to low level.
- Receive a voice or data call from network wakes up module.
- Receive an SMS from network wakes up module.

#### NOTE

DTR pin should be held at low level during communication between the module and DTE.

### 3.5.4. Summary of State Transition

**Table 6: Summary of State Transition**

| Current Mode | Next Mode                        |   |  |
|--------------|----------------------------------|---|--|
|              | Power Down                       | Normal Mode                                   | Sleep Mode                                       |
| Power Down   |                                  | Use PWRKEY                                    |  |
| Normal Mode  | <b>AT+QPOWD</b> , use PWRKEY pin |   | Use AT command <b>AT+QSCLK=1</b> and pull up DTR |
| SLEEP Mode   | Use PWRKEY pin                   | Pull DTR down or incoming call or SMS or GPRS |  |

## 3.6. RTC Backup

The RTC (Real Time Clock) function is supported. The RTC is designed to work with an internal power supply.

There are three kinds of designs for RTC backup power:

- Use VBAT as the RTC power source.


When the module is turned off and the main power supply (VBAT) is remained, the real time clock is still active as the RTC core is supplied by VBAT. In this case, the VRTC pin can be kept floating.

- Use VRTC as the RTC power source.


If the main power supply (VBAT) is removed after the module is turned off, a backup supply such as a coin-cell battery (rechargeable or non-chargeable) or a super-cap can be used to supply the VRTC pin to keep the real time clock active.

- Use VBAT and VRTC as the RTC power source.

As only powering the VRTC pin to keep the RTC will lead an error about 5 minutes a day, it is recommended to power VBAT and VRTC pin at the same time when RTC function is needed. The recommended supply for RTC core circuits are shown as below.

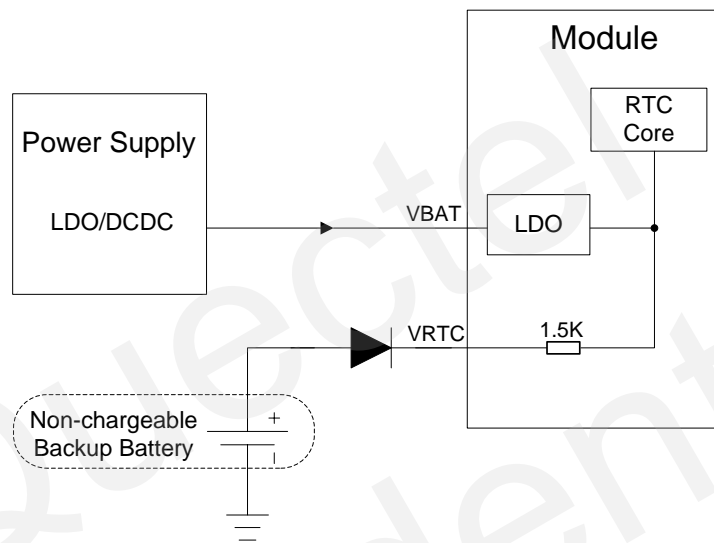


**Figure 11: VRTC is Supplied by a Non-chargeable Battery**

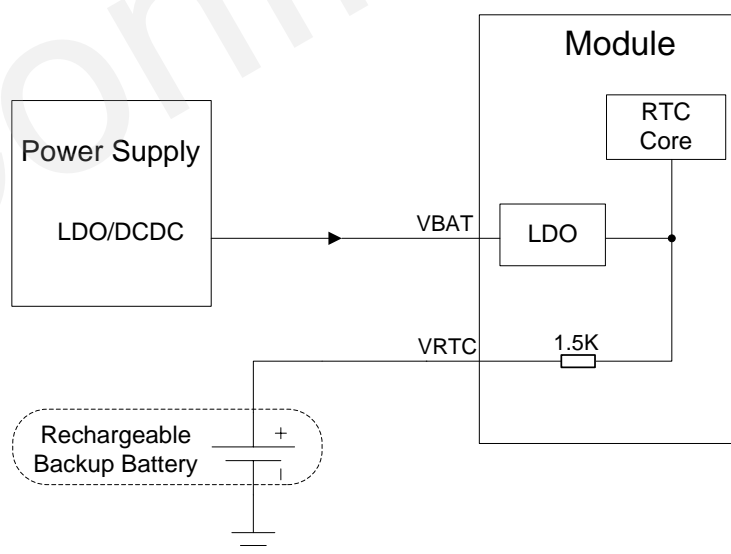

**Figure 12: VRTC is Supplied by a Rechargeable Battery**



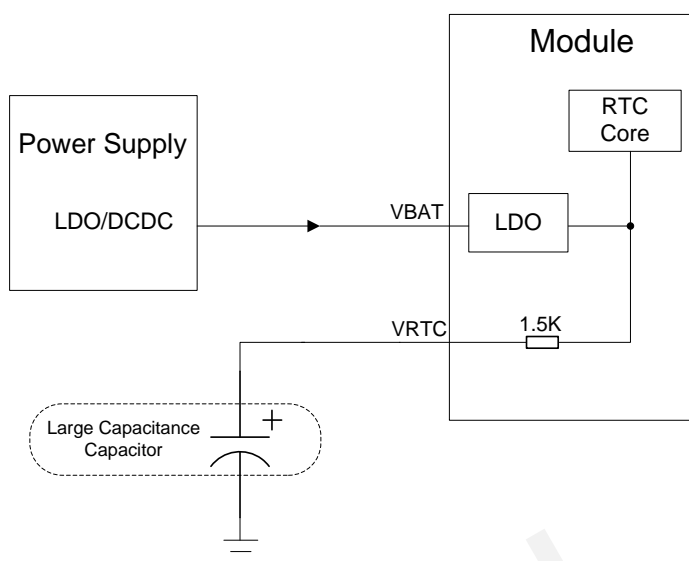

**Figure 13: VRTC is Supplied by a Capacitor**

A rechargeable or non-chargeable coin-cell battery can also be used here, for more information, please visit <http://www.sii.co.jp/en/>.

**NOTE**

If you want to keep an accurate real time, please keep the main power supply VBAT alive.

### 3.7. Serial Interfaces

The module provides three serial ports: UART Port, Debug Port and Auxiliary UART Port. The module is designed as a DCE (Data Communication Equipment), following the traditional DCE-DTE (Data Terminal Equipment) connection. Autobauding function supports baud rate from 4800bps to 115200bps.

The UART Port:

- TXD: Send data to RXD of DTE.
- RXD: Receive data from TXD of DTE.
- RTS: Request to send.
- CTS: Clear to send.
- DTR: DTE is ready and inform DCE (this pin can wake the module up).
- RI: Ring indicator (when there is a call, SMS or URC output, the module will inform DTE with the RI pin).
- DCD: Data carrier detection (the validity of this pin demonstrates the communication link is set up).

**NOTE**

Hardware flow control is disabled by default. When hardware flow control is required, RTS and CTS should be connected to the host. AT command **AT+IFC=2,2** is used to enable hardware flow control. AT command **AT+IFC=0,0** is used to disable the hardware flow control. For more details, please refer to the **document [1]**.

The Debug Port:

- DBG\_TXD: Send data to the COM port of computer.
- DBG\_RXD: Receive data from the COM port of computer.

The Auxiliary UART Port:

- TXD\_AUX: Send data to the RXD of DTE.
- RXD\_AUX: Receive data from the TXD of DTE.

The logic levels are described in the following table.

**Table 7: Logic Levels of the UART Interface**

| Parameter | Min.                   | Max.                   | Unit |
|-----------|------------------------|------------------------|------|
| $V_{IL}$  | 0                      | $0.25 \times VDD\_EXT$ | V    |
| $V_{IH}$  | $0.75 \times VDD\_EXT$ | $VDD\_EXT + 0.2$       | V    |
| $V_{OL}$  | 0                      | $0.15 \times VDD\_EXT$ | V    |
| $V_{OH}$  | $0.85 \times VDD\_EXT$ | $VDD\_EXT$             | V    |

**Table 8: Pin Definition of the UART Interfaces**

| Interface | Pin Name | Pin No. | Description         |
|-----------|----------|---------|---------------------|
| UART Port | TXD      | 17      | Transmit data       |
|           | RXD      | 18      | Receive data        |
|           | DTR      | 19      | Data terminal ready |
|           | RI       | 20      | Ring indication     |

|                     |         |    |                        |
|---------------------|---------|----|------------------------|
|                     | DCD     | 21 | Data carrier detection |
|                     | CTS     | 22 | Clear to send          |
|                     | RTS     | 23 | Request to send        |
| Debug Port          | DBG_RXD | 38 | Receive data           |
|                     | DBG_TXD | 39 | Transmit data          |
| Auxiliary UART Port | RXD_AUX | 28 | Receive data           |
|                     | TXD_AUX | 29 | Transmit data          |

### 3.7.1. UART Port

#### 3.7.1.1. The Feature of UART Port

- Seven lines on UART interface
- Contain data lines TXD and RXD, hardware flow control lines RTS and CTS, other control lines DTR, DCD and RI.
- Used for AT command, GPRS data, etc. Multiplexing function is supported on the UART Port. So far only the basic mode of multiplexing is available.
- Support the communication baud rates as the following:  
300, 600, 1200, 2400, 4800, 9600, 14400, 19200, 28800, 38400, 57600, 115200.
- The default setting is autobauding mode. Support the following baud rates for Autobauding function:  
4800, 9600, 19200, 38400, 57600, 115200.
- The module disables hardware flow control by default. AT command **AT+IFC=2,2** is used to enable hardware flow control.

After setting a fixed baud rate or autobauding, please send “AT” string at that rate. The UART port is ready when it responds “OK”.

Autobauding allows the module to detect the baud rate by receiving the string “AT” or “at” from the host or PC automatically, which gives module flexibility without considering which baud rate is used by the host controller. Autobauding is enabled by default. To take advantage of the autobauding mode, special attention should be paid according to the following requirements:

#### Synchronization between DTE and DCE:

When DCE (the module) powers on with the autobauding enabled, it is recommended to wait 2 to 3 seconds before sending the first AT character. After receiving the “OK” response, DTE and DCE are correctly synchronized.

If the host controller needs URC in the mode of autobauding, it must be synchronized firstly. Otherwise the URC will be discarded.

#### Restrictions on autobauding operation:

- The UART port has to be operated at 8 data bits, no parity and 1 stop bit (factory setting).
- The “At” and “aT” commands cannot be used.
- Only the strings “AT” or “at” can be detected (neither “At” nor “aT”).
- The Unsolicited Result Codes like **RDY**, **+CFUN: 1** and **+CPIN: READY** will not be indicated when the module is turned on with autobauding enabled and not be synchronized.
- Any other Unsolicited Result Codes will be sent at the previous baud rate before the module detects the new baud rate by receiving the first “AT” or “at” string. The DTE may receive unknown characters after switching to new baud rate.
- It is not recommended to switch to autobauding from a fixed baud rate.
- If autobauding is active it is not recommended to switch to multiplex mode.


#### NOTE

To assure reliable communication and avoid any problems caused by undetermined baud rate between DCE and DTE, it is strongly recommended to configure a fixed baud rate and save it instead of using autobauding after start-up. For more details, please refer to the Section **AT+IPR** in *document [1]*.

#### 3.7.1.2. The Connection of UART


The connection between module and host using UART Port is very flexible. Three connection styles are illustrated as below.

Reference design for Full-Function UART connection is shown as below when it is applied in modulation-demodulation.

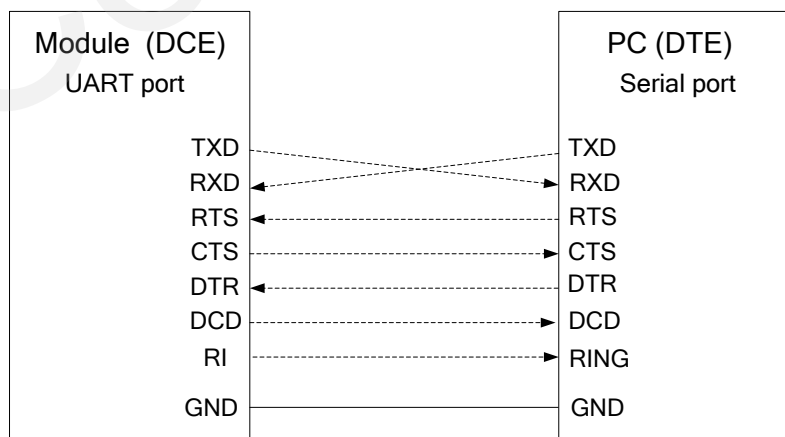


**Figure 14: Reference Design for Full-Function UART**

Three-line connection is shown as below.

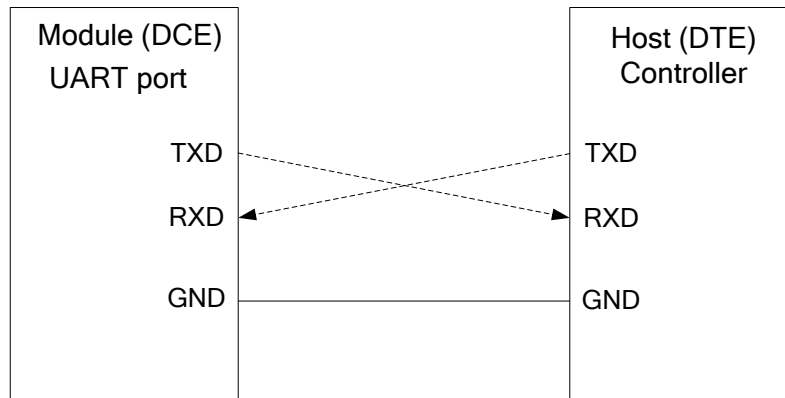

**Figure 15: Reference Design for UART Port**


UART Port with hardware flow control is shown as below. This connection will enhance the reliability of the mass data communication.

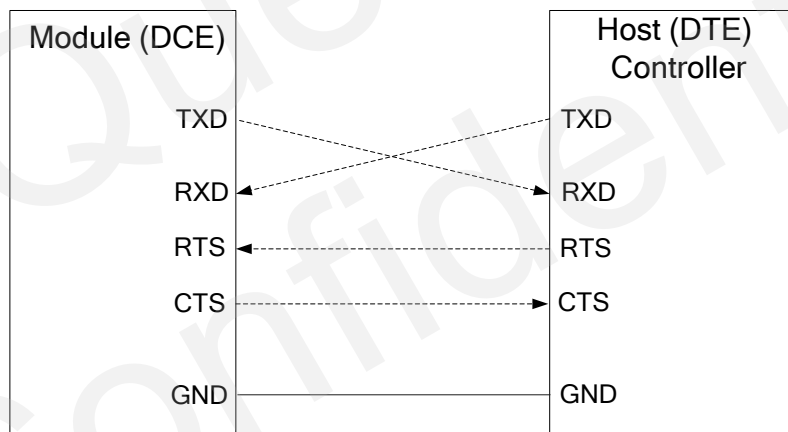

**Figure 16: Reference Design for UART Port with Hardware Flow Control**

### 3.7.1.3. Firmware Upgrade

The TXD, RXD can be used to upgrade firmware. The PWRKEY pin must be pulled down before firmware upgrade. The reference circuit is shown as below:

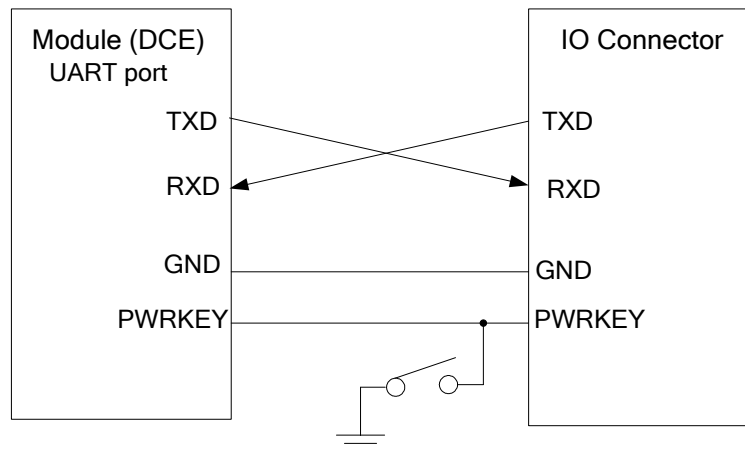


**Figure 17: Reference Design for Firmware Upgrade**

**NOTE**

The firmware of module might need to be upgraded due to certain reasons. It is recommended to reserve these pins in the host board for firmware upgrade.

### 3.7.2. Debug Port

- Two lines: DBG\_TXD and DBG\_RXD.
- It outputs log information automatically.
- Debug Port is only used for firmware debugging and its baud rate must be configured as 460800bps.

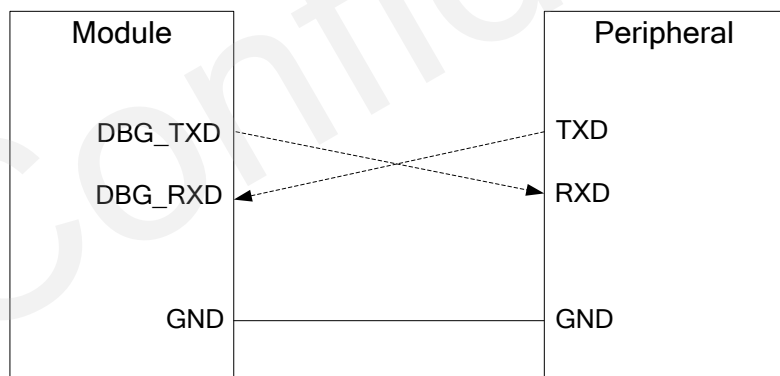

**Figure 18: Reference Design for Debug Port**

### 3.7.3. Auxiliary UART Port

- Two data lines: TXD\_AUX and RXD\_AUX.
- Auxiliary UART port is used for AT command only and does not support GPRS data, Multiplexing function etc.
- Auxiliary UART port supports the communication baud rates as the following:  
1200, 2400, 4800, 9600, 14400, 19200, 28800, 38400, 57600, 115200.
- Auxiliary UART port could be used when you send **AT+QEAUART=1** string on the UART port.
- The default baud rate setting is 115200bps, and does not support autobauding. The baud rate can be modified by **AT+QSEDCB** command. For more details, please refer to the **document [1]**.

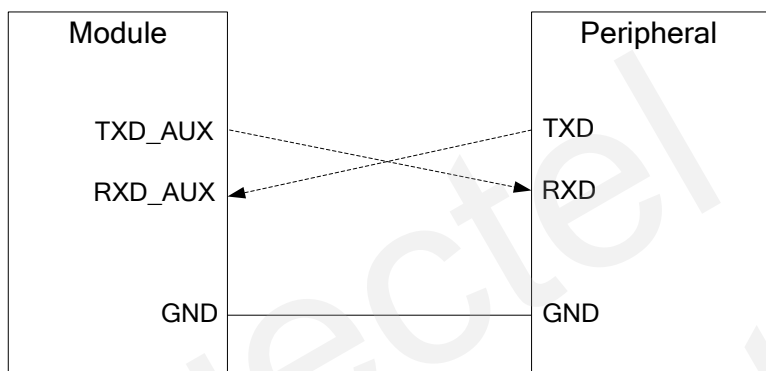


Figure 19: Reference Design for Auxiliary UART Port

### 3.7.4. UART Application

The reference design of 3.3V level match is shown as below. If the host is a 3V system, please change the 5.6K resistor to 10K.


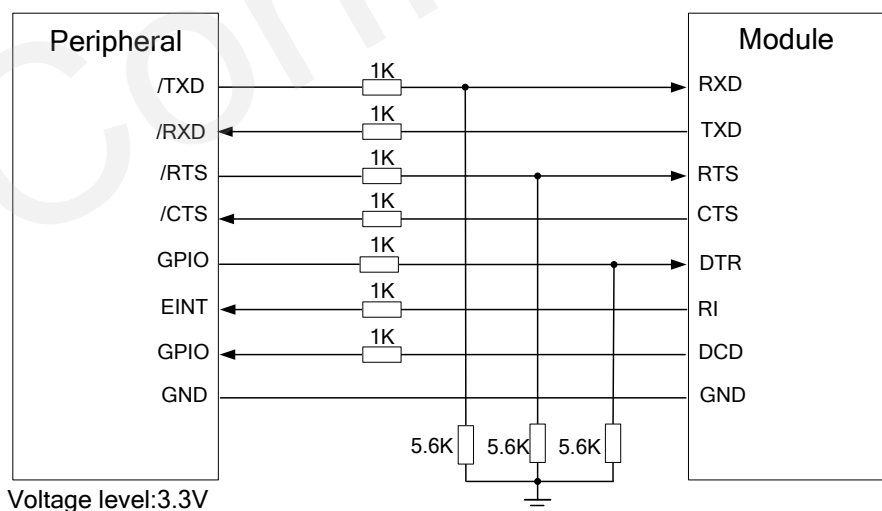


Figure 20: Level Match Design for 3.3V System

**NOTE**

It is highly recommended to add the resistor divider circuit on the UART signal lines when the host's level is 3V or 3.3V. For the higher voltage level system, a level shifter IC could be used between the host and the module. For more details about UART circuit design, please refer to **document [13]**.

The following figure shows a sketch map between module and standard RS-232 interface. Since the electrical level of module is 2.8V, so a RS-232 level shifter must be used. Note that you should assure the IO voltage of level shifter which connects to module is 2.8V.

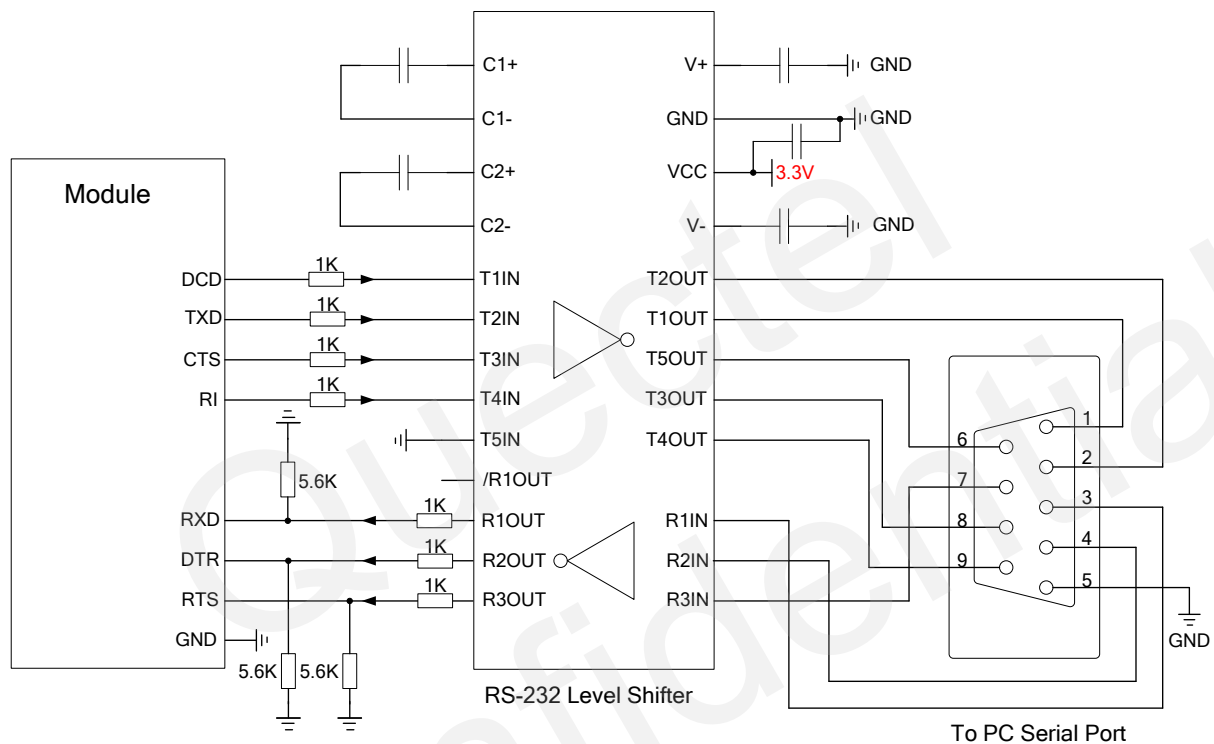

**Figure 21: Sketch Map for RS-232 Interface Match**

Please visit vendor web site to select suitable IC, such as: <http://www.maximintegrated.com> and <http://www.exar.com/>.



### 3.8. Audio Interfaces

The module provides one analog input channels and two analog output channels.

**Table 9: Pin Definition of Audio Interface**

| Interface | Pin Name | Pin No. | Description                                |
|-----------|----------|---------|--|
| AIN/AOUT1 | MICP     | 3       | Microphone positive input                  |
|           | MICN     | 4       | Microphone negative input                  |
|           | SPK1P    | 5       | Channel 1 Audio positive output            |
|           | SPK1N    | 6       | Channel 1 Audio negative output            |
| AIN/AOUT2 | MICP     | 3       | Microphone positive input                  |
|           | MICN     | 4       | Microphone negative input                  |
|           | SPK2P    | 2       | Channel 2 Audio positive output            |
|           | AGND     | 1       | Form a pseudo-differential pair with SPK2P |

AIN can be used for input of microphone and line. An electret microphone is usually used. AIN are differential input channels.

AOUT1 is used for output of the receiver. This channel is typically used for a receiver built into a handset. AOUT1 channel is a differential channel.

AOUT2 is typically used with earphone. It is a single-ended and mono channel. SPK2P and AGND can establish a pseudo differential mode.

All of these two audio channels support voice and ringtone output, and so on, and can be switched by **AT+QAUDCH** command. For more details, please refer to the **document [1]**.

Use AT command **AT+QAUDCH** to select audio channel:

- 0--AIN/AOUT1, the default value is 0.
- 1--AIN/AOUT2, this channel is always used for earphone.

For each channel, you can use **AT+QMIC** to adjust the input gain level of microphone. You can also use **AT+CLVL** to adjust the output gain level of receiver and speaker. **AT+QSIDET** is used to set the side-tone gain level. For more details, please refer to the **document [1]**.

### 3.8.1. Decrease TDD Noise and other Noise

The 33pF capacitor is applied for filtering out 900MHz RF interference when the module is transmitting at EGSM900MHz. Without placing this capacitor, TDD noise could be heard. Moreover, the 10pF capacitor here is for filtering out 1800MHz RF interference. However, the resonant frequency point of a capacitor largely depends on the material and production technique. Therefore, customer would have to discuss with its capacitor vendor to choose the most suitable capacitor for filtering out GSM850MHz, EGSM900MHz, DCS1800MHz and PCS1900MHz separately.

The severity degree of the RF interference in the voice channel during GSM transmitting period largely depends on the application design. In some cases, EGSM900 TDD noise is more severe; while in other cases, DCS1800 TDD noise is more obvious. Therefore, you can have a choice based on test results. Sometimes, even no RF filtering capacitor is required.


The capacitor which is used for filtering out RF noise should be close to audio interface or other audio interfaces. Audio alignment should be as short as possible.

In order to decrease radio or other signal interference, the position of RF antenna should be kept away from audio interface and audio alignment. Power alignment and audio alignment should not be parallel, and power alignment should be far away from audio alignment.

The differential audio traces have to be placed according to the differential signal layout rule.

### 3.8.2. Microphone Interfaces Design

AIN channel come with internal bias supply for external electret microphone. A reference circuit is shown in the following figure.

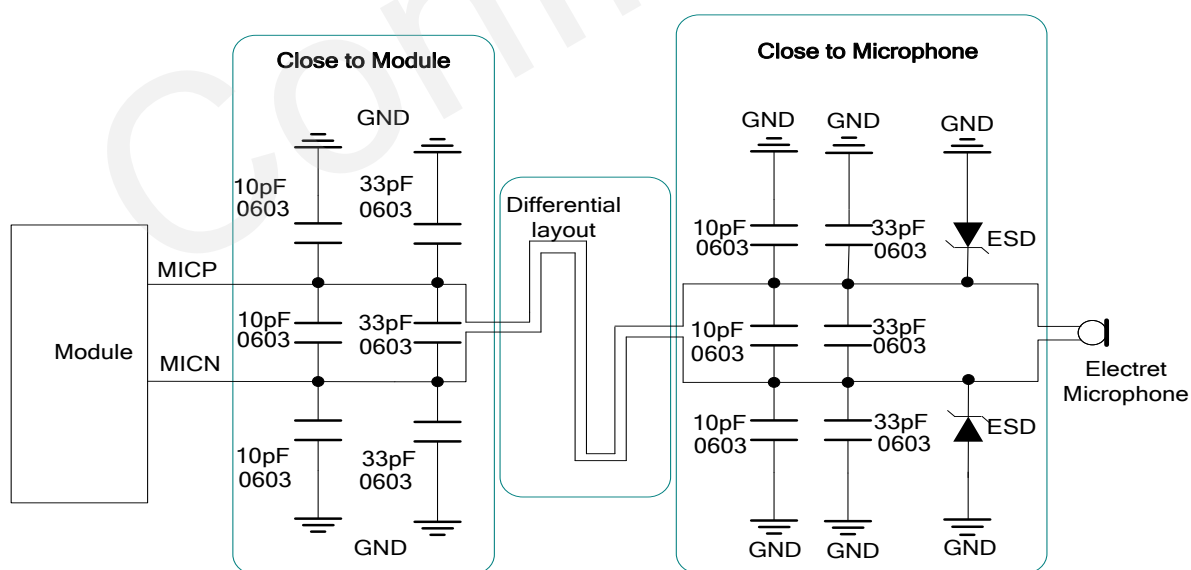

**Figure 22: Reference Design for AIN**

### 3.8.3. Receiver and Speaker Interface Design

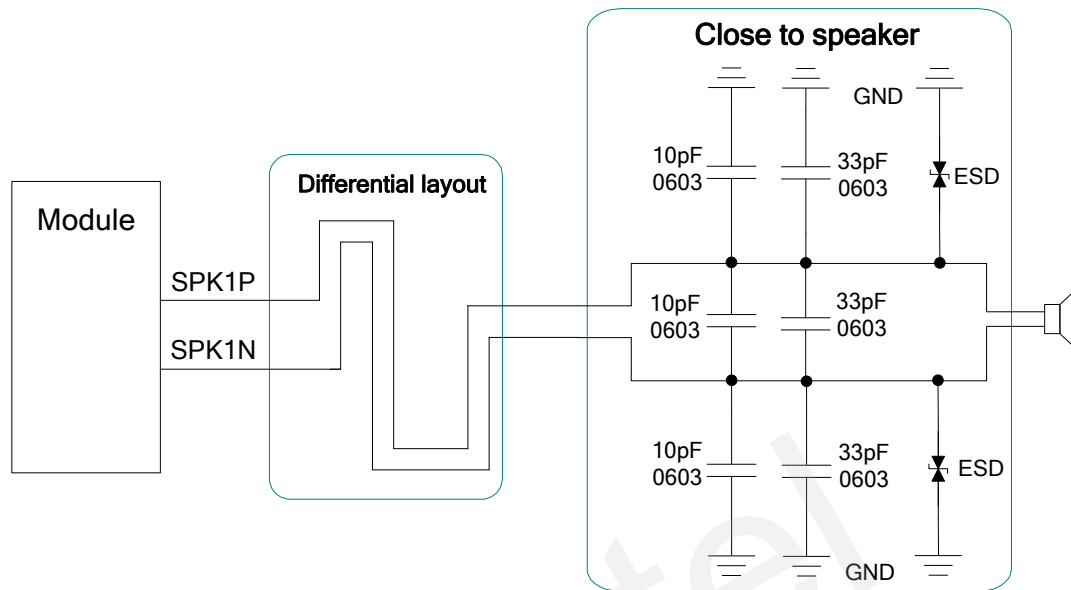


Figure 23: Handset Interface Design for AOUT1



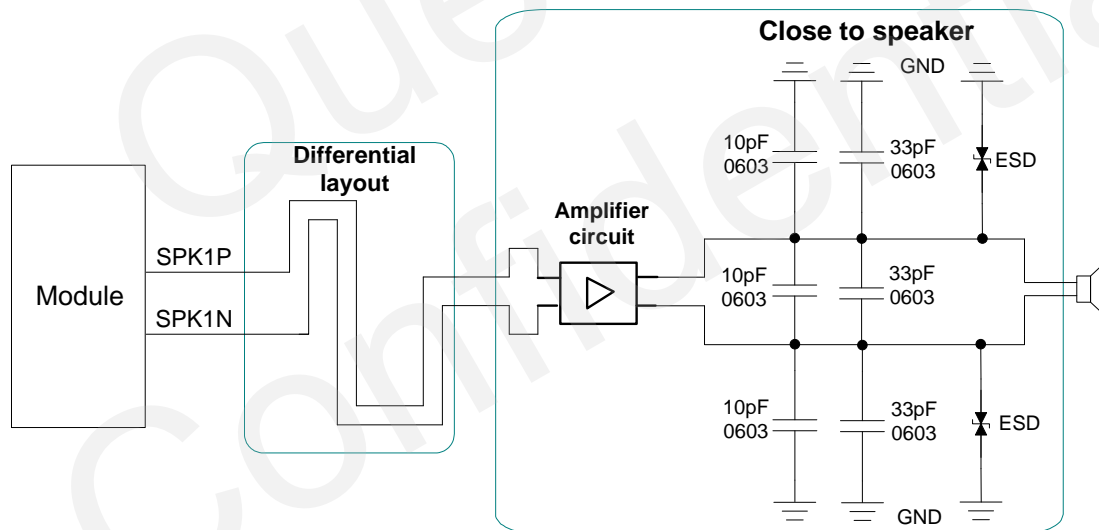


Figure 24: Speaker Interface Design with an Amplifier for AOUT1

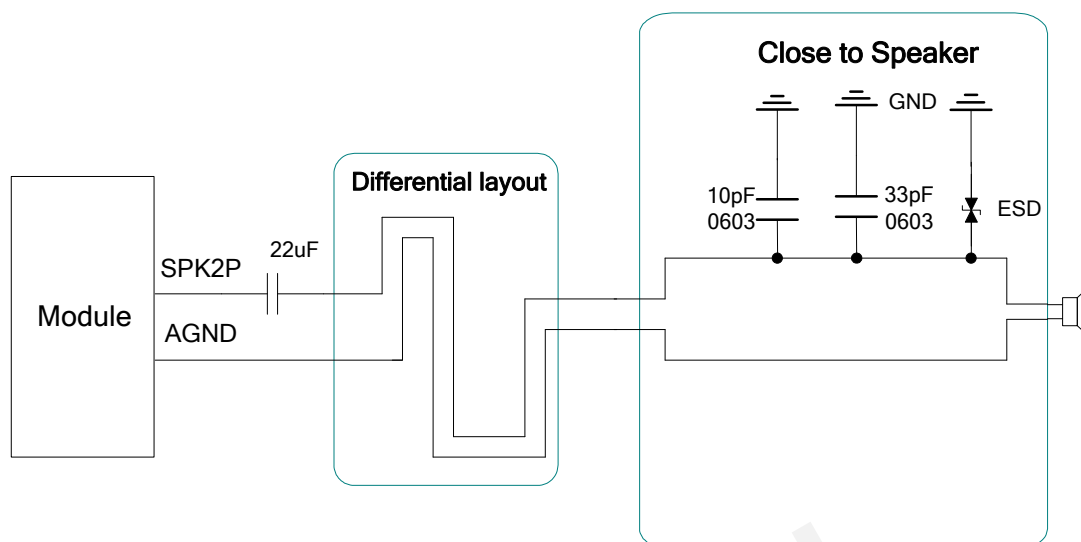

**Figure 25: Handset Interface Design for AOUT2**

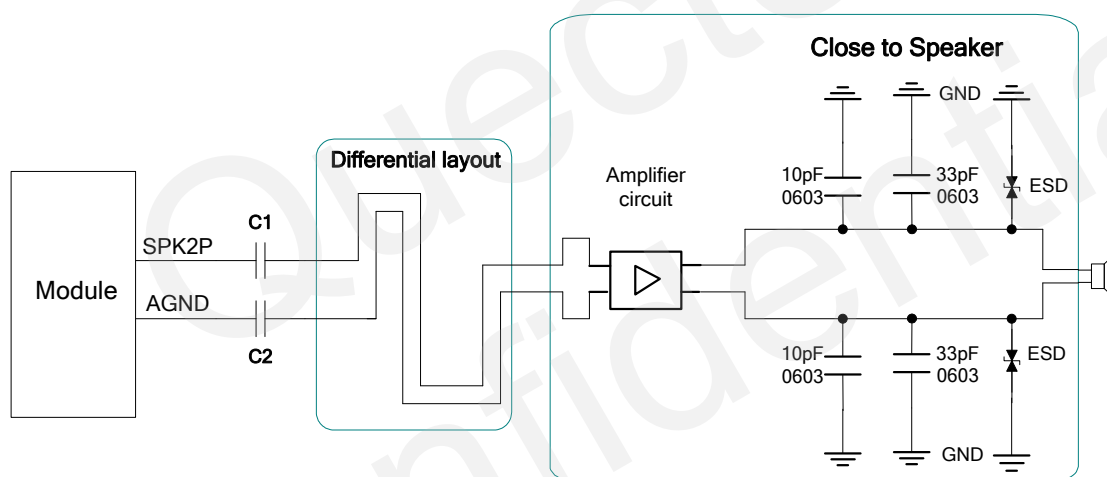


**Figure 26: Speaker Interface Design with an Amplifier for AOUT2**

The suitable differential audio amplifier can be chosen from the Texas Instrument's website (<http://www.ti.com/>). There are also other excellent audio amplifier vendors in the market.

**NOTE**

The value of C1 and C2 here depends on the input impedance of audio amplifier.

### 3.8.4. Earphone Interface Design

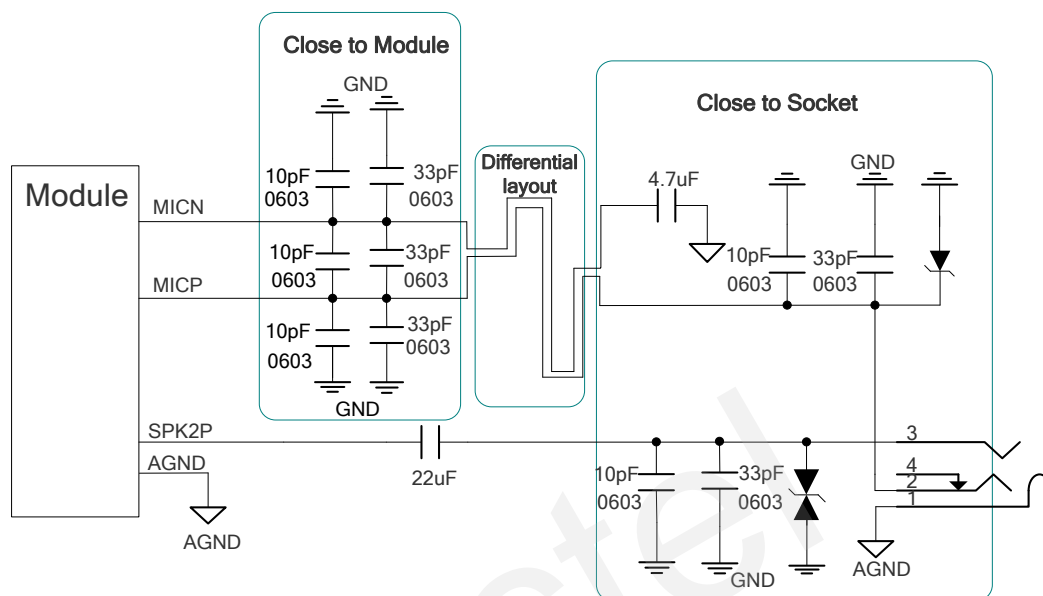

**Figure 27: Earphone Interface Design**

### 3.8.5. Audio Characteristics

**Table 10: Typical Electret Microphone Characteristics**

| Parameter                           | Min. | Typ. | Max. | Unit  |
|-------------------------------------|------|------|------|-------|
| Working Voltage                     | 1.2  | 1.5  | 2.0  | V     |
| Working Current                     | 200  |      | 500  | uA    |
| External Microphone Load Resistance |      | 2.2  |      | K Ohm |

**Table 11: Typical Speaker Characteristics**

| Parameter       | Min.         | Typ.            | Max. | Unit |
|-----------------|--------------|-----------------|------|------|
| AOUT1<br>Output | Single-ended | Load resistance | 32   | Ohm  |
|                 |              | Ref level       | 0    | Vpp  |
|                 | Differential | Load resistance | 32   | Ohm  |
|                 |              | Ref level       | 0    | Vpp  |

|                 |              |                 |    |     |                    |
|-----------------|--------------|-----------------|----|-----|--------------------|
| AOUT2<br>Output | Single-ended | Load resistance | 32 |     | Load<br>Resistance |
|                 |              | Reference level | 0  | 2.4 | Vpp                |

### 3.9. PCM Interface

M66 supports PCM interface. It is used for digital audio transmission between the module and the device. This interface is composed of PCM\_CLK, PCM\_SYNC, PCM\_IN and PCM\_OUT signal lines.

Pulse-code modulation (PCM) is a converter that changes the consecutive analog audio signal to discrete digital signal. The whole procedure of Pulse-code modulation contains sampling, quantizing and encoding.

**Table 12: Pin Definition of PCM Interface**

| Pin Name | Pin No. | Description                      |
|----------|---------|----------------------------------|
| PCM_CLK  | 30      | PCM clock output                 |
| PCM_SYNC | 31      | PCM frame synchronization output |
| PCM_IN   | 32      | PCM data input                   |
| PCM_OUT  | 33      | PCM data output                  |

#### 3.9.1. Configuration

M66 module supports 13-bit line code PCM format. The sample rate is 8 KHz, and the clock source is 256 KHz, and the module can only act as master mode. The PCM interface supports both long and short synchronization simultaneously. Furthermore, it only supports MSB first. For detailed information, please refer to the table below.

**Table 13: Configuration**


| PCM                   |                 |
|-----------------------|-----------------|
| Line Interface Format | Linear          |
| Data Length           | Linear: 13 bits |

|                                  |   |
|----------------------------------|---|
| Sample Rate                      | 8KHz  |
| PCM Clock/Synchronization Source | PCM master mode: clock and synchronization is generated by module |
| PCM Synchronization Rate         | 8KHz  |
| PCM Clock Rate                   | PCM master mode: 256 KHz (line)                                   |
| PCM Synchronization Format       | Long/short synchronization  |
| PCM Data Ordering                | MSB first   |
| Zero Padding                     | Yes   |
| Sign Extension                   | Yes   |


### 3.9.2. Timing

The sample rate of the PCM interface is 8 KHz and the clock source is 256 KHz, so every frame contains 32 bits data, since M66 supports 16 bits line code PCM format, the left 16 bits are invalid. The following diagram shows the timing of different combinations. The synchronization length in long synchronization format can be programmed by firmware from one bit to eight bits. In the Sign extension mode, the high three bits of 16 bits are sign extension, and in the Zero padding mode, the low three bits of 16 bits are zero padding.


Under zero padding mode, you can configure the PCM input and output volume by executing **AT+QPCMVOL** command. For more details, please refer to **Chapter 3.9.4**.

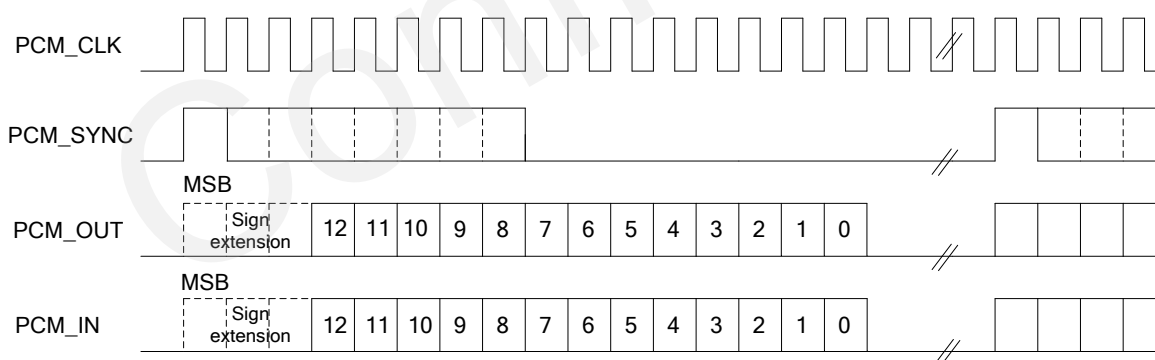


**Figure 28: Long Synchronization & Sign Extension Diagram**

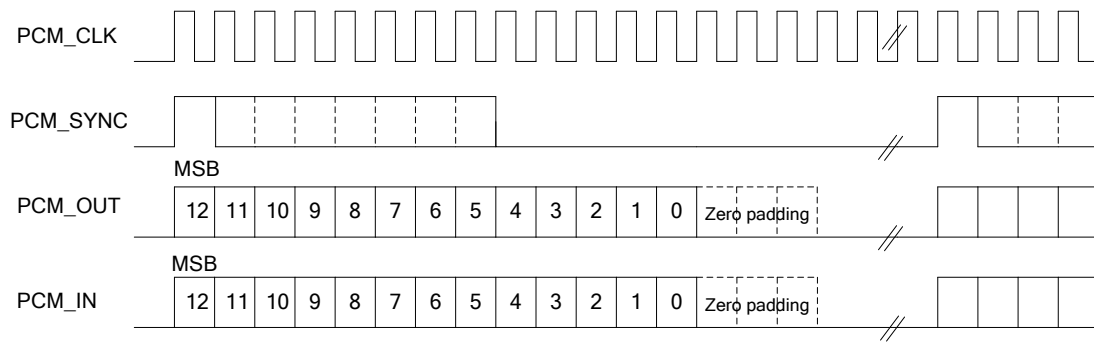

**Figure 29: Long Synchronization & Zero Padding Diagram**

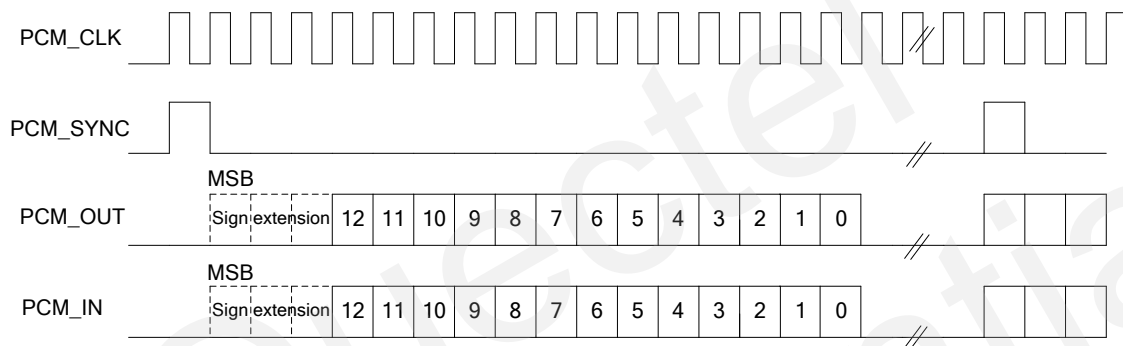

**Figure 30: Short Synchronization & Sign Extension Diagram**

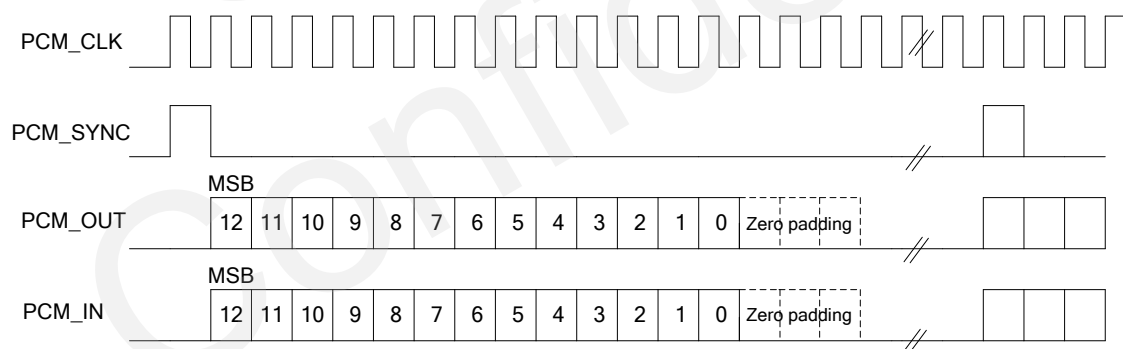


**Figure 31: Short Synchronization & Zero Padding Diagram**



### 3.9.3. Reference Design

M66 can only work as a master, providing synchronization and clock source. The reference design is shown as below.

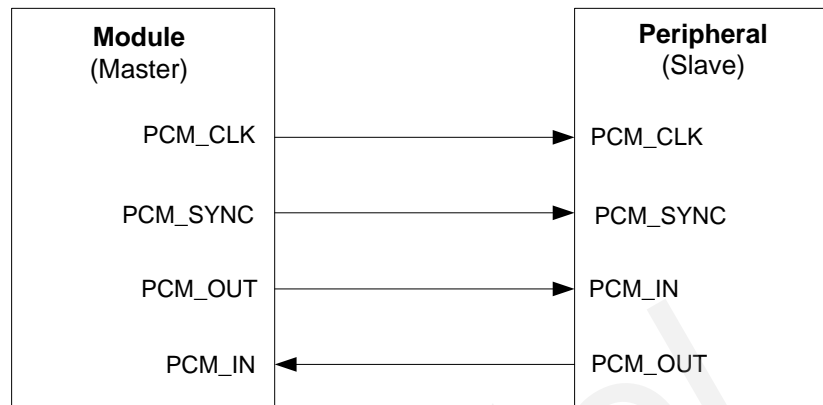

**Figure 32: Reference Design for PCM**

### 3.9.4. AT Command

There are two AT commands about the configuration of PCM, listed as below.

**AT+QPCMON** can configure operating mode of PCM.

**AT+QPCMON=mode, Sync\_Type, Sync\_Length, SignExtension, MSBFirst**

**Table 14: QPCMON Command Description**

| Parameter     | Scope | Description  |
|---------------|-------|--|
| Mode          | 0~2   | 0: Close PCM<br>1: Open PCM<br>2: Open PCM when audio talk is set up |
| Sync_Type     | 0~1   | 0: Short synchronization<br>1: Long synchronization                  |
| Sync_Length   | 1~8   | Programmed from one bit to eight bit                                 |
| SignExtension | 0~1   | 0: Zero padding<br>1: Sign extension                                 |
| MSBFirst      | 0~1   | 0: MSB first<br>1: Not support                                       |

**AT+QPCMVOL** can configure the volume of input and output.

**AT+QPCMVOL=vol\_pcm\_in, vol\_pcm\_out**

**Table 15: QPCMVOL Command Description**

| Parameter   | Scope   | Description  |
|-------------|---------|--|
| vol_pcm_in  | 0~32767 | Set the input volume   |
| vol_pcm_out | 0~32767 | Set the output volume<br>The voice may be distorted when this value exceeds 16384. |

### 3.10. SIM Card Interface


The SIM interface supports the functionality of the GSM Phase 1 specification and also supports the functionality of the new GSM Phase 2+ specification for FAST 64 kbps SIM card, which is intended for use with a SIM application Tool-kit.

The SIM interface is powered by an internal regulator in the module. Both 1.8V and 3.0V SIM Cards are supported.

**Table 16: Pin Definition of the SIM Interface**

| Pin Name | Pin No. | Description   |
|----------|---------|---|
| SIM_VDD  | 14      | Supply power for SIM card. Automatic detection of SIM card voltage. 3.0V±5% and 1.8V±5%. Maximum supply current is around 10mA. |
| SIM_CLK  | 13      | SIM card clock.   |
| SIM_DATA | 11      | SIM card data I/O.  |
| SIM_RST  | 12      | SIM card reset.   |
| SIM_GND  | 10      | SIM card ground.  |

The reference circuit for a 6-pin SIM card socket is illustrated as the following figure.

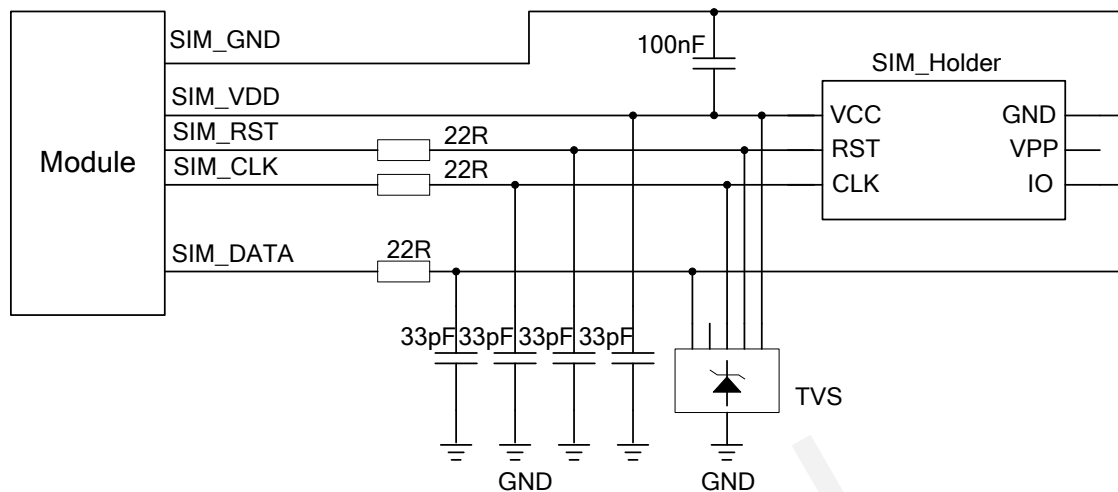

**Figure 33: Reference Circuit for SIM Interface with the 6-pin SIM Card Holder**

For more information of SIM card holder, you can visit <http://www.amphenol.com> and <http://www.molex.com>.

In order to enhance the reliability and availability of the SIM card in application. Please follow the below criteria in the SIM circuit design:

- Keep layout of SIM card as close as possible to the module. Assure the possibility of the length of the trace is less than 200mm.
- Keep SIM card signal away from RF and VBAT alignment.
- Assure the ground between module and SIM cassette short and wide. Keep the width of ground no less than 0.5mm to maintain the same electric potential. The decouple capacitor of SIM\_VDD is less than 1uF and must be near to SIM cassette.
- To avoid cross talk between SIM\_DATA and SIM\_CLK. Keep them away with each other and shield them with surrounded ground.
- In order to offer good ESD protection, it is recommended to add a TVS diode array. For more information of TVS diode, please visit <http://www.onsemi.com/>. The most important rule is to place the ESD protection device close to the SIM card socket and make sure the nets being protected will go through the ESD device first and then lead to module. The 22Ω resistors should be connected in series between the module and the SIM card so as to suppress the EMI spurious transmission and enhance the ESD protection. Please to be noted that the SIM peripheral circuit should be close to the SIM card socket.
- Place the RF bypass capacitors (33pF) close to the SIM card on all signals line for improving EMI.

### 3.11. ADC

The module provides an ADC channel to measure the value of voltage. Please give priority to the use of ADC0 channel. The command **AT+QADC** can read the voltage value applied on ADC0 pin. For details of this AT command, please refer to the **document [1]**. In order to improve the accuracy of ADC, the layout of ADC should be surrounded by ground.

**Table 17: Pin Definition of the ADC**

| Pin Name | Pin No. | Description                      |
|----------|---------|----------------------------------|
| AVDD     | 8       | Reference voltage of ADC circuit |
| ADC0     | 9       | Analog to digital converter.     |

**Table 18: Characteristics of the ADC**

| Item           | Min. | Typ. | Max. | Units |
|----------------|------|------|------|-------|
| Voltage Range  | 0    |      | 2.8  | V     |
| ADC Resolution |      | 10   |      | bits  |
| ADC Accuracy   |      | 2.7  |      | mV    |


### 3.12. Behaviors of The RI

**Table 19: Behaviors of the RI**


| State     | RI Response   |
|-----------|---|
| Standby   | HIGH  |
| Voicecall | Change to LOW, then: <ol style="list-style-type: none"> <li>1. Change to HIGH when call is established.</li> <li>2. Use ATH to hang up the call, RI changes to HIGH.</li> <li>3. Calling part hangs up, RI changes to HIGH first, and changes to LOW for 120ms indicating "NO CARRIER" as an URC, then changes to HIGH again.</li> <li>4. Change to HIGH when SMS is received.</li> </ol> |
| SMS       | When a new SMS comes, the RI changes to LOW and holds low level for about   |

|     |   |
|-----|---|
|     | 120ms, then changes to HIGH.  |
| URC | Certain URCs can trigger 120ms low level on RI. For more details, please refer to the <b>document [1]</b> |


If the module is used as a caller, the RI would maintain high except the URC or SMS is received. On the other hand, when it is used as a receiver, the timing of the RI is shown below.

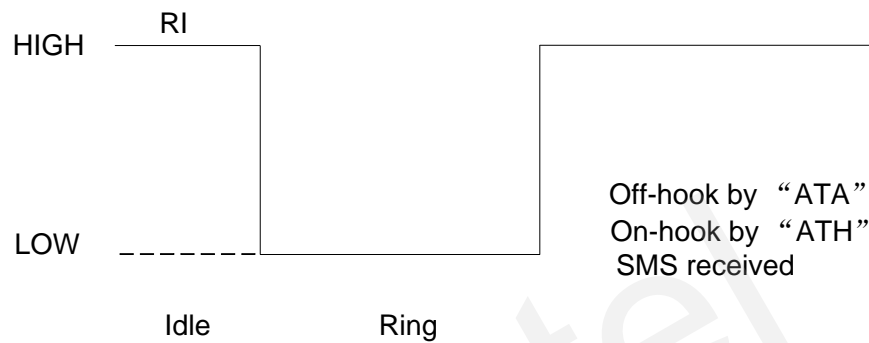

**Figure 34: RI Behavior of Voice Calling as a Receiver**

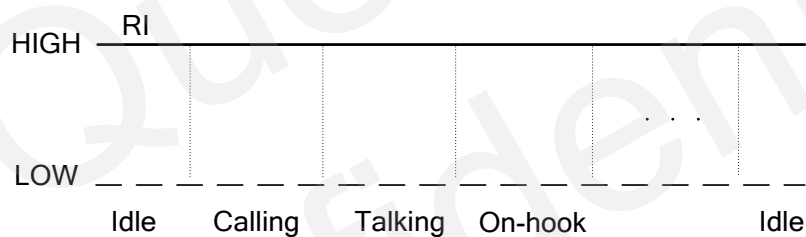

**Figure 35: RI Behavior as a Caller**

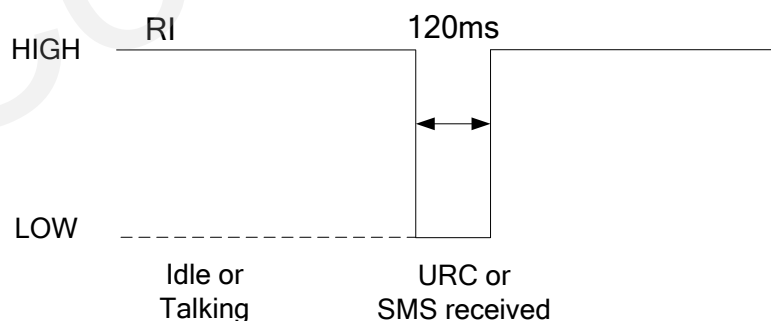

**Figure 36: RI Behavior of URC or SMS Received**


### 3.13. Network Status Indication

The NETLIGHT signal can be used to drive a network status indicator LED. The working state of this pin is listed in the following table.

**Table 20: Working State of the NETLIGHT**

| State              | Module Function  |
|--------------------|--|
| Off                | The module is not running.                                   |
| 64ms On/800ms Off  | The module is not synchronized with network.                 |
| 64ms On/2000ms Off | The module is synchronized with network.                     |
| 64ms On/600ms Off  | The GPRS data transmission after dialing the PPP connection. |

A reference circuit is shown as below.

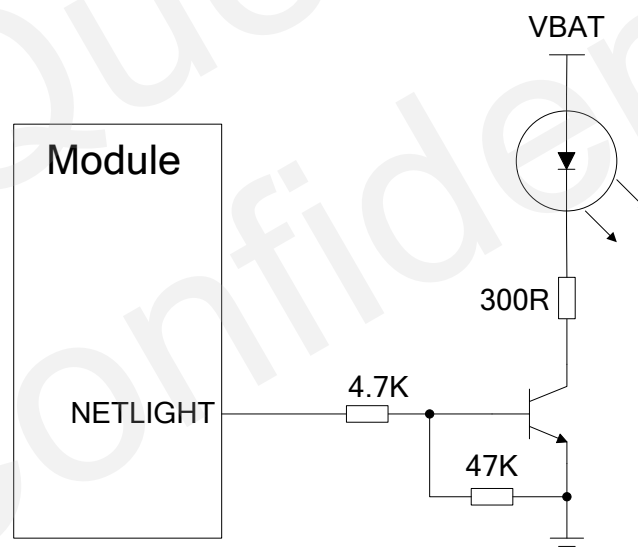

**Figure 37: Reference Design for NETLIGHT**

### 3.14. RF Transmitting Signal Indication

The M66 provides a RFTXMON pins which will rise when the transmitter is active and fall after the transmitter activity is completed.

**Table 21: Pin Definition of the RFTXMON**

| Pin Name | Pin No. | Description                    |
|----------|---------|--------------------------------|
| RFTXMON  | 25      | Transmission signal indication |


There are two different modes for this function:

#### 1) Active during the TX activity

RFTXMON pin is used to indicate the TX burst, when it outputs a high level, 220us later there will be a TX burst.

You can execute **AT+QCFG="RFTXburst", 1** to enable the function.

The timing of the RFTXMON signal is shown below.

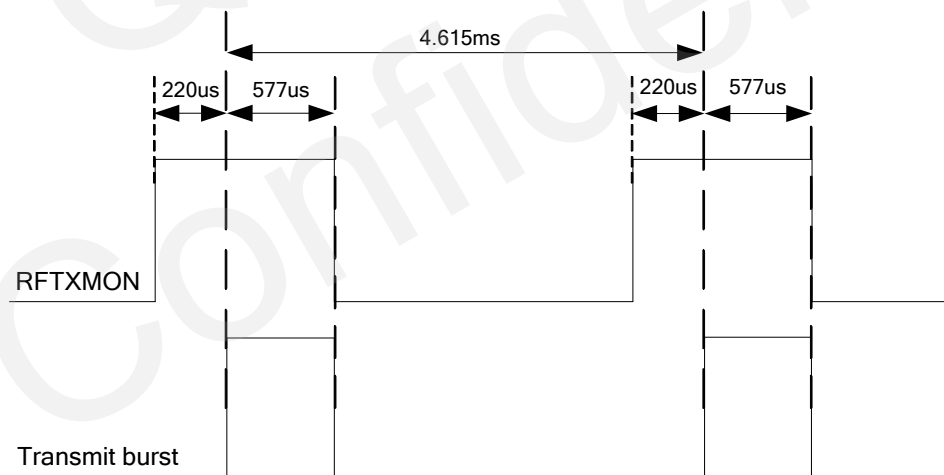


**Figure 38: RFTXMON Signal during Burst Transmission**

## 2) Active during the Call

RFTXMON will be HIGH during a call and the pin will become LOW after being hanged up.

You can execute **AT+QCFG="RFTXburst", 2** to enable the function.

The timing of the RFTXMON signal is shown below.

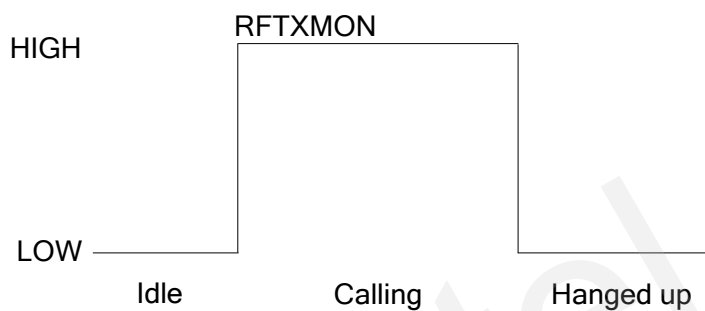

**Figure 39: RFTXMON Signal during Call**



## 4 Antenna Interface

M66 has two antenna interfaces, GSM antenna and BT antenna. The Pin 26 is the Bluetooth antenna pad. The Pin 35 is the GSM antenna pad. The RF interface of the two antenna pad has an impedance of 50Ω.

### 4.1. GSM Antenna Interface


There is a GSM antenna pad named RF\_ANT for M66.

**Table 22: Pin Definition of the RF\_ANT**

| Pin Name | Pin No. | Description     |
|----------|---------|-----------------|
| GND      | 34      | Ground          |
| RF_ANT   | 35      | GSM antenna pad |
| GND      | 36      | Ground          |
| GND      | 37      | Ground          |

#### 4.1.1. Reference Design

The external antenna must be matched properly to achieve best performance, so the matching circuit is necessary, the reference design for RF is shown as below.

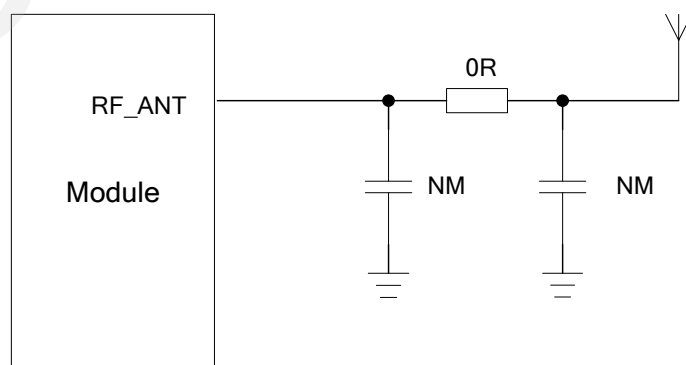

**Figure 40: Reference Design for GSM Antenna**

M66 provides an RF antenna pad for antenna connection. The RF trace in host PCB connected to the module RF antenna pad should be coplanar waveguide line or microstrip line, whose characteristic impedance should be close to 50Ω. M66 comes with grounding pads which are next to the antenna pad in order to give a better grounding. Besides, a  $\pi$  type match circuit is suggested to be used to adjust the RF performance.

To minimize the loss on the RF trace and RF cable, take design into account carefully. The following table shows the requirement on GSM antenna.

**Table 23: Antenna Cable Requirements**

| Type            | Requirements                |
|-----------------|-----------------------------|
| GSM850/EGSM900  | Cable insertion loss <1dB   |
| DCS1800/PCS1900 | Cable insertion loss <1.5dB |

**Table 24: Antenna Requirements**

| Type                         | Requirements   |
|------------------------------|--|
| Frequency Range              | Depending by frequency band (s) provided by the network operator |
| VSWR                         | $\leq 2$   |
| Gain (dBi)                   | 1  |
| Max Input Power (W)          | 50   |
| Input Impedance ( $\Omega$ ) | 50   |
| Polarization Type            | Vertical   |

#### 4.1.2. RF Output Power

**Table 25: The Module Conducted RF Output Power**

| Frequency | Max.            | Min.           |
|-----------|-----------------|----------------|
| GSM850    | 33dBm $\pm$ 2dB | 5dBm $\pm$ 5dB |
| EGSM900   | 33dBm $\pm$ 2dB | 5dBm $\pm$ 5dB |
| DCS1800   | 30dBm $\pm$ 2dB | 0dBm $\pm$ 5dB |

PCS1900

30dBm±2dB

0dBm±5dB

#### NOTE

In GPRS 4 slots TX mode, the max output power is reduced by 2.5dB. This design conforms to the GSM specification as described in section **13.16** of **3GPP TS 51.010-1**.

### 4.1.3. RF Receiving Sensitivity

**Table 26: The Module Conducted RF Receiving Sensitivity**

| Frequency | Receive Sensitivity |
|-----------|---------------------|
| GSM850    | < -109dBm           |
| EGSM900   | < -109dBm           |
| DCS1800   | < -109dBm           |
| PCS1900   | < -109dBm           |

### 4.1.4. Operating Frequencies

**Table 27: The Module Operating Frequencies**

| Frequency | Receive      | Transmit     | ARFCH           |
|-----------|--------------|--------------|-----------------|
| GSM850    | 869~894MHz   | 824~849MHz   | 128~251         |
| EGSM900   | 925~960MHz   | 880~915MHz   | 0~124, 975~1023 |
| DCS1800   | 1805~1880MHz | 1710~1785MHz | 512~885         |
| PCS1900   | 1930~1990MHz | 1850~1910MHz | 512~810         |

#### 4.1.5. RF Cable Soldering

Soldering the RF cable to RF pad of module correctly will reduce the loss on the path of RF, please refer to the following example of RF soldering.

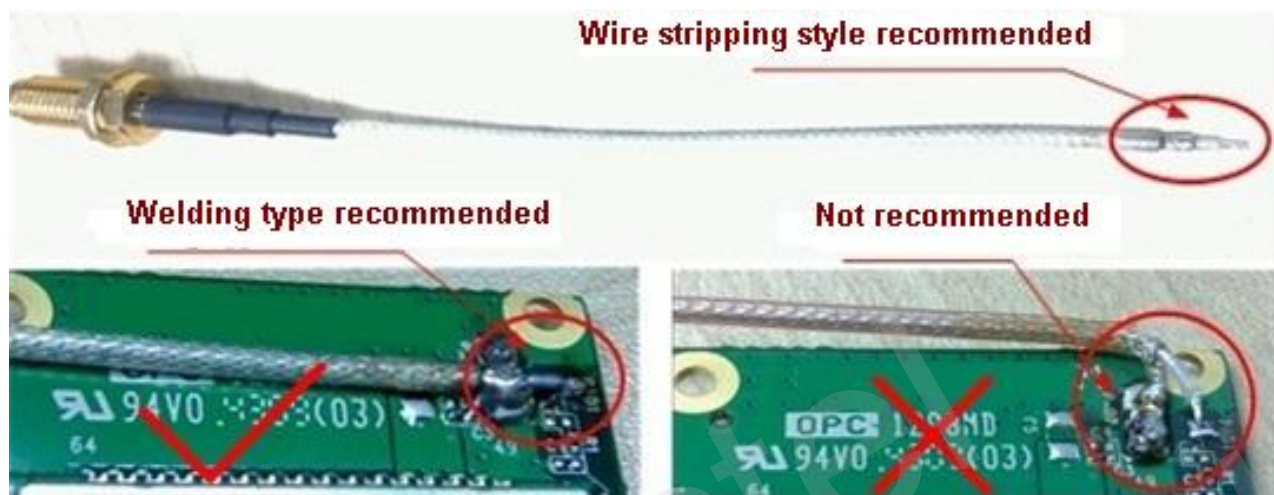


Figure 41: RF Soldering Sample

#### 4.2. Bluetooth Antenna Interface

M66 supports Bluetooth interface. Bluetooth is a wireless technology that allows devices to communicate, or transmit data or voice, wirelessly over a short distance. It is described as a short-range communication technology intended to replace the cables connecting portable and/or fixed devices while maintaining high level of security. Bluetooth is standardized as IEEE802.15 and operates in the 2.4 GHz range using RF technology. Its data rates of up to 3Mbps.


M66 is fully compliant with Bluetooth specification 3.0. M66 supports profile including SPP and OPP.

The module provides a Bluetooth antenna pad named BT\_ANT.

Table 28: Pin Definition of the BT\_ANT

| Pin Name | Pin No. | Description    |
|----------|---------|----------------|
| BT_ANT   | 26      | BT antenna pad |
| GND      | 27      | Ground         |

The external antenna must be matched properly to achieve best performance, so the matching circuit is necessary, the connection is recommended as in the following figure:

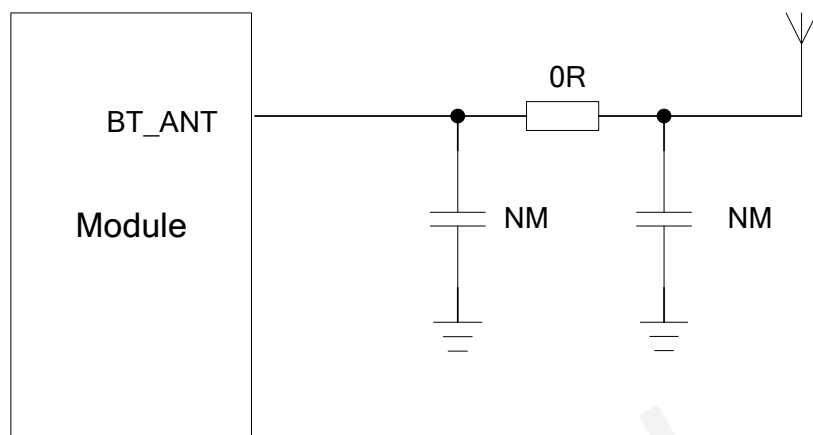

**Figure 42: Reference Design for Bluetooth Antenna**

There are some suggestions for placing components and RF trace lying for Bluetooth RF traces:

- Antenna matching circuit should be closed to the antenna;
- Keep the RF traces as 50Ω;
- The RF traces should be kept far away from the high frequency signals and strong disturbing source.

# 5 Electrical, Reliability and Radio Characteristics

## 5.1. Absolute Maximum Ratings

Absolute maximum ratings for power supply and voltage on digital and analog pins of module are listed in the following table:

**Table 29: Absolute Maximum Ratings**

| Parameter  | Min.  | Max.  | Unit |
|--|-------|-------|------|
| VBAT   | -0.3  | +4.73 | V    |
| Peak Current of Power Supply                         | 0     | 2     | A    |
| RMS Current of Power Supply (during one TDMA- frame) | 0     | 0.7   | A    |
| Voltage at Digital Pins                              | -0.3  | 3.08  | V    |
| Voltage at Analog Pins                               | -0.3  | 3.08  | V    |
| Voltage at Digital/analog Pins in Power Down Mode    | -0.25 | 0.25  | V    |

## 5.2. Operating Temperature

The operating temperature is listed in the following table:

**Table 30: Operating Temperature**

| Parameter          | Min. | Typ. | Max. | Unit |
|--------------------|------|------|------|------|
| Normal Temperature | -35  | +25  | +80  | °C   |

|                                    |           |           |    |
|------------------------------------|-----------|-----------|----|
| Restricted Operation <sup>1)</sup> | -40 ~ -35 | +80 ~ +85 | °C |
| Storage Temperature                | -45       | +90       | °C |

**NOTE**

<sup>1)</sup> When the module works within this temperature range, the deviation from the GSM specification may occur. For example, the frequency error or the phase error will be increased.

### 5.3. Power Supply Ratings

**Table 31: The Module Power Supply Ratings**

| Parameter         | Description                            | Conditions   | Min. | Typ.    | Max. | Unit |
|-------------------|--|--|------|---------|------|------|
| VBAT              | Supply voltage                         | Voltage must stay within the min/max values, including voltage drop, ripple, and spikes. | 3.3  | 4.0     | 4.6  | V    |
|                   | Voltage drop during transmitting burst | Maximum power control level on GSM850 and EGSM900.                                       |      |         | 400  | mV   |
| I <sub>VBAT</sub> | Average supply current                 | Power down mode  |      | 150     |      | uA   |
|                   |  | SLEEP mode @DRX=5  |      | 1.3     |      | mA   |
|                   |  | Minimum functionality mode   |      |         |      |      |
|                   |  | AT+CFUN=0  |      |         |      |      |
|                   |  | IDLE mode  |      | 13      |      | mA   |
|                   |  | SLEEP mode   |      | 0.98    |      | mA   |
|                   |  | AT+CFUN=4  |      |         |      |      |
|                   |  | IDLE mode  |      | 13      |      | mA   |
|                   |  | SLEEP mode   |      | 1.0     |      | mA   |
|                   |  | TALK mode  |      |         |      |      |
|                   |  | GSM850/EGSM900 <sup>1)</sup>   |      | 223/219 |      | mA   |
|                   |  | DCS1800/PCS1900 <sup>2)</sup>  |      | 153/151 |      | mA   |
|                   |  | DATA mode, GPRS (3Rx, 2Tx)   |      |         |      |      |
|                   |  | GSM850/EGSM900 <sup>1)</sup>   |      | 363/393 |      | mA   |
|                   |  | DCS1800/PCS1900 <sup>2)</sup>  |      | 268/257 |      | mA   |
|                   |  | DATA mode, GPRS (2 Rx, 3Tx)  |      |         |      |      |
|                   |  | GSM850/EGSM900 <sup>1)</sup>   |      | 506/546 |      | mA   |
|                   |  | DCS1800/PCS1900 <sup>2)</sup>  |      | 366/349 |      | mA   |

|  |  |                       |   |    |
|--|--|-----------------------|---|----|
|  | DATA mode, GPRS (4 Rx, 1Tx)                        |                       |   |    |
|  | GSM850/EGSM900 <sup>1)</sup>                       | 217/234               |   | mA |
|  | DCS1800/PCS1900 <sup>2)</sup>                      | 172/170               |   | mA |
|  | DATA mode, GPRS (1Rx, 4Tx)                         |                       |   |    |
|  | GSM850/EGSM900 <sup>1)</sup>                       | 458/485 <sup>3)</sup> |   | mA |
|  | DCS1800/PCS1900 <sup>2)</sup>                      | 462/439               |   | mA |
| Peak supply current (during transmission slot) | Maximum power control level on GSM850 and EGSM900. | 1.6                   | 2 | A  |

#### NOTE

- 1) Power control level PCL 5.
- 2) Power control level PCL 0.
- 3) Under the GSM850 and EGSM900 spectrum, the power of 1Rx and 4Tx has been reduced.

## 5.4. Current Consumption

The values of current consumption are shown as below.

**Table 32: The Module Current Consumption**

| Condition         | Current Consumption   |
|-------------------|---|
| <b>Voice Call</b> |   |
| GSM850            | @power level #5 <300mA, Typical 223mA<br>@power level #12, Typical 83mA<br>@power level #19, Typical 62mA |
| EGSM900           | @power level #5 <300mA, Typical 219mA<br>@power level #12, Typical 83mA<br>@power level #19, Typical 63mA |
| DCS1800           | @power level #0 <250mA, Typical 153mA<br>@power level #7, Typical 73mA<br>@power level #15, Typical 60mA  |
| PCS1900           | @power level #0 <250mA, Typical 151mA<br>@power level #7, Typical 76mA<br>@power level #15, Typical 61mA  |
| <b>GPRS Data</b>  |   |



---

DATA Mode, GPRS ( 3 Rx, 2Tx ) CLASS 12

---

|         |  |
|---------|--|
| GSM850  | @power level #5 <550mA, Typical 363mA<br>@power level #12, Typical 131mA<br>@power level #19, Typical 91mA |
| EGSM900 | @power level #5 <550mA, Typical 393mA<br>@power level #12, Typical 132mA<br>@power level #19, Typical 92mA |
| DCS1800 | @power level #0 <450mA, Typical 268mA<br>@power level #7, Typical 112mA<br>@power level #15, Typical 88mA  |
| PCS1900 | @power level #0 <450mA, Typical 257mA<br>@power level #7, Typical 119mA<br>@power level #15, Typical 89mA  |

---

DATA Mode, GPRS ( 2 Rx, 3Tx ) CLASS 12

---

|         |   |
|---------|---|
| GSM850  | @power level #5 <640mA, Typical 506mA<br>@power level #12, Typical 159mA<br>@power level #19, Typical 99mA  |
| EGSM900 | @power level #5 <600mA, Typical 546mA<br>@power level #12, Typical 160mA<br>@power level #19, Typical 101mA |
| DCS1800 | @power level #0 <490mA, Typical 366mA<br>@power level #7, Typical 131mA<br>@power level #15, Typical 93mA   |
| PCS1900 | @power level #0 <480mA, Typical 348mA<br>@power level #7, Typical 138mA<br>@power level #15, Typical 94mA   |

---

DATA Mode, GPRS ( 4 Rx, 1Tx ) CLASS 12

---

|         |  |
|---------|--|
| GSM850  | @power level #5 <350mA, Typical 216mA<br>@power level #12, Typical 103mA<br>@power level #19, Typical 83mA |
| EGSM900 | @power level #5 <350mA, Typical 233mA<br>@power level #12, Typical 104mA<br>@power level #19, Typical 84mA |
| DCS1800 | @power level #0 <300mA, Typical 171mA<br>@power level #7, Typical 96mA<br>@power level #15, Typical 82mA   |
| PCS1900 | @power level #0 <300mA, Typical 169mA<br>@power level #7, Typical 98mA<br>@power level #15, Typical 83mA   |

---

DATA Mode, GPRS ( 1 Rx, 4Tx ) CLASS 12

---

|         |   |
|---------|---|
| GSM850  | @power level #5 <660mA, Typical 457mA<br>@power level #12, Typical 182mA<br>@power level #19, Typical 106mA |
| EGSM900 | @power level #5 <660mA, Typical 484mA<br>@power level #12, Typical 187mA<br>@power level #19, Typical 109mA |
| DCS1800 | @power level #0 <530mA, Typical 461mA<br>@power level #7, Typical 149mA<br>@power level #15, Typical 97mA   |
| PCS1900 | @power level #0 <530mA, Typical 439mA<br>@power level #7, Typical 159mA<br>@power level #15, Typical 99mA   |

**NOTE**

GPRS Class 12 is the default setting. The module can be configured from GPRS Class 1 to Class 12. Setting to lower GPRS class would make it easier to design the power supply for the module.

## 5.5. Electro-static Discharge

Although the GSM engine is generally protected against Electro-static Discharge (ESD), ESD protection precautions should still be emphasized. Proper ESD handling and packaging procedures must be applied throughout the processing, handling and operation of any applications using the module.

The measured ESD values of module are shown as the following table:

**Table 33: The ESD Endurance (Temperature: 25°C, Humidity: 45%)**

| Tested Point | Contact Discharge | Air Discharge |
|--------------|-------------------|---------------|
| VBAT, GND    | ±5KV              | ±10KV         |
| RF_ANT       | ±5KV              | ±10KV         |
| TXD, RXD     | ±2KV              | ±4KV          |
| Others       | ±0.5KV            | ±1KV          |

# 6 Mechanical Dimensions

This chapter describes the mechanical dimensions of the module.

## 6.1. Mechanical Dimensions of Module

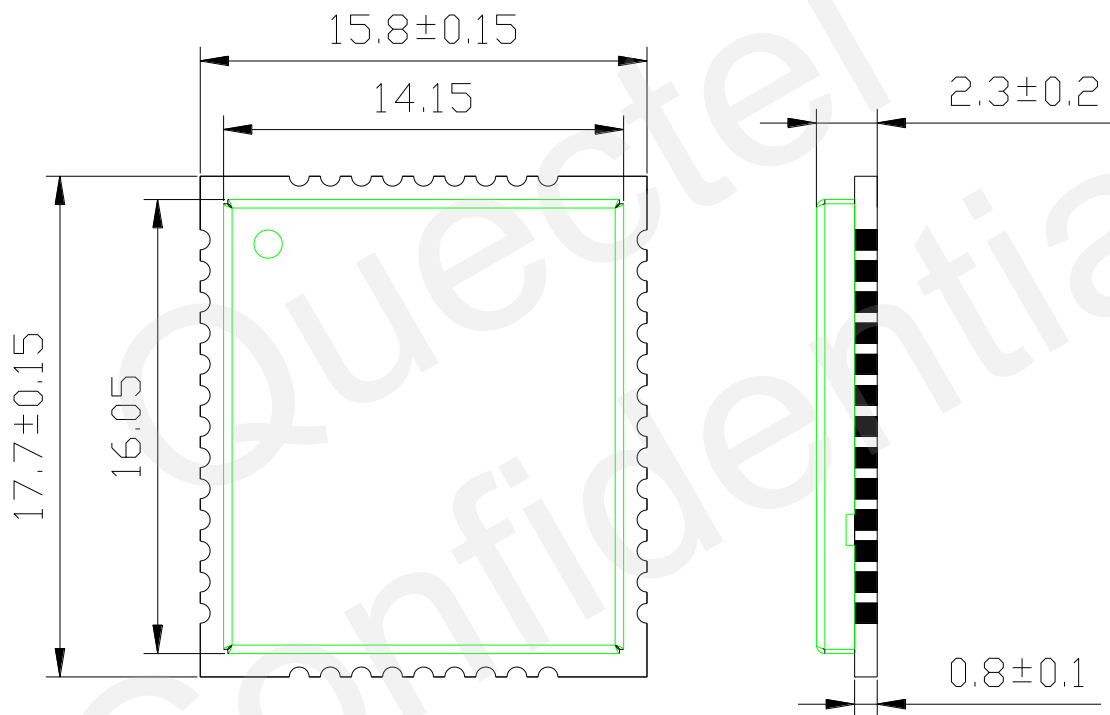


Figure 43: M66 Module Top and Side Dimensions (Unit: mm)

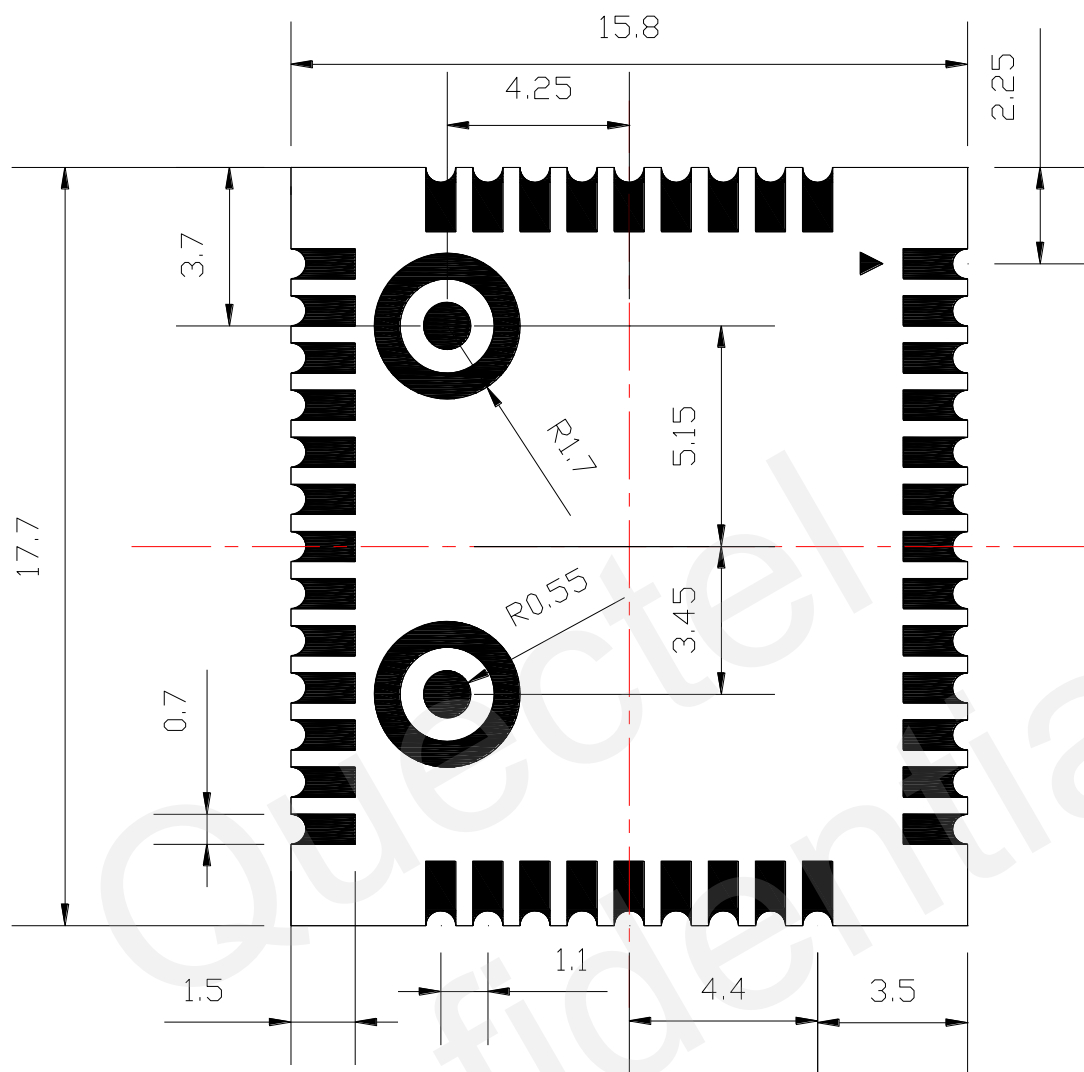


Figure 44: M66 Module Bottom Dimensions (Unit: mm)

## 6.2. Recommended Footprint

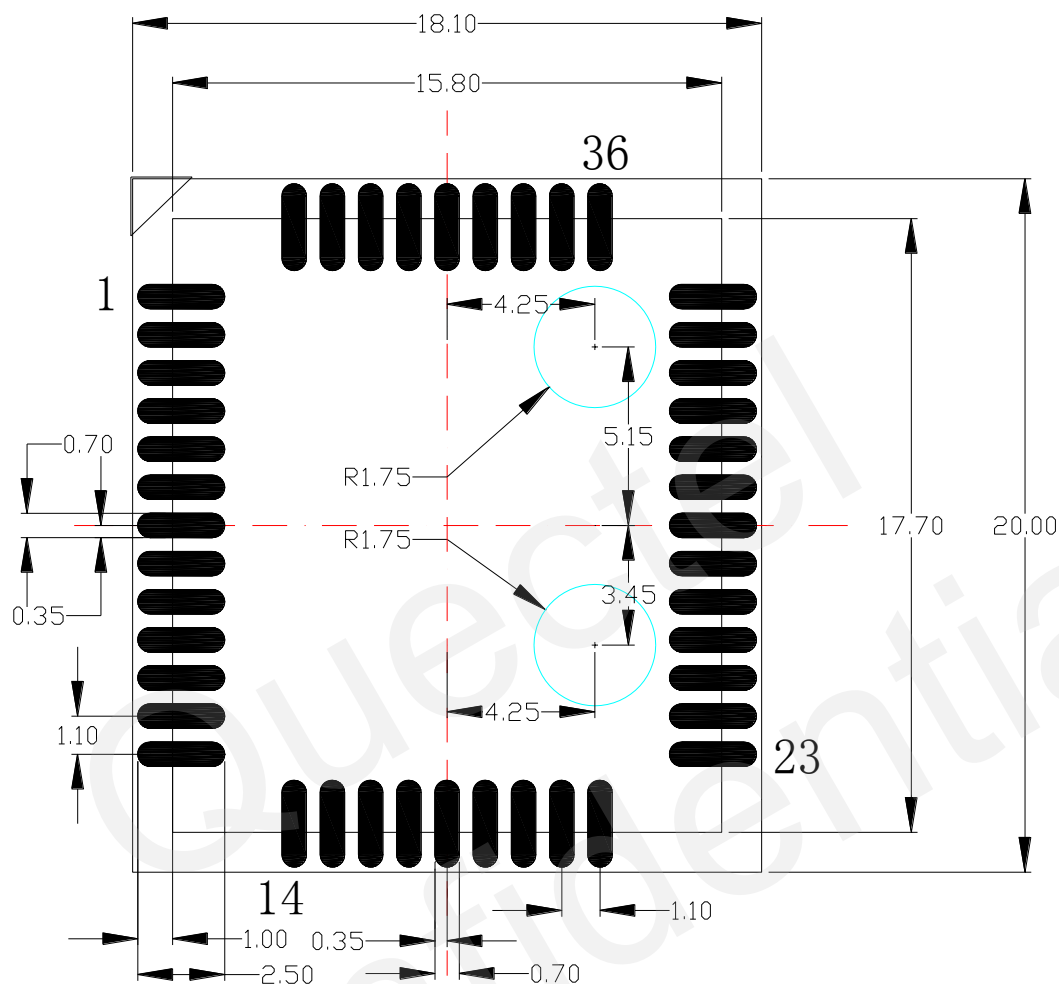


Figure 45: Recommended Footprint (Unit: mm)

### NOTE

1. The module should be kept about 3mm away from other components in the host PCB.
2. The circular test points with a radius of 1.75mm in the above recommended footprint should be treated as keepout areas. ("keepout" means do not pour copper on the mother board).

### 6.3. Top View of the Module



Figure 46: Top View of the Module

### 6.4. Bottom View of the Module

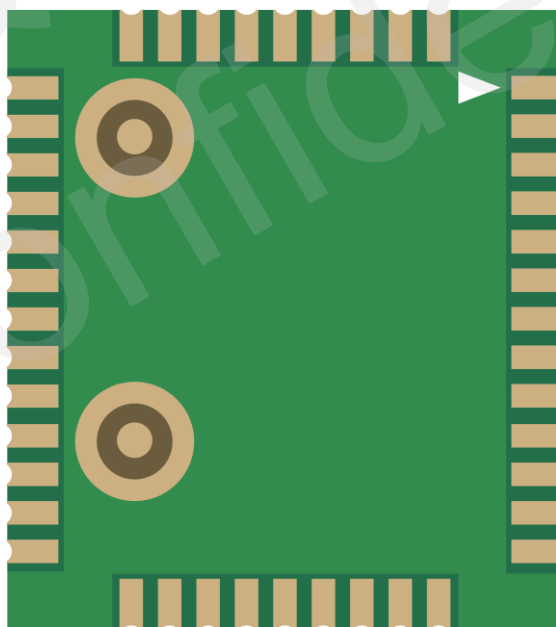


Figure 47: Bottom View of the Module

# 7 Storage and Manufacturing

## 7.1. Storage

M66 module is distributed in a vacuum-sealed bag. The restriction for storage is shown as below.

Shelf life in the vacuum-sealed bag: 12 months at environments of  $<40^{\circ}\text{C}$  temperature and  $<90\%\text{RH}$ .

After the vacuum-sealed bag is opened, devices that need to be mounted directly must be:

- Mounted within 72 hours at the factory environment of  $\leq 30^{\circ}\text{C}$  temperature and  $<60\%\text{RH}$ .
- Stored at  $<10\%\text{RH}$ .

Devices require baking before mounting, if any circumstance below occurs.

- When the ambient temperature is  $23^{\circ}\text{C}\pm 5^{\circ}\text{C}$ , humidity indication card shows the humidity is  $>10\%$  before opening the vacuum-sealed bag.
- If ambient temperature is  $<30^{\circ}\text{C}$  and the humidity is  $<60\%$ , the devices have not been mounted during 72hours.
- Stored at  $>10\%\text{RH}$ .

If baking is required, devices should be baked for 48 hours at  $125^{\circ}\text{C}\pm 5^{\circ}\text{C}$ .

### NOTE

As plastic container cannot be subjected to high temperature, devices must be removed prior to high temperature ( $125^{\circ}\text{C}$ ) bake. If shorter bake times are desired, refer to the IPC/JEDECJ-STD-033 for bake procedure.

## 7.2. Soldering

The squeegee should push the paste on the surface of the stencil that makes the paste fill the stencil openings and penetrate to the PCB. The force on the squeegee should be adjusted so as to produce a clean stencil surface on a single pass. To ensure the module soldering quality, the thickness of stencil at the hole of the module pads should be 0.2 mm for M66. For more details, please refer to **document [12]**

It is suggested that peak reflow temperature is from 235°C to 245°C (for SnAg3.0Cu0.5 alloy). Absolute max reflow temperature is 260°C. To avoid damage to the module when it was repeatedly heated, it is suggested that the module should be mounted after the first panel has been reflowed. The following picture is the actual diagram which we have operated.

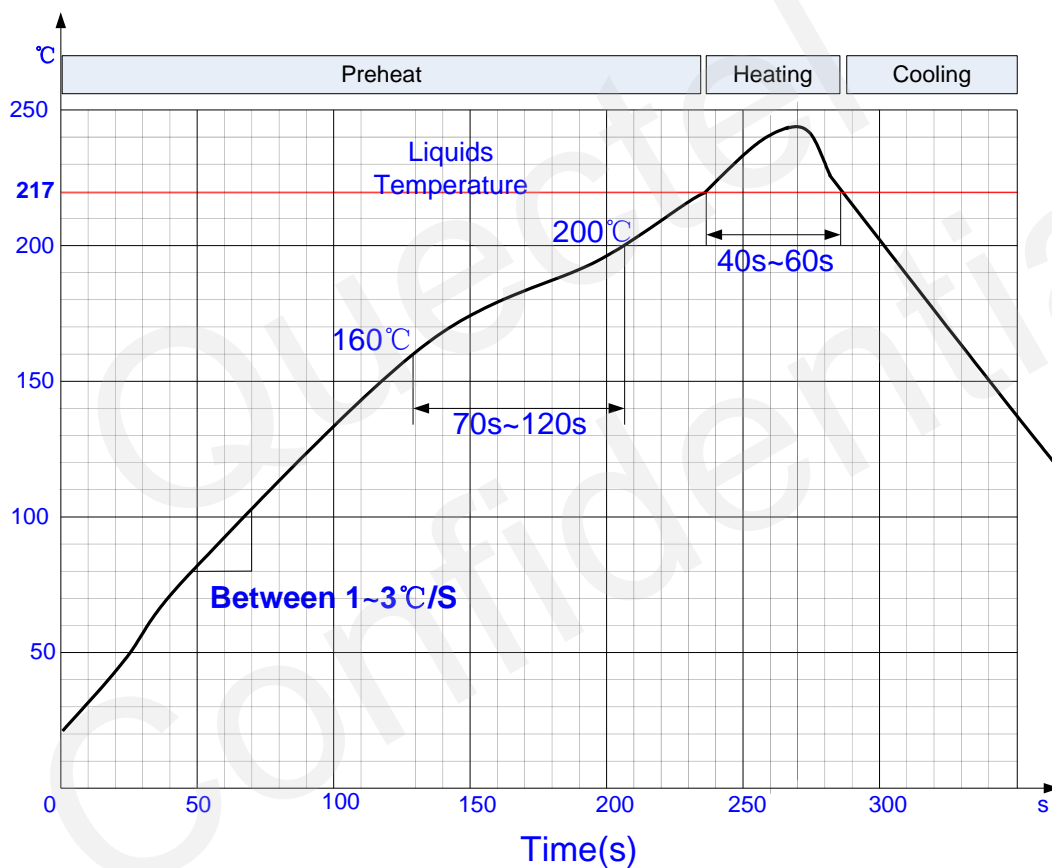


Figure 48: Ramp-Soak-Spike Reflow Profile

## 7.3. Packaging

The modules are stored in a vacuum-sealed bag which is ESD protected. It should not be opened until the devices are ready to be soldered onto the application.





# 8 Appendix A Reference

**Table 34: Related Documents**

| SN  | Document Name                          | Remark   |
|-----|--|--|
| [1] | Quectel_M66_AT_Commands_Manual         | AT commands manual   |
| [2] | ITU-T Draft new recommendation V.25ter | Serial asynchronous automatic dialing and control  |
| [3] | GSM 07.07                              | Digital cellular telecommunications (Phase 2+); AT command set for GSM Mobile Equipment (ME)   |
| [4] | GSM 07.10                              | Support GSM 07.10 multiplexing protocol  |
| [5] | GSM 07.05                              | Digital cellular telecommunications (Phase 2+); Use of Data Terminal Equipment – Data Circuit terminating Equipment (DTE – DCE) interface for Short Message Service (SMS) and Cell Broadcast Service (CBS) |
| [6] | GSM 11.14                              | Digital cellular telecommunications (Phase 2+); Specification of the SIM Application Toolkit for the Subscriber Identity module – Mobile Equipment (SIM – ME) interface                                    |
| [7] | GSM 11.11                              | Digital cellular telecommunications (Phase 2+); Specification of the Subscriber Identity module – Mobile Equipment (SIM – ME) interface  |
| [8] | GSM 03.38                              | Digital cellular telecommunications (Phase 2+); Alphabets and language-specific information  |
| [9] | GSM 11.10                              | Digital cellular telecommunications (Phase 2); Mobile Station (MS) conformance specification; Part 1: Conformance specification  |

|      |  |  |
|------|--|--|
| [10] | GSM_UART_Application_Note                      | UART port application note             |
| [11] | GSM_EVB_User_Guide                             | GSM EVB user guide                     |
| [12] | Module_Secondary_SMT_User_Guide                | Module secondary SMT user guide        |
| [13] | Quectel_GSM_Module_Digital_IO_Application_Note | GSM Module Digital IO Application Note |

**Table 35: Terms and Abbreviations**

| Abbreviation | Description   |
|--------------|---|
| ADC          | Analog-to-Digital Converter                                       |
| AMR          | Adaptive Multi-Rate   |
| ARP          | Antenna Reference Point   |
| ASIC         | Application Specific Integrated Circuit                           |
| BER          | Bit Error Rate  |
| BOM          | Bill of Material  |
| BT           | Bluetooth   |
| BTS          | Base Transceiver Station  |
| CHAP         | Challenge Handshake Authentication Protocol                       |
| CS           | Coding Scheme   |
| CSD          | Circuit Switched Data   |
| CTS          | Clear to Send   |
| DAC          | Digital-to-Analog Converter                                       |
| DRX          | Discontinuous Reception   |
| DSP          | Digital Signal Processor  |
| DCE          | Data Communications Equipment (typically module)                  |
| DTE          | Data Terminal Equipment (typically computer, external controller) |
| DTR          | Data Terminal Ready   |

|                    |  |
|--------------------|--|
| DTX                | Discontinuous Transmission               |
| EFR                | Enhanced Full Rate                       |
| EGSM               | Enhanced GSM                             |
| EMC                | Electromagnetic Compatibility            |
| ESD                | Electrostatic Discharge                  |
| ETS                | European Telecommunication Standard      |
| FCC                | Federal Communications Commission (U.S.) |
| FDMA               | Frequency Division Multiple Access       |
| FR                 | Full Rate                                |
| GMSK               | Gaussian Minimum Shift Keying            |
| GPRS               | General Packet Radio Service             |
| GSM                | Global System for Mobile Communications  |
| G.W                | Gross Weight                             |
| HR                 | Half Rate                                |
| I/O                | Input/Output                             |
| IC                 | Integrated Circuit                       |
| IMEI               | International Mobile Equipment Identity  |
| I <sub>o</sub> max | Maximum Output Load Current              |
| kbps               | Kilo Bits Per Second                     |
| LED                | Light Emitting Diode                     |
| Li-Ion             | Lithium-Ion                              |
| MO                 | Mobile Originated                        |
| MOQ                | Minimum Order Quantity                   |
| MP                 | Manufacture Product                      |
| MS                 | Mobile Station (GSM engine)              |

|             |   |
|-------------|---|
| MT          | Mobile Terminated                             |
| N.W         | Net Weight                                    |
| PAP         | Password Authentication Protocol              |
| PBCCH       | Packet Switched Broadcast Control Channel     |
| PCB         | Printed Circuit Board                         |
| PDU         | Protocol Data Unit                            |
| PPP         | Point-to-Point Protocol                       |
| RF          | Radio Frequency                               |
| RMS         | Root Mean Square (value)                      |
| RTC         | Real Time Clock                               |
| RX          | Receive Direction                             |
| SIM         | Subscriber Identification Module              |
| SMS         | Short Message Service                         |
| TDMA        | Time Division Multiple Access                 |
| TE          | Terminal Equipment                            |
| TX          | Transmitting Direction                        |
| UART        | Universal Asynchronous Receiver & Transmitter |
| URC         | Unsolicited Result Code                       |
| USSD        | Unstructured Supplementary Service Data       |
| VSWR        | Voltage Standing Wave Ratio                   |
| $V_{Omax}$  | Maximum Output Voltage Value                  |
| $V_{Onorm}$ | Normal Output Voltage Value                   |
| $V_{Omin}$  | Minimum Output Voltage Value                  |
| $V_{IHmax}$ | Maximum Input High Level Voltage Value        |
| $V_{IHmin}$ | Minimum Input High Level Voltage Value        |

|             |   |
|-------------|---|
| $V_{ILmax}$ | Maximum Input Low Level Voltage Value   |
| $V_{ILmin}$ | Minimum Input Low Level Voltage Value   |
| $V_{Imax}$  | Absolute Maximum Input Voltage Value    |
| $V_{Inorm}$ | Absolute Normal Input Voltage Value     |
| $V_{Imin}$  | Absolute Minimum Input Voltage Value    |
| $V_{OHmax}$ | Maximum Output High Level Voltage Value |
| $V_{OHmin}$ | Minimum Output High Level Voltage Value |
| $V_{OLmax}$ | Maximum Output Low Level Voltage Value  |
| $V_{OLmin}$ | Minimum Output Low Level Voltage Value  |

#### Phonebook Abbreviations

|    |   |
|----|---|
| LD | SIM Last Dialing phonebook (list of numbers most recently dialed) |
| MC | Mobile Equipment list of unanswered MT Calls (missed calls)       |
| ON | SIM (or ME) Own Numbers (MSISDNs) list                            |
| RC | Mobile Equipment list of Received Calls                           |
| SM | SIM phonebook   |


## 9 Appendix B GPRS Coding Scheme

Four coding schemes are used in GPRS protocol. The differences between them are shown in the following table.

**Table 36: Description of Different Coding Schemes**

| Scheme | Code Rate | USF | Pre-coded USF | Radio Block excl.USF and BCS | BCS | Tail | Coded Bits | Punctured Bits | Data Rate Kb/s |
|--------|-----------|-----|---------------|------------------------------|-----|------|------------|----------------|----------------|
| CS-1   | 1/2       | 3   | 3             | 181                          | 40  | 4    | 456        | 0              | 9.05           |
| CS-2   | 2/3       | 3   | 6             | 268                          | 16  | 4    | 588        | 132            | 13.4           |
| CS-3   | 3/4       | 3   | 6             | 312                          | 16  | 4    | 676        | 220            | 15.6           |
| CS-4   | 1         | 3   | 12            | 428                          | 16  | -    | 456        | -              | 21.4           |

Radio block structure of CS-1, CS-2 and CS-3 is shown as the figure below.

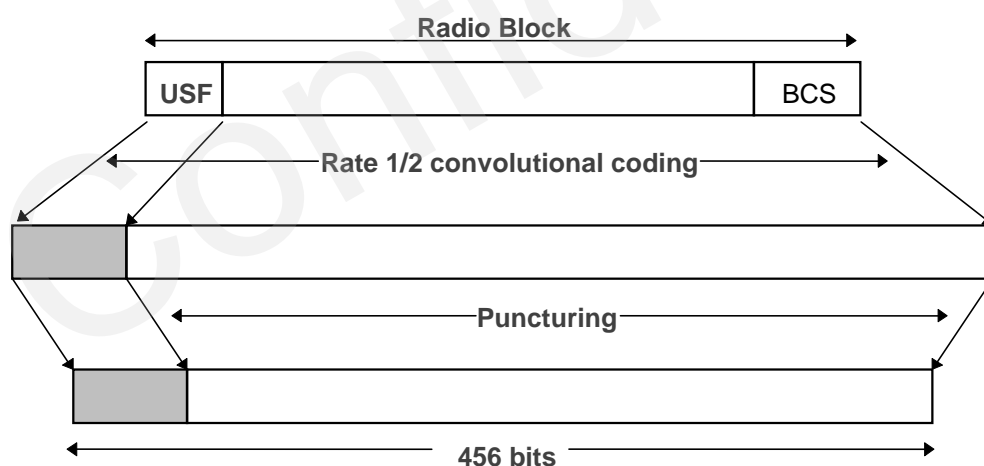

**Figure 51: Radio Block Structure of CS-1, CS-2 and CS-3**

Radio block structure of CS-4 is shown as the following figure.

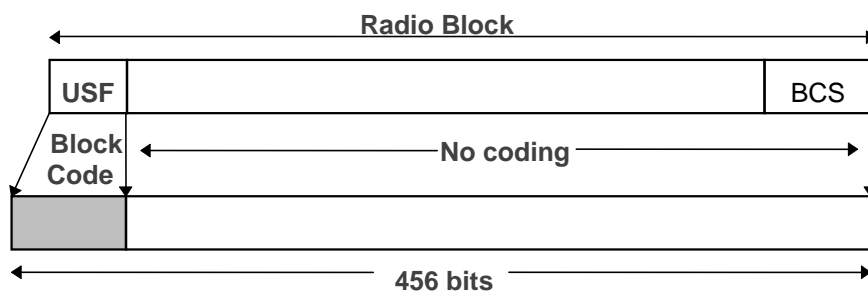


Figure 52: Radio Block Structure of CS-4



# 10 Appendix C GPRS Multi-slot Class

Twenty-nine classes of GPRS multi-slot modes are defined for MS in GPRS specification. Multi-slot classes are product dependant, and determine the maximum achievable data rates in both the uplink and downlink directions. Written as 3+1 or 2+2, the first number indicates the amount of downlink timeslots, while the second number indicates the amount of uplink timeslots. The active slots determine the total number of slots the GPRS device can use simultaneously for both uplink and downlink communications. The description of different multi-slot classes is shown in the following table.

**Table 37: GPRS Multi-slot Classes**

| Multislot Class | Downlink Slots | Uplink Slots | Active Slots |
|-----------------|----------------|--------------|--------------|
| 1               | 1              | 1            | 2            |
| 2               | 2              | 1            | 3            |
| 3               | 2              | 2            | 3            |
| 4               | 3              | 1            | 4            |
| 5               | 2              | 2            | 4            |
| 6               | 3              | 2            | 4            |
| 7               | 3              | 3            | 4            |
| 8               | 4              | 1            | 5            |
| 9               | 3              | 2            | 5            |
| 10              | 4              | 2            | 5            |
| 11              | 4              | 3            | 5            |
| 12              | 4              | 4            | 5            |