



Replacing an IP switch

ONTAP MetroCluster

Ivana Devine, Martin Houser, Ranu Kundu
July 16, 2021


Table of Contents

Replacing an IP switch 1

Replacing an IP switch

You might need to replace a failed switch, or upgrade or downgrade a switch. The new switch can be the same as the old switch when a switch has failed, or you can change the switch type (upgrade or downgrade the switch).

If you want to replace a failed switch with the same type of switch, you only need to replace the failed switch. If you want to upgrade or downgrade a switch, you need to adjust two switches that are in the same network. Two switches are in the same network if they are connected with an inter-switch link (ISL) and are not located at the same site. For example, Network 1 includes IP_switch_A_1 and IP_switch_B_1. Network 2 includes IP_switch_A_2 and IP_switch_B_2 as shown in the diagram below:

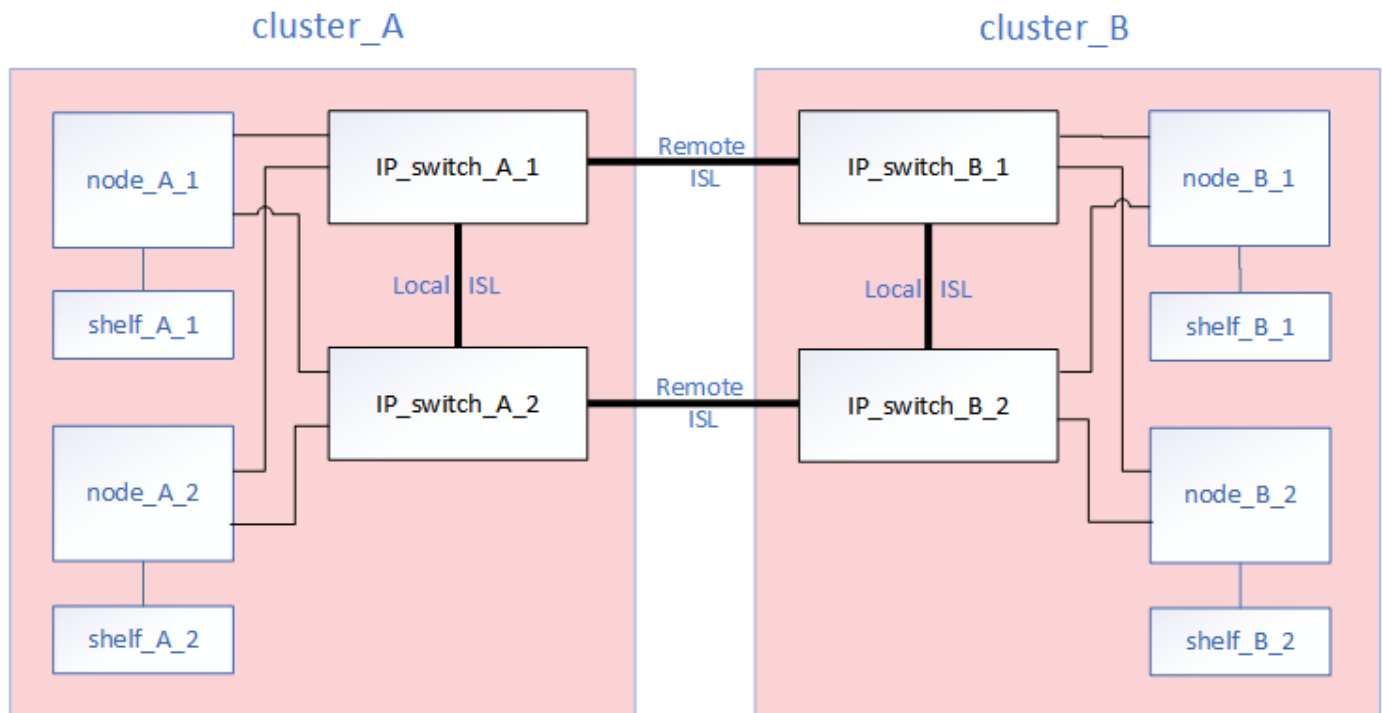

This procedure is for Cisco or Broadcom switches. If you want to change the switch vendor, further steps are required.

If you upgrade or downgrade the networks, you must repeat this procedure for the second network.

Steps

1. Check the health of the configuration.
 - a. Check that the MetroCluster is configured and in normal mode on each cluster: **metrocluster show**

```
cluster_A::> metrocluster show
```

Cluster	Entry Name	State
Local: cluster_A	Configuration state	configured
	Mode	normal
	AUSO Failure Domain	auso-on-cluster-
disaster		
Remote: cluster_B	Configuration state	configured
	Mode	normal
	AUSO Failure Domain	auso-on-cluster-
disaster		

- b. Check that mirroring is enabled on each node: **metrocluster node show**

```
cluster_A::> metrocluster node show
```

DR	Group	Cluster	Node	Configuration State	DR	Mirroring Mode
	1	cluster_A	node_A_1	configured	enabled	normal
		cluster_B	node_B_1	configured	enabled	normal

2 entries were displayed.

- c. Check that the MetroCluster components are healthy: **metrocluster check run**

```
cluster_A::> metrocluster check run
```

```
Last Checked On: 10/1/2014 16:03:37
```

Component	Result
nodes	ok
lifs	ok
config-replication	ok
aggregates	ok

4 entries were displayed.

Command completed. Use the "metrocluster check show -instance" command or sub-commands in "metrocluster check" directory for detailed results.

To check if the nodes are ready to do a switchover or switchback operation, run "metrocluster switchover -simulate" or "metrocluster switchback -simulate", respectively.

d. Check that there are no health alerts: **system health alert show**

2. Configure the new switch before installation.



If you are upgrading or downgrading the switches, you must configure all the switches in the network.

Follow the steps in the section *Configuring the IP switches* in the [MetroCluster IP Installation and Configuration Guide](#).

Make sure that you apply the correct RCF file for switch _A_1, _A_2, _B_1 or _B_2. If the new switch is the same as the old switch, you need to apply the same RCF file.

If you upgrade or downgrade a switch, apply the latest supported RCF file for the new switch.

3. Run the port show command to view information about the network ports:

```
network port show
```

4. Disconnect the ISL connections from the remote switch that connect to the old switch.

You should disconnect the ISL connections from the ports on the IP_switch_A_1 that connect to IP_switch_B_1.

5. Power off the switch, remove the cables and physically remove IP_switch_B_1.

6. Install the new switch.

Cable the new switch first (including the ISLs) according to the steps in the *Cabling the IP switches* section in the [MetroCluster IP Installation and Configuration Guide](#).



The used ports might be different from those on the old switch if the switch type is different. If you are upgrading or downgrading the switches, do **NOT** cable the local ISLs. Only cable the local ISLs if you are upgrading or downgrading the switches in the second network and both switches at one site are the same type.

7. Power up the switch or switches.

If the new switch is the same, power up the new switch. If you are upgrading or downgrading the switches, then power up both switches. The configuration can operate with two different switches at each site until the second network is updated.

8. Verify that the MetroCluster configuration is healthy by repeating step 1.

If you are upgrading or downgrading the switches in the first network, you might see some alerts related to local clustering.



If you upgrade or downgrade the networks, then repeat all of the steps for the second network.

Copyright Information

Copyright © 2021 NetApp, Inc. All rights reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means-graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system- without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

RESTRICTED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.277-7103 (October 1988) and FAR 52-227-19 (June 1987).

Trademark Information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.