

\*\*\*\*\*Draft\*\*\*\*\*

## QEMU Ultibo Bare Metal SerialConnection 07/21/21

\*\*\*\*\*Draft\*\*\*\*\*

<https://en.m.wikipedia.org/wiki/QEMU>


QEMU is a [hosted virtual machine monitor](#): it emulates the machine's [processor](#) through dynamic [binary translation](#) and provides a set of different hardware and device models for the machine, enabling it to run a variety of [guest operating systems](#). It also can be used with [Kernel-based Virtual Machine](#) (KVM) to run virtual machines at near-native speed (by taking advantage of hardware extensions such as [Intel VT-x](#)). QEMU can also do emulation for user-level processes, allowing applications compiled for one architecture to run on another.[\[3\]](#)

**Note : Additional software is needed to run QEMU “sudo apt-get install qemu-system-arm”.  
The following programs are added.**


**/usr/bin/qemu-img /usr/bin/qemu-nbd /usr/bin/qemu-system-aarch64  
/usr/bin/qemu-io /usr/bin/qemu-pr-helper /usr/bin/qemu-system-arm**

The command line for starting **Lazarus IDE (Ultibo Edition)** “~/ultibo/core/lazarus.sh”


Project/Project Open

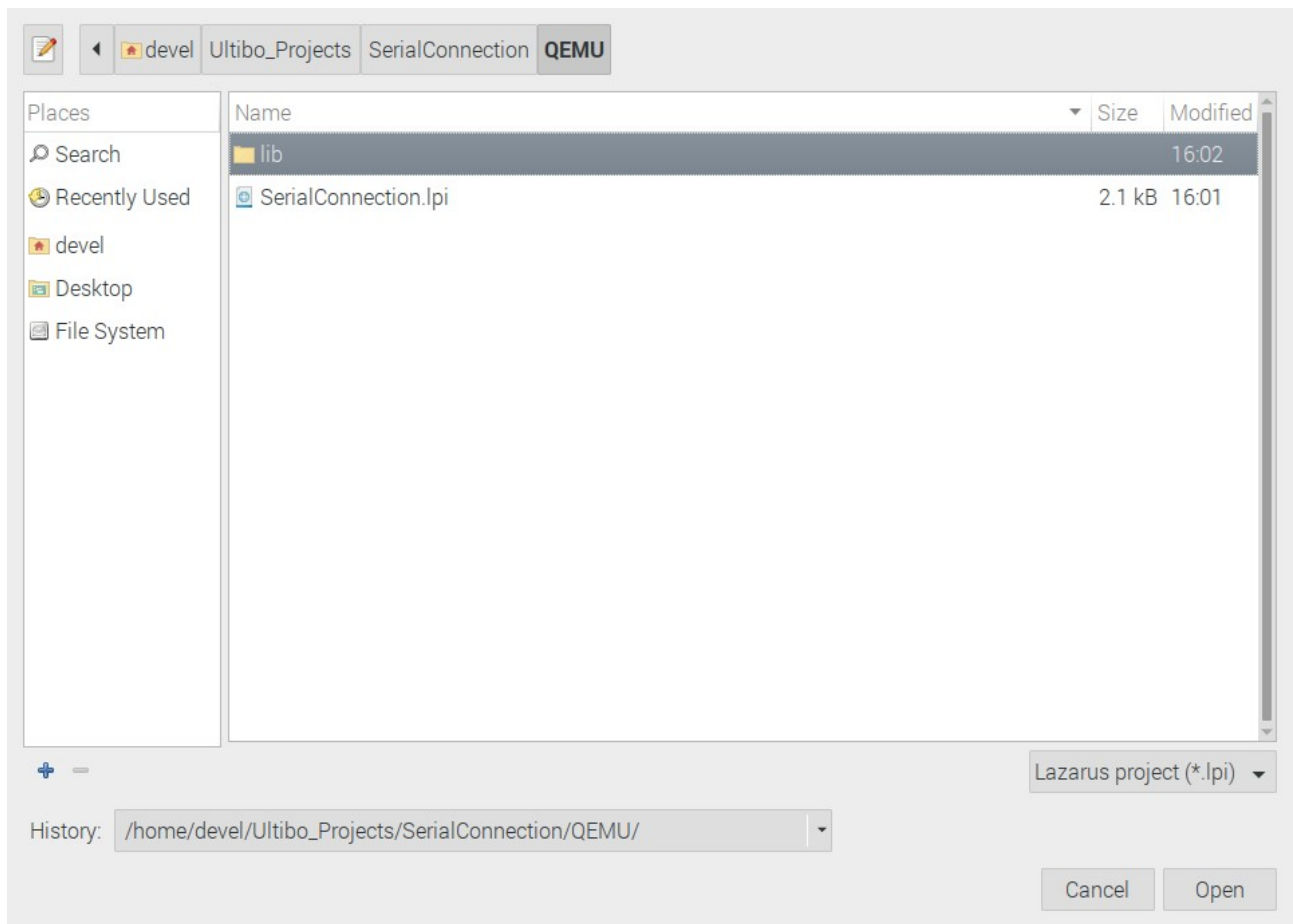

Laz0

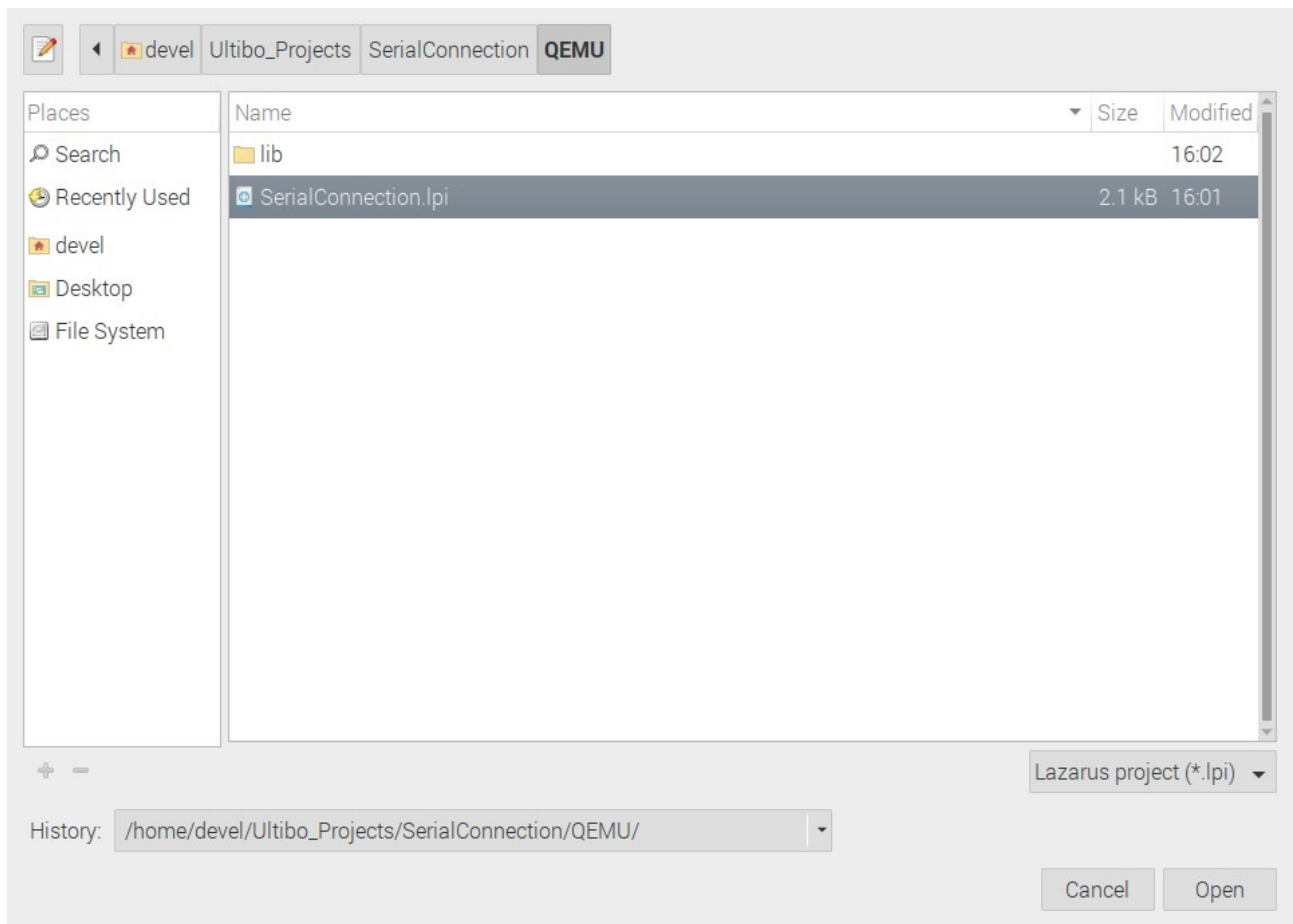

Depress Open

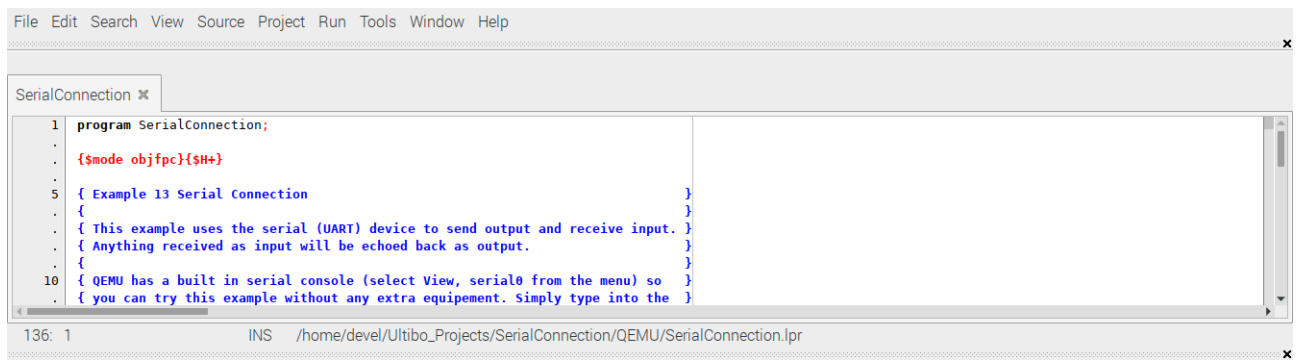


```
File Edit Search View Source Project Run Tools Window Help
SerialConnection x
1 program SerialConnection;
.
.
.
5 { Example 13 Serial Connection }
. { }
. { This example uses the serial (UART) device to send output and receive input. }
. { Anything received as input will be echoed back as output. }
. { }
10 { QEMU has a built in serial console (select View, serial0 from the menu) so }
. { you can try this example without any extra equipment. Simply type into the }
```

136: 1 INS /home/devel/Ultibo\_Projects/SerialConnection/QEMU/SerialConnection.lpr

Laz0

Run/Compile The kernel.bin is created when the Green bar appers.

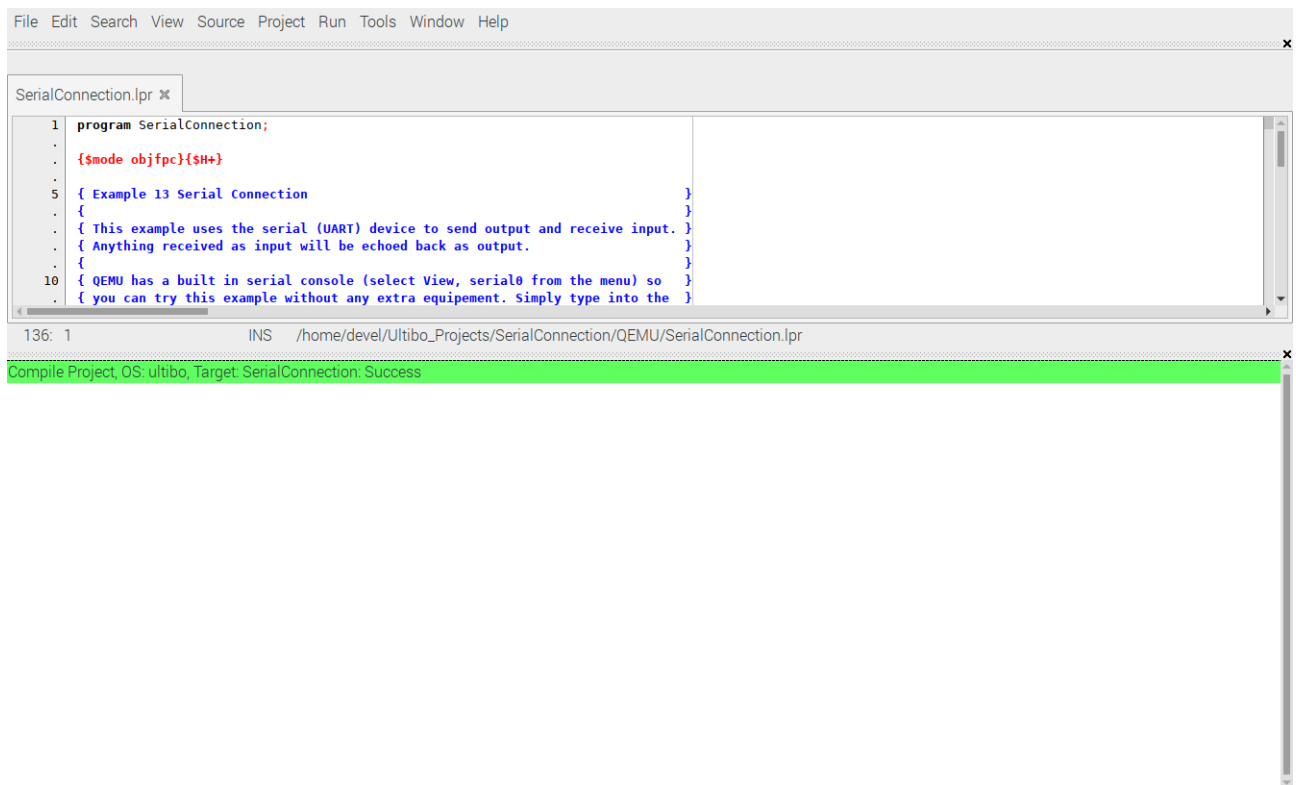

qemu

~/Ultibo\_Projects/SerialConnection/QEMU

qemu-system-arm -machine versatilepb -cpu cortex-a8 -kernel kernel.bin

Ultibo Core (Release: Beetroot Version: 2.1.005 Date: 14 May 2021)

Welcome to Example 13 Serial Connection  
Go to the serial console by selecting View, serial0 from the menu  
Serial device opened, type some text in the serial console and press Enter