

Mercury+ SA2 SoC Module

Reference Design for Mercury+ ST1 Base Board User Manual

Purpose

The purpose of this document is to present to the user the overall view of the Mercury+ SA2 SoC module reference design and to provide the user with a step-by-step guide to the complete Intel® SoC design flow used for the Mercury+ SA2 SoC module.

Summary

This document first gives an overview of the Mercury+ SA2 SoC module reference design and then guides through the complete Intel SoC design flow for the Mercury+ SA2 SoC module in the getting started section. In addition, the internals and the boot options of the Mercury+ SA2 SoC module reference design are described.

Product Information	Code	Name
Module	ME-SA2	Mercury+ SA2 SoC Module
Baseboard	ME-ST1	Mercury+ ST1 Base Board

Document Information	Reference	Version	Date
Reference / Version / Date	D-0000-490-005	2023.1_v1.0.0	18.04.2024

Approval Information	Name	Position	Date
Written by	ARUD	FPGA/SoC Embedded Software Engineer	14.04.2024
Verified by	ABUE	FPGA/SoC Senior Embedded Software Engineer	18.04.2024
Approved by	IJOS	Manager, BU SP	18.04.2024

License

Copyright 2024 by Enclustra GmbH, Switzerland.

Permission is hereby granted, free of charge, to any person obtaining a copy of this hardware, software, firmware, and associated documentation files (the "Product"), to deal in the Product without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Product, and to permit persons to whom the Product is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Product.

THE PRODUCT IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE PRODUCT OR THE USE OR OTHER DEALINGS IN THE PRODUCT.

Table of Contents

Table of Contents	3
1 Overview	5
1.1 Introduction	5
1.2 Path Variables	5
1.3 Prerequisites	7
2 Reference Design Description	8
2.1 Hard Processor System (HPS)	8
2.1.1 Clocks	8
2.1.2 PS DDR3 SDRAM	9
2.1.3 SD Card	9
2.1.4 I2C	9
2.1.5 Quad SPI Flash Controller	9
2.1.6 UART	9
2.1.7 Ethernet	10
2.1.8 USB	10
2.1.9 HPS GPIOs	10
2.2 FPGA Fabric	11
2.2.1 GPIOs	11
2.2.2 Dual Fast Ethernet	11
3 Getting Started	12
3.1 Essential Information	12
3.2 Setting up the Hardware	12
3.3 Generating the FPGA Bitstream	14
3.4 Programming the FPGA	15
3.5 Generating the Bootloader	16
3.6 Compiling the HelloWorld Application	17
3.6.1 Installing the ARM GNU Toolchain	17
3.6.2 Building the HelloWorld Application	17
4 Boot Configurations	19
4.1 Preparing the Boot Binaries	19
4.2 SD Card Boot	20
4.2.1 Generating the Image Files	20
4.2.2 Programming the SD Card	20
4.2.3 Preparing the Hardware	20
4.2.4 Booting from the SD Card	21
4.3 QSPI Flash Boot	22
4.3.1 Preparing the QSPI Binaries	22
4.3.2 Preparing the Hardware	22
4.3.3 Programming the QSPI Flash	22
4.3.4 Booting from the QSPI Flash	23
5 Troubleshooting	24
5.1 Enclustra Build Environment Issues	24
5.2 JTAG Issues	24
5.2.1 Detecting the JTAG Cable Fails	24
5.3 UART Connection Issues	24
5.3.1 Recognizing USB UART Fails	24
5.3.2 No Output in the Serial Console	24
5.4 Toolchain Issues	24

5.4.1	A Command is not Found	24
5.5	SD Boot Issues	25
5.6	QSPI Boot Issues	25
List of Figures		26
List of Tables		26
References		27

1 Overview

1.1 Introduction

The Mercury+ SA2 SoC module reference design demonstrates a system using the Mercury+ SA2 SoC module in combination with the Mercury+ ST1 base board. It presents the basic configuration of the device and contains a guided getting started tutorial.

A troubleshooting section is included at the end of the document to help the user solve potential issues related to board connectivity and system functionality.

This reference design includes a basic HelloWorld software example. In addition, Enclustra provides Application Notes [6] for selected applications.

An introduction to the Intel tools is provided by the documents below:

- HPS SoC Boot Guide – Cyclone V SoC Development Kit [16]
- Intel® Quartus® Prime Pro and Standard Software User Guides [8]
- Rocketboards Bootloader Guide [10]

More information on the Mercury+ SA2 SoC module and the Mercury+ ST1 base board can be found in the Mercury+ SA2 SoC Module User Manual [2] and the Mercury+ ST1 Base Board User Manual [3].

The following directory structure applies to the SA2 Reference Design:

Directory	Description
doc	Reference Design documentation
scripts	Scripts directory required for project creation and settings
src	Design pinout, timing constraints and VHDL source code directory
sw	HelloWorld application source files

Table 1: Directory Structure

1.2 Path Variables

The following variables are used to substitute the full path to directories relevant for the reference design build process. Paths not already present in the reference design directory will be created during the build process.

Variable	Full Path	Description
<base_dir>	<base_dir>	Reference design root directory as described in Section 1.1
<quartus_install_dir>	<quartus_install_dir>	Path to the Quartus 23.1 installation directory
<quartus_dir>	<base_dir>/Quartus/<module_name>/<boot_mode>	Quartus project directory
<quartus_outdir>	<base_dir>/Quartus/<module_name>/<boot_mode>/output_files	Quartus output directory
<ebe_dir>	<base_dir>/sw/bsp-altera	Enclustra Build Environment repository [13]
<u-boot_dir>	<base_dir>/sw/bsp-altera/sources/altera-uboot	U-boot source directory
<app_dir>	<base_dir>/sw/HelloWorld	HelloWorld source directory
<hwlib_dir>	<base_dir>/sw/intel-socfpga-hwlib	Intel SoC FPGA HWLIB repository [9]
<hps_handoff_dir>	<base_dir>/Quartus/<module_name>/<boot_mode>/hps_isw_handoff/Mercury_SA2_pd_hps_0	HPS handoff file directory

Table 2: Path Variables

1.3 Prerequisites

- IT infrastructure
 - Computer with a microSD card slot (optional¹)
 - Supported Linux OS² [7]
- Software
 - Intel® Quartus® Prime Software Suite 23.1 Standard or Lite Edition³
 - ARM GNU Toolchain [11]
- Hardware
 - Enclustra Mercury+ SA2 SoC module
 - Enclustra Mercury+ ST1 base board
- Accessories
 - 12 V DC power supply
 - Micro-USB cable
 - microSD card (optional¹)
 - USB-Blaster/USB-Blaster II download cable (optional⁴)

NOTICE



Damage to the device due to USB-Blaster cable incompatibilities

Refer to the Mercury+ SA2 SoC module User Manual [2] to find detailed information about a suitable download cable.

¹Only required for SD card boot mode.

²This reference design was built and tested with Ubuntu 20.04 and Ubuntu 22.04.

³Check the Mercury+ SA2 SoC Module User Manual [2] for details on device support in Quartus tools.

⁴Only required for loading the bitstream and/or programming the QSPI flash via Quartus.

2 Reference Design Description

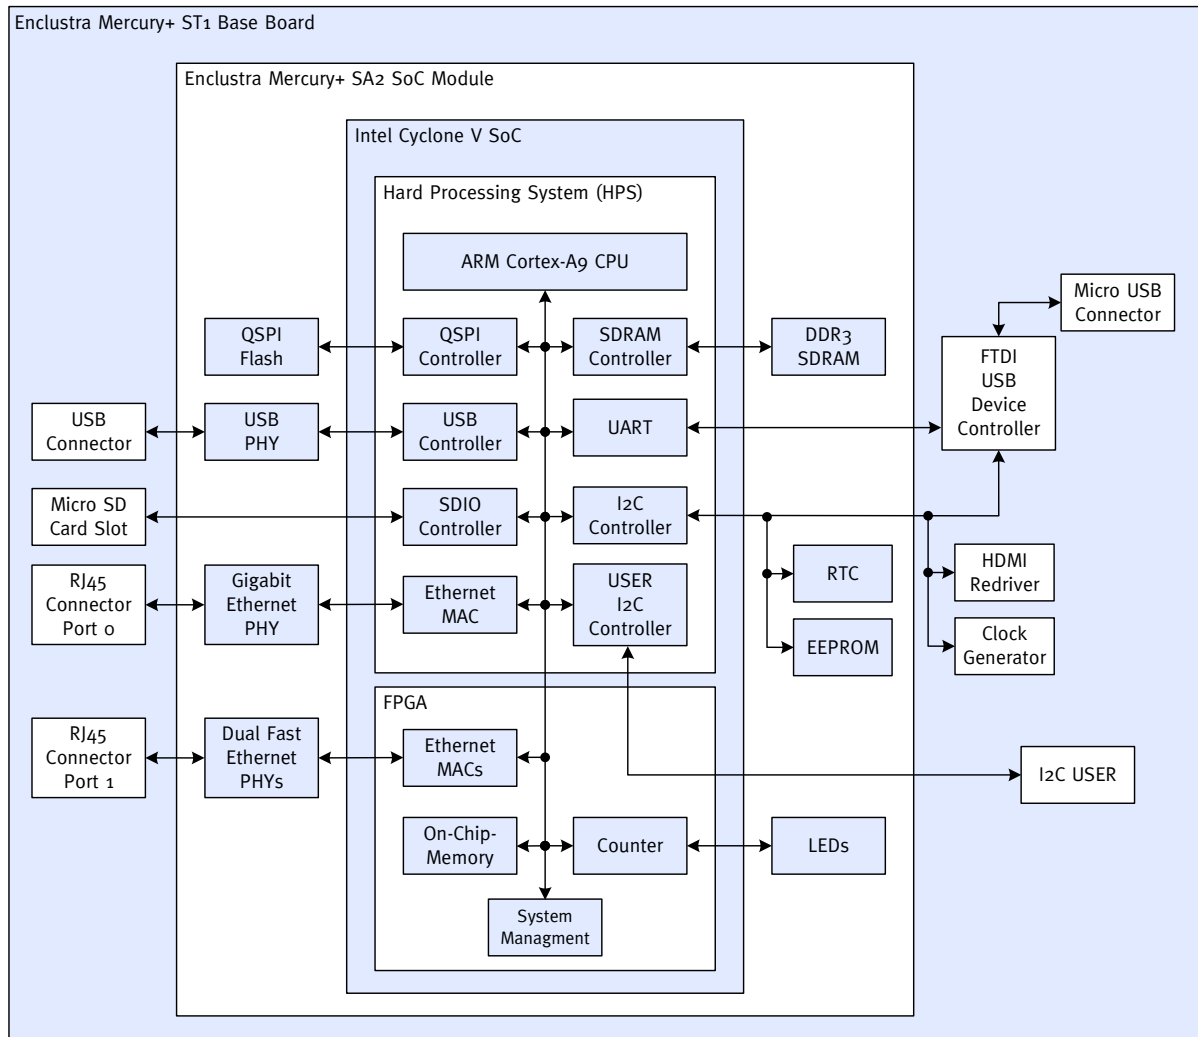


Figure 1: Hardware Block Diagram

2.1 Hard Processor System (HPS)

2.1.1 Clocks

The HPS input clock frequency is configured to 50 MHz. The HPS CPU (MPU) clock frequency is configured to its corresponding maximum frequency, as specified in the Intel® Cyclone V Device Datasheet [15]. The maximum MPU clock performance depends on the device speed grade and the VCC_INT voltage. Refer to the Mercury+ SA2 SoC Module User Manual [2] for details.

In addition, a 50 MHz clock and a 100 MHz clock are exported from the HPS to the FPGA. These clocks can be modified within the Platform Designer in the Cyclone V HPS properties.

2.1.2 PS DDR3 SDRAM

The DDR3 SDRAM memory is attached to the HPS and runs at its corresponding maximum DDR frequency.

The DDR3 configuration can be modified in the Cyclone V Hard Processor System properties in the Platform Designer.

2.1.3 SD Card

The SD/MMC controller is mapped to the HPS dedicated pins HPS_GPIO[36,38:39,45:47] on HPS I/O Set 0. The data width is 4 bit. The controller can be connected to an external SD card on the base board and allows booting from an SD card.

For configuring the Mercury+ SA2 SoC module to boot from the SD card, the configuration DIP switches on the Mercury+ ST1 base board must be set according to Section 4.2.3.

2.1.4 I2C

The I2C controller I2C0 is mapped to HPS dedicated pins HPS_GPIO[54:56] on HPS I/O Set 0. The pins are connected to the I2C bus on the Mercury+ ST1 base board.

The I2C controller I2C1 is connected through the FPGA fabric to the I2C_FPGA bus on the Mercury+ ST1 base board.

For available I2C devices refer to the Mercury+ SA2 SoC Module User Manual [2] and the Mercury+ ST1 Base Board User Manual [3].

2.1.5 Quad SPI Flash Controller

The quad SPI flash controller is mapped to the HPS dedicated pins HPS_GPIO[29:34] on HPS I/O Set 1 in single slave select mode (1SS).

To configure the Mercury+ SA2 SoC module to boot from the QSPI flash, the hardware configuration on the Mercury+ ST1 base board must be done according to Section 4.3.4. Refer to the Mercury+ SA2 SoC Module User Manual [2] for details about flash programming and usage.

2.1.6 UART

The UART0 controller is mapped to the HPS dedicated pins HPS_GPIO[65:66] on HPS I/O Set 2. It is connected to the FTDI USB device controller on the Mercury+ ST1 base board. The UART is configured as shown in Table 3.

Parameter	Value
Baud rate	115'200
Data	8 bit
Parity	None
Stop	1 bit
Flow control	None

Table 3: UART Configuration

2.1.7 Ethernet

The Ethernet MAC EMAC1 is mapped to the HPS dedicated pins HPS_GPIO[14:25] on HPS I/O Set 0. It is connected to a Micrel KSZ9031 Ethernet PHY on the Mercury+ SA2 SoC module using an RGMII interface. The PHY can be configured via the MDIO interface on PHY address 3.

2.1.8 USB

The USB controller USB1 is mapped to the HPS dedicated pins HPS_GPIO[0:13] on HPS I/O Set 0. It is connected to a USB3320C USB 2.0 PHY. This interface can be configured for USB host or device mode.

2.1.9 HPS GPIOs

The unused pins from the HPS are available as GPIOs. For details on the I/O assignment, refer to the Mercury+ SA2 SoC module User Manual [2], Section "HPS dedicated and FPGA/HPS shared I/O Pins". For details on the combination of the I/O assignment with the Mercury+ ST1 base board, refer to the Mercury+ ST1 Base Board User Manual [3].

2.2 FPGA Fabric

2.2.1 GPIOs

The FPGA firmware contains a 24-bit counter freely running at 50 MHz. The MSB of this counter is used to blink LED0#_PL with a frequency of approximately 3 Hz.

FPGA Pin	Signal	Function
F9	LED0#_PL	Blinking LED counter MSB

Table 4: FPGA Firmware I/O Configuration

2.2.2 Dual Fast Ethernet

Optionally, the design can be built with dual Fast Ethernet support. In this case, the Platform Designer contains two additional subsystems. Each subsystem consists of a Triple-Speed Ethernet Intel FPGA IP core configured for 10/100 Mbps. The MII interfaces are connected to the Fast Ethernet PHYs attached to FPGA bank 3A. Each subsystem includes the necessary TX DMA, RX DMA and clock source IP cores.

The MDIO interface is shared with the MDIO interface of the Gigabit Ethernet PHY attached to HPS_GPIO[20:21]. The PHYs are accessible on address 1 (for PHY A) and address 2 (for PHY B). Both Fast Ethernet PHY resets are connected to ETH1_RESET#_HPS on HPS_GPIO[35].

3 Getting Started

This section describes the steps required to configure the Mercury+ SA2 SoC module and Mercury+ ST1 base board in order to run a simple HelloWorld application example:

1. Mount the module and configure the Mercury+ ST1 base board.
2. Generate the FPGA bitstream.
3. Prepare the software workspace.
4. Run a software application.

Read the Mercury+ SA2 SoC module User Manual [2] and the Mercury+ ST1 Base Board User Manual [3] carefully before proceeding.

3.1 Essential Information

Pre-generated binaries may be used instead of building them manually as described in the following sections. The binaries for any supported SA2 variant and boot mode are released on the SA2 Reference Design Github release page [5].

Tip

Workarounds and fixes for potential issues can be found in Section 5.

NOTICE



Damage to the device due to overheating

Depending on the user application, the Mercury+ SA2 SoC module may consume more power than can be dissipated without additional cooling measures.

- Ensure that the SoC is always adequately cooled by installing a heat sink and/or providing air flow.

3.2 Setting up the Hardware

NOTICE



Damage to the device when mounting or removing the module

Mounting or removing the module while the base board is powered can lead to damage to the module or the base board.

- Ensure that the base board is not powered before mounting or removing the module.

The assembly drawing of the Mercury+ ST1 base board is shown in Figure 2. The relevant interfaces are marked in red in the figure as well as in the instructions below.

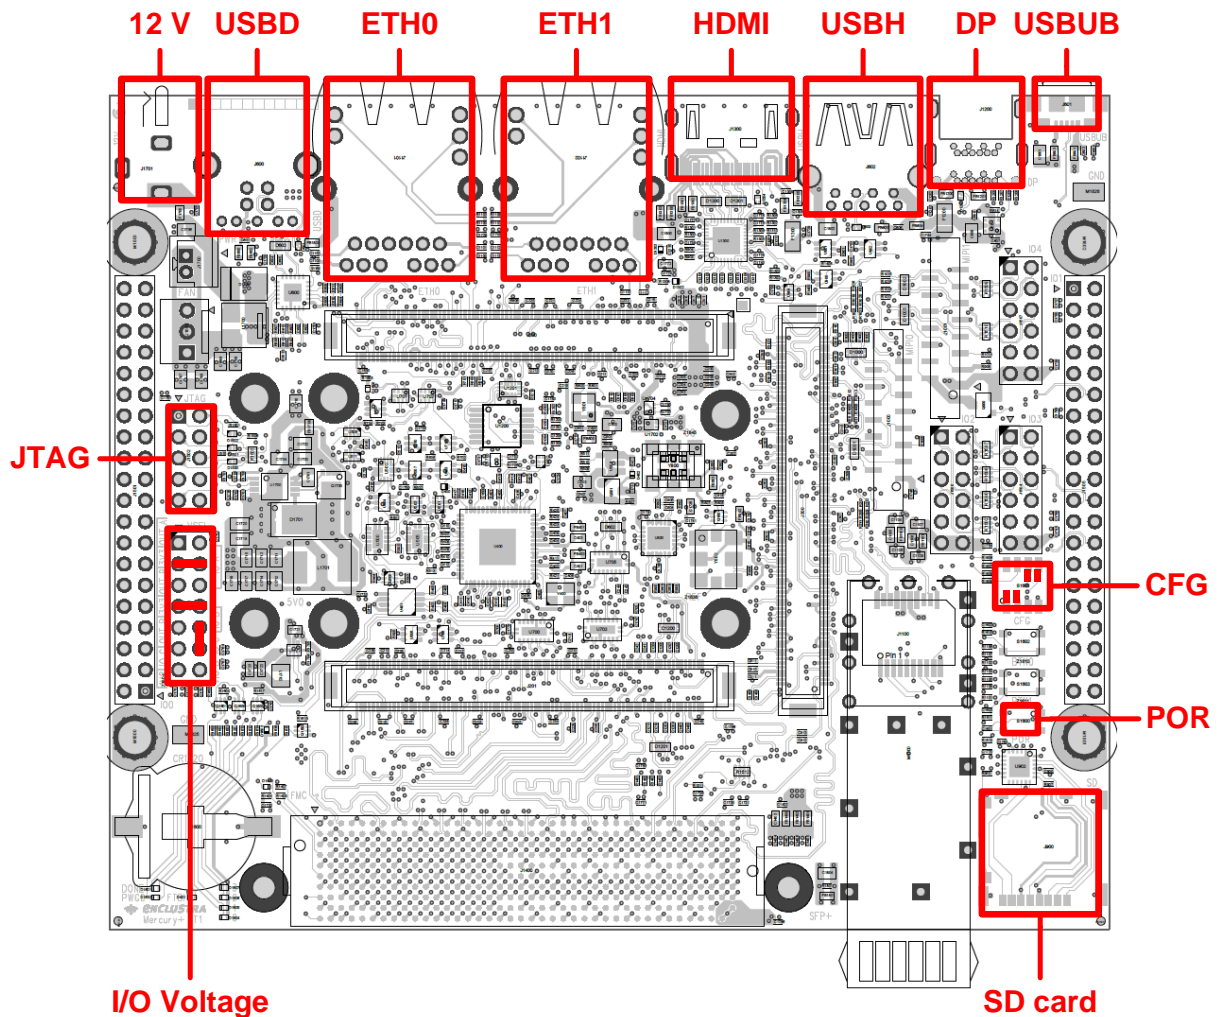


Figure 2: Mercury+ ST1 Base Board Assembly Drawing (Top View)

1. Make sure no power is connected to the power connector of the Mercury+ ST1 base board (label **12 V**).
2. Set the I/O voltage jumpers on the Mercury+ ST1 base board according to label **I/O Voltage** (the jumpers are marked with red rectangles).
 - VCC_IO_A to VCC_3V3 (3.3 V)
 - VCC_IO_B to VCC_3V3 (3.3 V)
 - VCC_IO_C to VCC_IO_B (3.3 V)
3. Set the configuration DIP switch on the Mercury+ ST1 base board as follows (label **CFG**):
 - CFG = [1: OFF, 2: OFF, 3: ON, 4: ON]
4. Mount the Mercury+ SA2 SoC module to the Mercury+ ST1 base board.
5. Connect the Micro-USB cable between the computer and the Mercury+ ST1 base board using the Micro-USB port labeled **USBUB**.
6. Two new serial ports should be detected by the Linux OS⁵, where <X> denotes the lowest number of those:
 - /dev/ttyUSB<X>
 - /dev/ttyUSB<X+1>
7. Open the serial port with the highest number of the two detected ports and configure it using the parameters specified in Section 2.1.6. Any suitable utility for establishing a serial connection can

⁵For issues related to serial port detection, refer to Section 5.3.

be used. Below, the `screen` command is used executed in a Linux terminal:

```
screen /dev/ttyUSB<X+1> 115200
```

The output of the HelloWorld application will be printed in this terminal after following Section 4.

8. Optional: Connect a compatible JTAG adapter (see Section 1.3) to the JTAG connector (label **JTAG**).

9. **NOTICE: Damage to the device when applying power. Ensure that the mounting holes on the base board are aligned with the mounting holes of the Mercury+ SA2 SoC module.**

Connect the 12 V DC power supply plug to the power connector of the Mercury+ ST1 base board (label **12 V**).

3.3 Generating the FPGA Bitstream

Follow the steps described in this section to generate the reference design bitstream manually.

Tip

Pre-generated bitstreams for all supported SA2 variants are available on the SA2 reference design Github release page [5]. These can be used directly instead of generating the bitstream manually. If using those files directly, the bitstream does not need to be generated manually and this section can be skipped.

1. Configure the `<base_dir>/scripts/settings.tcl` file⁶:
 - (a) Set the `module_name` variable to the desired module variant.
 - (b) Set the `boot_mode` variable to the desired boot mode.
 - (c) Save the file after editing.
2. Start Quartus Prime 23.1, for example, `<quartus_install_dir>/quartus/bin/quartus &`
3. Create the Mercury+ SA2 SoC module reference design project:
 - (a) Select **View > Utility Windows > Tcl Console** to open the Tcl console.
 - (b) Click inside the Tcl console:
 - i. Type `cd {<base_dir>}`
Note the curly brackets around the path.
 - ii. Type `source ./scripts/create_project.tcl`
 - iii. Wait for completion.
4. Open the Mercury+ SA2 SoC module reference design project:
 - (a) Select **File > Open Project...**
 - (b) Navigate to `<base_dir>/Quartus/<module_name>/<boot_mode>`
 - (c) Select the **Mercury_SA2_ST1.qpf** project file.
 - (d) Click **Open**.
5. Compile the design and generate the programming files:
 - (a) Go to **Tasks**.
 - (b) Double-click **Compile Design**.
 - (c) Wait for completion.
 - (d) Check for errors and critical warnings in the **Messages** window.

The build output is located in `<base_dir>/Quartus/<module_name>/<boot_mode>/output_files` and is described in Table 5:

File	Description
Mercury_SA2_ST1.sof	Bitstream

Table 5: Quartus Programming Files

⁶Valid values for the variables are listed at the beginning of the file.

3.4 Programming the FPGA

Follow the steps described in this section to program the FPGA bitstream using the Quartus Programmer from Quartus 23.1 (see Figure 3).

1. Connect a compatible JTAG adapter (see Section 1.3) to the JTAG connector (see label **JTAG** in Figure 2).
2. Select **Tools > Programmer**.
3. Select **Hardware Setup**.
4. Under **Currently selected hardware**, select **USB-Blaster/USB-Blaster II** from the drop-down list.
5. Close the **Hardware Setup** window.
6. In the **Programmer** window, click **Auto Detect**.
7. If prompted, select the device according to the product variant:
 - ME-SA2-D6-7I-D11: 5CSTFD6D5 or 5CSTFD6D5F31
 - ME-SA2-D6-7I-D11-DFE: 5CSTFD6D5 or 5CSTFD6D5F31and click **OK**.
8. If the correct programming file is not automatically selected by the tool, do the following:
 - (a) Click on the device just added.
 - (b) Select **Change File....**
 - (c) Navigate to `<base_dir>/Quartus/<module_name>/<boot_mode>/output_files`
 - (d) Select the bitstream file (`Mercury_SA2_ST1.sof`).
 - (e) Click **Open**.
9. Enable the **Program/Configure** checkbox for the device.
10. Click **Start**.
11. After the FPGA is successfully configured, the **DONE** LED lights up.

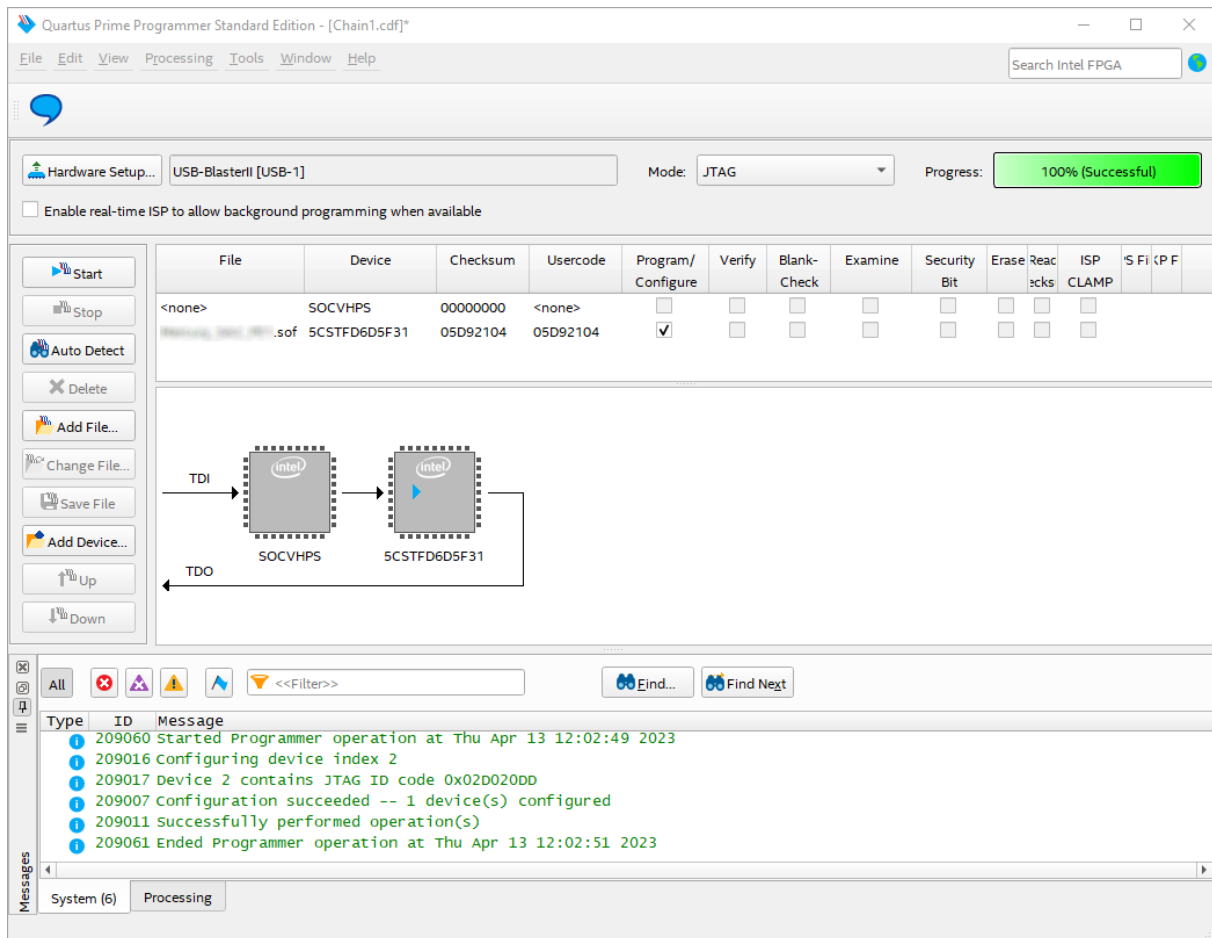


Figure 3: Quartus Programmer Program Bitstream

3.5 Generating the Bootloader

The bootloader (SPL) is used in the boot image creation process described further in Sections 4.2.1 and 4.3.1. The SPL is built alongside U-Boot and requires handoff files from the Quartus design. These handoff files contain HPS settings, memory parameters and address mappings.

Tip

Pre-generated bootloader binaries for the respective boot mode are available on the reference design github release page [5]. However, the bootloader needs to be re-generated whenever the HPS settings are changed.

Open a Linux terminal and execute the following commands to generate the SPL binary:

1. `git clone https://github.com/enclustra-bsp/bsp-altera \`
`--branch intel-v1.9 \`
`<base_dir>/sw/bsp-altera`
2. `cd <base_dir>/sw/bsp-altera`
3. `./build.sh \`
`-d Mercury_SA2/Mercury_ST1/<boot_mode>7 \`
`-o <module_name> \`
`-x U-Boot \`
`-B handoff <hps_handoff_dir>8`

⁷In EBE, the boot mode can be "MMC", "EMMC" or "QSPI".

⁸Use the absolute path to the HPS handoff directory.

The build output is located in `<base_dir>/sw/bsp-altera/sources/altera-uboot` and is described in Table 6:

File	Description
<code>spl/u-boot-spl</code>	SPL ELF executable
<code>u-boot</code>	U-Boot ELF executable
<code>u-boot-with-spl.sfp</code>	Bootable file containing four SPL copies and one copy of the U-Boot image

Table 6: SPL Output Binaries

For more details regarding the SPL build process refer to [14].

3.6 Compiling the HelloWorld Application

The ARM GNU Toolchain [11] is used to compile the HelloWorld application example. The steps described in the following sections target a Linux Ubuntu OS and have been verified with Ubuntu 20.04 and Ubuntu 22.04.

3.6.1 Installing the ARM GNU Toolchain

The easiest way to install the ARM GNU Toolchain [11] is to use the provided package manager of the Linux OS. Execute these commands in a Linux terminal to install the toolchain:

1. `sudo apt-get update`
2. `sudo apt-get upgrade`
3. `sudo apt-get install gcc-arm-none-eabi`

Alternatively, the ARM GNU Toolchain can be installed manually. Download the appropriate package (AArch32 bare-metal target (arm-none-eabi)) from the ARM GNU Toolchain download page [12]. Extract the archive to the desired location. Add the `bin` folder to the **PATH** variable to make the toolchain available. In addition, install the following packages:

1. `sudo apt-get install build-essential`
2. `sudo apt-get install git`
3. `sudo apt-get install u-boot-tools`
4. `sudo apt-get install mtools`

3.6.2 Building the HelloWorld Application

Before running the commands below, ensure that the ARM GNU Toolchain was successfully installed, as described in Section 3.6.1.

Open a Linux terminal and execute the following commands to build the HelloWorld application:

1. `git clone https://github.com/altera-opensource/intel-socfpga-hwlib \`
`--branch rel_master_23.12.02_pr \`
`<hwlib_dir>`
2. `export INTEL_HWLIB_DIR=<absolute-path-to-<hwlib_dir>>`
3. `cd <base_dir>/sw/HelloWorld`
4. `make`

The build output is located in `<base_dir>/sw/HelloWorld` and described in Table 7:

File	Description
hello.axf	Arm Executable Format file
hello.axf.objdump	Disassembly information of the HelloWorld binary
hello.axf.map	Memory map of the HelloWorld binary
hello.bin	Binary copy of hello.axf generated with <code>arm-none-eabi-objcopy</code>
hello.img	HelloWorld image file generated with <code>mkimage</code>

Table 7: HelloWorld Output Files

4 Boot Configurations

A boot image can be created containing the previously generated binaries to enable booting from various boot modes. The boot image contains the bootloader and the software bare-metal application. This section describes how to generate a boot image for the Mercury+ SA2 SoC module for each supported boot mode.

Tip

Pre-generated images may be used for booting instead of rebuilding the image. The binaries for any supported SA2 variant and boot mode are released on the SA2 Reference Design Github release page [5].

4.1 Preparing the Boot Binaries

Follow these steps to prepare the boot binaries:

1. Build the SPL as described in Section 3.5.
2. Build the HelloWorld application as described in Section 3.6.

The Enclustra reference design does not provide functionality for loading the bitstream via SPL. Intel provides a bare-metal example for loading the bitstream targeting Cyclone V devices [9].

The next step is optional and shows the conversion of the bitstream to a suitable format if the functionality for loading the bitstream should be added to the SPL by the user. In a Linux terminal, run the following command:

```
<quartus_install_dir>/quartus/bin/quartus_cpf -c \  
<base_dir>/Quartus/<module_name>/<boot_mode>/output_files/Mercury_SA2_ST1.sof \  
<base_dir>/Quartus/<module_name>/<boot_mode>/output_files/Mercury_SA2_ST1.rbf
```

4.2 SD Card Boot

4.2.1 Generating the Image Files

1. Create a 200 MB sd card image with the required partitions⁹. In a Linux terminal, run the following commands:
 - (a) `mkdir -p <app_dir>/bootimage`
 - (b) `dd if=/dev/zero of=<app_dir>/bootimage/sdmmc.img bs=64K count=3216`
 - (c) `printf "type=c, size=190MiB \n type=A2, size=10MiB" | sfdisk \
<app_dir>/bootimage/sdmmc.img`
2. Prepare the 190 MB FAT file system:
 - (a) `dd if=/dev/zero of=<app_dir>/bootimage/fat.img bs=64K count=3040`
 - (b) `mkfs.vfat -F 32 <app_dir>/bootimage/fat.img`
3. (Optional) Copy the bitstream to the FAT file system:
`mcopy -i <app_dir>/bootimage/fat.img <quartus_outdir>/Mercury_SA2_ST1.rbf \
::Mercury_SA2_ST1.rbf`
4. Merge the FAT file system with the SD card image:
`dd if=<app_dir>/bootimage/fat.img of=<app_dir>/bootimage/sdmmc.img seek=16 bs=64K`
5. Append the HelloWorld image to the SPL:
`cat <u-boot_dir>/spl/u-boot-splx4.sfp <app_dir>/hello.img > <app_dir>/hello-with-spl.sfp`
6. Write the SPL containing the HelloWorld image to the Intel A2 boot partition:
`dd if=<app_dir>/hello-with-spl.sfp of=<app_dir>/bootimage/sdmmc.img seek=3056 bs=64K`

4.2.2 Programming the SD Card

1. Insert a microSD card into the SD card slot of the computer.
2. In a Linux terminal, check the device node of the inserted microSD card:
`dmesg | tail`
An example for the console output is given in Figure 4, where the device node is named `sdd`.
3. **NOTICE: Data loss due to overwriting. Use the `lsblk` command to identify the correct device node.**
Write the SD card image created in Section 4.2.1 to the SD card, replacing `sd<X>` by the identified device node:
`dd if=<app_dir>/bootimage/sdmmc.img of=/dev/sd<X> bs=4M && sync`

```
> dmesg | tail
[3788615.008233] usb-storage 2-3:1.0: USB Mass Storage device detected
[3788615.008945] scsi host6: usb-storage 2-3:1.0
[3788616.023366] scsi 6:0:0:0: Direct-Access    TS-RDF5A Transcend      0004 PQ: 0 ANSI: 6
[3788616.024030] sd 6:0:0:0: Attached scsi generic sg3 type 0
[3788616.274611] sd 6:0:0:0: [sdd] 15360000 512-byte logical blocks: (7.86 GB/7.32 GiB)
[3788616.275598] sd 6:0:0:0: [sdd] Write Protect is off
[3788616.275608] sd 6:0:0:0: [sdd] Mode Sense: 21 00 00 00
[3788616.276486] sd 6:0:0:0: [sdd] Write cache: disabled, read cache: enabled, doesn't support DP0 or FUA
[3788616.282967] sdd: sdd1 sdd2
[3788616.286775] sd 6:0:0:0: [sdd] Attached SCSI removable disk
```

Figure 4: Example of an SD Card Device Node

4.2.3 Preparing the Hardware

1. Detach the power supply of the Mercury+ ST1 base board(see label **12 V** in Figure 2).
2. Enable the SD card boot mode (default) by setting the configuration DIP switch on the Mercury+ ST1 base board as follows (see label **CFG** in Figure 2):
 - CFG = [1: OFF, 2: OFF, 3: ON, 4: ON]

⁹The FAT partition is only used for copying the RBF file if it was created in Section 3.5 and otherwise empty.

4.2.4 Booting from the SD Card

1. Insert the SD card into the SD card slot of the Mercury+ ST1 base board (see label **SD Card** in Figure 2).
2. Connect the power supply to the Mercury+ ST1 base board (see label **12 V** in Figure 2).

4.3 QSPI Flash Boot

4.3.1 Preparing the QSPI Binaries

Before preparing the QSPI binaries, the procedure described in Sections 3.3, 3.5 and 4.1 must be successfully completed with the `boot_mode` variable set to `qspi`. The files needed for programming the QSPI flash are listed in Table 8.

File Path	Description
<u-boot_dir>/spl/u-boot-splx4.sfp	Bootloader (SPL)
<app_dir>/hello.img	Image file containing the HelloWorld application

Table 8: QSPI Programming Files

4.3.2 Preparing the Hardware

1. Disconnect the power supply of the Mercury+ ST1 base board (see label **12 V** in Figure 2).
2. Disconnect all USB cables from the Mercury+ ST1 base board.
3. Set the configuration DIP switch on the Mercury+ ST1 base board as follows (see label **CFG** in Figure 2):
 - CFG = [1: ON, 2: OFF, 3: ON, 4: ON]
4. Connect the Micro-USB cable between the computer and the Mercury+ ST1 base board using the Micro-USB port labeled **USBUB** in Figure 2.
5. Reconnect the UART terminal if necessary.
6. Connect a compatible JTAG adapter (see Section 1.3) to the JTAG connector (see label **JTAG** in Figure 2).
7. Reconnect the power supply of the Mercury+ ST1 base board (see label **12 V** in Figure 2).

4.3.3 Programming the QSPI Flash

The process of programming large files (such as the FPGA bitstream) to the QSPI flash via JTAG using the `quartus_hps` tool can take up to 30 minutes¹⁰.

Tip

The pre-generated binaries include an image file containing all individual parts of the QSPI flash at the respective offsets. Instead of programming each file one by one, this QSPI flash image can be used to program the complete flash at once. The image file is provided as part of the release binaries on the SA2 Reference Design Github release page [5].

Execute the following commands in a Linux terminal to program the individual files generated in the previous sections to the respective offsets:


1. Erase the whole QSPI flash chip before programming the binaries:
`<quartus_install_dir>/bin/quartus_hps -c 1 -o E`
2. Program the SPL to QSPI flash address 0 :
`<quartus_install_dir>/bin/quartus_hps -c 1 -o PV -a 0x0 \
<u-boot_dir>/spl/u-boot-splx4.sfp`
3. Program the HelloWorld application image file to the QSPI flash address offset 0x40000 :
`<quartus_install_dir>/bin/quartus_hps -c 1 -o PV -a 0x40000 \
<app_dir>/hello.img`

¹⁰Alternatively, the Enclustra MCT [4] can be used to program the QSPI flash.

4.3.4 Booting from the QSPI Flash

1. Check that the hardware configuration is done according to Section [4.3.2](#).
2. Press the power-on reset button (see label **POR** in Figure [2](#)) and release it after one second.

The expected output in the serial terminal console is given in Figure [5](#).

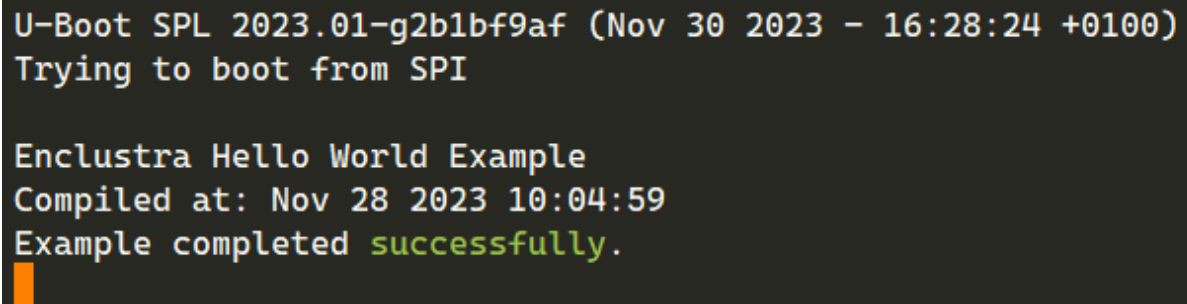

```
U-Boot SPL 2023.01-g2b1bf9af (Nov 30 2023 - 16:28:24 +0100)
Trying to boot from SPI

Enclustra Hello World Example
Compiled at: Nov 28 2023 10:04:59
Example completed successfully.
```

Figure 5: Example of the Terminal Output in QSPI Boot Mode

5 Troubleshooting

5.1 Enclustra Build Environment Issues

- Ensure that the arguments specifying the product model and the binary paths are correct when running the `build.sh` script.
- Run `build.sh clean` or make a fresh clone of the whole repository.
- Verify that all the dependencies given within the EBE documentation [13] are met and all required packages are installed.
- Examine the `<base_dir>/sw/bsp-altera/build.log` file.

If none of the above helps resolving the issue, contact Enclustra Support [1] for assistance.

5.2 JTAG Issues

5.2.1 Detecting the JTAG Cable Fails

1. Make sure that the hardware configuration complies with Section 3.2.
2. Disconnect and reconnect the USB blaster connection and power cycle the Mercury+ ST1 base board.
3. If the problem persists, reboot the computer.

5.3 UART Connection Issues

5.3.1 Recognizing USB UART Fails

- Check that the Micro-USB cable is connected properly.
- Try different `/dev/ttyUSBx`.
- Check that the FTDI VCP drivers are available.
- Unload the FTDI D2XX drivers and reconnect the USB cable.
- Try a different USB cable.

5.3.2 No Output in the Serial Console

1. Check that the baud rate for the UART in the design matches the baud rate set in the serial console.
2. Reconnect to the serial console.

5.4 Toolchain Issues

5.4.1 A Command is not Found

Run the following commands to verify that all the tools are installed correctly:

1. `which arm-none-eabi-gcc`
2. `which make`
3. `which git`
4. `which mkimage`
5. `which mcopy`

The commands should output the path to the respective binary. An example is given in Figure 6.


```
> which arm-none-eabi-gcc && which make && which git && which mkimage && which mcopy  
/usr/bin/arm-none-eabi-gcc  
/usr/bin/make  
/usr/bin/git  
/usr/bin/mkimage  
/usr/bin/mcopy
```

Figure 6: Example of Binary Path Output

5.5 SD Boot Issues

- Make sure that the SD card is formatted according to [Section 4.2.1](#).
- Make sure that the hardware configuration complies with [Section 4.2.3](#).
- Use the SD card image provided on the SA2 Reference Design Github release page [\[5\]](#).
- Try another SD card.

5.6 QSPI Boot Issues

- Make sure that the QSPI binaries are generated according to [Section 4.3.1](#).
- Make sure that the hardware configuration complies with [Section 4.3.2](#).
- Use the provided binaries for QSPI boot mode on the SA2 Reference Design Github release page [\[5\]](#).
- Verify that the binaries are written to the correct offset address given in [Section 4.3.3](#).
- Use the Enclustra Module Configuration Tool (MCT) [\[4\]](#) to program the QSPI binaries.

List of Figures

1	Hardware Block Diagram	8
2	Mercury+ ST1 Base Board Assembly Drawing (Top View)	13
3	Quartus Programmer Program Bitstream	16
4	Example of an SD Card Device Node	20
5	Example of the Terminal Output in QSPI Boot Mode	23
6	Example of Binary Path Output	25

List of Tables

1	Directory Structure	5
2	Path Variables	6
3	UART Configuration	9
4	FPGA Firmware I/O Configuration	11
5	Quartus Programming Files	14
6	SPL Output Binaries	17
7	HelloWorld Output Files	18
8	QSPI Programming Files	22

References

- [1] Enclustra Support Channel
support@enclustra.com
- [2] Mercury+ SA2 SoC Module User Manual
→ Ask Enclustra for details
- [3] Mercury+ ST1 Base Board User Manual
→ Ask Enclustra for details
- [4] Enclustra Module Configuration Tool (MCT)
<http://www.enclustra.com/en/products/tools/module-configuration-tool/>
- [5] Mercury SA2 ST1 Reference Design Releases
https://github.com/enclustra/Mercury_SA2_ST1_Reference_Design/releases
- [6] Enclustra Application Notes
<https://github.com/enclustra/I2CAppNote>
<https://github.com/enclustra/GigabitEthernetAppNote>
- [7] OS Support for Intel® FPGA Complete Design Suite
<https://www.intel.com/content/www/us/en/support/programmable/support-resources/design-software/os-support.html>
- [8] Intel® Quartus® Prime Pro and Standard Software User Guides
<https://www.intel.com/content/www/us/en/support/programmable/support-resources/design-software/user-guides.html>
- [9] Intel SoC FPGA HWLIB repository
<https://github.com/altera-opensource/intel-socfpga-hwlib>
- [10] Rocketboards Bootloader Guide
<https://www.rocketboards.org/foswiki/Documentation/BuildingBootloaderCycloneVAndArria10>
- [11] ARM GNU Toolchain
<https://developer.arm.com/Tools and Software/GNU Toolchain>
- [12] ARM GNU Toolchain download Page
<https://developer.arm.com/downloads/-/arm-gnu-toolchain-downloads>
- [13] Enclustra Build Environment
<https://github.com/enclustra-bsp/bsp-altera>
- [14] Intel SoC FPGA Readme
https://github.com/altera-opensource/u-boot-socfpga/blob/socfpga_v2023.07/doc/README.socfpga
- [15] Intel® Cyclone V Device Datasheet
<https://www.intel.com/content/www/us/en/docs/programmable/683801/current/cyclone-v-device-datasheet.html>
- [16] HPS SoC Boot Guide – Cyclone V SoC Development Kit
<https://www.intel.com/content/www/us/en/docs/programmable/683265/current/an-709-hps-soc-boot-guide-cyclone-v.html>