

HRPNUG

Harpoon User's Guide

Rev. EAR 2.1.0 — 28 July 2022

User guide

Document information

Information	Content
Keywords	i.MX 8M device family, Arm Cortex-A53 processor (Armv8-A architecture), RTOS, Linux, hardware partitioning, Jailhouse hypervisor, NXP Linux Yocto, Zephyr RTOS, MCUXpresso SDK
Abstract	This document presents the Harpoon release (EAR) 2.1 for i.MX 8M device family, using the Arm Cortex-A53 processor (Armv8-A architecture).



1 Overview

This document presents the Harpoon release (EAR) 2.1 for i.MX 8M device family, using the Arm Cortex-A53 processor (Armv8-A architecture).

Harpoon provides an environment for developing real-time demanding applications on an RTOS running on one (or several) Cortex-A core(s) in parallel of a Linux distribution, leveraging the 64-bit Arm architecture for higher performance.

The system starts on Linux and the Jailhouse hypervisor partitions the hardware to run both Linux and the guest RTOS in parallel.

The hardware partitioning is configurable and depends on the use case. This release includes an audio application, an industrial application and a real-time latency measurement application, all available both for FreeRTOS as well as Zephyr (some application feature limitations exist depending on the selected platform and RTOS).

This release supports the following software and hardware:

- NXP Linux Yocto
 - i.MX LF 5.15.32_2.0.0: For more information, see [i.MX Yocto Project User's Guide](#).
 - Real-time Edge Rev. 2.3: For more information, see [Real-time Edge Yocto Project User Guide](#).
- i.MX 8M Series
 - [i.MX 8M Mini LPDDR4 EVKB](#)
 - [i.MX 8M Nano LPDDR4 EVK](#)
 - [i.MX 8M Plus LPDDR4 EVK](#)
- Jailhouse hypervisor
- FreeRTOS V10.4.3 kernel
 - Cortex-A53 port, uniprocessor
 - Guest OS running on Jailhouse cell
- Zephyr RTOS 3.0.0
 - Cortex-A53 port, SMP
 - Guest OS running on Jailhouse cell
- MCUXpresso SDK 2.11
 - GIC, Timer and MMU Cortex-A53 drivers
 - CAN, ENET, ENET_QOS, GPT, I2C, SAI, and UART SoC drivers
 - Audio Codec drivers
 - Phy drivers
- RTOS Applications
 - Audio reference application
 - Industrial reference application
 - Real-time latency measurement application

1.1 Architecture

The following figure shows the architecture of the Harpoon solution.

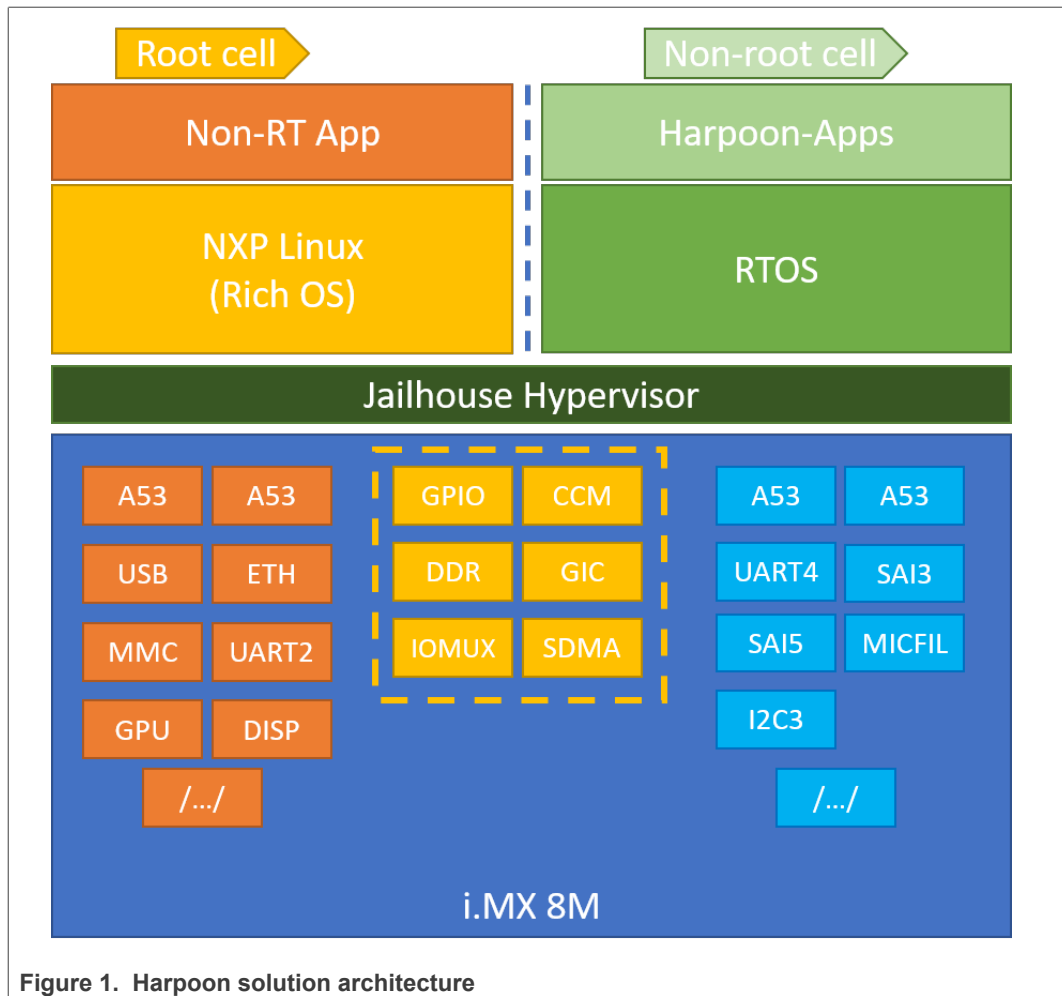


Figure 1. Harpoon solution architecture

The i.MX 8M box shows the hardware partitioning between Jailhouse cells.

The boxes in dark orange (group 1) show the main hardware blocks allocated to the Linux OS.

The boxes in blue (group 3) show the main hardware blocks allocated to the RTOS.

The boxes in light orange (group 2) show the main hardware blocks shared between Linux and the RTOS.

Harpoon-apps is the real-time application running on Jailhouse's inmate cell. It is built on top of the FreeRTOS and MCUXpresso drivers.

1.2 Hardware resource partitioning

Jailhouse hypervisor is used to run an RTOS in parallel with Linux: FreeRTOS and Zephyr are supported in this release.

Jailhouse is a simple hypervisor that assigns hardware resources to a guest OS instead of virtualising them. For instance, a CPU core is statically assigned to a specific guest and is not shared with other guests.

In Jailhouse terms, the RTOS (inmate) runs in a cell. A configuration file describes which hardware resources are assigned to this cell. This configuration file contains descriptions of the following:

- CPU cores assigned to the cell
- Interrupt lines assigned to the cell
- Memory regions assigned to the cell
- Virtual PCI devices used for communication between cells

There is also a root cell configuration that describes the hardware prior to the hardware partitioning.

The source files of the cell configurations are embedded through patches in the Jailhouse recipe of the Harpoon meta-layer, at the following locations:

- `configs/arm64/imx8m*-freertos.c` for the FreeRTOS `rt_latency` use case's cell configuration
- `configs/arm64/imx8m*-zephyr.c` for the Zephyr `rt_latency` use case's cell configuration
- `configs/arm64/imx8m*-freertos-audio.c` for the FreeRTOS `audio` use case's cell configuration
- `configs/arm64/imx8m*-zephyr-audio.c` for the Zephyr `audio` use case's cell configuration
- `configs/arm64/imx8m*-freertos-industrial.c` for the FreeRTOS `industrial` use case's cell configuration
- `configs/arm64/imx8m*-zephyr-industrial.c` for the Zephyr `industrial` use case's cell configuration
- `configs/arm64/imx8m*.c` for the root cell configuration

The CPU core allocated to the RTOS forms a bitmap in the `cpu` structure. Here, CPU core 3 is assigned to the cell:

```
.cpus = {  
    0b1000,  
},
```

For a multicore (SMP) cell, two cores can be used, for instance:

```
.cpus = {  
    0b1100,  
},
```

Memory regions assigned to the inmate cell are listed in the `mem_regions` structure. Memory regions can be reserved for the inmate cell or shared with the Linux root cell.

Memory regions can be DDR chunks for the inmate cell use as well as device memory mapped regions such as UART or SAI.

Interrupts are mapped to the cell with the `irqchips` structure.

Virtual PCI devices are defined with the `pci_devices` structure. These virtual devices are used by Jailhouse to implement IVSHMEM v2 communication channels.

2 Building Harpoon Yocto images

As mentioned in the overview section, Harpoon is compatible with both i.MX Yocto and Real-time Edge Yocto. Each distribution is addressed in a separate section below.

2.1 i.MX Yocto

To build this release, fetch its Yocto manifest and get the meta-layers:

```
$ mkdir yocto
$ cd yocto
$ repo init -u git://source.codeaurora.org/external/
  imx/imx-manifest.git -b imx-linux-kirkstone -m
  imx-5.15.32-2.0.0_harpoon-v2.xml
$ repo sync
```

Then, prepare the environment with the following command:

```
$ DISTRO=fsl-imx-xwayland MACHINE=<machine> source imx-harpoon-
  setup-release.sh -b build.<machine>
```

Where, *<machine>* is one of the following:

- imx8mm-lpddr4-evk for i.MX 8M Mini EVKB board
- imx8mn-lpddr4-evk for i.MX 8M Nano EVKB board
- imx8mp-lpddr4-evk for i.MX 8M Plus EVK board

The end user license agreement must be accepted to continue.

Then build the image with the following command:

```
$ bitbake imx-image-core
```

The image is then available in subdirectory `tmp/deploy/images/<machine>/`.

Copy the disk image to a micro-SD card. For example, assuming the card is recognized as `/dev/mmcblk0` by your host machine:

```
$ bzip2 -d -c imx-image-core-<machine>.wic.bz2 | sudo dd of=/
  dev/mmcblk0 bs=1M
```

The micro-SD card now contains the release.

2.2 Real-time Edge Yocto

Please refer to the [Real-time Edge Yocto Project User Guide](#) to build Harpoon and prepare an SD card for supported boards.

3 Hardware Setup

3.1 i.MX Reference Boards

This Harpoon release supports the following development boards.



Figure 2. i.MX 8M Mini EVK

Note: For more information to order the board, see <https://www.nxp.com/design/development-boards/i-mx-evaluation-and-development-boards/evaluation-kit-for-the-i-mx-8m-mini-applications-processor:8MMINILPD4-EVK>



Figure 3. i.MX 8M Nano EVK

Note: For more information to order the board, see <https://www.nxp.com/design/development-boards/i-mx-evaluation-and-development-boards/evaluation-kit-for-the-i-mx-8m-nano-applications-processor:8MNANOD4-EVK>.



Figure 4. i.MX 8M Plus EVK

Note: For more information to order the board, see <https://www.nxp.com/design/development-boards/i-mx-evaluation-and-development-boards/i-mx-8m-plus-evaluation-kit-enabling-power-measurement:8MPLUSLPD4-PEVK>.

3.2 Audio use case hardware

Harpoon's audio application uses the I2S HiFiBerry audio card *DAC+ ADC Pro*.

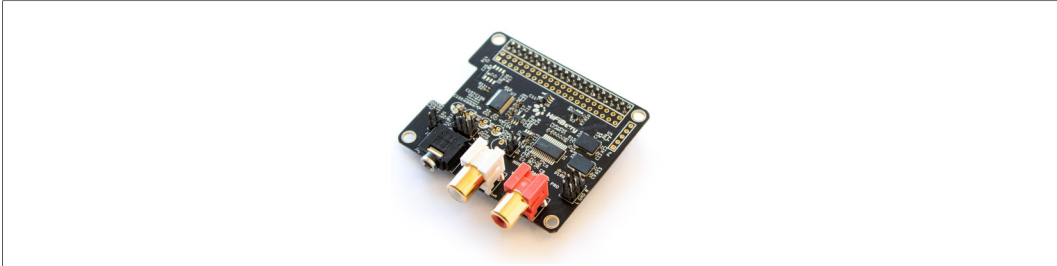


Figure 5. HiFiBerry DAC+ ADC Pro (picture from HiFiBerry's website)

Note: For more information to order the board, see <https://www.hifiberry.com/shop/boards/hifiberry-dac-adc-pro/>.

The HiFiBerry DAC+ ADC Pro is an audio card designed for the Raspberry Pi, but it can be connected to EVK boards using the 40-pin connector, provided a few adaptations are made.


The following pins on the EVK's 40-pin connector must be connected to the following HiFiBerry's pins.

Table 1. EVK - HiFiBerry transposition


EVK	HiFiBerry	Function
2	2	5V

Table 1. EVK - HiFiBerry transposition...continued

EVK	HiFiBerry	Function
3	3	I2C SDA
5	5	I2C SCK
6	6	GND
35	40	I2S TX
36	12	I2S clock
37	35	I2S word select for RX and TX
38	38	I2S RX

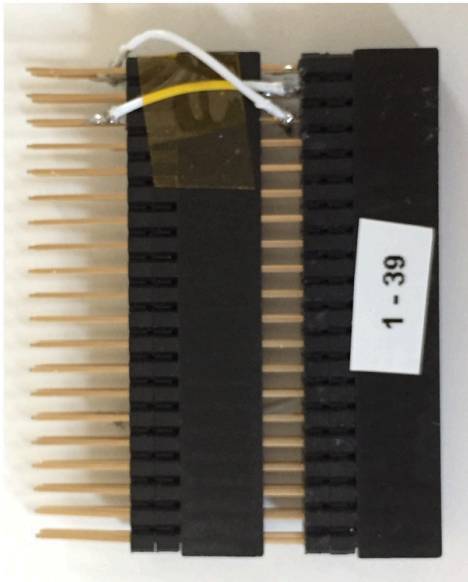

Inward

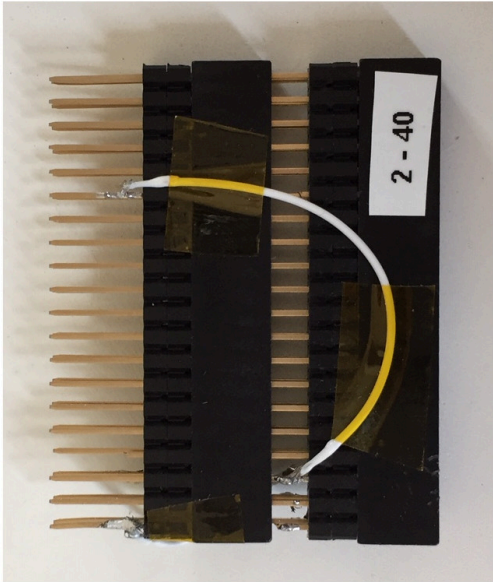

Outward

Figure 6. Handmade transposer

A complete setup, with a handmade transposer to respect above pinout, is shown as follows.

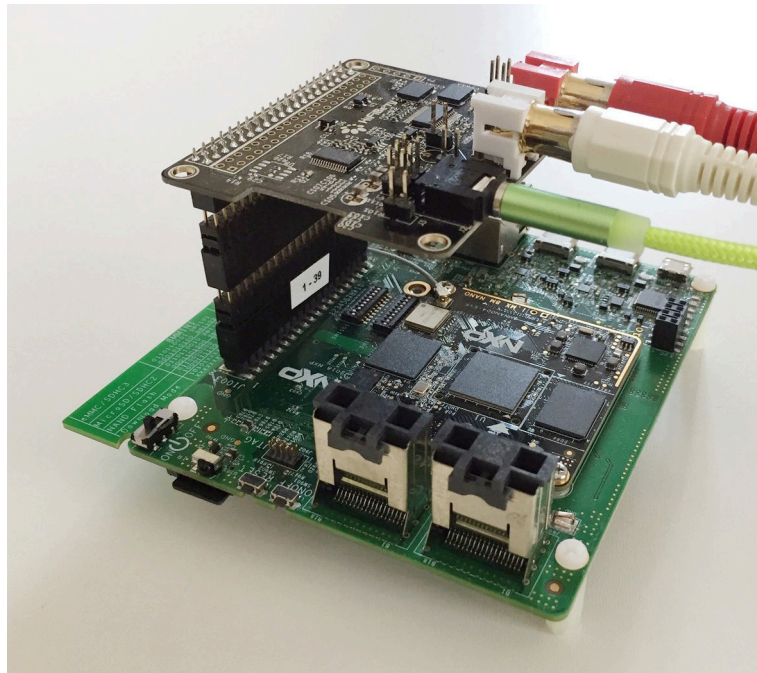


Figure 7. i.MX 8M Mini EVK with HiFiBerry audio card

The audio card has both an ADC (PCM1863) to record audio and a DAC (PCM5122) for audio playback.

Record is done through the audio jack (connector highlighted in 1 in the following figure) and playback is done through the RCA connectors (highlighted in 2).

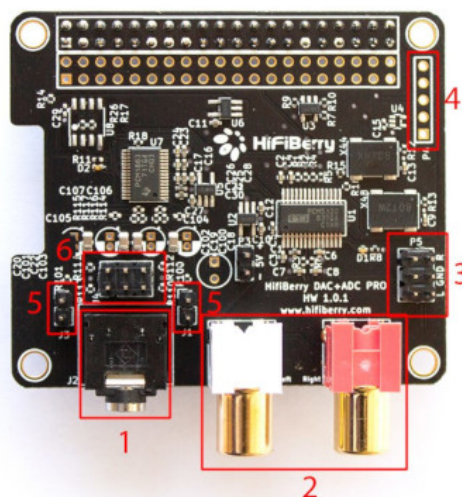


Figure 8. HiFiBerry audio connectors (picture from HiFiBerry's website)

Note: For more information to order the board, see <https://www.hifiberry.com/shop/boards/hifiberry-dac-adc-pro/>.

Control of the PCM1863 is done through I2C3, at address 0x4a.

Control of the PCM5122 is done through I2C3, at address 0x4d.

Both the PCM1863 and PCM5122 use i.MX I2S5. The I2S5 is the I2S clock master. Two oscillators (one for sampling frequencies multiple of 44,100 Hz, one for sampling frequencies multiple of 48,000 Hz) are present on the HiFiBerry card, and controlled by PCM5122 GPIOs.

The following diagram shows the HiFiBerry architecture.

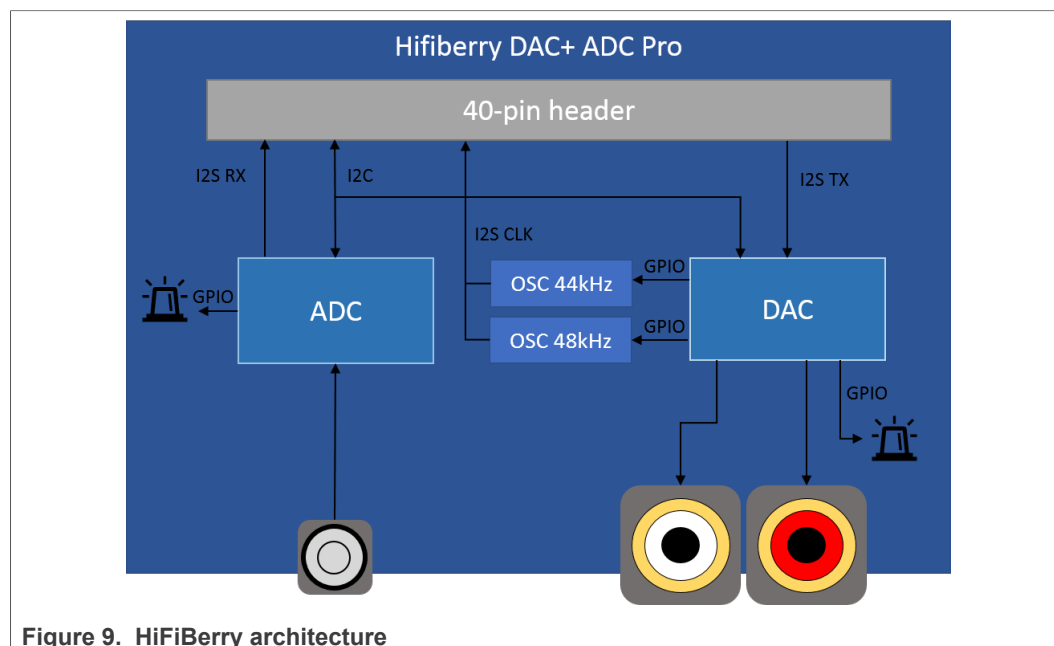


Figure 9. HiFiBerry architecture

The PCM1863 and the PCM5122 use the same signal for I2S word select by using SAI synchronous mode.

3.3 Industrial use case hardware

Harpoon's industrial application may use the following hardware depending on the use case.



Figure 10. LS1028A AVB/TSN network bridge

Note: For more information to order the board, see <https://www.nxp.com/design/qoriq-developer-resources/layercape-ls1028a-reference-design-board:LS1028ARDB>.

The LS1028A RDB is used as a TSN bridge/switch in a TSN network to demonstrate the TSN ethernet use case running from the inmate cell.

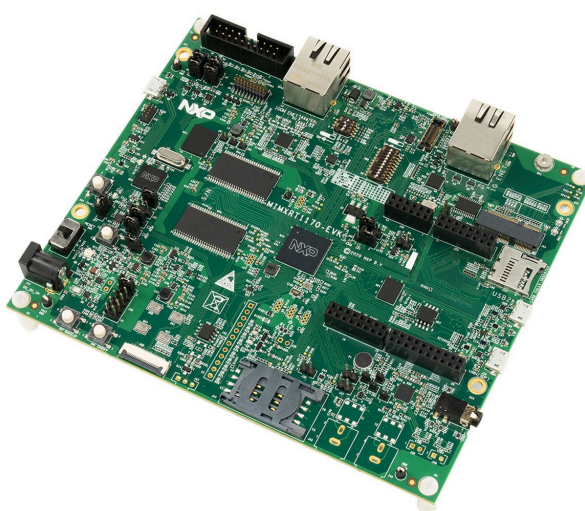


Figure 11. RT1170 TSN endpoint

Note: For more information to order the board, see <https://www.nxp.com/design/development-boards/i-mx-evaluation-and-development-boards/i-mx-rt1170-evaluation-kit:MIMXRT1170-EVK>.

The RT1170 is used as a TSN endpoint in a TSN network, exchanging packets with the i.MX 8MP board.

4 Running Harpoon Reference Applications

4.1 Basic setup

The EVK boards expose serial ports through their USB debug interface. One of these serial ports is used by Linux for its console, and another one is used by the guest RTOS.

To run the reference applications, open both serial ports with terminal emulators, insert the micro-SD card on which the Yocto image has been flashed in the EVK and power up the board.

4.2 Starting Linux kernel

Linux kernel must be started with a (Harpoon specific) Jailhouse compatible device tree.

To do this, when U-Boot is executing, stop at U-Boot prompt with a terminal emulator connected to the serial port and execute the following command (based on the board and the application):

- For i.MX 8M Mini (audio or rt_latency):

```
u-boot => setenv jh_root_dtb imx8mm-evk-harpoon.dtb
u-boot => run jh_mmcboot
```

- For i.MX 8M Mini (industrial or rt_latency):

```
u-boot => setenv jh_root_dtb imx8mm-evk-harpoon-industrial.dtb
u-boot => run jh_mmcboot
```

- For i.MX 8M Nano (audio or rt_latency):

```
u-boot => setenv jh_root_dtb imx8mn-evk-harpoon.dtb
u-boot => run jh_mmcboot
```

- For i.MX 8M Nano (industrial or rt_latency):

```
u-boot => setenv jh_root_dtb imx8mn-evk-harpoon-industrial.dtb
u-boot => run jh_mmcboot
```

- For i.MX 8M Plus (audio or rt_latency):

```
u-boot => setenv jh_root_dtb imx8mp-evk-harpoon.dtb
u-boot => run jh_mmcboot
```

- For i.MX 8M Plus (industrial or rt_latency):

```
u-boot => setenv jh_root_dtb imx8mp-evk-harpoon-industrial.dtb
u-boot => run jh_mmcboot
```

Note: This configuration is not persistent after a reboot.

To make changes permanent, execute the following commands once (after `setenv` above):

```
u-boot => setenv bootcmd 'run jh_mmcboot'
u-boot => saveenv
```

Now, at each reboot, the system starts with the Jailhouse compatible configuration and no user interaction is required.

4.3 Audio application

4.3.1 Features of the audio application

The audio application is available in the harpoon share directory of the target's root file system:

```
/usr/share/harpoon/inmates/freertos/audio.bin  # FreeRTOS
binary
/usr/share/harpoon/inmates/zephyr/audio.bin    # Zephyr binary
```

This application contains several running modes that can be started and stopped via a user space application running on Linux called `harpoon_ctrl`.

The different modes are:

- DTMF playback: plays a DTMF sequence.
- Sine wave playback: plays a generated sine wave.
- Loopback: record sound from HiFiBerry's input and play it live through HiFiBerry's output.
- Full Audio pipeline: implements a flexible 3-stage pipeline with different sources (DTMF, sine waves, SAI input) that can be routed to different sinks (SAI outputs).

All the modes support:

- Basic pipeline framework for audio processing
- 44100, 48000, 88200, 176400, 96000, and 192000 Hz sample frequency
- Audio processing period with 2, 4, 8, 16, or 32 frames
- Audio processing in 64bit float format
- Audio playback to both SAI3 (on board codec/sound jack) and SAI5 (HiFiBerry)
- Audio capture from SAI5 (HiFiBerry)

Note: Playback on SAI3: The i.MX 8M Plus EVK on board CODEC (WM8960) supports sample rates up to 48 kHz only. 88.2 kHz and above frequency settings will fail for this CODEC.

4.3.2 Starting the audio application with Jailhouse

The harpoon service uses the `/etc/harpoon/harpoon.conf` configuration file that contains the RTOS and the application to run. By default, the configuration file points to the FreeRTOS audio application. To use the Zephyr audio application, the following command can be run to generate an appropriate configuration file:

```
# harpoon_set_configuration.sh zephyr audio
```

Note: Avoid changing the configuration while the Harpoon service is running (silent failure when restarting the service).

To use the audio application, Jailhouse must be started first. To start Jailhouse and the audio application, run the harpoon service with systemd:

```
# systemctl start harpoon
```

Once the harpoon service has been started, `harpoon_ctrl` is used to start or stop the audio modes with optional parameters. The different options for the audio application are:

```
Audio options:
  -f <frequency> audio clock frequency (in Hz)
                  Supporting 44100, 48000, 88200, 176400,
                  96000, 192000 Hz
                  Will use default frequency 48000Hz if
  not specified
  -p <frames>     audio processing period (in frames)
                  Supporting 2, 4, 8, 16, 32 frames
                  Will use default period 8 frames if not
  specified
  -r <id>         run audio mode id:
                  0 - dtmf playback
                  1 - sine wave playback
                  2 - playback & recording (loopback)
                  3 - audio pipeline
  -s             stop running audio mode

Audio pipeline options:
  -a <pipeline_id> audio pipeline id (default 0)
  -d             audio pipeline dump

Audio element options:
  -a <pipeline_id> audio pipeline id (default 0)
  -d             audio element dump
  -e <element_id>  audio element id (default 0)
  -t <element_type> audio element type (default 0):
                  0 - dtmf source
                  1 - routing
                  2 - sai sink
                  3 - sai source
                  4 - sine source

Routing audio element options:
  -a <pipeline_id> audio pipeline id (default 0)
  -c             connect routing output
  -d             disconnect routing output
  -e <element_id>  routing element id (default 0)
  -i <input_id>    routing element input (default 0)
  -o <output_id>   routing element output (default 0)
```

4.3.3 Audio latency in loopback mode

The loopback mode reads audio samples from HiFiBerry's ADC in an audio buffer and sends this buffer to the HiFiBerry's DAC when fully loaded.

The end to end latency, between the analog audio input and the analog audio output, has been measured and is dependent on the audio buffer size and the audio sampling rate. The RTOS and SoC combination does not alter the latency measurements.

Table 2. Audio application latency

Sampling rate (kHz)	Audio latency (μ s)				
	Audio buffer size (frames)				
	32	16	8	4	2
192	610	440	360	320	300
176.4	660	480	390	340	330
96	1210	870	700	630	580
88.2	1310	940	770	680	630
48	2380	1720	1390	1220	1140
44.1	2600	1880	1510	1310	1240

4.3.4 Running audio application: examples

4.3.4.1 Playing DTMF

To start DTMF playback with default parameters (48000 Hz sampling rate):

```
# harpoon_ctrl audio -r 0
```

The DTMF is played both to the Hifiberry RCA outputs as well as the onboard jack.

To run another audio use case, the playback must be stopped with the following command:

```
# harpoon_ctrl audio -s
```

4.3.4.2 Playing in loopback mode

In loopback mode, the SAI input is copied to the SAI output.

To start loopback mode with default parameters (48000 Hz sampling rate, 8 frame period size):

```
# harpoon_ctrl audio -r 2
```


To run another audio use case, the playback must be stopped with the following command:

```
# harpoon_ctrl audio -s
```

4.3.4.3 Playing a full audio pipeline

The reference audio application is based on a basic pipeline framework for audio processing. Different audio processing elements can be assembled in a pipeline to process audio from source(s) to sink(s). The pipeline is processed in real time, cyclically with a fixed period.

In the audio pipeline mode there is a three stage pipeline composed of a routing element in stage 2 which can link source elements from stage 1 to sink elements from stage 3.

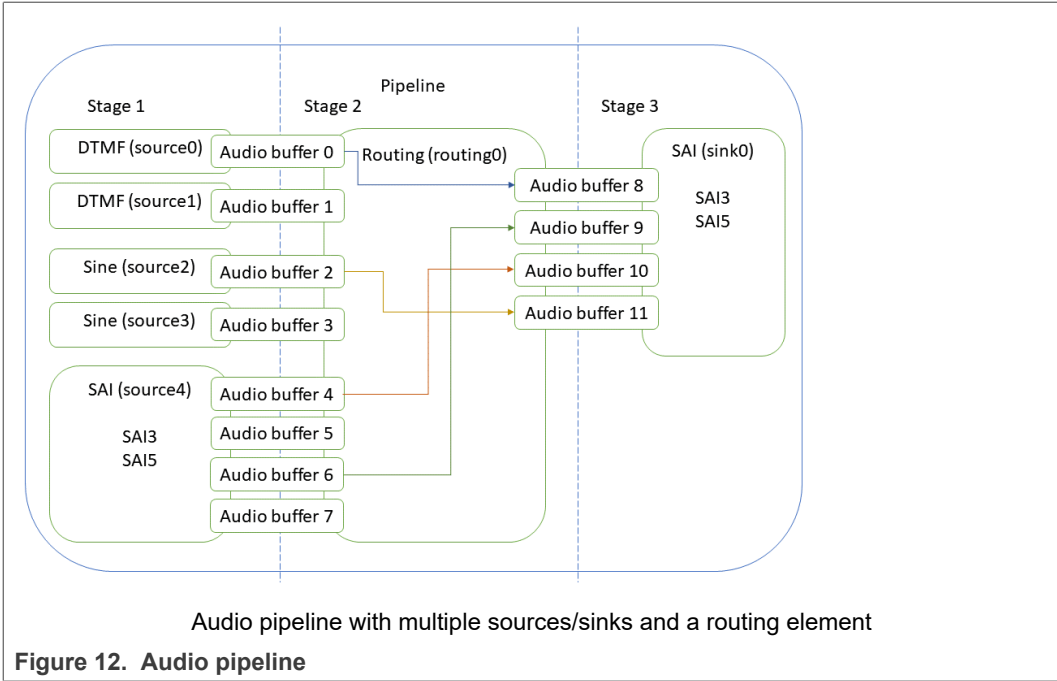

When running the audio pipeline, the routes can be configured dynamically with the `harpoon_ctrl` command. This command uses source and sink indices to connect elements.

Table 3. Indices of source elements

Index	Source element	Comments
0	DTMF, sequence 1	Software generated source
1	DTMF, sequence 2	Software generated source
2	Sine wave, 440 Hz	Software generated source
3	Sine wave, 880 Hz	Software generated source
4	SAI5, left channel	Hardware source
5	SAI5, right channel	Hardware source
6	SAI3, left channel	Hardware source
7	SAI3, right channel	Hardware source

Table 4. Indices of sink elements

Index	Sink element	Comments
0	SAI5, left channel	Hardware sink
1	SAI5, right channel	Hardware sink
2	SAI3, left channel	Hardware sink
3	SAI3, right channel	Hardware sink

This makes for a flexible pipeline. For instance, the following commands starts the pipeline and configures the routing element to have a loopback between SAI5 input and SAI3 output (i.e. sound recorded by the HiFiBerry card played by the EVK's internal

codec) while a DTMF sequence is played on the left channel of SAI5's output and a 440 Hz sine wave on the right channel of SAI5's output (i.e. HiFiBerry's output):

```
# harpoon_ctrl audio -r 3          # start audio pipeline
# harpoon_ctrl routing -i 4 -o 2 -c # SAI5's input to SAI3's
output (L)
# harpoon_ctrl routing -i 5 -o 3 -c # SAI5's input to SAI3's
output (R)
# harpoon_ctrl routing -i 0 -o 0 -c # DTMF to SAI5's output
(L)
# harpoon_ctrl routing -i 2 -o 1 -c # sinewave 440Hz to
SAI5's output (R)
```

4.4 Industrial application

4.4.1 Features of the industrial application

The industrial application is available in the harpoon share directory of the root file system:

```
/usr/share/harpoon/inmates/freertos/industrial.bin # FreeRTOS
binary
/usr/share/harpoon/inmates/zephyr/industrial.bin    # Zephyr
binary (i.MX 8M Plus EVK only)
```

This application contains several use cases that can be started and stopped via the Harpoon Linux user space application, namely `harpoon_ctrl`.

Note: In the current release, a single industrial use case is supported under Zephyr: CAN on i.MX 8M Plus EVK.

The different use cases are:

- CAN (i.MX 8M Plus EVK):
 - Simple loopback example that uses the flexCAN interface to send and receive CAN messages through internal loopback interconnect (no cable required).
 - Ping-pong: Two boards are connected through their CAN1 connectors (J19) with a male-male DB9 CAN cable. The later can either be purchased or built following the CAN pinout standard. Endpoint A (board A) sends CAN FD messages to Endpoint B (board B). Endpoint B uses two receiving queues to receive messages in turns, and prints the message content (and the receiving queue number) to the terminal after any queue is full.
 - Ethernet (FreeRTOS only):
 - Simple MCUXpresso SDK API based application to send and receive packets through the ENET interface (i.MX 8M Mini/Nano EVK)
 - Full TSN stack based application, running a gPTP stack and sending/receiving TSN packets on a TSN network:
 - Through the ENET_QOS interface, acting as a controller/IO device (i.MX 8M Plus EVK).
 - Through the ENET interface, acting as a controller/IO device (i.MX 8M Mini EVK).
- Note:** The ENET interface does not support 802.1Qbv. Packets are transmitted using basic, software based, strict priority scheduling.

4.4.2 Starting the industrial application

To use the industrial application, Jailhouse must be started first. To start Jailhouse and the industrial application, create the corresponding Harpoon configuration file and run the harpoon service using systemd; for instance:

```
# harpoon_set_configuration.sh freertos industrial
```

Note: Avoid changing the configuration while the Harpoon service is running (silent failure when restarting the service).

The configuration file is stored under `/etc/harpoon/harpoon.conf` and the harpoon systemd service uses it to start Jailhouse and the industrial application:

```
# systemctl start harpoon
```

Once the harpoon service has been started, `harpoon_ctrl` is used to start or stop the industrial features with optional parameters. The different options for the industrial application are:

```
Industrial CAN options:
  -r <id>          run CAN mode id:
                   0 - loopback
                   1 - interrupt
                   2 - pingpong
  -n <node_type>   acting as node 'A' or 'B' (default 'A')
                   0 - node 'A'
                   1 - node 'B'
  -s              stop CAN
Industrial ethernet options:
  -a <mac_addr>   set hardware MAC address (default
91:e0:f0:00:fe:70)
  -r <id>          run ethernet mode id:
                   0 - genAVB/TSN stack
                   1 - mcux-sdk API (imx8m{m,n} ENET)
  -i <role>        for genAVB/TSN: endpoint role (default
'controller', if not specified)
                   0 - role is 'IO device 0'
                   1 - role is 'IO device 1'
  -s              stop ethernet
```

4.4.3 Running the industrial application: examples

4.4.3.1 CAN use cases

Loopback

Type this command to start a CAN loopback transfer (CAN FD mode enabled by default):

```
# harpoon_ctrl can -r 0
```

To execute a new CAN use case, the previous run must be stopped with the following command:

```
# harpoon_ctrl can -s
```

Ping-pong

One board must be chosen as node A and the other board as node B. (Note: Node B should start first) Data is sent from the node A to the node B.

Type this command to start receiving CAN FD data on board B:

```
# harpoon_ctrl can -n 1 -r 2
```

Type this command on board A to start transferring data:

```
# harpoon_ctrl can -n 0 -r 2
```

4.4.3.2 Ethernet through MCUXpresso SDK API

A simple reference use case is given to exchange ethernet packets using the the SDK API:

```
# harpoon_ctrl ethernet -r 1
```

One possibility to verify that the use case is functional is to plug an ethernet cable on the ethernet connector on one end, and to a Linux host computer on the other end.

The expected output on the inmate cell console is as follows:

```
ENET test start.
ENET: Wait for PHY link up...
ENET: PHY link speed 1000M full-duplex
INFO: ethernet_sdk_enet_stat: not implemented
INFO: cpu_load_stats          : CPU load: 0.00%
ENET test result:
      TX: total = 100; succ = 100; fail = 0
      RX: total = 100; succ = 0; fail = 0; empty = 100
```

To verify that data are successfully received on the host side, one may use the tcpdump tool (sudo permissions may be required):

```
$ tcpdump -i <INTERFACE> -e
tcpdump: verbose output suppressed, use -v or -vv for full protocol
decode
listening on enp1s2, link-type EN10MB (Ethernet), capture size 262144
bytes
11:48:40.402104 00:04:9f:06:96:36 (oui Freescale) > 01:80:c2:00:00:0e
(oui Unknown), ethertype LLDP (0x88cc), length 269: LLDP, length 255:
imx8mp-lpddr4-evk
11:48:46.648227 00:00:00:00:00:00 (oui Ethernet) > Broadcast, 802.3,
length 986: LLC, dsap Null (0x00) Individual, ssap Null (0x00)
Response, ctrl 0x0302: Information, send seq 1, rcv seq 1, Flags
[Final], length 986
0x0000: 0001 0203 0405 0607 0809 0a0b 0c0d 0e0f .....
0x0010: 1011 1213 1415 1617 1819 1a1b 1c1d 1e1f .....
0x0020: 2021 2223 2425 2627 2829 2a2b 2c2d 2e2f .!"#$%&'()*+,-./
0x0030: 3031 3233 3435 3637 3839 3a3b 3c3d 3e3f 0123456789:;<=>?
0x0040: 4041 4243 4445 4647 4849 4a4b 4c4d 4e4f @ABCDEFGH IJKLMNO
0x0050: 5051 5253 5455 5657 5859 5a5b 5c5d 5e5f PQRSTUVWXYZ[\]^_
0x0060: 6061 6263 6465 6667 6869 6a6b 6c6d 6e6f `abcdefg hijklmno
0x0070: 7071 7273 7475 7677 7879 7a7b 7c7d 7e7f pqrstuvwxyz{|}~.
0x0080: 8081 8283 8485 8687 8889 8a8b 8c8d 8e8f .....
0x0090: 9091 9293 9495 9697 9899 9a9b 9c9d 9e9f .....
0x00a0: a0a1 a2a3 a4a5 a6a7 a8a9 aaab acad aeaf .....
```

```

0x00b0: b0b1 b2b3 b4b5 b6b7 b8b9 babb bcbd bebf .....
0x00c0: c0c1 c2c3 c4c5 c6c7 c8c9 cacb cccd cecf .....
0x00d0: d0d1 d2d3 d4d5 d6d7 d8d9 dadb dcdd dedf .....
0x00e0: e0e1 e2e3 e4e5 e6e7 e8e9 eaeb eced eeef .....
0x00f0: f0f1 f2f3 f4f5 f6f7 f8f9 fafb fcfd fe00 .....
0x0100: 0102 0304 0506 0708 090a 0b0c 0d0e 0f10 .....
0x0110: 1112 1314 1516 1718 191a 1b1c 1d1e 1f20 .....
0x0120: 2122 2324 2526 2728 292a 2b2c 2d2e 2f30 !"#$%&'()*+,-./0
0x0130: 3132 3334 3536 3738 393a 3b3c 3d3e 3f40 123456789:;<=>?@
0x0140: 4142 4344 4546 4748 494a 4b4c 4d4e 4f50 ABCDEFGHIJKLMNOP
0x0150: 5152 5354 5556 5758 595a 5b5c 5d5e 5f60 QRSTUVWXYZ[\]^_`
0x0160: 6162 6364 6566 6768 696a 6b6c 6d6e 6f70 abcdefghijklmnop
0x0170: 7172 7374 7576 7778 797a 7b7c 7d7e 7f80 qrstuvwxyz{|}~..
0x0180: 8182 8384 8586 8788 898a 8b8c 8d8e 8f90 .....
0x0190: 9192 9394 9596 9798 999a 9b9c 9d9e 9fa0 .....
0x01a0: a1a2 a3a4 a5a6 a7a8 a9aa abac adae afb0 .....
<snip>

```

4.4.3.3 Ethernet with GenAVB/TSN stack

A more complex ethernet use case uses the GenAVB/TSN Stack, which provides advanced implementation for AVB as well as Time-Sensitive Networking (TSN) functionalities. Some functions for the latter do require special TSN hardware support, available in the i.MX 8M Plus SoC for instance.

The below sections gives some details on the hardware requirements, setup preparation and test execution.

As far as the Harpoon demonstration goes, the controller (i.MX 8MP Plus) runs in the Cortex-A53 FreeRTOS cell. The IO devices, which can be any TSN endpoint (i.MX 8M Plus, RT1170, etc...) and the TSN bridge complete the TSN network environment for this use case.

4.4.3.3.1 Requirements

- Two TSN endpoints (i.MX 8M Plus LPDDR4 EVK, or optionally an i.MX RT1170 EVK)
- One TSN bridge (LS1028ARDB)

Note: The second IO Device is optional.

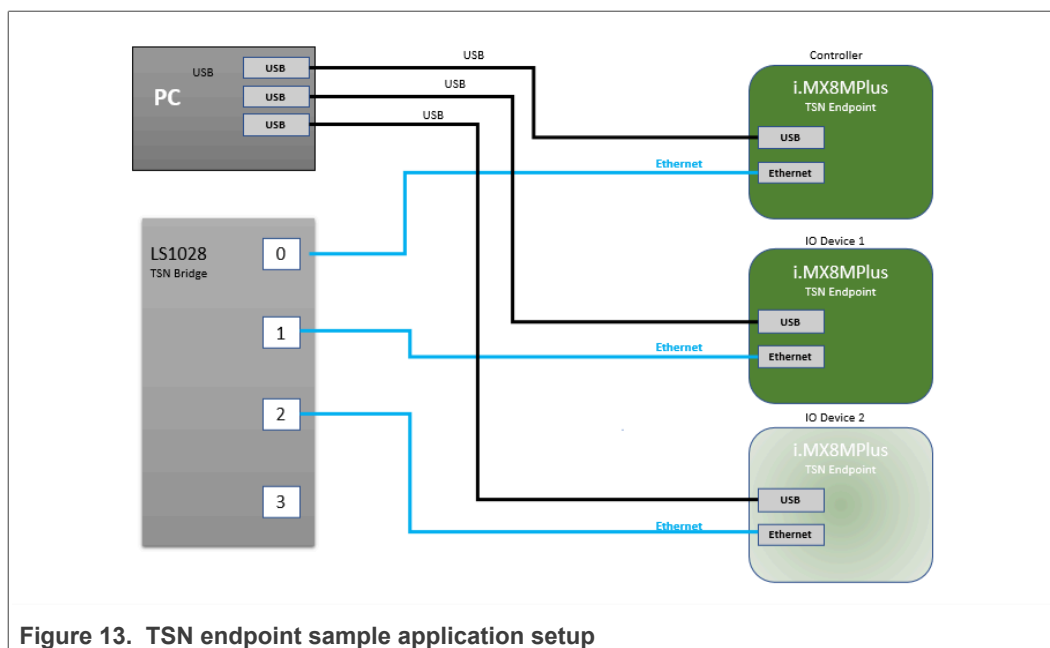


Figure 13. TSN endpoint sample application setup

4.4.3.3.2 Setup preparation

One of the TSN endpoint needs to be configured as “controller” and the other one as “IO device”. Both endpoints are connected to the TSN bridge.

4.4.3.3.2.1 i.MX RT1170 TSN Endpoint - IO Device (Optional)

If using an i.MX RT1170 as the IO device, first flash the latest GenAVB/TSN Endpoint image (<https://mcuxpresso.nxp.com/download/685e45c32bb022c898e4d11e6d914010>).

Once the RT1170 is flashed, press 'insert' and set the following parameters:

```
IO_DEVICE_0>>write tsn_app/role 1
IO_DEVICE_0>>write tsn_app/period_ns 100000
```

Press 'insert' to exit the configuration mode and reboot.

4.4.3.3.2.2 TSN Bridge

LS1028ARDB can be used as a generic time-aware bridge, connected to other time-aware end stations or bridges.

By default, LS1028ARDB does not forward packets if no bridge interface is configured under Linux. Enabling bridge interface is dependent on the board used.

TSN Bridge Configuration

Use the following commands to configure bridge on LS1028ARDB:

```
# ls /sys/bus/pci/devices/0000:00:00.5/net/
```

Get switch device interfaces for swp0, swp1, swp2 and swp3 as shown below:

```
ip link set dev eno2 up
ip link add name br0 type bridge
```

```
ip link set br0 up
ip link set master br0 swp0 up
ip link set master br0 swp1 up
ip link set master br0 swp2 up
ip link set master br0 swp3 up
```

Then start gPTP:

```
# tsn.sh start
```

TSN Bridge logging

Logs are stored in /var/log/tsn-br.

- Linux command:

```
# tail -f /var/log/tsn-br
```

- The bridge stack statistics are similar to the endpoint stack ones except that they are reported for each of the external ports of the switch (Port 0 to 3) and also for the internal port connected to the endpoint stack (Port 4) in case of Hybrid setup.
- *Pdelay* (propagation delay), *Link status*, *AS capability* and *Port Role* are printed out for each port.

```
Port(0): domain(0, 0): Role: Master   Link: Up   asCapable: Yes
neighborGptpCapable: Yes delayMechanism: P2P
Port(0): Propagation delay (ns): 334.29           min
329 avg    333 max    342 variance    17
Port(1): domain(0, 0): Role: Disabled Link: Down asCapable: No
neighborGptpCapable: No delayMechanism: P2P
Port(2): domain(0, 0): Role: Master   Link: Up   asCapable: Yes
neighborGptpCapable: Yes delayMechanism: P2P
Port(2): Propagation delay (ns): 386.54           min
380 avg    385 max    390 variance    9
Port(3): domain(0, 0): Role: Disabled Link: Down asCapable: No
neighborGptpCapable: No delayMechanism: P2P
Port(4): domain(0, 0): Role: Disabled Link: Down asCapable: No
neighborGptpCapable: No delayMechanism: P2P
```

If a port is not connected, *Link* status takes the value *Down*.

If a port is not capable of communicating a synchronized time, *AS_Capable* status takes the value *No*.

4.4.3.3.3 Running the TSN use case

To start the Ethernet use case from the inmate cell (acting as a TSN Endpoint - Controller), type the following command:

```
# harpoon_ctrl ethernet -r 0
```

To start the Ethernet use case from the inmate cell (acting as a TSN Endpoint - IO Device), type the following command:

```
# harpoon_ctrl ethernet -r 0 -i 0
```

The expected output in the inmate console is:

```
INFO: main_task           : Industrial application started!

[5835/93378]
INFO: ethernet_avb_tsn_init : ethernet_avb_tsn_init
INFO: 0 app gavb_stack_init :
talker_entity_id 0x0000000000000000
INIT: 0.000000000 stack-freertos genavb_init
      : NXP's GenAVB/TSN stack version dev-d71ce4fc
INIT: 0.000000000 stack-freertos hw_avb_timer_init
      : hw_timer_init done
INIT: 0.000000000 stack-freertos hw_clock_init
      : rate: 24000000, period: 100000000, mult(to
ns): 699050667, shift(to ns): 24, mult(to cycles): 103079215,
shift(to cycles): 32
INIT: 0.000000000 stack-freertos hw_clock_register
      : hw clock id: 1 registered
INIT: 0.000000000 stack-freertos hw_timer_register
      : hw_timer(C0600080) of clock id: 1 registered
INIT: 0.000000000 stack-freertos hw_timer_register
      : hw_timer(C06000C8) of clock id: 1 registered
INIT: 0.000000000 stack-freertos hw_timer_register
      : hw_timer(C0600110) of clock id: 1 registered
INFO: 0.000000000 stack-freertos
hw_avb_timer_register_device : dev(C06003D0) , ref clock
24000000 Hz, min delay cycles 240
INFO: 0.000000000 stack-freertos
gpt_hw_timer_set_period      : gpt_dev (C06003A0) set
period 125(us), 3000(cycles)
INIT: 0.000000000 stack-freertos gpt_init
      : gpt_init : registered AVB HW timer(C06003D0)
channel: 0, prescale: 1
ERR: 0.000000000 stack-freertos gpt_init
      : gpt_init : failed to register GPT media clock
recovery
INIT: 0.000000000 stack-freertos __port_init
      : port(0): C0604DF8
INIT: 0.000000000 stack-freertos enet_qos_init
      : port(0) enet(0) core clock: 125000000 Hz, ptp ref
clock: 100000000 Hz, ptp/system clock: 800000000 Hz
INIT: 0.000000000 stack-freertos enet_qos_init
      : port(0) enet(0) num TX queue: 5, num RX queue: 4
INIT: 0.000000000 stack-freertos hw_clock_init
      : rate: 1000000000, period: 3b9ac9ffc4653600,
mult(to ns): 1, shift(to ns): 0, mult(to cycles): 1, shift(to
cycles): 0
INIT: 0.000000000 stack-freertos hw_clock_register
      : hw clock id: 2 registered
INIT: 0.000000000 stack-freertos hw_timer_register
      : hw_timer(C0605930) of clock id: 2 registered
INIT: 0.000000000 stack-freertos hw_timer_register
      : hw_timer(C0605970) of clock id: 2 registered
INIT: 0.000000000 stack-freertos hw_timer_register
      : hw_timer(C06059B0) of clock id: 2 registered, pps
support
INIT: 0.000000000 stack-freertos _os_clock_init
      : clock ID: 0 success, flags: 0
```

```

ERR          0.000000000 stack-freertos _os_clock_init
              : clock ID: 1 has no hw clock
ERR          0.000000000 stack-freertos _os_clock_init
              : clock ID: 2 has no hw clock
ERR          0.000000000 stack-freertos _os_clock_init
              : clock ID: 3 has no hw clock
ERR          0.000000000 stack-freertos _os_clock_init
              : clock ID: 4 has no hw clock
ERR          0.000000000 stack-freertos _os_clock_init
              : clock ID: 5 has no hw clock
ERR          0.000000000 stack-freertos _os_clock_init
              : clock ID: 6 has no hw clock
ERR          0.000000000 stack-freertos _os_clock_init
              : clock ID: 7 has no hw clock
INIT         0.000000000 stack-freertos _os_clock_init
              : clock ID: 8 success, flags: 1
INIT         0.000000000 stack-freertos _os_clock_init
              : clock ID: 9 success, flags: 0
ERR          0.000000000 stack-freertos _os_clock_init
              : clock ID: 10 has no hw clock
ERR          0.000000000 stack-freertos _os_clock_init
              : clock ID: 11 has no hw clock
ERR          0.000000000 stack-freertos _os_clock_init
              : clock ID: 12 has no hw clock
ERR          0.000000000 stack-freertos _os_clock_init
              : clock ID: 13 has no hw clock
INIT         0.000000000 stack-freertos _os_clock_init
              : clock ID: 14 success, flags: 4
ERR          0.000000000 stack-freertos _os_clock_init
              : clock ID: 15 has no hw clock

[6599/94179]
ERR          0.000000000 stack-freertos _os_clock_init
              : clock ID: 16 has no hw clock
INFO         0.000000000 stack-freertos
net_qos_map_traffic_class_to_hw_ : port(0) num tc: 5, num sr:
2, num hw queues: 5
INFO         0.000000000 stack-freertos
net_qos_map_traffic_class_to_hw_ : num hw queues: 5, num cbs:
2
INFO         0.000000000 stack-freertos
net_qos_map_traffic_class_to_hw_ : tc(0)->hw_queue_id: 0,
flags: 2, hw queue prop: 1
INFO         0.000000000 stack-freertos
net_qos_map_traffic_class_to_hw_ : tc(1)->hw_queue_id: 1,
flags: 2, hw queue prop: 1
INFO         0.000000000 stack-freertos
net_qos_map_traffic_class_to_hw_ : tc(2)->hw_queue_id: 2,
flags: 2, hw queue prop: 1
INFO         0.000000000 stack-freertos
net_qos_map_traffic_class_to_hw_ : tc(3)->hw_queue_id: 3,
flags: 1, hw queue prop: 2
INFO         0.000000000 stack-freertos
net_qos_map_traffic_class_to_hw_ : tc(4)->hw_queue_id: 4,
flags: 1, hw queue prop: 2
INFO         0.000000000 stack-freertos hw_timer_request
              : hw_timer(C0600110)
INFO         0.000000000 stack-freertos os_timer_create
              : os_timer(C0626B78), queue: 0

```



```

INIT      0.000000000 stack-freertos net_tx_task
          : networking(C060F2A8) tx task started
INIT      0.000000000 stack-freertos net_rx_task
          : networking(C0626A38) rx task started
INIT      0.000000000 stack-freertos net_task_init
          : networking started
INFO      0.000000000 stack-freertos timer_system_create
          : os_timer(C0605A68), queue: 0
INFO      0.000000000 stack-freertos os_timer_create
          : os_timer(C0605A68), queue: 0
INIT      0.000000000 stack-freertos hw_avb_timer_start
          : hw_timer_start done
INIT      0.000000000 stack-freertos management_task
          : management task started
INFO      0.000000000 stack-freertos __net_tx_init
          : socket(C0658680) port_id(0)
INIT      0.000000000 stack-freertos ipc_tx_init
          : ipc(C06039C8, C06588A0) success
INIT      0.000000000 stack-freertos ipc_tx_init
          : ipc(C0603AF8, C0658A40) success
INIT      0.000000000 stack-freertos ipc_rx_init
          : ipc(C0603898, C0658BE0) success
INFO      0.000000000 stack-freertos timer_system_create
          : os_timer(C06585A0), queue: 0
INFO      0.000000000 stack-freertos os_timer_create
          : os_timer(C06585A0), queue: C06583A0
INIT      0.000000000 management mac_service_init
          : mac(C06585D8) done
INIT      0.000000000 management management_init
          : management(C0658550) done
INIT      0.000000000 stack-freertos management_task
          : started
INIT      0.000000000 stack-freertos phy_task
          : phy(1) task started
INIT      0.000000000 stack-freertos management_task_init
          : management main completed
INIT      0.000000000 stack-freertos gptp_task
          : gptp task started
INFO      0.000000000 gptp gptp_check_config
          : gptp config is valid
INIT      0.000000000 gptp gptp_init
          : gptp(C065A150) (profile 0 - rsync 0 - num ports = 1 -
            force_2011 = 0)
INIT      0.000000000 stack-freertos ipc_tx_init
          : ipc(C0602B88, C0665F40) success
INIT      0.000000000 stack-freertos ipc_tx_init
          : ipc(C0602CB8, C06660E0) success
INFO      0.000000000 stack-freertos __net_rx_init
          : socket(C0666280)
INFO      0.000000000 stack-freertos __net_tx_init
          : socket(C06664A0) port_id(0)
INFO      0.000000000 stack-freertos net_add_multi
          : port(0) 01:80:c2:00:00:0e
INFO      0.000000000 stack-freertos timer_system_create
          : os_timer(C0665530), queue: 0
INFO      0.000000000 stack-freertos os_timer_create
          : os_timer(C0665530), queue: C0659FA0
INFO      0.000000000 stack-freertos timer_system_create
          : os_timer(C0665598), queue: 0

```

```

INFO          0.000000000 stack-freertos os_timer_create
              : os_timer(C0665598), queue: C0659FA0
INIT          0.000000000 gptp  gptp_cmlds_init
              : CMLDS link port (0) initialized
INFO          0.000000000 gptp  dump_priority_vector
              : domain(0, 0) system priority vector: root identity
              00bbccfffedde12
INFO          0.000000000 gptp  dump_priority_vector
              : system priority vector: priority1 255      priority2 248
INFO          0.000000000 gptp  dump_priority_vector
              : system priority vector: class 255  accuracy 255
INFO          0.000000000 gptp  dump_priority_vector
              : system priority vector: variance 17258
INFO          0.000000000 gptp  dump_priority_vector
              : system priority vector: source port identity
              00bbccfffedde12, port number 0
INFO          0.000000000 gptp  dump_priority_vector
              : system priority vector: port number 0 steps removed 0
INFO          0.000000000 stack-freertos timer_system_create
              : os_timer(C0665600), queue: 0
INFO          0.000000000 stack-freertos os_timer_create
              : os_timer(C0665600), queue: C0659FA0
INIT          0.000000000 gptp  gptp_instance_init
              : Configuring Port(0) (C0663B30) domain(0, 0)
              delayMechanism(P2P)
INIT          0.000000000 gptp  gptp_port_init_timers
              : Port(0)
INFO          0.000000000 stack-freertos timer_system_create
              : os_timer(C0665668), queue: 0
INFO          0.000000000 stack-freertos os_timer_create
              : os_timer(C0665668), queue: C0659FA0
INFO          0.000000000 stack-freertos timer_system_create
              : os_timer(C06656D0), queue: 0
INFO          0.000000000 stack-freertos os_timer_create
              : os_timer(C06656D0), queue: C0659FA0
INFO          0.000000000 stack-freertos timer_system_create
              : os_timer(C0665738), queue: 0
INFO          0.000000000 stack-freertos os_timer_create
              : os_timer(C0665738), queue: C0659FA0
INFO          0.000000000 stack-freertos timer_system_create
              : os_timer(C06657A0), queue: 0
INFO          0.000000000 stack-freertos os_timer_create
              : os_timer(C06657A0), queue: C0659FA0
INFO          0.000000000 stack-freertos timer_system_create
              : os_timer(C0665808), queue: 0
INFO          0.000000000 stack-freertos os_timer_create
              : os_timer(C0665808), queue: C0659FA0
INFO          0.000000000 stack-freertos timer_system_create
              : os_timer(C0665870), queue: 0
INFO          0.000000000 stack-freertos os_timer_create
              : os_timer(C0665870), queue: C0659FA0
INFO          0.000000000 stack-freertos timer_system_create
              : os_timer(C06658D8), queue: 0
INFO          0.000000000 stack-freertos os_timer_create
              : os_timer(C06658D8), queue: C0659FA0
INFO          0.000000000 stack-freertos timer_system_create
              : os_timer(C0665940), queue: 0
INFO          0.000000000 stack-freertos os_timer_create
              : os_timer(C0665940), queue: C0659FA0

```

```

ERR          0.000000000 common timer_start
: timer(C0663FD8) 0ms period
INFO         0.000000000 stack-freertos timer_system_create
: os_timer(C06659A8), queue: 0
INFO         0.000000000 stack-freertos os_timer_create
: os_timer(C06659A8), queue: C0659FA0
INIT         0.000000000 gptp gptp_instance_init
: instance(C06635F0) domain(0, 0) is enabled (gm capable 0)
INFO         0.000000000 gptp dump_priority_vector
: domain(1, -1) system priority vector: root identity
00bbccfffedde12
INFO         0.000000000 gptp dump_priority_vector
: system priority vector: priority1 255 priority2 248
INFO         0.000000000 gptp dump_priority_vector
: system priority vector: class 255 accuracy 255
INFO         0.000000000 gptp dump_priority_vector
: system priority vector: variance 17258
INFO         0.000000000 gptp dump_priority_vector
: system priority vector: source port identity
00bbccfffedde12, port number 0
INFO         0.000000000 gptp dump_priority_vector
: system priority vector: port number 0 steps removed 0
INIT         0.000000000 gptp gptp_instance_init
: Configuring Port(0) (C0664AB0) domain(1, -1)
delayMechanism(COMMON_P2P)
INIT         0.000000000 gptp gptp_port_init_timers
: Port(0)
INFO         0.000000000 stack-freertos timer_system_create
: os_timer(C0665A10), queue: 0
INFO         0.000000000 stack-freertos os_timer_create
: os_timer(C0665A10), queue: C0659FA0
INFO         0.000000000 stack-freertos timer_system_create
: os_timer(C0665A78), queue: 0
INFO         0.000000000 stack-freertos os_timer_create
: os_timer(C0665A78), queue: C0659FA0
INFO         0.000000000 stack-freertos timer_system_create
: os_timer(C0665AE0), queue: 0
INFO         0.000000000 stack-freertos os_timer_create
: os_timer(C0665AE0), queue: C0659FA0
INFO         0.000000000 stack-freertos timer_system_create
: os_timer(C0665B48), queue: 0
INFO         0.000000000 stack-freertos os_timer_create
: os_timer(C0665B48), queue: C0659FA0
INFO         0.000000000 stack-freertos timer_system_create
: os_timer(C0665BB0), queue: 0
INFO         0.000000000 stack-freertos os_timer_create
: os_timer(C0665BB0), queue: C0659FA0
INFO         0.000000000 stack-freertos timer_system_create
: os_timer(C0665C18), queue: 0
INFO         0.000000000 stack-freertos os_timer_create
: os_timer(C0665C18), queue: C0659FA0
INFO         0.000000000 stack-freertos timer_system_create
: os_timer(C0665C80), queue: 0
INFO         0.000000000 stack-freertos os_timer_create
: os_timer(C0665C80), queue: C0659FA0
INFO         0.000000000 stack-freertos timer_system_create
: os_timer(C0665CE8), queue: 0
INFO         0.000000000 stack-freertos os_timer_create
: os_timer(C0665CE8), queue: C0659FA0

```

```

ERR          0.000000000 common timer_start
: timer(C0664F58) 0ms period
INFO         0.000000000 stack-freertos timer_system_create
: os_timer(C0665D50), queue: 0
INFO         0.000000000 stack-freertos os_timer_create
: os_timer(C0665D50), queue: C0659FA0
INIT         0.000000000 gptp gptp_instance_init
: instance(C0664570) domain(1, -1) is disabled (gm capable
0)
INFO         0.000000000 gptp gptp_link_down
: Port(0): link is DOWN
INIT         0.000000000 stack-freertos ipc_rx_init
: ipc(C06039C8, C0666810) success
INIT         0.000000000 stack-freertos ipc_tx_init
: ipc(C0603898, C06669B0) success
INIT         0.000000000 stack-freertos ipc_rx_init
: ipc(C0602A58, C0666DC0) success
INFO         0.000000000 gptp gptp_link_down
: Port(0): link is DOWN
INIT         0.159357387 stack-freertos gptp_task_init
: gptp main completed
INIT         0.159357387 stack-freertos srp_task
: srp task started
INIT         0.159357387 stack-freertos ipc_rx_init
: ipc(C06039C8, C066B5E0) success
INIT         0.159357387 stack-freertos ipc_tx_init
: ipc(C0603898, C066B780) success
INFO         0.159357387 stack-freertos __net_rx_init
: socket(C066B920)
INFO         0.159357387 stack-freertos __net_tx_init
: socket(C066BB40) port_id(0)
INIT         0.159357387 stack-freertos ipc_rx_init
: ipc(C06014F8, C066BF00) success
INIT         0.159357387 stack-freertos ipc_tx_init
: ipc(C0601628, C066C0A0) success
INIT         0.159357387 stack-freertos ipc_tx_init
: ipc(C0601758, C066C240) success
INIT         0.159357387 srp msrp_map_init
: done
INFO         0.159357387 stack-freertos timer_system_create
: os_timer(C066B388), queue: 0
INFO         0.159357387 stack-freertos os_timer_create
: os_timer(C066B388), queue: C0667BF0
INFO         0.159357387 stack-freertos timer_system_create
: os_timer(C066B3F0), queue: 0
INFO         0.159357387 stack-freertos os_timer_create
: os_timer(C066B3F0), queue: C0667BF0
INIT         0.159357387 srp mrp_init
: mrp_app(C066AD40) done
INIT         0.159357387 srp msrp_port_init
: port(0) done
INFO         0.159357387 srp msrp_create_domain
: port(0) domain(6, 3, 2) created, num domains 1
INFO         0.159357387 stack-freertos timer_system_create
: os_timer(C066B458), queue: 0
INFO         0.159357387 stack-freertos os_timer_create
: os_timer(C066B458), queue: C0667BF0
INFO         0.159357387 srp mrp_alloc_attribute
: mrp_app(C066AD40) port(0) attr(C066BD60,
MSRP_ATTR_TYPE_DOMAIN)

```

```

INFO          0.159357387 srp      mrp_mad_join_request
                : mrp_app(C066AD40) port(0) attr(C066BD60,
MSRP_ATTR_TYPE_DOMAIN) new(1)
INFO          0.159357387 srp      msrp_create_domain
                : port(0) domain(5, 2, 2) created, num domains 2
INFO          0.159357387 srp      mrp_alloc_attribute
                : mrp_app(C066AD40) port(0) attr(C066C3E0,
MSRP_ATTR_TYPE_DOMAIN)
INFO          0.159357387 srp      mrp_mad_join_request
                : mrp_app(C066AD40) port(0) attr(C066C3E0,
MSRP_ATTR_TYPE_DOMAIN) new(1)
INFO          0.159357387 srp
msrp_domain_update_boundary_port : port(0) class(0), srp
boundary 1
INFO          0.159357387 srp
msrp_domain_update_boundary_port : port(0) class(1), srp
boundary 1
INFO          0.159357387 stack-freertos net_add_multi
                : port(0) 01:80:c2:00:00:0e
INFO          0.159357387 srp      msrp_port_enable
                : port(0) enabled
INFO          0.159357387 srp      msrp_enable
                : msrp(C066ABB8) enabled
INIT          0.159357387 srp      msrp_init
                : msrp(C066ABB8) done
INIT          0.159357387 stack-freertos ipc_rx_init
                : ipc(C0601C18, C066C470) success
INIT          0.159357387 stack-freertos ipc_tx_init
                : ipc(C0601D48, C066C610) success
INIT          0.159357387 stack-freertos ipc_tx_init
                : ipc(C0601E78, C066C7B0) success
INIT          0.159357387 srp      mvrp_map_init
                : done
INFO          0.159357387 stack-freertos timer_system_create
                : os_timer(C066B4C0), queue: 0
INFO          0.159357387 stack-freertos os_timer_create
                : os_timer(C066B4C0), queue: C0667BF0
INFO          0.159357387 stack-freertos timer_system_create
                : os_timer(C066B528), queue: 0
INFO          0.159357387 stack-freertos os_timer_create
                : os_timer(C066B528), queue: C0667BF0
INFO          0.159357387 stack-freertos timer_system_create
                : os_timer(C066B590), queue: 0
INFO          0.159357387 stack-freertos os_timer_create
                : os_timer(C066B590), queue: C0667BF0
INIT          0.159357387 srp      mrp_init
                : mrp_app(C066B078) done
INFO          0.159357387 stack-freertos net_add_multi
                : port(0) 01:80:c2:00:00:21
INIT          0.159357387 srp      mvrp_port_init
                : port(0) done
INIT          0.159357387 srp      mvrp_init
                : mvrp(C066B010) done
INIT          0.159357387 srp      mmrp_init
                : mmrp(C066AB38) done
INIT          0.159357387 srp      srp_init
                : srp(C0667DA0) done
INIT          0.159357387 stack-freertos srp_task
                : started

```

```

INFO          0.159357387 srp      msrp_port_status
: msrp(C066ABB8) port(0) operational (0)
INFO          0.159357387 srp      mvrp_port_status
: mvrp(C066B010) port(0) operational (0)
INIT          0.159357387 stack-freertos phy_task
: phy(1) initialized
INIT          0.159357387 stack-freertos srp_task_init
: srp main completed
INFO: ethernet_avb_tsn_run : tsn_app config
INFO: ethernet_avb_tsn_run : mode : NETWORK_ONLY
INFO: ethernet_avb_tsn_run : role : 0
INFO: ethernet_avb_tsn_run : num_io_devices : 1
INFO: ethernet_avb_tsn_run : motor_offset : 0
INFO: ethernet_avb_tsn_run : control_strategy : 0
INFO: ethernet_avb_tsn_run : app period : 100000
INFO: ethernet_avb_tsn_run : BUILD_MOTOR disabled,
MOTOR_NETWORK and MOTOR_LOCAL modes cannot be used
INFO          0.159357387 stack-freertos hw_timer_request
: hw_timer(C06059B0) pps
INFO          0.159357387 stack-freertos os_timer_create
: os_timer(C06532B0), queue: 0
INFO          0 app gavb_pps_init : success,
clk_id: 1
INFO          0 app cyclic_task_init : cyclic task
type: 0, id: 0
INFO          0 app cyclic_task_init : task params
INFO          0 app cyclic_task_init : task_period_ns
: 100000
INFO          0 app cyclic_task_init :
task_period_offset_ns : 0
INFO          0 app cyclic_task_init :
transfer_time_ns : 50000
INFO          0 app cyclic_task_init :
sched_traffic_offset : 35000
INFO          0 app cyclic_task_init : use_fp
: 0
INFO          0 app cyclic_task_init : use_st
: 1
INFO          0.159357387 stack-freertos __net_rx_init
: socket(C066EAD0)
INFO          0.159357387 stack-freertos net_add_multi
: port(0) 91:e0:f0:00:fe:71
INFO          0.159357387 stack-freertos __net_tx_init
: socket(C066ECF0) port_id(0)
INFO          0.159357387 stack-freertos hw_timer_request
: hw_timer(C0605970)
INFO          0.159357387 stack-freertos os_timer_create
: os_timer(C066FB30), queue: 0
INFO          0 app cyclic_task_init : success
INFO          0 app tsn_net_st_config_enable : scheduled
traffic config enabled
INFO          0.159357387 stack-freertos __net_rx_init
: socket(C06719B0)
INFO          0.159357387 stack-freertos net_add_multi
: port(0) 91:e0:f0:00:fe:a0
INFO          0 app alarm_task_monitor_init : success
INFO          0.159357387 srp      msrp_vector_add_event
: port(0) domain(5, 2, 2) MSRP_ATTR_TYPE_DOMAIN
MRP_ATTR_EVT_NEW

```

```
INFO          0.159357387 srp      msrp_vector_add_event
                : port(0) domain(6, 3, 2) MSRP_ATTR_TYPE_DOMAIN
MRP_ATTR_EVT_NEW
INFO          0.159357387 srp      msrp_vector_add_event
                : port(0) domain(5, 2, 2) MSRP_ATTR_TYPE_DOMAIN
MRP_ATTR_EVT_NEW
INFO          0.159357387 srp      msrp_vector_add_event
                : port(0) domain(6, 3, 2) MSRP_ATTR_TYPE_DOMAIN
MRP_ATTR_EVT_NEW
INFO          0.159357387 srp      msrp_vector_add_event
                : port(0) domain(5, 2, 2) MSRP_ATTR_TYPE_DOMAIN
MRP_ATTR_EVT_JOINMT
INFO          0.159357387 srp      msrp_vector_add_event
                : port(0) domain(6, 3, 2) MSRP_ATTR_TYPE_DOMAIN
MRP_ATTR_EVT_JOINMT
INFO          2.161474650 stack-freertos port_up
                : port(0) up, speed:2, duplex:1
INFO          2.161474650 gptp      gptp_link_up
                : Port(0): link is UP
```

To stop the Ethernet use case (to eventually re-start it), the previous run must be stopped with the following command:

```
# harpoon_ctrl ethernet -s
```

4.5 rt_latency application

The `rt_latency` application is a simple benchmark application for real-time OS that measures the latency (time delta, in nanoseconds) between hardware IRQ events and software actions:

- `irq delay`: time to enter in the software IRQ handler after an hardware IRQ occurs (hardware + hypervisor + IRQ vector latency)
- `irq to sched`: time to enter in an RTOS task, scheduled by the IRQ handler (`irq delay` + RTOS scheduler)

All measurements are done using GPT timer and relative to the hardware IRQ event time, with sub-microsecond precision.

When running, the `rt_latency` application prints out regular statistics, based on the measurements taken, to help characterize the system real-time latency.

The `rt_latency` application is available in the harpoon share directory of the root file system:

```
/usr/share/harpoon/inmates/freertos/rt_latency.bin # FreeRTOS
binary
/usr/share/harpoon/inmates/zephyr/rt_latency.bin   # Zephyr
binary
```

To use the `rt_latency` application, Jailhouse must be started first. To start Jailhouse and the `rt_latency` application, create an appropriate Harpoon configuration file and run the harpoon service with `systemd`. For instance:

```
# harpoon_set_configuration.sh freertos latency
# systemctl start harpoon
```

The harpoon service use the `/etc/harpoon/harpoon.conf` configuration file that contains the RTOS and the application to run. By default, the configuration file points to the FreeRTOS audio application. To run the `rt_latency` application, we have generated a corresponding configuration file. This step needs to be run only once.

Once the harpoon service has been started, the following `rt_latency` trace is shown in the terminal emulator connected to the other serial port:

```
Harpoon v2.1.0
main_task: running
```

After booting, the `rt_latency` application waits for commands to be received. A list of available commands is shown using the following command:

```
# harpoon_ctrl -h
```

The usage for the the `rt_latency` application is shown:

```
Latency options:
  -r <id>          run latency test case id
  -s              stop running test case
```

Examples:

To stop the `rt_latency` application's current test case:

```
# harpoon_ctrl latency -s
```

To run a test case:

It is possible to engage some CPU load and/or IRQ load to measure their impact on the latency. To do so, different test cases (TC) can be executed, by specifying the test case id with the “-r” option:

```
# harpoon_ctrl latency -r <TC_ID>
```

TC_ID:

- 1: no extra load
- 2: extra CPU load (low priority task, executing busy loop and consuming all available cpu time)
- 3: extra IRQ load
- 4: extra CPU load + semaphore load
- 5: extra CPU load + Linux load (not provided by the test case)
- 6: extra CPU load + cache flush (instruction cache only for this release)

To execute test case 1:

```
# harpoon_ctrl latency -r 1
```

When running, latency statistics are printed out every 10 seconds:

```
---
Running test case 1:
benchmark_task: running
```



```
stats(C0601260) irq delay (ns) min 1041 mean 1169 max 3250
rms^2 1375559 stddev^2 8797 absmin 1041 absmax 3250
n_slot 21 slot_size 200
0 0 0 0 0 499 0 0 0 0 0 0 0 0 0 0 1 0 0 0 0 0
stats(C06016C0) irq to sched (ns) min 2916 mean 3265 max 6125
rms^2 10698499 stddev^2 37779 absmin 2916 absmax 6125
n_slot 21 slot_size 1000
0 0 5 491 2 2 1 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
```

Both the irq delay and the irq to sched statistics are shown:

- min/mean/max: minimum, average and maximum latency value measured within the last period of time
- absmin/absmax: minimum and maximum latency value measured since the beginning of the test
- A histogram is also shown to give an idea of repartition of the measured latency values

Table 5. Real-time latencies measured on i.MX 8M Plus/FreeRTOS (in ns)

Test description	i.MX 8M Plus IRQ Latency (ns)				i.MX 8M Plus Task Latency (ns)			
	Min	Average	Max	Stddev	Min	Average	Max	Stddev
No system load	708	708	833	54	2,458	2,459	2,666	203
Low priority task CPU load	708	711	2,375	6180	2,416	2,462	4,125	7032
Low priority IRQ load	11,000	11,042	11,125	183	12,916	12,977	13,083	1,265
Low priority task CPU load, mutex	708	728	791	1292	2,458	2,458	2,458	0
Linux CPU + memory load	708	708	791		2,416	2,457	2,500	
RTOS cold cache	708	912	3,541	440,987	2,416	2,840	5,791	815,035

Table 6. Real-time latencies measured on i.MX 8M Mini/FreeRTOS (in ns)

Description	i.MX 8M Mini IRQ Latency (ns)				i.MX 8M Mini Task Latency (ns)			
	Min	Average	Max	Stddev	Min	Average	Max	Stddev
No system load	1,125	1,161	1,166	158	2,958	2,999	3,666	174

Table 6. Real-time latencies measured on i.MX 8M Mini/FreeRTOS (in ns)...continued

Low priority task CPU load	1,125	1,166	1,583	350	3,000	3,006	5,125	9,937
Low priority IRQ load	11,500	12,097	12,250	27,249	13,375	14,221	14,416	31,240
Low priority task CPU load, mutex	1,125	1,163	1,250	172	2,958	3,004	3,916	5994
Linux CPU + memory load	1166	1167	1,625		2,958	3,004	4,125	
RTOS cold cache	1,166	1,174	3,500	19,086	2,958	3,037	6,666	51,792

Table 7. Real-time latencies measured on i.MX 8M Plus/Zephyr (in ns)

Description	i.MX 8M Plus IRQ Latency (ns)				i.MX 8M Plus Task Latency (ns)			
	Min	Average	Max	Stddev	Min	Average	Max	Stddev
No system load	875	920	4,583	2,153	2,875	2,947	7,916	190,931
Low priority task CPU load	791	918	4,458	107	2,875	2,960	7,500	181,859
Low priority IRQ load	9,583	11,315	18,416	108,531	11,666	13,640	23,375	335,934
Low priority task CPU load, mutex	750	917	4,583	159	2,875	2,930	8,333	98767
Linux CPU + memory load	750	929	3,875	29,838	2,875	3,937	8,166	141,834
RTOS cold cache	916	935	4,375	51,573	2,875	3,107	7,916	449,858

5 Known Issues

Table 8. Known issues

ID	Description	Workarounds
HRPN-245	Linux cannot access eMMC.	Store root file system on SD card or NFS.
HRPN-447	Audio glitches on i.MX 8MN EVK	-
HRPN-448	RTOS crashes on Ethernet use case restart	Restart the Jailhouse cell.
HRPN-479 HRPN-480	CAN communication does not work consistently when connecting two i.MX 8M Plus EVKs.	Investigation in progress.

6 Technical Details on Harpoon Applications

6.1 Description

Harpoon reference applications are embedded in a repository named [harpoon-apps](#).

Several RTOS applications are embedded in this repository, which may run in Jailhouse cells, based on an RTOS (currently using FreeRTOS and Zephyr) and leveraging the MCUXpresso SDK. As a consequence, [FreeRTOS-Kernel](#) and [mcux-sdk](#) repositories are required to build FreeRTOS based applications and [zephyr](#) and [hal_nxp](#) repositories are required to build Zephyr based applications. Additionally, repository [GenAVB_TSN](#) is needed to build the industrial application. The `west` tool is used to fetch those repositories, along with harpoon-apps Git tree.

To manage Linux - RTOS communication, a control application running in the Linux root cell is used. This application is to be compiled with the Yocto toolchain.

The next section explains how to build binaries (RTOS application and Linux control application).

Related information

<https://docs.zephyrproject.org/latest/guides/west/index.html>

6.2 Manual build

6.2.1 Setting up the environment

You need to have both `git` and `west` installed to fetch the source code for Harpoon-apps, FreeRTOS, Zephyr and MCUXpresso SDK:

```
$ west init -m https://github.com/NXPmicro/harpoon-apps --mr  
harpoon_2.1.0 hww  
$ cd hww  
$ west update
```

6.2.2 Building the RTOS application for the RTOS cell

6.2.2.1 Building FreeRTOS based applications

FreeRTOS applications for Armv8-A must be compiled with a compatible toolchain.

The reference toolchain is the GNU Arm cross-toolchain for the A-profile cores GCC 10.3-2021.07.

To download the toolchain and install it:

```
$ wget https://developer.arm.com/-/media/Files/downloads/gnu-a/10.3-2021.07/binrel/gcc-arm-10.3-2021.07-x86_64-aarch64-none-elf.tar.xz
tar -C /opt/ -xvf gcc-arm-10.3-2021.07-x86_64-aarch64-none-elf.tar.xz
```

If starting from a fresh console, the cross-compiler variable must be set:

```
$ export ARMGCC_DIR=/opt/gcc-arm-10.3-2021.07-x86_64-aarch64-none-elf/
```

Then build an RTOS application:

```
$ cd harpoon-apps/<RTOS_APP>/freertos/boards/<BOARD>/
armgcc_aarch64
$ ./build_ddr_release.sh
```

Where:

- **RTOS_APP** is **audio**, **industrial** or **rt_latency**.
- **BOARD** is **evkmimx8mm** for **i.MX 8M Mini**, **evkmimx8mn** for **i.MX 8M Nano**, **evkmimx8mp** for **i.MX 8M Plus**.
- Build artefacts are available in the directory **ddr_release/**.
- The artefact to be used on target is the RTOS application binary: **<RTOS_APP>.bin**.

6.2.2.2 Building Zephyr based applications

Install cross-compile toolchain firstly, and then set the cross-compile environment:

```
$ export ARMGCC_DIR=/opt/gcc-arm-10.3-2021.07-x86_64-aarch64-none-elf/
```

Then build an RTOS application:

```
$ cd harpoon-apps/<RTOS_APP>/zephyr/boards/<BOARD>/
armgcc_aarch64$ ./build_singlecore.sh
```

Where,

- **RTOS_APP** is **audio**, **industrial**, or **rt_latency**.
- **BOARD** is **evkmimx8mm** for **i.MX 8M Mini**, **evkmimx8mn** for **i.MX 8M Nano**, and **evkmimx8mp** for **i.MX 8M Plus**.
- Build artefacts are available in the directory **build_singlecore/zephyr/**.
- The artefact to be used on target is the RTOS application binary: **<RTOS_APP>.bin**.

6.2.3 Building the Linux control application for the root cell

The Linux control application for Armv8-A must be compiled with a compatible toolchain.

The reference toolchain is the Poky Arm cross-toolchain built with Yocto.

To generate this toolchain:

```
$ bitbake meta-toolchain
```

This generates a toolchain installer in directory `tmp/deploy/sdk`. The installer name depends on the `DISTRO` and `MACHINE` variables and on the image name of the current build. For instance, for an i.MX build, the installer name is `fsl-imx-xwayland-glibc-x86_64-meta-toolchain-cortexa53-crypto-imx8mm-lpddr4-evk-toolchain-5.10-hardknott.sh`.

When executed, the installer prompts for a directory where to put the toolchain.

The default location for the i.MX toolchain is `/opt/fsl-imx-xwayland/5.10-hardknott`.

When the toolchain is installed, different cross-compile variables must be set. This is done by sourcing script `environment-setup-cortexa53-crypto-poky-linux`. For example with default installation path:

```
$ . /opt/fsl-imx-xwayland/5.10-hardknott/environment-setup-cortexa53-crypto-poky-linux
```

The Harpoon control application can then be built:

```
$ cd harpoon-apps/ctrl
$ ./build_ctrl.sh
```

The build artefact (`harpoon_ctrl`) is available in the same directory and can be used on target.

6.3 Starting an RTOS application with Jailhouse

6.4 Developing a Harpoon Application

Harpoon-apps is the basis to create a Harpoon application. It links with MCUXpresso drivers and a RTOS (FreeRTOS and Zephyr).

A Harpoon application has its own directory in the root folder of the harpoon-apps repository. Examples include `audio`, the audio test application, and `rt_latency`, the real-time benchmark test application.

6.4.1 Architecture of the audio application

The audio application, which serves as an example for this chapter, has the following architecture.

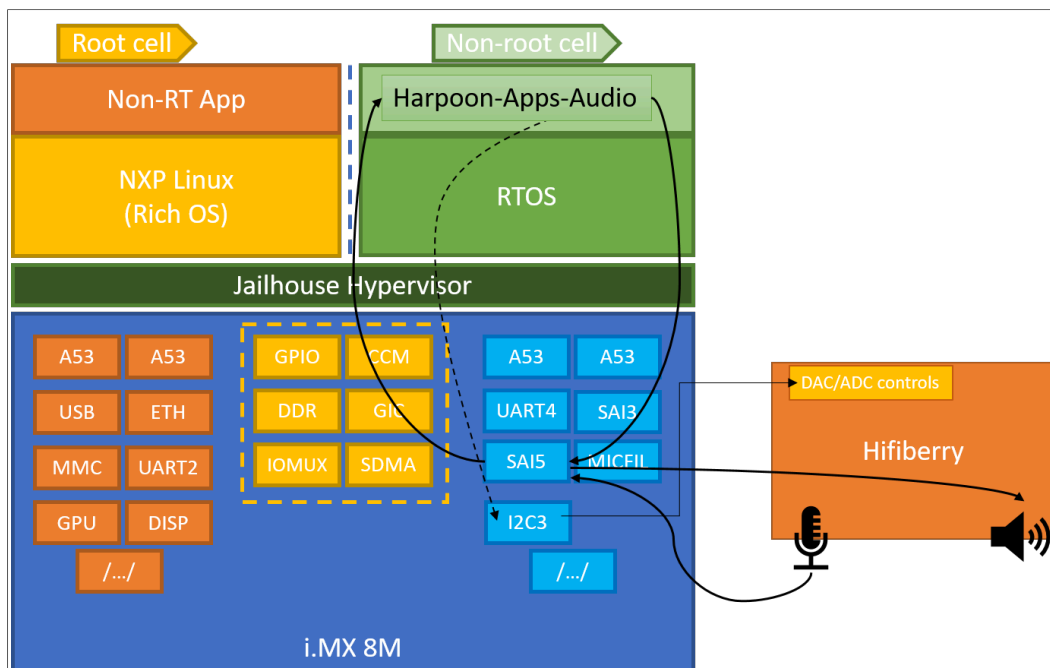


Figure 14. Architecture of audio application

The DAC and ADC on the HiFiBerry card are controlled by the audio application. Control is done through I2C3 and data throughput through SAI5.

6.4.2 Source file creation

This chapter gives some information on how to develop an application for Harpoon by using the `audio` application as an example.

First, the application directory must be created in the root directory of repository `harpoon-apps`.

This directory contains the source code code for the application, a CMake configuration file listing the files to be compiled. Source file can be common to all RTOS and platform, be RTOS dependent and / or platform dependent. Helper scripts are provided to build the application for each RTOS / platform combination.

```
audio
├── common
│   ├── audio_buffer.c
│   ├── audio_buffer.h
│   ├── audio.c
│   ├── audio_element.c
│   ├── audio_element_dtmf.c
│   ├── audio_element_dtmf.h
│   ├── audio_element.h
│   ├── audio_element_routing.c
│   ├── audio_element_routing.h
│   ├── audio_element_sai_sink.c
│   ├── audio_element_sai_sink.h
│   ├── audio_element_sai_source.c
│   ├── audio_element_sai_source.h
│   ├── audio_element_sine.c
│   └── audio_element_sine.h
```

```

— audio_entry.h
— audio_format.h
— audio.h
— audio_pipeline.c
— audio_pipeline.h
— boards
  — evkmimx8mm
    — app_board.h
    — codec_config.c
    — pin_mux.c
    — sai_clock_config.c
    — sai_config.c
  — evkmimx8mn
    — app_board.h
    — codec_config.c
    — pin_mux.c
    — sai_clock_config.c
    — sai_config.c
  — evkmimx8mp
    — app_board.h
    — codec_config.c
    — pin_mux.c
    — sai_clock_config.c
    — sai_config.c
  — include
    — codec_config.h
    — pin_mux.h
    — sai_clock_config.h
    — sai_config.h
— dtmf_wave.c
— dtmf_wave.h
— music.h
— pipeline_config.c
— play_dtmf.c
— play_music.c
— play_pipeline.c
— play_sine.c
— rec_play.c
— sai_drv.c
— sai_drv.h
— sine_wave.h
— freertos
  — boards
    — evkmimx8mm
      — app_mmu.h
      — armgcc_aarch64
        — build_ddr_debug.sh
        — build_ddr_release.sh
        — clean.sh
        — CMakeLists.txt
    — evkmimx8mn
      [...]
    — evkmimx8mp
      [...]
  — main.c
— zephyr
  — boards
    — evkmimx8mm
      — armgcc_aarch64
        — build_singlecore.sh

```

```

├── build_smp.sh
├── clean.sh
├── evkmimx8mn
│   ├── [...]
├── evkmimx8mp
│   ├── [...]
├── mimx8mm_evk_a53.conf
├── mimx8mm_evk_a53_smp.conf
├── mimx8mn_evk_a53.conf
├── mimx8mn_evk_a53_smp.conf
├── mimx8mp_evk_a53.conf
├── mimx8mp_evk_a53_smp.conf
├── CMakeLists.txt
├── main.c
└── prj.conf

```

The application starts in function `main()`, defined in file `main.c`.

RTOS specific code goes to directory `audio/freertos` and `audio/zephyr`.

Board specific code (clock configuration, hardware description, MMU configuration) goes to directory `audio/<rtos>/boards/<boardid>` and `audio/boards/<boardid>`.

OS-agnostic code goes to directory `audio/common`.

6.4.3 Board specific code

Board specific code and header files for the audio application include:

Table 9. Board specific code

app_board.h	Definition of SAI and I2C instances used for the demo. I2C addresses of HiFi Berry's DAC and ADC. SAI configuration. Audio samples format.
app_mmu.h	Device memory to map with MMU (includes SAI and I2C).
sai_clock_config.c	Configuration of Audio PLLs, Audiomix (for i.MX 8M Plus) and SAI clocks.
sai_config.c	Define configuration of each SAI instance.
codec_config.c	Helper functions to open, configure and close DAC and ADC drivers.
pin_mux.c	Functions to set IOMUX for the application use case.
CMakeLists.txt	CMake configuration file that includes all necessary MCUXpresso drivers.
flags.cmake	CFLAGS and LDFLAGS definitions for building the application.

6.4.4 Controlling application from Linux side

Linux side can control the Harpoon application by sending messages through the ivshmem communication channel provided by Jailhouse. The mailbox API is used for communication.

The audio application leverages this in function `main_task()`, defined in `audio/freertos/main.c`.

RTOS is prepared to work with the ivshmem memory:

```
rc = ivshmem_init(0, &mem);
```


Then mailbox is initialized:

```
mailbox_init(&m, mem.out, mem.out + mem.out_size * mem.id,  
            false);
```

Finally, the application's main thread periodically looks for incoming control messages:

```
do {  
    command_handler(&m, &ctx);  
    [...]  
} while (1);
```

The Linux user space application that sends control messages is located in the directory `ctrl` of the `harpoon-apps` repository.

7 Revision History

The following table provides the revision history for this document.

Table 10. Revision history

Revision number	Date	Substantive changes
EAR 2.1.0	28 July 2022	Minor changes to Section 4 and Section 5. Compatible with Real Time Edge Software Rev 2.3 release.
EAR 2.1.0	30 June 2022	<ul style="list-style-type: none">• New industrial application in harpoon-apps• Implementation of flexible audio pipeline in harpoon-apps• Support for i.MX 8M Nano EVK for i.MX Yocto• Support for EVK's internal audio codecs• Support for systemd• Support for Zephyr• Drivers for FlexCAN, ENET, ENET_QOS
EAR 2.0.1	29 March 2022	Full integration to NXP Real-Time Edge.
EAR 2.0.0	14 January 2022	Introduction of <code>harpoon-apps</code> . Support of FreeRTOS. Support of both i.MX BSP and Real-Time Edge SW.

8 Legal information

8.1 Definitions

Draft — A draft status on a document indicates that the content is still under internal review and subject to formal approval, which may result in modifications or additions. NXP Semiconductors does not give any representations or warranties as to the accuracy or completeness of information included in a draft version of a document and shall have no liability for the consequences of use of such information.

8.2 Disclaimers

Limited warranty and liability — Information in this document is believed to be accurate and reliable. However, NXP Semiconductors does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information. NXP Semiconductors takes no responsibility for the content in this document if provided by an information source outside of NXP Semiconductors.

In no event shall NXP Semiconductors be liable for any indirect, incidental, punitive, special or consequential damages (including - without limitation - lost profits, lost savings, business interruption, costs related to the removal or replacement of any products or rework charges) whether or not such damages are based on tort (including negligence), warranty, breach of contract or any other legal theory.

Notwithstanding any damages that customer might incur for any reason whatsoever, NXP Semiconductors' aggregate and cumulative liability towards customer for the products described herein shall be limited in accordance with the Terms and conditions of commercial sale of NXP Semiconductors.

Right to make changes — NXP Semiconductors reserves the right to make changes to information published in this document, including without limitation specifications and product descriptions, at any time and without notice. This document supersedes and replaces all information supplied prior to the publication hereof.

Suitability for use — NXP Semiconductors products are not designed, authorized or warranted to be suitable for use in life support, life-critical or safety-critical systems or equipment, nor in applications where failure or malfunction of an NXP Semiconductors product can reasonably be expected to result in personal injury, death or severe property or environmental damage. NXP Semiconductors and its suppliers accept no liability for inclusion and/or use of NXP Semiconductors products in such equipment or applications and therefore such inclusion and/or use is at the customer's own risk.

Applications — Applications that are described herein for any of these products are for illustrative purposes only. NXP Semiconductors makes no representation or warranty that such applications will be suitable for the specified use without further testing or modification. Customers are responsible for the design and operation of their applications and products using NXP Semiconductors products, and NXP Semiconductors accepts no liability for any assistance with applications or customer product design. It is customer's sole responsibility to determine whether the NXP Semiconductors product is suitable and fit for the customer's applications and products planned, as well as for the planned application and use of customer's third party customer(s). Customers should provide appropriate design and operating safeguards to minimize the risks associated with their applications and products.

NXP Semiconductors does not accept any liability related to any default, damage, costs or problem which is based on any weakness or default in the customer's applications or products, or the application or use by customer's third party customer(s). Customer is responsible for doing all necessary testing for the customer's applications and products using NXP Semiconductors products in order to avoid a default of the applications and the products or of the application or use by customer's third party customer(s). NXP does not accept any liability in this respect.

Terms and conditions of commercial sale — NXP Semiconductors products are sold subject to the general terms and conditions of commercial sale, as published at <http://www.nxp.com/profile/terms>, unless otherwise agreed in a valid written individual agreement. In case an individual agreement is concluded only the terms and conditions of the respective agreement shall apply. NXP Semiconductors hereby expressly objects to applying the customer's general terms and conditions with regard to the purchase of NXP Semiconductors products by customer.

Export control — This document as well as the item(s) described herein may be subject to export control regulations. Export might require a prior authorization from competent authorities.

Suitability for use in non-automotive qualified products — Unless this data sheet expressly states that this specific NXP Semiconductors product is automotive qualified, the product is not suitable for automotive use. It is neither qualified nor tested in accordance with automotive testing or application requirements. NXP Semiconductors accepts no liability for inclusion and/or use of non-automotive qualified products in automotive equipment or applications.

In the event that customer uses the product for design-in and use in automotive applications to automotive specifications and standards, customer (a) shall use the product without NXP Semiconductors' warranty of the product for such automotive applications, use and specifications, and (b) whenever customer uses the product for automotive applications beyond NXP Semiconductors' specifications such use shall be solely at customer's own risk, and (c) customer fully indemnifies NXP Semiconductors for any liability, damages or failed product claims resulting from customer design and use of the product for automotive applications beyond NXP Semiconductors' standard warranty and NXP Semiconductors' product specifications.

Translations — A non-English (translated) version of a document, including the legal information in that document, is for reference only. The English version shall prevail in case of any discrepancy between the translated and English versions.

Security — Customer understands that all NXP products may be subject to unidentified vulnerabilities or may support established security standards or specifications with known limitations. Customer is responsible for the design and operation of its applications and products throughout their lifecycles to reduce the effect of these vulnerabilities on customer's applications and products. Customer's responsibility also extends to other open and/or proprietary technologies supported by NXP products for use in customer's applications. NXP accepts no liability for any vulnerability. Customer should regularly check security updates from NXP and follow up appropriately. Customer shall select products with security features that best meet rules, regulations, and standards of the intended application and make the ultimate design decisions regarding its products and is solely responsible for compliance with all legal, regulatory, and security related requirements concerning its products, regardless of any information or support that may be provided by NXP.

NXP has a Product Security Incident Response Team (PSIRT) (reachable at PSIRT@nxp.com) that manages the investigation, reporting, and solution release to security vulnerabilities of NXP products.

8.3 Trademarks

Notice: All referenced brands, product names, service names, and trademarks are the property of their respective owners.

NXP — wordmark and logo are trademarks of NXP B.V.

Contents

1	Overview	2
1.1	Architecture	2
1.2	Hardware resource partitioning	3
2	Building Harpoon Yocto images	5
2.1	i.MX Yocto	5
2.2	Real-time Edge Yocto	5
3	Hardware Setup	5
3.1	i.MX Reference Boards	5
3.2	Audio use case hardware	7
3.3	Industrial use case hardware	10
4	Running Harpoon Reference Applications	12
4.1	Basic setup	12
4.2	Starting Linux kernel	12
4.3	Audio application	13
4.3.1	Features of the audio application	13
4.3.2	Starting the audio application with Jailhouse	13
4.3.3	Audio latency in loopback mode	14
4.3.4	Running audio application: examples	15
4.3.4.1	Playing DTMF	15
4.3.4.2	Playing in loopback mode	15
4.3.4.3	Playing a full audio pipeline	15
4.4	Industrial application	17
4.4.1	Features of the industrial application	17
4.4.2	Starting the industrial application	18
4.4.3	Running the industrial application: examples	18
4.4.3.1	CAN use cases	18
4.4.3.2	Ethernet through MCUXpresso SDK API	19
4.4.3.3	Ethernet with GenAVB/TSN stack	20
4.5	rt_latency application	31
5	Known Issues	35
6	Technical Details on Harpoon Applications	35
6.1	Description	35
6.2	Manual build	35
6.2.1	Setting up the environment	35
6.2.2	Building the RTOS application for the RTOS cell	36
6.2.2.1	Building FreeRTOS based applications	36
6.2.2.2	Building Zephyr based applications	36
6.2.3	Building the Linux control application for the root cell	37
6.3	Starting an RTOS application with Jailhouse	37
6.4	Developing a Harpoon Application	37
6.4.1	Architecture of the audio application	37
6.4.2	Source file creation	38
6.4.3	Board specific code	40
6.4.4	Controlling application from Linux side	40
7	Revision History	41
8	Legal information	42

Please be aware that important notices concerning this document and the product(s) described herein, have been included in section 'Legal information'.