



QSG168: Proprietary Flex SDK v3.x Quick-Start Guide

This quick start guide provides basic information on configuring, building, and installing applications for the EFR32 using the Silicon Labs Flex Software Development Kit (SDK) v3.x with Simplicity Studio® 5. The Flex SDK provides two paths to application development. The first begins with Silicon Labs RAIL (Radio Abstraction Interface Layer), which is an intuitive, versatile radio interface layer that is designed to support the implementation of arbitrary wireless protocols.

The second uses the Silicon Labs Connect protocol stack, which provides a fully-featured, easily-customizable wireless networking solution optimized for devices that require low power consumption and are used in a simple network topology.

This guide is designed for developers who are new to the Silicon Labs Flex SDK, the Simplicity Studio development environment, and Silicon Labs development hardware. It provides instructions to get started using both the Connect and RAIL examples provided with the Flex SDK used on the EFR32.

Proprietary is supported on all EFR32FG devices. For others, check the device's data sheet under Ordering Information > Protocol Stack to see if Proprietary is supported. In Proprietary SDK version 2.7.n, Connect is not supported on EFR32xG22.

KEY POINTS

- Product overview
- Setting up the development environment
- Discovering the SDK
- Working with example applications.
- Using the Pin Tool

1 Proprietary Flex SDK Product Overview

The Silicon Labs Proprietary Flex SDK supports developers who wish to take advantage of configurable protocol functionality provided in Silicon Labs Connect and the underlying RAIL library, as well as those who wish to start application development on top of RAIL to develop custom lower-level radio control, and network protocols.

This section covers:

- Background information on RAIL, Connect, and the example applications included with the Flex SDK
- Background information on the Gecko Bootloader
- Prerequisites for application development using the Flex SDK
- Support
- Documentation

1.1 About Connect and RAIL

The Flex SDK provides two paths to application development. The first begins with Silicon Labs RAIL (Radio Abstraction Interface Layer), which is an intuitive, versatile radio interface layer that is designed to support the implementation of arbitrary wireless protocols. The second uses Silicon Labs Connect protocol stack, which provides a fully-featured, easily-customizable wireless networking solution optimized for devices that require low power consumption and are used in a simple network topology. Connect example functionality is provided through easily-configurable components that can be turned on or off as desired.

Whether you begin development with Connect or RAIL is determined by the example application you select as a starting point in Simplicity Studio. Silicon Labs recommends that you start from a Connect example if you want to include the following functions without further development:

- MAC layer functionality including frequency hopping and security
- Network formation and, for star networks, routing support
- Application-level functionality, including diagnostics, I/O, mailbox, and sleepy end device management
- Bootloading, including serial and Broadcast or Unicast OTA (over-the-air)

The following sections provide additional detail on Connect and RAIL, including brief descriptions of the example applications. When you create a project based on an example, the Project Details on the Simplicity Studio IDE Overview tab provides additional detail about the example and interfacing with it.

1.1.1 Silicon Labs Connect

Silicon Labs Connect functionality for the EFR32 is implemented on top of the RAIL library. Silicon Labs Connect supports many combinations of radio modulation, frequency and data rates. The stack includes all MAC layer functions such as scanning and joining, setting up of a point-to-point or star network, device types such as sleepy end nodes, routers or coordinators, radio configuration, frequency hopping and LBT (Listen Before Talk) protocols required for regulatory compliance in each geographical region, and PHY configuration for each of these regions. With all this functionality already implemented in the stack, developers can focus on their application development and not worry about the lower level radio and network details.

The Flex SDK includes a number of Connect example applications including the following.

Flex (Connect) SoC - Empty: A minimal Connect project structure, used as a starting point for custom applications.

Flex (Connect) SoC - Empty Example DMP: A dynamic multiprotocol minimal project structure, used as a starting point for custom applications that run both Connect and Bluetooth protocols.

Flex (Connect) SoC - Direct mode Device: Demonstrates direct communication between nodes in range. The network parameters are commissioned by the application.

Flex (Connect) SoC - MAC Mode Device: Demonstrates direct MAC mode communication between nodes in range.

Flex (Connect) SoC - Sensor and Flex (Connect) SoC - Sink: The sensor and sink applications demonstrate how to set up a star network topology in which communication occurs in both directions between the sink and the sensor(s) nodes.

1.1.2 Silicon Labs RAIL

Silicon Labs RAIL provides an intuitive, versatile radio interface layer designed to support proprietary or standards-based wireless protocols. RAIL is delivered as a library that you can link to your applications. A description of library functions is provided in the development environment. The RAIL API is documented in an online API reference available through Simplicity Studio and online at <https://docs.silabs.com/>.

RAIL:

- Implements commonly-used radio functionality, so that it does not have to be written in the application or stack.
- Eliminates the need for developers to become expert in RF register details of complex wireless SoCs.
- Simplifies code migration to new wireless ICs and the development of new stacks by providing a common radio interface layer.
- Allows lab evaluation in addition to application code development.

The RAIL library supports APIs for:

- General Radio Operation
- Channel definition and selection
- Output power configuration
- Transmit
- Clear Channel Assessment before Transmit
- Scheduled Transmit
- Energy Detection
- Receive
- Packet Filtering
- Calibration
- CW (Carrier Wave) Transmission
- Modulated Transmission
- RFSense configuration as wake source

The Flex SDK includes example RAIL application code to demonstrate the capabilities of the device and the RAIL library. These examples are provided as source code to offer a starting point for application development. The following examples, among others, are included in the current release.

Flex (RAIL) - RAILtest

RAILtest is a general test tool for the RAIL library. RAILtest is developed by the core engineering team working on the RAIL library. As each RAIL library feature is implemented, a RAILtest serial command is added to allow scripted testing and ad hoc experimentation. Many of the RAILtest serial commands can be used for lab evaluation.

RAILtest includes commands to:

- Transmit and receive packets.
- Schedule transmits at a specific time in the RAIL timebase.
- Configure RAIL address filtering to receive only specific packets.
- Enable CCA mechanisms (CSMA/LBT) to validate that a channel is clear before transmit.
- Set a timer callback in the RAIL timebase to see how the RAIL timer API works.
- Change the transmit channel within the current configuration's band.
- Change the transmit power level.
- Enable RF energy sensing of specified duration across the 2.4 GHz and/or Sub-GHz bands, and sleep to wake on this event.
- Output a continuous unmodulated tone for debugging.
- Output a continuous modulated PN9 stream for debugging.
- Enter into direct mode where data can be sent and received using asynchronous GPIOs as input and output.

Flex (RAIL) - Range Test

The Range Test examples enable over-the-air range testing between two devices customized with user-defined parameters. Range Test is designed to be run on the Silicon Labs WSTK hardware without the need for commands from a host computer. This capability allows for mobility during range testing activities.

Flex (RAIL) - Switch: Demonstrates the simplest exchange of transmit and receive operation between a light and a switch. May be used with the Bluetooth Light application in the Bluetooth/RAIL multiprotocol example, as described in QSG155: Using the Silicon Labs Dynamic Multiprotocol Demonstrations. A precompiled binary demo of this example is also available for some platforms.

Flex (RAIL) - Light: Demonstrates the simplest exchange of transmit and receive operation between a RAIL light and a RAIL switch. The light is capable of periodically and on change reporting its status back to the switch. This is not the dynamic multiprotocol light example application.

Flex (RAIL) - Simple TRX Multi-PHY: Demonstrates the use of multiple PHYs selectable by channels. By default, channel 0 is configured to 2.4 GHz, 250 kbps, and channel 1 is configured to 915 MHz, 500 kbps (both packets are receivable by a single-PHY application using the correct pre-configured PHY). For details see AN971: EFR32 Radio Configurator Guide.

Flex (RAIL) - Simple TRX: Demonstrates the simplest transmit and receive functions based on RAIL.

Flex (RAIL) - Simple TRX with Auto-ACK: Demonstrates the simplest exchange transmit and ack operation between two nodes, based on RAIL.

Flex(RAIL) - Long Preamble Duty Cycle: Demonstrates how Rx duty cycling can be implemented using a long preamble.

Flex (RAIL) - Burst Duty Cycle: Demonstrates how Rx duty cycle can be implemented using repeated transmissions

Flex (RAIL) - Energy Mode: Demonstrates the low power modes (EM0-Active, EM1-Sleep, EM2-Deep Sleep). of the EFR32.

Flex (RAIL) - Empty Example: A minimal RAIL project structure, used as a starting point for custom applications.


Flex (RAIL) - WMBus Meter: Implements a Wireless M-Bus meter application. For details, see AN1119: Using RAIL for Wireless M-Bus Applications with EFR32. Uses the multi-PHY configurator and is capable of limited multi-PHY features, like asymmetric bidirectional modes. For details see AN1253: EFR32 Radio Configurator Guide for Simplicity Studio 5.

Flex (RAIL) - WMBus Collector: Implements a Wireless M-Bus collector application. For details, see AN1119: Using RAIL for Wireless M-Bus Applications with EFR32. Uses the multi-PHY configurator. For details see AN1253: EFR32 Radio Configurator Guide for Simplicity Studio 5.

1.1.3 Project Structure

Projects always include the following parts:

- **autogen** folder: Only the autogen folder includes generated code. It includes the PHY configuration (*rail_config.c*), init code, the linker script, and other generated code used by components, like the command descriptors for the CLI interface.
- **config** folder: Component configuration headers are located in this folder. These can be edited with the Simplicity IDE Component Editor, but directly editing the header file is also possible. The Component Editor is available through the Project Configurator's **Configure** control, available only for configurable components.
- **gecko_sdk** folder (with version number): Contains source and binary files added by components.
- **files in the root folder:** Only the application specific files should be in the root folder, including source files, the project configurator (*.slcp*) file and the Pin Tool (*.pintool*) file.

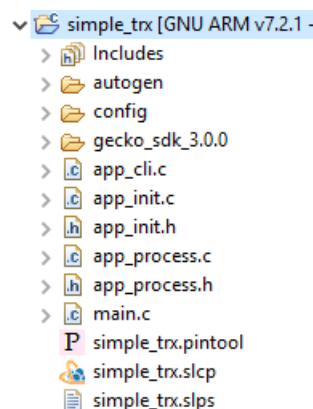

All projects include *main.c*, which is not recommended to modify. Instead, add the initialization code to *app_init.c*, and implement the main loop in *app_process.c*. This way, the System components can initialize components, and call the "process" function of the components that require it. Additionally, enabling an RTOS will convert *app_process*'s main loop into an RTOS task.

These files are also available in Connect projects, and can be used for example for init and process tasks that are independent of the stack running or not. However, it is still recommended to use `emberAfInitCallback()` and `emberAfTickCallback()`, so the Connect stack could prioritize urgent stack operations above the application.

1.2 The Gecko Bootloader

A bootloader is a program stored in reserved flash memory that can initialize a device, update firmware images, and possibly perform some integrity checks. Silicon Labs networking devices use bootloaders that perform firmware updates in two different modes: standalone (also called standalone bootloaders) and application (also called application bootloaders). An application bootloader performs a firmware image update by reprogramming the flash with an update image stored in internal or external memory. For more information about bootloaders see *UG103.6: Bootloader Fundamentals*.

The Gecko Bootloader is a code library configurable through Simplicity Studio's IDE to generate bootloaders that can be used with a variety of Silicon Labs protocol stacks. The bootloaders work with specialized firmware update image formats. The Gecko Bootloader update images has the extension `.gbl`.

Examples provided for the EFR32 parts include Silicon Labs Gecko Bootloader examples. Examples are provided for all compatible Simplicity Studio SDKs. For more information on using the Gecko Bootloader see *UG266: Silicon Labs Gecko Bootloader User's Guide*.

Note: When working with the Gecko Bootloader, you must use Simplicity Commander to enable some configuration options such as security features.

1.3 Gecko Platform

The Gecko Platform is a set of drivers and other lower layer features that interact directly with Silicon Labs chips and modules. Gecko Platform components include EMLIB, EMDRV, RAIL Library, NVM3, and mbedTLS. For more information about Gecko Platform, see release notes that can be found in Simplicity Studio's Documentation tab.

1.4 Prerequisites

Before following the procedures in this guide you must have

- Purchased one of the Wireless Gecko (EFR32) Portfolio Wireless Kits.
- Installed Simplicity Studio 5 and the Flex SDK. A card included in your development hardware kit contains a link to a Getting Started page, which will direct you to links for the Silicon Labs software products. See the Flex SDK v3.x release notes for version restrictions and compatibility constraints for Connect and RAIL and these components. Instructions for installing Simplicity Studio 5 and the Proprietary Flex SDK may be found in the *Simplicity Studio 5 User's Guide*, available online at <https://docs.silabs.com/> and through the Simplicity Studio 5 help menu.

Simplicity Commander is installed along with Simplicity Studio. An application with limited functionality can be accessed through Simplicity Studio's Tools menu. Most functions are accessible through a CLI invoked by opening a command prompt in the Simplicity Commander directory. See *UG162: Simplicity Commander Reference Guide* for more information.

- (optional) Installed IAR Embedded Workbench for ARM (IAR EWARM). See the Release Notes for the IAR version supported by this version of the Flex SDK. This can be used as a compiler in the Simplicity Studio development environment as an alternative to GCC (The GNU Compiler Collection), which is provided with Simplicity Studio. Download the supported version from the Silicon Labs Support Portal, as described below. Refer to the "QuickStart Installation Information" section of the IAR installer for additional information about the installation process and how to configure your license.


To get a 30-day evaluation license for IAR:

- Go to the Silicon Labs support portal at <https://www.silabs.com/support>.
- Scroll down to the bottom of the page, and click **Contact Support**
- If you are not already signed in, sign in.
- Click the Software Releases tab. In the View list select **Development Tools**. Click **Go**. In the results is a link to the IAR-EWARM version named in the release notes.
- Download the IAR package (takes approximately 1 hour).
- Install IAR.
- In the IAR License Wizard, click **Register with IAR Systems to get an evaluation license**.
- Complete the registration and IAR will provide a 30-day evaluation license.

- Once IAR-EWARM is installed, the next time Simplicity Studio starts it will automatically detect and configure the IDE to use IAR-EWARM.


1.5 Technical Support

You can access the Silicon Labs support portal at <https://www.silabs.com/support> through Simplicity Studio 5's Welcome view under Learn and Support. Use the support portal to contact Customer Support for any technical questions you might have during the development process.

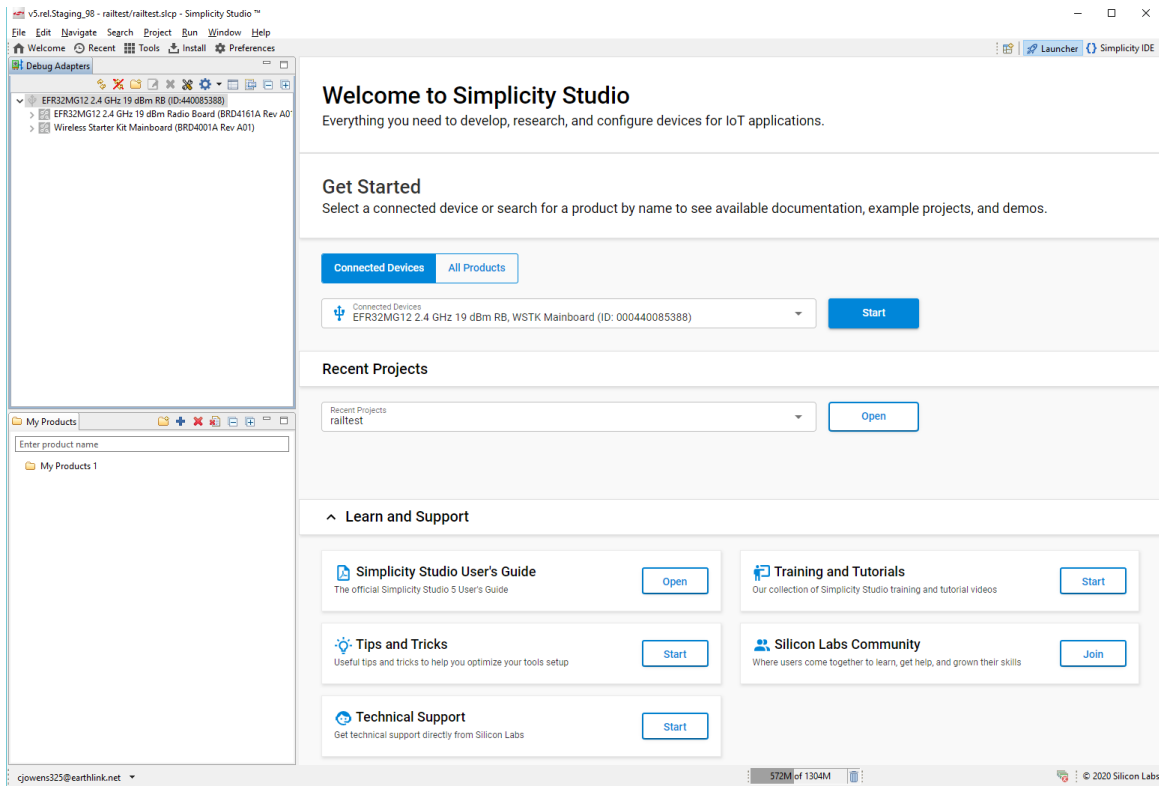


1.6 Documentation

Hardware-specific documentation may be accessed through links on the part OVERVIEW tab in Simplicity Studio 5.

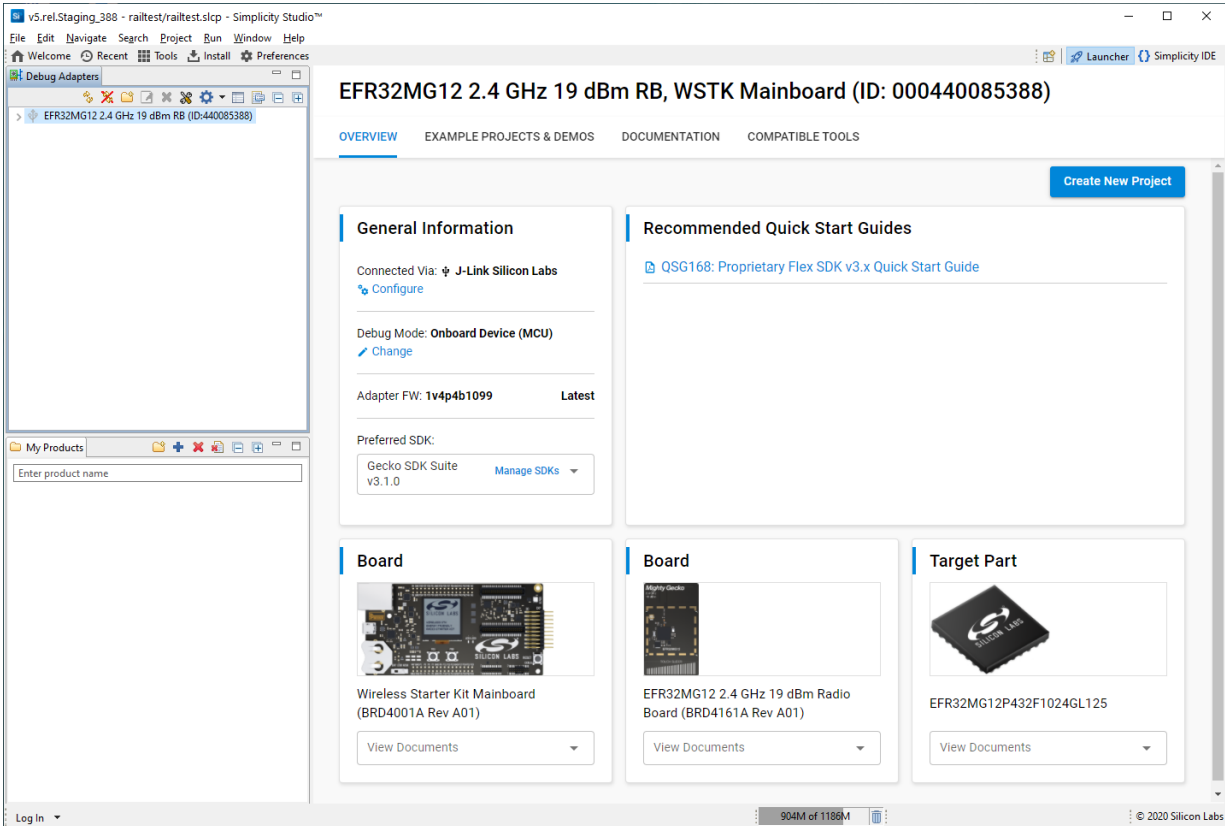

SDK documentation and other references are available through the Documentation tab.

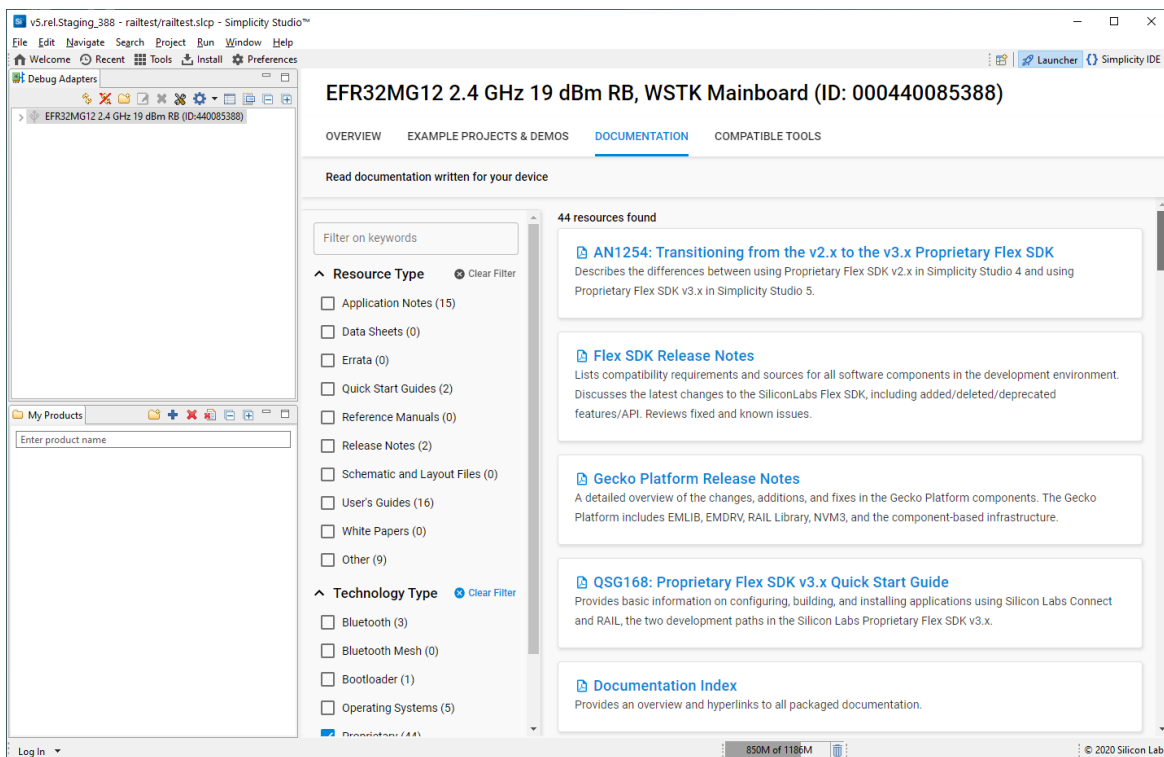

2 Getting Started with Simplicity Studio 5 and the Proprietary Flex SDK


Simplicity Studio 5 (SSv5) is a free Eclipse-based Integrated Development Environment (IDE) and a collection of value-add tools provided by Silicon Labs. Developers can use SSv5 to develop, debug and analyze their Flex and other Silicon Labs SDK based applications. Its main goal is to reduce development time so that you can focus on your application instead of researching the hardware reference manuals.

The online *Simplicity Studio 5 User's Guide*, available both through <https://docs.silabs.com/> and the SSv5 help menu, provides both a summary overview of SSv5 functions and how to use it with Flex SDK, as well as detailed references to the various SSv5 tools and perspectives.

This guide assumes that you have downloaded SSv5 and the Flex SDK, and are familiar with the features of the SSv5 Launcher perspective.

You should have your WSTK connected.

Note: For best performance in Simplicity Studio 5, be sure that the power switch on your WSTK is in the Advanced Energy Monitoring or "AEM" position, as shown in the following figure.

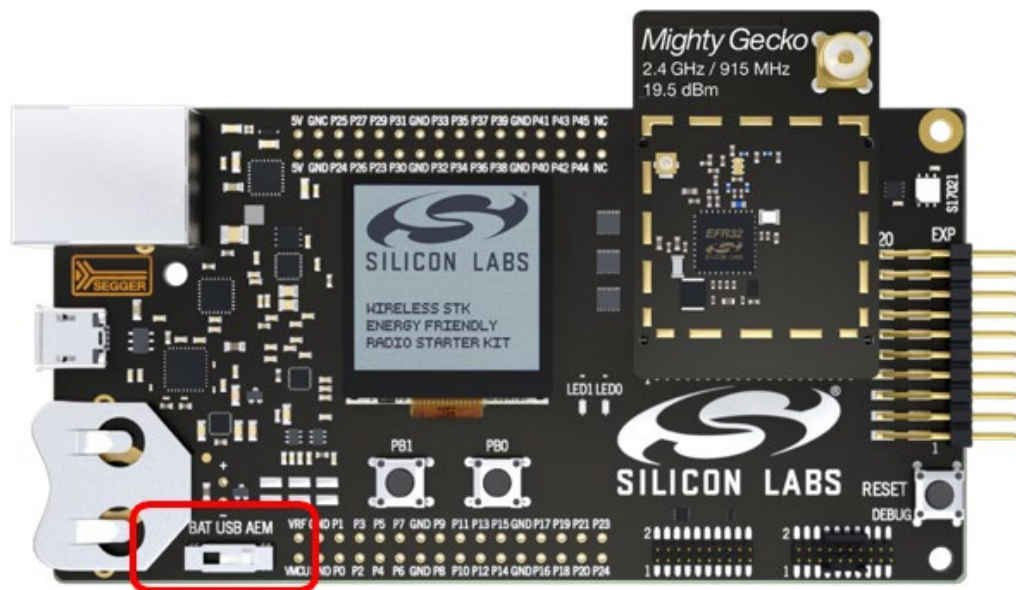

3 Working with Example Applications

This chapter offers instructions on working with RAIL and Connect SoC examples.

Simplicity Studio offers a variety of ways to begin a project using an example application. The online Simplicity Studio 5 User's Guide, available both through <https://docs.silabs.com/> and the SSv5 help menu, describes them all. This guide uses the File > New > Silicon Labs Project Wizard method, because it takes you through all three of the Project Creation Dialogs.


Regardless of how you begin, when working with example applications in Simplicity Studio, you will execute the following steps:

- Select an example application and create a project
- Modify and generate radio configuration.
- Modify code if necessary
- Compile and flash the application to the radio board.


These steps are described in the following sections. Note: Your SDK version may be later than the version shown in the procedure illustrations.

3.1 Creating a Project Based on an Example


1. Open SSv5's File menu and select **New > Silicon Labs Project Wizard**. The Target, SDK, and Toolchain Selection dialog opens. If you want to change the toolchain from the default GCC to IAR, do so here. Click **NEXT**.

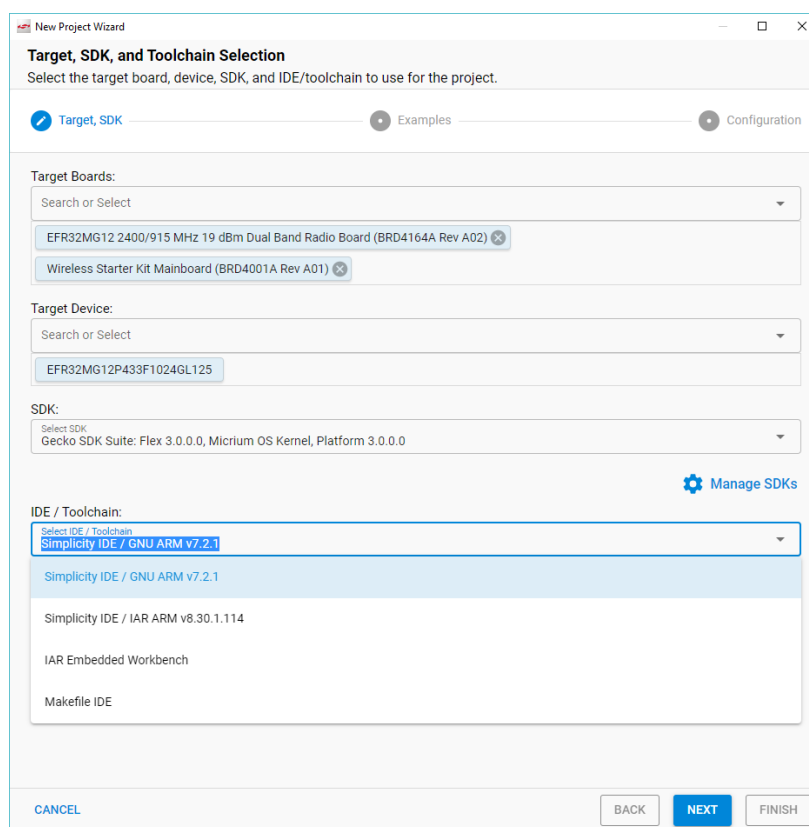

- The Example Project Selection dialog opens. A variety of filters are available to help you find a specific example, such as 'railt' and Technology Type: Proprietary in the following figure. Select the example, in this case **RAILtest**. Select it and click **NEXT**.

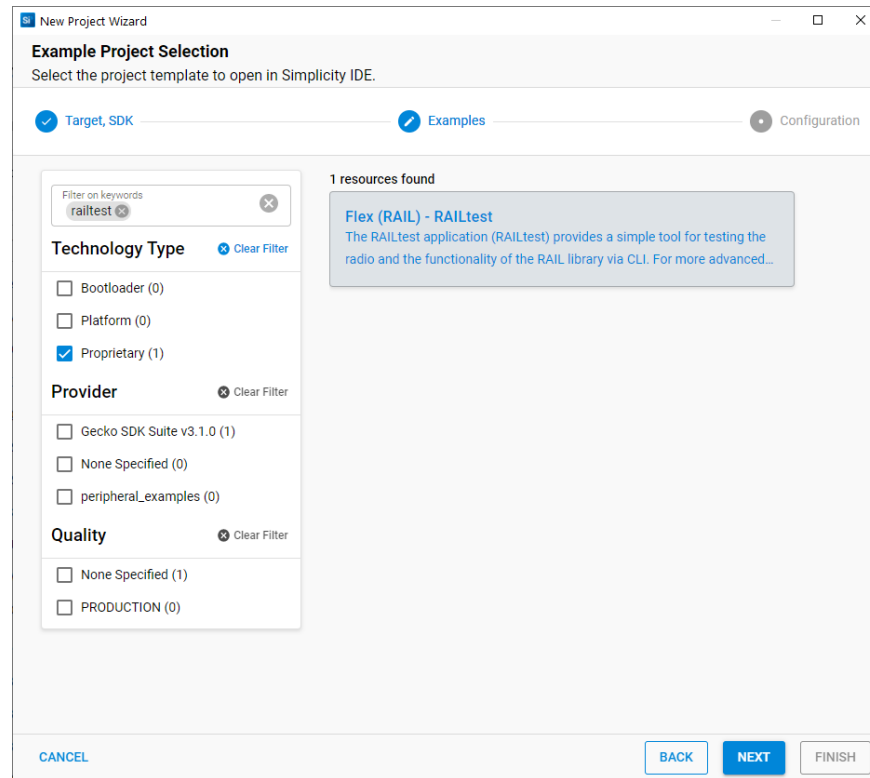

3. The Project Configuration dialog opens. Here you can rename your project, change the default project file location, and determine if you will link to or copy project files. Note that if you change any linked resource, it is changed for any other project that references it. Click **FINISH** and project generation will start.

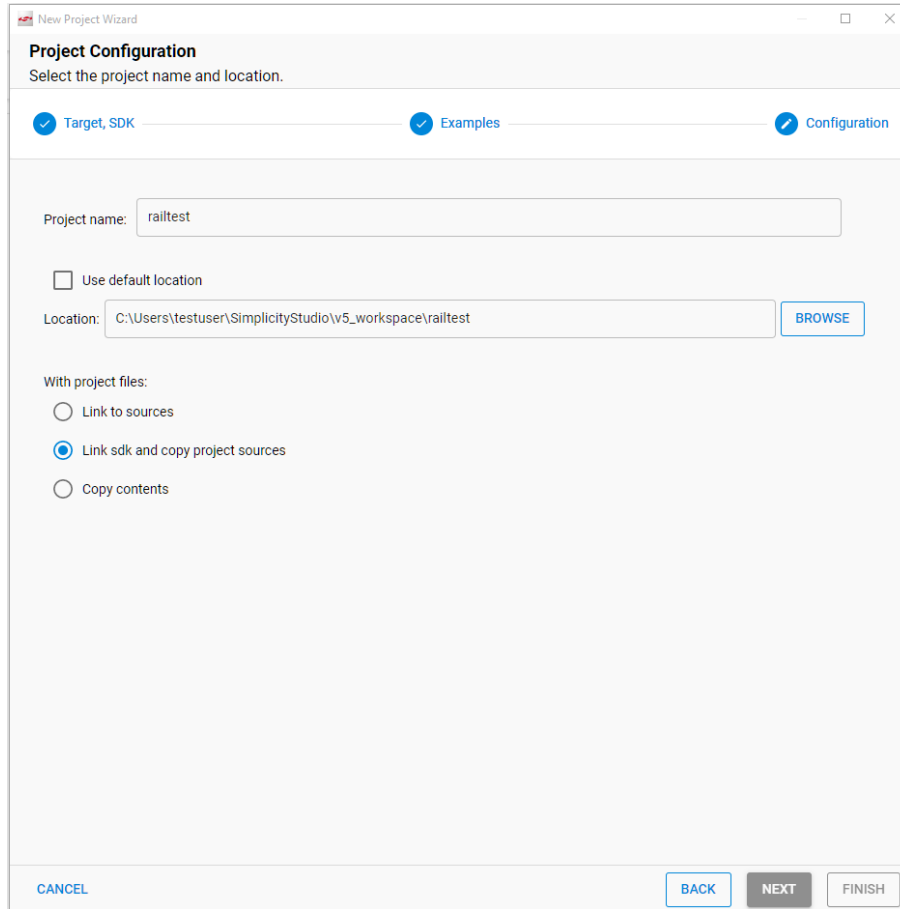

New Project Wizard

Project Configuration

Select the project name and location.

Target, SDK Examples Configuration

Project name: railtest

☐ Use default location

Location: C:\Users\testuser\SimlicityStudio\v5_workspace\railtest BROWSE

With project files:


☐ Link to sources

☒ Link sdk and copy project sources

☐ Copy contents


CANCEL BACK NEXT FINISH

- The new project opens in the Simplicity IDE Perspective with the Radio Configurator tab (*radio_settings.radioconf*) selected. The Project Configurator tab (*<projectname>.slcp*) is also available.

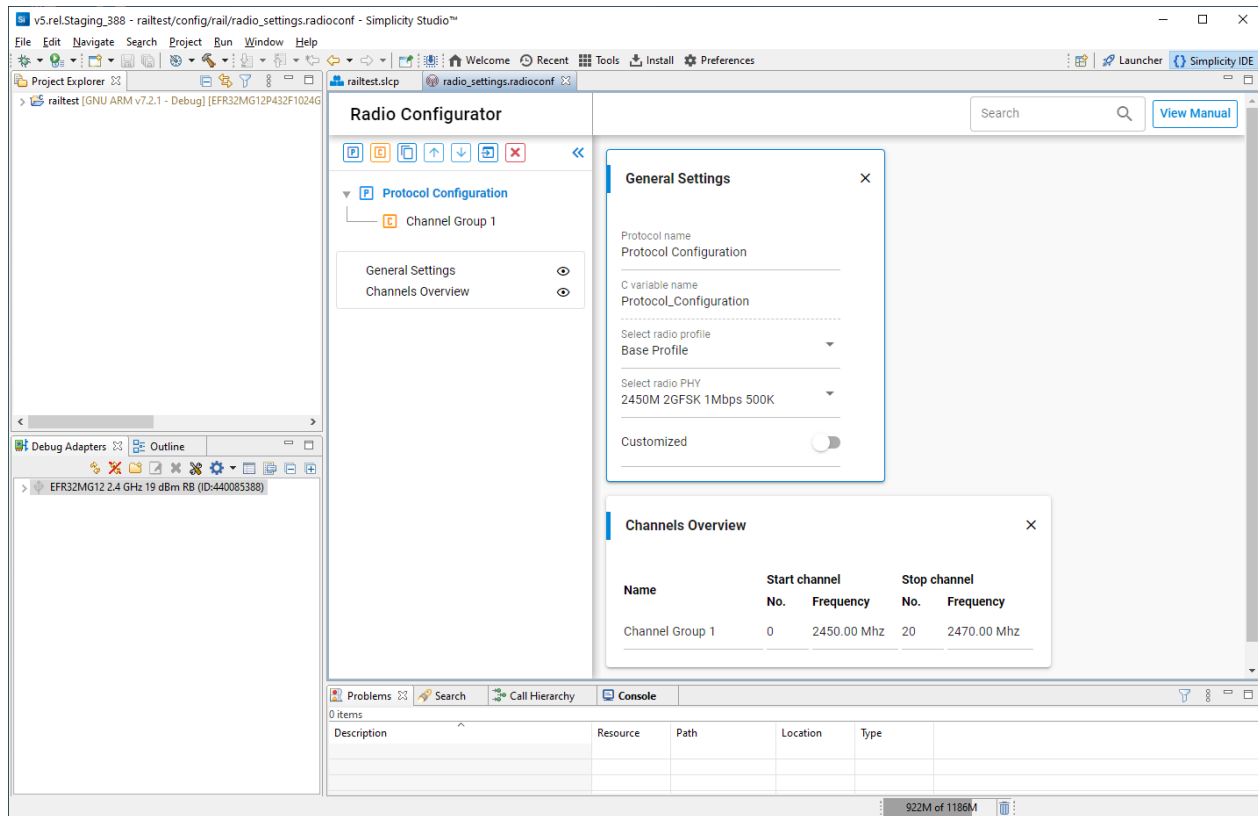

3.2 Component Configuration

Click the <projectname>.slcp tab to open the Project Configurator. The default configuration settings will work on the connected development board so, when first experimenting with a development kit, keeping them unchanged and going straight to compiling and flashing is recommended.

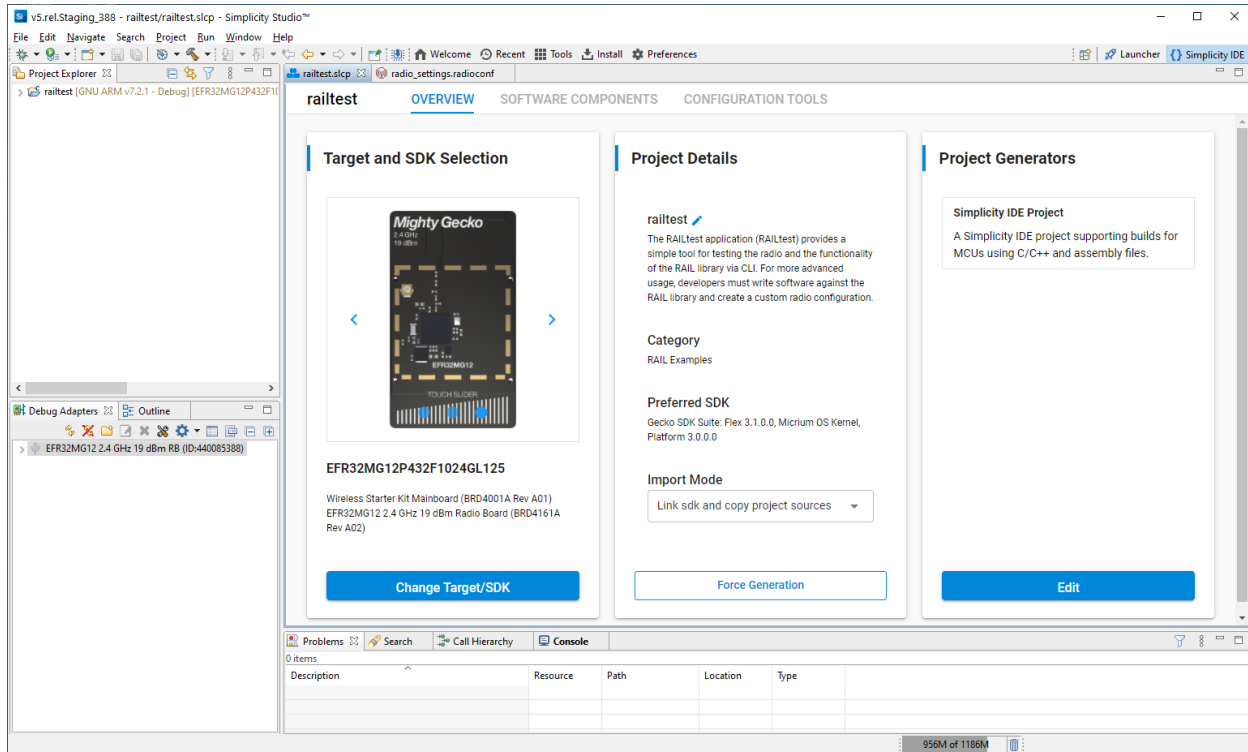


Flex SDK v3.x projects incorporate a Gecko Platform component-based architecture. Software features and functions can be installed and configured through the Component Library. The installation process will:

1. Copy the corresponding SDK files from the SDK folder into the project folder.
2. Copy all the dependencies of the given component into the project folder.
3. Add new include directories to the project settings.
4. Copy the configurations files into the `/config` folder.
5. Modify the corresponding auto-generated files to integrate the component into the application.

Additionally, “init” type software components will implement the initialization code for a given component, utilizing their corresponding configuration file as input.


Some software components (like Parent support) will fully integrate into the application to perform a specific task without the need of any additional code, while other components provide an API to be used in the application.

To see the component library, go to the SOFTWARE COMPONENTS tab.

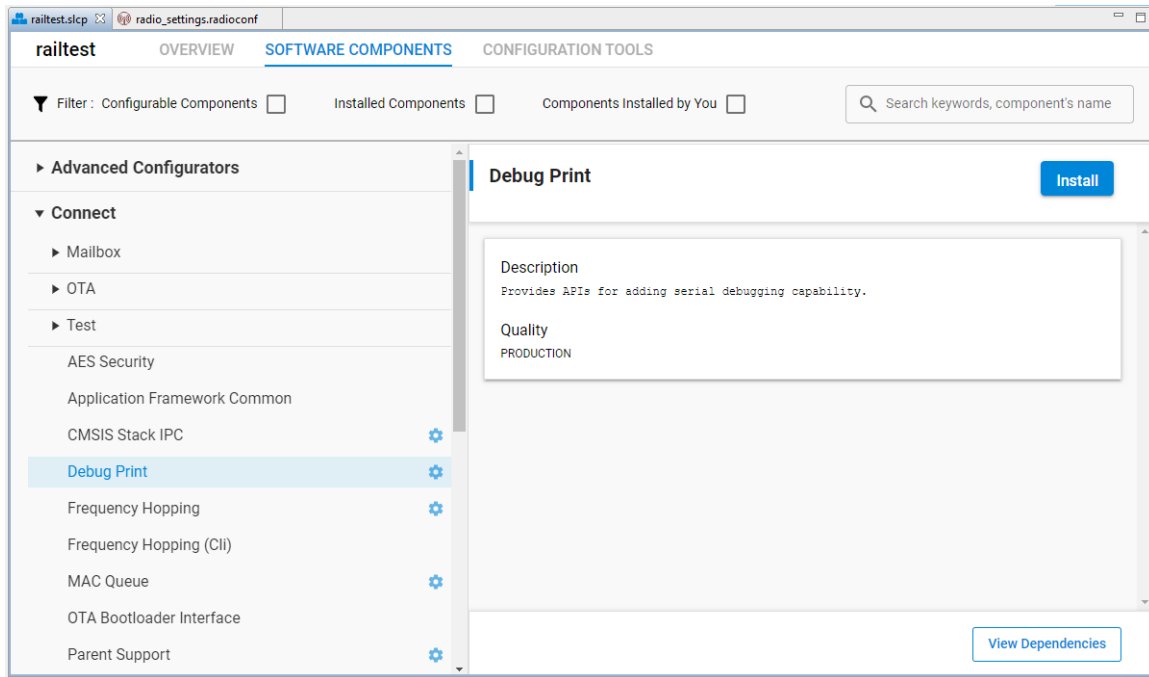


The project is configured by installing and uninstalling components, and configuring installed components. Installed components are checked. Configurable components have a gear symbol. Select a component to see information about it. A number of filters as well as a keyword search are available to help you explore the various component categories. Note that components for all installed SDKs are presented. See the online *Simplicity Studio 5 User's Guide* for details about the functionality available through the Simplicity IDE perspective and the Project Configurator.


If the component is configurable, click **CONFIGURE** to open the Component Editor.

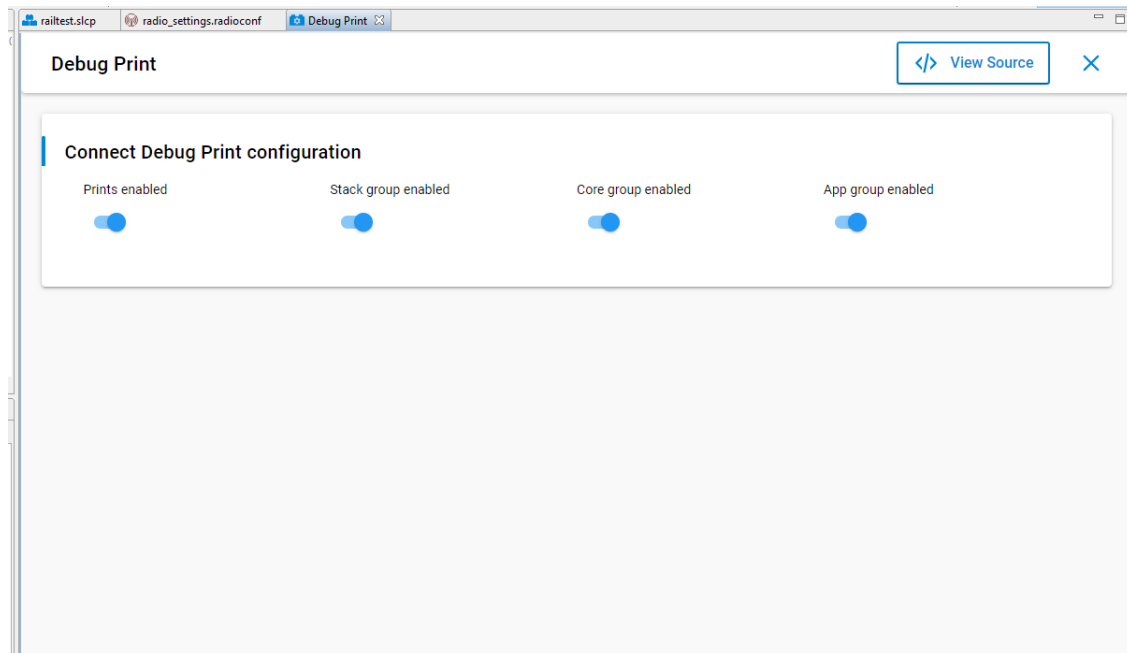

Any changes you make in the Component Editor are autosaved.

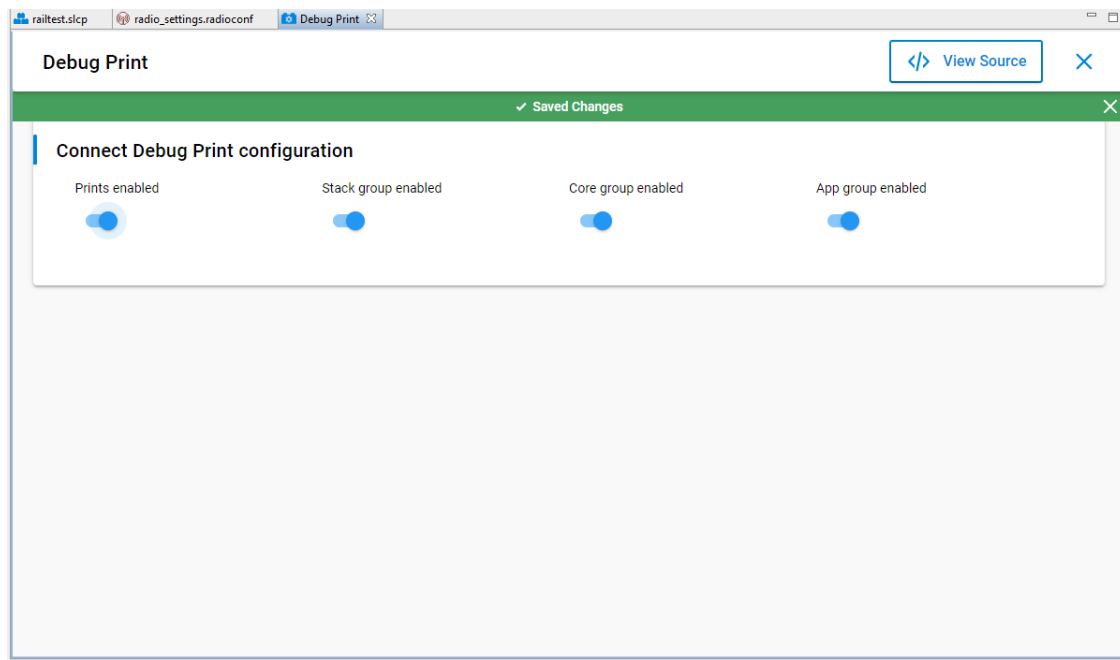


As you install and otherwise make changes in the Project Configurator, project files are autogenerated. Progress is shown in the lower right corner of the Simplicity IDE perspective.

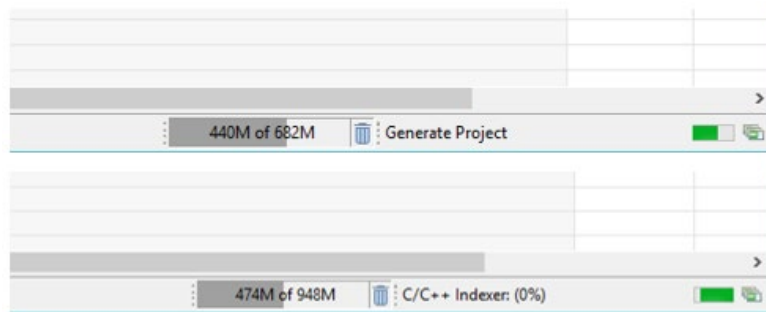


3.3 Radio Configuration

If the `radio_settings.radioconf` tab is not present, click the Project Configurator CONFIGURATION TOOLS tab. Click **Open** next to the Radio Configurator. It will open the `radio_settings.radioconf` file of the `/config/rail` folder in the Radio Configurator.

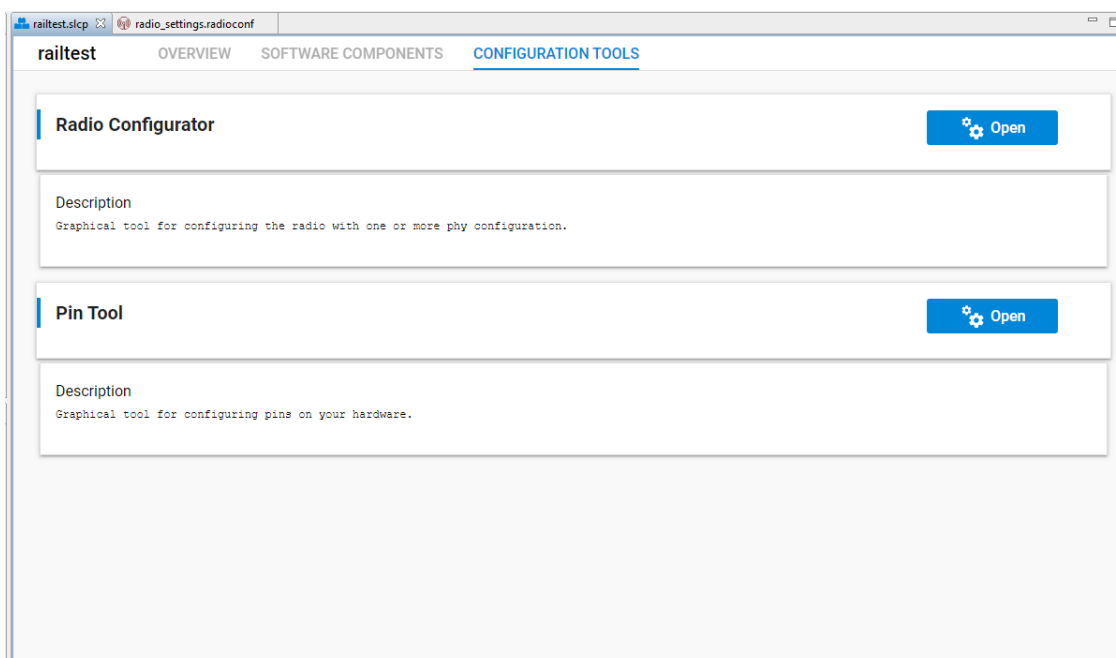


Select a radio profile, and a pre-defined radio PHY of the selected profile. You can then customize the PHY by turning on **Customized**. Changes made in the Radio Configurator are not autosaved. When saving the changes to `radio_settings.radioconf`, the radio configuration will be autogenerated and saved in the `/autogen/rail_config.h` and `/autogen/rail_config.c` files. See AN1253: *EFR32 Radio Configurator Guide for Simplicity Studio 5* for more information on using the Radio Configurator.

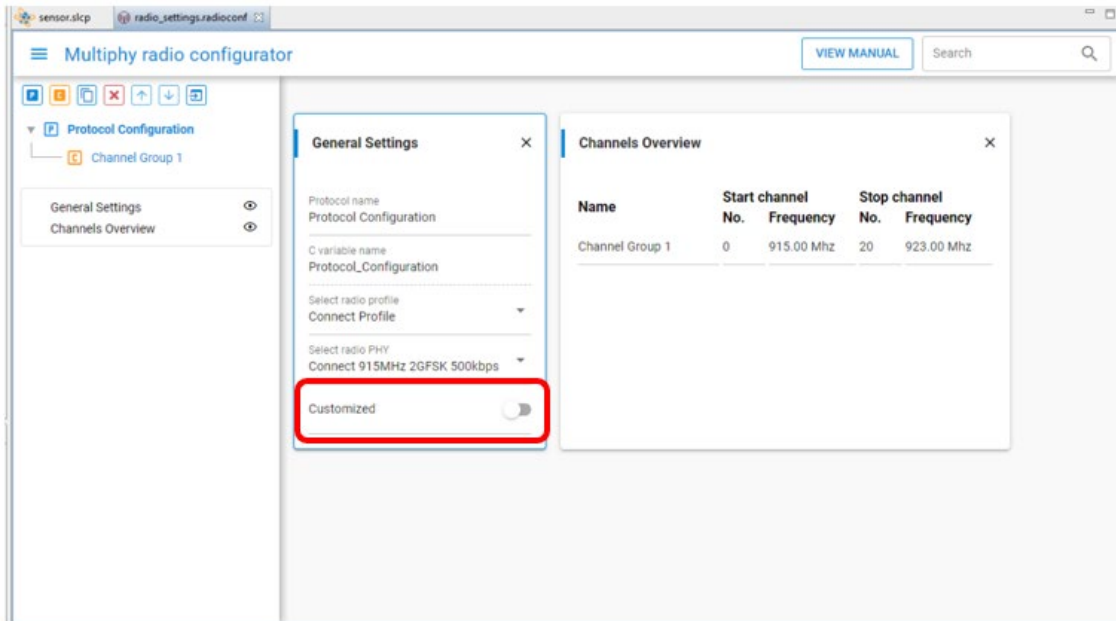

3.4 Pin Tool

On the CONFIGURATION TOOLS tab, click **Open** next to Pin Tool. This will open the file `<project>.pintool` of the project in the Pin Tool, which allows you to easily configure new peripherals or change the properties of existing ones. You can also double-click the file `<project>.pintool` in the Project Explorer view to open it.

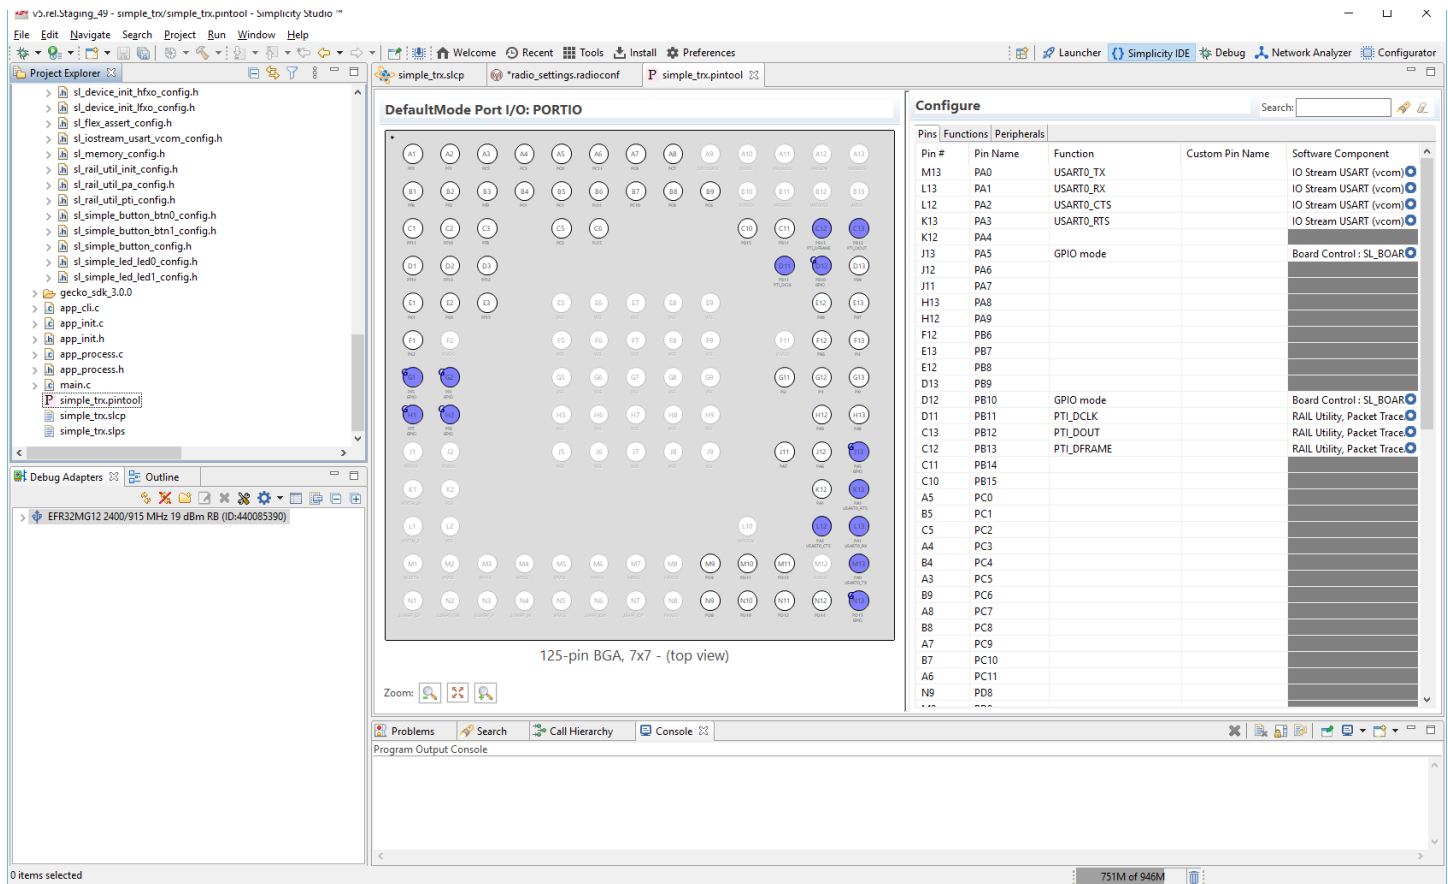


Double-click a Software Component to open the Component Editor and configure that function. Pin Tool does not autosave.

3.5 Compiling and Flashing the Application


You can either compile and flash the application automatically, or manually compile it and then flash it.

3.5.1 Automatically Compile and Flash


You can automatically compile and flash the application to your connected development hardware in the Simplicity IDE. Click the **Debug** control.




Progress is displayed in the console and a progress bar in the lower right.

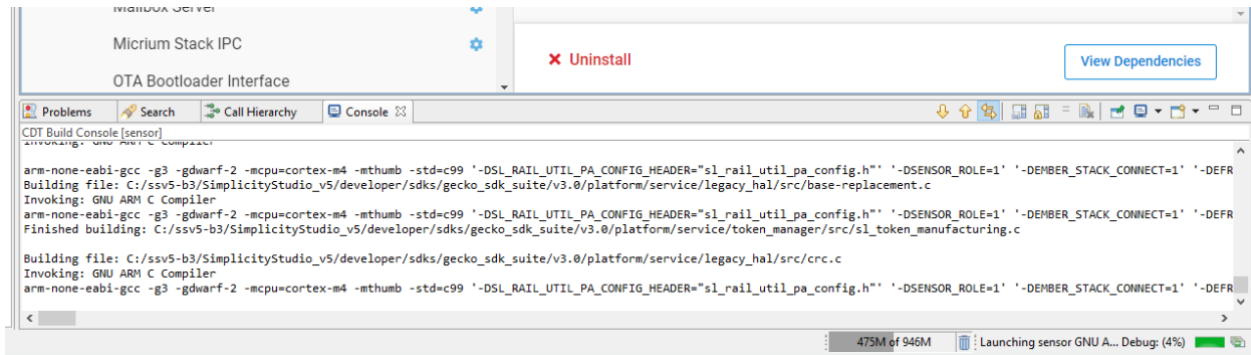

When building and flashing are complete, a Debug perspective is displayed. Click the **Resume** control to start the application running on the WSTK.

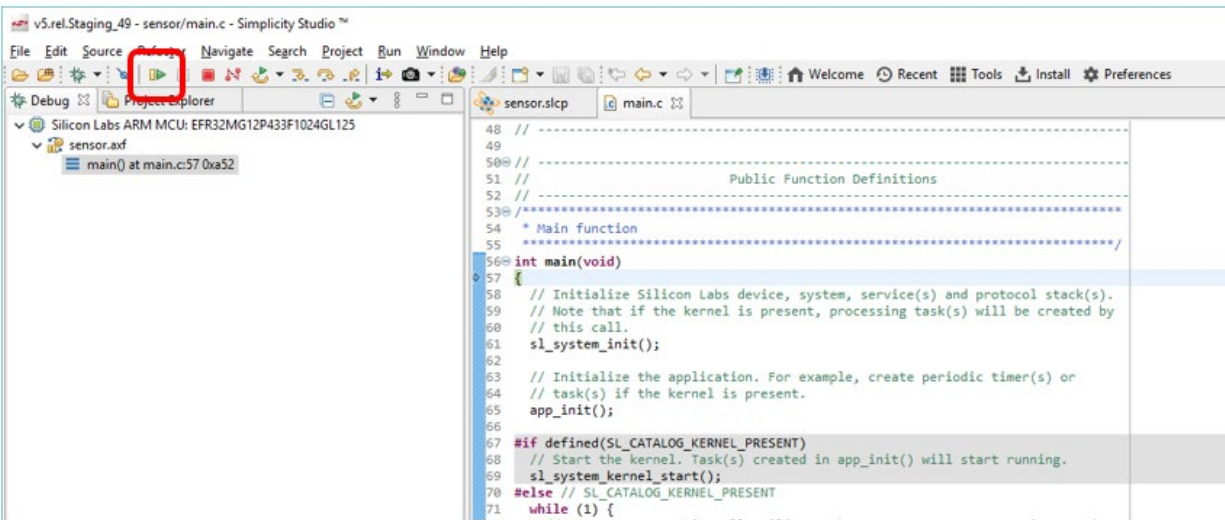

Next to the **Resume** control are **Suspend**, **Disconnect**, **Reconnect**, and **stepping** controls. Click **Disconnect** when you are ready to exit Debug mode.




3.5.2 Manually Compile and Flash

After you generate the project files, instead of clicking **Debug** in the Simplicity IDE, click the **Build** control (hammer icon) in the top tool bar.


The sample application will compile based on its build configuration. You can change the build configuration at any time by right-clicking the project directory in Project Explorer view and opening **Build Configurations > Set Active**.

You can also build your application directly in IAR-EWARM by opening IAR-EWARM and opening the generated project file inside IAR. To generate the file for IAR EWARM, go to the **OVERVIEW** tab of the Project Configurator, and click **Edit** on the Project Generators card. and edit the Project Generators to include IAR EMBEDDED WORKBENCH PROJECT. The .eww file is created after you save the change.

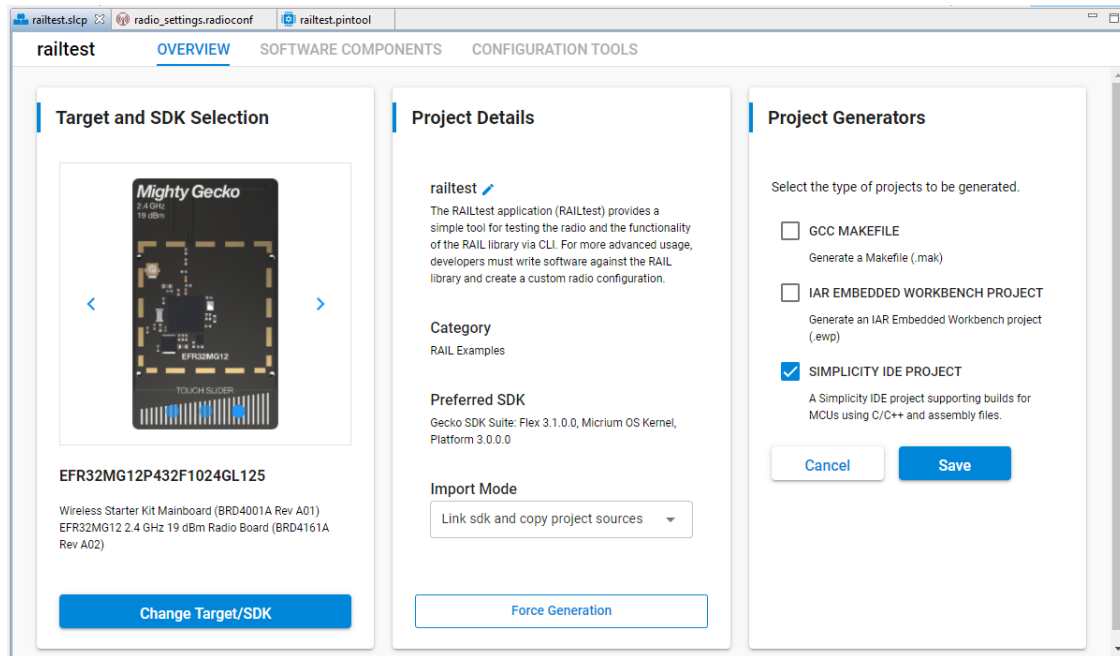


1. Open IAR-EWARM.
2. Select **File > Open > Workspace** and navigate to the location you selected for your sample application.
3. Select the application .eww file and click **Open**.
4. Select **Project > Make** or press F7. If the application builds without errors, you are ready to install the image on a device.

You can load the binary image through Project Explorer view. Locate the <project>.bin, .hex, or .s37 file in the **Binaries** subdirectory.

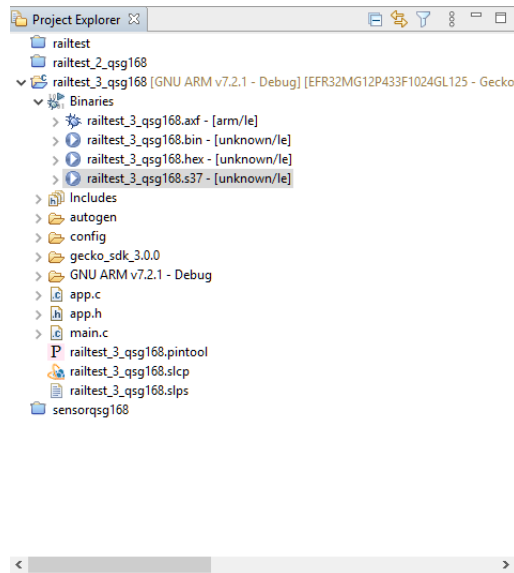


Right-click the file and select **Flash Programmer**. The Flash Programmer opens with the file path populated. Click **Program**.

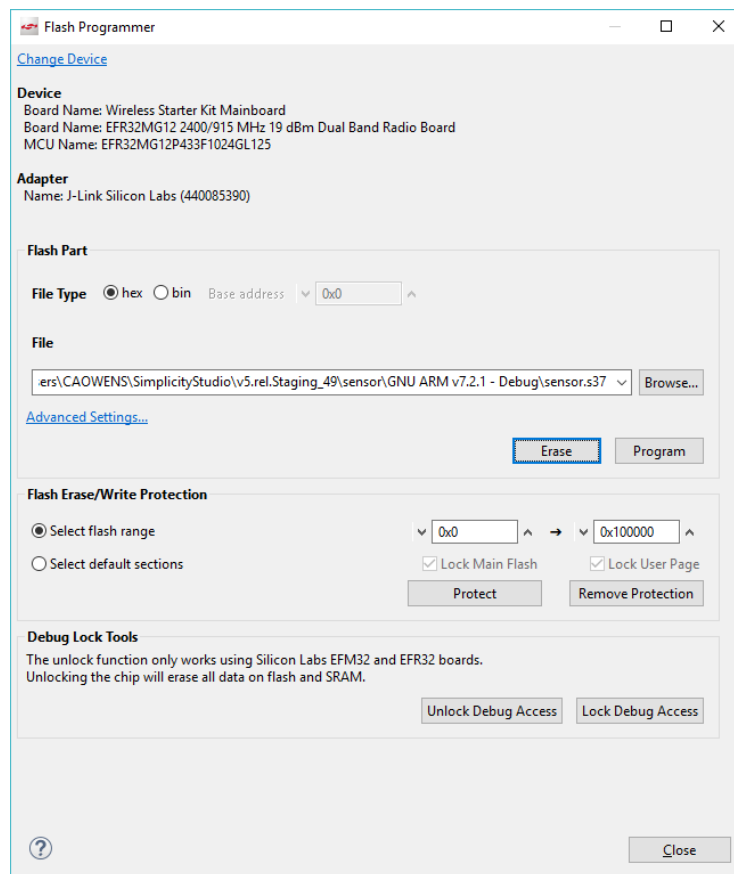

3.6 Interacting with Examples

Depending on the example application, you may be able to interact with it through buttons, LEDs and the LCD of the WSTK motherboard and through your development environment's Console interface using a CLI (command line interpreter).

To launch the Console interface, in the Simplicity IDE perspective right-click on the debug adapter in the Debug Adapters view. Choose **Launch Console**. Alternatively, from the Tools icon in the Simplicity IDE toolbar, or on the COMPATIBLE TOOLS tab in the Launcher perspective, select **Device Console**. Select the Serial 1 tab and click Enter to get a prompt from the sample app CLI.

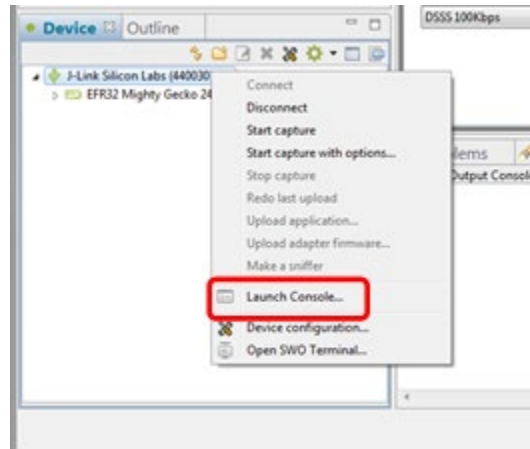


In the RAILtest application the console interface allows testing of any RAIL feature. Enter "help" to get a list of the available CLI commands.

For a simple radio functionality test flash the same RAILtest binary on two radio boards and open a console for each of them. Make sure an antenna is connected to each radio board if applicable. RAILtest starts in RX state on both boards.

Type `tx 1` in the first console window. The first radio node will transmit one packet and then return to RX state. A received packet will be reported in the second console window by the second radio node.

Type `tx 1` in the second console window. The second radio node will transmit one packet and then return to RX state. A received packet will be reported in the first console window by the first radio node.

The following figure shows the consoles at the end of the procedure.

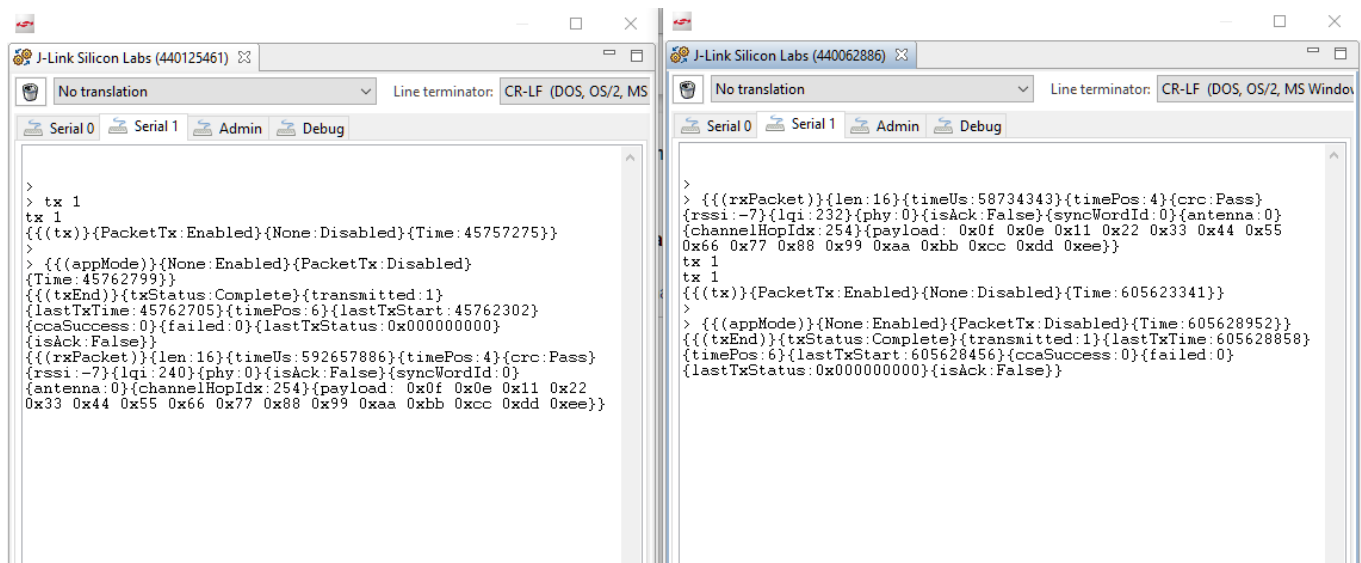

3.7 Working with Custom Boards

When working with custom boards, two methods are available, depending on your needs:


- Create an example on the WSTK, then remove the WSTK on the Project Configurator OVERVIEW tab using the **Change Target/SDK** control. This way, the wiring of the kit is kept, but you can change it using the Pin Tool.
- Create an example with just the part, no WSTK, and set up the wiring for all required peripherals of the example (like buttons or pins) using the Pin Tool.

Note that a WSTK can also depend on components (typically peripheral init components) that are removed if you remove the WSTK from the project.

over a time interval. A new window appears in the upper right corner showing consumption information for the given interval.. Overall average is measured as well, but this is influenced by transient events.



Multi-node Energy Profiler is also able to simultaneously measure the consumption of multiple devices. To start measuring a new device click the Quick Access menu (upper left corner) and select **Start Energy Capture**. To stop measuring, click the Quick Access menu, and select **End/Save session**.

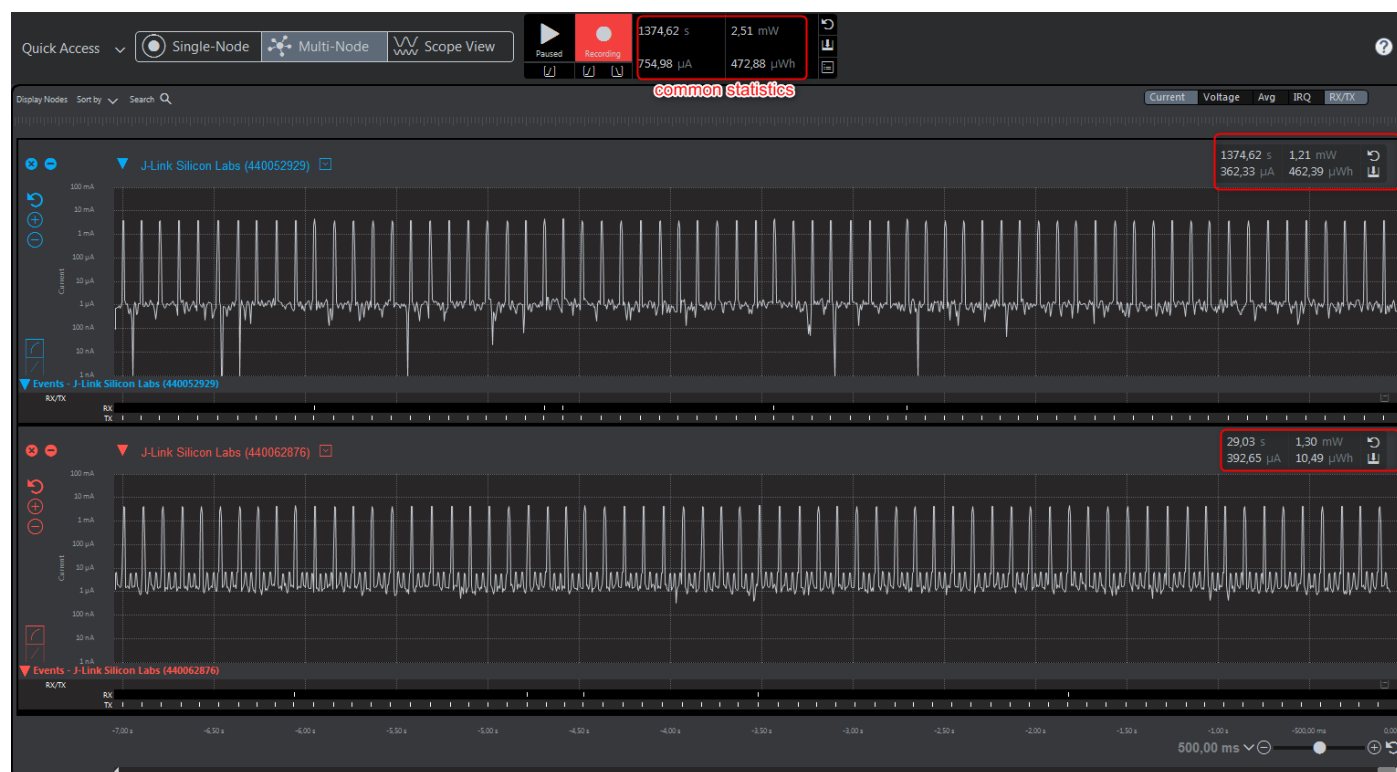

To learn more about how to use this tool, see *UG343: Multi-Node Energy Profiler User's Guide*.

4.2 Network Analyzer

Silicon Labs Network Analyzer is a packet capture and debugging tool that can be used to debug connectivity between Wireless Geckos and other devices. It significantly accelerates the network and application development process with graphical views of network traffic, activity, and duration.

The Packet Trace application captures the packets directly from the Packet Trace Interface (PTI) available on the Wireless Gecko SoCs and modules. It therefore provides a more accurate capture of the packets compared to air-based capture.

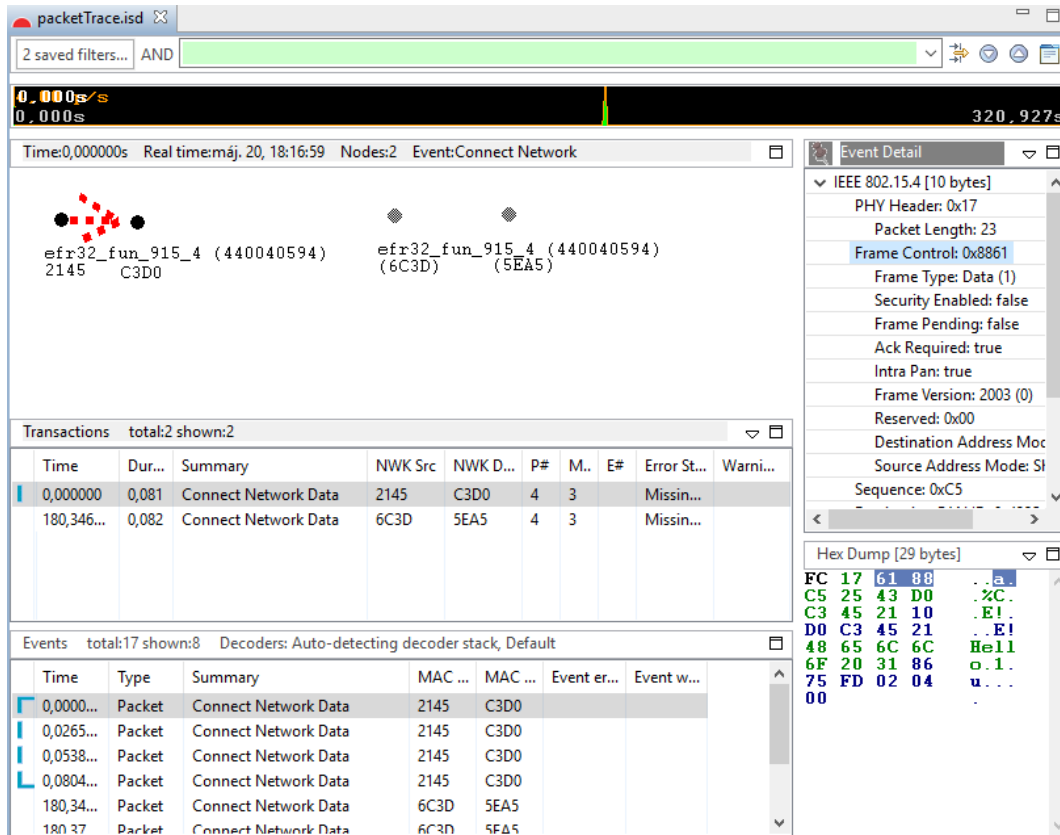


Figure 7-1. Connect Traffic Capture with Packet Trace

4.3 Simplicity Commander

Simplicity Commander is a simple flashing tool, which can be used to flash firmware images, erase flash, lock and unlock debug access, and write-protect flash pages via the J-Link interface. Both GUI and CLI (Command Line Interface) are available. See *UG162: Simplicity Commander Reference Guide* for more information.

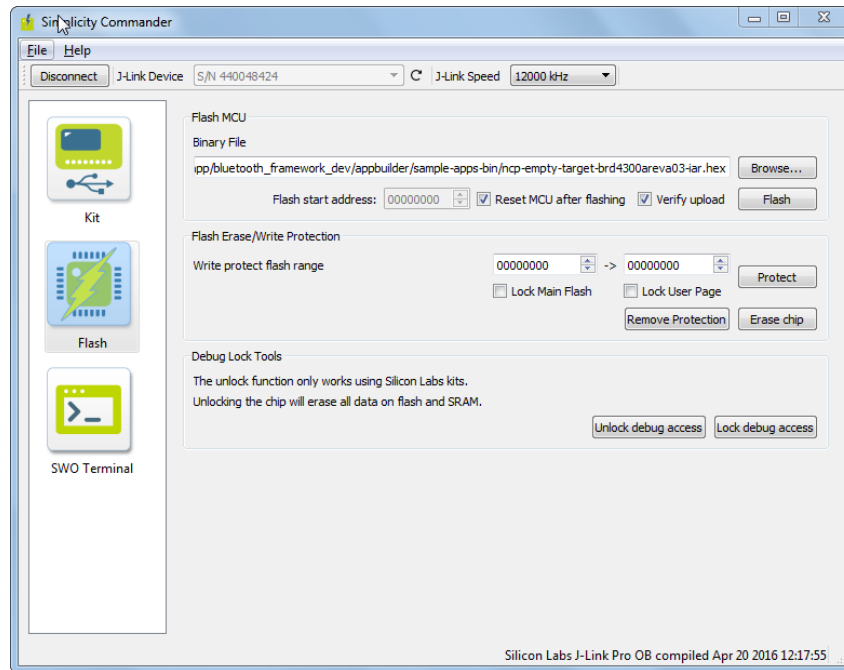


Figure 7-2. Simplicity Commander

Simplicity Studio

One-click access to MCU and wireless tools, documentation, software, source code libraries & more. Available for Windows, Mac and Linux!



IoT Portfolio

www.silabs.com/iot



SW/HW

www.silabs.com/simplicity



Quality

www.silabs.com/quality



Support & Community

www.silabs.com/community

Disclaimer

Silicon Labs intends to provide customers with the latest, accurate, and in-depth documentation of all peripherals and modules available for system and software implementers using or intending to use the Silicon Labs products. Characterization data, available modules and peripherals, memory sizes and memory addresses refer to each specific device, and "Typical" parameters provided can and do vary in different applications. Application examples described herein are for illustrative purposes only. Silicon Labs reserves the right to make changes without further notice to the product information, specifications, and descriptions herein, and does not give warranties as to the accuracy or completeness of the included information. Without prior notification, Silicon Labs may update product firmware during the manufacturing process for security or reliability reasons. Such changes will not alter the specifications or the performance of the product. Silicon Labs shall have no liability for the consequences of use of the information supplied in this document. This document does not imply or expressly grant any license to design or fabricate any integrated circuits. The products are not designed or authorized to be used within any FDA Class III devices, applications for which FDA premarket approval is required, or Life Support Systems without the specific written consent of Silicon Labs. A "Life Support System" is any product or system intended to support or sustain life and/or health, which, if it fails, can be reasonably expected to result in significant personal injury or death. Silicon Labs products are not designed or authorized for military applications. Silicon Labs products shall under no circumstances be used in weapons of mass destruction including (but not limited to) nuclear, biological or chemical weapons, or missiles capable of delivering such weapons. Silicon Labs disclaims all express and implied warranties and shall not be responsible or liable for any injuries or damages related to use of a Silicon Labs product in such unauthorized applications.

Trademark Information

Silicon Laboratories Inc., Silicon Laboratories®, Silicon Labs®, SiLabs® and the Silicon Labs logo®, Bluegiga®, Bluegiga Logo®, ClockBuilder®, CMEMS®, DSPLL®, EFM®, EFM32®, EFR®, Ember®, Energy Micro, Energy Micro logo and combinations thereof, "the world's most energy friendly microcontrollers", Ember®, EZLink®, EZRadio®, EZRadioPRO®, Gecko®, Gecko OS, Gecko OS Studio, ISOModem®, Precision32®, ProSLIC®, Simplicity Studio®, SiPHY®, Telegesis, the Telegesis Logo®, USBXpress®, Zentri, the Zentri logo and Zentri DMS, Z-Wave®, and others are trademarks or registered trademarks of Silicon Labs. ARM, CORTEX, Cortex-M3 and THUMB are trademarks or registered trademarks of ARM Holdings. Keil is a registered trademark of ARM Limited. Wi-Fi is a registered trademark of the Wi-Fi Alliance. All other products or brand names mentioned herein are trademarks of their respective holders.



Silicon Laboratories Inc.
400 West Cesar Chavez
Austin, TX 78701
USA

<http://www.silabs.com>