

BONDING STRAPS - INSPECTION/CHECK

EFFECTIVITY: ALL

1. General

- A. This section gives the procedures to do the inspection of the engine bonding straps.
- B. The procedures in this section are given in the sequence below. The tasks identified with (◆) are part of the Scheduled Maintenance Requirements Document (SMRD).

<i>TASK NUMBER</i>	<i>DESCRIPTION</i>	<i>EFFECTIVITY</i>
71-52-01-200-801-A	ENGINE BONDING STRAPS - VISUAL INSPECTION	ALL

TASK 71-52-01-200-801-A

EFFECTIVITY: ALL

2. ENGINE BONDING STRAPS - VISUAL INSPECTION

A. General

- (1) This task gives the procedures to do the visual inspection of the engine straps for general condition and security.

B. References

REFERENCE	DESIGNATION
AMM MPP 71-00-00/200	- MAINTENANCE PRACTICES
AMM TASK 54-52-01-000-801-A/400	PYLON FAIRINGS - REMOVAL
AMM TASK 54-52-01-400-801-A/400	PYLON FAIRINGS - INSTALLATION

C. Zones and Accesses

ZONE	PANEL/DOOR	LOCATION
414	LH Pylon upper fairing	LH Engine
424	RH Pylon upper fairing	RH Engine

D. Tools and Equipment

Not Applicable

E. Auxiliary Items

ITEM	DESCRIPTION	PURPOSE	QTY
Commercially available	Workstand	To get access to the engine bonding straps	1

F. Consumable Materials

Not Applicable

G. Expandable Parts

Not Applicable

H. Persons Recommended

QTY	FUNCTION	PLACE
1	Does the task	Engine

I. Preparation

SUBTASK 841-002-A

WARNING: BEFORE YOU DO THE TASK, OBEY THE SAFETY PRECAUTIONS GIVEN IN [AMM MPP 71-00-00/200](#) TO PREVENT INJURY TO PERSONS AND DAMAGE TO THE MATERIAL.

- (1) On the circuit breaker panel, open the circuit breakers below and attach a DO-NOT-CLOSE tag to them.
 - START 1/2.
- (2) Install the workstand in the work area.
- (3) Remove the pylon upper fairing ([AMM TASK 54-52-01-000-801-A/400](#)) to get access to the engine bonding straps.

J. Inspect the Engine Bonding Straps ([Figure 601](#))

SUBTASK 212-002-A

- (1) Do a visual inspection of the engine bonding straps for general condition and security.

K. Follow-on


SUBTASK 842-002-A

- (1) Install the pylon upper fairing ([AMM TASK 54-52-01-400-801-A/400](#)).
- (2) Remove the workstand.
- (3) On the circuit breaker panel, close the circuit breakers below and remove the DO-NOT-CLOSE tag from them.
 - START 1/2.

EFFECTIVITY: ALL

Engine Bonding Strap - Component Locations

Figure 601

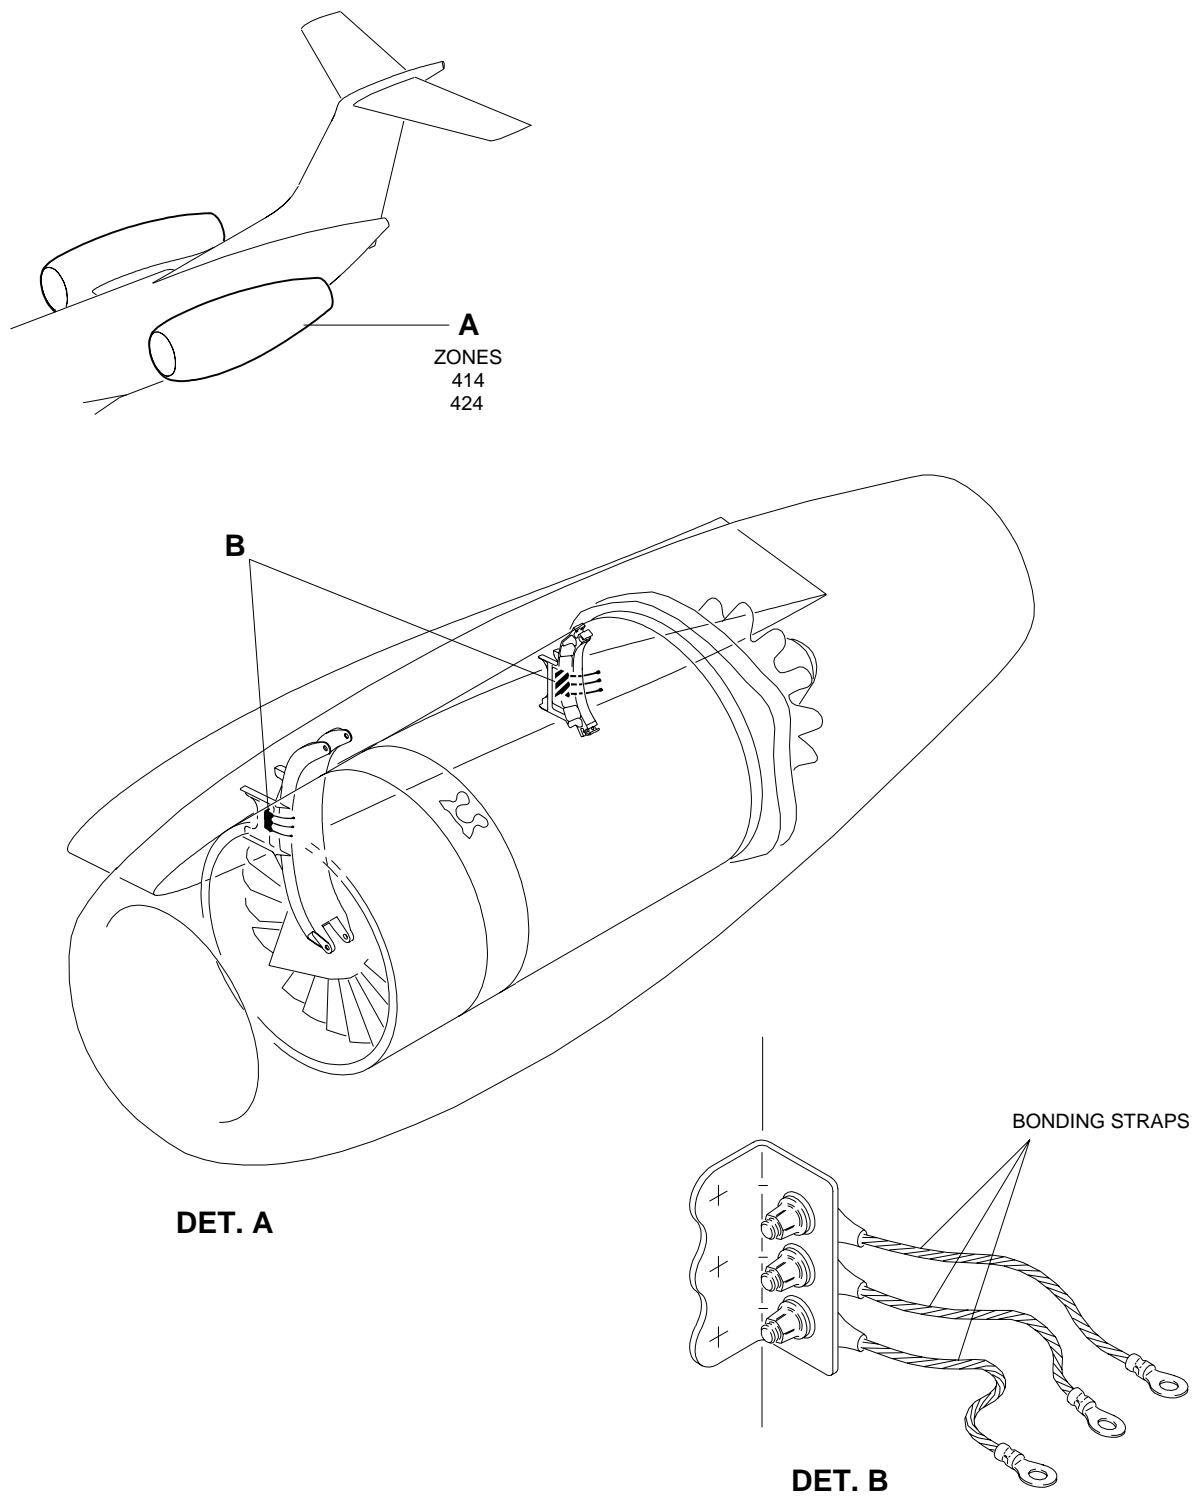

145AMM710027.MCE B