

EnOcean Serial Protocol 3 (ESP3)

V1.46/ May. 29, 2018

Content

1	EnOcean Serial Protocol 3 (ESP3)	5
1.1	Terms & Abbreviations	8
1.2	Introduction	9
1.3	Packet structure	10
1.4	Upward compatibility	11
1.5	UART framing	12
1.6	UART synchronization (packet detection)	12
1.6.1	Packet description	13
1.6.2	Packet types	13
1.6.3	Direction of packet types	14
1.6.4	ESP3 Timeout	14
2	ESP3 Command Description	15
2.1	Packet Type 1: RADIO_ERP1	15
2.1.1	Packet structure	15
2.1.2	Radio variants (examples)	17
2.2	Packet Type 2: RESPONSE	19
2.2.1	Packet structure	19
2.2.2	List of Return Codes	19
2.2.3	Standard Response Structure	19
2.3	Packet Type 3: RADIO_SUB_TEL	20
2.4	Packet Type 4: EVENT	21
2.4.1	Structure	21
2.4.2	List of EVENT Codes	21
2.4.3	Code 01: SA_RECLAIM_NOT_SUCCESSFUL	22
2.4.4	Code 02: SA_CONFIRM_LEARN	23
2.4.5	Code 03: SA_LEARN_ACK	24
2.4.6	Code 04: CO_READY	25
2.4.7	Code 05: CO_EVENT_SECUREDEVICES	26
2.4.8	Code 06: CO_DUTYCYCLE_LIMIT	27
2.4.9	Code 07: CO_TRANSMIT_FAILED	27
2.5	Packet Type 5: COMMON_COMMAND	28
2.5.1	Structure	28
2.5.2	List of COMMON_COMMAND Codes	28
2.5.3	Code 01: CO_WR_SLEEP	30
2.5.4	Code 02: CO_WR_RESET	30
2.5.5	Code 03: CO_RD_VERSION	31
2.5.6	Code 04: CO_RD_SYS_LOG	32
2.5.7	Code 05: CO_WR_SYS_LOG	33
2.5.8	Code 06: CO_WR_BIST	33
2.5.9	Code 07: CO_WR_IDBASE	34
2.5.10	Code 08: CO_RD_IDBASE	35
2.5.11	Code 09: CO_WR_REPEATER	36

2.5.12	Code 10: CO_RD_REPEATER	37
2.5.13	Code 11: CO_WR_FILTER_ADD	38
2.5.14	Code 12: CO_WR_FILTER_DEL.....	40
2.5.15	Code 13: CO_WR_FILTER_DEL_ALL	40
2.5.16	Code 14: CO_WR_FILTER_ENABLE.....	41
2.5.17	Code 15: CO_RD_FILTER.....	42
2.5.18	Code 16: CO_WR_WAIT_MATURITY	43
2.5.19	Code 17: CO_WR_SUBTEL	43
2.5.20	Code 18: CO_WR_MEM	44
2.5.21	Code 19: CO_RD_MEM.....	45
2.5.22	Code 20: CO_RD_MEM_ADDRESS	46
2.5.23	Code 21: DEPRECIATED: CO_RD_SECURITY.....	47
2.5.24	Code 22: DEPRECIATED: CO_WR_SECURITY	48
2.5.25	Code 23: CO_WR_LEARNMODE	49
2.5.26	Code 24: CO_RD_LEARNMODE.....	50
2.5.27	Code 25: CO_WR_SECUREDEVICE_ADD	51
2.5.28	Code 26: CO_WR_SECUREDEVICE_DEL.....	52
2.5.29	Code 27: CO_RD_SECUREDEVICE_BY_INDEX	53
2.5.30	Code 28: CO_WR_MODE	55
2.5.31	Code 29: CO_RD_NUMSECUREDEVICES	56
2.5.32	Code 30: CO_RD_SECUREDEVICE_BY_ID	57
2.5.33	Code 31: CO_WR_SECUREDEVICE_ADD_PSK	58
2.5.34	Code 32: CO_WR_SECUREDEVICE_SENDTEACHIN	59
2.5.35	Code 33: CO_WR_TEMPORARY_RLC_WINDOW.....	60
2.5.36	Code 34: CO_RD_SECUREDEVICE_PSK	61
2.5.37	Code 35: CO_RD_DUTYCYCLE_LIMIT.....	62
2.5.38	Code 36: CO_SET_BAUDRATE	63
2.5.39	Code 37: CO_GET_FREQUENCY_INFO.....	63
2.5.40	Code 38: Reserved	64
2.5.41	Code 39: CO_GET_STEPCODE	64
2.5.42	Code 40: Reserved	65
2.5.43	Code 41: Reserved	65
2.5.44	Code 42: Reserved	65
2.5.45	Code 43: Reserved	65
2.5.46	Code 44: Reserved	65
2.5.47	Code 45: Reserved	65
2.5.48	Code 46: CO_WR_REMAN_CODE	66
2.5.49	Code 47: CO_WR_STARTUP_DELAY.....	66
2.5.50	Code 48: CO_WR_REMAN_REPEATING.....	66
2.5.51	Code 49: CO_RD_REMAN_REPEATING	67
2.5.52	Code 50: CO_SET_NOISETHRESHOLD	68
2.5.53	Code 51: CO_GET_NOISETHRESHOLD	68
2.6	Packet Type 6: SMART_ACK_COMMAND.....	69
2.6.1	Structure	69

2.6.2	List of SMART ACK Codes	69
2.6.3	Code 01: SA_WR_LEARNMODE	70
2.6.4	Code 02: SA_RD_LEARNMODE	71
2.6.5	Code 03: SA_WR_LEARNCONFIRM	72
2.6.6	Code 04: SA_WR_CLIENTLEARNRQ	73
2.6.7	Code 05: SA_WR_RESET	74
2.6.8	Code 06: SA_RD_LEARNEDCLIENTS	75
2.6.9	Code 07: SA_WR_RECLAIMS	76
2.6.10	Code 08: SA_WR_POSTMASTER	76
2.6.11	Code 09: SA_RD_MAILBOX STATUS	77
2.6.12	Code 10: SA_DEL_MAILBOX	77
2.7	Packet Type 7: REMOTE_MAN_COMMAND	79
2.7.1	Structure	79
2.7.2	Description	79
2.8	Packet Type 8: PRODUCTION_COMMAND	81
2.9	Packet Type 9: RADIO_MESSAGE	81
2.9.1.1	Packet structure	81
2.10	Packet Type 10: RADIO_ERP2	83
2.10.1	Packet structure	83
2.11	Packet Type 16: RADIO_802_15_4: 802.15.4 Physical Raw Packet	84
2.11.1	Packet structure	84
2.12	Packet Type 17: COMMAND_2_4	86
2.12.1	List of EnOcean 2.4 commands	86
2.12.2	Code 01: R802_WR_CHANNEL	87
2.12.3	CODE 02: R802_RD_CHANNEL	87
3	Appendix	89
3.1	ESP3 Data flow sequences	89
3.1.1	Client data request	89
3.1.2	Teach IN via VLL	89
3.1.3	Teach IN via Smart Ack	90
3.1.4	Teach IN via Smart Ack incl. repeater	90
3.2	ESP3 telegram examples	91
3.2.1	Packet: Radio VLD	91
3.2.2	Packet: CO_WR_SLEEP	91
3.2.3	Packet: CO_WR_RESET	91
3.2.4	Packet: CO_RD_IDBASE	91
3.2.5	Packet: REMOTE_MAN_COMMAND	91
3.3	CRC8 calculation	93
3.4	UART Synchronization (example c-code)	94
3.4.1	ESP3 Packet Structure	94
3.4.2	Get ESP3 Packet	94
3.4.3	Send ESP3 Packet	98

1 EnOcean Serial Protocol 3 (ESP3)

REVISION HISTORY

The following major modifications and improvements have been made to the first version of this document:

No.	Major Changes	Date	Who	Reviewer
1.0	First Version			
1.1	Corrections, added uses cases			
1.2	Added small correction in CMD_SA_LEARNDEVICE command.			
1.2	Reworked improved protocol			
1.3	Removed SMACK comments – rework needed			
1.4	Document Reviewed, performance measurements moved to EO3000I_API			
1.5	Added PacketType = 3			
1.6	Added types and defined commands			
1.7	New terms and definitions; extended description	2010-08-31	ap, op, jh	
1.8	Modifications	2010-09-07	ap, op	
1.9	Extracted from system spec document, removed internal info	2010-09-15	ASt	
1.10	1 st review	2010-09-28	op	
1.11	2 nd review (notes ap, mf)	2010-10-11	op	
1.12	Minor modifications	2010-10-27	nm, op	
1.13	Minor modifications	2010-11-03	nm, op	
1.14	New event: CO_READY	2010-12-10	op	
1.15	New optional data in CO_RD_IDBASE	2011-02-28	wh,ap	
1.16	Corrected wrong CRC8D in CO_WR_RESET example Changed the REMOTE_MAN_COMMAND	2011-06-14	jh	
1.17	Examples added for CO_WR_FILTER_ADD	2011-08-02	mho, wh	
1.18	Fixed CO_RD_FILTER description	2012-03-16	jh	
1.19	Common commands for secure devices added; minor modifications	2012-12-15	ap	
1.20	Added CO_WR_MODE, type RADIO_ADVANCED to support advanced protocol	2013-01-06	jh	
1.21	Minor editorial changes	2013-02-12	ap	
1.22	Added type RADIO_MESSAGE, CO_RD_SECURE_DEVICE, CO_RD_NUM_SECURE_DEVICES. Updated types table	2013-03-04	ap	
1.23	Fixed typos . Updated security commands, added commands: CO_WR_SECUREDEVICE_ADD_PSK, CO_WR_SECUREDEVICE_SENDEACHIN, CO_WR_TEMPORARY_RLC_WINDOW	2013-08-19	jh	
1.24	Added CO_RD_SECUREDEVICE_PSK	2013-10-14	jh	
1.25	Modifications in filter and repeater common commands to enable filtered repeating functionality	2014-02-24	ap	
1.26	Changed description of SA_RD_LEARNEDCLIENTS response, enhanced secure ESP 3 messages	2014-05-06	mhs	
1.27	CO_WR_SECURE_DEVICE_ADD: Added optional byte	2014-07-30	ap	

ENOCAN SERIAL PROTOCOL (ESP3) - SPECIFICATION

	defining if it is a PTM. Added CO_RD_DUTYCYCLE_LIMIT and CO_DUTYCYCLE_LIMIT. Remote management examples corrected. Many typos corrected. Renamed "Advanced Protocol" to ERP2.			
1.28	Return code RET_LOCK_SET added.		ap	
1.29	Reference to 2.4 Commands added. CO_SET_BAUDRATE and new supported higher baudrates added	2015-10-16	tm	
1.30	CO_GET_FREQUENCY_INFO, CO_GET_STEPCODE and 2.4 documentation added	2016-03-22	tm	
1.31	New smart ack commands added, formatting updated	2016-07-18	tm	
1.32	Added Config Commands	2016-10-25	fg	
1.33	CO_READY extended by mode CO_WR_REMAN_CODE added	2016-12-21	ap	
1.34	CO_WR_STARTUP_DELAY defined	2017-02-08	mf	
1.35	Packet Type 32 Packet Type 33 added	2017-03-17	rs	TM
1.36	CO_SET_REMAN_REPEATED CO_GET_REMAN_REPEATED	2017-05-09	tm	
1.37	Modification of the CO_RD_STEPCODE	2017-10-17	mf	
1.38	Modification of the CO_EVENT_SECUREDEVICES	2017-12-06	mf	
1.39	Modification of Security Level inside of RADIO_PACKET_ERP1 Added Security Level to RADIO_PACKET_ERP2 and Message Updated CO_EVENT_SECUREDEVICES	2017-12-11	tm	mh
1.40	Redundant ESP3 command Code 40 CO_WR_SECUREDEVICE_CLEAR_LIST deleted. Packet 11 CONFIG_COMMAND codes deleted. Adding commands 36 to 51 missing in the list of common commands codes	2017-12-11	at	mh
1.41	The ESP3 CO_WR_SECUREDEVICE_DEL contains a new optional data value = 0x03 that allows deleting the whole contains from all link tables.	2018-01-21	mf	mh
1.42	Changing the current description of CO 48 and CO 49 for a proper one	2018-01-22	at	mh
1.43	Added option for EEPROM reading and writing (CO_RD_MEM, CO_RD_MEM_ADDRESS and CO_WR_MEM).	2018-01-29	mf	mh
1.44	Commands for RD and WR RORG deleted Packet Type 32 and 33 not included for this version	2018-03-06	at	
1.45	Table 57,58 and 59 adding option 0x00000000 as ID to delete broadcast device and Optional Data Direction	2018-05-07	at	
1.46	Description for Tables 4 and 10 updated, Code 07 description corrected, Code 25,26 and 27 Security Level information updated. Missing description for responses added. Formatting checked	2018-05-29	at	mh

Published by EnOcean GmbH, Kolpingring 18a, 82041 Oberhaching, Germany
www.enocean.com, info@enocean.com, phone ++49 (89) 6734 6890

© EnOcean GmbH
 All Rights Reserved

Important!

This information describes the type of component and shall not be considered as assured characteristics. No responsibility is assumed for possible omissions or inaccuracies. Circuitry and specifications are subject to change without notice. For the latest product specifications, refer to the EnOcean website: <http://www.enocean.com>.

As far as patents or other rights of third parties are concerned, liability is only assumed for modules, not for the described applications, processes and circuits.

EnOcean does not assume responsibility for use of modules described and limits its liability to the replacement of modules determined to be defective due to workmanship. Devices or systems containing RF components must meet the essential requirements of the local legal authorities.

The modules must not be used in any relation with equipment that supports, directly or indirectly, human health or life or with applications that can result in danger for people, animals or real value.

Components of the modules are considered and should be disposed of as hazardous waste. Local government regulations are to be observed.

Packing: Please use the recycling operators known to you. By agreement we will take packing material back if it is sorted. You must bear the costs of transport. For packing material that is returned to us unsorted or that we are not obliged to accept, we shall have to invoice you for any costs incurred.

1.1 Terms & Abbreviations

Term / Abbr.	Description
μC	Microcontroller (external)
API	Application Programming Interface
APP	Application
BIST	Built-in self-test
CRC8	Cyclic redundancy check (CRC) or polynomial code checksum; CRC-8 = 9 bits polynomial lengths
CRC8D	CRC8 for Group 'Data' (incl. Optional Data)
CRC8H	CRC8 for Group 'Header'
Data	Payload of ESP3 packet
EEP	EnOcean Equipment Profile
ERP1, ERP2	EnOcean Radio Protocol. There are versions 1 and 2.
ESP3	EnOcean Serial Protocol V3
Field	Identifier of Data subset / element
Group	Part of ESP3 packet (header, data, optional data)
Host	ESP3 communication device
LSB	Least significant bit
Mailbox	Message filing of the Postmaster for each Smart Ack Sensor/Client
MSB	Most significant bit
Offset	Byte position pointer of packet
Packet	ESP3 data unit
Packet Type	Type of ESP3 Packet (Command, Event, Radio, ...)
PM	Postmaster
Postmaster	Includes multiple mailboxes for each Smart Ack Sensor/Client
R-ORG	Unique identification of radio telegram types
R-ORG_EN	Addressed version of 'R-ORG' (EN = encapsulation)
RS-232	Telecommunication standard for serial binary single-ended data and control signals; ESP3 use only the minimal "3-wire" RS-232 connection consisting only of transmit data, receive data, and ground. The full facilities of RS-232 are not required.
RSSI	Received signal strength indication (dBm)
Smart Ack	EnOcean standard for energy-optimized bidirectional transmission
Subtelegram	Smallest unit of data in radio transmission, using orthogonal structure
Sync Byte	Identifier for ESP3 packet start
UART	Universal Asynchronous Receiver Transmitter

1.2 Introduction

This document specifies the EnOcean Serial Protocol 3.0 (ESP3).

The ESP3 defines the serial communication between a host and EnOcean modules (based on Dolphin Platform). Hosts are external microcontrollers or PC's incl. software tools.

The physical interface between a host and a EnOcean RF module (UART) is a 3-wire connection (Rx, Tx, GND / software handshake / full-duplex), modelled on RS-232 serial interface.

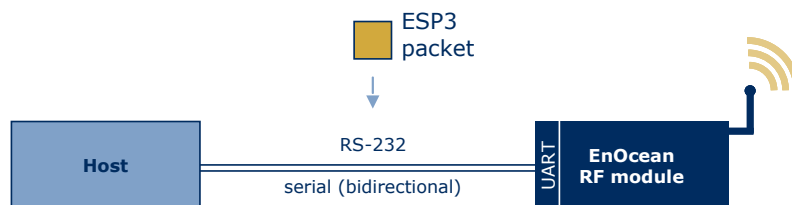


Figure 1

ESP3 enhances ESP2, adding future-proof structures and extending the data content. The new functional properties are:

- Transmission of the received radio signal strength and number of the received subtelegrams
- Future requirements can be realized flexibly with the packet group "Optional Data", without violating the compatibility
- Improved data security and consistency by CRC8 Data verification
- Higher reliable ESP3 packet detection at serial byte stream
- Approximately at least seven-time higher baud rate
- The standard baud rate is 57600. If the device supports an higher baudrate, the command SET_BAUDRATE can be used to modify it.

The ESP2/3 differences in summary:

	ESP 2.0	ESP 3.0
Subtelegram count	--	•
Receive signal strength (RSSI)	--	•
Upward compatible with 'Optional Data'	--	•
Data verification	Checksum	CRC8
UART Synchronization (packet detection)	2 bytes	6 bytes
Max. number of ESP packet types	8	256
Types of data	Radio, Command	Any type of data
Max. size of transferred data	28 bytes	65535 bytes
Communication speed	9600 baud	57600 baud 115200 baud 230400 baud 460800 baud

Table 1

1.3 Packet structure

ESP3 is a Point-to-Point protocol with a packet data structure.

This principle encapsulates actual user data (payload), Command, Event or Response messages.

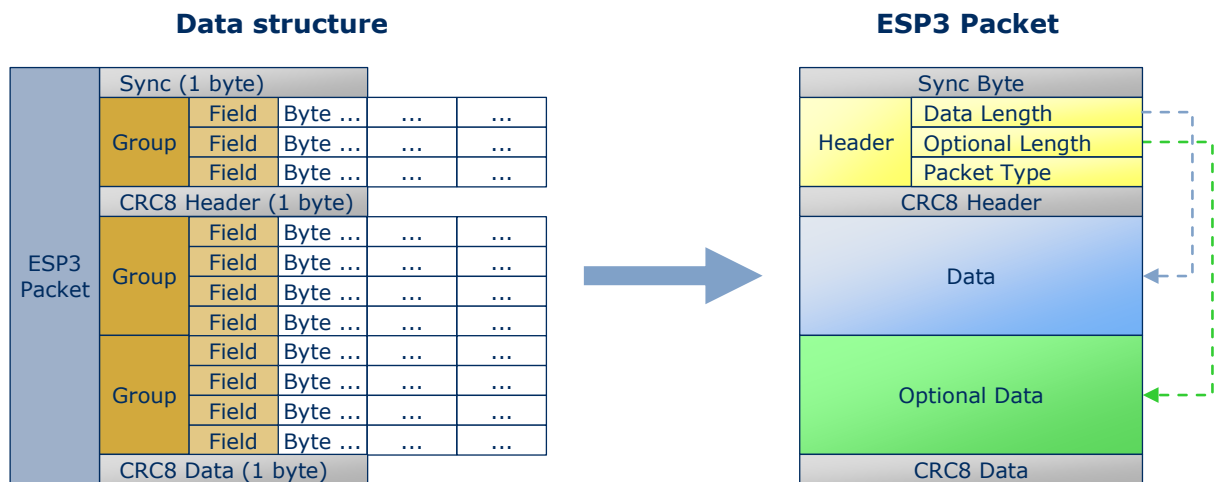


Figure 2

Every ESP3 packet consists of Header, Data and Optional Data.

The packet (frame) is divided into: Sync.-Byte (start), CRC8 for Header and CRC8 for Data (incl. Optional Data).

Every group consists of Fields, each with 1 or x bytes.

The ESP3 Header consists of the Fields:

- Data Length (number of bytes of the group Data)
- Optional Length (number of bytes of the group Optional Data)
- Packet Type (RADIO, RESPONSE, EVENT, COMMAND ...)

1.4 Upward compatibility

The ESP3 protocol is defined as a specific structure of Sync.-Byte, Header & CRC8, which should not be changed in future versions.

For each type of packet the content and the length of DATA is different.

Today's applications have to be compliant with later versions of the ESP3 protocol ensuring an upwards compatibility.

New software applications or devices might require the definition of new types of packet.

Existing packet types may be modified only via the field OPTIONAL_DATA. The field DATA is not to be changed.

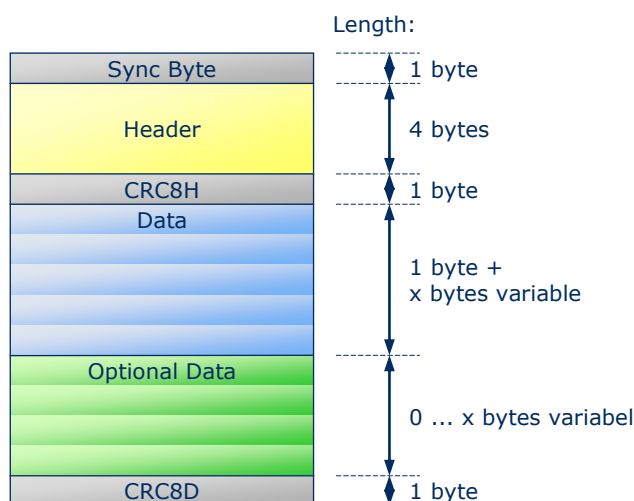


Figure 3

Existing devices will react as follows:

- Unknown packet types are confirmed with the RESPONSE message 'not supported' and will not be processed further.
- New fields in the Optional Data section of an existing packet type will be ignored; a RESPONSE message will not be sent.
- It is allowed to skip bytes (not transfer them) from optional fields when they are located at the end of the optional field.

Thus, backwards compatibility is secured.

1.5 UART framing

The UART of the EnOcean module has the framing: 8 data bits, no parity bit, one start bit (logical 0), one stop bit (logical 1). The line idle (Δ neutral) is logical 1 (standard).

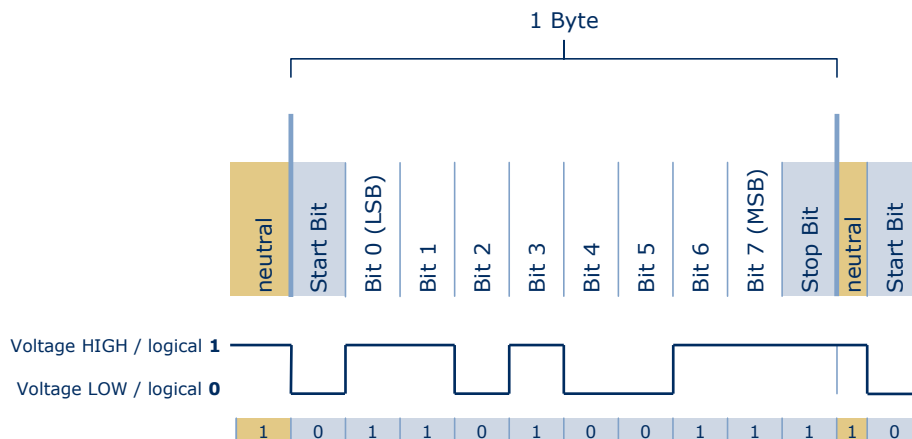


Figure 4

1.6 UART synchronization (packet detection)

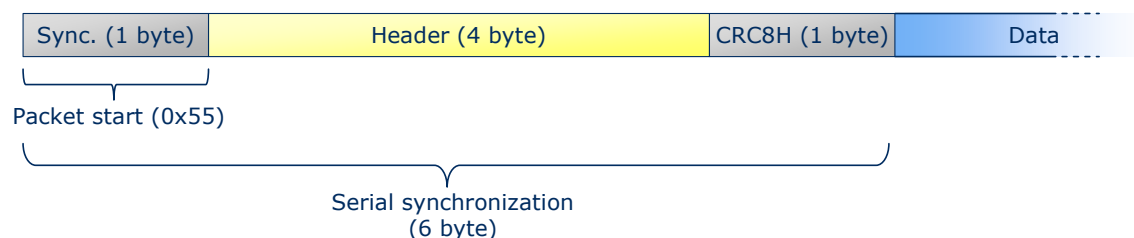


Figure 5

With ESP3 the reliability of the synchronization has been improved significantly:

As soon as a Sync.-Byte (value 0x55) is identified, the subsequent 4 byte-Header is compared with the corresponding CRC8H value.

If the result is a match the Sync.-Byte is correct. Consequently, the ESP3 packet is detected properly and the subsequent data will be passed.

If the Header does not match the CRC8H, the value 0x55 does not correspond to a Sync.-Byte. The next 0x55 within the data stream is picked and the verification is repeated.

The chapter 3.4 shows an example for a feasible implementation.

1.6.1 Packet description

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	Serial synchronization byte; always set to 0x55
Header	1	2	Data Length	0xn timer	Specifies how many bytes in DATA must be interpreted
	3	1	Optional Length	0xnn	Specifies how many bytes in OPTIONAL_DATA must be interpreted
	4	1	Packet Type	0xnn	Specifies the packet type of DATA, respectively OPTIONAL_DATA
-	5	1	CRC8H	0xnn	CRC8 Header byte; calculated checksum for bytes: DATA_LENGTH, OPTIONAL_LENGTH and TYPE
Data	6	x	Contains the actual data payload with topics: - RawData (e.g. 1:1 radio telegram) - Function codes + optional parameters - Return codes + optional parameters - Event codes x = variable length of DATA / byte number
Optional Data	6+x	y	Contains additional data that extends the field DATA; y = variable length of OPTIONAL_DATA
-	6+x+y	1	CRC8D	0xnn	CRC8 Data byte; calculated checksum for whole byte groups: DATA and OPTIONAL_DATA

Table 2

1.6.2 Packet types

Depending on the field [Packet Type] a different kind of packet is transmitted.

Type No.	Value hex	Name	Description
0	0x00	---	Reserved
1	0x01	RADIO_ERP1	Radio telegram
2	0x02	RESPONSE	Response to any packet
3	0x03	RADIO_SUB_TEL	Radio subtelegram
4	0x04	EVENT	Event message
5	0x05	COMMON_COMMAND	Common command
6	0x06	SMART_ACK_COMMAND	Smart Ack command
7	0x07	REMOTE_MAN_COMMAND	Remote management command
8	0x08	---	Reserved for EnOcean
9	0x09	RADIO_MESSAGE	Radio message
10	0x0A	RADIO_ERP2	ERP2 protocol radio telegram
11 ... 15	0x0A ... 0F	---	Reserved for EnOcean
16	0x10	RADIO_802_15_4	802_15_4 RAW Packet
17	0x11	COMMAND_2_4	2.4 GHz Command
18 ... 127	0x12 ... 0x1F	---	Reserved for EnOcean
128...255	0x80 ... FF	available	MSC and messages

Table 3

1.6.3 Direction of packet types

The function and the properties of a packet type determine the direction of the ESP3 data traffic, and whether a RESPONSE message is required or not.

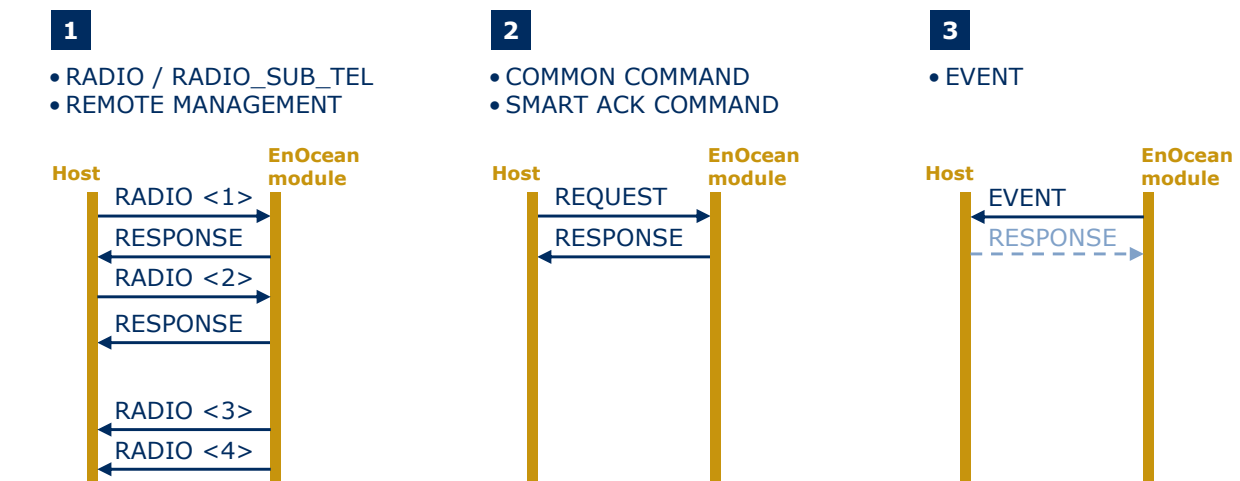


Figure 6

Case 1: ESP3 packets of the type RADIO_ERP1, RADIO_SUB_TEL or REMOTE_MAN pass bidirectionally across the serial interface. After sending a packet (host -> module) it is mandatory to wait for the RESPONSE message, only then the telegram is passed correctly via the radio interface. After receiving (module -> host) a packet no RESPONSE is required (see RADIO_ERP1 no. <3> and <4>).

Case 2: Only a host sends a ESP3 COMMAND (COMMON, SMART ACK) to an EnOcean module. Each REQUEST is answered with a RESPONSE message (OK, error, etc.). The reverse direction module-to-host is not possible.

Case 3: Only an EnOcean module sends an EVENT to a host. The type of the EVENT defines whether a RESPONSE message is required or not.

1.6.4 ESP3 Timeout

A timeout in an ESP3 packet is defined as soon as the time between two characters exceeds 100ms.

If the answer time between REQUEST/EVENT and RESPONSE exceeds 500ms a timeout is identified as well.

2 ESP3 Command Description

2.1 Packet Type 1: RADIO_ERP1

2.1.1 Packet structure

The ERP1 radio telegram (raw data) is embedded into the ESP3 packet.
 The actual user data (variable length) is a subset of the radio telegram.

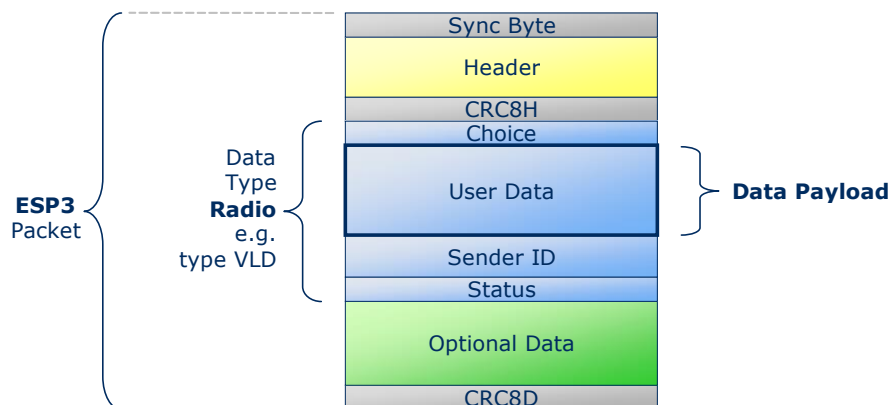


Figure 7

The following structure is applicable to all types of radio telegrams:

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0xnnnn	Variable length of radio telegram
	3	1	Optional Length	0x07	7 fields fixed
	4	1	Packet Type	0x01	RADIO_ERP1 = 1
-	5	1	CRC8H	0xnn	
Data	6	x	Radio telegram without checksum/CRC x = variable length / size
Optional Data	6+x	1	SubTelNum	0xnn	Number of subtelegram; Send: 3 / receive: 1 ... y
	7+x	4	Destination ID	0xnnnnnnnn	Broadcast transmission: FF FF FF FF Addressed transmission (ADT): Destination ID (= address)
	11+x	1	dBm	0xnn	Send case: FF Receive case: best RSSI value of all received subtelegrams (value decimal without minus)
	12+x		Security Level	0x0n	Send Case: Will be ignored (Security is selected by link table entries) Receive case: 0 = telegram not processed 1 = Obsolete (old security concept) 2 = Telegram decrypted 3 = Telegram authenticated 4 = Telegram decrypted + authenticated
-	13+x	1	CRC8D	0xnn	CRC8 Data byte; calculated checksum for whole byte groups: DATA and OPTIONAL_DATA

Table 4

When receiving a telegram, no RESPONSE has to be sent. When sending a telegram, a RESPOND has to be expected. In this case, the following **RESPONSE** message gives the return codes:

00 RET_OK
02 RET_NOT_SUPPORTED
03 RET_WRONG_PARAM
05 RET_LOCK_SET

When there is no additional data included that have to be described, the standard RESPONSE structure is used as detailed in chapter 2.2.3

Note:

- Security: When sending an Addressed Radio Packet (ADT Telegram) the used security features will be determined by the Secure Link Table. Security level field in ESP3 will not have any influence in send case.
If the destination address is setup in the outbound table then the configured Security features will be used.
If the destination address is not setup in the outbound link table then Security Level 0x00 (no encryption/authentication) will be used.

2.1.2 Radio variants (examples)

Out of the numerous variants of the RADIO_ERP1 packet, described in other documents, only a few examples are described here. These examples describe the structure of DATA on the ESP3 interface. On the radio link specifically the ADT telegram has a different structure (e.g. R-ORG_EN).

RADIO (VLD)

Group	Offset	Size	Field	Value hex	Description
Data	6	1	R-ORG	0xD2	Radio type VLD = D2
	7	x	User Data	0xnn...0xnn	1 ... 14 byte data payload
	7+x	4	Sender ID	0xnnnnnnnn	Unique device sender ID
	11+x	1	Status	0xnn	Telegram control bits – used in case of repeating, switch telegram encapsulation, checksum type identification

Table 5

RADIO (ADT) Addressing Destination Telegram

Group	Offset	Size	Field	Value hex	Description
Data	6	1	R-ORG	0xA6	Radio type, e.g. ADT = A6, 4BS = 0xA5
	7	x	User Data	0xnn...0xnn	1 ... 9 byte data payload
	7+x	4	Sender ID	0xnnnnnnnn	Unique device sender ID
	11+x	1	Status	0xnn	Telegram control bits – used in case of repeating, switch telegram encapsulation, checksum type identification
Optional Data	6+x	1	SubTelNum	0xnn	Number of sub telegram; Send: 3 / receive: 1 ... y
	7+x	4	Destination ID	0xnnnnnnnn	Addressed transmission (ADT): Destination ID (= address)
	11+x	1	dBm	0xnn	Send case: FF Receive case: best RSSI value of all received subtelegrams (value decimal without minus)
	12+x	1	Security Level	0x0n	Send Case: Will be ignored (Security is selected by link table entries) Receive case: 0 = telegram not processed 1 = Obsolete (old security concept) 2 = Telegram decrypted 3 = Telegram authenticated 4 = Telegram decrypted + authenticated

Table 6

RADIO (4BS) / EEP profile 07-02-14

Group	Offset	Size	Field	Value hex	Description
Data	6	1	R-ORG	0xA5	Radio type 4BS
	7	1	Data Byte 3	0x00	Unused in this EEP profile
	8	1	Data Byte 2	0x00	Unused in this EEP profile
	9	1	Data Byte 1	0xnn	Temperature value 255 ... 0
	10	1	Data Byte 0	0b0000n000	DB_0.BIT 3 = Learn Bit Normal mode = 1 / Teach In = 0
	11	4	Sender ID	0xnnnnnnnn	Unique device sender ID
	15	1	Status	0xnn	Telegram control bits – used in case of

					repeating, switch telegram encapsulation, checksum type identification
--	--	--	--	--	---

Table 7

2.2 Packet Type 2: RESPONSE

2.2.1 Packet structure

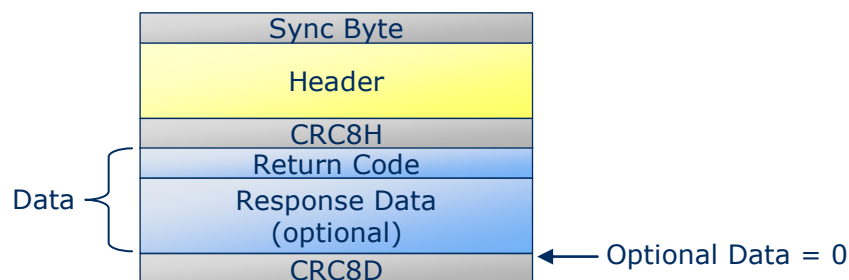


Figure 8

The properties of the preceding command and the re-delivered return-code determine whether optional response data are included, or only the return code itself.

2.2.2 List of Return Codes

Code	Name	Description
00	RET_OK	OK ... command is understood and triggered
01	RET_ERROR	There is an error occurred
02	RET_NOT_SUPPORTED	The functionality is not supported by that implementation
03	RET_WRONG_PARAM	There was a wrong parameter in the command
04	RET_OPERATION_DENIED	Example: memory access denied (code-protected)
05	RET_LOCK_SET	Duty cycle lock
06	RET_BUFFER_TOO_SMALL	The internal ESP3 buffer of the device is too small, to handle this telegram
07	RET_NO_FREE_BUFFER	Currently all internal buffers are used.
> 128	---	Return codes greater than 0x80 are used for commands with special return information, not commonly useable.

Table 8

2.2.3 Standard Response Structure

Example of standard RESPONSE with RET_OK (without response data)

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0001	Data = 1 byte
	3	1	Optional Length	0x00	Optional Data = 0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
Data	6	1	Return Code	0x00	RET_OK
-	7	1	CRC8D	0xnn	

Table 9

Specific variants of the response messages are described in the chapter of the command.

2.3 Packet Type 3: RADIO_SUB_TEL

This ESP3 packet type is functionality internal to EnOcean; it is applied for e.g. diagnosis or statistics. The packet design corresponds to the type RADIO_ERP1. The content of the OPTIONAL_DATA is altered slightly.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0xnnnn	Variable length of radio subtelegram
	3	1	Optional Length	0xnn	9 + x + 3*s bytes x = variable length radio subtelegram s = number of subtelegram
	4	1	Packet Type	0x03	RADIO_SUB_TEL = 3
-	5	1	CRC8H	0xnn	
Data	6	x	Radio telegram without checksum/CRC x = variable length / size
Optional Data	6+x	1	SubTelNum	0xnn	actual sequence number of subtelegrams (1 ... y); Repeated telegrams will be added
	7+x	4	Destination ID	0xnnnnnnnn	Broadcast transmission: FF FF FF FF Addressed transmission (ADT): Destination ID (= address)
	11+x	1	dBm	0xnn	Send case: FF Receive case: best RSSI value of all received subtelegrams (value decimal without minus)
	12+x	1	Security Level	0x0n	Send Case: Will be ignored (Security is selected by link table entries) Receive case: 0 = telegram not processed 1 = Obsolete (old security concept) 2 = Telegram decrypted 3 = Telegram authenticated 4 = Telegram decrypted + authenticated
	13+x	2	TimeStamp	0xnnnn	Timestamp of 1 st subtelegram is the system timer tick [ms] (2 byte lower address)
	15+x+ +s	1	Tick SubTel	0xnn	Relative time [ms] of each subtelegram in relation to the TimeStamp
	15+x +2*s	1	dBm SubTel	0xnn	RSSI value of each subtelegram
	15+x +3*s	1	Status SubTel	0xnn	Telegram control bits of each subtelegram – used in case of repeating, switch telegram encapsulation, checksum type identification
	15+x +4*s	1	CRC8D	0xnn	

Table 10

Every received subtelegram has the group **s** with fields in the order: Tick SubTel, dBm SubTel, Status SubTel (s = also number of subtelegram / multiplier to calculate the offset).

When receiving a telegram, no RESPONSE has to be sent. When sending a telegram, a RESPONSE has to be expected. In this case, the following **RESPONSE** message gives the return codes:

00 RET_OK
 02 RET_NOT_SUPPORTED
 03 RET_WRONG_PARAM
 05 RET_LOCK_SET

When there is no additional data included that have to be described, the standard RESPONSE structure is used as detailed in chapter 2.2.3

2.4 Packet Type 4: EVENT

2.4.1 Structure

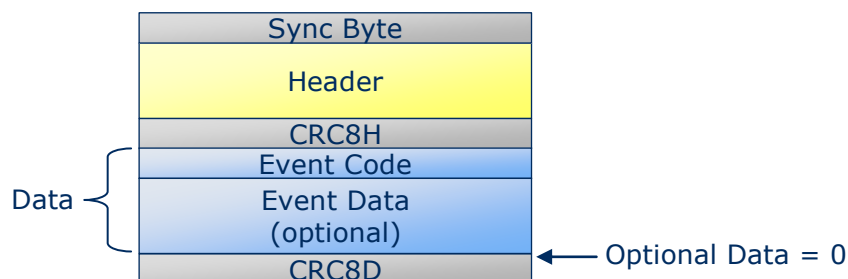


Figure 9

An EVENT is primarily a confirmation for processes and procedures, incl. specific data content.

2.4.2 List of EVENT Codes

Code	Name	Description
01	SA_RECLAIM_NOT_SUCCESSFUL	Informs the backbone of a Smart Ack Client about an unsuccessful reclaim.
02	SA_CONFIRM_LEARN	Used for SMACK to confirm/discard learn in/out
03	SA_LEARN_ACK	Inform backbone about result of learn request
04	CO_READY	Inform backbone about the readiness for operation
05	CO_EVENT_SECUREDEVICES	Informs about a secure device
06	CO_DUTYCYCLE_LIMIT	Informs about duty cycle limit
07	CO_TRANSMIT_FAILED	Informs that the device was not able to send a telegram.

Table 11

2.4.3 Code 01: SA_RECLAIM_NOT_SUCCESSFUL

Function: Informs the backbone of a Smart Ack Client about an unsuccessful reclaim.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0001	1 byte
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x04	EVENT = 4
-	5	1	CRC8H	0xnn	
Data	6	1	Event Code	0x01	SA_RECLAIM_NOT_SUCCESSFUL = 1
-	7	1	CRC8D	0xnn	

Table 12

Following described **RESPONSE** applies to return codes:

00: RET_OK

01: RET_ERROR

02: RET_NOT_SUPPORTED

03: RET_WRONG_PARAM

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0001	1 byte
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
Data	6	1	Return Code	0xnn	00, 01, 02, 03
-	7	1	CRC8D	0xnn	

Table 13

2.4.4 Code 02: SA_CONFIRM_LEARN

Function: Request to backbone controller how to handle the received learn request.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0011	17 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x04	EVENT = 4
-	5	1	CRC8H	0xnn	
Data	6	1	Event Code	0x02	SA_CONFIRM_LEARN = 2
	7	1	Priority of the postmaster candidate	0xnn	Already post master 0b xxxx 1xxx Place for mailbox 0b xxxx x1xx Good RSSI 0b xxxx xx1x Local 0b xxxx xxx1
	8	1	2 ² ... 2 ⁰ : Manufacturer ID 2 ⁷ ... 2 ³ : Res.	0b00000nnn	nnn = Most significant 3 bits of the Manufacturer ID 00000 = reserved
	9	1	Manufacturer ID	0xnn	Least significant bits of the Manufact. ID
	10	3	EEP	0xnnnnnn	Code of used EEP profile
	13	1	RSSI	0xnn	Signal strength; Send case: FF Receive case: actual RSSI
	14	4	Postmaster Candidate ID	0xnnnnnnnn	Device ID of the Post master candidate
	18	4	Smart Ack ClientID	0xnnnnnnnn	This sensor would be Learn IN
	22	1	Hop Count	0xnn	Numbers of repeater hop
-	23	1	CRC8D	0xnn	

Table 14

Following described **RESPONSE** applies to return code:

00: RET_OK

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0004	4 byte
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
Data	6	1	Return Code	0x00	RET_OK = 0
	7	2	Response time	0xnnnn	Response time for Smart Ack Client in ms in which the controller can prepare the data and send it to the postmaster. Only actual if learn return code is Learn IN
	9	1	Confirm code	0xnn	0x00 Learn IN 0x11 Discard Learn IN, EEP not accepted 0x12 Discard Learn IN, PM has no place for further mailbox 0x13 Discard Learn IN, Controller has no place for new sensor 0x14 Discard Learn IN, RSSI was not good enough 0x20 Learn OUT 0xFF Function not supported
	10	1	CRC8D	0xnn	

Table 15

For **RESPONSE** with return codes: **01** RET_ERROR, **02** RET_NOT_SUPPORTED, **03** RET_WRONG_PARAM is the structure described by the chapter: 2.2.3

2.4.5 Code 03: SA_LEARN_ACK

Function: Informs Smart Ack client about the result of a previous sent learn request.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0004	4 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x04	EVENT = 4
-	5	1	CRC8H	0xnn	
Data	6	1	Event Code	0x03	SA_LEARN_ACK = 3
	7	2	Response time	0xnnnn	Response time for Smart Ack Client in ms in which the controller can prepare the data and send it to the postmaster. Only actual if learn return code is Learn IN
	9	1	Confirm code	0xnn	0x00 Learn IN 0x11 Discard Learn IN, EEP not accepted 0x12 Discard Learn IN, PM has no place for further MB 0x13 Discard Learn IN, Controller has no place for new sensor 0x14 Discard Learn IN, RSSI was not good enough 0x20 Learn OUT
-	10	1	CRC8D	0xnn	

Table 16

In this case, the following **RESPONSE** message gives the return codes:

00 RET_OK
02 RET_NOT_SUPPORTED
03 RET_WRONG_PARAM

Since no additional data are included, that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.4.6 Code 04: CO_READY

Function: Informs backbone about the readiness for operation.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0002	2 bytes
	3	1	Optional Length	0x00	1 byte
	4	1	Packet Type	0x04	EVENT = 4
-	5	1	CRC8H	0xnn	
Data	6	1	Event Code	0x04	CO_READY = 4
	7	1	Reset Cause	0xnn	00 = Voltage supply drop or indicates that VDD > VON 01 = Reset caused by usage of the reset pin (is set also after downloading the program with the programmer) 02 = Watchdog timer counter reached the timer period 03 = Flywheel timer counter reached the timer period 04 = Parity error 05 = HW Parity error in the Internal or External Memory 06 = A memory request from the CPU core does not correspond to any valid memory location. This error may be caused by a S/W malfunction. 07 = Wake-up pin 0 activated 08 = Wake-up pin 1 activated 09 = Unknown reset source – reset reason couldn't be detected
Optional Data	8	1	Mode	0xnn	00 = Standard Security 01 = Extended Security
-	8	1	CRC8D	0xnn	

Table 17

This EVENT does not require any RESPONSE message.

2.4.7 Code 05: CO_EVENT_SECUREDEVICES

Function: Informs backbone about events regarding a secure device

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0006	6 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x04	EVENT = 4
-	5	1	CRC8H	0xnn	
Data	6	1	Event Code	0x05	CO_EVENT_SECUREDEVICES = 5
	7	1	Event Cause	0xnn	00 = Teach in failed, because no more space available 01 = reserved 02 = Resynchronization attempt with wrong private key 03 = Configured count of telegrams with wrong CMAC received 04 = Teach-In failed. Telegram corrupted. 05 = PSK Teach-In failed. No PSK is set for the device 06 = Teach-In failed. Trying to teach-in without Pre-Shared Key even if the PSK is set for the device 07 = CMAC or RLC not correct 08 = Standard Telegram from device in secure link table 09..255 = reserved
	8	4	Device ID	0xnnnnnnnn	Device ID
-	12	1	CRC8D	0xnn	

Table 18

This EVENT does not require any RESPONSE message.

2.4.8 Code 06: CO_DUTYCYCLE_LIMIT

Function: Informs backbone about duty cycle limit

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0002	2 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x04	EVENT = 4
-	5	1	CRC8H	0xnn	
Data	6	1	Event Code	0x06	CO_DUTYCYCLE_LIMIT = 6
	7	1	Event Cause	0xnn	00 = Duty cycle limit released, it's possible to send telegrams 01 = Duty cycle limit reached, no more telegram will be sent 02...255 = reserved
-	8	1	CRC8D	0xnn	

Table 19

This EVENT does not require any RESPONSE message.

2.4.9 Code 07: CO_TRANSMIT_FAILED

Function: Informs that the device was not able to send a telegram

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0002	2 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x04	EVENT = 4
-	5	1	CRC8H	0xnn	
Data	6	1	Event Code	0x07	CO_TRANSMIT_FAILED = 7
	7	1	Event Cause	0xnn	00 = CSMA failed, channel was never free 01 = No Acknowledge received, telegram was transmitted, but no ack received. 02...255 = reserved
-	8	1	CRC8D	0xnn	

Table 20

This EVENT does not require any RESPONSE message.

2.5 Packet Type 5: COMMON_COMMAND

2.5.1 Structure

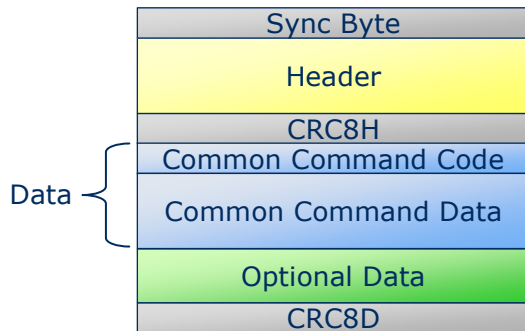


Figure 10

2.5.2 List of COMMON_COMMAND Codes

Code	Function Name	Description
01	CO_WR_SLEEP	Order to enter in energy saving mode
02	CO_WR_RESET	Order to reset the device
03	CO_RD_VERSION	Read the device (SW) version / (HW) version, chip ID etc.
04	CO_RD_SYS_LOG	Read system log from device databank
05	CO_WR_SYS_LOG	Reset System log from device databank
06	CO_WR_BIST	Perform Flash BIST operation
07	CO_WR_IDBASE	Write ID range base number
08	CO_RD_IDBASE	Read ID range base number
09	CO_WR_REPEATER	Write Repeater Level off,1,2
10	CO_RD_REPEATER	Read Repeater Level off,1,2
11	CO_WR_FILTER_ADD	Add filter to filter list
12	CO_WR_FILTER_DEL	Delete filter from filter list
13	CO_WR_FILTER_DEL_ALL	Delete all filters
14	CO_WR_FILTER_ENABLE	Enable/Disable supplied filters
15	CO_RD_FILTER	Read supplied filters
16	CO_WR_WAIT_MATURITY	Waiting till end of maturity time before received radio telegrams will transmitted
17	CO_WR_SUBTEL	Enable/Disable transmitting additional subtelegram info
18	CO_WR_MEM	Write x bytes of the Flash, XRAM, RAM0
19	CO_RD_MEM	Read x bytes of the Flash, XRAM, RAM0
20	CO_RD_MEM_ADDRESS	Feedback about the used address and length of the config area and the Smart Ack Table
21	CO_RD_SECURITY	DEPRECIATED Read own security information (level, key)
22	CO_WR_SECURITY	DEPRECIATED Write own security information (level, key)
23	CO_WR_LEARNMODE	Enable/disable learn mode
24	CO_RD_LEARNMODE	Read learn mode
25	CO_WR_SECUREDEVICE_ADD	Add a secure device
26	CO_WR_SECUREDEVICE_DEL	Delete a secure device
27	CO_RD_SECUREDEVICE_BY_INDEX	Read secure device by index
28	CO_WR_MODE	Sets the gateway transceiver mode
29	CO_RD_NUMSECUREDEVICES	Read number of taught in secure devices
30	CO_RD_SECUREDEVICE_BY_ID	Read secure device by ID

31	CO_WR_SECUREDEVICE_ADD_PSK	Add Pre-shared key for inbound secure device.
32	CO_WR_SECUREDEVICE_SENDTEACHIN	Send secure Teach-In message.
33	CO_WR_TEMPORARY_RLC_WINDOW	Set the temporary rolling-code window for every taught-in device
34	CO_RD_SECUREDEVICE_PSK	Read PSK
35	CO_RD_DUTYCYCLE_LIMIT	Read parameters of actual duty cycle limit
36	CO_SET_BAUDRATE	Modifies the baud rate of the EnOcean device
37	CO_GET_FREQUENCY_INFO	Reads Frequency and protocol of the Device
38	Reserved	
39	CO_GET_STEPCODE	Reads Hardware Step code and Revision of the Device
40	Reserved	
41	Reserved	
42	Reserved	
43	Reserved	
44	Reserved	
45	Reserved	
46	CO_WR_REMAN_CODE	Sets secure code to unlock Remote Management functionality by radio
47	CO_WR_STARTUP_DELAY	Sets the startup delay: the time before the system initializes
48	CO_WR_REMAN_REPEATING	Select if REMAN telegrams originating from this module can be repeated
49	CO_RD_REMAN_REPEATING	Check if REMAN telegrams originating from this module can be repeated
50	CO_SET_NOISETHRESHOLD	Sets the RSSI noise threshold level for telegram detection
51	CO_GET_NOISETHRESHOLD	Gets the RSSI noise threshold level for telegram detection

Table 21

2.5.3 Code 01: CO_WR_SLEEP

Function: Order to enter the energy saving mode.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0005	5 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x01	CO_WR_SLEEP = 1
	7	4	Deep sleep period	0x00nnnnnn	Period in 10 ms units 00000000 = default max. value = max. data range 00 FF FF FF (~ 46h); After waking up, the module generate an internal hardware reset
-	11	1	CRC8D	0xnn	

Table 22

In this case, the following **RESPONSE** message gives only the return codes:

00 RET_OK

02 RET_NOT_SUPPORTED

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.5.4 Code 02: CO_WR_RESET

Function: Order to reset the device.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0001	1 byte
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x02	CO_WR_RESET = 2
-	7	1	CRC8D	0xnn	

Table 23

In this case, the following **RESPONSE** message gives only the return codes:

00 RET_OK

01 RET_ERROR

02 RET_NOT_SUPPORTED

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.5.5 Code 03: CO_RD_VERSION

Function: Read the device SW version / HW version, chip-ID, etc.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0001	1 byte
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x03	CO_RD_VERSION = 3
-	7	1	CRC8D	0xnn	

Table 24

Following described **RESPONSE** applies to return code:

00: RET_OK

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0021	33 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
Data	6	1	Return Code	0x00	RET_OK = 0
	7	4	APP version	0xnnnnnnnn	Application Byte 1: Main version Byte 2: Beta version Byte 3: Alpha version Byte 4: Build
	11	4	API version	0xnnnnnnnn	Application Programming Interface Byte 1: Main version Byte 2: Beta version Byte 3: Alpha version Byte 4: Build
	15	4	Chip ID	0xnnnnnnnn	Unique ID
	19	4	Chip Version	0xnnnnnnnn	Reserved for internal use
	23	16	App. description	char. ASCII	8 bit ASCII / 16 characters; Null-terminated string
-	39	1	CRC8D	0xnn	

Table 25

For **RESPONSE** with return code:

02 RET_NOT_SUPPORTED is the standard structure described in the chapter 2.2.3

2.5.6 Code 04: CO_RD_SYS_LOG

Function: Read System Log from device databank.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0001	1 byte
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x04	CO_RD_SYS_LOG = 4
-	7	1	CRC8D	0xnn	

Table 26

Following described **RESPONSE** applies to return code:

00: RET_OK

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0xnnnn	1+x bytes
	3	1	Optional Length	0xnn	y bytes
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
Data	6	1	Return Code	0x00	RET_OK = 0
	7	x	API Log entry 000	0xnn	Log entry 000 - xxx in DATA: Log counter of API
			API Log entry 001	0xnn	
			API Log entry 002	0xnn	
			
Optional Data	7+x	y	APP Log entry 000	0xnn	Log entry 000 - xxx in OPTIONAL_DATA: Log counter of APP
			APP Log entry 001	0xnn	
			APP Log entry 002	0xnn	
			
			
-	7+x+y	1	CRC8D	0xnn	

Table 27

After a reset, the counters starts with FF and decrement with each new EVENT down to 00 and will stopped. With a reset command the counter starts again with FF.

For **RESPONSE** with return code:

02 RET_NOT_SUPPORTED is the standard structure described in the chapter 2.2.3

2.5.7 Code 05: CO_WR_SYS_LOG

Function: Reset System Log from device databank.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0001	1 byte
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x05	CO_WR_SYS_LOG = 5
-	7	1	CRC8D	0xnn	

Table 28

In this case, the following **RESPONSE** message gives only the return codes:

00 RET_OK

02 RET_NOT_SUPPORTED

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.5.8 Code 06: CO_WR_BIST

Function: Perform Flash BIST operation (Built-in-self-test).

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0001	1 byte
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x06	CO_WR_BIST = 6
-	7	1	CRC8D	0xnn	

Table 29

Following described **RESPONSE** applies to return code:

00: RET_OK

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0002	2 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
Data	6	1	Return Code	0x00	RET_OK = 0
	7	1	BIST result	0xnn	BIST OK = 0, BIST failed = other value
-	8	1	CRC8D	0xnn	

Table 30

For **RESPONSE** with return code:

02 RET_NOT_SUPPORTED is the standard structure described in the chapter 2.2.3

2.5.9 Code 07: CO_WR_IDBASE

Function: Write ID range base number.



IMPORTANT: This function can only be called 10 times to change the base ID. There is no possibility to reset this constraint. Also power off/on will not allow more than 10 changes!

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0005	5 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x07	CO_WR_IDBASE = 7
	7	4	Base ID	0xFFnnnnnn	Range between 0xFF800000 and 0xFFFFFFFF80
-	11	1	CRC8D	0xnn	

Table 31

RESPONSE:

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0001	1 byte
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
Data	6	1	Return Code	0xnn	RET_OK = 0x00 RET_NOT_SUPPORTED = 0x02 FLASH_HW_ERROR = 0x82 The write/erase/verify process failed, the flash page seems to be corrupted BASEID_OUT_OF_RANGE = 0x90 BASEID_MAX_REACHED = 0x91 (BaseID was changed 10 times, no more changes are allowed)
-	7	1	CRC8D	0xnn	

Table 32

2.5.10 Code 08: CO_RD_IDBASE

Function: Read ID range base number.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0001	1 byte
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x08	CO_RD_IDBASE = 8
-	7	1	CRC8D	0xnn	

Table 33

Following described **RESPONSE** applies to return code:

00: RET_OK

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0005	5 bytes
	3	1	Optional Length	0x01	1 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
Data	6	1	Return Code	0x00	RET_OK = 0
	7	4	Base ID	0xFFnnnnnn	Range between 0xFF800000 and 0xFFFFFFFF80
Optional Data	8	1	Remaining write cycles for Base ID	0xnn	Remaining write cycles for Base ID
-	9	1	CRC8D	0xnn	

Table 34

For **RESPONSE** with return code:

02 RET_NOT_SUPPORTED is the standard structure described in the chapter 2.2.3

2.5.11 Code 09: CO_WR_REPEATER

Function: Write Repeater Level OFF, 1, 2.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0003	3 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x09	CO_WR_REPEATER = 09
	7	1	REP_ENABLE	0x00...0x02	Repeater OFF = 0, ON all = 1, ON filtered = 2
	8	1	REP_LEVEL	0x00...0x02	When Repeater OFF must be 0, when ON then 1 for Level-1 , 2 for Level-2
-	9	1	CRC8D	0xnn	

Table 35

In this case, the following **RESPONSE** message gives only the return codes:

00 RET_OK

02 RET_NOT_SUPPORTED

03 RET_WRONG_PARAM

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.5.12 Code 10: CO_RD_REPEATER

Function: Read Repeater Level OFF, 1, 2.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0001	1 byte
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x0A	CO_RD_REPEATER = 10
-	7	1	CRC8D	0xnn	

Table 36

Following described **RESPONSE** applies to return code:

00: RET_OK

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0003	3 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
Data	6	1	Return Code	0x00	RET_OK = 0
	7	1	REP_ENABLE	0x00...0x02	Repeater OFF = 0, ON all = 1, ON filtered = 2
	8	1	REP_LEVEL	0x00...0x02	Repeater OFF = 0, 1 for Level-1, 2 for Level-2
-	9	1	CRC8D	0xnn	

Table 37

For **RESPONSE** with return code:

02 RET_NOT_SUPPORTED is the standard structure described in the chapter: 2.2.3

2.5.13 Code 11: CO_WR_FILTER_ADD

Function: Add filter to filter list.

Info on filters:

ALL and OR composition are logical operation on the result of each filter. Each result of each filter is then OR or ALL operated.

BLOCK is the negation result of the filter operation.

Two example use cases:

Only allow certain ids, use an OR composition and APPLY filter for the ids.

Block certain ids, use an AND composition and BLOCK filter for the ids.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0007	7 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x0B	CO_WR_FILTER_ADD = 11
	7	1	Filter type	0x00...0x03	Device source ID = 0, R-ORG = 1, dBm = 2, destination ID = 3
	8	4	Filter value	0xnnnnnnnn	Value of filter function 'compare': - device source or destination ID - R-ORG - dBm value RSSI of radio telegram (unsigned, but interpreted as negative dBm value)
	12	1	Filter kind	0x00 0x80 0x40 0xC0	blocks radio interface = 0x00 apply radio interface = 0x80 blocks filtered repeating = 0x40 apply filtered repeating = 0xC0
-	13	1	CRC8D	0xnn	

Table 38

In this case, the following **RESPONSE** message gives the return codes:

00 RET_OK

01 RET_ERROR (memory space full)

02 RET_NOT_SUPPORTED

03 RET_WRONG_PARAM

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter: 2.2.3

Some examples for filters:

```
//BLOCKS specified ID
Filter_type = 0x0 (ID)
Filter_value = 0x12345678 (device source ID)
Filter_kind = 0x00 (block)
```

```
//BLOCKS all other IDs besides specified ID
Filter_type = 0x00 (ID)
Filter_value = 0x12345678 (device source ID)
Filter_kind = 0x80 (apply)
```

```
//BLOCKS telegrams with specified R-ORG
Filter_type = 0x01 (R-ORG)
Filter_value = 0xA5 (4BS)
Filter_kind = 0x00 (block)
```

```
//BLOCKS all other telegrams besides telegrams with specified R-ORG
Filter_type = 0x01 (R-ORG)
Filter_value = 0xA5 (4BS)
Filter_kind = 0x80 (apply)
```

```
//BLOCKS signals weaker than -70dBm
Filter_type = 0x02 (dBm)
Filter_value = 0x00000046 (dec 70)
Filter_kind = 0x00 (block)
```

```
//BLOCKS signals stronger than -70dBm
Filter_type = 0x02 (dBm)
Filter_value = 0x00000046 (dec 70)
Filter_kind = 0x80 (apply)
```

```
//Repeats only specified ID (when filtered repeating is ON)
Filter_type = 0x00 (ID)
Filter_value = 0x12345678 (device source ID)
Filter_kind = 0xC0 (apply for filtered repeating)
```

```
//Does not repeat telegrams with specified R-ORG (when filtered repeating is ON)
Filter_type = 0x01 (R-ORG)
Filter_value = 0xA5 (4BS)
Filter_kind = 0x40 (block for filtered repeating)
```

```
// Does not repeat signals stronger than -70dBm (when filtered repeating is ON)
Filter_type = 0x02 (dBm)
Filter_value = 0x00000046 (dec 70)
Filter_kind = 0xC0 (apply for filtered repeating)
```

2.5.14 Code 12: CO_WR_FILTER_DEL

Function: Delete filter from filter list.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0006	6 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x0C	CO_WR_FILTER_DEL = 12
	7	1	Filter type	0x00...0x03	Device source ID = 0, R-ORG = 1, dBm = 2, destination ID = 3
	8	4	Filter value	0xnnnnnnnn	Value of filter function 'compare': - device source or destination ID - R-ORG - dBm value RSSI of radio telegram (unsigned, but interpreted as negative dBm value)
-	12	1	CRC8D	0xnn	

Table 39

In this case, the following **RESPONSE** message gives the return codes:

```
00 RET_OK
01 RET_ERROR
02 RET_NOT_SUPPORTED
03 RET_WRONG_PARAM
```

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter: 2.2.3

2.5.15 Code 13: CO_WR_FILTER_DEL_ALL

Function: Delete all filters from filter list.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0001	1 byte
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x0D	CO_WR_FILTER_DEL = 13
-	7	1	CRC8D	0xnn	

Table 40

In this case, the following **RESPONSE** message gives only the return codes:

```
00 RET_OK
02 RET_NOT_SUPPORTED
```

Since no additional data are included which require description the standard RESPONSE structure is detailed in chapter: 2.2.3

2.5.16 Code 14: CO_WR_FILTER_ENABLE

Function: Enable/Disable all supplied filters.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0003	3 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x0E	CO_WR_FILTER_ENABLE = 14
	7	1	Filter ON/OFF	0x00	All radio interface filter disable = 0 (OFF)
				0x01	All radio interface filter enable = 1 (ON)
	8	1	Filter Operator	0x00	OR composition of all filters = 0
				0x01	AND composition of all filters = 1
				0x08	OR for radio interface filters; AND for filtered repeating filters = 8
				0x09	AND for radio interface filters; OR for filtered repeating filters = 9
-	9	1	CRC8D	0xnn	

Table 41

In this case, the following **RESPONSE** message gives the return codes:

00 RET_OK

02 RET_NOT_SUPPORTED

03 RET_WRONG_PARAM

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter: 2.2.3

2.5.17 Code 15: CO_RD_FILTER

Function: Read supplied filters.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0001	1 byte
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x0F	CO_RD_FILTER = 15
-	7	1	CRC8D	0xnn	

Table 42

Following described **RESPONSE** applies to return code:

00: RET_OK

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0xnnnn	1 + 5*f bytes (f = number of filters)
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
Data	6	1	Return Code	0x00	RET_OK = 0
	7+5*f	1	Filter type	0xnn	Device ID = 0, R-ORG = 1, dBm = 2
	8+5*f	4	Filter value	0xnnnnnnnn	Value of filter function 'compare': - device ID - R-ORG - RSSI of radio telegram in dBm
-	12+5*f	1	CRC8D	0xnn	

Table 43

Every supplied filter has the group **f** with fields in the order: filter type, filter value.

For **RESPONSE** with return code:

02 RET_NOT_SUPPORTED is the standard structure described in the chapter 2.2.3

2.5.18 Code 16: CO_WR_WAIT_MATURITY

Function: Waiting till end of maturity time before received radio telegrams will transmit.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0002	2 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x10	CO_WR_WAIT_MATURITY = 16
	7	1	Wait End Maturity	0xnn	0: Radio telegrams are send immediately 1: Radio telegrams are send after the maturity time is elapsed
-	8	1	CRC8D	0xnn	

Table 44

In this case, the following **RESPONSE** gives the return codes:

00 RET_OK
 02 RET_NOT_SUPPORTED
 03 RET_WRONG_PARAM

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.5.19 Code 17: CO_WR_SUBTEL

Function: Enable/Disable transmitting additional subtelegram info.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0002	2 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x11	CO_WR_SUBTEL = 17
	7	1	Enable	0xnn	Enable = 1 Disable = 0
-	8	1	CRC8D	0xnn	

Table 45

In this case, the following **RESPONSE** gives the return codes:

00 RET_OK
 02 RET_NOT_SUPPORTED
 03 RET_WRONG_PARAM

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.5.20 Code 18: CO_WR_MEM

Function: Write x bytes of the Flash, RAM0, DATA, IDATA, XDATA.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0xnnnn	6 + x bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x12	CO_WR_MEM = 18
	7	1	Memory type	0xnn	Flash 0x00 RAM 0 0x01 data RAM 0x02 idata RAM 0x03 xdata RAM 0x04 EEPROM 0x05
	8	4	Memory address	0xnnnnnnnn	Start address to write
	12	x	Memory data	0xnn ... 0xnn	Data content to write
-	12+x	1	CRC8D	0xnn	

Table 46

In this case, the following **RESPONSE** gives the return codes:

00 RET_OK

02 RET_NOT_SUPPORTED

03 RET_WRONG_PARAM (address outside range of values)

04 RET_OPERATION_DENIED (memory access denied / code-protected)

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.5.21 Code 19: CO_RD_MEM

Function: Read x bytes of the Flash, RAM0, DATA, IDATA, XDATA.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0xnn08	8 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x13	CO_RD_MEM = 19
	7	1	Memory type	0xnn	Flash 0x00 RAM 0 0x01 data RAM 0x02 idata RAM 0x03 xdata RAM 0x04 EEPROM 0x05
	8	4	Memory address	0xnnnnnnnn	Start address to read
	12	2	Data lenght	0xnnnn	Length to be read
-	14	1	CRC8D	0xnn	

Table 47

Following described **RESPONSE** applies to return code:

00: RET_OK

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0xnnnn	1 + x bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
Data	6	1	Return Code	0x00	RET_OK = 0
	7	x	Memory data	0xnn ... 0xnn	Of read memory contents
-	7+x	1	CRC8D	0xnn	

Table 48

For **RESPONSE** with return codes:

02 RET_NOT_SUPPORTED

03 RET_WRONG_PARAM (address outside range of values)

04 RET_OPERATION_DENIED (memory access denied / code-protected)

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.5.22 Code 20: CO_RD_MEM_ADDRESS

Function: Feedback about the used address and length of the configuration area and the Smart Ack table.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0002	2 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x14	CO_RD_MEM_ADDRESS = 20
	7	1	Memory area	0xnn	Config area = 0 Smart Ack Table = 1 System error log = 2
-	8	1	CRC8D	0xnn	

Table 49

Following described **RESPONSE** applies to return code:

00: RET_OK

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x000A	10 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
Data	6	1	Return Code	0x00	RET_OK = 0
	7	1	Memory type	0xnn	Flash 0x00 RAM 0 0x01 data RAM 0x02 idata RAM 0x03 xdata RAM 0x04 EEPROM 0x05
	8	4	Memory address	0xnnnnnnnn	Start address of config area / Smart Ack table / system error log
	12	4	Memory length	0xnnnnnnnn	Data length of config area / Smart Ack table / system error log
-	16	1	CRC8D	0xnn	

Table 50

For **RESPONSE** with return codes:

02 RET_NOT_SUPPORTED

03 RET_WRONG_PARAM

04 RET_OPERATION_DENIED (memory access denied / code-protected)

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.5.23 Code 21: DEPRECATED: CO_RD_SECURITY

Function: Read security information (level, keys). This function does not support the actual security concept and should not be used any more.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0001	1 byte
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x15	CO_RD_SECURITY = 21
-	7	1	CRC8D	0xnn	

Table 51

Following described **RESPONSE** applies to return code:

00: RET_OK

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x000A	10 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
Data	6	1	Return Code	0x00	RET_OK = 0
	7	1	SEC LEVEL	0x0n	Type no. of encryption
	8	4	KEY	0xnnnnnnnnnn	Security key
	12	4	Rolling Code	0x00000000	Reserved
-	16	1	CRC8D	0xnn	

Table 52

For **RESPONSE** with return code:

02 RET_NOT_SUPPORTED

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.5.24 Code 22: DEPRECATED: CO_WR_SECURITY

Function: Write security information (level, keys). This function does not support the actual security concept and should not be used any more.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x000A	10 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x16	CO_WR_SECURITY = 22
	7	1	SEC LEVEL	0x0n	Type no. of encryption
	8	4	KEY	0xnnnnnnnn	Security key
	12	4	Rolling Code	0x00000000	Reserved
-	16	1	CRC8D	0xnn	

Table 53

In this case, the following **RESPONSE** gives the return codes:

- 00 RET_OK
- 01 RET_ERROR
- 02 RET_NOT_SUPPORTED
- 03 RET_WRONG_PARAM

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.5.25 Code 23: CO_WR_LEARNMODE

Function: Enables or disables learn mode of Controller.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0006	6 bytes
	3	1	Optional Length	0x01	1 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x17	CO_WR_LEARNMODE = 23
	7	1	Enable	0x0n	Start Learn mode = 1 End Learn mode = 0
	8	4	Timeout	0xnnnnnnnn	Time-Out for the learn mode in ms. When time is 0 then default period of 60'000 ms is used
Optional Data	12	1	Channel	0xnn	0..0xFD = Channel No. absolute 0xFE = Previous channel relative 0xFF = Next channel relative
-	-	1	CRC8D	0xnn	

Table 54

In this case, the following **RESPONSE** message gives the return codes:

00 RET_OK

02 RET_NOT_SUPPORTED

03 RET_WRONG_PARAM

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.5.26 Code 24: CO_RD_LEARNMODE

Function: Reads the learn-mode state of Controller.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0001	1 byte
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x18	CO_RD_LEARNMODE = 24
-	7	1	CRC8D	0xnn	

Table 55

Following described **RESPONSE** applies to return code:

00: RET_OK

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0002	2 bytes
	3	1	Optional Length	0x01	1 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
Data	6	1	Return Code	0x00	RET_OK = 0
	7	1	Enable	0x0n	Learn mode not active = 0 Learn mode active = 1
Optional Data	8	1	Channel	0xnn	0..0xFD = Channel No. absolute 0xFE = not used 0xFF = not used
-	-	1	CRC8D	0xnn	

Table 56

For **RESPONSE** with return code:

02 RET_NOT_SUPPORTED

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.5.27 Code 25: CO_WR_SECUREDEVICE_ADD

Function: Add secure device to controller. It is possible to add only one or more rocker with this function.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0019	25 bytes
	3	1	Optional Length	0x02	2 bytes
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x19	CO_WR_SECUREDEVICE_ADD = 25
	7	1	SLF	0xnn	Security Level Format
	8	4	ID	0xnnnnnnnn	Device ID
	12	16	Private key	0xnnnnnnnn 0xnnnnnnnn 0xnnnnnnnn 0xnnnnnnnn	16 bytes private key of the device
	28	3	Rolling code	0xnnnnnn	If a 16 bit rolling code is defined in SLF, the MSB is undefined
Optional Data	31	1	Direction	0xnn	Add device security information to: 0x00 = Inbound table (default), ID = Source ID 0x01 = Outbound table, ID = Destination ID. For secure broadcast use 0x00000000 or own ID in the outbound table 0x02 = Outbound broadcast table, ID = Source ID (can be ChipID or one of BaseIDs) 0x03..0xFF = not used
	32	1	PTM Sender	0xnn	0x00 = not PTM sender 0x01 = PTM sender 0x02..0xFF = Not Used.
	33	1	Teach-Info	0x0n	Secure device Teach-In info
-	-	1	CRC8D	0xnn	

Table 57

In this case, the following **RESPONSE** message gives only the return codes:

00 RET_OK

01 RET_ERROR (memory space full)

02 RET_NOT_SUPPORTED

03 RET_WRONG_PARAM (added device known, but private key wrong)

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.5.28 Code 26: CO_WR_SECUREDEVICE_DEL

Function: Delete secure device from controller. It is only possible to delete ALL rockers of a secure device. If there was a Pre-Shared Key entry specified for that device then it will be removed as well.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0005	5 bytes
	3	1	Optional Length	0x01	1 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x1A	CO_WR_SECUREDEVICE_DEL = 26
	7	4	ID	0xnnnnnnnn	Device ID.
Optional Data	8	1	Direction	0xnn	Remove secure device from: 0x00 = Inbound table (default) 0x01 = Outbound table 0x02 = Outbound table broadcast 0x03 = Erase ID in both inbound and outbound directions 0x04..0xFF = Not used
-	-	1	CRC8D	0xnn	

Table 58

In this case, the following **RESPONSE** message gives the return codes:

00 RET_OK

01 RET_ERROR (device not in list)

02 RET_NOT_SUPPORTED

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.5.29 Code 27: CO_RD_SECUREDEVICE_BY_INDEX

Function: Read secure device by index

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0002	2 bytes
	3	1	Optional Length	0x01	1 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x1B	CO_RD_SECUREDEVICE = 27
	7	1	Index	0x00...0xFE	Index of secure device to read, starting with 0...254
Optional Data	8	1	Direction	0xnn	Read device security information from: 0x00 = Inbound table (default) 0x01 = Outbound table 0x02 = Outbound broadcast table 0x03..0xFF = not used
-	9	1	CRC8D	0xnn	

Table 59

Following described **RESPONSE** applies to return code:

00: RET_OK

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0006	6 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
Data	6	1	Return Code	0x00	RET_OK = 0
	7	1	SLF	0xnn	Security Level Format
	8	4	ID	0xffffffff	Device ID
Optional Data	12	16	Private Key	0xffffffff 0xffffffff 0xffffffff 0xffffffff	16 bytes private key of the device
	28	3	Rolling Code	0xffffffff	If a 16 bit rolling code is defined in SLF, the MSB is undefined
	31	16	PSK	0xffffffff 0xffffffff 0xffffffff 0xffffffff	16 bytes pre-shared key of the device. (when not present it will be set to 0x00)
	47	1	Teach-In info	0x0n	Teach-In info of the secure device
-	47	1	CRC8D	0xnn	

Table 60

For **RESPONSE** with return code:

01 RET_ERROR (device not in list)

02 RET_NOT_SUPPORTED

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

Note:

- If PSK was not set, it will be not included in the packet. If in the future response will be extended, all bytes of non-existing PSK will be set to 0x00

2.5.30 Code 28: CO_WR_MODE

Function: Sets the gateway transceiver mode.

There are two modes available:

- Compatible mode - ERP1 - gateway uses Packet Type 1 to transmit and receive radio telegrams – for ASK products with ERP2 radio protocol
- Advanced mode – ERP2 - gateway uses Packet Type 10 to transmit and receive radio telegrams – for FSK products with ERP2 radio protocol

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0002	2 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x1C	CO_WR_MODE = 28
	6	1	Mode	0xnn	0x00 – Compatible mode (default) - ERP1 0x01 – Advanced mode - ERP2
-	7	1	CRC8D	0xnn	

Table 61

In this case, the following **RESPONSE** message gives the return codes:

00 RET_OK

01 RET_ERROR (device not in list)

02 RET_NOT_SUPPORTED

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.5.31 Code 29: CO_RD_NUMSECUREDEVICES

Function: Read number of taught in secure devices

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0001	1 byte
	3	1	Optional Length	0x00...0x01	1 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x1D	CO_RD_NUMSECUREDEVICES = 29
Optional Data	7	1	Direction	0xnn	0x00 = Inbound Table (default) 0x01 = Outbound table Destination ID Based ID = Destination Device ID 0x02 = Outbound table broadcast , sending Source ID Based ID = Gateway SourceID which can be ChipID or one of BaseIDs 0x03 = Total number of link table entries 0x04...0x0FF = not used
-	8	1	CRC8D	0xnn	

Table 62

Following described **RESPONSE** applies to return code:

00: RET_OK

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0002	2 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
Data	6	1	Return Code	0x00	RET_OK = 0
	7	1	Number	0xnn	Number of secure devices learned in
-	8	1	CRC8D	0xnn	

Table 63

For **RESPONSE** with return code:

02 RET_NOT_SUPPORTED

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.5.32 Code 30: CO_RD_SECUREDEVICE_BY_ID

Function: Read secure device by ID

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0005	5 bytes
	3	1	Optional Length	0x00...0x01	1 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x1E	CO_RD_SECUREDEVICE_BY_ID= 30
	7	4	ID	0xnnnnnnnn	Device ID
Optional Data	11	1	Direction	0xnn	0x00 = Inbound table (default) 0x01 = Outbound table Destination ID Based ID = Destination Device ID 0x02 = Outbound table broadcast , sending Source ID Based ID = Gateway SourceID which can be ChipID or one of BaseIDs 0x03..0xFF = not used
-	12	1	CRC8D	0xnn	

Table 64

Following described **RESPONSE** applies to return code:

00: RET_OK

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0002	2 bytes
	3	1	Optional Length	0x00...0x01	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
Data	6	1	Return Code	0x00	RET_OK = 0
	7	1	SLF	0xnn	Security Level Format
Optional Data	8	1	Index	0x00...0xFE	Index of secure device in the devices table, starting with 0...254
-	9	1	CRC8D	0xnn	

Table 65

For **RESPONSE** with return code:

01 RET_ERROR (device not in the list)

02 RET_NOT_SUPPORTED

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.5.33 Code 31: CO_WR_SECUREDEVICE_ADD_PSK

Function: Add Pre-shared key for inbound secure device.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0015	21 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x1F	CO_WR_SECUREDEVICE_ADD_PSK = 31
	8	4	ID	0xnnnnnnnn	Device ID
	12	16	Pre-Shared Key	0xnnnnnnnn 0xnnnnnnnn 0xnnnnnnnn 0xnnnnnnnn	16 bytes pre-shared key of the device
-	-	1	CRC8D	0xnn	

Table 66

In this case, the following **RESPONSE** message gives only the return codes:

00 RET_OK

01 RET_ERROR (memory space full)

02 RET_NOT_SUPPORTED

03 RET_WRONG_PARAM (added device known, but private key wrong)

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.5.34 Code 32: CO_WR_SECUREDEVICE_SENDTEACHIN

Function: Send secure Teach-In message. The device has to exist in the outbound table. Use CO_WR_SECUREDEVICE_ADD to add outbound device.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0005	5 bytes
	3	1	Optional Length	0x00...0x01	1 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x20	CO_WR_SECUREDEVICE_SENDTEACHIN = 32
	8	4	ID	0xnnnnnnnn	Device ID
Optional Data	8	1	TeachInInfo	0xnn	Teach-In Info
-	-	1	CRC8D	0xnn	

Table 67

In this case, the following **RESPONSE** message gives only the return codes:

- 00 RET_OK
- 01 RET_ERROR (error in sending TeachIn)
- 02 RET_NOT_SUPPORTED
- 03 RET_WRONG_PARAM (link table empty, device not found)

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.5.35 Code 33: CO_WR_TEMPORARY_RLC_WINDOW

Function: Sets the temporary rolling-code window for every taught-in device. Once a taught-in secure telegram is received the RLC window is set to the standard value (128).

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0006	6 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x21	CO_WR_TEMPORARY_RLC_WINDOW=33
	7	1	Enable	0xnn	0x00 - Disables the temporary RLC window 0x01 - Enables the temporary RLC window
	8	4	RLC Window	0xnnnnnnnn	Temporary rolling code window size. Only applied when Enabled = 0x01
-	-	1	CRC8D	0xnn	

Table 68

In this case, the following **RESPONSE** message gives the return codes:

00 RET_OK

01 RET_ERROR (device not in list)

02 RET_NOT_SUPPORTED

03 RET_WRONG_PARAM (zero is not allowed as temporary rolling code window)

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.5.36 Code 34: CO_RD_SECUREDEVICE_PSK

Function: Read Pre-shared key for inbound secure device or for the module itself.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0005	5 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x22	CO_RD_SECUREDEVICE_PSK = 34
	8	4	ID	0xnnnnnnnn	Device ID 0x00000000: will return the module PSK other ID: will return inbound device PSK
-	-	1	CRC8D	0xnn	

Table 69

In this case, the following **RESPONSE** message gives only the return codes:

00: RET_OK

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0011	17 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
Data	6	1	Return Code	0x00	RET_OK = 0
	7	16	PSK	0xnnnnnnnn 0xnnnnnnnn 0xnnnnnnnn 0xnnnnnnnn	16-bytes Pre-Shared Key
-	12	1	CRC8D	0xnn	

Table 70

01 RET_ERROR (no PSK assigned to the ID)

02 RET_NOT_SUPPORTED

03 RET_WRONG_PARAM (added device known, but private key wrong)

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.5.37 Code 35: CO_RD_DUTYCYCLE_LIMIT

Function: Read actual duty cycle limit values.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0001	1 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x23	CO_RD_DUTYCYCLE_LIMIT = 35
-	-	1	CRC8D	0xnn	

Table 71

In this case, the following **RESPONSE** message gives only the return codes:

00 RET_OK

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0008	8 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
Data	6	1	Return Code	0x00	RET_OK = 0
	7	1	Available duty cycle	0..0x64	Total load of available 1% duty cycle from 0..100%
	8	1	Slots	0xnn	Total number of duty cycle slots
	9	2	Slot period	0xn timer	Period of one slot in seconds
	11	2	Actual slot left	0xn timer	Time left in actual slot in seconds
	13	1	Load after actual	0..0x64	Load available when period ends from 0..100%
-	14	1	CRC8D	0xnn	

Table 72

02 RET_NOT_SUPPORTED

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.5.38 Code 36: CO_SET_BAUDRATE

Function: Modifies the baud rate of the EnOcean device.

Note: The standard start up baud rate is 57600 and not all devices support the faster baudrate.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0002	2 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x24	CO_SET_BAUDRATE = 36
	7	1	BAUDRATE	0xnn	0 = 57600 BAUD 1 = 115200 BAUD 2 = 230400 BAUD 3 = 460800 BAUD
-	-	1	CRC8D	0xnn	

Table 73

In this case, the following **RESPONSE** message gives only the return codes:

00 RET_OK

02 RET_NOT_SUPPORTED

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

Note:

- The response is send with the current Baud rate settings. If the baud rate can be modified the response is then send afterwards again with the new baudrate

2.5.39 Code 37: CO_GET_FREQUENCY_INFO

Function: Reads Frequency and protocol of the Device.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0001	1 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x25	CO_GET_FREQUENCY_INFO = 37
-	7	1	CRC8D	0xnn	

Table 74

In this case, the following **RESPONSE** message gives only the return codes:

00 RET_OK

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0003	3 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
Data	6	1	Return Code	0x00	RET_OK = 0
	7	1	Frequency	0xnn	0x00 315Mhz 0x01 868.3Mhz 0x02 902.875Mhz 0x03 925 Mhz 0x04 928 Mhz 0x20 2.4 Ghz
	8	1	Protocol	0xnn	0x00 ERP1 0x01 ERP2 0x10 802.15.4 0x20 Bluetooth 0x30 Long Range
-	9	1	CRC8D	0xnn	

Table 75

02 RET_NOT_SUPPORTED

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.5.40 Code 38: Reserved

Reserved for future use.

2.5.41 Code 39: CO_GET_STEP CODE

Function: Reads Hardware Step code and Revision of the Device.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0001	1 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x27	CO_GET_STEP CODE = 39
-	7	1	CRC8D	0xnn	

Table 76

In this case, the following **RESPONSE** message gives only the return codes:

00 RET_OK

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0003	3 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
Data	6	1	Return Code	0x00	RET_OK = 0
	7	1	Step code	0xnn	e.g. 0xDA ,0xCA ...
	8	1	Status code	0xnn	e.g. 0x01, 0x02 ...
-	9	1	CRC8D	0xnn	

Table 77

02 RET_NOT_SUPPORTED

Since no additional data are included that have to be described, standard RESPONSE structure is detailed in chapter 2.2.3

2.5.42 Code 40: Reserved

Reserved for future use.

2.5.43 Code 41: Reserved

Reserved for future use.

2.5.44 Code 42: Reserved

Reserved for future use.

2.5.45 Code 43: Reserved

Reserved for future use.

2.5.46 Code 44: Reserved

Reserved for future use.

2.5.47 Code 45: Reserved

Reserved for future use.

2.5.48 Code 46: CO_WR_REMAN_CODE

Function: Sets secure code to unlock Remote Management functionality by radio.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0005	5 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x2E	CO_WR_RORGS_CLEAR = 46
	7	4	Secure code	0xnnnnnnnn	Secure code for unlocking device
-	11	1	CRC8D	0xnn	

Table 78

In this case, the following **RESPONSE** message gives only the return codes:

00 RET_OK
 01 RET_ERROR (Hardware Error)
 02 RET_NOT_SUPPORTED
 03 RET_WRONG_PARAM

Since no additional data are included that have to be described, standard RESPONSE structure is detailed in chapter 2.2.3

2.5.49 Code 47: CO_WR_STARTUP_DELAY

Function: Sets the startup delay: the time before the system initializes

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0002	2 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x2F	CO_WR_STARTUP_DELAY = 47
Data	7	1	Startup Delay	0xnn	StartupDelay[10ms]
-	8	1	CRC8D	0xnn	

Table 79

Start-up Delay = 1 → Start delay = 10ms

Start-up Delay = 90 → Start delay = 900ms

In this case, the following **RESPONSE** message gives only the return codes:

00 RET_OK
 01 RET_ERROR (Hardware Error)
 02 RET_NOT_SUPPORTED
 03 RET_WRONG_PARAM

Since no additional data are included that have to be described, standard RESPONSE structure is detailed in chapter 2.2.3

2.5.50 Code 48: CO_WR_REMAN_REPEATING

Function: Select if REMAN telegrams originating from this module can be repeated.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0002	2 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x30	CO_WR_REMAN_REPEATING = 48
Data	7	1	Repeated	0x00	Reman answers will not be repeated (Status =0x8F)
				0x01	Reman answers will be repeated (Status =0x80)
-	8	1	CRC8D	0xnn	

Table 80

In this case, the following **RESPONSE** message gives only the return codes:

00 RET_OK
 02 RET_NOT_SUPPORTED
 03 RET_WRONG_PARAM

Since no additional data are included that have to be described, standard RESPONSE structure is detailed in chapter 2.2.3

2.5.51 Code 49: CO_RD_REMAN_REPEATING

Function: Check if the REMAN telegrams originating from this module can be repeated.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0001	1 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x31	CO_RD_REMAN_REPEATING = 49
-	7	1	CRC8D	0xnn	

Table 81

In this case, the following **RESPONSE** message gives only the return codes:

00: RET_OK

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0002	2 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
Data	6	1	Return Code	0x00	RET_OK = 0
	7	1	Repeated	0x00	Send REMAN messages will contain "not to be repeated" (Status =0x8F)
				0x01	Send REMAN messages will contain "can be repeated"(Status =0x80)
-	8	1	CRC8D	0xnn	

Table 82

02 RET_NOT_SUPPORTED
 03 RET_WRONG_PARAM

Since no additional data are included that have to be described, standard RESPONSE structure is detailed in chapter 2.2.3

2.5.52 Code 50: CO_SET_NOISETHRESHOLD

Function: Sets the RSSI noise threshold level for telegram detection.

-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0002	2 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x32	CO_SET_NOISETHRESHOLD = 50
	7	4	RSSI level	0xnn	RSSI Level to initiate telegram detection
-	11	1	CRC8D	0xnn	

Table 83

In this case, the following **RESPONSE** message gives only the return codes:

00 RET_OK
 01 RET_ERROR (Hardware Error)
 02 RET_NOT_SUPPORTED
 03 RET_WRONG_PARAM

Since no additional data are included that have to be described, standard RESPONSE structure is detailed in chapter 2.2.3

2.5.53 Code 51: CO_GET_NOISETHRESHOLD

Function: Gets the RSSI noise threshold level for telegram detection.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0001	1 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x05	COMMON_COMMAND = 5
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x33	CO_GET_NOISETHRESHOLD = 51
-	7	1	CRC8D	0xnn	

Table 84

In this case, the following **RESPONSE** message gives only the return codes: 00: RET_OK

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0002	2 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
Data	6	1	Return Code	0x00	RET_OK = 0
	7	1	RSSI level		RSSI level set up on the radio to initiate telegram detection
-	8	1	CRC8D	0xnn	

Table 85

02 RET_NOT_SUPPORTED

03 RET_WRONG_PARAM

Since no additional data are included that have to be described, standard RESPONSE structure is detailed in chapter 2.2.3

2.6 Packet Type 6: SMART_ACK_COMMAND

2.6.1 Structure

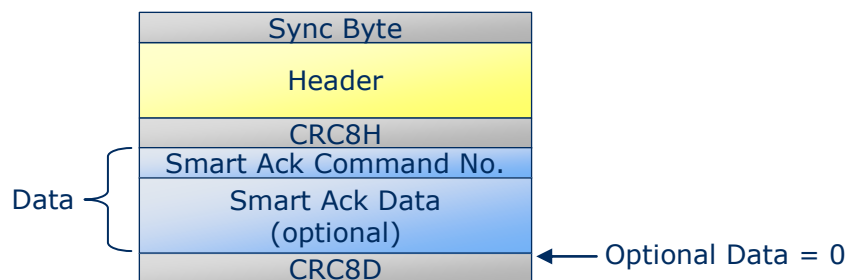


Figure 11

In the current version of ESP3 the packet type SMART_ACK_COMMAND carries no Optional Data.

2.6.2 List of SMART ACK Codes

Code	Function Name	Description
01	SA_WR_LEARNMODE	Set/Reset Smart Ack learn mode
02	SA_RD_LEARNMODE	Get Smart Ack learn mode state
03	SA_WR_LEARNCONFIRM	Used for Smart Ack to add or delete a mailbox of a client
04	SA_WR_CLIENTLEARNRQ	Send Smart Ack Learn request (Client)
05	SA_WR_RESET	Send reset command to a Smart Ack client
06	SA_RD_LEARNEDCLIENTS	Get Smart Ack learned sensors / mailboxes
07	SA_WR_RECLAIMS	Set number of reclaim attempts
08	SA_WR_POSTMASTER	Activate/Deactivate Post master functionality

Table 86

2.6.3 Code 01: SA_WR_LEARNMODE

Function: Enables or disables learn mode of Smart Ack Controller.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0007	7 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x06	SMART_ACK_COMMAND = 6
-	5	1	CRC8H	0xnn	
Data	6	1	SMART_ACK Code	0x01	SA_WR_LEARNMODE = 1
	7	1	Enable	0x0n	Start Learn mode = 1 End Learn mode = 0
	8	1	Extended	0x0n	Simple Learn mode = 0 Advance Learn mode = 1 Advance Learn mode select Rep. = 2
	9	4	Timeout	0xnnnnnnnn	Time-Out for the learn mode in ms. When time is 0 then default period of 60'000 ms is used
-	13	1	CRC8D	0xnn	

Table 87

In this case, the following **RESPONSE** message gives the return codes:

00 RET_OK

02 RET_NOT_SUPPORTED

03 RET_WRONG_PARAM

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.6.4 Code 02: SA_RD_LEARNMODE

Function: Reads the learn mode state of Smart Ack Controller.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0001	1 byte
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x06	SMART_ACK_COMMAND = 6
-	5	1	CRC8H	0xnn	
Data	6	1	SMART_ACK Code	0x02	SA_RD_LEARNMODE = 2
-	7	1	CRC8D	0xnn	

Table 88

Following described **RESPONSE** applies to return code:

00: RET_OK

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0003	3 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
Data	6	1	Return Code	0x00	RET_OK = 0
	7	1	Enable	0x0n	Learn mode not active = 0 Learn mode active = 1
	8	1	Extended	0x0n	Simple Learn mode = 0 Advance Learn mode = 1 Advance Learn mode select Rep. = 2
-	9	1	CRC8D	0xnn	

Table 89

For **RESPONSE** with return code:

02 RET_NOT_SUPPORTED

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.6.5 Code 03: SA_WR_LEARNCONFIRM

Function: Send smart ack learn answer to modify mailbox at postmaster.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x000C	12 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x06	SMART_ACK_COMMAND = 6
-	5	1	CRC8H	0xnn	
Data	6	1	SMART_ACK Code	0x03	SA_WR_LEARNCONFIRM = 3
	7	2	Response time	0xnnnn	Response time for sensor in ms in which the controller can prepare the data and send it to the postmaster. Only actual, if learn return code is Learn IN.
	9	1	Confirm code	0xnn	Learn IN: 0x00 Learn OUT: 0x20
	10	4	Postmaster Candidate ID	0xnnnnnnnn	Device ID of the used Post master
	14	4	Smart Ack Client ID	0xnnnnnnnn	Device ID of the learned IN/OUT Smart Ack Client
-	18	1	CRC8D	0xnn	

Table 90

In this case, the following **RESPONSE** message gives only the return codes:

00 RET_OK

02 RET_NOT_SUPPORTED

03 RET_WRONG_PARAM

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.6.6 Code 04: SA_WR_CLIENTLEARNRQ

Function: Sends Smart Ack Learn Request telegram to Smart Ack Controller. This function will only be used in a Smart Ack Client.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0006	6 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x06	SMART_ACK_COMMAND = 6
-	5	1	CRC8H	0xnn	
Data	6	1	SMART_ACK Code	0x04	SA_WR_CLIENTLEARNRQ = 4
	7	1	2 ² ... 2 ⁰ : Manufacturer ID 2 ⁷ ... 2 ³ : Reserved	0b1111nnn	nnn = Most significant 3 bits of the Manufacturer ID 11111 = reserved / default values
	8	1	Manufacturer ID	0xnn	Least significant bits of the Manufacturer ID
	9	3	EEP	0xnnnnnn	EEP of the Smart Ack client, who wants to Teach IN.
-	12	1	CRC8D	0xnn	

Table 91

In this case, the following **RESPONSE** message gives the return codes:

00 RET_OK

02 RET_NOT_SUPPORTED

03 RET_WRONG_PARAM

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.6.7 Code 05: SA_WR_RESET

Function: Send reset command to a Smart Ack Client.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0005	5 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x06	SMART_ACK_COMMAND = 6
-	5	1	CRC8H	0xnn	
Data	6	1	SMART_ACK Code	0x05	SA_WR_RESET = 5
	7	4	Smart Ack Client ID	0xnnnnnnnn	Device ID of the Smart Ack Client
-	11	1	CRC8D	0xnn	

Table 92

In this case, the following **RESPONSE** message gives the return codes:

00 RET_OK

02 RET_NOT_SUPPORTED

03 RET_WRONG_PARAM

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.6.8 Code 06: SA_RD_LEARNEDCLIENTS

Read mailbox information at the Post Master device, about all learned Smart Ack clients.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0001	1 byte
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x06	SMART_ACK_COMMAND = 6
-	5	1	CRC8H	0xnn	
Data	6	1	SMART_ACK Code	0x06	SA_RD_LEARNEDCLIENTS = 6
-	7	1	CRC8D	0xnn	

Table 93

Following described **RESPONSE** applies to return code:

00: RET_OK

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0xnnnn	1 + 9*c bytes (c = number of clients)
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
Data	6	1	Return Code	0x00	RET_OK = 0
	7	4	Smart Ack Client ID	0xnnnnnnnn	Device ID of the Smart Ack Client
	7 + 4*c	4	Controller ID	0xnnnnnnnn	Controller ID dedicated Smart Ack Client
	7 + 8*c	1	Mailbox index	0xnn	Internal counter of Post master (0x00 ... 0x0E)
-	7 + 9*c	1	CRC8D	0xnn	

Table 94

Every learned Smart Ack Client has the group **c** with fields in the order: Controller ID, Smart Ack Client ID, Mailbox index (c = also number of clients / multiplier to calculate the offset).

For **RESPONSE** with return code:

02 RET_NOT_SUPPORTED

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.6.9 Code 07: SA_WR_RECLAIMS

Function: Set the amount of reclaim tries in Smart Ack Client.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0002	2 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x06	SMART_ACK_COMMAND = 6
-	5	1	CRC8H	0xnn	
Data	6	1	SMART_ACK Code	0x07	SA_WR_RECLAIMS = 7
	7	1	Reclaim count	0xnn	Presetting for the number of required reclaim tries
-	8	1	CRC8D	0xnn	

Table 95

In this case, the following **RESPONSE** message gives the return codes:

00 RET_OK

02 RET_NOT_SUPPORTED

03 RET_WRONG_PARAM

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.6.10 Code 08: SA_WR_POSTMASTER

Function: Enables/Disables postmaster function of device.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0002	2 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x06	SMART_ACK_COMMAND = 6
-	5	1	CRC8H	0xnn	
Data	6	1	SMART_ACK Code	0x08	SA_WR_POSTMASTER = 8
	7	1	Mailbox count	0xnn	Amount of mailboxes available, 0 = disable post master functionality; Maximum 28 mailboxes can be created. This upper limit is for each firmware restricted and may be smaller.
-	8	1	CRC8D	0xnn	

Table 96

In this case, the following **RESPONSE** message gives the return codes:

00 RET_OK

02 RET_NOT_SUPPORTED

03 RET_WRONG_PARAM

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.6.11 Code 09: SA_RD_MAILBOX STATUS

Read mailbox information about a certain device

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0009	9 byte
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x06	SMART_ACK_COMMAND = 6
-	5	1	CRC8H	0xnn	
Data	6	1	SMART_ACK Code	0x09	SA_RD_MAILBOXSTATUS = 9
	7	4	Smart Ack Client ID	0xnnnnnnnn	Device ID of the Smart Ack Client
	11	4	Controller ID	0xnnnnnnnn	Controller ID dedicated Smart Ack Client
-	15	1	CRC8D	0xnn	

Table 97

Following described **RESPONSE** applies to return code:

00: RET_OK

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x02	2 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
Data	6	1	Return Code	0x00	RET_OK = 0
	7	1	MailBox status	0xnn	0 = mailbox is empty 1 = mailbox is full 2 = mailbox does not exists.
-	8	1	CRC8D	0xnn	

Table 98

2.6.12 Code 10: SA_DEL_MAILBOX

Delete mailbox for a certain pair

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0009	1 byte
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x06	SMART_ACK_COMMAND = 6
-	5	1	CRC8H	0xnn	
Data	6	1	SMART_ACK Code	0x0A	SA_DEL_MAILBOX = 10
	7	4	Smart Ack Client ID	0xnnnnnnnn	Device ID of the Smart Ack Client
	11	4	Controller ID	0xnnnnnnnn	Controller ID dedicated Smart Ack Client
-	15	1	CRC8D	0xnn	

Table 99

Following described **RESPONSE** applies to return code:

00: RET_OK

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
	1	2	Data Length	0xnnnn	2 bytes

ENOCAN SERIAL PROTOCOL (ESP3) - SPECIFICATION

Header	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
Data	6	1	Return Code	0x00	RET_OK = 0
	7	1	MailBox delete status	0xnn	0 = mailbox deleted 1 = mailbox does not exists. 2 = mailbox locked
-	8	1	CRC8D	0xnn	

Table 100

2.7 Packet Type 7: REMOTE_MAN_COMMAND

2.7.1 Structure

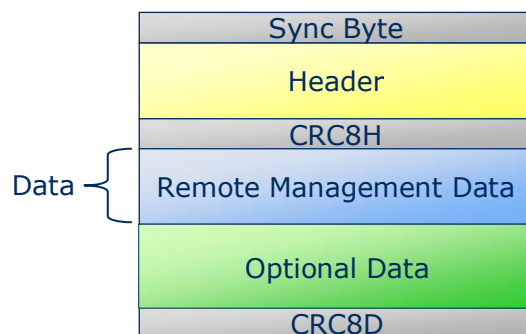


Figure 12

This section describes the remote management command structure. This structure is applied for the send as well as the receive case.

2.7.2 Description

Function: Remote Management send or receive message.

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0xnnnn	4 + x bytes
	3	1	Optional Length	0x0A	10 bytes
	4	1	Packet Type	0x07	REMOTE_MAN_COMMAND = 7
-	5	1	CRC8H	0xnn	
Data	6	2	Function No.	0x0nnn	Range: 0x0000 ... 0x0FFF
	8	2	Manufacturer ID	0x0nnn	Range: 0x0000 ... 0x07FF
	10	x	Message data	...	N bytes
Optional Data	10+x	4	Destination ID	0xnnnnnnnn	Destination ID Broadcast ID: FF FF FF FF
	14+x	4	Source ID	0xnnnnnnnn	Receive case: Source ID of the sender Send case: 0x00000000
	18+x	1	dBm	0xnn	Send case: 0xFF Receive case: Best RSSI value of all received sub telegrams (only if wait for maturity is set to true!) (value decimal without minus)
	19+x	1	Send With Delay	0x0n	1: if the first message has to be sent with random delay. When answering to broadcast message this has to be 1, otherwise 0. Default: 0
-	20+x	1	CRC8D	0xnn	CRC8 <u>D</u> ata byte; calculated checksum for whole byte groups: DATA and OPTIONAL_DATA

Table 101

The receive case has no RESPONSE.

The send case has the following **RESPONSE** with the return codes:

00 RET_OK

02 RET_NOT_SUPPORTED

03 RET_WRONG_PARAM

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.8 Packet Type 8: PRODUCTION_COMMAND

Internal EnOcean GmbH document, refer to EnOceanSerialProtocol3-ProductionCommand.doc

2.9 Packet Type 9: RADIO_MESSAGE

2.9.1.1 Packet structure

The radio message (payload data without any radio telegram contents) is embedded into the ESP3 packet.

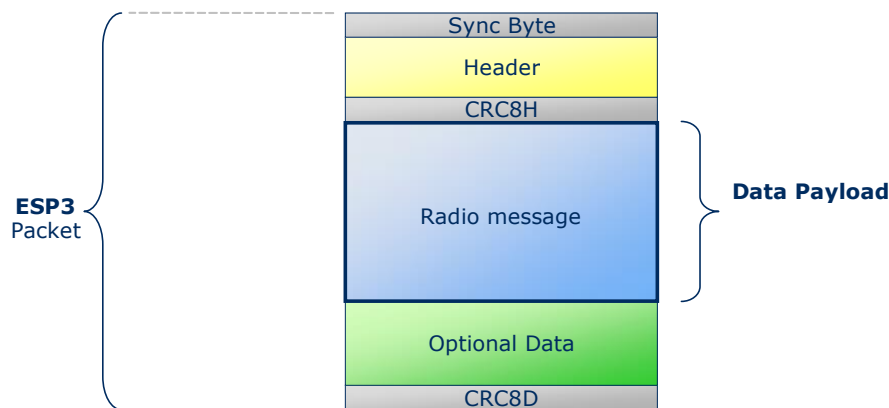


Figure 13

The following structure is applicable to all types of radio messages:

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0xnnnn	Variable length of message
	3	1	Optional Length	0x09	Optional Data = 9 bytes
	4	1	Packet Type	0x09	RADIO_MESSAGE = 9
-	5	1	CRC8H	0xnn	
Data	6	1	Message RORG	0xnn	RORG
Data	7	x	Message Data	...	Message Data Content
Optional Data	7+x	4	Destination ID	0xnnnnnnnn	Destination ID Broadcast ID: FF FF FF FF
	11+x	4	Source ID	0xnnnnnnnn	Receive case: Source ID of the sender Send case: 0x00000000
	15+x	1	dBm	0xnn	Send case: 0xFF Receive case: Best RSSI value of all received sub telegrams (value decimal without minus) (only if wait for maturity is set to true!)
	16+x	1	Security Level	0x0n	Send Case: Will be ignored (Security is selected by link table entries) Receive case: 0 = telegram unencrypted 1 = Obsolete (old security concept)

					2 = Telegram encrypted 3 = Telegram authenticated 4 = Telegram encrypted + authenticated
-	13+x	1	CRC8D	0xnn	CRC8 <u>D</u> ata byte; calculated checksum for whole byte groups: DATA and OPTIONAL_DATA

Table 102

When receiving a message, no RESPONSE has to be sent. When sending a message, a RESPOND has to be expected. In this case, the following **RESPONSE** message gives the return codes:

00 RET_OK

02 RET_NOT_SUPPORTED

05 RET_LOCK_SET

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.10 Packet Type 10: RADIO_ERP2

2.10.1 Packet structure

The ERP2 radio protocol telegram (raw data without LEN) is embedded into the ESP3 packet.

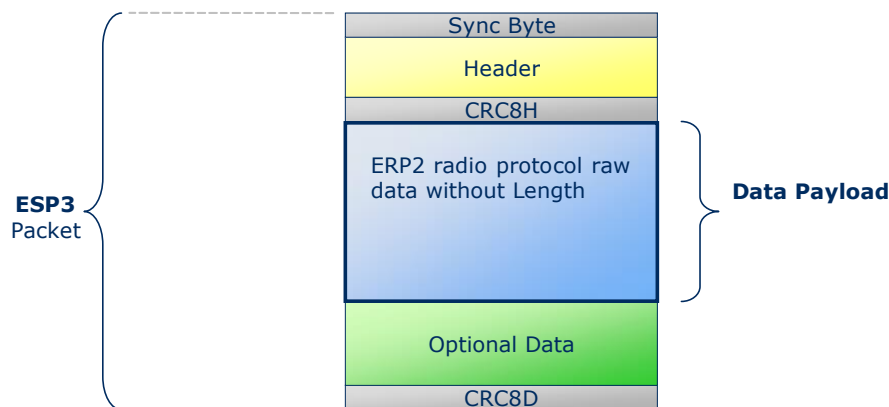


Figure 14

The following structure is applicable to all types of radio telegrams:

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0xnnnn	Variable length of radio telegram
	3	1	Optional Length	0x02	2 fields fixed
	4	1	Packet Type	0x0A	RADIO_ERP2 = 10
-	5	1	CRC8H	0xnn	
Data	6	x	Raw data	...	ERP2 radio protocol telegram without the first Length byte. For sending the ERP2 protocol CRC8 byte can be set to any value. x = Data Length
Optional Data	6+x	1	SubTelNum	0xnn	Number of sub telegram; Send: 3 / receive: 1 ... y
	7+x	1	dBm	0xnn	Send case: FF Receive case: best RSSI value of all received sub telegrams (value decimal without minus) (only if wait for maturity is set to true!)
	8+x	1	Security Level	0x0n	Send Case: Will be ignored (Security is selected by link table entries) Receive case: 0 = telegram unencrypted 1 = Obsolete (old security concept) 2 = Telegram encrypted 3 = Telegram authenticated 4 = Telegram encrypted + authenticated
-	8+x	1	CRC8D	0xnn	CRC8 Data byte; calculated checksum for whole byte groups: DATA and OPTIONAL_DATA

Table 103

When receiving a telegram, no RESPONSE has to be sent. When sending a telegram, a RESPOND has to be expected. In this case, the following **RESPONSE** message gives the return codes:

00 RET_OK
 02 RET_NOT_SUPPORTED
 03 RET_WRONG_PARAM

When there is no additional data included that have to be described, the standard RESPONSE structure is used as detailed in chapter 2.2.3

2.11 Packet Type 16: RADIO_802_15_4: 802.15.4 Physical Raw Packet

This packet is sent from an 802.15.4 sniffer to a client after receiving a valid 802.15.4 frame. If a gateway receives such a telegram, the packet will be send via the air interface.

2.11.1 Packet structure

The whole 802.15.4 mac frame omitting the FCS is embedded into the ESP3 packet.

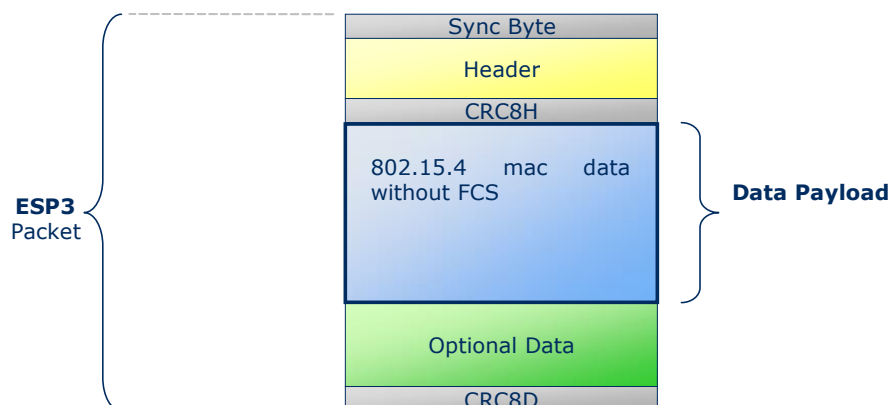


Figure 15 Packet Type 0x10

Octets: 2	1	0/2	0/2/8	0/2	0/2/8	0/5/6/10/14	variable	2
Frame Control	Sequence Number	Destination PAN Identifier	Destination Address	Source PAN Identifier	Source Address	Auxiliary Security Header	Frame Payload	FCS
		Addressing fields						
MHR							MAC Payload	MFR

Figure 16 Mac Data Format

The following structure is applicable to all types of radio telegrams:

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	

ENOCAN SERIAL PROTOCOL (ESP3) - SPECIFICATION

Header	1	2	Data Length	0xnnnn	Variable length of radio telegram
	3	1	Optional Length	0x01	1 byte
	4	1	Packet Type	0x10	RADIO_802_15_4 = 16
-	5	1	CRC8H	0xnn	
Data	6	x	Raw data	...	802.15.4 MHR+ mac payload without the FCS
Optional Data	6+x	1	RSSI	0xnn	Send case: don't care Receive case: - RSSI
-	8+x	1	CRC8D	0xnn	CRC8 Data byte; calculated checksum for whole byte groups: DATA and OPTIONAL_DATA

Table 104

When receiving a telegram, no RESPONSE has to be sent. When sending a telegram, a RESPOND has to be expected. In this case, the following RESPONSE message gives the return codes:

00 RET_OK
02 RET_NOT_SUPPORTED
03 RET_WRONG_PARAM
07 RET_NO_FREE_BUFFER

When no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.12 Packet Type 17: COMMAND_2_4

2.12.1 List of EnOcean 2.4 commands

Code	Command Name	Description
01	SET_CHANNEL	Sets the current 802.15.4 channel
02	GET_CHANNEL	Gets the current 802.15.4 channel

Table 105

2.12.2 Code 01: R802_WR_CHANNEL

Function: Set 802.15.4 channel

The command structure is following:

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0002	2 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x11	COMMAND_2_4 = 0x11
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x01	R802_WR_CHANNEL = 0x01
	7	1	Channel	11-26	The 802.15.4 channel to use
-	8	1	CRC8D	0xnn	

Table 106

Following described **RESPONSE** applies to return code:

00: RET_OK

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0001	1 byte
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE = 2
-	5	1	CRC8H	0xnn	
Data	6	1	Return Code	0xnn	00
-	7	1	CRC8D	0xnn	

Table 107

For **RESPONSE** with return code:

02: RET_NOT_SUPPORTED

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

2.12.3 CODE 02: R802_RD_CHANNEL

Function: Get the device's current used channel

The command structure is following:

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	
Header	1	2	Data Length	0x0001	1 byte
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x11	COMMAND_2_4 = 0x11
-	5	1	CRC8H	0xnn	
Data	6	1	COMMAND Code	0x02	R820_RD_CHANNEL = 0x02
-	7	1	CRC8D	0xnn	

Table 108

Following described **RESPONSE** applies to return code:

00: RET_OK

Group	Offset	Size	Field	Value hex	Description
-	0	1	Sync. Byte	0x55	

ENOCAN SERIAL PROTOCOL (ESP3) - SPECIFICATION

Header	1	2	Data Length	0x0002	2 bytes
	3	1	Optional Length	0x00	0 byte
	4	1	Packet Type	0x02	RESPONSE_PACKET = 0x02
-	5	1	CRC8H	0xnn	
Data	6	1	Return Code	0	OK
	7	1	Channel	11..26	Used Channel
-	8	1	CRC8D	0xnn	

Table 109

For **RESPONSE** with return code:

02: RET_NOT_SUPPORTED

Since no additional data are included that have to be described, the standard RESPONSE structure is detailed in chapter 2.2.3

3 Appendix

3.1 ESP3 Data flow sequences

The following examples illustrate the ESP3 traffic. In particular the flow of the Smart Ack commands is more complex.

3.1.1 Client data request

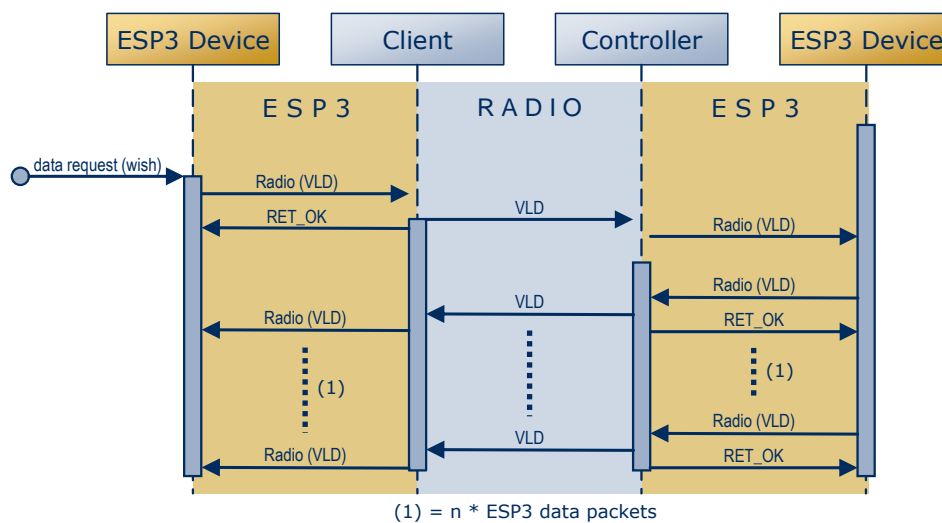


Figure 17

3.1.2 Teach IN via VLL

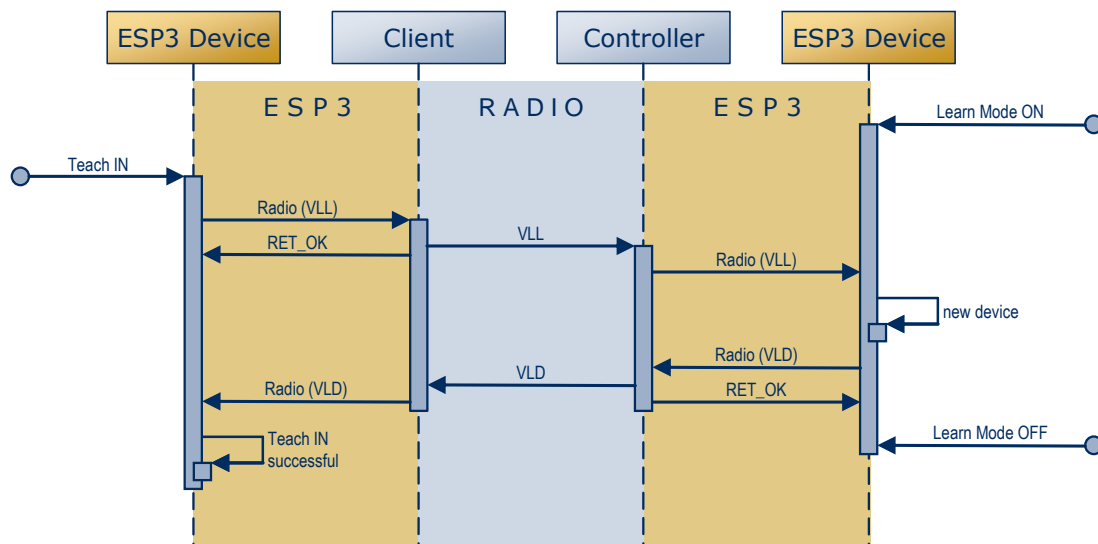


Figure 18

3.1.3 Teach IN via Smart Ack

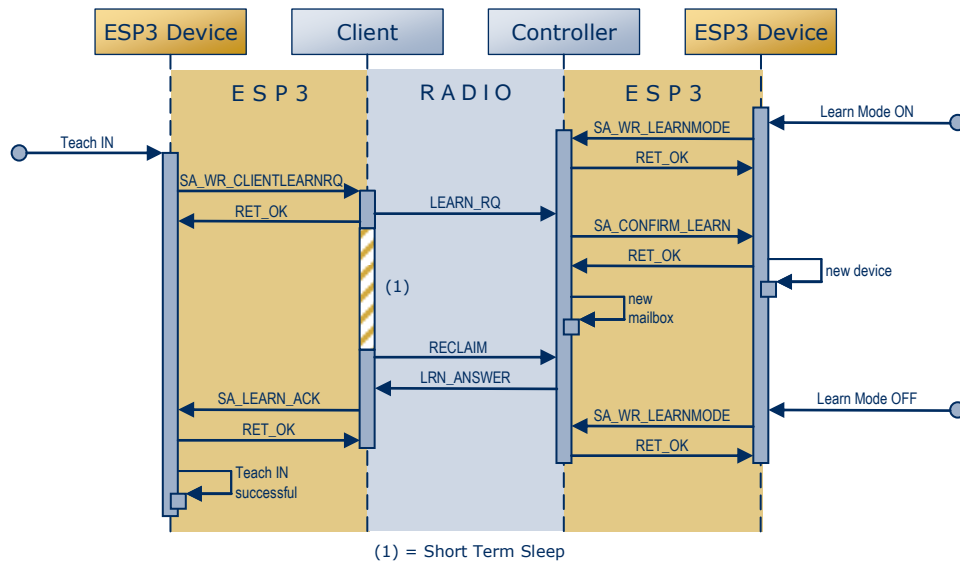


Figure 19

3.1.4 Teach IN via Smart Ack incl. repeater

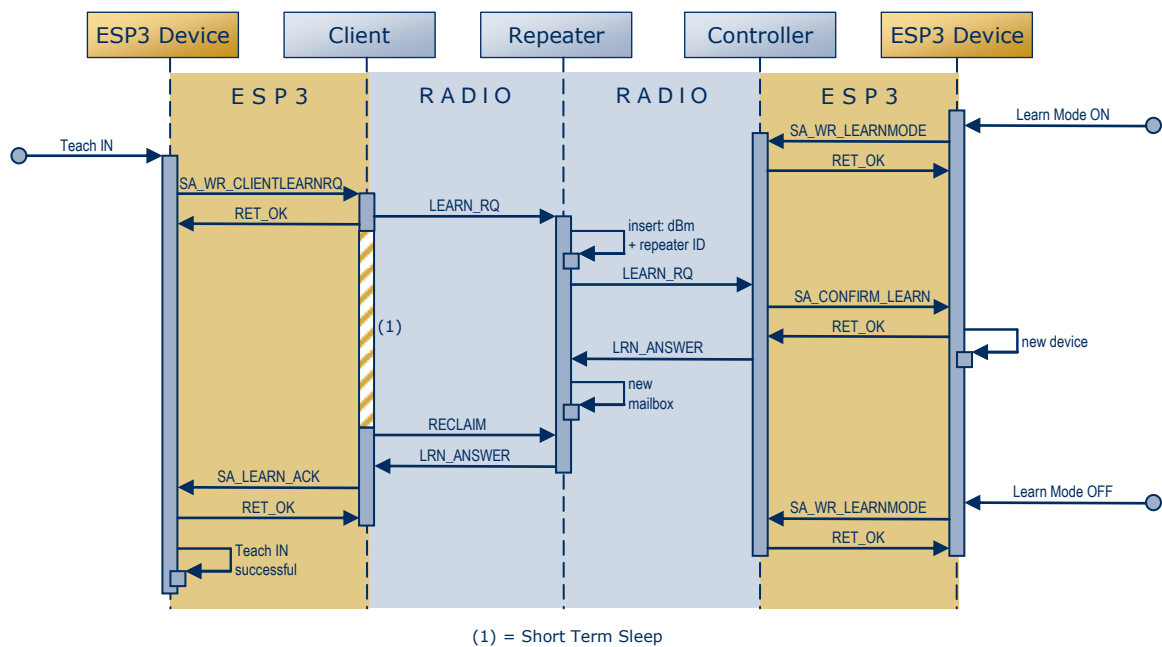


Figure 20

3.2 ESP32 telegram examples

3.2.1 Packet: Radio VLD

[illegible]

3.2.2 Packet: CO_WR_SLEEP

Sy	Header	CR C8	Data	CR C8
55	00 05 00 05	DB	01 00 00 00 0A	54

Periode = 10 (0x0A)

3.2.3 Packet: CO_WR_RESET

Sy	Header	CR C8	Data	CR C8
55	00 01 00 05	70	02	0E

3.2.4 Packet: CO_RD_IDBASE

Sy	Header	CR C8	Data	CR C8
55	00 01 00 05	70	08	38

Response RET_OK:

Sy	Header	CR C8	Data	CR C8
55	00 05 00 02	CE	00 FF 80 00 00	DA

3.2.5 Packet: REMOTE_MAN_COMMAND

Example dummy command:

Function = 0x0876

```

Manufacture      = 0x07FF

```

```
Message data = 0x000102030405060708090a0b0c0d0e0f
```

```
DestinationID = Broadcast = 0xFFFFFFFF
```

```
SendWithDelay = 0
```

Sy	Header	CR C8	Data																			
			Message data																			
55	00 14 0A 07	9E	08	76	07	FF	00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F

Optional Data										CR C8
FF	FF	FF	FF	00	00	00	00	FF	00	86

Example QueryID:

Sy	Header	CR C8	Data	CR C8
55	00 04 00 07	BE	00 04 07 FF	33

3.3 CRC8 calculation

The polynomial $G(x) = x^8 + x^2 + x^1 + x^0$ is used to generate the CRC8 table, needed for the CRC8 calculation. Following C code illustrates how the CRC8 value is calculated:

Implementation:

```
uint8 u8CRC8Table[256] = {
    0x00, 0x07, 0x0e, 0x09, 0x1c, 0x1b, 0x12, 0x15,
    0x38, 0x3f, 0x36, 0x31, 0x24, 0x23, 0x2a, 0x2d,
    0x70, 0x77, 0x7e, 0x79, 0x6c, 0x6b, 0x62, 0x65,
    0x48, 0x4f, 0x46, 0x41, 0x54, 0x53, 0x5a, 0x5d,
    0xe0, 0xe7, 0xee, 0xe9, 0xfc, 0xfb, 0xf2, 0xf5,
    0xd8, 0xdf, 0xd6, 0xd1, 0xc4, 0xc3, 0xca, 0xcd,
    0x90, 0x97, 0x9e, 0x99, 0x8c, 0x8b, 0x82, 0x85,
    0xa8, 0xaf, 0xa6, 0xa1, 0xb4, 0xb3, 0xba, 0xbd,
    0xc7, 0xc0, 0xc9, 0xce, 0xdb, 0xdc, 0xd5, 0xd2,
    0xff, 0xf8, 0xf1, 0xf6, 0xe3, 0xe4, 0xed, 0xea,
    0xb7, 0xb0, 0xb9, 0xbe, 0xab, 0xac, 0xa5, 0xa2,
    0x8f, 0x88, 0x81, 0x86, 0x93, 0x94, 0x9d, 0x9a,
    0x27, 0x20, 0x29, 0x2e, 0x3b, 0x3c, 0x35, 0x32,
    0x1f, 0x18, 0x11, 0x16, 0x03, 0x04, 0x0d, 0x0a,
    0x57, 0x50, 0x59, 0x5e, 0x4b, 0x4c, 0x45, 0x42,
    0x6f, 0x68, 0x61, 0x66, 0x73, 0x74, 0x7d, 0x7a,
    0x89, 0x8e, 0x87, 0x80, 0x95, 0x92, 0x9b, 0x9c,
    0xb1, 0xb6, 0xbf, 0xb8, 0xad, 0xaa, 0xa3, 0xa4,
    0xf9, 0xfe, 0xf7, 0xf0, 0xe5, 0xe2, 0xeb, 0xec,
    0xc1, 0xc6, 0xcf, 0xc8, 0xdd, 0xda, 0xd3, 0xd4,
    0x69, 0x6e, 0x67, 0x60, 0x75, 0x72, 0x7b, 0x7c,
    0x51, 0x56, 0x5f, 0x58, 0x4d, 0x4a, 0x43, 0x44,
    0x19, 0x1e, 0x17, 0x10, 0x05, 0x02, 0x0b, 0x0c,
    0x21, 0x26, 0x2f, 0x28, 0x3d, 0x3a, 0x33, 0x34,
    0x4e, 0x49, 0x40, 0x47, 0x52, 0x55, 0x5c, 0x5b,
    0x76, 0x71, 0x78, 0x7f, 0x6a, 0x6d, 0x64, 0x63,
    0x3e, 0x39, 0x30, 0x37, 0x22, 0x25, 0x2c, 0x2b,
    0x06, 0x01, 0x08, 0x0f, 0x1a, 0x1d, 0x14, 0x13,
    0xae, 0xa9, 0xa0, 0xa7, 0xb2, 0xb5, 0xbc, 0xbb,
    0x96, 0x91, 0x98, 0x9f, 0x8a, 0x8d, 0x84, 0x83,
    0xde, 0xd9, 0xd0, 0xd7, 0xc2, 0xc5, 0xcc, 0xcb,
    0xe6, 0xe1, 0xe8, 0xef, 0xfa, 0xfd, 0xf4, 0xf3
};

#define proccrc8(u8CRC, u8Data) (u8CRC8Table[u8CRC ^ u8Data])

Example:
u8CRC = 0;
for (i = 0 ; i < u16DataSize ; i++)
    u8CRC = proccrc8(u8CRC, u8Data[i]);
printf("CRC8 = %02X\n", u8CRC);
```

3.4 UART Synchronization (example c-code)

Please notice, that the example c-code in this chapter is written for big endian systems only. If you have a little endian system you have to make changes for proper functionality.

3.4.1 ESP3 Packet Structure

```

//! Packet structure (ESP3)
typedef struct
{
    // Amount of raw data bytes to be received. The most significant byte is sent/received first
    uint16_t u16DataLength;
    // Amount of optional data bytes to be received
    uint8_t u8OptionLength;
    // Packe type code
    uint8_t u8Type;
    // Data buffer: raw data + optional bytes
    uint8_t *u8DataBuffer;
} PACKET_SERIAL_TYPE;

```

3.4.2 Get ESP3 Packet

```

//! \file uart_getPacket.c

#include "EO3000I_API.h"
#include "proc.h"
#include "uart.h"
#include "time.h"

/*
ESP3 packet structure through the serial port.

Protocol bytes are generated and sent by the application

Sync = 0x55
CRC8H
CRC8D

1         2         1         1         1         u16DataLen + u8OptionLen         1
+-----+-----+-----+-----+-----+-----+-----+
| 0x55 | u16DataLen | u8OptionLen | u8Type | CRC8H | DATAS | CRC8D |
+-----+-----+-----+-----+-----+-----+-----+

DATAS structure:

          u16DataLen          u8OptionLen
+-----+-----+-----+-----+
|          Data          | Optional |
+-----+-----+-----+-----+
*/

RETURN_TYPE uart_getPacket(PACKET_SERIAL_TYPE *pPacket, uint16_t u16BufferLength)
{
    //! uart_getPacket state machine states.
    typedef enum
    {
        //! Waiting for the synchronisation byte 0x55
        GET_SYNC_STATE=0,
        //! Copying the 4 after sync byte: raw data length (2 bytes), optional data length (1), type (1).
        GET_HEADER_STATE,
        //! Checking the header CRC8 checksum. Resynchronisation test is also done here
        CHECK_CRC8H_STATE,
        //! Copying the data and optional data bytes to the paquet buffer
        GET_DATA_STATE,
        //! Checking the info CRC8 checksum.
        CHECK_CRC8D_STATE,
    }

```

ENOCAN SERIAL PROTOCOL (ESP3) - SPECIFICATION

```

} STATES_GET_PACKET;

//! UART received byte code
uint8 u8RxByte;
//! Checksum calculation
static uint8 u8CRC = 0;
//! Nr. of bytes received
static uint16 u16Count = 0;
//! State machine counter
static STATES_GET_PACKET u8State = GET_SYNC_STATE;
//! Timeout measurement
static uint8 u8TickCount = 0;
// Byte buffer pointing at the packet address
uint8 *u8Raw = (uint8*)pPacket;
// Temporal variable
uint8 i;

// Check for timeout between two bytes
if (((uint8)ug32SystemTimer) - u8TickCount > SER_INTERBYTE_TIME_OUT)
{
    // Reset state machine to init state
    u8State = GET_SYNC_STATE;
}

// State machine goes on when a new byte is received
while (uart_getByte(&u8RxByte) == OK)
{
    // Tick count of last received byte
    u8TickCount = (uint8)ug32SystemTimer;

    // State machine to load incoming packet bytes
    switch(u8State)
    {
        // Waiting for packet sync byte 0x55
        case GET_SYNC_STATE:
            if (u8RxByte == SER_SYNCH_CODE)
            {
                u8State = GET_HEADER_STATE;
                u16Count = 0;
                u8CRC = 0;
            }

            break;

        // Read the header bytes
        case GET_HEADER_STATE:
            // Copy received data to buffer
            u8Raw[u16Count++] = u8RxByte;
            u8CRC = proc_crc8(u8CRC, u8RxByte);

            // All header bytes received?
            if (u16Count == SER_HEADER_NR_BYTES)
            {
                u8State = CHECK_CRC8H_STATE;
            }

            break;

        // Check header checksum & try to resynchronise if error happened
        case CHECK_CRC8H_STATE:
            // Header CRC correct?
            if (u8CRC != u8RxByte)
            {
                // No. Check if there is a sync byte (0x55) in the header
                int a = -1;
                for (i = 0 ; i < SER_HEADER_NR_BYTES ; i++)
                {
                    if (u8Raw[i] == SER_SYNCH_CODE)
                    {
                        // indicates the next position to the sync byte found
                        a=i+1;
                        break;
                    }
                };
            }
    }
}

```

ENOCAN SERIAL PROTOCOL (ESP3) - SPECIFICATION

```

    if ((a == -1) && (u8RxByte != SER_SYNC_CODE))
    {
        // Header and CRC8H does not contain the sync code
        u8State = GET_SYNC_STATE;
        break;
    }
    else if ((a == -1) && (u8RxByte == SER_SYNC_CODE))
    {
        // Header does not have sync code but CRC8H does.
        // The sync code could be the beginning of a packet
        u8State = GET_HEADER_STATE;
        u16Count = 0;
        u8CRC = 0;
        break;
    }

    // Header has a sync byte. It could be a new telegram.
    // Shift all bytes from the 0x55 code in the buffer.
    // Recalculate CRC8 for those bytes
    u8CRC = 0;
    for (i = 0 ; i < (SER_HEADER_NR_BYTES - a) ; i++)
    {
        u8Raw[i] = u8Raw[a+i];
        u8CRC = proc_crc8(u8CRC, u8Raw[i]);
    }
    u16Count = SER_HEADER_NR_BYTES - a;
    // u16Count = i; // Seems also valid and more intuitive than u16Count -= a;

    // Copy the just received byte to buffer
    u8Raw[u16Count++] = u8RxByte;
    u8CRC = proc_crc8(u8CRC, u8RxByte);

    if (u16Count < SER_HEADER_NR_BYTES)
    {
        u8State = GET_HEADER_STATE;
        break;
    }

    break;
}

// CRC8H correct. Length fields values valid?
if ((pPacket->u16DataLength + pPacket->u8OptionLength) == 0)
{
    //No. Sync byte received?
    if ((u8RxByte == SER_SYNC_CODE))
    {
        //yes
        u8State = GET_HEADER_STATE;
        u16Count = 0;
        u8CRC = 0;
        break;
    }

    // Packet with correct CRC8H but wrong length fields.
    u8State = GET_SYNC_STATE;
    return OUT_OF_RANGE;
}

// Correct header CRC8. Go to the reception of data.
u8State = GET_DATA_STATE;
u16Count = 0;
u8CRC = 0;

break;

// Copy the information bytes
case GET_DATA_STATE:

    // Copy byte in the packet buffer only if the received bytes have enough room
    if (u16Count < u16BufferLength)
    {
        pPacket->u8DataBuffer[u16Count] = u8RxByte;
        u8CRC = proc_crc8(u8CRC, u8RxByte);
    }

```


ENOCAN SERIAL PROTOCOL (ESP3) - SPECIFICATION

```
// When all expected bytes received, go to calculate data checksum
if( ++u16Count == (pPacket->u16DataLength + pPacket->u8OptionLength) )
{
    u8State = CHECK_CRC8D_STATE;
}

break;

// Check the data CRC8
case CHECK_CRC8D_STATE:

    // In all cases the state returns to the first state: waiting for next sync byte
    u8State = GET_SYNC_STATE;

    // Received packet bigger than space to allocate bytes?
    if (u16Count > u16BufferLength) return OUT_OF_RANGE;

    // Enough space to allocate packet. Equals last byte the calculated CRC8?
    if (u8CRC == u8RxByte) return OK; // Correct packet received

    // False CRC8.
    // If the received byte equals sync code, then it could be sync byte for next packet.
    if ((u8RxByte == SER_SYNC_CODE))
    {
        u8State = GET_HEADER_STATE;
        u16Count = 0;
        u8CRC = 0;
    }

    return NOT_VALID_CHKSUM;

default:

    // Yes. Go to the reception of info.
    u8State = GET_SYNC_STATE;
    break;
}

return (u8State == GET_SYNC_STATE) ? NO_RX_TEL : NEW_RX_BYTE;
}
```

3.4.3 Send ESP3 Packet


```
/// \file uart_sendPacket.c
```

```
#include "EO3000I_API.h"
#include "proc.h"
#include "uart.h"
```

```
/*
ESP3 packet structure through the serial port.
```

```
Protocol bytes are generated and sent by the application
```

```
Sync = 0x55
CRC8H
CRC8D
```



```
DATAS structure:
```



```
*/
```

```
RETURN_TYPE uart_sendPacket(PACKET_SERIAL_TYPE *pPacket)
{
    uint16 i;
    uint8 u8CRC;

    // When both length fields are 0, then this telegram is not allowed.
    if ((pPacket->u16DataLength || pPacket->u8OptionLength) == 0)
    {
        return OUT_OF_RANGE;
    }
    // Sync
    while(uart_sendByte(0x55) != OK);

    // Header
    while(uart_sendBuffer((uint8*)pPacket, 4) != OK);

    // Header CRC
    u8CRC = 0;
    u8CRC = proc_crc8(u8CRC, ((uint8*)pPacket)[0]);
    u8CRC = proc_crc8(u8CRC, ((uint8*)pPacket)[1]);
    u8CRC = proc_crc8(u8CRC, ((uint8*)pPacket)[2]);
    u8CRC = proc_crc8(u8CRC, ((uint8*)pPacket)[3]);
    while(uart_sendByte(u8CRC) != OK);

    // Data
    u8CRC = 0;
    for (i = 0 ; i < (pPacket->u16DataLength + pPacket->u8OptionLength) ; i++)
    {
        u8CRC = proc_crc8(u8CRC, pPacket->u8DataBuffer[i]);
        while(uart_sendByte(pPacket->u8DataBuffer[i]) != OK);
    }

    // Data CRC
    while(uart_sendByte(u8CRC) != OK);

    return OK;
}
```