

Classification Level: Top Secret() Secret() Internal() Public(√)

RKNN API For RKNPU User Guide

(Technology Department, Graphic Compute Platform Center)

Mark:	Version:	1.5.0
[] Changing	Author:	HPC/NPU Team
[√] Released	Completed Date:	22/May/2023
	Reviewer:	Vincent
	Reviewed Date:	22/May/2023

瑞芯微电子股份有限公司

Rockchip Electronics Co., Ltd.

(Copyright Reserved)

Revision History

Version	Modifier	Date	Modify Description	Reviewer
v0.6.0	HPC Team	2/Mar/2021	Initial version	Vincent
v0.7.0	HPC Team	22/Apr/2021	Remove description of swapping input data channels	Vincent
v1.0.0	HPC Team	30/Apr/2021	Release version	Vincent
v1.1.0	HPC Team	13/Aug/2021	<ol style="list-style-type: none"> 1. Add rknn_tensor_mem_flags 2. Add query commands for input/output Tensor native attributes 3. Add the memory layout of NC1HWC2 	Vincent
v1.2.0b1	NPU Team	07/Jan/2022	<ol style="list-style-type: none"> 1. Add RK3588/RK3588s pla 2. Add rknn_set_core_mask interface 3. Add rknn_dump_context interface 4. Add details for input and output API 	Vincent
v1.2.0	HPC Team	14/Jan/2022	<ol style="list-style-type: none"> 1. Add the Glossary 2. Add the NPU SDK guide and building and compiling instruction 3. Add the section of how to do debugging 4. Add the description of C2 in the section NATIVE_LAYOUT 	Vincent
v1.3.0	NPU /HPC Team	13/May/2022	<ol style="list-style-type: none"> 1. Fix name from destory to destroy 2. Add RV1106/RV1103 user guide 3. Add details for NATIVE_LAYOUT 4. Add C API hardware platform support description 5. Add NPU version, utilization query and instruction of NPU power manual switch 	Vincent

Version	Modifier	Date	Modify Description	Reviewer
v1.4.0	NPU /HPC Team	31/Aug/2022	1. For RV1106/RV1103 add rknn_create_mem_from_phys/ rknn_create_mem_from_fd/ rknn_set_weight_mem/ rknn_set_internal_mem support 2. Add function of weights shared 3. Add support of utilization of SRAM for RK3588 4. Add the support of single batch multi-cores of NPU for RK3588 5. Add new version of driver supporting the query of frequency, voltage, setting of a delay time for shutdown , etc.	Vincent
v1.4.2	HPC Team	13/Feb/2023	1. Add RK3562 user guide 2. Add RKNN_FLAG_COLLECT_MODEL_INFO_ONLY flag description in rknn_init interface	Vincent
V1.5.0	HPC Team	22/May/2023	1. Add dynamic shape input API instructions and related data structure instructions 2. Add instructions for using Matmul API	Vincent

Table of Contents

1 OVERVIEW	8
2 SUPPORTED HARDWARE PLATFORMS	8
3 GLOSSARY	8
4 INSTRUCTIONS	9
4.1 RKNN SDK DEVELOPMENT PROCESS	9
4.2 RKNN LINUX PLATFORM DEVELOPMENT INSTRUCTIONS	9
4.2.1 RKNN API Library For Linux	9
4.2.2 Example Usage	9
4.3 RKNN ANDROID PLATFORM DEVELOPMENT INSTRUCTIONS	10
4.3.1 RKNN API Library For Android	10
4.3.2 Example Usage	11
4.4 RKNN C API	12
4.4.1 C API hardware platform support description	12
4.4.2 API Process Description	13
4.4.2.1 API internal processing flow	18
4.4.2.2 Quantification and Dequantization	19
4.4.2.3 Dynamic shape input	20
4.4.3 API Reference	24
4.4.3.1 rknn_init	24
4.4.3.2 rknn_set_core_mask	26
4.4.3.3 rknn_dup_context	27
4.4.3.4 rknn_destroy	27
4.4.3.5 rknn_query	28
4.4.3.6 rknn_inputs_set	36

4.4.3.7 rknn_run.....	37
4.4.3.8 rknn_wait.....	37
4.4.3.9 rknn_outputs_get.....	37
4.4.3.10 rknn_outputs_release.....	38
4.4.3.11 rknn_create_mem_from_mb_blk.....	39
4.4.3.12 rknn_create_mem_from_phys.....	39
4.4.3.13 rknn_create_mem_from_fd.....	39
4.4.3.14 rknn_create_mem.....	40
4.4.3.15 rknn_destroy_mem.....	40
4.4.3.16 rknn_set_weight_mem.....	41
4.4.3.17 rknn_set_internal_mem.....	41
4.4.3.18 rknn_set_io_mem.....	42
4.4.3.19 rknn_set_input_shape.....	42
4.4.4 RKNN Definition of Data Structcture.....	44
4.4.4.1 rknn_sdk_version.....	44
4.4.4.2 rknn_input_output_num.....	44
4.4.4.3 rknn_input_range.....	44
4.4.4.4 rknn_tensor_attr.....	45
4.4.4.5 rknn_perf_detail.....	46
4.4.4.6 rknn_perf_run.....	47
4.4.4.7 rknn_mem_size.....	47
4.4.4.8 rknn_tensor_mem.....	48
4.4.4.9 rknn_input.....	48
4.4.4.10 rknn_output.....	49
4.4.4.11 rknn_init_extend.....	49
4.4.4.12 rknn_run_extend.....	49

4.4.4.13 rknn_output_extend.....	50
4.4.4.14 rknn_custom_string.....	50
4.4.5 Instruction of API Input and Output.....	50
4.4.5.1 General Input and Output of API (Non Zero Copy).....	50
4.4.5.2 Input and Output with Zero Copy of API.....	52
4.4.5.3 Instruction of looking up NATIVE_LAYOUT parameter.....	53
4.5 MATRIX MULTIPLICATION API.....	58
4.5.1 Matrix Multiplication API Reference.....	58
4.5.1.1 rknn_matmul_create.....	58
4.5.1.2 rknn_matmul_set_io_mem.....	59
4.5.1.3 rknn_matmul_set_core_mask.....	60
4.5.1.4 rknn_matmul_run.....	61
4.5.1.5 rknn_matmul_destroy.....	61
4.5.2 Definition of matrix multiplication data structure.....	62
4.5.2.1 rknn_matmul_info.....	62
4.5.2.2 rknn_matmul_tensor_attr.....	62
4.5.2.3 rknn_matmul_io_attr.....	63
4.5.3 Matrix multiplication input/output memory layout and data type description.....	63
4.5.4 Matrix Multiplication Specification Limits.....	64
4.5.4.1 Shape constraints.....	64
4.5.4.2 Input data type restrictions.....	65
4.6 RKNN ERROR CODE.....	66
4.7 NPU SDK INSTRUCTION.....	66
4.7.1 SDK Content Explain.....	66
4.8 DEBUGGING.....	68
4.8.1 Log Level.....	68

4.8.2 Printing for each layer	69
4.8.3 Profiling	69
4.8.3.1 <i>Checking the environment on the development board</i>	69
4.8.4 NPU supports query settings	71

1 Overview

RKNN SDK provides programming interfaces for all chips platforms with RKNPU, which can help users deploy RKNN models from RKNN-Toolkit2 and accelerate the implementation of AI applications.

2 Supported Hardware Platforms

This document applies to the following hardware platforms:

RK3566, RK3568, RK3588, RK3588S, RV1103, RV1106, RK3562

Note: RK3566_RK3568 is used to indicate RK3566/RK3568 in this document. RK3588 is used to indicate RK3588/RK3588S in this document.

3 Glossary

RKNN Model: It is the binary file running on the RKNPU, with the suffix .rknn.

Inference with board: It refers to use RKNN-Toolkit2 API interface to run the model. Actually, the model is running on the NPU on the development board.

HIDL: It denotes interface description language (IDL) to specify the interface between an android HAL and its users.

CTS: It is the Compatibility Test Suite from android automatic testing kit.

VTS: It is the Vendor Test Suite from android automatic testing kit.

DRM: It is the Direct Rendering Manager, a main stream of graph displaying framework on linux.

tensor: A multi-dimensional array of data.

fd: It is the file descriptor for representing the buffer.

NATIVE_LAYOUT: It refers to the native layout of NPU. In other words, it has the best performance when NPU is processing data with this memory layout.

i8 model: A quantized RKNN model which running by 8-bit signed integer data.

fp16 model: A non-quantized RKNN model which running by 16-bit half-float data.

4 Instructions

4.1 RKNN SDK Development Process

Before using the RKNN SDK, users first need to utilize the RKNN-Toolkit2 to convert the user's model to the RKNN model.

After getting the RKNN model file, users can choose using C interface to develop the application. The following chapters will explain how to develop applications via the RKNN SDK on RK3562/RK3566/RK3568/RK3588/RV1106/RV1103 platform.

4.2 RKNN Linux Platform Development Instructions

4.2.1 RKNN API Library For Linux

For the RK3562/RK3566/RK3568, the SDK library file is `librknnrt.so` under the directory of `<sdk>/rknpu2/runtime`. As for the RV1106/RV1103, the SDK library file is `librknnmrt.so` under the directory of `<sdk>/rknpu2/runtime`.

4.2.2 Example Usage

The SDK provides multiple reference examples such as MobileNet image classification, SSD object detection, YOLOv5 object detection, and dynamic shape input on the Linux platform.. These demos are the reference for developers to develop applications based on the RKNN SDK. The demo is located at the path of `<sdk>/rknpu2/examples`. Let's take RK3566/RK3568 `rknn_mobilenet_demo` as an example to explain how to get started quickly.

- 1) Compile Demo Source Code:

```
cd examples/rknn_mobilenet_demo
# set GCC_COMPILER in build-linux_RK3566_RK3568.sh to the correct compiler path
./build-linux_RK3566_RK3568.sh
```

2) Deploy to the RK3566/RK3568 device:

```
adb push install/rknn_mobilenet_demo_Linux /userdata/
```

3) Run Demo:

```
adb shell
cd /userdata/rknn_mobilenet_demo_Linux/
export LD_LIBRARY_PATH=./lib
./rknn_mobilenet_demo model/RK3566_RK3568/mobilenet_v1.rknn model/dog_224x224.jpg
```

4.3 RKNN Android Platform Development Instructions

4.3.1 RKNN API Library For Android

There are two ways to call the RKNN API on the Android platform:

- 1) The application can link librknnrt.so directly.
- 2) Application link to librknn_api_android.so implemented by HIDL on Android platform.

For Android devices that need to pass the CTS/VTS test, you can use the RKNN API based on the Android platform HIDL implementation. If the device does not need to pass the CTS/VTS test, it is recommended to directly link and use librknnrt.so as this way can shorten the calling and linking processing of each interface to offer better performance.

The code for the RKNN API implemented using Android HIDL is located in the vendor/rockchip/hardware/interfaces/neuralnetworks directory of the RK3566/RK3568 Android system SDK. When the Android system is compiled, some NPU related libraries will be generated (for applications only need to link librknn_api_android.so), as shown below:

```
/vendor/lib/librknn_api_android.so  
/vendor/lib/librknnhal_bridge.rockchip.so  
/vendor/lib64/librknn_api_android.so  
/vendor/lib64/librknnhal_bridge.rockchip.so  
/vendor/lib64/rockchip.hardware.neuralnetworks@1.0.so  
/vendor/lib64/rockchip.hardware.neuralnetworks@1.0-adapter-helper.so  
/vendor/lib64/hw/rockchip.hardware.neuralnetworks@1.0-impl.so  
/vendor/bin/hw/rockchip.hardware.neuralnetworks@1.0-service
```

Alternatively, user can use the following command to recompile and generate the above library separately.

```
mmm vendor/rockchip/hardware/interfaces/neuralnetworks/ -j8
```

4.3.2 Example Usage

At present, the SDK provides multiple reference examples such as MobileNet image classification, SSD object detection, YOLOv5 object detection, Android APK with camera input, dynamic shape input, etc. The demo code is located in the <sdk>/rknp2/examples directory. Users can use NDK to compile the demo executed in the Android command line. Let's take RK3566/RK3568 rknn_mobilenet_demo as an example to explain how to use this demo on the Android platform:

1) Compile Demo Source Code:

```
cd examples/rknn_mobilenet_demo  
#set ANDROID_NDK_PATH under build-android.sh to the correct NDK path  
./build-android_RK3566_RK3568.sh
```

2) Deploy to the RK3566 device:

```
adb push install/rknn_mobilenet_demo_Android /data/
```

3) Run Demo:

```
adb shell
cd /data/rknn_mobilenet_demo_Andorid/
export LD_LIBRARY_PATH=./lib
./rknn_mobilenet_demo model/RK3566_RK3568/mobilenet_v1.rknn model/dog_224x224.jpg
```

Note: The above demo uses the librknrt.so by default. For developers who want to use librkn_api_android.so, please refer to the README.md under the path of examples/librknn_api_android_demo/README.md.

4.4 RKNN C API

4.4.1 C API hardware platform support description

(1) RKNN C API hardware platform support:

	RKNN C API	RK3562/RK3566/ RK3568	RK3588	RV1106/RV1103
1	rknn_init	√	√	√
2	rknn_set_core_mask	×	√	×
3	rknn_dup_context	√	√	×
4	rknn_destroy	√	√	√
5	rknn_query	√	√	√
6	rknn_inputs_set	√	√	×
7	rknn_run	√	√	√
8	rknn_wait	×	×	×
9	rknn_outputs_get	√	√	×
10	rknn_outputs_release	√	√	√
11	rknn_create_mem_from_mb_blk	×	×	×
12	rknn_create_mem_from_phys	√	√	√
13	rknn_create_mem_from_fd	√	√	√
14	rknn_create_mem	√	√	√
15	rknn_destroy_mem	√	√	√
16	rknn_set_weight_mem	√	√	√
17	rknn_set_internal_mem	√	√	√
18	rknn_set_io_mem	√	√	√
19	rknn_set_input_shape	√	√	×

For more detailed instructions on RKNN C API, please refer to section 4.4.3 API Reference.

(2) rknn_query params hardware platform support:

	rknn_query params	RK3562/ RK3566/ RK3568	RK3588	RV1106/RV1103
1	RKNN_QUERY_IN_OUT_NUM	√	√	√
2	RKNN_QUERY_INPUT_ATTR	√	√	√
3	RKNN_QUERY_OUTPUT_ATTR	√	√	√
4	RKNN_QUERY_PERF_DETAIL	√	√	×
5	RKNN_QUERY_PERF_RUN	√	√	×
6	RKNN_QUERY_SDK_VERSION	√	√	√
7	RKNN_QUERY_MEM_SIZE	√	√	√
8	RKNN_QUERY_CUSTOM_STRING	√	√	√
9	RKNN_QUERY_NATIVE_INPUT_ATTR	√	√	√
10	RKNN_QUERY_NATIVE_OUTPUT_ATTR	√	√	√
11	RKNN_QUERY_NATIVE_NCIHWC2_INPUT_ATTR	√	√	√
12	RKNN_QUERY_NATIVE_NCIHWC2_OUTPUT_ATTR	√	√	√
13	RKNN_QUERY_NATIVE_NHWC_INPUT_ATTR	√	√	√
14	RKNN_QUERY_NATIVE_NHWC_OUTPUT_ATTR	√	√	√
15	RKNN_QUERY_INPUT_DYNAMIC_RANGE	√	√	×
16	RKNN_QUERY_CURRENT_INPUT_ATTR	√	√	×
17	RKNN_QUERY_CURRENT_OUTPUT_ATTR	√	√	×

4.4.2 API Process Description

At present, there are two groups of APIs that can be used on RK3562/RK3566/RK3568/RK3588, namely the general API interface and the API interface for the zero-copy process, but **RV1106/RV1103 only support the API interface for the zero-copy process**. The main difference between the two sets of APIs is that each time the general interface updates the frame data, the data allocated externally needs to be copied to the input memory of the NPU during runtime, while the interface of the zero-copy process uses pre-allocated memory directly (including memory created by NPU or other frame, such as DRM), reducing the cost of copying memory. When the user input data has only a virtual address, only the common API interface can be used; when the user input data has a physical address or fd, both sets of interfaces can be used. General API and zero-copy API interface cannot be called together.

For the general API interface, the *rknn_input* structure is initialized at first. The frame data is contained in the structure. The input of models is set by using *rknn_inputs_set* function. After the

completion of inference, the inference output can be acquired by the *rknn_outputs_get* function and performed for post-processing. The frame data must be updated before inference. The process of general API call is shown in Figure 4-1, and user behavior is indicated by the process in yellow font.

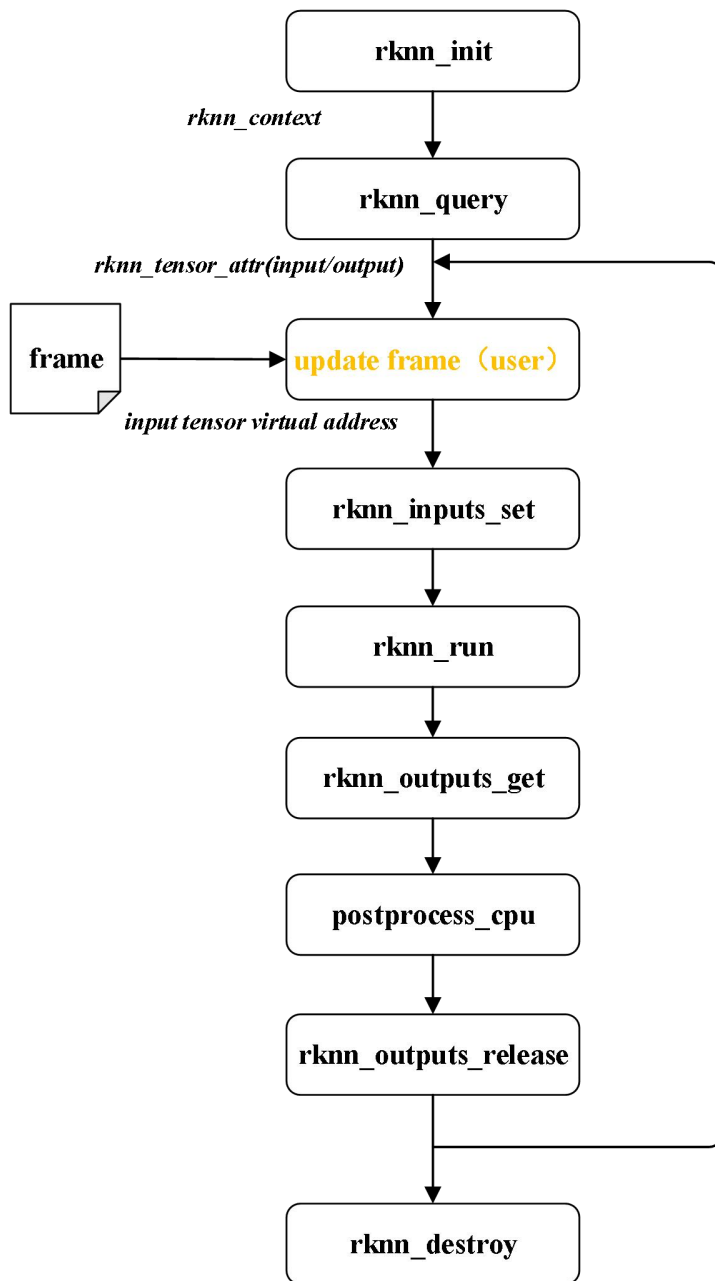


Figure 4-1: General process of calling general interface of API

For the zero-copy interface of API, after allocating memory, the *rknn_tensor_mem* structure is initialized by the memory information from allocated memory. Creating this structure before the inference is necessary. And the memory information can be retrieved by reading this structure after inference. According to whether the user needs to allocate the modular memory inside model

(input/output/weights/intermediate result) and the differences of memory representation (file descriptor/physical address, etc.), there are the following three typical zero-copy calling processes, as shown in Figure 4-2, Figure 4-3 and Figure 4-4 respectively. The red font indicates the interface and data structure specially added for zero copy and the italic indicates the data structure passed between interface calls.

1) Input/Output memory is allocated by API during runtime

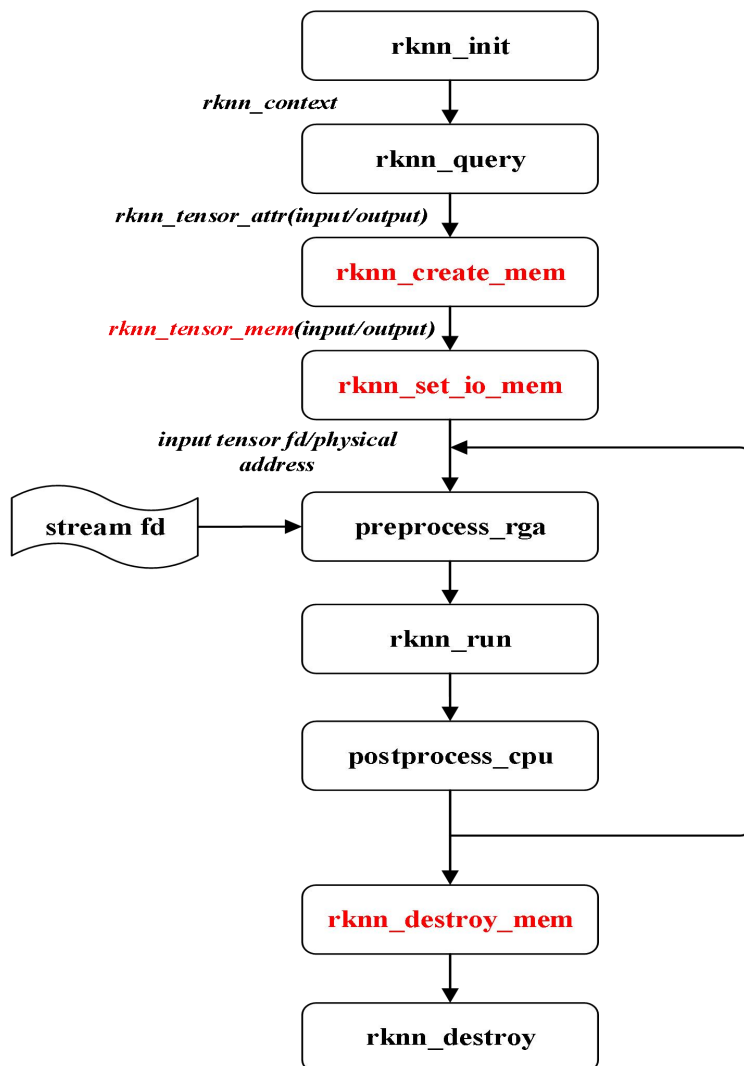


Figure 4-2: Process of zero-copy API interface call (input/output allocated internally)

As shown in Figure 4-2, the input/output memory information structure created by the `rknn_create_mem` interface includes the file descriptor and physical addresses. The RGA interface utilizes the memory information allocated by the NPU during runtime. In the above figure, `preprocess_rga` represents the RGA interface, and `stream_fd` represents the input source buffer

represented by fd in RGA, postprocess_cpu represents the CPU implementation of post processing.

2) Input/output memory is allocated externally

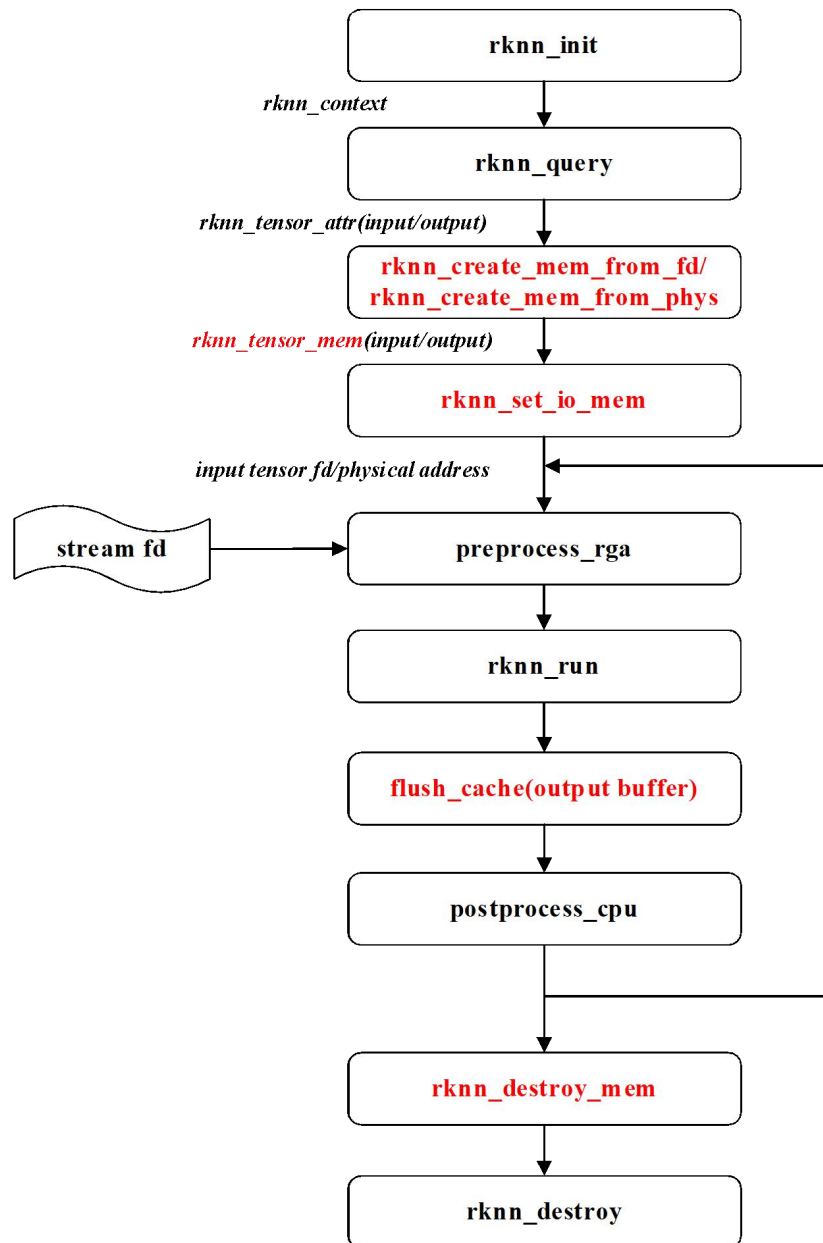


Figure 4-3: The process zero-copy API interface call (input/output allocated externally)

As shown Figure 4-3, `flush_cache` indicates that the user needs to call the interface associated with the memory type to flush the output buffer.

3) Input/output/weights/internal tensor memory is allocated externally

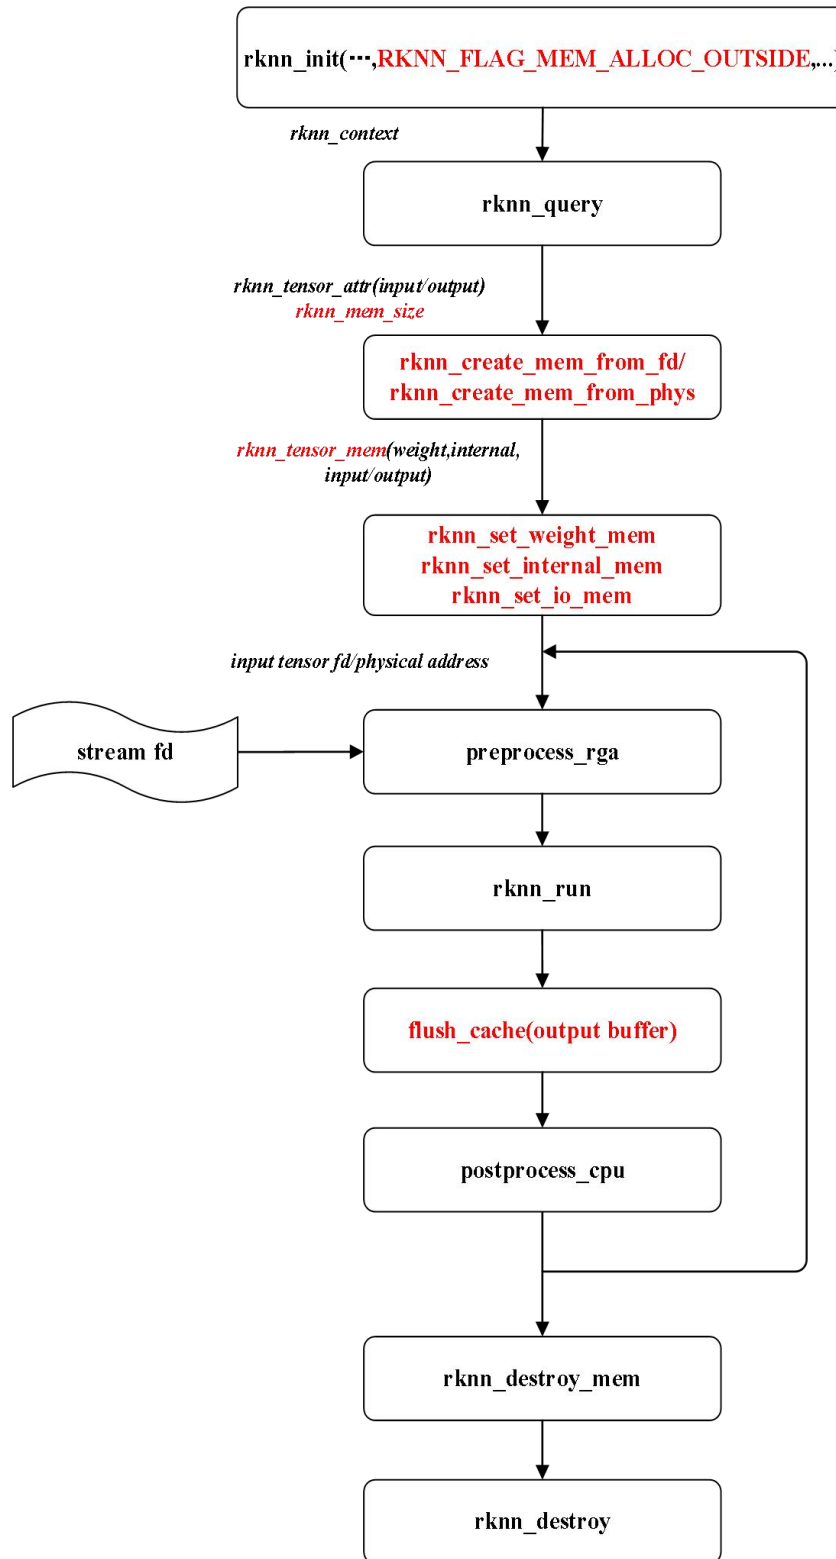


Figure 4-4: The process of zero-copy API interface call (input/output/weights/internal tensor allocated externally)

4.4.2.1 API internal processing flow

When inferring the RKNN model, the original data need to go through three major processes: input processing, running model on NPU, and output processing. Currently, according to different model input formats and quantization methods, there are two different processes inside the general API interface (**Note: RV1106/RV1103 only supports int8 quantization model, and with uint8 data input with 1 or 3 or 4 channels**).

1) int8 quantized model and the number of input channels is 1 or 3 or 4

The processing flow of the original data is shown in Figure 4-5. Assuming that the input is a 4-channel model, the user must ensure that the color order of the R, G, and B channels is consistent with the training model. Normalization, quantization, and model inference are all running on the NPU. The output data layout format and dequantization process is running on the CPU.

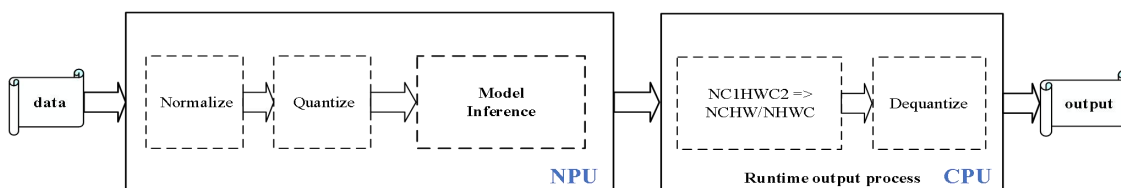


Figure 4-5: Optimized data processing flow

2) int8 quantized model and non-quantized model when number of input channels is 2 or >= 4

The flow of data processing is shown in Figure 4-6. The normalization, quantification, data layout format conversion, and dequantization of data are all running on the CPU except for the inference of the model which runs on the NPU. In this scenario, the processing efficiency of the input data flow would be lower than the optimized one in Figure 4-5.

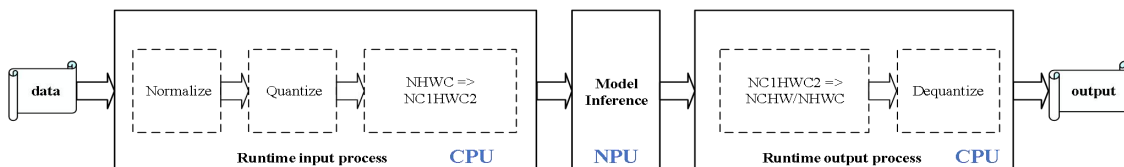


Figure 4-6: Common data processing flow

For the zero-copy API, there is only one processing flow for the internal process of the API, as shown in Figure 4-5. Conditions for using zero copy are listed below:

1. The number of input channels is 1, 3 or 4.

2. The input width is 8 pixel aligned for RK3566/RK3568, The input width is 16 pixel aligned for RK3562, RK3588 and RV1106/RV1103 .

3. Int8 asymmetric quantized model.

4.4.2.2 Quantification and Dequantization

The quantization method, quantization data type and quantization parameters used in quantization and dequantization can be queried through the **rknn_query** interface.

At the moment, the NPU of RK3562/RK3566/RK3568/RV1106/RV1103 only supports asymmetric quantization, and does not support dynamic fixed-point quantization. The combination of data type and quantization method includes:

- int8 (asymmetric quantization)
- int16 (asymmetric quantization, **not yet implemented**)
- float16 (**unavailable RV1106/RV1103**)

Generally speaking, the normalized data is stored in 32-bit floating point data. For conversion of 32-bit floating point data to 16-bit floating point data, it is better for referring to the IEEE-754 standard. The following describes the quantization process, assuming that the normalized 32-bit floating point data is D.

1) float32 to int8(asymmetric quantization)

Assuming that the asymmetric quantization parameter of the input tensor is S_q , ZP, the data quantization process is expressed as the following formula:

$$D_q = \text{round} \left(\text{clamp} \left(D / S_q + \text{ZP}, -128, 127 \right) \right)$$

In the above formula, clamp means to limit the value to a certain range. round means rounding processing.

2) float32 to int16(asymmetric quantization)

Assuming that the asymmetric quantization parameter of the input tensor is S_q , ZP, the data

quantization process is expressed as the following formula:

$$D_q = \text{round}\left(\text{clamp}\left(D/S_q + \text{ZP}, -32768, 32767\right)\right)$$

The dequantization process is the inverse process of quantization, and the dequantization formula can be deduced according to the above quantization formula, which will not be repeated here.

4.4.2.3 Dynamic shape input

Dynamic shape input means that the shape of the model input data can change at runtime (**not supported by RV1106/RV1103**). It can help to deal with the case where the input data size is not fixed and increase the flexibility of the model. Dynamic shape input plays an important role in image processing and sequence model inference. For details, please refer to "doc/RKNN_Dynamic_Shape_Usage.md". The requirements for the RKNN SDK version of this function are as follows:

1. RKNN-Toolkit2 version >=1.5.0

2. RKNPU Runtime library version >=1.5.0

The steps to use the dynamic shape input function are as follows:

1. Confirm that the model supports dynamic shape input

First, you need to confirm that your model supports dynamic shape input. Not all models support dynamic shape input. For example, the shape of a constant cannot be changed. RKNN-Toolkit2 returns an error to the model that cannot support dynamic shape input during the conversion process. The user can confirm whether the model supports dynamic shape input according to the error message. If your model does not support dynamic shape input, you need to retrain the model to support dynamic shape input.

2. Create a dynamic shape input RKNN model

Before using RKNN C API for inference, the model needs to be converted to RKNN format. The RKNN-Toolkit2 tool can be used to complete this process. If you wish to use dynamic shape inputs,

set the list of shapes for each input during conversion. For a complete example of creating a dynamic shape input RKNN model, please refer to https://github.com/rockchip-linux/rknn-toolkit2/tree/master/examples/functions/dynamic_input.

3. Call the C API to deploy the dynamic shape input RKNN model

After getting the dynamic shape input RKNN model, the next step is to use the RKNPU C API for deployment. Taking the common API as an example, the calling process is shown in Figure 4-7. After loading the dynamic shape input RKNN model, the input shape can be dynamically modified at runtime. First, the list of input shapes supported by the RKNN model can be queried through `rknn_query`. The shape list information supported by each input is returned in the form of the `rknn_input_range` structure, which includes the name of each input, data layout information, number of shapes, and specific shapes. Then, by calling the `rknn_set_input_shape` interface, passing in the `rknn_tensor_attr` pointer containing shape information can set the shape used by the current inference. After setting the input shape, you can call `rknn_query` again to query the input and output shapes after the current setting is successful. Finally, complete inference according to the normal API process. Every time you switch the input shape, you need to set a new shape again, prepare the data of the new shape size and call the `rknn_inputs_set` interface again..

Note: For the dynamic shape input RKNN model, the `rknn_query` interface only supports non-NATIVE input/output attribute query commands, and does not support the zero-copy process in which users use external interfaces to allocate memory.

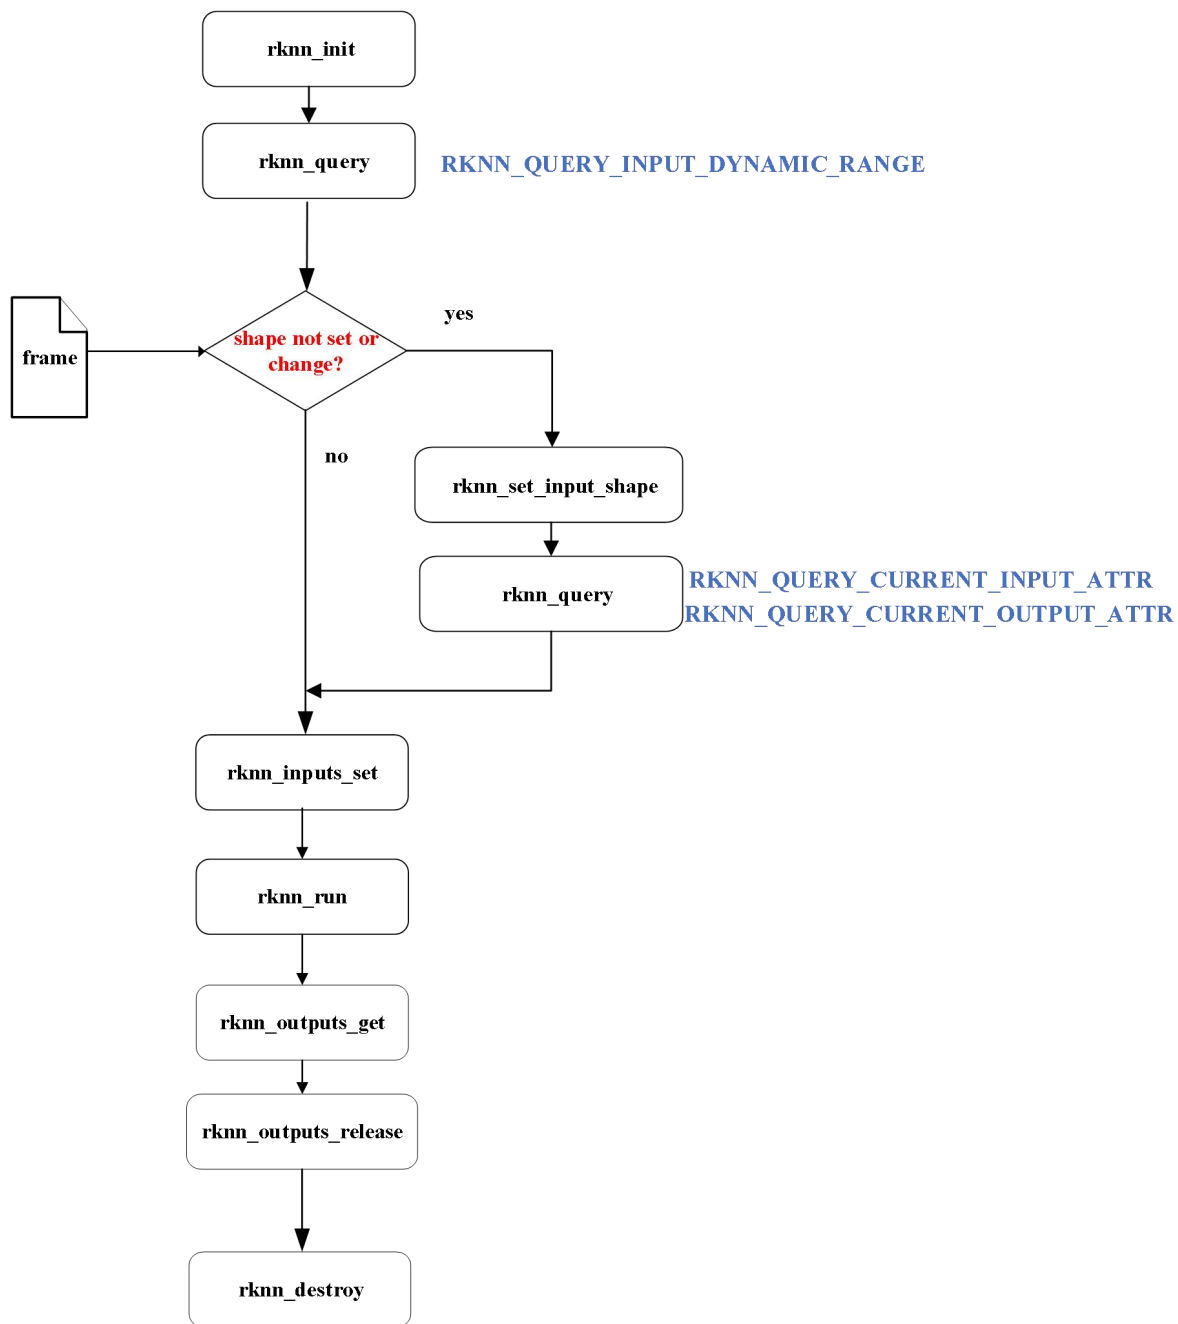


Figure 4-7 Dynamic shape input normal interface call process

For the zero-copy API, the normal usage call process is shown in Figure 4-8. First, the list of input shapes supported by the RKNN model can be queried through `rknn_query`, and the input and output memory of **the largest shape** can be allocated by calling the `rknn_create_mem` interface. Then, by calling the `rknn_set_input_shape` interface, passing in the `rknn_tensor_attr` pointer containing shape information can set the shape used by the current inference. After setting the input shape, you can call `rknn_query` again to query the successfully set input and output shapes. Finally,

call the `rknn_set_io_mem` interface to set the required input and output memory. Every time you switch the input shape, you need to set a new shape again, prepare the data of the new shape size and call the `rknn_set_io_mem` interface again • .

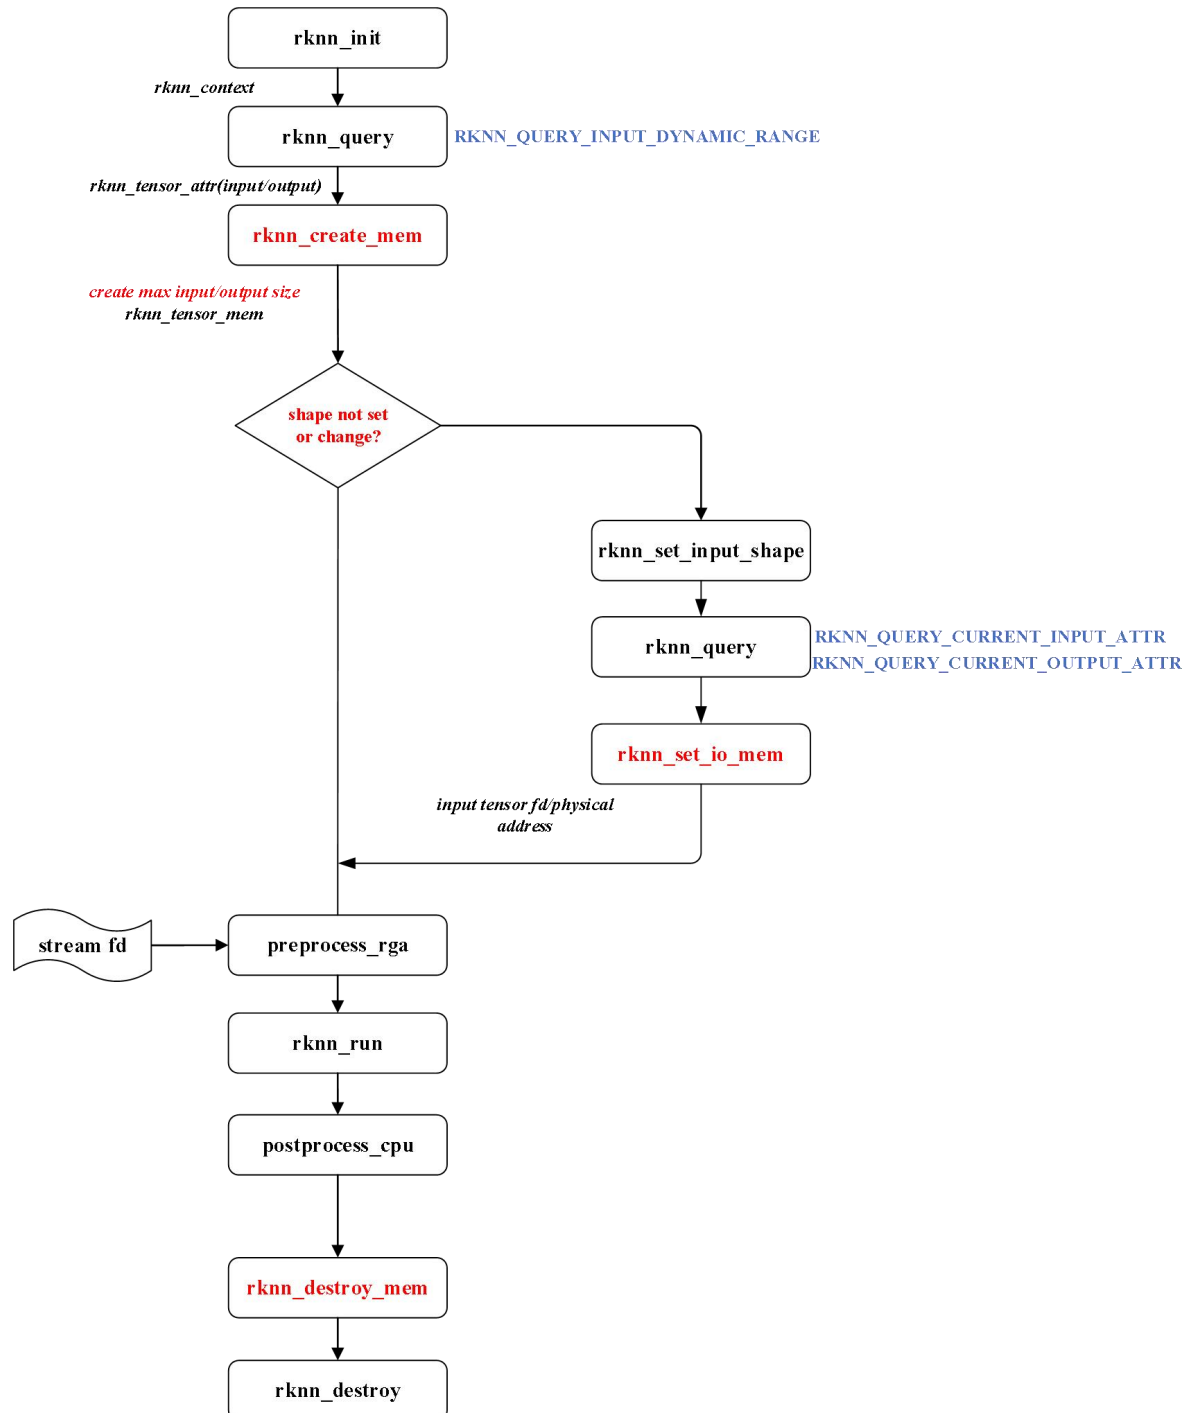


Figure 4-8 Zero-copy API call process of the dynamic shape input interface

The complete dynamic shape input C API Demo is located at https://github.com/rockchip-linux/rknpu2/tree/master/examples/rknn_dynamic_shape_input_demo.

4.4.3 API Reference

4.4.3.1 rknn_init

The `rknn_init` will do the following things, such as, creating the `rknn_context` object, loading the RKNN model, and performing specific initialization behaviors according to the flag and `rknn_init_extend` structure.

API	<code>rknn_init</code>
Description	Initialize rknn.
Parameters	<code>rknn_context *context</code> : The pointer of <code>rknn_context</code> object. After the function is called, the object of the context will be returned with the information.
	<code>void *model</code> : Binary data for the RKNN model or the path of RKNN model.
	<code>uint32_t size</code> : When model is stored in binary data, it indicates the size of the model. The size is 0 when model is given as the path.
	<code>uint32_t flag</code> : A specific initialization flag. Now, it only has the following flags. RKNN_FLAG_COLLECT_PERF_MASK: For querying the time it took to run each particular layer during runtime; RKNN_FLAG_MEM_ALLOC_OUTSIDE: Used to indicate that model inputs, outputs, weights, and intermediate tensor memory are all allocated by the user; RKNN_FLAG_SHARE_WEIGHT_MEM: Used to share weight from another model; RKNN_FLAG_COLLECT_MODEL_INFO_ONLY: Used to initialize an empty context, it can only call the <code>rknn_query</code> interface to query the total size of the model weight memory and the total size of the internal tensor, but can not perform inference.
	<code>rknn_init_extend</code> : The extended information during specific initialization. It is disabled at the moment, which indicates this must be passed by the NULL. If using share weight, it should pass the pointer of another <code>rknn_context</code> pointing to another model.
Return	int: Error code (See RKNN Error Code).

Sample Code:

```
rknn_context ctx;
int ret = rknn_init(&ctx, model_data, model_data_size, 0, NULL);
```

Explanation:

RKNN_FLAG_MEM_ALLOC_OUTSIDE: Two main functions

1) All memory is allocated by users, which is handy for management of overall memory usage

of the whole system.

2) For the case of reusing memory, in particular for the RV1103/1106, in which the memory usage is quite limited, the internal tensor memory from two different models can be reused only when these two models are running in series order (parallel running is not allowed in this case). This is the same for more than two or three models for sharing internal tensor memory.

The example code is shown below.

```
rknn_context ctx_a, ctx_b;

rknn_init(&ctx_a, model_path_a, 0, RKNN_FLAG_MEM_ALLOC_OUTSIDE, NULL);
rknn_query(ctx_a, RKNN_QUERY_MEM_SIZE, &mem_size_a, sizeof(mem_size_a));

rknn_init(&ctx_b, model_path_b, 0, RKNN_FLAG_MEM_ALLOC_OUTSIDE, NULL);
rknn_query(ctx_b, RKNN_QUERY_MEM_SIZE, &mem_size_b, sizeof(mem_size_b));

max_internal_size = MAX(mem_size_a.total_internal_size, mem_size_b.total_internal_size);
internal_mem_max = rknn_create_mem(ctx_a, max_internal_size);

internal_mem_a = rknn_create_mem_from_fd(ctx_a, internal_mem_max->fd,
    internal_mem_max->virt_addr, mem_size_a.total_internal_size, 0);
rknn_set_internal_mem(ctx_a, internal_mem_a);

internal_mem_b = rknn_create_mem_from_fd(ctx_b, internal_mem_max->fd,
    internal_mem_max->virt_addr, mem_size_b.total_internal_size, 0);
rknn_set_internal_mem(ctx_b, internal_mem_b);
```

RKNN_FLAG_SHARE_WEIGHT_MEM: It is used for models with various input length, especially for some natural language models. Due to the fact that NPU cannot support flexible input length, it is required to have multiple models difference only in input resolution. Thus, the weight can be shared between models since they all have the same weights.

The following are steps for showing how to use this flag:

Assuming A and B model,

- 1) Using RKNN-Toolkit2 for generating model A with the input resolution A.
- 2) Using RKNN-Toolkit2 for generating model B without weight with input resolution B, which can be done via `remove_weight` in `rknn.config()` in RKNN-Toolkit2. This can reduce

the size of model B.

3) Initialize the model A .

4) Initialize the model B with this flag.

5) Then following the instruction as described:

```
rknn_context ctx_a, ctx_b;
rknn_init(&ctx_a, model_path_a, 0, 0, NULL);

rknn_init_extend extend;
extend.ctx = ctx_a;
rknn_init(&ctx_b, model_path_b, 0, RKNN_FLAG_SHARE_WEIGHT_MEM, &extend);
```

4.4.3.2 rknn_set_core_mask

This function sets the specific cores running inside the NPU. For now, it only works at the RK3588 (including 3 NPU cores). It will return the error code if it is set on RK3562/RK3566/RK3568/RV1106/RV1103.

API	rknn_set_core_mask
Description	Set the cores for the NPU.
Parameters	<p><i>rknn_context context</i>: The object of rknn context.</p> <p><i>rknn_core_mask core_mask</i>: The specification of NPU core setting. It has the following choices:</p> <p>RKNN_NPU_CORE_AUTO : Referring to automatic mode, meaning that it will select the idle core inside the NPU;</p> <p>RKNN_NPU_CORE_0 : Running on the NPU0 core;</p> <p>RKNN_NPU_CORE_1: Runing on the NPU1 core;</p> <p>RKNN_NPU_CORE_2: Runing on the NPU2 core;</p> <p>RKNN_NPU_CORE_0_1: Running on both NPU0 and NPU1 core simultaneously;</p> <p>RKNN_NPU_CORE_0_1_2: Running on both NPU0, NPU1 and NPU2 simultaneously.</p>
Return	int: Error code (See RKNN Error Code).

Sample Code:

```
rknn_context ctx;
rknn_core_mask core_mask = RKNN_NPU_CORE_0;
int ret = rknn_set_core_mask(ctx, core_mask);
```

For multi-cores mode (when enabling RKNN_NPU_CORE_0_1 and RKNN_NPU_CORE_0_1_2),

the following ops have better acceleration :

Conv, DepthwiseConvolution, Add, Concat, Relu, Clip, Relu6, ThresholdedRelu, Prelu, LeakyRelu.

Other type of op will fallback to Core0 to continue running. In the future update, some ops like Pool or ConvTranpose will be supported.

4.4.3.3 rknn_dup_context

The `rknn_dup_context` creates a new context object referring to the same model. The new context is useful in the condition where the weight of the model need to be reused during executing the same model on the multi-thread (**Unavailable for RV1106/RV1103**) .

API	<code>rknn_dup_context</code>
Description	Creates a new context for the same model, to reuse the weight of the model.
Parameters	<code>rknn_context *context_in</code> : The pointer of <code>rknn_context</code> object. After the function is called, the object of the input context will be initialized.
	<code>rknn_context *context_out</code> : The pointer of a <code>rknn_context</code> output object where information about this new created object is returned.
Return	int: Error code (See RKNN Error Code).

Sample Code:

```
rknn_context ctx_in;
rknn_context ctx_out;
int ret = rknn_dup_context(&ctx_in, &ctx_out);
```

4.4.3.4 rknn_destroy

This function is used to release the `rknn_context` and its related resources.

API	<code>rknn_destroy</code>
Description	Destroy the <code>rknn_context</code> object and its related resources.
Parameters	<code>rknn_context context</code> : The <code>rknn_context</code> object that is going to be destroyed.
Return	int: Error code (See RKNN Error Code).

Sample Code:

```
rknn_context ctx;
int ret = rknn_destroy(ctx);
```

4.4.3.5 rknn_query

The `rknn_query` function can query the information of models and SDK, including model input and output information, layer-by-layer running time, total model inference time, SDK version, memory usage information, user-defined strings and other information.

API	<code>rknn_query</code>
Description	Query the information about the model and the SDK.
Parameters	<i>rknn_context context</i> : The object of <code>rknn_context</code> .
	<i>rknn_query_cmd</i> : The query command.
	<i>void* info</i> : The structure object that stores the result of the query.
	<i>uint32_t size</i> : The size of the info structure object.
Return	int: Error code (See RKNN Error Code).

Currently, the SDK supports following query commands:

Query command	Return result structure	Function
RKNN_QUERY_IN_OUT_NUM	rknn_input_output_num	Query the number of input and output Tensors.
RKNN_QUERY_INPUT_ATTR	rknn_tensor_attr	Query the input Tensor attribute.
RKNN_QUERY_OUTPUT_ATTR	rknn_tensor_attr	Query the output Tensor attribute.
RKNN_QUERY_PERF_DETAIL	rknn_perf_detail	Query the running time of each layer of the network. It only works when the flag of RKNN_FLAG_COLLECT_PERF_MASK is set via using the rknn_init.
RKNN_QUERY_PERF_RUN	rknn_perf_run	Query the total time of inference (excluding time in setting input/output) in microseconds .
RKNN_QUERY_SDK_VERSION	rknn_sdk_version	Query the SDK version.
RKNN_QUERY_MEM_SIZE	rknn_mem_size	Query the memory size allocated for the weights and internal tensors in the network.
RKNN_QUERY_CUSTOM_STRING	rknn_custom_string	Query the user-defined strings in the RKNN model.
RKNN_QUERY_NATIVE_INPUT_ATTR	rknn_tensor_attr	When using the zero-copy API interface, it queries the native input Tensor attribute, which is the model input attribute directly read by the NPU.
RKNN_QUERY_NATIVE_OUTPUT_ATTR	rknn_tensor_attr	When using the zero-copy API interface, query the native output Tensor attribute, which is the model output attribute directly from the NPU.
RKNN_QUERY_NATIVE_NC1HWC2_INPUT_ATTR	rknn_tensor_attr	When using the zero-copy API interface, it queries the native input Tensor attribute, which is the model input attribute directly read by the NPU.it is same with RKNN_QUERY_NATIVE_INP

		UT_ATTR.
RKNN_QUERY_NATIVE_NCIHWC2_OUTPUT_ATTR	rknn_tensor_attr	When using the zero-copy API interface, it queries the native output Tensor attribute, which is the model input attribute directly read by the NPU.it is same with RKNN_QUERY_NATIVE_OUT PUT_ATTR.
RKNN_QUERY_NATIVE_NHWC_INPUT_ATTR	rknn_tensor_attr	When using the zero-copy API interface, it queries the native input Tensor attribute, which is the model input attribute directly read by the NPU.it is same with RKNN_QUERY_NATIVE_INP UT_ATTR.
RKNN_QUERY_NATIVE_NHWC_OUTPUT_ATTR	rknn_tensor_attr	When using the zero-copy API interface, it queries the native output NHWC Tensor attribute, which is the model input attribute directly read by the NPU.
RKNN_QUERY_INPUT_DYNAMIC_RANGE	rknn_input_range	When using the RKNN model that supports dynamic shapes, query the model to support input information such as the number of shapes, list, data layout and name corresponding to the shape.
RKNN_QUERY_CURRENT_INPUT_ATTR	rknn_tensor_attr	When using the RKNN model that supports dynamic shapes, query the input attributes used by the model for current inference.
RKNN_QUERY_CURRENT_OUTPUT_ATTR	rknn_tensor_attr	When using the RKNN model that supports dynamic shapes, query the output attributes used by the model for current inference.

Next we will explain each query command in detail.

1) Query the SDK version

The `RKNN_QUERY_SDK_VERSION` command can be used to query the version information of the RKNN SDK. You need to create the `rknn_sdk_version` structure object first.

Sample Code:

```
rknn_sdk_version version;
ret = rknn_query(ctx, RKNN_QUERY_SDK_VERSION, &version,
                sizeof(rknn_sdk_version));
printf("sdk api version: %s\n", version.api_version);
printf("driver version: %s\n", version.drv_version);
```

2) Query the number of input and output Tensor

The `RKNN_QUERY_IN_OUT_NUM` command can be used to query the number of model input and output Tensor. You need to create the `rknn_input_output_num` structure object first.

Sample Code:

```
rknn_input_output_num io_num;
ret = rknn_query(ctx, RKNN_QUERY_IN_OUT_NUM, &io_num,
                sizeof(io_num));
printf("model input num: %d, output num: %d\n", io_num.n_input,
        io_num.n_output);
```

3) Query input Tensor attribute (for general API interface)

The `RKNN_QUERY_INPUT_ATTR` command can be used to query the attribute of the model input Tensor. You need to create the `rknn_tensor_attr` structure object first (**Note: the tensor queried by RV1106/RV1103 is the tensor originally entered as native**).

Sample Code:

```
rknn_tensor_attr input_attrs[io_num.n_input];
memset(input_attrs, 0, sizeof(input_attrs));
for (int i = 0; i < io_num.n_input; i++) {
    input_attrs[i].index = i;
    ret = rknn_query(ctx, RKNN_QUERY_INPUT_ATTR, &(input_attrs[i]),
                    sizeof(rknn_tensor_attr));
}
```

4) Query output Tensor attribute (for general API interface)

The `RKNN_QUERY_OUTPUT_ATTR` command can be used to query the attribute of the model

output Tensor. You need to create the *rknn_tensor_attr* structure object first.

Sample Code:

```
rknn_tensor_attr output_attrs[io_num.n_output];
memset(output_attrs, 0, sizeof(output_attrs));
for (int i = 0; i < io_num.n_output; i++) {
    output_attrs[i].index = i;
    ret = rknn_query(ctx, RKNN_QUERY_OUTPUT_ATTR, &(output_attrs[i]),
                    sizeof(rknn_tensor_attr));
}
```

5) Query layer-by-layer inference time of model

After the *rknn_run* interface is called, the *RKNN_QUERY_PERF_DETAIL* command can be used to query the layer-by-layer inference time in microseconds. The premise of using this command is that the *flag* parameter of the *rknn_init* interface needs to include the *RKNN_FLAG_COLLECT_PERF_MASK* flag.

Sample Code:

```
rknn_context ctx;
int ret = rknn_init(&ctx, model_data, model_data_size,
                  RKNN_FLAG_COLLECT_PERF_MASK, NULL);
...
ret = rknn_run(ctx, NULL);
...
rknn_perf_detail perf_detail;
ret = rknn_query(ctx, RKNN_QUERY_PERF_DETAIL, &perf_detail,
                sizeof(perf_detail));
```

6) Query total inference time of model

After the *rknn_run* interface is called, the *RKNN_QUERY_PERF_RUN* command can be used to query the inference time of the model (not including setting input/output) in microseconds.

Sample Code:


```
rknn_context ctx;
int ret = rknn_init(&ctx, model_data, model_data_size, 0, NULL);
...
ret = rknn_run(ctx, NULL);
...
rknn_perf_run perf_run;
ret = rknn_query(ctx, RKNN_QUERY_PERF_RUN, &perf_run,
                 sizeof(perf_run));
```

7) Query the memory allocation of the model

After the `rknn_init` interface is called, when the user needs to allocate memory for network by themselves, the `RKNN_QUERY_MEM_SIZE` command can be used to query the weights of the model and the internal memory (excluding input and output) in the network. The requirement of using this command is that the `flag` parameter of the `rknn_init` interface needs to enable the `RKNN_FLAG_MEM_ALLOC_OUTSIDE` flag.

Sample Code:

```
rknn_context ctx;
int ret = rknn_init(&ctx, model_data, model_data_size,
                  RKNN_FLAG_MEM_ALLOC_OUTSIDE, NULL);
rknn_mem_size mem_size;
ret = rknn_query(ctx, RKNN_QUERY_MEM_SIZE, &mem_size,
                 sizeof(mem_size));
```

8) Query User-defined string in the model

After the `rknn_init` interface is called, if the user has added custom strings when generating the RKNN model, the `RKNN_QUERY_CUSTOM_STRING` command can be used to retrieve user-defined strings.

Sample Code:

```
rknn_context ctx;
int ret = rknn_init(&ctx, model_data, model_data_size, 0, NULL);
rknn_custom_string custom_string;
ret = rknn_query(ctx, RKNN_QUERY_CUSTOM_STRING, &custom_string,
                 sizeof(custom_string));
```

9) Query native input tensor attribute (for zero-copy API interface)

The *RKNN_QUERY_NATIVE_INPUT_ATTR* command can be used to query the native attribute of the model input Tensor. User need to create the *rknn_tensor_attr* structure object first.

Sample Code:

```
rknn_tensor_attr input_attrs[io_num.n_input];
memset(input_attrs, 0, sizeof(input_attrs));
for (int i = 0; i < io_num.n_input; i++) {
    input_attrs[i].index = i;
    ret = rknn_query(ctx, RKNN_QUERY_NATIVE_INPUT_ATTR,
                    &(input_attrs[i]), sizeof(rknn_tensor_attr));
}
```

10) Query native output tensor attribute (for zero-copy API interface)

The *RKNN_QUERY_NATIVE_OUTPUT_ATTR* command can be used to query the native attribute of the model output Tensor. User need to create the *rknn_tensor_attr* structure object first.

Sample Code:

```
rknn_tensor_attr output_attrs[io_num.n_output];
memset(output_attrs, 0, sizeof(output_attrs));
for (int i = 0; i < io_num.n_output; i++) {
    output_attrs[i].index = i;
    ret = rknn_query(ctx, RKNN_QUERY_NATIVE_OUTPUT_ATTR,
                    &(output_attrs[i]), sizeof(rknn_tensor_attr));
}
```

11) Query native output tensor attribute (for zero-copy API interface)

The *RKNN_QUERY_NATIVE_NHWC_INPUT_ATTR* command can be used to query the NHWC attribute of the model input Tensor. User need to create the *rknn_tensor_attr* structure object first.

```
rknn_tensor_attr input_attrs[io_num.n_input];
memset(input_attrs, 0, sizeof(input_attrs));
for (int i = 0; i < sdk>/rknpu2/runtime io_num.n_input; i++) {
    input_attrs[i].index = i;
    ret = rknn_query(ctx, RKNN_QUERY_NATIVE_NHWC_INPUT_ATTR,
                    &(input_attrs[i]), sizeof(rknn_tensor_attr));
}
```

12) Query native output tensor attribute (for zero-copy API interface)

The *RKNN_QUERY_NATIVE_NHWC_OUTPUT_ATTR* command can be used to query the NHWC attribute of the model output Tensor. User need to create the *rknn_tensor_attr* structure object first.

```
rknn_tensor_attr output_attrs[io_num.n_output];
memset(output_attrs, 0, sizeof(output_attrs));
for (int i = 0; i < sdk>/rknpu2/runtime io_num.n_output; i++) {
    output_attrs[i].index = i;
    ret = rknn_query(ctx, RKNN_QUERY_NATIVE_NHWC_OUTPUT_ATTR,
                    &(output_attrs[i]), sizeof(rknn_tensor_attr));
}
```

13) Query the dynamic input shape information supported by the RKNN model (Note: RV1106/RV1103 does not support this interface)

After the `rknn_init` interface is called, pass in the `RKNN_QUERY_INPUT_DYNAMIC_RANGE` command to query the input shape information supported by the model, including the number of input shapes, the list of input shapes, the layout and name of the input shapes, and other information. The `rknn_input_range` structure object needs to be created first.

The sample code is as follows:

```
rknn_input_range dyn_range[io_num.n_input];
memset(dyn_range, 0, io_num.n_input * sizeof(rknn_input_range));
for (uint32_t i = 0; i < io_num.n_input; i++) {
    dyn_range[i].index = i;
    ret = rknn_query(ctx, RKNN_QUERY_INPUT_DYNAMIC_RANGE,
                    &dyn_range[i], sizeof(rknn_input_range));
}
```

14) Query the input dynamic shape currently used by the RKNN model

After the `rknn_set_input_shape` interface is called, pass in the `RKNN_QUERY_CURRENT_INPUT_ATTR` command to query the input attribute information currently used by the model. The `rknn_tensor_attr` structure needs to be created first (Note: RV1106/RV1103 does not support this command).

The sample code is as follows:

```
rknn_tensor_attr cur_input_attrs[io_num.n_input];
memset(cur_input_attrs, 0, io_num.n_input * sizeof(rknn_tensor_attr));
for (uint32_t i = 0; i < io_num.n_input; i++) {
    cur_input_attrs[i].index = i;
    ret = rknn_query(ctx, RKNN_QUERY_CURRENT_INPUT_ATTR,
        &(cur_input_attrs[i]), sizeof(rknn_tensor_attr));
}
```

15) Query the output dynamic shape currently used by the RKNN model

After the `rknn_set_input_shape` interface is called, pass in the `RKNN_QUERY_CURRENT_OUTPUT_ATTR` command to query the output attribute information currently used by the model. The `rknn_tensor_attr` structure needs to be created first (**Note: RV1106/RV1103 does not support this command**).

The sample code is as follows:

```
rknn_tensor_attr cur_output_attrs[io_num.n_output];
memset(cur_output_attrs, 0, io_num.n_output * sizeof(rknn_tensor_attr));
for (uint32_t i = 0; i < io_num.n_output; i++) {
    cur_output_attrs[i].index = i;
    ret = rknn_query(ctx, RKNN_QUERY_CURRENT_OUTPUT_ATTR,
        &(cur_output_attrs[i]), sizeof(rknn_tensor_attr));
}
```

4.4.3.6 rknn_inputs_set

The input data of the model can be set by the `rknn_inputs_set` function. This function can support multiple inputs, each of which is a `rknn_input` structure object. The user needs to set these object field before passing in `rknn_inputs_set` function (**Note: unavailable on RV1106/RV1103**).

API	<code>rknn_inputs_set</code>
Description	Set the model input data.
Parameter	<i>rknn_context context</i> : The object of <code>rknn_context</code> .
	<i>uint32_t n_inputs</i> : Number of inputs.
	<i>rknn_input inputs[]</i> : Array of <code>rknn_input</code> .
Return	int: Error code (See RKNN Error Code).

Sample Code:

```
rknn_input inputs[1];
memset(inputs, 0, sizeof(inputs));
inputs[0].index = 0;
inputs[0].type = RKNN_TENSOR_UINT8;
inputs[0].size = img_width*img_height*img_channels;
inputs[0].fmt = RKNN_TENSOR_NHWC;
inputs[0].buf = in_data;
inputs[0].pass_through = 0;

ret = rknn_inputs_set(ctx, 1, inputs);
```

4.4.3.7 rknn_run

The `rknn_run` function will perform a model inference. The input data need to be configured by the `rknn_inputs_set` function or zero-copy interface before `rknn_run` is called.

API	<code>rknn_run</code>
Description	Perform a model inference.
Parameter	<i>rknn_context</i> <i>context</i> : The object of <code>rknn_context</code> . <i>rknn_run_extend*</i> <i>extend</i> : Reserved for extension. It is not used currently and accepted NULL only.
Return	int: Error code (See RKNN Error Code).

Sample Code:

```
ret = rknn_run(ctx, NULL);
```

4.4.3.8 rknn_wait

This interface is used for non-blocking mode inference and **has not been implemented yet**.

4.4.3.9 rknn_outputs_get

The `rknn_outputs_get` function can get the output data from the model. This function can get multiple output data, each of which is a `rknn_output` structure object that needs to be created and initialized in turn before the function is called (**Note: RV1106/RV1103 unsupported**) .

There are two ways to store buffers for output data:

- 1) The user allocate and release buffers themselves. In this case, the *rknn_output.is_prealloc* needs to be set to 1, and the *rknn_output.buf* points to users' allocated buffer.
- 2) The other is allocated by rknn. At this time, the *rknn_output.is_prealloc* needs to be set to 0. After the function is executed, *rknn_output.buf* will be created and store the output data.

API	<i>rknn_outputs_get</i>
Description	Get model inference output data.
Parameter	<i>rknn_context context</i> : The object of <i>rknn_context</i> .
	<i>uint32_t n_outputs</i> : Number of output.
	<i>rknn_output outputs[]</i> : Array of <i>rknn_output</i> .
	<i>rknn_run_extend* extend</i> : Reserved for extension, currently not used yet. Accepting NULL only.
Return	int: Error code (See RKNN Error Code).

Sample Code:

```
rknn_output outputs[io_num.n_output];
memset(outputs, 0, sizeof(outputs));
for (int i = 0; i < io_num.n_output; i++) {
    outputs[i].index = i;
    outputs[i].is_prealloc = 0;
    outputs[i].want_float = 1;
}
ret = rknn_outputs_get(ctx, io_num.n_output, outputs, NULL);
```

4.4.3.10 rknn_outputs_release

The *rknn_outputs_release* function will release the relevant resources of the *rknn_output* object.

API	<i>rknn_outputs_release</i>
Description	Release the <i>rknn_output</i> object.
Parameter	<i>rknn_context context</i> : <i>rknn_context</i> object.
	<i>uint32_t n_outputs</i> : Number of output.
	<i>rknn_output outputs[]</i> : The array of <i>rknn_output</i> to be released.
Return	int: Error code (See RKNN Error Code).

Sample Code:

```
ret = rknn_outputs_release(ctx, io_num.n_output, outputs);
```

4.4.3.11 rknn_create_mem_from_mb_blk

It has not been implemented Currently.

4.4.3.12 rknn_create_mem_from_phys

When the user wants to allocate memory for NPU, the `rknn_create_mem_from_phys` function can create a `rknn_tensor_mem` structure and return its pointer. This function will pass the physical address, virtual address and size, and the information related to the external memory to the `rknn_tensor_mem` structure.

API	<code>rknn_create_mem_from_phys</code>
Description	Create <code>rknn_tensor_mem</code> structure and allocate memory through physical address.
Parameter	<i>rknn_context</i> context: <code>rknn_context</code> object.
	<i>uint64_t</i> phys_addr: The physical address of buffer.
	<i>void *</i> virt_addr: The virtual address of buffer.
	<i>uint32_t</i> size: The size of buffer.
Return	<i>rknn_tensor_mem*</i> : The tensor memory information structure pointer.

Sample Code:

```
//suppose we have got buffer information as input_phys, input_virt and size
rknn_tensor_mem* input_mems [1];
input_mems[0] = rknn_create_mem_from_phys(ctx, input_phys, input_virt, size);
```

4.4.3.13 rknn_create_mem_from_fd

When the user wants to allocate the memory for NPU, the `rknn_create_mem_from_fd` creates a `rknn_tensor_mem` structure and return its pointer. This function filled with the file descriptor, logical address and size, and the information related to the external memory will be assigned to the `rknn_tensor_mem` structure.

API	rknn_create_mem_from_fd
Description	Create rknn_tensor_mem structure and allocate memory through file descriptor.
Parameter	<i>rknn_context context</i> : rknn_context object.
	<i>int32_t fd</i> : The file descriptor of buffer.
	<i>void *virt_addr</i> : The virtual address of buffer, which indicates the beginning of fd.
	<i>uint32_t size</i> : The size of buffer.
	<i>int32_t offset</i> : The offset corresponding for file descriptor and virtual address.
Return	rknn_tensor_mem*: The tensor memory information structure pointer.

Sample Code:

```
//suppose we have got buffer information as input_fd, input_virt and size
rknn_tensor_mem* input_mems [1];
input_mems[0] = rknn_create_mem_from_fd(ctx, input_fd, input_virt, size, 0);
```

4.4.3.14 rknn_create_mem

When the user wants to allocate memory which can be used directly in the NPU, the rknn_create_mem function can create a *rknn_tensor_mem* structure and get its pointer. This function passes in the memory size and initializes the *rknn_tensor_mem* structure at runtime.

API	rknn_create_mem
Description	Create rknn_tensor_mem structure internally and allocate memory during runtime.
Parameter	<i>rknn_context context</i> : rknn_context object.
	<i>uint32_t size</i> : The size of buffer.
Return	<i>rknn_tensor_mem*</i> : The tensor memory information structure pointer.

Sample Code:

```
//suppose we have got buffer size
rknn_tensor_mem* input_mems [1];
input_mems[0] = rknn_create_mem(ctx, size);
```

4.4.3.15 rknn_destroy_mem

The rknn_destroy_mem function destroys the rknn_tensor_mem structure. However, the memory allocated by the user needs to be released manually.

API	<code>rknn_destroy_mem</code>
Description	Destroy <code>rknn_tensor_mem</code> structure.
Parameter	<i>rknn_context context</i> : <code>rknn_context</code> object.
	<i>rknn_tensor_mem*</i> : The tensor memory information structure pointer.
Return	int: Error code (See RKNN Error Code).

Sample Code:

```
rknn_tensor_mem* input_mems [1];
int ret = rknn_destroy_mem(ctx, input_mems[0]);
```

4.4.3.16 rknn_set_weight_mem

If the user has allocated memory for the network weights, after initializing the corresponding `rknn_tensor_mem` structure, the NPU can use the memory through the `rknn_set_weight_mem` function. This function must be called before calling `rknn_run`.

API	<code>rknn_set_weight_mem</code>
Description	Set up the <code>rknn_tensor_mem</code> structure containing weights memory information.
Parameter	<i>rknn_context context</i> : <code>rknn_context</code> object.
	<i>rknn_tensor_mem*</i> : The tensor memory information structure pointer.
Return	int: Error code (See RKNN Error Code).

Sample Code:

```
rknn_tensor_mem* weight_mems [1];
int ret = rknn_set_weight_mem(ctx, weight_mems[0]);
```

4.4.3.17 rknn_set_internal_mem

If the user has allocated memory for the internal tensor in network, after initializing the corresponding `rknn_tensor_mem` structure, the NPU can use the memory through the `rknn_set_internal_mem` function. This function must be called before calling `rknn_run`.

API	rknn_set_internal_mem
Description	Set up the rknn_tensor_mem structure containing internal tensor memory information in network.
Parameter	<i>rknn_context context</i> : rknn_context object.
	<i>rknn_tensor_mem*</i> : The pointer to the tensor memory information structure.
Return	int: Error code (See RKNN Error Code).

Sample Code:

```
rknn_tensor_mem* internal_tensor_mems [1];
int ret = rknn_set_internal_mem(ctx, internal_tensor_mems[0]);
```

4.4.3.18 rknn_set_io_mem

If the user has allocated memory for the input/output tensor in network, after initializing the corresponding *rknn_tensor_mem* structure, the NPU can use the memory through the *rknn_set_io_mem* function. This function must be called before calling *rknn_run*.

API	rknn_set_io_mem
Description	Set up the rknn_tensor_mem structure containing input/output tensor memory information in network.
Parameter	<i>rknn_context context</i> : rknn_context object.
	<i>rknn_tensor_mem*</i> : The pointer to the tensor memory information structure .
	<i>rknn_tensor_attr *</i> : The attribute of input or output tensor buffer.
Return	int: Error code (See RKNN Error Code).

Sample Code:

```
rknn_tensor_attr output_attrs[1];
rknn_tensor_mem* output_mems[1];

ret = rknn_query(ctx, RKNN_QUERY_NATIVE_OUTPUT_ATTR, &(output_attrs[0]),
sizeof(rknn_tensor_attr));
output_mems[0] = rknn_create_mem(ctx, output_attrs[0].size_with_stride);
rknn_set_io_mem(ctx, output_mems[0], &output_attrs[0]);
```

4.4.3.19 rknn_set_input_shape

For dynamic shape input RKNN models, the currently used input shape must be specified before

inference. The `rknn_tensor_attr*` parameters passed in by this interface contain the input shape and corresponding data layout information. Set the `dims` member of the `rknn_tensor_attr` structure object to the shape of the input data, and set the `fmt` member to the corresponding data layout information. Before using this interface, you can first query the input quantity and dynamic shape list supported by the RKNN model through the `rknn_query` function, and the shape of the input data is required to be in the input shape list supported by the model. Every time you switch to a new input shape, you need to call this interface to set a new shape.

API	<code>rknn_set_input_shape</code>
Description	Set the input shape currently used by the model.
Parameter	<p><i>rknn_context</i> <i>context</i>: <code>rknn_context</code> object.</p> <p><code>rknn_tensor_attr *</code>: The attribute of the input tensor, including an input shape specified by the user.</p>
Return	int: Error code (See RKNN Error Code).

Sample Code:

```
for (int i = 0; i < io_num.n_input; i++) {
    for (int j = 0; j < input_attrs[i].n_dims; ++j) {
        //Read the first dynamic input shape
        input_attrs[i].dims[j] = dyn_range[i].dyn_range[0][j];
    }

    ret = rknn_set_input_shape(ctx, &input_attrs[i]);
    if (ret < 0)
    {
        fprintf(stderr, "rknn_set_input_shape error! ret=%d\n", ret);
        return -1;
    }
}
```

4.4.4 RKNN Definition of Data Structure

4.4.4.1 rknn_sdk_version

The structure *rknn_sdk_version* is used to indicate the version information of the RKNN SDK.

The following table shows the definition:

Field	Type	Meaning
api_version	char[]	SDK API version information.
drv_version	char[]	SDK driver version information.

4.4.4.2 rknn_input_output_num

The structure *rknn_input_output_num* represents the number of input and output Tensor, The following table shows the definition:

Field	Type	Meaning
n_input	uint32_t	The number of input tensor.
n_output	uint32_t	The number of output tensor.

4.4.4.3 rknn_input_range

The structure *rknn_input_range* represents an input support shape list information. It contains the input index, the number of supported shapes, data layout format, name and shape list. The definition of the specific structure is shown in the following table:

Field	Type	Meaning
index	uint32_t	The index position of the input.
shape_number	uint32_t	The number of input shapes supported by the RKNN model.
fmt	rknn_tensor_format	The data layout format corresponding to the shape.
name	char[]	The name of the input.
dyn_range	uint32_t[][]	The input shape list, which is a two-dimensional array containing multiple shape arrays, and the shape is stored first.
n_dims	uint32_t	The number of valid dimensions for each shape array.

4.4.4.4 rknn_tensor_attr

The structure *rknn_tensor_attr* represents the attribute of the model's Tensor. The following table shows the definition:

Field	Type	Meaning
index	uint32_t	Indicates the index position of the input and output Tensor.
n_dims	uint32_t	The number of Tensor dimensions.
dims	uint32_t[]	Values for each dimension.
name	char[]	Tensor name.
n_elems	uint32_t	The number of Tensor data elements.
size	uint32_t	The memory size of Tensor data.
fmt	rknn_tensor_format	The format of Tensor dimension, has the following format: RKNN_TENSOR_NCHW RKNN_TENSOR_NHWC RKNN_TENSOR_NC1HWC2
type	rknn_tensor_type	Tensor data type, has the following data types: RKNN_TENSOR_FLOAT32 RKNN_TENSOR_FLOAT16 RKNN_TENSOR_INT8 RKNN_TENSOR_UINT8 RKNN_TENSOR_INT16 RKNN_TENSOR_UINT16 RKNN_TENSOR_INT32 RKNN_TENSOR_INT64 RKNN_TENSOR_BOOL
qnt_type	rknn_tensor_qnt_type	Tensor Quantization Type, has the following types of quantization: RKNN_TENSOR_QNT_NONE : Not quantized; RKNN_TENSOR_QNT_DFP : Dynamic fixed point quantization; RKNN_TENSOR_QNT_AFFINE_ASYMMETRIC : Asymmetric quantification.
fl	int8_t	RKNN_TENSOR_QNT_DFP : quantization parameter.
scale	float	RKNN_TENSOR_QNT_AFFINE_ASYMMETRIC : quantization parameter.

w_stride	uint32_t	The number of pixels that actually store one line of image data, which is equal to the number of valid data pixels in one row + the number of invalid pixels that are filled in for the hardware to quickly jump to the next line (unit: per pixel) .
size_with_stride	uint32_t	The actual byte size of image data (including the byte size of filled invalid pixels).
pass_through	uint8_t	0: means unconverted data. 1: means converted data, Note: Conversion includes normalization and quantization.
h_stride	uint32_t	This is only used in the context of multi-batch input and can be set by users. The purpose of this is to allow NPU to read out beginning of memory address for every batch correctly. It is equivalent of original model input height + the number of invalid pixels that are filled in for the hardware to quickly jump to the next line . If its value is 0, it is the same as model input height (unit: per pixel) .

4.4.4.5 rknn_perf_detail

The structure rknn_perf_detail represents the performance details of the model. The definition of the structure is shown in the following table: (**Note: RV1106/RV1103 unsupported**)

Field	Type	Meaning
perf_data	char*	The performance details contain the running time of each layer of the network stored in string type.
data_len	uint64_t	The data length of string type of perf_data.

4.4.4.6 rknn_perf_run

The structure *rknn_perf_run* represents the total inference time of the model. The definition of the structure is shown in the following table: **(Note: RV1106/RV1103 unsupported)**

Field	Type	Meaning
run_duration	int64_t	The total inference time of the network (not including setting input/output) in microseconds.

4.4.4.7 rknn_mem_size

The structure *rknn_mem_size* represents the memory allocation when the model is initialized.

The definition of the structure is shown in the following table:

Field	Type	Meaning
total_weight_size	uint32_t	The memory size allocated for weights of the network.
total_internal_size	uint32_t	The memory size allocated for internal tensor of the network.
total_dma_allocated_size	uint64_t	All dma memory size allocated for the network.
total_sram_size	uint32_t	Only for RK3588, memory size of SRAM reserved for NPU (Referring to the <<RK3588_NPU_SRAM_usage.md>> for more details) .
free_sram_size	uint32_t	Only for RK3588, the current available SRAM (Referring to the <<RK3588_NPU_SRAM_usage.md>> for more details) .
reserved[12]	uint32_t	Reserve.

4.4.4.8 rknn_tensor_mem

The structure *rknn_tensor_mem* represents the tensor memory information. The definition of the structure is shown in the following table:

Field	Type	Meaning
virt_addr	void*	The virtual address of tensor.
phys_addr	uint64_t	The physical address of tensor.
fd	int32_t	The file descriptor of tensor.
offset	int32_t	The offset of fd and virtual address.
size	uint32_t	The actual size of tensor.
flags	uint32_t	rknn_tensor_mem has the following type of flags: RKNN_TENSOR_MEMORY_FLAGS_ALLOC_INSIDE: indicates that the rknn_tensor_mem structure is created during runtime; RKNN_TENSOR_MEMORY_FLAGS_FROM_FD: It represents the rknn_tensor_mem created by fd; RKNN_TENSOR_MEMORY_FLAGS_FROM_PHYS: It represents rknn_tensor_mem created by physical address; The user does not need to pay attention to the flags.
priv_data	void*	private data.

4.4.4.9 rknn_input

The structure *rknn_input* represents a data input to the model, used as a parameter to the *rknn_inputs_set* function. The following table shows the definition:

Field	Type	Meaning
index	uint32_t	The index position of this input.
buf	void*	The pointer of the input data buffer.
size	uint32_t	The memory size of the input data buffer.
pass_through	uint8_t	When set to 1, buf will be directly set to the input node of the model without any pre-processing.
type	rknn_tensor_type	The type of input data.
fmt	rknn_tensor_format	The format of input data.

4.4.4.10 rknn_output

The structure *rknn_output* represents a data output of the model, used as a parameter to the *rknn_outputs_get* function. This structure will be assigned with data after calling *rknn_outputs_get*.

The following table shows the definition of each member of *rknn_output*:

Field	Type	Meaning
want_float	uint8_t	Indicates whether the output data needs to be converted to float type.
is_prealloc	uint8_t	Indicates whether the buffer that stores the output data is pre-allocated.
index	uint32_t	The index position of this output.
buf	void*	The pointer pointing to the output data buffer.
size	uint32_t	Output data buffer size in byte.

4.4.4.11 rknn_init_extend

The structure *rknn_init_extend* represents the extended information when the model is initialized.

It is not available currently on RV1106/RV1103. The definition of the structure is shown in the following table:

Field	Type	Meaning
ctx	rknn_context	The initialized <i>rknn_context</i> object.
real_model_offset	int32_t	The real offset that is in .rknn model file. Only valid when using file path as initialized parameter.
real_model_size	uint32_t	The real size of rknn model file. Only valid when using file path as initialized parameter.
reserved	uint8_t[120]	The reserved data.

4.4.4.12 rknn_run_extend

The structure *rknn_run_extend* represents the extended information during model inference. **It is not available currently.** The definition of the structure is shown in the following table:

Field	Type	Meaning
frame_id	uint64_t	The index of frame of current inference.
non_block	int32_t	0 means blocking mode, 1 means non-blocking mode, non-blocking mode means that the rknn_run call returns immediately.
timeout_ms	int32_t	The timeout of inference in milliseconds.
fence_fd	int32_t	For the non-blocking inference (Not Available) .

4.4.4.13 rknn_output_extend

The structure *rknn_output_extend* means to obtain the extended information of the output. **It is not available currently**. The definition of the structure is shown in the following table:

Field	Type	Meaning
frame_id	int32_t	The frame index of the output result.

4.4.4.14 rknn_custom_string

The structure *rknn_custom_string* represents the custom string set by the user when converting the RKNN model. The definition of the structure is shown in the following table:

Field	Type	Meaning
string	char[]	User-defined string.

4.4.5 Instruction of API Input and Output

4.4.5.1 General Input and Output of API (Non Zero Copy)

Note: RV1106/RV1103 unsupported.

1) rknn_inputs_set

When calling this API, it can set up the parameter from *rknn_inputs_set*, that is, the input data type and size can be configured by the *rknn_input* *input[]* .

The detail explanation of input: The *pass_through* is one of the member of *rknn_input* structure. If *pass_through* is set as 1, then the input data will be imported and computed inside the model in which none of the conversion will happen. If it is 0, the input tensor will be converted first by the rknn api based

on the fmt and type from the rknn_input struct, which is happened inside the RKNN API and fed into model.

When using this rknn_input_set, user should query **RKNN_QUERY_NATIVE_INPUT_ATTR** rather than **RKNN_QUERY_INPUT_ATTR**. Depending on the fmt or layout, the preprocessing is different correspondingly.

a) When layout is RKNN_TENSOR_NCHW: the input usually is 4 dimensional and data type is bool or int64, when passing to NPU, the data layout need to be arranged as NCHW for NPU.

b) When layout is RKNN_TENSOR_NHWC: the input usually is 4 dimensional and data type is one of the float32/float16/int8/uint8. Also, the number of input channel is either 1, 3 or 4. When passing to NPU, data layout need to be arranged into NHWC layout. It is worth nothing that when setting pass_through is 1, the width may have an alignment with stride depending on the w_stride from rknn_input_attr.

c) When layout is RKNN_TENSOR_NC1HWC2: the input usually is 4 dimensional and data type is float16/int8. Also, the input channel is not 1, 3 and 4. When pass_through is 0, the input data layout need to be arranged as NHWC. **When pass_through is 1, the input data layout need to reshaped as RKNN_TENSOR_NC1HWC2.**

d) When layout is RKNN_TENSOR_UNDEFINED: Usually, the input is not 4 dimensional. When passing to NPU, the input layout need to arranged according to the input model layout in ONNX!. In this situation, the NPU will not do anything related to process of mean/std and layout conversion.

The relationship between input data type and data type queried from **RKNN_QUERY_INPUT_ATTR** is shown in table below.

Input data type from RKNN_QUERY_INPUT_ATTR	Available Input data type
bool	bool
int8	int8 / uint8 / float32
float16	uint8 / float16 / float32
int64	int64

Table4-1: The available input data type and model input data type

2) rknn_outputs_get

When calling this function, it can set up want_float, which is one of the member of rknn_output structure, to select the input data type, layout, etc. When the rknn-toolkit 2 tool before version 1.2.0 converts the RKNN model, the data type of the output layer is fixed to float32 by default, so even if it is want_Float = 0, the result of non quantitative model is still float32. In 1.2.0, including the RKNN model converted by the toolkit after 1.2.0, the output of int8 model is int8 data type; In particular, if the last layer of int8 model is float16 output, the model output is float16 data type, for example, the last layer is softmax layer; The float16 model is output as float16 data type.

Table4-2: RK3562/RK3566/RK3568/RK3588 supports input configuration without zero copy

want_float	Output data Type	Supported output layout	Remark
1	float32	NCHW	
0	int8	NCHW	Only support i8 model
	float16	NCHW	

4.4.5.2 Input and Output with Zero Copy of API

Two functions need to use for this purpose:

rknn_create_mem,

rknn_set_io_mem

The specification of input data (involving the size, data type, layout, etc.) should be configured according to the actual data that need to be allocated by the zero copy memory.

For RK3562, RK3566/RK3568 and RK3588, NPU supports the same input configuration the mentioned in the section of **General Input and Output of API**.

For RV1106 and RV1103, NPU supports the input configuration as follow:

Table4-3: RV1106/RV1103 supports input configuration with zero copy

Data Type of Input	pass_through	Number of Channels	Supported input layout	Remark
uint8_t	0	-	NHWC	Only support i8 model
int8	1	1,3,4	NHWC	
int8	1	Not 1,3,4 channel	NC1HWC2	Only support i8 model

For the output data, when not in the mode of NATIVE_LAYOUT, it is suggested considering the actual data inside the zero copy memory to configure the corresponding size, data type and data layout for output. When in the NATIVE_LAYOUT mode, it is recommended utilizing the default configuration that is from the one queried from the RKNN_QUERY_NATIVE_INPUT_ATTR and data size should adopt to size_with_stride. The specification of output is shown below.

Output Data Type	Available Output Layout	Remark
float32	NCHW	
int8	NCHW	Only support i8 model
int8	NC1HWC2	Only support i8 model
float16	NCHW	Only support fp16 model
float16	NC1HWC2	Only support fp16 model

Table4-4: RK3562/RK3566/RK3568/RK3588 supports output setting. (With zero copy interface)

Output Data Type	Available Output Layout	Remark
float32	NHWC	Unsupported currently
int8	NHWC	Unsupported currently
int8	NC1HWC2	Only support i8 model

Table4-5: RV1106/RV1103 supports output setting. (With zero copy interface)

4.4.5.3 Instruction of looking up NATIVE_LAYOUT parameter

There are two parameters listed below.

RKNN_QUERY_NATIVE_INPUT_ATTR

RKNN_QUERY_NATIVE_OUTPUT_ATTR

Those two can query the attribute of input and output tensor. In most of the time, this native attribute

has the best performance. When querying this attribute, the `rknn_tensor_format` might be the `NC1HWC2`, which is a special memory arrangement. The memory address from low to high is `C2->W->H->C1->N`, among which the `C2` has the fastest changing rate and `N` is the slowest one. The value of `C2` may vary depending on the platform and data type. The specification of `C2` is shown in the table below.

Table4-6: The value of `C2` under different platform

platform	int8(quantization)	float16(non-quantization)	Int16(quantization)
RK3566/RK3568	8	4	4
RK3588	16	8	8
RV1106/RV1103	16	8	8
RK3562	16	8	8

For example, assuming on the RK3566/RK3568, there is an output tensor whose memory layout is `1x1x1x32 (NHWC)` from the original model. Then, the original model is converted to RKNN model. When querying the output tensor from this new model with the native attribute, the memory layout of this output tensor will be converted to `1x4x1x1x8 (NC1HWC2)`, where $C1 = \lceil 32/8 \rceil = 4$, $C2 = 8$, the $\lceil \rceil$ denotes the rounding up to closest integer. Take the `NC1HWC2` arrangement of int8 data of RK3566/RK3568 in memory as an example, where $C2 = 8$, as shown in Figure 4-9.

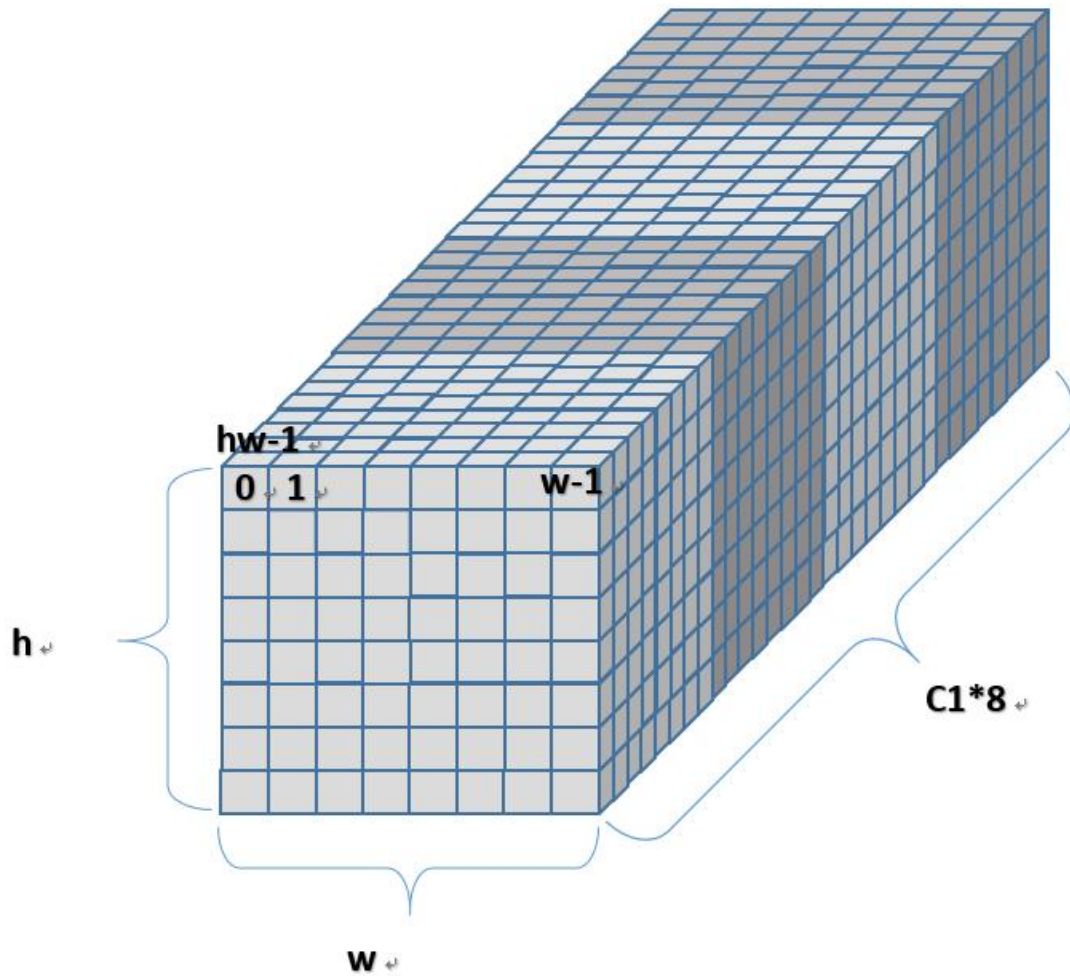


Fig4-9 The arrangement of int8 data of RK3566/RK3568 in NC1HWC2 in memory

(1) NC1HWC2 to NCHW: NC1HWC2 arranged in int8 data is converted to NCHW arranged in int8 data, as shown below.

```

/*
 *src:  NC1HWC2 input tensor addr
 *dst:  NCHW output tensor addr
 *dims: input NC1HWC2 shape
 *channel: output NCHW channel value
 * h:   output NCHW h value
 * w:   output NCHW w value
 */
int NC1HWC2_to_NCHW(const int8_t* src, float* dst, int* dims, int channel, int h, int w)
{
    int batch = dims[0];
    int C1    = dims[1];
    int C2    = dims[4];
    int hw_src = dims[2] * dims[3];
    int hw_dst = h * w;
    for (int i = 0; i < batch; i++) {
        src = src + i * C1 * hw_src * C2;
        dst = dst + i * channel * hw_dst;
        for (int c = 0; c < channel; ++c) {
            int plane = c / C2;
            const int8_t* src_c = plane * hw_src * C2 + src;
            int offset = c % C2;
            for (int cur_h = 0; cur_h < h; ++cur_h)
                for (int cur_w = 0; cur_w < w; ++cur_w) {
                    int cur_hw = cur_h * w + cur_w;
                    dst[c * hw_dst + cur_h * w + cur_w] = src_c[C2 * cur_hw + offset];
                }
        }
    }

    return 0;
}

```

(2) NC1HWC2 to NHWC: NC1HWC2 arranged in int8 data is converted to NHWC arranged in int8 data, as shown below.


```

/*
 *src:  NC1HWC2 input tensor addr
 *dst:  NCHW output tensor addr
 *dims: input NC1HWC2 shape
 *channel: output NCHW channel value
 * h:   output NCHW h value
 * w:   output NCHW w value
 */
int NC1HWC2_to_NHWC(const int8_t* src, int8_t* dst, int* dims, int channel, int h, int w)
{
    int batch = dims[0];
    int C1    = dims[1];
    int C2    = dims[4];
    int hw_src = dims[2] * dims[3];
    int hw_dst = h * w;
    for (int i = 0; i < batch; i++) {
        src = src + i * C1 * hw_src * C2;
        dst = dst + i * channel * hw_dst;
        for (int cur_h = 0; cur_h < h; ++cur_h) {
            for (int cur_w = 0; cur_w < w; ++cur_w) {
                int cur_hw = cur_h * dims[3] + cur_w;
                for (int c = 0; c < channel; ++c) {
                    int plane = c / C2;
                    const auto* src_c = plane * hw_src * C2 + src;
                    int offset = c % C2;
                    dst[cur_h * w * channel + cur_w * channel + c] = src_c[C2 * cur_hw + offset];
                }
            }
        }
    }
    return 0;
}

```

After calling the `rknn_query` with **RKNN_QUERY_NATIVE_INPUT_ATTR** or **RKNN_QUERY_NATIVE_OUTPUT_ATTR**, this API will return the configuration with the best performance to the **rknn_tensor_attr**. If the user has got different input or output data configuration differed from what they desire, they can customize the configuration of the query part. However, it must be consistent with the table-3 and table-4 shown above. For example, if the queried data type is **uint8** and users want to configure this output data type as **float32**, users should multiply the size in **rknn_tensor_attr** structure by 4 since the float32 is 4 bytes long. Also, the data type in **rknn_tensor_attr** should be changed to **RKNN_TENSOR_FLOAT32**. With regrading to querying in the native mode using the above two parameters, users should use the zero copy interface to fetch the result of input and output.

4.5 Matrix Multiplication API

The matrix multiplication interface is a set of APIs to efficiently perform matrix multiplication operations on the NPU (**It is currently a beta version, and RV1103/RV1106 is not currently supported**). Multiple data types and memory arrangements are supported. This API can accept two matrices as input and return their product matrix. The operation is defined as follows:

$$C=A*B$$

here:

A, B and C are 2-dimensional matrices,

A is a matrix with M rows and K columns,

B is a matrix with K rows and N columns,

C is a matrix with M rows and N columns.

4.5.1 Matrix Multiplication API Reference

4.5.1.1 rknn_matmul_create

This function creates a matrix multiplication operation handle and completes the initialization of the matrix multiplication context for performing matrix multiplication operations. At the same time, this function will read the matrix multiplication specification information and get the input and output tensor attributes. Here, the rknn_matmul_ctx handle and rknn_context are the same data structure.

API	rknn_matmul_create
Description	Initializes the matrix multiplication context.
Parameters	rknn_matmul_ctx* ctx: Matrix multiplication context handle. rknn_matmul_info* info: Pointer to the specification information structure of matrix multiplication. rknn_matmul_io_attr* io_attr: Pointer to the matrix multiplication input and output tensor attribute structure.
Return	int: Error code (See RKNN Error Code).

Sample Code:

```
rknn_matmul_info info;
memset(&info, 0, sizeof(rknn_matmul_info));
info.M      = 4;
info.K      = 64;
info.N      = 32;
info.type   = RKNN_TENSOR_INT8;
info.native_layout = 0;
info.perf_layout = 0;

rknn_matmul_io_attr io_attr;
memset(&io_attr, 0, sizeof(rknn_matmul_io_attr));

int ret = rknn_matmul_create(&ctx, &info, &io_attr);
if (ret < 0) {
    printf("rknn_matmul_create fail! ret=%d\n", ret);
    return -1;
}
```

4.5.1.2 rknn_matmul_set_io_mem

This function is used to set the input/output memory for the matrix multiplication operation. Before calling this function, first use the `rknn_tensor_mem` structure pointer created by the `rknn_create_mem` interface, and then pass it into the function with the `rknn_matmul_tensor_attr` structure pointer of the matrix A, B or C returned by the `rknn_matmul_create` function, and set the input and output memory to the matrix multiplication in context. Before calling this function, the data of matrix A and matrix B should be prepared according to the memory arrangement configured in `rknn_matmul_info`.

API	<code>rknn_matmul_set_io_mem</code>
Description	Sets the input/output memory for matrix multiplication.
Parameters	<code>rknn_matmul_ctx* ctx</code> : Matrix multiplication context handle. <code>rknn_tensor_mem* mem</code> : Pointer to tensor memory information structure. <code>rknn_matmul_tensor_attr* attr</code> : Pointer to matrix multiplication input and output tensor attribute structure.
Return	int: Error code (See RKNN Error Code).

Sample Code:

```
// Create A
rknn_tensor_mem* A = rknn_create_mem(ctx, io_attr.A.size);
if (A == NULL) {
    printf("rknn_create_mem fail!\n");
    return -1;
}
memset(A->virt_addr, 1, A->size);
rknn_matmul_io_attr io_attr;
memset(&io_attr, 0, sizeof(rknn_matmul_io_attr));

int ret = rknn_matmul_create(&ctx, &info, &io_attr);
if (ret < 0) {
    printf("rknn_matmul_create fail! ret=%d\n", ret);
    return -1;
}
// Set A
ret = rknn_matmul_set_io_mem(ctx, A, &io_attr.A);
if (ret < 0) {
    printf("rknn_matmul_set_io_mem fail! ret=%d\n", ret);
    return -1;
}
```

4.5.1.3 rknn_matmul_set_core_mask

This function is used to set the available NPU cores for matrix multiplication (only RK3588 is supported). Before calling this function, you need to initialize the matrix multiplication context through the `rknn_matmul_create` function. The mask value that can be set by this function specifies the cores that need to be used to improve the performance and efficiency of matrix multiplication operations.

API	<code>rknn_matmul_set_core_mask</code>
Description	Sets the NPU core mask for matrix multiply operations.
Parameters	<code>rknn_matmul_ctx* ctx</code> : Matrix multiplication context handle. <code>rknn_core_mask core_mask</code> : The NPU core mask value of the matrix multiplication operation, which is used to specify the available NPU cores. Each bit of the mask represents a core. If the corresponding bit is 1, it means that the core is available; otherwise, it means that the core is unavailable (see rknn_set_core_mask API parameters for detailed mask description).
Return	int: Error code (See RKNN Error Code).

Sample Code:

```
rknn_matmul_set_core_mask(ctx, RKNN_NPU_CORE_AUTO);
```

4.5.1.4 rknn_matmul_run

This function is used to run a matrix multiplication operation and save the result in the output matrix C. Before calling this function, the input matrices A and B need to prepare data first, and set them to the input buffer through the rknn_matmul_set_io_mem function. The output matrix C needs to be set to the output buffer through the rknn_matmul_set_io_mem function, and the tensor attribute of the output matrix is obtained through the rknn_matmul_create function.

API	rknn_matmul_run
Description	Perform a matrix multiplication operation.
Parameters	rknn_matmul_ctx* ctx: Matrix multiplication context handle.
Return	int: Error code (See RKNN Error Code).

Sample Code:

```
int ret = rknn_matmul_run(ctx);
```

4.5.1.5 rknn_matmul_destroy

This function is used to destroy the matrix multiplication operation context and release related resources. After using the matrix multiplication handle created by the rknn_matmul_create function, you need to call this function to destroy it.

API	rknn_matmul_destroy
Description	Destroys the matrix multiply operation context.
Parameters	rknn_matmul_ctx* ctx: Matrix multiplication context handle.
Return	int: Error code (See RKNN Error Code).

Sample Code:

```
int ret = rknn_matmul_destroy(ctx);
```

4.5.2 Definition of matrix multiplication data structure

4.5.2.1 rknn_matmul_info

rknn_matmul_info indicates the specification information for performing matrix multiplication, which includes the size of matrix multiplication, data type and memory arrangement of input and output matrices. The definition of the structure is shown in the following table:

Field	Type	Meaning
M	int32_t	The number of rows of the A matrix.
K	int32_t	The number of rows of the A matrix (the number of columns of the B matrix).
N	int32_t	The number of rows of the C matrix.
type	rknn_tensor_type	The data type of the input matrix.
native_layout	int32_t	The memory layout of the B matrix. 0: Indicates [K,N] shape arrangement. 1: Indicates [N1, K1, N2, K2] shape arrangement.
perf_layout	int32_t	Memory layout of matrix A and matrix C. 0: Indicates that matrix A is arranged in [M, K] shape, and matrix C is arranged in [M, N] shape. 1: Indicates that matrix A is arranged in the shape of [K1, M, K2], and matrix C is arranged in the shape of [N1, M, N2].

4.5.2.2 rknn_matmul_tensor_attr

rknn_matmul_tensor_attr represents the attribute of each matrix tensor, which includes the name, shape, size and data type of the matrix. The definition of the structure is shown in the following table:

Field	Type	Meaning
name	char[]	The name of the matrix.
n_dims	uint32_t	The number of dimensions of the matrix.
dims	uint32_t[]	The shape of the matrix.
size	uint32_t	the size of the matrix.
type	rknn_tensor_type	The data type of matrix

4.5.2.3 rknn_matmul_io_attr

rknn_matmul_io_attr represents the attributes of all input and output tensors of the matrix, which includes the attributes of matrices A, B, and C. The definition of the structure is shown in the following table:

Field	Type	Meaning
A	rknn_matmul_tensor_attr	The tensor attribute of matrix A.
B	rknn_matmul_tensor_attr	The tensor attribute of matrix B.
C	rknn_matmul_tensor_attr	The tensor attribute of matrix C.

4.5.3 Matrix multiplication input/output memory layout and data type description

When setting the memory of the input matrix A and B and the output matrix C, the data of the input matrix A and B need to be prepared according to a specific arrangement, and the data of the output matrix C is also read according to a specific arrangement.

For the input matrix A, suppose the number of rows is M, the number of columns is K, and the memory layout is as follows:

1. If perf_layout=0, the shape of the input matrix A is [M,K], the length of the array is $M \times K$, and all elements of A are stored.
2. If perf_layout=1, the shape of the input matrix A is [K1, M, K2], and the values of K1, M, and K2 under different chip platforms and data types are shown in Table 4-7 (the division results in the table is rounded up and the extra parts are filled with 0):

Platform	int8	float16
RK3566/RK3568	[K/8,M,8]	[K/4,M,4]
RK3588	[K/16,M,16]	[K/16,M,16]
RK3562	[K/16,M,16]	[K/16,M,16]

Table 4-7 Data type and shape of input matrix A under different chip platforms and data types

For the input matrix B, assuming that the number of rows is K and the number of columns is N, the memory layout is as follows:

1. If native_layout=0, the shape of the input matrix B is [K,N], the length of the array is $K \times N$, and

all elements of B are stored.

2. If native_layout=1, the shape of the input matrix B is [N1, K1, N2, K2], and the values of N1, K1, N2, and K2 under different chip platforms and data types are shown in Table 4-8 (the division results in the table is rounded up, and the extra parts are filled with 0):

Platform	int8	float16
RK3566/RK3568	[N/16,K/32,16,32]	[N/8,K/16,8,16]
RK3588	[N/32,K/32,32,32]	[N/16,K/32,16,32]
RK3562	[N/16,K/32,16,32]	[N/8,K/16,8,16]

Table 4-8 Data type and shape of input matrix B under different chip platforms and data types

For the input matrix C, assuming that the number of rows is M and the number of columns is N, the memory layout is as follows:

1. If perf_layout=0, the shape of the input matrix C is [M,N], the length of the array is M×N, and all elements of C are stored.

2. If perf_layout=1, the shape of the input matrix A is [N1, M, N2], and the values of N1, M, and N2 under different chip platforms and data types are shown in Table 4-9 (the division results in the table is rounded up and the extra parts are filled with 0):

Platform	int32	float32
RK3566/RK3568	[K/4,M,4]	[K/4,M,4]
RK3588	[K/4,M,4]	[K/4,M,4]
RK3562	[K/4,M,4]	[K/4,M,4]

Table 4-9 Data type and shape of input matrix C under different chip platforms and data types

4.5.4 Matrix Multiplication Specification Limits

The matrix multiplication operator library is implemented based on the NPU hardware architecture and is limited by hardware specifications. The parameters are restricted as follows:

4.5.4.1 Shape constraints

First, for an int8 input matrix, K is required to be less than or equal to 4096; for a float16 input matrix, K is required to be less than or equal to 2048. Secondly, both K and N can only be greater than 32

and be multiples of 32.

4.5.4.2 Input data type restrictions

The input only supports 8-bit signed integer and 16-bit floating point (float16), and the output only supports 32-bit signed integer and 32-bit floating point.

4.6 RKNN Error Code

The return code of the RKNN API function is defined as shown in the following table.


Error Code	Message
RKNN_SUCC (0)	Execution is successful.
RKNN_ERR_FAIL (-1)	Execution error.
RKNN_ERR_TIMEOUT (-2)	Execution timeout.
RKNN_ERR_DEVICE_UNAVAILABLE (-3)	NPU device is unavailable.
RKNN_ERR_MALLOC_FAIL (-4)	Memory allocation is failed.
RKNN_ERR_PARAM_INVALID (-5)	Parameter error.
RKNN_ERR_MODEL_INVALID (-6)	RKNN model is invalid.
RKNN_ERR_CTX_INVALID (-7)	rknn_context is invalid.
RKNN_ERR_INPUT_INVALID (-8)	rknn_input object is invalid.
RKNN_ERR_OUTPUT_INVALID (-9)	rknn_output object is invalid.
RKNN_ERR_DEVICE_UNMATCH (-10)	Version does not match.
RKNN_ERR_INCOMPATILE_OPTIMIZATION_LEVEL_VERSION (-12)	This RKNN model use optimization level mode, but not compatible with current driver.
RKNN_ERR_TARGET_PLATFORM_UNMATCH (-13)	This RKNN model doesn't compatible with current platform.

4.7 NPU SDK Instruction

4.7.1 SDK Content Explain

The NPU SDK for RK3562 RK3566/RK3568 and RK3588 contains examples for the API usage, including the NPU library, server programs, doc. The server program is called rknn_server, which resides on the development board. With the communication set up by the server program, The developer should connect the development board with the PC via the USB and use the rknn-toolkit2 API with python interface to run the model. The detail instruction of how to install is written in <<rknn_server_proxy.md>>.

The overall structure of the content is shown below,

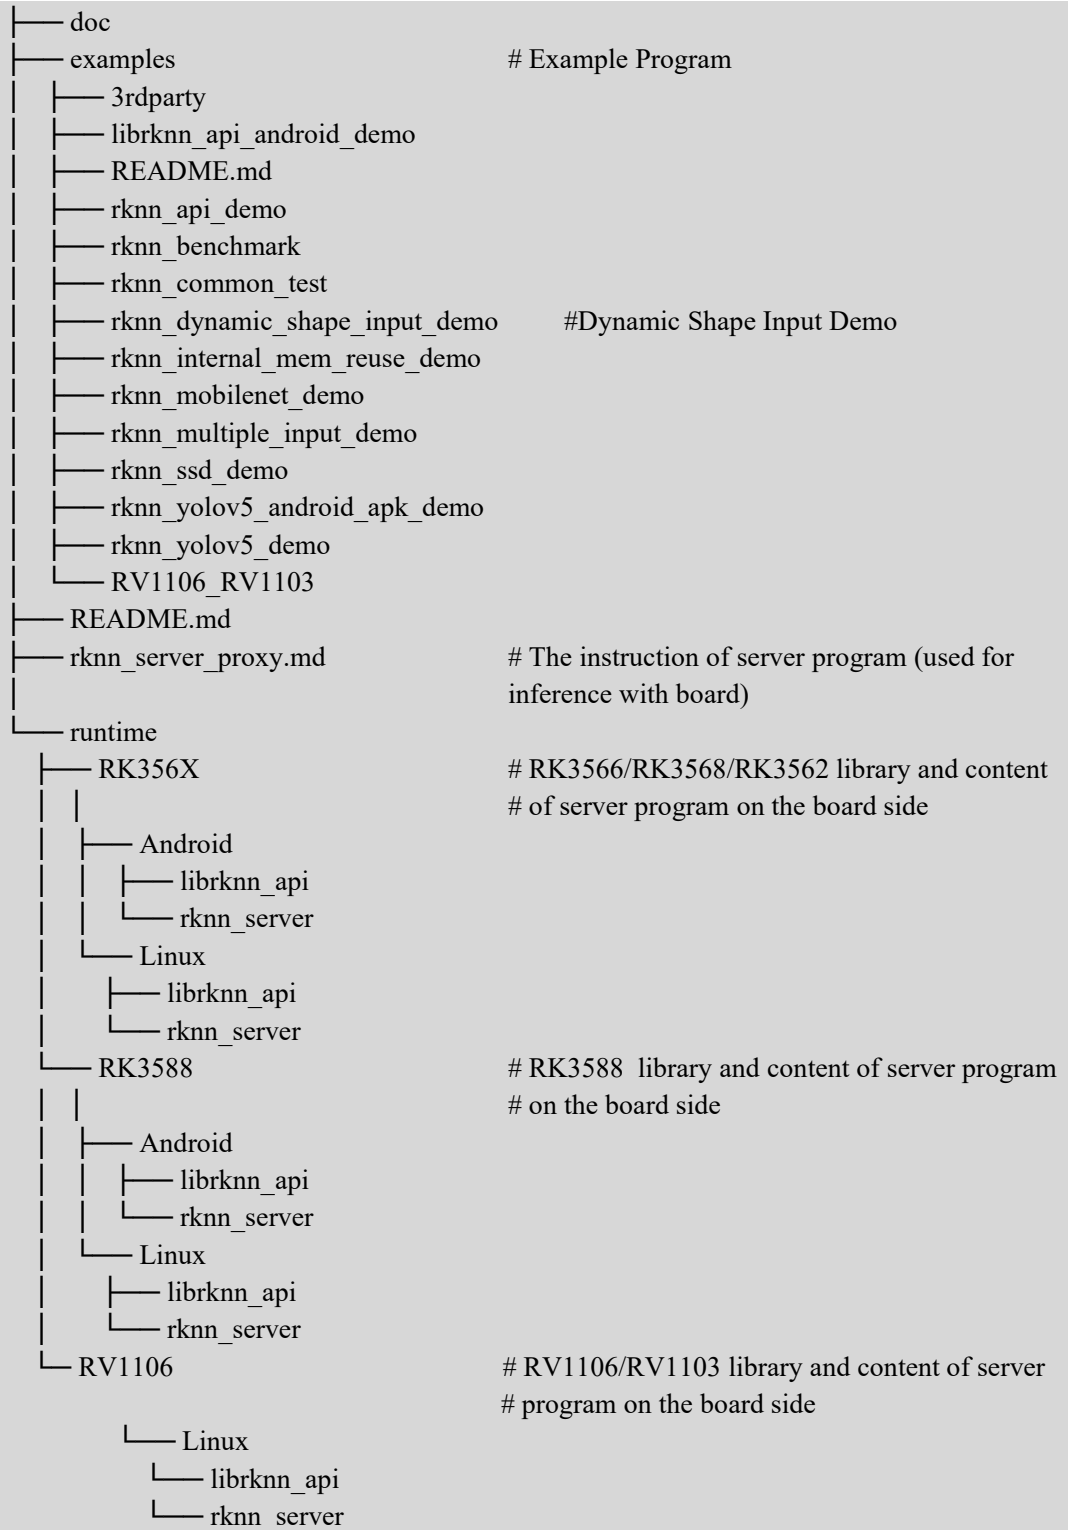

4.8 Debugging

4.8.1 Log Level

The library for NPU will rely on the environment variable on the board to generate a set of debugging logs or files that are suitable for developers to debug the program. The command for setting up debugging log is shown below:

```
export RKNN_LOG_LEVEL=<level_number>
```

where <level_number> represents the category of debugging log, ranging from 0 to 5. The detail of each type of log is listed below.

Table-4-7: The output log of each category

Level	Output Log.
0	Printing error message only.
1	Printing both error and warning log.
2	Printing both hints and log in level 1.
3	Printing both debugging log and log in level 2 .
4	Printing both log in level 3 and information in each layer, influencing the performance of rknn_run when enabling this log.
5	Printing both message in level 4 and output data in intermediate layer, influencing the performance of rknn_run when enabling this log.

As an example, for querying the performance of each layer, the developer can set the following environment variable.

```
export RKNN_LOG_LEVEL=4
```

When completing the debugging, to reset the debugging log to level 0, using the following commands:

```
unset RKNN_LOG_LEVEL
```

4.8.2 Printing for each layer

The following setting will open the performance analysis for each layer:

RKNN_DUMP_QUANT:

When the value of this is 0: this will dump float32 in npy format by default. If this value was 1, the output type will be the same type with the model. For instance, the int8 model would have the int8 output type for tensors dump from each layer when this value was 1.

RKNN_DUMP_DIR:

This will set up the path for saving these output tensors dump from each layer.

RKNN_LOG_LEVEL:

When this value is set as 5, the output tensor will be dumped from each layer saved in npy format.

When this value is set as 6, the output tensor will be saved as format in both npy and txt in NC1HWC2 layout. For example, for saving results dump from each layer by setting these environment variables as shown below.

```
export RKNN_DUMP_QUANT=0
export RKNN_DUMP_DIR=/data/dumps
export RKNN_LOG_LEVEL=5
```

4.8.3 Profiling

4.8.3.1 Checking the environment on the development board

Generally, the frequency of each hardware unit on the development board is not fixed, resulting in the fluctuation and uncertainty on the performance of module running on the board. To avoid this, the developer should fix the frequency of each hardware unit before testing modules for assessment.

1. Fix Frequency for CPU:

(1) Query the frequency of CPU:

```
cat /sys/devices/system/cpu/cpu0/cpufreq/scaling_cur_freq
```

(2) Fix the frequency of CPU:

```
# Query available frequency of CPU(different platforms will vary)
cat /sys/devices/system/cpu/cpufreq/policy0/scaling_available_frequencies
408000 600000 816000 1008000 1200000 1416000 1608000 1704000
# Fix the CPU frequency, e.g., fix at 1.7GHz
echo userspace > /sys/devices/system/cpu/cpufreq/policy0/scaling_governor
echo 1704000 > /sys/devices/system/cpu/cpufreq/policy0/scaling_setspeed
```

2. DDR related commands:

(1) Query the frequency of DDR:

```
cat /sys/class/devfreq/dmc/cur_freq
or
cat /sys/kernel/debug/clk/clk_summary | grep ddr
```

(2) Fix the frequency of DDR (Need extra firmware):

```
# Query the available frequency of DDR
cat /sys/class/devfreq/dmc/available_frequencies
# Fix the frequency of DDR, e.g., at 1560MHz
echo userspace > /sys/class/devfreq/dmc/governor
echo 1560000000 > /sys/class/devfreq/dmc/userspace/set_freq
```

3. NPU related commands:

(1) Query the frequency of NPU:

For RK3566/RK3568:

```
cat /sys/kernel/debug/clk/clk_summary | grep npu
or
cat /sys/class/devfreq/fde40000.npu/cur_freq
```

For RK3588 (Need to upgrade firmware):

```
cat /sys/class/devfreq/fdab0000.npu/cur_freq
```

For RV1106/RV1103:

```
cat /sys/kernel/debug/clk/clk_summary | grep npu
```

For RK3562:

```
cat /sys/class/devfreq/ff300000.npu/cur_freq
```

(2) Fix the frequency of NPU:

Note: The driver version after 0.7.2, it is required to turn on the power of NPU first before setting frequency.

For RK3566/RK3568:

```
# Query the available frequency of NPU
cat /sys/class/devfreq/fde40000.npu/available_frequencies
# Fix NPU frequency, e.g., fix at 1 GHz
echo userspace > /sys/class/devfreq/fde40000.npu/governor
echo 1000000000 > /sys/kernel/debug/clk/clk_scmi_npu/clk_rate
```

For RK3588 (Need to upgrade firmware) :

```
# Query the available frequency of NPU
cat /sys/class/devfreq/fdab0000.npu/available_frequencies
# Fix the NPU frequency, e.g., at 1GHz
echo userspace > /sys/class/devfreq/fdab0000.npu/governor
echo 1000000000 > /sys/kernel/debug/clk/clk_npu_dsu0/clk_rate
```

For RV1106/RV1103 (Unsupported).

For RK3562:

```
# Query the available frequency of NPU
cat /sys/class/devfreq/ff300000.npu/available_frequencies
# Fix the NPU frequency, e.g., at 600MHz
echo userspace > /sys/class/devfreq/ff300000.npu/governor
echo 600000000 > /sys/class/devfreq/ff300000.npu/userspace/set_freq
```

4.8.4 NPU supports query settings

If the NPU driver version is after 0.7.2, you can query the NPU version, the utilization of different NPU cores and manually switch the NPU power supply through the node.

(1) query NPU driver version:

```
cat /sys/kernel/debug/rknpu/driver_version
or
cat /proc/debug/rknpu/driver_version
```

(2) query NPU utilization:

```
cat /sys/kernel/debug/rknpu/load
or
cat /proc/debug/rknpu/load
```

(3) query NPU power status:

```
cat /sys/kernel/debug/rknpu/power
```

(4) open NPU power:

```
echo on > /sys/kernel/debug/rknpu/power
```

(5) close NPU power:

```
echo off > /sys/kernel/debug/rknpu/power
```

There are some new functions after driver version 0.8.2 shown below.

(1) query NPU frequency:

```
cat /sys/kernel/debug/rknpu/freq
```

(2) Setting up NPU frequency:

```
# using RK3588 as an example
# look up available frequency of NPU
cat /sys/class/devfreq/ fdab0000.npu/available_frequencies
# Fix NPU frequency, for example, 1GHz
echo 1000000000 > /sys/kernel/debug/rknpu/freq
```

(3) query NPU voltage status:


```
cat /sys/kernel/debug/rknpu/volt
```

(4) query NPU delay time of power during shutdown (unit: ms):

```
cat /sys/kernel/debug/rknpu/delayms
```

(5) Setting up delay time of power during shutdown for NPU Power (unit: ms):

```
echo 2000 > /sys/kernel/debug/rknpu/delayms
```