



PCI Express SDR100 Board

Version: 2024-12-13

Table of Contents

1	Features	1
2	Installation with the Amarisoft software	2
2.1	Introduction	2
2.2	Automatic Installation	2
2.3	Manual Installation	2
2.4	Driver initialization	3
2.5	Firmware upgrade	3
2.6	Multiple card installation	3
2.7	TRX driver configuration options	4
2.8	FR2 support	6
2.9	TDD support	6
2.10	GPS usage	6
2.11	Oscillator frequency automatic tuning from GPS	6
2.12	Oscillator frequency fine tuning	7
3	Troubleshooting	8
4	Miscellaneous utilities	9
4.1	sdr_util	9
4.2	sdr_spectrum	9
4.3	sdr_play	10
4.4	sdr_test	11
5	C API	14
6	Physical specifications	15
6.1	Summary	15
6.2	Connectors	15
6.2.1	SMA connectors	16
6.2.2	SATA PPS/Clock connectors	17
6.2.3	UFL connectors	17
6.2.4	GPIO connectors	18
6.3	TX power	18
7	Remote API	19
7.1	clock_tune	19
8	Change history	20
8.1	Version 2024-06-14	20
8.2	Version 2023-09-08	20
8.3	Version 2023-06-10	20
9	License	21

1 Features

- Dual 2x2 RF transceiver (AD9371)
- RF coverage: 300 MHz to 6.0 GHz
- RF bandwidth: up to 100 MHz
- Supports TDD and FDD operation
- Integrated TX/RX switch for TDD operation
- PCIe 8x standard connector
- Integrated GPS for precise time and frequency synchronization
- Clock/PPS inputs and outputs for easy synchronisation
- Optional sample compression to reduce the PCI bandwidth

2 Installation with the Amarisoft software

2.1 Introduction

If you have bought the OTS (Off-The-Shelf) package, then you don't need to install anything. Everything has already been installed on your PC. Otherwise, please follow through the steps below.

Decompress the `trx_sdr` archive into a convenient directory specified by `<trx_path>`.

```
tar -xzf trx_sdr-linux-YYYY-MM-DD.tar.gz -C <trx_path>
```

You have two ways to install the TRX driver for the PCIe card:

- automatic
- manual

For both cases, the installation requires some specific packages to compile the kernel module. To do this, you need to be root. In Fedora and Cent OS, you need to install *kernel-devel*, *make*, *gcc* and *elfutils-libelf-devel* packages by running the following command:

```
dnf install kernel-devel-$(uname -r) make gcc elfutils-libelf-devel
```

For Ubuntu, use the following command:

```
apt-get install $(uname -a | awk '{print $3}') build-essential
```

Note that you'll need equivalent packages for other Linux distributions if you do not use Fedora, Ubuntu or Cent OS.

Once you have finished the installation, you need to initialize (See [Driver initialization], page 3) and upgrade your driver (See [Firmware upgrade], page 3). Please make sure to initialize the driver after each system boot if you have not activated an automatic lte service.

2.2 Automatic Installation

Automatic installation is only available on Fedora, Ubuntu and CentOS distributions. Use manual install for other distributions. To start your automatic install, use the following command where `<path>` is the path to the directory where you have already installed your LTE component (eNB or UE) and `type` should be set to `enb` or `ue` accordingly.

```
./install <path> <type>
```

Notes:

- the script would install some packages, so make sure you have root privileges when you run the script
- this install creates a symlink for the TRX driver so please do not remove this directory afterwards.

2.3 Manual Installation

To manually install the driver, let's note `<path>` the directory where Amarisoft eNB or UE software is installed. Then:

1. Compile kernel driver:

Go to the `kernel/` directory under `<trx_path>` and start compilation:

```
cd kernel
make
```

2. Place driver:

Just copy the compiled driver into `<path>` directory

```
cd ..
```

```
cp trx_sdr.so <path>
cp libsdr.so <path>
cp libc_wrapper_sdr.so <path>
```

3. Config files:

Copy RF driver config file. Note that there are 2 separate config directories for eNB and UE called `config.enb` and `config.ue` under your `<trx_path>`. As a result, the `<config_dir>` should be set to `config.enb` or `config.ue` accordingly.

```
cp -r <config_dir> <path>/config/sdr
```

Select frontend:

```
<path>/config/rf_select.sh sdr
```

2.4 Driver initialization

Each time you boot your system, you need to perform this initialization. Note that if you are using OTS install, this step is already done by the lte service.

```
cd kernel
./init.sh
```

2.5 Firmware upgrade

Perform the following command to upgrade your PCIe card:

```
./sdr_util upgrade
```

Notes:

- If you have several PCIe cards installed, this will upgrade all cards.
- If the firmware is already up to date, this command will end directly.
- When the upgrade is over, you need your system to be powered off for the changes to take effect (not only reset, real power off).

2.6 Multiple card installation

To make several cards work together, they must be time and frequency synchronized. For that purpose you need to plug a standard SATA cable between boards. Connect one of the three CLK_OUT connectors on the Master board (Figure 6.1) to the CLK_IN of the Slave board (Figure 6.1); connectors are on top of PCI boards. You can Slave up to three SDR100 boards to one SDR100 board.

Each SDR100 board is seen as two linux devices with consecutive minors. The secondary is automatically slaved to the primary for clock and PPS.

The primary device always has an even minor and the secondary has the next minor. For instance, if you install one SDR100 boards, it will appear as `sdr0` and `sdr1` devices

When you install several PCIe cards, the mapping between the PCI connectors and the Linux devices is not predictable (but it shouldn't change after each boot). To identify the order please do the following:

```
./sdr_util -c 0 led 1
```

Then check inside PC on each board: the leds are visible on the top edge of the SDR100. One of them should have a led blinking, this is card 0 (`/dev/sdr0`).

Switch off the led:

```
./sdr_util -c 0 led 0
```

You can do the same for other cards:

```
./sdr_util -c <n> led 2
```

Where `<n>` is the index of the card.

Remember primary and secondary (`sdr0` and `sdr1`) will have leds placed on the same SDR100 board.

To use all the cards, update eNB config file (`config.cfg`) using `args` parameter:

```
args: "dev0=/dev/sdrA,dev1=/dev/sdrB,..."
```

Note: this allow to change the order of the cards. For instance, if your card are from left to right have following indexes:

```
<2,3> <4,5> <0,1>
```

And you want first cells to be on left, then on the middle and then on right, use the following:

```
args: "dev0=/dev/sdr2,dev1=/dev/sdr3,dev2=/dev/sdr4,dev3=/dev/sdr5,
dev4=/dev/sdr0,dev5=/dev/sdr1"
```

2.7 TRX driver configuration options

The default TRX configuration used by your component is called `config.cfg`. It could be found under the directory `config/sdr/` of your component (eNB or UE).

The following JSON properties are available:

args String. Set the system device names for the boards. Example:

```
args: "dev0=/dev/sdr1,dev1=/dev/sdr2,dev2=/dev/sdr0"
```

sample_hw_fmt

Optional enumeration (auto, ci16, cf8) (default = auto). Set the sample format used on the PCI bus. **auto** selects the best format depending on the available PCI bandwidth. **ci16** selects 16 bit complex integers. **cf8** selects 8 bit complex floats giving a 2:1 compression ratio while retaining the full 12 bit amplitude of the ADCs and DACs.

rx_antenna

Optional enumeration (auto, tx_rx, rx) (default = auto). Select the connector on which the RX antenna is connected. By default it is connected on the RX connector for FDD and on the TX/RX connector for TDD. This parameter is useful to force the use of the RX connector in TDD.

fifo_tx_time

Optional number. Set the DMA TX buffer size in us.

Decreasing this value will improve latency but may lead to signal samples loss if the PCIe chain on the motherboard is not fast enough. This can be detected with the **rf_info** monitor command of your **lteenb** or **lteue** software. If such situation happens, the percentage of **TX buffer Usage** will be 100% which means the transmission path has encountered underflows.

fifo_rx_time

Optional number. Set the DMA RX buffer size in us.

Same as **fifo_tx_time** for RX chain but reducing it won't improve latency.

sync

Optional enumeration: none, internal, gps, external (default = none). Set the time synchronization source. **none** and **internal** uses the internal PPS generated from the clock. **internal** synchronizes the RX timestamps on the internal PPS. **none** does not synchronize the RX timestamps on the internal PPS for a faster startup. **gps** uses the internal GPS. **external** uses the PPS from an external source (see below).

When several cards are selected (with the **args** property), **sync** only sets the time synchronization source of the first card. The other cards are implicitly set to **external** synchronization, assuming the previous card is used as source.

clock Optional enumeration: internal, external (default = internal). Set the clock source. **internal** uses the internal clock (VCTCXO). If an external time source is used, the internal clock frequency is adjusted by the PPS signal.

Special cases:

1. If both clock and sync are **external**, the clock and PPS from the CLK_IN connector is used.
2. If clock is **external** and sync is **internal**, then an external reference clock is taken from the EXT_CLK UFL connector in the middle of the board (Figure 6.1). Two reference frequencies are supported on this connector: 38.40 MHz and 30.72 MHz (auto detect).
3. If clock is **internal** and sync is **external**, then the internal clock generator is synchronized to an external PPS signal connected on the FPGA0_PPS UFL connector (CMOS 3v3) (Figure 6.1).

gpio0 Optional enumeration. Selects the signal output on connector GPIO0. See below for possible values. Default = rf_dts1.

gpio1 Optional enumeration. Selects the signal output on connector GPIO1. See below for possible values. Default = rf_dts2.

gpio values:

Value	Description
zero	output a constant low level signal (OV)
one	output a constant high level signal (3.3V)
rf_dts1	in TDD mode, output a high level when the TX is active on channel 1. Polarity can be inverted by setting dts_polarity : low
rf_dts2	in TDD mode, output a high level when the TX is active on channel 2 Polarity can be inverted by setting dts_polarity : low
pps_selected	output a positive going Pulse per Second from the currently selected sync
pps_ext	output a positive going Pulse per Second from the EXT PPS UFL onboard connector
pps_prev	output a positive going Pulse per Second from the CLKIN inter board connector
pps_gps	output a positive going Pulse per Second from the onboard GPS module
pps_vcxo	output a positive going Pulse per Second from the onboard generator
dma_tx	output a positive front on each TX DMA packet (synced on current selected PPS)
dma_rx	output a positive front on each RX DMA packet
dma_tx_100Hz	output a 100 Hz signal synced with dma_tx
dma_rx_100Hz	output a 100 Hz signal synced with dma_rx

dts_polarity

Optional enumeration: high (default), low. Selects the polarity for both rf_dts1 and rf_dts2 signals and also on DTS UFL connectors.

pps_extra_delay

Optional float value in microseconds, range: [-10000.0 .. +10000.0] (-10ms to +10ms)
Adds a delay between GPS pulse and start of DL frame. If the pps_extra_delay

value is negative, the actual delay will be (10ms + pps_extra_delay). For instance, if you want to compensate for 250ns delay caused by cable length, you will set pps_extra_delay: -0.25, the software will add (10ms - 250ns) to the GPS pulse.

tdd_tx_mod

Optional number value: 0 (default) or 1. If set to 1, the TX amplifiers will be switched on and off according to the TDD state.

The range for the transmit gain (tx_gain parameter in eNodeB/UE) is from 16 to 90 dB. The range for the receive gain (rx_gain parameter in eNodeB/UE) is from 9 to 60 dB.

The maximum sample rate is 122.88 MHz. Not all sample rate are available: only 122.88 61.44 and 30.72 MHz.

2.8 FR2 support

The SDR100 card supports a frequency range of 300 MHz to 6.0 GHz. In order to provide a FR2 signal for mmwave testing, an external up down converter (UDC) should be used. Typically the UDC is connected by a RF cable to the TX and RX ports of the SDR card to up and down convert a sub-6 GHz signal to a mmwave signal.

Most UDCs should be configured first for the target output frequency. This configuration could be done automatically by setting config_script and config_script_params inside the rf_driver object. Amarisoft provides an example script udc-config.sh available under enb/config/sdr directory. This example script works with Amarisoft UDC and should be adapted if another type is used.

2.9 TDD support

The board integrates a TX/RX switch for TDD operation. When TDD operation is configured, the transmit and receive are done on a single RF port (the TX SMA connector). So you only need to connect antennas on the TX1 and TX2 SMA connectors for TDD operation.

2.10 GPS usage

You can check the GPS operation when the eNodeB/UE is stopped with

```
./sdr_util gps_state
```

The GPS takes a few minutes to lock if the GPS antenna is connected. Any active GPS antenna accepting a 3.3V DC supply can be used, for example: <http://www.mouser.fr/Search/ProductDetail.aspx?R=ANT-GPS-SH-SMAvirtualkey59000000virtualkey712-ANT-GPS-SH-SMA>

To ensure the PLL is correctly locked when launching the lte software, it is recommended to set the synchro to GPS beforehand with the command

```
./sdr_util sync_gps
```

2.11 Oscillator frequency automatic tuning from GPS

When the GPS is active, you can fine tune automatically the VCTCXO and store the adjustment value in flash to be used on all following sessions.

```
./sdr_util gps_cal -s
```


2.12 Oscillator frequency fine tuning

If you don't have a GPS, it is still possible to manually fine tune the VCTCXO (Voltage Controlled, Temperature Controlled Crystal Oscillator) frequency provided you have a way to know the offset:

```
./sdr_util clock_tune n
```

where *n* is the offset in PPM (parts-per-million) from the nominal TCXO frequency. Note: the PPM offset *n* to voltage law is only approximative, so you should adjust it by successive approximation.

3 Troubleshooting

Below are a few tips on how to handle different errors.

- The eNodeB does not start and the output of `dmesg` linux command resembles the following error message:

```
sdr: version magic '4.12.9-200.fc25.x86_64 SMP mod_unload' should be  
'4.12.11-200.fc25.x86_64 SMP mod_unload'
```

To resolve it, you need to recompile the SDR driver on the PC (See [Manual Installation], page 2).

4 Miscellaneous utilities

4.1 sdr_util

usage: sdr_util [options] cmd [args...]

Options:

-h help
-c device_num select the device (default = all)

Available commands:

version dump the FPGA version
sync_state dump the synchro and clock state
gps_state dump the GPS state
sync_gps select GPS as sync source, wait for stable state
gps_cal [-s] uses the GPS sync to tune VCXO, optionnaly stores the value in f...
temp dump the temperature of the board components
led [0|1] enable/disable led blinking
clock_tune n tune TCXO frequency offset to n ppm
upgrade [options] upgrade the FPGA firmware
 upgrade options are:
 -force force upgrade even if identical or previous version

4.2 sdr_spectrum

sdr_spectrum is a real time spectrum analyzer, sample viewer and I/Q file recorder. It handles several channels at the same time. It can be invoked without arguments. The following options are available:

-h help
-args str set the device arguments (default="/dev0=/dev/sdr0")
-rx_freq freq set the RX frequency in Hz (default=2400000000)
-rate rate set the sample rate to 'rate' Hz (default=122880000 for SDR100)
-rx_gain gain set the RX gain in dB (default=60)
-channels c set the number of RX channels to 'c' (default=1)
-rx_bw set the analog receive bandwidth in Hz (default=same as sample rate)
-sync source set the sync source to 'source' (none, internal, gps, external) (default=none)
-clock source set the clock source to 'source' (internal, external) (default=internal)
-save_path path set the directory where the recorded samples are saved (default=/tmp)
-duration d set the recorded sample file duration in seconds when saving (default=1.0)

-save starts recording samples automatically from program start.


-save-and-exit
same as **-save** but program will quit at end of recording.

When saving the recorded samples, one file is generated per channel. The filename contains the UTC date, the frequency and the channel number. The I/Q samples are saved as little endian 32 bit float values, in I/Q order. The sample values are between -1 and 1.

Invocation example:

```
./sdr_spectrum -channels 2 -rx_gain 50 -rx_freq 2680e6 -rate 122.88e6
```

Resulting output:

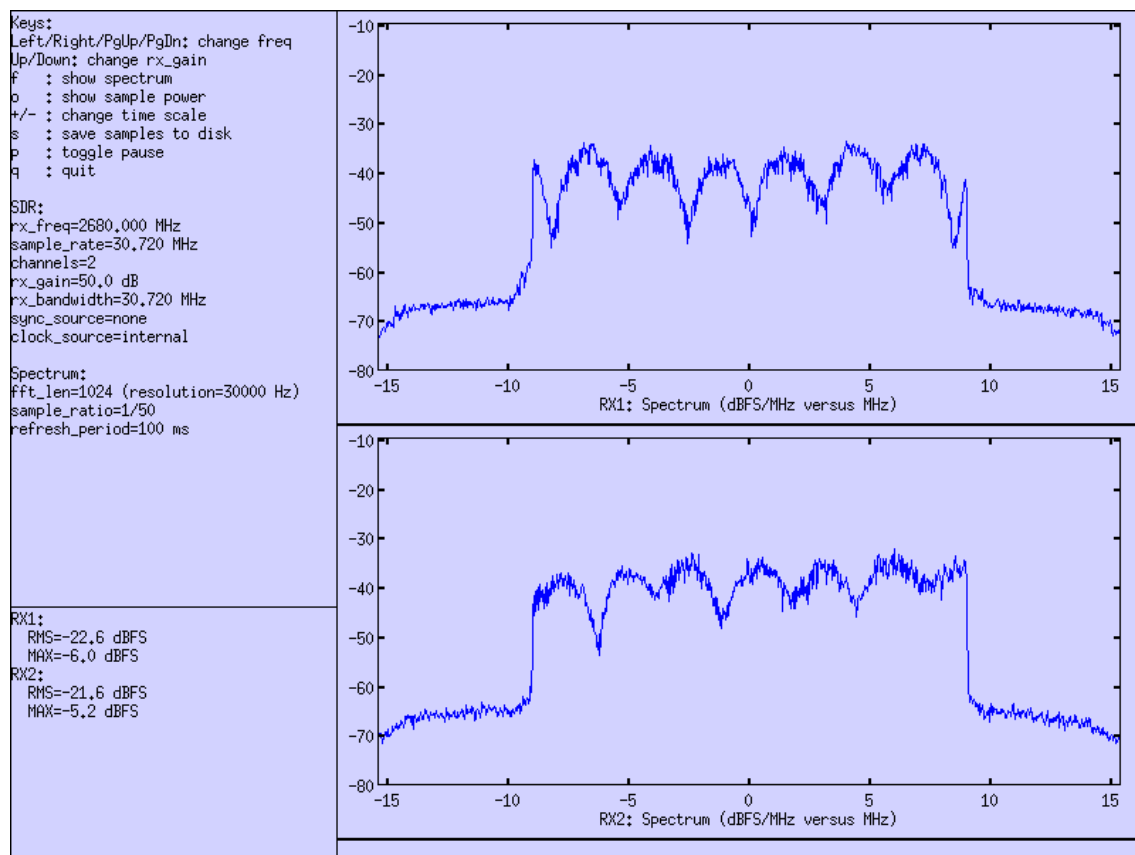

sdr_spectrum is interactive and allow actions during runtime:

keys

available keys are indicated in the left side text area.

left mouse button

select a range and the X-Y values are displayed on the bottom of the graph.

right mouse button

in spectrum mode, highlight a range and get a measure of the power inside the range.

4.3 sdr_play

sdr_play is an I/Q file player. Several channels can be played at the same time and they can be time synchronized on an external clock. One file must be provided per channel. The following options are available:

-h help

```

-args str  set the device arguments (default="dev0=/dev/sdr0")
-tx_freq freq
            set the TX frequency in Hz (default=2400000000)
-rate rate
            set the sample rate to 'rate' Hz (default=122880000 for SDR100)
-tx_gain gain
            set the TX gain in dB (default=70)
-channels c
            set the number of channels to 'c' (default=1)
-tx_bw bw  set the analog transmit bandwidth in Hz (default=same as sample rate)
-loop      play the file in loop
-sync source
            set the sync source to 'source' (none, internal, gps, external) (default=none)
-clock source
            set the clock source to 'source' (internal, external) (default=internal)
-time_offset n
            offset the output by n samples (default=0)

```

The sample files should contain the I/Q values as little endian 32 bit floats, in I/Q order. The sample values should be between -1 and 1.

4.4 sdr_test

sdr_test is a general diagnostic tool for SDR boards.

usage: **sdr_test** [options] cmd [args...]

```

-h
    help

-c device_num
    select the SDR device number (default=0)

-d channel
    select the device channel (default = 0). useful for CPRI boards.

dma_loopback_test [n] [sec]
    test DMA loopback on 1 or n devices for sec seconds (def: 10)

rfic_tx_test sample_rate freq tx_gain waveform [tone_freq/ofdm_bw]
    test RFIC TX (freq in Hz, tx_gain in dB from 0 to 90)
    waveform can be:
        zero for no signal
        prbs for PRBS simulation,
        tone for CW at specified offset from center freq (default = 7.68e6)
        ofdm for OFDM simulation on specified bw (default = auto)

flash_check
    verify checksum of code in onboard FPGA.

flash_reload
    reload FPGA code from onboard flash

gps_read
    GPS read test (best with GPS antenna)

```

`led`

blinks onboard led during 5 seconds for identification

`synchro_set [src]`

Set the source for PPS synchronisation

0=internal
1=GPS
2=slave
3=ext PPS
4=CPRI
5=ext CLK

`synchro_state`

Show current status of clock and synchro source for SDR device

Example:

sync_source = 0 (internal)
pps_locked = 1
clock_source = 0 (internal)
clock_pll_locked = 1

`version`

Show SDR device Hardware and firmware information

Example:

Board ID: 0x4b21
Board master: 0x1
Board revision: 0x1
FPGA revision: 2023-06-23 09:51:49
FPGA status: operational
Software version: 2023-11-14

`dump_info`

dump fpga and RF chip information (similar to sdr_util version)

Example:

PCIe SDR TRX driver 2022-02-25

PCIe RFIC /dev/sdr0@0:

Hardware ID: 0x4b21
DNA: [0x29445505617111124]
Serial: '123456789012'
FPGA revision: 2023-06-23 09:51:49
FPGA vccint: 1.02 V
FPGA vccaux: 1.79 V
FPGA vccbaram: 1.02 V
FPGA temperature: 50.1 C
AD9371 temperature: 30 C
AGC: Off
Sync: internal (locked)
Clock: internal (locked)
Clock tune: 0.3 ppm
NUMA: 0
DMA: 1 ch, 64 bits, SMem index: On
DMA0 TX_Underflows: 65535 RX_Overflows: 0
PCIe bus: bus=0x67 FPGA PCI gen2 x4 (16.0Gb/s) Bridge PCI gen2 x8 (32.0Gb/s)

`gpio 0|1 [value]`

Get or set the signal available on GPIO points on the board

See `gpio0` and `gpio1` in chapter TRX driver configuration options;

5 C API

The PCIe SDR board can be used in other projects with its C API. The C API allows to send and receive I/Q samples and to change the various parameters (frequency, sample rate, bandwidth, gains, ...). The Amarisoft TRX driver, `sdr_play` and `sdr_spectrum` are built using this API.

The C API is described in `libsdr.h`. The corresponding Linux x86_64 dynamic library is `libsdr.so`.

Amarisoft does not provide any support for this API and can modify it without notice.

6 Physical specifications

6.1 Summary

- RF power output < 15 dBm
- Max RF input power: $\sim +3$ dBm RMS (+15dBm peak) with rx_gain < 39; 20 dB less with rx_gain > 39
- 8 SMA female (TX1, TX2, TX3, TX4, RX1, RX2, RX3, RX4), AC coupled
- 1 SMA female (GPS antenna with 3.3V DC power supply)
- 1 input + 3 output SATA connectors for inter-card time synchronization
- PCIe gen2 x8, full height, full length
- Uses single 12V power supply from PCI connector
- ADC/DAC Sample Rate: 122.88 MS/s
- ADC/DAC Resolution: 12 bits
- Frequency Accuracy: < 1 ppm
- LTE 20MHz 64QAM EVM < 2 %rms ($f < 2.6$ GHz)
- LTE 20MHz 64QAM EVM < 4 %rms ($f < 3.5$ GHz)
- Full size (L x W x H): 128mm x 220mm x 20mm
- Weight: ~ 0.300 kg
- Power (PCIe 12V): 1A idle \Rightarrow 12W, 2.8A maximum (4x4 max tx_gain) \Rightarrow 33.6W

6.2 Connectors

The following figure depicts the location and functionality of each connector in the PCIe board.

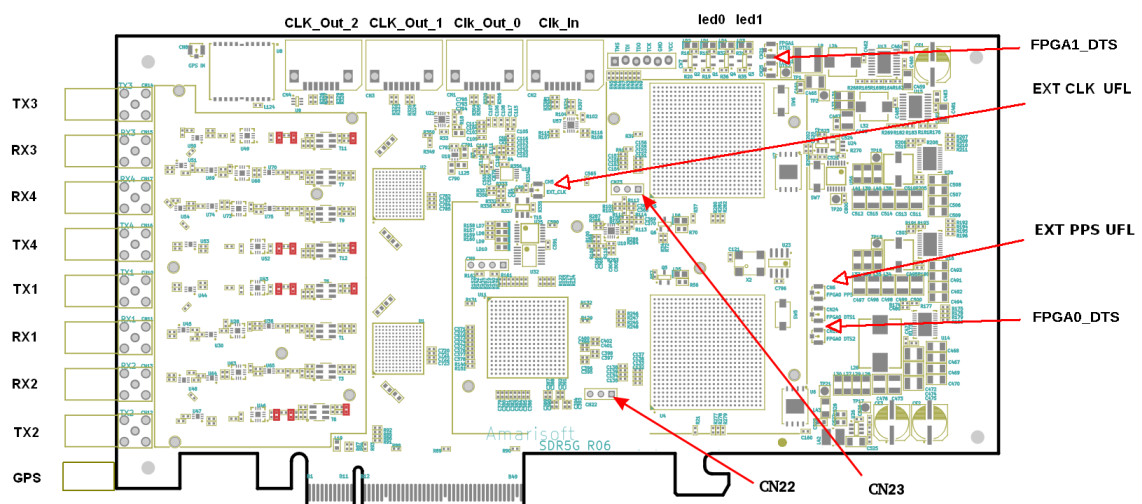


Figure 6.1

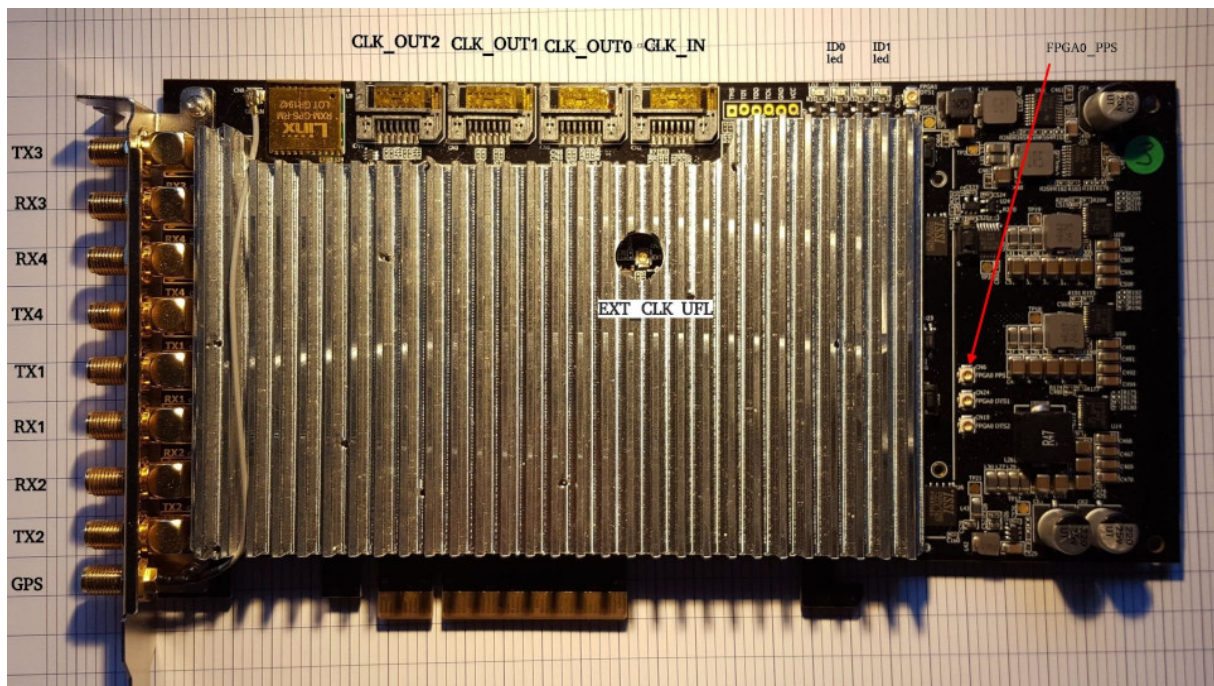


Figure 6.2

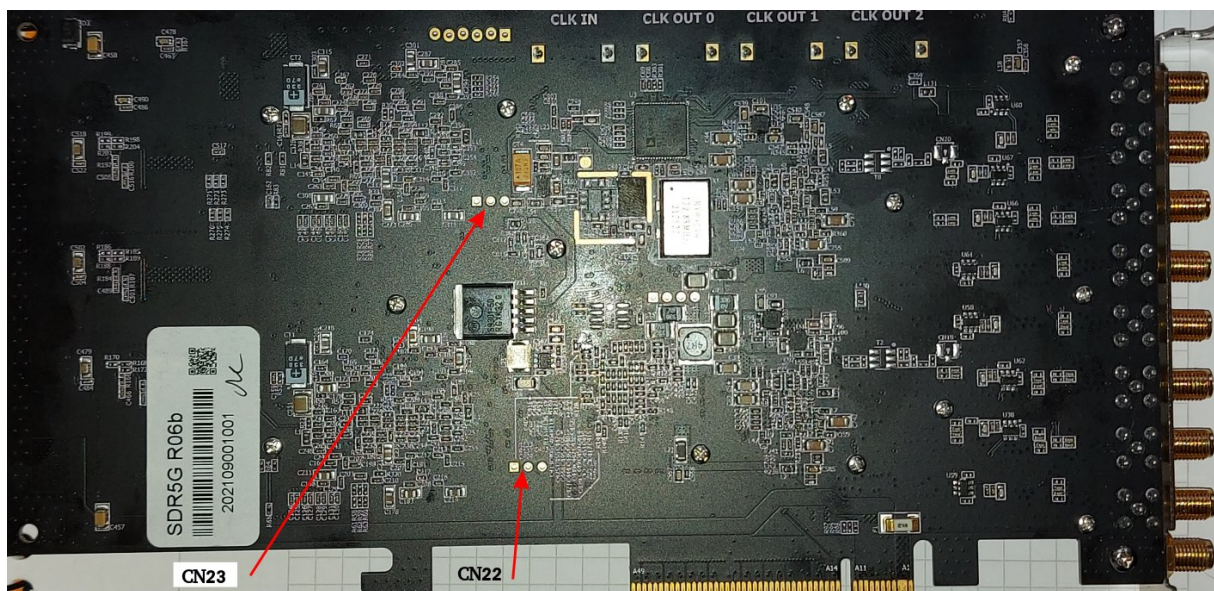


Figure 6.3

6.2.1 SMA connectors

On Figure 6.1, the connector names are:

- | | |
|-----|---|
| TX3 | TX3 (and RX3 for TDD): first RF port of secondary device on this board (sdr1) |
| RX3 | RX3 (for FDD) |

RX4	RX4 (for FDD)
TX4	TX4 (and RX4 for TDD): second RF port of secondary device on this board
TX1	TX1 (and RX1 for TDD): first RF port of primary device on this board (sdr0)
RX1	RX1 (for FDD)
RX2	RX2 (for FDD)
TX2	TX2 (and RX2 for TDD): second RF port of primary device on this board
GPS	connector for active GPS antenna

6.2.2 SATA PPS/Clock connectors

Clock sync connectors

CLK_IN	Input to sync this board as slave.
CLK_OUT0	Output to use this board as master for other SDR100 board
CLK_OUT1	Output to use this board as master for other SDR100 board
CLK_OUT2	Output to use this board as master for other SDR100 board

On each SATA connector:

pin 2,3	LVDS signal: 122.88MHz clock
pin 6,5	LVDS signal: 38.40MHz bursts. each burst starts indicates the PPS
pins 1,4,7	Ground

6.2.3 UFL connectors

EXT_CLK	Analog Input for external clock: see section 2.7: high level from 350mV to 3.3V
EXT_PPS	CMOS Input for external sync: see section 2.7
FPGA0_DTS1	CMOS output for TX1/RX1 TDD mode: 3.3V in TX mode, 0V in RX mode
FPGA0_DTS2	CMOS output for TX2/RX2 TDD mode: 3.3V in TX mode, 0V in RX mode
FPGA1_DTS1	CMOS output for TX3/RX3 TDD mode: 3.3V in TX mode, 0V in RX mode
FPGA1_DTS2	CMOS output for TX4/RX4 TDD mode: 3.3V in TX mode, 0V in RX mode

The DTS signals can be used to control external TX amplifiers.

They are available also when 'rx_antenna: rx' is selected.

The polarity can be changed with parameter 'dts_polarity' indicating the level of the TX mode: dts_polarity can be set to 'high' (default) or 'low'.

6.2.4 GPIO connectors

On Figure 6.3, the connector names are:

CN22	connector for TX1/TX2 GPIO signals	
	pin 1	gpio0 (square solder pad)
	pin 2	gpio1 (center pin)
	pin 3	Ground
CN23	connector for TX3/TX4 GPIO signals	
	pin 1	gpio0 (square solder pad)
	pin 2	gpio1 (center pin)
	pin 3	Ground

see `gpio0` and `gpio1` in chapter `TRX driver configuration options`;

6.3 TX power

Maximum TX Power versus RF frequency, measured on OFDM BW = 100MHz.

RF Frequency	dBm/MHz	dBm
500	-8.0	12.0
1000	-8.0	12.0
1500	-11.0	9.0
2000	-12.0	8.0
2500	-16.0	4.0
3000	-15.0	5.0
3500	-17.0	3.0
4000	-23.0	-3.0
4500	-29.0	-9.0
5000	-30.0	-10.0
5500	-32.0	-12.0
6000	-40.0	-20.0

7 Remote API

SDR driver implements the `trx` remote API.

Message definition:

`command` Optional string. Can be:

- `clock_tune`

Exemple:

```
{  
  "message": "trx",  
  "command": "clock_tune"  
}
```

Here are the additional request and response field depending on `command` value:

7.1 `clock_tune`

Request fields:

`offset` Optional number. If `command` is `clock_tune`, defines the clock drift to set in ppm.

8 Change history

8.1 Version 2024-06-14

- Added remote API support

8.2 Version 2023-09-08

- Added NUMA support

8.3 Version 2023-06-10

- Added tdd_tx_mod configuration parameter
- New FPGA firmmware version 2023-05-24

9 License

`trx_sdr100` is copyright (C) 2012-2024 Amarisoft. Its redistribution without authorization is prohibited.

`trx_sdr100` is available without any express or implied warranty. In no event will Amarisoft be held liable for any damages arising from the use of this software.

For more information on licensing, please refer to `license.pdf` file.