

INSPECTION


NOTICE:

In this section, the terms “cold” and “hot” refer to the temperature of the coils. “Cold” means approximately -10°C (14°F) to 50°C (122°F). “Hot” means approximately 50°C (122°F) to 100°C (212°F).

- 1. Iridium tipped type (Unleaded gasoline):
INSPECT SPARK PLUG

NOTICE:

- Do not use a wire brush for cleaning.
- Do not attempt to adjust the electrode gap of a used spark plug.

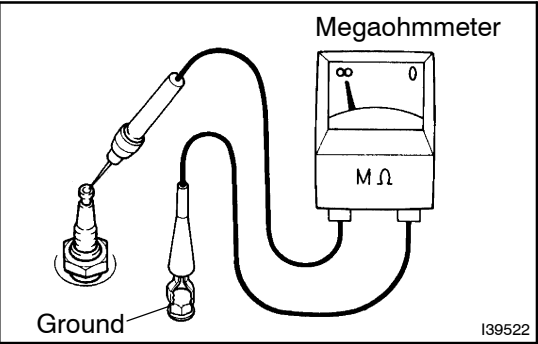


- (a) Check the electrode.
(1) Using a megaohmmeter, measure the insulation resistance.

Correct insulation resistance: 10 MΩ or higher

If the resistance is less than the specified value, proceed to step (e).

HINT:

If a megaohmmeter is not available, perform the following simple inspection instead.

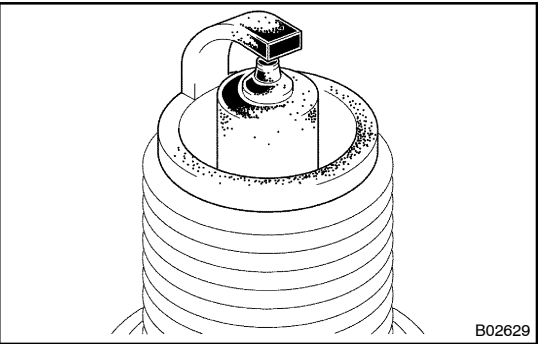


- (b) Alternative inspection method:
(1) Quickly accelerate the engine to 4,000 rpm 5 times.
(2) Remove the spark plug.
(3) Visually check the spark plug.
 - If the electrode is dry, the spark plug is functioning. Reinstall the spark plug. Proceed to step 3.
 - If the electrode is damp, proceed to steps (c), (d) and (e).
- (c) Check the spark plug for any damage on its thread and insulator.

If there is damage, replace the spark plug. If not reinstall the spark plug.

Recommended spark plug:

DENSO made	SK20R11
NGK made	IFR6A11

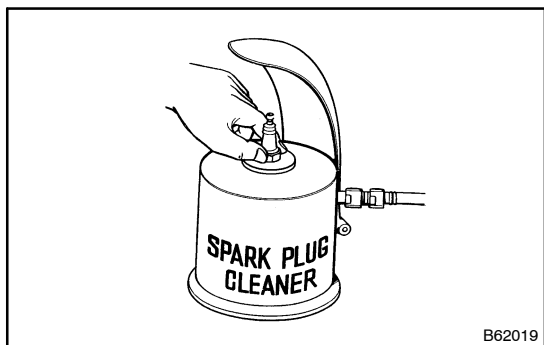

B62019

- (d) Clean the spark plugs.


If the electrode has traces of wet carbon, clean the electrode with a spark plug cleaner and then dry it.

Air pressure: 588 kPa (6 kgf/cm², 85 psi)

Duration: 20 seconds or less

HINT:

Only use the spark plug cleaner when the electrode is free of oil. If the electrode has traces of oil, use gasoline to clean off the oil before using the spark plug cleaner.

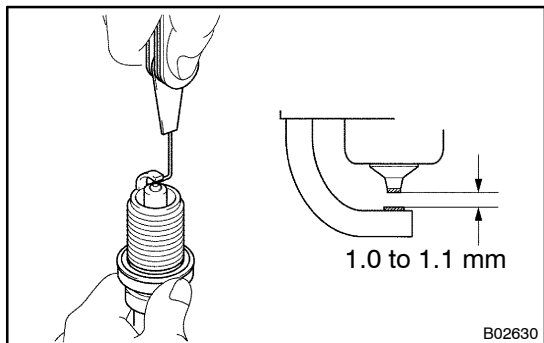

B02630

- (e) Check the spark plug electrode gap.

Maximum electrode gap for used spark plug:

1.3 mm (0.051 in.)

If the gap is greater than the maximum, replace the spark plug.

Correct electrode gap for new spark plug:

1.0 to 1.1 mm (0.039 to 0.043 in.)

NOTICE:

If adjusting the gap of a new spark plug, bend only the base of the ground electrode. Do not touch the tip. Never attempt to adjust the gap on a used plug.

2. Conventional type (Leaded gasoline):


INSPECT SPARK PLUG

- (a) Check the spark plug for thread damage and insulator damage.


If abnormal, replace the spark plug.

Recommended spark plug:

DENSO made	K20R-U
NGK made	BKR6EYA

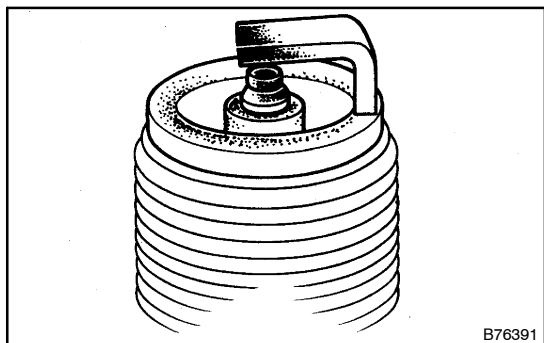

B76391

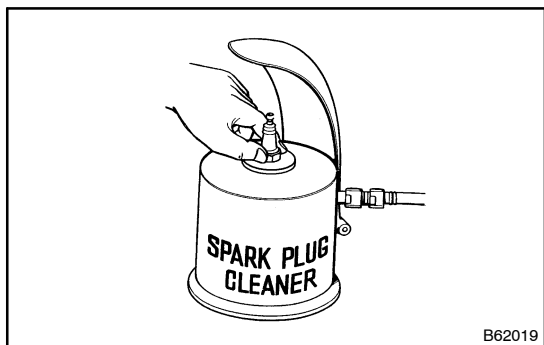

B62019

- (b) Clean the spark plugs.


If the electrode has traces of wet carbon, allow it to dry and then clean with a spark plug cleaner.

Air pressure: Below 588 kPa (6 kgf/cm², 85 psi)

Duration: 20 seconds or less

HINT:

If there are traces of oil, remove it with gasoline before using the spark plug cleaner.

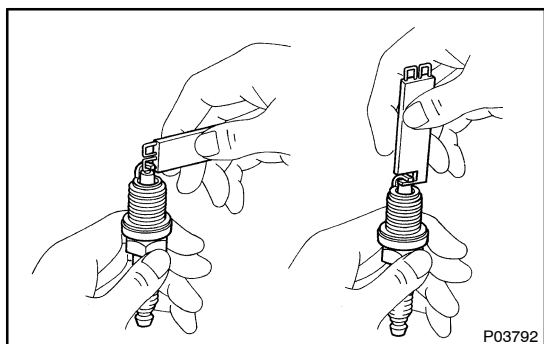


P03792

- (c) Adjust electrode gap.

Carefully bend the outer electrode to obtain the correct electrode gap.

Electrode gap: 0.8 mm (0.031 in.)

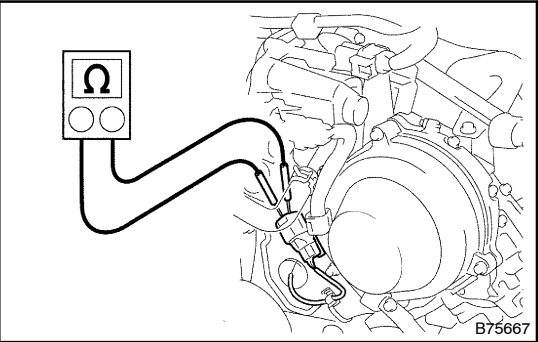


3. INSPECT CAMSHAFT POSITION SENSOR

- (a) Using an ohmmeter, measure the resistance between the terminals.

Standard:

Temperature	Specified Condition
Cold	835 to 1,400 Ω
Hot	1,060 to 1,645 Ω

If the resistance is not as specified, replace the sensor.

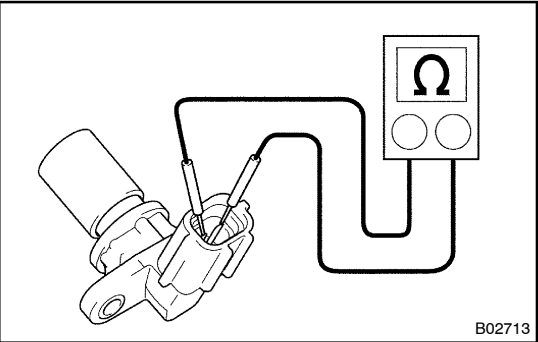

4. INSPECT CRANKSHAFT POSITION SENSOR

- (a) Using an ohmmeter, measure the resistance between the terminals.

Standard:

Temperature	Specified Condition
Cold	1,630 to 2,740 Ω
Hot	2,065 to 3,225 Ω

If the resistance is not as specified, replace the sensor.